FILE NO. SVM-24106

Carrier Service Manual AIR-CONDITIONER MULT TYPE

<High Wall Types> MMK-UB0151HP-UL MMK-UB0181HP-UL MMK-UB0241HP-UL

TOSHIBA







February, 2025

This Air Conditioner uses R454B an environmentally friendly refrigerant.

CONTENTS

PRE	ECAUTION FOR SAFETY	6
NE	N REFRIGERANT (R454B)	11
1.	SPECIFICATIONS	13
2.	DIMENSIONAL DRAWING	14
3.	WIRING DIAGRAM	15
4.	PARTS RATING	16
5.	REFRIGERANTING CYCLE DIAGRAM	17
6.	CONTROL OUTLINE	18
7.	COMMUNICATION TYPE, MODEL NAMES AND THE	
	MAXIMUM NUMBER OF CONNECTABLE UNITS	26
8.	CONFIGURATION OF CONTROL CIRCUIT	27
9.	APPLIED CONTROL	34
10.	TROUBLESHOOTING	51
11.	REPLACEMENT OF SERVICE P.C. BOARD	92
12.	HOW TO REPLACE MAIN PARTS	96
13.	EXPLODED VIEWS AND PARTS LIST	104

SAFETY CAUTION

Please read carefully through these instructions that contain important information and ensure that you understand them.

Generic Denomination: Air Conditioner

Definition of Qualified Installer or Qualified Service Person

The air conditioner must be installed, maintained, repaired and removed by a qualified installer or qualified service person. When any of these jobs is to be done, ask a qualified installer or qualified service person to do them for you.

A qualified installer or qualified service person is an agent who has the qualifications and knowledge described in the table below.

Agent	Qualifications and knowledge which the agent must have
	 The qualified installer is a person who installs, maintains, relocates and removes the air conditioners. He or she has been trained to install, maintain, relocate and remove the air conditioners he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations.
	• The qualified installer who is allowed to do the electrical work involved in installation, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.
Qualified installer	• The qualified installer who is allowed to do the refrigerant handling and piping work involved in installation, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.
	 The qualified installer who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.
	 The qualified service person is a person who installs, repairs, maintains, relocates and removes the air conditioners. He or she has been trained to install, repair, maintain, relocate and remove the air conditioners he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations.
Qualified service	• The qualified service person who is allowed to do the electrical work involved in installation, repair, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.
person	• The qualified service person who is allowed to do the refrigerant handling and piping work involved in installation, repair, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.
	• The qualified service person who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.

Definition of Protective Gear

When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.

In addition to such normal protective gear, wear the protective gear described below when undertaking the special work detailed in the table below.

Failure to wear the proper protective gear is dangerous because you will be more susceptible to injury, burns, electric shocks and other injuries.

Work undertaken	Protective gear worn
All types of work	Protective gloves 'Safety' working clothing
Electrical-related work	Gloves to provide protection for electricians Insulating shoes Clothing to provide protection from electric shock
Work done at heights (19.7"(50 cm) or more)	Helmets for use in industry
Transportation of heavy objects	Shoes with additional protective toe cap
Repair of outdoor unit	Gloves to provide protection for electricians

The important contents concerned to the safety are described on the product itself and on this Service Manual.

Please read this Service Manual after understanding the described items thoroughly in the following contents (Indications / Illustrated marks), and keep them.

[Explanation of indications]

Indication	Explanation
	Indicates contents assumed that an imminent danger causing a death or serious injury of the repair engineers and the third parties when an incorrect work has been executed.
	Indicates possibilities assumed that a danger causing a death or serious injury of the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.
	Indicates contents assumed that an injury or property damage (*) may be caused on the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.

* Property damage: Enlarged damage concerned to property, furniture, and domestic animal / pet

[Explanation of illustrated marks]

Indication	Explanation
\odot	Indicates prohibited items (Forbidden items to do) The sentences near an illustrated mark describe the concrete prohibited contents.
0	Indicates mandatory items (Compulsory items to do) The sentences near an illustrated mark describe the concrete mandatory contents.
	Indicates cautions (Including danger / warning) The sentences or illustration near or in an illustrated mark describe the concrete cautious contents.

■ Warning indications on the Air Conditioner Unit

R454B Refrigerant Safety Group A2L	WARNING (Risk of fire)	This mark is for R454B refrigerant only. Refrigerant type is written on nameplate of outdoor unit. In case that refrigerant type is R454B, this unit uses a flammable refrigerant. If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.
	Read the OWN	NER'S MANUAL carefully before operation.
E		nnel are required to carefully read the OWNER'S MANUAL and N MANUAL before operation.
i	Further information is available in the OWNER'S MANUAL, INSTALLATION MANUAL, and the like.	

Warning indication	Description
WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.	WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.
WARNING Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.	WARNING Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.
CAUTION High temperature parts. You might get burned when removing this panel.	CAUTION High temperature parts. You might get burned when removing this panel.
CAUTION Do not touch the aluminium fins of the unit. Doing so may result in injury.	CAUTION Do not touch the aluminium fins of the unit. Doing so may result in injury.
CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.	CAUTION BURST HAZARD Open the service valves before the operation, to avoid unnecessary pressure built up which could lead to explosion.
CAUTION Do not climb onto the fan guard. Doing so may result in injury.	CAUTION Do not climb onto the fan guard. Doing so may result in injury.

PRECAUTIONS FOR SAFETY

The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.

	Before carrying out the installation, maintenance, repair or removal work, be sure to set the circuit breaker for both the indoor and outdoor units to the OFF position. Otherwise, electric shocks may result.
	Before opening the electrical box cover of the indoor unit or service panel of the outdoor unit, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in electric shocks through contact with the interior parts. Only a qualified installer or qualified service person is allowed to remove the intake grille of the indoor unit or service panel of the outdoor unit and do the work required.
Turn off	Before starting to repair the outdoor unit fan or fan guard, be absolutely sure to set the circuit breaker to the OFF position, and place a "Work in progress" sign on the circuit breaker.
braeaker	When cleaning the filter or other parts of the indoor unit, set the circuit breaker to OFF without fail, and place a "Work in progress" sign near the circuit breaker before proceeding with the work.
	When you have noticed that some kind of trouble (such as when an error display has appeared, there is a smell of burning, abnormal sounds are heard, the air conditioner fails to cool or heat or water is leaking) has occurred in the air conditioner, do not touch the air conditioner yourself but set the circuit breaker to the OFF position, and contact a qualified service person. Take steps to ensure that the power will not be turned on (by marking "out of service" near the circuit breaker, for instance) until qualified service person arrives. Continuing to use the air conditioner in the trouble status may cause mechanical problems to escalate or result in electric shocks or other failure.
	When you access inside of the service panel to repair electric parts, wait for about five minutes after turning off the breaker. Do not start repairing immediately. Otherwise you may get electric shock by touching terminals of high-voltage capacitors. Natural discharge of the capacitor takes about five minutes.
Electric shock hazard	When checking the electric parts, removing the cover of the electric parts box of Indoor Unit and/or service panel of Outdoor Unit inevitably to determine the failure, use gloves to provide protection for electricians, insulating shoes, clothing to provide protection from electric shock and insulating tools. Be careful not to touch the live part. Electric shock may result. Only "Qualified service person" is allowed to do this work.
	Place a "Work in progress" sign near the circuit breaker while the installation, maintenance, repair or removal work is being carried out. There is a danger of electric shocks if the circuit breaker is set to ON by mistake.
\bigcirc	When checking the electric parts, removing the cover of the electric parts box of Indoor Unit and/or front panel of Outdoor Unit inevitably to determine the failure, put a sign "Do not enter" around the site before the work. Failure to do this may result in third person getting electric shock.
Prohibition	Before operating the air conditioner after having completed the work, check that the electrical parts box cover of the indoor unit and service panel of the outdoor unit are closed, and set the circuit breaker to the ON position. You may receive an electric shock if the power is turned on without first conducting these checks.
Stay on protection	If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, wear insulated heat-resistant gloves, insulated boots and insulated work overalls, and take care to avoid touching any live parts. You may receive an electric shock if you fail to heed this warning. Only qualified service person is allowed to do this kind of work.

	Before starting to repair the air conditioner, read carefully through the Service Manual, and repair the air conditioner by following its instructions.
	Only qualified service person is allowed to repair the air conditioner. Repair of the air conditioner by unqualified person may give rise to a fire, electric shocks, injury, water leaks and / or other problems.
	Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
	Only a qualified installer or qualified service person is allowed to carry out the electrical work of the air conditioner. Under no circumstances must this work be done by an unqualified individual since failure to carry out the work properly may result in electric shocks and / or electrical leaks.
	When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.
	To connect the electrical wires, repair the electrical parts or undertake other electrical jobs, wear gloves to provide protection for electricians, insulating shoes and clothing to provide protection from electric shocks. Failure to wear this protective gear may result in electric shocks.
	Electrical wiring work shall be conducted according to law and regulation in the community and installation manual. Failure to do so may result in electrocution or short circuit.
	Use wiring that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws. Use of wiring which does not meet the specifications may give rise to electric shocks, electrical leakage, smoking and/or a fire.
Û	Only a qualified installer or qualified service person is allowed to undertake work at heights using a stand of (19.7"(50 cm)) or more or to remove the intake grille of the indoor unit to undertake work.
General	When working at heights, use a ladder which complies with the ISO 14122 standard, and follow the procedure in the ladder's instructions. Also wear a helmet for use in industry as protective gear to undertake the work.
	Before working at heights, put a sign in place so that no-one will approach the work location, before proceeding with the work. Parts and other objects may fall from above, possibly injuring a person below. While carrying out the work, wear a helmet for protection from falling objects.
	When executing address setting, test run, or troubleshooting through the checking window on the electric parts box, put on insulated gloves to provide protection from electric shock. Otherwise you may receive an electric shock.
	Do not touch the aluminum fin of the outdoor unit. You may injure yourself if you do so. If the fin must be touched for some reason, first put on protective gloves and safety work clothing, and then proceed.
	Do not climb onto or place objects on top of the outdoor unit. You may fall or the objects may fall off of the outdoor unit and result in injury.
	Use forklift to carry in the air conditioner units and use winch or hoist at installation of them.
	When transporting the air conditioner, wear shoes with protective toe caps, protective gloves and other protective clothing.
	When transporting the air conditioner, do not take hold of the bands around the packing carton. You may injure yourself if the bands should break.
	Be sure that a heavy unit (22lbs(10 kg) or heavier) such as a compressor is carried by two persons.
	This air conditioner has passed the pressure test as specified in UL 60335-2-40 Annex EE.
	Before troubleshooting or repair work, check the earth wire is connected to the earth terminals of the main unit, otherwise an electric shock is caused when a leak occurs. If the earth wire is not correctly connected, contact an electric engineer for rework.
	After completing the repair or relocation work, check that the ground wires are connected properly.
Check earth wires.	Be sure to connect earth wire. (Grounding work) Incomplete grounding causes an electric shock. Do not connect ground wires to gas pipes, water pipes, and lightning rods or ground wires for telephone wires.

Prohibition of modification.	Do not modify the products. Do not also disassemble or modify the parts. It may cause a fire, electric shock or injury.
Use specified parts.	When any of the electrical parts are to be replaced, ensure that the replacement parts satisfy the specifications given in the Service Manual (or use the parts contained on the parts list in the Service Manual). Use of any parts which do not satisfy the required specifications may give rise to electric shocks, smoking and / or a fire.
Do not bring a child close to the equipment.	If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, put a sign in place so that no-one will approach the work location before proceeding with the work. Third-party individuals may enter the work site and receive electric shocks if this warning is not heeded.
Insulating measures	Connect the cut-off lead wires with crimp contact, etc., put the closed end side upward and then apply a watercut method, otherwise a leak or production of fire is caused at the users' side.
No fire	 When performing repairs using a gas burner, replace the refrigerant with nitrogen gas because the oil that coats the pipes may otherwise burn. When repairing the refrigerating cycle, take the following measures. 1) Be attentive to fire around the cycle. When using a gas stove, etc., be sure to put out fire before work; otherwise the oil mixed with refrigerant gas may catch fire. 2) Do not use a welder in the closed room. When using it without ventilation, carbon monoxide poisoning may be caused. 3) Do not bring inflammables close to the refrigerant cycle, otherwise fire of the welder may catch the inflammables.
	The refrigerant used by this air conditioner is the R454B Check the used refrigerant name and use tools and materials of the parts which match with it. For the products which use R454B refrigerant, the refrigerant name is indicated at a position on the outdoor unit where is easy to see.
	Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body. For an air conditioner which uses R454B, never use other refrigerant than R454B. For an air conditioner which uses other refrigerant (R22, etc.), never use R454B. If different types of refrigerant are mixed, abnormal high pressure generates in the refrigerating cycle and an injury due to breakage may be caused.
Refrigerant	When the air conditioner has been installed or relocated, follow the instructions in the Installation Manual and purge the air completely so that no gases other than the refrigerant will be mixed in the refrigerating cycle. Failure to purge the air completely may cause the air conditioner to malfunction.
	Do not charge refrigerant additionally. If charging refrigerant additionally when refrigerant gas leaks, the refrigerant composition in the refrigerating cycle changes resulted in change of air conditioner characteristics or refrigerant over the specified standard amount is charged and an abnormal high pressure is applied to the inside of the refrigerating cycle resulted in cause of breakage or injury. Therefore if the refrigerant gas leaks, recover the refrigerant in the air conditioner, execute vacuuming, and then newly recharge the specified amount of liquid refrigerant. In this time, never charge the refrigerant over the specified amount.
	When recharging the refrigerant in the refrigerating cycle, do not mix the refrigerant or air other than R454B into the specified refrigerant. If air or others is mixed with the refrigerant, abnormal high pressure generates in the refrigerating cycle resulted in cause of injury due to breakage.
	After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cocking stove though the refrigerant gas itself is innocuous.
	Never recover the refrigerant into the outdoor unit. When the equipment is moved or repaired, be sure to recover the refrigerant with recovering device. The refrigerant cannot be recovered in the outdoor unit; otherwise a serious accident such as breakage or injury is caused.

Assembly / Wiring	After repair work, surely assemble the disassembled parts, and connect and lead the removed wires as before. Perform the work so that the cabinet or panel does not catch the inner wires. If incorrect assembly or incorrect wire connection was done, a disaster such as a leak or fire is caused at user's side.
Insulator check	After the work has finished, be sure to use an insulation tester set (500 V Megger) to check the resistance is 1 M Ω or more between the charge section and the non-charge metal section (Earth position). If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side.
	When the refrigerant gas leaks during work, execute ventilation. If the refrigerant gas touches to a fire, poisonous gas generates. A case of leakage of the refrigerant and the closed room full with gas is dangerous because a shortage of oxygen occurs. Be sure to execute ventilation.
Ventilation	If refrigerant gas has leaked during the installation work, ventilate the room immediately. If the leaked refrigerant gas comes in contact with fire, noxious gas may generate.
	After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cocking stove though the refrigerant gas itself is innocuous.
0	When the refrigerant gas leaks, find up the leaked position and repair it surely. If the leaked position cannot be found up and the repair work is interrupted, pump-down and tighten the service valve, otherwise the refrigerant gas may leak into the room. The poisonous gas generates when gas touches to fire such as fan heater, stove or cocking stove though the refrigerant gas itself is innocuous. When installing equipment which includes a large amount of charged refrigerant such as a multi air conditioner in a sub-room, it is necessary that the density does not the limit even if the refrigerant leaks. If the refrigerant leaks and exceeds the limit density, an accident of shortage of oxygen is caused.
Compulsion	Tighten the flare nut with a torque wrench in the specified manner. Excessive tighten of the flare nut may cause a crack in the flare nut after a long period, which may result in refrigerant leakage.
	Nitrogen gas must be used for the airtight test.
	The charge hose must be connected in such a way that it is not slack.
	For the installation / moving / reinstallation work, follow to the Installation Manual. If an incorrect installation is done, a trouble of the refrigerating cycle, water leak, electric shock or fire is caused.
	Once the repair work has been completed, check for refrigerant leaks, and check the insulation resistance and water drainage. Then perform a trial run to check that the air conditioner is running properly.
0	After repair work has finished, check there is no trouble. If check is not executed, a fire, electric shock or injury may be caused. For a check, turn off the power breaker.
Check after repair	After repair work (installation of front panel and cabinet) has finished, execute a test run to check there is no generation of smoke or abnormal sound. If check is not executed, a fire or an electric shock is caused. Before test run, install the front panel and cabinet.
	Be sure to fix the screws back which have been removed for installation or other purposes.
Do not operate the unit with the valve closed.	 Check the following matters before a test run after repairing piping. Connect the pipes surely and there is no leak of refrigerant. The valve is opened. Running the compressor under condition that the valve closes causes an abnormal high pressure resulted in damage of the parts of the compressor and etc. and moreover if there is leak of refrigerant at connecting section of pipes, the air is sucked and causes further abnormal high pressure resulted in burst or injury.
	Only a qualified installer or qualified service person is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and / or vibration may result.
Check after reinstallation	Check the following items after reinstallation. 1) The earth wire is correctly connected. 2) The power cord is not caught in the product. 3) There is no inclination or unsteadiness and the installation is stable. If check is not executed, a fire, an electric shock or an injury is caused.
	When carrying out the pump-down work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in reputing, injury, etc.

	When the service panel of the outdoor unit is to be opened in order for the compressor or the area around this part to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the compressor pipes and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.
	Take care not to get burned by compressor pipes or other parts when checking the cooling cycle while running the unit as they get heated while running. Be sure to put on gloves providing protection for heat.
Cooling check	When the service panel of the outdoor unit is to be opened in order for the fan motor, reactor, inverter or the areas around these parts to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the fan motor, reactor, inverter heat sink and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.
	Only a qualified installer or service person is allowed to do installation work. Inappropriate installation may result in water leakage, electric shock or fire.
	Before starting to install the air conditioner, read carefully through the Installation Manual, and follow its instructions to install the air conditioner.
	Be sure to use the company-specified products for the separately purchased parts. Use of non- specified products may result in fire, electric shock, water leakage or other failure. Have the installation performed by a qualified installer.
	Do not supply power from the power terminal block equipped on the outdoor unit to another outdoor unit. Capacity overflow may occur on the terminal block and may result in fire.
	Do not install the air conditioner in a location that may be subject to a risk of expire to a combustible gas. If a combustible gas leaks and becomes concentrated around the unit, a fire may occur.
Installation	Install the indoor unit at least 8'2"(2.5 m) above the floor level since otherwise the users may injure themselves or receive electric shocks if they poke their fingers or other objects into the indoor unit while the air conditioner is running.
	Install a circuit breaker that meets the specifications in the installation manual and the stipulations in the local regulations and laws.
	Install the circuit breaker where it can be easily accessed by the qualified service person.
	If you install the unit in a small room, take appropriate measures to prevent the refrigerant from exceeding the limit concentration even if it leaks. Consult the dealer from whom you purchased the air conditioner when you implement the measures. Accumulation of highly concentrated refrigerant may cause an oxygen deficiency accident.
	Do not place any combustion appliance in a place where it is directly exposed to the wind of air conditioner, otherwise it may cause imperfect combustion.

Explanations given to user

If you have discovered that the fan grille is damaged, do not approach the outdoor unit but set the circuit breaker to the OFF position, and contact a qualified service person to have the repairs done. Do not set the circuit breaker to the ON position until the repairs are completed.

Relocation

- Only a qualified installer or qualified service person is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and / or vibration may result.
- When carrying out the pump-down work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in reputing, injury, etc.

• Refrigerant (R454B)

This air conditioner adopts HFC type refrigerant (R454B) which does not deplete the ozone layer.

1. Safety Caution Concerned to Refrigerant

The pressure of R454B is high 1.6 times of that of the former refrigerant (R22).

Accompanied with change of refrigerant, the refrigerating oil has been also changed.

Therefore, be sure that water, dust, the former refrigerant or the former refrigerating oil is not mixed into the refrigerating cycle of the air conditioner with refrigerant during installation work or service work.

If an incorrect work or incorrect service is performed, there is a possibility to cause a serious accident. Use the tools and materials exclusive to R454B to purpose a safe work.

2. Cautions on Installation/Service

- Do not mix the other refrigerant or refrigerating oil. For the tools exclusive to R454B, shapes of all the joints including the service port differ from those of the former refrigerant in order to prevent mixture of them.
- 2) As the use pressure of the refrigerant is high, use material thickness of the pipe and tools which are specified for R454B.
- 3) In the installation time, use clean pipe materials and work with great attention so that water and others do not mix in because pipes are affected by impurities such as water, oxide scales, oil, etc. Use the clean pipes.

Be sure to brazing with flowing nitrogen gas. (Never use gas other than nitrogen gas.)

- 4) For the earth protection, use a vacuum pump for air purge.
- 5) R454B refrigerant is azeotropic mixture type refrigerant.
 - Therefore use liquid type to charge the refrigerant. (If using gas for charging, composition of the refrigerant changes and then characteristics of the air conditioner change.)

3. Pipe Materials

For the refrigerant pipes, copper pipe and joints are mainly used.

It is necessary to select the most appropriate pipes to conform to the standard.

Use clean material in which impurities adhere inside of pipe or joint to a minimum.

1) Copper pipe

<Piping>

The pipe thickness, flare finishing size, flare nut and others differ according to a refrigerant type. When using a long copper pipe for R454B, it is recommended to select "Copper or copper-base pipe without seam" and one with bonded oil amount 0.0001/lbs 32'10" (40mg/10m) or less.

Also do not use crushed, deformed, discolored (especially inside) pipes.(Impurities cause clogging of expansion valves and capillary tubes.)

<Flare nut>

Use the flare nuts which are attached to the air conditioner unit.

2) Joint

The flare joint and socket joint are used for joints of the copper pipe. The joints are rarely used for installation of the air conditioner. However clear impurities when using them.

4. Tools

1. Required Tools for R454B

Mixing of different types of oil may cause a trouble such as generation of sludge, clogging of capillary, etc. Accordingly, the tools to be used are classified into the following three types.

- 1) Tools exclusive for R454B (Those which cannot be used for conventional refrigerant (R22))
- 2) Tools exclusive for R454B, but can be also used for conventional refrigerant (R22)
- 3) Tools commonly used for R454B and for conventional refrigerant (R22)

The table below shows the tools exclusive for R454B and their interchangeability.

4) Joint preparation are recommend to double-flare fitting accordance to ASHRAE15 requirements.

	Tools whose	e specifications are ch	anged for R454	4B and their intercha	angeability
				R454B oner installation	Conventional air conditioner installatior
No.	Used tool	Usage	Existence of new equipment for R454B	Whether conventional equipment can be used	Whether conventional equipment can be used
1	Flare tool	Pipe flaring	Yes	*(Note)	Yes
2	Copper pipe gauge for adjusting projection margin	Flaring by conventional flare tool	Yes	*(Note)	*(Note)
3	Torque wrench	Tightening of flare nut	Yes	No	No
4	Gauge manifold	Evacuating, refrigerant	Yes	No	No
5	Charge hose	charge, run check, etc.	105		
6	Vacuum pump adapter	Vacuum evacuating	Yes	No	Yes
7	Electronic balance for refrigerant charging	Refrigerant charge	Yes	Yes	Yes
8	Refrigerant cylinder	Refrigerant charge	Yes	No	No
9	Leakage detector	Gas leakage check	Yes	No	Yes
10	Charging cylinder	Refrigerant charge	(Note 2)	No	No

(Note) When flaring is carried out for R454B using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

General tools (Conventional tools can be used.)

In addition to the above exclusive tools, the following equipments which serve also for R22 are necessary as the general tools.

- 1) Vacuum pump. Use vacuum pump by attaching vacuum pump adapter.
- 2) Torque wrench
- 3) Pipe cutter
- 4) Reamer
- 5) Pipe bender
- 6) Level vial

- 7) Screwdriver (+, -)
- 8) Spanner or Monkey wrench
- 9) Hole core drill
- 10) Hexagon wrench (Opposite side 4mm)
- 11) Tape measure
- 12) Metal saw

Also prepare the following equipments for other installation method and run check.

- 1) Clamp meter
- 2) Thermometer

- 3) Insulation resistance tester (Megger)4) Electropage
- 4) Electroscope

1. SPECIFICATIONS

Indoor unit : High wall type

Model name				MMK-UB0151HP-UL	MMK-UB0181HP-UL	MMK-UB0241HP-UL		
Cooling Capacity (kBTU/h)				15.4	18.0	24.0		
Heating Capacity (kBTU/h)				17.0	20.0	27.0		
	Power s	upply			1Ph. 208/230V ~ 60Hz.			
Electrical characteristics	Running	g current	(A)	0.25	0.28	0.40		
	Power c	onsumption	(kW)	0.028	0.032	0.050		
	Height		(in)		12.6 (320mm)			
Outer diamension	Width (in)			41.4 (1050mm)				
	Depth (in)			9.9 (250mm)				
Total weight (lbs)			(lbs)	36 (16 kg)				
Heat exchange	r			Finned tube				
	Fan			Cross flow fan				
Fan unit	Standard air flow (H/M/L) (cfm)		.) (cfm)	495 / 405 / 325	530 / 425 / 325	705 / 530 / 355		
	Motor (W)		(W)	42				
Air filter				Standard filter attached (Long life filter)				
Controller		-	-	-				
Sound pressure level (H/M/L) (dBA)			(dBA)	40 / 36 / 32	41 / 37 / 32	45 / 39 / 33		
Sound power le	vel	(H/M/L)	(dBA)	55 / 51 / 47	56 / 52 / 47	60 / 54 / 48		
Connecting	nino	Gas side	(in)	1	/2	5/8		
Connecting	pipe	Liquid	(in)	1	/4	3/8		

2. DIMENSIONAL DRAWING



3. WIRING DIAGRAM



4. PARTS RATING

4-1. Parts Rating

No.	Parts Name	Туре	Specications
1	Fan motor	WDF-340-30CA	Output (Rated) 30W, DC340V
2	Louver motor	24BYJ48A-080	4 phase, DC12V
3	Thermo. Sensor (TA sensor)	16.4"(418mm)	10kΩ at 77°F(25°C)
4	Heat exchanger sensor (TC1 sensor)	Ø0.16"(4mm), 19.7"(500mm)	10kΩ at 77°F(25°C)
5	Heat exchanger sensor (TC2 sensor)	Ø0.24"(6mm), 31.4"(800mm)	10kΩ at 77°F(25°C)
6	Heat exchanger sensor (TCJ sensor)	Ø0.24"(6mm), 19.7"(500mm)	10kΩ at 77°F(25°C)

4-2. Name of Each Part



5. REFRIGERANTING CYCLE DIAGRAM



Functional part	name	Functional outline
Pulse Motor Valve	PMV	 (Connector CN82 (6P): Blue) 1) Controls super heat in cooling operation 2) Controls under cool in heating operation 3) Recovers refrigerant oil in cooling operation 4) Recovers refrigerant oil in heating operation
Temp. sensor	1. TA	(Connector CN104 (2P): White) 1) Detects indoor suction temperature
	2. TC1	(Connector CN100 (3P): Brown) 1) Controls PMV super heat in cooling operation
	3. TC2	(Connector CN101 (2P): Blue) 1) Controls PMV under cool in heating operation
	4. TCJ	(Connector CN102 (2P): Yellow) 1) Controls PMV super heat in cooling operation

6. CONTROL OUTLINE

6-1. Indoor Unit Control Specifications

No.	Item	Outline of specif	Remarks	
1	Power supply is reset.	 Judgment of outdoor unit Exchange of cooling-only unit Exchange of standard model with the flex model 		
2	Operation select	(1) Based upon the operation select of the operation mode is se-lected.	command from the remote cor	troller or central controller,
		Remote controller command	Control o	utline
		STOP	Stops air cor	nditioner.
		FAN	Fan oper	ation
		COOL	Cooling op	eration
		DRY	Dry oper	ation
		HEAT	Heating op	eration
			cooling or HEAT operation moo y Ta and Ts and the unit starts	
3	Room temp. control	Neither AUTO mode of the standal selected. When a wireless remote Pi, Pi (Twice) and alternative flashing To release the alternative flashing (1) Adjustment range Set temperature COOL/DRY Wired type 64°F [18°C] to 84°F [29°C] Wireless type 63°F [17°C] to 86°F [30°C] (2) From the item code 06, the setup operation can be corrected. SET DATA 0 Temperature setting adjustment +0°F[+0°C] +3.4 Setup at shipment 2	e control is used, the mode is r ning of " ① " and " ④ ". I, change the mode on the wire e on remote controller (°F[°C]) HEAT 64°F [18°C] to 84°F [29°C] 63°F [17°C] to 86°F [30°C]	notified by the receiving sound
4	Automatic capacity control	(1) Based upon difference between T frequency of the outdoor unit varie		Ta: Room temperature Ts: Setup temperature
5	Air volume control	 By the command from the remote "MED (H)", or "LOW (L)" "AUTO" of For the wireless remote controller "L", or "AUTO" operation is execut While air speed is in AUTO mode according to the difference between 	operation is executed. type, "HH", "H+", "H", "L+", ed. , the air speed is changed	HH > H+ > H > L+ > L > LL

No.	Item	Outline of specifications	Remarks
6	Prevention of cold air discharge	 (1) In heating operation, the upper limit of the fan tap is set by one with higher temperature of TC2 sensor and TCJ sensor. When B zone has continued for 6 minutes, the operation shifts to C zone. In defrost time, the control point is set to +10.8°F(+6°C). (°F) (°C) 89.6 32 86 30 82.4 28 78.8 26 78.8 26 33.8 16 A zone: OFF B zone: Over 82.4°F(28°C), below 82.4°F(28°C), ULTRA LOW (LL) C zone: Over 82.4°F(28°C), below 89.6°F(30°C), LOW (L) D zone: Over 86°F(30°C), below 89.6°F(32°C), MED (H) E zone: HIGH (HH) 	 In D and E zones, priority is given to remote control- ler air speed setup. In A and B zones, "^(*) is displayed.
7	Freeze preven- tion control (Low temp. release)	 (1) In cooling operation, the air conditioner operates as described below based upon temp. detected by TC1, TC2 and TCJ sensors. To prevent the heat exchanger from freezing, the operation stops. When "J" zone is detected for 5 minutes, the forced thermo is OFF. In "K" zone, the timer count is interrupted, and held. When "I" zone is detected, the timer is cleared and the operation returns to the normal operation. When "I" zone, operation of the the indoor fan in LOW (L) mode until it reaches the "I" zone. It is reset when the following conditions are satisfied. Reset conditions 1) TC1 ≥ 53.6°F(12°C) and TC2 ≥ 53.6°F(12°C) and TCJ ≥ 53.6°F(12°C) 2) 20 minutes passed after stop. ("F) O1 O1 O1 O1 O1 O1 O1 O1 O1 O1 O1 O1 O1	

No.	ltem	Outline of specifications	Remarks
8	Cooling oil (refrigerant) recovery control	 While the outdoor unit is recovering cooling oil (refrigerant), the indoor units perform the following control tasks: [common for operational (cooling thermo ON/thermo OFF/FAN), as well as nonoperational indoor units] (1) Open the indoor PMV to a certain degree. (2) Engage in recovery control for a specified period of time and return to normal cooling operation at the end of this period upon terminating the control. 	 Recovery operation normally takes place roughly every 2 hours. The opening position of the indoor PMV depending on the type and capacity of the indoor unit.
9	Heating refriger- ant (oil) recovery control	 While the outdoor unit is recovering heating refrigerant (oil), the indoor units perform the following control tasks: (1) Open the indoor PMV to a certain degree. (2) Control the indoor fan according to the operation mode. [Indoor units operating in heating thermo ON/OFF state] Let the indoor fan continue operating, but turn it off if the temperature of the indoor heat exchanger drops. [Indoor units operating in FAN mode] Turn off the indoor fan and display "HEATING STANDBY I'' on the remote controller. [Non-operational indoor units] Keep the indoor fan turned off. (3) Terminate the recovery operation depending on the TC2 temperature reading. The timing of termination is determined by each indoor unit. 	 Recovery operation normally takes place roughly every hour. The opening position of the indoor PMV depending on the type and capacity of the indoor unit.
10	Short intermittent operation compensation control	 For 5 minutes after the operation has started, the operation is continued even if entering thermostat-OFF condition. However, Cooling/Heating exchange and the system protective control precede and thermostat is OFF. 	
11	Elimination of remaining heat	(1) When the air conditioner stops in the "HEAT" mode, drive the indoor fan with "LOW" mode for approx. 30 seconds.	
12	Flap control	 (1) Flap position setup (Wired type) The flap position can be set up in the following operation range. In cooling/dry operation In heating/fan operation In cooling/dry operation In heating/fan operation (2) Swing setup The swinging position can be moved in the following operation range. All modes (3) Fix set up (Wireless type) Keep pressing or pressing briefly the FIX button to move the flap in the desired direction. Operating angle of flap will be different during cooling, dry and heating operation. (4) When the unit stops, the flap automatically closes. (5) While the heating operation is ready, the flap automatically moves upward. 	

13					Outline of s	pecific	ations		Remarks
	Filter sign dis (None in wirele * Provided in separately la TCB-AX218	the aid type	 The operation time of the indoor fan is integrated and stored in memory, and the filter exchange signal is sent to the remote controller to display on the remote controller LCD after the specified time. (150H) When the filter reset signal is received form the remote controller, time of the integrated timer is cleared. In this time, if the specified time has passed, the measured time is reset and LCD display disappears. 						
14	 Heating standby (1) When any of the DN codes listed below is displayed "P05" - Detection of an open phase in the power supply wiring "P10" - Detection of indoor flooding in at least one indoor unit "L30" - Detection of an interlock alarm in at least one indoor unit (2) Forced thermo OFF "COOL/DRY" operation is unavailable because at least one indoor unit is operating in "HEAT" mode. "HEAT" operation is unavailable because at least one indoor unit is operating in "COOL/DRY" mode under 				"OPERATION STANDBY (j) " displayed No display provided on wireless remote controller				
			 priority cooling setting (bit 1 of SW11 on outdoor I/F P.C. board ON). (3) All indoor units not able to engage in any of the above operations stand by in thermo OFF state. (4) The indoor fan has been turned off because the system is engaged in a heat refrigerant (oil) recovery operation. 						
			 <heating standby=""> Displayed on wired remote controller</heating> (1) Normal thermo OFF During heating, the indoor unit goes thermo OFF as the heating temperature setting is reached. (2) During heating, the fan rotates at a breeze speed (UL or lower) or remains stationary to prevent cold air from being discharged (including defrosting operation). (3) Forced thermo OFF "HEAT" operation is unavailable because at least one indoor unit is operating in "COOL/DRY" mode under priority cooling setting (bit 1 of SW11 on outdoor I/F P.C. board ON). 					 "HEATING STANDBY (*)" " displayed 	
15	Selection of c control mode		indoo throug (2) Settin	r unit re gh the s g detail	emote contro setting of the	ller can	be deter		 In the case of a wired remote controller, "CEN- TRAL CONTROL IN PROGRESS [●] is displayed (lit up) while in central control mode.
	Operation via		Opera	ation via	RBC-AMT32	UL		RBC-	The display blinks when a control function
	TCC-Link central control	Start/stop selection	Operation mode selection	Timer setting	Temperature setting	Fan speed setting	Air flow direction setting	AMT32UL display	 control function inaccessible to a remote controller is chosen. A wireless remote
	Individual	0	0	0	0	0	0		controller has the same set
	Central 1	×	0	×	0	0	0	"CENTRAL	of control functions, although there is no
	Central 2	×	×	×	×	0	0	CONTROL IN	display. When a control operation
	Central 3	0	×	0	×	0	0	- PROGRESS"	is performed via a wireless
	Central 4	0	×	0	0	0	0		remote controller while in central control mode, a

No.	ltem	Outline of specifications	Remarks
16	Hi POWER operation (Wireless remote control specific operations)	 When you press the Hi POWER button during cooling, heating or A operation, the air conditioner will start the following operation. Cooling operation Performs the cooling operation at 2.0F°(1°C) lower than the setting temperature. Only when the fan speed before the Hi POWER operation is not high, the fan speed will be increased. Heating operation Performs the heating operation at 3.5F°(2°C) higher than the setting temperature. Only when the fan speed before the Hi POWER operation is not high, the fan speed will be increased. 	
17	ECO timer operation (Wireless remote control specific operations)	When you press the ECO button during cooling, heating or A operation, the air conditioner will start the following operation. The fan speed display will indicate AUTO and low speed will be used.	

No.	ltem	Outline of specifications	Remarks
18	PRESET operation (Wireless remote control specific operation)	 To operate the air conditioner with the setting memorized. (1) Press the PRESET button. The setting memorized will be indicated and the air conditioner operates with regards to the setting. The lamp (White) on the display panel of the indoor unit goes on, and operation starts after approximately 3 minutes. Initial setting: MODE : AUTO Temperature : 22 (Memorized Setting) (1) Select your preferred operation (2) Press and hold PRESET PRESET button more than 3 seconds. The (P) make is indicated and the setting is memorized. (3) Press the PRESET button to operate the setting memorized. 	1 PRESET TEMP T
19	DC motor	 (1) When the fan stator, positioning is performed for the starter and the rotor. (Vibrate slightly) (2) DC motor operates according to the command from the indoor controller. (Note) If the fan lock was detected, the operation of the indoor unit stops and the error is displayed. 	Check code [P12]
20	Save operation	 The save operation starts when starts when button on the remote controller is turned on. While the save operation is performed, segment goes on the screen of the wired remote controller. The request capacity ratio is restricted to approx. 75% during save operation. If the save operation was validated, the contents are held during the operation stop, the operation mode change and the resetting of power supply. Therefore the operation at the next time also will be activated with "Save operation is valid" 	RBC-AMT32UL

No.	ltem	Outline of specifications	Remarks
21	Secondary heating	 Secondary heating can be used while heating operations are performed. <control (normal="" mode)="" outline=""></control> 1) If the difference between the indoor temperature and the outdoor temperature is large while the air conditioner is operating, turn ON the secondary heating. 2) This function is valid when the CODE No. (DN) [DC] is set to "0001" (32.9°F(0.5°C)) to "0010" (41°F(5.0°C)) using the wired remote controller, and the output to the external heating source will turn ON if the room temperature satisfies the condition. 3) The output will always stay ON while defrosting operations are being performed. 	
		 A OFF <	TA⊢: Temp.set air high (= Ts - a) TA∟: Temp.set air low (= TA⊢ - b)
			TOн : Temp.set out high TO∟ : Temp.set out low (= TOн - c)
		<control (flip="" mode)="" outline=""> If the difference between the room temperature and the set temperature is large while using secondary heating, run the air conditioner. This function is valid when the CODE No. (DN) [C5] is set to "0001" (Flip mode) or the CODE No. (DN) [C7] is set to "0001" (33.8°F(1°C)) to "0010" (50°F(10°C)) using the wired remote controller, and when the output is switched ON when the room temperature satisfies the conditions. The outdoor temperature determination is invalid whilst this control is performed. </control>	
		TAH TAL TAL TAL TAL TAL	

No.	Item	Item Outline of specifications			
21	Secondary	DN [C5] Data Secondary heating mode	7		
	heating (Continued)	0000 Normal mode (Factory default)	=		
	(,	0001 Flip mode	-		
			- -		
		DN [C6] Data TO _H : Set temp. out (high) [°F(°C)] -0015 "-0015": 5°F(-15°C) to "0015": 59°F(15°C)	=		
		-0015 "-0015": 5°F(-15°C) to "0015": 59°F(15°C) to "0000": 32°F(0°C) (Factory default)			
		0015			
		DN [C7] Data с : ТОн - ТО∟ [°F(°С)]			
		0000 Unavailable (Factory default)			
		0001 0001: 33.8°F(1°C) to "0010": 50°F(10°C	.)		
		to 0010			
		DN [DB] Data b : TAH - TAL [°F(°C)]			
		0001 "0001": 32.9°F(0.5°C) to "0010": 41°F(5.0°C			
		to "0006": 37.4°F(3°C) (Factory default) 0010			
			→ ¬		
		DN [DC] Data a : Ts - TA _H (Normal mode)[°F(°C)] TA _L - Ts (Flip mode)[°F(°C)]			
		0000 Unavailable (Factory default)			
		0001 0001: 33.8°F(1°C) to "0010": 50°F(10°C	•)		
		to 0010			
		 <wiring> Use ① - ④ pin (Cooling output, DC 12 V) of CN60 on indoor P.C. board for output. Relay (DC12V, procured locally) Corresponds to the relay up to one that the rate current of the operation coil is approx. 75mA CN60 0 1 1 1 Corresponds to the relay up to one that the rate current of the operation coil is approx. 75mA CN60 0 1 1 1 Corresponds to the relay up to one that the rate current of the operation coil is approx. 75mA CN60 0 1 1 1 Corresponds to the relay up to one that the rate current of the operation coil is approx. 75mA Connect to secondary heating un the transmitted of the termine the cable length between the indoor control P.C. board Note) Determine the cable length between the indoor control P.C. board and the relay within 2m. </wiring> * The output state can be checked from "Monitor function" or the wired remote controller. The manual for the remote controller for operation methods of "Monitor function". Monitor CODE No. E5 0001: ON	o it e		

7. COMMUNICATION TYPE, MODEL NAMES AND THE MAXIMUM NUMBER OF CONNECTABLE UNITS

If TU2C-Link (U series) is combined with TCC-Link (other than U series), the wiring specifications and the maximum number of connectable indoor units during group control operation will be changed.

- (1) For wiring specifications, carry out the installation, maintenance, or repair according to the attached Installation Manual.
- (2) For a communication type combination and the max. number of connectable indoor units, refer to the following table.
 - Only when all outdoor unit, indoor unit and remote control are a U series, communication method is TU2C-LINK, and the maximum number of connectable units will be 16.



The combination of unit type and the number of the maximum connection of a communication method

		Unit type						
Outdoor unit	U series	U series	U series	U series	*	*	*	*
Indoor unit	U series	U series	*	*	U series	U series	*	*
Remote controller Remote sensor	U series	*	U series	*	U series	*	U series	*
Communication type	TU2C-Link	TCC-Link						
Maximum number of connectable units	16	8						

* Other than U series

8. CONFIGURATION OF CONTROL CIRCUIT

8-1. Indoor Controller block diagram (MCC-1696)

8-1-1. Connection of wired remote controller



208/230-1-60Hz

8-1-2. Connection of Wireless Remote Controller



- 28 -

8-2. Indoor P.C. Board MCC-1696



Wall-Type P.C. Board Optional Switch/Connector Specifications

Function	Connector No.	Pin No.	Specifications	Remarks
Terminator resistor provided	SW01	Bit 1	OFF: No terminator resistor, ON: Terminator resistor provided	Setup at shipment OFF: No terminator resistor. Only 1 unit is ON during central control by custom only.
Remote controller A/B		Bit 2	OFF: Remote controller A ON: Remote controller B	Setup at shipment OFF: Remote controller A
For output		1	DC12V	Setup at shipment: Linked operation of ON with operation of indoor unit and OFF with stop
Fan output	CN32	2	Output	* The setup of single operation by FAN button on remote controller is executed from remote controller. (DN = 31)
		1	Start/Stop input	HA Start/Stop input (J01: Provided/Not provided = Pulse (At shipment from factory)/Static input switch)
		2	0V (COM)	
НА	CN61	3	Handy prohibition input	Operation stop of handy remote controller is permitted / prohibited by input.
nA	CNUT	4	Operation output	ON during operation (Answer back of HA)
		5	DC12V (COM)	
		6	Alarm output	ON during output of alarm
		1	DC12V (COM)	
		2	Defrost output	ON during defrosting of outdoor unit
		3	Thermo-ON output	ON when Real thermo. ON (Comp. ON)
Optional output	CN60	4	Cooling output	ON when operation mode is cooling line (Cool, Dry, Cooing/Heating AUTO cooling)
		5	Heating output	ON when operation mode is heating line (Heat, Cooling/Heating AUTO heating)
		6	Fan output	ON when indoor fan is ON
		1	DC12V (COM)	At shipment from factory, the error code "L30" generates and optional error input to stop operation forcedly (DN:2A = 1) is
Outside error input	CN80	2	DC12V (COM)	controlled (Display of protection for devices attached to outside) by setup of outside error input (DN:2A = 2) for 1 minute.
		3	Filter/Option/Outside error input	* Optional error input control is set up on the remote controller.
СНК		1	Check mode input	This check is used for operation check of indoor unit.
Operation check	CN71	2	0V	(The specified operation such as indoor fan "H", drain pump ON, etc. is executed without communication with outdoor unit or remote controller.)
	CN72	1	Display mode input	Display mode, communication is enabled by indoor unit and
DISP Display mode		2	0V	remote controller only. (When power supply is turned on.)
		- 1	Demand input	Timer short (Usual)
EXCT	CN73	1	Demand input	Indoor unit forced thermo-OFF operation
Demand		2	0V	
Input for float	CN34	1	DC12V	Normal when between (1) - (3) short-circuits, but
SW		2	NC	abnormal when open-circuits. (check code "P10" appears)
		3	Float SW input	
Output for	CN81	1	DC12V	
Flow selector unit		2	EP valve output (Open collector)	
		3	Balance valve output (Open collector)	
		4	Suction valve output (Open collector)	
		5	Discharge valve output (Open collector)	
Output power	CN309	1	AC230V	This can be used as power supply for option devices.
supply for option		3	AC230V	1
Connection		1	DC12V	Connected Application control kit (TCB-PCUC2E)
for option	CN521		DC5V	
P.C.board		2	Send	1
	-	4	Receive	1
		5	0V	4
		5	U V	

8-3. Functions at test run

Cooling/Heating test run check

The test run for cooling/heating can be performed from either indoor remote controller or outdoor interface P.C. board.

1. Start/Finish operation of test run

⊙ Test run from indoor remote controller

Wired remote controller: Refer to the below item of "Test run" of the wired remote controller.
 Wireless remote controller: Refer to the next page item of "Test run" of the wireless remote controller.

In case of wired remote controller

<RBC-AWSU52-UL>

ᠫ No

🗖 Yes

	setting menu(1/	3)
1. Test mod 2. Register 3. Alarm h 4. Address	r service info.	
5. Monitor	function	
5 Return	🗖 Set	~~
	Test mode	
Tes	st mode start.	
5 No	🗖 Yes	
Room	12:00	(Mon)
	Test	
	t temp.(Cool)	≡
Room	12:00	(Mon)
	Test	
	Test mode	
Te	st mode stop.	

- 1 In the "Field setting menu" screen, press [∧] and [∨] to select "Test mode", and then press [○ Set/Fix]
 - → Test mode is set, and returns to the "Field setting menu" screen. Press the [5 Return] button 2 times, to open screen (2).

- 2 Press [ON/OFF ON/OFF]
 - → Operation starts, and in test mode screen (1) opens. (While stopped, it is screen (2))
 - → Test mode is done while the operating mode is set to "Cool" or "Heat".
 - \rightarrow The temperature cannot be set in test mode.
 - \rightarrow Check codes are displayed in the normal way.

 \rightarrow Screen (3) appears.

→ Press [Set/Fix] to end test mode and do normal operation.

Note) The test run returns to the normal operation after 60 minutes.

In case of wireless remote controller

REQUIREMENT

- 1. For the operation procedure, be sure to follow the matter.
- Finish the forced cooling operation in a short time because it applies excessive strength to the air conditioner.
- 3. A test operation of forced heating is unavailable. Perform a test operation by heating operation using the switches of the remote controller.

However heating operation may be not carried out according to the temperature conditions.

• Check wiring/piping of indoor and outdoor units

- 1. Open the front panel.
- 2. When pushing [RESET] button for 10 seconds or more, "Pi!" sound is heard and the operation changes to a forced cooling operation. After approx. 3 minutes, a cooling operation starts forcedly. Check cool air starts blowing. If the operation does not start, check wiring again.
- 3. To stop a test operation, push [RESET] button once again (Approx. 1 second). The up/down air flow adjusting plate closes and the operation stops.

Check transmission of remote controller

- 1. Push "START/STOP" button of the remote controller to check an operation can also start by the remote controller.
 - When pushing [RESET] button once (For 1 second), the operation changes to automatic operation. For a forced cooling operation, keep the [RESET] button pushed over 10 seconds.
 - "Cooling" operation by the remote controller may be unavailable according to the temperature conditions. Check wiring/piping of the indoor and outdoor units in forced cooling operation.



■ Check function for operation of indoor unit (Functions at indoor unit side)

This function is provided to check the operation of the indoor unit singly without communication with the remote controller or the outdoor unit. This function can be used regardless of operation or stop of the system.

However, if using this function for a long time, a trouble of the equipment may be caused. Limit using this function within several minutes.

[How to operate]

- Short-circuit CHK pin (CN71 on the indoor P.C. board). The operation mode differs according to the indoor unit status in that time. Normal time: Both float SW and fan motor are normal. Abnormal time: Either one of float SW or fan motor is abnormal.
- Restricted to the normal time, if short-circuiting DISP pin (CN72 on the indoor P.C. board) in addition to short-circuit of CHK pin (CN71 on the indoor P.C. board), the minimum opening degree (30pls) can be set to the indoor PMV only.

When open DISP pin, the maximum opening degree (1500pls) can be obtained again.

[How to clear]

Open CHK pin. While the system is operating, it stops once but automatically returns to operation after several minutes.

	Norma	Abnormal time		
	DISP pin open DISP pin short circuit		Abhormar time	
Fan motor	(H)	(H)	Stop	
Indoor PMV (*)	Max. opening degree (1500pls)	Min. opening degree (30pls)	Min. opening degree (30pls)	
Louver	Horizontal	Horizontal	Immediate stop	
Drain pump	ON	ON	ON	
Communication	All ignored	All ignored	All ignored	
P.C. board LED	Lights	Lights	Flashes	

• To exchange the indoor PMV coil, set the indoor PMV to Max. opening degree.

• For the detailed positions of CHK pin (CN71 on indoor P.C. board) and DISP pin (CN72 on indoor P.C. board), refer to the indoor P.C. board MCC-1696.

9. APPLIED CONTROL

9-1. Setup of Selecting Function in Indoor Unit

(Be Sure to Execute Setup by a Wired Remote Controller)

<RBC-AWSU52-UL>

TOSHIBA					
Carrier	Field setting m	ienu (2/3)			
	6. Setting louver position				
\mathbf{O}	7. Setting timer operation mode				
	8. Easy I.DN setting				
	9. DN setting				
	10. Reset Power Consumption data				
	S Return 🗖	🛾 Set 📈			
	<	>			
	<u>^</u>	ON/OFF			
5					
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1					
Field setting menu (2/3)					



- 2 Press and hold [Menu] and [] at the same time to open "Field setting menu" → Press and hold 4 seconds.
- In the "Field setting menu" screen, press [∧] and [∨] to select "DN setting", and then press [□ Set/Fix]
- 2 Press [∧] and [∨] to select "Indoor unit" or "Outdoor unit", and the press [□ Set/ Fix]

When doing group connections: → The fans and louvres of the selected indoor units operate.

- **3** Press [<] to black highlight the item code (DN), and then press [∧] and [∨] to set the item code
- **4** Press [>] to black highlight the data, and then press [<] and [<] to set the data
- 5 After finishing setting the data of the item code (DN), press [□ Set/Fix] → "Continue?" is displayed.
- - → The changes are fixed, and the "Field setting menu" screen returns.
 - → " Σ " appears while data is changing.

When doing group connections:

→ Press [S Return] to open the unit selection screen. In the unit selection screen, press [S Return] to briefly display "∑", and then return to the "Field setting menu" screen.

NOTE

For details on item codes and data to be set, refer to the Installation Manual and Service manual of the indoor unit and outdoor unit.

[→] If "Indoor unit" was selected, the fans and lovvres of the indoor units operate.

Indoor unit function Code No. (DN Code) table (includes functions needed to perform applied control on site)

DN	Item		escription	At shipment
01	Filter display delay timer	0000: None 0002: 2500H 0004: 10000H	0001: 150H 0003: 5000H	Depending on model type
02	Dirty state of filter	0000: Standard 0001: High degree of dirt (H	0000: Standard	
03	Central control address	0001: No.1 unit to 006 0001: No.1 unit to 0128 00Un: Unfixed (When using 0099: Unfixed (Other than U	00Un/0099: Unfixed *1	
04	Specific indoor unit priority	0000: No priority	0001: Priority	0000: No priority
06	Heating temp. shift	0000: 0°F(0°C) 0002: +3.6°F(+2°C) to	0001: +1.8°F(+1°C) 0010: +18°F(+10°C) (Up to +6 recommended)	Depending on model type
0b	Demand control (CN73 / CN4)	0000: Demand input 0002: Card input setup.3 0004: Card input setup.4 0005: Fire alarm input (Normal close) 0007: Card input setup.5 0009: Card input setup.2	0001: O2 sensor input 0003: Fire alarm input (Normal open) 0006: Notice cord (202) 0008: Card input setup.1	0000: Demand input
0d	Existence of [AUTO] mode	0000: Provided 0001: Not provided (Automatic selection	from connected outdoor unit)	0001: Not provided
0F	Cooling only	0000: Heat pump 0001: Cooling only (No disp	·	0000: Heat pump
10	Туре	Refer to Type DN code "1 0	Depending on model type	
11	Indoor unit capacity	0000: Unfixed Refer to Indoor Unit Capaci	0001 to 0034 ity DN code "11" list	According to capacity type
12	Line address	0001: No.1 unit to 0064 0001: No.1 unit to 0128 00Un: Unfixed (When using 0099: Unfixed (Other than U	00Un/0099: Unfixed *1	
13	Indoor unit address	0001: No.1 unit to 0064 0001: No.1 unit to 0128 00Un: Unfixed (When using 0099: Unfixed (Other than U	00Un/0099: Unfixed *1	
14	Group address	0000: Individual 0001: 0002: Follower unit of group 00Un: Unfixed (When using 0099: Unfixed (Other than U	00Un/0099: Unfixed *1	
19	Louver type (Air direction adjustment)	0000: No louver 0004: (4-way Air Discharge	0001: Swing only Cassette type, etc.)	Depending on model type
1E	Temp difference of [AUTO] mode selection $COOL \rightarrow HEAT$,	0000: 0°F(0°C) to	0003: 5.4°F(3°C) (Ts ±2.7°F(1.5°C))	
28	$HEAT \rightarrow COOL$ Automatic restart of power failure	Ts:Remote controller setup 0000: None	0001: Restart	0001: Restart
2A	Selection of option/Trouble input (TCB-PCUC2E: CN3)	0000: Filter input 0002: None	0001: Alarm input (Air washer, etc.)	0002: None
2E	HA terminal (CN61) select	0000: Usual 0002: Fire alarm input (arbiter contact) 0004: Notice cord (201)	0001: Card input setup.1 (3) 0003: Card input setup.2 (4) 0005: Card input setup.5	0000: Usual (HA terminal)
31	Ventilating fan control	0000: Unavailable	0001: Available	0000: Unavailable
32	TA sensor selection	0000: Body TA sensor	0001: Remote controller sensor	0000: Body TA sensor

DN	Item	Desc	At shipment	
33	Temperature unit select	0000: °C	0001: °F	0001: °F
5d	External static pressure High-ceiling adjustment (Air flow selection)	Refer to next page.		Depending on model type
60	Timer setting (wired remote controller)	0000: Available (can be performed)	0001: Unavailable (cannot be performed)	0000: Available
77	Dual set point	0000: Unavailable	0002: Available	0000: Unavailable
79	Alarm output setup of the header unit	0000: Not including the state of following unit	0001: Including the state of following unit	0000: Not including the state of following unit
7A	Change unit 0.9°F(0.5°C) or 1.8°F(1°C) on remote	0000: 1.8°F(1°C)	0001: 0.9°F(0.5°C)	0001: 0.9°F(0.5°C)
b3	Soft cooling	0000: Unavailable	0001: Available	0001: Available
b5	Occupancy sensor/ Wireless Remote controller Provided / None	0000: None 0002: Wireless remote controll	0001: Occupancy sensor provided er provided	0000: None
b6	Occupancy sensor Enable / Invalid (Absence time judgment time)	0000: Invalid 0002: 60min. 0005: 150min.	0001: 30min. 0004: 120min.	0002: Enable (60 min.)
b7	Occupancy sensor operation at absent time	0000: Stand by	0001: operation stop	0000: Stand by
d0	Whether the power saving mode can be set by the remote controller	0000: Invalid	0001: Valid	0001: Valid
E0	Destination	0000: Domestic	0001: North America	0001: North America
E6	Wireless remote controller A-B selection	0000: A	0001: B	0000: A
F6	Presence of Application control kit (TCB-PCUC2E)	0000: None	0001: Exist	0000: None
FC	Communication protocol *2	0000:TCC-LINK	0003:TU2C-LINK	0000: TCC-LINK
Fd	Priority operation mode (FS unit)	0000: Heating	0001: Cooling	0000: Heating
FE	FS unit address			00Un/0099: Unfixed *1
DN	ltem	Description	At shipment	
-----	--	--	-----------------------------	
180	Notice code number 01	0000: None 0001 ~ 0255 : Notice code	0000: None	
181	Notice code number 02	0129 : Notice code (201) 0130 : Notice code (202) (0001 ~ 0255 : TU2C-LINK only)	0000: None	
182	Notice code number 03		0000: None	
183	Notice code number 04	-	0000: None	
184	Notice code number 05	-	0000: None	
185	Notice code number 06		0000: None	
186	Notice code number 07		0000: None	
187	Notice code number 08	-	0000: None	
188	Notice code number 09	-	0000: None	
189	Notice code number 10	•	0000: None	
191	Secondary Heat / Ventilation output port switching	0000: Ventilation output 0001: Secondary heating output	0000: Ventilation output	
1FB	Central device control state	0000: No central device control		
1FC	Indoor Unit terminating resistance	0000: OFF 0001: ON	0000: OFF	

*1 Display order of "00Un" and "0099" varies depending on remote controller models or communication types.

For Central control address (DN [03]), Indoor unit address (DN [13]), FS unit address (DN [FE])

Remote controller	Communication type	Display order		
U series	TU2C-LINK	$\cdots \Leftrightarrow 0128 \Leftrightarrow 00Un \Leftrightarrow 0001 \Leftrightarrow \cdots$		
U series	TCC-LINK	$\dots \Leftrightarrow 0064 \Leftrightarrow 00Un \Leftrightarrow 0001 \Leftrightarrow \dots$		
Other than U series	TCC-LINK	$\cdots \Leftrightarrow 0064 \Leftrightarrow 0099 \Leftrightarrow 0001 \Leftrightarrow \cdots$		

For Line address (DN [12])

Remote controller	Communication type	Display order	
U series	TU2C-LINK	$\cdots \Leftrightarrow 0128 \Leftrightarrow 00Un \Leftrightarrow 0001 \Leftrightarrow \cdots$	
U Series	TCC-LINK	$\cdots \Leftrightarrow 0030 \Leftrightarrow 00Un \Leftrightarrow 0001 \Leftrightarrow \cdots$	
Other than U series	TCC-LINK	$\cdots \Leftrightarrow 0030 \Leftrightarrow 0099 \Leftrightarrow 0001 \Leftrightarrow \cdots$	

For Group address (DN [14])

Remote controller	Communication type	Display order		
U series	TU2C-LINK	$\dots \Leftrightarrow 0002 \Leftrightarrow 00Un \Leftrightarrow 0000 \Leftrightarrow \dots$		
U series	TCC-LINK	$\dots \Leftrightarrow 0002 \Leftrightarrow 0001 \Leftrightarrow 0000 \Leftrightarrow \dots$		
Other than U series	TCC-LINK	$\cdots \Leftrightarrow 0002 \Leftrightarrow 0099 \Leftrightarrow 0000 \Leftrightarrow \cdots$		

*2 Communication protocol can be automatically switched with the setup in the outdoor unit during installation.

Type DN code "10"

Value	Туре	Model	
0001*1	4 Way Cassette	MMU-UB****HP-UL	
0008	High wall	MMK-UB****HP-UL	

*1 Default value stored in EEPROM mounted on service P.C. board

Indoor Unit Capacity DN code "11"

Setting data	Туре
0000*	Disable
0007	015
0009	018
0011	024

* EEPROM initial value on the P.C.board for indoor unit servicing.

9-2. Applied Control in Indoor Unit

Remote location ON/OFF control box (TCB-IFCB-4UL)

[Wiring and setup]

- Use the exclusive connector for connection with the indoor control P.C. board.
- In a group control, the system can operate when connecting with any indoor unit (Control P.C. board) in the group. However when taking out the operation/error signal from the other unit, it is necessary to take out from each unit individually.

1. Control items

- 1) Start/Stop input signal : Operation start/stop in unit
- 2) Operation signal : Output during normal operation
- 3) Error signal : Output during alarm
 - (Serial communication error or indoor/outdoor protective device) operation

2. Wiring diagram using remote control interface (TCB-IFCB-4UL)

Input	IFCB-4UL : No voltage ON/OFF serial signal
Output	No voltage contact for operation, error display
	Contact capacity: Below Max. AC240V 0.5A



Power supply 208/230-1-60

Ventilating fan control from remote controller

[Function]

- The start / stop operation can be operated from the wired remote controller when air to air heat exchanger or ventilating fan is installed in the system.
- The fan can be operated even if the indoor unit is not operating.
- Use a fan which can receive the no-voltage normally-open contact as an outside input signal.
- In a group control, the units are collectively operated and they cannot be individually operated.

1. Operation

Handle a wired remote controller in the following procedure.

- * Use the wired remote controller during stop of the system.
- * Be sure to set up the wired remote controller to the header unit. (Same in group control)
- * In a group control, if the wired remote controller is set up to the header unit, both header and follower units are simultaneously operable.

<RBC-AWSU52-UL>

- **1** Press [I Menu] to open the "Menu"
- **2** Press and hold [\equiv Menu] and [\bigtriangledown] at the same time to open "Field setting menu" \rightarrow Press and hold 4 seconds.
- f 3 In the "Field setting menu" screen, press [igsqcolored h] and [igsqcolored h] to select "DN setting", and then press [igsqcolored h] Set/Fix]

4 Press [▲] and [▲] to select "Indoor unit" or "Outdoor unit", and the press [□ Set/Fix]

 \rightarrow If "Indoor unit" was selected, the fans and lovvres of the indoor units operate.

When doing group connections:

ightarrow The fans and louvers of the selected indoor units operate.

- 5 Press [\leq] to black highlight the item code (DN), and then press [\leq] and [\leq] to set the item code No. 31.
- $m{b}$ Press [>] to black highlight the data, and then press [\frown] and [\frown] to set the data (At shipment : 0000).

SET DATA	Handling of operation of air to air heat exchanger or ventilating fan		
0000	Unavailable (At shipment)		
000 (Available		

→ "Continue?" is displayed.

8 To set the data of other item codes (DN), press [Set/Fix] To not do other settings, press [Return]

 \rightarrow The changes are fixed, and the "Field setting menu" screen returns.

 \rightarrow " Σ " appears while data is changing.

When doing group connections:

→ Press [5 Return] to open the unit selection screen. In the unit selection screen, press [5 Return] to briefly display "∑", and then return to the "Field setting menu" screen.

2. Wiring



indoor control P.C. board and the relay within 2m.

Auto-off feature control

[Function]

- This function controls the indoor units individually. It is used when the start operation from outside is unnecessary but the stop operation is necessary.
- A card switch box or card lock helps protect customers from forgetting to turn off the indoor unit. (not including the following Card Input 3)
- It is connected with connector on the indoor control P.C. board, and switched with the Code No. and jumper wire setup for use.

[Setup method] (1) Wiring

Connecting to the CN61 connector



NOTE) Determine the cable length between the indoor control P.C. board and the relay within 3m.

(2) Code (DN) setup

Set Code (DN) according to set indoor unit function DN code.

Connector	Jumper wire (J01)	Code No. (DN)	Set data	Function
		002E	0000 (Factory default)	"HA normal setup" (pulse)
	Short-circuit		0001	"Card Input 1" setup
	(Factory default)		0003	"Card Input 2" setup
CN61			0005	"Card Input 5" setup
			0000 (Factory default)	"HA normal setup" (Static)
	Open-circuit (cut)		0001	"Card Input 3" setup
			0003	"Card Input 4" setup

[Control items]

Function	External contact terminal						
Function	Close (Status that card is inserted)	Open (Status that card is taken out)					
Card Input 1	Manual prohibition release (Manual operation)	Manual prohibition (Operation stop)					
Card Input 2	Manual prohibition release (Automatic operation)	Manual prohibition (Operation stop)					
Card Input 3	Operation status continues (Do nothing)	Operation status continues and setting temperature changes (COOL/DRY: 84.2°F(29°C), HEAT: 64.4°F(18°C))					
Card Input 4	Manual prohibition release (The status returns to operating condition before removing the card.)	Manual prohibition (Operation stop)					
Card Input 5	 To change a setting temperature by changing data at DN code No. 172 to 174. The operation mode can be set by changing data (0000, 0001, 0002) at DN code No. 16b. operation mode is the same at the current mode. (factory setting default) operation mode returns to the previous mode when card was inserted. (in case of the previous mode is off operation, the operation mode is also off.) operation mode starts at the same previous mode when the card was inserted. (the operation mode is on operation even the previous mode is off operation.) See contents below for DN settings and detailed operations. 	 To change a setting temperature, fan speed and wind direction by changing data at DN code No. 16C to 171. The operation mode can be set by changing data (0000, 0001) at DN code No. 16A. 0000: operation mode is the same at the current mode. (factory setting default) 0001: operation automatically starts. See contents below for DN settings and detailed operations. 					

* For the card switch box that does not involve contact operation described above, convert signals with a relay including a normally-closed contact.

[Card input setup.5 Code (DN)]

DN	Item	Description	At shipment
16C	Open mode Set temp. (Cool, Dry)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0027:80.6°F(27°C)
16d	Open mode Set temp. (Heat)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0020 : 68°F(20°C)
16E	Open mode Set temp. (Auto)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
16F	Open mode Fan speed (All operation mode)	0000 : No change 0001 : HH 0002 : H 0003 : L	0000 : No change
170	Open mode Wind direction (Cool, Dry, Fan)	0000 : No change 0001 : F1 0002 : F2 0003 : F3	0000 : No change
171	Open mode Wind direction (Heat)	0000 : No change 0001 : F1 0002 : F2 0003 : F3 0004 : F4 0005 : F5	0000 : No change
16A	Open mode Operation	0000 : No change 0001 : Run operation	0000 : No change
172	Close mode Set temp. (Cool, Dry)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
173	Close mode Set temp. (Heat)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
174	Close mode Set temp. (Heat)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
16b	Close mode Operation	0000:No change 0001:Card ON mode operation 0002:Run operation (Card ON mode setting)	0000 : No change

[The example of Card Input 5 setting]

		0	Code	No. ([DN) se	etting				External contact terminal		
Case.	[16A] data	[16b] data	[16C] data	[16d] data	[16F] data	[170] data	[171] data	[172] data	[173] data	Close (Status that card is inserted)	Open (Status that card is taken n out)	
(1)	0000	0000	0027	0020	0000	0000	0000	0024	0024	 The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 75.2°F(24°C) and 75.2°F(24°C) respectively due to change in code No. 172, 173. 	 The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 80.6°F(27°C) and 68°F(20°C) respectively due to change in code No. 16C, 16d. 	
(2)*	0000	0001	0027	0020	0003	0001	0001	0024	0024	 The operation mode is running at the same mode as the last time when the card was inserted due to change in code no. 16b. * The operation mode will be off if the mode at the last time was in off operation. Also, the fan speed will the same as the last time when the card is inserted. The setting temperature of cooling/dry and heating mode is changed to 75.2°F(24°C) and 75.2°F(24°C) respectively due to change in code No. 172, 173. 	 The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 80.6°F(27°C) and 68°F(20°C) respectively due to change in code no. 172, 173. The fan speed for all operation modes is changed due to change in code no.16F. The wind direction of Cooling/dry/fan and heating mode are changed due to change in code due to change in code No. 170, 171 respectively. 	
(3)*	0000	0002	0027	0020	0003	0001	0001	0024	0024	 The operation mode is running at the same mode as the last time when the card was inserted. Also, the operation mode will be on even the mode was in off operation at the last time due to change in code no. 16B. * The fan speed will the same as the last time when the card is inserted. The setting temperature of cooling/dry and heating mode is changed to 75.2°F(24°C) and 75.2°F(24°C) respectively due to change in code No. 172, 173. 	Same operation as case (2)	
(4)	0001	0000	0027	0020	0003	0001	0001	0024	0024	 The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 75.2°F(24°C) and 75.2°F(24°C) respectively due to change in code No. 172, 173. 	 Due to change in code no. 16A, the operation mode will be as below. When the operation is ON, the operation mode will continue running at the same as the current mode. When the operation is OFF, the air conditioner will turn on automatically. The setting temperature of cooling/dry and heating mode is changed to 80.6°F(20°C) and 68°F(20°C) respectively due to change in code No. 172, 173. The fan speed for all operation modes is changed due to change in code no.16F. The wind direction of Cooling/dry/fan and heating mode are changed due to change in code No. 170, 171 respectively. 	

* The history operation mode is only recorded when the card is inserted even if the operation mode is changed when the card is taken out, there is no related to the history operation mode.

Notice code signal

Notice code is a function dedicated to TU2C-Link communication. See service manual for u series outdoor unit for details of Notice code.

[Function]

- Notice Code is issued if there is signal input to connector of outdoor unit P.C. board. This can be used in cases such as when confirming state of outdoor unit (filter clogging, etc.) by air conditioner system.
- Used by switching functions with settings of Code No. (DN Code).
- Notice Code is continuously issued while input signal is ON.

[Setup method]

(1) Wiring

Connecting to the CN61 connector



Note) Determine the cable length between the indoor control P.C. board and the relay within 3m.

(2) Code (DN) setup and Notice code

Set Code (DN) according to set indoor unit function DN code.

Connector	Code No. (DN)	Set data	Notice code
CN61	002E	0004	201

* Setting of Code No. (DN Code) is necessary to display Notice code mark at remote controller. Set data corresponding to Notice code to be used to one of Code No. 180 to 189, in accordance with following table. In case where data other than 0000 is already set, set to other Code No. (DN Code).

Code No. (DN)	Set data	Notice code		
0180	0000	OFF (Factory default)		
to	0129	201		
0189	0130	202		

* It may take up to ten minutes to be displayed on remote controller after Notice code is issued.

Manual address setting using the remote controller

Procedure when setting indoor units' addresses first under the condition that indoor wiring has been completed and outdoor wiring has not been started (manual setting using the remote controller)

▼ Wiring example of 2 refrigerant lines



In the example above, disconnect the remote controller connections between the indoor units and connect a wired remote controller to the target unit directly before address setting.

<RBC-AWSU52-UL>



Pair the indoor unit to set and the remote controller one-to-one. Turn on the power.

- **1** Press [I Menu] to open the "Menu"
- ${f 2}\,$ Press and hold [\equiv Menu] and [\sim] at the same time to open "Field setting menu"

 \rightarrow Press and hold 4 seconds.

- 3 In the "Field setting menu" screen, press [🔼] and [💟] to select "DN setting", and then press [🗔 Set/Fix]
- **4** Press [∧] and [∨] to select "Indoor unit" or "Outdoor unit", and the press [□ Set/Fix]

→ If "Indoor unit" was selected, the fans and lovvres of the indoor units operate. When doing group connections: → The fans and louvres of the selected indoor units operate.

- <Line (system) address>
- **5** Press [] to black highlight the item code (DN), and then press [] and [] to set the item code No. to 12.
- **6** Press [>] to black highlight the data, and then press [\land] and [\checkmark] to set the data system address.

(Match the address with the address on the interface P.C.board of the header outdoor unit in the same refrigerant line.)

 \rightarrow "Continue?" is displayed.

<Indoor unit address>

- 8 Press [<] to black highlight the item code (DN), and then press [<] and [<] to set the item code No. to 13.
- **9** Press [>] to black highlight the data, and then press [\sim] and [\sim] to set the data indoor unit address.

<Group address>

- **11** Press [] to black highlight the item code (DN), and then press [] and [] to set the item code No. to 14.
- Press [▶] to black highlight the data, and then press [▶] and [▶] to set the data indoor unit address. a group address. If the indoor unit is individual, set the address to 0000; header unit, 0001; follower unit, 0002. Individual : 0000 Header unit : 0001

Follower unit : 0002 In case of group control

- - →"Continue?" is displayed.
- 14 To set the data of other item codes (DN), press [Set/Fix] To not do other settings, press [Return]
 - → The changes are fixed, and the "Field setting menu" screen returns.
 - \rightarrow " Σ " appears while data is changing.

When doing group connections:

→ Press [S Return] to open the unit selection screen. In the unit selection screen, press [S Return] to briefly display "∑", and then return to the "Field setting menu" screen.

NOTE

<In the case of combining with outdoor units of Super Modular Multi System u series (SMMS-u)>

- Turn ON DIP switch 1 of SW100 on the header outdoor unit interface P.C. board the lowest system address number.
- After finishing all the settings above, set the address of the central control devices. (For the setting of the central control address, refer to the installation manual of the central control devices.)

<In the case of combining with outdoor units other than Super Modular Multi System u series (SMMS-u)>

- Set a system address for the header outdoor unit of each line with SW13 and 14 of their interface P.C. boards.
- Turn off dip switch 2 of SW30 on the interface P.C. boards of all the header outdoor units connected to the same central control, except the unit that has the lowest address. (For unifying the termination of the wiring for the central control of indoor and outdoor units)
- Connect the relay connectors between the [U1, U2] and [U3, U4] terminals on the header outdoor unit of each refrigerate line.
- After finishing all the settings above, set the address of the central control devices. (For the setting of the central control address, refer to the installation manuals of the central control devices.)

To find an indoor unit's position from its address

Procedure to know the position of indoor unit body by address while indoor unit No. is known.

· Confirm each indoor unit address while indoor unit is stopped. (Be sure to stop air conditioner.)

<RBC-AWSU52-UL>

[Procedure]

The position of indoor unit body by address

- **1** Push the [\equiv MENU] button to display the menu screen.
- - → Push and hold the buttons for more than 4 seconds.
- **3** Push the [∩] / [∨] button to select "7. DN setting" on the "Field setting menu" screen, then push the "[□] Set"
- **4** Push the unit to confirm the address of indoor unit.
 - → The selected unit changes as follows each time the button is pushed:



5 Push the [Set/Fix]

- → The setting display for the selected unit appears.
- → When the group control is used, the fan and louver of the selected indoor unit operate.
- 6 Push the [MENU] button to set the other Code(DN) and Data. After "Continue?" is displayed on the screen, push the [S Return] to finish the setting operation. " ⊠ Setting" appears on the screen for a while, then the screen returns to the "Field setting menu" screen.





Address is displayed here.



Check code clearing function

How to clear the check code using the wired remote controller

<RBC-AW5U52-UL>

Displays the last 10 check codes, and at which unit and when they occurred.

Field setting menu(1/3)	
1.Test mode	
2.Register service info.	
3. Alarm history	
4. Address	
5. Monitor function	
🗅 Return 🗖 Set	~~

		Alarm	history	
	Unit	Code	Date	Time
1.	1-3	E04	06/01/2022	01:56
2.	-	-	-	-
3.	-	-	-	-
4.	-	-	-	-
	Reset			
5	Return	า		~~

1 In the "Field setting menu" screen, press [∧] and [∨] to select "Alarm history", and then press [□ Set/Fix]

NOTE

- The check code history data shows a history of 10 occurrences. If the occurrences exceed 10, the oldest data is deleted.
- If the same check code occurs repeatedly, the date of the first occurrence is displayed.

Deleting check code history



If you are using 2 remote controllers, delete the history at each remote controller.

▼ Monitoring function of wired remote controller

<RBC-AWSU52-UL>

Displays the codes and data indicating the operating condition and temperature of each sensor on the indoor units, outdoor units, and remote controllers.

Monitor	function
Code	Data
00	0024
🗅 Return	~~

- 1 In the "Field setting menu" screen, press [∧] and [∨] to select "Monitor function", and then press [□ Set/Fix]
 - → Press [∧] and [∨] to change the item code and then check the data.
 - → In a group connection, after a selection in the unit selection screen, move to the "Monitor function" screen.



 \rightarrow Return to the "Field setting menu" screen.

	Code No.	Data name	Display format	Unit	Remote controller display example
	00	Room temperature (Use to control)	×1	°F(°C)	
	01	Room temperature (Remote controller)	×1	°F(°C)	
	02	Indoor suction air temperature (TA)	×1	°F(°C)	
	03	Indoor coil temperature (TCJ)	×1	°F(°C)	
ata *	04	Indoor coil temperature (TC2)	×1	°F(°C)	
σ	05	Indoor coil temperature (TC1)	×1	°F(°C)	
r unit	06	Indoor discharge air temperature (TF) **	×1	°F(°C)	
Indoor	07	Indoor fan motor number of revolutions**	×1	rpm	[0600] = 600rpm
1 -	08	Indoor PMV opening	×1/10	pls	[0150]=1500pls
	F3	Filter sign time	×1	h	[2500] = 2500h
	F9	Suction temperature of air to air heat exchanger (TSA) **	×1	°F(°C)	[0024] = 75.2°F(24°C)
	FA	Outside air temperature (TOA) **	×1	°F(°C)	

Indoor service monitor list

* When the units are connected to a group, data of the header indoor unit only can be displayed. ** There is also a model which cannot be displayed.

• Refer to the service manual of an outdoor unit for "outdoor service monitor list".

10. TROUBLESHOOTING

10-1. Overview

- (1) Before engaging in troubleshooting
 - (a) Applicable models
 All Super Modular Multi System (SMMS-*) models.
 (Indoor units: MM*-UB***, Outdoor units: MMY-MUB***)
 - (Indoor units. WWW+-OB***, Outdoor units. WWW+-W
 - (b) Tools and measuring devices requiredScrewdrivers (Philips, flat head), spanners, long-nose pliers, nipper, pin to push reset switch, etc.
 - Multimeter, thermometer, pressure gauge, etc.
 - (c) Things to check prior to troubleshooting (behaviors listed below are normal)

NO.	Behavior	Possible cause
1	A compressor would not start	 The air conditioner is being controlled by the 3-minute protective function. It is in standby status though the room temperature has reached the setup temperature. It is being operated in timer mode or fan mode. It is being in initial communication.
2	An indoor fan would not start	• The air conditioner is being controlled by the cool air discharge preventive function in "heating"?
3	An outdoor fan would not start or would change speed for no reason	 The air conditioner is being operated in "cooling" under the low outside air temperature. It is being operated in defrost operation.
4	An indoor fan would not stop	 The air conditioner is being controlled by function of residual heat elimination being performed as part of the air conditioner shutdown process after heating operation.
5	The air conditioner would not respond to a start/stop command from a remote controller	• The air conditioner is being operated under external or remote controller.

The cooling performance may be declining considerably when total operating capacity of cooling indoor units is less than 4 HP while ambient temperature is below.

(2) Troubleshooting procedure

When a problem occurs, proceed with troubleshooting in accordance with the procedure shown below.



NOTE

Rather than a product trouble (see the List of Check Codes below), the problem could have been caused by a microprocessor malfunction attributable to a poor quality of the power source or an external noise. Check for possible noise sources, and shield the remote controller wiring and signal wires as necessary.

10-2. Troubleshooting method

The remote controllers (main remote controller and central control device) and the interface P.C. board of an outdoor unit are provided with an a 7-segment display (outdoor interface P.C. board) to display operational status. Using this self-diagnosis feature, the trouble site / trouble part may be identified in the event of a trouble by following the method described below.

The list below summarizes check codes detected by various devices. Analyze the check code according to where it is displayed and work out the nature of the trouble in consultation with the list.

- When investigating a trouble on the basis of a display provided on the indoor remote controller or central control device See the "central control device or main remote controller display" section of the list.
- When investigating a trouble on the basis of a display provided on an outdoor unit See the "Outdoor 7segment display" section of the list.
- When investigating a trouble on the basis of a wireless remote controller-controlled indoor unit See the "Indicator light block" section of the list.

List of check codes (indoor unit)

(Check code detected by indoor unit)

IPDU: Compressor / Fan inverter P.C. board O: Lighting,⊚: Flashing,●: Goes off ALT.: Flashing is alternately when there are two flashing LED SIM: Simultaneous flashing when there are two flashing LED

Check code		Display	/ of re	ceiving	j unit			
Remote	Outo	loor 7-segment display	Indic	ator li	ght blo	ock	Typical trouble on site	Description of check code
controller display		Sub-code	Operation	n Timer	Ready	Flash		Description of check code
E03	-	-	0				Indoor-remote controller periodic communication check code	Communication from remote controller or network adaptor has been lost (so has central control communication).
E04	-	_			0		Indoor-outdoor periodic communication check code	Signals are not being received from outdoor unit.
E08	E08	Duplicated indoor address	0				Duplicated indoor address	Indoor unit detects address identical to its own.
E10	-	_	0				Communication trouble between indoor unit MCU	Communication trouble between main MCU and the motor microcomputer MCU
E11	_	_	0				Communication check code between Application control kit and indoor unit	Communication check code between Application control kit and indoor unit P.C. board
E18	_	_	0		•		Check cod in periodic communication between indoor header and follower unit	Periodic communication between indoor header and follower units cannot be maintained.
F01	_	—	O	0		ALT	Indoor heat exchanger temperature sensor (TCJ) check code	Heat exchanger temperature sensor (TCJ) has been open / short-circuit.
F02	-	_	0	Ô		ALT	Indoor heat exchanger temperature sensor (TC2) check code	Heat exchanger temperature sensor (TC2) has been open / short-circuit.
F03	_	_	0	0	•	ALT	Indoor heat exchanger temperature sensor (TC1) check code	Heat exchanger temperature sensor (TC1) has been open / short-circuit.
F10	-	_	0	0		ALT	Ambient temperature sensor (TA) check code	Ambient temperature sensor (TA) has been open / short-circuit.
F11	-	_	0	0		ALT	Discharge temperature sensor (TF) check code	Discharge temperature sensor (TF) has been open / short-circuit.
F29	-	—	0	\bigcirc		SIM	P.C. board or other indoor check code	Indoor EEPROM is abnormal (some other trouble may be detected).
F30	-	—	0	\bigcirc	0	ALT	Occupancy sensor trouble	Occupancy sensor trouble has been detected.
L03	-	_	0		\bigcirc	SIM	Duplicated indoor group header unit	There is more than one header unit in group.
L07	-	_	0		O	SIM	Connection of group control cable to a single indoor unit	There is at least one a single indoor unit to which group control cable is connected.
L08	L08	_	0		0	SIM	Indoor group address not set	Address setting has not been performed for one or more indoor units (also detected at outdoor unit end).
L09	-	_	0		0	SIM	Indoor capacity not set	Capacity setting has not been performed for indoor unit.
L20	-	_	0	0	0	SIM	Duplicated central control address	There is duplication in central control address setting.
L30	L30	Detected indoor unit No.	0	0	0	SIM	Indoor external check code input (interlock)	Unit shutdown has been caused by external check code input (CN80).
P01	-	_		0	0	ALT	Indoor AC fan check code	Indoor AC fan check code is detected (activation of fan motor thermal relay).
P10	P10	Detected indoor unit No.		0	0	ALT	Indoor overflow check code	Float switch has been activated.
P12	-	_		0	0	ALT	Indoor DC fan check code	 Indoor DC fan check code (e.g. overcurrent or lock-up) is detected.
P31	-	_	0		0	ALT	Other indoor unit check code	Follower unit cannot be operated due to header unit alarm (E03 /L03 / L07 / L08).

(Check code detected by remote controller)

Che	Check code				ceiving	g unit			
	Outd	loor 7-segment display	Indicator light block				Typical trouble site	Description of trouble	
Remote control		Sub-code	Operation	Timer	Ready	Flash	Typical flouble site	Description of trouble	
E01	-	-	Ø	•	•		No master remote control, failure remote control communication (reception)	Signals cannot be received from indoor unit; master remote control has not been set (including two remote control).	
E02	-	-	O	•	•		Failure remote control communication (transmission)	Signals cannot be transmitted to indoor unit.	
E09	_	_	0	•	•		Duplicated master remote control	Both remote controls have been set as master remote control in two remote control (alarm and shutdown for header unit and continued operation for follower unit)	

(Check code detected by central control device)

Che	Check code I						
	Outo	loor 7-segment display	Indicator light blo	ock	Typical trouble site	Description of trouble	
Central control		Sub-code	Operation Timer Ready	Flash	51		
C05	-	-	N La lus all a still a sur de sur		Failure central control communication (transmission)	Central control device is unable to transmit signal due to duplication of central control device	
C06	-	-	also in use)		Failure central control communication (reception)	Central control device is unable to receive signal.	
C12	-	_	-		Bracket alarm for general- purpose device control interface	Device connected to general-purpose device control interface is trouble.	
P30 (L20)	_	-	(L20 is displayed.)		Communication Link	 Duplication addresses of indoor units in central control device With the combination of air conditioning system, the indoor unit may detect the check code of L20 	

Note: The same trouble, e.g. a communication trouble, may result in the display of different check codes depending on the device that detects it. Moreover, check codes detected by the main remote controller / central control device do not necessarily have a direct impact on air conditioner operation.

Flow selector unit (FS unit) Relation

(Check code detected by indoor unit)

Che	Display of receiving unit								
	Outo	loor 7-segment display	Indicator light block				Typical trouble site	Description of trouble	
Main remote control		Sub-code	Operation	Timer	Ready	Flash	Typical flouble site	Description of trouble	
E17	-	-	0	•	•		Communication trouble between indoor unit (s) and FS unit (s)	There is no communication from FS unit(s)	
J03	-	-	•	0	Ø		Duplicated FS units	More than one FS units have been set up in one refrigerant line.	
J10	-	-	•	0	Ø		FS unit overflow trouble	FS unit has been shutdown in one refrigerant line due to detection of overflow	
J11	-	_	•	Ø	O		FS unit temperature sensor (TCS) trouble	FS unit temperature sensor (TCS) has been open/short-circuited.	
L12	L12	_	O	0	O		FS unit(s) system trouble	FS unit(s) outside the application setting	

List of Check Codes (Outdoor Unit)

(Check code detected by outdoor interface - typical examples)

If "HELLO" is displayed on the oudoor 7-segment for 1 minute or more, turn off the power supply once and then turn on the power supply again after passage of 30 seconds or more. When the same symptom appears, it is considered there is a possibility of I/F board trouble.

○ : Lighting, ◎ : Flashing, ● : Goes off ALT.: Flashing is alternately when there are two flashing LED SIM: Simultaneous flashing when there are two flashing LED

	Check code		Display	of rec	eivino	ı unit	1	us flashing when there are two flashing LED	
	Outdoor 7-segment display	Central		ator lig					
		control or main remote	Operation				Typical problem site	Description of problem	
	Sub-code	controller display		Ð	۲	Flash			
E06	Number of indoor units from which signal is received normally	E06	•	•	Ø		Signal lack of indoor unit	Indoor unit initially communicating normally fails to return signal (reduction in number of indoor units connected).	
E07	_	(E04)	•	•	0		Indoor-outdoor communication circuit trouble	Signal cannot be transmitted to indoor units (→ indoor units left without communication from outdoor unit).	
E08	Duplicated indoor address	(E08)	O	•	•		Duplicated indoor address	More than one indoor unit are assigned same address (also detected at indoor unit end).	
E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	E12	Ø	•	•		Automatic address starting trouble	 Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress. Outdoor automatic address setting is started while automatic address setting for indoor units is in progress. 	
E15	_	E15	•	•	Ø		Indoor unit not found during automatic address setting	Indoor unit fails to communicate while automatic address setting for indoor units is in progress.	
E16	00: Capacity over 01: Number of units connected	E16	•	•	0		Too many indoor units connected/capacity over	Combined capacity of indoor units is too large. The maximum combined of indoor units shown in the specification table.	
E19	00: No header unit 02: Two or more header units	E19	•	•	Ø		Trouble in number of outdoor header units	There is no or more than one outdoor header unit in one refrigerant line.	
E20	01: Connection of outdoor unit from other refrigerant line 02: Connection of indoor unit from other refrigerant line	E20	•	•	0		Connection to other refrigerant line found during automatic address setting	Indoor unit from other refrigerant line is detected while indoor automatic address setting is in progress.	
E23	-	E23	•	•	Ø		Outdoor-outdoor communication transmission trouble	Signal cannot be transmitted to other outdoor units.	
E25	-	E25	•	•	Ø		Duplicated follower outdoor address	There is duplication in outdoor addresses set manually.	
E26	Address of outdoor unit from which signal is not received normally	E26	•	•	Ø		Signal lack of outdoor unit	Follower outdoor unit initially communicating normally fails to do so (reduction in number of follower outdoor units connected).	
E28	Detected outdoor unit No.	E28	•	•	Ø		Outdoor follower unit trouble	Outdoor header unit detects trouble relating to follower outdoor unit (detail displayed on follower outdoor unit).	
E31	P.C.board Compressor P.C.board Compressor 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 0 0 11 0 0 0 12 0 0 12 0	E31	•	•	Ø		P.C. board communication trouble Sub MCU communication trouble	There is no communication between P.C. boards in inverter box.	
F04	-	F04	Ø	0	0	ALT	Outdoor discharge temperature sensor (TD1) trouble	Outdoor discharge temperature sensor (TD1) has been open/short-circuited.	
F05	-	F05	Ø	0	0	ALT	Outdoor discharge temperature sensor (TD2) trouble	Outdoor discharge temperature sensor (TD2) has been open/short-circuited.	
F06	01: TE1 sensor 02: TE2 sensor 03: TE3 sensor	F06	0	Ø	0	ALT	Outdoor heat exchanger liquid side temperature sensor (TE1, TE2, TE3) trouble	Outdoor heat exchanger liquid side temperature sensors (TE1, TE2, TE3) have been open/ short-circuited.	
F07	01: TL1 sensor 02: TL2 sensor 03: TL3 sensor	F07	Ø	0	0	ALT	Outdoor liquid temperature sensor (TL1,TL2,TL3) trouble	Outdoor liquid temperature sensor (TL1,TL2,TL3) has been open/short-circuited.	
F08	-	F08	Ø	Ø	0	ALT	Outdoor outside air temperature sensor (TO) trouble	Outdoor air temperature sensor (TO) has been open/short-circuited.	
F09	01: TG1 sensor 02: TG2 sensor 03: TG3 sensor	F09	O	Ø	0	ALT	Outdoor heat exchanger gas side temperature sensor (TG1, TG2, TG3) trouble	Outdoor heat exchanger gas side temperature sensors (TG1, TG2, TG3) have been open/ short-circuited.	

Check code				Display of receiving unit					
	Outdoor 7-segment display	Central control or main	Indic	ator li	ght bl	ock	Typical problem site	Description of problem	
	Sub-code	controller display	Operation	Timer	Ready	Flash	Typical problem site	Description of problem	
F12	01: TS1 sensor 03: TS3 sensor	F12	Ø	Ø	0	ALT	Outdoor suction temperature sensor (TS1,TS3) trouble	Outdoor suction temperature sensor (TS1,TS3) has been open/short-circuited.	
F15	-	F15	Ø	Ø	0	ALT	Outdoor temperature sensor (TE1,TL1) wiring trouble	Wiring trouble in outdoor temperature sensors (TE1,TL1) has been detected.	
F16	_	F16	Ø	O	0	ALT	Outdoor pressure sensor (Pd, Ps) wiring trouble	Wiring trouble in outdoor pressure sensors (Pd, Ps) has been detected.	
F23	-	F23	Ø	0	0	ALT	Low pressure sensor (Ps) trouble	Output voltage of low pressure sensor (Ps) is zero.	
F24	-	F24	Ø	0	0	ALT	High pressure sensor (Pd) trouble	Output voltage of high pressure sensor (Pd) is zero or provides abnormal readings when compressors have been turned off.	
F31	_	F31	Ø	0	0	SIM	Outdoor EEPROM trouble	Outdoor EEPROM is failure (alarm and shutdown for header unit and continued operation for follower unit)	
J29	Detected indoor unit address * Not displayed depending on the outdoor DN code (O.DN) setting	J29	•	Ø	Ø	SIM	Leak Detector Trouble	 There is no communication from Leak Detector A Malfunction signal received from Leak Detector. 	
J30	Detected indoor unit address *Not displayed depending on the DN code (I.DN) setting	J30	•	Ø	Ø	SIM	Refrigerant leak detection	Leak Detector detects refrigerant leak	
J31	_	J31	•	0	Ø	SIM	Refrigerant leak detection sensor exceeding its life of the product	Energization time of the Leak Detector has reached its useful life.	
H05	-	H05	•	Ø	٠		Outdoor discharge temperature sensor (TD1) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD1) has been detected.	
H06	_	H06	•	0	•		Activation of low-pressure protection	Low pressure (Ps) sensor detects abnormally low operating pressure.	
H07	_	H07	•	0	•		Low oil level protection	Temperature sensor for oil level detection (TK1,TK2) detects abnormally low oil level.	
H08	01: TK1 sensor trouble 02: TK2 sensor trouble	H08	•	Ø	•		Trouble in temperature sensor for oil level detection (TK1,TK2)	Temperature sensor for oil level detection (TK1,TK2) has been open/short-circuited.	
H15	-	H15	•	Ø	•		Outdoor discharge temperature sensor (TD2) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD2) has been detected.	
H16	01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	H16	•	Ø	•		Oil level detection circuit trouble	No temperature change is detected by temperature sensor for oil level detection (TK1,TK2) despite compressor having been started.	
L04	-	L04	Ø	0	Ø	SIM	Duplicated outdoor refrigerant line address	Identical refrigerant line address has been assigned to outdoor units belonging to different refrigerant piping systems.	
	Number of priority indoor units	L05	Ø	•	Ø	SIM	Duplicated priority indoor unit (as displayed on priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.	
L06	(check code L05 or L06 depending on individual unit)	L06	Ø	•	Ø	SIM	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.	
L08	_	(L08)	Ø	•	Ø	SIM	Indoor group address not set	Address setting have not been performed for one or more indoor units (also detected at indoor end).	
L10	-	L10	0	0	Ø	SIM	Outdoor capacity not set	Outdoor unit capacity has not been set (after P.C. board replacement).	
L17	-	L17	0	0	Ø	SIM	Outdoor model incompatibility trouble	Old model outdoor unit has been connected.	
L23	-	L23	Ø	0	Ø	SIM	SW setting mistake		
L28	_	L28	Ø	0	Ø	SIM	Too many outdoor units connected	More than five outdoor units have been connected.	

	Check code		Display	y of re	ceiving	y unit			
	Outdoor 7-segment display	Central control or	Indic	ator li	ght blo	ock	Typical problem site	Description of problem	
	Sub-code	main remote controller display	Operatior	n Timer	Ready	Flash			
L29	P.C.board P.C.board 1 2 1 2 01 0 1 2 1 2 01 0 1 2 1 2 03 0 1 13 0 0 03 0 18 0 0 09 0 14 0 0 08 0 18 0 0 08 0 0 18 0 0 08 0 0 0 0 0 0 09 0 0 0 0 0 0 0 08 0 0 0 0 0 0 0 0 08 0 0 0 0 0 0 0 0 08 0 0 0 0 0 0 0 0 0	L29	Ø	0	٥	SIM	Trouble in number of P.C. boards	There are insufficient number of P.C. board in inverter box.	
L30	Detected indoor unit No.	(L30)	Ø	0	Ø	SIM	Indoor external trouble input (interlock)	Indoor unit has been shut down for external trouble input in one refrigerant line (detected by indoor unit).	
P03	_	P03	Ø	•	Ø	ALT	Outdoor discharge (TD1) temperature trouble	Outdoor discharge temperature sensor (TD1) has detected abnormally high temperature.	
P05	00: Power detection trouble 01: Open phase 02: Power supply miswiring	P05	0	•	Ø	ALT	Power detection trouble /Open phase detection /Power supply miswiring detection	Open phase is detected when power is turned on. Inverter DC voltage is too high (overvoltage) or too low (undervoltage).	
P07	1 : Compressor 1 heat sink trouble 2 : Compressor 2 heat sink trouble	D 07				A 1 T	Heat sink overheating trouble	Temperature sensor built into IPM (TH) detects overheating.	
P07	04: Heat sink dew condensation	P07	Ø	•	Ø	ALT	Heat sink dew condensation trouble	Outdoor liquid temperature sensor (TL2) has detected abnormally low temperature.	
P10	Indoor unit No. detected	(P10)	•	0	O	ALT	Indoor unit overflow	Indoor unit has been shutdown in one refrigerant line due to detection of overflow (detected by indoor unit).	
P11	-	P11	•	Ø	Ø	ALT	Outdoor heat exchanger freeze trouble	Remaining frost on outdoor heat exchanger has been detected repeatedly.	
P13	_	P13	•	Ø	O	ALT	Outdoor liquid backflow detection trouble	State of refrigerant cycle circuit indicates liquid backflow operation.	
P15	01: TS condition 02: TD condition	P15	Ø	•	Ø	ALT	Gas leak detection	Outdoor suction temperature sensor (TS1) detects sustained and repeated high temperatures that exceed standard value.	
P17	_	P17	Ø	•	Ø	ALT	Outdoor discharge (TD2) temperature trouble	Outdoor discharge temperature sensor (TD2) detects abnormally high temperature.	
P19	Outdoor unit No. detected	P19	0	•	Ø	ALT	4-way valve reversing trouble	Abnormality in refrigerating cycle is detected during heating operation.	
P20	_	P20	Ø	•	Ø	ALT	Activation of high-pressure protection	High pressure (Pd) sensor detects high pressure that exceeds standard value.	

MG-CTT: Magnet contactor

(Check code detected by Inverter of Compressor featuring in outdoor unit - typical examples)

	Check code		Display	/ of re					
	Outdoor 7-segment display	Central	Indic	ator li	ight bl	ock	Tomical analysis if	Description of provider	
	Sub-code	control or main remote controller display	Operation	Timer	Ready	Flash	 Typical problem site 	Description of proplem	
F13	1*: Compressor 1 2*: Compressor 2	F13	O	0	0	ALT	Trouble in temperature sensor built into indoor IPM (TH)	Temperature sensor built into indoor IPM (TH) has been open/short-circuited.	
H01	1*: Compressor 1 2*: Compressor 2	H01	•	Ø	•		Compressor breakdown	Inverter current (Idc) detection circuit detects overcurrent.	
H02	1*: Compressor 1 2*: Compressor 2	H02	•	Ø	•		Compressor trouble (lockup)	Compressor lockup is detected	
H03	1*: Compressor 1 2*: Compressor 2	H03	•	Ø	•		Current detection circuit trouble	Abnormal current is detected while inverter compressor is turned off.	
P04	01: Compressor 1 02: Compressor 2	P04	0	•	Ø	ALT	Activation of high-pressure SW	High-pressure SW is activated.	
P05	01: Compressor 1 side 02: Compressor 2 side	P05	Ø	•	Ø	ALT	Compressor Vdc trouble	Inverter DC voltage is too high (overvoltage) or too low (undervoltage).	
P07	01: Compressor 1 side 02: Compressor 2 side	P07	O	•	Ø	ALT	Heat sink overheat trouble	Temperature sensor built into IPM (TH) detects overheating.	
P11	-	P11	•	Ø	Ø	ALT	Outdoor heat exchanger freeze trouble	Remaining frost on outdoor heat exchanger has been detected repeatedly.	
P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	P22	0	•	Ø	ALT	Outdoor fan P.C. board trouble	Outdoor fan P.C. board detects trouble.	
P26	1*: Compressor 1 2*: Compressor 2	P26	0	•	Ø	ALT	Activation of IPM, compressor short-circuit protection	Short-circuit protection for compressor motor driver circuit components is activated (momentary overcurrent).	
P29	1*: Compressor 1 2*: Compressor 2	P29	0	•	Ø	ALT	Compressor position detection circuit trouble	Compressor motor position detection trouble is detected.	

Note: The above check codes are examples only, and different check codes may be displayed depending on the outdoor unit configuration

10-3. Troubleshooting by check Display on Remote Controller

<RBC-AWSU52-UL>



When an error occurs in the air conditioner, the check code and the indoor unit number flash on the display of the remote controller.

* The check code is only displayed during the operation.

When the check code and indoor unit number are displayed, pressing [S Return] opens the "Check" screen.

In the "Check" screen, press [Set/Fix] to show the contacts. Press [Menu] to display "Model information".

■ Contact information for repairs

You can look for contact information for repairs.



1 In the "Information" screen, press [∧] and [∨] to select "Service information", and then press [□ Set/Fix]

Using indoor unit indicators (receiving unit light block) (wireless type)

To identify the check code, check the 7-segment display on the header unit. To check for check codes not displayed on the 7-segment display, consult the "List of Check Codes (Indoor Unit)" in "10-2. Troubleshooting method".

Light block	Check code	Cause of trouble							
Operation Timer Ready All lights out	_	Power turned off or trouble in wiring between receiving and indoor units							
Operation Timer Ready	E01	Trouble reception	Trouble or poor contact in						
	E02	Trouble transmission Receiving unit	wiring between receiving unit						
	E03	Loss of communication	and indoor units						
Blinking	E08	Duplicated indoor unit No. (address)	Catting trauble						
	E09	Duplicated master remote controller	Setting trouble						
	E10	Communication trouble between indoor unit MCU							
	E11	Communication trouble between Application control kit and	indoor unit P.C. board						
	E12	Automatic address starting trouble							
	E18	Trouble or poor contact in wiring between indoor units, indo	or power turned off						
Operation Timer Ready	E04	Trouble or poor contact in wiring between indoor and outdo (loss of indoor-outdoor communication)	or units						
• • - <u>Ŏ</u> -	E06	Trouble reception in indoor-outdoor communication (dropping	ng out of indoor unit)						
Blinking	E07	Trouble transmission in indoor-outdoor communication							
Diriting	E15	Indoor unit not found during automatic address setting							
	E16	Too many indoor units connected / overloading							
	E19	Trouble in number of outdoor header units							
	E20	Detection of refrigerant piping communication trouble during	g automatic address setting						
	E23	Trouble transmission in outdoor-outdoor communication							
	E25	Duplicated follower outdoor address							
	E26	Trouble reception in outdoor-outdoor communication, dropping out of outdoor unit Outdoor follower unit trouble							
	E28								
	E31	P.C. board communication trouble							
Operation Timer Ready	P01	Indoor AC fan trouble							
	P10	Indoor overflow trouble							
	P11	Outdoor heat exchanger freezing trouble							
Alternate blinking	P12	Indoor DC fan trouble							
-	P13	Outdoor liquid backflow detection trouble							
	P03	Outdoor discharge (TD1) temperature trouble							
Operation Timer Ready	P04	Activation of outdoor high-pressure SW							
Alternate blinking	P05	Open phase / power failure Inverter DC voltage (Vdc) trouble MG-CTT trouble							
Ū.	P07	Outdoor heat sink overheating trouble - Poor cooling of electoutdoor unit	ctrical component (IGBT) of						
	P15	Gas leak detection - insufficient refrigerant charging							
	P17	Outdoor discharge (TD2) temperature trouble							
	P18	Outdoor discharge (TD3) temperature trouble							
	P19	Outdoor 4-way valve reversing trouble							
	P20	Activation of high-pressure protection							
	P22	Outdoor fan P.C. board trouble							
	P26	Outdoor IPM, Compressor short-circuit trouble							
	P29	Compressor position detection circuit trouble							
	P31	Shutdown of other indoor unit in group due to trouble (group	o follower unit trouble)						

MG-CTT: Magnet contactor

Light block	Check code	Cause of trouble					
Operation Timer Ready	F01	Heat exchanger temperature sensor (TCJ) trouble					
	F02	Heat exchanger temperature sensor (TC2) trouble	la de en coste de monence de mo				
-\\\	F03	Heat exchanger temperature sensor (TC1) trouble	Indoor unit temperature sensor trouble				
Alternate blinking	F10	Ambient temperature sensor (TA) trouble					
	F11	Discharge temperature sensor (TF) trouble					
Operation Timer Ready	F04	Discharge temperature sensor (TD1) trouble Discharge					
	F05	temperature sensor (TD2) trouble					
	F06	Heat exchanger temperature sensor (TE1, TE2) trouble					
Alternate blinking	F07	Liquid temperature sensor (TL) trouble	Outdoor unit temperature				
	F08	Outside air temperature sensor (TO) trouble	sensor trouble				
-	F09	TG1,TG2 or TG3 sensor trouble					
-	F12	Suction temperature sensor (TS1) trouble					
-	F13	Heat sink sensor (TH) trouble					
-	F15	Wiring trouble in heat exchanger sensor (TE1) and liquid temper Outdoor unit temperature sensor wiring / installation trouble	rature sensor (TL)				
-	F16	Wiring trouble in outdoor high pressure sensor (Pd) and low pre Outdoor pressure sensor wiring trouble	ssure sensor (Ps)				
-	F22	Outdoor discharge temperature sensor (TD3) trouble					
-	F23	Low pressure sensor (Ps) trouble]				
-	F24	High pressure sensor (Pd) trouble	Outdoor unit pressure sensor				
-	F30	Occupancy sensor trouble	trouble				
-	F31	Indoor unit EEPROM trouble					
Operation Timer Ready	F29	Failure in indoor EEPROM					
Operation Timer Deady	H01	Compressor breakdown					
Operation Timer Ready	H02	Compressor lockup	Outdoor unit compressor related trouble				
	H03	Current detection circuit trouble					
Blinking	H04	Comp. 1 case thermostat operation					
-	H05	Wiring / installation trouble or detachment of outdoor discharge t	emperature sensor (TD1)				
-	H06	Abnormal drop in low-pressure sensor (Ps) reading	Protective shutdown of outdoor				
-	H07	Abnormal drop in oil level	unit				
-	H08	Trouble in temperature sensor for oil level detection circuit (TK1	TK2, TK3, TK4 or TK5)				
-	F14	Comp. 2 case thermostat operation					
-	H15	Wiring / installation trouble or detachment of outdoor discharge t	emperature sensor (TD2)				
-	H16	Oil level detection circuit trouble - Trouble in outdoor unit TK1, T	K2, TK3, TK4 or TK5 circuit				
-	H25	Wiring / installation trouble or detachment of outdoor discharge t	emperature sensor (TD3)				
Operation Timer Ready	J29	Leak Detector trouble					
● -\ <u>\</u> - \ <u>\</u> - \ <u>\</u> - [J30	Refrigerant leak detection					
Blinking Blinking	J31	Refrigerant leak detection sensor has reached product life					
Diriking Diriking							
	L02	Model mismatched of indoor and outdoor unit					
Operation Timer Ready	L02 L03	Model mismatched of indoor and outdoor unit Duplicated indoor group header unit					
Operation Timer Ready $- \frac{1}{\sqrt{-1}} - \frac{1}$			it)				
-\	L03	Duplicated indoor group header unit	,				
Operation Timer Ready	L03 L05	Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor un	,				
-\	L03 L05 L06	Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor un Duplicated priority indoor unit (as displayed on indoor unit other	,				
-\	L03 L05 L06 L07	Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor un Duplicated priority indoor unit (as displayed on indoor unit other Connection of group control cable to a single indoor unit	,				
	L03 L05 L06 L07 L08	Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor un Duplicated priority indoor unit (as displayed on indoor unit other Connection of group control cable to a single indoor unit Indoor group address not set	,				
-\	L03 L05 L06 L07 L08 L09	Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor un Duplicated priority indoor unit (as displayed on indoor unit other Connection of group control cable to a single indoor unit Indoor group address not set Indoor capacity not set	,				
	L03 L05 L06 L07 L08 L09 L04	Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor un Duplicated priority indoor unit (as displayed on indoor unit other Connection of group control cable to a single indoor unit Indoor group address not set Indoor capacity not set Duplicated outdoor refrigerant line address	,				
$\begin{array}{c} - & \bullet & - \\ - & \bullet & - \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$	L03 L05 L06 L07 L08 L09 L04 L10	Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor un Duplicated priority indoor unit (as displayed on indoor unit other Connection of group control cable to a single indoor unit Indoor group address not set Indoor capacity not set Duplicated outdoor refrigerant line address Outdoor capacity not set	,				
	L03 L05 L06 L07 L08 L09 L04 L10 L17	Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor un Duplicated priority indoor unit (as displayed on indoor unit other Connection of group control cable to a single indoor unit Indoor group address not set Indoor capacity not set Duplicated outdoor refrigerant line address Outdoor capacity not set Outdoor model incompatibility trouble	,				
$\begin{array}{c} - & \bullet & - \\ - & \bullet & - \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$	L03 L05 L06 L07 L08 L09 L04 L10 L17 L18 L20	Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor un Duplicated priority indoor unit (as displayed on indoor unit other Connection of group control cable to a single indoor unit Indoor group address not set Indoor capacity not set Duplicated outdoor refrigerant line address Outdoor capacity not set Outdoor model incompatibility trouble Flow selector units trouble Duplicated central control address	,				
$\begin{array}{c} - & \bullet & - \\ - & \bullet & - \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$	L03 L05 L06 L07 L08 L09 L04 L10 L17 L18	Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor un Duplicated priority indoor unit (as displayed on indoor unit other Connection of group control cable to a single indoor unit Indoor group address not set Indoor capacity not set Duplicated outdoor refrigerant line address Outdoor capacity not set Outdoor model incompatibility trouble Flow selector units trouble	,				

Light block	Check code	Cause of trouble
Operation Timer Ready $-\bigcirc -\bigcirc \bigcirc$ $ \bigcirc$	F30	Occupancy sensor trouble
Synchronized blinking	F31	Outdoor EEPROM trouble

Other (indications not involving check code)

Light block	Check code	Cause of trouble
Operation Timer Ready $- \begin{array}{c} 1 \\ - \end{array} \begin{array}{c} - \end{array} \begin{array}{c} - \\ - \end{array} \begin{array}{c} - \\ - \end{array} \begin{array}{c} - \end{array} \begin{array}{c} - \\ - \end{array} \begin{array}{c} - \end{array} \begin{array}{c} - \\ - \end{array} \begin{array}{c} - \end{array} \end{array}{c} \end{array}{c} \end{array}{c} \end{array}{c} \end{array}{c} $	_	Test run in progress
Operation Timer Ready	_	Setting incompatibility (automatic cooling / heating setting for model incapable of it and heating setting for cooling-only model)

Flow selector unit (FS unit) Relation

Light block	Check code	Cause of trouble						
Operation Timer Ready 	E17	Communication trouble between indoor unit(s) and FS unit(s)						
Operation Timer Ready $-\bigcirc^{I}$ $-\bigcirc^{-}$ $-\bigcirc^{-}$	L12	FS unit(s) system trouble						
Synchronized blinking	L24	FS unit(s) setting trouble						
Operation Timer Ready	J01	Communication trouble between indoor unit(s) and FS unit (or SV unit)						
● -¤¤-	J02	Communication trouble between control boards in FS unit						
Blinking Blinking	J03	Duplicated FS units						
	J10	FS unit overflow trouble						
	J11	FS unit temperature sensor(TCS) trouble						

10-4. Check Codes Displayed on Remote Controller and SMMS series Outdoor Unit (7-Segment Display on I/F Board) and Locations to Be Checked

	Check code		Location				
Main remote		7-segment display	of	Description	System status	Check code detection condition(s)	Check items (locations)
controller	Check code	Sub-code	detection				
E01		_	Remote controller	Indoor-remote controller communication trouble (detected at remote controller end)	Stop of corresponding unit	Communication between indoor P.C. board and remote controller is disrupted.	 Check remote controller inter-unit tie cable (A/B). Check for broken wire or connector bad contact. Check indoor power supply. Check for failure in indoor P.C. board. Check remote controller address settings (when two remote controllers are in use). Check remote controller P.C. board.
E02	_	_	Remote controller	Remote controller transmission trouble	Stop of corresponding unit	Signal cannot be transmitted from remote controller to indoor unit.	Check internal transmission circuit of remote controller. Replace remote controller as necessary.
E04	_	_	Indoor unit	Indoor-outdoor communication circuit trouble (detected at indoor end)	Stop of corresponding unit	Indoor unit is not receiving signal from outdoor unit.	 Check order in which power was turned on for indoor and outdoor units. Check indoor address setting. Check indoor-outdoor tie cable. Check outdoor terminator resistor setting (SW100, Bit 2).
E04	E06	No. of indoor units from which signal is received normally	I/F	Dropping out of indoor unit	All stop	Condition 1 All indoor unit initially communicating normally fails to return signal for specified length of time. Condition 2 Outdoor I / F board SW103, Bit4 : OFF (Factory default)	 Check power supply to indoor unit. (Is power turned on?) Check connection of indoor-outdoor communication cable. Check connection of communication connectors on indoor P.C. board. Check connection of communication connectors on outdoor P.C. board. Check for failure in indoor P.C. board. Check for failure in outdoor P.C. board (I/F).
	_		Indoor unit	Indoor-outdoor communication circuit trouble	Only specified indoor units stop	Condition 1 Indoor unit initially communicating normally fails to return signal for specified length of time.	 Check power supply to indoor unit. (Is power turned on?) Check indoor-outdoor power-on sequence. Check kindoor address setting Check wiring of Indoor- outdoor communication wires Check outdoor terminator resistor setting (SW100, Bit 2).

For other types of outdoor units, refer to their own service manuals.

	Check code		Location				
Main remote	Outdoor Check	7-segment display	of	Description	System status	Check code detection condition(s)	Check items (locations)
controller	code	Sub-code					
		No. of indoor units from which signal is received normally	Indoor unit	Indoor-outdoor communication circuit trouble (E04)	All stop	Condition 1 One indoor unit or more initially communicating normally fails to return signal for specified length of time. Condition 2 Outdoor I / F board SW103, Bit4 : ON (To switch the check code detection condition.)	 Check power supply to indoor unit. (Is power turned on?) Check indoor-outdoor power-on sequence. Check indoor address setting Check wiring of Indoor- outdoor communication wires Check outdoor terminator resistor setting (SW100, Bit 2).
E04/E06	E06		I/F	Dropping out of indoor unit (E06)			Check power supply to indoor unit. (Is power turned on?) Check connection of indoor-outdoor communication cable.
						Display on main remote controller. Indoor units unavailable for indoor / outdoor communication. :E04 Indoor units available for indoor / outdoor communication. : E06	 Check connection of communication connectors on indoor P.C. board. Check connection of communication connectors on outdoor P.C. board. Check for failure in indoor P.C. board. Check for failure in outdoor P.C. board (I/F).
_	E07	_	I/F	Indoor-outdoor communication circuit trouble (detected at outdoor end)	All stop	Signal cannot be transmitted from outdoor to indoor units for 30 seconds continuously.	Check outdoor terminator resistor setting (SW100, Bit 2). Check connection of indoor-outdoor communication circuit.
E08	E08	Duplicated indoor address	Indoor unit I/F	Duplicated indoor address	All stop	More than one indoor unit are assigned same address.	 Check indoor addresses. Check for any change made to remote controller connection (group/ individual) since indoor address setting.
E09	_	_	Remote controller	Duplicated master remote controller	Stop of corresponding unit	In two remote controller configuration (including wireless), both controllers are set up as master. (Header indoor unit is shut down with alarm, while follower indoor units continue operating.)	 Check remote controller settings. Check remote controller P.C. boards.
E10		_	Indoor unit	Indoor inter- MCU communication trouble	Stop of corresponding unit	Communication cannot be established/maintained upon turning on of power or during communication.	Check for failure in indoor P.C. board
E12	E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	I/F	Automatic address starting trouble	All stop	 Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress. Outdoor automatic address setting is started while automatic address setting for indoor units is in progress. 	Perform automatic address setting again after disconnecting communication cable to that refrigerant line.
E15	E15	_	I/F	Indoor unit not found during automatic address setting	All stop	Indoor unit cannot be detected after indoor automatic address setting is started.	 Check connection of indoor-outdoor communication line. Check for trouble in indoor power supply system. Check for noise from other devices. Check for power failure. Check for failure in indoor P.C. board.

	Check	code	Location				
Main remote		7-segment display	Location of	Description	System status	Check code detection condition(s)	Check items (locations)
controller	Check code	Sub-code	detection				
E16	E16	00: Capacity over 01-: No. of units connected	I/F	Too many indoor units connected	All stop	Combined capacity of indoor units is too large. Note: If this code comes up after backup setting for outdoor unit failure is performed, perform "No capacity over detected" setting. <"No capacity over detected" setting method> Turn on SW103 / Bit 3 on I/F P.C. board of outdoor header unit. For Cooling Only model, this check code is not displayed even if it exceeds the combined capacity of indoor units.	 Check capacities of indoor units connected. Check combined HP capacities of indoor units. Check HP capacity settings of outdoor units. Check No. of indoor units connected. Check for failure in outdoor P.C. board (I/F).
						More than 128 indoor units are connected.	
E18	_	_	Indoor unit	Trouble in communication between indoor header and follower units	Stop of corresponding unit	Periodic communication between indoor header and follower units cannot be maintained.	 Check remote controller wiring. Check indoor power supply wiring. Check P.C. boards of indoor units.
E19	E19	00: No header unit 02: Two or more header units	I/F	Trouble in number of outdoor header units	All stop	 There are more than one outdoor header units in one line. There is no outdoor header unit in one line. 	Outdoor header unit is outdoor unit to which indoor- outdoor tie cable (U1,U2) is connected. • Check connection of indoor-outdoor communication line. • Check for failure in outdoor P.C. board (I/F).
E20	E20	01: Connection of outdoor unit from other line 02: Connection of indoor unit from other line	I/F	Connection to other line found during automatic address setting	All stop	Equipment from other line is found to have been connected when indoor automatic address setting is in progress.	Disconnect inter-line tie cable in accordance with automatic address setting method explained in "Address setting" section.
E23	E23	_	I/F	Outdooroutdoor communication transmission trouble	All stop	Signal cannot be transmitted to other outdoor units for at least 30 seconds continuously.	 Check power supply to outdoor units. (Is power turned on?) Check connection of tie cables between outdoor units for bad contact or broken wire. Check communication connectors on outdoor P.C. boards. Check for failure in outdoor P.C. boards. Check termination resistance setting for communication between outdoor units.
E25	E25	_	I/F	Duplicated follower outdoor address	All stop	There is duplication in outdoor addresses set manually.	Note: Do not set outdoor addresses manually.
E26	E26	Address of outdoor unit from which signal is not received normally	I/F	Signal lack of outdoor unit	All stop	Outdoor unit initially communicating normally fails to return signal for specified length of time.	 Backup setting is being used for outdoor units. Check power supply to outdoor unit. (Is power turned on?) Check connection of tie cables between outdoor units for bad contact or broken wire. Check communication connectors on outdoor P.C. boards. Check for failure in outdoor P.C. board (I/F).

	Check	code	Location				
Main remote		7-segment display	01	Description	System status	Check code detection condition(s)	Check items (locations)
controller	Check code	Sub-code	detection				
E28	E28	Detected outdoor unit No.	I/F	Outdoor follower unit trouble	All stop	Outdoor header unit receives trouble code from outdoor follower unit.	 Check check code displayed on outdoor follower unit. Convenient functions> If SW04 is pressed and held for at least 1 second while [E28] is displayed on the 7- segment display of outdoor header unit, the fan of the outdoor unit that has been shut down due to an trouble comes on. If SW04 and SW05 are pressed simultaneously, the fans of normal outdoor units come on. To stop the fan or fans, press SW05 on its own.
E31	E31	P.C.board Compressor Fan Motor 1 2 1 01 0 0 02 0 0 03 0 0 08 0 0 09 0 0 01 0 0 02 0 0 03 0 0 04 0 0 10 0 0 11 0 0 12 0 0 13 0 0 18 0 0 19 0 0 18 0 0 18 0 0 18 0 0 18 0 0 19 0 0 Circle (O): Trouble P.C. board 0	I/F	P.C. board communication trouble	All stop	Communication is disrupted between P.C. board in inverter box.	 Check wiring and connectors involved in communication between P.C. board I/F P.C. board for bad contact or broken wire. Check for failure in outdoor P.C. board (I/F, comp. P.C. board or Fan P.C. board). Check for external noise.
		80		Communication trouble between MCU and Sub MCU	All stop	Communication between MCU and Sub MCU stopped.	 Operation of power supply reset (OFF for 60 seconds or more) Outdoor I/F PC board trouble check
F01	_	_	Indoor unit	Indoor TCJ sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TCJ sensor connector and wiring. Check resistance characteristics of TCJ sensor. Check for failure in indoor P.C. board.
F02	_	_	Indoor unit	Indoor TC2 sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TC2 sensor connector and wiring. Check resistance characteristics of TC2 sensor. Check for failure in indoor P.C. board.
F03	_	_	Indoor unit	Indoor TC1 sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TC1 sensor connector and wiring. Check resistance characteristics of TC1 sensor. Check for failure in indoor P.C. board.
F04	F04	_	I/F	TD1 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TD1 sensor connector. Check resistance characteristics of TD1 sensor. Check for failure in outdoor P.C. board (I/F).

	Check		Location				
Main remote	Outdoor Check	7-segment display	of	Description	System status	Check code detection condition(s)	Check items (locations)
controller	code	Sub-code	detection				
F05	F05	_	I/F	TD2 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TD2 sensor connector. Check resistance characteristics of TD2 sensor. Check for failure in outdoor P.C. board (I/F).
F06	F06	01: TE1 sensor trouble 02: TE2 sensor trouble 03: TE3 sensor trouble	I/F	TE1/TE2/TE3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TE1/ TE2/TE3 sensor connectors. Check resistance characteristics of TE1/TE2/ TE3 sensors. Check for failure in outdoor P.C. board (I/F).
F07	F07	01: TL1 sensor trouble 02: TL2 sensor trouble 03: TL3 sensor trouble	I/F	TL1/TL2/TL3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TL1/ TL2/TL3 sensor connector. Check resistance characteristics of TL1/TL2/ TL3 sensor. Check for failure in outdoor P.C. board (I/F).
F08	F08	_	I/F	TO sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TO sensor connector. Check resistance characteristics of TO sensor. Check for failure in outdoor P.C. board (I/F).
F09	F09	01: TG1 sensor trouble 02: TG2 sensor trouble 03: TG3 sensor trouble	I/F	TG1/TG2/TG3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	Check connection of TG1/ TG2/TG3 sensor connectors. Check resistance characteristics of TG1/TG2 /TG3 sensors. Check for failure in outdoor P.C. board (I/F).
F10	_	_	Indoor unit	Indoor TA sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TA sensor connector and wiring. Check resistance characteristics of TA sensor. Check for failure in indoor P.C. board.
F11		_	Indoor unit	Indoor TF sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TF sensor connector and wiring. Check resistance characteristics of TF sensor. Check for failure in indoor P.C. board.
F12	F12	01: TS1 sensor trouble 03: TS3 sensor trouble	I/F	TS1/TS3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TS1/ TS3 sensor connector Check resistance characteristics of TS1/TS3 sensor. Check for failure in indoor P.C. board.
F13	F13	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	TH sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	 Failure in IPM built-in temperature sensor → Replace Compressor P.C. board.
F15	F15	_	I/F	Outdoor temperature sensor wiring trouble (TE1, TL1)	All stop	During compressor operation in HEAT mode, TL1 continuously provides temperature reading higher than indicated by TL1 by at least specified margin for 3 minutes or more.	 Check installation of TE1 and TL1 sensors. Check resistance characteristics of TE1 and TL1 sensors. Check for outdoor P.C. board (I/F) trouble

	Check of		Location	Description		Obeek eeds state at	Check items (locations)
Main remote		7-segment display	of		System status	Check code detection condition(s)	
controller	Check code	Sub-code	detection				
F16	F16	_	I/F	Outdoor pressure sensor wiring trouble (Pd, Ps)	All stop	Readings of high-pressure Pd sensor and low-pressure Ps sensor are switched. Output voltages of both sensors are zero.	 Check connection of high- pressure Pd sensor connector. Check connection of low- pressure Ps sensor connector. Check for failure in pressure sensors Pd and Ps. Check for trouble in outdoor P.C. board (I/F). Check for compressor poor compression.
F23	F23	_	I/F	Ps sensor trouble	All stop	Output voltage of Ps sensor is zero.	 Check for connection trouble involving Ps sensor and Pd sensor connectors. Check connection of Ps sensor connector. Check for failure in Ps sensor. Check for compressor poor compression. Check for failure in 4-way valve. Check for failure in outdoor P.C. board (I/F). Check for failure in SV4 circuit.
F24	F24	_	I/F	Pd sensor trouble	All stop	Output voltage of Pd sensor is zero (sensor open- circuited). Pd > 4.15MPa despite compressor having been turned off.	 Check connection of Pd sensor connector. Check for failure in Pd sensor. Check for failure in outdoor P.C. board (I/F).
F29	_	—	Indoor unit	Other indoor trouble	Stop of corresponding unit	Indoor P.C. board does not operate normally.	 Check for failure in indoor P.C. board (failure EEPROM)
F31	F31	_	I/F	Outdoor EEPROM trouble	All stop *1	Outdoor P.C. board (I/F) does not operate normally.	 Check power supply voltage. Check power supply noise. Check for failure in outdoor P.C. board (I/F).
J01	_	_	FS unit	Communication trouble between indoor unit(s) and FS unit	Stop of corresponding unit(s) (Indoor unit(s) connected to the same FS unit)	FS unit not receiving signal from indoor unit(s)	 Check wiring between FS unit and indoor unit(s). Check FS unit port address setting of indoor unit. Check FS unit port combining branches setting of indoor unit.
J02	_	_	Indoor unit	Communication trouble between control boards in Flow Selector unit	Stop of corresponding unit(s) (Indoor units (s) connected to the same FS unit)	There is no communication from P.C.board after No.2 of FS unit Multi-port type.	 Check connector connection of FS unit for PC board communication. Check for PC board defects in FS unit. Check FS unit control number setting (SW01 of FS unit, Bit 1 to 4).
J03	_	_	Indoor unit	Duplicated FS units	Stop of corresponding unit(s)	Multiple FS unit (or SV units) are installed in one indoor unit.	Check indoor unit(s) - FS unit(s) cable

*1 Total shutdown in case of header unit Continued operation in case of follower unit

	Check		Location			Chook code datastia	
Main remote	Outdoor Check	7-segment display	of	Description	System status	Check code detection condition(s)	Check items (locations)
controller	code	Sub-code	detection				
J29	J29	Detected indoor unit address	Indoor unit or Leak Detector Interface	Leak Detector Trouble	When DN code 06B = 0001 or 0002 are set • All stop	 There is no communication from Leak Detector. A Malfunction signal received from Leak Detector. 	 Check Malfunction LED of Leak Detector. Check disconnection and connectors of Leak Detector. Check PC board defects
	_	_			 Continued operation All stop (detected when power is turned on) 		of Leak Detector. • Check PC board defects of indoor unit or Leak Detector Interface.
J30	J30	Detected indoor unit address	Indoor unit or Leak Detector Interface	Refrigerant leak detection	All stop (Safety measures setting of indoor unit is "Pump-down operation" or "Leak Detector only"	Leak Detector detects refrigerant leak	Check refrigerant detection status of Leak Detector. Check refrigerant leaks from indoor unit or Flow Selector / Shut-off Valve unit. Check for false
	_	_	Indoor unit		Stop of corresponding unit(s) (Safety measures setting of indoor unit is "Individual shut-off operation")		detection.
J31	_	_	Indoor unit or Leak Detector Interface	Refrigerant leak detection sensor exceeding its life of the product	Continued operation	The energization time of refrigerant sensor has reached 10 years.	Check Malfunction LED of Leak Detector. Check refrigerant sensor of Leak Detector.
H01	H01	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor breakdown	All stop	Inverter current detection circuit detects overcurrent and shuts system down.	 Check power supply voltage. (AC380V-415V ± 10%). Check for failure in compressor. Check for possible cause of abnormal overloading. Check for failure in outdoor P.C. board (Compressor).
H02	H02	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor trouble (lockup) MG-CTT trouble	All stop	Overcurrent is detected several seconds after startup of inverter compressor.	 Check for failure in compressor. Check power supply voltage. (AC380V-415V ± 10%). Check compressor system wiring, particularly for open phase. Check connection of connectors/terminals on compressor P.C. board. Check conductivity of case heater. (Check for refrigerant problem inside compressor.) Check for failure in outdoor P.C. board (Compressor). Check conductive in outdoor MG-CTT.
H03	H03	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Current detection circuit trouble	All stop	Current flow of at least specified magnitude is detected despite inverter compressor having been shut turned off.	 Check current detection circuit wiring. Check failure in outdoor P.C. board (Compressor).

*1 Total shutdown in case of header unit Continued operation in case of follower unit

Mela	Check		Location			Check code detection	
Main remote controller	Check	7-segment display Sub-code	of detection	Description	System status	condition(s)	Check items (locations)
H05	H05	_	I/F	TD1 sensor miswiring (incomplete insertion)	All stop	Discharge temperature of compressor 1 (TD1) does not increase despite compressor being in operation.	 Check installation of TD1 sensor. Check connection of TD1 sensor connector and wiring. Check resistance characteristics of TD1 sensor. Check for failure in outdoor P.C. board (I/F).
H06	H06	_	I/F	Activation of low-pressure protection	All stop	Low-pressure Ps sensor detects operating pressure lower than 0.02MPa.	 Check service valves to confirm full opening (both gas and liquid sides). Check outdoor PMVs for clogging (PMV1, 2, 3). Check for failure in SV4 circuits. Check for failure in low-pressure Ps sensor. Check indoor filter for clogging. Check valve opening status of indoor PMV. Check refrigerant piping for clogging. Check operation of outdoor fan (during heating). Check for insufficiency in refrigerant quantity.
H07	H07		I/F	Low oil level protection	All stop	Operating compressor detects continuous state of low oil level for about 2 hours.	 <all in<br="" outdoor="" units="">corresponding line to be checked></all> Check connection and installation of TK1 and TK2 sensors. Check resistance characteristics of TK1 and TK2 sensors. Check for gas or oil leak in same line. Check for refrigerant problem inside compressor casing. Check SV3D, SV3F valves for failure. Check oil return circuit of oil separator for clogging. Check oil equalizing circuit for clogging.
408	HOS	01: TK1 sensor trouble 02: TK2 sensor trouble	I/F	Trouble in temperature sensor for oil level detection	All stop	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TK1 sensor connector. Check resistance characteristics of TK1 sensor. Check for failure in outdoor P.C. board (I/F).
H08	H08				All stop	Sensor resistance is infinity or zero (open/short circuit).	 Check connection of TK2 sensor connector. Check resistance characteristics of TK2 sensor. Check for failure in outdoor P.C. board (I/F).
H15	H15	_	I/F	TD2 sensor miswiring (incomplete insertion)	All stop	Discharge temperature of (TD2) does not increase despite compressor 2 being in operation.	 Check installation of TD2 sensor. Check connection of TD2 sensor connector and wiring. Check resistance characteristics of TD2 sensor. Check for failure in outdoor P.C. board (I/F).

	Check code		Location				
Main	Outdoor	7-segment display	Location of	Description	System status	Check code detection condition(s)	Check items (locations)
remote controller	Check code	Sub-code	detection			condition(s)	
		01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	I/F	Oil level detection circuit trouble	All stop	No temperature change is detected by TK1 despite compressor 1 having been started.	 Check for disconnection of TK1 sensor. Check resistance characteristics of TK1 sensor. Check for connection trouble involving TK1 and TK2 sensors Check for clogging in oil equalizing circuit capillary. Check for refrigerant entrapment inside compressor.
H16	H16					No temperature change is detected by TK2 despite compressor 2 having been started.	 Check for disconnection of TK2 sensor. Check resistance characteristics of TK2 sensor. Check for connection trouble involving TK1 and TK2 sensors Check SV3F valve malfunction. Check for clogging in oil equalizing circuit capillary. Check for refrigerant entrapment inside compressor.
H17	H17	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor trouble (Step-out)	All stop	Judged that the synchronization could not be taken.	 Check power supply voltage. (AC380V-415V ± 10%). Check for failure in compressor. Check for possible cause of abnormal overloading. Check for failure in outdoor P.C. board (compressor).
L02	L02	_	Indoor unit	Outdoor units model disagreement trouble	Stop of corresponding unit	In case of different outdoor unit (Not corresponded to Air to Air Heat Exchanger type)	Check outdoor unit model. (Check whether the outdoor unit corresponds to Air to Air Heat Exchanger type or not.)
L03	_	_	Indoor unit	Duplicated indoor header unit	Stop of corresponding unit	There are more than one header units in group.	 Check indoor addresses. Check for any change made to remote controller connection (group/ individual) since indoor address setting.
L04	L04	_	I/F	Duplicated outdoor line address	All stop	There is duplication in line address setting for outdoor units belonging to different refrigerant piping systems.	Check line addresses.
L05		_	I/F	Duplicated priority indoor unit (as displayed on priority indoor unit)	All stop	More than one indoor units have been set up as priority indoor unit.	Check display on priority indoor unit.
L06	L06	No. of priority indoor units	I/F	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	All stop	More than one indoor units have been set up as priority indoor unit.	Check displays on priority indoor unit and outdoor unit.
L07	_	_	Indoor unit	Connection of group control cable to standalone indoor unit	Stop of corresponding unit	There is at least one standalone indoor unit to which group control cable is connected.	Check indoor addresses.
L08	L08	_	Indoor unit	Indoor group / addresses not set	Stop of corresponding unit	Address setting has not been performed for indoor units.	• Check indoor addresses. Note: This code is displayed when power is turned on for the first time after installation.
L09	_	_	Indoor unit	Indoor capacity not set	Stop of corresponding unit	Capacity setting has not been performed for indoor unit.	Set indoor capacity. (DN = 11)

	Check	code					
Main		7-segment display	Location of	Description	System status	Check code detection	Check items (locations)
remote controller	Check code	Sub-code	detection			condition(s)	
L10	L10		I/F	Outdoor capacity not set	All stop	Initial setting of I/F P.C. board has not been implemented.	Check model setting of P.C. board for servicing outdoor I/F P.C. board.
L20	_		Network adaptor Indoor unit	Duplicated central control address	All stop	There is duplication in central control address setting.	Check central control addresses.
L23	_	_	I/F	SW setting mistake	All stop	Outdoor P.C. board (I/F) does not operate normally.	 Check switch setting of outdoor P.C. board (I/F).
L28	L28	_	I/F	Too many outdoor units connected	All stop	There are more than 5 outdoor units.	 Check No. of outdoor units connected (Only up to 5 units per system allowed). Check communication lines between outdoor units. Check for failure in outdoor P.C. board (I/F).
L29	L29	P.C. board Compressor Fan Motor 1 2 1 2 02 0 0 0 03 0 0 0 08 0 0 0 09 0 0 0 08 0 0 0 09 0 0 0 10 0 0 0 11 0 0 0 13 0 0 0 13 0 0 0 14 0 0 0 18 0 0 0 18 0 0 0 Circle (O): Trouble P.C. board	I/F	Trouble in No. of P.C. board	All stop	Insufficient number of P.C. board are detected when power is turned on.	 Check model setting of P.C. board for servicing outdoor I/F P.C. board. Check connection of UART communication connector. Check compressor P.C. board, fan P.C. board, and I/F P.C. board for failure.
L30	L30	Detected indoor address	Indoor unit	Indoor external interlock (External abnormal input)	Stop of corresponding unit	Indoor unit has been shut down due to external abnormal input signal.	 When external device is connected: 1) Check for trouble in external device. 2) Check for trouble in indoor P.C. board. When external device is not connected: 1) Check for trouble in indoor P.C. board.
_	L31	_	I/F	Extended IC trouble	Continued operation	There is part failure in P.C. board (I/F).	Check outdoor P.C. board (I/F).
P01		_	Indoor unit	Indoor fan motor trouble	Stop of corresponding unit		 Check the lock of fan motor (AC fan). Check wiring.
P03	P03	_	I/F	Discharge temperature TD1 trouble	All stop	Discharge temperature (TD1) exceeds 115 °C.	 Check outdoor service valves (gas side, liquid side) to confirm full opening. Check outdoor PMVs (PMV1, 2, 3, 4) for clogging. Check resistance characteristics of TD1 sensor. Check for insufficiency in refrigerant quantity. Check for failure in 4-way valve. Check for leakage of SV4 circuit. Check SV4 circuit (wiring or installation trouble in SV41 or SV42).

	Check code						
Main remote		7-segment display	Location of	Description	System status	Check code detection condition(s)	Check items (locations)
controller	Check code	Sub-code	detection			condition(3)	
P04	P04	1*: Compressor 1 side 2*: Compressor 2 side	I/F	Activation of high-pressure SW	All stop	High-pressure SW is activated.	 Check connection of high-pressure SW connector. Check for failure in Pd pressure sensor. Check outdoor service valves (gas side, liquid side) to confirm full opening. Check for failure in outdoor fan. Check for failure in outdoor fan motor. Check outdoor PMVs (PMV1, 2, 3) for clogging. Check indoor/outdoor heat exchangers for clogging. Check for failure in outdoor pMVs (PMV1, 2, 3) for clogging. Check for short-circuiting of outdoor suction/discharge air flows. Check for failure in outdoor P.C. board (I/F). Check for failure in outdoor fan system (possible cause of air flow reduction). Check opening status of indoor PMV. Check for failure operation of check valve in discharge pipe convergent section. Check for refrigerant overcharging.
P05	P05	00: Power detection trouble 01: Open phase 02: Power supply miswiring 1*: Compressor 1 side 2*: Compressor	I/F Compressor P.C. board	Power detection trouble / Open phase detection / Power supply miswiring Compressor Vdc trouble	All stop	 Open phase is detected when power is turned on. Inverter DC voltage is too high (overvoltage) or too low (undervoltage). 	 Check for failure in outdoor P.C. board (I/F). Check wiring of outdoor power supply. Check power supply voltage.
		2 side 1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Heat sink overheating trouble	All stop	Temperature sensor built into IPM (TH) is overheated.	 Check outdoor fan system trouble. Check IPM and heat sink for thermal performance for failure installation. (e.g. mounting screws and thermal conductivity) Check for failure in Compressor P.C. board. (failure IPM built-in temperature sensor (TH))
P07	P07	01: Compressor 1 heat sink trouble 02: Compressor 2 heat sink trouble 04: Heat sink dew condensation	I/F	Heat sink overheating trouble Heat sink dew condensation trouble	All stop	Condensation detection on heat sink has occurred four times or more in operation. Temperature sensor built into IPM (TH) is overheated.	 Check outdoor fan system trouble. Check IPM and heat sink for thermal performance for troubled installation. (e. g. mounting screws and thermal conductivity) Check for failure in compressor P.C. board. (failure IPM built-in temperature sensor (TH)) Check shortage of refrigerant. Check soutdoor service valves. Check connection of TL2 sensor. Check resistance characteristics of TL2 sensor. Check malfunctions of Pd and Ps sensors. Check outdoor I/F P.C. board malfunction. Check PMV2 and PMV3
	Check		Location				
----------------	------------------	----------------------------	-------------	--	----------------------------------	---	--
Main remote	Outdoor Check	7-segment display	of	Description	System status	Check code detection condition(s)	Check items (locations)
controller	code	Sub-code	detection				
P10	P10	Detected indoor address	Indoor unit	Indoor overflow trouble	All stop	 Float switch operates. Float switch circuit is open-circuited or disconnected at connector. 	 Check float switch connector. Check operation of drain pump. Check drain pump circuit. Check drain pipe for clogging. Check for failure in indoor P.C. board.
P11	_	_	I/F	Outdoor heat exchanger freeze trouble	All stop	Outdoor heat exchanger remaining frost detection has occurred eight times or more due to abnormal frost formation in heating operation.	 Check shortage of refrigerant. Check connection of TE1, TE2 and TE3 sensors. Check resistance characteristics of TE1, TE2, and TE3 sensors. Check disconnection of TS1 sensor. Check resistance characteristics of TS1 sensor. Check outdoor I/F P.C. board malfunction. Check operation of 4 way valve. Check operation of outdoor PMV (1, 2, 3). Check short circuit from outlet air to inlet air.
P12	_	_	Indoor unit	Indoor fan motor trouble	Stop of corresponding unit	Motor speed measurements continuously deviate from target value. • Overcurrent protection is activated.	 Check connection of fan connector and wiring. Check for failure in fan motor. Check for failure in indoor P.C. board. Check impact of outside air treatment (OA).
P13	P13	_	I/F	Outdoor liquid backflow detection trouble	All stop	<during cooling="" operation=""> When system is in cooling operation, high pressure is detected in the unit that has been turned off. <during heating="" operation=""> When system is in heating operation, low pressure is detected to be high in unit that has been turned off.</during></during>	 Check full-close operation of outdoor PMV (1, 2, 3, 4). Check for failure in Pd or Ps sensor. Check failure in outdoor P.C. board (I/F). Check capillary of oil separator oil return circuit for clogging. Check for leakage of check valve in discharge pipe
P15	P15	01: TS condition	I/F	Gas leak detection (TS1 condition)	All stop	Protective shutdown due to sustained suction temperature at or above judgment criterion for at least 10 minutes is repeated four times or more. <ts criterion="" judgment="" trouble=""> In cooling operation: 60 °C In heating operation: 40 °C</ts>	 Check for insufficiency in refrigerant quantity. Check outdoor service valves (gas side, liquid side) to confirm full opening. Check PMVs (PMV1, 2, 3, 4) for clogging. Check resistance characteristics of TS1 sensor. Check for failure in 4-way valve. Check SV4 circuit for leakage
		02: TD condition	I/F	Gas leak detection (TD condition)	All stop	Protective shutdown due to sustained discharge temperature (TD1 or TD2) at or above 108 °C for at least 10 minutes is repeated four times or more.	 Check for insufficiency in refrigerant quantity. Check PMVs (PMV 1, 2, 3, 4) for clogging. Check resistance characteristics of TD1 and TD2 sensors. Check indoor filter for clogging. Check piping for clogging. Check SV4 circuit (for leakage or coil installation trouble).

	Check	code					
Main	Outdoor	7-segment display	Location of	Description	System status	Check code detection	Check items (locations)
remote controller	Check code	Sub-code	detection		-,	condition(s)	(,
P17	P17		I/F	Discharge temperature TD2 trouble	All stop	Discharge temperature (TD2) exceeds 115 °C.	 Check outdoor service valves (gas side, liquid side) to confirm full opening. Check outdoor PMVs (PMV1, 2, 3, 4) for clogging. Check resistance characteristics of TD2 sensor. Check for failure in 4-way valve. Check SV4 circuit for leakage. Check SV4 circuit for wiring or installation trouble involving SV41 and SV42).
P19	P19	Detected outdoor unit No.	I/F	4-way valve reversing trouble	All stop	Abnormal refrigerating cycle data is collected during heating operation.	 Check for failure in main body of 4-way valve. Check for coil failure in 4- way valve and loose connection of its connector. Check resistance characteristics of TS1 and TE1,TE2 sensors. Check output voltage characteristics of Pd and Ps pressure sensors. Check for wiring trouble involving TE1 and TL1 sensors.
P20	P20		I/F	Activation of high-pressure protection	All stop	<during cooling="" operation=""> Pd sensor detects pressure equal to or greater than 3.85 MPa. <during heating="" operation=""> Pd sensor detects pressure equal to or greater than 3.6 MPa.</during></during>	 Check for failure in Pd pressure sensor. Check service valves (gas side, liquid side) to confirm full opening. Check for failure in outdoor fan. Check for failure in outdoor fan motor. Check outdoor PMV (PMV1, 2, 3, 4) for clogging. Check indoor/outdoor heat exchangers for clogging. Check for short-circuiting of outdoor suction/ discharge air flows. Check for failure in outdoor P.C. board (I/F). Check for failure in indoor fan system (possible cause of air flow reduction). Check indoor-outdoor communication line for wiring trouble. Check for troble operation of check valve in discharge pipe convergent section. Check for refrigerant overcharging.

	Check	code					
Main	Outdoor	7-segment display	Location of	Description	System status	Check code detection	Check items (locations)
remote controller	Check code	Sub-code	detection			condition(s)	
P22	P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	Fan INV. P.C. board	Outdoor fan P.C. board trouble	All stop	Protected operation of Fan inverter P.C. board	 Check fan motor. Check for failure in fan P.C. board. Check connection of fan motor connector. Check power voltage of the main power supply.
P26	P26	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	IPM, Compressor shortcircuit protection trouble	All stop	Overcurrent is momentarily detected during startup of compressor.	 Check connector connection and wiring on compressor P.C. board. Check for failure in compressor (layer shortcircuit). Check for failure in outdoor P.C. board (Compressor).
P29	P29	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor position detection circuit trouble	All stop	Position detection is not going on normally.	 Check wiring and connector connection. Check for compressor layer short-circuit. Check for failure in compressor P.C. board.
P31		_	Indoor unit	Other indoor trouble (group follower unit trouble)	Stop of corresponding unit	There is trouble in other indoor unit in group, resulting in detection of E07/L07/L03/L08.	Check indoor P.C. board.

	Check	code					
Main	Outdoor	7-segment display	Location of	Description	System status	Check code detection	Check items (locations)
remote controller	Check code	Sub-code	detection	Description	Cystem status	condition(s)	
E03	_	_	Indoor unit	Indoor-remote controller communication trouble (detected at indoor end)	Stop of corresponding unit	There is no communication from remote controller (including wireless) or network adaptor.	 Check remote controller and network adaptor wiring.
C05	_		Central control device	Central control device transmission trouble	Continued operation	Central control device is unable to transmit signal.	 Check for failure in central control device. Check for failure in central control communication line. Check termination resistance setting.
C06			Central control device	Central control device reception trouble	Continued operation	Central control device is unable to receive signal.	 Check for failure in central control device. Check for failure in central control communication line. Check terminator resistor setting. Check power supply for devices at other end of central control communication line. Check failure in P.C. boards of devices at other end of central control communication line.
C12	_		General- purpose device I/F	Batch alarm for general- purpose device control interface	Continued operation	Trouble signal is input to control interface for general- purpose devices.	Check trouble input.
P30		ccording to f alarm-causing	Central control device	Group control follower unit trouble	Continued operation	Trouble occurs in follower unit under group control. ([P30] is displayed on central control remote controller.)	 Check check code of unit that has generated alarm.
	(L20 dis	played.)		Duplicated central control address	Continued operation	There is duplication in central control addresses.	Check address settings.

Check codes Displayed on by Central Control Device

▼ Points to Note When Servicing Compressor

(1) When checking the outputs of inverters, remove the wiring from all the compressors.

▼ How to Check Inverter Output

- (1) Turn off the power supply.
- (2) Remove compressor leads from the compressor P.C. board.
- (The model with two compressor should remove the wiring for two sets (6 leads).
- (3) Turn on the power supply and start cooling or heating operation.
- (4) Check the output voltage across each pair of inverter-side. If the result is unsatisfactory according to the judgment criteria given in the table below, replace the compressor P.C. board.

No.	Measured leads	Criterion
1	CN201 - CN202	380~580V
2	CN202 - CN203	380~580V
3	CN203 - CN201	380~580V

How to Check Resistance of Compressor Winding

- (1) Turn off the power supply.
- (2) Remove compressor leads from the compressor P.C. board. (Be sure to remove all the leads.)
- (3) With each compressor, check the phase-to-phase winding resistances and winding-to-outdoor cabinet resistance using a multimeter.
 - Earth trouble?
 - \rightarrow It is normal if the winding-to-outdoor cabinet resistance is 10M Ω or more.
 - Inter-winding short circuit?
 - \rightarrow It is normal if the phase-to-phase resistances are in the 0.1-1.0 Ω range. (Use a digital multimeter.)

How to Check Outdoor Fan Motor

- (1) Turn off the power supply.
- (2) Remove fan motor leads from the fan P.C. board for the outdoor fan.
- (3) Rotate the fan by hand. If the fan does not turn, the fan motor is faulty (locked up). Replace the fan motor. If the fan turns, measure the phase-to-phase winding resistances using a multimeter. It is normal if the measurements are in the 8.1-9.9 range. (Use a digital multimeter.)





10-5. Diagnostic Procedure for Each Check Code (Indoor Unit)























Recovery method a	Recovery method after refrigerant leakage detection (repair flow)	
This product has a fun. While shut-off valve is	This product has a function to lock shut-off valve and system when refrigerant leakage is detected While shut-off valve is locked, shut-off valve of FS unit or SV unit is closed and fixed, and compresed and the set of t	This product has a function to lock shut-off valve and system when refrigerant leakage is detected. While shut-off valve is locked, shut-off valve of FS unit or SV unit is closed and fixed, and compressor cannot start operating while system is locked.
Follow this repair flow t	Follow this repair flow to repair and release lock.	
Please ventilate thor Note -	across. - Please ventilate thoroughly before operating, it can be dangerous if the refrigerant is stagnant. Interventioned	rrant is stagnant.
• Clarify the installation	 - Check DN code No. [107] setting. (Leak Detector sounds again, and please stop it again refer to "8-11. System operation whe - Check DN code No. [107] setting. (Leak Detector sounds again, and please stop it again refer to "8-11. System operation whe - Clarify the installation location of the Leak Detector through the Leak Detector Interface and Flow Selector/Shut-off Valve unit.	
	(1) Recovering refrigerant.	(1) Recovering refrigerant. Refriderant should be collected before release the shut-off valves lock described below.
		The refrigerant may leak again from the part where the refrigerant leaked, which may become dangerous.
(2) Determine	(2) Determine which Leak Detector detected a refrigerant leak.	(2) Determine which Leak Detector detected a refrigerant leak. When Leak Detector detects a refrigerant leak, alarm lamp is blinking. (1 Hz)
(3) Determine unit occurre	(3) Determine which indoor upt and Flow Selector/Shut-off Valve unit occurred a refrigerant leak.	(3) Determine which indoor unit and Flow Selector/Shut-off Valve unit occurred a refrigerant leak.
	(1) Delenent the effects of values lead	(4) Release the shut-off valves lock by operating Leak Detector. *
ţ	/ Release the shut-on valves lock.	With sufficient verifiation, release the shut-off valves lock. Puch and hold the alarm lamp hithin and reset hithin of Leak Defector at the same time for at least 5 seconds and release after that. (Blease nuch the reset hithin using a tool such as a precision screwidtiver)
		The following actions are performed: • Leak Detector makes a sound of "beep, beep, beep, beep, beeeeeep"
		 The shut-off values that was locked will be released. (All shut-off values lock in the system will be released within 3 minutes.) Do NOT turn off power until operation is completed.) After relase the shut-off values lock, reset system power. When DN code [107] set to 1 or 3, the shut-off value will not open until power is reset. When a system power reset, Malfunction LED of Lask Detector will turn ON and Notice code is displayed on remote controlled.
		Caution: After release the shut-off valves lock, refrigerant remaining downstream side of the shut-off valves may flow from leakage point. (Especially, when DN code [107] set to 3, some refrigerant remains.) When refrigerant leakage continues, dose the shut-off valve comected to leak point. (Close PMV-L, PMV-S, and PMV-D). Refer to "7-7-7, pulse Motor Valve (PMV) Forced Oben/Close Function in FS unit and shut-off valve to coerted the shut-off valves.
		* Perform this release operation even if the system is only connected to the indoor unit with the indoor unit DN code No. [107] set to 3 "Leak Detector only".
	(5) Recovering refrigerant.	 The release operation include or performent on an electrons that detection in the detection of the detection of the Leak Detector connected to the Leak Detector Interface. (5) Deconcision on the control of the Leak Detector connected to the Leak Detector Interface.
	(6) Banair the refriguerant leak mint	(c) recovering reingerent. (regen) After release the shut-off valves lock, check refrigerant pressure. If pressure is rising, recover refrigerant again.
	ל ארף מו נוב ובוו לכו מור וכמא המוון:	(6) Repair the refrigerant leak point.
	(7) Airtightness test.	Turn OFF system power and repair leakage point, or replace indoor unit. After repair is completed, turn ON system power.
	(8) Vacuum drying.	(7) Airtightness test.
	(d) Chaming reference	(8) Vacuum drying.
	(10) Release the system lock.	(9) Charging refrigerant
		(10) Release the system lock. Be sure to perform this operation after release the shut-off valves lock. Set the rotary switch [SW01/SW02/SW03] on the <i>I/F</i> board of the outdoor unit to [2/1/9]. 7-segment display: [o. U. L o c] (While system is locked.)
(11)	(11) Replace refrigerant sensor module.	[o. U] (Others.) Push and hold SW05 more than 5 seconds, system lock is released. 7-segment display: [o. U C L] (display for 5 seconds)
	(12) Test run.	~
		After replacing refrigerant sensor module, confirm that Malfunction LED is turned off and Notice code is cleared. rush not not own more than 5 seconds, system is rocket. (12) After completing all the work, system power reset and start test run.

10-6. Sensor Characteristics

Indoor Unit

Temperature sensor characteristics



11. REPLACEMENT OF SERVICE P.C. BOARD

Replacement of P.C. Board for Indoor Unit Servicing

<Models>

MMK-UB***1HP-UL Series

<Note : when replacing the P.C. board for indoor unit servicing>

The nonvolatile memory (hereafter called EEPROM, IC503) on the indoor unit P.C. board before replacement includes the model specific type information and capacity codes as the factory-set value and the important setting data which have been automatically or manually set when the indoor unit is installed, such as system/indoor/group addresses, high ceiling select setting, etc. When replacing the P.C. board for indoor unit servicing, follow the procedures below. After replacement completes, confirm whether the settings are correct by checking the indoor unit No.,Group header unit/ follower unit settings and perform the cooling cycle confirmation through the trial operation.

<Replacement procedures>

Case 1

Before replacement, the indoor unit can be turned on and the setting data can be read out by wired remote control operation.

EEPROM data read out [1]

Replacement of P.C. board for Indoor unit servicing and power on [2]

[∏] Writing the read out EEPROM data [3]

Power reset(for all indoor units connected to the remote control when the group operation control is performed.)

Case 2

The EEPROM before replacement is defective and the setting data cannot be read out.

Writing the setting data to EEPROM, such as high ceiling installation setting and optional connection setting, etc.,

based on the customer information. [3]

Û

Power reset (for all indoor units connected to the remote control when the group operation control is performed.)

[1] Setting data read out from EEPROM

The setting data modified on the site, other than factory-set value, stored in the EEPROM shall be read out.

- Step 1 Push [🔳 Menu] to open the "Menu"
- Step 2 Push and hold [E Menu] and [] at the same time to open "Field setting menu". (Push and hold 4 seconds.)
- Step 3 Push [] and [] to select " DN setting", and then push [Set / Fix].

Step 5 For group operation, all connected room in the system are displayed.
 Select the unit whose EEPROM contents you want to read and push [Set / Fix].
 ⇒ The fan of the selected indoor unit operates and the flap swings.

- 1. Push []] to black highlight the code (DN), and then push []] and []] to set the code No. to 1. (This is the setting for the filter sign lighting time.) at this time, be sure to write down the setting data displayed.
- Change the CODE No. (DN) by pushing ✓ / ▲ buttons.
 Similarly, be sure to write down the setting data displayed.
 - 3. Repeat the step 2 to set the other setting in the same way and write down the setting data in the manual that comes with the P.C board.

CODE No.required at least

CODL			
DN	Contents		
10	Туре		
11	Indoor unit capacity		
12	System address		
13	Indoor unit address		
14	Group address		
FC	Communication protocol		
1FC	Indoor Unit terminating resistance		

- 1. The CODE No. for the Indoor unit type and Indoor unit capacity are required to set the rotation number setting of the fan.
- 2. If the system/indoor/group addresses are different from those before replacement, the auto-address setting mode starts and the manual resetting may be required again.

(when the multiple units group operation including twin system.)

- [2] P.C. Board for indoor unit servicing replacement procedures
- Step 1 Replace the P.C. board to the P.C. board for indoor unit servicing.
 At this time, perform the same setting of the jumper wire(J01, J08, J09) setting(cut),switch SW01, SW02 (short-circuit) connector CN34 as the setting of the P.C. board before replacement.
- Step 2 It is necessary to set Indoor unit to be exchanged : Remote controller = 1:1

Based upon the system configuration, turn on power of the indoor unit with one of the following items. 1) Single (Individual) operation

Turn on power of the indoor units and proceed to [3].

- 2) Group operation
 - A) In case that power of the exchanged indoor unit only can be turned on

Turn on power of the exchanged indoor unit only and proceed to [3].

- B) In case that power of the indoor units cannot be turned on individually (Case 1)
 - a) Remove temporarily the group wire connected to the terminal blocks A and B of the exchanged indoor unit.
 - b) After connecting the remote controller wire only to the removed terminal block, turn on power of the indoor units and proceed to [3].
- When the above methods cannot be used, follwer to the two cases below.
- C) In case that power of the indoor units cannot be turned in individually (Case 2)
 - a) Remove all CN41 connectors of the indoor units in the same group except those of the exchanged indoor unit.
 - b) Turn on power of the indoor units and proceed to [3].
- After [3] operation has finished, be sure to return the temporarily removed group wire or

CN41 connector to the original connection.



[3] Writing the setting data to EEPROM

(The settings stored in the EEPROM of the P.C. board for indoor unit servicing are the factory-set values.)

- Step 1 Push [E Menu] to open the "Menu"
- Step 2 Push and hold [E Menu] and [] at the same time to open "Field setting menu". (Push and hold 4 seconds.)
- Step 3 Push [] and [] to select " DN setting", and then push [Set / Fix].
- Step 4 Select "Indoor unit", and the push [Set / Fix].
- Step 5 For group operation, all connected room in the system are displayed. Select the unit whose EEPROM contents you want to read and push [Set / Fix].
 - \Rightarrow The fan of the selected indoor unit operates and the flap swings.
- Step 6 Push [\checkmark] to black highlight the code (DN), and then push [\checkmark] and [\land] to set the code (Set the indoor unit type and capacity)

The factory-set values shall be written to the EEPROM by changeing the type and capacity.

- 1. Set the CODE No. (DN) to 10 (without change)
- 2. Push [] to black highlight the data, and then push [] and [] to set the type. (Refer to Type DN code "10")
- 3. After finishing setting the data of the code (DN), push [□ Set / Fix] ⇒ "Continues ?" is displayed.
- 5. Push [\checkmark] to black highlight the code (DN), and then push [\checkmark] and [\checkmark] to set the code No. to 11.
- 6. Push [] to black highlight the data, and then push [] and [] to set the capacity. (Refer to indoor unit capacity DN code "11")
- 7. After finishing setting the data of the code (DN), push [Set / Fix]
 - \Rightarrow "Continues ?" is displayed.
- 8. Push [ᅿ Return]
 - When doing group connections :
 - ⇒ Push [➡ Return] to open the unit selection screen. In the unit selection screen, push [➡ Return] to briefly display " , and then return to the "Field setting menu" screen.
- Step 7 Write the on-site setting data to the EEPROM, such as address setting etc. Perforn the steps 1 and 4 above agian.
- Step 8 Push $[\checkmark]$ to black highlight the code (DN), and then push $[\checkmark]$ and $[\land]$ to set the code No. to 1.
 - (This is the setting for the filter sign lighting time.)
- Step 9 Check the setting data displayed at this time with the setting data put down in [1].
 - 1. If the data is different, push [] to highlight the data in black and write, push [] and [] to change the data to what you wrote down, and push [Set / Fix].
 - 2. If the data is the same, proceed to next step.
- Step 10 Push [\checkmark] to black highlight the code (DN), and then push [\checkmark] and [\land] to set the code.

As described above, check the setting data and modify to the data put down in [1].

- Step 11 Repeat the steps 8 and 9.
- Step 12 After the setting completes, push [D Return]

When doing group connections :

before modification by pushing [D Return] if the CODE No. (DN) is not changed.



The EEPROM (IC503) is attached to the IC socket. When detaching the EEPROM, use a tweezers, etc. Be sure to attach the EEPROM by fitting its direction as shown in the figure.

Do not bend the IC lead when replacing.



 Boom
 12:00
 (Boon)

 Image: Set temp.
 (Cool)
 Image: Set temp.
 Image: Set temp.

 Image: Set temp.
 Cool)
 Image: Set temp.
 Image: Set temp.
 Image: Set temp.

 Image: Set temp.
 Cool)
 Image: Set temp.
 Image: Set temp.

<Fig. 1 RBC-AWSU5*-UL>

Table 1.Setting data(CODE No. table(example))

02 D 03 C 04 S 06 H	Item Filter display delay timer Dirty state of filter Central control address Specific indoor unit priority	Setting data	Factory-set value 0002 : 2500H 0000 : Standard
02 D 03 C 04 S 06 F	Dirty state of filter Central control address Specific indoor unit priority		
03 C 04 S 06 F	Central control address Specific indoor unit priority		
04 S 06 F	Specific indoor unit priority		00Un/0099 : Unfixed
06 H			0000 : No priority
	Heating suction temperature shift		0002 : +2°C
	Automatic mode		0001 : No automatic
00 .	Cooling only		0000 : Heat pump
•	Гуре		Depending on model type
	ndoor unit capacity		According to capacity type
	_ine address		00Un/0099 : Unfixed
14	ndoor unit address		00Un/0099 : Unfixed
10	Group address		00Un/0099 : Unfixed
	Flap type (Wind direction adjustment)		Depending on Type
	Temperature range of cooling/heating		
	automatic SW control point		0003 : 3 deg (Ts±1.5)
28 A	Automatic restart of power failure	0001 : Enable	0000 : None
S	Selection of option / Trouble input		0000 - Nore
2A (TCB-PCUC2E: CN3)		0002 : None
	Themo output SW		0000 : Thermo ON
	HA terminal (CN61) select		0000 : Usual (HA terminal)
31 V	/entilating fan control		0000 : Unavailable
	Sensor SW		0000 : Body sensor
33 T	Temperature unit select	0001 : Fahrenheit (°F)	0000 : Centigrade (°C)
	High ceiling setting	· ·	0000 : Default setting
60 T	Timer setting (wired remote controller)		0000 : Available
7A C	Change unit 0.5°C or 1.0°C on remote	0001 : 1°C	0000 : 0.5°C
D0 F	Remote controller operation save function		0001 : Enable
	Region	0001 : North America	0000 : Domestic
	Presence of Application control kit TCB-PCUC2E)		0000 : None
	Communication protocol		0000 : TCC-LINK
	-S unit adress		00Un/0099 : Unfixed
1Fb F	Remote controller operation		0000 : Operation possible
	ndoor Unit terminating resistance		0000 : OFF

Table 2. Type : CODE No.10

Setting data	Туре	Type name abb.
0001 *1	4-way Air Discharge Cassette Type	MMU-UB***1HP-UL
0008	High wall Type	MMK-UB***1HP-UL

*1 EEPROM initial value on the P.C. board for indoor unit servicing.

*2 **A** CAUTION

For the above model. Set the CODE no. to **"E0"** the setting data "0000" (initial) to "0001"

Table 3. Indoor unit capacity : CODE No.11

Setup data	Model
0000*1	Invalid
0007	015 type
0009	018 type
0011	024 type

12. HOW TO REPLACE THE MAIN PARTS

WARNING

• Since high voltages pass through the electrical parts, turn off the power without fail before proceeding with the repairs.

Electric shocks may occur if the power plug is not disconnected.

After the repairs have been completed (after the front panel and cabinet have been installed), perform a test run, and check for smoking, unusual sounds and other abnormalities.
 If this check is omitted, a fire and/or electric shocks may occur.
 Before proceeding with the test run, install the front panel and cabinet.

- Ensure that the following steps are taken when doing repairs on the refrigerating cycle.
 - Do not allow any naked flames in the surrounding area.
 If a gas stove or other appliance is being used, extinguish the flames before proceeding.
 If the flames are not extinguished, they may ignite any oil mixed with the refrigerant gas.
 - Do not use welding equipment in an airtight room. Carbon monoxide poisoning may result if the room is not properly ventilated.
 - Do not bring welding equipment near flammable objects.
 Flames from the equipment may cause the flammable objects to catch fire.
- If keeping the power on is absolutely unavoidable while doing a job such as inspecting the circuitry, wear rubber gloves to avoid contact with the live parts.
 Electric shocks may be received if the live parts are touched.
 High-voltage circuits are contained inside this unit.
 Proceed very carefully when conducting checks since directly touching the parts on the control circuit

board may result in electric shocks.

10-1. Indoor Unit

No.	Part name	Procedures	Remarks
1	Air inlet grille	 Stop operation of the air conditioner and turn off its main power supply. Open the air inlet grille and push it up until the air inlet grille take off. <remark> If you do not have enough space for push the air inlet grille up until it take off, you can push the arms of air inlet grille toward the outside, and remove the air inlet grille. </remark> 	Air inlet grille
		 <to re-installation=""></to> Carry out attaching in the reverse order to removal. Keep front panel horizontally and put both arms into guides. Make sure both arms are inserted completely. 	

No.	Part name	Procedures	Remarks
2	Air filters	 1) Follow to the procedure in the item ①. 1) Follow to the procedure in the item ①. I is a state of the procedure of the front panel. 1) Follow to the procedure in the item ①. 1) Follow to the procedure in the item ①. 	
3	Front panel	 Stop operation of the air conditioner and turn off its main power supply. Open two screw caps and securely remove screws (2 pcs.) at the front panel. Image: the front panel of the front panel from the parel back body. Take off the hooks of front panel from top side of the back body. Slightly open the lower part of the front panel then pull the upper part of the front panel toward you to remove it as shown on figure. 	<image/>



No.	Part name	Procedures	Remarks
5	Fan motor	 Follow the procedure item ③and④. Loosen the set screw of the cross flow fan. I cosen the set screw of the cross flow fan. I cosen the set screw of the cross flow fan. I cosen the set screw of the motor back Remove 2 fixing screws of the motor band. Pull the motor band and the fan motor outward. I constallation> Keep connector position and arrange fan motor wire follow figure. 	Cross flow fan Vertical louver Vertical louver Hexagon screw driver Motor band Screws Crew
6	Horizontal louver	1) Remove shaft of the horizontal louver from the back body. (First remove 2 the center shafts then remove the other shafts.)	Drain pan
	Drain hose	 Follow the procedure item ③. The drain hose can be removed by removing the screw securing the drain hose and then pulling out the drain hose. When removing the drain hose, be careful of any sharp edges of steel plate. The edges can injuries. Feat insulator Ordini pan Heat insulator Ordini pan Ordini pan Feat insulator Ordini pan Ordini pan Feat insulator Ordini pan Ordini pan Feat insulator Ordini pan Ord	Prain pan



No.	Part name	Procedures	Remarks
9	Vertical louver assembly	 Follow the procedure item(3)and(8). Remove 2 fixing screws from the base vertical louver then remove the vertical louver assembly from the body back. 	Vertical louver Screw Screw
10	Cover motor VT assembly	 Follow the procedure item(3),(8) and (9). Remove 4 fixing screws from the body back. then remove cover motor VT assembly from rear side of main unit. 	
11	Bearing base	 Follow the procedure item ③. Remove 4 fixing screws from the bearing base, then remove it from the main unit. Bearing base Bearing Caution at assembling> If the bearing is out from the housing, push it into the specified position, then incorporate it in the main unit. 	Heat exchanger
	Cross flow fan	 Follow the procedure item (9) and (1). Loosen the set screw of the cross flow fan. Lift up the heat exchanger follow the figure. Pull out the left hand side until the cross flow fan released from the shaft of the fan motor and then pull out the lower side of heat exchanger follow the figure. To re-installation> To incorporate the fan motor and the motor into the position in the following figure. Install the cross flow fan so that the right end of the 1st joint from the right of the Cross flow fan is keep 0.1"(3.5mm) from closed wall of the main unit. 	Cross flow fan United allower Hexagon screw driver

No.	Part name	Procedures	Remarks
		 Cross flow fan Body back O.1'(3.5mm) O.1'(3.5mm) Fan motor Holding the set screw, install the cross flow fan so that flat area on shaft of the fan motor comes to the mounting hole of the set screw. 	
13	Heat exchanger (Evaporator)	 Follow the procedure in item(3) and 4. Remove 3 fixing screws at the upper left side of the heat exchanger. Remove 2 fixing screws at the upper and 	Fet exchange
		 right side of the heat exchanger. Remove the pipe holder from the rear side of the main unit. Pull out the heat exchanger to upper side. 	Screw Pipe holder
		Heat exchanger Heat exchanger	Heat exchanger
		<to re-installation=""> Keep the back body horizontally and put the heat exchanger carefully to the back body. Make sure the heat exchenger can be assembled with the back body and secure it tightly with screws. </to>	



13. EXPLODED VIEWS AND PARTS LIST

Indoor Unit



Location No.	Part No.	Description	Model name MMK-UB****HP-UL		
			0151	0181	0241
201	43T09591	GRILLE OF AIR INLET ASSY	1	1	1
202	43T80351	AIR FILTER	2	2	2
203	43T00805	FRONT PANEL ASSY	1	1	1
204	43T00752	CAP SCREW ASSEMBLY	2	2	2
205	43T22354	HORIZONTAL LOUVER	1	1	1
206	43T72346	DRAIN PAN ASSY	1	1	1
207	43T20357	CROSS FLOW FAN ASSY	1	1	1
208	43T79322	DRAIN CAP	1	1	1
209	43T22360	VERTICAL LOUVER ASSY	1	1	1
210	43T22312	BEARING ASSY, MOLD	1	1	1
211	43T39385	BASE BEARING	1	1	1
212	43T03420	BACK BODY ASSY	1	1	1
213	43T49045	PIPE, SHIELD	1	1	1
214	43T44885	REFRIGERATION CYCLE ASSY	1	1	
214	43T44886	REFRIGERATION CYCLE ASSY			1
215	43T04378	PMV COVER ASSEMBLY	1	1	1
216	43T82357	PLATE, INSTALLATION	1	1	1
217	43T49043	HOLDER, PIPE	1	1	1
218	43T62387	CONDUIT MOUNT	1	1	1
219	43T62384	CONDUIT PARTITION A ASSENBY	1	1	1
220	43T63377	PLATE-HOLDER-SENSOR	1	1	1
221	43T39381	MOTOR BAND BACK	1	1	1
222	43T21543	FAN-MOTOR(WDF-340-30CA)	1	1	1
223	43T39382	MOTOR BAND FRONT	1	1	1
224	43T39384	MOTOR COVER	1	1	1
225	43T21478	MOTOR; STEPPING	1	1	1
226	43T70321	DRAIN HOSE	1	1	1
227	43T66415	WIRELESS REMOCO (WH-TE03NE)	1	1	1
228	43T83305	HOLDER, REMOTE CONTROL	1	1	1
229	43T62364	TERMINAL COVER ASSY	1	1	1
230	43T62365	CLAMP BASE ASSY	1	1	1
231	43T62382	CONDUIT PARTITION B ASSENBY	1	1	1
232	43T49405	PLASTIC BONNET 6.35DIA	1	1	
232	43T49406	PLASTIC BONNET 9.52DIA			1
233	43T82336	SOCKET	1	1	
233	43T82337	SOCKET			1
234	43T97320	NUT, FLARE, 1/4 IN	1	1	
234	43T97321	NUT, FLARE, 3/8 IN			1
235	43T49407	PLASTIC BONNET 12.7DIA	1	1	
235	43T49412	PLASTIC BONNET 15.88DIA			1
236	43T82338	SOCKET	1	1	
236	43T82339	SOCKET			1
237	43T97322	NUT, FLARE, 3/8 IN	1	1	
237	43T97323	NUT, FLARE, 5/8 IN			1
238	43T19321	FIX-P-SENSOR	1	1	1
239	43T19333	HOLDER, SENSOR	2	2	2
240	43T46519	COIL, PMV	1	1	1
241	43T46518	BODY, PMV	1	1	1
242	43T47424	STRAINER	1	1	1
243	43T91443	CARTON-BOX	1	1	1
244	43T91392	REINFORCEMENT FIBERBOARD ASSY	1	1	1
245	43T91334	PACKING CUSHION RIGHT	1	1	1
246	43T91335	PACKING CUSHION LEFT	1	1	1
247	43T62388	CONDUIT MOUNT	1	1	1
248	43T85969	INSTALLATION MANUAL	1	1	1
249	43T85971	OWNER'S MANUAL	1	1	1
250	43T63424	PACKING SENSOR ASSEMBLY	1	1	1
251	43T63418	PLATE FIX SENSOR	1	1	1

Indoor Unit (Part-E)



Location No.	Part No.	Description	N	Model name MMK-UB****HP-UL		
			0151	0181	0241	
401	43TNV646	PC BOARD ASSY (MCC-1696)	1	1	1	
402	43T60448	TERMINAL	1	1	1	
403	43T60435	SERV-TERMINAL	1	1	1	
404	43T50392	SENSOR, THERMOSTAT	1	1	1	
405	43T50410	TC-SENSOR	1	1	1	
406	43T50414	TC-SENSOR	1	1	1	
407	43T50306	TEMPERATURE SENSOR	1	1	1	
408	43T60548	ASM-HOUSING(PW)	1	1	1	
409	43T60546	ASM-HOSING(BUS)	1	1	1	
410	43T60545	ASM-HOUSING(REM)	1	1	1	
411	43T60539	ASM-HOUSING(MOV)	1	1	1	
412	43T6V932	PC BOARD ASSY	1	1	1	
413	43T63356	HOLDER-TA	1	1	1	

WARNINGS ON REFRIGERANT LEAKAGE

Check of Concentration Limit

The room in which the air conditioner is to be installed requires a design that in the event of refrigerant gas leaking out, its concentration will not exceed a set limit.

The refrigerant R454B which is used in the air conditioner is safe, without the toxicity or combustibility of ammonia, and is not restricted by laws to be imposed which protect the ozone layer. However, since it contains more than air, it poses the risk of suffocation if its concentration should rise excessively. Suffocation from leakage of R454B is almost non-existent. With the recent increase in the number of high concentration buildings, however, the installation of multi air conditioner systems is on the increase because of the need for effective use of floor space, individual control, energy conservation by curtailing heat and carrying power etc.

Most importantly, the multi air conditioner system is able to replenish a large amount of refrigerant compared with conventional individual air conditioners. If a single unit of the multi conditioner system is to be installed in a small room, select a suitable model and installation procedure so that if the refrigerant accidentally leaks out, its concentration does not reach the limit (and in the event of an emergency, measures can be made before injury can occur).

In a room where the concentration may exceed the limit, create an opening with adjacent rooms, or install mechanical ventilation combined with a gas leak detection device.

The concentration is as given below.

 $\label{eq:concentration} \frac{Total amount of refrigerant (lbs/ft(kg))}{Min. volume of the indoor unit installed room (ft^3(m^3))} \\ \leq Concentration limit (lbs/ft^3(kg/m^3))$

Refrigerant Concentration limit shall be in accordance with local regulation.

NOTE 1 :

If there are 2 or more refrigerating systems in a single refrigerating device, the amounts of refrigerant should be as charged in each independent device.



For the amount of charge in this example:
The possible amount of leaked refrigerant gas in rooms A, B and C is 22.046lbs (10kg).
The possible amount of leaked refrigerant gas in rooms D, E and F is 33.069lbs (15kg).

Important

NOTE 2 :

The standards for minimum room volume are as follows. 1) No partition (shaded portion)



2) When there is an effective opening with the adjacent room for ventilation of leaking refrigerant gas (opening without a door, or an opening 0.15% or larger than the respective floor spaces at the top or bottom of the door).



 If an indoor unit is installed in each partitioned room and the refrigerant piping is interconnected, the smallest room of course becomes the object.

But when a mechanical ventilation is installed interlocked with a gas leakage detector in the smallest room where the density limit is exceeded, the volume of the next smallest room becomes the object.



Mechanical ventilation device - Gas leak detector

CARRIER AIR CONDITIONING (THAILAND) CO., LTD.

144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI, AMPHUR MUANGPATHUMTHANI, PATHUMTHANI 12000, THAILAND