

#43593 - 3/14/19

Overview

- Field-replaceable electrochemical sensor module with self-test
- Field-selectable Voltage Outputs
- Optional Temperature and Humidity Measurement

The Carbon Monoxide Rough Service Sensor offers enhanced electrochemical sensing with outstanding accuracy at low concentrations. It features a ventilated enclosure and is ideal for parking ramps, equipment rooms, and warehouses.

The sensor has a CO range of 0 to 500 ppm with field-selectable outputs of 0 to 5, 1 to 5, 0 to 10 and 2 to 10 VDC. It includes optional humidity measurement with one of the above voltage outputs, and temperature via a 10K-2, 10K-3 or 20K thermistor.

The field-replaceable sensor module lasts approximately 7 years and is self-tested daily.



Specifications

Power

0 to 5 and 1 to 5 VDC output
9 to 40 VDC, 10 mA max.
12 to 28 VAC, 1.4 VA max.
0 to 10 VDC and 1 to 10 VDC output
12 to 40 VDC, 10 mA max.
12 to 28 VAC, 1.4 VA max.

CO Measurement Range

0 to 500 ppm

Field Wiring Terminals

Flying Leads, 20 AWG

Response Time

<80 seconds from 10% to 90% of range

Sensor Element Life

7 Years Typical

Field-selectable Voltage Outputs

0 to 5, 1 to 5, 0 to 10, and 2 to 10 VDC

Carbon Monoxide Sensor Accuracy

<200ppm = $\pm 3\%$ FS, 32 to 122°F (0 to 50°C)
201 to 500 ppm = $\pm 5\%$ FS, 50 to 122°F (10 to 50°C)

Temperature Sensor Accuracy (Thermistor Units)

| | |
|-----------------------|----------------------------------------------------------------------------|
| Sensor | Passive, NTC, 2 wire |
| Thermistor | Thermal resistor |
| Temp. Output (Std) | Resistance Accuracy $\pm 0.36^\circ\text{F}$, ($\pm 0.2^\circ\text{C}$) |
| Stability dissipation | < 0.036°F/Year, ($< 0.02^\circ\text{C}/\text{Year}$) Heat |
| Temp. Drift | 2.7 mW/°C |
| Probe range | <0.02°C per year -40° to 221°F (-40° to 105°C) |
| Sensitivity | Approximate @ 32°F (0°C) |
| Thermistor | Non-linier |

Humidity Sensor Accuracy

$\pm 2\%$ RH (20% to 80%) @ 25°C, Fully Compensated

Environmental Operation Range

Continuous: 14 to 122°F (0 to 50°C)

5 to 95%RH Noncondensing

Intermittent: -40 to 131°F (-40 to 55°C)

5 to 95%RH Noncondensing

Certifications

RoHS and CE

Specifications subject to change without notice.

#43593 - 3/14/19

Mounting

1. Mount the unit on a solid, non-vibrating surface 3 to 5 feet above floor level. Mount in a horizontal orientation with the enclosure hinge at the top as shown in Figure 3. Failure to do so may degrade the life of the sensor element. Do not mount near supply or return diffusers.
2. Use #10 (M5) screws on the four mounting feet of the enclosure. A pilot-hole makes mounting easier. Use the enclosure mounting feet to mark the pilot-hole locations.
3. Snug up the screws so that the foam backing is depressed but do not over-tighten or strip the screw threads.
4. Place the provided #6 screws into the holes on each site of the lid latch to make the cover tamper resistant.

Figure 2: Screw Hole Template. Drill center 7/8" hole for rear conduit entry.


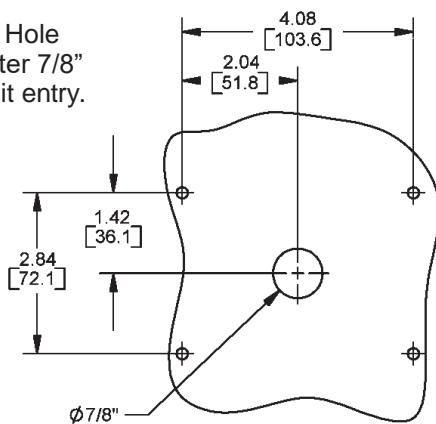


Figure 3: Rough Service Unit mounting

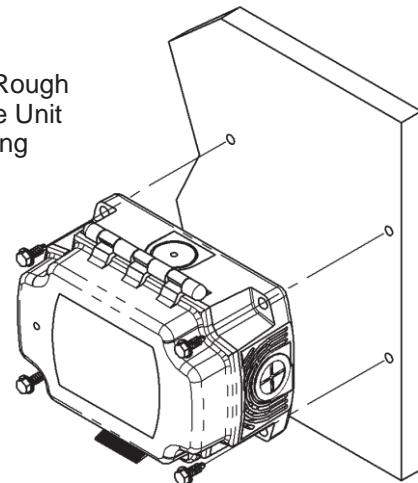

Termination

Carrier recommends using twisted pair of at least 22AWG and sealant filled connectors for all wire connections. Larger gauge wire may be required for long runs. All wiring must comply with the National Electric Code (NEC) and local codes.

Do NOT run this device's wiring in the same conduit as AC power wiring of NEC class 1, NEC class 2, NEC class 3 or with wiring used to supply highly inductive loads such as motors, contactors and relays. Tests show that fluctuating and inaccurate signal levels are possible when AC power wiring is present in the same conduit as the signal lines.



Carrier recommends wiring the product with power disconnected. Proper supply voltage, polarity and wiring connections are important to a successful installation. Not observing these recommendations may damage the product and void the warranty.

Termination (cont.)

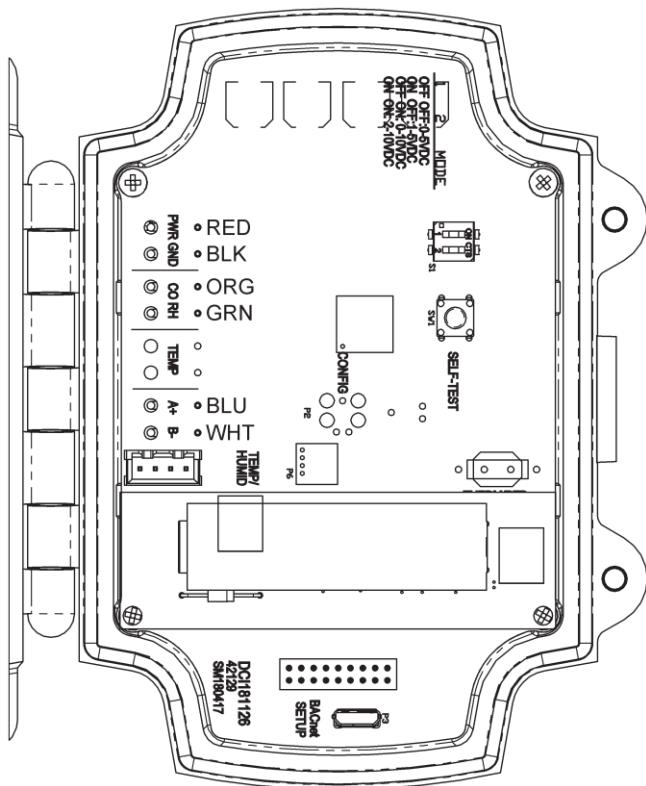


Figure 4: Field Wiring Terminals

WIRE TERMINATIONS

PWR (Red)

9 to 40 VDC or 12 to 28 VAC
for 0 to 5V and 1 to 5V

15 to 40 VDC or 15 to 28 VAC
for 0 to 10V and 2 to 10V Outputs

GND (Black)

Power and Analog Output Ground

CO (Orange)

Analog Output CO PPM Level (if enabled)

RH (Green)

Analog Output %RH Level (if enabled)

Temp (Varies)

Resistive Sensor Output (if enabled)

Keeping the Enclosure Air Tight After Termination

For the sensor to work correctly, the wiring entrance must remain airtight. If the sensor is mounted to a hollow wall and wired through its back, or wired with conduit, it is possible that a draft of clean air may fill the enclosure through the wiring opening. This draft may prevent the unit from measuring ambient Carbon Monoxide. Carrier recommends plugging the conduit at the enclosure. Included with the sensor is a foam plug to seal the ½ inch EMT. Place the wires into the plug as shown in Figure 6 and then insert the plug into the conduit sealing the conduit.

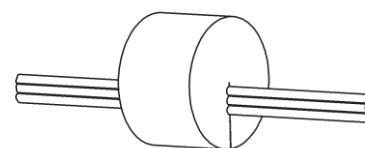


Figure 6:
Wires Through Foam Plug

#43593 - 3/14/19

Power Up/Self-Test

On initial power up, the unit performs a self-test to assure that the replaceable CO sensor module is not at the end of its life. This self-test takes approximately 60 seconds, and during this time, the Green LED will blink. When the self-test is complete, the Green LED will go to a steady “on” state and the unit will be fully operational.

Operation

The unit includes two switches to set the analog output voltage for the CO and optional %RH output. The unit also includes a self-test button.

ANALOG OUTPUT CONFIGURATION SWITCHES

Switches one and two of S1 are used to set the analog output voltage for the CO and optional %RH output. Available outputs are 0 to 5V, 1 to 5V, 0 to 10V, and 2 to 10V. See Table 1 at right for switch settings.

| Output | Switch 1 | Switch 2 |
|----------|----------|----------|
| 0 to 5V | Off | Off |
| 1 to 5V | On | Off |
| 0 to 10V | Off | On |
| 2 to 10V | On | On |

Table 1: Analog Output Switches

SELF-TEST BUTTON

The self-test button checks the CO sensor module to see if it is at the end of its life and needs replacing. The unit automatically conducts this test once a day, but the button allows additional testing if desired. When the button is pressed, the green LED will begin to blink, indicating that the unit is in self-test mode. The self-test can take up to 60 seconds. When the self-test is complete, the green light will go to a steady “on” state, indicating that there are no fault conditions. If the red LED blinks once slow and twice fast, this indicates that the CO sensor module is at end of life and should be replaced.

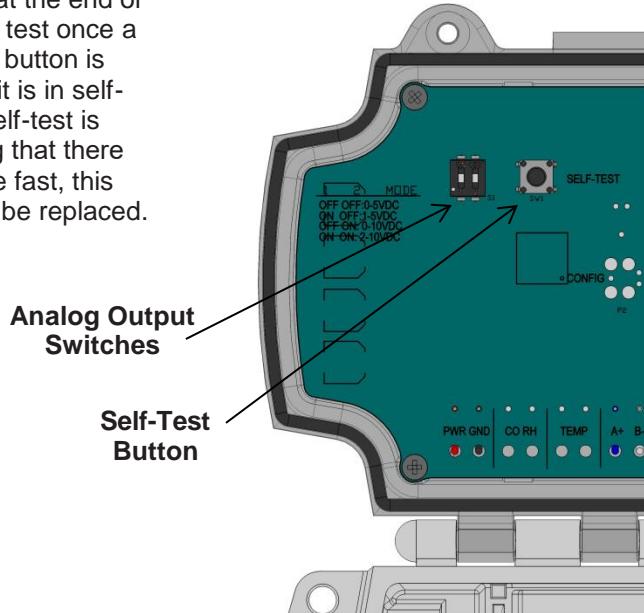


Figure 7:
Self-Test Button and Analog
Output Switches Location

Specifications subject to change without notice.

#43593 - 3/14/19

Status LEDs

The green and red Status LEDs are visible through the clear cover of the unit and indicate various sensor conditions as listed below.

GREEN STATUS LED

LED Lit - Power is applied and there are no fault conditions

LED Blinking - CO sensor is running a self-test

LED Off - Power is not applied or there is an error condition (see Red LED below)

RED STATUS LED

LED Blinking Fast - The unit detected an output ground fault or a failure of either the CO, Temperature or %RH sensors

LED Blinking Slow - CO alarm condition (CO PPM Level is above 300 ppm)

LED Blinking Once Slow and Twice Fast - The CO sensor is at the end of life (see "Maintenance" below)

LED Off - Power is not applied or there are no fault conditions

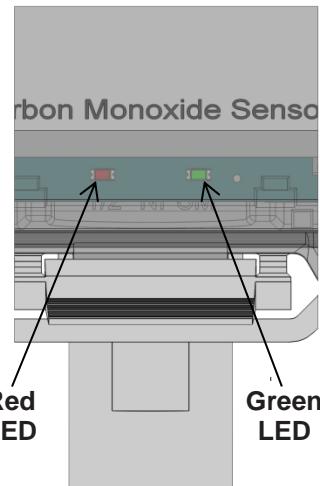


Figure 8: Status LED Location

Calibration

The Carbon Monoxide Sensor is factory calibrated and ready for operation after installation. The unit cannot be field calibrated. Each CO sensor module comes with a calibration certificate.

Maintenance

The Carbon Monoxide sensor should be vacuumed clean once a year or more, depending on the rate of accumulation of any dust or dirt. To avoid sensor damage, the unit **MUST NOT** be submerged in any liquids. Hosing or splashing of the unit with any liquids must also be avoided and may void the warranty.

The CO sensor module should be replaced if pushing the red LED blinks once slow and twice fast, every 7 years, or at the recalibration intervals required by the local jurisdiction. Factory calibrated replacement modules (Part# NSB-COS) are available from Carrier.

To replace the CO sensor module (Figure 9):

1. Remove the tamper-resistant screws and open the lid.
2. Remove power.
3. Remove the two screws from the CO sensor module.
4. For the next two steps, hold the sensor on the CO sensor module by the body, not the endcaps.
5. Remove the CO sensor module by pulling it straight off the transmitter.
6. Plug in the new CO sensor module by aligning the module's connector pins with the matching holes on the main circuit board and pushing the module straight into the main circuit board.
7. Replace the two screws on the CO sensor module.
8. Re-apply power.
9. Close the lid until it clicks, and replace the tamper-resistant screws.

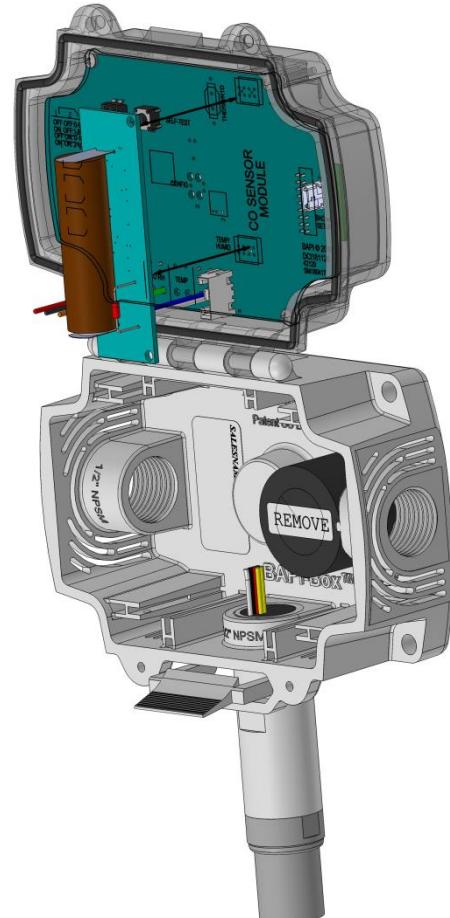


Figure 9: Inserting or Removing the CO sensor module

Specifications subject to change without notice.



#43593 - 3/14/19

Diagnostics

POSSIBLE PROBLEMS: POSSIBLE SOLUTIONS:

General troubleshooting

- Determine that the input is set up correctly in the controller's and building automation software.
- Check wiring for proper termination
- Check for corrosion at either the controller or the sensor. Clean off the corrosion, re-strip the interconnecting wire and reapply the connection. In extreme cases, replace the controller, interconnecting wire and/or sensor.
- Check that the wiring is good between the CO unit and the controller. To do this, label the wires at both ends and then disconnect the wires from the controller and the sensor. With the interconnecting wires separated at both ends, use a multimeter to measure the resistance from wire-to-wire. The meter should read either greater than 10 Meg-ohms, open or OL depending on the style of meter. Now connect the wires together at one end and measure the resistance from wire-to-wire with a multimeter at the other end. The meter should read less than 10 ohms for 22 gauge or larger wire and runs of 250 feet or less) The resistance may be slightly higher for smaller wires or longer runs. If either test fails, replace the wire.

Unit does not operate

- Cycle power.
- Disconnect the power wires from the power source and check for proper power at the source as specified in the Termination section on page 2. If the voltage is outside the specifications, troubleshoot the power source. Reconnect power wires to the source when finished
- Disconnect the power wires at the sensor and verify that the power is the same at the sensor as at the power source. If the voltage is different at the sensor from the source, troubleshoot the wiring. Reconnect power wires to sensor when finished.
- Measure the power at the sensor with the power wires connected to the power source and to the sensor.