

VVT® DAMPER CONTROL PARALLEL (INTERMITTENT) FAN TERMINALS WITH UP TO 2 STAGES OF ELECTRIC HEAT PRESSURE INDEPENDENT CARRIER CONTROL PACKAGE NO. 8807

Application:

Parallel fan powered terminals equipped with the above control package are designed to work with cooling only primary air source equipment and provide pressure independent, variable volume, variable temperature (VVT) control when connected to a VVT zone thermostat. The intermittent terminal fan is used to pull in ceiling plenum air as the first stage of heat and provide minimum airflow when the heat stages are energized. These systems allow a low minimum inlet static pressure, permitting the use of smaller, more energy efficient fan systems. Two-stage electric reheat coils located at each terminal can provide additional zone heating when equipment is providing cooling. The minimum airflow set point may be set to zero. The fan provides airflow across the heat coil when the primary air source is off.

A wall-mounted thermostat located in each zone will sense load requirements and activate the control sequence to accommodate cooling or heating. Load requirements and sound level acceptability govern terminal sizing. This control package provides the following sequences of operations:

- A. Cooling: When the primary air source is providing cooling (as detected by the primary air sensor). Refer to numbers on flow diagram. See Fig. 1.
- 1-2 indicates that maximum primary airflow is established by the user-defined maximum airflow set point until the zone comes under control at 2.
 - Beginning at 2, the primary airflow is regulated over a throttling range by the damper until the user-defined minimum airflow set point is reached at 3.
 - 3-4 indicates that, should the zone temperature continue to fall, the damper will hold primary air at the minimum airflow set point.

NOTE: The minimum airflow set point could be set to zero by the user. In this case, the damper will hold a fully closed position if the zone temperature continues to fall.

- B. Electric reheat: When the primary air source is cooling (as detected by the primary air sensor), refer to numbers on flow diagram.

- As the zone temperature falls below the occupied heating set point, the Occupied Heating mode is in effect at 4.
- At 1.5 degrees below the heat set point, the terminal fan will be energized. The electric heat stages are staged based on zone demand. If the demand is greater than 2.0 degrees the first stage will be energized greater than 2.5 degrees the second stage will be energized.
- As the zone temperature rises, the stages of heat that were energized will be turned off. When the zone demand is less than 0.5 degrees F, the terminal fan is deenergized.

- C. Unoccupied time period: (cooling)

When the unoccupied period is reached, the user-defined occupied cooling set point is reset upward to a user-defined unoccupied cooling set point. The damper will throttle in the same manner (as per A) during the unoccupied period, using the unoccupied cooling set point.

- D. Unoccupied time period: (auxiliary heat)

When the unoccupied period is reached, the user-defined occupied heating set point is reset downward to a user-defined unoccupied heating set point. The electric heater and fan will operate as required to satisfy the heating load.


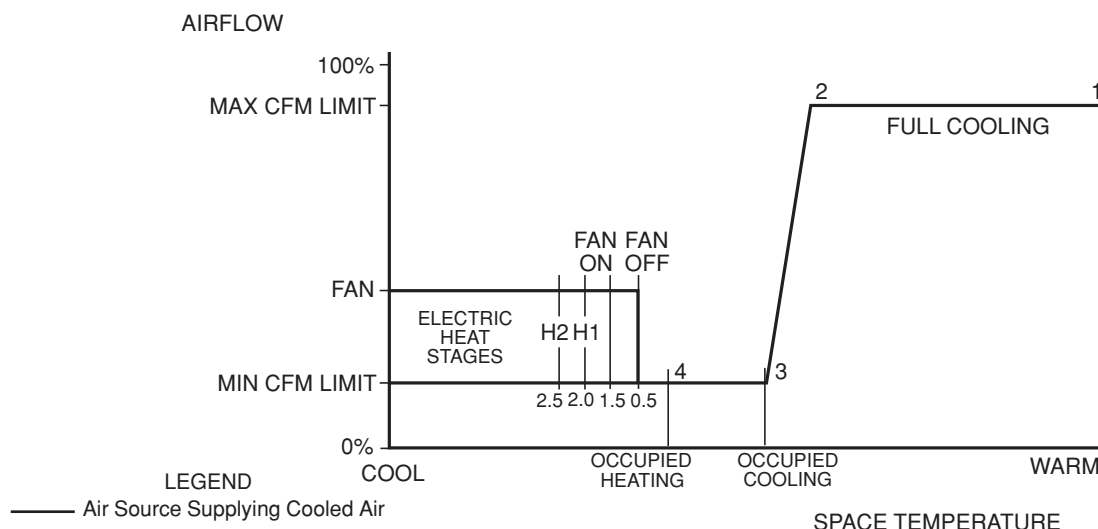


Figure 1 - Sequence of Operation for VVT, Cooling with Staged Electric Heat

PRODUCT INFORMATION IS SUBJECT TO CHANGE WITHOUT NOTICE.

07/14/2003

JOB NAME	JOB NUMBER	LOCATION	PAGE NUMBER	DRAWING NUMBER
BUYER	BUYER #	SHEET	1 OF 2	45M/N/R-V-8807

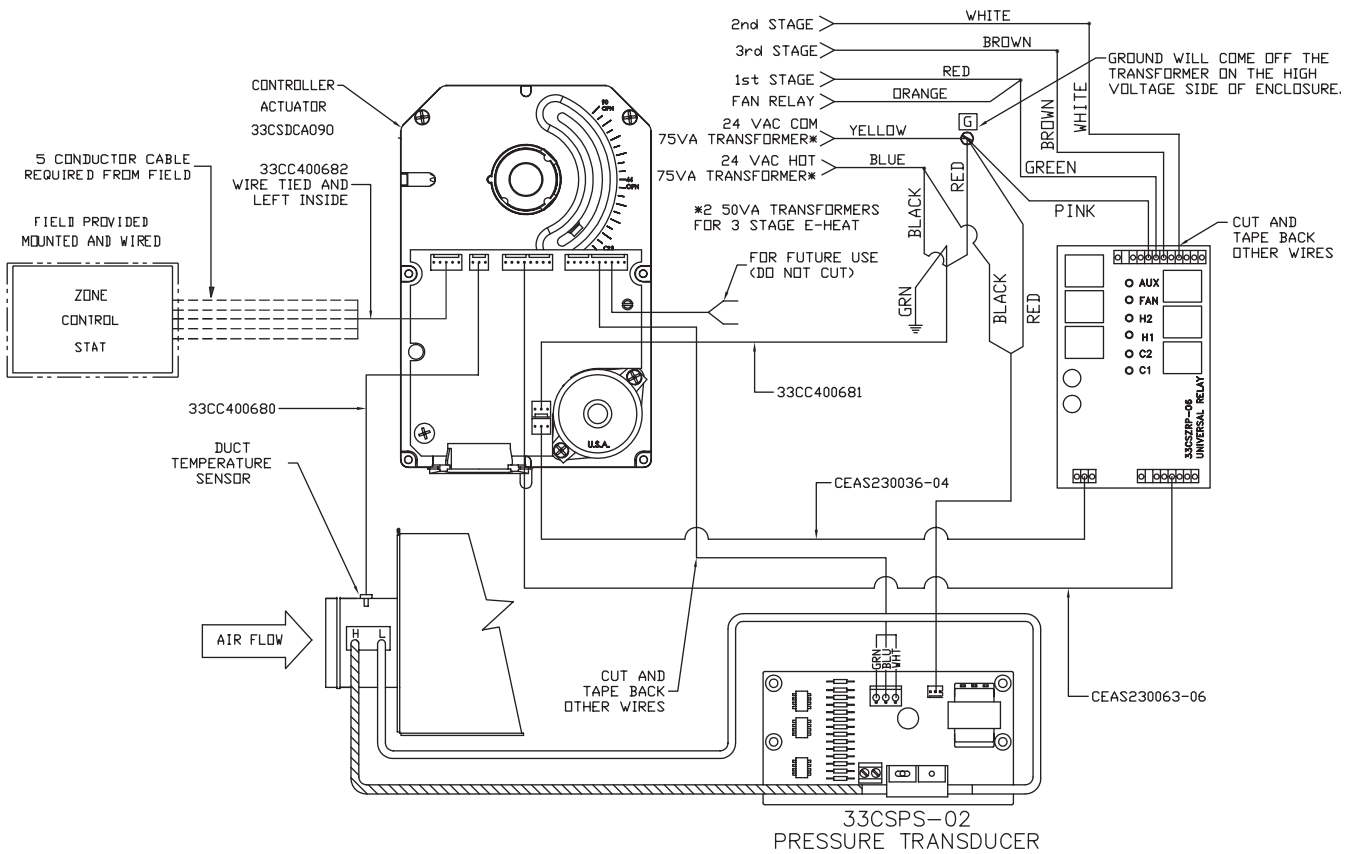

PRODUCT INFORMATION IS SUBJECT TO CHANGE WITHOUT NOTICE.

07/14/2003