

Installation, Start-Up and Service Instructions

CONTENTS

	Page
SAFETY CONSIDERATIONS	1
INSTALLATION	1-13
Step 1 — Provide Unit Support	1
• ROOF CURB	
• SLAB MOUNT	
Step 2 — Field Fabricate Ductwork	1
Step 3 — Install External Trap for Condensate Drain	2
Step 4 — Rig and Place Unit	2
• POSITIONING	
Step 5 — Install Flue Hood	7
Step 6 — Install Gas Piping	7
Step 7 — Make Electrical Connections	7
• FIELD POWER SUPPLY	
• FIELD CONTROL WIRING	
• HEAT ANTICIPATOR SETTINGS	
Step 8 — Adjust Evaporator-Fan Speed	9
START-UP	14
SERVICE	15-20

SAFETY CONSIDERATIONS

Installation and servicing of air conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair or service air conditioning equipment.

Untrained personnel can perform basic maintenance functions of cleaning coils and filters and replacing filters. All other operations should be performed by trained service personnel. When working on air conditioning equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that apply.

Follow all safety codes. Wear safety glasses and work gloves. Use quenching cloth for unbrazing operations. Have fire extinguishers available for all brazing operations.

⚠ WARNING



Disconnect gas piping from unit when leak testing at pressure greater than ½ psig. Pressures greater than ½ psig will cause gas valve damage resulting in hazardous condition. If gas valve is subjected to pressure greater than ½ psig, it *must* be replaced before use. When pressure testing field-supplied gas piping at pressures of ½ psig or less, a unit connected to such piping must be isolated by manually closing the gas valve(s).

⚠ WARNING

Before performing service or maintenance operations on unit, turn off main power switch to unit. Electrical shock could cause personal injury.

INSTALLATION

Unit is shipped in the vertical discharge configuration. To convert to horizontal discharge application, cut imprint area from front panels using sheet-metal cutters. See Fig. 1. Duct openings in basepan must be covered by panels provided in the Accessory Duct Cover Package (part number 50LJ900186). Using screws provided in accessory package, install covers on duct openings in basepan of unit with insulation-side down. Seals around openings must be tight.

IMPORTANT: An external filter kit **MUST** be used or the filters **MUST** be field-installed outside the unit on horizontal discharge applications with accessory economizer or two-position damper. Otherwise, the economizer or two-position damper must be partially removed to access the filters. The area of the field-installed filters should be equal to the area of the factory-installed filters.

Step 1 — Provide Unit Support

ROOF CURB — Assemble and install accessory roof curb in accordance with instructions shipped with curb. See Fig. 2. Install insulation, cant strips, roofing and counter flashing as shown. *Ductwork must be attached to curb, not to the unit.* If gas, electric power or control power is to be routed through the curb, attach the accessory thru-the-curb service connection plates to the roof curb in accordance with the accessory installation instructions. Connection plates must be installed before unit can be set on roof curb.

IMPORTANT: The gasketing of the unit to the roof curb is critical for water integrity. Install gasket supplied with the roof curb as shown in Fig. 2. Improperly applied gasket can result in air leaks and poor unit performance.


Curb should be level. Unit leveling tolerances are shown in Fig. 3. This is necessary for unit drain to function properly. Refer to Accessory Roof Curb Installation Instructions for additional information as required.

SLAB MOUNT (Horizontal Units Only) — Provide a level concrete slab that extends a minimum of 6 in. beyond unit cabinet. Install a gravel apron in front of condenser coil inlet to prevent grass and foliage from obstructing airflow.

NOTE: Horizontal units may be installed on a roof curb if required.

Step 2 — Field Fabricate Ductwork — Secure all ducts to roof curb and building structure on vertical units. *Do not connect ductwork to unit.* For horizontal applications, field-supplied flanges should be attached to horizontal discharge openings and all ductwork should be secured to the flanges. Insulate and weatherproof all external ductwork, joints and roof openings with counter flashing and mastic in accordance with applicable codes.

Ducts passing through an unconditioned space must be insulated and covered with a vapor barrier.

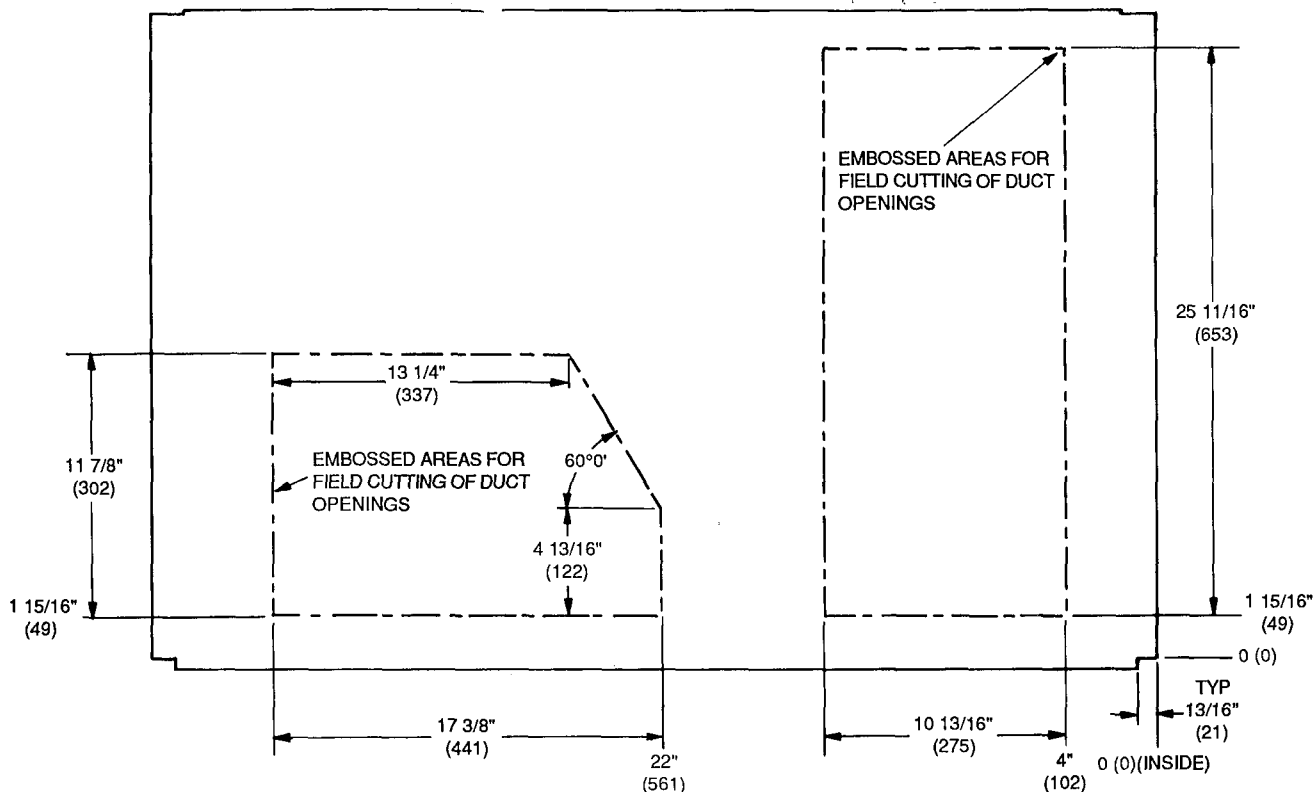

NOTE: Dimensions in () are in millimeters.

Fig. 1 — Horizontal Conversion Imprint Dimensions

If a plenum return is used on a vertical unit, the return should be ducted through the roof deck to comply with applicable fire codes.

A minimum clearance is not required around ductwork. Cabinet return air static shall not exceed $-.35$ in. wg with economizer or $-.45$ in. wg without economizer.

Step 3 — Install External Trap for Condensate Drain

— All units must have an external trap added for condensate drainage. A $\frac{3}{4}$ -in. NPT connection is located on the side of the unit. Use a trap at least 4-in. deep and protect against freeze-up.

If drain line is run to a drain, pitch line away from unit at one in. per 10 ft of run. Do not use a pipe size smaller than the unit connection. See Fig. 4 for more details.

Step 4 — Rig and Place Unit — Inspect unit for transportation damage. File any claim with transportation agency. Keep unit upright and do not drop. Spreader bars are not required if top crating is left on unit. Rollers may be used to move unit across a roof. Level by using unit frame as a reference. See Table 1 and Fig. 5 for additional information. Operating weight is shown in Table 1 and Fig. 5

Lifting holes are provided in base rails as shown in Fig. 6. Refer to rigging instructions on unit.

⚠ CAUTION

All panels must be in place when rigging.

POSITIONING — Maintain clearance around and above unit to provide minimum distance from combustible materials, proper airflow and service access. See Fig. 6. A properly positioned unit will have the following clearances between unit and roof curb: $\frac{1}{4}$ -in. clearance between roof curb and base rails on each side and front of unit; $1\frac{1}{2}$ -in. clearance between roof curb and rear of unit. (See Fig. 2, section C-C.)

Do not install unit in an indoor location. Do not locate unit air inlets near exhaust vents or other sources of contaminated air.

Be sure that unit is installed such that snow will not block the combustion intake or flue outlet.

Unit may be installed directly on wood flooring or on Class A, B, or C roof-covering material when roof curb is used.

Although unit is weatherproof, guard against water from higher level runoff and overhangs.

Locate mechanical draft system flue assembly at least 48 in. from any opening through which combustion products could enter the building, and at least 48 in. from an adjacent building. When unit is located adjacent to public walkways, flue assembly must be at least 7 ft above grade.

Flue vent discharge must have a minimum horizontal clearance of 4 ft from electric and gas meters, gas regulators, and gas relief equipment.

Flue gas can deteriorate building materials. Orient unit such that flue gas will not affect building materials

Adequate combustion-air space must be provided for proper operation of this equipment. Be sure that installation complies with all local codes and Section 5.3, Air for Combustion and Ventilation, NFPA (National Fire Protection Association) 96, ANSI (American National Standards Institute) Z223.1-1984 and addendum Z223.1a-1987. In Canada, installation must be in accordance with the CAN1.B149.1 and CAN1.B149.2 installation codes for gas burning appliances.

After unit is in position, remove polyethylene shipping wrapper and rigging skids.

NOTES:

- 1 Roof curb accessory is shipped unassembled
- 2 Insulated panels.
- 3 Dimensions in [] are in millimeters
- 4 Roof Curb: galvanized steel
- 5 Attach ductwork to curb (Flanges of duct rest on curb.)
- 6 Service clearance is 4 ft on each side
- 7  Direction of airflow

50
50
U
48LJ

0'-3" [76]

0'-3" [76]

1'-7 7/16" [341]

0'-0 7/16" [111] (BOLT HEADS)

0'-0 7/16" [111] (BOLT HEADS)

1'-7 13/16" [504]

0'-3" [76]

3'-0" [914]

1'-1 1/8" [334]

0'-0 7/16" [111] (BOLT HEADS)

0'-0 7/16" [111] (BOLT HEADS)

2'-7 5/8" [803]

SUPPLY-AIR OPENING

RETURN-AIR OPENING

C

C

A

A

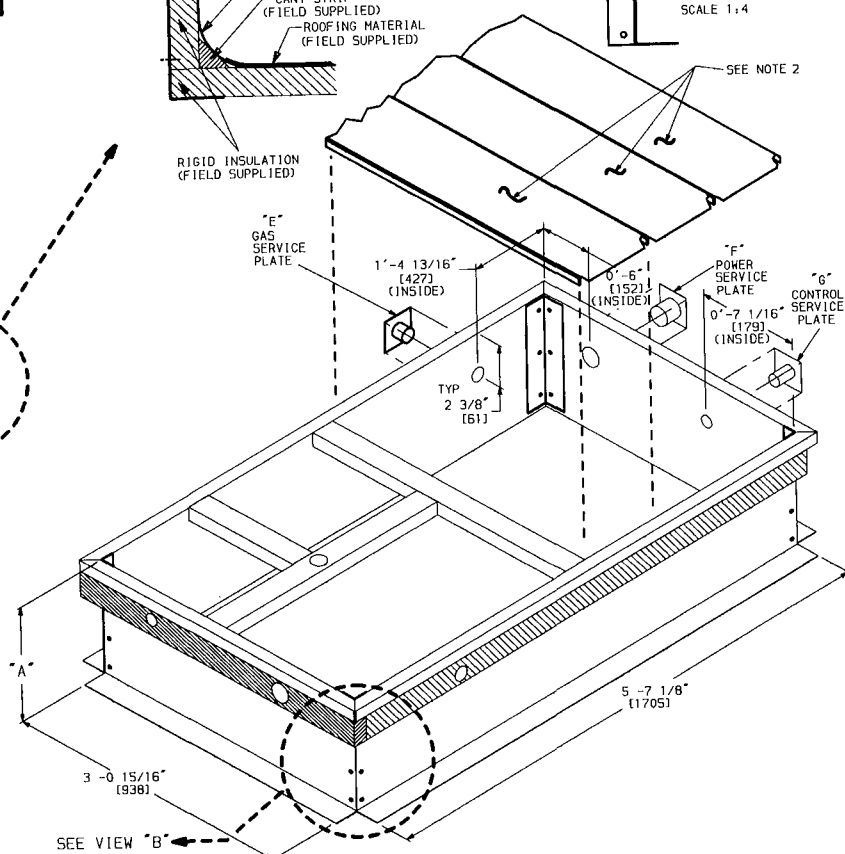
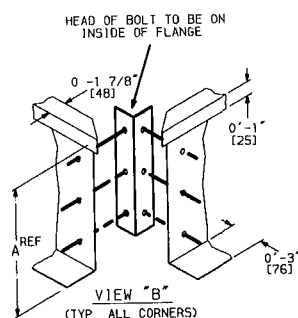
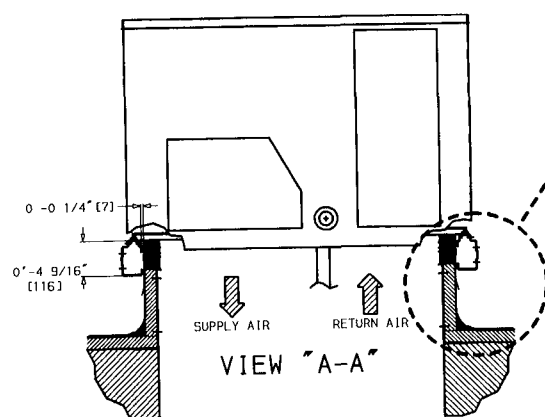
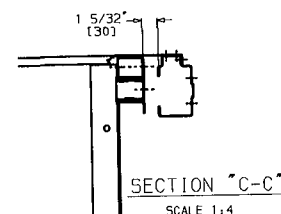
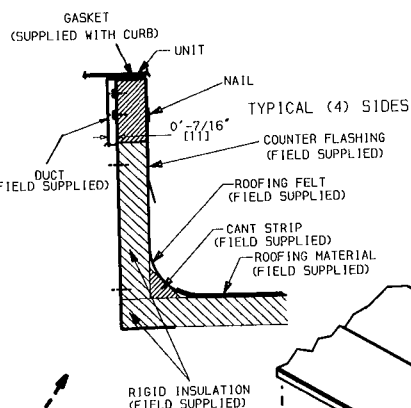


Fig. 2 — Roof Curb Dimensions



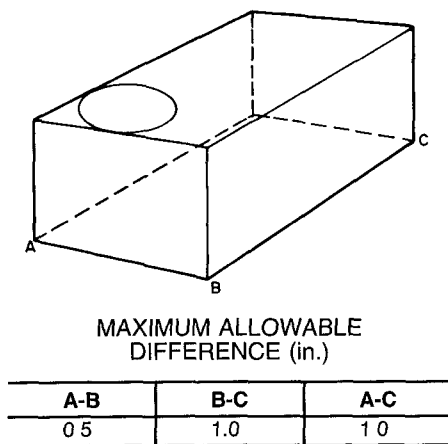


Fig. 3 – Unit Leveling Tolerances

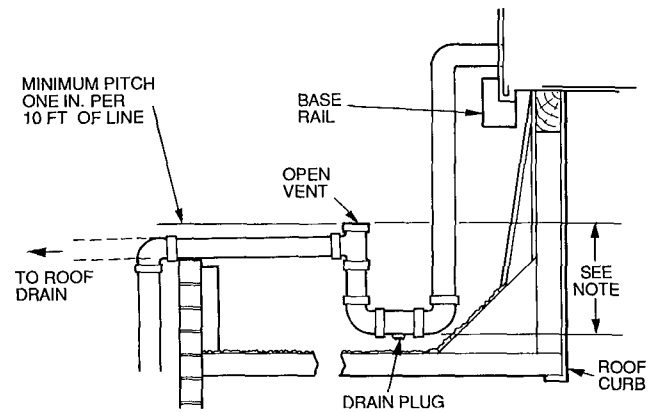

NOTE: Trap should be deep enough to offset maximum unit static difference. A 4-in. trap is recommended.

Fig. 4 – External Trap Condensate Drain

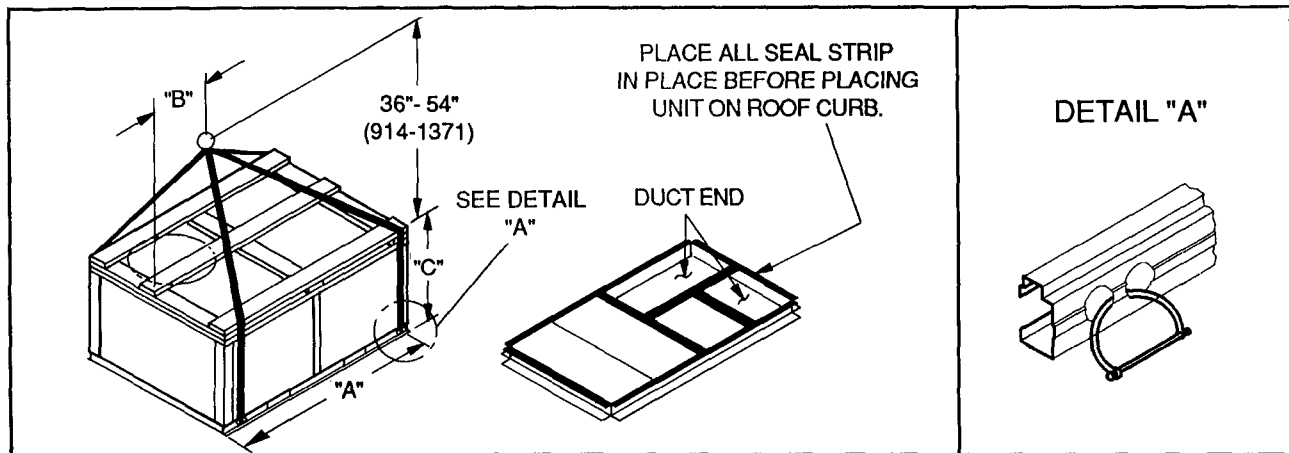

NOTES:

1. Dimensions in () are in millimeters.
2. Hook rigging shackles through holes in base rail, as shown in detail "A". Holes in base rails are centered around the unit center of gravity. Use wooden top skid when rigging to prevent rigging straps from damaging unit.
3. Unit weights do not include economizer. See Table 1 for economizer weights.

UNIT	MAX WEIGHT		A		B		C	
	Lb	Kg	In.	mm	In.	mm	In.	mm
48LJE004	530	240	73.69	1872	35.5	902	32.52	826
48LJD/LJE005	540	245						
48LJD/LJE006	560	254						
48LJD/LJE007	615	279						

⚠ CAUTION

All panels must be in place when rigging.

Fig. 5 – Rigging Details


Table 1 — Physical Data

BASE UNIT 48	LJE004	LJD/LJE005	LJD/LJE006	LJD/LJE007
NOMINAL CAPACITY	3	4	5	6
OPERATING WEIGHT (lb)				
Unit	530	540	560	615
With Economizer	564	574	594	649
Roof Curb	115	115	115	115
COMPRESSOR			Hermetic	
Quantity	1	1	1	1
Oil (oz)	55	55	70	65
REFRIGERANT TYPE			R-22	
Operating Charge (lb-oz)	6-0	7-6	8-3	9-12
CONDENSER FAN			Propeller	
Quantity...Diameter (in.)	1 .26	1 .26	1...26	1. 26
Nominal Cfm	4600	4100	4100	4100
Motor Hp...Rpm	1/3... 850	1/3... 850	1/3... 850	1/3... 850
CONDENSER COIL		Enhanced Copper Tubes, Aluminum Lanced Fin		
Rows...Fins/in.	1...17	2.. 17	2...17	2 .17
Total Face Area (sq ft)	12 25	12 25	12.25	12.25
EVAPORATOR FAN			Centrifugal	
Size (in.)	10 x 10	10 x 10	10 x 10	10 x 10
Type Drive	Direct	Direct	Belt	Belt
Nominal Cfm	1200	1600	2000	2400
Maximum Continuous Bhp	34	81	1.70	2.40
Motor Frame	48	48	56	56
Nominal Rpm High/Low	860/845	1080/970	—	—
Fan Rpm Range	—	—	875-1190	1070-1460
Motor Bearing Type	Ball	Ball	Ball	Ball
Maximum Fan Rpm	2100	2100	2100	2100
Motor Pulley Pitch Diameter A/B (in.)	—	—	2.8-3.8	2.8-3.8
Fan Pulley Pitch Diameter (in.)	—	—	5.5	4.5
Belt — Type...Length (in.)	—	—	A .40	A .39
Pulley Center Line Distance (in.)	—	—	14.7-15.5	14.7-15.5
Speed Change Per Full Turn of Movable Pulley Flange (rpm)	—	—	63	79
Movable Pulley Maximum Full Turns from Closed Position	—	—	5	5
Factory Setting — Full Turns Open	—	—	3	3
Factory Speed Setting (rpm)	—	—	1001	1230
Fan Shaft Diameter at Pulley (in.)	—	—	5/8	5/8
EVAPORATOR COIL		Enhanced Copper Tubes, Aluminum Double Wavy Fins, Acutrol™ Feed Device		
Rows...Fins/in.	2 .15	2 .15	3.. 15	4.. 15
Total Face Area (sq ft)	4 17	5.5	5.5	5 5
FURNACE SECTION				
Burner Orifice Diameter (in. ...drill size)*				
Natural Gas — Std	.113 .33	.113 .33	.113 .33	.113 .33
Liquid Propane — Alt	.089...43	.089...43	.089 .43	.089...43
Thermostat Heat Anticipator Setting (amps)				
208/230/460 v	1.0	1.0	1.0	1.0
Gas Input	74,000	74,000/115,000	74,000/115,000	74,000/115,000
Efficiency (Steady State) (%)	80	80	80	80
Temperature Rise Range	25-55	25-55/35-65	25-55/35-65	25-55/35-65
Manifold Pressure (in. wg)				
Natural Gas — Std	3.5	3.5	3.5	3.5
Liquid Propane — Alt	3.5	3.5	3.5	3.5
Maximum Static Pressure (in. wg)	.75	.75	.75	.75
Field Gas Connection Size (in.)	.5	.5	.5	.5
OUTDOOR-AIR INLET SCREENS			Cleanable	
Quantity...Size (in.)			1 .20 x 24 x 1	
RETURN-AIR FILTERS			Disposable	
Quantity...Size (in.)			2 .16 x 25 x 2	

LEGEND

Bhp — Brake Horsepower

*The 48LJD005-007 and 48LJE004 (74,000 Btuh) units have 2 burners.
The 48LJE005-007 (115,000 Btuh) units have 3 burners.

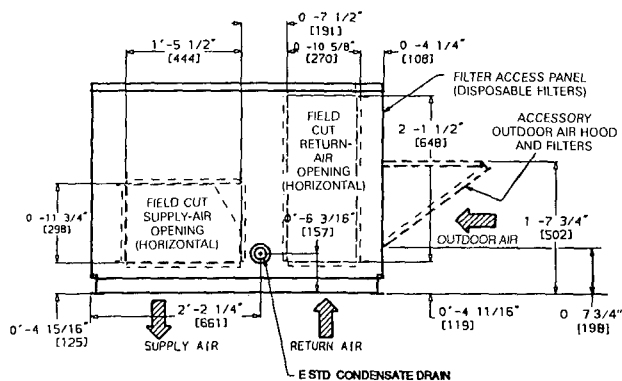


RIGHT SIDE

NOTES:

- 1 Dimensions in [] are in millimeters
- 2 Center of Gravity
- 3 Direction of airflow
- 4 On vertical discharge units, ductwork is to be attached to accessory roof curb only. For horizontal discharge units, field-supplied flanges should be attached to horizontal discharge openings and all ductwork should be attached to the flanges.
- 5 Minimum clearance (local codes or jurisdiction may prevail):
 - a Between unit, flue side and combustible surfaces, 36 inches
 - b Bottom to combustible surfaces (when not using curb), zero inches
 - c Condenser coil for proper airflow, 36-in. one side, 12 in. the other. The side getting the greater clearance is optional.
 - d Overhead, 60 in. to assure proper condenser fan operation.
 - e Horizontal supply and return end, zero inches.
 - f Between units, control box side, 42 in. per NEC
 - g Between unit and ungrounded surfaces, control box side, 36 in. per NEC
 - h Between unit and block or concrete walls and other grounded surfaces, control box side, 42 in. per NEC
- 6 With the exception of the clearance for the condenser coil and combustion side, as stated in Notes 5a, b, and c, a removable fence or barricade requires no clearance.
- 7 Units may be installed on combustible floors made from wood or class A, B, or C roof covering material.


Connection Sizes	
A	1 3/8" Dia [35] Field Power Supply Hole
B	2" Dia [50.5] Power Supply Knockout
C	2 1/8" Dia [55] Charging-Port Hole
D	7/8" [22] Field Control Wiring Hole
E	3/4" Condensate Drain
F	1/2"-14 NPT Gas Connection

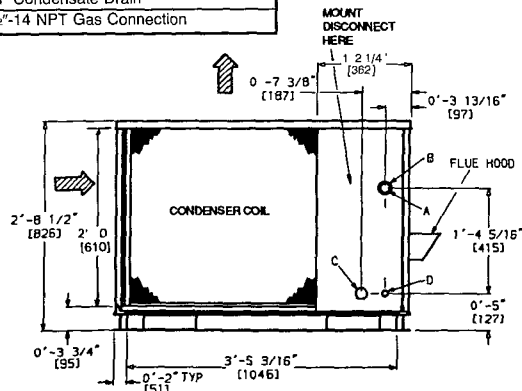


LEFT SIDE

UNIT	STD UNIT WEIGHT		ECONOMIZER WEIGHT		CORNER WEIGHT (A)		CORNER WEIGHT (B)	
	Lb	Kg	Lb	Kg	Lb	Kg	Lb	Kg
48LJE004	530	240	30	14	104	47.2	97	44.0
48LJD/LJE005	540	245	30	14	106	48.1	98	44.5
48LJD/LJE006	560	254	30	14	110	49.9	102	46.3
48LJD/LJE007	615	279	30	14	120	54.4	112	50.8

UNIT	CORNER WEIGHT (C)		CORNER WEIGHT (D)	
	Lb	Kg	Lb	Kg
48LJE004	159	72.1	171	77.6
48LJD/LJE005	162	73.5	174	78.9
48LJD/LJE006	168	76.2	180	81.6
48LJD/LJE007	185	83.9	198	89.8

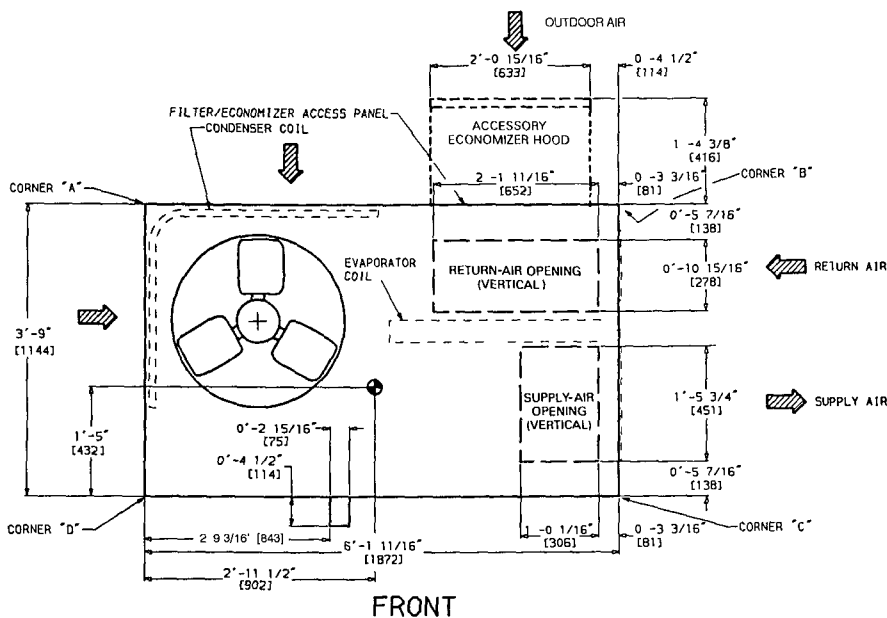

FRONT

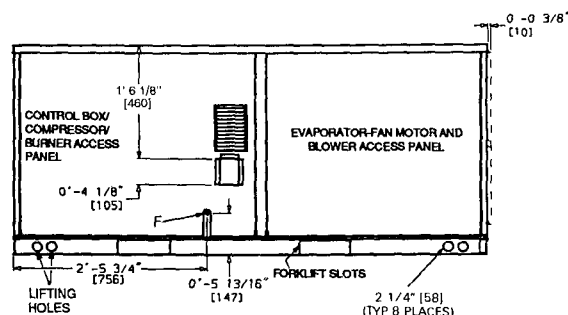

FRONT

Fig. 6 – Base Unit Dimensions

Step 5 — Install Flue Hood — Flue hood and screen are shipped screwed to the burner compartment access panel. Remove from shipping location and using screws provided, install flue hood and screen in location shown in Fig. 6 and 7.

Step 6 — Install Gas Piping — Unit is equipped for use with type of gas shown on nameplate. Refer to local building codes, or in the absence of local codes, to ANSI Z223.1-1984 and addendum Z223-1A-1987 entitled National Fuel Gas Code. In Canada, installation must be in accordance with the CAN1.B149.1 and CAN1.B149.2 installation codes for gas burning appliances.

Gas pressure at unit gas connection must not be less than 4 in. wg or greater than 13.0 in. wg while unit is operating.

Size gas supply piping for 0.5 in. wg maximum pressure drop. Do not use supply pipe smaller than unit gas connection. Support gas piping as shown in the table in Fig. 8. For example, a 3/4-in. gas pipe must have one field-fabricated support beam every 8 ft. Therefore, an 18-ft long gas pipe would have a minimum of 2 support beams, a 48-ft long pipe would have a minimum of 6 support beams.

See Fig. 8 for typical pipe guide and locations of external manual main shutoff valve.

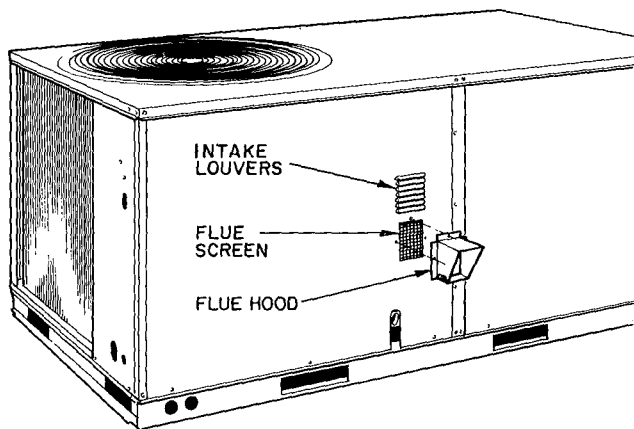


Fig. 7 — Flue Hood Details

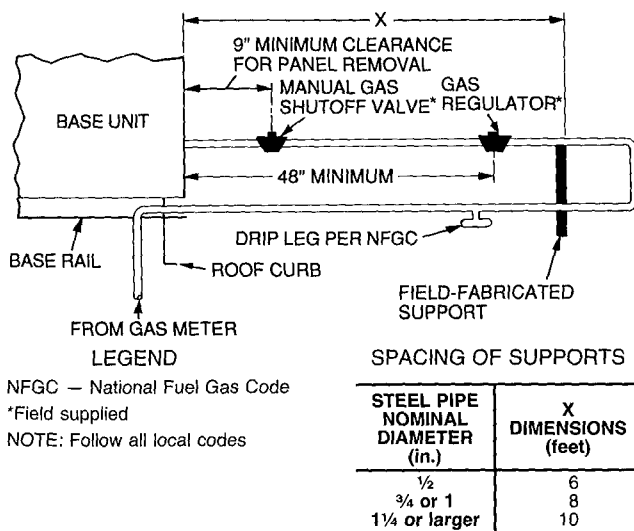


Fig. 8 — Gas Piping Guide (With Accessory Thru-the-Curb Service Connections)

Step 7 — Make Electrical Connections

⚠ WARNING

Unit cabinet must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur. This ground may consist of electrical wire connected to unit ground lug in control compartment, or conduit approved for electrical ground when installed in accordance with NEC (National Electrical Code) ANSI/NFPA (National Fire Protection Association) 70-1987 and local electrical codes. *Do not use gas piping as an electrical ground.* Failure to follow this warning could result in the installer being liable for personal injury of others.

FIELD POWER SUPPLY — All units except 208/230-v units are factory wired for the voltage shown on the nameplate. If the 208/230-v unit is to be connected to a 208-v power supply, the transformer *must* be rewired by moving the black wire from the 230-v orange wire on the transformer and connecting it to the 200-v red wire from the transformer. The end of the orange wire must then be insulated.

Refer to unit label diagram for additional information. Wiring leads are provided for field service. Use factory-supplied splices or UL (Underwriters' Laboratories) approved copper/aluminum connector.

When installing units, provide a disconnect per NEC.

All field wiring must comply with NEC and local requirements. In Canada, electrical connections must be in accordance with CSA (Canadian Standards Association) C22.1 Canadian Electrical Code Part 1.

Install conduit through side panel openings indicated in Fig. 6. Route power lines through connector to terminal connections as shown in Fig. 9.




Voltage to compressor terminals during operation must be within voltage range indicated on unit nameplate (also see Table 2). On 3-phase units, voltages between phases must be balanced within 2% and the current within 10%. Use the formula shown in Table 2, Note 2 to determine the % voltage imbalance. Operation on improper line voltage or excessive phase imbalance constitutes abuse and may cause damage to electrical components. Such operation would invalidate any applicable Carrier warranty.

FIELD CONTROL WIRING — Install a Carrier-approved accessory thermostat assembly according to installation instructions included with the accessory. Locate thermostat assembly on a solid wall in the conditioned space to sense average temperature in accordance with thermostat installation instructions. Connect thermostat wires to terminal board.

NOTE: For wire runs up 50 ft, use no. 18 AWG (American Wire Gauge) insulated wire (35 C minimum). For 50 to 75 ft, use no. 16 AWG insulated wire (35 C minimum). For over 75 ft, use no. 14 AWG insulated wire (35 C minimum). All wire larger than no. 18 AWG cannot be directly connected to the thermostat and will require a junction box and splice at the thermostat.

Pass the control wires through the hole provided in the end panel; then feed wires through the raceway built into the corner post to the 24-v barrier located on the left side of the control box. See Fig. 10. The raceway provides the UL required clearance between high- and low-voltage wiring.

HEAT ANTICIPATOR SETTINGS — Set heat anticipator settings at 1.0 amp.

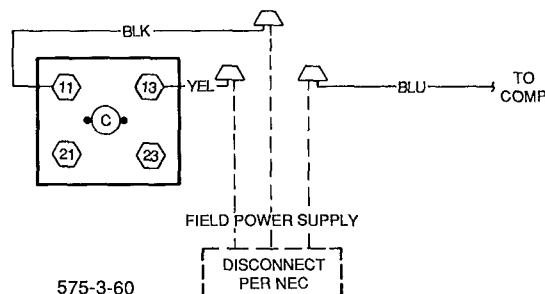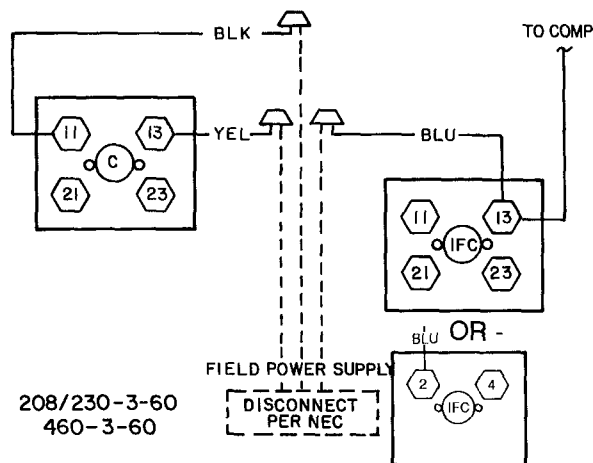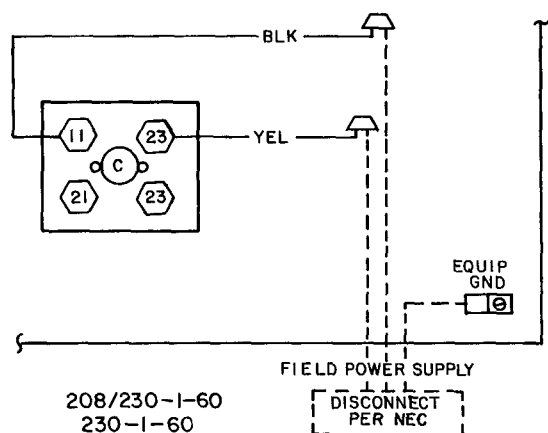

LEGEND

C — Contactor
COMP — Compressor
EQUIP — Equipment
GND — Ground
IFC — Indoor (Evaporator) Fan Contactor
NEC — National Electrical Code

Fig. 9 — Power Wiring Connections

Table 2 — Electrical Data

UNIT	NOMINAL V-PH-HZ	VOLTAGE RANGE		COMPR (each)		OFM	IFM	COMBUSTION FAN MOTOR	POWER SUPPLY		DISCONNECT SIZE	
		Min	Max	RLA	LRA	FLA	FLA	FLA	MCA	MOCP*	FLA	LRA
48LJE004 (3 Tons)	208/230-1-60	187	254	17.9	93	1.9	2.8	57	27 1/27 1	35/35	26/26	105/105
	208/230-3-60	187	254	11.2	80	1.9	2.8	57	18 7/18 7	25/25	18/18	92/92
	460-3-60	414	508	6.1	40	1.0	1.5	30	10.1	15	10	46
	575-3-60	518	632	4.5	29	1.9	2.8	57	10.3	15	11	41
48LJD/LJE 005 (4 Tons)	208/230-1-60	187	254	24.8	127	1.9	3.8	57	36 7/36 7	45/45	35	141
	208/230-3-60	187	254	15.7	99	1.9	3.8	57	25 3/25 3	30/30	25	113
	460-3-60	414	508	7.8	50	1.0	1.9	30	12.6	20	12	106
	575-3-60	518	632	5.5	40	1.9	3.8	57	12.6	20	13	94
48LJD/LJE 006 (5 Tons)	230-1-60	187	254	27.8	135	1.9	8.8	57	45.5	60	44	184
	208/230-3-60	187	254	19.2	105	1.9	4.0	57	29.9/29.9	40/40	29/29	136/136
	460-3-60	414	508	9.6	55	1.0	1.8	30	14.8	20	14	75
	575-3-60	518	632	8.3	45	1.9	8.8	57	21.1	25	22	94
48LJD/LJE 007 (6 Tons)	208/230-3-60	187	254	21.9	137	1.9	5.8	57	35 1/35 1	45	34/34	183/183
	460-3-60	414	508	10.4	69	1.0	2.6	30	16.6	20	16	91
	575-3-60	518	632	9.6	55	1.9	11.0	57	24.9	30	26	110

LEGEND

FLA — Full Load Amps
HACR — Heating, Air Conditioning and Refrigeration
IFM — Indoor (Evaporator) Fan Motor
LRA — Locked Rotor Amps
MCA — Minimum Circuit Amps
MOCP — Maximum Overcurrent Protection
OFM — Outdoor (Condenser) Fan Motor
RLA — Rated Load Amps

*Fuse or HACR circuit breaker



NOTES:

1 In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. CSA units may be fuse or circuit breaker.

2 Unbalanced 3-Phase Supply Voltage

Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the % voltage imbalance


$$\% \text{ Voltage Imbalance} = 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60

AB = 452 v

BC = 464 v

AC = 455 v

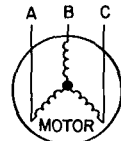

$$\text{Average Voltage} = \frac{452 + 464 + 455}{3} = \frac{1371}{3} = 457$$

NOTE: The 575-v units are CSA only

Determine maximum deviation from average voltage

(AB) 457 - 452 = 5 v

(BC) 464 - 457 = 7 v

(AC) 457 - 455 = 2 v

Maximum deviation is 7 v

Determine % voltage imbalance

$$\% \text{ Voltage Imbalance} = 100 \times \frac{7}{457} = 1.53\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately

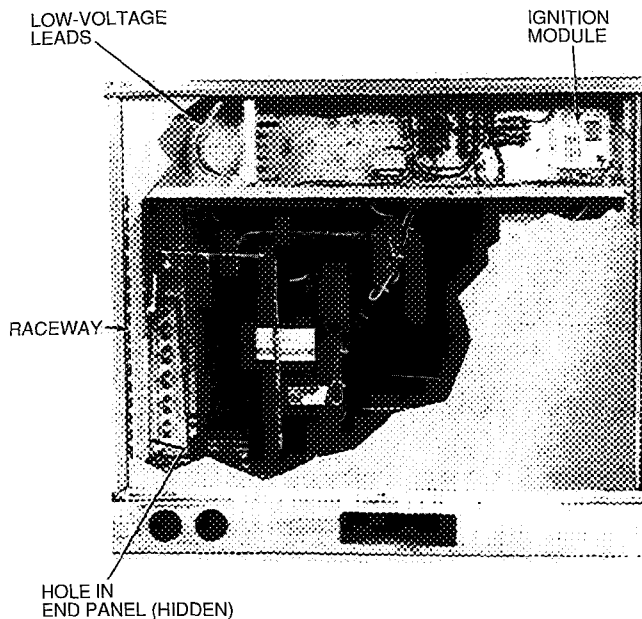


Fig. 10 — Field Control Wiring Raceway

Step 8 — Adjust Evaporator-Fan Speed — Adjust evaporator-fan speed to meet jobsite conditions. Table 3 shows fan rpm at motor pulley settings. Refer to Tables 4 through 15 to determine fan speed settings.

DIRECT DRIVE MOTORS — The evaporator-fan motor factory speed setting is shown on label diagram affixed to base unit. If other than factory setting is desired, refer to label diagram for motor reconnection.

BELT DRIVE MOTORS — Fan motor pulleys are factory set for speed shown in Table 1.

Table 3 — Fan Rpm at Motor Pulley Settings

UNIT 48LJD/LJE	MOTOR PULLEY TURNS OPEN										
	0	1/2	1	1 1/2	2	2 1/2	3	3 1/2	4	4 1/2	5
006	1190	1159	1127	1096	1064	1033	1001	970	938	907	875
007	1460	1420	1380	1340	1300	1265	1230	1190	1130	1110	1070

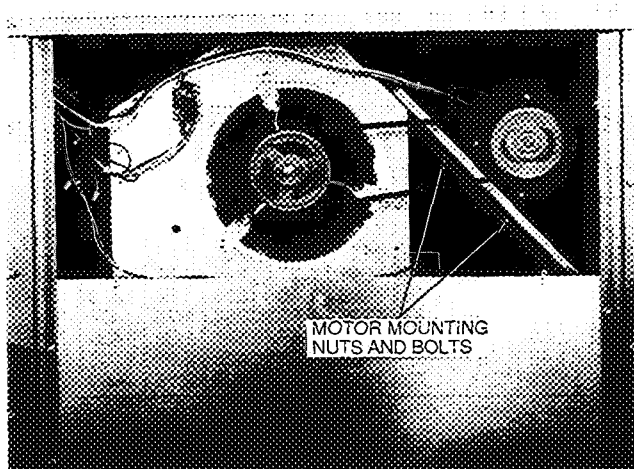


Fig. 11 — Belt Drive Motor Mounting

NOTE: Before adjusting fan speed, make sure the new fan speed will provide an air temperature rise range as shown in Table 1.

To change fan speed:

1. Shut off unit power supply.
2. Loosen belt by loosening fan motor mounting nuts. See Fig. 11.
3. Loosen movable pulley flange setscrew (see Fig. 12).
4. Screw movable flange toward fixed flange to increase speed and away from fixed flange to decrease speed. Increasing fan speed increases load on motor. Do not exceed maximum speed specified in Table 1.
5. Set movable flange at nearest keyway of pulley hub and tighten setscrew. (See Table 1 for speed change for each full turn of pulley flange.)

To align fan and motor pulleys:

1. Loosen fan pulley setscrews.
2. Slide fan pulley along fan shaft.
3. Make angular alignment by loosening motor from mounting.

To adjust belt tension:

1. Loosen fan motor nuts.
2. Slide motor mounting plate away from fan scroll for proper belt tension (1/2-in. deflection with one finger).
3. Tighten motor mounting nuts.
4. Adjust bolt and tighten nut to secure motor in fixed position.

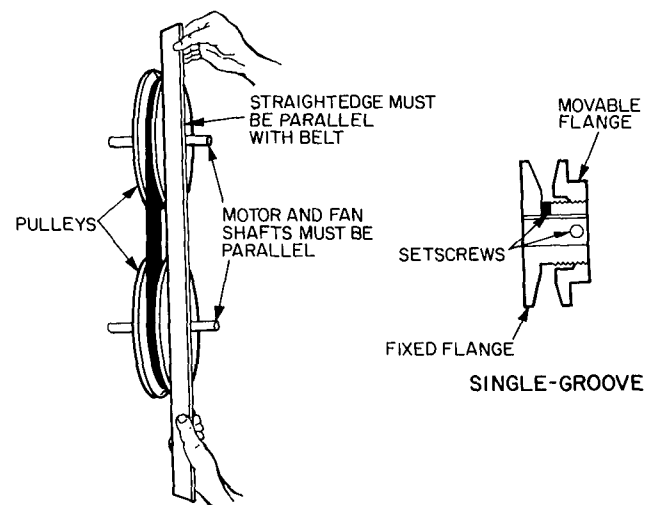


Fig. 12 — Evaporator-Fan Pulley Adjustment

**Table 4 – Fan Performance, 48LJE004 Vertical Discharge Units;
Factory-Installed Motor (Direct)**

AIRFLOW (Cfm)	LOW SPEED				HIGH SPEED			
	208		230, 460, 575		208		230, 460, 575	
	ESP	Bhp	ESP	Bhp	ESP	Bhp	ESP	Bhp
900	0.46	0.17	0.48	0.19	0.49	0.21	0.51	0.25
1000	0.44	0.20	0.45	0.22	0.47	0.23	0.48	0.27
1100	0.40	0.21	0.42	0.24	0.44	0.25	0.45	0.29
1200	0.32	0.23	0.37	0.25	0.38	0.27	0.40	0.31
1300	0.28	0.24	0.32	0.26	0.32	0.29	0.34	0.32
1400	0.22	0.26	0.25	0.28	0.26	0.30	0.28	0.33
1500	0.16	0.27	0.18	0.33	0.20	0.31	0.21	0.34

LEGEND

Bhp — Brake Horsepower

ESP — External Static Pressure

NOTE: Values include losses for filters, unit casing and wet coils.

**Table 5 – Fan Performance, 48LJE004 Vertical Discharge Units;
Field-Installed Motor (Direct)**

AIRFLOW (Cfm)	LOW SPEED				HIGH SPEED			
	208		230, 460, 575		208		230, 460, 575	
	ESP	Bhp	ESP	Bhp	ESP	Bhp	ESP	Bhp
900	0.74	0.34	0.80	0.38	0.95	0.46	1.10	0.53
1000	0.68	0.37	0.73	0.41	0.87	0.50	0.98	0.58
1100	0.60	0.40	0.66	0.45	0.79	0.53	0.91	0.62
1200	0.52	0.45	0.59	0.48	0.72	0.57	0.84	0.65
1300	0.44	0.48	0.50	0.50	0.64	0.60	0.75	0.68
1400	0.35	0.50	0.42	0.54	0.56	0.63	0.66	0.70
1500	0.26	0.54	0.34	0.57	0.48	0.65	0.58	0.72

LEGEND

Bhp — Brake Horsepower

ESP — External Static Pressure

NOTE: Values include losses for filters, unit casing and wet coils.

**Table 6 – Fan Performance, 48LJD/LJE005 Vertical Discharge Units;
Factory-Installed (Direct)**

AIRFLOW (Cfm)	LOW SPEED				HIGH SPEED			
	208		230, 460, 575		208		230, 460, 575	
	ESP	Bhp	ESP	Bhp	ESP	Bhp	ESP	Bhp
1200	0.53	0.44	0.58	0.48	0.72	0.56	0.84	0.65
1300	0.44	0.48	0.50	0.50	0.64	0.60	0.75	0.68
1400	0.35	0.50	0.42	0.54	0.56	0.63	0.67	0.69
1500	0.25	0.53	0.33	0.58	0.47	0.65	0.58	0.72
1600	0.16	0.57	0.24	0.60	0.38	0.68	0.50	0.74
1700	0.09	0.58	0.15	0.63	0.30	0.69	0.40	0.76
1800	0.00	0.61	0.06	0.65	0.22	0.71	0.32	0.78
1900	—	—	—	—	0.12	0.73	0.24	0.79
2000	—	—	—	—	0.03	0.74	0.15	0.81

LEGEND

Bhp — Brake Horsepower

ESP — External Static Pressure

NOTE: Values include losses for filters, unit casing and wet coils.

Table 7 – Fan Performance, 48LJD/LJE005 Vertical Discharge Units; Field-Installed (Belt)

AIRFLOW (CFM)	EXTERNAL STATIC PRESSURE (in. wg)																			
	0.1		0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6		1.8	
	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp
1200	596	0.20	665	0.25	779	0.36	872	0.48	957	0.60	1028	0.69	1083	0.74	—	—	—	—	—	—
1300	633	0.24	699	0.30	809	0.42	902	0.55	984	0.67	1058	0.80	1121	0.89	1171	0.94	—	—	—	—
1400	672	0.30	735	0.36	840	0.48	933	0.62	1011	0.75	1086	0.89	1153	1.02	1210	1.12	1257	1.17	—	—
1500	711	0.35	770	0.42	873	0.55	963	0.69	1041	0.84	1113	0.99	1180	1.13	1241	1.27	1295	1.37	1339	1.43
1600	751	0.42	806	0.49	907	0.63	993	0.77	1072	0.93	1141	1.09	1207	1.25	1269	1.40	1326	1.54	1376	1.65
1700	791	0.49	843	0.57	941	0.72	1024	0.87	1103	1.04	1171	1.20	1235	1.37	1296	1.53	1354	1.70	1407	1.84
1800	831	0.58	881	0.66	976	0.81	1057	0.97	1132	1.14	1202	1.32	1263	1.49	1323	1.67	1381	1.85	1436	2.02
1900	872	0.67	919	0.75	1011	0.92	1091	1.08	1162	1.25	1232	1.45	1294	1.63	1351	1.81	1408	2.00	1463	2.19
2000	913	0.77	958	0.86	1046	1.03	1125	1.21	1195	1.38	1262	1.58	1325	1.78	1382	1.97	1436	2.16	1489	2.36

LEGEND

Bhp — Brake Horsepower

NOTES:

1. Values include losses for filters, unit casing and wet coils.

2. Use of a field-supplied motor may affect wire sizing. Contact Carrier representative to verify

Table 8 — Fan Performance, 48LJD/LJE006 Vertical Discharge Units; Factory-Installed Motor (Belt)

AIRFLOW (Cfm)	EXTERNAL STATIC PRESSURE (in. wg)																	
	0.1		0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6	
	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp
1500	750	0.37	808	0.43	914	0.57	1001	0.70	1084	0.85	1168	1.02	1199	1.11	1126	1.02	—	—
1600	794	0.44	846	0.50	950	0.65	1034	0.78	1111	0.93	1194	1.11	1263	1.28	1275	1.35	—	—
1700	839	0.52	884	0.58	983	0.73	1068	0.88	1145	1.04	1218	1.20	1295	1.40	1351	1.57	1352	1.62
1800	885	0.61	924	0.67	1018	0.82	1105	0.99	1179	1.15	1246	1.32	1319	1.51	1369	1.72	1435	1.88
1900	932	0.72	965	0.77	1057	0.94	1143	1.12	1212	1.27	1280	1.45	1343	1.63	1415	1.85	1478	2.06
2000	979	0.83	1008	0.88	1096	1.06	1177	1.24	1247	1.41	1314	1.59	1374	1.78	1438	1.98	1505	2.21
2100	1026	0.96	1051	1.01	1136	1.19	1210	1.37	1284	1.57	1347	1.74	1409	1.94	1465	2.13	1528	2.36
2200	1074	1.10	1095	1.15	1173	1.33	1245	1.51	1322	1.73	1380	1.90	1442	2.11	1498	2.31	—	—
2300	1122	1.25	1140	1.30	1210	1.47	1284	1.67	1356	1.90	1418	2.09	1475	2.29	—	—	—	—
2400	1170	1.42	1185	1.46	1249	1.64	1323	1.85	1389	2.06	1456	2.30	—	—	—	—	—	—
2500	1218	1.61	1231	1.64	1289	1.81	1363	2.04	1424	2.24	—	—	—	—	—	—	—	—

LEGEND

Bhp — Brake Horsepower

NOTES

- Boldface** indicates field-supplied drive required. (See Note 6.)
- Shading** indicates field-supplied motor and drive required.
- Maximum usable bhp is 1.7. Extensive motor and electrical testing on the Weathermaker® I units has ensured that the full horsepower range of the motor can be utilized with confidence. Using your fan motors up to the horsepower ratings shown will not result in nuisance tripping or premature motor failure. Unit warranty will not be affected.
- Values include losses for filters, unit casing and wet coils.
- Use of a field-supplied motor may affect wire sizing. Contact Carrier representative to verify.
- Motor drive range is 875 to 1190 rpm. All other rpms require field-supplied drive.

Table 9 — Fan Performance, 48LJD/LJE007 Vertical Discharge Units; Factory-Installed Motor (Belt)

AIRFLOW (Cfm)	EXTERNAL STATIC PRESSURE (in. wg)																	
	0.1		0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6	
	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp
1800	935	0.67	983	0.75	1069	0.91	1152	1.08	1226	1.26	1294	1.45	1358	1.64	1420	1.85	1486	2.11
1900	982	0.78	1027	0.86	1111	1.03	1190	1.20	1263	1.40	1330	1.59	1392	1.79	1452	2.00	1511	2.23
2000	1029	0.90	1072	0.98	1154	1.16	1228	1.34	1301	1.54	1367	1.75	1428	1.96	1486	2.17	1542	2.39
2100	1076	1.03	1117	1.12	1197	1.31	1267	1.49	1338	1.69	1403	1.91	1464	2.13	1521	2.35	1575	2.57
2200	1124	1.18	1163	1.27	1240	1.47	1307	1.66	1376	1.86	1440	2.08	1500	2.31	1557	2.54	1610	2.77
2300	1171	1.33	1209	1.43	1283	1.64	1350	1.84	1414	2.04	1478	2.27	1537	2.51	1593	2.75	1646	2.99
2400	1219	1.51	1255	1.61	1326	1.82	1392	2.03	1453	2.24	1516	2.47	1574	2.72	1629	2.97	—	—
2500	1267	1.70	1301	1.80	1370	2.02	1435	2.25	1493	2.46	1554	2.69	1612	2.94	—	—	—	—
2600	1315	1.90	1348	2.00	1414	2.23	1479	2.47	1535	2.69	1592	2.92	—	—	—	—	—	—
2700	1363	2.12	1395	2.23	1458	2.46	1521	2.71	1577	2.94	—	—	—	—	—	—	—	—
2800	1411	2.36	1442	2.47	1503	2.71	1564	2.96	—	—	—	—	—	—	—	—	—	—
2900	1459	2.61	1489	2.72	1548	2.97	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

Bhp — Brake Horsepower

NOTES:

- Boldface** indicates field-supplied drive required. (See Note 6.)
- Shading** indicates field-supplied motor and drive required.
- Maximum usable bhp is 2.4. Extensive motor and electrical testing on the Weathermaker I units has ensured that the full horsepower range of the motor can be utilized with confidence. Using your fan motors up to the horsepower ratings shown will not result in nuisance tripping or premature motor failure. Unit warranty will not be affected.
- Values include losses for filters, unit casing and wet coils.
- Use of a field-supplied motor may affect wire sizing. Contact Carrier representative to verify.
- Motor drive range is 1070 to 1460 rpm. All other rpms require field-supplied drive.

**Table 10 — Fan Performance, 48LJE004 Horizontal Discharge Units;
Factory-Installed Motor (Direct)**

AIRFLOW (Cfm)	LOW SPEED				HIGH SPEED			
	208		230, 460, 575		208		230, 460, 575	
	ESP	Bhp	ESP	Bhp	ESP	Bhp	ESP	Bhp
900	0.53	0.17	0.55	0.19	0.63	0.21	0.64	0.25
1000	0.48	0.20	0.51	0.22	0.57	0.23	0.60	0.27
1100	0.43	0.21	0.45	0.24	0.52	0.25	0.54	0.29
1200	0.36	0.23	0.40	0.25	0.47	0.27	0.47	0.31
1300	0.28	0.24	0.32	0.26	0.38	0.29	0.41	0.32
1400	0.20	0.26	0.24	0.28	0.31	0.30	0.32	0.33
1500	0.11	0.27	0.14	0.33	0.21	0.31	0.22	0.34

LEGEND

Bhp — Brake Horsepower

ESP — External Static Pressure

NOTE: Values include losses for filters, unit casing and wet coils

**Table 11 — Fan Performance, 48LJE004 Horizontal Discharge Units;
Field-Installed Motor (Direct)**

AIRFLOW (Cfm)	LOW SPEED				HIGH SPEED			
	208		230, 460, 575		208		230, 460, 575	
	ESP	Bhp	ESP	Bhp	ESP	Bhp	ESP	Bhp
900	0.99	0.34	1.06	0.38	1.16	0.46	1.24	0.53
1000	0.93	0.37	0.99	0.44	1.08	0.50	1.17	0.58
1100	0.85	0.40	0.92	0.45	1.00	0.53	1.10	0.62
1200	0.77	0.45	0.85	0.48	0.92	0.57	1.02	0.65
1300	0.69	0.48	0.77	0.50	0.85	0.60	0.94	0.68
1400	0.62	0.50	0.68	0.54	0.77	0.63	0.86	0.70
1500	0.52	0.54	0.58	0.57	0.68	0.65	0.77	0.72

LEGEND

Bhp — Brake Horsepower

ESP — External Static Pressure

NOTE: Values include losses for filters, unit casing and wet coils

**Table 12 — Fan Performance, 48LJD/LJE005 Horizontal Discharge Units;
Factory-Installed Motor (Direct)**

AIRFLOW (Cfm)	LOW SPEED				HIGH SPEED			
	208		230, 460, 575		208		230, 460, 575	
	ESP	Bhp	ESP	Bhp	ESP	Bhp	ESP	Bhp
1200	0.78	0.44	0.85	0.48	0.92	0.56	1.01	0.65
1300	0.70	0.48	0.76	0.50	0.84	0.60	0.94	0.68
1400	0.62	0.50	0.68	0.54	0.78	0.63	0.87	0.69
1500	0.52	0.53	0.59	0.58	0.69	0.65	0.78	0.72
1600	0.44	0.57	0.50	0.60	0.61	0.68	0.70	0.74
1700	0.34	0.58	0.40	0.63	0.53	0.69	0.62	0.76
1800	0.22	0.61	0.30	0.65	0.45	0.71	0.54	0.78
1900	0.10	0.63	0.20	0.68	0.37	0.73	0.48	0.79
2000	—	—	0.09	0.69	0.29	0.74	0.39	0.81

LEGEND

Bhp — Brake Horsepower

ESP — External Static Pressure

NOTE: Values include losses for filters, unit casing and wet coils

Table 13 — Fan Performance, 48LJD/LJE005 Horizontal Discharge Units; Field-Installed Motor (Belt)

AIRFLOW (Cfm)	EXTERNAL STATIC PRESSURE (in. wg)																			
	0.1		0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6		1.8	
	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp
1200	569	0.18	641	0.23	761	0.34	859	0.46	943	0.58	1030	0.70	1155	0.87	—	—	—	—	—	—
1300	604	0.22	673	0.28	788	0.39	887	0.52	968	0.65	1044	0.77	1128	0.91	1245	1.10	—	—	—	—
1400	640	0.27	705	0.33	817	0.45	914	0.59	996	0.72	1069	0.86	1139	0.99	1218	1.14	1325	1.34	—	—
1500	676	0.32	738	0.38	847	0.51	940	0.65	1024	0.81	1095	0.95	1162	1.09	1228	1.24	1303	1.40	1398	1.60
1600	713	0.38	772	0.44	877	0.58	967	0.73	1051	0.89	1123	1.05	1188	1.20	1250	1.35	1312	1.51	1382	1.68
1700	750	0.45	806	0.51	908	0.66	997	0.81	1077	0.98	1151	1.15	1215	1.31	1276	1.48	1334	1.64	1393	1.80
1800	788	0.52	841	0.59	939	0.75	1026	0.91	1104	1.07	1178	1.26	1243	1.43	1303	1.61	1359	1.78	1414	1.95
1900	826	0.60	876	0.68	971	0.84	1056	1.01	1132	1.18	1204	1.37	1271	1.56	1330	1.74	1386	1.93	1439	2.11
2000	864	0.70	912	0.77	1004	0.94	1087	1.12	1162	1.30	1231	1.48	1298	1.69	1358	1.89	1413	2.08	1466	2.27

LEGEND

Bhp — Brake Horsepower

NOTES:

1 Values include losses for filters, unit casing and wet coils.

2 Use of a field-supplied motor may affect wire sizing. Contact Carrier representative to verify

Table 14 – Fan Performance, 48LJD/LJE006 Horizontal Discharge Units; Factory-Installed Motor (Belt)

AIRFLOW (Cfm)	EXTERNAL STATIC PRESSURE (in. wg)																	
	0.1		0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6	
	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp
1500	720	0.34	776	0.39	886	0.53	978	0.66	1059	0.80	1142	0.96	1207	1.11	1245	1.20	1251	1.21
1600	760	0.40	814	0.46	915	0.59	1010	0.74	1089	0.89	1165	1.04	1240	1.22	1296	1.37	1329	1.46
1700	801	0.47	853	0.54	950	0.68	1044	0.84	1120	0.99	1190	1.14	1266	1.33	1331	1.50	1381	1.65
1800	842	0.55	891	0.62	985	0.77	1075	0.94	1151	1.09	1221	1.26	1287	1.42	1358	1.63	1417	1.81
1900	883	0.64	931	0.72	1019	0.87	1103	1.03	1184	1.21	1252	1.38	1315	1.55	1386	1.74	1445	1.95
2000	924	0.74	970	0.82	1054	0.97	1134	1.14	1217	1.34	1283	1.51	1346	1.69	1405	1.87	1469	2.08
2100	965	0.85	1010	0.93	1090	1.09	1170	1.27	1247	1.47	1315	1.65	1377	1.84	1435	2.03	1492	2.29
2200	1007	0.97	1050	1.06	1128	1.22	1205	1.40	1275	1.59	1349	1.81	1409	1.99	1466	2.20	1521	2.48
2300	1049	1.10	1090	1.19	1166	1.36	1239	1.55	1306	1.74	1380	1.98	1440	2.16	1497	2.37	—	—
2400	1090	1.24	1131	1.34	1204	1.51	1273	1.70	1342	1.91	1409	2.13	1474	2.36	—	—	—	—
2500	1132	1.39	1172	1.49	1243	1.68	1309	1.87	1377	2.09	1439	2.29	—	—	—	—	—	—

LEGEND

Bhp — Brake Horsepower

NOTES:

- 1 **Boldface** indicates field-supplied drive required. (See Note 6.)
- 2 **Shading** indicates field-supplied motor and drive required.
- 3 Maximum usable bhp is 1.7. Extensive motor and electrical testing on the Weathermaker® I units has ensured that the full horsepower range of the motor can be utilized with confidence. Using your fan motors up to the horsepower ratings shown will not result in nuisance tripping or premature motor failure. Unit warranty will not be affected.
- 4 Values include losses for filters, unit casing and wet coils.
- 5 Use of a field-supplied motor may affect wire sizing. Contact Carrier representative to verify.
- 6 Motor drive range is 875 to 1190 rpm. All other rpms require field-supplied drive.

Table 15 – Fan Performance, 48LJD/LJE007 Horizontal Discharge Units; Factory-Installed Motor (Belt)

AIRFLOW (Cfm)	EXTERNAL STATIC PRESSURE (in. wg)																	
	0.1		0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6	
	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp
1800	852	0.55	905	0.62	1002	0.78	1084	0.93	1163	1.10	1235	1.29	1303	1.48	1371	1.69	1433	1.90
1900	894	0.64	945	0.72	1037	0.88	1119	1.04	1194	1.21	1266	1.40	1330	1.59	1396	1.81	1450	2.03
2000	936	0.74	984	0.82	1072	0.98	1154	1.16	1226	1.33	1297	1.53	1362	1.73	1422	1.94	1485	2.16
2100	978	0.85	1024	0.93	1108	1.10	1190	1.29	1259	1.47	1327	1.66	1393	1.87	1452	2.08	1510	2.31
2200	1021	0.97	1064	1.05	1145	1.22	1225	1.43	1294	1.62	1359	1.81	1423	2.02	1483	2.24	1538	2.46
2300	1064	1.10	1104	1.18	1183	1.36	1260	1.57	1330	1.78	1392	1.97	1454	2.18	1515	2.41	1569	2.64
2400	1107	1.24	1145	1.32	1222	1.52	1296	1.73	1365	1.94	1426	2.15	1485	2.36	1544	2.59	1601	2.84
2500	1150	1.39	1186	1.48	1262	1.68	1331	1.89	1400	2.12	1461	2.34	1518	2.55	1575	2.78	—	—
2600	1193	1.56	1228	1.65	1301	1.86	1367	2.07	1435	2.31	1497	2.54	1552	2.76	1607	2.99	—	—
2700	1237	1.74	1269	1.83	1341	2.05	1404	2.26	1471	2.51	1532	2.75	1587	2.98	—	—	—	—
2800	1280	1.94	1311	2.03	1381	2.25	1442	2.47	1500	2.72	1567	2.98	—	—	—	—	—	—
2900	1324	2.15	1354	2.24	1420	2.47	1481	2.69	1542	2.94	—	—	—	—	—	—	—	—
3000	1368	2.37	1396	2.46	1460	2.69	1521	2.93	—	—	—	—	—	—	—	—	—	—

LEGEND

Bhp — Brake Horsepower

NOTES:

- 1 **Boldface** indicates field-supplied drive required. (See Note 6.)
- 2 **Shading** indicates field-supplied motor and drive required.
- 3 Maximum usable bhp is 2.4. Extensive motor and electrical testing on Weathermaker I units has ensured that the full horsepower range of the motor can be utilized with confidence. Using your fan motors up to the horsepower ratings shown will not result in nuisance tripping or premature motor failure. Unit warranty will not be affected.
- 4 Values include losses for filters, unit casing and wet coils.
- 5 Use of a field-supplied motor may affect wire sizing. Contact Carrier representative to verify.
- 6 Motor drive range is 1070 to 1460 rpm. All other rpms require field-supplied drive.

START-UP

IMPORTANT: Energize crankcase heater 24 hours prior to base unit start-up to remove absorbed refrigerant from oil to prevent damage to compressor. Heater is energized as long as there is power to the unit.

Unit Preparation — Make sure that unit has been installed in accordance with these installation instructions and applicable codes.

Return-Air Filters — Make sure correct filters are installed in filter tracks. See Table 1. Do not operate unit without return-air filters.

Compressor Mounting — Compressors are internally spring mounted. Do not loosen or remove compressor holddown bolts.

Internal Wiring — Check all electrical connections in unit control boxes. Tighten as required.

Refrigerant Service Ports — Each unit system has 3 Schrader-type service gage ports: one on the suction line, one on the liquid line, and one on the compressor discharge line. Be sure that caps on the ports are tight.

Cooling — Set space thermostat to OFF position. To start unit, turn on main power supply. Set system selector switch at COOL position and fan switch at AUTO. position. Adjust thermostat to a setting below room temperature. Compressor starts on closure of contactor.

Check cooling effects at a setting above room temperature. Check unit charge. Refer to Service, Refrigerant Charge section.

Reset thermostat at a position above room temperature. Compressor will shut off.

TO SHUT OFF UNIT — Set system selector switch at OFF position. Resetting thermostat at a position above room temperature shuts unit off temporarily until space temperature exceeds thermostat setting.

Main Burners — Main burners are factory set and should require no adjustment.

TO CHECK ignition of main burners and heating controls, move thermostat dial above room temperature and verify that the burners light and evaporator fan is energized. After ensuring that the unit continues to heat the building, lower the thermostat setting below room temperature and verify that the burners and evaporator fan turn off. (Fan will turn off only if fan selector switch is in the AUTO. position.)

Refer to Table 16 for the correct orifice to use at high altitudes.

Heating

1. Purge gas supply line of air by opening union ahead of gas valve. If gas odor is detected, tighten union and wait 5 minutes before proceeding.
2. Turn on electrical supply and manual gas valve.

3. Set system switch selector at HEAT position and fan switch at AUTO or ON position. Set heating temperature lever above room temperature.
4. The induced draft motor will start.
5. After a call for heating, the main burners should light within 4 seconds. If the burner does not light, then there is a 60 second delay before another 4-second try. If the burner still does not light, the time delay is repeated. If the burner does not light on the eleventh attempt, there is a lockout. To recover, break the 24-v power to W1.
6. The evaporator fan will turn on 20 - 40 seconds after a call for heating.
7. The evaporator fan will turn off 30 - 90 seconds after thermostat temperature is satisfied.
8. Adjust airflow to obtain a temperature rise within the range specified on the unit nameplate.

TO SHUT OFF UNIT — Set system selector switch at OFF position. Resetting heating selector lever below room temperature will temporarily shut unit off until space temperature falls below thermostat setting.

Safety Relief — A soft solder joint at the suction service Schrader port provides pressure relief under abnormal temperature and pressure conditions.

Ventilation (Continuous Fan) — Set fan and system selector switches at ON and OFF positions, respectively. Evaporator fan operates continuously to provide constant air circulation.

Table 16 — Altitude Compensation*

ELEVATION	NATURAL GAS Orifice Size†	LIQUID PROPANE Orifice Size
0-2,000	33	43
2,000	34	43
3,000	35	44
4,000	36	44
5,000	36	44
6,000	37	45
7,000	37	45
8,000	38	46
9,000	39	47
10,000	41	48
11,000	43	48
12,000	44	49
13,000	44	49
14,000	45	50

*As the height above sea level increases, there is less oxygen per cubic foot of air. Therefore, heat input rate should be reduced at higher altitudes.

†Orifices available through your Carrier distributor.

SERVICE

⚠ CAUTION

When servicing unit, shut off all electrical power to unit to avoid shock hazard or injury from rotating parts.

Cleaning — Inspect unit interior at the beginning of heating and cooling season and as operating conditions require.

EVAPORATOR COIL

1. Turn unit power off. Remove evaporator coil access panel.
2. If accessory economizer is installed, remove economizer by disconnecting Molex plug and removing economizer mounting screws. Refer to accessory economizer installation instructions for more details.
3. Slide filters out of unit.
4. Clean coil using a commercial coil cleaner or dishwasher detergent in a pressurized spray canister. Wash both sides of coil and flush with clean water. For best results, backflush toward return-air section to remove foreign material. Flush condensate pan after completion.
5. Reinstall economizer and filters.
6. Reconnect wiring.
7. Replace access panels.

CONDENSER COIL — Inspect coil monthly. Clean condenser coil annually, and as required by location and outdoor air conditions.

One Row Coils — Wash coil with commercial coil cleaner. It is not necessary to remove top panel.

2-Row Coils

Clean coil as follows:

1. Turn off unit power.
2. Remove top panel screws on condenser end of unit.
3. Remove condenser coil corner post. See Fig. 13. To hold top panel open, place coil corner post between top panel and center post. See Fig. 14.
4. Remove device holding coil sections together at return end of condenser coil. Carefully separate the outer coil section 3 to 4 in. from the inner coil section. See Fig. 15.
5. Use a water hose or other suitable equipment to flush down between the 2 coil sections to remove dirt and debris. Clean the outer surfaces with a stiff brush in the normal manner.
6. Reposition the outer coil section and remove the coil corner post from between the top panel and center post. Secure the sections together. Install the coil corner post, coil center post and replace all screws.

CONDENSATE DRAIN — Check and clean each year at start of cooling season. In winter, keep drain dry or protect against freeze-up.

FILTERS — Clean or replace at start of each heating and cooling season, or more often if operating conditions require it. Replacement filters must be same dimensions as original filters.

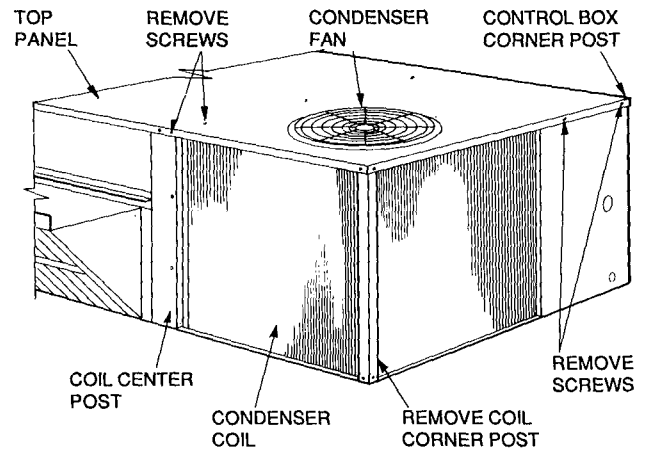


Fig. 13 — Cleaning Condenser Coil

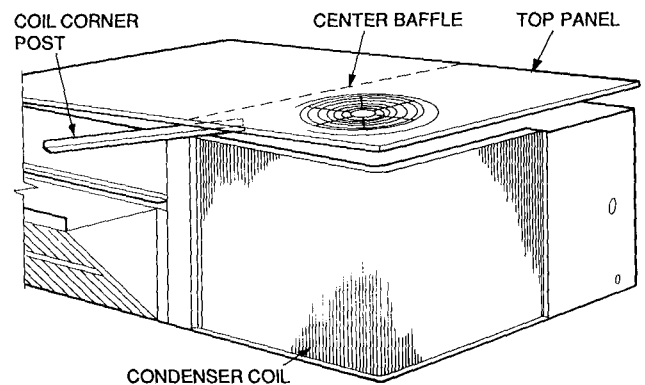


Fig. 14 — Propping Up Top Panel

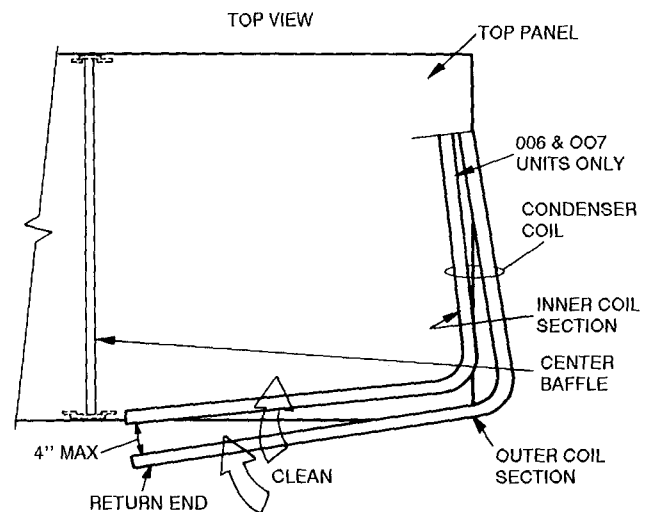


Fig. 15 — Separating Coil Sections

Lubrication

COMPRESSORS — Each compressor is charged with the correct amount of oil at the factory.

FAN MOTOR BEARINGS — Fan motor bearings are of the permanently lubricated type. No further lubrication is required. No lubrication of condenser or evaporator fan motors is required.

Condenser-Fan Adjustment (Fig. 16) — Shut off unit power supply. Remove condenser-fan assembly (grille, motor, motor cover and fan) and loosen fan hub setscrews. Adjust fan height as shown in Fig. 16. Tighten setscrews and replace condenser-fan assembly.

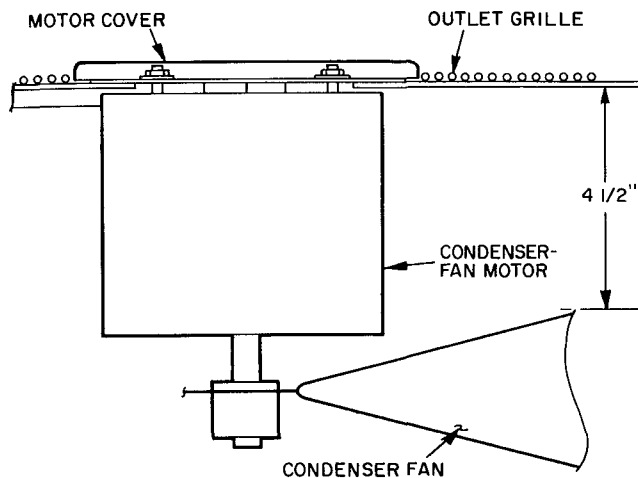


Fig. 16 — Condenser-Fan Adjustment

Refrigerant Charge — Amount of refrigerant charge is listed on unit nameplate (also refer to Table 1). Refer to Carrier Standard Service Techniques Manual, Chapter 1, Refrigerants.

Unit panels must be in place when unit is operating during charging procedure.

NO CHARGE — Use standard evacuating techniques. After evacuating system, weigh in the specified amount of refrigerant. (Refer to Table 1.)

LOW CHARGE COOLING — Using Cooling Charging Charts, Fig. 17 - 20, vary refrigerant until the conditions of the appropriate chart are met. Note the charging charts are different from type normally used. Charts are based on charging the units to the correct superheat for the various operating conditions. Accurate pressure gage and temperature sensing device are required. Connect the pressure gage to the service port on the suction line. Mount the temperature sensing device on the suction line and insulate it so that outdoor ambient temperature does not affect the reading. Indoor-air cfm must be within the normal operating range of the unit.

TO USE COOLING CHARGING CHART — Take the outdoor ambient temperature and read the suction pressure gage. Refer to chart to determine what suction temperature should be. If suction temperature is high, add refrigerant. If suction temperature is low, carefully blow some of the charge. Recheck the suction pressure as charge is adjusted.

Example: (Fig. 18)

Outdoor Temperature 85 F
Suction Pressure 70 psig
Suction Temperature should be 46 F
(Suction Temperature may vary 5°F.)

If Chargemaster® charging device is used, temperature and pressure readings must be accomplished using the charging chart.

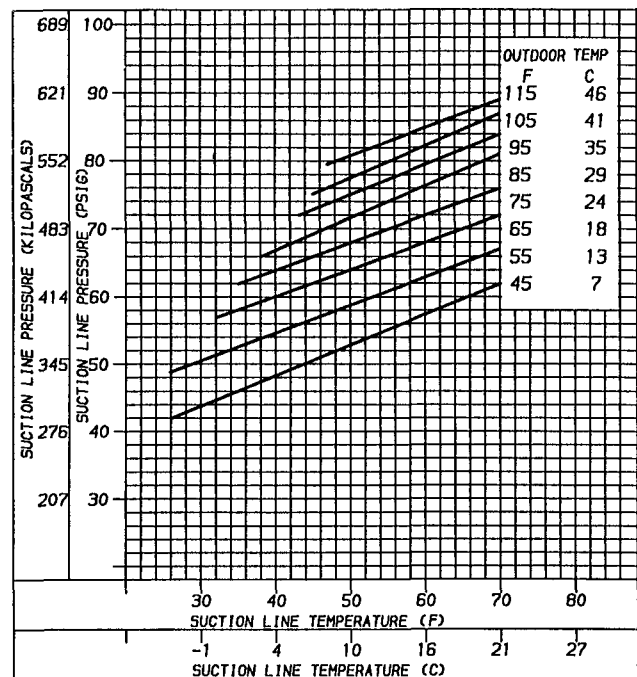


Fig. 17 — Cooling Charging Chart, 48LJE004

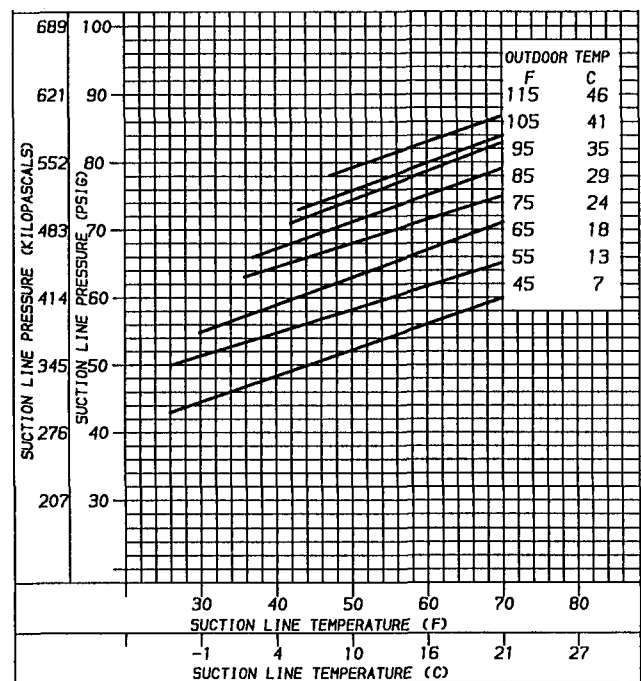


Fig. 18 — Cooling Charging Chart, 48LJD/LJE005

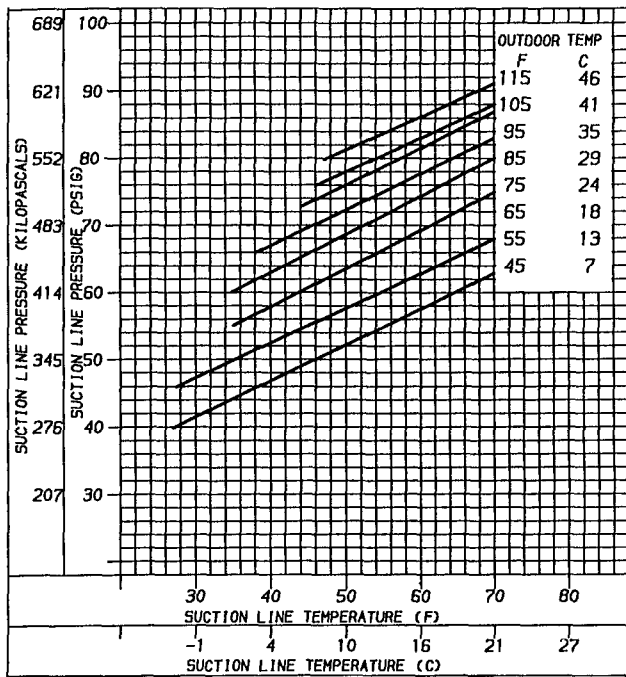


Fig. 19 – Cooling Charging Chart, 48LJD/LJE006

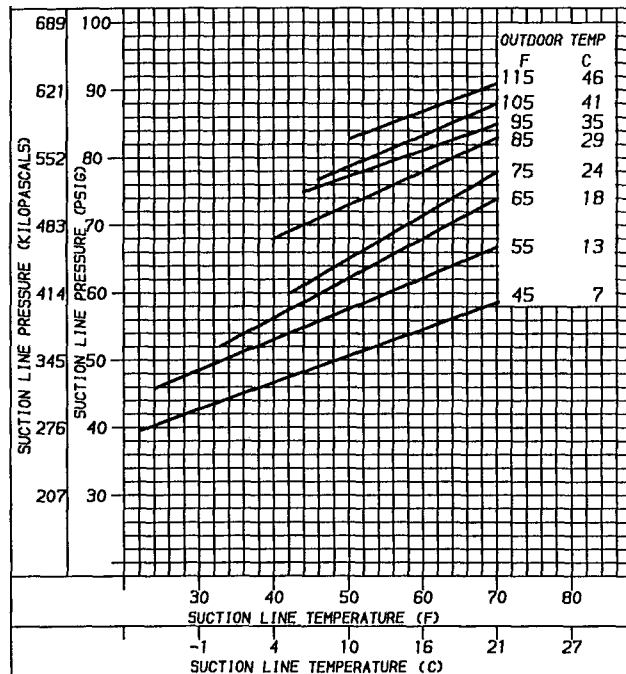


Fig. 20 – Cooling Charging Chart, 48LJD/LJE007

Flue Gas Passageways — To inspect the flue collector box and upper areas of the heat exchanger:

1. Remove the combustion blower wheel and motor assembly according to directions in Combustion-Air Blower section below.
2. Remove the 3 screws holding the blower housing to the flue cover.
3. Remove the flue cover to inspect the heat exchanger.
4. Clean all surfaces as required using a wire brush.

Combustion-Air Blower — Clean periodically to assure proper airflow and heating efficiency. Inspect blower wheel every fall and periodically during heating season. For

the first heating season, inspect blower wheel bimonthly to determine proper cleaning frequency.

To inspect blower wheel, remove draft hood and screen. Shine a flashlight into opening to inspect wheel. If cleaning is required, remove motor and wheel as follows:

1. Slide burner access panel out.
2. Remove wires and pressure tubing connected to pressure switch and mark each wire.
3. Remove the 2 screws which hold the heat shield in place, and remove heat shield.
4. Remove the 7 screws that attach induced draft motor mounting plate to blower housing (Fig. 21).
5. Remove the 2 wires attached to the motor and remove assembly from unit.
6. To remove blower, remove 2 setscrews.
7. To remove motor, remove the 4 screws that hold blower housing to mounting plate. Remove the motor cooling fan by removing one setscrew. Then remove nuts that hold motor to mounting plate.
8. To reinstall, reverse the procedure outlined above.

Limit Switch — Remove blower access panel (Fig. 6). Limit switch is located on the fan deck.

Burner Ignition — Unit is equipped with a direct spark ignition 100% lockout system. Ignition module is located in the control box (Fig. 10). Module contains a self-diagnostic LED (light-emitting diode). During servicing refer to module nameplate for LED interpretation.

If lockout occurs, unit may be reset by momentarily interrupting power supply to unit, or turning selector switch to OFF position at the thermostat.

Main Burners — At the beginning of each heating season, inspect for deterioration or blockage due to corrosion or other causes. Observe the main burner flames and adjust, if necessary.

⚠ CAUTION

When working on gas train, do not hit or plug orifice spuds.

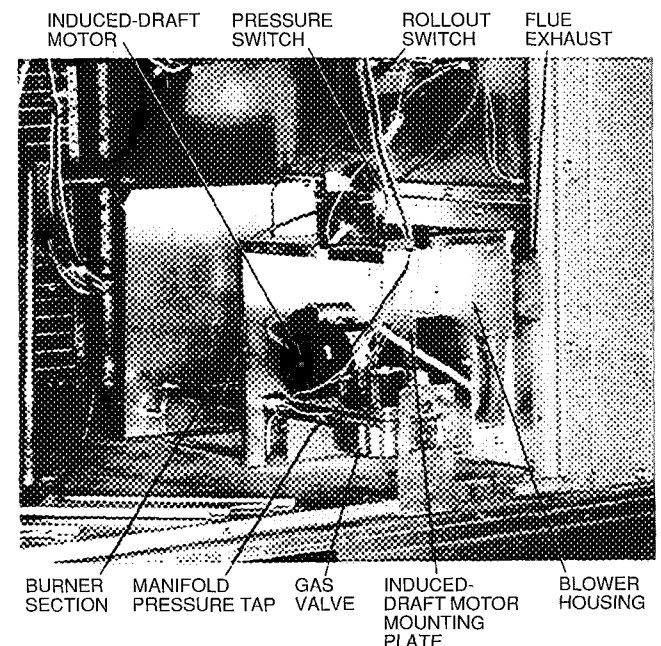


Fig. 21 – Burner Section Details

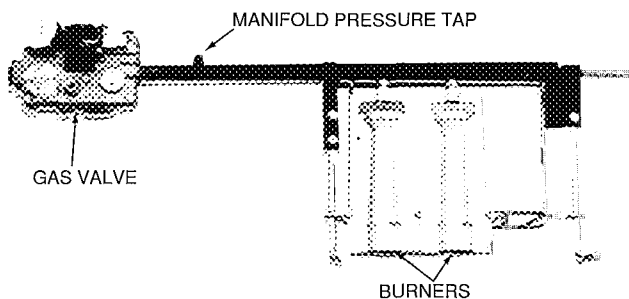


Fig. 22 — Burner Tray Details

REMOVAL OF GAS TRAIN (Fig. 21 and 22)

1. Shut off manual gas valve.
2. Shut off power to unit.
3. Remove compressor access panel.
4. Slide out burner section side panel.
5. Remove wires and pressure tubing connected to pressure switch and mark each wire.
6. Remove heat shield.
7. Disconnect gas piping at unit gas valve.
8. Remove wires connected to gas valve. Mark each wire.
9. Remove ignitor and sensor wires at the power pack.
10. Remove the 2 screws that attach the burner rack to the vestibule plate.
11. Remove the gas bracket.
12. Slide the burner tray out of the unit (Fig. 22).

REPLACEMENT OF GAS TRAIN (Fig. 21 and 22)

1. Slide the burner tray into the unit.
2. Attach burner rack to vestibule plate with 2 screws.
3. Replace gas valve bracket.
4. Replace heat shield.
5. Reconnect wires and pressure tubing to pressure switch.
6. Reconnect the ignitor and sensor wires to the power pack.
7. Reconnect wires to gas valve.
8. Connect gas piping to the gas valve.
9. Reinstall the burner section side panel.
10. Replace compressor access panel.
11. Restore power to unit.
12. Turn on main gas valve.

CLEANING AND ADJUSTMENT

1. Remove burner rack from unit as described in Removal of Gas Train section, above.
2. Inspect burners; if dirty, remove burners from rack.
3. Using a soft brush clean burners and cross-over port as required.
4. Adjust spark gap. See Fig. 23.
5. Reinstall burners on rack.
6. Reinstall burner rack as described in Replacement of Gas Train section, above.

Replacement Parts — A complete list of replacement parts may be obtained from any Carrier distributor upon request.

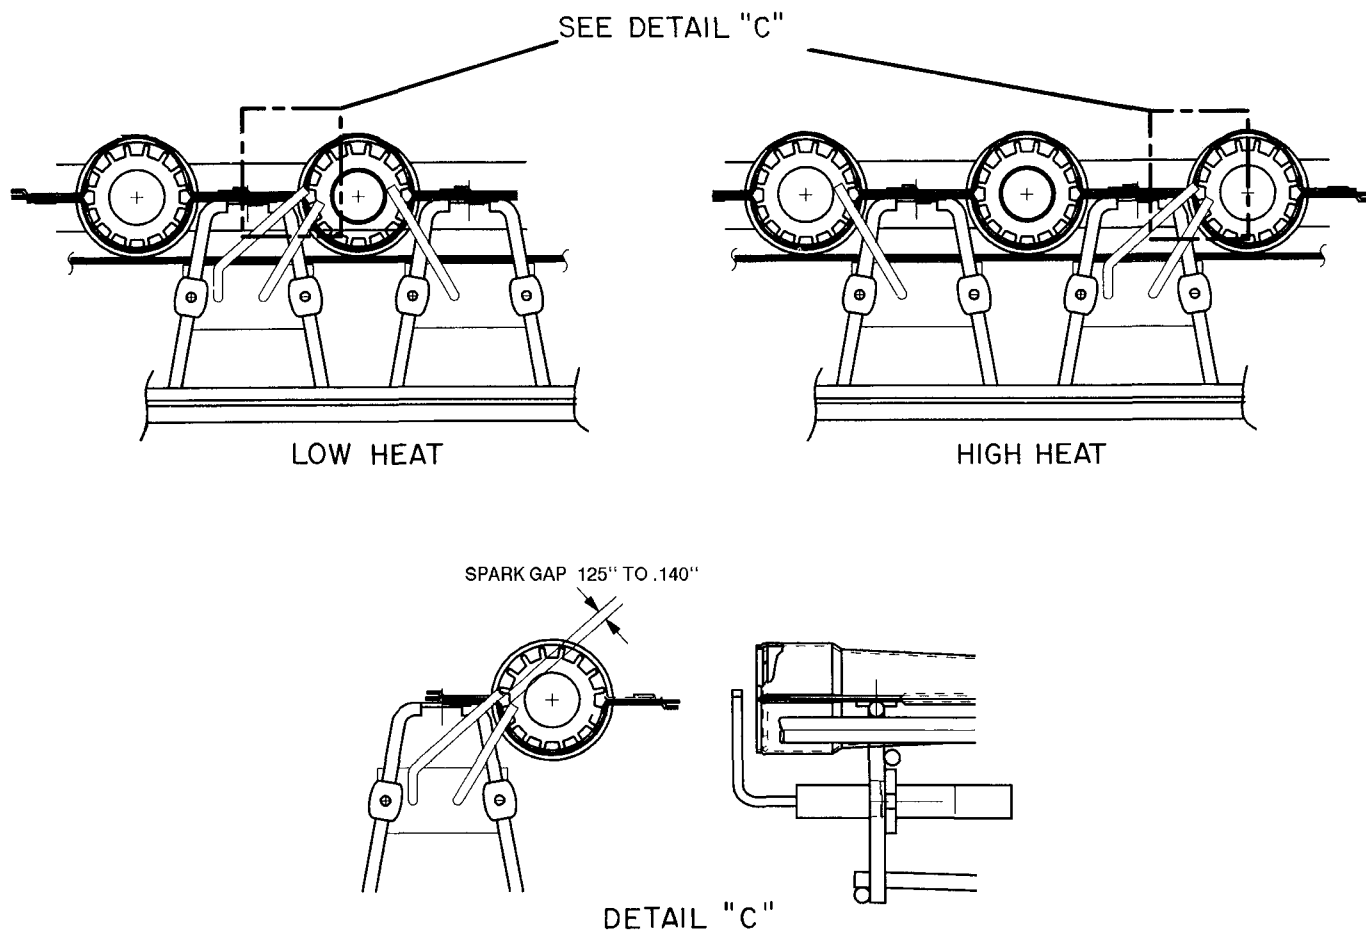


Fig. 23 — Spark Adjustment

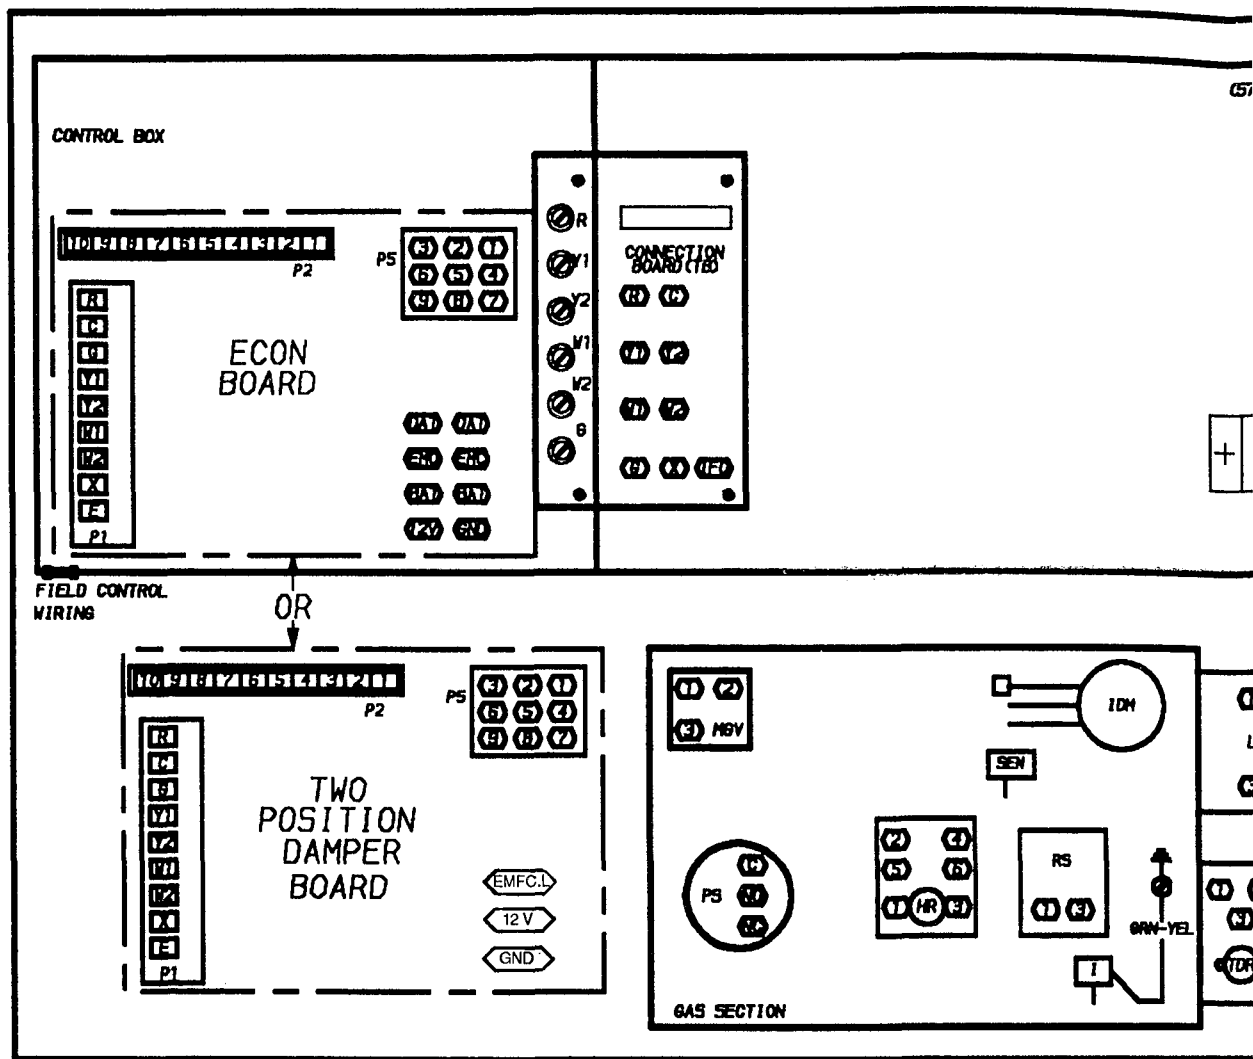


Fig. 24 — Comp

LEGEND AND NOTE

AHA	— Adjustable Heat Anticipator	I	— Ignitor	STAT	— Ther
BAT.	— Battery	ICP	— Ignitor Control Pack	SW	— Switch
C	— Contactor, Compressor	IDM	— Induced Draft	SW1	— Switch
CAP	— Capacitor	IDR	— Induced Draft Relay	SW2	— Switch
CC	— Cooling Compensator	IFC	— Indoor (Evaporator) Fan Contactor	SW3	— Switch
CH	— Crankcase Heater	IFM	— Indoor (Evaporator) Fan Motor	SW4	— Switch
COM	— Common	LO	— Low	TB	— Term
COMP	— Compressor	LS	— Limit Switch	TC	— Ther
CV	— Constant Volume	MGV	— Main Gas Valve	TDR	— Time
DAT	— Discharge Air Thermostat	MTR	— Motor	TH	— Ther
EC	— Enthalpy Control	MV	— Main Valve	TRAN	— Trans
ECON	— Economizer	OAT	— Outdoor Air Thermostat		
EMC/EMFC	— Energy Management Closed	OFM	— Outdoor (Condenser) Fan Motor		
EMFC.L	— Energy Management Fully Closed	P	— Plug		
EMO/EMFO	— Energy Management Open	PL	— Plug Assembly		
EQUIP	— Equipment	PS	— Pressure Switch		
FP	— Flame Prove	QT	— Quadruple Terminal		
FU	— Fuse	RES	— Resistor		
GND	— Ground	RS	— Rollout Switch		
HR	— Holding Relay	SEN	— Sensor		

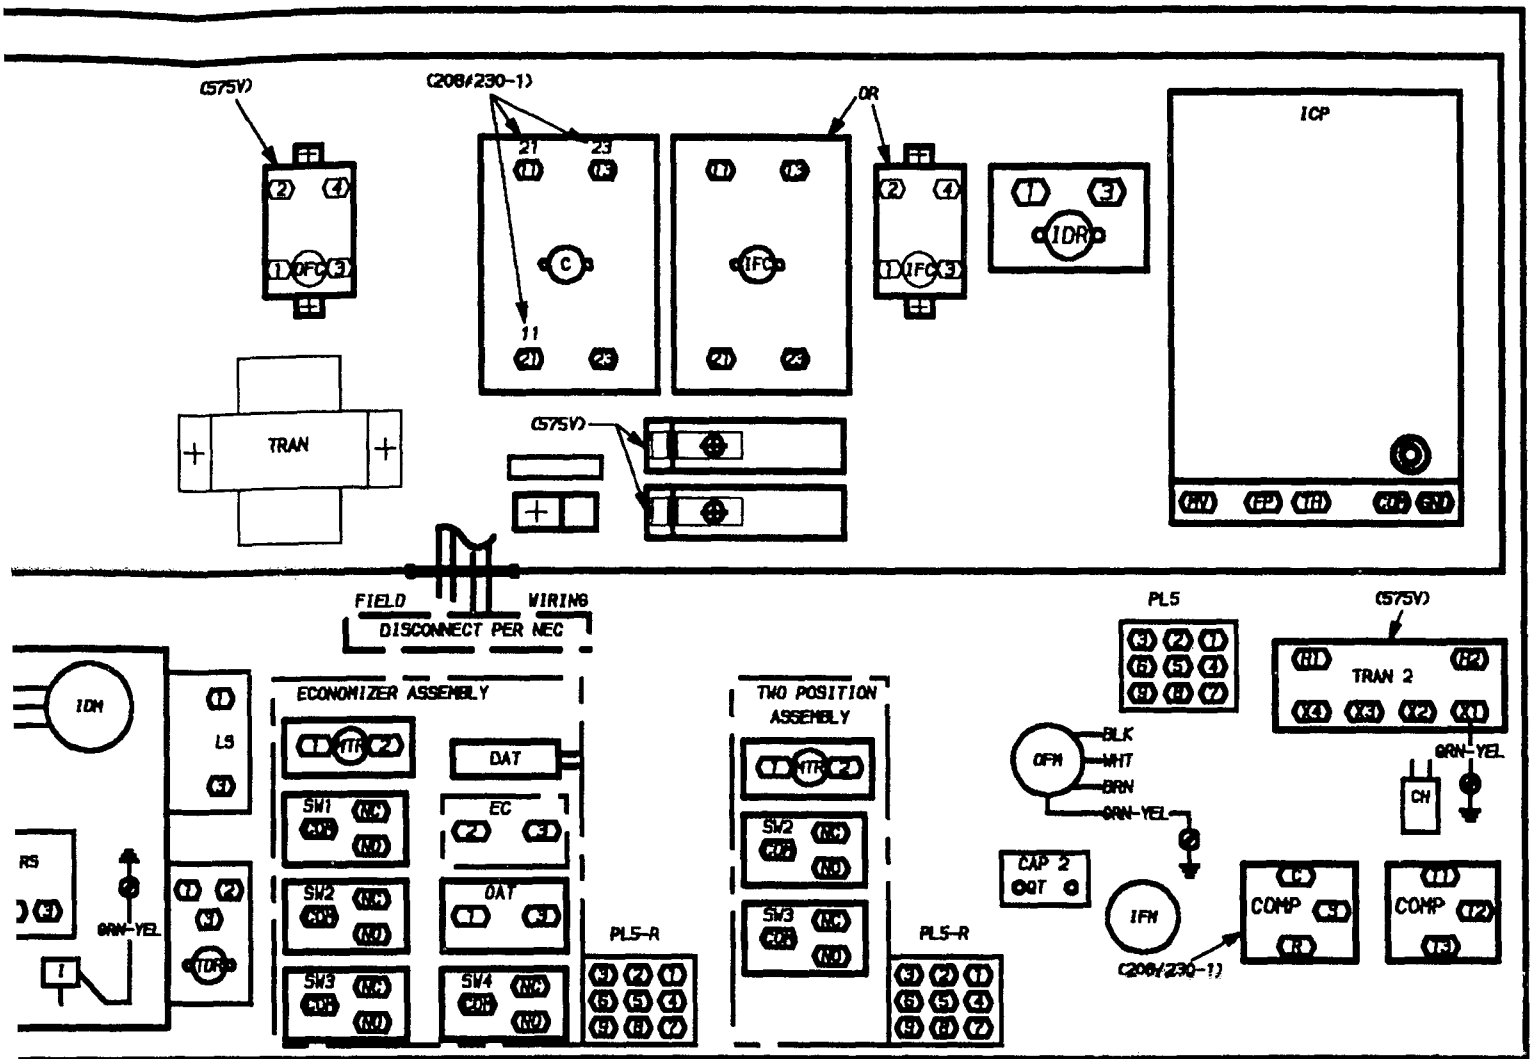


Fig. 24 -- Component Arrangement

END AND NOTES FOR FIG. 24 AND 25

STAT — Thermostat
SW — Switch
SW1 — Switch, Fully Open
SW2 — Switch, Fully Closed
SW3 — Switch, Minimum Vent Position
SW4 — Switch, Maximum Vent Position
TB — Terminal Block
TC — Thermostat-Cooling
TDR — Time Delay Relay
TH — Thermostat-Heating
TRAN — Transformer

Circuit Board Run

Field Splice

Marked Wire

Terminal (Marked)

Terminal (Unmarked)

Terminal Block

Terminal Econ Two-Position Board

Terminal CV Board

Splice

Splice (Marked)

Factory Wiring

Field Control Wiring

Field Power Wiring

Accessory or Optional Wiring

To indicate common potential only.
Not to represent wiring

NOTES:

1. If any of the original wire furnished must be replaced, it must be replaced with Type 90 C wire or its equivalent.
2. Numbers indicate the line location of contacts, a bracket over 2 numbers signifies single pole double throw contacts. An underlined number signifies a normally closed contact. Plain numbers (no lines) signify a normally open contact.
3. Three-phase motors are protected under primary single phasing conditions.
4. Set thermostat heat anticipator at 1 amp.
5. Use copper, copper clad aluminum or aluminum conductors.

FIELD
MAXIMUM WIRE POWER
SIZE 2 AND SEE NOTE #5

 


Fig. 25 — Wiring Sche

matic

