



Installation Instructions

Part Number CRHAILGD024A00

SAFETY CONSIDERATIONS

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.

Untrained personnel can perform the basic maintenance functions of replacing filters. All other operations should be performed by trained service personnel. When working on air-conditioning equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that may apply.

PACKAGE CONTENTS

ITEM	QUANTITY
Hood Side (Left Hand Side)	2
Hood Side (Right Hand Side)	2
Hood Top	2
Hood Bracket	2
Hail Guard Support	2
Protective Grille	2
Fastener Package	1

GENERAL

The accessory hail guard package is used on 48/50P2,P3,P4,P5040-060 units. The accessory hail guard components are

shipped in a single crate. There are components for 2 hail guard assemblies, one for each condenser coil on the unit. (Only one hood is shown in Fig. 1 and 2.)

INSTALLATION

1. Remove hail guards from packaging.
2. Attach right and left hand hood sides to corner post and condenser panel. When installed properly, flanges should be oriented as shown in Fig. 1 and 2.
3. For sizes 055 and 060, attach hail guard support to condenser blockoff panel. See Fig. 3.
4. Attach hood top to hood sides and unit top cover (sizes 040 and 050) or hail guard support (sizes 055 and 060) using screws from fastener package in the holes provided.
5. Attach hood bracket to bottom of hood sides using screws from fastener package in holes provided. Bottom flange of angle bracket should point towards condenser coil. See Fig. 4.
6. Attach protective grille to hood top and angle bracket with screws from fastener package.
7. Repeat Steps 1-6 to install hail guard on the condenser coil on the opposite side of the unit.

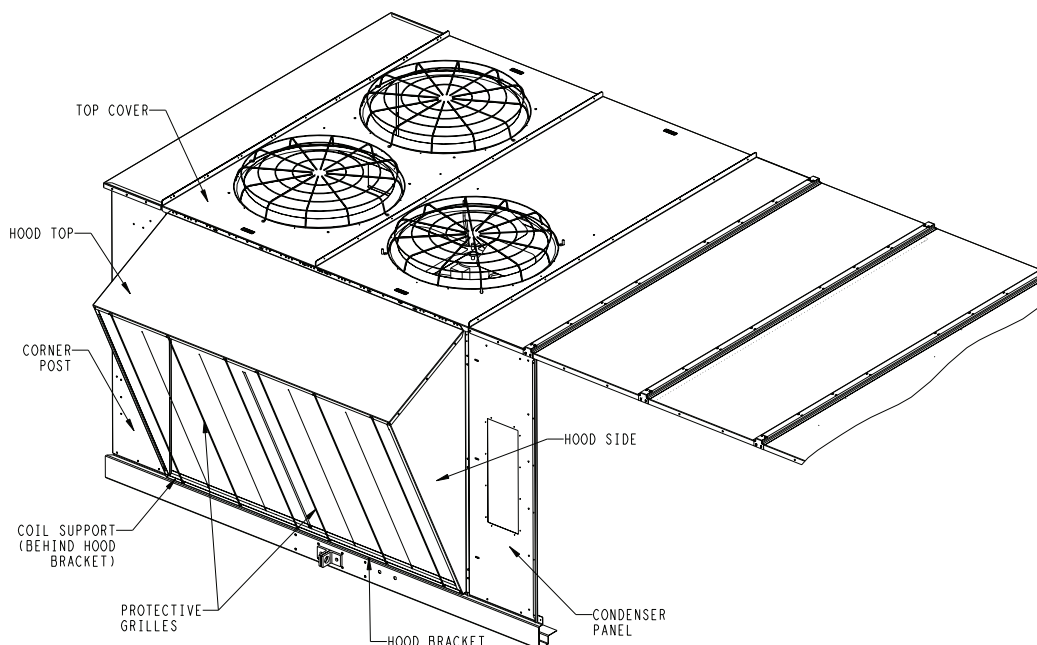


Fig. 1 — Accessory Hail Guard Details — 48/50P040-050 Units


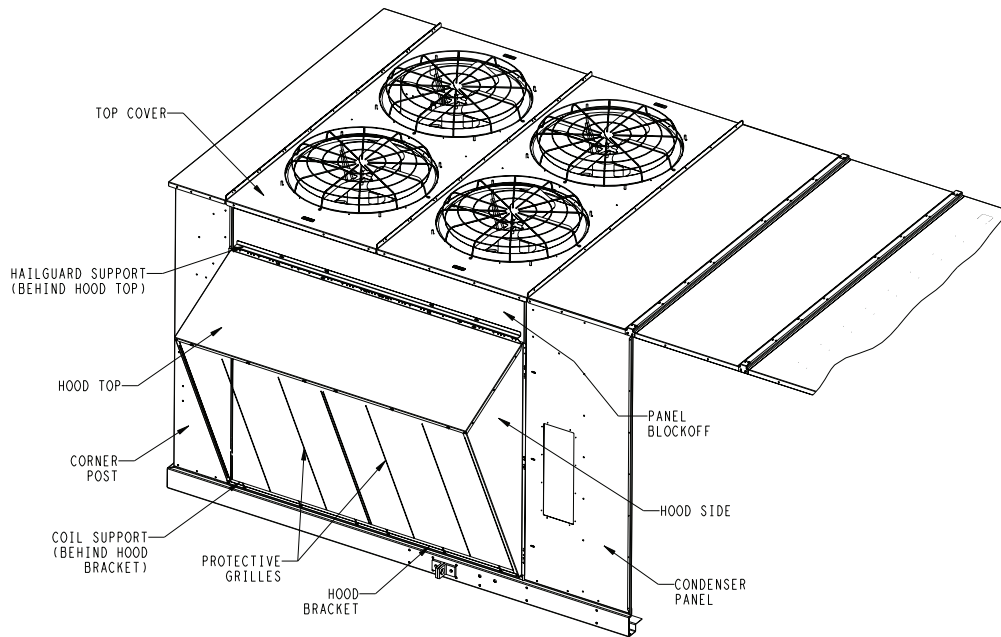


Fig. 2 — Accessory Hail Guard Details — 48/50P055,060 Units

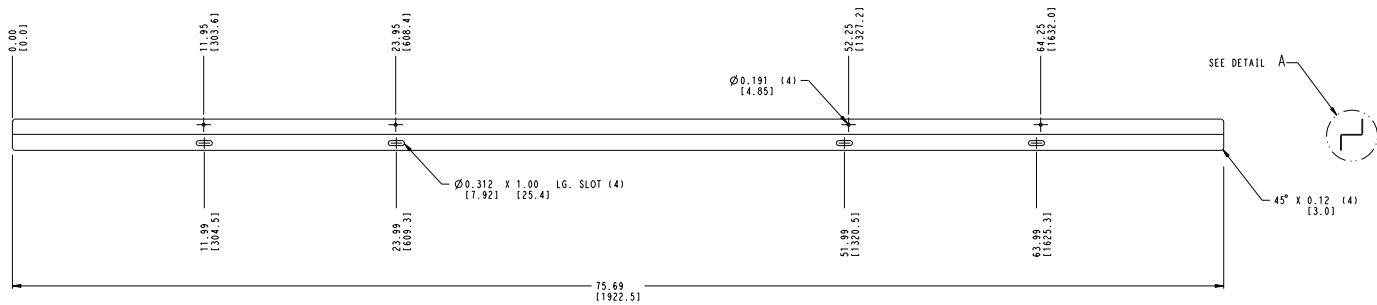

NOTE: Dimensions are in inches. Dimensions in [] are in millimeters.


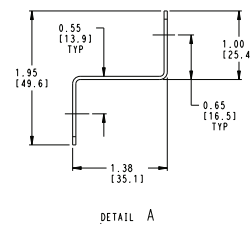


Fig. 3 — Accessory Hail Guard Support Details (48/50P055,060 Units Only)



NOTE: Dimensions are in inches. Dimensions in [] are in millimeters.

Fig. 4 — Accessory Hail Guard Hood Bracket Details

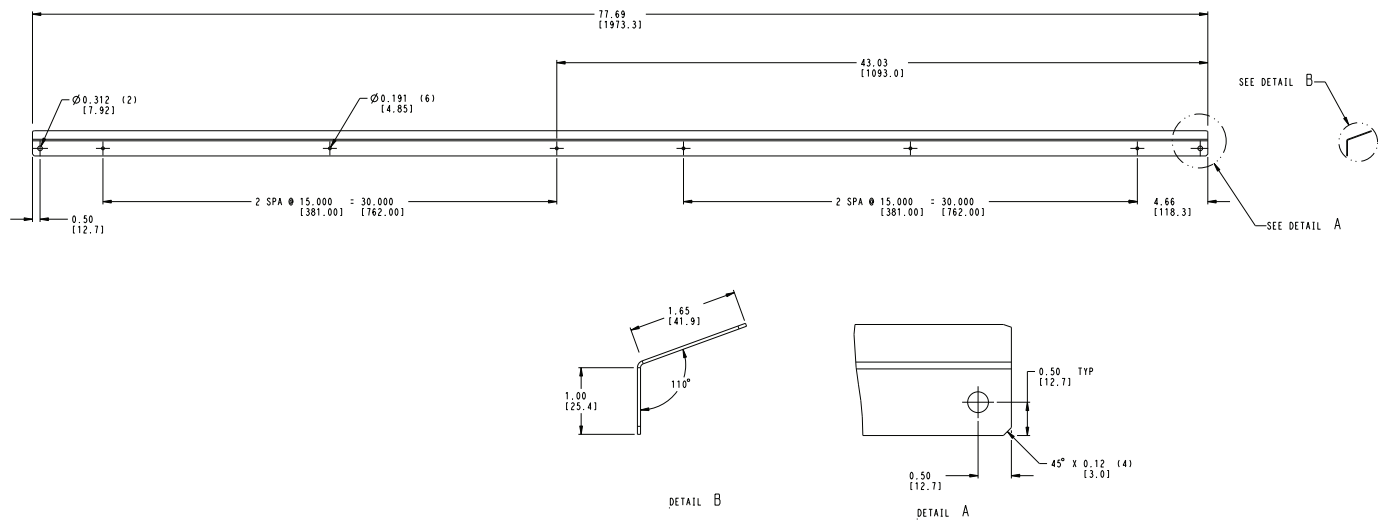