

# installation, start-up, and operation instructions

## DELUXE DOWNFLOW/HORIZONTAL GAS-FIRED, INDUCED-COMBUSTION FURNACE

### 376CAV Series C

Cancels: II 376C-40-4

II 376C-40-5  
2-15-92

**NOTE:** Read the entire instruction manual before starting the installation.

#### SAFETY CONSIDERATIONS

Installing and servicing heating equipment can be hazardous due to gas and electrical components. Only trained and qualified personnel should install, repair, or service heating equipment.

Untrained personnel can perform basic maintenance functions such as cleaning and replacing air filters. All other operations must be performed by trained service personnel. When working on heating equipment, observe precautions in the literature, tags, and labels attached to or shipped with the unit and other safety precautions that may apply.

**TABLE I—CLEARANCES FROM  
COMBUSTIBLE MATERIALS (Inches)**

| SIZES                               |                           | 040 AND 055 | 075 THRU 110 |
|-------------------------------------|---------------------------|-------------|--------------|
| <b>DOWNFLOW</b>                     |                           |             |              |
| <b>Sides</b>                        | Single-Wall Vent          | 1           | 0            |
|                                     | Type B-1 Double-Wall Vent | 0           | 0            |
| <b>Back</b>                         |                           | 0           | 0            |
| <b>Top</b>                          |                           | 1           | 1            |
| <b>Front</b>                        | Single-Wall Vent          | 6           | 6            |
|                                     | Type B-1 Double-Wall Vent | 3           | 3            |
| <b>Vent</b>                         | Single-Wall Vent          | 6           | 6            |
|                                     | Type B-1 Double-Wall Vent | 1           | 1            |
| <b>HORIZONTAL (In Alcove/Attic)</b> |                           |             |              |
| <b>Sides *</b>                      |                           | 1           | 0            |
| <b>Back</b>                         |                           | 0           | 0            |
| <b>Top</b>                          | Single-Wall Vent          | 1           | 1            |
|                                     | Type B-1 Double-Wall Vent | 1           | 1            |
| <b>Front</b>                        |                           | 18          | 18           |
| <b>Vent</b>                         | Single-Wall Vent          | 6           | 6            |
|                                     | Type B-1 Double-Wall Vent | 1           | 1            |
| <b>HORIZONTAL (In Closet)</b>       |                           |             |              |
| <b>Sides *</b>                      |                           | 1           | 1            |
| <b>Back</b>                         |                           | 3           | 3            |
| <b>Top</b>                          | Single-Wall Vent          | 2           | 2            |
|                                     | Type B-1 Double-Wall Vent | 2           | 2            |
| <b>Front</b>                        | Single-Wall Vent          | 6           | 6            |
|                                     | Type B-1 Double-Wall Vent | 3           | 3            |
| <b>Vent</b>                         | Single-Wall Vent          | 6           | 6            |
|                                     | Type B-1 Double-Wall Vent | 1           | 1            |

\* Indicates supply or return sides when furnace is in the horizontal position.

#### NOTES:

1. Provide 30-inch front clearance for servicing. An open door in front of the furnace can meet this requirement.
2. A minimum clearance of 3 inches must be provided in front of the furnace for combustion air and proper operation.
3. Line contact is permitted as shown in Figure 7.



Follow all safety codes. In the United States, follow all safety codes including the National Fuel Gas Code NFPA No. 54-1988/ANSI Z223.1-1988. In Canada, refer to the current edition of the National Standard of Canada CAN/CGA.B149.1- and .2-M91 Natural Gas and Propane Gas Installation Codes. Wear safety glasses and work gloves. Have fire extinguisher available during start-up and adjustment procedures and service calls.

Recognize safety information: This is the safety-alert symbol  $\triangle$ . When you see this symbol on the furnace and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal word—DANGER, WARNING, or CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies hazards that **could** result in personal injury or death. CAUTION is used to identify unsafe practices, which **would** result in minor personal injury or product and property damage.

These instructions cover minimum requirements and conform to existing national standards and safety codes. In some instances, these instructions exceed certain local codes and ordinances, especially those that may not have kept up with changing residential construction practices. *We require these instructions as a minimum for a safe installation.*

#### INTRODUCTION

The Model 376CAV, Series C Furnaces are available in sizes 40,000-through 110,000-Btuh output capacities.

The design of the downflow/horizontal gas-fired furnace is A.G.A./C.G.A. certified for natural and propane gas and for installation on noncombustible flooring. The furnace may be installed on combustible flooring when installed with the accessory downflow subbase. This furnace is for installation in alcoves, attics, crawl spaces, basements, closets, or utility rooms. The design of this furnace line is **not** A.G.A./C.G.A. certified for installation in mobile homes, recreation vehicles, or outdoors.

Before installing the furnace, refer to the current edition of the National Fuel Gas Code NFPA No. 54-1988/ANSI Z223.1-1988. Canadian installations must be installed in accordance with CAN/CGA.B149 Installation Code and all authorities having jurisdiction. For further information, the National Fuel Gas Code is available from National Fire Protection Association Inc. Batterymarch Park, Quincy, MA 02269, American Gas Association, 1515 Wilson Boulevard, Arlington, VA 22209, or from Literature Distribution.

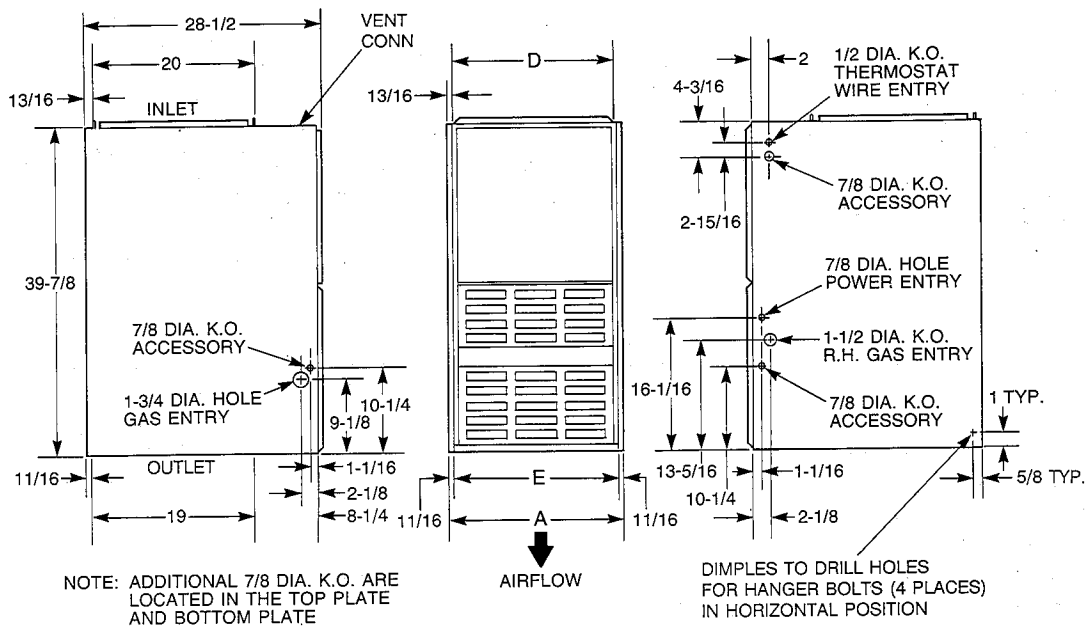


Figure 1—Dimensional Drawing

A88324

TABLE II—DIMENSIONS (INCHES)

| SIZE   | A       | D       | E        | VENT CONN | SHIP. WT |
|--------|---------|---------|----------|-----------|----------|
| 024040 | 14-3/16 | 12-9/16 | 12-11/16 | 4         | 124      |
| 036040 | 14-3/16 | 12-9/16 | 12-11/16 | 4         | 127      |
| 024055 | 14-3/16 | 12-9/16 | 12-11/16 | 4         | 141      |
| 036055 | 14-3/16 | 12-9/16 | 12-11/16 | 4         | 145      |
| 036075 | 17-1/2  | 15-7/8  | 16       | 4         | 154      |
| 048075 | 17-1/2  | 15-7/8  | 16       | 4         | 154      |
| 048095 | 17-1/2  | 15-7/8  | 16       | 4         | 171      |
| 060095 | 21      | 19-3/8  | 19-1/2   | 4         | 181      |
| 060110 | 24-1/2  | 22-7/8  | 23       | 5         | 192      |

**CAUTION:** Application of this furnace should be indoors with special attention given to vent sizing and material, gas input rate, air temperature rise, and unit sizing. Improper installation or misapplication of the furnace can require excessive servicing or cause premature component failure.

Installation must conform to the regulations of the serving gas supplier and the local building, heating, and plumbing codes in effect in the area in which the installation is made, or in the absence of local codes, with the requirements of the National Fuel Gas Code.

This furnace is designed for a minimum continuous return-air temperature of 60 degrees F db or intermittent operation down to 55 degrees F db such as when used with a thermostat night setback. Return-air temperature must not exceed a maximum of 85 degrees F db.

**WARNING:** Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions which may cause personal injury, loss of life, or property damage. Consult a qualified installer, service agency, local gas supplier or your distributor or branch for information or assistance. The qualified installer or agency must use only factory-authorized and listed kits or accessories when modifying this product. A failure to follow this warning could result in electrical shock, fire, personal injury, or death.

For accessory installation details, refer to the applicable installation literature.

**NOTE:** Remove all shipping brackets and materials before operating the furnace.

## I. LOCATION

### A. General

**CAUTION:** Do not install furnace in a corrosive or contaminated atmosphere. Make sure all combustion and circulating air requirements are followed, in addition to all local codes and ordinances. Do not use this furnace during construction when adhesives, sealers, and/or new carpets are being installed. If the furnace is required during construction, use clean outside air for combustion and ventilation. Compounds of chlorine and fluorine when burned with combustion air form acids which will cause corrosion of the heat exchangers and metal vent system. Some of these compounds are found in paneling and dry wall adhesives, paints, thinners, masonry cleaning materials, and many other solvents commonly used in the construction process.

This furnace must be installed so the electrical components are protected from water.

Locate the furnace close to the chimney/vent and as near the center of the air distribution system as possible. The furnace should be installed as level as possible.

When a furnace is installed so that the supply ducts carry air to areas outside the space containing the furnace, the return air must also be handled by a duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.

Provide ample space for servicing and cleaning. Always comply with the minimum fire protection clearances shown on the unit rating plate. This furnace shall not be installed directly on carpeting, tile, or any combustible material other than wood flooring. The furnace may be installed on combustible flooring when installed with the accessory downflow subbase, which is available from your distributor or branch when required.

## B. Location With Respect to Cooling Equipment

The cooling coil must be installed parallel with, or on the downstream side of, the furnace to avoid condensation in the heat exchangers. When installed parallel with a furnace, dampers or other means used to control the flow of air must prevent chilled air from entering the unit. If the dampers are manually operated, they must be equipped with means to prevent operation of either unit unless the damper is in the full-heat or full-cool position.

## C. Hazardous Locations

When the furnace is installed in a residential garage, it must be installed so that the burners and ignition source are located no less than 18 inches above the floor. Also, the furnace should be protected from physical damage by vehicles.

When a furnace is installed in public garages, airplane hangars, or other buildings having hazardous atmospheres, the unit must be installed in accordance with the recommended good practice requirements of the National Fire Protection Association, Inc.

## II. AIR FOR COMBUSTION AND VENTILATION

Provisions for adequate combustion and ventilation air must be provided in accordance with Section 5.3, Air for Combustion and Ventilation, of the National Fuel Gas Code, ANSI Z223.1-1988, or applicable provisions of the local building codes.

Canadian installations must be installed in accordance with CAN/CGA.B149 Installation Code, and all authorities having jurisdiction.



**CAUTION:** Air for combustion must not be contaminated by halogen compounds, which include fluoride, chloride, bromide and iodide. These elements are found in aerosol sprays, detergents, bleaches, cleaning solvents, salts, air fresheners, and other household products.



**CAUTION:** THE OPERATION OF EXHAUST FANS, KITCHEN VENTILATION FANS, CLOTHES DRYERS, OR FIREPLACES COULD CREATE A NEGATIVE PRESSURE CONDITION AT THE FURNACE. MAKE-UP AIR MUST BE PROVIDED FOR THE VENTILATION DEVICES, IN ADDITION TO THAT REQUIRED BY THE FURNACE.

All fuel-burning equipment must be supplied with air for combustion of the fuel. Sufficient air **MUST** be provided to insure there will not be a negative pressure in the equipment room or space. In addition, a positive seal **MUST** be made between the furnace cabinet and the return-air duct to avoid pulling air from the burner area and draft safeguard opening.

The requirements for combustion and ventilation air depend upon whether the furnace is located in a **confined** or **unconfined** space. A confined space is defined as a space whose volume is less than 50 cubic feet per 1000 Btuh of the total input ratings of all appliances installed in that space.

### A. Unconfined Space

An unconfined space must have at least 50 cubic feet for each 1000 Btuh of input for all the appliances (i.e. furnaces, clothes dryer, water heaters, etc.) in the space.


For Example:

| 376CAV FURNACE<br>INPUT BTUH | MINIMUM SQ FEET WITH<br>7-1/2 FOOT CEILING |
|------------------------------|--------------------------------------------|
| 46,000                       | 307                                        |
| 69,000                       | 460                                        |
| 92,000                       | 613                                        |
| 115,000                      | 767                                        |
| 135,000                      | 920                                        |

If the unconfined space is constructed unusually tight, air for combustion and ventilation **MUST** come from either the outdoors or spaces freely communicating with the outdoors. Combustion and ventilation openings must be sized the same as for a confined space. A minimum opening with a total of not less than 1 square inch per 5000 Btuh of total input rating for all equipment must be provided. Return air must not be taken from the room, unless an equal or greater amount of air is supplied to the room.

### B. Confined Space

A confined space **MUST** have two permanent openings, one within 12 inches of the ceiling, and the other within 12 inches of the floor. (See Figure 2.)

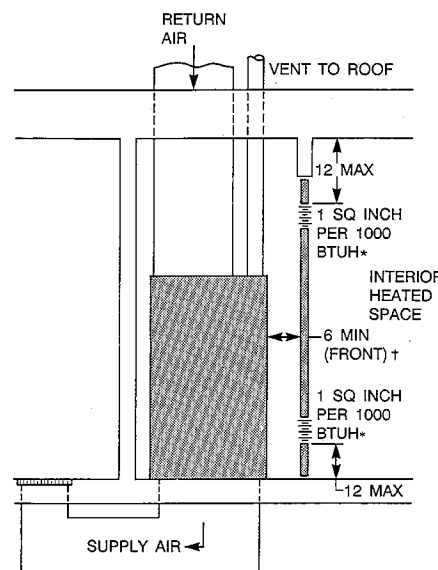

\* Minimum opening size is 100 square in.

† Minimum of 3 in. when type-B vent is used.

A88502

Figure 2—Air for Combustion and Ventilation

**NOTE:** In determining the free area of an opening, the blocking effect of the louvers, grilles, and screens must be considered. If the free area of a louver or grille design is unknown, assume that wood louvers have a 20 percent free area and metal louvers or grilles have a 60 percent free area. Screens, when used, must not be smaller than 1/4-inch mesh. Louvers and grilles must be constructed so they cannot be closed.

The size of the openings depends upon whether the air comes from inside or outside of the structure.

#### 1. All air from inside the structure:


Each opening **MUST** have at least 1 square inch of free area per 1000 Btuh of the total input for all equipment within the confined space, but not less than 100 square inches per opening. (See Figure 2.)

For Example:

| 376CAV FURNACE<br>INPUT BTUH | FREE AREA PER<br>OPENING<br>(SQUARE INCHES) |
|------------------------------|---------------------------------------------|
| 46,000                       | 100                                         |
| 69,000                       | 100                                         |
| 92,000                       | 100                                         |
| 115,000                      | 115                                         |
| 135,000                      | 138                                         |

If the building is constructed unusually tight, a permanent opening directly communicating with the outdoors should be provided. This opening should have a minimum free area of 1 square inch per 5000 Btuh of total input rating for all equipment in the enclosure.

If the furnace is installed on a raised platform to provide a return-air plenum, and return air is taken directly from the hallway or space adjacent to the furnace, all air for combustion must come from outdoors. (See Figure 3.)

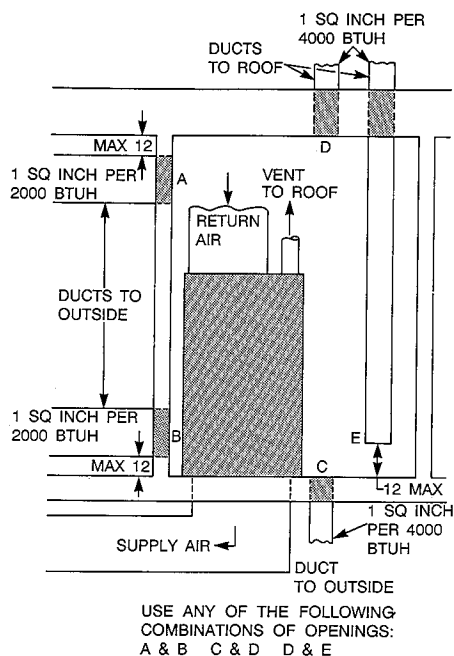

A88503

Figure 3—Air for Combustion and Ventilation

2. All air from outdoors:

- If combustion air is taken from outdoors through vertical ducts, the openings and ducts MUST have at least 1 square inch of free area per 4000 Btuh of the total input for all equipment within the confined space.

For Example:

| 376CAV FURNACE<br>INPUT BTUH | FREE AREA PER<br>OPENING<br>(SQUARE INCHES) | ROUND PIPE<br>(INCHES DIA) |
|------------------------------|---------------------------------------------|----------------------------|
| 46,000                       | 11.5                                        | 4                          |
| 69,000                       | 17.3                                        | 5                          |
| 92,000                       | 23.0                                        | 6                          |
| 115,000                      | 28.8                                        | 7                          |
| 135,000                      | 34.5                                        | 7                          |

- If combustion air is taken from the outdoors through horizontal ducts, the openings and ducts MUST have at least 1 square inch of free area per 2000 Btuh of the total input for all equipment within the confined space.

For Example:

| 376CAV FURNACE<br>INPUT BTUH | FREE AREA PER<br>OPENING<br>(SQUARE INCHES) | ROUND PIPE<br>(INCHES DIA) |
|------------------------------|---------------------------------------------|----------------------------|
| 46,000                       | 23.0                                        | 6                          |
| 69,000                       | 34.3                                        | 7                          |
| 92,000                       | 46.0                                        | 8                          |
| 115,000                      | 57.6                                        | 9                          |
| 135,000                      | 69.0                                        | 10                         |

When ducts are used, they must be of the same cross-sectional area as the free area of the openings to which they connect. The minimum dimension of rectangular ducts must not be less than 3 inches. (See Figure 3.)

### III. SUPPLY-AIR PLENUM INSTALLATION (DOWNFLOW)

#### A. Installation On a Concrete Slab

- Construct hole in floor per dimensions in Figure 4 and Table III.
- Place plenum and furnace as shown in Figure 5.

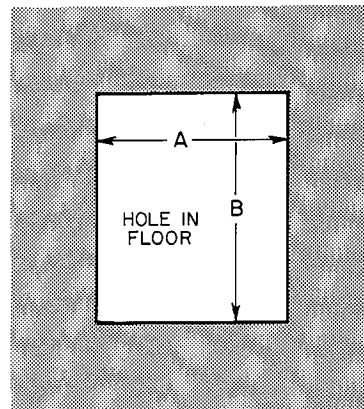


Figure 4—Floor Opening for Concrete Slab A73382

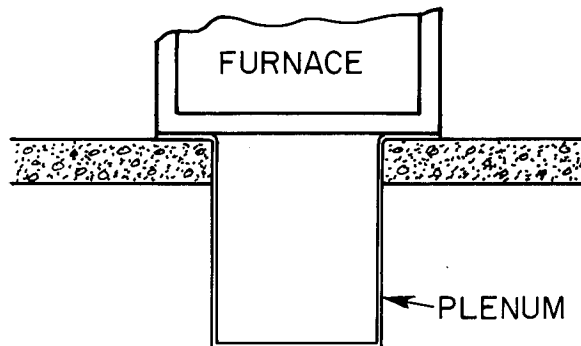


Figure 5—Furnace on a Concrete Slab  
(Non-Garage Installation)

A73383

FTABLE III—OPENING DIMENSIONS

| FURNACE CASING<br>WIDTH | A       | B         |            |
|-------------------------|---------|-----------|------------|
|                         |         | Heat-Only | Heat/Cool* |
| 14-3/16                 | 13-1/8  | 19-5/8    | 19-7/16    |
| 17-1/2                  | 16-7/16 | 19-5/8    | 19-7/16    |
| 21                      | 19-7/8  | 19-5/8    | 19-7/16    |
| 24-1/2                  | 23-7/16 | 19-5/8    | 19-7/16    |

\* These dimensions apply when a Model CB or CD Evaporator Coil casing is to be installed.

#### B. Installation On a Combustible Floor

1. Cut and frame hole in floor per dimensions in Installation Instructions packaged with downflow subbase.
2. When completed, downflow subbase, plenum, and furnace (or coil casing when used) should be installed as shown in Figure 6.

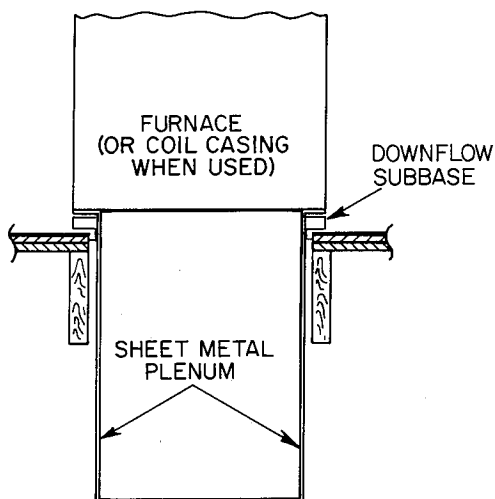


Figure 6—Furnace, Plenum, and Subbase Installed on a Combustible Floor

A78651

#### IV. HORIZONTAL ATTIC INSTALLATION

**WARNING:** Do not install the furnace on its back; safety control operation will be adversely affected. Never connect return-air ducts to the sides or back of the furnace. A failure to follow this warning could result in fire, personal injury, or death.

The furnace can be installed horizontally on either the lefthand (LH) or righthand (RH) side. A typical attic installation is shown in Figure 7.

##### A. Construct a Working Platform

1. Construct working platform on location where all required furnace clearances are obtainable. (See Table I and Figure 7.)

##### B. Install Furnace

1. Position furnace in desired location.
2. Connect gas supply pipe; see Figure 7 for typical piping entry.
3. Connect supply- and return-air ducts.
  - a. Install field-supplied filter retainers as indicated in Figure 8 and Table IV before connecting return-air duct to furnace.
4. Install 24- x 24-inches sheet metal shield on platform in front of louvered control panel, as shown in Figure 7.

#### V. HORIZONTAL CRAWL SPACE INSTALLATION

The furnace can be installed horizontally with either the LH or RH side up. In a crawl space, the furnace can either be hung from the floor joist or installed on suitable blocks or pad. The furnace can be suspended from each corner by hanger bolts (four each 3/8-inch all-thread rod) cut to desired length, 1 x 3/8 flat washer, 3/8 lockwasher, and 3/8 nut. Dimples are provided for hole locations. (See Figure 1.)

The horizontal crawl space installation is very similar to the attic; therefore, refer to Section IV. The installation of a sheet metal shield in front of the louvered control panel is covered in Section IV. For a

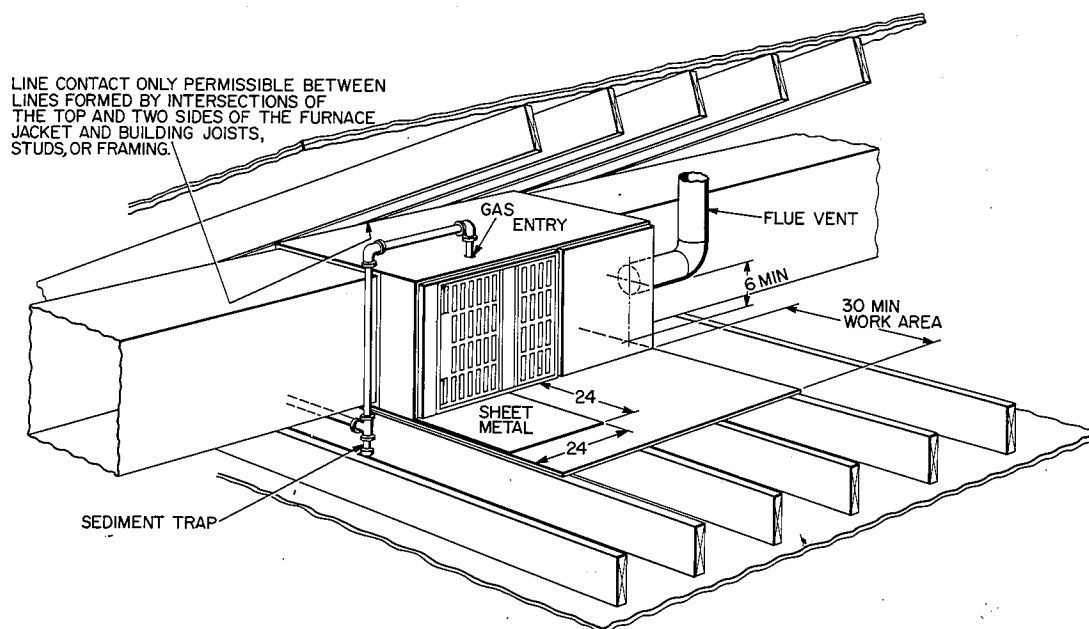


Figure 7—Typical Attic Installation

A82178

crawl space installation, this same sheet metal shield must be installed above the louvered control panel. Extend the sheet metal shield over the furnace top far enough to cover the gas pipe entry hole.

## VI. FILTER ARRANGEMENT

**WARNING:** Never operate unit without a filter or with filter access door removed. A failure to follow this warning could result in fire, personal injury, or death.

The two factory-supplied filters are shipped in the blower compartment. After the return-air duct has been connected to the furnace, install the filters in a V-formation inside the return-air plenum. See Figure 8 and Table IV for horizontal applications. Horizontal filter retainers must be field-supplied. See Figure 9 for downflow applications.

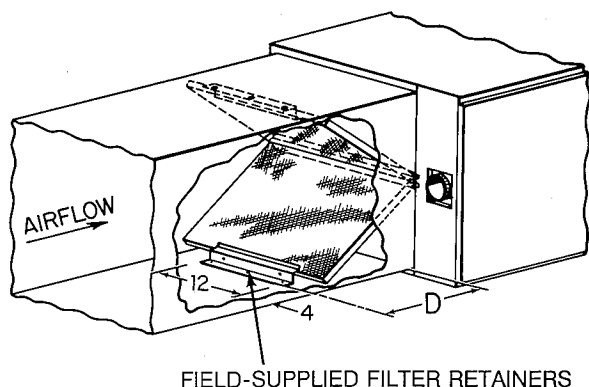


Figure 8—Horizontal Filter Arrangement A82173

TABLE IV—FILTER RETAINER

| FURNACE CASING WIDTH | FILTERS         | D      |
|----------------------|-----------------|--------|
| 14-3/16              | (2) 14 x 20 x 1 | 14-3/8 |
| 17-1/2               | (2) 14 x 20 x 1 | 13-3/8 |
| 21                   | (2) 16 x 20 x 1 | 11-5/8 |
| 24-1/2               | (2) 16 x 20 x 1 | 10-1/4 |

## VII. GAS PIPING

Gas piping must be installed in accordance with national and local codes. Refer to the current edition of the National Fuel Gas Code.

Canadian installations must be installed in accordance with CAN/CGA.B149 Installation Code, and all authorities having jurisdiction.

The gas supply line should be a separate line directly from the meter to the furnace, if possible. Refer to Table V for recommended gas pipe sizing. Risers should be used to connect to the furnace and to the meter.

TABLE V—MAXIMUM CAPACITY OF PIPE \*

| NOMINAL<br>IRON PIPE<br>SIZE (INCHES) | INTERNAL<br>DIAMETER<br>(INCHES) | LENGTH OF PIPE (FEET) |      |      |     |     |
|---------------------------------------|----------------------------------|-----------------------|------|------|-----|-----|
|                                       |                                  | 10                    | 20   | 30   | 40  | 50  |
| 1/2                                   | 0.622                            | 175                   | 120  | 97   | 82  | 73  |
| 3/4                                   | 0.824                            | 360                   | 250  | 200  | 170 | 151 |
| 1                                     | 1.049                            | 680                   | 465  | 375  | 320 | 285 |
| 1-1/4                                 | 1.380                            | 1400                  | 950  | 770  | 660 | 580 |
| 1-1/2                                 | 1.610                            | 2100                  | 1460 | 1180 | 990 | 900 |

Ref: Table C-4 NFPA 54/ANSI Z223.1-1988.

\* Cubic feet of gas per hour, for gas pressures of 0.5 psig (14 inches wc) or less, and a pressure drop of 0.5 inches wc (based on a 0.60 specific gravity gas).

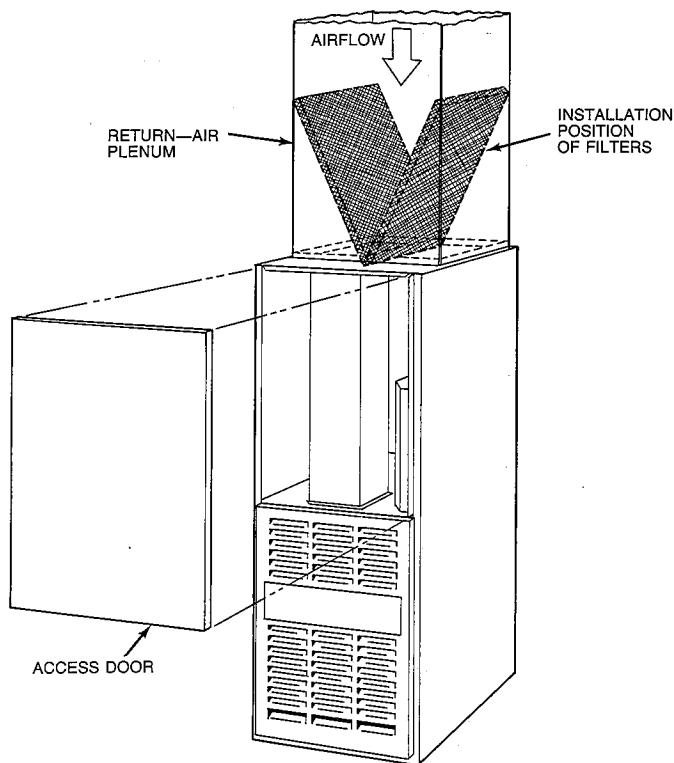


Figure 9—Downflow Filter Arrangement

A88486

**CAUTION:** If a flexible connector is required or allowed by the authority having jurisdiction, black iron pipe shall be installed at the gas valve and extend a minimum of 2 inches outside the furnace casing.

**WARNING:** Use the proper length of pipes to avoid stress on the gas control manifold. A failure to follow this warning could result in a gas leak causing a fire, explosion, personal injury, or death.

**CAUTION:** Use a backup wrench when connecting the gas pipe to the furnace to avoid damaging gas controls.

**WARNING:** Never purge a line into a combustion chamber. Never use matches, candles, flame, or other sources of ignition to check for gas leakage. Use a soap-and-water solution to check for gas leaks. A failure to follow this warning could result in fire, explosion, personal injury, or death.

Joint compounds (pipe dope) should be applied sparingly and only to the male threads of the joints. This pipe dope must be resistant to the action of propane gas.

Install an accessible manual shutoff valve upstream of the furnace gas controls and within 72 inches of the furnace. A 1/8-inch NPT plugged tapping, accessible for test gage connection, must be installed immediately upstream of the gas supply connection to the furnace and downstream of the manual shutoff valve. Place a ground joint union between the gas control manifold and the manual shutoff.

Install a sediment trap in the riser leading to the furnace. The trap can be installed by connecting a tee to the riser leading from the furnace. Connect a capped nipple into the lower end of the tee. The capped nipple should extend below the level of the gas controls. (See Figure 10.)

Piping should be pressure-tested in accordance with local and national plumbing and gas codes before the furnace has been attached. If the pressure exceeds 0.5 psig (14 inches wc), the gas supply pipe must be disconnected from the furnace and capped before the pressure test. If the test pressure is equal to or less than 0.5 psig (14 inches wc), close the manual shutoff valve located on the gas valve before the test. It is recommended that the ground joint union be loosened before pressure testing.

After all connections have been made, purge the lines and check for gas leakage with regulated gas supply pressure.

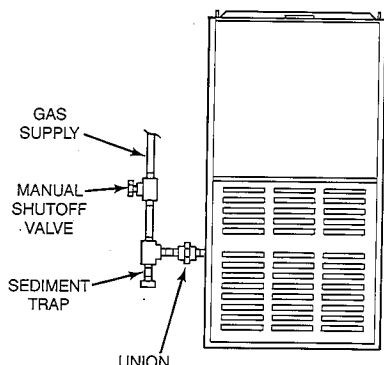


Figure 10—Typical Gas Pipe Arrangement A89414

## VIII. ELECTRICAL CONNECTIONS

### A. 115-Volt Wiring

Refer to the unit rating plate or Table VI for equipment electrical requirements. The control system requires an earth ground for proper operation.



**CAUTION:** Do not connect aluminum wire between disconnect switch and furnace. Use only copper wire.

Make all electrical connections in accordance with the current edition of the National Electrical Code ANSI/NFPA 70-1990, and any local codes or ordinances that might apply. For Canadian installations, all electrical connections must be made in accordance with CSA C22.1 Canadian Electrical Code, or authorities having jurisdiction.

**NOTE:** Proper polarity must be maintained for 115-volt wiring. If polarity is incorrect, the microprocessor will shut off gas flow shortly after the completion of ignition trial period.



**WARNING:** The cabinet must have an uninterrupted or unbroken ground according to National Electrical Code, ANSI/NFPA 70-1990 and Canadian Electrical Code, CSA C22.1 or local codes to minimize personal injury if an electrical fault should occur. This may consist of electrical wire or conduit approved for electrical ground when installed in accordance with existing electrical codes. Do not use gas piping as an electrical ground.

### B. 24-Volt Wiring

Make field 24-volt connections at the 24-volt terminal strip. (See Figure 11.) Connect terminal Y as shown in Figure 12 for proper operation in cooling mode. Use AWG No. 18 "color-coded" wire only.

When the furnace is installed in the horizontal position with RH discharge air, 24-volt wire connections can be made easier by removing the two control box mounting screws and letting the control box turn so that the 24-volt screw terminals are visible. Be sure to reinstall the control box after the connections are made.

The 24-volt circuit contains an automotive-type, 3-amp fuse located on the main control board. Any direct shorts during installation, service, or maintenance could cause this fuse to "blow." If fuse replacement is required, use **only** a 3-amp fuse of identical size.

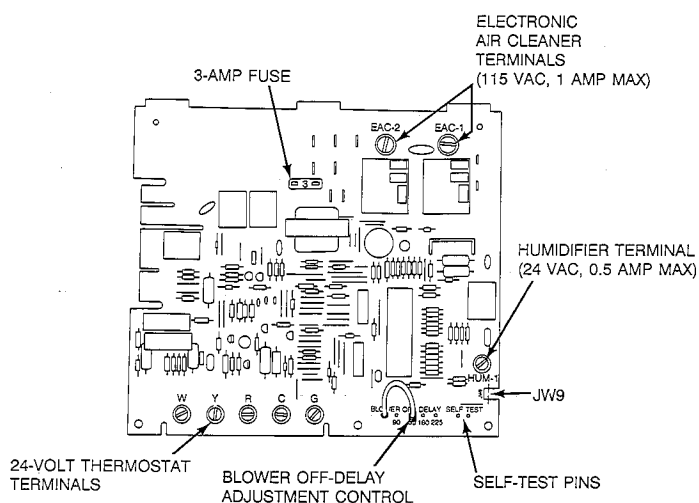


Figure 11—Control Center A91060

### C. Accessory

#### 1. Electronic air cleaner

Two screw terminals (EAC-1 and EAC-2) are provided for electronic air cleaner connection. The terminals are energized with 115-vac, 1-amp maximum during blower motor operation.

#### 2. Humidifier

Screw terminals (HUM-1 and C) are provided for 24-vac humidifier connection. The terminals are energized with 24-vac, 0.5-amp maximum during heating blower motor operation.

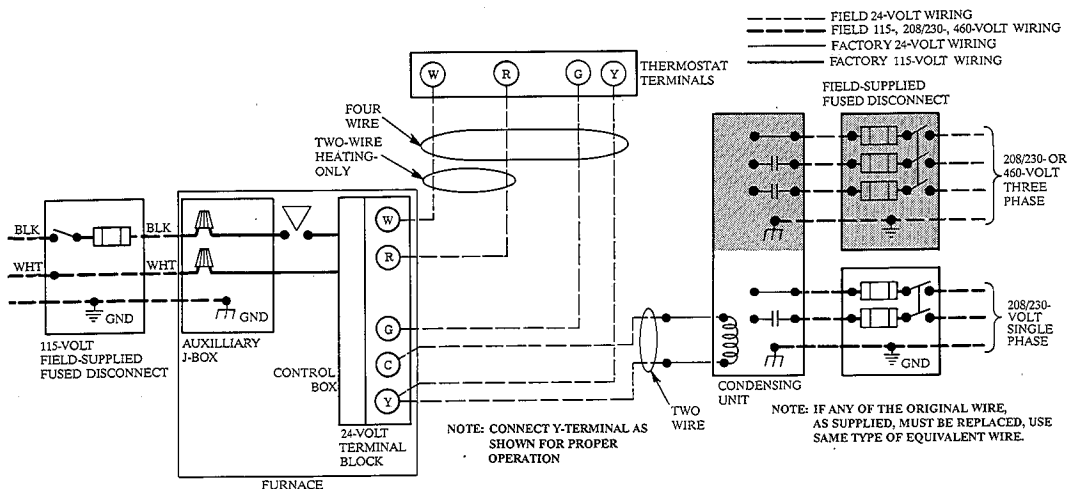


Figure 12—Heating and Cooling Application Wiring Diagram

A78461

TABLE VI—ELECTRICAL DATA

| FURNACE SIZE | VOLTS-HERTZ-PHASE | OPERATING VOLTAGE RANGE |      | MAX UNIT AMPS | MIN WIRE GAGE | MAX WIRE LENGTH FEET* | MAX FUSE† OR HACR-TYPE CKT BKR AMPS |
|--------------|-------------------|-------------------------|------|---------------|---------------|-----------------------|-------------------------------------|
|              |                   | Max*                    | Min* |               |               |                       |                                     |
| 024040       | 115—60—1          | 127                     | 104  | 6.6           | 14            | 42                    | 15                                  |
| 036040       | 115—60—1          | 127                     | 104  | 8.1           | 14            | 34                    | 15                                  |
| 024055       | 115—60—1          | 127                     | 104  | 6.7           | 14            | 42                    | 15                                  |
| 036055       | 115—60—1          | 127                     | 104  | 8.4           | 14            | 33                    | 15                                  |
| 036075       | 115—60—1          | 127                     | 104  | 9.2           | 14            | 30                    | 15                                  |
| 048075       | 115—60—1          | 127                     | 104  | 10.2          | 14            | 28                    | 15                                  |
| 048095       | 115—60—1          | 127                     | 104  | 10.1          | 14            | 28                    | 15                                  |
| 060095       | 115—60—1          | 127                     | 104  | 13.3          | 12            | 33                    | 20                                  |
| 060110       | 115—60—1          | 127                     | 104  | 14.3          | 12            | 31                    | 20                                  |

\*Permissible limits of the voltage range at which the unit will operate satisfactorily.

†Time-delay fuse is recommended.

‡Length shown is as measured one way along wire path between unit and service panel for maximum 2 percent voltage drop.

## IX. VENTING

Refer to the enclosed installation instructions: GAMA Venting Tables for Category I Furnaces, and EZ Vent™ Tables for Category I Fan-Assisted Furnaces. The horizontal portion of the venting system shall maintain a minimum of 1/4-inch upward slope per linear foot and it shall be rigidly supported every 5 feet or less with hangers or straps to ensure that there will be no movement after installation.

## X. START-UP, ADJUSTMENT, AND SAFETY CHECK

### A. General

The furnace must have a 115-volt power supply properly connected and grounded. Proper polarity must be maintained for proper operation. Thermostat wire connections at R, W, C, and Y must be made at the 24-volt terminal block on the control board. The gas service pressure must not exceed 0.5 psig (14 inches wc), but must be no less than 0.16 psig (4.5 inches wc).

Before operating the furnace, check each manual reset switch for continuity. If necessary, press the button to reset the switch.

The blower compartment door must be in place to complete the 115-vac circuit to the furnace.

**CAUTION:** This furnace is equipped with two manual reset limit switches in the gas control area. The switches will open and shut off power to the gas valve if a flame rollout or an overheating condition occurs in the gas control area. Do not bypass the switches. Correct inadequate combustion air supply problem and reset the switches.

### B. Sequence of Operation

Using the schematic diagram, Figure 13, follow the sequence of operation through the different modes. Read and follow the wiring diagram very carefully.

**NOTE:** If there is a power interruption, and any thermostat call, the control will initiate a 90-second blower only before starting another cycle.

#### 1. Heating mode

The wall thermostat “calls for heat,” closing the R-W circuit. The furnace control performs a self-check, verifies the pressure switch contacts are open, and starts the inducer motor.

- Prepurge period**—As the inducer motor comes up to speed, the pressure switch contacts close to begin a 15-second prepurge period.
- Ignitor warm-up**—At the end of the prepurge period, the ignitor is energized for a 17-second ignitor warm-up period. If ignition is not established during the first cycle, the next warm-up period is increased to 45 seconds. All subsequent ignition cycles will be 45 seconds, or until the 115-vac power supply is interrupted. By interrupting the 115-vac power supply, the warm-up period is automatically reset to 17 seconds.
- Ignition sequence**—When the ignitor warm-up period is completed the gas valve opens, permitting gas flow to the burners where it is ignited. After 5 seconds, the ignitor is de-energized and a 2-second flame-sensing period begins.
- Flame-sensing**—When burner flame is sensed, the control begins the blower “on” delay period and continues holding the gas valve open. If burner flame is not sensed, the control will close the gas valve and repeat the ignition cycle.



e. Blower on delay—Forty seconds after burner flame is proven, the blower motor is energized on heating speed. Simultaneously, the humidifier and electronic air cleaner terminals (HUM-1 and C for humidifier, EAC-1 and EAC-2 for electronic air cleaner) are energized. If jumper JW9 has been cut, the blower on delay will be 60 seconds. Jumper JW9 should not be cut.

f. Blower off delay—When the thermostat is satisfied, the circuit between R and W is broken, de-energizing the gas valve stopping gas flow to the burners. The blower motor, humidifier, and air cleaner will remain energized 90, 135, 180, or 225 seconds (depending on the blower off-time selection). The furnace is factory set for a 135-second blower off delay.

g. Post-purge—the inducer motor will remain energized 5 seconds after the burners are extinguished. If jumper JW9 has been cut, the post-purge period will be 15 seconds. Jumper JW9 should not be cut.

## 2. Cooling mode

The thermostat “calls for cooling” closing R-Y circuit. The R-Y circuit starts the outdoor condensing unit, and starts the furnace blower motor on cooling speed. The electronic air cleaner EAC terminals are energized with 115 vac whenever the blower is operating on cooling speed. (HUM-1 terminal is not energized.)

When the thermostat is satisfied, R-Y circuit is broken. The condensing unit will stop and the furnace blower will continue operating on cooling speed for an additional 90 seconds.

## 3. Continuous blower mode

When the R-G circuit is made, the blower motor will operate on heating speed. During a call for heat, the blower will stop, allowing the furnace heat exchangers to heat up more quickly, then it will restart at the end of the blower on delay period (40 seconds).

If jumper JW9 has been cut, the blower on delay will be 60 seconds. Jumper JW9 should not be cut.

The blower will revert to continuous operation after the heating cycle is completed.

When the thermostat “calls for cooling,” the blower will operate on cooling speed. When the thermostat is satisfied, the blower will operate an additional 90 seconds before reverting back to continuous operation on heating speed. (EAC and HUM-1 terminals are energized.)

## 4. Heat pump mode

When installed with a heat pump, the furnace control automatically changes the timing sequence to avoid long blower off time during demand defrost cycles. When the W-Y or W-Y-G thermostat inputs are received together, the control will change the blower to heating speed or start the blower if it was off, and begin a heating cycle. The blower will remain on until the end of the purge period, then shut off until the end of the ignition warm up and trial for ignition periods (a total of 24 seconds). The blower will then come back on at heating speed.

When the W input signal disappears, the control will begin the normal inducer post-purge period and the blower will change to cooling speed after a 1-second delay. If the W-Y-G signals should disappear together, the blower will remain on for the selected heating blower off delay period, and the inducer will go through its normal post-purge period. If the W-Y inputs should disappear, leaving the G signal input, the control will go into continuous blower and the inducer will remain on for the normal post-purge period.

While in heat pump mode, the control will use only the 17-second ignition warm-up period, and will not use the 45-second period at all.

Any time the control senses false flame, the control will lock out of the heating mode. This occurs because the control cannot sense the W input due to the false flame signal, and as a result sees only the Y input and goes into cooling mode blower off delay. All other control functions remain in standard format. (EAC terminals are energized during blower operation. HUM-1 is energized only during gas heat or defrost operation.)

## C. Start-up Procedures

1. Self-test—The furnace features a self-test system to help diagnose a system problem in the case of a component failure. Two test pins (ST-1 and ST-2) are located in the upper right-hand corner of the control board as shown in Figure 11. To initiate the self-test procedure, momentarily short across the two pins (approximately 0.5 seconds).

**NOTE:** The self-test feature will not operate if the control board is receiving any thermostat signals.

The self-test sequence is as follows:

- a. The furnace control will check itself and then operate the inducer motor for 10 seconds, then off.
  - b. The hot surface ignitor is then energized for 15 seconds, then off.
  - c. The humidifier relay is then energized for 10 seconds, then off.
  - d. The blower motor will operate on cooling speed for 10 seconds, then off.
  - e. The blower motor will operate on heating speed for 10 seconds, then off.
2. Purge gas lines—After all connections have been made, purge the lines and check for leaks.



**WARNING:** Never purge a line into a combustion chamber. Never use matches, candles, flame or other sources of ignition to check for gas leakage. Use a soap-and-water solution to check for gas leaks. A failure to follow this warning could result in fire, explosion, personal injury, or death.

3. To operate furnace, follow procedures on operating instruction label attached to furnace.
4. With furnace operating, set thermostat below room temperature and observe that furnace goes off. Set thermostat above room temperature and observe that furnace restarts.

## D. Adjustments

1. Set gas input rate.

There are two methods of adjusting the gas input rate. The preferred method is by using Table VII and item a. The second method is by clocking the gas meter and item b.

The gas valve regulator has been nominally set at 3.5 inches wc for natural gas. When adjusting input rate, do not set manifold pressure above 3.8 or below 3.2 inches wc.

- a. Check gas input rate using Table VII.

- (1.) Obtain average yearly heat value for local gas supply.
- (2.) Obtain average yearly specific gravity for local gas supply.
- (3.) Verify furnace model. Table VII can only be used for Model 376CAV Furnaces.

- (4.) Check and verify orifice size in furnace. NEVER ASSUME THE ORIFICE SIZE. ALWAYS CHECK AND VERIFY.

 **CAUTION:** DO NOT redrill burner orifices. Improper drilling (burrs, out-of-round holes, etc.) can cause excessive burner noise and misdirection of burner flames. This can result in flame impingement of the burners and heat exchangers causing failure.

- (5.) Find natural gas heat value and specific gravity in Table VII.
- (6.) Follow heat value and specific gravity lines to point of intersection. Find orifice size and manifold pressure settings for proper operation at given natural gas conditions.

**EXAMPLE:**

Heat value 1070 Btu/cu ft

Specific gravity 0.58

Therefore; Orifice No. 44 \*

Manifold pressure 3.6 in. wc

\* The furnace is shipped with No. 43 orifices. Therefore, in this example all main burner orifices must be changed and the manifold pressure must be adjusted.

- (7.) Proceed to item c. to adjust manifold pressure.

- b. Check gas input rate by clocking gas meter.

- (1.) Obtain average yearly heat value for local gas supply.
- (2.) Check and verify orifice size in furnace. NEVER ASSUME THE ORIFICE SIZE. ALWAYS CHECK AND VERIFY.
- (3.) Turn off all other gas appliances and pilots.
- (4.) Start furnace and let run for 3 minutes.
- (5.) Measure time (in seconds) for gas meter to complete one revolution.

**TABLE VII—MODEL 376CAV ORIFICE SIZE AND MANIFOLD PRESSURE FOR CORRECT INPUT RATE\***  
(Tabulated data based on altitude up to 2000 feet and 23,000 Btuh per burner)

| GAS<br>HEAT<br>VALUE<br>(BTUH/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                  |            |                  |            |                  |            |                  |            |                  |            |                  |            |                  |            |                  |            |                  |
|--------------------------------------|---------------------------------|------------------|------------|------------------|------------|------------------|------------|------------------|------------|------------------|------------|------------------|------------|------------------|------------|------------------|------------|------------------|
|                                      | 0.56                            |                  | 0.58       |                  | 0.60       |                  | 0.62       |                  | 0.64       |                  | 0.66       |                  | 0.68       |                  | 0.70       |                  | 0.72       |                  |
|                                      | Orf<br>No.                      | Manfid<br>Press. | Orf<br>No. | Manfid<br>Press. | Orf<br>No. | Manfid<br>Press. | Orf<br>No. | Manfid<br>Press. | Orf<br>No. | Manfid<br>Press. | Orf<br>No. | Manfid<br>Press. | Orf<br>No. | Manfid<br>Press. | Orf<br>No. | Manfid<br>Press. | Orf<br>No. | Manfid<br>Press. |
| 860                                  | 40                              | 3.2              | 40         | 3.3              | 40         | 3.4              | 40         | 3.5              | 40         | 3.7              | 40         | 3.8              | —          | —                | 37         | 3.2              | 37         | 3.2              |
|                                      | 41                              | 3.5              | 41         | 3.6              | 41         | 3.7              | 41         | 3.8              | 38         | 3.2              | 38         | 3.3              | 38         | 3.4              | 38         | 3.5              | 38         | 3.6              |
|                                      | —                               | —                | 39         | —                | 39         | 3.2              | 39         | 3.3              | 39         | 3.4              | 39         | 3.5              | 39         | 3.6              | 39         | 3.8              | —          | —                |
| 875                                  | —                               | —                | 40         | 3.2              | 40         | 3.3              | 40         | 3.4              | 40         | 3.5              | 40         | 3.6              | 40         | 3.8              | —          | —                | —          | —                |
|                                      | 41                              | 3.3              | 41         | 3.5              | 41         | 3.6              | 41         | 3.7              | 41         | 3.8              | 38         | 3.2              | 38         | 3.3              | 38         | 3.4              | 38         | 3.4              |
|                                      | 42                              | 3.7              | —          | —                | —          | —                | 39         | 3.2              | 39         | 3.3              | 39         | 3.4              | 39         | 3.5              | 39         | 3.6              | 39         | 3.7              |
| 890                                  | —                               | —                | —          | —                | 40         | 3.2              | 40         | 3.3              | 40         | 3.4              | 40         | 3.5              | 40         | 3.6              | 40         | 3.7              | 40         | 3.8              |
|                                      | 41                              | 3.2              | 41         | 3.4              | 41         | 3.5              | 41         | 3.6              | 41         | 3.7              | 41         | 3.8              | —          | —                | 38         | 3.2              | 38         | 3.3              |
|                                      | 42                              | 3.6              | 42         | 3.7              | —          | —                | —          | —                | 39         | 3.2              | 39         | 3.3              | 39         | 3.4              | 39         | 3.5              | 39         | 3.6              |
| 905                                  | —                               | —                | —          | —                | 40         | 3.2              | 40         | 3.3              | 40         | 3.4              | 40         | 3.5              | 40         | 3.6              | 40         | 3.7              | 40         | 3.7              |
|                                      | —                               | —                | 41         | 3.2              | 41         | 3.4              | 41         | 3.5              | 41         | 3.6              | 41         | 3.7              | 41         | 3.8              | —          | —                | 38         | 3.2              |
|                                      | 42                              | 3.5              | 42         | 3.6              | 42         | 3.7              | —          | —                | —          | —                | 39         | 3.2              | 39         | 3.3              | 39         | 3.4              | 39         | 3.5              |
| 920                                  | —                               | —                | —          | —                | 41         | 3.2              | 41         | 3.4              | 41         | 3.5              | 41         | 3.6              | 40         | 3.4              | 40         | 3.5              | 40         | 3.6              |
|                                      | —                               | —                | —          | —                | 42         | 3.6              | 42         | 3.7              | 42         | 3.8              | —          | —                | 41         | 3.7              | 41         | 3.8              | —          | —                |
|                                      | 42                              | 3.4              | 42         | 3.5              | 42         | 3.6              | 42         | 3.7              | 42         | 3.8              | 41         | 3.6              | 39         | 3.2              | 39         | 3.3              | 39         | 3.4              |
| 935                                  | 42                              | 3.3              | 42         | 3.4              | 42         | 3.5              | 42         | 3.6              | 42         | 3.7              | 42         | 3.8              | —          | —                | 39         | 3.2              | 39         | 3.3              |
|                                      | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | 40         | 3.2              | 40         | 3.3              | 40         | 3.4              | 40         | 3.5              |
|                                      | —                               | —                | —          | —                | —          | —                | 41         | 3.2              | 41         | 3.4              | 41         | 3.5              | 41         | 3.6              | 41         | 3.7              | 41         | 3.8              |
| 950                                  | 42                              | 3.2              | 42         | 3.3              | 42         | 3.4              | 42         | 3.5              | 42         | 3.6              | 42         | 3.7              | 42         | 3.8              | —          | —                | 39         | 3.2              |
|                                      | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | 40         | 3.2              | 40         | 3.2              | 40         | 3.3              | 40         | 3.4              |
|                                      | —                               | —                | —          | —                | —          | —                | —          | —                | 41         | 3.2              | 41         | 3.3              | 41         | 3.5              | 41         | 3.6              | 41         | 3.7              |
| 965                                  | —                               | —                | 42         | 3.2              | 42         | 3.3              | 42         | 3.4              | 42         | 3.5              | 42         | 3.6              | 42         | 3.7              | 42         | 3.8              | —          | —                |
|                                      | 43                              | 3.7              | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | 40         | 3.2              | 40         | 3.3              |
|                                      | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | 41         | 3.2              | 41         | 3.3              | 41         | 3.4              | 41         | 3.5              |
| 980                                  | —                               | —                | —          | —                | 42         | 3.2              | 42         | 3.3              | 42         | 3.4              | 42         | 3.5              | 42         | 3.6              | 42         | 3.7              | 42         | 3.8              |
|                                      | 43                              | 3.6              | 43         | 3.7              | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | 44         | 3.2              |
|                                      | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | 41         | 3.2              | 41         | 3.3              | 41         | 3.4              |
| 995                                  | —                               | —                | —          | —                | —          | —                | 42         | 3.2              | 42         | 3.3              | 42         | 3.4              | 42         | 3.5              | 42         | 3.6              | 42         | 3.7              |
|                                      | 43                              | 3.5              | 43         | 3.6              | 43         | 3.8              | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                |
|                                      | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | 41         | 3.2              | 41         | 3.3              |
| 1010                                 | —                               | —                | —          | —                | —          | —                | —          | —                | 42         | 3.2              | 42         | 3.3              | 42         | 3.4              | 42         | 3.5              | 42         | 3.6              |
|                                      | 43                              | 3.4              | 43         | 3.5              | 43         | 3.6              | 43         | 3.6              | —          | —                | —          | —                | —          | —                | —          | —                | 41         | 3.2              |
|                                      | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                |
| 1025                                 | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | 42         | 3.2              | 42         | 3.3              | 42         | 3.4              | 42         | 3.5              |
|                                      | 43                              | 3.3              | 43         | 3.4              | 43         | 3.5              | 43         | 3.7              | 43         | 3.8              | —          | —                | —          | —                | —          | —                | —          | —                |
|                                      | 44                              | 3.8              | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                |
| 1035                                 | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | 42         | 3.2              | 42         | 3.3              | 42         | 3.4              |
|                                      | 43                              | 3.2              | 43         | 3.3              | 43         | 3.4              | 43         | 3.6              | 43         | 3.7              | 43         | 3.8              | —          | —                | —          | —                | —          | —                |
|                                      | 44                              | 3.7              | 44         | 3.8              | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                |
| 1055                                 | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | 42         | 3.2              | 42         | 3.3              |
|                                      | —                               | —                | 43         | 3.2              | 43         | 3.3              | 43         | 3.5              | 43         | 3.6              | 43         | 3.7              | 43         | 3.8              | —          | —                | —          | —                |
|                                      | 44                              | 3.6              | 44         | 3.7              | 44         | 3.8              | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                |
| 1070                                 | —                               | —                | —          | —                | 43         | 3.3              | 43         | 3.4              | 43         | 3.5              | 43         | 3.6              | 43         | 3.7              | 43         | 3.8              | —          | —                |
|                                      | —                               | —                | —          | —                | 44         | 3.7              | 44         | 3.8              | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                |
|                                      | 44                              | 3.5              | 44         | 3.6              | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                |
| 1085                                 | —                               | —                | —          | —                | 43         | 3.2              | 43         | 3.3              | 43         | 3.4              | 43         | 3.5              | 43         | 3.6              | 43         | 3.7              | 43         | 3.8              |
|                                      | 44                              | 3.4              | 44         | 3.5              | 44         | 3.6              | 44         | 3.7              | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                |
|                                      | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                |
| 1100                                 | —                               | —                | —          | —                | 43         | 3.2              | 43         | 3.3              | 43         | 3.3              | 43         | 3.4              | 43         | 3.5              | 43         | 3.6              | 43         | 3.7              |
|                                      | 44                              | 3.3              | 44         | 3.4              | 44         | 3.5              | 44         | 3.6              | 44         | 3.7              | —          | —                | —          | —                | —          | —                | —          | —                |
|                                      | —                               | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                | —          | —                |

\*For size 060110 only, deduct 0.1 in. wc from manifold pressure shown in table due to 22,500 Btuh per burner input. If resultant manifold pressure falls below 3.2, change orifice size.

(6.) Refer to Table VIII for cubic feet of gas per hour.

(7.) Multiply gas rate (cubic ft/hr) x heating value (Btu/cu-bic ft).

**EXAMPLE:**

Btu heating input = Btu/cu ft x cu ft/hr

Heating value of gas = 1070 Btu/cu ft

Time for one revolution of 2-cu/ft dial = 72 seconds

Gas rate = 100 x 1070 = 107,000 Btuh

(8.) Measured gas input should not exceed gas input on unit rating plate.

(9.) Proceed to item c. to adjust manifold pressure.

c. Adjust gas input.

(1.) Remove regulator adjustment seal cap. (See Figure 14.)

(2.) Turn adjusting screw counterclockwise to decrease input. Turn screw clockwise to increase input. DO NOT set manifold pressure less than 3.2 or more than 3.8 maximum inches wc for natural gas. Make any major adjustments by changing main burner orifices.

(3.) When correct input is obtained, replace regulator seal cap. Main burner flame should be clear blue, almost transparent. (See Figure 15.)

d. High altitude—In the United States, gas input on rating plate is for altitudes up to 2000 feet. Ratings for altitudes over 2000 feet must be 4 percent less for each 1000 feet above sea level. To obtain the altitude adjusted rating, adjust the manifold pressure, item c., and replace the main burner orifices as needed. Refer to National Fuel Gas Code Appendix F Table F-4 for proper orifice sizing at high altitudes.

e. Canadian installations only—The Canadian ratings are approved for altitudes up to 2000 feet for natural and propane gases. High altitude ratings are from 2000 feet to 4500 feet above sea level. See Table IX for nominal burner orifice size. High altitude input ratings include a 10 percent derate as required by Canadian standards.

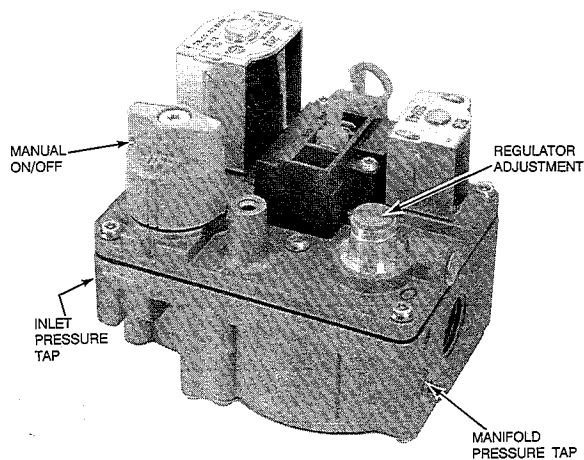


Figure 14—Redundant Automatic Gas Control Valve

A90044

TABLE VIII—GAS RATE CU FT/HR

| SECONDS<br>FOR ONE<br>REVOLUTION | SIZE OF TEST DIAL |            |            | SECONDS<br>FOR ONE<br>REVOLUTION | SIZE OF TEST DIAL |            |            |
|----------------------------------|-------------------|------------|------------|----------------------------------|-------------------|------------|------------|
|                                  | 1<br>cu ft        | 2<br>cu ft | 5<br>cu ft |                                  | 1<br>cu ft        | 2<br>cu ft | 5<br>cu ft |
| 10                               | 360               | 720        | 1800       | 50                               | 72                | 144        | 360        |
| 11                               | 327               | 655        | 1636       | 51                               | 71                | 141        | 355        |
| 12                               | 300               | 600        | 1500       | 52                               | 69                | 138        | 346        |
| 13                               | 277               | 555        | 1385       | 53                               | 68                | 136        | 340        |
| 14                               | 257               | 514        | 1286       | 54                               | 67                | 133        | 333        |
| 15                               | 240               | 480        | 1200       | 55                               | 65                | 131        | 327        |
| 16                               | 225               | 450        | 1125       | 56                               | 64                | 129        | 321        |
| 17                               | 212               | 424        | 1059       | 57                               | 63                | 126        | 316        |
| 18                               | 200               | 400        | 1000       | 58                               | 62                | 124        | 310        |
| 19                               | 189               | 379        | 947        | 59                               | 61                | 122        | 305        |
| 20                               | 180               | 360        | 900        | 60                               | 60                | 120        | 300        |
| 21                               | 171               | 343        | 857        | 62                               | 58                | 116        | 290        |
| 22                               | 164               | 327        | 818        | 64                               | 56                | 112        | 281        |
| 23                               | 157               | 313        | 783        | 66                               | 54                | 109        | 273        |
| 24                               | 150               | 300        | 750        | 68                               | 53                | 106        | 265        |
| 25                               | 144               | 288        | 720        | 70                               | 51                | 103        | 257        |
| 26                               | 138               | 277        | 692        | 72                               | 50                | 100        | 250        |
| 27                               | 133               | 267        | 667        | 74                               | 48                | 97         | 243        |
| 28                               | 129               | 257        | 643        | 76                               | 47                | 95         | 237        |
| 29                               | 124               | 248        | 621        | 78                               | 46                | 92         | 231        |
| 30                               | 120               | 240        | 600        | 80                               | 45                | 90         | 225        |
| 31                               | 116               | 232        | 581        | 82                               | 44                | 88         | 220        |
| 32                               | 113               | 225        | 563        | 84                               | 43                | 86         | 214        |
| 33                               | 109               | 218        | 545        | 86                               | 42                | 84         | 209        |
| 34                               | 106               | 212        | 529        | 88                               | 41                | 82         | 205        |
| 35                               | 103               | 206        | 514        | 90                               | 40                | 80         | 200        |
| 36                               | 100               | 200        | 500        | 92                               | 39                | 78         | 196        |
| 37                               | 97                | 195        | 486        | 94                               | 38                | 76         | 192        |
| 38                               | 95                | 189        | 474        | 96                               | 38                | 75         | 188        |
| 39                               | 92                | 185        | 462        | 98                               | 37                | 74         | 184        |
| 40                               | 90                | 180        | 450        | 100                              | 36                | 72         | 180        |
| 41                               | 88                | 176        | 439        | 102                              | 35                | 71         | 178        |
| 42                               | 86                | 172        | 429        | 104                              | 35                | 69         | 173        |
| 43                               | 84                | 167        | 419        | 106                              | 34                | 68         | 170        |
| 44                               | 82                | 164        | 409        | 108                              | 33                | 67         | 167        |
| 45                               | 80                | 160        | 400        | 110                              | 33                | 65         | 164        |
| 46                               | 78                | 157        | 391        | 112                              | 32                | 64         | 161        |
| 47                               | 76                | 153        | 383        | 116                              | 31                | 62         | 155        |
| 48                               | 75                | 150        | 375        | 120                              | 30                | 60         | 150        |
| 49                               | 73                | 147        | 367        |                                  |                   |            |            |

TABLE IX—CANADIAN ORIFICE SIZE

| GAS     | SEA LEVEL<br>0—2000 FEET | HIGH<br>ALTITUDE<br>2000—4500 FEET |
|---------|--------------------------|------------------------------------|
| Natural | 43                       | 44                                 |
| Propane | 54                       | 55                                 |

2. Set temperature rise.

Do not exceed the temperature rise range specified on the unit rating plate. Determine the air temperature rise as follows:

- Place duct thermometers in return and supply ducts as near furnace as possible. Be sure thermometers do not "see"

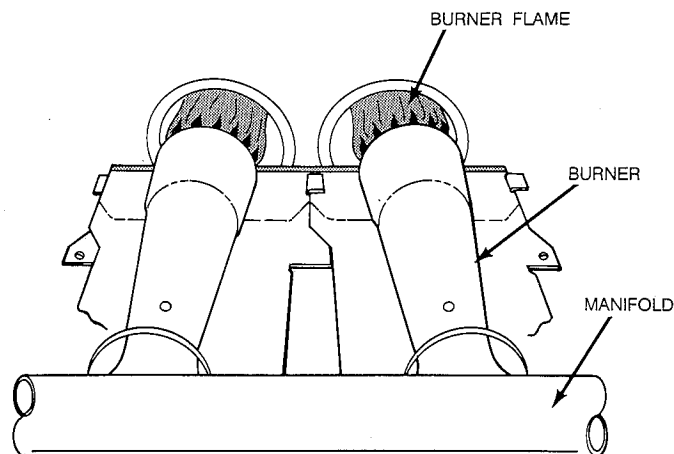


Figure 15—Burner Flame

A89020

heat exchangers so that radiant heat will not affect thermometer readings. This is particularly important with straight-run ducts.

- When thermometer readings stabilize, subtract return-air temperature from supply-air temperature to determine temperature rise.
- Adjust air temperature rise by adjusting blower speed. Increase blower speed to reduce temperature rise. Decrease blower speed to increase temperature rise.

**WARNING:** Disconnect the electrical power before changing the speed tap. A failure to follow this warning could result in personal injury.

- To change motor speed taps, remove the motor tap lead (see Table X) and relocate it on the desired terminal on the plug-in terminal block/speed selector located on the blower housing.

TABLE X—SPEED SELECTOR

| SPEED    | TAP NO.* |
|----------|----------|
| Common   | C        |
| High     | 1        |
| Med-High | 2        |
| Med-Low  | 3        |
| Low      | 4†       |

\* White wire from control box to common; black wire from control box to cooling speed selection; red wire from control box to heating and constant fan speed selection.


†Speed tap No. 4 is not used on 024040 and 024055 units.

**CAUTION:** Recheck the temperature rise. It must be within the limits specified on the unit rating plate. Recommended operation is at mid-point of rise or above.

3. Set thermostat heat anticipator.

The thermostat heat anticipation must be set to match the amp draw of the electrical components in the R-W circuit. Accurate amp draw readings can be obtained at thermostat subbase terminals R and W. Figure 16 illustrates an easy method of obtaining the actual amp draw. The amp reading should be taken after the blower motor has started. See the thermostat manufacturer's instructions for adjusting the heat anticipator and for varying the heating cycle length.

**NOTE:** When using an electronic thermostat, set cycle rate for three cycles per hour.

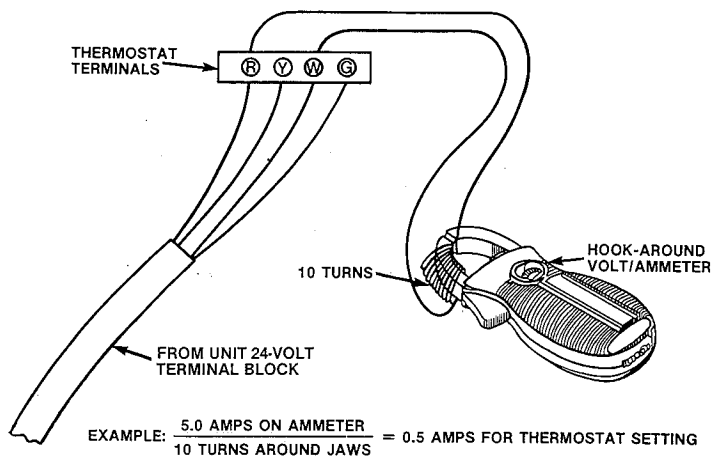

A80201

**Figure 16—Amp Draw Check With Ammeter**

### E. Check Safety Controls

The flame sensor, gas valve, and pressure switch were all checked in the Start-up section as part of normal operation.

#### 1. Check primary limit control.

This control shuts off the combustion control system and energizes the circulating-air blower motor if the furnace overheats.

The preferred method of checking the limit control is to gradually block off the return air after the furnace has been operating for a period of at least 5 minutes. As soon as the limit has shut off the burners, the return-air opening should be unblocked. By using this method to check the limit control, it can be established that the limit is functioning properly and will "operate" if there is a motor failure.

#### 2. Check draft safeguard switch.

The purpose of this control is to permit the safe shutdown of the furnace during certain blocked vent conditions.

- Disconnect power to furnace and remove vent connector from furnace outlet collar. Be sure to allow time for vent pipe to cool down before removing.
- Restore power to furnace and set room thermostat above room temperature.
- After normal start-up, allow furnace to operate for 2 minutes, then block (100 percent) flue outlet. Furnace should cycle off within 2 minutes.

d. Remove blockage and reconnect vent pipe to furnace outlet collar.

e. Wait 5 minutes and then reset draft safeguard switch.

#### 3. Check pressure switch.

This control proves operation of draft inducer blower.

- Turn OFF 115-volt power to furnace.
- Remove control door and disconnect inducer motor lead wires from wire harness.
- Turn ON 115-volt power to furnace.
- Close thermostat switch as if making normal furnace start. If the hot surface ignitor does not glow, then the pressure switch is functioning properly.
- Turn OFF 115-volt power to furnace.
- Reconnect inducer motor wires, replace control door, and turn ON 115-volt power.

#### 4. Check auxiliary limits.

- Turn OFF 115-volt power to furnace.
- Remove blower access door.
- Disconnect red motor lead at blower speed selector. Mark terminal for proper reconnection.
- Replace blower access door.
- Turn ON 115-volt power to furnace. Be sure room thermostat is calling for heat.
- Allow furnace to operate until auxiliary limit activates, but DO NOT operate furnace longer than 4 minutes.
- If furnace operates for 4 minutes, check/replace limit switch(es).
- Turn OFF 115-volt power to furnace.
- Remove blower access door.
- Reconnect red motor lead, reset switch, and replace door.
- Turn ON 115-volt power to furnace.

### F. Check List

- Put away tools, instruments, and clean up debris.
- Verify manual reset switches have continuity.
- Ensure blower and control access doors are properly installed.
- Cycle test furnace with room thermostat.
- Check operation of accessories per manufacturer's instructions.
- Review User's Manual with owner.
- Leave literature packet near furnace.