


25VNA
Infinity™ Variable Speed Heat Pump
with Greenspeed™ Intelligence
2 to 5 Nominal Tons



Heating Check Chart

Charging In Cooling Mode - 024/036
 See user interface set in Charging Mode

Heating Check Chart - 024/036
 For use in Heating Charging Mode only

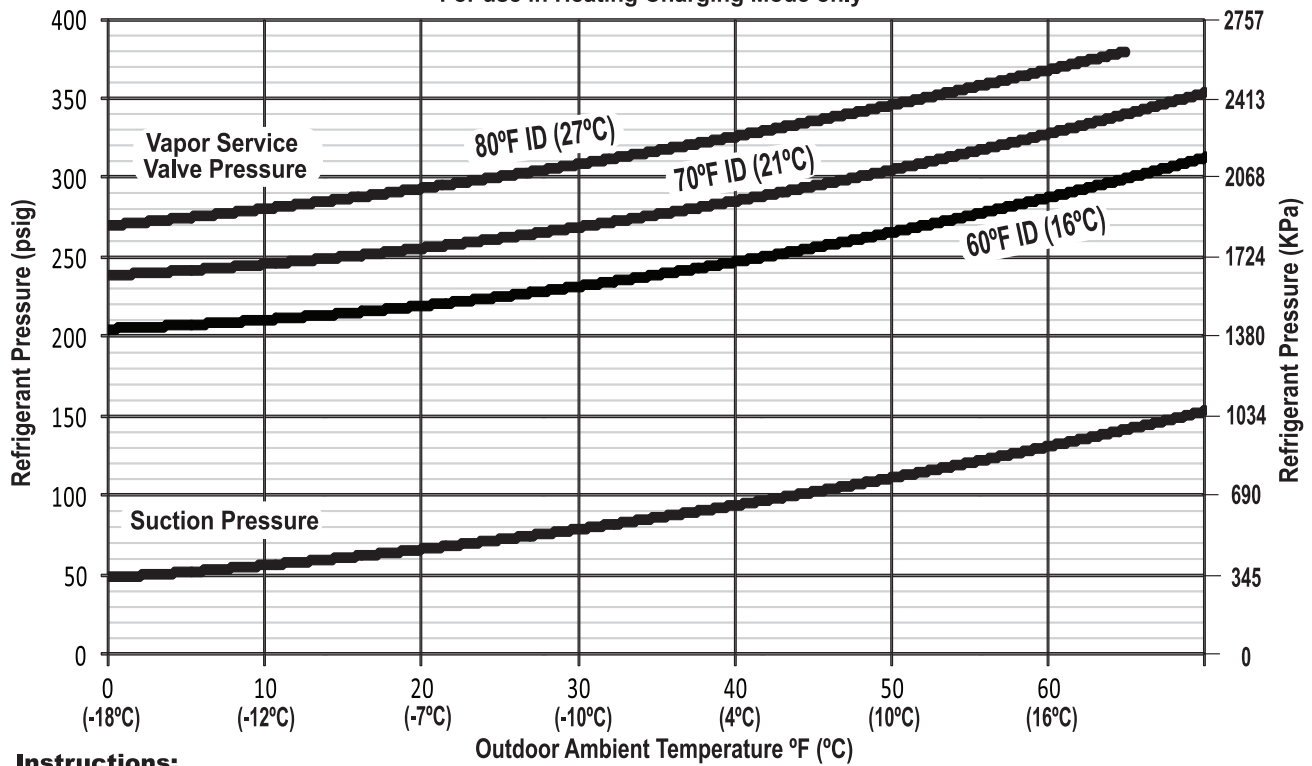

Instructions:

1. Connect gages to Suction Capillary and Vapor Line Port.
2. If frost is present, force a Defrost from UI.
3. From UI, set unit in Heating Charging mode.
4. Compare unit pressures to Heating Check Chart
5. Investigate all causes if pressures do not match (airflow, dirty coil, faulty components, incorrect charge).
6. If incorrect charge is suspected, charge adjustment can only be done in cooling conditions. In heating conditions, remove all charge and use weigh-in method. Refer to the appropriate mode on User interface (UI) or the Installation Instructions.




338891-101 REV. A

Fig. 1 – 25VNA024-036

Charging In Cooling Mode - 048/060
See user interface set in Charging Mode

Heating Check Chart - 048/060
For use in Heating Charging Mode only

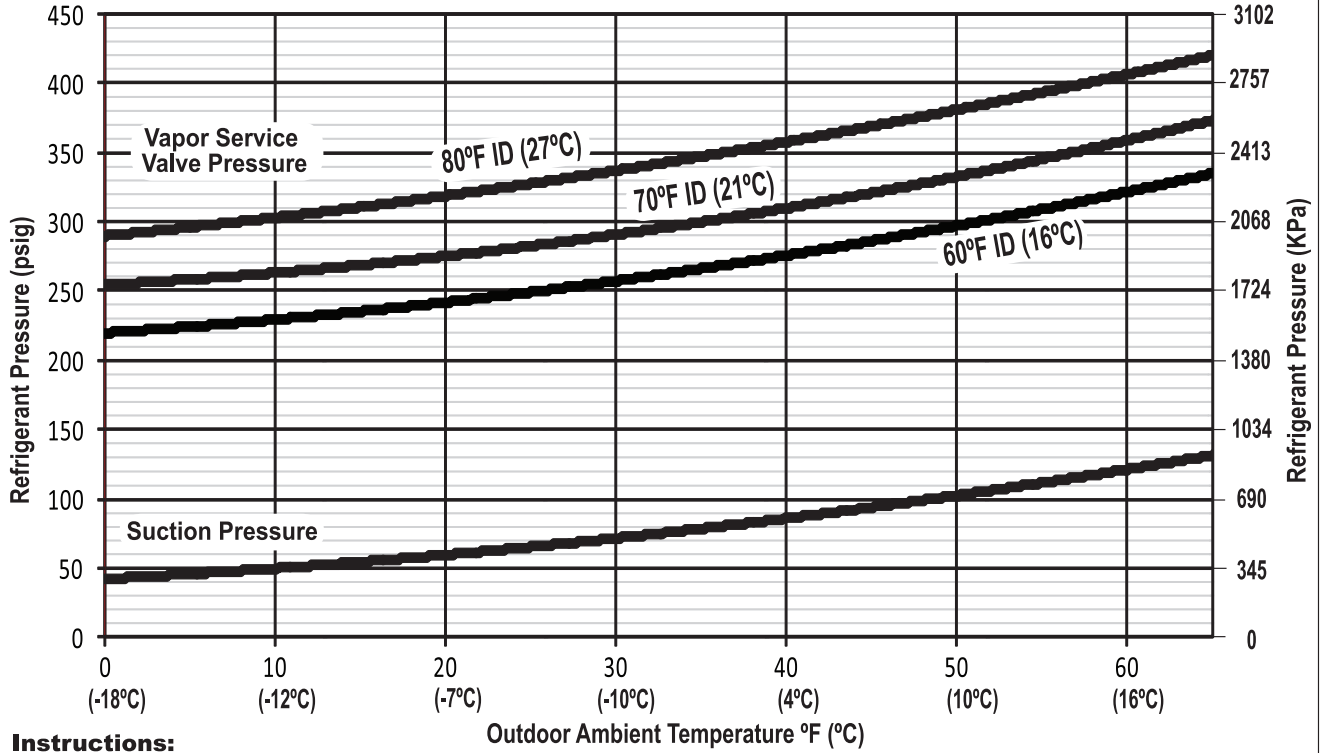

Instructions:

1. Connect gages to Suction Capillary and Vapor Line Port.
2. If frost is present, force a Defrost from UI.
3. From UI, set unit in Heating Charging mode.
4. Compare unit pressures to Heating Check Chart
5. Investigate all causes if pressures do not match (airflow, dirty coil, faulty components, incorrect charge).
6. If incorrect charge is suspected, charge adjustment can only be done in cooling conditions. In heating conditions, remove all charge and use weigh-in method. Refer to the appropriate mode on User interface (UI) or the Installation Instructions.



338890-101 REV. A

Fig. 1 – 25VNA048-060