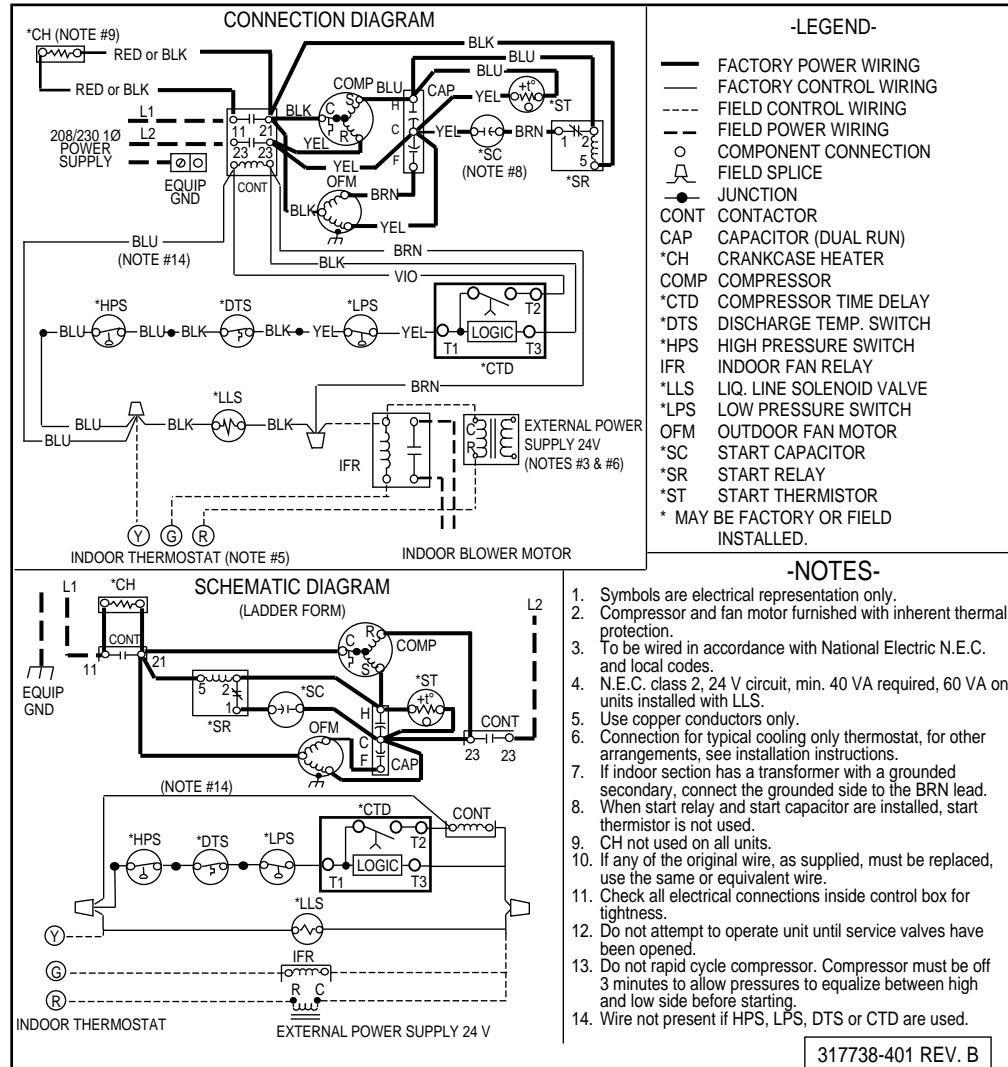


Wiring Diagrams



**Fig. 1—38CK018-321, 341; 024-321, 331, 341; 030-301, 321, 331;
036-331, 341; 042-331, 341; 048-351, 361**

**38CKM024-321, 331, 341; 030-301, 321, 331; 036-331, 341;
042-331, 341; 048-351, 361**

208-230v, 1 Phase, 60 Hertz

A94412

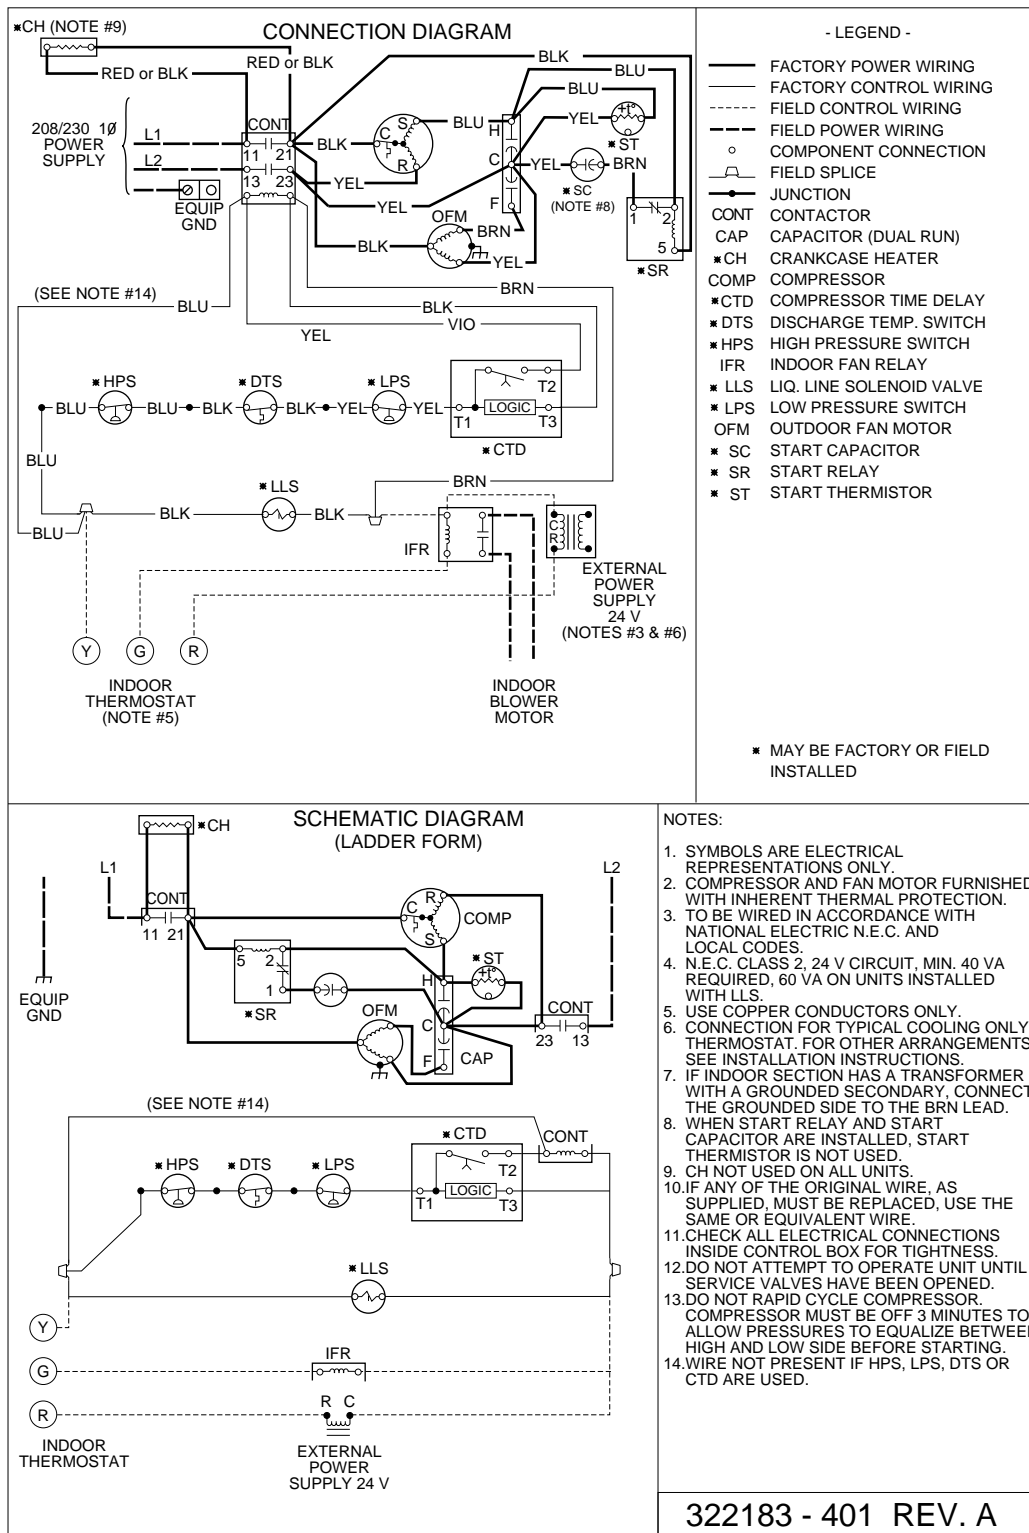
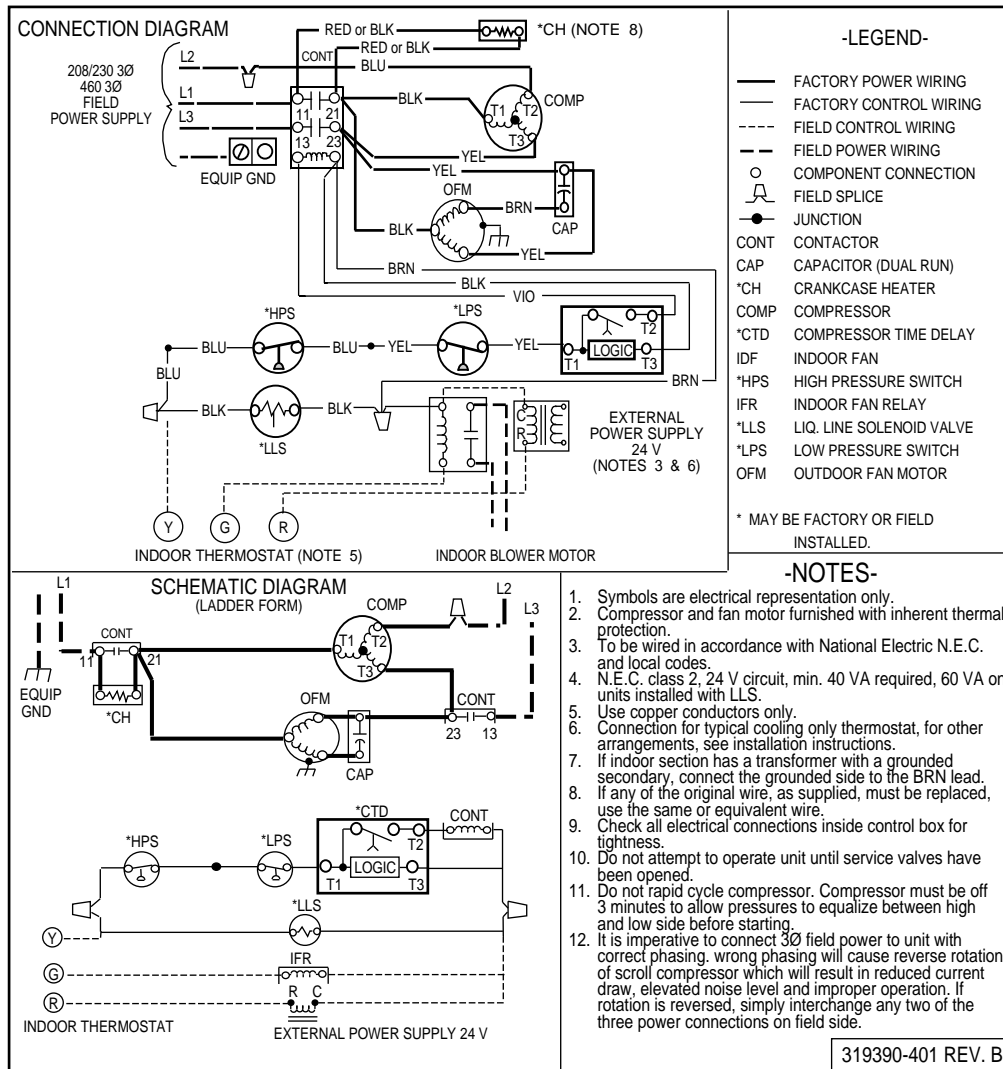


Fig. 2—38CK060-351, 361, 371, 381

208-230v, 1 Phase, 60 Hertz

A94321



**Fig. 3—38CK030-501,521; 036-531, 541, 631, 641;
042-531, 541, 631, 641; 048-551, 561, 651, 661;
060-551, 561, 571, 581, 651, 661, 671, 681**

208/230v and 460v, 3 Phase, 60 Hertz

A94414

