

Installation Instructions

Read these instructions completely before attempting to install the Horizontal EconoMi\$er IV Accessory.

CONTENTS

SAFETY CONSIDERATIONS	1
GENERAL	1
ACCESSORIES LIST	2
INSTALLATION	2-5
EconoMi\$er IV Sensor Usage	2
CONFIGURATION	6-10
EconoMi\$er IV Standard Sensors	6
EconoMi\$er IV Control Modes	6-11
Sequence of Operation	11
Performance Data	11
TROUBLESHOOTING	12-13

SAFETY CONSIDERATIONS

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.

Untrained personnel can perform the basic maintenance functions of replacing filters. All other operations should be performed by trained service personnel. When working on air-conditioning equipment, observe precautions in the literature, tags, and labels attached to the unit, and other safety precautions that may apply. Follow all safety codes. Wear safety glasses and work gloves.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies a hazard which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

WARNING

ELECTRICAL SHOCK HAZARD

Failure to follow this warning could cause personal injury or death.

Before performing service or maintenance operations on the unit, always turn off main power switch(es) to unit and install lockout tag(s). Unit may have more than one power switch.

CAUTION

CUT HAZARD

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing roof top units.

GENERAL

The EconoMi\$er IV system utilizes the latest technology available for integrating the use of free cooling with mechanical cooling for packaged rooftop units. The solid-state control system optimizes energy consumption, zone comfort, and equipment cycling by operating the compressors when the outdoor-air temperature is too warm, integrating the compressor with outdoor air when free cooling is available, and locking out the compressor when outdoor-air temperature is too cold. Demand control ventilation is supported.

The EconoMi\$er IV system utilizes gear-drive technology with a direct-mount spring return actuator that will close upon loss of power. The EconoMi\$er IV system comes standard with an outdoor air temperature sensor, supply air temperature sensor, and low temperature compressor lockout switch. Outdoor enthalpy, indoor enthalpy, and CO₂ sensors are available for field installation. See Table 3 for sensor usage.

Standard barometric relief dampers provide natural building pressurization control. An optional power exhaust system is available for applications requiring even greater exhaust capabilities. The power exhaust set point is adjustable at the EconoMi\$er IV controller.

See Table 1 for package usage. See Table 2 for package contents. See Table 3 for sensor usage.

Table 1 - Package Usage

UNIT SIZE	PART NUMBER
Small Cabinet, Footprint Size: 46 3/4" x 74 3/8"	CRECOMZR024A02
Large Cabinet, Footprint Size: 58 1/2" x 88 1/8"	CRECOMZR025A02
Extra-large Cabinet, Footprint Size: 63 3/8" x 115 7/8"	CRECOMZR064A00

Table 2 - Package Contents

PACKAGE NO.	QTY	CONTENTS
CRECOMZR024A02	1	Hood Assembly
	1	Filter Access Door
	1	Aluminum Filter
	18	Screws
	1	EconoMi\$er IV Assembly
	1	Front Blank Off Panel
	1	Supply Air Temperature Sensor
CRECOMZR025A02	1	Hood Assembly
	1	Filter Access Door
	1	Aluminum Filter
	18	Screws
	1	EconoMi\$er IV Assembly
	1	Supply Air Temperature Sensor
	1	Front Blank Off Panel
CRECOMZR064A00	1	Horizontal Blank Off Panel
	1	Hood Assembly
	1	Filter Access Door
	1	Aluminum Filter
	1	Hardware Bag
	1	EconoMi\$er IV Assembly
	1	Front Blank-Off Panel
	1	Horizontal Blank-Off Panel
	1	Supply Air Temperature Sensor

Table 3 - EconoMi\$er IV Sensor Usage

APPLICATION	ECONOMI\$ER IV WITH OUTDOOR AIR DRY BULB SENSOR		
	Accessories Required		
Outdoor Air Dry Bulb	None. The outdoor air dry bulb sensor is factory installed		
Single Enthalpy	HH57AC078		
Differential Enthalpy	HH57AC078 and CRENTDIF004A00*		
CO ₂ for DCV Control Using a Wall-Mounted CO ₂ Sensor	33ZCSENO2 or CGCDXSEN004A00		
CO ₂ for DCV Control Using a Duct-Mounted CO ₂ Sensor	33ZCSENO2 or CGCDXSEN004A00† and 33ZCASPCO2 or CGCDXASP00100**	OR	CRCBDIOX005A00††

*CRENTDIF004A00 accessory is used on many different base units. As such, these kits may contain parts that will not be needed for installation.

†33ZCSENO2 and CGCDXSEN004A00 are accessory CO₂ sensors.

**33ZCASPCO2 and CGCDXASP00100 are accessory aspirator boxes required for duct-mounted applications.

††CRCBDIOX005A00 is an accessory that contains both 33ZCSENO2 and 33ZCASPCO2 accessories.

ACCESSORIES LIST

The EconoMi\$er IV has several field-installed accessories available to optimize performance. Refer to Table 4 for authorized parts and power exhaust descriptions

Table 4 - EconoMi\$er IV Field-Installed Accessories

DESCRIPTION	PART NUMBER
Small & Large Cabinet Power Exhaust 208-230 v 1 Ph	CRPWREXH028A01
Small & Large Cabinet Power Exhaust 460 v 3Ph	CRPWREXH029A01
Extra Large Cabinet Power Exhaust 208-230 v 1Ph	CRPWREXH082A00
Extra Large Cabinet Power Exhaust 460 v 3Ph	CRPWREXH083A00
Outdoor Air Enthalpy Sensor	HH57AC078
Indoor Air Enthalpy Sensor	CRENTDIF004A00
CO ₂ Sensor and Aspirator Box	CRCBDIOX005A00
Return Air CO ₂ Sensor (4 to 20 mA)	CRCBDIOX002A00
CO ₂ Room Sensor (4 to 20 mA)	33ZCSENO2 or CGCDXSEN004A00
Aspirator Box for Duct Mount CO ₂ Sensor (4 to 20 mA)	33ZCASPCO2 or CGCDXASP001A00

INSTALLATION

! WARNING

ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury and/or death.

Disconnect power supply and install lockout tag before attempting to install accessory.

1. Turn off unit power supply(s) and install lockout tag.
2. Remove the existing unit filter access panel. Raise the panel and swing the bottom outward. The panel is now disengaged from the track and can be removed and discarded. (See Fig. 2.)

NOTE: Unit with hinged panels will require a hinged door seal angle kit. Use part no. CRHNGPNL001A00 for small cabinet units. Use part no. CRHNGPNL002A00 for large cabinet units. Refer to the separate accessory installation instructions for details on installing the seal angle kit.

3. Remove the indoor coil access panel and discard. (See Fig. 2.)
4. The EconoMi\$er IV hood assembly is shipped assembled. Aluminum filter must be installed on some models. See step 23.
5. Set the EconoMi\$er IV upright. (See Fig. 4.)
6. If EconoMi\$er IV will be operating under enthalpy control, replace the factory installed outdoor dry bulb temperature sensor with accessory enthalpy sensor HH57AC078. (See Fig. 1.)
7. Insert the EconoMi\$er IV assembly into the rooftop unit, positioning the EconoMi\$er IV to the far left side of the opening. (See Fig. 5.)
8. Slide the EconoMi\$er IV all the way back into the unit until it locks into the horizontal opening of the HVAC (heating, ventilation and air conditioning) unit.
9. Secure the EconoMi\$er IV mounting flanges to the HVAC unit with the screws provided. (See Fig. 6.)
10. Install a screw through the pre-punched hole in the EconoMi\$er IV into the flange on the horizontal duct opening. (See Fig. 7.)
11. Remove the tape securing the relief dampers in place.
12. Remove and save the 12-pin jumper plug from the unit wiring harness (located in the upper left corner of the unit). Insert the EconoMi\$er IV plug into the unit wiring harness. Refer to Fig. 8 for wiring diagram.

NOTE: The 12-pin jumper plug should be saved for future use, in the event that the EconoMi\$er IV is removed from the unit. The jumper plug is not needed as long as the EconoMi\$er IV is installed.

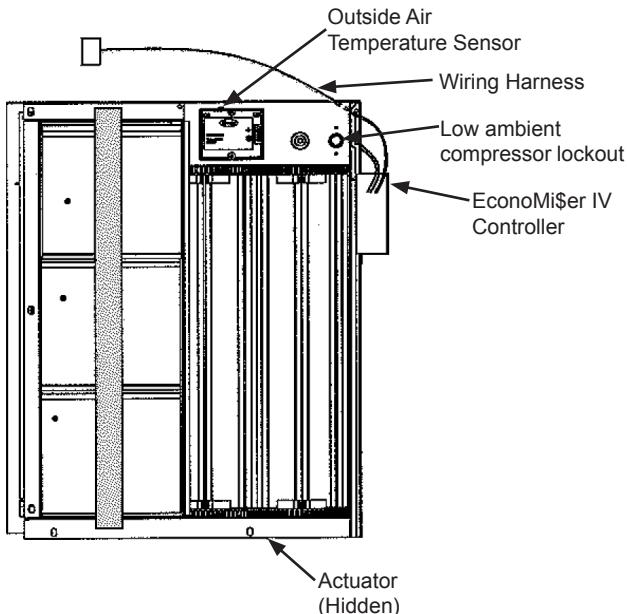


Fig. 1 - EconoMi\$er IV Component Locations


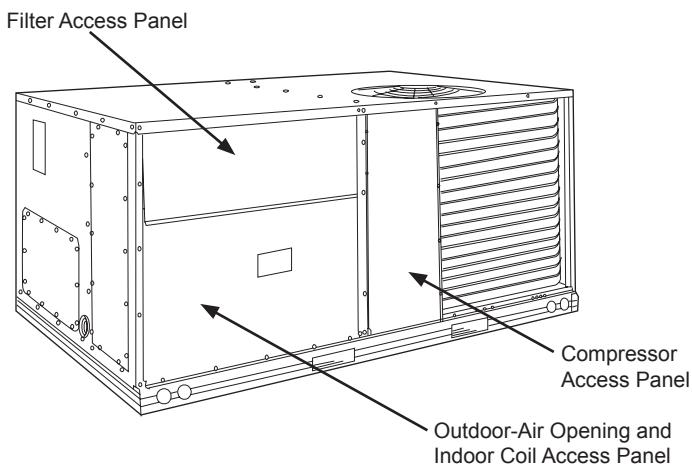


Fig. 2 - Typical Outdoor Air Section Access Panel Locations

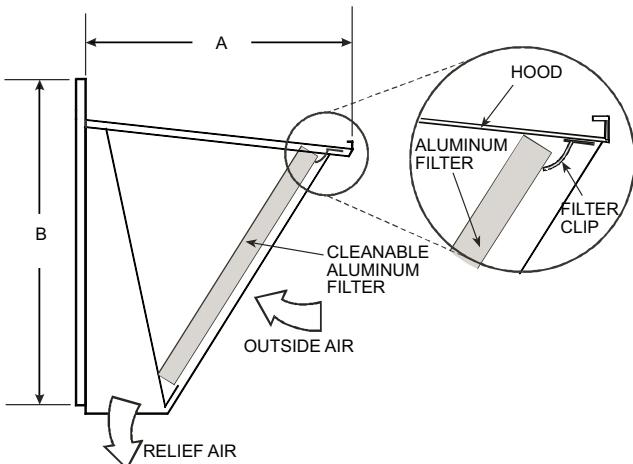

ECONOMIZER P/N	A	B	SHIP WT.
CRECOMZR024A02	27.09"	29.19"	95 lb
CRECOMZR025A02	29.21"	37.25"	150 lb
CRECOMZR064A00	24.81"	53.36	130lb

Fig. 3 - EconoMi\$er IV Hood Detail

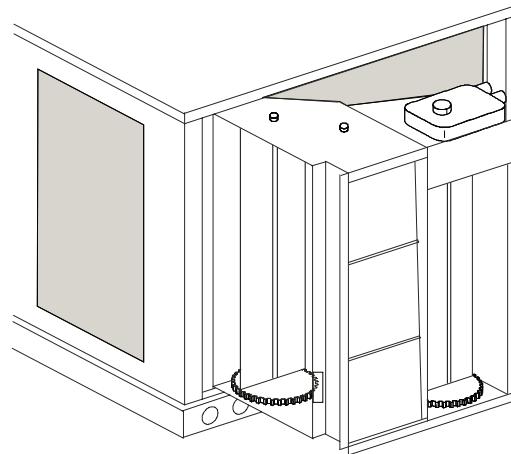


Fig. 4 - EconoMi\$er IV Positioned for Installation in Unit

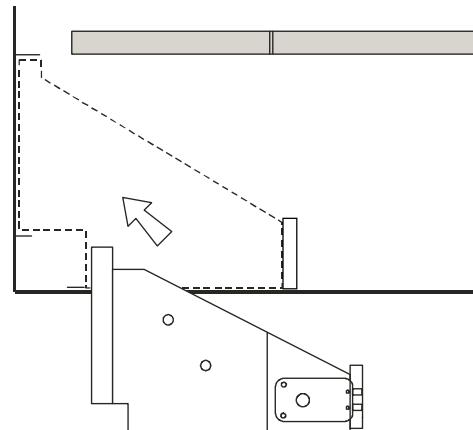


Fig. 5 - Top View of EconoMi\$er IV Installation

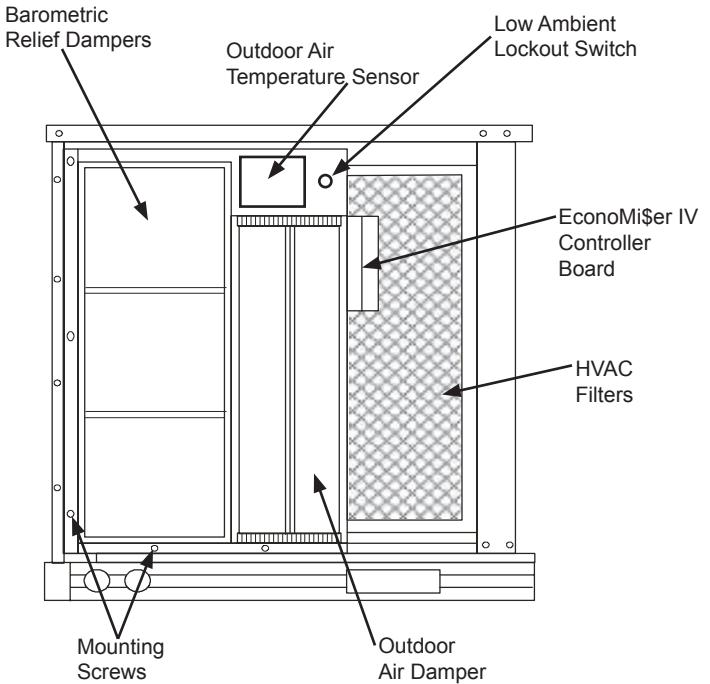
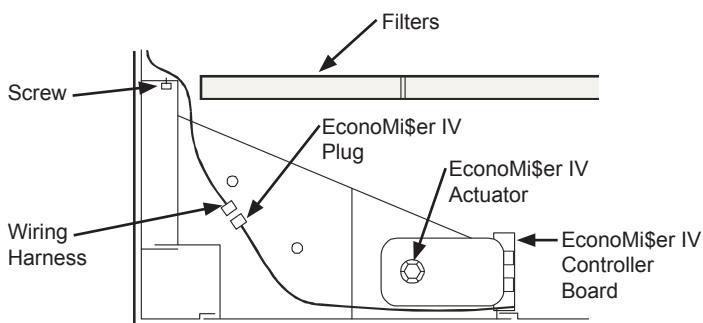


Fig. 6 - EconoMi\$er IV Installed in Unit



**Fig. 7 - Top View of EconoMi\$er IV
Installed in Unit**

13. Remove the indoor fan motor access panel. (See Fig. 9.)
14. The supply air temperature sensor looks like an eyelet terminal with wires running to it. The sensor is located on the “crimp end” and is sealed from moisture. Mount the supply air temperature sensor (provided) to the lower left section of the indoor fan blower housing. (See Fig. 10.) Use the screw provided and use existing hole. Connect the violet and pink wires to the corresponding connections on the supply air temperature sensor. (See Fig. 8.)
- NOTE:** Be sure that the arrow on the actuator motor is pointing to “Run” and not to “Test.” If the arrow is at “Test,” the Economizer damper will drive open
15. While everything is open install and wire any other accessories and/or sensors as applicable and convenient, per their installation instructions and/or the Configuration section of this instruction. Some accessories require that unit ducting already be installed.
16. On some units the EconoMi\$er and hood do not reach to the top of the unit. In this case a front blank-off panel must be installed. Install provided front blank-off panel above hood. Screw in place. (See Fig. 12.)

NOTE: Be sure that the arrow on the actuator motor is pointing to "Run" and not to "Test." If the arrow is at "Test," the Economizer damper will drive open.

15. While everything is open install and wire any other accessories and/or sensors as applicable and convenient, per their installation instructions and/or the Configuration section of this instruction. Some accessories require that unit ducting already be installed.

16. On some units the EconoMi\$er and hood do not reach to the top of the unit. In this case a front blank-off panel must be installed. Install provided front blank-off panel above hood. Screw in place. (See Fig. 12.)

NOTE: The front blank-off panel must be installed before the hood because the top of the hood fits into a channel in the bottom of the panel.

17. Install the EconoMi\$er IV hood over the EconoMi\$er IV. Use screws provided. (See Fig. 11 and 12.) Insert screw through right side flange of hood into EconoMi\$er IV flange.
18. On some units the return damper does not reach to the top of the horizontal return opening in the unit. In this case a horizontal blank-off must be installed. Install the horizontal blank-off at the top of the horizontal return opening. (See Fig. 13.) Screw in place thru pre-punched holes.
19. Review the controller setting options in the Configuration section.
 - a. The standard EconoMi\$er IV outdoor air sensor has a factory setting of 63°F for the outdoor air temperature changeover and 55°F for the supply air temperature sensor. The outdoor air temperature setting can be adjusted on the sensor by setting the dip switches on the sensor. (See Fig. 15.) The ABCD potentiometer on the EconoMi\$er IV controller should be set to the “D” position.
 - b. The low temperature compressor lockout switch setting is fixed at 42°F.
 - c. The minimum position for the outdoor damper can be configured at the controller. When not using CO2 sensors, set the DCV Max potentiometer to completely closed (CCW) to insure that the Minimum Position potentiometer functions correctly. When using a remote minimum position potentiometer, the MIN POS pot on the controller must be fully CW.
 - d. Settings for the optional outdoor enthalpy sensor, indoor enthalpy sensor, power exhaust and CO2 sensor can be configured at the controller.

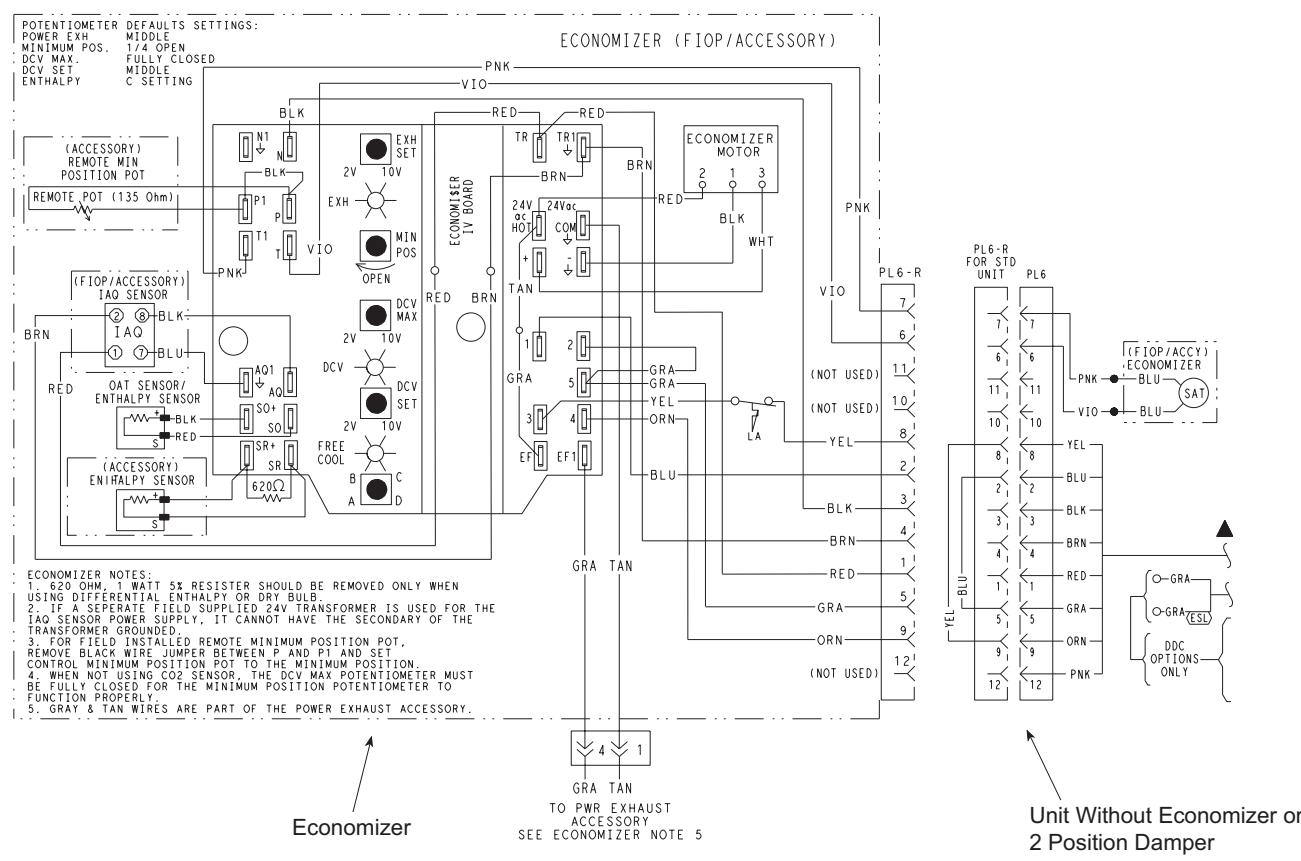


Fig. 8 - EconoMi\$er IV Wiring

20. Check all wiring for safety then reapply power to the unit. Verify correct operation and setting of the accessory(s) per the Configuration and Operations sections of the instruction.
21. Install access door next to hood. Screw bottom of door to HVAC unit. (See Fig. 11 and 12.) For the economizer for the extra large cabinet, install plastic inserts on right-hand vertical post and install long gasketed screws along the vertical edge. Use standard serrated screws along the bottom of the panel for all units.
22. Replace the indoor fan motor access panel.
23. Install the filter by opening the filter clips which are located underneath the hood top. Insert the aluminum filter into the bottom filter rack (hood divider). Push the filter into position past the open filter clips. Close the filter clips to lock the filter into place. (See Fig. 3.)

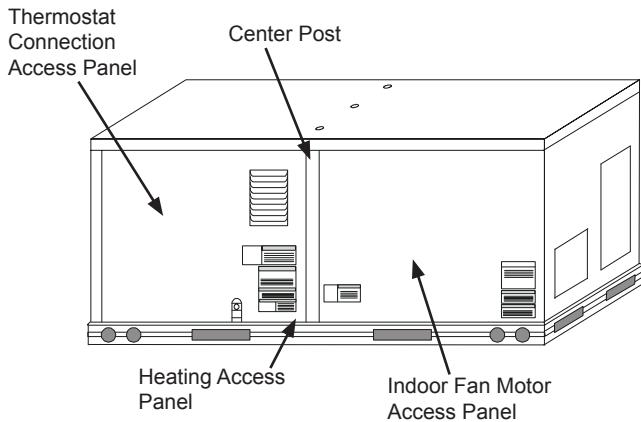


Fig. 9 - Typical Indoor Fan Motor Access Panel Locations

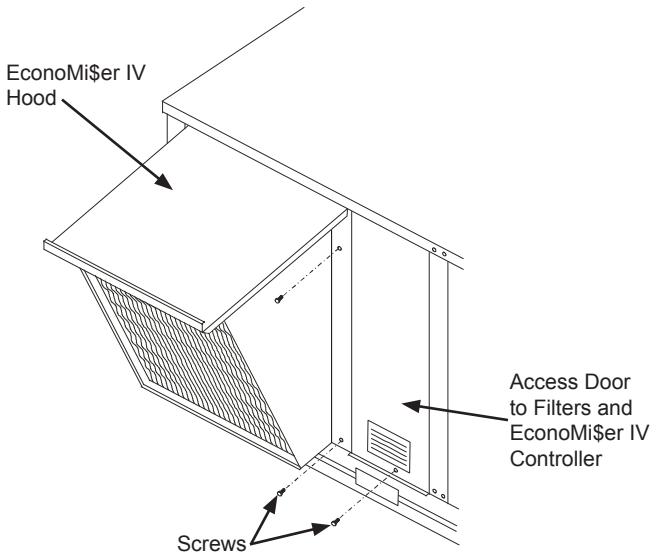


Fig. 11 - Hood and Access Door Installation

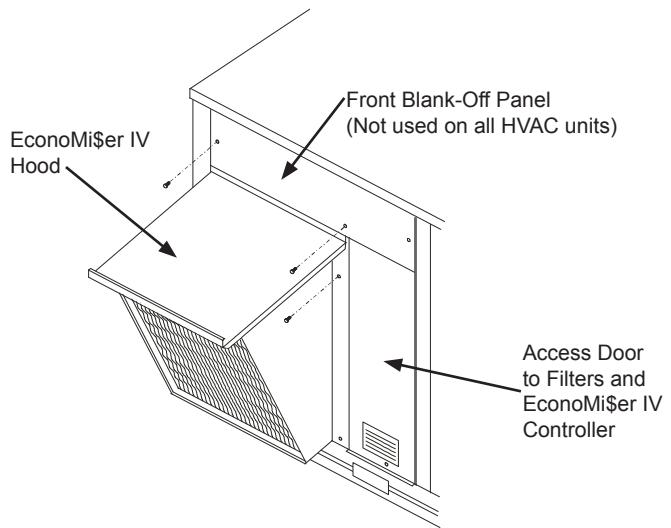


Fig. 12 - Front Blank-Off Panel Installation (Not on All Units)

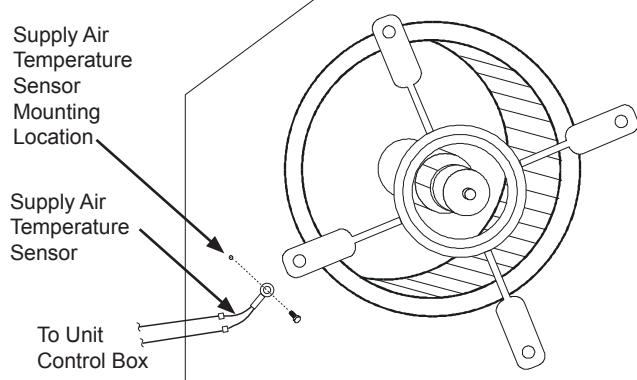


Fig. 10 - Supply Air Sensor Installation Location

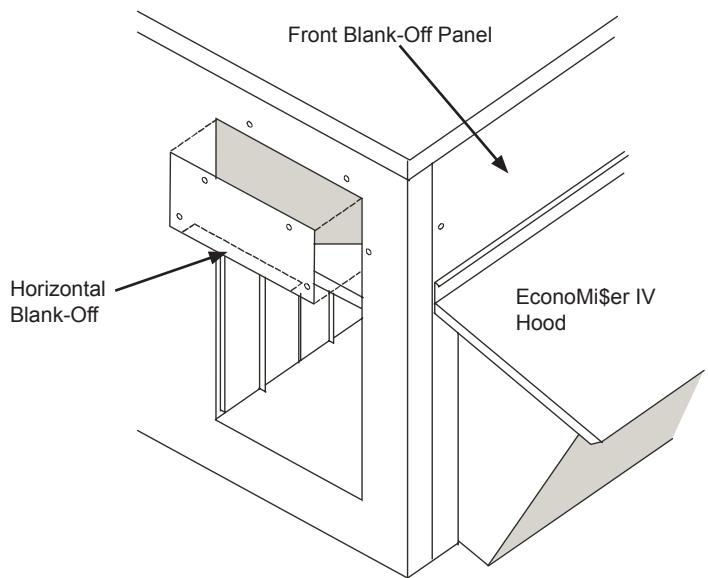


Fig. 13 - Horizontal Return Opening Blank-Off (Not on All Units)

CONFIGURATION

ECONOMISER IV CONTROL MODES — Determine the EconoMi\$er IV control mode before set up of the control. Some modes of operation may require different sensors (See Table 3). The EconoMi\$er IV kits for field installation are supplied from the factory with supply air temperature sensors, low temperature compressor lockout switches, and outdoor air temperature sensors. This allows for operation of the EconoMi\$er IV with outdoor air dry bulb changeover control. Additional accessories can be added to allow for different types of changeover control and operation of the EconoMi\$er IV and unit.

THERMOSTATS — The EconoMi\$er IV control works with conventional thermostats that have a Y1 (cool stage 1), Y2 (cool stage 2), W1 (heat stage 1), W2 (heat stage 2), and G (fan). The EconoMi\$er IV control does not support space temperature sensors. Connections are made at the thermostat section of the central terminal board located in the main unit control box.

Table 5 - Supply Air Sensor Temperature/Resistance Values

TEMPERATURE (F)	RESISTANCE (ohms)
-58	200,250
-40	100,680
-22	53,010
-4	29,091
14	16,590
32	9,795
50	5,970
68	3,747
77	3,000
86	2,416
104	1,597
122	1,080
140	746
158	525
176	376
185	321
194	274
212	203
230	153
248	116
257	102
266	89
284	70
302	55

NOTE: When using differential enthalpy control and “integrated economizer operation” is desired, a 2-stage cooling thermostat is required even on 1-stage cooling units (e.g. 2-6 ton rooftop units). A thermostat lead must be made between Y2-output on thermostat and Y2-input on rooftop unit’s Central Terminal Board (CTB). Internal wiring between Y2-input on the unit CTB and the economizer controller’s Y2 input already exists in unit wiring harness and the economizer plug, so no field modifications are required.

OCCUPANCY CONTROL (R22 MODELS) — The factory default configuration for the EconoMi\$er IV control is occupied mode. Occupied status is provided by the black wire from Pin 3. When unoccupied mode is desired, install a field supplied timeclock function interrupting the black wire to the N terminal. (See Fig. 8) When the timeclock contacts

are closed, the EconoMi\$er IV control will be in occupied mode. When the timeclock contacts are open (removing the 24-v signal from terminal N), the Economizer IV will be in unoccupied mode.

OCCUPANCY CONTROL (R410A MODELS) — The factory default configuration for the EconoMi\$er IV control is occupied mode. Occupied status is provided by installing a field-supplied timeclock function on the OCCUPANCY terminals on the CTB (Central Terminal Board) in the unit’s main control box and cutting the “CUT FOR OCCUPANCY” jumper on the CTB (See Fig. 20). When the timeclock contacts are closed, the EconoMi\$er IV control will be in occupied mode. When the timeclock contacts are open removing the 24v signal from terminal N, the EconoMi\$er IV will be in unoccupied mode.

SUPPLY AIR TEMPERATURE (SAT) SENSOR — The supply air temperature sensor is a 3 K thermistor located at the inlet of the indoor fan. (See Fig. 10) This sensor is field installed. The operating range of temperature measurement is 0° to 158° F. See Table 5 for sensor temperature/resistance values. The temperature sensor looks like an eyelet terminal with wires running to it. The sensor is located in the “crimp end” and is sealed from moisture.

LOW TEMPERATURE COMPRESSOR LOCKOUT SWITCH — The EconoMi\$er IV is equipped with a low ambient temperature lockout switch located in the outdoor airstream which is used to lock out the compressors below a 42° F ambient temperature. (See Fig. 1)

OUTDOOR AIR TEMPERATURE (OAT) SENSOR — The outdoor air temperature sensor (HH57AC080) is a 10 to 20 mA device used to measure the outdoor-air temperature. The outdoor-air temperature is used to determine when the EconoMi\$er IV can be used for free cooling. The sensor has 8 selectable temperature changeover set points, ranging from 48° F to 78° F. The temperature changeover is set using the 3 dip switches on the sensor. (See Fig. 15)

OUTDOOR DRY BULB CHANGEOVER — The standard controller for field installed accessory economizers is shipped from the factory configured for outdoor dry bulb changeover control. For this control mode, the outdoor temperature is compared to a selectable set point on the OAT sensor. If the outdoor air temperature is above the set point, the EconoMi\$er IV will adjust the outdoor air dampers to minimum position. If the outdoor air temperature is below the set point, the position of the outdoor air dampers will be controlled to provide free cooling using outdoor air. When in this mode, the Free Cool LED next to the outdoor enthalpy set point (ABCD) potentiometer will be on. The changeover temperature set point is controlled by the dip switches on the sensor. See Fig. 15 for the switch positions corresponding to the temperature changeover values. The ABCD potentiometer on the controller should be turned fully clockwise (CW) to the “D” position.

OUTDOOR ENTHALPY CHANGE OVER — For enthalpy control, accessory enthalpy sensor (part number HH57AC078) is required. Replace the standard outdoor dry bulb temperature sensor with the accessory enthalpy sensor in the same mounting location. (See Fig. 1) When the outdoor air enthalpy rises above the outdoor enthalpy changeover set point, the outdoor-air damper moves to its minimum position. The outdoor enthalpy changeover set point is set with the outdoor enthalpy set point (ABCD) potentiometer on the EconoMi\$er IV controller. The set points are A, B, C, and D (See Figs. 14, 17 & 18). The factory-installed 620-ohm jumper must be in place across terminals SR and SR+ on EconoMi\$er IV controller. (See Fig. 8). When not using CO2 sensors, set the DCV Max potentiometer to completely closed (CCW) to insure that the Minimum Position potentiometer functions correctly.

CAUTION

EQUIPMENT DAMAGE HAZARD

Failure to follow this caution may result in damage to equipment. If a separate field-supplied transformer is used to power the IAQ sensor, the sensor must not be grounded or the EconoMi\$er IV control board will be damaged.

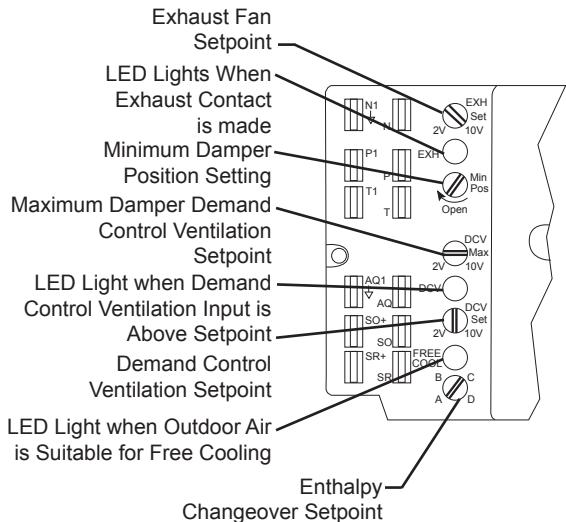


Fig. 14 - EconoMi\$er IV Controller Potentiometer and LED Locations

DIP SWITCH POSITION	CHANGEOVER TEMPERATURE
ON OFF 1 2 3	48°F
ON OFF 1 2 3	53°F
ON OFF 1 2 3	55°F
ON OFF 1 2 3	58°F
ON OFF 1 2 3	63°F
ON OFF 1 2 3	68°F
ON OFF 1 2 3	73°F
ON OFF 1 2 3	78°F

M27636

Fig. 15 - Outdoor Air Temperature Changeover Set Points

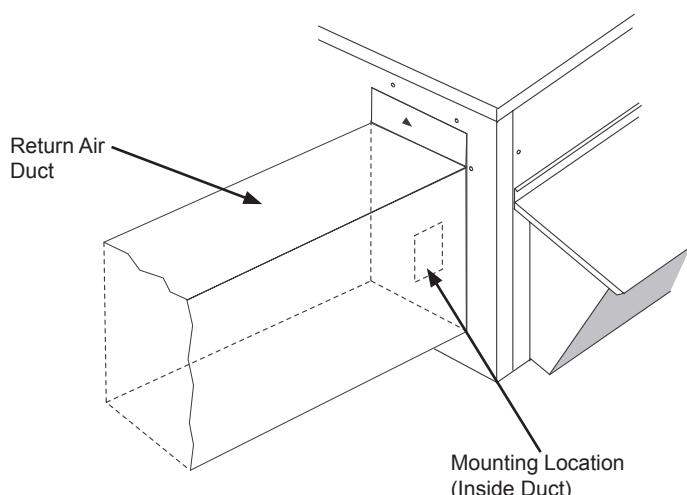


Fig. 16 - Return Air Enthalpy Sensor Mounting Location

DIFFERENTIAL ENTHALPY CONTROL — For differential enthalpy control, the EconoMi\$er IV controller uses two enthalpy sensors, HH57AC078 in the outside air and CRENTDIF004A00 in the return airstream. The EconoMi\$er IV controller compares the outdoor air enthalpy to the return air enthalpy to determine EconoMi\$er IV damper position. The controller selects the lower enthalpy air (return or outdoor) for cooling. For example, when the outdoor air has a lower enthalpy than the return air, the EconoMi\$er IV opens to bring in outdoor air for free cooling. Replace the standard outside air dry bulb temperature sensor with the accessory enthalpy sensor in the same mounting location. (See Fig. 1) Mount the return air enthalpy sensor in the return air duct. (See Fig. 8 and 16) When using this mode of changeover control, turn the outdoor enthalpy set point (ABCD) potentiometer fully clockwise to the D setting.

POWER EXHAUST SET POINT ADJUSTMENT — If the optional power exhaust accessory is installed, the exhaust set point will determine when the power exhaust fan runs based on damper position. The set point is modified with the Exhaust Fan Set Point (EXH SET) potentiometer. (See Fig. 14) The set point represents the damper position above which the exhaust fans will be turned on. When there is a call for exhaust, the EconoMi\$er IV controller provides a 45 ± 15 second delay before exhaust fan activation to allow the dampers to open. This delay allows the damper to reach the appropriate position to avoid unnecessary fan overload.

MINIMUM DAMPER POSITION CONTROL — There is a minimum damper position potentiometer on the EconoMi\$er IV controller. (See Fig. 14). Adjust the Min Pos potentiometer to allow the minimum or base amount of outdoor air, as required by local codes, to enter the building. Make minimum position adjustments with at least 10°F temperature difference between the outdoor and return-air temperatures. The minimum damper position maintains the minimum airflow for full occupancy into the building during the occupied period when demand control ventilation is not being used.

When the control is operating in Demand Control Ventilation (DCV) mode (see separate section following), the minimum damper position sets the minimum ventilation position for VOC (volatile organic compound) contaminant removal during lightly occupied periods. In this mode the DCV Max potentiometer is used for fully occupied ventilation.

NOTE: When DCV is not being used, set the DCV Max potentiometer to completely closed (CCW) to insure that the Minimum Position potentiometer functions correctly. If the DCV Max is set more open than Min Pos and <1 Vdc is detected across the CO₂ sensor terminals, then DCV Max will override and become the actual lower limit on damper position.

To determine the minimum position setting, perform the following procedure:

1. Calculate the appropriate mixed air temperature using the following formula:

$$(TO \times OA/100) + (TR \times RA/100) = TM$$

TO = Outdoor-Air Temperature
 OA = Percent of Outdoor Air
 TR = Return-Air Temperature
 RA = Percent of Return Air
 TM = Mixed-Air Temperature

As an example, if DCV is not being used and local codes require 10% outdoor air during occupied conditions, outdoor-air temperature is 60°F , and return-air temperature is 75°F .
 $(60 \times 0.10) + (75 \times 0.90) = 73.5^{\circ}\text{F}$

CONTROL CURVE	CONTROL POINT APPROX. °F (°C) AT 50% RH
A	73 (23)
B	70 (21)
C	67 (19)
D	63 (17)

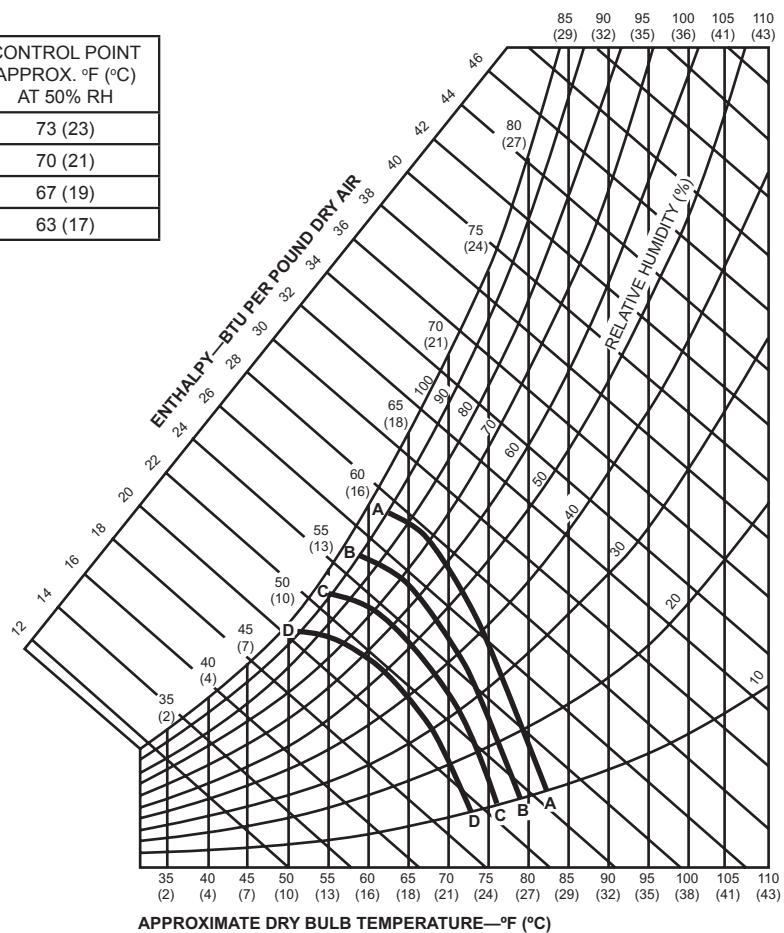


Fig. 17 - Enthalpy Changeover Setpoints

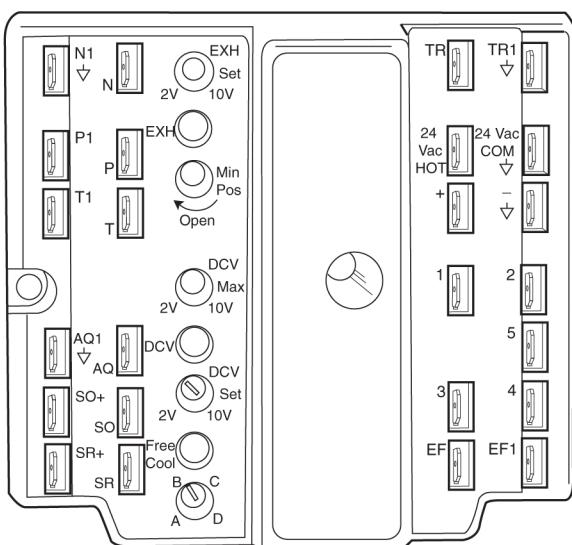


Fig. 18 - EconoMi\$er IV Controller

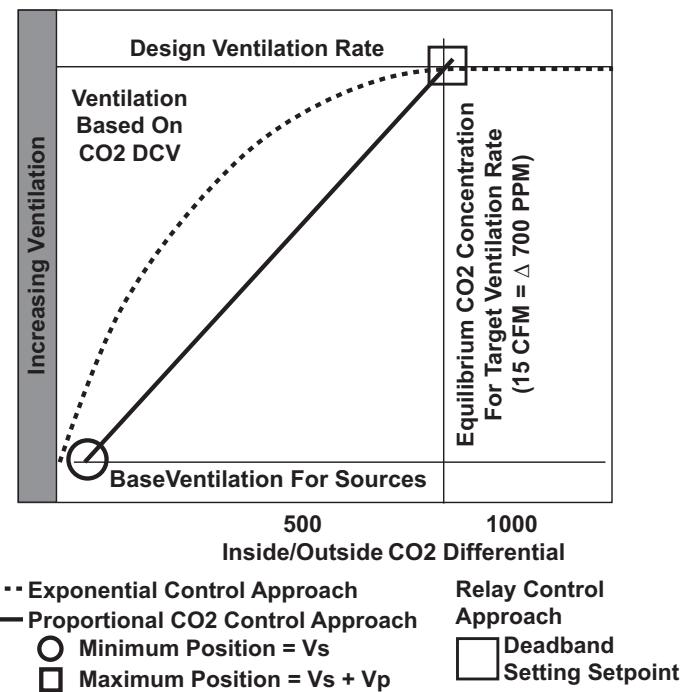


Fig. 19 - Proportional and Exponential Control

2. Disconnect the supply air sensor from terminals T and T1 (See Fig. 18) and jumper them together. This fools the controller into believing the mixed air temperature is 55 °F so it does not modulate the damper.
3. Ensure that the factory-installed jumper is in place across terminals P and P1 (for remote control of damper position see the paragraph following.)
4. Connect 24 Vac across terminals TR and TR1(factory wiring should ensure this if the 12-pin plug is connected. Carefully adjust the Min Pos potentiometer until the measured mixed-air temperature matches the calculated value. Measurement must be done with a separate thermometer or sensor accurate to ± 0.5 °F because you have fooled the unit controls in step 2 above.
5. If you are going to set the DCV maximum ventilation position with the DCV Max potentiometer, do it now while you have 24Vac across terminal TR & TR1. See the DEMAND CONTROLLED VENTILATION section following.
6. Remove the jumper and reconnect the supply air sensor to terminals T and T1.

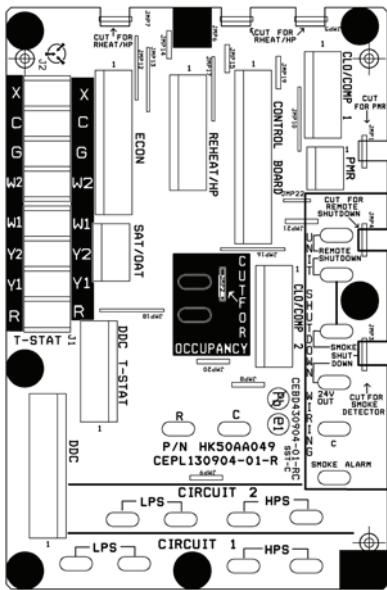


Fig. 20 - Light Control Terminal Board

REMOTE CONTROL OF DAMPER POSITION - Remote control of the EconoMi\$er IV damper is desirable when additional temporary ventilation may be required. If a field-supplied remote potentiometer (such as Honeywell part number S963B1128) is wired to the EconoMi\$er IV controller, the minimum position of the damper can be controlled from a remote location. If remote damper positioning is being used, use the same steps 1 & 2 above and then follow these additional steps to determine the remote position setting for the desired percent airflow.

3. Remove the factory installed black jumper connecting terminals P & P1(See Fig. 8)
4. Turn the EconoMi\$er IV Min Pos potentiometer fully clockwise.
5. Connect the remote minimum position potentiometer across terminals P & P1.
6. Connect 24 Vac across terminals TR and TR1.
7. Carefully adjust the remote minimum position potentiometer until the measured mixed-air temperature matches the calculated value.
8. Reconnect the supply air sensor to terminals T and T1.

DAMPER MOVEMENT — Damper movement from full open to full close (or vice versa) takes 3 minutes.

DEMAND CONTROLLED VENTILATION (DCV)—Demand controlled ventilation uses an optional accessory carbon dioxide (CO₂) sensor to measure the amount of CO₂ in indoor air. The controller uses this input to adjust outside air ventilation to maintain indoor air quality (IAQ) based on a user configurable maximum CO₂ level. This typically reduces outside air intake requirements and therefore energy consumption.

When using the EconoMi\$er IV for demand controlled ventilation, you will need to adjust three controller potentiometers to set:

- the minimum damper position to ventilate the lightly occupied building
- the triggering CO₂ level to begin opening the damper
- the maximum damper position to provide fresh air to for a fully occupied building.

The damper settings (in terms of % fresh air flow) and the CO₂ level in term of parts per million (ppm) should be provided to you by the consulting engineer(s) on the job, calculated based on building codes and/or ASHRAE Standard 62.1. Examples in this instruction use typical numbers.

To set up DCV:

1. Disconnect the CO2 sensor if already connected.
2. Determine and set the minimum damper position per the MINIMUM DAMPER POSITION CONTROL section above, noting that the definition of minimum ventilation changes for DCV. Make sure that DCV Max potentiometer is set to completely closed (CCW) during this procedure.
3. Determine and set the DCV maximum damper position using the same procedure from MINIMUM DAMPER POSITION CONTROL section above except:
 - Adjust the DCV Max potentiometer instead of MIN POS.
4. Determine and set the minimum CO2 value where the damper should start to open by adjusting the DCV Set potentiometer. See also the CO2 SENSOR CONFIGURATION section following. Background CO2 level is around 400 ppm and a typical starting ventilation threshold is 600 ppm above background for a total value of 1000 ppm. The factory default setting on factory-supplied sensors is a measuring range of 0 -2000 ppm with a 0-10 Vdc proportional (linear) output. This means 1000 ppm would result in ~5V output. The DCV Set potentiometer comes from the factory set at 50%, but it is 50% of 2-10Vdc which is 6 Vdc, not 5. To set the DCV Set potentiometer correctly to activate DCV at 1000ppm of CO2 you must do one of the following:

- Provide a 5 Vdc signal (3 fresh batteries in series would give you ≥ 4.5 Vdc, probably closer to 4.8 Vdc) and adjust the potentiometer until the DCV LED just lights, or
- Estimate setting by adjusting pot 3/8 turn clockwise for 5 Vdc setting.
- Don't touch the pot at all. Instead adjust the voltage output range on the CO2 sensor from 0-10 Vdc default to 2-10 Vdc so it matches the pot. See also the CO2 SENSOR CONFIGURATION section following.

CO2 / INDOOR AIR QUALITY (IAQ) SENSOR - Mount the accessory IAQ sensor according to manufacturer specifications in the space or return air duct. The IAQ sensor should be wired to the AQ and AQ1 terminals of the controller.

CO2 SENSOR CONFIGURATION— Set up the CO2 sensor according to the manufacturer's instructions that come with the unit. The default setting on factory-supplied sensors is a measuring range of 0 - 2000 ppm CO2 concentration with a 0 - 10 Vdc proportional (linear) output. If you followed the instructions above these settings should be fine as is.

Table 6 - EconoMi\$er IV Input/Output Logic

INPUTS				OUTPUTS				
Demand Control Ventilation (DCV)	Enthalpy ^a		Y1	Y2	Compressor		N Terminal ^b	
	Outdoor	Return			Stage 1	Stage 2	Occupied ^b	Unoccupied ^b
		Y1	Y2			Damper		
Below set (DCV LED Off)	High (Free Cooling LED Off)	Low	On	On	On	On	Minimum position	Closed
			On	Off	On	Off		
			Off	Off	Off	Off		
	Low (Free Cooling LED On)	High	On	On	On	Off	Modulating ^c (between min. position and full-open)	Modulating ^c (between closed and full-open)
			On	Off	Off	Off		
			Off	Off	Off	Off		
Above set (DCV LED On)	High (Free Cooling LED Off)	Low	On	On	On	On	Modulating ^d (between min. position and DCV maximum)††	Modulating ^{d,g} (between closed and DCV maximum)††
			On	Off	On	Off		
			Off	Off	Off	Off		
	Low (Free Cooling LED On)	High	On	On	On	Off	Modulating ^e	Modulating ^f
			On	Off	Off	Off		
			Off	Off	Off	Off		

^a For single enthalpy control, the module compares outdoor enthalpy to the ABCD set point.

^b Power at N terminal determines Occupied/Unoccupied setting:

• W7212: 24 vac (Occupied), no power (Unoccupied).

^c Modulating is based on the supply-air temperature sensor signal.

^d Modulation is based on the DCV signal. If the CO2 sensor input (AQ-AQ1) terminals is < 1Vdc or the sensor has failed, the motor will drive to MIN POS or DCV MAX which ever is highest.

^e Modulation is based on the greater of DCV and mixed air sensor signals, between minimum position and either maximum position (DCV) or fully open (mixed air signal).

^f Modulating is based on the greater of DCV and mixed air sensor signals, between closed and either maximum position (DCV) or fully open (mixed air signal).

^g Modulation is based on the DCV signal, if the CO2 sensor input (AQ-AQ1) terminals is < 1Vdc or the sensor has failed, the motor will drive DCV MAX in occupied mode. When power is cut to the economizer (fan is off) then the damper will spring return closed.

NOTE: The EconoMi\$er IV control assumes the presence of a correctly functioning CO2 sensor if the voltage across the AQ – AQ1 terminals \geq 1 Vdc, because it assumes the sensors are set up for 2 – 10 Vdc output. Otherwise it will not operate in DCV mode and instead opens the dampers to the more open of the MIN POS and DCV Max set points. factory-supplied sensors' default settings are 0 – 10 Vdc, but because there is always CO2 in the air, you should still read at least 2 Vdc under normal circumstances. However if you reprogram the factory-supplied sensors (to increase the range, change the output voltage, etc.) it is possible to lower the sensor voltage output to where you might have problems. Therefore, if you reprogram a factory-supplied CO2 sensor, you should also adjust the minimum voltage output up from 0 to 2 Vdc to avoid this issue.

Factory-supplied sensors offer the option of changing to an exponential anticipatory response (see Fig. 19) which generates higher output voltages at midrange sensor readings to make the controller introduce more outside ventilation air at lower CO2 concentrations. Continuing the example from step 3 of the DEMAND CONTROLLED VENTILATION section, if after DCV Set adjustment you changed the CO2 sensor from proportional to exponential, the sensor voltage output would reach 5 Vdc at a CO2 concentration below 1000 ppm, fooling the controller into opening sooner to anticipate ventilation demands. Exponential anticipatory response would be appropriate for zones with:

- large air volumes such as gyms or theaters where higher CO2 levels might take a while to build up or reach the sensor.
- widely varying occupancy levels
- HVAC equipment that cannot exceed the required ventilation rate at design conditions. Exceeding the required ventilation rate means the equipment can condition air at a maximum ventilation rate that is greater than the required ventilation rate for maximum occupancy.

NOTE: The exponential anticipatory response setting only actually works like it should if the EconoMi\$er IV control DCV Set potentiometer is adjusted based on the original linear output. If you adjust it using the actual value of exponential voltage output from the sensor, it will not respond any faster.

DEHUMIDIFICATION OF FRESH AIR WITH DCV CONTROL

—Information from ASHRAE indicates that the largest humidity load on any zone is the fresh air introduced. For some applications, an energy recovery unit can be added to reduce the moisture content of the fresh air being brought into the building when the enthalpy is high. In most cases, the normal heating and cooling processes are more than adequate to remove the humidity loads for most commercial applications. If normal rooftop heating and cooling operation is not adequate for the outdoor humidity level, an energy recovery unit and/or a dehumidification option should be considered.

OPERATION

When outside air temperatures are below return air temperatures the possibility exists for “free cooling,” similar to opening a window instead of turning on your air conditioner. The EconoMi\$er opens outdoor air dampers to admit cool outside air to the inlet of the supply air fan instead of activating the unit’s compressor(s). This opening is controlled by a variety of standard and optional control strategies based on temperature, enthalpy and/or CO₂ content of indoor and/or outdoor air. Relief dampers dump relatively hotter return air outdoors at the same time, optionally assisted by the power exhaust accessory. See Table 6 for a summary of controller logic.

SEQUENCE OF OPERATION—For EconoMi\$er IV operation, there must be a thermostat call for the fan (G). This will move the damper to its minimum position (as controlled by the MIN POS potentiometer) during the occupied mode. When outside air conditions are such that free cooling is not available, the compressor will be controlled by the thermostat. If free cooling can be used, as determined from the appropriate sensors (dry bulb temperature, enthalpy, or differential enthalpy) and changeover control schedule, a call for cooling (Y1 closes at the thermostat) will cause the EconoMi\$er IV control to provide a 50° to 55°F supply-air into the zone. As the supply air temperature (SAT) fluctuates above 55°F concurrent with Compressor 1 operation, the low ambient lockout thermostat will block compressor operation with EconoMi\$er IV operation below 42°F outside-air temperature.

If a field-installed accessory CO₂ sensor is connected to the EconoMi\$er IV control, a demand controlled ventilation strategy will begin to operate in parallel with the free cooling strategy. As the CO₂ level in the zone increases above the CO₂ set point position (as controlled by the DCV set potentiometer), the position of the damper will be increased proportionally to the DCV Max position (as controlled by the DCV Max potentiometer). As the CO₂ level decreases because of the increase in fresh air, the outdoor-air damper will be proportionally closed back down to the minimum open position. Damper position will follow the higher demand condition from the DCV mode or free cooling mode.

Performance Data — Refer to Fig. 21 for barometric relief capacity. Refer to Fig. 22 for return air pressure drop.

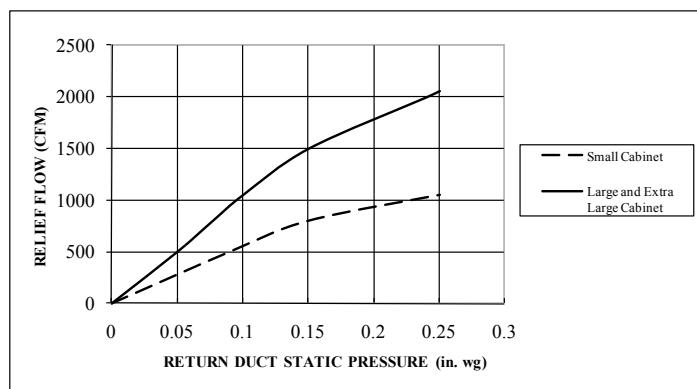


Fig. 21 - Barometric Flow Capacity

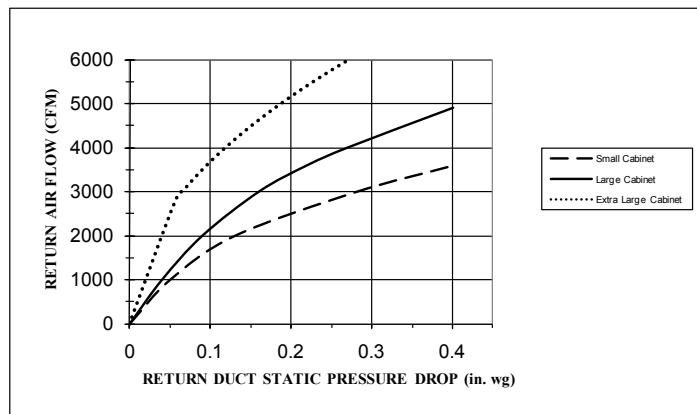


Fig. 22 - Return Air Pressure Drop

CHECKOUT AND TROUBLESHOOTING

Checkout requires a 9V battery, 620 ohm, 1.2K ohm, 5.6K ohm, and 6.8K ohm resistors. Use table 7 and Fig. 23 for checkout.



CAUTION

Equipment Damage Hazard.

Excessive force can damage potentiometer controls.

Use a small screwdriver when adjusting enthalpy changeover and minimum damper position controls

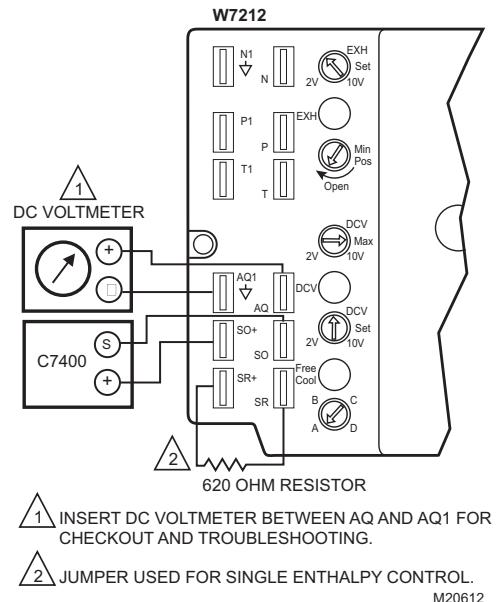


Fig. 23 - Meter Location for Checkout and Troubleshooting

Table 7. Checkout for EconoMi\$er IV

Step	Checkout Procedure	Proper Response
1.	<p>CHECKOUT PREPARATION FOR ECONOMIZING ONLY</p> <p>Disconnect power at TR and TR1.</p> <p>Disconnect devices at P and P1.</p> <p>Jumper P to P1 (defaults to on board MIN POS potentiometer).</p> <p>Place 5.6K ohm resistor across T and T1 (Blue sleeve- provides input to economizer that the MAT is between 50-55F).</p> <p>Jumper TR to 1 (call for cooling from the thermostat).</p> <p>W7212 only Jumper TR to N (places economizer in occupied mode).</p> <p>If connected, remove C7400 Enthalpy Sensor from terminals S_O and +.</p> <p>Connect 1.2K ohm, from 4074EJM Checkout Resistor kit, (purple sleeve) across terminals S_O and + (makes OA enthalpy high).</p> <p>Place 620 ohm resistor (white sleeve) across S_R and + (makes return enthalpy lower than OA).</p> <p>Set MIN POS and DCV MAX potentiometers fully CCW.</p> <p>Turn DCV setpoint potentiometer mid position (this sets the DCV ventilation at approximately 1000 ppm).</p> <p>Turn exhaust potentiometer to mid position (motor will be approximately 50% open when the exhaust fan contacts make).</p> <p>Set enthalpy potentiometer to D.</p> <p>Apply power (24 Vac) to terminals TR and TR1.</p>	All LED are off; Exhaust Fan contacts are open.

Table 7. Checkout for EconoMi\$er IV (Continued)

Step	Checkout Procedure	Proper Response
2.	DIFFERENTIAL ENTHALPY	
	Execute step one, Checkout Preparation.	—
	Turn DCV MAX to mid position.	
	Place 620 ohm resistor across S_O and + (white sleeve resistor makes OA enthalpy low).	—
	Place 1.2K ohm resistor across S_R and + (purple sleeve resistor makes RA enthalpy high).	Free cool LED turns on; motor drives to approximately 45 degrees (half open).
3.	Remove 620 ohm resistor from S_O and +.	Free cool LED turns off; motor drives closed
	SINGLE ENTHALPY	
	Execute step one, Checkout Preparation.	—
	Turn DCV MAX to mid position.	
	Set enthalpy potentiometer to A (fully CCW).	Free cool LED turns on; motor drives to approximately 45 degrees (half open).
4.	Set enthalpy potentiometer to D (fully CW).	Free cool LED turns off; motor drives closed
	DCV AND EXHAUST	
	Execute step one, Checkout Preparation.	—
	LED for both DCV and Exhaust should be off.	
	Turn DCV MAX to mid position.	Motor drives to mid position, 45 degrees open.
	Turn MIN POS fully CW.	Motor drives fully open.
	Turn MIN POS and DCV MAX to fully CCW.	Motor drives closed.
	Turn DCV MAX to mid position. Connect 9V battery positive to AQ and negative to AQ1.	LED for both DCV and Exhaust turn on. Actuator drives to 45 degrees open.
	Remove jumper from N terminal (economizer goes into not occupied mode).	Motor remains at 45 degrees open.
	Adjust DCV MAX towards CW.	Motor will move to position set by DCV MAX pot.
	Adjust DCV MAX to fully CCW.	Motor will drive closed.
	Reconnect jumper to N terminal.	
	Adjust DCV MAX and MIN POS pots.	Motor will drive to the most open position of the pots.
	Adjust DCV MAX and MIN POS pots to fully CCW.	
5.	Remove power from N terminal adjust MIN POS towards CW	Motor should not move.
	Adjust DCV MAX towards CW.	Motor will move to position set by DCV MAX pot.
	MINIMUM AND MAXIMUM POSITION	
	Execute step one, Checkout Preparation.	—
	Connect 9V battery positive to AQ and negative to AQ1. Adjust DCV MAX potentiometer to mid position.	DCV LED turns on. Actuator drives to 45 degrees open.
	Turn DCV maximum position potentiometer to fully CCW.	Actuator drives fully closed.
	Turn minimum position potentiometer to midpoint.	Actuator drives to 45 degrees open.
6.	Turn minimum position potentiometer fully CW.	Actuator drives fully open.
	Turn MIN POS to fully CCW.	Actuator drives fully closed.
	W7212: Remove jumper from TR and N.	Actuator drives fully closed.
	MIXED AIR INPUT	
	Execute step one, Checkout Preparation.	—
	Turn DCV MAX to mid position; set enthalpy potentiometer to A.	Free cool LED turns on. Actuator drives to 45 degrees open.
	Remove 5.6K ohm resistor (green sleeve) and place jumper from T and T1.	Actuator drives to 45 degrees open.
	Remove jumper from T and T1 and leave open.	Actuator drives fully closed.