

INDUCED-COMBUSTION GAS FURNACE

PARTS REPLACEMENT INFORMATION GUIDE

CASING GROUP

Control door
Blower door
Top filler plate
Bottom filler plate
Condensate trap

HEAT EXCHANGER GROUP

Primary HX
Primary HX cell panel
Secondary HX assembly
Coupling box

ELECTRICAL GROUP

Control box
Junction box
Limit switch(es)
Circuit board
Door switch
Transformer
Wiring harness
5-amp fuse
Over-temperature switch

INDUCER GROUP

Pressure switch(es)
Inducer motor assembly

BLOWER GROUP

Blower assembly
Blower housing
Blower motor
Blower wheel
Capacitor
Capacitor strap

GAS CONTROL GROUP

Manifold
Burner
Orifice
Flame sensor
Hot surface igniter
Gas valve

FILTER GROUP

Filter(s)
Media cabinet

TO OBTAIN INFORMATION ON PARTS: Consult your installing dealer or the classified section of your local telephone directory under the "Heating Equipment" or "Air Conditioning Contractors and Systems" headings for dealer listing by brand name, or contact:

Payne Heating & Cooling Systems
Consumer Relations Department
P.O. Box 4952
Syracuse, New York 13221
1-800-428-4326

Have available the Product No., Model No., Series Letter, and Serial No. located on the unit rating plate to ensure correct replacement part.

Example of Product Number

<u>MODEL</u>	<u>SERIES</u>	<u>BLOWER</u>	<u>COOLING</u>	<u>HEATING</u>	<u>VARIATION</u>	<u>SERIES</u>	<u>HEAT</u>
PG9MT	A	<u>TYPE</u>	<u>SIZE</u>	<u>SIZE</u>	A	B	<u>EXCHANGER</u>
		V	(AIRFLOW)	075			<u>TYPE</u>
			36				SS

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause personal injury, property damage, or death. Consult a qualified installer, service agency, or your local gas supplier for information or assistance. The qualified installer or service agency must use only factory-authorized replacement parts, kits, or accessories when modifying this product.