



GAS-FIRED CONDENSING FURNACE

PARTS REPLACEMENT INFORMATION GUIDE

CASING GROUP

Access door
Blower access panel
Top filler plate
Bottom filler plate
Condensate trap

ELECTRICAL GROUP

Control center
J-box
Limit switch
3-Amp fuse
Door switch
Transformer
Auxiliary limit switch
Wiring harness
Overtemperature switch

FILTER GROUP

Filter
Retainer wire
Retainer wire latch
Retainer wire pivot

GAS CONTROL GROUP

Manifold
Burner
Orifice
Hot surface ignitor
Flame sensor electrode
Gas valve
Combustion-air intake housing

HEAT EXCHANGER GROUP

Primary cell
Primary cell panel
Coupling box(es)
Condensing hx assembly
Limit shield

BLOWER GROUP

Blower assembly
Blower housing
Blower motor
Blower wheel
Capacitor
Capacitor strap

INDUCER GROUP

Pressure switch(es)
Inducer motor
Inducer blower housing
Inducer motor mounting plate
Inducer blower wheel
Inducer motor capacitor

TO OBTAIN INFORMATION ON PARTS: Consult your installing dealer or classified section of your local telephone directory under the "Heating Equipment" or "Air Conditioning Contractors and Systems" headings for dealer listing by brand name, or contact:

BDP
Consumer Relations Department
P.O. Box 4952
Syracuse, New York 13221-4952
1-800-428-4326 (TOLL-FREE) from USA
1-315-432-7885 from Canada

Have available the Product No., Model No., Series Letter, and Serial No. located on the unit rating plate to ensure correct replacement part.

Example of Product Number

MODEL NO.	VOLTAGE	IGNITION TYPE	COOLING SIZE (AIRFLOW)	HEATING SIZE	BRAND	SERIES	HEAT EXCHANGER TYPE
350M	A	V	036	080	A	A	KA

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause personal injury, property damage, or death. Consult a qualified installer, service agency, or your local gas supplier for information or assistance. The qualified installer or service agency must use only factory-authorized replacement parts, kits, or accessories when modifying this product.

Default Page Layout