



Airflow Data Supplement

NOTE: Read the entire installation instruction manual before starting installation for the units listed in this supplement.

The data in this supplement details the rated indoor air (cfm) airflow used for the unit AHRI efficiency rating for the following models: 581/551J, 549J, 580/558J and 548J.

The Full Load Airflow (cfm) for units not listed on this sheet can be found in the Installation Instructions for the given unit.

581/551J

Model Number	Full Load Airflow (cfm)
581/551J*04A/B/C/G/H/J	1050
581/551J*05A/B/C/G/H/J	1400
581/551J*06A/B/C/G/H/J	1625
581/551J*07A/C/G/J	2400
581/551J*08D/F/K/M	3000
581/551J*09D/F/K/M	3000
581/551J*11D/F/K/M	3000
581/551J*12D/F/K/M	3000
581/551J*14D/F/K/M	4375
581/551J*17D/F/K/M	4900
581/551J*20D/F/K/M	5700
581/551J*24D/F/K/M	6500
581/551J*28D/F/K/M	8125

NOTE: “B”, “C”, “F”, “H”, “J”, & “M” designations apply to 581J units only

549J

Model Number	Full Load Airflow (cfm)
549J*04A	1225
549J*05A	1700
549J*06A	1625
549J*07A	2400
549J*08D	3000
549J*09D	3400
549J*12D	4000

580/558J

Model Number	Full Load Airflow (cfm)
580/558J*04A/B/C/G/H/J	1295
580/558J*05A/B/C/G/H/J	1500
580/558J*06A/B/C/G/H/J	1750
580/558J*07A/C/G/J	2200
580/558J*08A/C	2400
580/558J*08D/F/K/M	2250
580/558J*09A/C	3000
580/558J*09D/F/K/M	3400
580/558J*12A/C	3600
580/558J*12D/F/K/M	3000
580/558J*14D/F/K/M	3600
580/558J*16D/F/K/M	5250

NOTE: “B”, “C”, “F”, “H”, “J”, & “M” designations apply to 580J units only

548J

Model Number	Full Load Airflow (cfm)
548J*04A	1200
548J*05A	1600
548J*06A	2100
548J*07A	2100
548J*08D	3000
548J*09D	3400
548J*12D	3500
548J*14D	4500