

INDUCED-COMBUSTION GAS FURNACE PARTS REPLACEMENT INFORMATION GUIDE

CASING GROUP

Control door
Blower door
Top filler plate
Bottom filler plate
Bottom enclosure (GB1A only)

INDUCER GROUP

Relief box/housing assembly
Collector box
Pressure switch
Motor, inducer
Blower wheel
Draft safeguard switch
Flue choke plates

FILTER GROUP

Filter(s)
Retainer rod (GB1A only)
Retainer rod bracket (GB1A only)
Filter support bracket (GB3A only)

HEAT EXCHANGER GROUP

Cell
Inner front panel
Limit shield
Cell inlet plates

ELECTRICAL GROUP

Control box
Junction box
Limit switch
Circuit board
Door switch
Transformer
Wiring harness
Manual reset limit switch(es)

GAS CONTROL GROUP

Manifold
Manifold brackets (L and R)
Burner
Orifice
Flame sensor
Hot surface ignitor
Gas valve

BLOWER GROUP

Blower assembly
Blower housing
Blower cutoff
Blower motor
Blower wheel
Capacitor
Capacitor strap
Grommet

TO OBTAIN INFORMATION ON PARTS: Consult your installing dealer or classified section of your local telephone directory under the "Heating Equipment" or "Air Conditioning Contractors and Systems" headings for dealer listing by brand name or contact:

CAC/BDP
Consumer Relations
P.O. Box 4952
Syracuse, New York 13221

Have available the Product No., Model No., Series Letter, and Serial No. located on the unit rating plate to insure correct replacement part.

Example of Product Number

MODEL	VOLTAGE	IGNITION TYPE	COOLING SIZE	HEATING SIZE	BRAND	SERIES	HEAT EXCHANGER TYPE
GB1A	A	V	036	065	A-United States	D	JA

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause personal injury or property damage. Consult a qualified installer, service agency, or your local gas supplier for information or assistance. The qualified installer or service agency must use only factory-authorized kits or accessories when modifying this product.