

Visit www.carrier.com

Installation and Start-Up Instructions

NOTE: Read the entire instruction manual before starting the installation.

This symbol → indicates a change since the last issue.

SAFETY CONSIDERATIONS

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury, or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Use quenching cloth for brazing operations. Have fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit. Consult local building codes and National Electrical Code (NEC) for special requirements.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand these signal words; DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies hazards which **could** result in personal injury or death. CAUTION is used to identify unsafe practices which **would** result in minor personal injury or product and property damage.

⚠ WARNING

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position. There may be more than 1 disconnect switch. Lock out and tag switch with a suitable warning label. Electrical shock can cause personal injury or death.


⚠ CAUTION

Puron® (R-410A) systems operate at higher pressures than standard R-22 systems. Be certain that service equipment is rated for Puron®. Some R-22 service equipment may not be acceptable. Check with your distributor.

INSTALLATION RECOMMENDATIONS

NOTE: In some cases noise in the living area has been traced to gas pulsations from improper installation of equipment.

1. Locate unit away from windows, patios, decks, etc. where unit operation sound may disturb customer.
2. Ensure that vapor and liquid tube diameters are appropriate to capacity of unit.
3. Run refrigerant tubes as directly as possible by avoiding unnecessary turns and bends.

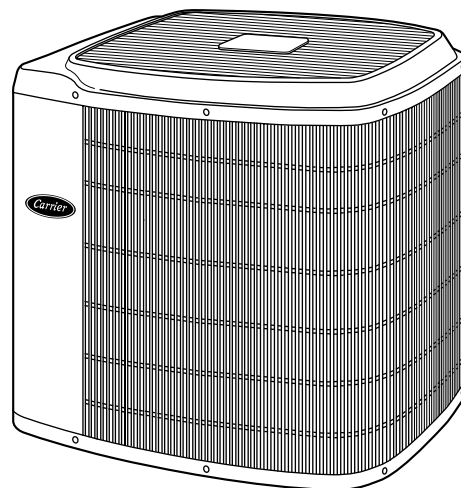

A98516

Fig. 1—Model 38TDB

4. Leave some slack between structure and unit to absorb vibration.
5. When passing refrigerant tubes through the wall, seal opening with RTV or other pliable silicon-based caulk. (See Fig. 2.)
6. Avoid direct tubing contact with water pipes, duct work, floor joists, wall studs, floors, and walls.
7. Do not suspend refrigerant tubing from joists and studs with a rigid wire or strap which comes in direct contact with tubing. (See Fig. 2.)
8. Ensure that tubing insulation is pliable and completely surrounds vapor tube.
9. When necessary, use hanger straps which are 1 in. wide and conform to shape of tubing insulation. (See Fig. 2.)
10. Isolate hanger straps from insulation by using metal sleeves bent to conform to shape of insulation.

When outdoor unit is connected to factory-approved indoor unit, outdoor unit contains system refrigerant charge for operation with indoor unit of the same size when connected by 15 ft of field-supplied or factory accessory tubing. For proper unit operation, check refrigerant charge using charging information located on control box cover.

IMPORTANT: Maximum liquid-line size is 3/8 in. O.D. for all residential applications.

IMPORTANT: Always install the factory-supplied Puron® (R-410A) air conditioner liquid line filter drier. Obtain replacement filter driers from your local distributor or branch.

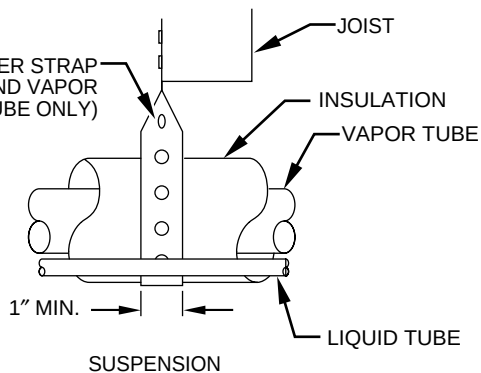
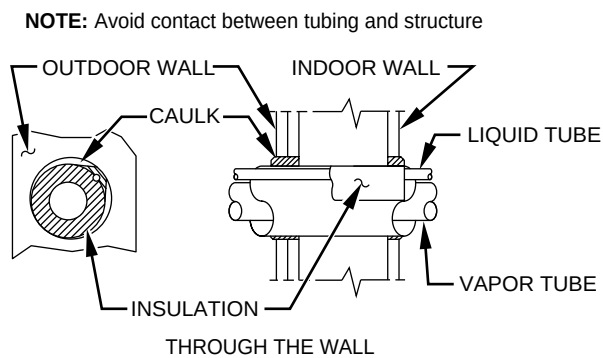


Fig. 2—Connecting Tubing Installation

INSTALLATION

Step 1—Check Equipment and Job Site

UNPACK UNIT

Move to final location. Remove carton, taking care not to damage unit.

INSPECT EQUIPMENT

File claim with shipping company prior to installation if shipment is damaged or incomplete. Locate unit rating plate on unit corner panel. It contains information needed to properly install unit. Check rating plate to be sure unit matches job specifications.

Step 2—Install on a Solid, Level Mounting Pad

If conditions or local codes require the unit be attached to pad, tie down bolts should be used and fastened through knockouts provided in unit base pan. Refer to unit mounting pattern in Fig. 3 to determine base pan size and knockout hole location.


On rooftop applications, mount on level platform or frame. Place unit above a load-bearing wall and isolate unit and tubing set from structure. Arrange supporting members to adequately support unit and minimize transmission of vibration to building. Consult local codes governing rooftop applications.

⚠ CAUTION

Do not allow POE lubricant to come into contact with roofing material. POE may deteriorate certain types of synthetic roofing.

Roof mounted units exposed to winds above 5 mph may require wind baffles. Consult the Application Guideline and Service Manual for Residential Split System Air Conditioners and Heat Pumps using Puron® Refrigerant for wind baffle construction

NOTE: Unit must be level to within $\pm 2^\circ$ ($\pm 3/8$ in./ft) per compressor manufacturer specifications.

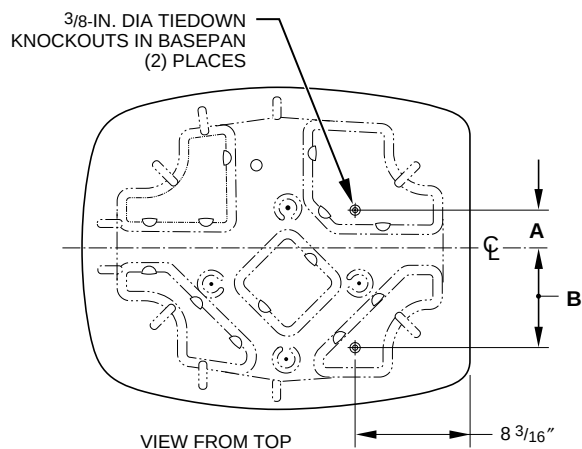

A97548

Dimensions (In.)

UNIT SIZE	MINIMUM MOUNTING PAD DIMENSIONS	TIEDOWN KNOCKOUT LOCATIONS	
		A	B
024	19 X 24	2-13/16	6-15/16
036-060	26 X 32	4	9-3/4

Fig. 3—Mounting Unit to Pad

Step 3—Clearance Requirements

When installing, allow sufficient space for airflow clearance, wiring, refrigerant piping, and service. Allow 30-in. clearance to service end of unit and 48 in. above unit. For proper airflow, a 6-in. clearance on 1 side of unit and 12 in. on all remaining sides must be maintained. Maintain a distance of 24 in. between units. Position so water, snow, or ice from roof or eaves cannot fall directly on unit.

Step 4—Operating Ambients

The minimum outdoor operating ambient in cooling mode is 55°F, and the maximum outdoor operating ambient in cooling mode is 125°F.

Step 5—Install TXV

The thermostatic expansion valve is specifically designed to operate with Puron® two-speed units. Do not use an R-22 TXV. An existing R-22 TXV must be replaced with a factory approved (and supplied) TXV specifically designed for Puron® two-speed units.

NOTE: FK4, FC4, and 40FK fan coils are equipped with an R-22 TXV. If an FK4, FC4, or 40FK fan coil is used with a Puron® air conditioner, the R-22 TXV must be replaced with a factory-approved Puron® TXV.

⚠ CAUTION

If indoor unit is equipped with piston, remove indoor coil piston and replace with factory supplied TXV metering device.

TXV INSTALLATION

IMPORTANT: The TXV should be mounted as close to the indoor coil as possible and in a vertical, upright position. Avoid mounting the inlet tube vertically down. Valve is more susceptible to malfunction due to debris if inlet tube is facing down. A factory approved filter drier must be installed in the liquid line.

Installing TXV in Place of Piston

1. Pump system down to 2 psig and recover refrigerant.

2. Remove hex nut from piston body. Use backup wrench on fan coils.
3. Remove and discard factory-installed piston. Be sure teflon seal is in place.
4. Reinstall hex nut. Finger tighten nut plus 1/2 turn.

NOTE: If the piston is not removed from the body, TXV will not function properly.

⚠ CAUTION

To prevent damage to the unit, use a brazing shield and wrap TXV with wet cloth or use heat sink material.

5. Install TXV on indoor coil liquid line. Sweat swivel adapter to inlet of indoor coil and attach to TXV outlet. Use backup wrench to avoid damage to tubing or valve. Sweat Inlet of TXV, marked "IN" to liquid line. Avoid excessive heat which could damage valve
6. Install vapor elbow with equalizer adapter to suction tube of line set and suction connection to indoor coil. Adapter has a 1/4-in. male connector or attaching equalizer tube.
7. Connect equalizer tube of TXV to 1/4-in. equalizer fitting on vapor line adapter.
8. Attach TXV bulb to horizontal section of suction line using clamps provided. Insulate bulb with field-supplied insulation tape. See Fig. 4 for correct positioning of sensing bulb.
9. Proceed with remainder of unit installation.

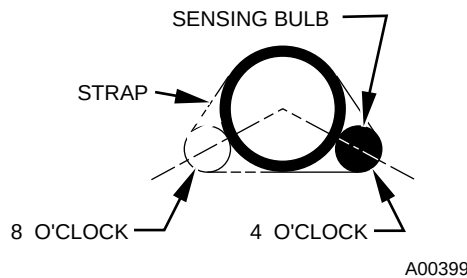


Fig. 4—Positioning of Sensing Bulb

Replacing R-22 TXV or Non-Balanced Port Puron TXV on Indoor Coil

1. Pump system down to 2 psig and recover refrigerant.
2. Remove coil access panel and fitting panel from front of cabinet.
3. Remove TXV support clamp using the 5/16-in. nut driver. Save the clamp.
4. Remove TXV using a backup wrench on flare connections to prevent damage to tubing.
5. Using wire cutters, cut equalizer tube off flush with vapor tube inside cabinet.
6. Remove bulb from vapor tube inside cabinet.
7. Braze equalizer stub-tube closed. Use protective barrier as necessary to prevent damage to drain pan.

IMPORTANT: Route the equalizer tube of the approved Puron® TXV through suction line connection opening in fitting panel prior to replacing fitting panel around tubing.

8. Install TXV with 3/8-in. copper tubing through small hole in service panel. To avoid damage to tubing or valve, use wrench and backup wrench to attach TXV to distributor.
9. Reinstall TXV support clamp (removed in item 3).

10. Attach TXV bulb to vapor tube inside cabinet, in same location as original was when removed, using supplied bulb clamps (nylon or copper). See Fig. 4 for correct positioning of sensing bulb.
11. Route equalizer tube through suction connection opening (large hole) in fitting panel and install fitting panel in place.
12. Sweat inlet of TXV, marked "IN" to liquid line. Avoid excessive heat which could damage valve.
13. Install vapor elbow with equalizer adapter to vapor line of line set and vapor connection to indoor coil. Adapter has a 1/4-in. male connector for attaching equalizer tube.
14. Connect equalizer tube of TXV by 1/4-in. equalizer fitting, on vapor line adapter. Use backup wrench to prevent damage to equalizer fitting.
15. Proceed with the remainder of unit installation.

LONG-LINE APPLICATIONS

For refrigerant piping arrangements with equivalent lengths greater than 50 ft or when elevation difference between indoor and/or outdoor unit is more than 20 ft, follow all requirements of the Long-Line Guideline section in the Application Guideline and Service Manual for Residential Split-System Air Conditioners and Heat Pumps Using Puron Refrigerant.

Step 6—Make Piping Connections

⚠ WARNING

Relieve pressure and recover all refrigerant before system repair or final unit disposal to avoid personal injury or death. Use all service ports and open all flow-control devices, including solenoid valves.

⚠ CAUTION

Do not leave system open to atmosphere any longer than minimum required for installation. POE oil in compressor is extremely susceptible to moisture absorption. Always keep ends of tubing sealed during installation.

⚠ CAUTION

If ANY refrigerant tubing is buried, provide 6-in. vertical rise at service valve. Refrigerant tubing lengths up to 36 in. may be buried without further special consideration. Buried refrigerant lines longer than 36 in. are NOT recommended.

⚠ CAUTION

To prevent damage to unit or service valves, observe the following:

- Use a brazing shield.
- Wrap service valves with wet cloth or use a heat sink material.

Outdoor units may be connected to indoor section using accessory tubing package or field-supplied refrigerant grade tubing of correct size and condition. Tubing diameters listed in Table 1 are adequate for equivalent lengths up to 50 ft. For tubing requirements beyond 50 ft, substantial capacity and performance losses can occur. Follow the recommendations in the Application Guideline and Service Manual for Residential Split-System Air Conditioners and Heat Pumps Using Puron® Refrigerant to minimize losses. Refer to Table 1 for field tubing diameters. Refer to Table 2 for accessory requirements.

For buried lines greater than 36 in., contact your local distributor.

If refrigerant tubes or indoor coil are exposed to atmosphere, they must be evacuated to 500 microns to eliminate contamination and moisture in the system.

Table 1—Refrigerant Connections and Recommended Liquid and Vapor Tube Diameters (In.)

UNIT SIZE	LIQUID		VAPOR		VAPOR (LONG-LINE)	
	Connection Diameter	Tube Diameter	Connection Diameter	Tube Diameter	Connection Diameter	Tube Diameter
024	3/8	3/8	5/8	5/8	5/8	3/4
036	3/8	3/8	3/4	3/4	3/4	7/8
048	3/8	3/8	7/8	7/8	7/8	7/8
060	3/8	3/8	7/8	1-1/8	7/8	1-1/8

Notes:

1. Tube diameters are for lengths up to 50 equivalent ft.
2. Do not apply capillary tube indoor coils to these units.

OUTDOOR UNIT CONNECTED TO FACTORY-APPROVED INDOOR UNIT

Outdoor unit contains correct system refrigerant charge for operation with indoor unit of same size when connected by 15 ft of field-supplied or factory-accessory tubing. Check refrigerant charge for maximum efficiency


⚠ CAUTION

Installation of filter drier in liquid line is required.

INSTALL LIQUID-LINE FILTER DRIER

Installation of filter drier in liquid line is required. Refer to Fig. 5 and install filter drier as follows:

1. Braze 5-in. connector tube to liquid service valve. Wrap filter drier with damp cloth.
2. Braze filter drier between connector tube and liquid tube to indoor coil. Flow arrow must point toward indoor coil.

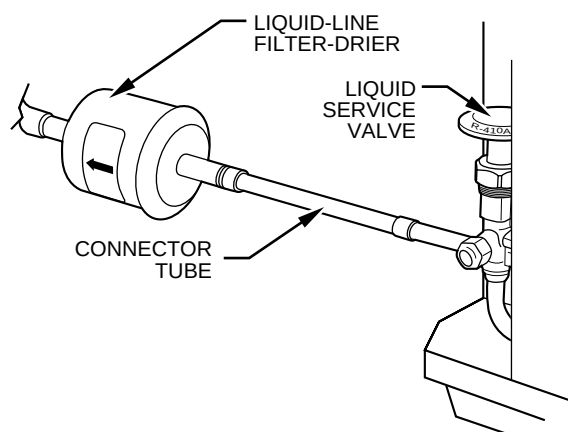

A95509

Fig. 5—Filter Drier with Sweat Adapter Tube and Liquid Tube

REFRIGERANT TUBING

Connect vapor tube to fitting on outdoor unit vapor service valves. Connect liquid tube to filter drier. (See Fig. 5 and Table 1.) Use refrigerant grade tubing.

⚠ CAUTION

To avoid valve damage while brazing, service valves must be wrapped in heat-sink material, such as a wet cloth.

SWEAT CONNECTION

Service valves are closed from factory and ready for brazing. After wrapping service valve and filter drier with a wet cloth, tubing set can be brazed to service valve and filter drier using either silver bearing or non-silver bearing brazing material. Consult local code requirements. Refrigerant tubing and indoor coil are now ready for leak testing. This check should include all field and factory joints.

IMPORTANT: Check factory tubing on both indoor and outdoor unit to ensure tubes are not rubbing against each other or any sheet metal. Pay close attention to feeder tubes, making sure wire ties on feeder tubes are secure and tight.

EVACUATE REFRIGERANT TUBING AND INDOOR COIL


⚠ CAUTION

Never use the system compressor as a vacuum pump.

Refrigerant tubes and indoor coil should be evacuated using the recommended deep vacuum method of 500 microns. The alternate triple evacuation method may be used if the procedure outlined below is followed. Always break a vacuum with dry nitrogen.

Deep Vacuum Method

The deep vacuum method requires a vacuum pump capable of pulling a vacuum of 500 microns and a vacuum gage capable of accurately measuring this vacuum depth. The deep vacuum method is the most positive way of assuring a system is free of air and liquid water. (See Fig. 6.)

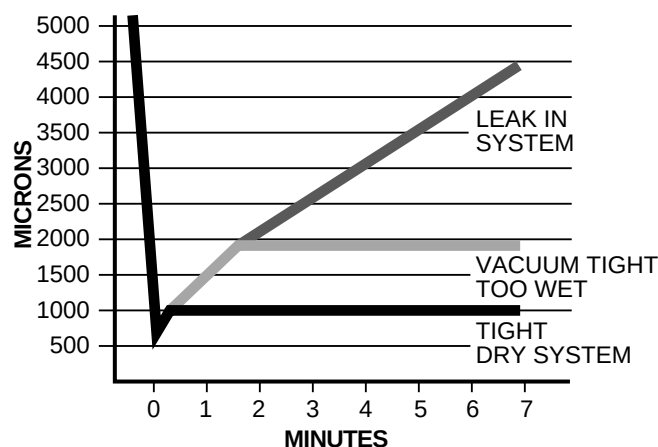

A95424

Fig. 6—Deep Vacuum Graph

Triple Evacuation Method


The triple evacuation method should only be used when vacuum pump is capable of pumping down to 28 in. of mercury and system does not contain any liquid water. Refer to Fig. 7 and proceed as follows:

1. Pump system down to 28 in. of mercury and allow pump to continue operating for an additional 15 minutes.
2. Close service valves and shut off vacuum pump.
3. Connect a nitrogen cylinder and regulator to system and open until system pressure is 2 psig.
4. Close service valve and allow system to stand for 1 hr. During this time, dry nitrogen will be able to diffuse throughout the system, absorbing moisture.

5. Repeat this procedure as indicated in Fig. 7. System will then contain minimal amounts of contaminants and water vapor.

FINAL TUBING CHECK

IMPORTANT: Check to be certain factory tubing on both indoor and outdoor unit has not shifted during shipment. Ensure tubes are not rubbing against each other or any sheet metal. Pay close attention to feeder tubes, making sure wire ties on feeder tubes are secure and tight.

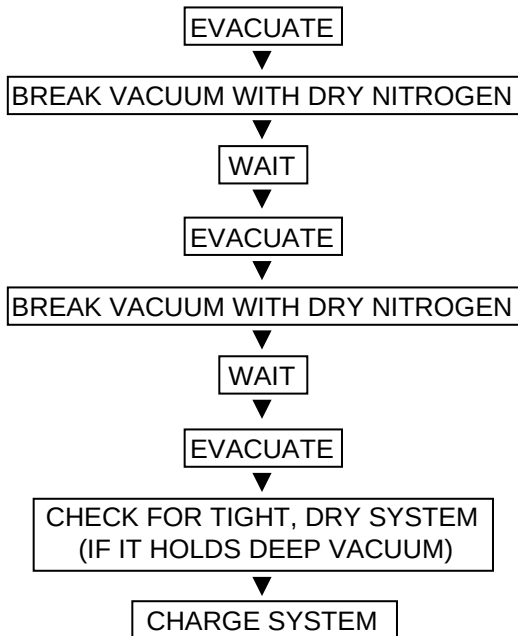

A95425

Fig. 7—Triple Evacuation Method

Step 7—Make Electrical Connections

⚠ WARNING

To avoid personal injury or death, do not supply power to unit with compressor terminal box cover removed.

Be sure field wiring complies with local and national fire, safety, and electrical codes, and voltage to system is within limits shown on unit rating plate. Contact local power company for correction of improper voltage. See unit rating plate for recommended circuit protection device.

NOTE: Operation of unit on improper line voltage constitutes abuse and could affect unit reliability. See unit rating plate. Do not install unit in system where voltage may fluctuate above or below permissible limits.

NOTE: Use copper wire only between disconnect switch and unit.

NOTE: Install branch circuit disconnect of adequate size per NEC to handle unit starting current. Locate disconnect within sight from and readily accessible from unit, per Section 440-14 of NEC.

ROUTE GROUND AND POWER WIRES

Remove access panel to gain access to unit wiring. Extend wires from disconnect through power wiring hole provided and into unit control box. Size wires per NEC but not smaller than minimum wire size shown in Product Data Digest.

⚠ WARNING


The unit cabinet must have as uninterrupted or unbroken ground to minimize personal injury if an electrical fault should occur. The ground may consist of electrical wire or metal conduit when installed in accordance with existing electrical codes. Failure to follow this warning can result in an electric shock, fire, or death.

CONNECT GROUND AND POWER WIRES

Connect ground wire to ground connection in control box for safety. Connect power wiring to leads provided as shown in Fig. 8.

CONNECT CONTROL WIRING

DISCONNECT
PER N. E. C. AND/OR
LOCAL CODES

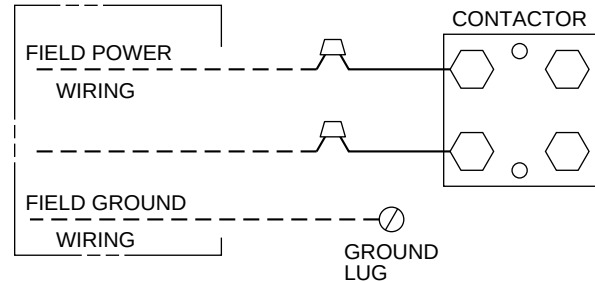

A91306

Fig. 8—Line Power Connections

Route 24v control wires through control wiring grommet and connect to leads provided in control box. (See Table 3 and Fig. 9.) Use No. 18 AWG color-coded, insulated (35°C minimum) wire. If thermostat is located more than 100 ft from unit, as measured along the control voltage wires, use No. 16 AWG color-coded wire to avoid excessive voltage drop.

All wiring must be NEC Class 1 and must be separated from incoming power leads.

The outdoor unit requires a minimum of 27va, 24vac control power.

IMPORTANT: Check factory wiring and wire connections to ensure terminations are secured properly. Check wire routing to ensure wires are not in contact with tubing, sheet metal, etc.

Step 8—Install Electrical Accessories

GENERAL

Refer to the individual instructions packaged with kits or accessories when installing.

Available electrical accessories include latent capacity control. See Table 3 and Fig. 9 for typical accessory wiring diagrams.

LATENT CAPACITY CONTROL (LCC)

The purpose of an LCC is to provide a dehumidification mode to assure a 75 percent or less system sensible heat ratio. If indoor unit installed contains an ICM blower (such as an FK4C, FV4A, or 40FK fan coil or a 58UHV, 58UXV, or 58MVP gas furnace), no LCC is required. Indoor products with ICM blowers have enough CFM range to provide proper airflow for low-speed cooling. If indoor unit installed has a standard PSC blower motor, the low-speed airflow available is too great to assure 75 percent or less system sensible heat ratio. The LCC for standard blower products consists of a standard humidistat which opens contacts on humidity rise and a pilot duty relay with 24v coil.

Table 2—Accessory Usage

ACCESSORY	REQUIRED FOR LOW-AMBIENT APPLICATIONS (BELOW 55°F)	REQUIRED FOR LONG-LINE APPLICATIONS* (50-175 FT.)	REQUIRED FOR SEACOAST APPLICATIONS (WITHIN 2 MILES)
Wind Baffle	See Low-Ambient Instructions	No	No
Coastal Filter	No	No	Yes
Support Feet	Recommended	No	Recommended
†Liquid-Line Solenoid Valve	No	See Long-line Application Guideline	No

* For tubing line sets between 50 and 175 ft, refer to Application Guideline and Service Manual for Residential Split System Air Conditioners and Heat Pumps using Puron® Refrigerant®. Crankcase heater and start assist are standard on two-speed units.

†All two-speed units require hard shut-off TXV.

NOTE: If an LCC is desired, low-speed airflow must be maintained so that a minimum of 300 CFM/ton can be supplied during high-speed LCC operation.

LCC Operation for Typical PSC Fan Coils

The standard blower operation for systems with typical PSC fan coils is covered in Fig. 9A, B, and D. The blower runs in high speed regardless if compressor operation is high or low speed. When the LCC is wired according to Fig. 9A, B, or D and humidity rises, the humidistat contacts open and de-energize the relay. If relay is de-energized, the system operates on high-speed compressor and high-speed airflow until humidistat closes. Fig. 9C shows the wiring with a Carrier Thermidistat which controls temperature and humidity level without the need for an additional humidistat and relay.

LCC Operation for Typical PSC Furnaces

The standard blower operation of systems with typical PSC furnaces is covered in Fig. 9J, K, M, N, P, and R. The blower runs in high or low speed in conjunction with compressor high- or low-speed operation. When the LCC is wired according to Fig. 9K, M, N, P, or R and humidity rises, the humidistat contacts open and de-energize the relay. If relay is de-energized, the system operates on high-speed compressor and low-speed airflow until humidistat closes. Fig. 9L and 9Q shows the wiring with a Carrier Thermidistat which controls temperature and humidity level without the need for an additional humidistat and relay.

Step 9—Make Airflow Selections

AIRFLOW SELECTION FOR 58UHV FURNACES

The 58UHV Non-Condensing Variable-Speed Furnaces provide high- and low-speed blower operation to match the capacities of compressor high and low speeds. To select recommended airflow, refer to Table 4 and the 58UHV Installation Instructions. These settings are made on the furnace airflow selector board by moving the appropriate color-coded jumper wires. The ORANGE jumper wire should be set to the AC position for cooling only. The YELLOW COOL SIZE jumper is used to select airflow to match the needed tons of cooling. The BLUE CFM/TON jumper wire is used to select slight adjustments to airflow of 400, 350, or 315 CFM per ton. (See Table 4.)

AIRFLOW SELECTION FOR 58MVP FURNACES

The 58MVP Condensing Variable-Speed Furnaces provide high- and low-speed blower operation to match the capacities of compressor at high and low speeds. To select recommended airflow, refer to Table 5 and the 58MVP Installation Instructions. The 58MVP utilizes a control center that allows the installing technician to select proper airflows. For adjustments to the manual switches labeled A/C and CF and recommended switch positions, refer to Table 5. High-speed airflow is determined by the position of the A/C switches, and low-speed airflow is determined by the

position of the CF switches. This furnace has a built-in, non-adjustable 90 sec. off delay for cooling mode blower operation.

AIRFLOW SELECTION FOR FK4C, FV4A, OR 40FK FAN COILS

The FK4C and FV4A provide high- and low-speed blower operation to match the capacities of compressor at high and low speeds. To select recommended airflow, refer to Table 6 and the FK4C, FV4A, or 40FK Installation Instructions. The FK4C, FV4A, and 40FK utilize an EASY SELECT control board that allows the installing technician to select proper airflows. For adjustments to control board and recommended A/C SIZE and CFM ADJUST selections, refer to Table 6. This fan coil has an adjustable blower off delay factory set at 90 sec. for high- and low-speed blower operation.

Step 10—Start-Up

⚠ CAUTION

To prevent compressor damage or personal injury, observe the following:

- Do not overcharge system with refrigerant.
- Do not operate unit in a vacuum or at negative pressure.
- Do not disable low-pressure switch.

⚠ CAUTION

To prevent personal injury wear safety glasses, protective clothing, and gloves when handling refrigerant and observe the following:

- Back seating service valves are not equipped with Schrader valves. Fully back seat (counter clockwise) valve stem before removing gage port cap.

⚠ CAUTION

Do not vent refrigerant to atmosphere. Recover during system repair or final unit disposal.

Follow these steps to properly start up the system:

1. The outdoor unit is equipped with a crankcase heater which operates when the compressor is off. Energize crankcase heater 24 hr. before starting unit. To energize heater only, set indoor thermostat to OFF position and close power disconnect to unit. Starting the compressor without 24 hours of crankcase heat may cause damage to the compressor.
2. Fully back seat (open) liquid and vapor tube service valves.
3. Unit is shipped with valve stem(s) front seated and caps installed. Replace stem caps after system is opened to refrigerant flow (back seated). Replace caps finger tight and tighten additional 1/12 turn (20 ft-lb torque) with wrench.

Table 3—Wiring Diagram Reference

INDOOR PRODUCT	THERMOSTAT	CONTROLS	DIAGRAM LETTER IN FIG. 9
Standard Fan Coil	Carrier Programmable (Model 2S)	Latent Capacity	A
	Carrier Non-Programmable (Model 2S)	Latent Capacity	B
	Carrier Thermidistat™ Control	Humidifier and Outdoor Sensor	C
	Other Brand Models	Latent Capacity	D
40FK, FK4C, or FV4A Fan Coil	Carrier Programmable (Model 2S)	—	E
	Carrier Non-Programmable (Model 2S)	—	F
	Carrier Thermidistat™ Control	Humidifier and Outdoor Sensor	G
	Other Brand Models	—	H
Single-Stage Furnace	Carrier Programmable (Model 2S)	Latent Capacity	J
	Carrier Non-Programmable (Model 2S)	Latent Capacity	K
	Carrier Thermidistat™ Control	Humidifier and Outdoor Sensor	L
	Other Brand Models	Latent Capacity	M
Two-Stage Furnace with PSC Blower Motor	Carrier Programmable (Model 2S)	Latent Capacity	N
	Carrier Non-Programmable (Model 2S)	Latent Capacity	P
	Carrier Thermidistat™ Control	Humidifier and Outdoor Sensor	Q
	Other Brand Models	Latent Capacity	R
Two-Stage Furnace with ICM Blower Motor	Carrier Programmable (Model 2S)	—	S
	Carrier Non-Programmable (Model 2S)	—	T
	Other Brand Models	—	U
Variable-Speed 80 percent Non-Condensing Furnace	Carrier Thermidistat™ Control	Humidifier and Outdoor Sensor	V
Variable-Speed Condensing Furnace	Carrier Thermidistat™ Control	Humidifier and Outdoor Sensor	W

Table 4—Airflow Selection for 58UHV Furnaces (CFM)

38TDB UNIT SIZE	FURNACE MODEL/HEATING SIZE	FURNACE AIRFLOW SELECTION BOARD SETTINGS							
		AC/HP Jumper Position	Cool Size Jumper Position	Cool CFM Per Ton Jumper Position					
				400		350		315	
				High	Low	High	Low	High	Low
024	060	AC	M-LO	865	510	735	500	660	500
036	060	AC	HI	1260	780	1100	680	990	585
	080	AC	M-LO	1260	790	1100	700	990	625
	100	AC	LO	1260	780	1090	775	990	700
	120	AC	LO	1195	865	1085	785	985	785
048	080	AC	HI	1635	1040	1470	915	1325	820
	100	AC	M-HI	1680	1040	1465	915	1325	820
	120	AC	M-HI	1650	1070	1465	975	1315	930
060	100	AC	HI	1085	1300	1840	1150	1655	1025
	120	AC	HI	2110	1300	1865	1140	1640	1080

Table 5—Airflow Selection for 58MVP Furnaces (CFM)

38TDB UNIT SIZE	HIGH-SPEED A/C SETUP SWITCH POSITION			FURNACE MODEL/HEATING SIZE								LOW-SPEED CF SETUP SWITCH POSITION		
				040		60		80		100				
	A/C-11	A/C-2	A/C-3	High	Low	High	Low	High	Low	High	Low	CF-1	CF-2	CF-3
024	OFF	ON	OFF	800	565	800	515	—	—	—	—	OFF	OFF	OFF
036	OFF	OFF	ON	—	—	1200	800	1200	800	1200	800	OFF	ON	OFF
048	OFF	ON	ON	—	—	—	—	—	—	1600	1000	ON	ON	OFF
060	OFF	ON	ON	—	—	—	—	—	—	1600*	1000	ON	ON	OFF

* Efficiency rating obtained at 1600 CFM. If 2000 CFM is desired, adjust airflow per 58MVP Installation Instructions.

- Close electrical disconnects to energize system.
- Set room thermostat at desired temperature. Be sure set point is below indoor ambient and is set low enough to energize desired speed.

NOTE: Carrier electronic thermostats are equipped with a 15-minute staging timer. This timer prevents the two-speed system from operating at high speed until unit has been operating in low speed for 15 minutes unless there is at least a 5°F difference between room temperature and thermostat set point. To force high

speed (after a minimum of 2 minutes in low speed), adjust the set point at least 5° below room ambient.

- Set room thermostat to COOL and fan control to AUTO or ON as desired. Wait for appropriate time delay(s) and 2-minute minimum low-speed run time. Operate unit for 15 minutes. Check refrigerant charge.

Table 6—Airflow Selection for 40FK, FK4C, or FV4A Fan Coils (CFM)

38TDB UNIT SIZE	40FK/FK4C/FV4A	EASY SELECT CONTROL BOARD			CFM*	
		SYSTEM TYPE (Orange Wire)	A/C TYPE (Blue Wire)	AC/HP CFM ADJUST (Black Wire)	High	Low
024	001	AC	024	NOM	735	441
	002	AC	024	NOM	735	441
	003	AC	024	NOM	735	441
036	001	AC	036	NOM	1100	662
	002	AC	036	NOM	1100	662
	003	AC	036	NOM	1100	662
	005	AC	036	NOM	1100	662
	006	AC	036	NOM	1100	662
048	005	AC	048	NOM	1470	882
	006	AC	048	NOM	1470	882
060	006	AC	060	NOM	1835	1103

* Airflow CFMs are given with AC/HP CFM ADJUST jumper set at NOM. Airflow can be adjusted 15 percent or -10 percent by selecting HI or LO, respectively.

Step 11—Check Charge

⚠ WARNING

Service valve gage ports are not equipped with Schrader valves. To prevent personal injury, make sure gage manifold is connected to the valve gage ports before moving valves off fully back seated position. Wear safety glasses and gloves when handling refrigerant.

UNIT CHARGE

Factory charge and charging method are shown on unit information plate. **Puron® refrigerant cylinders contain a dip tube which allows liquid refrigerant to flow from cylinder in upright position.** Charge Puron® units with cylinder in upright position and a commercial type metering device in manifold hose. Charge refrigerant into suction line.

NOTE: Unit is to be charged in high capacity only. Charging in low capacity may cause compressor chattering and possible damage to the compressor.

NOTE: If subcooling charging conditions are not favorable, charge must be weighed in accordance with unit rating plate ± 0.6 oz/ft of 3/8-in. liquid line above or below 15 ft respectively.

EXAMPLE: To calculate additional charge required for a 25-ft line set: $25 \text{ ft} - 15 \text{ ft} = 10 \text{ ft} \times 0.6 \text{ oz/ft} = 6 \text{ oz}$ of additional charge.


COOLING ONLY PROCEDURE

Units installed with cooling mode TXV require charging by the subcooling method. Units should be charged in high speed (capacity) only.

1. Operate unit a minimum of 10 minutes before checking charge.
2. Measure liquid service valve pressure by attaching an accurate gage to service port.
3. Measure liquid line temperature by attaching an accurate thermistor type or electronic thermometer to liquid line near outdoor coil.
4. Refer to Table 8 for required subcooling temperature.
5. Refer to Table 7. Find the point where required subcooling temperature intersects measured liquid service valve pressure.
6. To obtain required subcooling temperature at a specific liquid line pressure, add refrigerant if liquid line temperature is higher than indicated or reclaim refrigerant if temperature is lower. Allow a tolerance of $\pm 3^\circ\text{F}$.


Table 7—Required Liquid-Line Temperature (°F)

LIQUID PRESSURE AT SERVICE VALVE (PSIG)	REQUIRED SUBCOOLING TEMPERATURE (°F)					
	8	10	12	14	16	18
189	58	56	54	52	50	48
195	60	58	56	54	52	50
202	62	60	58	56	54	52
208	64	62	60	58	56	54
215	66	64	62	60	58	56
222	68	66	64	62	60	58
229	70	68	66	64	62	60
236	72	70	68	66	64	62
243	74	72	70	68	66	64
251	76	74	72	70	68	66
259	78	76	74	72	70	68
266	80	78	76	74	72	70
274	82	80	78	76	74	72
283	84	82	80	78	76	74
291	86	84	82	80	78	76
299	88	86	84	82	80	78
308	90	88	86	84	82	80
317	92	90	88	86	84	82
326	94	92	90	88	86	84
335	96	94	92	90	88	86
345	98	96	94	92	90	88
354	100	98	96	94	92	90
364	102	100	98	96	94	92
374	104	102	100	98	96	94
384	106	104	102	100	98	96
395	108	106	104	102	100	98
406	110	108	106	104	102	100
416	112	110	108	106	104	102
427	114	112	110	108	106	104
439	116	114	112	110	108	106
450	118	116	114	112	110	108
462	120	118	116	114	112	110
474	122	120	118	116	114	112
486	124	122	120	118	116	114
499	126	124	122	120	118	116
511	128	126	124	122	120	118

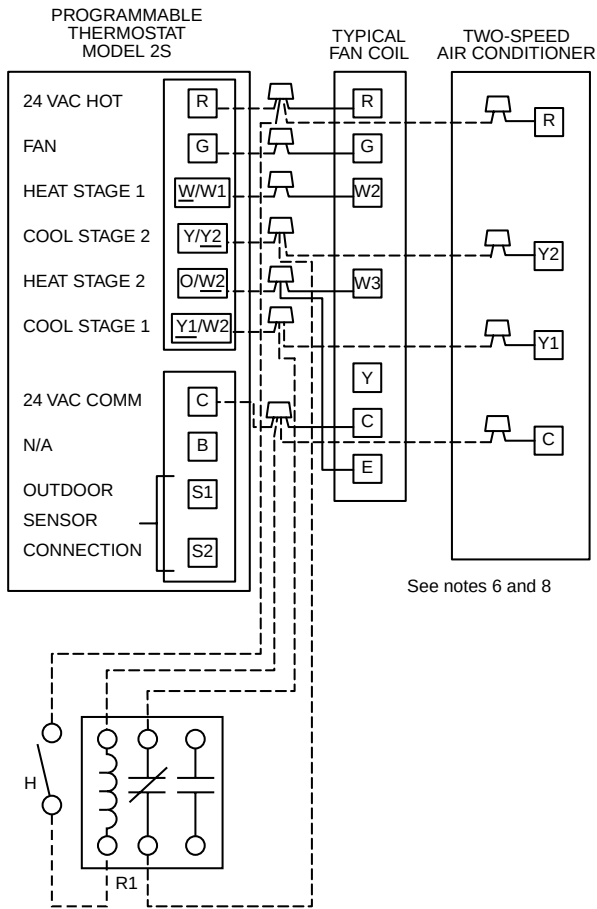


A

A00386

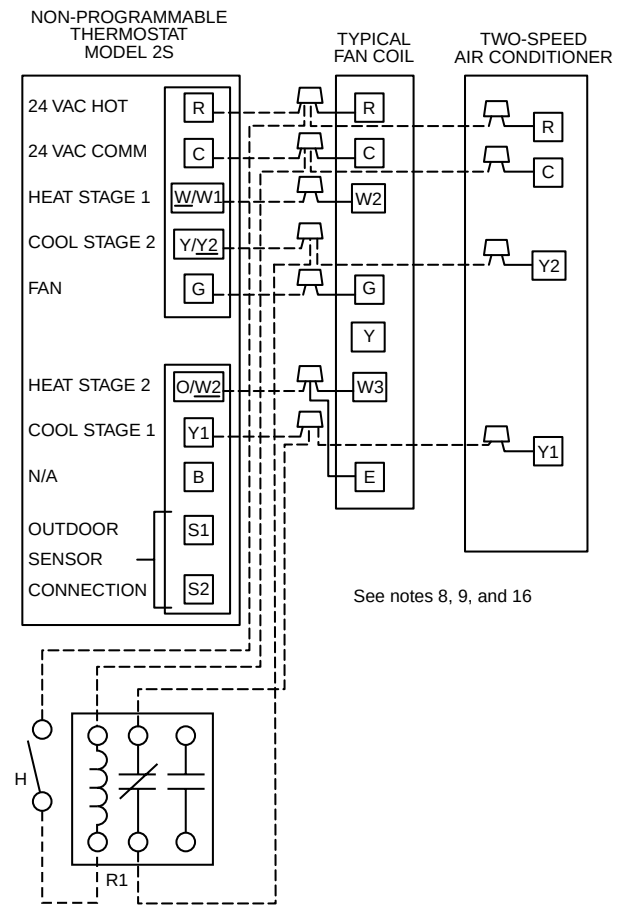


B

A00387

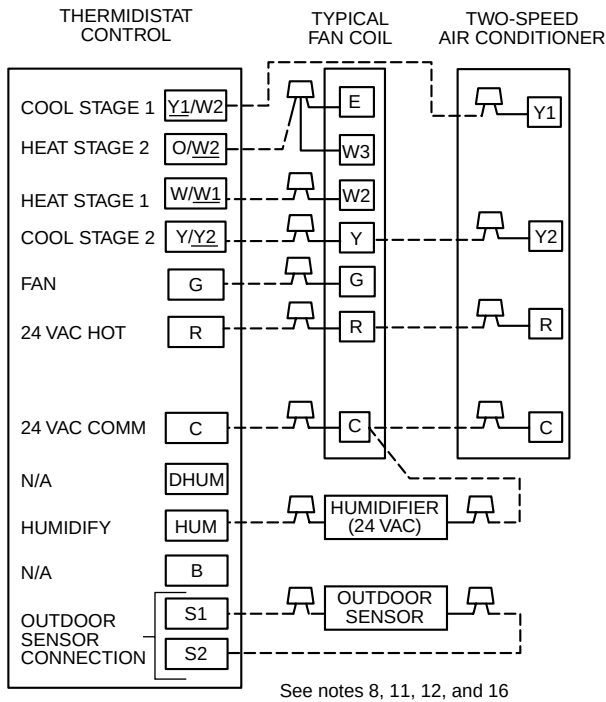

C


A00388

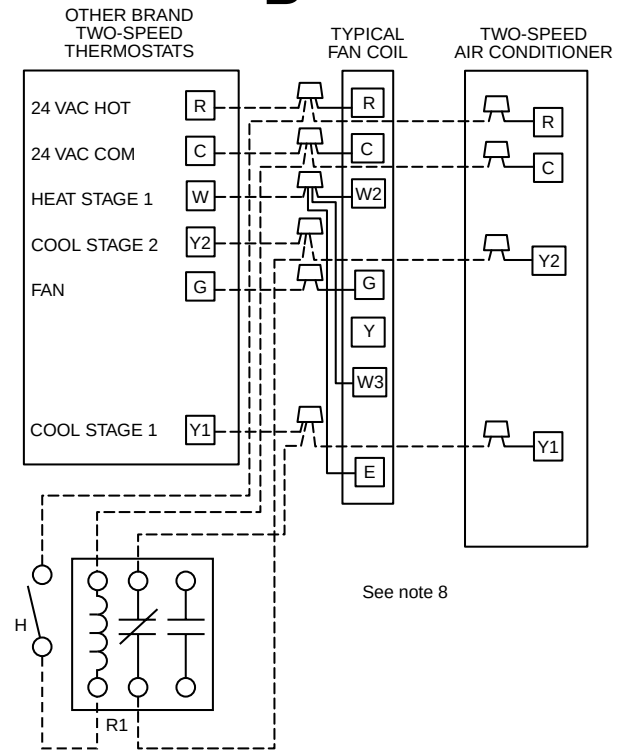

D


A00055

Fig. 9—Typical Accessory Wiring Diagrams

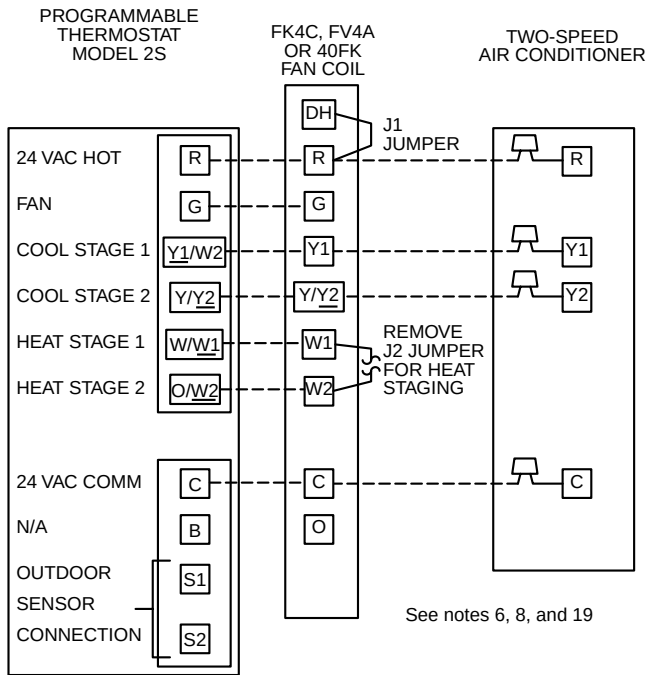


E

A00432

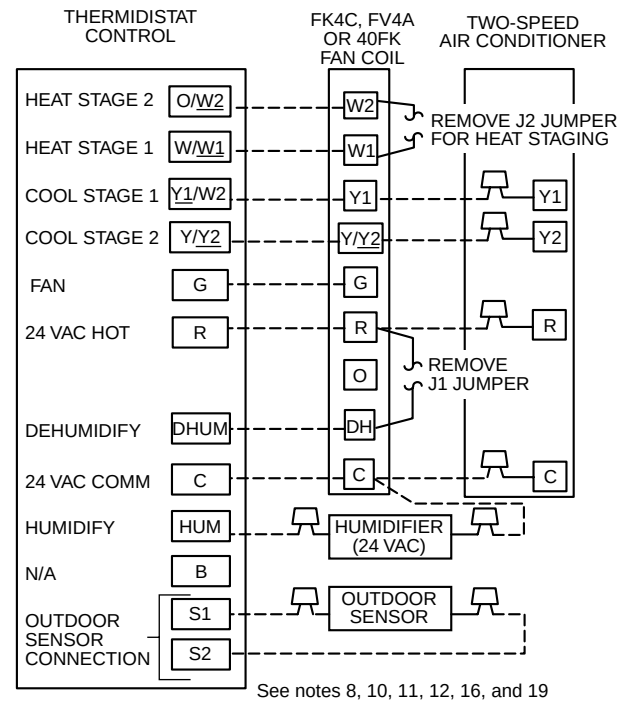


F

A00434

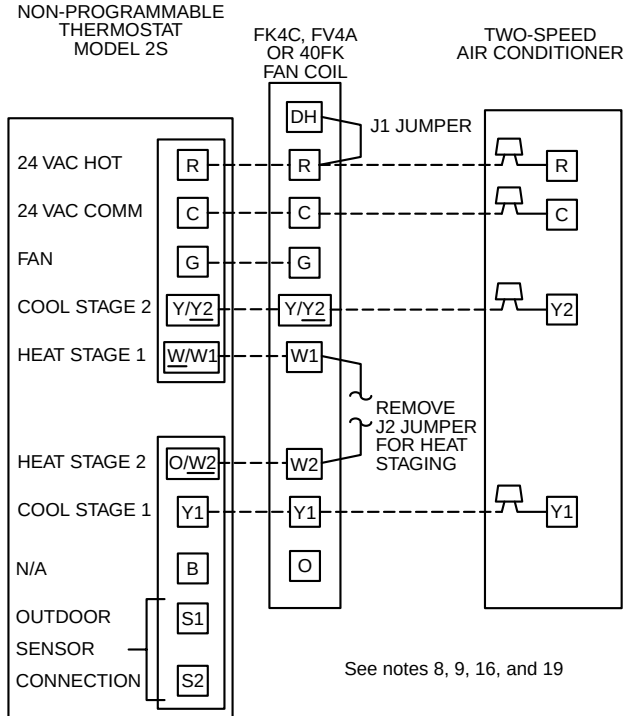

G


A00433

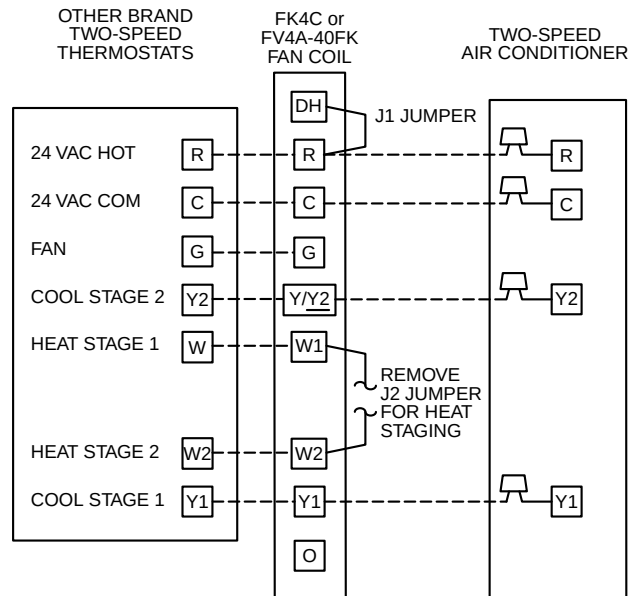

H


A00435

Fig. 9—Typical Accessory Wiring Diagrams (Cont'd)

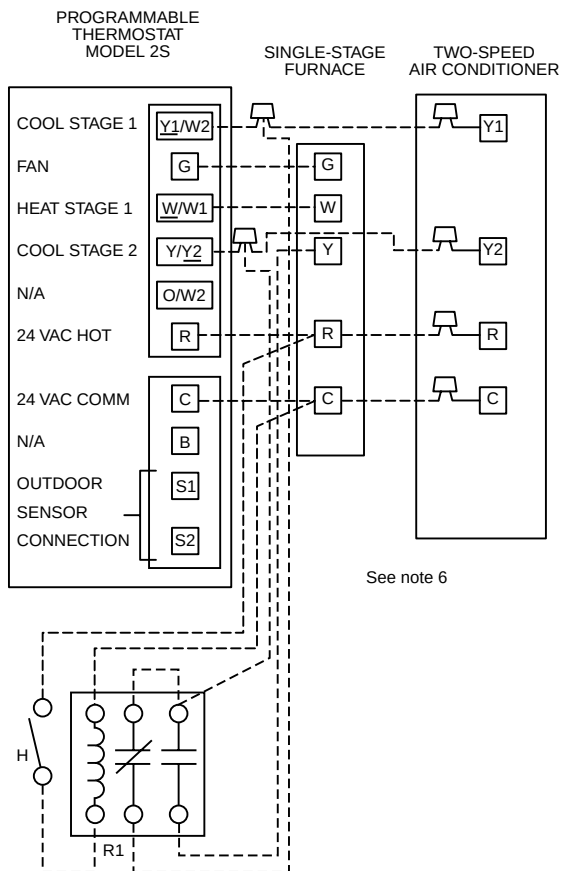


J

A00389

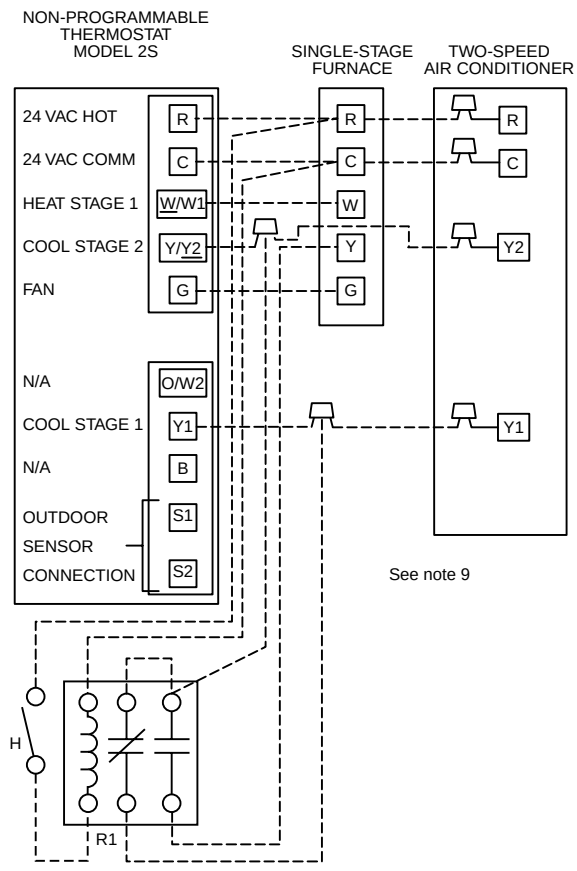


K

A00390

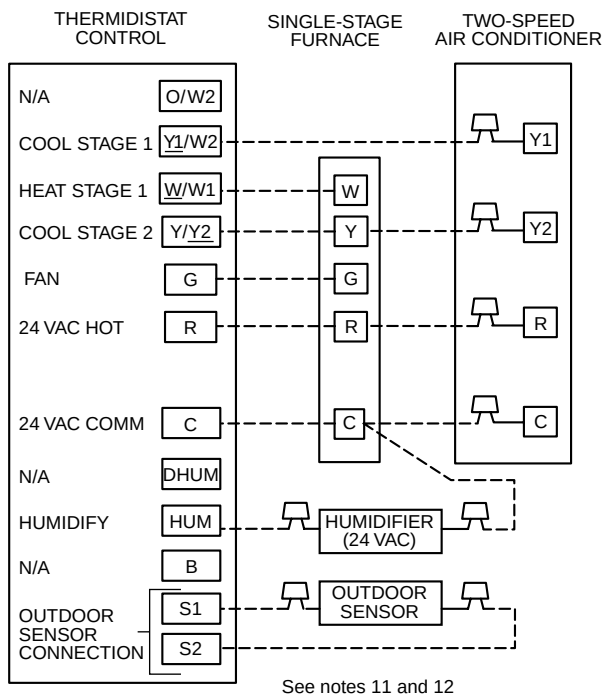

L


A00391

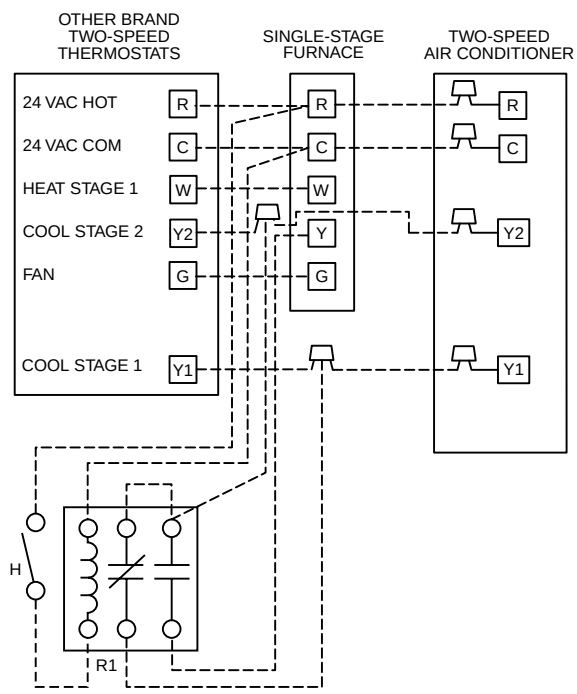

M


A00061

Fig. 9—Typical Accessory Wiring Diagrams (Cont'd)

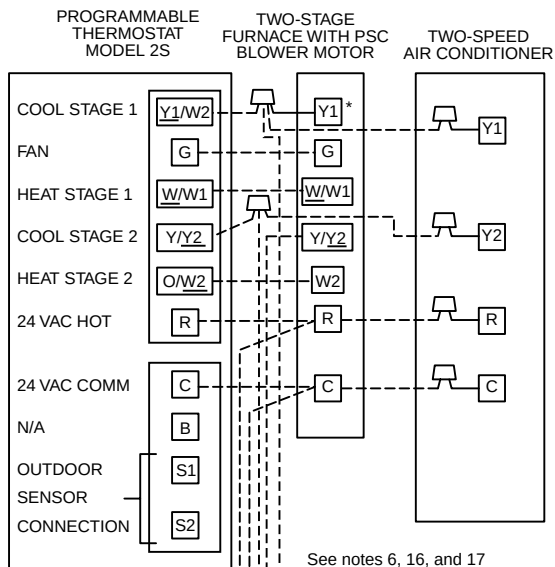


N

A00392

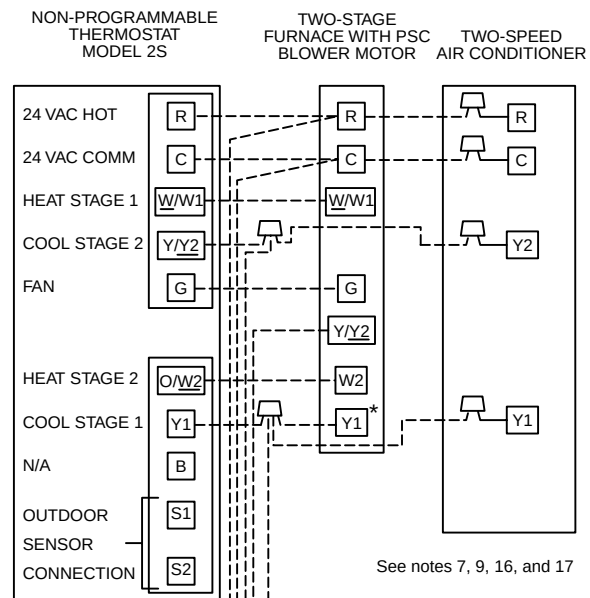


P

A00393

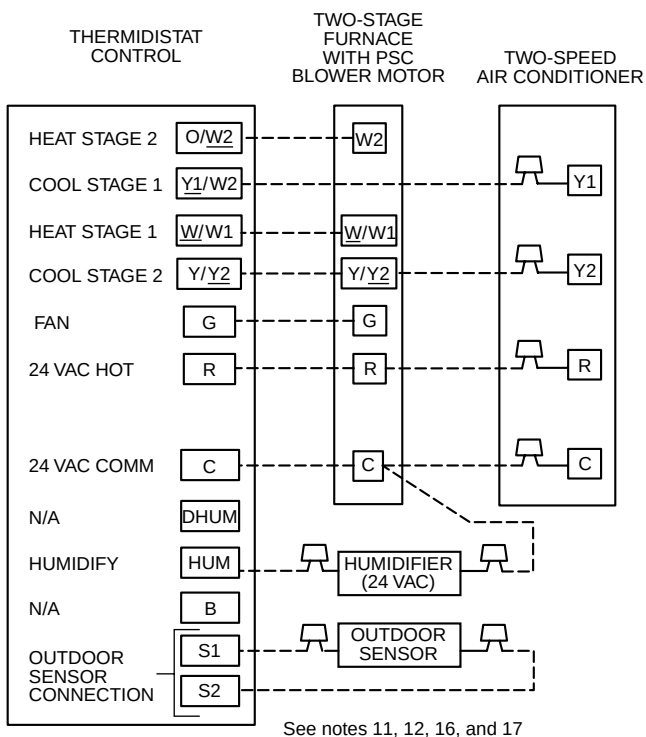

Q

A00394

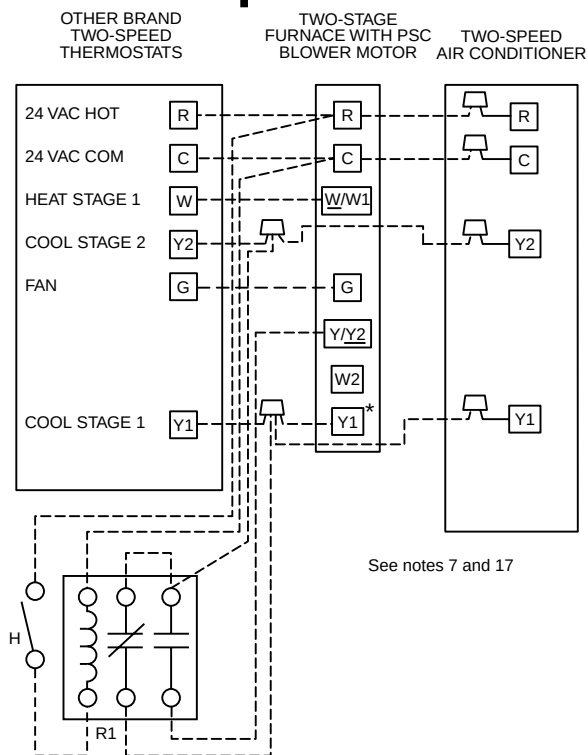

R

A00064

Fig. 9—Typical Accessory Wiring Diagrams (Cont'd)



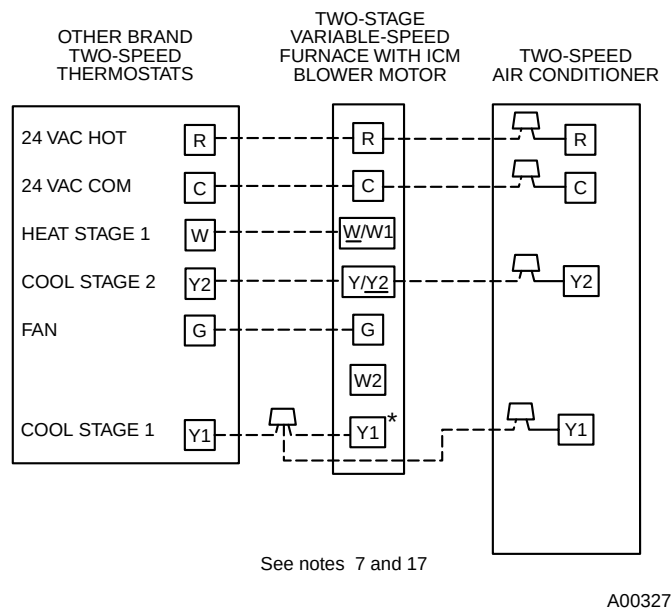



Fig. 9—Typical Accessory Wiring Diagrams (Cont'd)

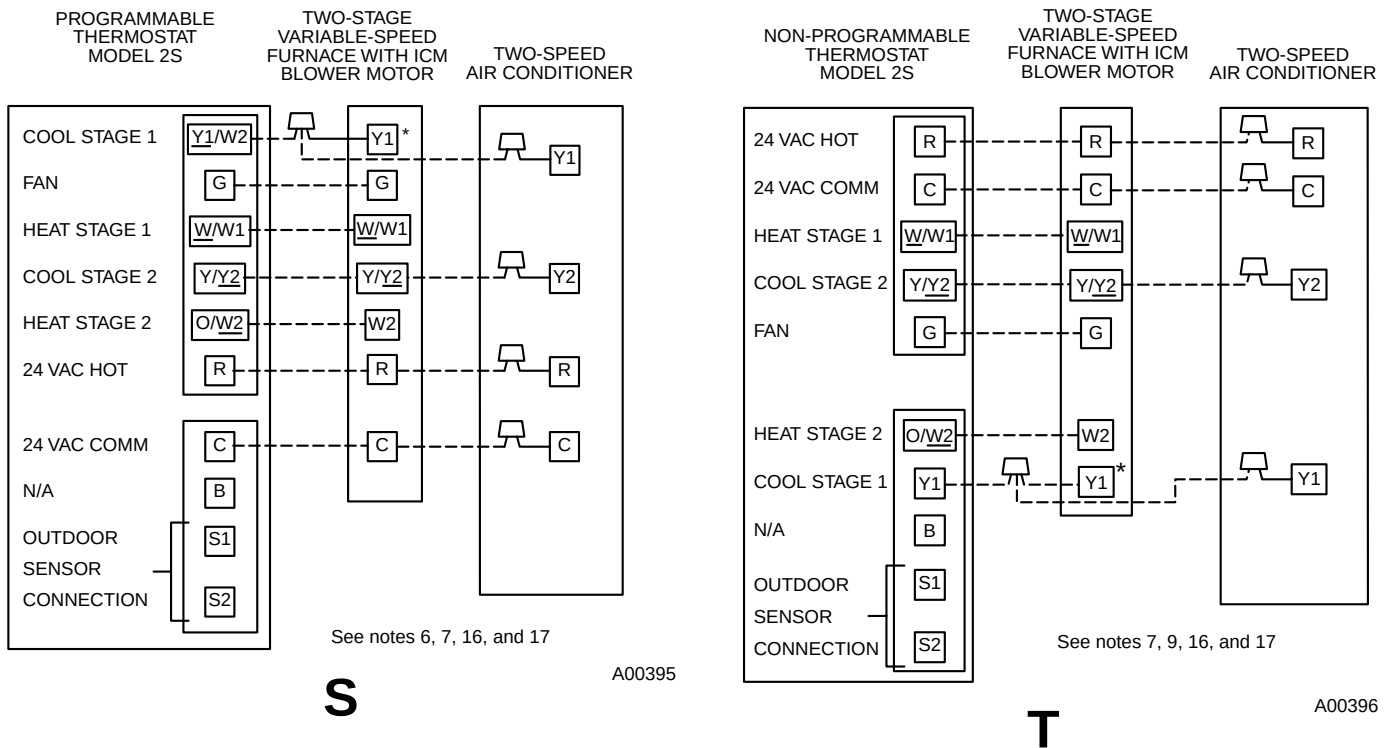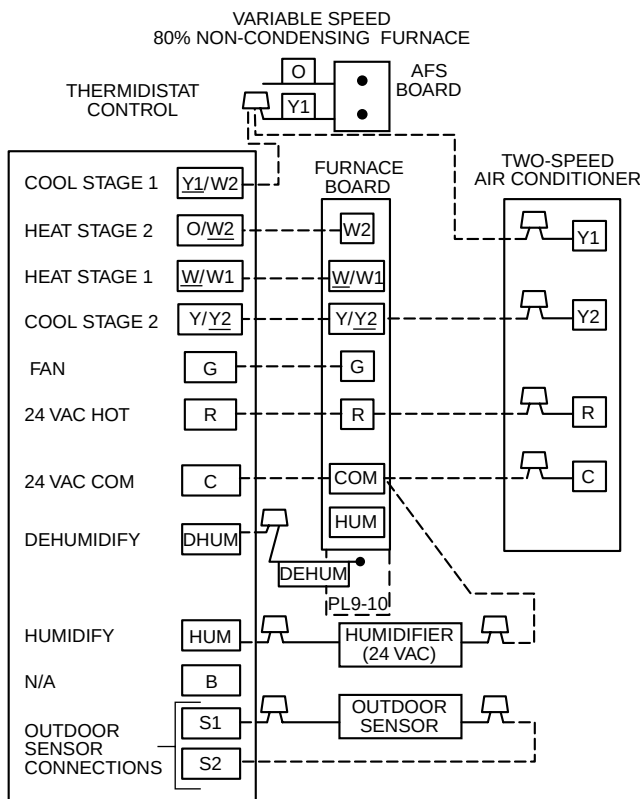

See notes 11, 12, 13, 15, 16, and 17

V

A00397

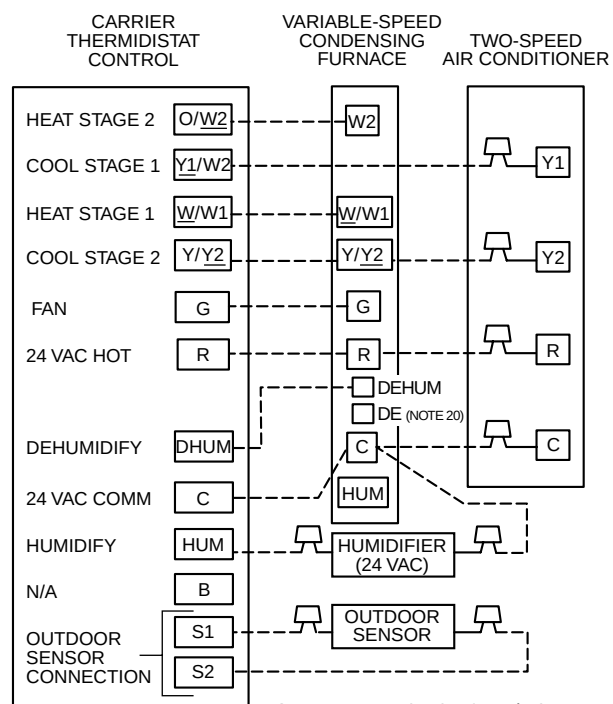


See notes 11, 12, 13, 16, and 18

W

A00067

WIRING DIAGRAM NOTES:

1. CARRIER THERMOSTAT WIRING DIAGRAMS ARE ONLY ACCURATE FOR MODEL NUMBERS BEGINNING WITH TSTAT
2. WIRING MUST CONFORM TO NEC OR LOCAL CODES.
3. CONNECT 24V FIELD WIRING TO FACTORY-PROVIDED STRIPPED LEADS.
4. THERMOSTATS ARE FACTORY CONFIGURED WITH 5-MINUTE COMPRESSOR CYCLE PROTECTION AND 4 CYCLES PER HR. LIMIT. SEE THERMOSTAT INSTALLATION INSTRUCTIONS FOR DETAILS.
5. TO STAGE ELECTRIC RESISTANCE HEAT, CONSULT OUTDOOR THERMOSTAT INSTALLATION INSTRUCTIONS.
6. WHEN USED IN TWO-SPEED AIR CONDITIONER INSTALLATIONS THERMOSTAT DIP SWITCH C SHOULD BE IN THE "ON" POSITION. IN THIS CONFIGURATION, O/W2 IS USED TO CONTROL SECOND-STAGE HEAT.
7. TERMINALS MARKED WITH AN * MAY NOT BE PRESENT ON EQUIPMENT.
8. REFER TO FAN COIL INSTALLATION INSTRUCTIONS FOR FEATURES AND ADDITIONAL WIRING INFORMATION.
9. CUT AND REMOVE R19 JUMPER AT THERMOSTAT TO CONVERT TO AIR CONDITIONER OPERATION.
10. TO ACTIVATE DEHUMIDIFY FUNCTION ON FK4C OR FV4A, REMOVE J1 JUMPER AT FAN COIL CONTROL BOARD.
11. THERMIDISTAT DIP SWITCH 1 SHOULD BE SET IN THE "OFF" POSITION FOR AIR CONDITIONER INSTALLATIONS. THIS IS THE FACTORY DEFAULT.
12. THERMIDISTAT DIP SWITCH 2 SHOULD BE SET IN THE "ON" POSITION FOR TWO-SPEED COMPRESSOR OPERATION.
13. REFER TO INDOOR EQUIPMENT INSTALLATION INSTRUCTIONS FOR PROPER SETUP.
14. TO ACTIVATE DEHUMIDIFY FEATURE ON CURRENT STYLE VARIABLE-SPEED 80 percent NON-CONDENSING FURNACES (58UHV), DISCONNECT GREEN (DEHUM) WIRE FROM G ON FURNACE CONTROL BOARD AND CONNECT TO DEHUMIDIFY TERMINAL DHU ON THERMIDISTAT.
15. AS AN OPTION, O/W2 CAN CONTROL SECOND-STAGE HEAT.
16. SEE TABLE 4—AIRFLOW SELECTION FOR 58UHV FURNACES.
17. SEE TABLE 5—AIRFLOW SELECTION FOR 58MVP FURNACES.
18. SEE TABLE 6—AIRFLOW SELECTION FOR FK4C, FV4A, or 40FK FAN COILS.
19. THE DE-JUMPER LOCATED NEXT TO THE "DEHUM" TERMINAL MUST BE REMOVED TO ENABLE THE "DEHUM" INPUT.

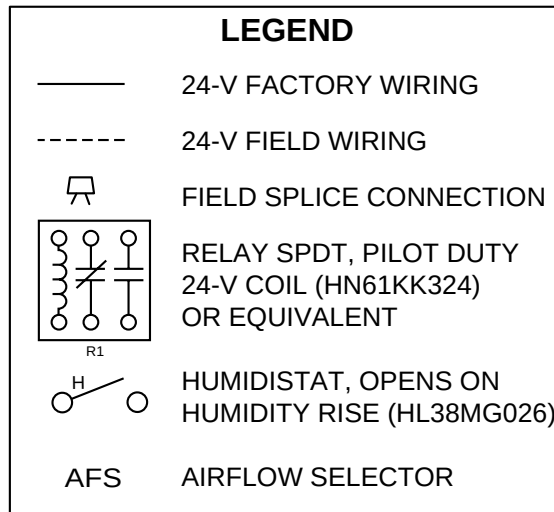

A97466

Step 12—System Functions and Sequence of Operation

The outdoor unit control system has special functions. The following is an overview of the two-speed control functions:

COOLING OPERATION

This product utilizes a 2-stage cooling indoor thermostat. With a call for first stage cooling (Y1), the outdoor fan and low capacity compressor are energized. If low capacity cannot satisfy cooling demand, high capacity is energized (Y1 and Y2 or Y2 only) by the second stage of indoor thermostat. After second stage is satisfied, the unit returns to low-speed operation until first stage is satisfied or until second stage is required again. When both one stage and two stage cooling are satisfied, the compressor will shut off.

NOTE: When two-speed unit is operating at low speed, system vapor (suction) pressure will be higher than a standard single-speed system or high-speed operation. This normal operation is due to the reduced capacity operating with typically larger indoor and outdoor coils.

NOTE: Outdoor fan motor will continue to operate for one minute after compressor shuts off, when outdoor ambient is greater than or equal to 100°F.

Table 8—High Capacity Only Subcooling

UNIT	TXV TYPE EXPANSION DEVICE HIGH CAPACITY ONLY SUBCOOLING AT SERVICE VALVE
024	14°F
036	15°F
048	12°F
060	16°F

STATUS FUNCTION LIGHTS

A system control STATUS function light is located on the outdoor unit control board (see Fig. 10). The STATUS light provides signals for several system operations. See Table 9 for codes and definitions. Table 9 also provides the order of signal importance.

NOTE: Only one code will be displayed on the outdoor unit control board (the most recent, with the highest priority).

FACTORY DEFAULTS

Factory defaults have been provided in the event of failure of outdoor air thermistor, coil thermistor, and/or furnace interface jumper.

Table 9—Control Function LED Code

CODE	DEFINITION	SIGNAL IMPORTANCE*
Constant flash No pause	No demand Stand by	10
1 flash w/pause	Low-speed operation	9
2 flashes w/pause	High-speed operation	8
3 flashes w/pause	Outdoor thermistor failure	7
4 flashes w/pause	Outdoor coil thermistor failure	6
3 flashes pause 4 flashes	Thermistor out of range	5
5 flashes pause 1 flash	Low pressure switch trip	4
5 flashes pause 2 flashes	High pressure switch trip	3
6 flashes w/pause	Compressor V_c/V_h trip	2
Constant light No pause No flash	Board failure	1

*Function light signal order of importance in case of multiple signal request; 1 is most important.

ONE MINUTE SPEED CHANGE TIME DELAY


When compressor changes speeds from high to low or low to high, there is a 1-minute time delay before compressor restarts. The outdoor fan motor remains running.

COMPRESSOR OPERATION

When the compressor operates in high capacity operation, the motor rotates clockwise. Both the lower and upper pistons are eccentric with the rotating crankshaft and both compress refrigerant. When the compressor operates in low capacity the motor reverses direction (rotates counterclockwise). The lower piston becomes idle since it is in line with the compressor crankshaft and the upper piston which is eccentric with the rotating crankshaft compresses refrigerant. The start and run windings are reversed.

CRANKCASE HEATER OPERATION

The two-speed control energizes crankcase heater during unit off cycle.

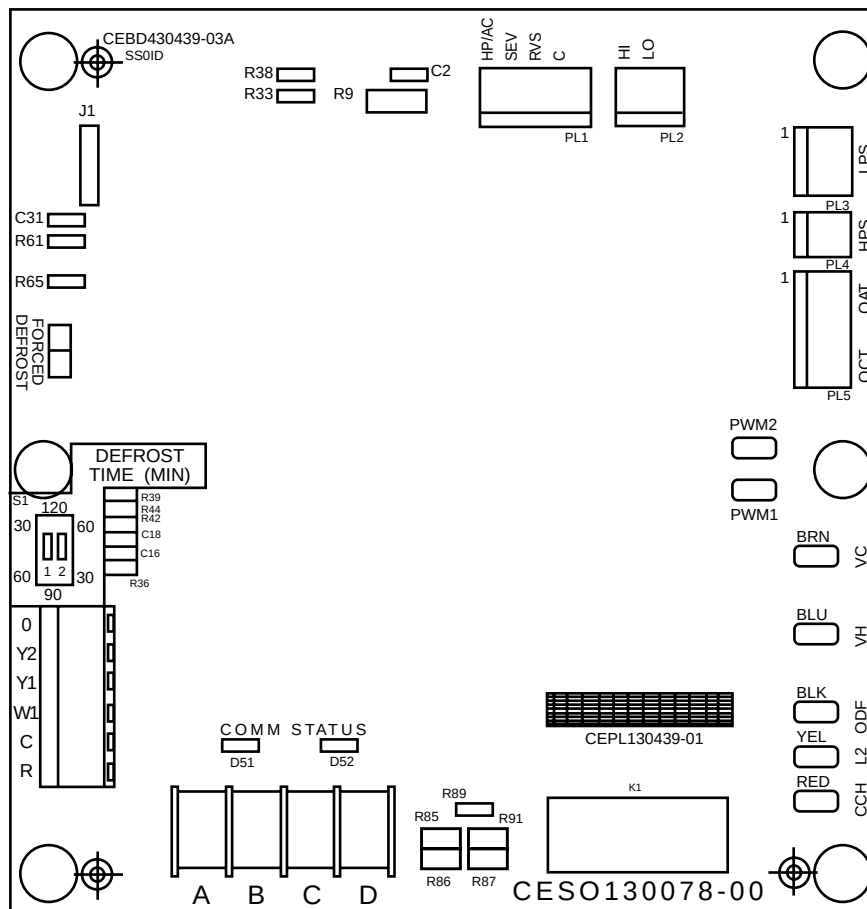

A00379

Fig. 10—Control Board

OUTDOOR FAN MOTOR OPERATION

The outdoor unit control energizes outdoor fan any time compressor is operating. The outdoor fan remains energized during the 1-minute speed change time delay and if a pressure switch or compressor overload should trip. Outdoor fan motor will continue to operate for one minute after the compressor shuts off when the outdoor ambient is greater than or equal to 100°F.

COMPRESSOR VOLTAGE FAILURE (6 FLASHES)

The control senses the voltage of the compressor run winding. If compressor voltage (Vc) is out of range (less than 90v or greater than 600v), control shuts compressor off for 15 minutes with outdoor fan running. After 15 minutes (provided there is a call for Y1 or Y2), control attempts to start compressor. During this time, a code of 6 flashes appears at control board. If Vc trip occurs 3 consecutive times during a Y1 request, then low capacity operation is locked out and control responds to Y2 requests until a reset occurs. If 3 consecutive trips occur in a combination of Y1 and Y2 or all Y2 requests, then both low and high capacity operation will be locked out. The compressor voltage failure (6 flashes) can be caused by:

- compressor internal overload trip
- no 240 volt power supply to outdoor unit
- failed compressor contactor(s)
- failure of start relay to pick-up properly.

PRESSURE SWITCH PROTECTION

The outdoor unit is equipped with high- and low-pressure switches. If the control senses the opening of a high or low pressure switch, it will respond as follows:

1. De-energize the compressor low or high speed contactor,

2. Keep the outdoor fan operating for 15 minutes,
3. Display the appropriate error code on the status light (see Table 9),
4. After a 15 minute delay, if Y1 or Y2 inputs are on and the LPS or HPS is reset, energize appropriate compressor contactor, either low or high.
5. If LPS or HPS has not closed after a 15 minute delay, the outdoor fan is turned off. If the open switch closes anytime after the 15-minute delay, then resume operation on call for Y1 and/or Y2.

MAJOR COMPONENTS

2-Speed Control

The two-speed control board controls the following functions:

- Low- and high-compressor contactor operation
- Outdoor fan motor operation
- Crankcase heater operation
- Compressor protection
- Pressure switch monitoring
- Time delays

Field Connections

The two-speed control received 24vac low-voltage control system inputs through the screw connections on the left side of the control board.

Dual Capacity Compressor

The dual capacity compressor contains motor windings that provide 2-pole (3500 RPM) operation.

Compressor Internal Relief


The compressor is protected by an internal pressure relief (IPR) which relieves discharge gas into compressor shell when differential between suction and discharge pressures exceeds 525 psi. The compressor is also protected by an internal overload attached to motor windings.

Compressor Control Contactors

Low and high capacity contactor coils are 24 volts. The electronic control board controls the operation of the low speed (C-L) and the high speed (C-H) contactors.

TEMPERATURE THERMISTORS

Thermistors are electronic devices which sense temperature. As the temperature increases, the resistance decreases. Thermistors are used to sense outdoor ambient and coil temperature. Refer to Fig. 11 for resistance values versus temperature.

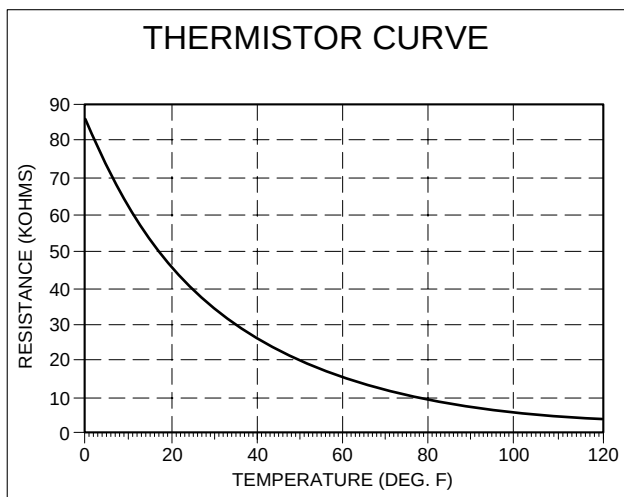

A91431

Fig. 11—Resistance Values Versus Temperature

If the outdoor ambient or coil thermistor should fail, a fault code appears at two-speed control. The crankcase heater is turned on during all off cycles.

IMPORTANT: Outdoor Air Thermistor Placement

Mount outdoor air thermistor underneath unit base pan lip on control box side of the unit. Attach to base pan with adhesive tape.

IMPORTANT: If outdoor air thermistor is not properly placed underneath base pan, unit may see nuisance thermistor out of frame faults.

Step 13—Final Checks

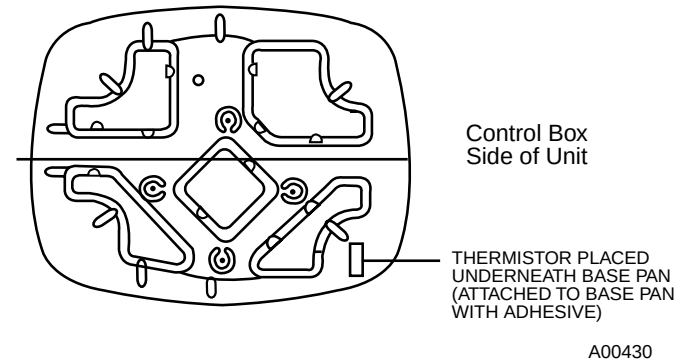


Fig. 12—View from Top of Base Pan

IMPORTANT: Before leaving job, be sure to do the following:

1. Ensure that all wiring and tubing is secure in unit before adding panels and covers. Securely fasten all panels and covers.
2. Tighten service valve stem caps to 1/12-turn past finger tight.
3. Leave Owner's Manual with owner. Explain system operation and periodic maintenance requirements outlined in manual.
4. Fill out Dealer Installation Checklist and place in customer file.

CARE AND MAINTENANCE

For continuing high performance and to minimize possible equipment failure, periodic maintenance must be performed on this equipment. Frequency of maintenance may vary depending upon geographic areas, such as coastal applications.

