

bryant

Day &
Night

PAYNE

installation, start-up and operating instructions

MULTIPOISE CONDENSING GAS-FIRED FURNACE

340MAV 350MAV Series B

Cancels: II 350M-40-2

II 350M-40-4

12-15-94



A93040

NOTE: Read the entire instruction manual before starting the installation.

This symbol → indicates a change since the last issue.

Index	Page
SAFETY CONSIDERATIONS	1-3
Dimensional Drawing.....	2
Clearances to Combustibles.....	3
ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS	
PROCEDURE.....	3-4
INTRODUCTION	4
APPLICATIONS	4-11
General.....	4
Upflow Applications.....	4-6
Downflow Applications.....	7-8
Horizontal Left (Supply-Air Discharge) Applications.....	8-9
Horizontal Right (Supply-Air Discharge) Applications.....	9-11
LOCATION	11-12
General.....	11-12
Furnace Location Relative to Cooling Equipment.....	12
Hazardous Locations.....	12
INSTALLATION	12-16
Leveling Legs (If Desired).....	12-13
Installation On a Concrete Slab.....	13
Installation On a Combustible Floor (Downflow Applications).....	13-14
Installation In Horizontal Applications.....	14
Filter Arrangement.....	14-15
Bottom Closure Panel.....	15
Gas Piping.....	16
ELECTRICAL CONNECTIONS	16-18
115-v Wiring.....	16-17
24-v Wiring.....	17-18
Accessories.....	18
DIRECT VENTING	18-26
Removal of Existing Furnaces from Common Vent Systems.....	18
Combustion-Air and Vent Piping.....	18-25
Concentric Vent and Combustion-Air Termination Kit Installation.....	25-26
Multiventing and Vent Termination.....	26
CONDENSATE DRAIN	26-29

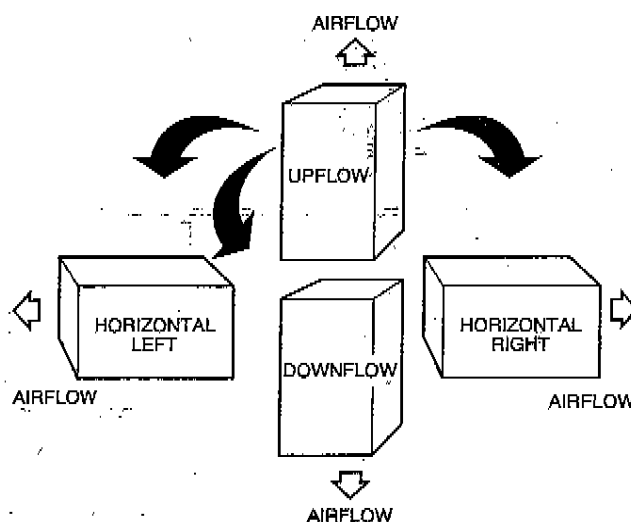



Fig. 1—Multipoise Orientations

A93041

General.....	26
Application.....	26-29
Condensate Drain Protection.....	29
SEQUENCE OF OPERATION	29-31
Heating Mode.....	29-30
Cooling Mode.....	30
Continuous Blower Mode.....	30
Heat Pump Mode.....	30
Component Test.....	30-31
START-UP PROCEDURES	31-34
General.....	31
Prime Condensate Trap With Water.....	31
Purge Gas Lines.....	31
Adjustments.....	31-34
Set Gas Input Rate.....	31-32
Set Temperature Rise.....	32-33
Adjust Blower Off Delay (Heat Mode).....	33-34
Set Thermostat Heat Anticipator.....	34
CHECK SAFETY CONTROLS	34-35
Check Primary Limit Control.....	34-35
Check Pressure Switch.....	35
CHECKLIST	35-36

SAFETY CONSIDERATIONS

Installing and servicing heating equipment can be hazardous due to gas and electrical components. Only trained and qualified personnel should install, repair, or service heating equipment. Untrained

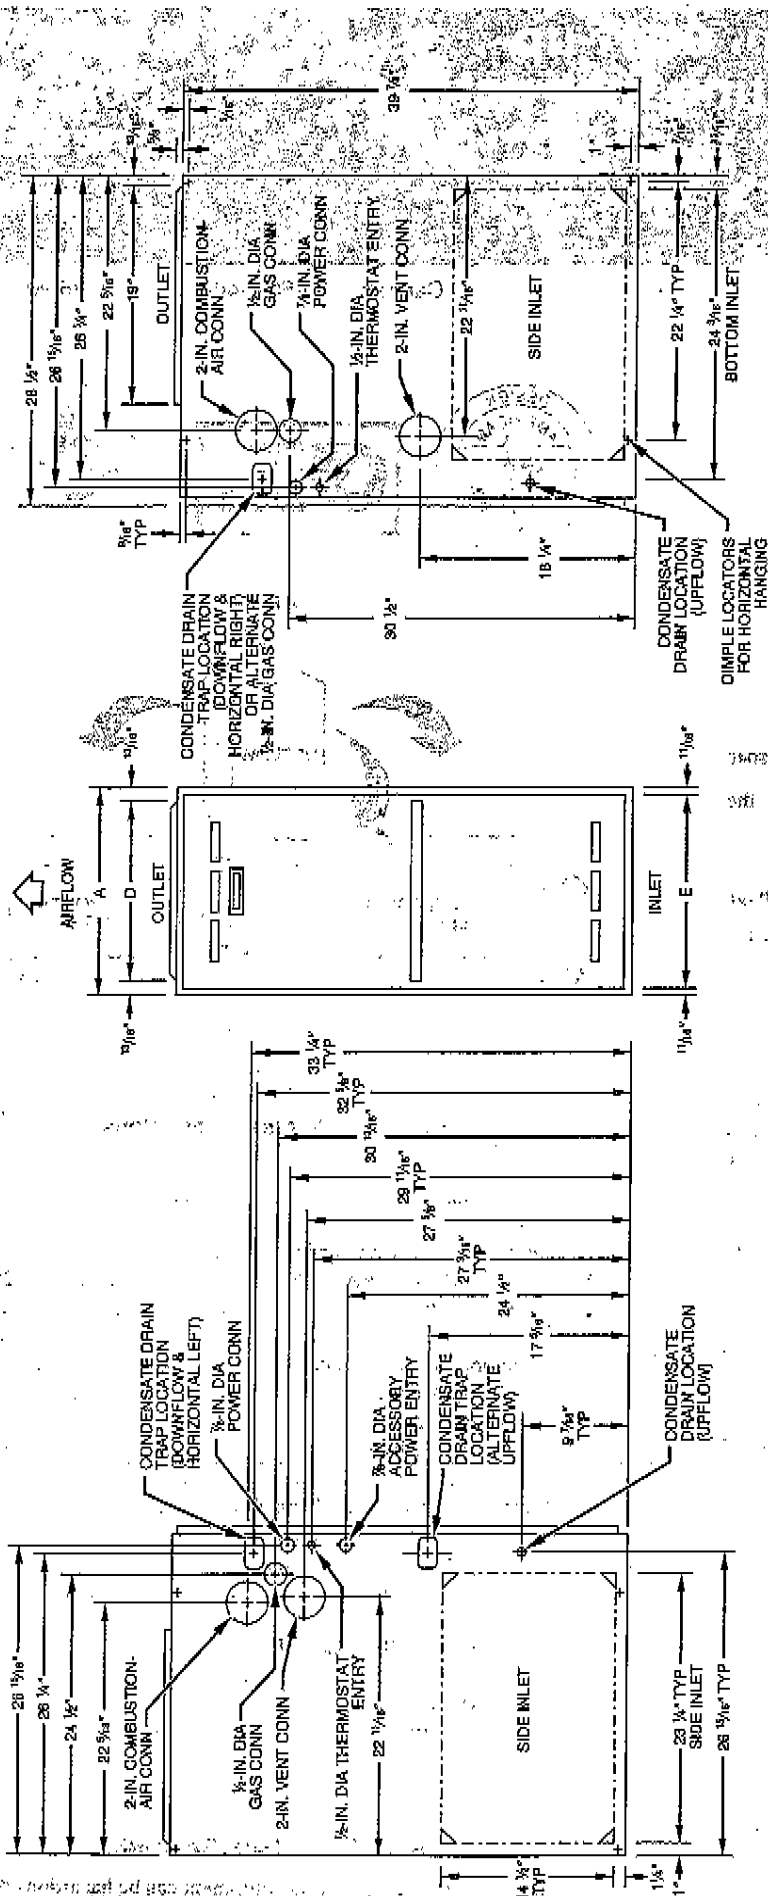

NOTES: Minimum return-air opening at furnace:

1. For 800 CFM--16-in. round or 14 1/2 x 12-in. rectangle.
2. For 1200 CFM--20-in. round or 14 1/2 x 19 1/2-in. rectangle.
3. For 1600 CFM--22-in. round or 14 1/2 x 23 3/4-in. rectangle.
4. For airflow requirements above 1800 CFM, use both side inlets, a combination of 1 side inlet and the bottom, or the bottom only.

DIMENSIONS (IN.)

UNIT SIZE	A	D	E
024040	17-1/2	15-7/8	16
036040	17-1/2	15-7/8	16
036060	17-1/2	15-7/8	16
048060	17-1/2	15-7/8	16
036080	17-1/2	15-7/8	16
048080	17-1/2	15-7/8	16
060080	21	19-3/8	19-1/2
048100	21	19-3/8	19-1/2
060100	21	19-3/8	19-1/2
060120	24-1/2	22-7/8	23

Fig. 2--Dimensional Drawing

This unit complies with ANSI Z21.47 • CAN/CGA-2.3-1993 standards.

This appliance is equipped only for altitudes 0 - 2,000 ft (0-610 m) for use with natural gas and propane. A conversion kit, supplied by the manufacturer, shall be used to convert to the alternate fuel or elevation.

This direct-vent, forced-air furnace is for indoor installation in a building constructed on site or in a manufactured (mobile) home when using factory authorized kit. See rating plate. For installation in alcove or closet at minimum clearances from combustible material as shown below, minimum front clearance for service is 30 inches (762 mm).

This furnace is for use with schedule-40 PVC, PVC-DWV, or ABS-DWV pipe, and must not be vented in common with other gas-fired appliances. Construction through which vent/air intake pipes may be installed is maximum 24 inches (600 mm), minimum 3/4 inches (19 mm) thickness (including roofing materials).

Special venting system required. In Canada use certified venting system specified by furnace manufacturer. See Installation Instructions provided with furnace. Flue gas temperature 131°F (55°C) vent pressure positive.

MINIMUM CLEARANCE TO COMBUSTIBLE MATERIAL

INCHES	TOP	BOTTOM	SIDES	BACK	FRONT	VENT	
	1	0	0	0	3	0	UPFLOW
	1	0	0	0	3	0	DOWNFLOW
	1	0	1	0	3	0	HORIZONTAL

++ For installation on combustible floors only when installed on special base No. KGASB0201ALL.

* Clearance shown is for air inlet and air outlet end.

Horizontal position: Line contact is permissible only between lines formed by intersections of top and two sides of furnace jacket, and building joists, studs, or framing.

+ 120,000 BTU Input Furnaces require 1 inch bottom clearance to combustible materials.

→ Fig. 3—Clearances to Combustibles

A93060

personnel can perform basic maintenance functions such as cleaning and replacing air filters. All other operations must be performed by trained service personnel. When working on heating equipment, observe precautions in literature, on tags, and on labels attached to or shipped with unit and other safety precautions that may apply.

Follow all safety codes. In the United States, follow all safety codes including the National Fuel Gas Code (NFPA No. 54-1992/ANSI Z223.1-1992. In Canada, refer to the current edition of the National Standard of Canada CAN/CGA-B149.1 and .2-M91 Natural Gas and Propane Installation Codes (NSC-NGPIC). Wear safety glasses and work gloves. Have fire extinguisher available during start-up and adjustment procedures and service calls.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on unit or in instructions and manuals, be alert to potential for personal injury.

Understand the signal words DANGER, WARNING, and CAUTION. These words are used with safety-alert symbol. DANGER identifies most serious hazards which will result in severe personal injury or death. WARNING signifies hazards which could result in personal injury or death. CAUTION is used to identify unsafe practices which would result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

→ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS PROCEDURE

 **CAUTION:** Electrostatic discharge can affect electronic components. Take precautions during furnace installation and servicing to protect the furnace electronic control. Precautions will prevent electrostatic discharges from personnel and hand tools which are held during the procedure. These precautions will help to avoid exposing the control to electrostatic discharge by putting the furnace, the control, and the person at the same electrostatic potential.

1. Disconnect all power to the furnace. DO NOT TOUCH THE CONTROL OR ANY WIRE CONNECTED TO THE CONTROL PRIOR TO DISCHARGING YOUR BODY'S ELECTROSTATIC CHARGE TO GROUND.
2. Firmly touch a clean, unpainted, metal surface of the furnace chassis which is close to the control. Tools held in a person's hand during grounding will be satisfactorily discharged.
3. After touching the chassis you may proceed to service the control or connecting wires as long as you do nothing that recharges your body with static electricity (for example; DO NOT move or shuffle your feet, DO NOT touch ungrounded objects, etc.).

4. If you touch ungrounded objects (recharge your body with static electricity), firmly touch furnace again before touching control or wires.
5. Use this procedure for installed and uninstalled (ungrounded) furnaces.
6. Before removing a new control from its container, discharge your body's electrostatic charge to ground to protect the control from damage. If the control is to be installed in a furnace, follow items 1 through 5 before bringing the control or yourself into contact with the furnace. Put all used AND new controls into containers before touching ungrounded objects.
7. An ESD service kit (available from commercial sources) may also be used to prevent ESD damage.

INTRODUCTION

→ The 340MAV and 350MAV Multipoint Condensing Gas-Fired Furnaces are A.G.A./C.G.A. certified for natural and propane gases and for installation in alcoves, attics, basements, closets, utility rooms, crawlspaces, and garages. The 340MAV and 350MAV Furnaces are A.G.A./C.G.A. approved for use in manufactured (mobile) homes when factory accessory conversion kit is used. These furnaces are suitable for installation in a residence built on site or a manufactured residence completed at final site. The design of this furnace line is NOT A.G.A./C.G.A. certified for installation in recreation vehicles or outdoors.

These furnaces SHALL NOT be installed directly on carpeting, tile, or any other combustible material other than wood flooring. In downflow installations, factory accessory floor base MUST be used when installed on combustible materials and wood flooring. These furnaces are shipped with the drain and pressure tubes connected for UPFLOW applications. Minor modifications are required when used in DOWNFLOW, HORIZONTAL RIGHT, or HORIZONTAL LEFT (supply-air discharge direction) applications as shown in Fig. 1. See details in Applications section.

These furnaces are shipped with the following materials to assist in proper furnace installation. These materials are shipped in the main blower compartment.

Installer Packet includes:

- Installation, Start-Up, and Operating Instructions
- Service and Maintenance Instructions
- User's Information Manual
- Warranty Certificate

Loose Parts Bag includes:

- | | |
|---|---|
| Pressure tube extension | 1 |
| Collector box or condensate trap extension tube | 1 |
| Inducer housing drain tube | 1 |
| 1/2 in. CPVC street elbow | 2 |
| Drain tube coupling | 1 |
| Drain tube coupling grommet | 1 |
| Vent and combustion-air pipe support | 2 |
| Combustion-air pipe perforated disk assembly | 1 |

Vent Pipe Extension (ONLY supplied with some furnaces)

Before installing the furnace in the United States, refer to the current edition of the NFPA. For further information, the NFPA is available from National Fire Protection Association Inc., Batterymarch Park, Quincy, MA 02269; American Gas Association, 1515 Wilson Boulevard, Arlington, VA 22209; or from Literature Distribution.

Before installing the furnace in Canada, refer to the current edition of the NSCNGPIC. Contact Standards Department of Canadian Gas Association, 55 Scarsdale Road, Don Mills, Ontario, Canada M3B 2R3.

Installations must comply with regulations of serving gas supplier and local building, heating, plumbing, or other codes in effect in area in which installation is made. In absence of local codes, installation must conform with NFPA.

Canadian installations must be made in accordance with NSCNGPIC and all authorities having jurisdiction.

These instructions cover minimum requirements for a safe installation and conform to existing national standards and safety codes. In some instances, these instructions exceed certain local codes and ordinances, especially those that may not have kept pace with changing residential construction practices. We require these instructions as a minimum for a safe installation.

CAUTION: Application of this furnace should be indoors with special attention given to vent sizing and material, gas input rate, air temperature rise, unit leveling, and unit sizing. Improper installation or misapplication of furnace can require excessive servicing or cause premature component failure.

WARNING: Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage. Consult a qualified installer, service agency, local gas supplier, or your distributor or branch for information or assistance. The qualified installer or agency must use only factory authorized and listed kits or accessories when modifying this product. Failure to follow this warning could result in electrical shock, fire, personal injury, or death.

For accessory installation details, refer to applicable installation literature.

APPLICATIONS

I. GENERAL

Some assembly and modifications are required for furnaces installed in any of the 4 applications shown in Fig. 1. All drain and pressure tubes are connected as shown in Fig. 5. See appropriate application instructions for these procedures.

II. UPFLOW APPLICATIONS

An upflow furnace application is where furnace blower is located below combustion and controls section of furnace and conditioned air is discharged upwards.

A. Condensate Trap Location (Factory-Shipped Orientation)

The condensate trap is factory installed in the blower shelf and factory connected for UPFLOW applications. A factory-supplied tube is used to extend the condensate trap-drain connection to the desired furnace side for field drain attachment. See Condensate Trap Tubing (Factory-Shipped Orientation) section for drain tube extension details.

B. Condensate Trap Tubing (Factory-Shipped Orientation)

NOTE: See Fig. 5 or tube routing label on main furnace door to confirm location of these tubes.

1. Collector Box Drain, Inducer Housing Drain, Relief Port, and Pressure Switch Tubes

These tubes should be factory attached to condensate trap and pressure switch ready for use in UPFLOW applications. These tubes can be identified by their connection location and also by a color label on each tube. These tubes are identified as follows: collector box drain tube (blue label), inducer housing drain tube (violet label or molded), relief port tube (green label), and pressure switch tube (pink label).

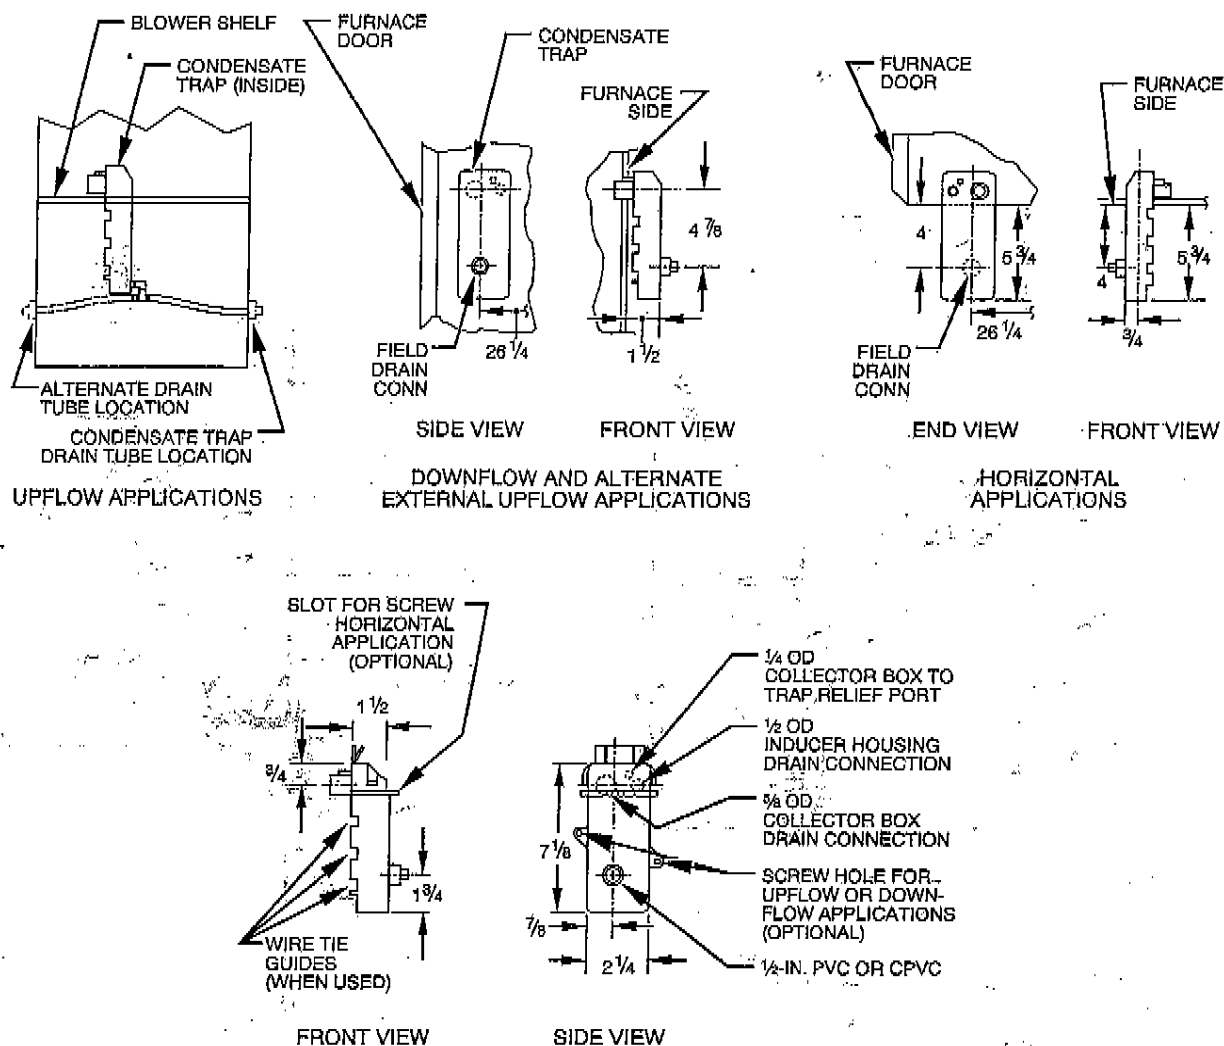


Fig. 4—Condensate Trap

A93026

2. Condensate Trap Drain Tube

The condensate trap drain connection must be extended for field attachment by doing the following:

- Determine location of field drain connection. (See Fig. 2 or 5.)

NOTE: If internal filter is used, drain tube should be located to opposite side of casing of return duct attachment to assist in filter removal.

- Remove and discard casing drain hole plug button from desired side.
- Install drain tube coupling grommet (factory supplied in loose parts bag) in selected casing hole.
- Slide drain tube coupling (factory supplied in loose parts bag) through grommet ensuring long end of coupling faces blower.
- Cement 2 factory-supplied 1/2-in. street CPVC elbows to the rigid drain tube connection on the condensate trap. (See Fig. 5.) These elbows must be cemented together and cemented to condensate trap drain connection.

NOTE: Failure to use CPVC elbows may allow drain to kink and prevent draining.

- Connect larger diameter drain tube and clamp (factory supplied in loose parts bag) to condensate trap and clamp securely.
- Route tube to coupling and cut to appropriate length.

- Attach tube to coupling and clamp securely.

C. Condensate Trap Location (Alternate Upflow Orientation)

An alternate location for the condensate trap is the left-hand side of casing. (See Fig. 2 and 6.)

NOTE: If the alternate left-hand side of casing location is used, the factory-connected drain and relief port tubes must be disconnected and modified for attachment. See Condensate Trap Tubing (Alternate Upflow Orientation) section for tubing attachment.


To relocate condensate trap to the left-hand side, perform the following:

- Remove 3 tubes connected to condensate trap.
- Remove trap from blower shelf by gently pushing tabs inward and rotating trap.
- Remove casing hole filler cap from casing hole. (See Fig. 2 or 6.)
- Install casing hole filler cap into blower shelf hole where trap was removed.
- Install condensate trap into left-hand side casing hole by inserting tube connection stubs through casing hole and rotating until tabs snap into locking position.

D. Condensate Trap Tubing (Alternate Upflow Orientation)

NOTE: See Fig. 6 or tube routing label on main furnace door to confirm location of these tubes.

- Collector Box Drain Tube

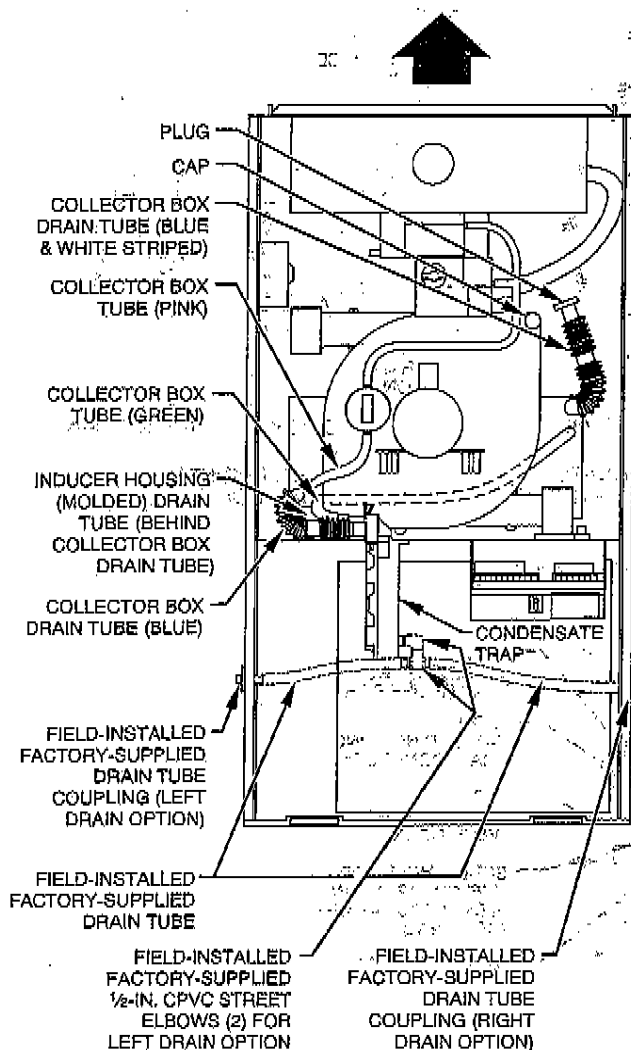

A94163

**Fig. 5—Factory-Shipped Upflow Tube Configuration
(Shown With Blower Access Panel Removed)**

Connect collector box drain tube (blue label) to condensate trap.

NOTE: On 17-1/2-in. wide furnaces **ONLY**, cut tube between corrugated sections to prevent kinks from occurring.

2. Inducer Housing Drain Tube


- Remove and discard **LOWER** (molded) inducer housing drain tube which was previously connected to condensate trap.
- Use inducer housing drain extension tube (violet label and factory-supplied in loose parts bag) to connect **LOWER** inducer housing drain connection to the condensate trap.
- Determine appropriate length, cut, and connect tube.
- Clamp tube to prevent any condensate leakage.

3. Relief Port Tube

- Connect relief port tube (green label) to condensate trap.
- Use smaller diameter tube (factory-supplied in loose parts bag) to extend this tube if required.
- Determine appropriate length, cut, and connect tube.

E. Condensate Trap Field Drain Attachment

Refer to Condensate Drain section for recommendations and procedures.

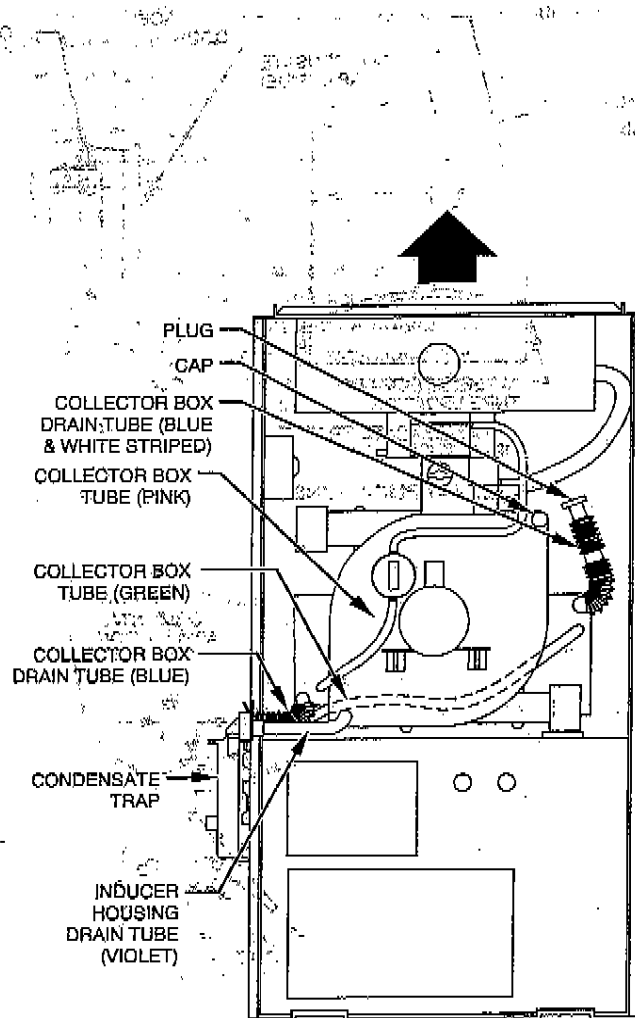

A94164

**Fig. 6—Alternate Upflow Tube Configuration and
Trap Location**

F. Pressure Switch Tubing

The **LOWER** collector box pressure tube (pink label) is factory connected to the pressure switch and should not require any modification.

NOTE: See Fig. 5 or 6 or tube routing label on main furnace door to check for proper connections.

G. Upper Collector Box and Inducer Housing (Unused) Drain Connections

UPPER COLLECTOR BOX DRAIN CONNECTION

Attached to the **UPPER** collector box drain connection is a factory-installed corrugated, plugged tube (blue and white striped label). This tube is plugged to prevent condensate leakage in this application. Ensure this tube is plugged.

NOTE: See Fig. 5 or 6 or tube routing label on main furnace door to check for proper connections.

UPPER INDUCER HOUSING DRAIN CONNECTION

Attached to the **UPPER** (unused) inducer housing drain connection is a cap and clamp. This cap is used to prevent condensate leakage in this application. Ensure this connection is capped.

NOTE: See Fig. 5 or 6 or tube routing label on main furnace door to check for proper connections.

H. Condensate Trap Freeze Protection

Refer to Condensate Drain Protection section for recommendations and procedures.

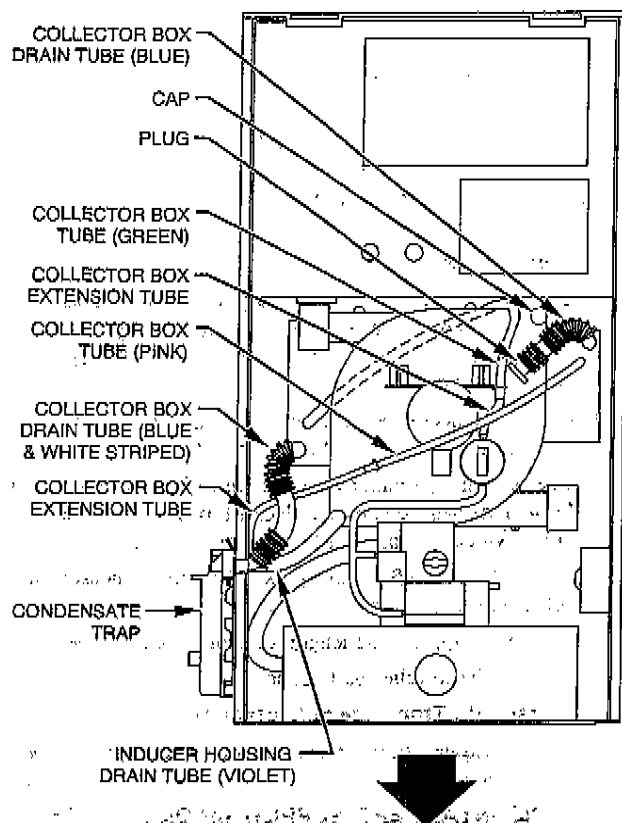


**Fig. 7—Downflow Tube Configuration
(Left-Hand Trap Installation)**

A94165

III. DOWNFLOW APPLICATIONS

A downflow furnace application is where furnace blower is located above combustion and controls section of furnace and conditioned air is discharged downwards.

A. Condensate Trap Location

The condensate trap must be removed from the factory-installed blower shelf location and relocated in selected application location as shown in Fig. 2, 7, or 8.

To relocate condensate trap from the blower shelf to desired location, perform the following:

1. Remove 3 tubes connected to condensate trap.
2. Remove trap from blower shelf by gently pushing tabs inward and rotating trap.
3. Remove casing hole filler cap from casing hole. (See Fig. 2, 7, or 8.)
4. Install casing hole filler cap into blower shelf hole where trap was removed.
5. Install condensate trap into desired casing hole by inserting tube connection stubs through casing hole and rotating until tabs snap into locking position.

B. Condensate Trap Tubing

NOTE: See Fig. 7 or 8 or tube routing label on main furnace door to check for proper connections.

1. Collector Box Drain Tube
 - a. Remove factory-installed plug from LOWER collector box drain tube (blue and white striped label).
 - b. Install removed clamp and plug into UPPER collector box drain tube (blue label) which was connected to condensate trap.
 - c. Connect LOWER collector box drain connection to condensate trap.

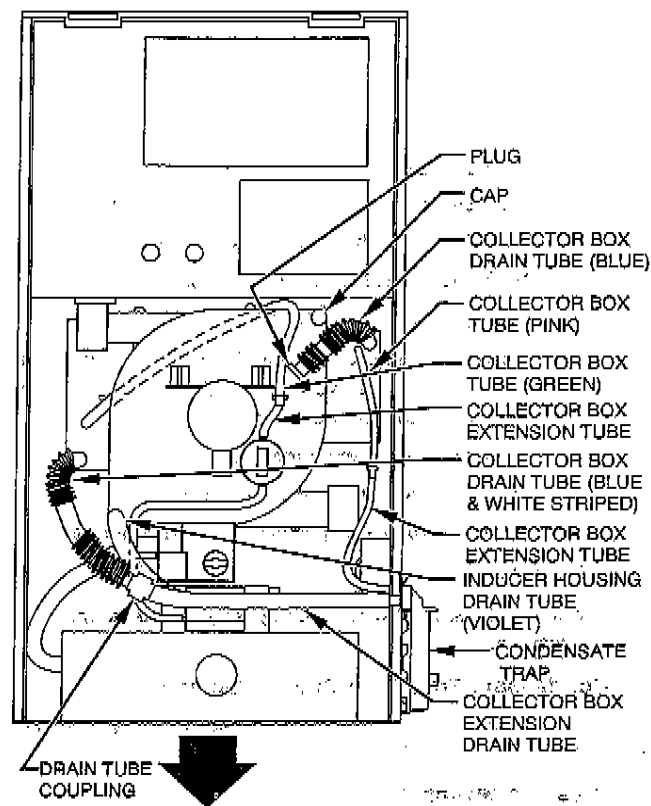


**Fig. 8—Downflow Tube Configuration
(Right-Hand Trap Installation)**

A94166

(1.) Condensate Trap Located on Left Side of Casing

- (a.) Connect LOWER collector box drain tube (blue and white striped label) to condensate trap. Tube does not need to be cut.
- (b.) Clamp tube to prevent any condensate leakage.

(2.) Condensate Trap Located on Right Side of Casing

- (a.) Install drain tube coupling (factory supplied in loose parts bag) into collector box drain tube (blue and white striped label) which was previously plugged.
- (b.) Connect larger diameter drain tube (factory supplied in loose parts bag) to drain tube coupling, extending collector box drain tube for connection to condensate trap.
- (c.) Route extended collector box drain tube between gas valve and inlet housing as shown in Fig. 8.
- (d.) Determine appropriate length and cut.
- (e.) Connect to condensate trap.
- (f.) Clamp tube to prevent any condensate leakage.

2. Inducer Housing Drain Tube

- a. Remove factory-installed cap and clamp from LOWER inducer housing drain connection.
- b. Remove and discard UPPER (molded) inducer housing drain tube which was previously connected to condensate trap.
- c. Install cap and clamp on UPPER inducer housing drain connection where molded drain tube was removed.

- d. Use inducer housing drain tube (violet label and factory supplied in loose parts bag) to connect LOWER inducer housing drain connection to the condensate trap.
- e. Connect inducer housing drain connection to condensate trap.

(1.) Condensate Trap Located on Left Side of Casing

- (a.) Determine appropriate length and cut.
- (b.) Connect tube to condensate trap.
- (c.) Clamp tube to prevent any condensate leakage.

(2.) Condensate Trap Located on Right Side of Casing

- (a.) Route inducer housing drain tube (violet label) between gas valve and inlet housing behind collector box drain tube.
- (b.) Determine appropriate length and cut.
- (c.) Connect tube to condensate trap.
- (d.) Clamp tube to prevent any condensate leakage.

3. Relief Port Tube

Refer to Pressure Switch Tubing section for connection procedure.

C. Condensate Trap Field Drain Attachment

Refer to Condensate Drain section for recommendations and procedures.

D. Pressure Switch Tubing

One collector box pressure tube (pink label) is factory connected to the pressure switch for use when furnace is installed in UPFLOW or HORIZONTAL LEFT applications. This tube MUST be disconnected and used for the condensate trap relief port tube. The

other collector box pressure tube (green label) which was factory connected to the condensate trap relief port connection MUST be connected to the pressure switch in DOWNFLOW or HORIZONTAL RIGHT applications.

NOTE: See Fig. 7 or 8 or tube routing label on main furnace door to check for proper connections.

Relocate tubes as described below.

1. Disconnect collector box pressure tube (pink label) attached to pressure switch.
2. Use smaller diameter tube (factory supplied in loose parts bag) to extend collector box pressure tube (green label) which was previously connected to condensate trap relief port connection.
3. Connect collector box pressure tube (green label) to pressure switch connection labeled "collector box."
4. Use remaining smaller diameter tube (factory supplied in loose parts bag) to extend collector box pressure tube (pink label) which was previously connected to pressure switch.
5. Route this extended tube (pink label) to condensate trap relief port connection.
6. Determine appropriate length, cut, and connect tube.
7. Clamp tube to relief port connection.

E. Condensate Trap Freeze Protection

Refer to Condensate Drain Protection section for recommendations and procedures.

IV. HORIZONTAL LEFT (SUPPLY-AIR DISCHARGE) APPLICATIONS

A horizontal-left furnace application is where furnace blower is located to the right of combustion and controls section of furnace and conditioned air is discharged to the left.

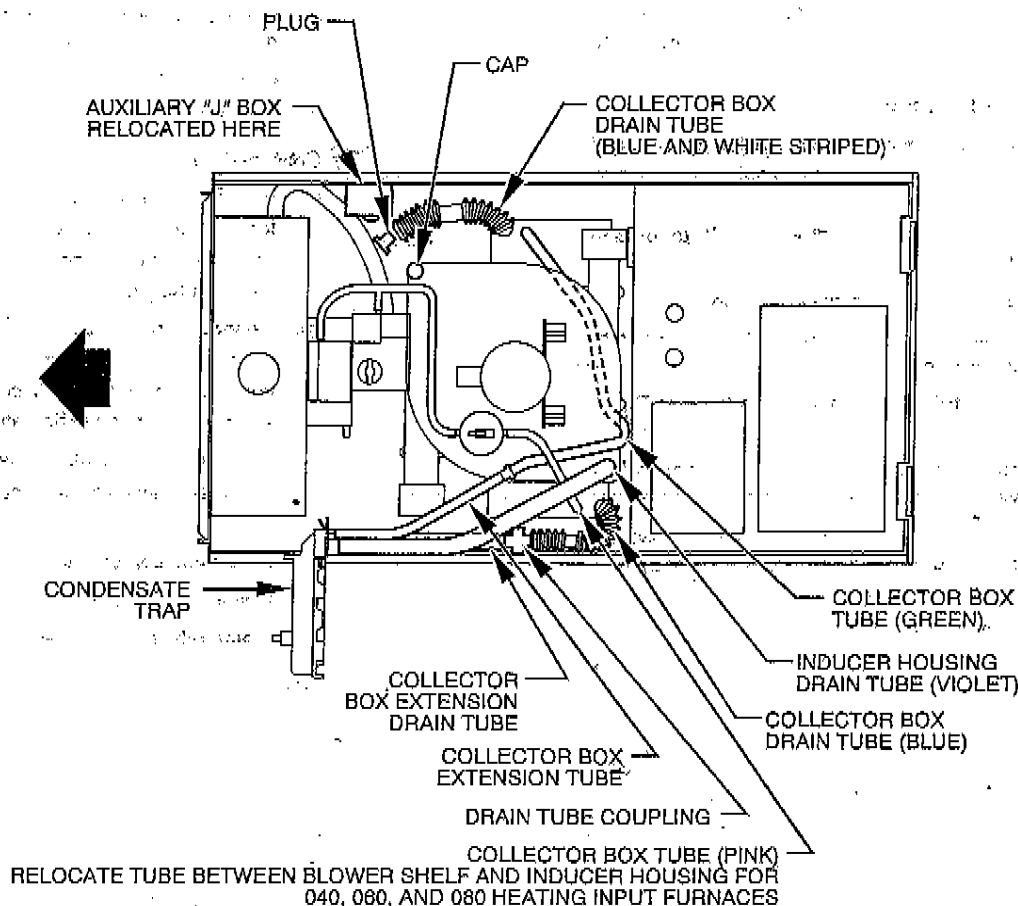


Fig. 9—Horizontal Left Tube Configuration

A93302



CAUTION: Local codes may require a drain pan under entire furnace and condensate trap when a condensing furnace is used in an attic application or over a finished ceiling.

NOTE: In Canada, installations shall be in accordance with current NSCNGPIC and/or local codes.

NOTE: The auxiliary junction box (J-Box) **MUST** be relocated to opposite side of furnace casing. (See Fig. 9.) See Electrical Connection section for J-Box relocation.

A. Condensate Trap Location

The condensate trap must be removed from the factory-installed blower shelf location and relocated in selected application location as shown in Fig. 2 or 9.

To relocate condensate trap from the blower shelf to desired location, perform the following:

1. Remove 3 tubes connected to condensate trap.
2. Remove trap from blower shelf by gently pushing tabs inward and rotating trap.
3. Remove casing hole filler cap from casing hole. (See Fig. 2 or 9.)
4. Install casing hole filler cap into blower shelf hole where trap was removed.
5. Install condensate trap into casing hole by inserting tube connection stubs through casing hole and rotating until tabs snap into locking position.

B. Condensate Trap Tubing

NOTE: See Fig. 9 or tube routing label on main furnace door to check for proper connections.

1. Collector Box Drain Tube
 - a. Install drain tube coupling (factory supplied in loose parts bag) into collector box drain tube (blue label) which was previously connected to condensate trap.
 - b. Connect large diameter drain tube and clamp (factory supplied in loose parts bag) to drain tube coupling, extending collector box drain tube.
 - c. Route extended tube (blue label) to condensate trap and cut to appropriate length.
 - d. Clamp tube to prevent any condensate leakage.
2. Inducer Housing Drain Tube
 - a. Remove and discard LOWER (molded) inducer housing drain tube which was previously connected to condensate trap.
 - b. Use inducer housing drain extension tube (violet label and factory supplied in loose parts bag) to connect LOWER inducer housing drain connection to the condensate trap.
 - c. Determine appropriate length, cut, and connect tube.
 - d. Clamp tube to prevent any condensate leakage.
3. Relief Port Tube
 - a. Use smaller diameter tube (factory supplied in loose parts bag) to extend collector box tube (green label) which was previously connected to the condensate trap.
 - b. Route extended collector box pressure tube to relief port connection on the condensate trap.
 - c. Determine appropriate length, cut, and connect tube.
 - d. Clamp tube to prevent any condensate leakage.

C. Condensate Trap Field Drain Attachment

Refer to Condensate Drain section for recommendations and procedures.

D. Pressure Switch Tubing

The LOWER collector box pressure tube (pink label) is factory connected to the pressure switch and should not require any modification.

NOTE: See Fig. 9 or tube routing label on main furnace door to check for proper connections.

E. Condensate Trap Freeze Protection

Refer to Condensate Drain Protection section for recommendations and procedures.

F. Construct a Working Platform

Construct working platform where all required furnace clearances are met. (See Fig. 3 and 10.)



CAUTION: The condensate trap **MUST** be installed below furnace. See Fig. 4 for dimensions. The drain connection to condensate trap must also be properly sloped to an open drain.

NOTE: Combustion-air and vent pipes are restricted to a minimum length of 5 ft. (See Table 5.)

NOTE: A 12-in. minimum horizontal pipe section is recommended with short (5 to 8 ft) vent systems. This recommendation is to reduce excessive condensate droplets from exiting the vent pipe. (See Fig. 10 or 29.)

V. HORIZONTAL RIGHT (SUPPLY-AIR DISCHARGE) APPLICATIONS

A horizontal right furnace application is where furnace blower is located to the left of combustion and controls section of furnace and conditioned air is discharged to the right.



CAUTION: Local codes may require a drain pan under entire furnace and condensate trap when a condensing furnace is used in attic application or over a finished ceiling.

NOTE: In Canada, installations shall be in accordance with current NSCNGPIC Installation Codes and/or local codes.

A. Condensate Trap Location

The condensate trap must be removed from the factory-installed blower shelf location and relocated in selected application location as shown in Fig. 2 or 11.


To relocate condensate trap from the blower shelf to desired location, perform the following:

1. Remove 3 tubes connected to condensate trap.
2. Remove trap from blower shelf by gently pushing tabs inward and rotating trap.
3. Remove casing hole filler cap from casing hole. (See Fig. 2 or 11.)
4. Install casing hole filler cap into blower shelf hole where trap was removed.
5. Install condensate trap into casing hole by inserting tube connection stubs through casing hole and rotating until tabs snap into locking position.

B. Condensate Trap Tubing

NOTE: See Fig. 11 or tube routing label on main furnace door to check for proper connections.

1. Collector Box Drain Tube

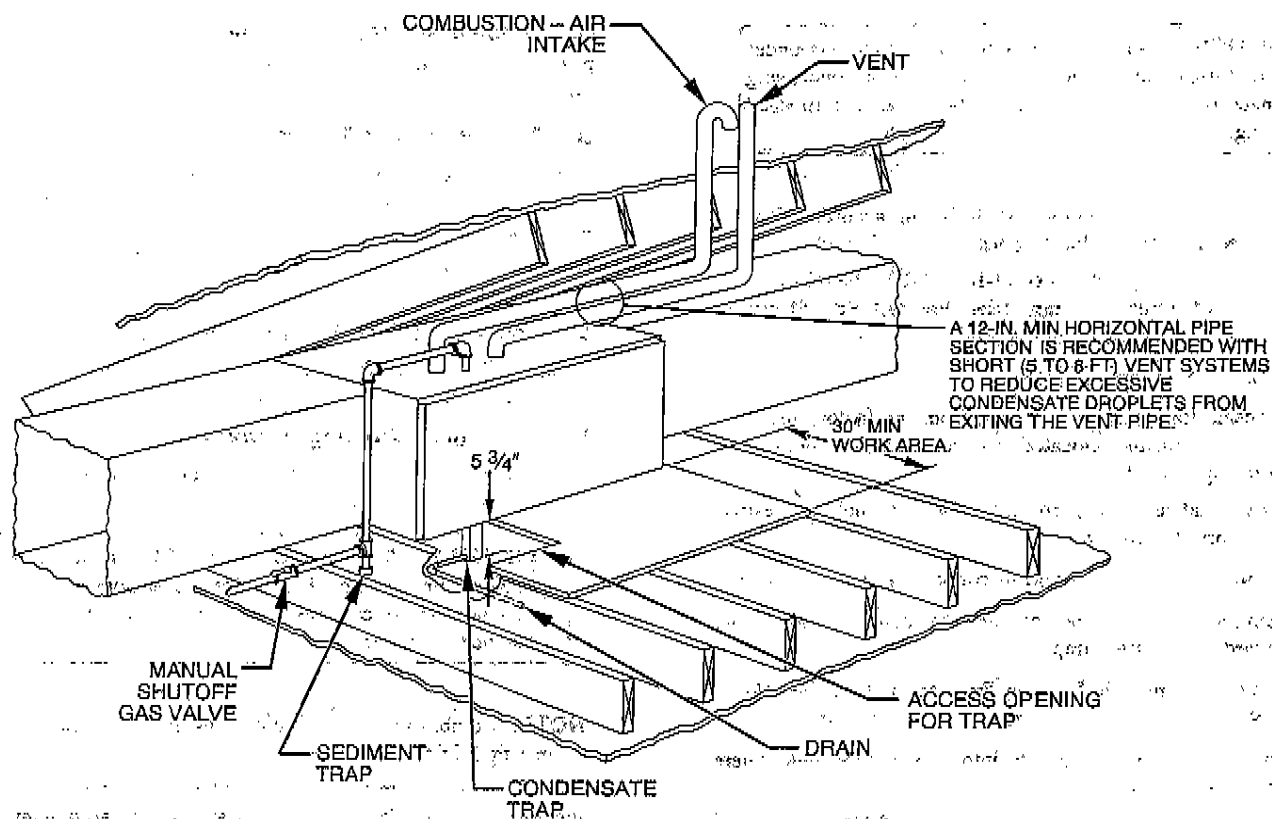

NOTE: LOCAL CODES MAY REQUIRE A DRAIN PAN UNDER THE FURNACE AND CONDENSATE TRAP WHEN A CONDENSING FURNACE IS INSTALLED ABOVE FINISHED CEILINGS.

Fig. 10—Attic Location and Working Platform

A93031

- Remove factory-installed plug from LOWER collector box drain tube (blue and white striped label).
- Install removed clamp and plug into UPPER collector box drain tube (blue label) which was previously connected to condensate trap.
- Connect LOWER collector box drain tube (blue and white striped label) to condensate trap. Tube does not need to be cut.
- Clamp tube to prevent any condensate leakage.

2. Inducer Housing Drain Tube

- Remove factory-installed cap and clamp from LOWER inducer housing drain connection.
- Remove and discard UPPER (molded) inducer housing drain tube which was previously connected to condensate trap.
- Install cap and clamp on UPPER inducer housing drain connection where molded drain tube was removed.
- Use inducer housing drain extension tube (violet label and factory supplied in loose parts bag) to connect LOWER inducer housing drain connection to condensate trap.
- Determine appropriate length, cut, and connect tube to condensate trap.
- Clamp tube to prevent any condensate leakage.

3. Relief Port Tube

Refer to Pressure Switch Tubing section for connection procedure.

C. Condensate Trap Field Drain Attachment

Refer to Condensate Drain section for recommendations and procedures.

D. Pressure Switch Tubing

One collector box pressure tube (pink label) is factory connected to the pressure switch for use when furnace is installed in UPFLOW or HORIZONTAL LEFT applications. This tube MUST be disconnected and used for the condensate trap relief port tube. The other collector box pressure tube (green label) which was factory connected to the condensate trap relief port connection MUST be connected to the pressure switch in DOWNFLOW or HORIZONTAL RIGHT applications.

NOTE: See Fig. 11 or tube routing label on main furnace door to check for proper connections.

Relocate tubes as described below.

- Disconnect collector box pressure tube (pink label) attached to pressure switch.
- Use smaller diameter tube (factory supplied in loose parts bag) to extend collector box pressure tube (green label) which was previously connected to condensate trap relief port connection.
- Connect collector box pressure tube (green label) to pressure switch connection labeled COLLECTOR BOX.
- Use remaining smaller diameter tube (factory supplied in loose parts bag) to extend collector box pressure tube (pink label) which was previously connected to pressure switch.
- Route this extended tube (pink label) to condensate trap relief port connection.
- Determine appropriate length, cut, and connect tube.

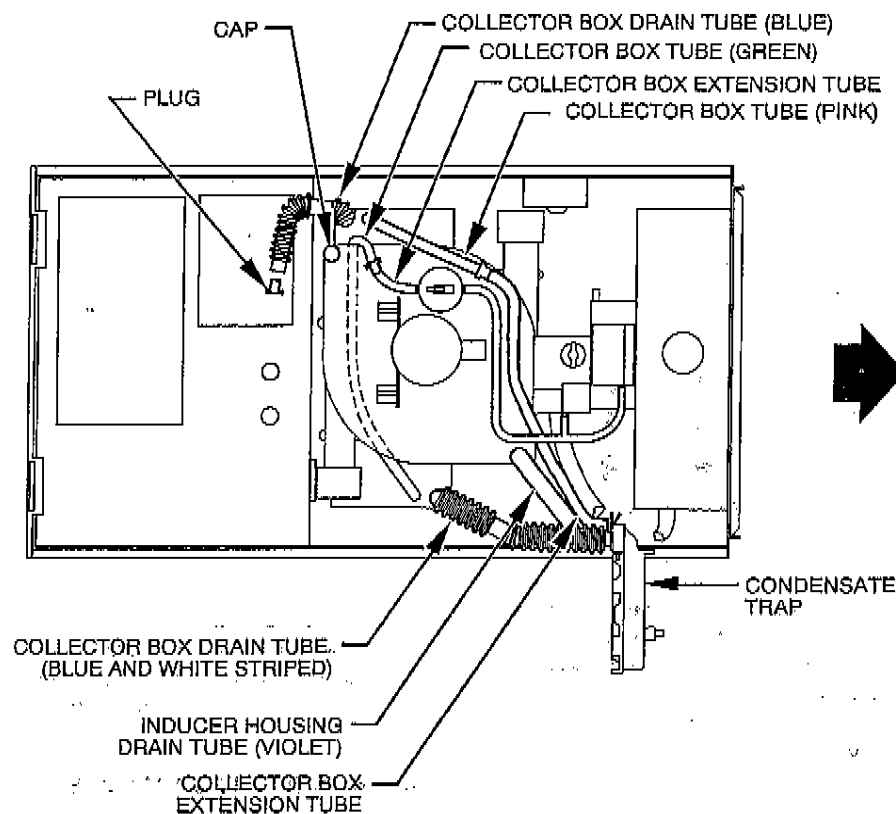


Fig. 11—Horizontal Right Tube Configuration

7. Clamp tube to relief port connection.

E. Condensate Trap Freeze Protection

Refer to Condensate Drain Protection section for recommendations and procedures.

F. Construct a Working Platform

Construct working platform where all required furnace clearances are met. (See Fig. 3 and 10.)

CAUTION: The condensate trap **MUST** be installed below furnace. See Fig. 4 for dimensions. The drain connection to condensate trap must also be properly sloped to an open drain.

NOTE: Combustion-air and vent pipes are restricted to a minimum length of 5 ft. (See Table 5.)

NOTE: A 12-in. minimum horizontal pipe section is recommended with short (5 to 8 ft) vent systems. This recommendation is to reduce excessive condensate droplets from exiting the vent pipe. (See Fig. 10 or 29.)


LOCATION

I. GENERAL

When a furnace is installed so that supply ducts carry air to areas outside the space containing the furnace, return air must also be handled by ducts sealed to furnace casing. The ducts terminate outside the space containing the furnace to ensure there will not be a negative pressure condition within equipment room or space. Furnace may be located in a confined space without special provisions for dilution or ventilation air. This furnace must be installed so electrical components are protected from water.

Locate furnace as close to center of air distribution system as possible.


Locate furnace so combustion-air pipe maximum lengths are not exceeded. Refer to Table 5—Maximum Allowable Pipe Length.

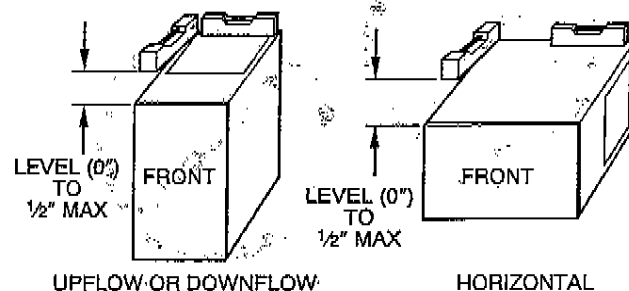

NOTE: For proper furnace operation, install furnace so that it is level or pitched forward within 1/2 in. to ensure proper condensate drainage from secondary heat exchangers.


CAUTION: If these furnaces are used during construction when adhesives, sealers, and/or new carpets are being installed, make sure all combustion and circulating air requirements are followed. If operation of furnace is required during construction, use clean outside air for combustion and ventilation. Compounds of chlorine and fluorine, when burned with combustion air, form acids which will cause corrosion of heat exchangers. Some of these compounds are found in paneling, dry wall adhesives, paints, thinners, masonry cleaning materials, and many other solvents commonly used in construction process. Excessive exposure to contaminated combustion air will result in safety and performance related problems.

Provide ample space for servicing and cleaning. Always comply with minimum fire protection clearances shown on units clearance

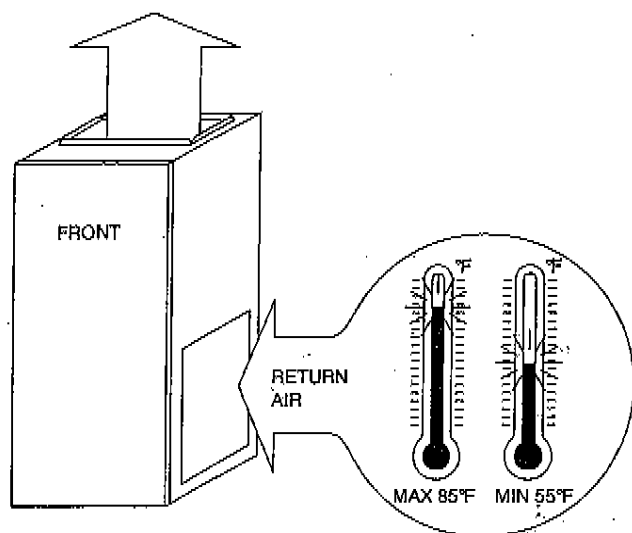

A93042


NOTE: These furnaces are designed for a minimum continuous return-air temperature of 60°F or intermittent operation down to 55°F such as when used with a night setback thermostat. Return-air temperature must not exceed a maximum of 85°F. Failure to follow these return-air temperature limits may affect reliability of heat exchangers, motors, and controls.

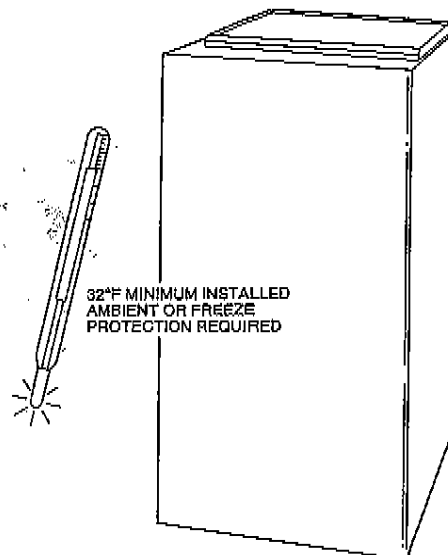

A93058

CAUTION: If these furnaces are installed in an unconditioned space where ambient temperatures may be 32°F or lower, freeze protection measures must be taken.

III. HAZARDOUS LOCATIONS

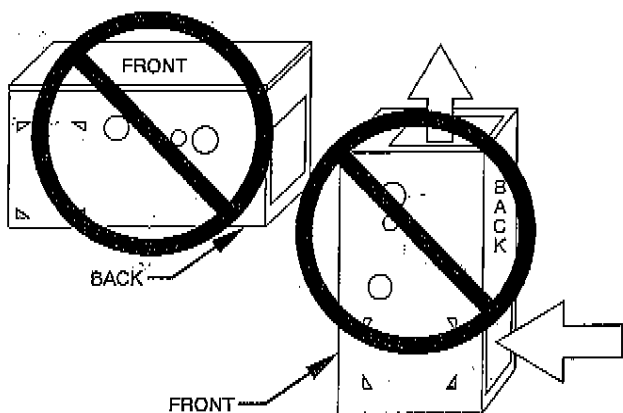


A93043

WARNING: Do not install furnace on its back. Safety control operation will be adversely affected. Never connect return-air ducts to back of furnace. Failure to follow this warning could result in fire, personal injury, or death.

to combustibles label. (See Fig. 3.) Locate furnace where available electric power and gas supplies meet specifications on furnace rating plate.

II. FURNACE LOCATION RELATIVE TO COOLING EQUIPMENT

The cooling coil must be installed parallel with or on downstream side of furnace to avoid condensation in heat exchanger. When installed parallel with a furnace, dampers or other means used to control flow of air must prevent chilled air from entering furnace. If dampers are manually operated, they must be equipped with a means to prevent operation of either unit unless damper is in full-heat or full-cool position.

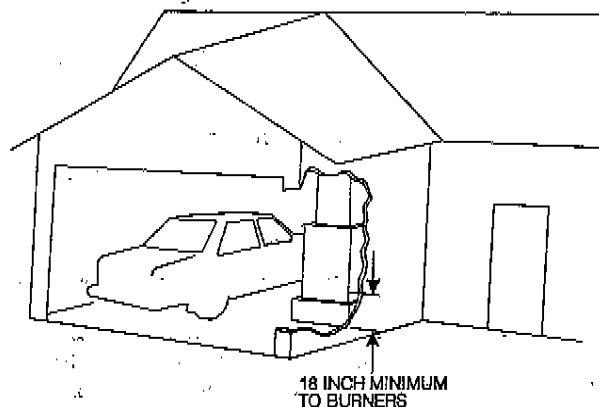

A93044

WARNING: When furnace is installed in a residential garage, it must be installed so that burners and ignition sources are located a minimum of 18 in. above floor. The furnace must be located or protected to avoid physical damage by vehicles. When furnace is installed in a public garage, airplane hangar, or other building having a hazardous atmosphere, unit must be installed in accordance with requirements of National Fire Protection Association, Inc.

INSTALLATION

I. LEVELING LEGS (IF DESIRED)

When furnace is used in upflow position with side inlet(s), leveling legs may be desired. (See Fig. 12.) Install field-supplied, corrosion-resistant 5/16-in. machine bolts and nuts.

NOTE: The maximum length of bolt should not exceed 1-1/2 in.

1. Position furnace on its back. Locate and drill a 5/16-in. diameter hole in each bottom corner of furnace. (See Fig. 12.) Holes in bottom closure panel may be used as guide locations.
2. For each hole, install nut on bolt and then install bolt and nut in hole. (Install flat washer if desired.)

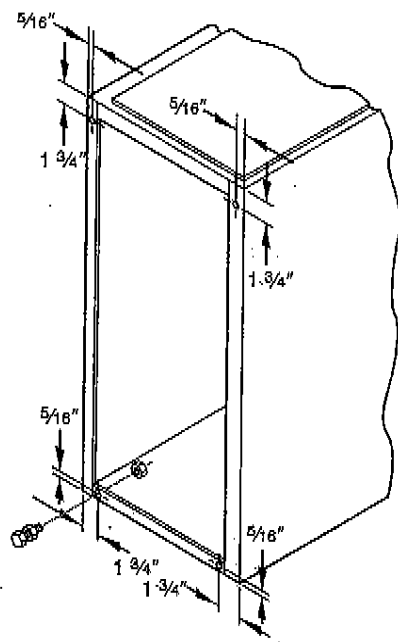


Fig. 12—Leveling Legs


A89014

3. Install another nut on other side of furnace base. (Install flat washer if desired.)
4. Adjust outside nut to provide desired height, and tighten inside nut to secure arrangement.

NOTE: Bottom closure must be used when leveling legs are used. See Bottom Closure Panel section.

II. INSTALLATION ON A CONCRETE SLAB

1. Construct hole in floor per dimensions in Fig. 13.
2. Place plenum and furnace as shown in Fig. 14.

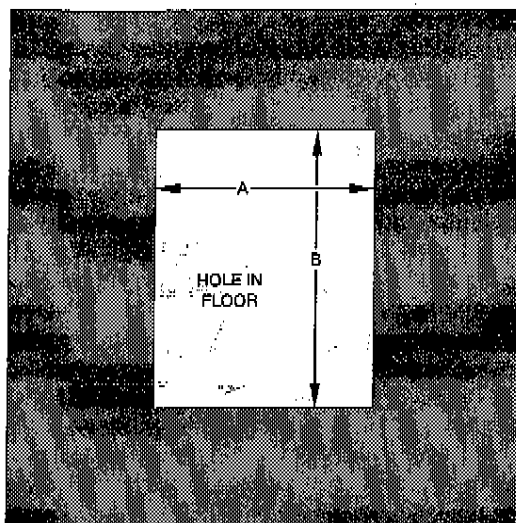


A73382

OPENING DIMENSIONS (IN.)

FURNACE CASING WIDTH	A	B	
		Heat Only	Heat/Cool*
17-1/2	16-7/16	19-5/8	19-7/16
21	19-7/8	19-5/8	19-7/16
24-1/2	23-7/16	19-5/8	19-7/16

* These dimensions apply when a model CB or CD Evaporator Coil casing is to be installed.

Fig. 13—Floor Opening in Concrete Slab

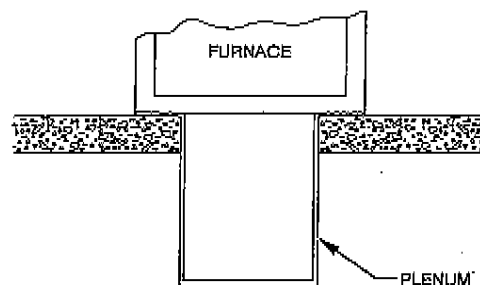


A73383

Fig. 14—Furnace on a Concrete Slab
(Non-Garage Installation)

III. INSTALLATION ON A COMBUSTIBLE FLOOR (DOWNFLOW APPLICATIONS)


1. Cut and frame hole in floor per dimensions in Installation Instructions packaged with downflow subbase kit.

NOTE: Remove furnace perforated, discharge duct flanges when they interfere with mating flanges on coil on downflow subbase. To remove furnace perforated, discharge duct flange, use wide duct pliers or duct flange tool to bend flange back-and-forth until it breaks off. Be careful of sharp edges. (See Fig. 15.)

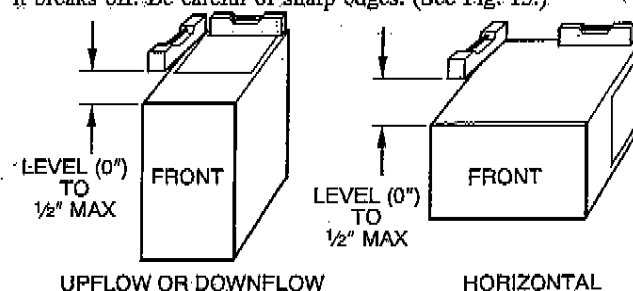

A93025

NOTE: For proper furnace operation, install furnace so that it is level or pitched forward within 1/2 in. to ensure proper condensate drainage from secondary heat exchangers.

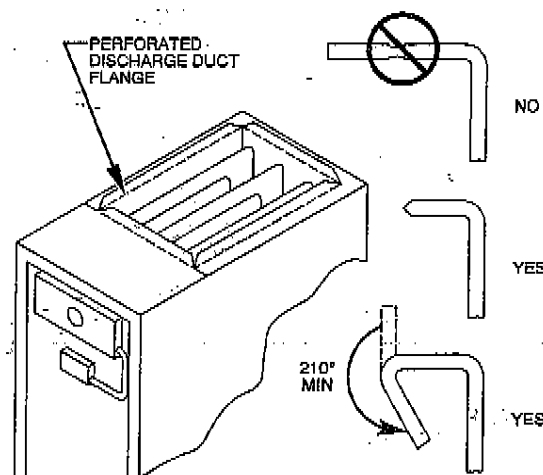


A83029

Fig. 15—Duct Flanges

WARNING: Do not bend duct flanges inward as shown in Fig. 15. This will affect airflow across heat exchangers and may cause limited cycling or premature heat exchanger failure. Remove duct flange completely or bend it inward a minimum of 210° as shown in Fig. 15.

2. When complete, downflow subbase, plenum, and furnace (or coil casing when used) should be installed as shown in Fig. 16.

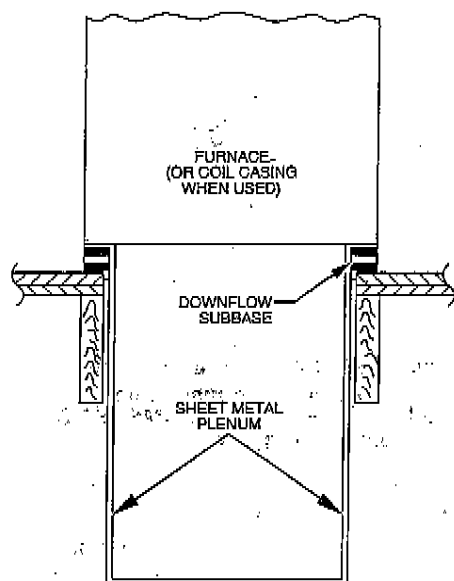

IV. INSTALLATION IN HORIZONTAL APPLICATIONS

These furnaces can be installed horizontally in either horizontal left or right discharge position. In a crawlspace, furnace can either be hung from floor joist or installed on suitable blocks or pad. Furnace can be suspended from each corner by hanger bolts. (See Fig. 17.) Cut hanger bolts (4 each 3/8-in. all-thread rod) to desired length. Use 1 X 3/8-in. flat washers, 3/8-in. lockwashers, and 3/8-in. nuts on hanger rods as shown in Fig. 17. Dimples are provided for hole locations. (See Fig. 2.)




CAUTION: The entire length of furnace **MUST** be supported when furnace is used in a horizontal position to ensure proper draining.

V. FILTER ARRANGEMENT



CAUTION: Never operate unit without a filter or with blower access panel removed.

Factory-supplied washable framed filters are shipped in blower compartment. Determine location for filter and relocate filter retaining wire if necessary. See Table 1 to determine correct filter size for desired filter location. Table 1 indicates filter size;

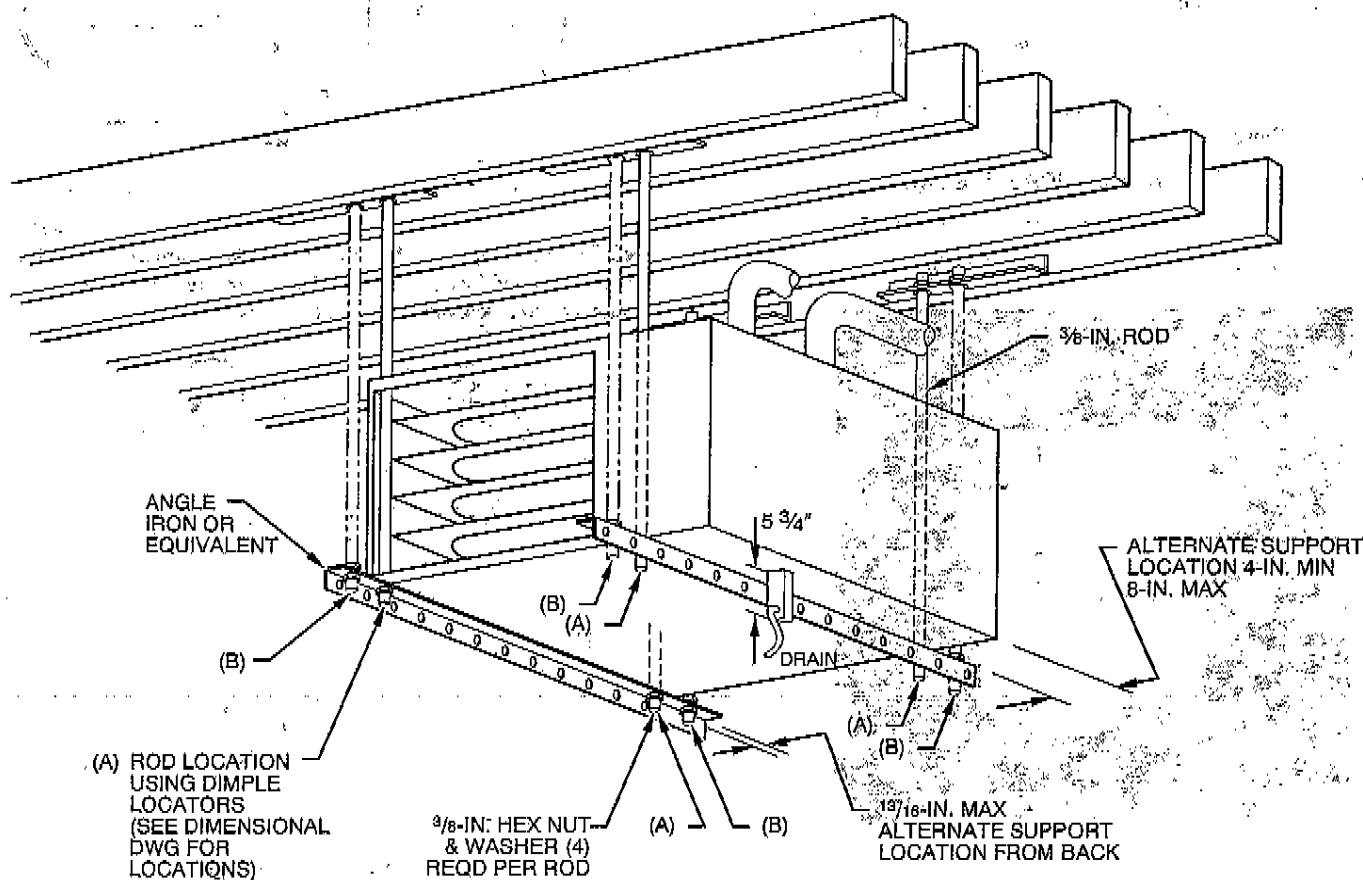

(A) PREFERRED ROD LOCATION

(B) ALTERNATE ROD LOCATION

NOTES: 1. A 1 in. clearance minimum between top of furnace and combustible material.

2. The entire length of furnace must be supported when furnace is used in horizontal position to ensure proper drainage.

Fig. 17—Crawlspace Horizontal Application

A93304

location, and quantity shipped with this furnace. See Fig. 2 for location and size of bottom and side return-air openings.

TABLE 1—FILTER INFORMATION

FURNACE CASING WIDTH (IN.)	FILTER SIZE (IN.)*		FILTER TYPE FRAMED
	Side Return	Bottom Return	
17-1/2	(1) 16 X 25 X 1†	(1) 16 X 25 X 1	Cleanable
21	(1) 16 X 25 X 1	(1) 20 X 25 X 1†	Cleanable
24-1/2	(2) 16 X 25 X 1†	(1) 24 X 25 X 1	Cleanable

* Filters can be field modified by cutting frame as marked and folding to desired size. Alternate sizes can be ordered from your distributor or dealer.

† Factory-provided with furnace.

CAUTION: Air delivery above 1800 CFM requires that both sides, a combination of 1 side and bottom, or bottom only of furnace be used for return air.

NOTE: Side return-air openings can ONLY be used in UPFLOW configurations. Install filter(s) as shown in Fig. 18.

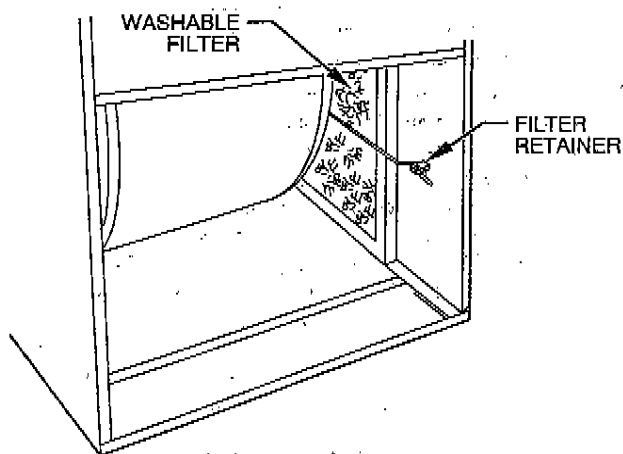


Fig. 18—Filter Installed for Side Inlet

Bottom return-air opening may be used with all 4 orientations. Filter may need to be cut to fit some furnace widths. Install filter as shown in Fig. 19.

NOTE: Remove and discard bottom closure panel when bottom inlet is used.

VI. BOTTOM CLOSURE PANEL

These furnaces are shipped with bottom enclosure panel installed in bottom return-air opening. This panel MUST be in place when side return air is used.

To remove bottom closure panel, perform following:

1. Tilt or raise furnace and remove 2 screws holding front filler panel. (See Fig. 20.)
2. Rotate front filler panel downward to release holding tabs.
3. Remove bottom closure panel.
4. Reinstall front filler panel and screws.

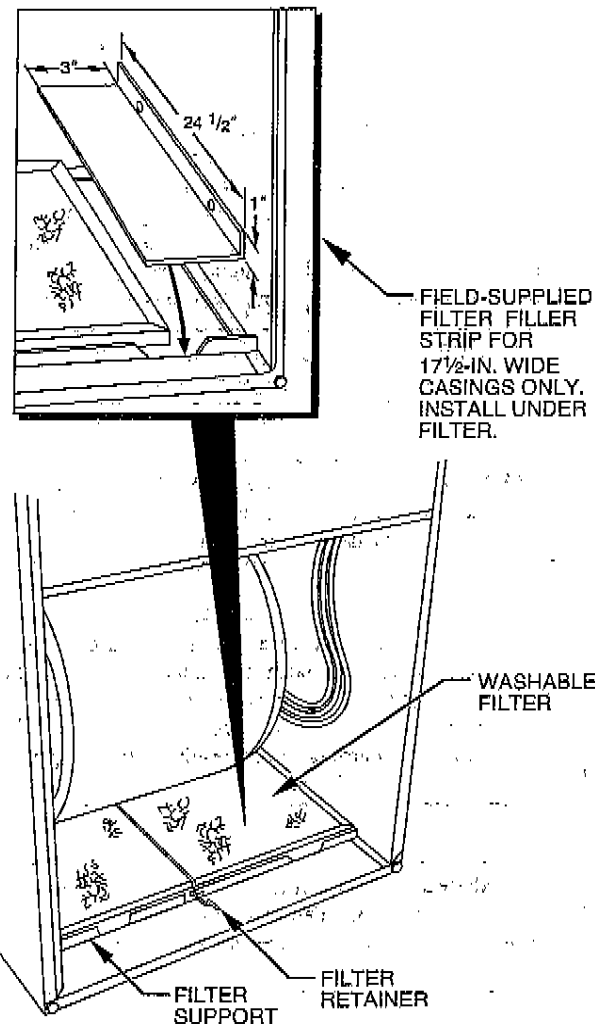


Fig. 19—Bottom Filter Arrangement

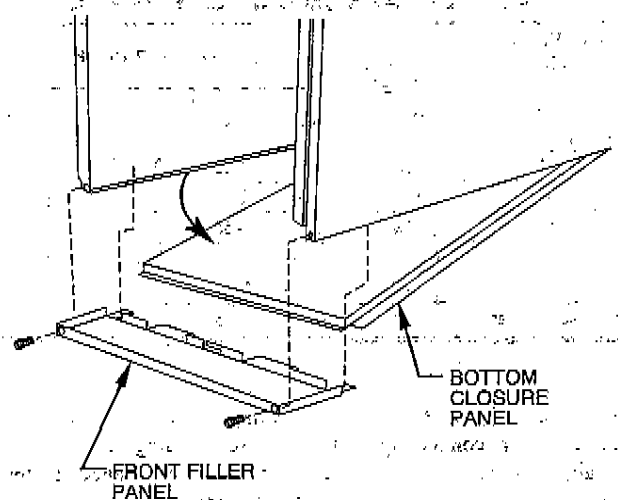


Fig. 20—Removing Bottom Closure Panel

VII. GAS PIPING

Gas piping must be installed in accordance with national and local codes. Refer to current edition of NFGC. Canadian installations must be made in accordance with NSCNGPIC and all authorities having jurisdiction. Gas supply line should be a separate line running directly from meter to furnace, if possible. Refer to Table 2 for recommended gas pipe sizing. Risers must be used to connect to furnace and to meter. Support all gas piping with appropriate straps, hangers, etc. Use a minimum of 1 hanger every 6 ft. Joint compound (pipe dope) should be applied sparingly and only to male threads of joints. Pipe dope must be resistant to propane gas.

CAUTION: Connect gas pipe to furnace using a backup wrench to avoid damaging gas controls.

WARNING: Gas valve knob **MUST** be facing forward or tilted upward. Failure to follow this warning could result in property damage or death.

WARNING: Never purge a gas line into a combustion chamber. Never use matches, candles, flame, or other sources of ignition for purpose of checking leakage. Use a soap-and-water solution to check for leakage. A failure to follow this warning could result in fire, explosion, personal injury, or death.

WARNING: Use proper length of pipe to avoid stress on gas control manifold. Failure to follow this warning could result in a gas leak resulting in fire, explosion, personal injury, or death.


TABLE 2—MAXIMUM CAPACITY OF PIPE*

NOMINAL IRON PIPE SIZE (IN.)	INTERNAL DIAMETER (IN.)	LENGTH OF PIPE (FT)				
		10	20	30	40	50
1/2	0.622	175	120	97	82	73
3/4	0.824	360	250	200	170	151
1	1.049	680	465	375	320	285
1-1/4	1.380	1400	950	770	660	580
1-1/2	1.610	2100	1460	1180	990	900

* Cubic ft. of gas per hr for gas pressures of 0.5 psig (14-in. wc) or less, and a pressure drop of 0.5-in. wc (based on a 0.60 specific gravity gas). Ref: Table 10-2 NFPA 54-1992.

Install a sediment trap in riser leading to furnace. Trap can be installed by connecting a tee to riser leading to furnace so straight-through section of tee is vertical. Then connect a capped nipple into lower end of tee. Capped nipple should extend below level of gas controls. Place a ground joint union between gas control manifold and manual gas shut-off valve. (See Fig. 21.)

CAUTION: If a flexible connector is required or allowed by authority having jurisdiction, black iron pipe shall be installed at gas valve and extend a minimum of 2 in. outside furnace casing.

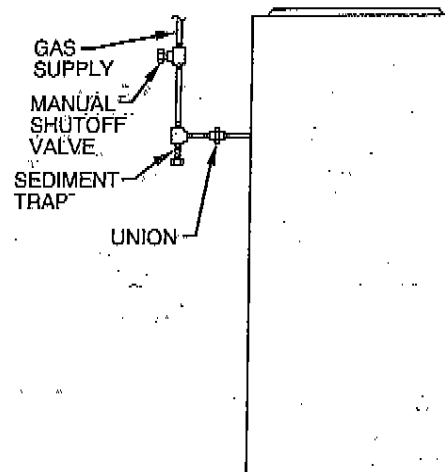

A93324

Fig. 21—Typical Gas Pipe Arrangement

plugged tapping, accessible for test gage connection, **MUST** be installed immediately upstream of gas supply connection to furnace and downstream of manual shut-off valve.

NOTE: The gas valve inlet press tap connection is suitable to use as test gage connection providing test pressure **DOES NOT** exceed maximum 0.5 psig (14-in. wc) stated on gas valve. (See Fig. 45.) Piping should be pressure tested in accordance with local and national plumbing and gas codes before furnace has been attached. In Canada, refer to current edition of NSCNGPIC. If pressure exceeds 0.5 psig (14-in. wc), gas supply pipe must be disconnected from furnace and capped before pressure test. If test pressure is equal to or less than 0.5 psig (14-in. wc), close manual shut-off valve located on gas valve before test. It is recommended that ground joint union be loosened before pressure testing. After all connections have been made, purge lines and check for leakage.

ELECTRICAL CONNECTIONS

See Fig. 22 for field wiring diagram showing typical field 115-v and 24-v wiring. Check all factory and field electrical connections for tightness.

WARNING: Blower access panel door switch opens 24-v power to control center. No component operation can occur. The 115-v power is still present at control center and transformer. Do not bypass or close switch with panel removed. Failure to follow this warning could result in personal injury or death.


CAUTION: Furnace control must be grounded for proper operation or control will lock out. Control is grounded through green wire routed to gas valve and burner box screw.

I. 115-V WIRING

Before proceeding with electrical connections, make certain that voltage, frequency, and phase correspond to that specified on unit rating plate. Also, check to be sure that service provided by utility is sufficient to handle load imposed by this equipment. Refer to rating plate or Table 3 for equipment electrical specifications.


Make all electrical connections in accordance with National Electrical Code (NEC) ANSI/NFPA 70-1993 and any local codes or ordinances that might apply. For Canadian installations, all electrical connections must be made in accordance with Canadian Electrical Code CSA C22.1 or subauthorities having jurisdiction.

An accessible manual shut-off valve **MUST** be installed upstream of furnace gas controls and within 6 ft of furnace. A 1/8-in. NPT

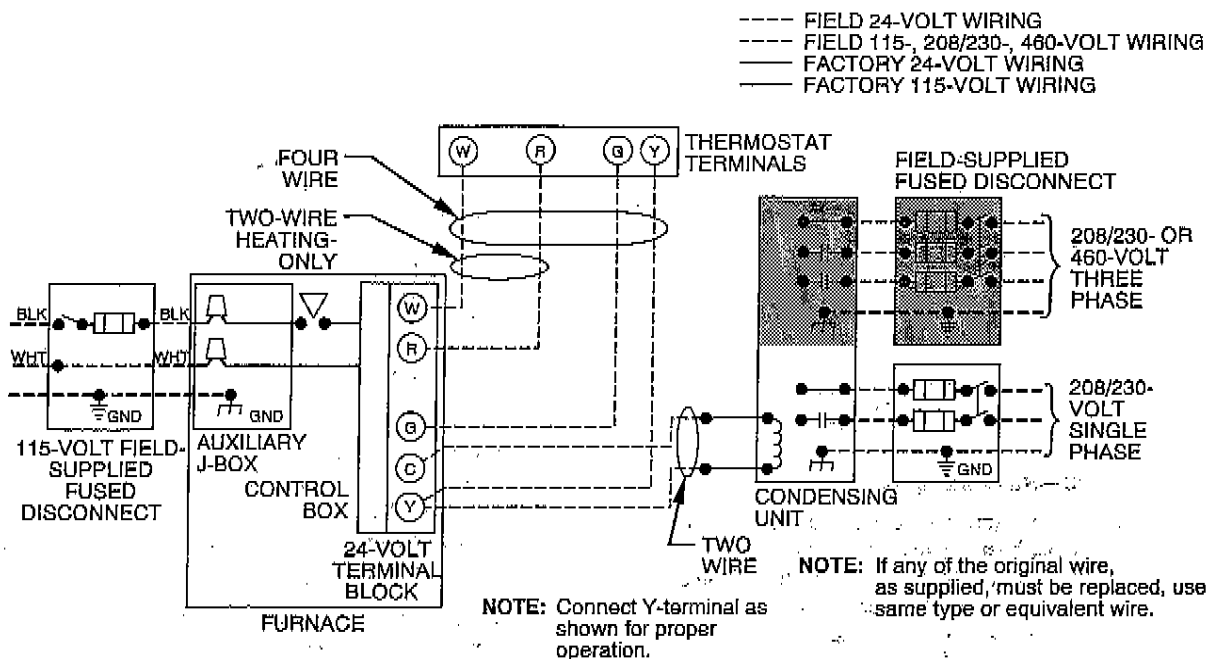

A78461

Fig. 22—Heating and Cooling Application Wiring Diagram

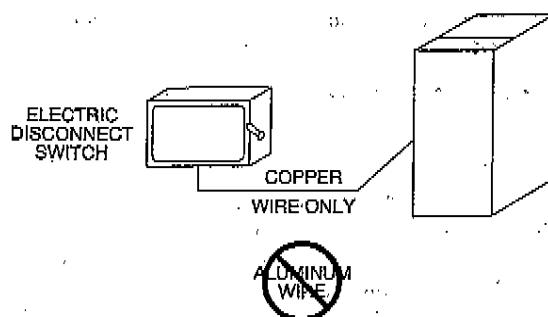

A93033

CAUTION: Do not connect aluminum wire between disconnect switch and furnace. Use only copper wire.

Use a separate, fused branch electrical circuit containing a properly sized fuse or circuit breaker for this furnace. See Table 3 for wire size and fuse specifications. A disconnecting means must be located within sight from and readily accessible to furnace.

NOTE: Proper polarity must be maintained for 115-v wiring. If polarity is incorrect, control center fault-code indicator light will flash rapidly and furnace will NOT operate.

WARNING: The cabinet MUST have an uninterrupted or unbroken ground according to NEC ANSI/NFPA 70-1993 and Canadian Electrical Code CSA C22.1 or local codes to minimize personal injury if an electrical fault should occur. This may consist of electrical wire or conduit approved for electrical ground when installed in accordance with existing electrical codes. Do not use gas piping as an electrical ground.

J-BOX RELOCATION

1. Remove 2 screws holding auxiliary J-box. (See Fig. 23.)
2. Rotate J-box 180° and attach box to right side, using holes provided.

CAUTION: If manual disconnect switch is to be mounted on furnace, select a location where a drill or fastener will not contact electrical or gas components.

II. 24-V WIRING

Make field 24-v thermostat connections at 24-v terminal block on control center. For proper cooling operation, Y wire from thermo-

TABLE 3—ELECTRICAL DATA


UNIT SIZE	VOLTS—HERTZ—PHASE	OPERATING VOLTAGE RANGE		MAX UNIT AMPS	UNIT AMPACITY†	MIN WIRE SIZE	MAX WIRE LENGTH (FT)‡	MAX FUSE OR CKT BKR AMPS**
		Max*	Min*					
024040	115-60-1	127	104	6.1	8.4	14	38	15
036040	115-60-1	127	104	7.3	10.0	14	37	15
036060	115-60-1	127	104	7.1	9.8	14	38	15
048060	115-60-1	127	104	9.5	12.8	14	29	15
036080	115-60-1	127	104	7.6	10.4	14	36	15
048080	115-60-1	127	104	10.0	13.4	14	28	15
060080	115-60-1	127	104	14.1	18.4	12	31	20
048100	115-60-1	127	104	10.2	13.5	14	27	15
060100	115-60-1	127	104	14.8	19.3	12	30	20
060120	115-60-1	127	104	14.6	19.1	12	30	20

* Permissible limits of voltage range at which unit will operate satisfactorily.

† Unit ampacity = 125 percent of largest operating component's full load amps plus 100 percent of all other potential operating components' (EAC, humidifier, etc.) full load amps.

‡ Length shown is as measured 1 way along wire path between unit and service panel for maximum 2 percent voltage drop.

** Time-delay fuse is recommended.

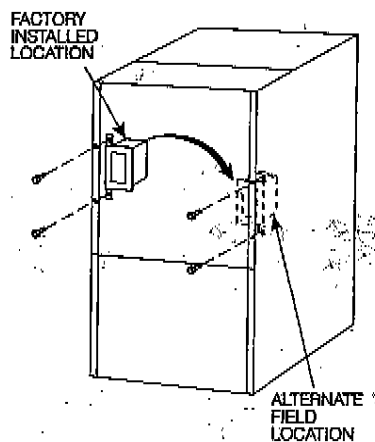

A93051

Fig. 23—Relocating J-Box

stat **MUST** be connected to Y terminal on control center, as shown in Fig. 22. The 24-v terminal board is marked for easy connection of field wiring. (See Fig. 24.) The 24-v circuit contains a 3-amp, automotive-type fuse located on control center. (See Fig. 25.) Any electrical shorts of 24-v wiring during installation, service, or maintenance may cause fuse to blow. If fuse replacement is required, use only a fuse of identical size (3 amp).

NOTE: Use AWG No. 18 color-coded copper thermostat wire for lengths up to 100 ft. For wire lengths over 100 ft, use AWG No. 16 wire.

III. ACCESSORIES

1. Electronic Air Cleaner (EAC)

Two spring clamp terminals (for 12 gage maximum, solid or stranded wire), marked EAC-1 and EAC-2, are provided for EAC connection. (See Fig. 25.) These terminals are energized with 115v (1.5-amp maximum) during blower motor operation. To connect EAC power leads to furnace control center, strip approximately 1/8 in. of insulation from wire. Open terminal by depressing switch arm with a screwdriver or finger, and insert wire as shown in Fig. 26.

2. Humidifier (HUM)

Screw terminals (HUM and Com) are provided for 24-v humidifier connection. (See Fig. 24.) HUM terminal is energized with 24v (0.5-amp maximum) after inducer motor prepurge period.

NOTE: A field-supplied, 115-v controlled relay connected to EAC terminals may be added if humidifier operation is desired during blower operation.

DIRECT VENTING

The 340MAV and 350MAV Furnaces require a dedicated (one 340MAV or one 350MAV furnace only) direct vent system. In a direct vent system, all air for combustion is taken directly from outside atmosphere, and all flue products are discharged to outside atmosphere.

I. REMOVAL OF EXISTING FURNACES FROM COMMON VENT SYSTEMS

If furnace being replaced was connected to a common vent system with other appliances, these steps shall be followed with each appliance remaining connected to common vent system placed in operation, while other appliances remaining connected to common vent system are not in operation:

1. Seal any unused openings in common vent system.
2. Visually inspect vent system for proper size and horizontal pitch. Determine there is no blockage or restriction, leakage, corrosion, and other deficiencies which could cause an unsafe condition.

3. Insofar as is practical, close all building doors and windows and all doors between space in which appliances remaining connected to common vent system are located and other spaces of building. Turn on clothes dryers and any appliance not connected to common vent system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.

4. Follow lighting instructions and place appliance in operation. Adjust thermostat so appliance operates continuously.

5. Test for flue gas spillage at drafthood relief opening after 5 minutes of main burner operation. Use flame of a match or candle, etc.

6. After it has been determined that each appliance remaining connected to common vent system properly vents when tested as above, return doors, windows, exhaust fans, fireplace dampers, any other gas burning appliances to their previous condition of use.

7. If improper venting is observed during any of above tests, common vent system must be corrected. Vent system or vent connectors may need to be resized. For any other appliances when resizing vent systems or vent connectors, system or connector must be sized to approach minimum size as determined using appropriate table found in Part 11 of NFPA or Section 5 of NSCPIC.

II. COMBUSTION-AIR AND VENT PIPING

A. General

Combustion-air and vent pipe fittings must conform to American National Standards Institute (ANSI) standards and American Society for Testing and Materials (ASTM) standards D1785 (schedule-40 PVC), D2665 (PVC-DWV), D2241 (SDR-21 and SDR-26 PVC), D2661 (ABS-DWV), F628 (schedule-40 ABS), or F891 (PVC-DWV cellular core). Pipe cement and primer must conform to ASTM standards D2564 (PVC) or D2235 (ABS). See Table 5 for maximum pipe lengths and Fig. 31, 32, 33, 34, and 35 for exterior piping arrangements.


In Canada construct all combustion-air and vent pipes for this unit of CSA or ULC certified schedule-40 PVC, PVC-DWV or ABS-DWV pipe and pipe cement. SDR pipe is NOT approved in Canada.

NOTE: Furnace combustion-air and vent pipe connections are sized for 2-in. pipe. Any pipe size change should be made outside furnace casing in vertical pipe. (See Fig. 27.) This allows proper drainage of vent condensate.

Combustion-air and vent pipes must terminate together in same atmosphere pressure zone, either through roof or sidewall (roof termination preferred), using accessory termination kit. See Table 4 for required clearances.

Furnace combustion-air and vent pipe connections must be attached as shown in Fig 28. Combustion-air intake plug fitting and inducer housing alternate vent cap may need to be relocated in some applications.

CAUTION: When combustion-air pipe is installed above a suspended ceiling, pipe must be insulated with 3/8-in. thick Armaflex-type insulation. Combustion-air pipe should also be insulated when it passes through warm, humid space.

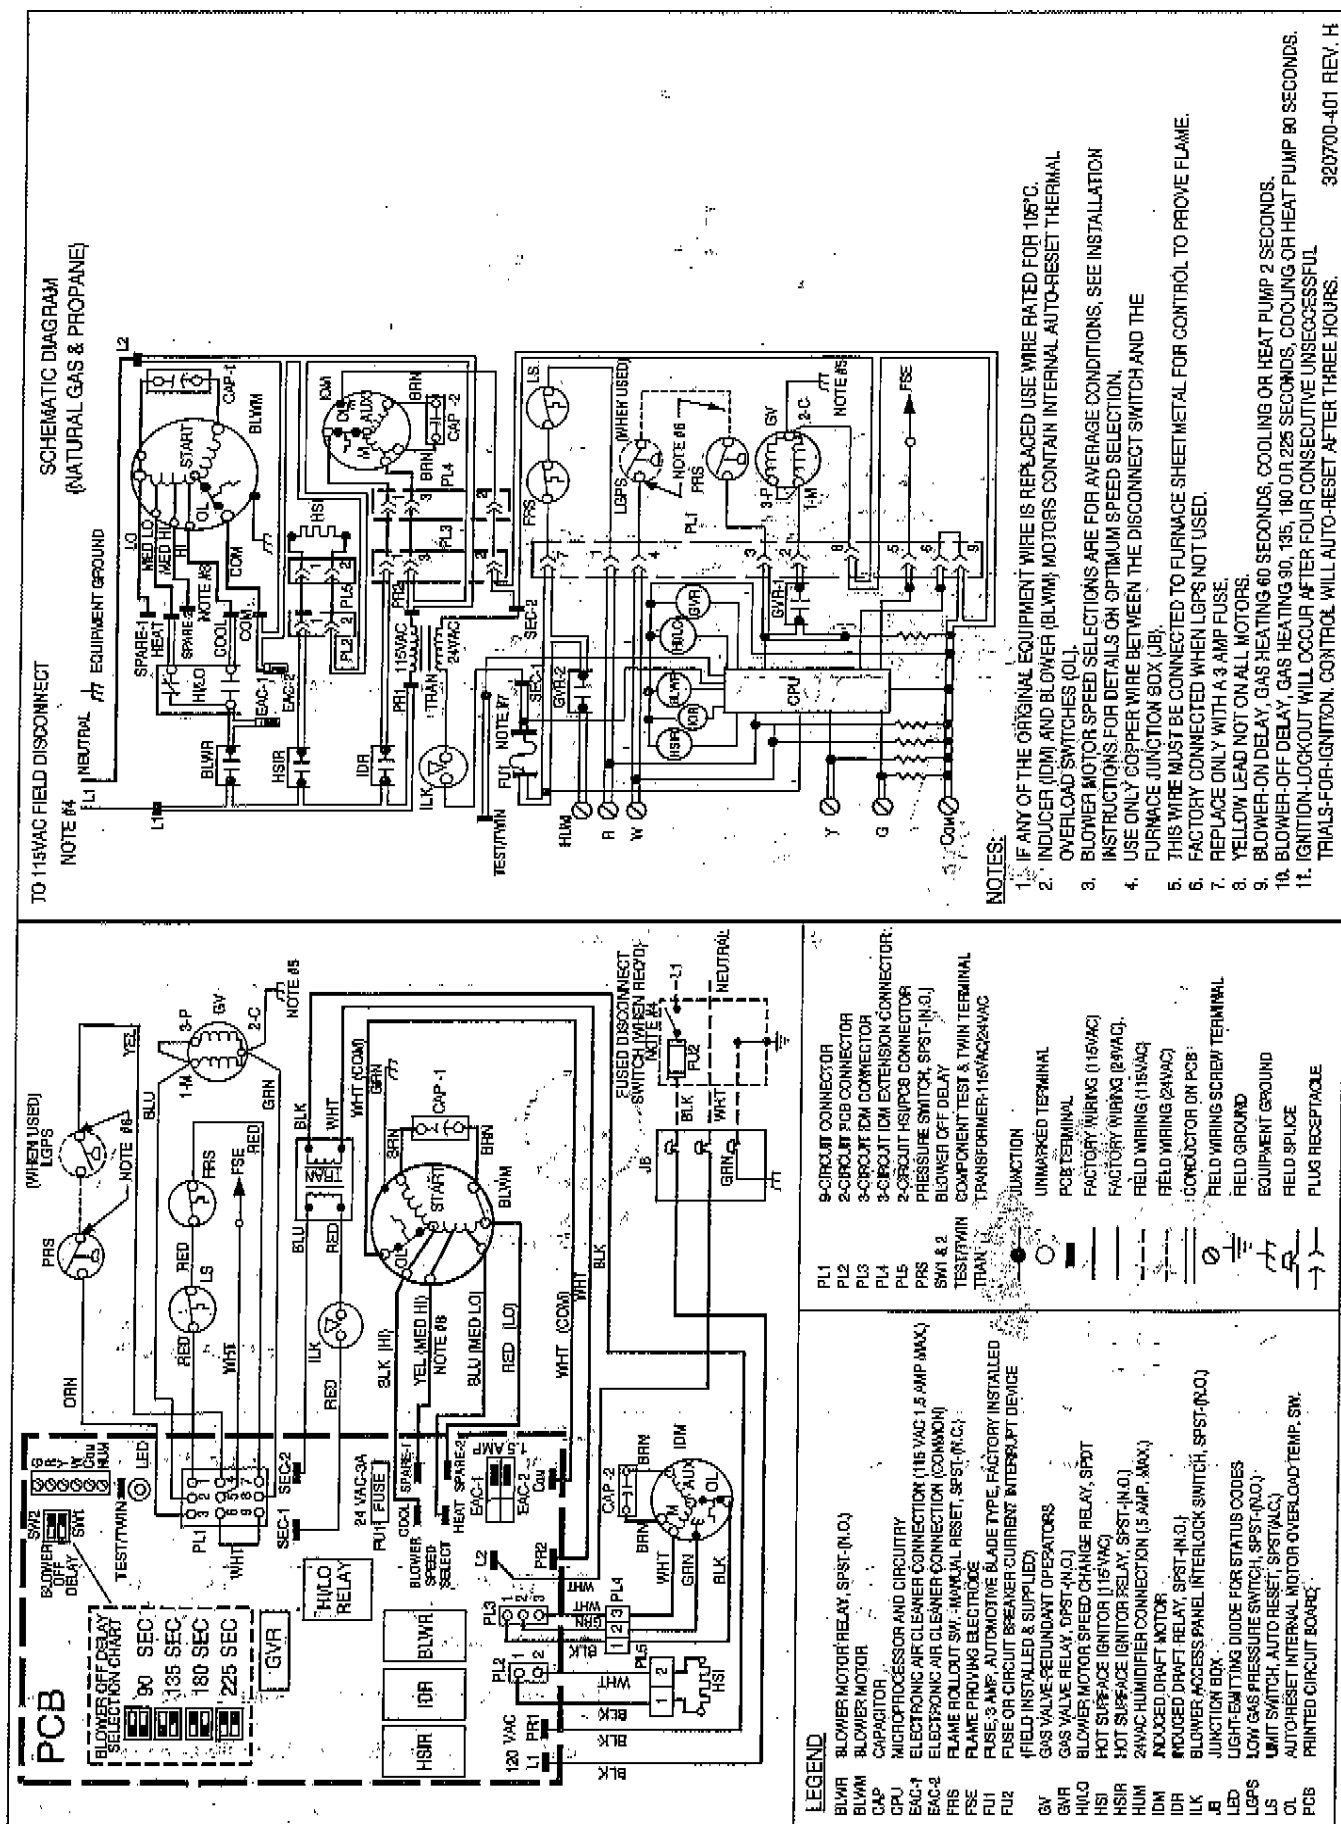

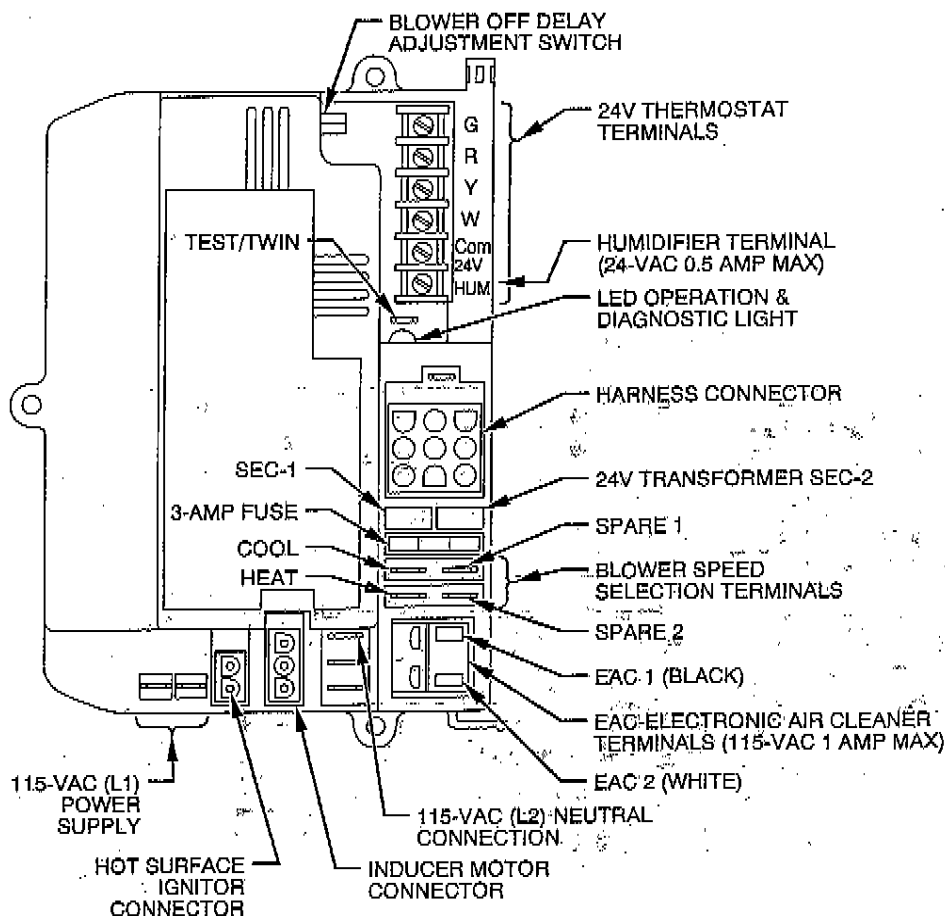


Fig. 25—Control Center

A93052

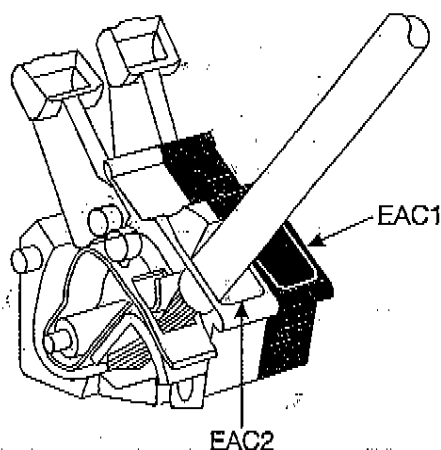


Fig. 26—EAC Terminals on Control Center

A93053

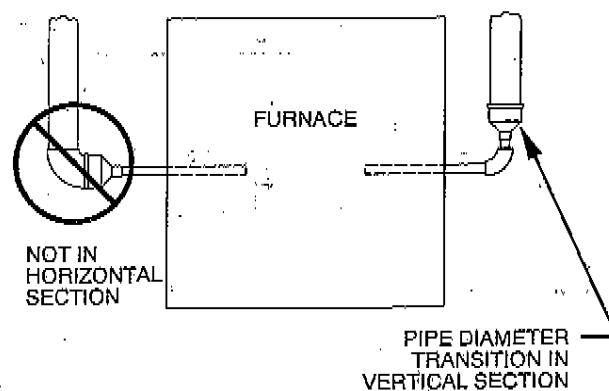


Fig. 27—Combustion-Air and Vent Pipe Diameter Transition Location and Elbow Configuration

A93034

CAUTION: When vent pipe is exposed to temperatures below freezing, such as when it passes through an unheated space or when a chimney is used as a raceway, pipe must be insulated as shown in Table 6 with Armaflex-type insulation.

CAUTION: Combustion air must not be taken from inside structure because inside air is frequently contaminated by halogens, which include fluorides, chlorides, bromides, and iodides. These elements are found in aerosols, detergents, bleaches, cleaning solvents, salts, air fresheners, adhesives, paint, and other household products. Locate combustion-air inlet as far as possible from swimming pool and swimming pool pump house. Excessive exposure to contaminated combustion air will result in safety and performance related problems.

TABLE 4—COMBUSTION-AIR AND VENT PIPE TERMINATION CLEARANCES

LOCATION	CLEARANCE (FT)	
	U.S.A.	Canada
Above grade level or above anticipated snow depth	1	1†
Dryer vent	3	3
From plumbing vent stack	3	3
From any mechanical fresh air intake	1	6
For furnaces with an input capacity less than 100,000 Btuh—from any non-mechanical air supply (windows or doors which can be opened) or combustion-air opening	1	1
For furnaces with an input capacity greater than 100,000 Btuh—from any non-mechanical air supply (windows or doors which can be opened) or combustion-air opening	1	3
From service regulator vent, electric and gas meters, and relief equipment	4*	6‡
Above grade when adjacent to public walkway	7	7

* Horizontal distance.

† 18 in. above roof surface in Canada.


‡ 36 in. to electric meter in Canada only.

NOTES:




1. If installing 2 adjacent 940MAV or 350MAV Furnaces, refer to Multiventing and Vent Terminations section for proper vent configurations.

2. When locating combustion-air and vent terminations, consideration must be given to prevailing winds, location, and other conditions which may cause recirculation of the appliance's own flue products or the flue products of adjacent vents. Recirculation can cause poor combustion; inlet condensate problems, and accelerated corrosion of heat exchangers.

NOTE: Select 1 vent pipe connection and 1 combustion-air pipe connection.

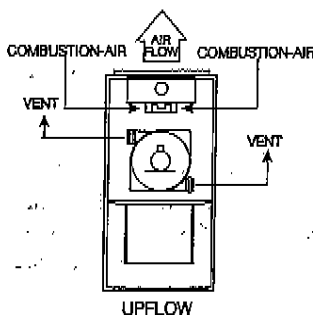

NOTE: Select 1 vent pipe connection and 1 combustion-air pipe connection.

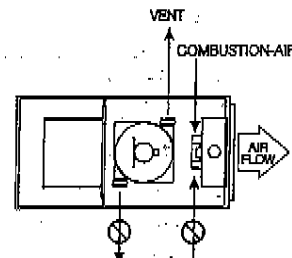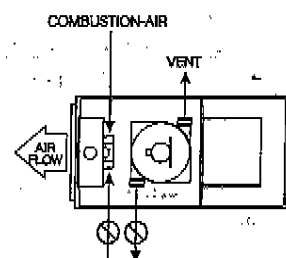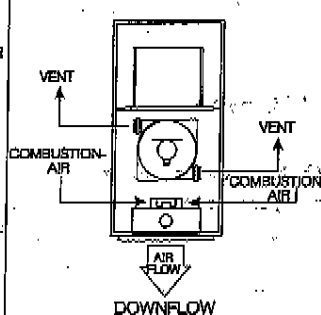

HORIZONTAL-LEFT DISCHARGE

HORIZONTAL-RIGHT DISCHARGE

A93083

Fig. 28—Combustion-Air and Vent Pipe Connections

WARNING: Solvent cements are combustible. Keep away from heat, sparks, and open flame. Use only in well-ventilated areas. Avoid breathing in vapor or allowing contact with skin or eyes. Failure to follow this warning could result in fire, property damage, personal injury, or death.

WARNING: All combustion-air and vent pipes must be airtight and watertight. Pipes must also terminate exactly as shown in Fig. 31, 32, 33, 34, or 35. Failure to follow this warning could result in property damage, personal injury, or death.

NOTE: The minimum combustion-air and vent pipe length (each) for these furnaces is 5 ft. Short pipe lengths (5-8 ft) may discharge water droplets. These droplets may be undesirable, and a 12-in. minimum horizontal pipe section is recommended, as shown in Fig. 29, to reduce excessive droplets from exiting vent pipe outlet.

B. Combustion-Air and Vent Pipe Diameter

Determine combustion-air and vent pipe diameter.

1. Using Table 5, determine preliminary combustion-air pipe diameter.
2. Using Table 5, determine preliminary vent pipe diameter.
3. Use largest diameter pipe determined in 1. and 2. above for both pipes.

NOTE: Do not count elbows or pipe sections in terminations or within furnace. See shaded areas in Fig. 31, 32, 33, 34, and 35.


EXAMPLE:

An 036080 size furnace located in Indianapolis, elevation 650 ft above sea level, could be installed in an application requiring 3 elbows and 32 ft of vent pipe, along with 5 elbows and 34 ft of combustion-air pipe. Table 5 indicates this application would allow a 2-in. diameter vent pipe, but require a 2-1/2 in. diameter combustion air pipe (2-in. pipe is good for 35 ft with 3 elbows, but only 30 ft with 5 elbows). Therefore, 2-1/2 in. diameter pipe must be used for both vent and combustion-air pipes since larger required diameter must always be used for both pipes. If same installation were in Albuquerque, elevation 5250 ft above sea level, installation would require 2-1/2 in. vent pipe and combustion-air pipe. At 5001- to 6000-ft elevation, 2-in. pipe is only good for 17 ft with 5 elbows, and 2-1/2 in. pipe is good for 70 ft with 5 elbows.

C. Combustion-Air and Vent Pipe Attachment

NOTE: All pipe joints must be watertight except attachment of combustion-air pipe to inlet housing connection, since it may be necessary to remove pipe for servicing.

1. Attach combustion-air pipe as follows:
 - a. Determine location of combustion-air intake pipe connection to combustion-air intake housing as shown in Fig. 28 for application.
 - b. Reposition combustion-air intake housing plug fitting in appropriate unused intake housing connection.
 - c. Insert perforated disk assembly (factory supplied in loose parts bag) in intake housing where combustion-air intake pipe will be connected.
 - d. Install pipe support (factory supplied in loose parts bag) into selected furnace casing combustion-air pipe hole. Pipe support should be positioned at bottom of casing hole.
 - e. Insert 2-in. diameter pipe into intake housing.

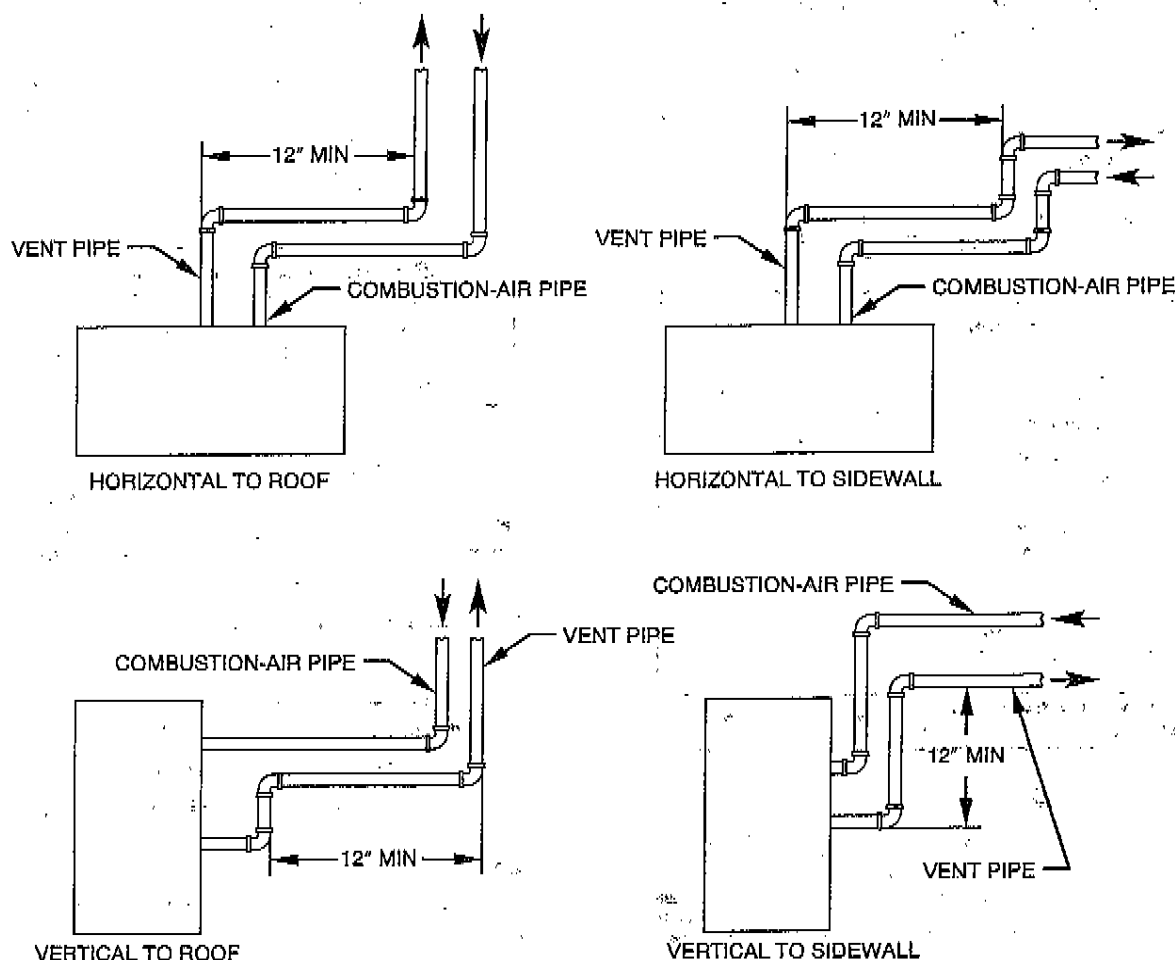

NOTE: A 12-in. minimum horizontal pipe section is recommended with short (5 to 8 ft) vent systems. This recommendation is to reduce excessive condensate droplets from exiting the vent pipe.

A93591

Fig. 29—Short Vent (5 to 8 Ft) System.

NOTE: A 2-in. diameter pipe must be used within the furnace casing. Make all pipe diameter transitions outside furnace casing.

- f. Drill a 1/8-in. hole in 2-in. combustion-air pipe using hole in intake housing as a guide.
- g. Install a field-supplied No. 6 or No. 8 sheet metal screw into combustion-air pipe.

NOTE: DO NOT OVERTIGHTEN SCREW. Breakage to intake housing or fitting may cause air leakage to occur.

NOTE: Do not attach combustion-air intake pipe permanently to combustion-air intake housing since it may be necessary to remove pipe for service of ignitor or flame sensor.

COMBUSTION-AIR INTAKE HOUSING PLUG FITTING

The combustion-air intake plug fitting must be installed in unused combustion-air intake housing. This fitting must be attached by using RTV sealant, or by drilling a 1/8-in. hole in fitting, using hole in intake housing as a guide. Install a field-supplied No. 6 or No. 8 sheet metal screw.

NOTE: DO NOT OVERTIGHTEN SCREW. Breakage to intake housing or fitting may cause air leakage to occur.

A plugged drain connection has been provided on this fitting for use when moisture is found in combustion-air intake pipe and combustion box.

NOTE: Moisture in combustion-air intake may be result of improper termination. Ensure combustion-air intake pipe is similar to that shown in Fig. 31, 32, 33, 34, or 35 so it will not be susceptible to areas where light snow or other sources of moisture could be pulled in.

If use of this drain connection is desired, drill out fitting's tap plug with a 3/16-in. drill and connect a field-supplied 3/8-in. tube. This tube should be routed to open condensate drain for furnace and A/C (if used), and should be trapped. (See Fig. 30.)

2. Attach vent pipe as follows:

- a. Determine location of vent pipe connection to inducer housing as shown in Fig. 28 for application.
- b. Reposition neoprene inducer housing outlet cap and clamp to appropriate unused inducer housing connection. Tighten clamp.



WARNING: Inducer housing outlet cap must be installed and fully seated against inducer housing. Clamp must be tightened to prevent any condensate leakage. Failure to follow this warning could result in electrical shock, fire, personal injury, or death.

TABLE 5—MAXIMUM ALLOWABLE PIPE LENGTH (FT)

ALTITUDE	UNIT SIZE	TERMINATION TYPE	PIPE DIAMETER (IN.)*	NUMBER OF 90° ELBOWS					
				1	2	3	4	5	6
0 to 2000	024040 036040	2 Pipe or 2-In. Concentric	1	5	NA	NA	NA	NA	NA
			1-1/2	70	70	65	60	60	55
			2	70	70	70	70	70	70
	036060 048060	2 Pipe or 2-In. Concentric	1-1/2	20	15	10	5	NA	NA
			2	70	70	70	70	70	70
	036080 048080 060080	2 Pipe or 2-In. Concentric	1-1/2	10	NA	NA	NA	NA	NA
			2	55	50	35	30	30	20
			2-1/2	70	70	70	70	70	70
	048100 060100	2 Pipe or 3-In. Concentric	2	5	NA	NA	NA	NA	NA
			2-1/2	40	30	20	20	10	NA
			3	70	70	70	70	70	70
	060120	2 Pipe or 3-In. Concentric	2-1/2 one disk	10	NA	NA	NA	NA	NA
			3 one disk	35	30	15	NA	NA	NA
			3† one disk	35	35	35	30	30	30
			3† no disk	70	70	70	70	70	70
2001 to 3000	024040 036040	2 Pipe or 2-In. Concentric	1-1/2	67	62	57	52	52	47
			2	70	70	70	70	70	70
	036060 048060	2 Pipe or 2-In. Concentric	1-1/2	17	12	7	NA	NA	NA
			2	70	67	66	61	61	61
	036080 048080 060080	2 Pipe or 2-In. Concentric	2	49	44	30	25	25	15
			2-1/2	70	70	70	70	70	70
	048100 060100	2 Pipe or 3-In. Concentric	2-1/2	35	26	16	16	6	NA
			3	70	70	70	70	66	61
	060120	2 Pipe or 3-In. Concentric	3 one disk	31	26	12	NA	NA	NA
			3† one disk	31	30	30	25	25	24
			3† no disk	63	62	62	61	61	61
3001 to 4000	024040 036040	2 Pipe or 2-In. Concentric	1-1/2	64	59	54	49	48	43
			2	70	70	70	70	70	70
	036060 048060	2 Pipe or 2-In. Concentric	1-1/2	16	11	6	NA	NA	NA
			2	68	63	62	57	57	56
	036080 048080 060080	2 Pipe or 2-In. Concentric	2	46	41	28	23	22	13
			2-1/2	70	70	70	70	70	70
	048100 060100	2 Pipe or 3-In. Concentric	2-1/2	33	24	15	14	5	NA
			3	70	70	70	66	61	56
	060120	2 Pipe or 3-In. Concentric	3 one disk	29	24	10	NA	NA	NA
			3† one disk	29	28	28	23	22	21
			3† no disk	59	59	58	57	57	56
4001 to 5000†	024040 036040	2 Pipe or 2-In. Concentric	1-1/2	60	55	50	45	44	39
			2	70	70	70	70	70	70
	036060 048060	2 Pipe or 2-In. Concentric	1-1/2	15	10	5	NA	NA	NA
			2	64	59	58	53	52	52
	036080 048080 060080	2 Pipe or 2-In. Concentric	2	44	39	26	21	20	11
			2-1/2	70	70	70	70	70	70
	048100 060100	2 Pipe or 3-In. Concentric	2-1/2	31	22	13	12	NA	NA
			3	70	70	67	62	57	52
	060120	2 Pipe or 3-In. Concentric	3† one disk	27	26	26	21	20	19
			3† no disk	56	55	54	53	52	52
5001 to 6000†	024040 036040	2 Pipe or 2-In. Concentric	1-1/2	57	52	47	42	40	35
			2	70	70	70	70	70	70
	036060 048060	2 Pipe or 2-In. Concentric	1-1/2	14	9	NA	NA	NA	NA
			2	60	55	54	49	48	47
	036080 048080 060080	2 Pipe or 2-In. Concentric	2	41	36	23	18	17	8
			2-1/2	70	70	70	70	70	70
	048100 060100	2 Pipe or 3-In. Concentric	2-1/2	29	21	12	11	NA	NA
			3	70	67	62	57	52	47
	060120	2 Pipe or 3-In. Concentric	3† one disk	26	24	23	18	17	16
			3† no disk	53	52	50	49	48	47

ALTITUDE	UNIT SIZE	TERMINATION TYPE	PIPE DIAMETER (IN.)*	NUMBER OF 90° ELBOWS					
				1	2	3	4	5	6
6001 to 7000†	024040 036040	2 Pipe or 2-In. Concentric	1-1/2	53	48	43	38	37	32
			2	70	70	68	67	66	64
	036060 048060	2 Pipe or 2-In. Concentric	1-1/2	13	8	NA	NA	NA	NA
			2	57	52	50	45	44	43
	036080 048080 060080	2 Pipe or 2-In. Concentric	2	38	33	21	16	15	6
			2-1/2	70	70	68	67	66	64
	048100 060100	2 Pipe or 3-In. Concentric	2-1/2	27	19	10	9	NA	NA
			3	68	63	58	53	48	43
	060120	2 Pipe or 3-In. Concentric	3† one disk	24	22	21	16	15	13
			3† no disk	49	48	47	45	44	43
7001 to 8000†	024040 036040	2 Pipe or 2-In. Concentric	1-1/2	49	44	39	34	33	28
			2	66	65	63	62	60	59
	036060 048060	2 Pipe or 2-In. Concentric	1-1/2	12	7	NA	NA	NA	NA
			2	53	48	46	41	40	38
	036080 048080 060080	2 Pipe or 2-In. Concentric	2	36	31	19	14	12	NA
			2-1/2	66	65	63	62	60	59
	048100 060100	2 Pipe or 3-In. Concentric	2-1/2	25	17	8	7	NA	NA
			3	63	58	53	48	43	38
	060120	2 Pipe or 3-In. Concentric	3† one disk	22	20	19	14	12	11
			3† no disk	46	44	43	41	40	38
8001 to 9000†	024040 036040	2 Pipe or 2-In. Concentric	1-1/2	46	41	36	31	29	24
			2	62	60	58	56	55	53
	036060 048060	2 Pipe or 2-In. Concentric	1-1/2	11	6	NA	NA	NA	NA
			2	49	44	42	37	35	34
	036080 048080 060080	2 Pipe or 2-In. Concentric	2	33	28	17	12	10	NA
			2-1/2	62	60	58	56	55	53
	048100 060100	2 Pipe or 3-In. Concentric	2-1/2	23	15	7	5	NA	NA
			3	59	54	49	44	39	34
	060120	2 Pipe or 3-In. Concentric	3† one disk	20	18	17	12	10	8
			3† no disk	43	41	39	37	35	34
9001 to 10,000†	024040 036040	2 Pipe or 2-In. Concentric	1-1/2	42	37	32	27	25	20
			2	57	55	53	51	49	47
	036060 048060	2 Pipe or 2-In. Concentric	2	45	40	38	33	31	29
	036080 048080 060080	2 Pipe or 2-In. Concentric	2	30	25	14	9	7	NA
			2-1/2	57	55	53	51	49	47
	048100 060100	2 Pipe or 3-In. Concentric	2-1/2	21	13	5	NA	NA	NA
			3	54	49	44	39	34	29
	060120	2 Pipe or 3-In. Concentric	3† one disk	18	16	14	9	7	5
			3† no disk	39	37	35	33	31	29

* Disk usage—Unless otherwise specified, use perforated disk assembly (factory supplied in loose parts bag). If stated, unsnap 1/2 perforated disk assembly and use shouldered disk half or no disk assembly.

† Wide radius elbow.

‡ Vent sizing for Canadian installations over 4500 ft (1370 m) above sea level are subject to acceptance by the local authorities having jurisdiction.

NA—Not Allowed; pressure switch will not make.

NOTES:

1. Do not use pipe size greater than those specified in table or incomplete combustion, flame disturbance, or flame sense lockout may occur.
2. Size both the combustion-air and vent pipe independently, then use the larger diameter for both pipes.
3. Assume two 45° elbows equal one 90° elbow. Long radius elbows are desirable and may be required in some cases.
4. Elbows and pipe sections within the furnace casing and at the vent termination should not be included in vent length or elbow count.
5. The minimum pipe length is 6 ft for all applications.

- c. Install pipe support (factory supplied in loose parts bag) into selected furnace casing vent pipe hole. Pipe support should be positioned at bottom of casing hole.
- d. Insert 2-in. diameter pipe into inducer housing through neoprene coupling and clamp in inducer housing. Tighten clamp.

WARNING: Vent pipe must be installed and fully seated against inducer housing. Clamp must be tightened to prevent any condensate leakage. Failure to follow this warning could result in electrical shock, fire, personal injury, or death.

NOTE: A 2-in. diameter pipe must be used within the furnace casing. Make all pipe diameter transitions outside furnace casing.

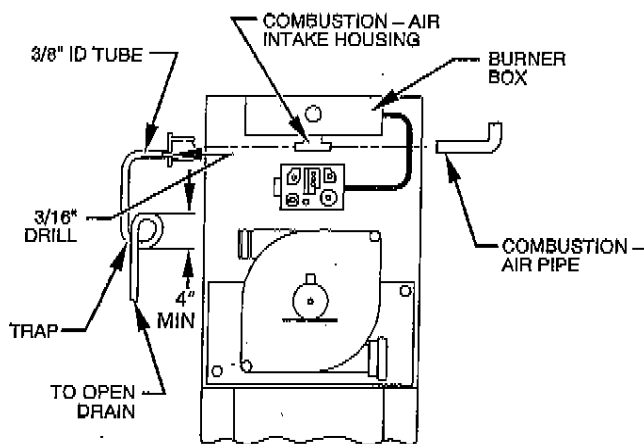


Fig. 30—Intake Housing Plug Fitting Drain A93035
VENT EXTENSION PIPE

Some furnaces are supplied with a PVC vent extension pipe (2-in. diameter by 12-in. long). This pipe has a built-in channel to assist vent condensate disposal. When this vent extension pipe is supplied, it must be used to connect the field vent pipe to furnace inducer housing on ALL upflow and downflow applications.

NOTE: See label on vent extension pipe for proper installation. This pipe may be shortened if an elbow is used to connect vent extension tube to field-installed vent pipe.

3. Working from furnace to outside, cut pipe to required length(s).
4. Deburr inside and outside of pipe.
5. Chamfer outside edge of pipe for better distribution of primer and cement.
6. Clean and dry all surfaces to be joined.
7. Check dry fit of pipe and mark insertion depth on pipe.

NOTE: It is recommended that all pipes be cut, prepared, and preassembled before permanently cementing any joint.

8. After pipes have been cut and preassembled, apply generous layer of cement primer to pipe fitting socket and end of pipe to insertion mark. Quickly apply approved cement to end of pipe and fitting socket (over primer). Apply cement in a light, uniform coat on inside of socket to prevent buildup of excess cement. Apply second coat.
9. While cement is still wet, twist pipe into socket with 1/4 turn. Be sure pipe is fully inserted into fitting socket.
10. Wipe excess cement from joint. A continuous bead of cement will be visible around perimeter of a properly made joint.
11. Handle pipe joints carefully until cement sets.
12. Support combustion-air and vent piping a minimum of every 5 ft (3 ft for SDR-21 or -26 PVC) using perforated metal hanging strap.
13. Slope combustion-air and vent pipes toward furnace a minimum of 1/4 in. per linear ft. with no sags between hangers.
14. Use appropriate methods to seal openings where vent and combustion-air pipes pass through roof or side wall.

III. CONCENTRIC VENT AND COMBUSTION-AIR TERMINATION KIT INSTALLATION

NOTE: If these instructions differ from those packaged with termination kit, follow kit instructions.

Combustion-air and vent pipes must terminate outside structure. A factory accessory termination kit must be installed in 1 of the installations shown in Fig. 31, 32, 33, 34, or 35. Four termination kits are available.

1. The 2-in. termination bracket kit is for 1-in., 1-1/2 in., and 2-in. diameter 2-pipe termination systems.
2. The 3-in. termination bracket kit is for 2-1/2 in. and 3-in. diameter 2-pipe termination systems.
3. The 2-in. concentric vent/air termination kit is for 1-in., 1-1/2 in., 2-in., and 2-1/2 in. diameter pipe systems when single penetration of wall or roof is desired.
4. The 3-in. concentric vent/air termination kit is for 2-1/2 in. and 3-in. diameter pipe systems when single penetration of wall or roof is desired.

NOTE: Shaded parts in Fig. 31, 32, 33, 34, and 35 are considered to be termination. These components should NOT be counted when determining pipe diameter. Roof termination is preferred since it is less susceptible to damage, has reduced chances to intake contaminants, and has less visible vent vapors. (See Fig. 31 or 32.) Sidewall termination may require sealing or shielding of building surfaces with a corrosive resistance material due to corrosive combustion-products of vent system.

A. Extended Exposed Sidewall Pipes

Sidewall combustion-air and vent pipe terminations may be extended beyond area shown in Fig. 34 or 35 in outside ambient by insulating pipes as indicated in Table 6.

1. Determine combustion-air and vent pipe diameters, as stated above, using total pipe length and number of elbows.
2. Using winter design temperature (used in load calculations), find appropriate temperature for your application and furnace model.
3. Determine required insulation thickness for exposed pipe lengths.

NOTE: Pipe length (ft) specified for maximum pipe lengths located in unconditioned spaces cannot exceed total allowable pipe length as specified in Table 5.

B. Two-Pipe Termination Kit

1. Determine location for termination.

Consideration of the following should be made when determining an appropriate location for termination kit.

- a. Comply with all clearance requirements as stated in Table 4.
 - b. Termination kit should be positioned where vent vapors will not damage plants/shrubs or air conditioning equipment.
 - c. Termination kit should be positioned so that it will not be affected by wind eddy (such as inside building corners) or allow recirculation of flue gases, airborne leaves, or light snow.
 - d. Termination kit should be positioned where it will not be damaged by or subjected to foreign objects, such as stones, balls, etc.
 - e. Termination kit should be positioned where vent vapors are not objectionable.
2. Cut 2 holes, 1 for each pipe, of appropriate size for pipe size being used.
 3. Loosely install elbow in bracket and place assembly on combustion-air pipe.

Roof terminations—Loosely install pipe coupling on properly cut vent pipe. Coupling must be positioned so bracket will mount as shown in Fig. 31.

For applications using combustion-air pipe option, indicated by dashed lines in Fig. 31, install 90° street elbow into 90° elbow, making U-fitting. A 180° U-fitting may be used.

TABLE 6—MAXIMUM ALLOWABLE EXPOSED VENT PIPE LENGTH (FT) WITH INSULATION IN WINTER DESIGN TEMPERATURE AMBIENT*

UNIT SIZE	WINTER DESIGN TEMPERATURE (°F)	MAX PIPE DIAMETER	INSULATION THICKNESS (IN.)†				
			0	3/8	1/2	3/4	1
040	20	1-1/2	31	56	63	70	70
	0	1-1/2	16	34	39	47	54
	-20	1-1/2	9	23	27	34	39
060	20	2	45	70	70	70	70
	0	2	25	51	58	70	70
	-20	2	16	36	42	51	60
080	20	2-1/2	55	70	70	70	70
	0	2-1/2	31	61	69	70	70
	-20	2-1/2	20	43	49	61	70
100	20	3	61	70	70	70	70
	0	3	33	65	70	70	70
	-20	3	20	45	52	65	70
120	20	3	70	70	70	70	70
	0	3	40	70	70	70	70
	-20	3	26	55	64	70	70

* Pipe length (ft) specified for maximum pipe lengths located in unconditioned spaces. Pipes located in unconditioned space cannot exceed total allowable pipe length as specified in Table 5.

† Insulation thickness based on R-value of 3.5 per in.

Sidewall terminations—Install bracket as shown in Fig. 34 or 35.

For applications using vent pipe option indicated by dashed lines in Fig. 34, rotate vent elbow 90° from position shown in Fig. 34.

4. Disassemble loose pipe fittings. Clean and cement using same procedures as used for system piping.

5. Check required dimensions as shown in Fig. 31, 34, or 35.

C. Concentric Vent/Air Termination Kit

1. Determine location for termination.

Consideration of the following should be made when determining an appropriate location for termination kit.

a. Comply with all clearance requirements as stated in Table 4.

b. Termination kit should be positioned where vent vapors will not damage plants/shrubs or air conditioning equipment.

c. Termination kit should be positioned so it will not be affected by wind eddy (such as inside building corners) or that may allow recirculation of flue gases, airborne leaves, or light snow.

d. Termination kit should be positioned where it will not be damaged by or subjected to foreign objects, such as stones, balls, etc.

e. Termination kit should be positioned where vent vapors are not objectionable.

2. Cut one 4-in. diameter hole for 2-in. kit, or one 5-in. diameter hole for 3-in. kit.

3. Loosely assemble concentric vent/air termination components together using instructions in kit.

4. Slide assembled kit with rain shield REMOVED through hole.

NOTE: Do not allow insulation or other materials to accumulate inside of pipe assembly when installing it through hole.

Roof terminations—Locate assembly through roof to appropriate height as shown in Fig. 32.

Sidewall terminations—Locate assembly through sidewall with rain shield positioned no more than 1-in. from wall as shown in Fig. 33.

5. Disassemble loose pipe fittings. Clean and cement using same procedures as used for system piping.

6. Check required dimensions as shown in Fig. 32 or 33.

IV. MULTIVENTING AND VENT TERMINATIONS

When 2 or more 340MAV or 350MAV Furnaces are vented near each other, each furnace must be individually vented. NEVER common vent or breach vent 340MAV or 350MAV furnaces. When 2 or more 340MAV or 350MAV furnaces are vented near each other, 2 vent terminations may be installed as shown in Fig. 36, 37, 38, 39, or 40, but next vent termination must be at least 36 in. away from first 2 terminations. It is important that vent terminations be made as shown to avoid recirculation of flue gases. Dimension "A" in Fig. 36, 37, 38, 39, and 40 represents distance between pipes or rain shields, as touching or 2-in. maximum separation.

CONDENSATE DRAIN

I. GENERAL

Condensate trap is shipped installed in the blower shelf and factory connected for UPFLOW applications. Condensate trap must be RELOCATED for use in DOWNFLOW and HORIZONTAL applications.

Condensate trap MUST be used for all applications.

An external trap is not required when connecting the field drain to this condensate trap.

The field drain connection (condensate trap or drain tube coupling) is sized for 1/2-in. CPVC, 1/2-in. PVC, or 5/8-in. ID tube connection.

Drain pipe and fittings must conform to ANSI standards and ASTM D1785 or D2846. CPVC or PVC cement and primer must conform to ASTM D2564 or F493. In Canada, use CSA or ULC certified schedule 40 CPVC or PVC drain pipe, fittings, and cement.

When a condensate pump is required, select a pump which is approved for condensing furnace applications. To avoid condensate spillage, select a pump with an overflow switch.

II. APPLICATION

The furnace, A/C, and humidifier drains may be combined and drained together. The A/C drain must have an external, field-supplied trap prior to the furnace drain connection. All drain connections (furnace, A/C, or humidifier) must be terminated into an open or vented drain as close to the respective equipment as possible to prevent siphoning of the equipment's drain.

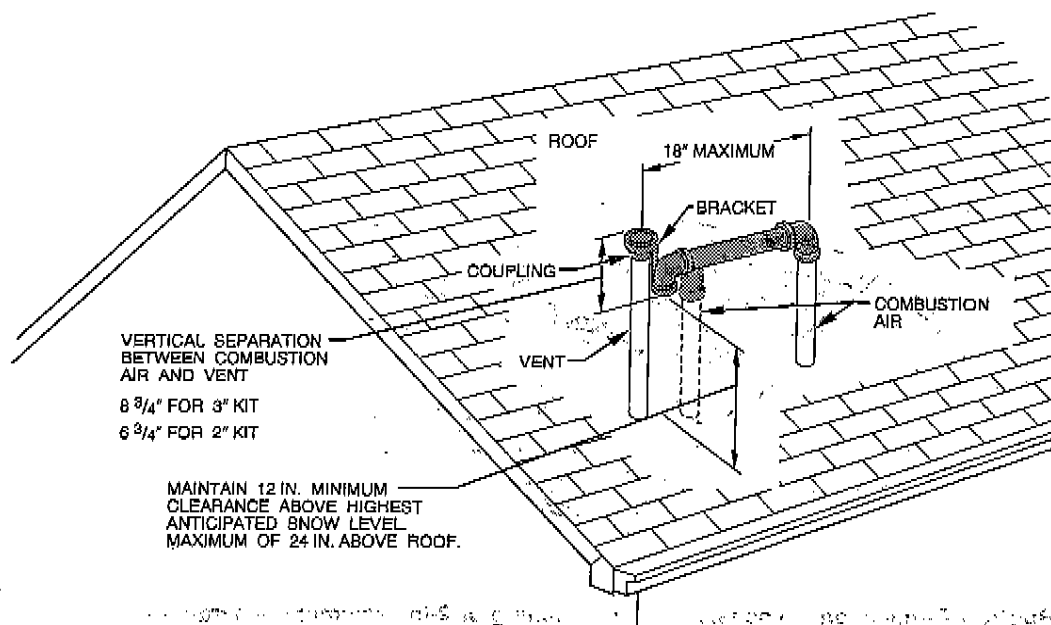


Fig. 31—Roof Termination (Preferred)

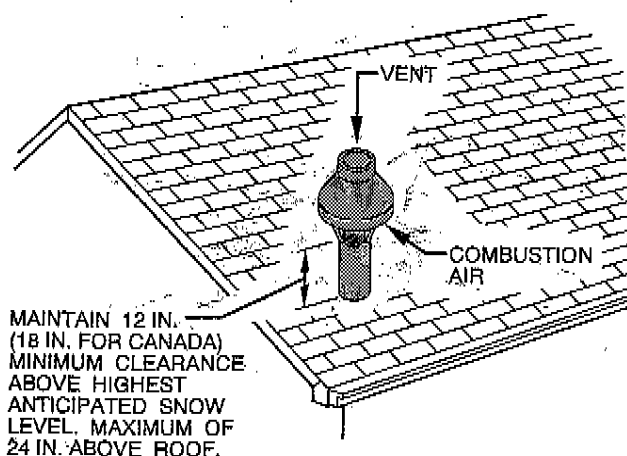


Fig. 32—Concentric Vent and Combustion-Air Roof Termination (Preferred)

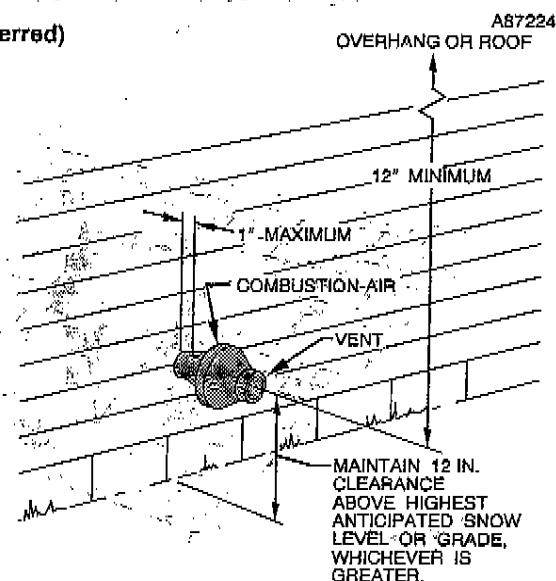


Fig. 33—Concentric Vent and Combustion-Air Side Termination

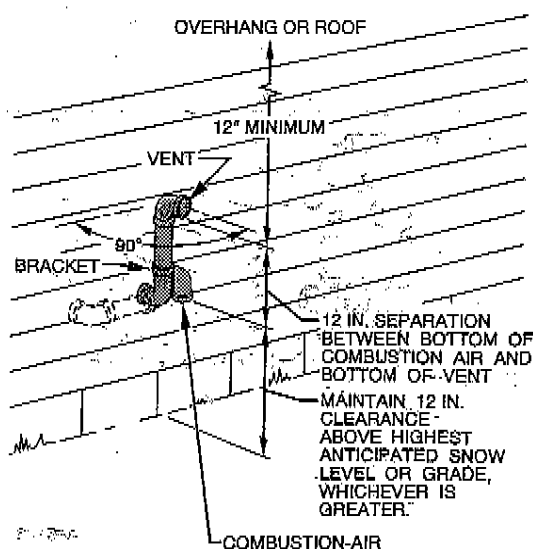


Fig. 34—Sidewall Termination of 12 in. or More



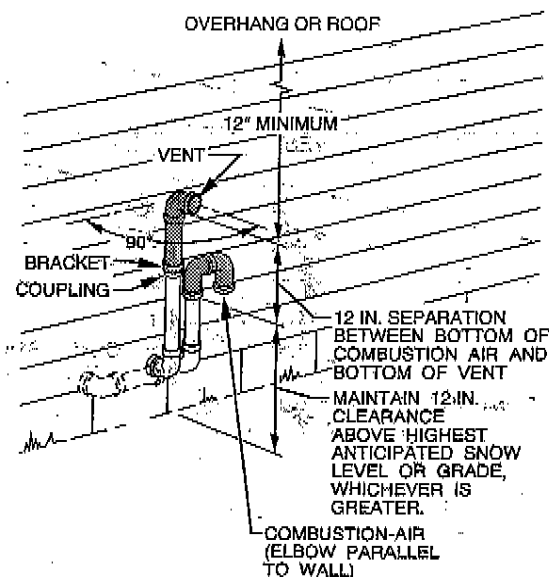


Fig. 35—Sidewall Termination of Less than 12 in.

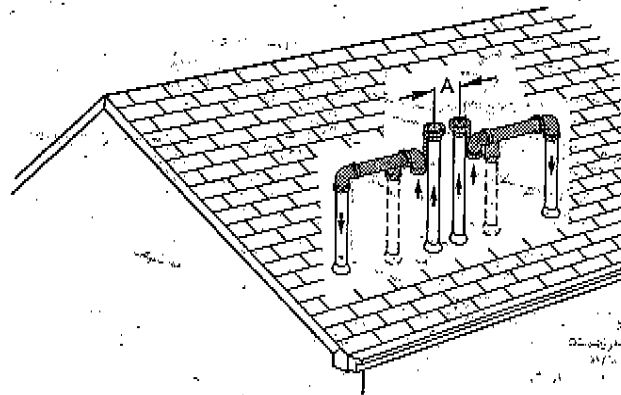


A85182

Fig. 36—Rooftop Termination (Dimension "A" Is Touching or 2-In. Maximum Separation)

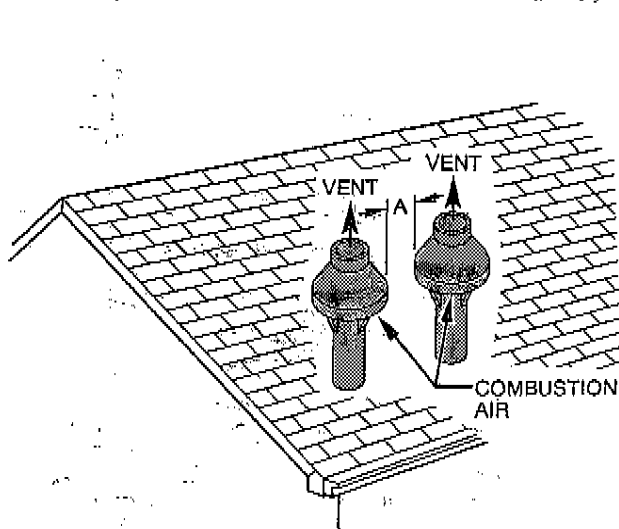


A93056

Fig. 37—Concentric Vent and Combustion-Air Roof Termination (Dimension "A" Is Touching or 2-In. Maximum Separation)

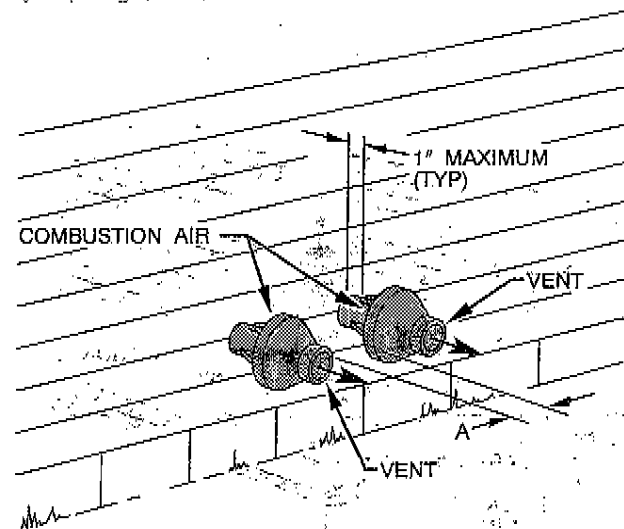


A93057

Fig. 38—Concentric Vent and Combustion-Air Side Termination (Dimension "A" Is Touching or 2-In. Maximum Separation)

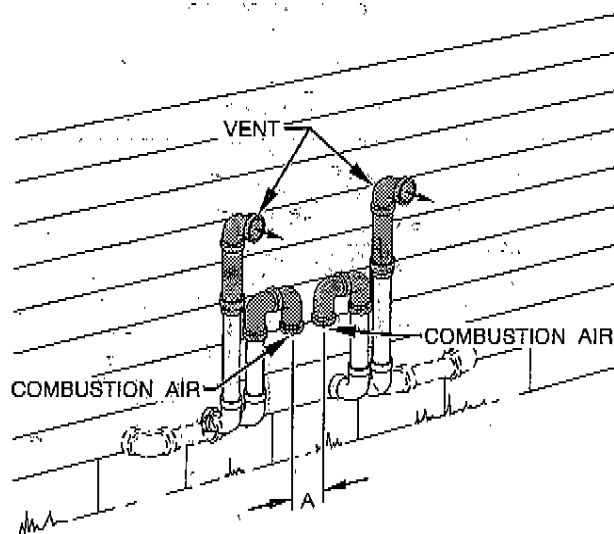


A85184

Fig. 39—Sidewall Termination of 12 in. or Less (Dimension "A" Is Touching or 2-In. Maximum Separation)

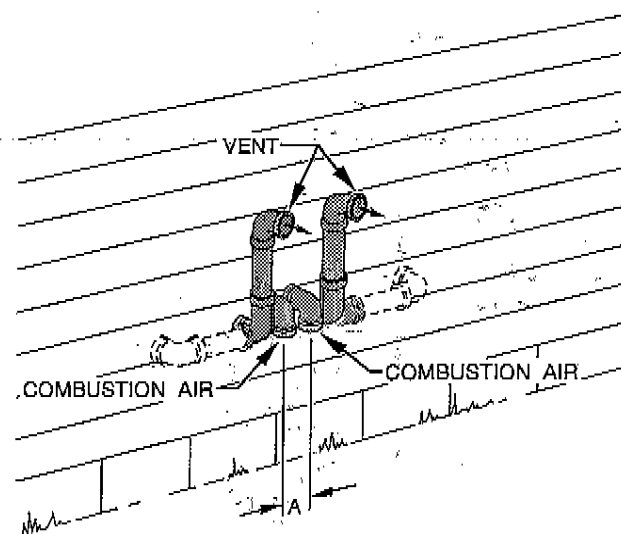

A85183


Fig. 40—Sidewall Termination of More Than 12 in. (Dimension "A" Is Touching or 2-In. Maximum Separation)

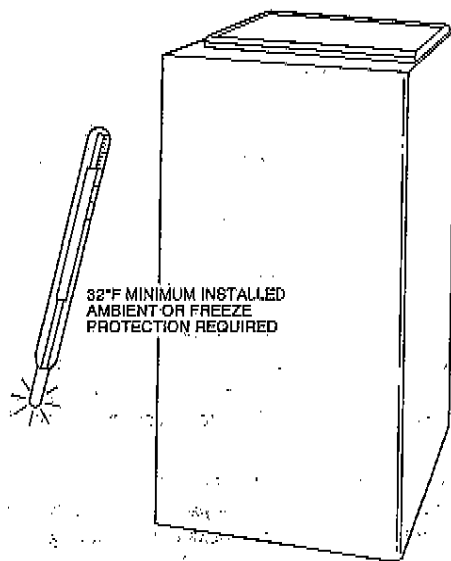

A93058

CAUTION: Unit must not be installed, operated, and then turned off and left in an unoccupied structure during cold weather when temperature drops to 32°F and below unless drain trap and drain line have adequate freeze protection. See Service and Maintenance Instructions for winterizing procedure.

See Fig. 41 for example of possible field drain attachment using 1/2-in. CPVC or PVC tee for vent and A/C or humidifier drain connection.

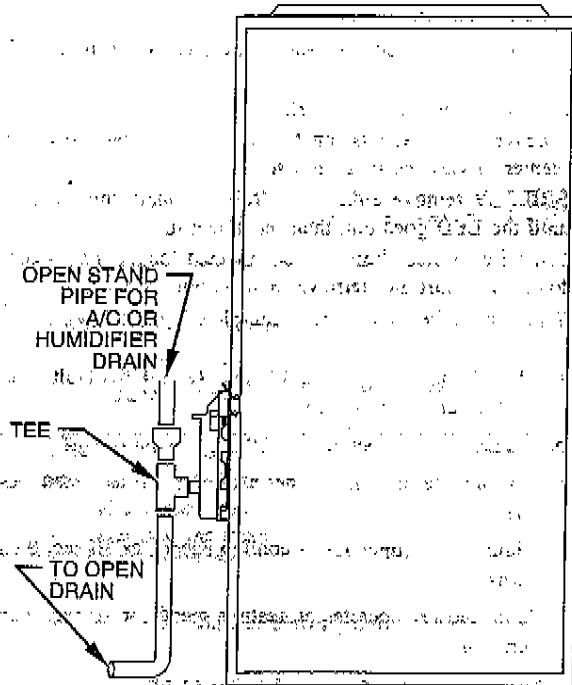

A94054

Fig. 41—Example of Field Drain Attachment


Outdoor draining of the furnace is permissible if allowed by local codes. Caution should be taken when freezing ambient may freeze drain pipe and prohibit draining.

WARNING: Caution should be taken to prevent draining where slippery conditions may cause personal injuries. Excessive condensate draining may cause saturated soil conditions which may result in damage to plants.

III. CONDENSATE DRAIN PROTECTION

Freezing condensate left in condensate trap and drain line may cause cracks, and possible water damage may occur. If freeze protection is required, use condensate freeze protection accessory or equivalent 9 to 6 watt per ft at 120v and 40°F self-regulating, shielded, and waterproof heat tape. See Installation Instructions supplied with accessory or heat tape manufacturer's recommendations.

1. Fold heat tape in half and wrap on itself 3 times.
2. Locate heat tape between sides of condensate trap back. (See Fig. 42.)
3. Use wire ties to secure heat tape in place. Wire ties can be positioned in notches of condensate trap sides. (See Fig. 42.)
4. Wrap field drain pipe with remaining heat tape, approximately 1 wrap per ft.
5. When using field-supplied heat tape, follow heat tape manufacturer's instructions for all other installation guidelines.

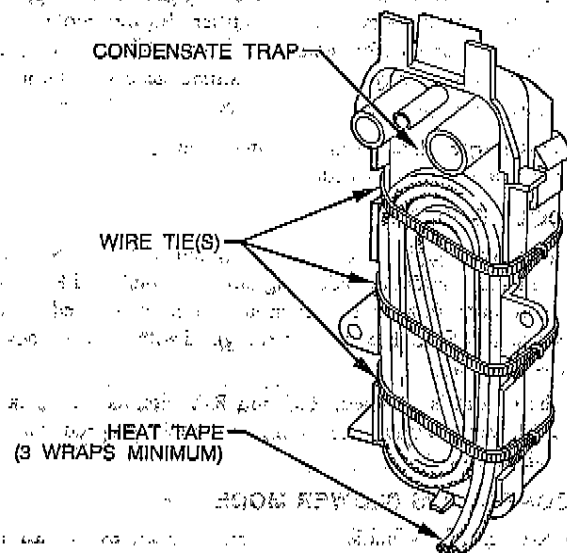

A93036

**Fig. 42—Condensate Trap Heat Tape
SEQUENCE OF OPERATION**

CAUTION: Furnace control must be grounded for proper operation, or control will lockout. Control is grounded through green wire routed to gas valve and burner box screw.

Using schematic diagram, follow sequence of operation through different modes. (See Fig. 24.) This furnace has a new control system. Read and follow wiring diagram carefully.

NOTE: If 115-v power supply to furnace or 24-v blower access panel switch is interrupted during a call for heat, blower operates for 90 sec when power is restored before heating cycle is resumed.

I. HEATING MODE

When wall thermostat "calls for heat," R-W circuit closes. Furnace control performs a self-check, verifies pressure switch contacts are open, and starts inducer motor.

1. **Prepurge period**—As inducer motor comes up to speed, pressure switch contacts close to begin a 15-sec prepurge period.
2. **Ignitor warm up**—At end of prepurge period, ignitor is energized for a 17-sec ignitor warm-up period.
3. **Ignition sequence**—When ignitor warm-up period is completed, gas valve opens, permitting gas flow to burners where it is ignited. After 5 sec, ignitor is de-energized and a 2-sec flame-sensing period begins.

HUM terminal on control center is energized with gas valve. See Accessories — Humidifier section.

4. **Flame sensing**—When burner flame is sensed, control begins blower on delay period and continues holding gas valve open.

If burner flame is not sensed, control center de-energizes gas valve and ignition sequence is repeated.

NOTE: Ignition sequence repeats 3 additional times before a lockout occurs. Lockout automatically resets after 3 hr or can be manually reset by turning off 115v (not at thermostat) for 3 sec minimum, then turning it on again.

5. **Blower on delay**—Sixty sec after burner flame is proven, blower motor is energized on heating speed. Simultaneously, electronic air cleaner terminal EAC-1 is energized.
6. **Blower off delay**—When thermostat is satisfied, circuit between R-W is opened, de-energizing gas valve (stopping gas flow to burners) and humidifier. Blower motor and electronic air cleaner remains energized 90, 135, 180, or 225-sec (depending on blower off time selection). Furnace is factory shipped set for a 135-sec blower off delay.

7. **Post purge**—Inducer motor remains energized 15 sec after burners are extinguished.

II. COOLING MODE

When thermostat "calls for cooling," R-G and R-Y circuits close. R-Y circuit starts outdoor condensing unit, and combined R-Y and R-G circuit starts furnace blower motor on cooling speed. Electronic air cleaner EAC-1 terminal is energized with 115v whenever blower is operating.

When thermostat is satisfied, R-G and R-Y circuits are opened, furnace blower continues operating on cooling speed for an additional 90 sec.

III. CONTINUOUS BLOWER MODE

When R-G circuit is made, blower motor operates on heating speed.

NOTE: Electronic air cleaner EAC-1 terminal is energized with 115v whenever blower is operating.

If a "call for heat" (R-W) occurs while thermostat is in continuous blower mode, blower stops to allow furnace heat exchangers to heat up more quickly, then restarts at end of blower on delay period of 60 sec.

Blower reverts to continuous operation after heating cycle is completed.

If a "call for cooling" (R-Y) occurs while thermostat is in continuous blower mode, blower changes from continuous blower speed (heating speed) to cooling speed.

When thermostat cooling call is satisfied, R-Y opens and blower operates an additional 90 sec at cooling speed before reverting back to continuous operation (heating speed).

IV. HEAT PUMP MODE

When installed with a heat pump, furnace control automatically changes blower on delay timing sequence to avoid no blower operation time during demand defrost cycles. When R-W and R-Y

or R-W, R-Y, and R-G thermostat inputs are received at the same time at furnace control center, control starts blower in heating speed. Then a gas heat mode begins. Blower remains operating at heating speed for 15 sec or until end of prepurge period, then blower shuts off until end of ignitor warm up and trial for ignition periods (a total of 24 sec). Blower restarts at heating speed.

When R-W thermostat call disappears, control completes inducer post-purge period (15 sec) and changes to cooling speed after a 2-sec delay.

If R-W, R-Y, and R-G thermostat signals should disappear simultaneously, blower remains on for selected heating blower off delay period (90, 135, 180, or 225 sec), and the inducer goes through 15 sec post-purge period. If R-W and R-Y thermostat signals should disappear, leaving R-G thermostat signal, blower remains on in heating speed and inducer remains on for 15 sec to complete post-purge period.

Control initiates a 90-sec blower only on period before starting another heat pump cycle if there is a power interruption. Anytime control senses false flame, control locks out of heating mode. This reaction occurs because control ignores W input due to false flame signal and, as a result, sees only Y input and goes into cooling mode blower off delay. All other control functions remain in standard format.

NOTE: EAC-1 terminal is energized whenever blower operates. HUM terminal is only energized when gas valve is energized.

V. COMPONENT TEST

NOTE: All components are functionally operated except the gas valve.

Component Test can be initiated by one of the following procedures.

A. Removing Main Limit Switch Wire

NOTE: NO thermostat signal may be present at control center and all blower time delay off periods must be completed.

1. Leave 115-v power to furnace turned on.
2. Remove main furnace door.
3. Look into blower access panel sight glass for current LED status.
4. Remove blower access panel.

NOTE: Leave blower access panel installed to maintain power to control center to view current LED status.

5. BRIEFLY remove either wire from the main limit switch until the LED goes out, then reconnect it.

NOTE: If wire to main limit is disconnected longer than 4 sec, main blower will start and retrieval request will be ignored.

6. When above items have been completed, the following will occur:
 - a. LED flashes a fault code 4 times. Record this fault code for further troubleshooting.
 - b. Inducer motor operates for 10 sec, then turns off.
 - c. Hot surface ignitor is energized for 15 sec, then de-energized.
 - d. Main blower operates at cooling speed for 10 sec, then turns off.
 - e. Main blower operates at heating speed for 10 sec, then turns off.

7. After component test is completed and LED is ON continuously indicating the furnace is ready to operate when a signal from the thermostat is received, replace main furnace door.

B. Jumpering Control TEST terminal

1. Remove main furnace door.
2. Remove blower access panel.
3. Manually close blower access panel door switch.

WARNING: Blower access panel door switch opens 24-v power to control center. No component operation can occur. The 115-v power is still present at control center and transformer. Caution must be taken when manually closing this switch for service purposes. Failure to follow this warning could result in personal injury or death.

4. BRIEFLY short (jumper) TEST, 1/4-in. quick-connect terminal on control center (adjacent to the LED diagnostic light) and the Com terminal on thermostat connection block. (See Fig 14.)

NOTE: If TEST to Com terminals are jumpered longer than 2 sec, LED will flash rapidly, and retrieval request will be ignored.

5. Component Test will function as described above.
6. After component test is completed and furnace is operating properly, remove device used to manually close blower access panel door switch, replace blower access panel, and replace main furnace door.

START-UP PROCEDURES

I. GENERAL

1. Furnace must have a 115-v power supply properly connected and grounded. Proper polarity must be maintained for correct operation.

NOTE: Proper polarity must be maintained for 115-v wiring. If polarity is incorrect, control center fault indicator light will flash rapidly and furnace will not operate.

2. Thermostat wire connections at terminals R, W, G, and Y must be made at 24-v terminal block on control center.
3. Natural gas service pressure must not exceed 0.5 psig (14-in. wc), but must be no less than 0.16 psig (4.5-in. wc).
4. Blower access door must be in place to complete 24-v electrical circuit to furnace.

CAUTION: These furnaces are equipped with a manual reset limit switch in burner box. This switch will open if an overheat condition (rollout) occurs in burner enclosure. Correct inadequate combustion-air supply or improper venting condition and reset switch. DO NOT jumper this switch.

Before operating furnace, check each manual reset switch for continuity. If necessary, press button to reset switch.

II. PRIME CONDENSATE TRAP WITH WATER

CAUTION: Condensate trap must be PRIMED or proper draining may not occur. The condensate trap has 2 internal chambers which can ONLY be primed by pouring water into the inducer drain side of condensate trap.

1. Remove upper inducer housing drain connection cap. (See Fig. 43.)
2. Connect field-supplied 1/2-in. ID tube to upper inducer housing drain connection.
3. Insert field-supplied funnel into tube.
4. Pour 1 quart of water into funnel/tube. Water should run through inducer housing, overflow condensate trap, and flow into open field drain. (See Fig. 44.)
5. Remove funnel and tube from inducer housing and replace drain connection cap and clamp.

III. PURGE GAS LINES

If not previously done, purge lines after all connections have been made and check for leaks.

WARNING: Never purge a gas line into a combustion chamber. Never use matches, candles, flame, or other sources of ignition for purpose of checking leakage. Use a soap-and-water solution to check for leakage. Failure to follow this warning could result in fire, explosion, personal injury, or death.

IV. ADJUSTMENTS

A. Set Gas Input Rate

Measured gas input must be within ± 2 percent of gas input on unit rating plate. (0-2000 ft altitude.)

There are 2 methods of adjusting gas input rate. The preferred method is by using Table 7 and following instructions in item 1. The second method is by clocking gas meter as outlined in item 2. Item 2 must be used for altitudes above 2000 ft.

1. Determine natural gas orifice size and manifold pressure for correct input by using Table 7, then adjust manifold pressure per item 3.
 - a. Obtain average yearly heat value for local gas supply.
 - b. Obtain average yearly specific gravity for local gas supply.
 - c. Verify furnace model. Table 7 can only be used for model 340MAV or 350MAV furnaces.
 - d. Find natural-gas heat value and specific gravity in Table 7.
 - e. Follow heat value line and specific gravity line to point of intersection to find orifice size and manifold pressure settings for proper operation and given natural gas condition.

EXAMPLE:

Heating value = 1010 Btu/cu ft

Specific gravity = 0.62

Therefore, Orifice No. 44*

* Manifold pressure 3.3-in. wc

* Furnace is shipped with No. 45-orifices. In this example all main burner orifices must be changed and manifold pressure adjusted.

Check and verify orifice size in furnace. NEVER ASSUME ORIFICE SIZE; ALWAYS CHECK AND VERIFY. Proceed to item 3 to adjust manifold pressure.

2. Determine natural gas input rate by clocking gas meter then adjust manifold pressure per item 3.

NOTE: Be sure all pressure tubing, combustion-air and vent pipes, and burner enclosure front are in place when checking input by clocking gas meter.

- a. Obtain average yearly heat value for local gas supply.

NOTE: Be sure heating value of gas used for calculations is correct for your altitude. Consult local gas utility for altitude adjustments of gas heating value. Turn off all other gas appliances and pilots.

- b. Start furnace and let run for 3 minutes.

- c. Measure time (in sec) for gas meter test dial to complete 1 revolution.

- d. Refer to Table 8 for cubic ft of gas per hr.

- e. Multiply gas rate (cu ft/hr) X heating value (Btu/cu ft). Obtain heating value from local gas utility.

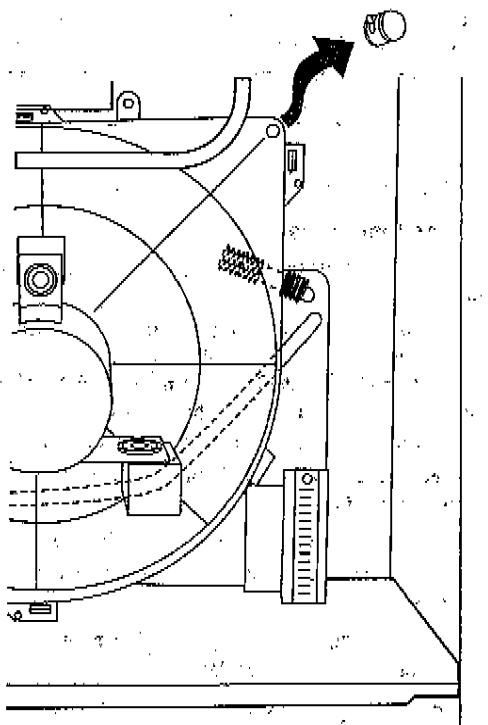


Fig. 43—Inducer Housing Drain Tube.

EXAMPLE:

Btu heating input = Btu/cu ft X cu ft/hr

Heating value of gas = 1010 Btu/cu ft

Time for 1 revolution of 2-cu ft dial = 72 sec

Gas rate = 100 cu ft/hr (from Table 8)

Btu heating input = 100 X 1010 = 101,000 Btu/h

In this example, the orifice size and manifold pressure adjustment is within ± 2 percent of the furnace input rate.

A94208

NOTE: High altitude.—Gas input on rating plate is for altitudes up to 2000 ft. Ratings for altitudes over 2000 ft must be 4 percent less for each 1000 ft above sea level. To obtain altitude adjusted rating, adjust manifold pressure (see item 3) and replace main burner orifices as needed. Refer to NFPA Appendix F, Table F-4 for proper orifice sizing at high altitudes.


NOTE: In Canada installation applications from 2000 to 4500 ft above sea level are derated 10 percent from Conversion Station.

f. Proceed to item 3 to adjust manifold pressure.

3. Adjust gas input.

NOTE: Manifold pressure must always be measured with burner enclosure front REMOVED. Gas meter must always be clocked with burner enclosure front INSTALLED. Gas valve has been nominally set at 3.5-in. wc for natural gas.

- Remove burner enclosure front and cap that conceals adjustment screw for gas valve regulator. (See Fig. 45.)
- Turn adjusting screw either counterclockwise (out) to decrease input rate or clockwise (in) to increase rate. When adjusting input rate, DO NOT set manifold pressure less than 3.2-in. wc or more than 3.8-in. wc for natural gas. Make any major adjustments by changing main burner orifices.

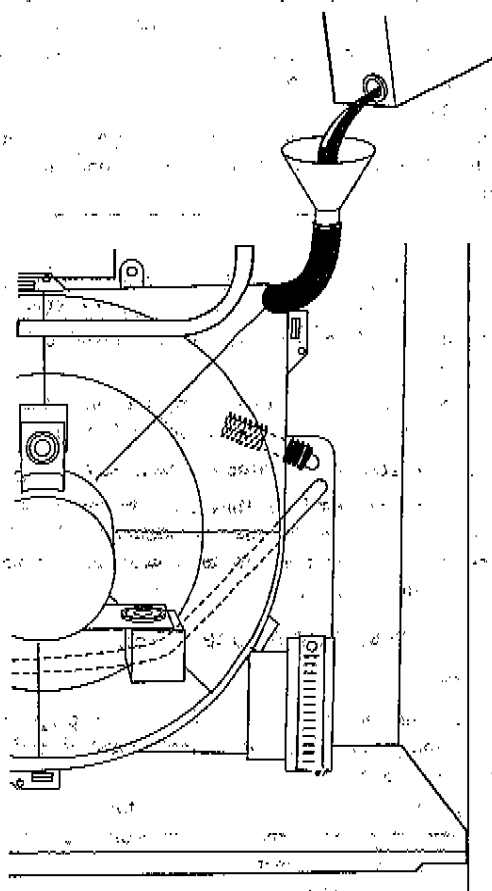

A94209

Fig. 44—Filling Condensate Trap

NOTE: If orifice hole appears damaged or it is suspected to have been redrilled, check orifice hole with a numbered drill bit of correct size. Never redrill an orifice. A burr-free and squarely aligned orifice hole is essential for proper flame characteristics.

- Replace burner enclosure front and measure adjusted gas input rate using method outlined in item 1 or 2.
- Replace cap that conceals gas valve regulator adjustment screw.

CAUTION: Be sure burner enclosure front is in place after adjustments have been made.

- Look through sight glass in burner enclosure and check burner flame. Burner flame should be clear blue, almost transparent. (See Fig. 46.)

B. Set Temperature Rise

CAUTION: Temperature rise must be within limits specified on unit rating plate. Recommended operation is at midpoint of rise or above. Failure to follow this caution may result in condensing or overheating the heat exchangers.

Determine and adjust air temperature rise as follows:

- Place thermometers in return and supply ducts as near furnace as possible. Be sure thermometers do not see heat exchanger so that radiant heat does not affect readings. This practice is particularly important with straight-run ducts.

**TABLE 7—MODEL 340MAV OR 350MAV ORIFICE SIZE AND MANIFOLD PRESSURE FOR CORRECT INPUT RATE
(TABULATED DATA BASED ON ALTITUDE UP TO 2000 FT AND 20,000 BTUH PER BURNER)**

GAS HEAT VALUE (BTU/CU FT)	0.58		0.60		0.62		0.64		0.66		0.68		0.70		0.72	
	Orf No.	Manifd Press	Orf No.	Manifd Press	Orf No.	Manifd Press	Orf No.	Manifd Press	Orf No.	Manifd Press	Orf No.	Manifd Press	Orf No.	Manifd Press	Orf No.	Manifd Press
860	43	3.7	43	3.8	42	3.2	42	3.3	42	3.4	—	—	—	3.3	41	3.4
	—	—	—	—	—	—	—	—	—	—	41	3.2	41	3.7	42	3.8
	—	—	—	—	—	—	—	—	—	—	42	3.6	42	—	—	—
875	43	3.7	43	3.8	42	3.2	42	3.3	42	3.4	—	—	—	3.2	41	3.3
	—	—	—	—	—	—	—	—	—	—	41	3.2	41	3.5	42	3.6
	—	—	—	—	—	—	—	—	—	—	42	3.6	42	—	—	—
890	43	3.5	43	3.6	43	3.7	43	3.8	42	3.2	42	3.3	42	3.4	41	3.2
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	42	3.5
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
905	43	3.3	43	3.5	43	3.6	43	3.7	43	3.8	—	—	—	—	—	—
	44	3.8	—	—	—	—	—	—	—	—	42	3.2	42	3.3	42	3.4
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
920	43	3.2	43	3.3	43	3.5	43	3.6	43	3.7	43	3.8	—	—	—	—
	44	3.7	44	3.8	—	—	—	—	—	—	—	—	42	3.2	42	3.3
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
935	—	—	43	3.2	43	3.3	43	3.5	43	3.6	43	3.7	43	3.8	—	—
	44	3.6	44	3.7	44	3.8	—	—	—	—	—	—	—	—	42	3.2
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
950	—	—	—	—	43	3.2	43	3.3	43	3.4	43	3.6	43	3.7	43	3.8
	44	3.5	44	3.6	44	3.7	44	3.8	—	—	—	—	—	—	—	—
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
965	—	—	—	—	—	—	43	3.2	43	3.3	43	3.4	43	3.5	43	3.6
	44	3.4	44	3.5	44	3.6	44	3.7	44	3.8	—	—	—	—	—	—
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
980	—	—	—	—	—	—	—	—	43	3.7	43	3.3	43	3.4	43	3.5
	44	3.3	44	3.4	44	3.5	44	3.6	44	3.7	44	3.8	—	—	—	—
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
995	—	—	—	—	—	—	—	—	—	—	43	3.2	43	3.3	43	3.4
	44	3.2	44	3.3	44	3.4	44	3.5	44	3.6	44	3.7	44	3.8	—	—
	45	3.8	—	—	—	—	—	—	—	—	—	—	—	—	—	—
1010	—	—	—	—	—	—	—	—	—	—	—	—	43	3.2	43	3.3
	45	3.7	44	3.2	44	3.3	44	3.4	44	3.5	44	3.6	44	3.7	44	3.8
	—	—	45	3.8	—	—	—	—	—	—	—	—	—	—	—	—
1025	—	—	—	—	44	3.2	44	3.4	44	3.5	44	3.6	44	3.7	44	3.8
	45	3.6	45	3.7	—	—	—	—	—	—	—	—	—	—	—	—
	46	3.8	—	—	—	—	—	—	—	—	—	—	—	—	—	—
1040	—	—	—	—	—	—	44	3.2	44	3.3	44	3.4	44	3.5	44	3.6
	45	3.5	45	3.6	45	3.7	—	—	—	—	—	—	—	—	—	—
	46	3.7	46	3.8	—	—	—	—	—	—	—	—	—	—	—	—
1055	—	—	—	—	—	—	—	—	44	3.2	44	3.3	44	3.4	44	3.5
	45	3.4	45	3.5	45	3.6	45	3.8	—	—	—	—	—	—	—	—
	46	3.6	46	3.7	46	3.8	—	—	—	—	—	—	—	—	—	—
1070	—	—	—	—	—	—	—	—	—	—	44	3.2	44	3.3	44	3.4
	45	3.3	45	3.4	45	3.5	45	3.7	45	3.8	—	—	—	—	—	—
	46	3.5	46	3.6	46	3.7	46	3.8	—	—	—	—	—	—	—	—
1085	—	—	—	—	—	—	—	—	—	—	—	—	44	3.2	44	3.3
	45	3.2	45	3.3	45	3.4	45	3.6	45	3.7	45	3.8	—	—	—	—
	46	3.4	46	3.5	46	3.6	46	3.7	—	—	—	—	—	—	—	—
1100	—	—	45	3.2	45	3.4	45	3.5	45	3.6	45	3.7	45	3.8	44	3.2
	46	3.3	46	3.4	46	3.5	46	3.6	46	3.8	—	—	—	—	—	—
	47	3.7	—	—	—	—	—	—	—	—	—	—	—	—	—	—

2. When thermometer readings stabilize, subtract return-air temperature from supply-air temperature to determine air temperature rise.

3. Adjust temperature rise by adjusting blower speed. Increase blower speed to reduce temperature rise. Decrease blower speed to increase temperature rise.

4. To change blower motor speed selections for heating mode, remove blower motor lead from control center HEAT terminal. (See Fig. 25.) Select desired blower motor speed lead from 1 of the other terminals and relocate it to HEAT terminal. See Table 9 for lead color identification. Reconnect original lead on SPARE terminal.

Follow this same procedure for proper selection of COOL speed selection.


C. Adjust Blower Off Delay (Heat Mode)

If desired, the main blower time delay off period may be lengthened or shortened when operating in the heating mode to

WARNING: Disconnect 115-v electrical power before changing speed tap. Failure to follow this warning could result in personal injury.


TABLE 8—GAS RATE (CU FT/HR)

SECONDS FOR 1 REVOLUTION	SIZE OF TEST DIAL			SECONDS FOR 1 REVOLUTION	SIZE OF TEST DIAL		
	1	2	5		1	2	5
cu. ft.	cu. ft.	cu. ft.	cu. ft.	cu. ft.	cu. ft.	cu. ft.	cu. ft.
10	360	720	1800	50	72	144	360
11	327	655	1638	51	71	141	355
12	300	600	1500	52	69	138	346
13	277	555	1385	53	68	136	340
14	257	514	1286	54	67	133	333
15	240	480	1200	55	65	131	327
16	225	450	1125	56	64	129	321
17	212	424	1059	57	63	126	316
18	200	400	1000	58	62	124	310
19	189	379	947	59	61	122	305
20	180	360	900	60	60	120	300
21	171	343	857	62	58	116	290
22	164	327	818	64	56	112	281
23	157	313	783	66	54	109	273
24	150	300	750	68	53	106	265
25	144	288	720	70	51	103	257
26	138	277	692	72	50	100	250
27	133	267	667	74	48	97	243
28	129	257	643	76	47	95	237
29	124	248	621	78	46	92	231
30	120	240	600	80	45	90	225
31	116	232	581	82	44	88	220
32	113	225	563	84	43	86	214
33	109	218	545	86	42	84	209
34	106	212	529	88	41	82	205
35	103	206	514	90	40	80	200
36	100	200	500	92	39	78	196
37	97	195	486	94	38	76	192
38	95	189	474	96	36	75	188
39	92	185	462	98	37	74	184
40	90	180	450	100	36	72	180
41	88	176	439	102	35	71	178
42	86	172	429	104	35	69	173
43	84	167	419	106	34	68	170
44	82	164	409	108	33	67	167
45	80	160	400	110	33	65	164
46	78	157	391	112	32	64	161
47	76	153	383	116	31	62	156
48	75	150	375	120	30	60	150
49	73	147	367				

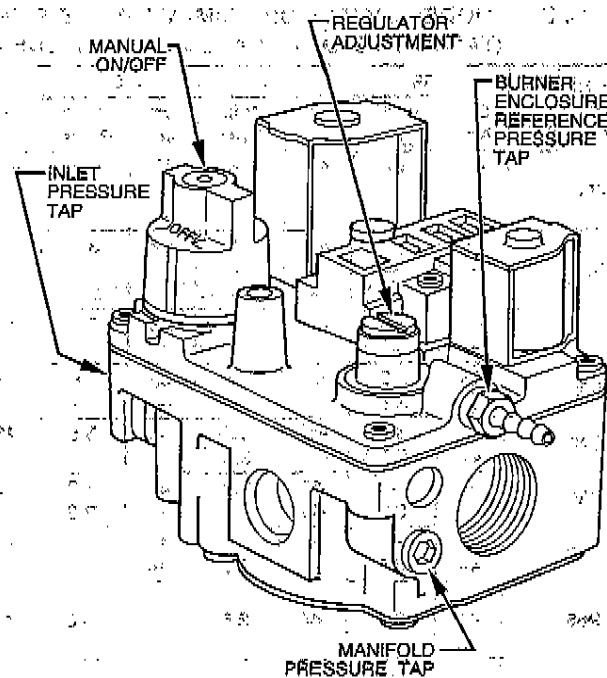

A91062

Fig. 45—Redundant Automatic Gas Valve

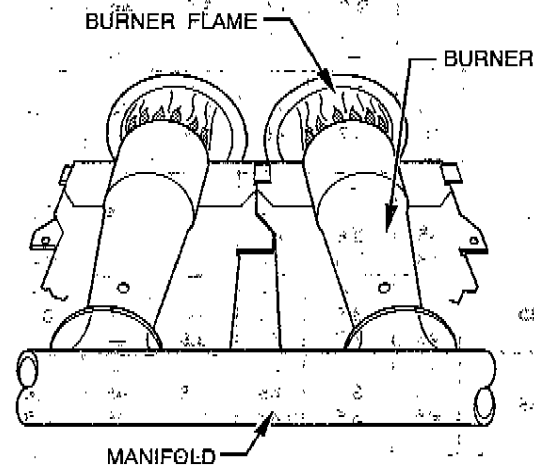

A89020

Fig. 46—Burner Flame

TABLE 9—SPEED SELECTOR


COLOR	SPEED	FACTORY ATTACHED TO
Black	High	Cool
Yellow (When Present)	Medium High	Spare
Blue	Medium Low	Heat
Red	Low	Spare
White	Common	Com

Fig. 47 illustrates an easy method of obtaining these measurements. Amp reading should be taken after blower motor has started. See thermostat manufacturer's instructions for adjusting heat anticipator and for varying heating cycle length.

CHECK SAFETY CONTROLS

I. CHECK PRIMARY LIMIT CONTROL

This control shuts off combustion control system and energizes air-circulating blower motor if furnace overheats. Recommended method of checking this limit control is to gradually block off return air after furnace has been operating for a period of at least 5 minutes. As soon as limit control has shut off burners, return-air

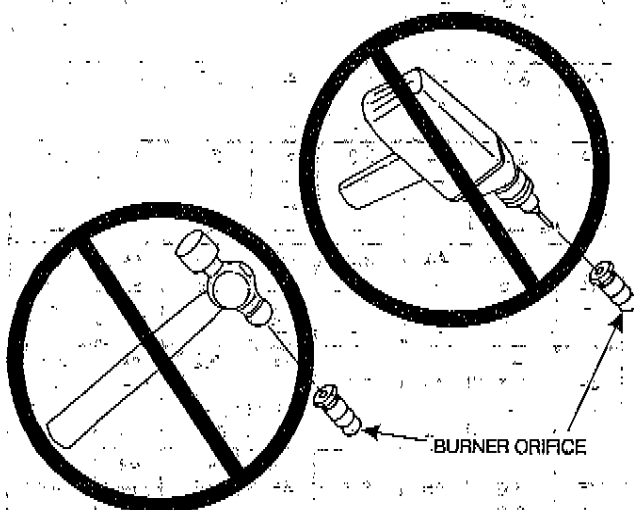

A93059

CAUTION: DO NOT redrill orifices. Improper drilling (burrs, out-of-round holes, etc.) can cause excessive burner noise and misdirection of burner flames. This can result in flame impingement of burners and heat exchangers causing failures.


provide greater comfort. See Table 10 for position of switches and Fig. 24 or 25 for location of switches on control center.

D. Set Thermostat Heat Anticipator

Thermostat heat anticipator must be set to match amp draw of components in R-W circuit. Accurate amp draw measurements can be obtained at thermostat subbase terminals R and W.

TABLE 10—BLOWER OFF DELAY SETUP SWITCH POSITION

DESIRED HEATING MODE BLOWER OFF DELAY (SEC)	SETUP SWITCH POSITION	
	SW-1	SW-2
90	OFF	OFF
135	ON	OFF
180	OFF	ON
225	ON	ON

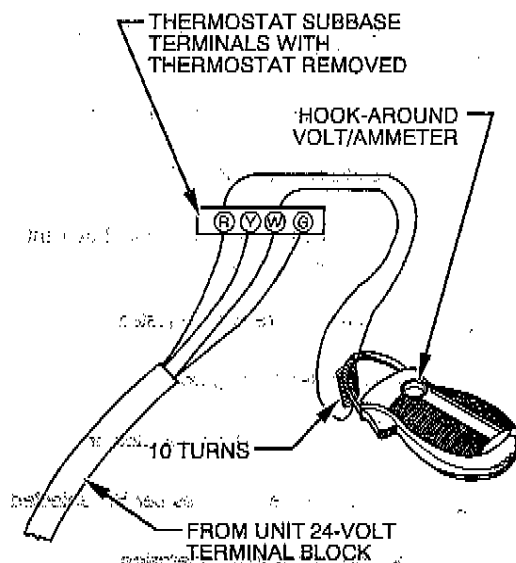

EXAMPLE: 5.0 AMPS ON AMMETER = 0.5 AMPS FOR THERMOSTAT SETTING
10 TURNS AROUND JAWS

A80201

Fig. 47—Amp Draw Check with Ammeter

opening should be unblocked to permit normal air circulation. By using this method to check limit control, it can be established that limit is functioning properly and operates if there is a restricted return-air supply or motor failure. If limit control does not function during this test, cause must be determined and corrected.

II. CHECK PRESSURE SWITCH

This control proves operation of draft inducer. Check switch operation as follows:

1. Turn off 115-v power to furnace.
2. Remove main furnace door and disconnect inducer motor lead wires from wire harness.
3. Turn on 115-v power to furnace.
4. Set thermostat to "call for heat" and wait 1 minute. When pressure switch is functioning properly, hot surface ignitor should NOT glow, and control center diagnostic light flashes a 31 fault. If hot surface ignitor glows when inducer motor is disconnected, shut furnace down immediately. Determine reason pressure switch did not function properly and correct condition.
5. Turn off 115-v power to furnace.
6. Reconnect inducer motor leads, reinstall main furnace door, and turn on 115-v power supply.

CHECKLIST

1. Put away tools and instruments. Clean up debris.
2. Verify manual reset switch has continuity.
3. Verify that blower and control access doors are properly installed.

4. Cycle test furnace with room thermostat.
5. Check operation of accessories per manufacturer's instructions.
6. Review User's Guide with owner.
7. Leave literature packet near furnace.

CHECKLIST—INSTALLATION**Load Calculation**

_____ Heating Load (Btuh)

_____ Cooling Load (Btuh)

_____ Furnace Model Selection

COMBUSTION AND VENT PIPING**Termination Location**

_____ Roof or Sidewall

_____ Termination Kit — 2 Pipe or Concentric

_____ Combustion-Air Pipe Length

_____ Combustion-Air Pipe Elbow Quantity

_____ Vent Pipe Length

_____ Vent Pipe Length Quantity

_____ Pipe Diameter Determined from Sizing Table

_____ Pipe Sloped To Furnace

Pipe Insulation

_____ Over Ceilings

_____ Low-Ambient Exposed Pipes

Condensate Drain

_____ Unit Level or Pitched Forward

_____ Internal Tubing Connections Free of Kinks and Traps

_____ External Drain Connection Leak Tight and Sloped

_____ Condensate Trap Primed before Start-Up

_____ Heat Tape Installed if Required

CHECKLIST—START-UP

_____ Gas Input Rate (Set Within 2 percent of Rating Plate)

_____ Temperature Rise Adjusted

Thermostat Anticipator

_____ Anticipator Setting Adjusted or

_____ Cycle Rate (3 Cycles per Hr) Selected

Safety Controls Check Operation

_____ Primary Limit

_____ Pressure Switch