

GAS-FIRED STEAM BOILER

PARTS REPLACEMENT INFORMATION GUIDE

JACKET GROUP

Right panel
Left panel
Service door
Intermediate panel
Front panel
Back Panel

GAS CONTROL GROUP

Manifold
Burner
Orifice(s)
Pilot burner
Intermittent pilot control*
Gas valve
Rollout shield
Vent damper*

VALVE/GAGE GROUP

Relief valve
Steam pressure gauge
Water level gage
Drain valve

ELECTRICAL GROUP

Low water cut-off*
Rollout switch
Spill switch
Pressure limit switch
Transformer

BOILER SECTION GROUP

Boiler section
Base baffle
Draft diverter*
Base

* When used

TO OBTAIN INFORMATION ON PARTS: Consult your installing dealer or classified section of your local telephone directory under the "Heating Equipment" or "Air Conditioning Contractors and Systems" headings for dealer listing by brand name or contact:

CAC/BDP
Consumer Relations
P.O. Box 4952
Syracuse, New York 13221

Have available the Model No., Series Letter, and Serial No. located on the unit rating plate to insure correct replacement part.

Example of Product Number

<u>MODEL</u>	<u>VOLTAGE</u>	<u>FUEL TYPE</u>	<u>COOLING SIZE</u>	<u>HEATING SIZE</u>	<u>LABELING</u>	<u>SERIES</u>	<u>VARIATIONS</u>
BS1A	A	N	000	075	A	B	AA
1 Standing Pilot 2 Intermittent Ignition							

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause personal injury or property damage. Consult a qualified installer, service agency, or your local gas supplier for information or assistance. The qualified installer or Seville agency must use only factory-authorized kits or accessories when modifying this product.