


Service Guide



Induced-Combustion Gas-Fired Furnaces

PG8DAA
PG8UAA
Series C&D

NOTE: Read the entire instruction manual before starting the installation.

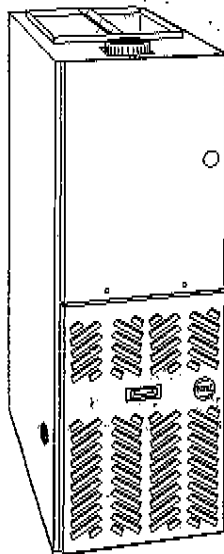


A98143

Fig. 1—Model PG8DAA
Downflow




REGISTERED QUALITY SYSTEM

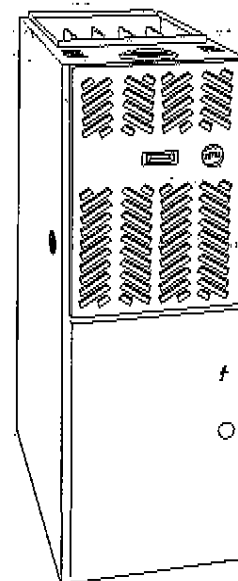

A98145

Fig. 3—Model PG8UAA
Upflow

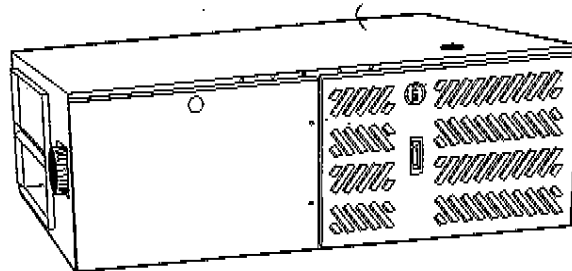

A98144

Fig. 2—Model PG8DAA Horizontal

TABLE OF CONTENTS

SAFETY CONSIDERATIONS.....	2
INTRODUCTION.....	2
ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS PROCEDURE.....	2
CARE AND MAINTENANCE.....	2
Air Filter Arrangement.....	3
Blower Motor and Wheel.....	4
Cleaning Heat Exchanger.....	5
Electrical Controls and Wiring.....	7
Troubleshooting.....	8

SAFETY CONSIDERATIONS

Installing and servicing heating equipment can be hazardous due to gas and electrical components. Only trained and qualified personnel should install, repair, or service heating equipment.

trained personnel can perform basic maintenance functions such as cleaning and replacing air filters. All other operations must be performed by trained service personnel. When working on heating equipment, observe precautions in the literature, on tags, and on labels attached to or supplied with the unit and other safety precautions that may apply.

Follow all safety codes including local building codes, the National Fuel Gas Code (NFPA 54-1999/ANSI Z223.1-1999) in the United States and the National Standard of Canada, Natural Gas and Propane Installation Codes (NSC/NPIC) CAN/CGA-B149.1- and -2-M95 in Canada. Wear safety glasses and work gloves. Have a fire extinguisher available during start-up and adjustment procedures and service calls.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert for the potential for personal injury.

Understand the signal words DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies hazards which could result in personal injury or death. CAUTION is used to identify unsafe practices which would result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

WARNING: The ability to properly perform maintenance on the equipment requires certain expertise, mechanical skills, tools, and equipment. If you do not possess these, do not attempt to perform any maintenance on this equipment other than those procedures recommended in the User's Manual. FAILURE TO FOLLOW THIS WARNING COULD RESULT IN POSSIBLE DAMAGE TO THIS EQUIPMENT, SERIOUS PERSONAL INJURY, OR DEATH.

INTRODUCTION

These procedures are for size 45,000 through 155,000 Btuh input units.

The design of the downflow/horizontal gas-fired furnace is C.S.A. (A.G.A. and C.G.A.) certified for natural and propane gases and for installation on noncombustible flooring. The furnace is factory-shipped for use with natural gas. The manufacturer's accessory gas conversion kit is required to convert furnace for use with propane gas.

ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS PROCEDURE

CAUTION: Electrostatic discharge can affect electronic components. Take precautions during furnace installation and servicing to protect the furnace electronic control. Precautions will prevent electrostatic discharges from personnel and tools which are held during the procedure. These precautions will help to avoid exposing the control to electrostatic charge by putting the furnace, the control, and the person at the same electrostatic potential.

1. Disconnect all power to the furnace. DO NOT TOUCH THE CONTROL OR ANY WIRE CONNECTED TO THE CONTROL PRIOR TO DISCHARGING YOUR BODY'S ELECTROSTATIC CHARGE TO GROUND.
2. Firmly touch a clean, unpainted, metal surface of the furnace chassis which is close to the control. Tools held in a person's hand during grounding will be satisfactorily discharged.
3. After touching the chassis you may proceed to service the control or connecting wires as long as you do nothing that recharges your body with static electricity (for example; DO NOT move or shuffle your feet, DO NOT touch ungrounded objects, etc.).
4. If you touch ungrounded objects (recharge your body with static electricity), firmly touch furnace again before touching control or wires.
5. Use this procedure for installed and uninstalled (ungrounded) furnaces.
6. Before removing a new control from its container, discharge your body's electrostatic charge to ground to protect the control from damage. If the control is to be installed in a furnace, follow items 1 through 5 before bringing the control or yourself into contact with the furnace. Put all used AND new controls into containers before touching ungrounded objects.
7. An ESD service kit (available from commercial sources) may also be used to prevent ESD damage.

CARE AND MAINTENANCE

To continue high performance and to minimize possible equipment failure, it is essential that periodic maintenance be performed on this equipment. Consult your local dealer as to the proper frequency of maintenance and the availability of a maintenance contract.

WARNING: Never store anything on, near, or in contact with the furnace, such as: spray or aerosol cans, rags, brooms, dust mops, vacuum cleaners, or other cleaning tools. Soap powders, bleaches, waxes or other cleaning compounds, plastic or plastic containers, gasoline, kerosene, cigarette lighter fluid, dry cleaning fluids, or other volatile fluids. Paint thinners and other painting compounds, paper bags, or other paper products. Failure to follow this warning can cause corrosion of the heat exchanger, fire, personal injury, or death.

WARNING: Turn off the gas and electrical supplies to the unit before performing any maintenance or service. Follow operating instructions on label attached to furnace. A failure to follow this warning could result in personal injury.

The minimum maintenance that should be performed on this equipment is as follows:

1. Check and clean air filter each month or more frequently if required. Replace if torn.
2. Check blower motor and wheel for cleanliness each heating and cooling season. Clean as necessary.

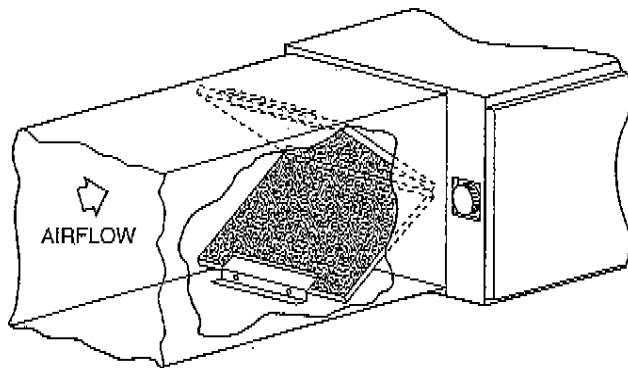


Fig. 4—Horizontal Filter Arrangement

A94307

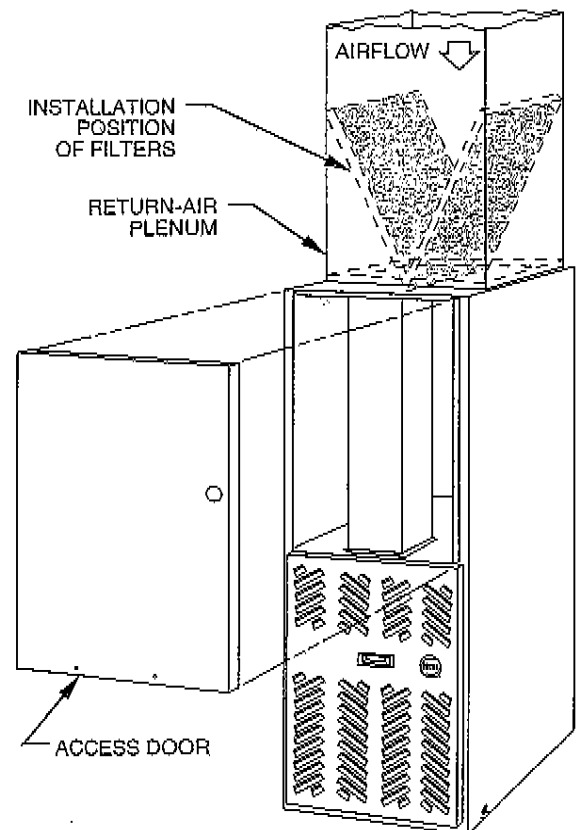


Fig. 5—Downflow Filter Arrangement

A98139

3. Check electrical connections for tightness and controls for proper operation each heating season. Service as necessary.

⚠ CAUTION: As with any mechanical equipment, personal injury can result from sharp metal edges, etc., therefore, be careful when removing parts.

PROCEDURE 1—AIR FILTER ARRANGEMENT

Table 1—Filter Size Information for
Downflow/Horizontal Furnaces (In.)

FURNACE CASING WIDTH	FILTER QUANTITY AND SIZE	FILTER TYPE
14-3/16	(2) 16 X 20 X 1	Cleanable
17-1/2	(2) 16 X 20 X 1	Cleanable
21	(2) 16 X 20 X 1	Cleanable
24-1/2	(2) 16 X 20 X 1	Cleanable

Table 2—Filter Size Information for Upflow Furnaces (In.)

FURNACE CASING WIDTH	FILTER QUANTITY AND SIZE		FILTER TYPE
	Side Return	Bottom Return	
14-3/16	(1) 16 X 25 X 1*	(1) 14 X 25 X 1	Cleanable
17-1/2	(1) 16 X 25 X 1*	(1) 16 X 25 X 1	Cleanable
21	(1) 16 X 25 X 1	(1) 20 X 25 X 1*	Cleanable
24-1/2	(1) 16 X 25 X 1	(1) 24 X 25 X 1*	Cleanable

* Factory-provided with the furnace. Filter may be field modified as required by cutting to desired size.

The air filter arrangement may vary depending on the application. Refer to Table 1 or 2 for filter size information.

⚠ WARNING: Never operate unit without a filter or with filter access door removed. A failure to follow this warning could result in fire, personal injury, or death.

1. Downflow/Horizontal

Each furnace requires 2 filters which are installed in the return-air duct. (See Fig. 4 and 5.) To remove filters for cleaning or replacement, proceed as follows:

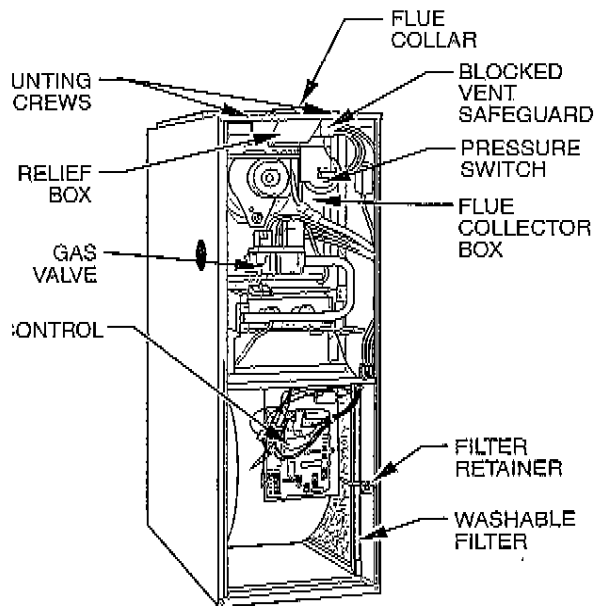


Fig. 6—Model PG8UAA Upflow

A00261

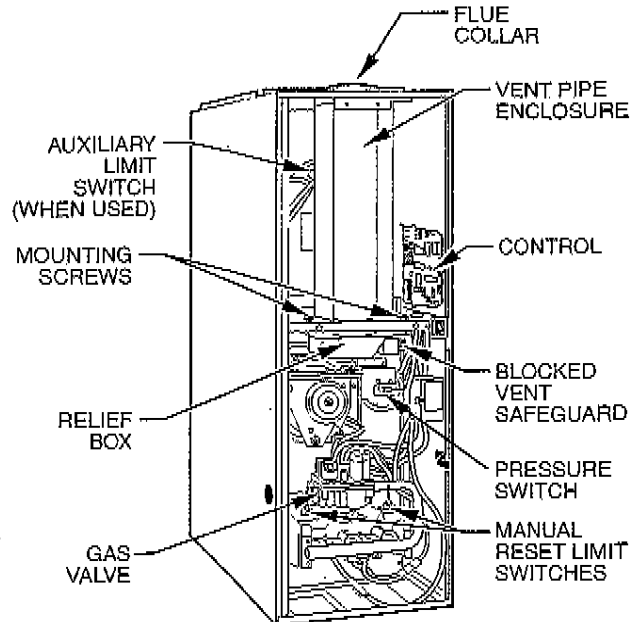


Fig. 7—Model PG8DAA Downflow

A00295

- Disconnect electrical power before removing blower access door.
- Remove screw from front of door and remove blower access door.
- Reach up behind top plate, tilt filters toward center of return-air plenum, remove filters, and clean as needed. Replace if torn.
- Furnaces are equipped with permanent, washable filters. Clean filters with tap water. Spray water through filter in opposite direction of airflow.
- Rinse and let dry. Oiling or coating of filters is not recommended or required.
- Reinstall filter(s).
- Replace blower access door.
- Restore electrical power to furnace.

2. Upflow

Each furnace requires 1 or 2 filters which are installed in the side and/or bottom of blower compartment. (See Fig. 6.) To remove filters for cleaning or replacement, proceed as follows:

- Disconnect electrical power before removing access doors.
- Remove blower and control access doors.
- Release filter retainer from clip at front of furnace casing. (See Fig. 6.) For side return, clips may be used on either or both sides of the furnace.
- Slide filter(s) out.
- Furnaces are equipped with permanent, washable filters. Clean filters with tap water. Spray water through filter in opposite direction of airflow.
- Rinse and let dry. Oiling or coating of filter is not recommended or required.
- Reinstall filter(s).
- Replace blower access door.
- Restore electrical power to furnace.

PROCEDURE 2—BLOWER MOTOR AND WHEEL

For long life, economy, and high efficiency, clean accumulated dirt and grease from the blower wheel and motor annually.

The following steps should be performed by a qualified service technician.

These motors have prelubricated sealed bearings and require no lubrication. These motors can be identified by the absence of oil ports on each of the motor. For those motors with oil ports, lubricate motor every 5 years if motor is used on intermittent operation (thermostat FAN in TO mode), or every 2 years if motor is in continuous operation (thermostat FAN in ON mode).

NOTE: Remember to disconnect the electrical supply before removing access doors.

and lubricate as follows:

- Remove screw from blower access door (downflow/horizontal furnace only) and remove blower access door.
- (Downflow/Horizontal furnace only) Remove vent pipe enclosure and disconnect short piece of vent pipe from relief box.
- (Downflow/Horizontal furnace only) Disconnect wires from auxiliary limit on blower housing.

4. Remove control.
5. Disconnect only those electrical leads from control needed to permit control to be moved so that blower assembly can be removed from furnace. (See Fig. 6 or 7.) Note location of wires for reassembly.
6. Remove screws holding blower assembly to blower deck and slide blower assembly out of furnace.
7. Loosen screw in strap holding motor capacitor to blower housing and slide capacitor out from under strap.
8. Mark blower wheel, motor, and motor support in relation to blower housing before disassembly to ensure proper reassembly.
9. Loosen setscrew holding blower wheel on motor shaft.
10. Remove bolts holding motor mount to blower housing and slide motor and mount out of housing. Disconnect ground wire attached to blower housing before removing motor.
11. Lubricate motor (when oil ports are provided).
 - a. Remove dust caps or plugs from oil ports located at each end of motor.
 - b. Use good grade of SAE 20 nondetergent motor oil and put 1 teaspoon, 5 cc, 3/16 oz., or 16 to 25 drops in each oil port. Do not over-oil.
 - c. Allow time for total quantity of oil to be absorbed by each bearing.
 - d. Wipe excess oil from motor housing.
 - e. Replace dust caps or plugs on oil ports.
12. Remove blower wheel from housing.
 - a. Mark cutoff location of ensure proper reassembly.
 - b. Remove screws holding cutoff plate and remove cutoff plate from housing.
 - c. Lift blower wheel from housing through opening.
13. Clean blower wheel and motor using a vacuum cleaner with soft brush attachment. Do not remove or disturb balance weights (clips) on blower wheel blades. The blower wheel should not be dropped or bent as balance will be affected.
14. Reinstall blower wheel by reversing items 12 a through c. Be sure wheel is positioned for proper rotation.
15. Reassemble motor and blower by reversing items 5 through 10. Be sure motor ground wire is connected as before.

⚠ CAUTION: Be sure the motor is properly positioned in the blower housing. The motor oil ports in downflow and upflow furnaces must be at a minimum of 45° above the horizontal centerline of the motor after the blower assembly has been reinstalled in the furnace.

16. Reinstall blower assembly in furnace.
17. Reinstall control. Connect blower electrical leads to control. Please note that the common wire connection is a 3/16-in. quick-connect terminal and all other wire connections are 1/4 in. for assembly. **DO NOT FORCE.**
18. Reconnect wires to auxiliary limit switch on blower housing (downflow/horizontal furnace only).
19. Reinstall vent connector on the furnace flue collar. Reinstall the vent enclosure on downflow/horizontal furnace only. After fully assembling the vent connector to the furnace flue collar, securely fasten the vent connector to the collar with two field-supplied, corrosion-resistant, sheet metal screws located 180° apart and midway up the collar.
20. Turn on electrical power and check for proper rotation and speed changes between heating and cooling.
21. Replace blower access door. Secure with screw (downflow/horizontal furnace only).

PROCEDURE 3—CLEANING HEAT EXCHANGER

The following steps should be performed by a qualified service technician.

NOTE: Deposits of soot and carbon indicate the existence of a problem which needs to be corrected. Take action to correct the problem. If it becomes necessary to clean the heat exchanger because of carbon deposits, soot, etc., proceed as follows.

1. Turn off gas and electrical power to furnace.
2. Remove screw from front of blower access door (downflow/horizontal furnace only) and remove control and blower access doors.
3. Remove internal vent pipe enclosure (downflow/horizontal furnace only) and disconnect vent pipe from relief box.
4. Remove 2 mounting screws that secure relief box. (See Fig. 6 or 7.)
5. Disconnect wires to the following components.
 - a. Draft safeguard switch
 - b. Inducer motor
 - c. Pressure switch
 - d. Limit overtemperature switch(es)
 - e. Gas valve
 - f. Hot surface igniter
 - g. Flame-sensing electrode

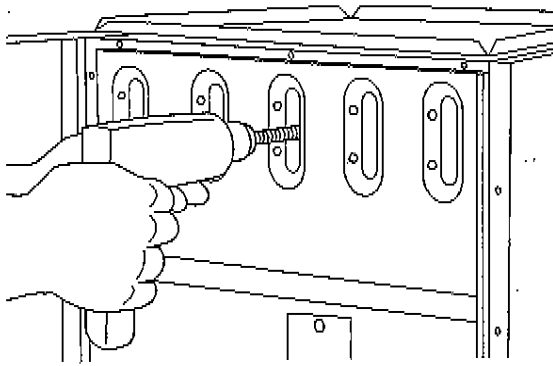


Fig. 8—Cleaning Heat Exchanger Cell

A91252

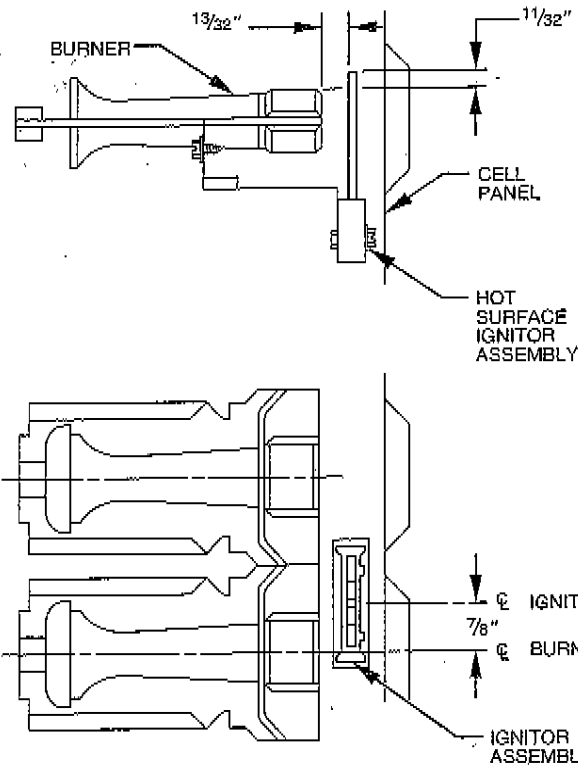


Fig. 9—Position of Igniter to Burner

A93347

6. Remove 8 screws that secure flue collector box to center panel. Be careful not to damage sealant.
 7. Remove complete inducer assembly from furnace, exposing flue openings.
 8. Clean cells using field-provided small wire brush, steel spring cable, reversible electric drill, and vacuum cleaner.
 - a. Assemble wire brush and steel spring cable.
 - (1.) Use 48 in. of 1/4-in. diameter high-grade steel spring cable (commonly known as drain clean-out or Roto-Rooter cable).
 - (2.) Use 1/4-in. diameter wire brush (commonly known as 25-caliber rifle cleaning brush).
 - NOTE: The materials needed in items (1.) and (2.) can usually be purchased at local hardware stores.
 - (3.) Insert twisted wire end of brush into end of steel spring cable, and crimp tight with crimping tool or strike with ball-peen hammer. TIGHTNESS is very important.
 - (4.) Remove metal screw fitting from wire brush to allow insertion into cable.
 - b. Clean each heat exchanger cell.
 - (1.) Attach variable-speed, reversible drill to end of steel spring cable (end opposite brush).
 - (2.) Insert brush end of cable into upper opening of cell and slowly rotate with drill. DO NOT force cable. Gradually insert at least 36 in. of cable into 2 upper passes of cell. (See Fig. 8.)
 - (3.) Work cable in and out of cell 3 or 4 times to obtain sufficient cleaning. DO NOT pull cable with great force. Reverse drill and gradually work cable out.
 - (4.) remove burner assembly and cell inlet plates.
-
- CAUTION:** Be very careful when removing the burner assembly to avoid breaking the igniter. See Fig. 9 for the correct igniter location.
-
- (5.) Replace screws in center panel and cells before cleaning.
 - (6.) Insert brush end of cable in lower opening of cell, and proceed to clean two lower passes of cell in same manner as 2 upper passes.
 - (7.) Repeat foregoing procedures until each cell in furnace has been cleaned.
 - (8.) Remove residue from each cell using vacuum cleaner.
 - (9.) Clean burner assembly using vacuum cleaner with soft brush attachment.
 - (10.) Reinstall cell inlet plates and burner assembly. Care must be exercised to center the burners in the cell openings.
9. After cleaning flue openings, check sealant on flue collector to ensure that it has not been damaged. If new sealant is needed, contact your dealer or distributor.

10. Clean and replace flue collector assembly, making sure all 8 screws are secure.
11. Reinstall relief box.
12. Reconnect wires to the following components.
 - a. Draft safeguard switch
 - b. Inducer motor
 - c. Pressure switch
 - d. Limit overtemperature switch(es)
 - e. Gas valve
 - f. Hot surface igniter
 - g. Flame-sensing electrode
13. Reinstall vent connector on the furnace flue collar. Reinstall the vent enclosure on downflow/horizontal furnace only. After fully assembling the vent connector to the furnace flue collar, securely fasten the vent connector to the collar with two field-supplied, corrosion-resistant, sheet metal screws located 180° apart and midway up the collar.
14. Replace blower access door only.
15. Turn on electrical power and gas.
16. Set thermostat and check furnace for proper operation.

⚠ WARNING: Never use a match or other open flame to check for gas leaks. Use a soap-and-water solution. A failure to follow this warning could result in fire, personal injury, or death.

17. Check for gas leaks.
18. Replace control access door on upflow furnace.
19. On downflow/horizontal furnaces, remove blower access door, replace control access door first, then replace blower access door and secure with 2 screws in front of door.

PROCEDURE 4—ELECTRICAL CONTROLS AND WIRING

⚠ CAUTION: There may be more than 1 electrical supply to the unit. Check accessories and cooling unit for additional electrical supplies and disconnects.

The electrical ground and polarity for 115-v wiring must be properly maintained. Refer to Fig. 10 for field wiring information and to Fig. 12 for unit wiring information.

NOTE: If the polarity is not correct, the STATUS LED on the control center will flash rapidly and prevent the furnace from operating. The control system also requires an earth ground for proper operation of the control and flame-sensing electrode.

The 24-v circuit contains an automotive-type, 3-amp fuse located on the control. (See Fig. 11.) Any direct shorts of the 24-v wiring during installation, service, or maintenance will cause this fuse to blow. If fuse replacement is required, use ONLY a fuse of identical size.

With power to the unit disconnected, check all electrical connections for tightness. Tighten all screws on electrical connections. If any smoky or burned connections are found, disassemble the connection, clean all parts, strip wire, and reassemble properly and securely.

Reconnect electrical power to the unit and observe unit through 1 complete operating cycle. Electrical controls are difficult to check without proper instrumentation; if there are any discrepancies in the operating cycle, contact your dealer and request service.

For an explanation of status codes, refer to service label located on blower access door or fig. 13, and the troubleshooting guide.

The control stores 1 status code (the last status to occur) for a period of 48 hrs or until the 115- or 24-v power is interrupted.

NOTE: Look into blower access door sight glass for current LED status. Removing blower access door will open blower access door switch and terminate 115-v power to control, and status code will be erased.

1. To retrieve status code, proceed with the following:

NOTE: NO thermostat signal may be present at control, and all blower time delay off periods must be completed.

- a. Leave 115-v power to furnace turned on.
- b. Look into blower access door sight glass for current LED status.

NOTE: Leave blower access panel installed to maintain power to control to view current LED status.

- c. Remove control access door.
- d. BRIEFLY remove either wire from the main limit switch until LED goes out, then reconnect it.

NOTE: If wire to main limit is disconnected longer than 4 sec., main blower starts, and retrieval request is ignored.

2. When above items have been completed, the following will occur:
 - a. LED flashes a status code 4 times. Record this status code for further troubleshooting.
 - b. Inducer motor starts and continues to run the entire component test.
 - c. Hot surface igniter is energized for 15 sec., then de-energized.

- d. Main blower operates at cooling speed for 10 sec., then turns off.
- e. Main blower operates at heating speed for 10 sec., then turns off.
- f. Inducer motor stops.

Steps a through e above will assist in furnace troubleshooting since all components are functionally operated except the gas valve. This procedure is so referred to as "Component Test."

- 3. Operate furnace through 1 heat cycle to test for proper operation and check LED status.
- 4. If furnace is operating properly and LED indicates proper operation, replace control access door.
- 5. Component Test can also be initiated by performing the following:
 - a. Remove control access door.
 - b. Remove blower access door.
 - c. Manually close blower access door switch.

WARNING: Blower access door switch opens 115-v power to control center. No component operation can occur. Caution must be taken when manually closing this switch for service purposes. Failure to follow this warning could result in personal injury or death.

- d. BRIEFLY short (jumper) TEST, 1/4-in. quick connect terminal on control (adjacent to LED diagnostic light), and Com-24v terminal on furnace thermostat connection block. (See Fig. 11)


NOTE: If TEST to Com-24 terminals are jumpered longer than 2 sec., LED will flash rapidly, and retrieval request will be ignored.

- e. Component Test will function as described in item 2 above.
- f. Check LED status.
- g. If LED status indicates proper operation, release blower access door switch, replace blower access door, and replace control access door.

PROCEDURE 5—TROUBLESHOOTING


Refer to the service label. (See Fig. 13.) Pages 12 and 13 contain a troubleshooting guide. This guide can be a useful tool in isolating furnace operation problems. Beginning with the word "Start," answer each question and follow the appropriate arrow to the next item.

The guide will help to identify the problem or failed component. After replacing any component, verify correct operation sequence.

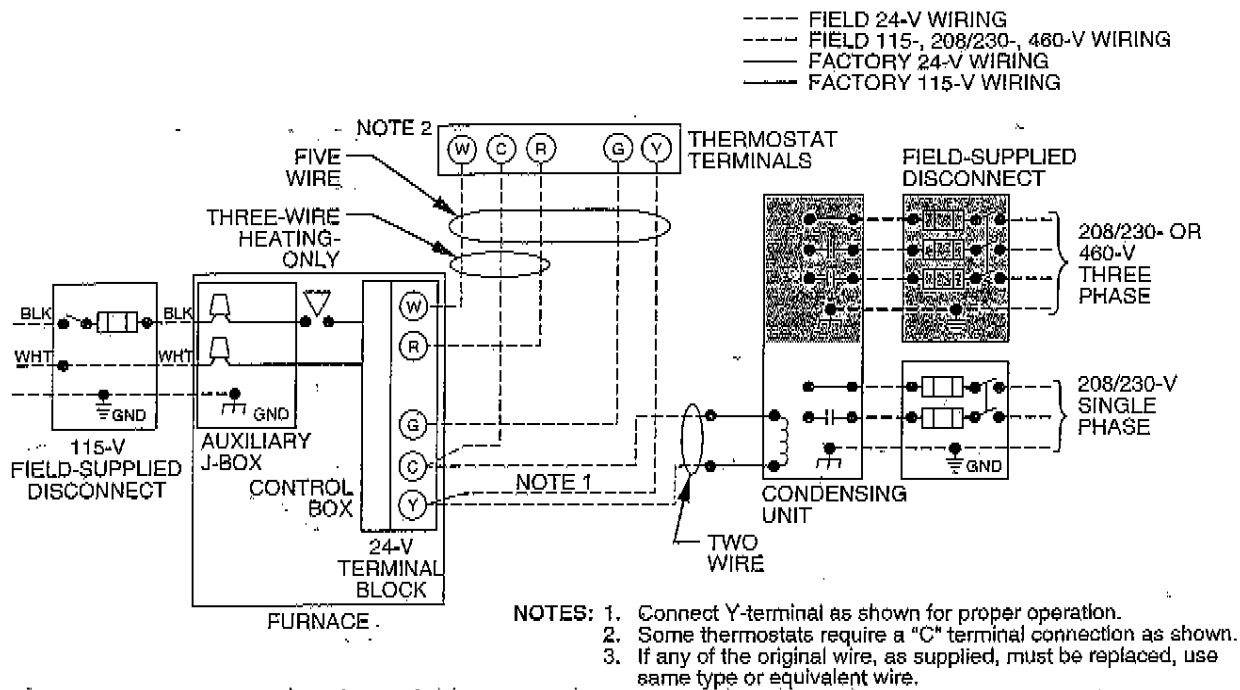

A98209

Fig. 10—Heating and Cooling Application Wiring Diagram

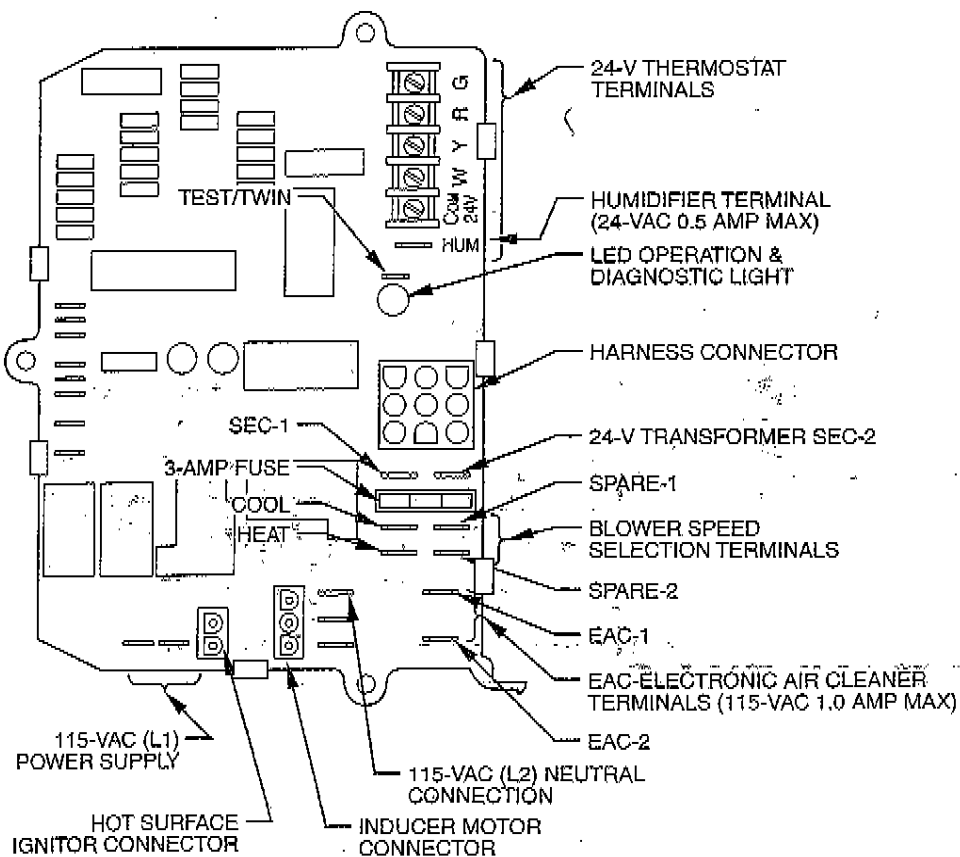

A99255

Fig. 11—Furnace Control



Fig. 12—Wiring Diagram



1. Nity of the original equipment wire is replaced use wire rated for 105°C
2. Blowers (IDW) and blower (B-LWM) motors contain internal auto-reset thermal overload switches (OL).
3. Follow motor speed selection for average conditions, see installation instructions for details on optimum speed selection.
4. Use only copper wire between the disconnect switch and the furnace junction box (JUB).
5. This wire must be connected to furnace sheetmetal for control to defect flame.
6. Replace only with a 3 amp fuse.
7. Yellow lead not on all models.
8. Blower-on delay, gas heating 45 seconds, cooling or heat pump 2 seconds.
9. Blower-off delay, gas heating 30, 135, 180 or 225 seconds, cooling or heat pump 90 seconds.
10. (1) Blow-back will occur after four consecutive unsuccessful trials-for-ignition. Control will auto-reset after three years.
11. When used, auxiliary limit switch (ALS) is on some downflow models only. When used, FL is on upflow models only.
12. Some models may have spade quick connect terminals.
13. Factory connected when LQPS is not used.
14. Factory connected when BVS5 is not used. BVS5 used when Chimney Adapter Accessory Kit is installed.
15. Gas valve leads are interchangeable on single stage valves.

402199

SERVICE

If status code recall is needed, do not remove power or blower door. Briefly remove and then reconnect one main limit wire to display stored status code.

LED CODE

STATUS

CONTINUOUS OFF - Check for 115VAC at L1 and L2, and 24VAC at SEC-1 and SEC-2.

CONTINUOUS ON - Control has 24VAC power.


RAPID FLASHING - Line voltage (115VAC) polarity reversed. If twinned, refer to twinning kit instructions.

EACH OF THE FOLLOWING STATUS CODES IS A TWO DIGIT NUMBER WITH THE FIRST DIGIT DETERMINED BY THE NUMBER OF SHORT FLASHES AND THE SECOND DIGIT BY THE NUMBER OF LONG FLASHES.

- 11 **NO PREVIOUS CODE** - Stored status codes are erased when power (115VAC or 24VAC) to control is interrupted or 48 hours after each fault is cleared.
- 12 **BLOWER ON AFTER POWER UP** (115VAC or 24 VAC) - Blower runs for 90 seconds, if unit is powered up during a call for heat (R-W closed).
- 13 **LIMIT OR FLAME ROLL-OUT SWITCH LOCKOUT** - Control will auto reset after three hours. Reset switch or replace fuse link. Refer to #33.
- 14 **IGNITION LOCKOUT** - Control will auto-reset after three hours. Refer to #34.
- 21 **GAS HEATING LOCKOUT** - Control will NOT auto reset.
Check for: - Mis-wired gas valve - Defective control (Valve relay)
- 22 **ABNORMAL FLAME-PROVING SIGNAL** - Flame is proved while gas valve is de-energized. Inducer will run until fault is cleared.
Check for: - Leaky gas valve - Stuck-open gas valve
- 23 **PRESSURE SWITCH DID NOT OPEN** - Check for:
- Obstructed pressure tubing. - Pressure switch stuck closed.
- 24 **SECONDARY VOLTAGE FUSE IS OPEN**
Check for: - Short circuit in secondary voltage (24VAC) wiring.
- 31 **PRESSURE, DRAFT- SAFEGUARD, AUX-LIMIT SWITCH (when used*) OR BLOCKED VENT SWITCH (when used) DID NOT CLOSE OR REOPENED (DOWNFLOW ONLY*)** - If open longer than five minutes, inducer shuts off for 15 minutes before retry. Check for: - Proper vent sizing
- Low inducer voltage (115VAC) - Defective inducer motor
* Defective Blower motor or capacitor - Restricted vent
- Defective pressure switch - Excessive wind
- Inadequate combustion air supply
- Disconnected or obstructed pressure tubing
If it opens after trial for ignition period, blower will come on for 90 second recycle delay.
- 33 **LIMIT OR FLAME ROLL-OUT SWITCH IS OPEN** - If open longer than three minutes, code changes to #13. Flame roll-out switch requires manual reset.
Check for: - Defective blower motor or capacitor.
- Dirty filter or restricted duct system.
- Loose blower wheel.
- Defective switch or connections.
- Inadequate combustion air supply (Flame Roll-out Switch or fuse link open).
- Open Flame Roll-out Switch, or fuse link. Manual reset or replace.
- 34 **IGNITION PROVING FAILURE** - Control will try three more times before lockout #14 occurs. If flame signal lost after trial for ignition period, blower will come on for 90 second recycle delay. Check for:
- Oxide buildup on flame sensor (clean with fine steel wool).
- Proper flame sense microamps (5 microamps D.C. min., 4.0 - 6.0 nominal).
- Gas valve defective or gas valve turned off.
- Defective Hot Surface Ignitor - Manual valve shut-off.
- Low inlet gas pressure. - Control ground continuity
- Green wire **MUST** be connected to furnace sheet metal.
- Inadequate flame carryover or rough ignition.
- Flame sensor must be ungrounded.


COMPONENT TEST

To initiate the component test sequence, shut OFF the room thermostat or disconnect the "R" thermostat lead. Briefly short the TEST terminal to the "Com 24V" terminal. Status LED will flash code and then turn ON the inducer motor. The inducer motor will run for the entire component test. The hot surface ignitor, blower motor-heat speed, and blower motor-cool speed will be turned ON for 10-15 seconds each. Gas Valve and Humidifier will not be turned on.

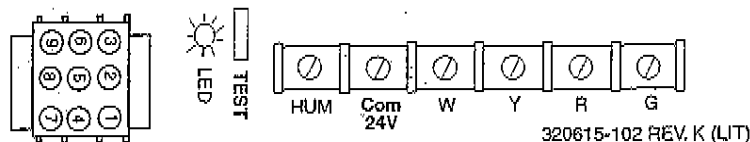

A99233

Fig. 13—Service Label

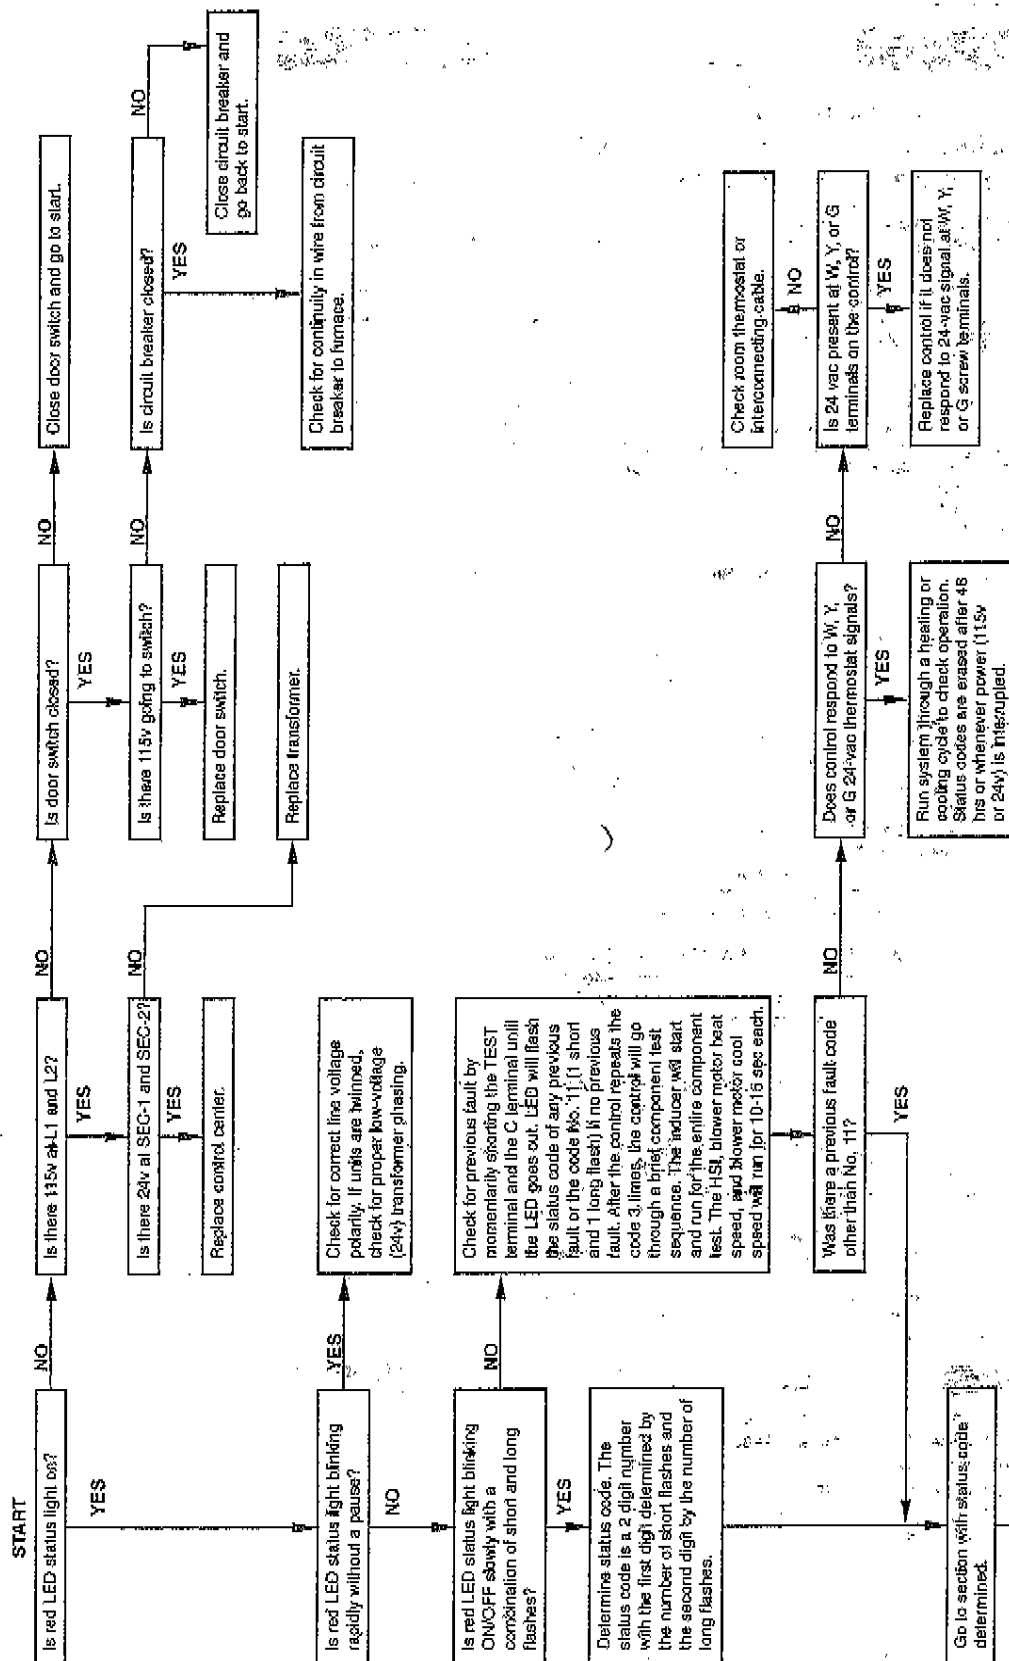

Troubleshooting Guide

