

Installation Instructions For Accessory Manual Outdoor Air Opening Panel

Part No. DNMANDPR001A03 and DNMANDPR002A03 For Gas Heating, Electric Cooling, and Heat Pump Units 2 to 12-1/2 Ton

PACKAGE USAGE AND CONTENTS			
Unit Size	Damper Package Part No.	Package Contents	Qty.
2 to 6 Tons	DNMANDPR001A03	Hood Top	1
		Hood Sides	2
		Outdoor Air Inlet Screen	1
		Damper panel with outdoor air damper blade attached 18-5/8 in. no. 10 screws	1
		Outdoor Air Opening Panel	1
		Gasket	1
7½ to 12½ Tons	DNMANDPR002A03	Hood Top	1
		Hood Sides	2
		Outdoor Air Inlet Screen	1
		Damper panel with outdoor air damper blade attached 18-5/8 in. no. 10 screws	1
		Outdoor Air Opening Panel	1
		Gasket	1

SAFETY CONSIDERATIONS

Installation and servicing of air--conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.

Untrained personnel can perform basic maintenance functions of cleaning coils and filters and replacing filters. All other operations should be performed by trained service personnel. When working on air-conditioning equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that may apply.

Follow all safety codes. Wear safety glasses and work gloves. Use quenching cloth for unbrazing operations. Have fire extinguishers available for all brazing operations.

GENERAL

IMPORTANT: Read these instructions completely before attempting to install the accessory manual outdoor air damper. These instructions are applicable to both vertical and horizontal applications.


INSTALLATION

Turn off unit power and lock out. Electrical shock and personal injury could result.

1. Remove filter access panel by raising panel and swinging panel outward. Panel is now disengaged from track and can be removed. No tools are required to remove filter access panel. Remove evaporator access panel. Save screws and discard panel. (See Fig.1.)
2. Remove hood sides and top, (Fig.2), screen, and damper panel with damper blade attached from accessory package.
3. Attach the (2) hood sides to the hood top with screws provided.

NOTE: Hood side flanges turn inward. Attach provided gasketing to the back side of hood mating flanges. Do not attach hood assembly to unit at this time.

4. Attach damper panel with outdoor--air damper blade to outdoor--air opening panel provided as shown in Fig. 3. Do not insert side screws at this time. Secure panel using 4 screws provided on the bottom. (See Fig. 3.)
5. Adjust minimum position setting of the outdoor damper blade by adjusting screws on the front of the blade. (See Fig. 3.) Slide blade vertically until blade is in the position determined by Fig. 4 or 5. Tighten screws.
6. Attach assembled hood with seal strips to the damper panel. (See Fig. 6.) Use screws provided.
7. Install outdoor--air opening panel with screws saved in Step 1.
8. Replace filter access panel.

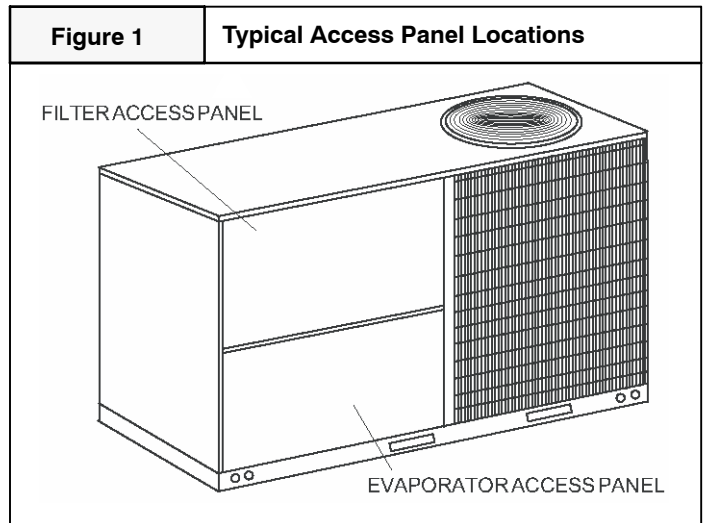

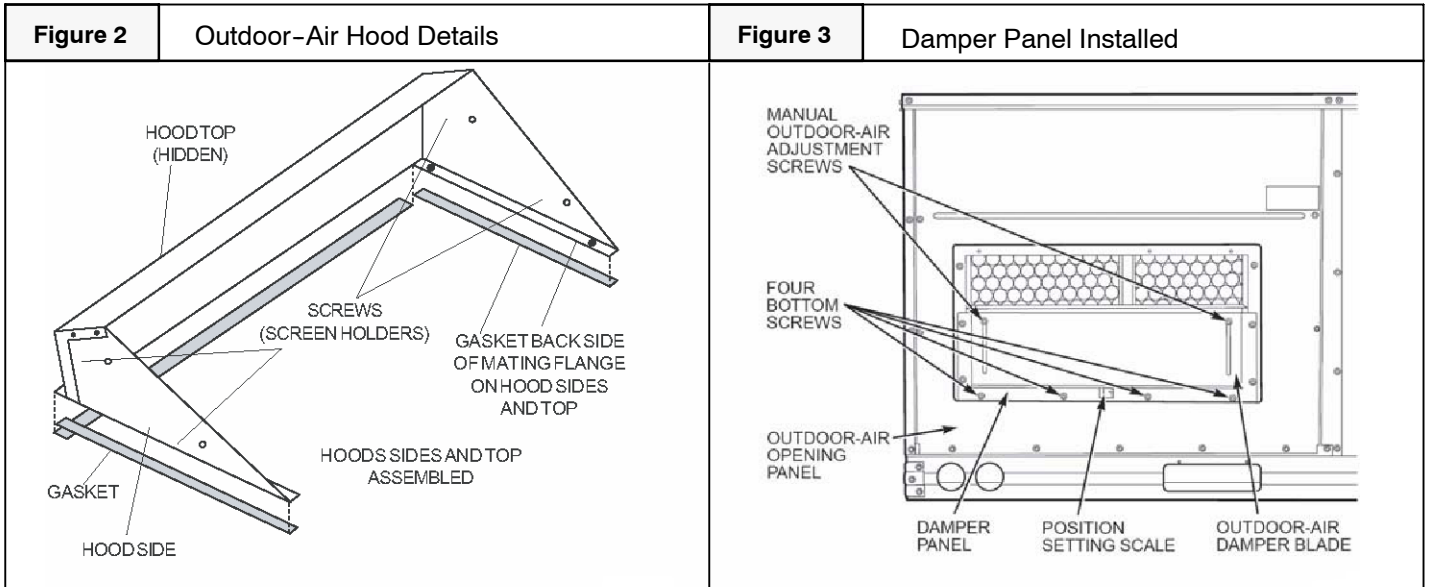


Figure 4 Outdoor-Air Intake Position Setting (2 to 6 Ton Units)

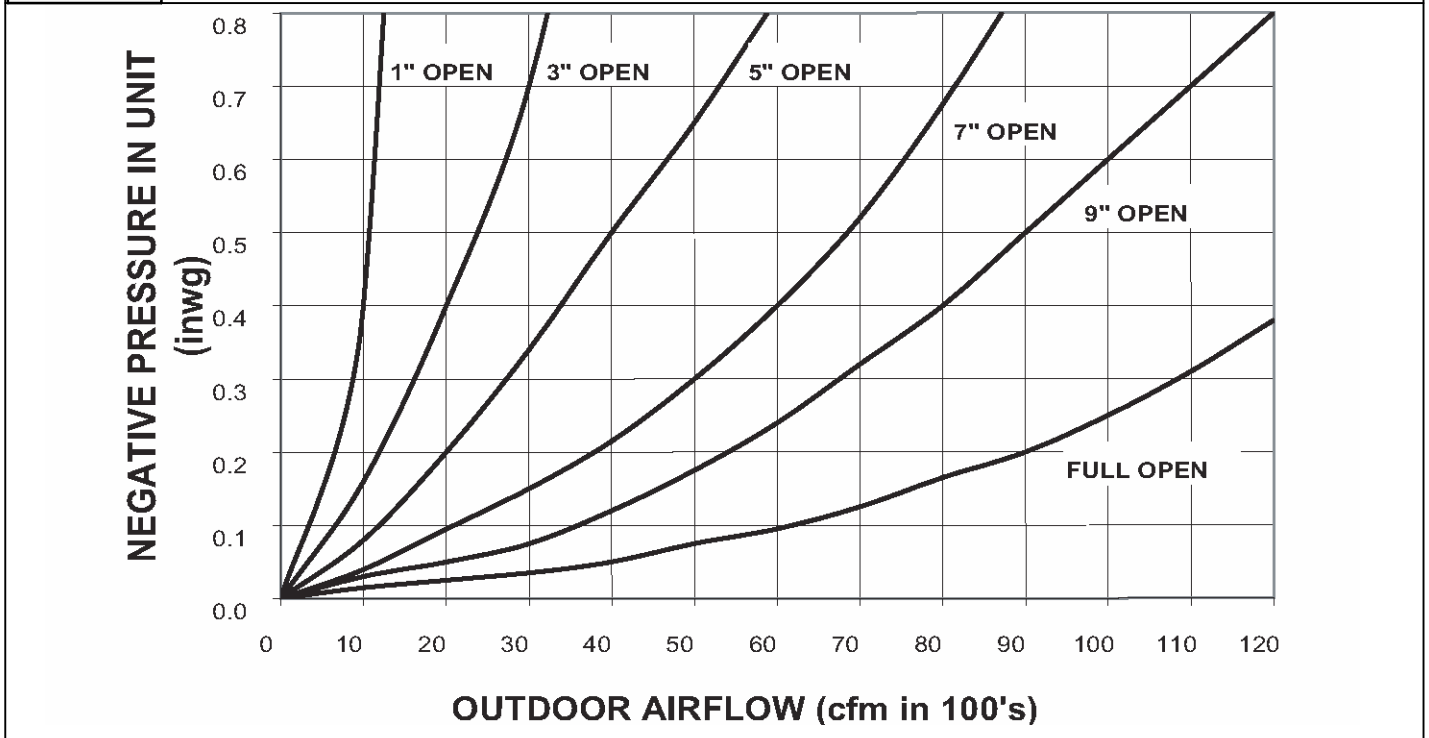


Figure 5

Outdoor-Air Intake Position Setting (7 ½ to 12 ½ Ton Units)

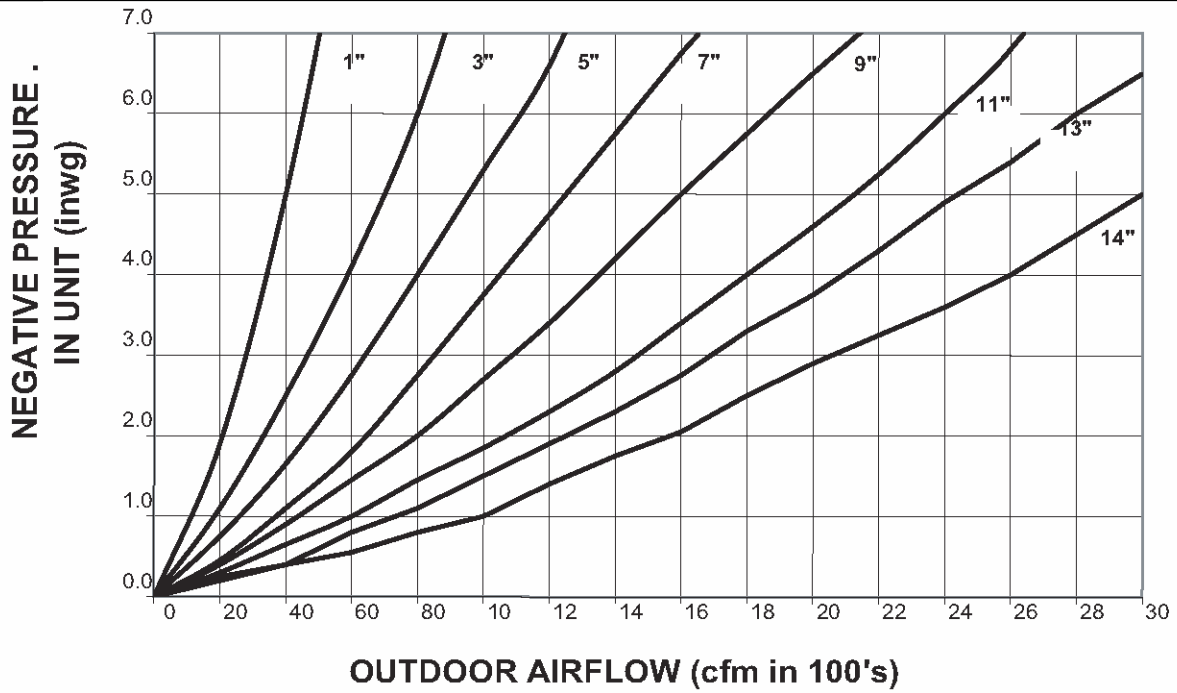


Figure 6

Manual Outdoor-Air Damper Hood Attached

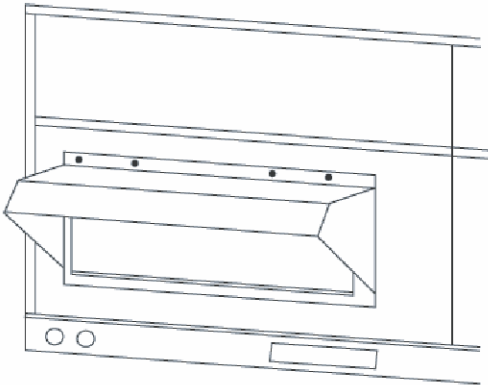


Figure 7

Screen Installed

