

# GAS HEATING AND ELECTRIC COOLING PACKAGED ROOFTOP UNIT

## PARTS REPLACEMENT INFORMATION GUIDE

### COMPRESSOR GROUP

Compressor  
Crankcase Heater

### FILTER GROUP

Filters  
Filter Track

### INDOOR BLOWER GROUP

Blower Assembly  
Blower Stator  
Blower Motor  
Blower Rotor

### OUTDOOR FAN GROUP

Outdoor Motor  
Outdoor Fan Blade  
Outdoor Fan Grill  
Outdoor Fan Air Flow Extension

### CASING GROUP

Top Cover  
Control Box Cover (inner)  
Blower Access Panel  
Compressor Access Panel  
Filter Access Panel

### AIR FLOW CASING

Harness Assembly  
Flow Control Ring  
Mount Ring

### ELECTRICAL GROUP

Control Box  
Compressor Plug/Harness  
Limit Switch(es)  
Unit Control Board  
Capacitor  
Transformer  
Wiring Harness  
Compressor Contactor  
Indoor Motor Contactor  
Outdoor Motor Contactor  
Over-temperature Switch  
Low Voltage Terminal Board  
Integrated Gas Control Board  
Fuse  
Circuit Breaker

### GAS CONTROL GROUP

Manifold  
Burner  
Orifice  
Flame Sensor  
Igniter  
Gas Valve

### GAS HEAT INDUCER GROUP

Inducer Pressure Switch  
Inducer Motor  
Inducer Housing  
Inducer Motor Capacitor  
Inducer Wheel

### HEAT EXCHANGER GROUP

Heat Exchanger Assembly

### COIL AND PIPING GROUP

Indoor Coil  
Outdoor Coil  
Indoor Coil Liquid Header

### Part Information

To obtain information on parts, please consult installing dealer. Model number and serial number are located on the unit rating plate; please have available to ensure correct replacement part.

#### Example of Model Number

MODEL	TONNAGE	VOLTAGE	HEAT SIZE	INDOOR FAN	OUTDOOR AIR	OPTIONS	COIL	PACKAGING	REVISION
RGV	048	L	E	F	A	0A	A	A	A

### **WARNING**

Improper installation, adjustment, alteration, service, or maintenance can cause personal injury, property damage, or death. Consult a qualified installer, service agency, or local gas supplier for information or assistance. The qualified installer or service agency must use only factory-authorized replacement parts, kits, or accessories when modifying this product.