

Carrier Corporation ("Carrier") shall have no obligation or responsibility (including product warranty obligations) with respect to (a) any third-party components not supplied by Carrier, (b) non-compliant installations of Carrier components or (c) configurations of Carrier components that differ from Carrier's recommended configurations. Further, Carrier provides these instructions as a courtesy only, and on an as-is basis. By using these instructions, you acknowledge and agree that use of these instructions is at your own risk.

## Prime Option Connections

### Models: X4

Purpose: The intent of this technical instruction is to provide visual reference for the electrical connections for the Door Switch (DS), Fuel Level Sensor (FLS), Light Bar (LB), Power Control Switch (PCS), and Tire Pressure Inflation System (TPIS) options installed on Prime applications. Refer to the individual installation documents for installation procedures.

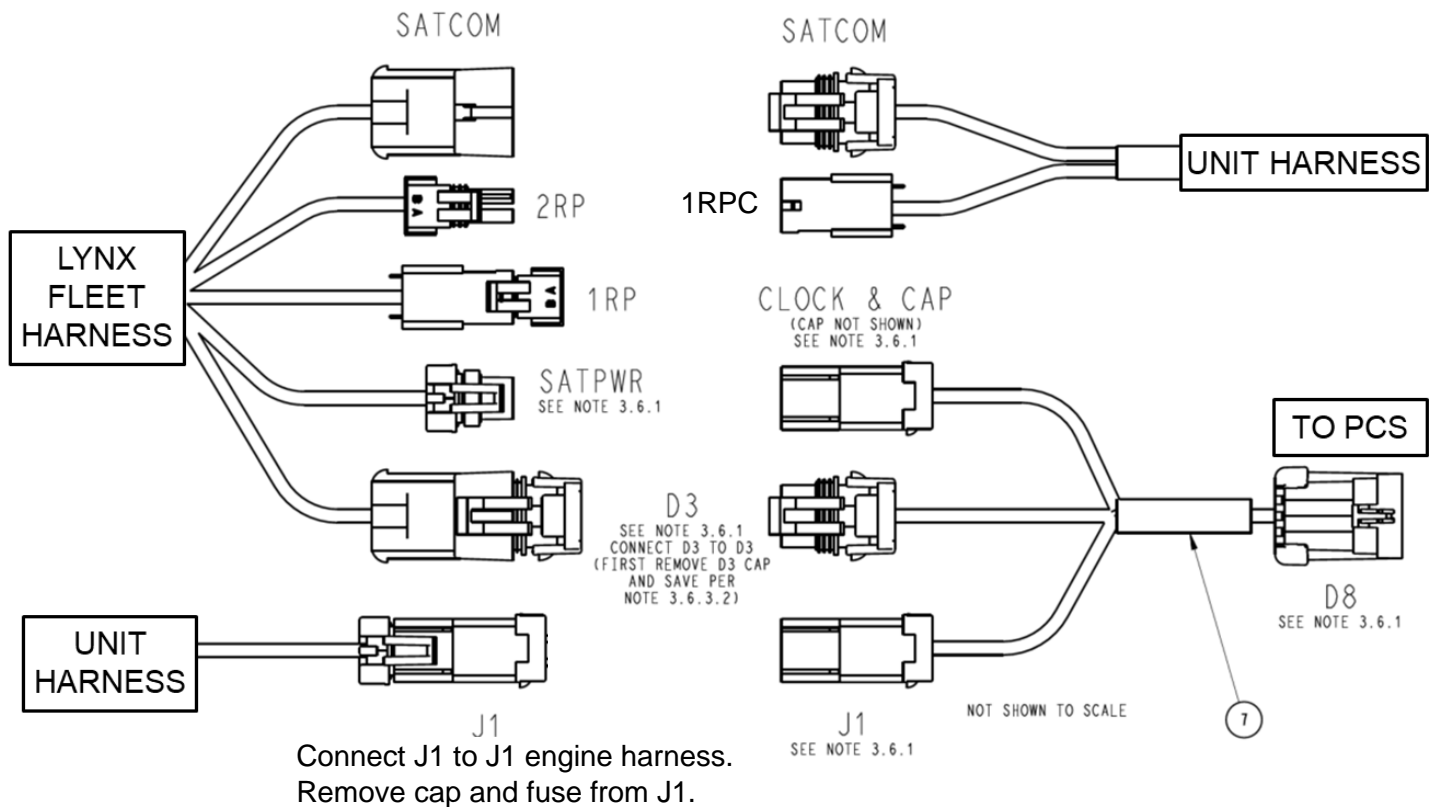


Figure 1. Lynx Fleet/PCS/Unit Harness Connections

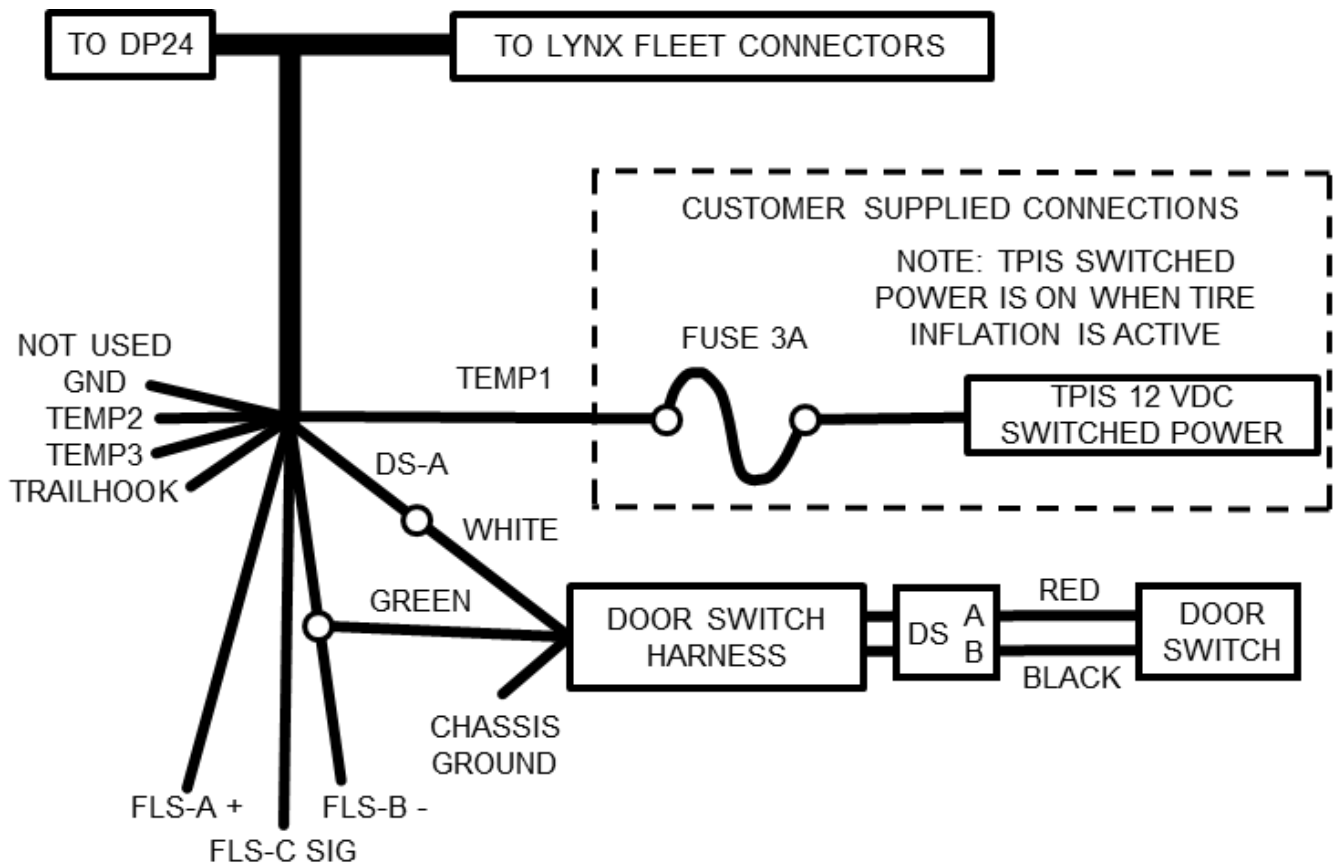


Figure 2. Door Switch/Fuel Level Sensor/TPIS Connections

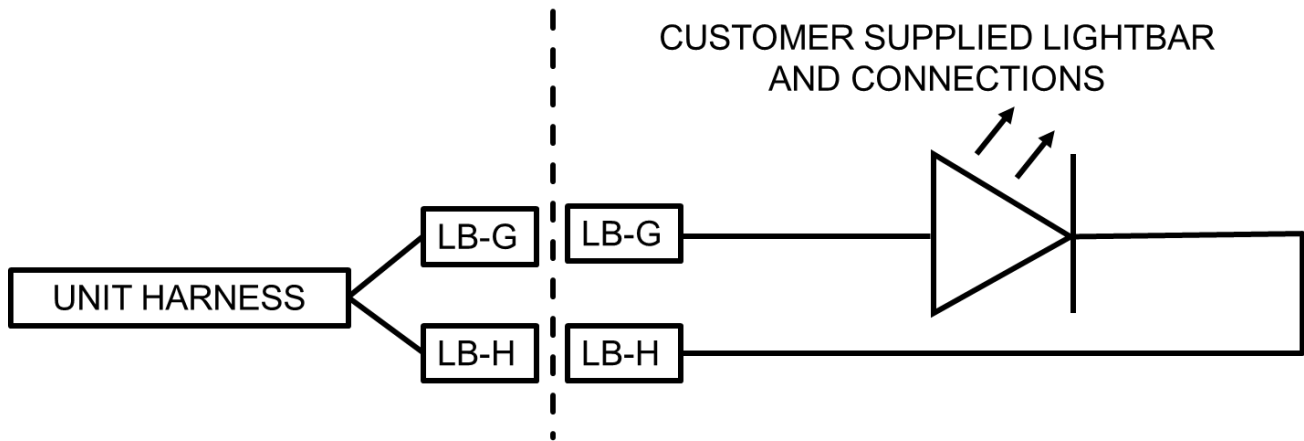


Figure 3. Light Bar Connection