

TECHNICAL INSTRUCTIONS

Carrier Corporation ("Carrier") shall have no obligation or responsibility (including product warranty obligations) with respect to (a) any third-party components not supplied by Carrier, (b) non-compliant installations of Carrier components or (c) configurations of Carrier components that differ from Carrier's recommended configurations. Further, Carrier provides these instructions as a courtesy only, and on an as-is basis. By using these instructions, you acknowledge and agree that use of these instructions is at your own risk.


Air Chute Installation


Models: X4 and Vector

Purpose: The intent of this technical instruction is to provide guidelines for installing air chute for Prime applications.

Required Parts

Quantity	Part Number	Part Description
2	Customer Supplied	Spacer, Transition
1	Customer Supplied	Crossbar
2	Customer Supplied	Hardware, Spacer to Crossbar
1	Customer Supplied	Air chute kit (includes rivets)
7	Customer Supplied	Strip, hook/loop fastener 6.00"
4	Customer Supplied	Screw, #14x1" Hex Head Drill Point
4	Customer Supplied	Washer, Flat ¼"

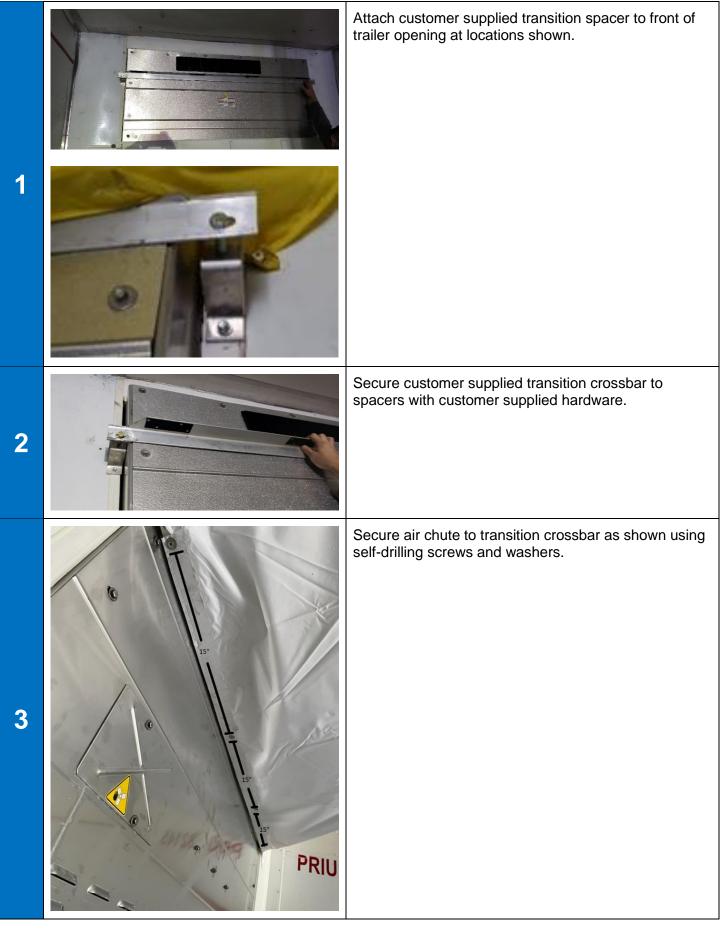

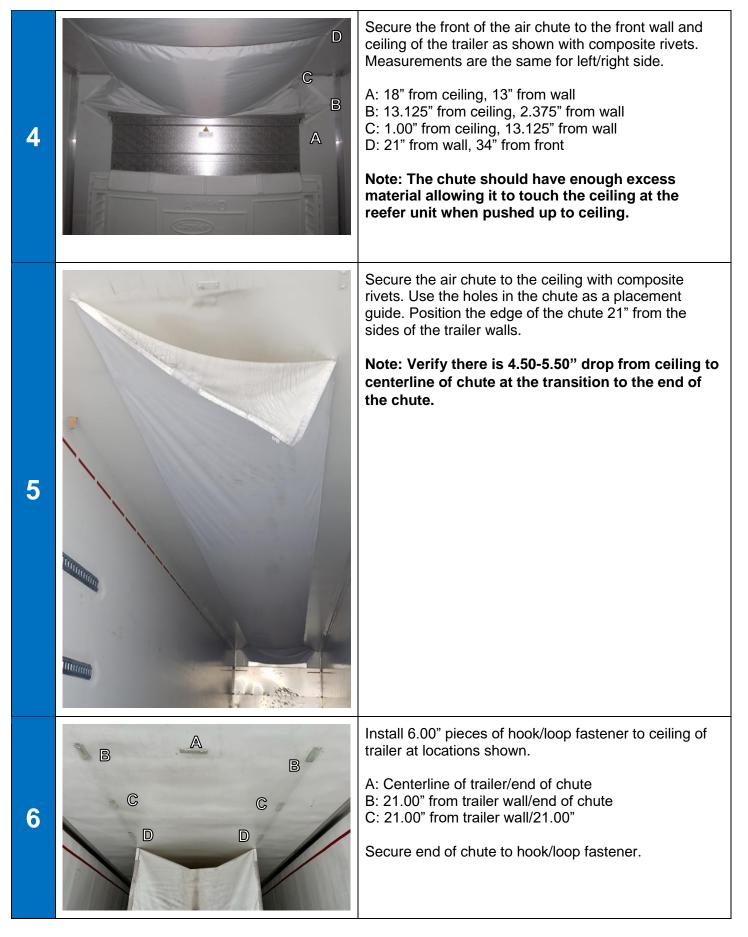

98-50479-00 REV B