



TempTale® GEO APX Global with Alarms User Guide



Start Monitor

1. Press and hold the **Power** button (1).
2. Check the monitor status in Status LED (2):

Blink Pattern	Device Status (2)	User Action
GREEN blinks	Started / Running	Place on shipment
No blinks	ERROR	DO NOT USE!
RED	ERROR	DO NOT USE!

Alarm Status

Check the alarm status in Alarm LED (3):

Blink Pattern	Alarm Status (3)
No blinks	No Alarm
RED	Alarm Triggered



Place Monitor on Shipment

After you have successfully started the monitor, place it on the right side of the last pallet, closest to trailer doors.

