



TECHNICAL INSTRUCTIONS

Carrier Corporation ("Carrier") shall have no obligation or responsibility (including product warranty obligations) with respect to (a) any third-party components not supplied by Carrier®, (b) non-compliant installations of Carrier components or (c) configurations of Carrier components that differ from Carrier's recommended configurations. Further, Carrier provides these instructions as a courtesy only, and on an as-is basis. By using these instructions, you acknowledge and agree that use of these instructions is at your own risk.

Solar Panel Fuse Installation

Models: X4, Vector, and Solara Units Equipped with Solar Panel

Serial Number Range: All

Purpose: For TRUs that are not in service and equipped with solar panels, the solar panel fuse will need to be removed until the battery is installed. The intent of this technical instruction is to provide guidelines for installing the solar panel fuse.



WARNING

Unit may start automatically at any time even if switch is in the OFF position. Use proper lockout / tagout procedures before inspection / servicing. All unit inspection / servicing to be performed by properly trained personnel only.




CAUTION

Install the solar panel fuse after the battery has been installed. Remove the solar panel fuse anytime the battery is disconnected.

Fuse Installation

X4

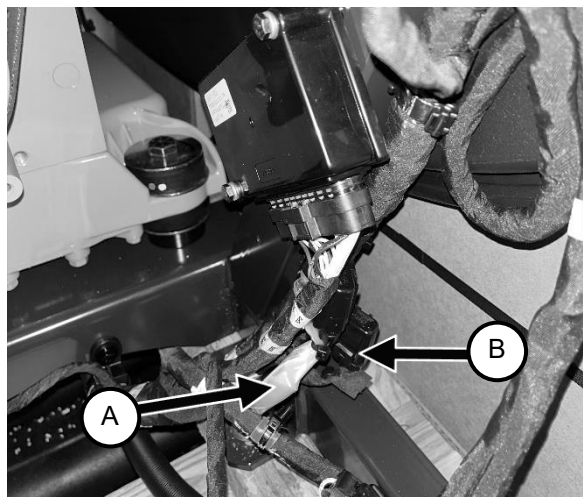

Note: X4™ units starting with WAH91827668 will be shipped with the F13 fuse removed and placed in a plastic bag.

Open the road side door.


Locate the bag attached to the harness near the vertical frame member that is next to the engine.

Remove the fuse (A) from the bag.

Remove the fuse cover (B).

Install the fuse (A) and reinstall the cover (B).

Vector

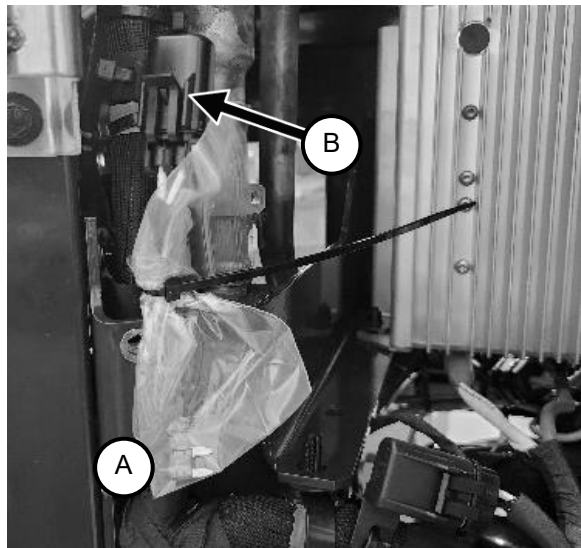

Note: Vector™ units starting with WAH91827668 will be shipped with the F13 fuse removed and placed in a plastic bag.


Open the left center door and locate the bag attached to the harness.

Remove the fuse (A) from the bag.

Remove the fuse cover (B).

Install the fuse (A) and reinstall the cover (B).

Solara

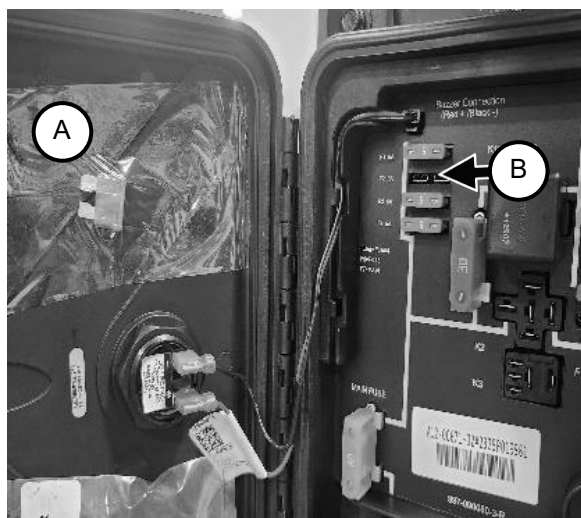

Note: Solara™ units starting with WHW91827703 units will be shipped with the F2 fuse removed and placed inside the Power Control Module (PCM).

Open the unit door.

Open the PCM door.

Remove the fuse (A) from inside the door.

Insert the fuse into the F2 location (B).

Close the PCM door and unit door.