

## Identification and Overview

### CO2 Duct and Rough Service Sensor

- Automatic Air Pressure and Temperature Compensation
- Optimized for Continuously Occupied Areas

The CO2 Duct Sensor is an accurate and reliable way of incorporating demand controlled ventilation. It measures CO2 in ranges of 0 to 2,000, 0 to 5,000 and 0 to 50,000 ppm with a field selectable output of 0 to 5 or 0 to 10 VDC.

The Dual Channel “24/7” unit is optimized for continuously occupied areas and features a 3-point calibration process for enhanced accuracy and reliability.

Altitude and weather patterns can affect CO2 sensors, even putting them outside of their specified accuracy. The unit has a built-in Barometric pressure sensor that continuously compensates the output for accurate readings despite the weather or altitude.

The Duct unit samples duct air using an aspiration tube. The Rough Service unit features a ventilated Box and is ideal for areas such as outdoor air plenums, equipment rooms, green houses and warehouses. For 0 to 2,000 ppm units, the CO2 level is indicated as “Good, Fair or Poor” by three LED’s on the front of the unit. If it reaches the top of the ppm range, the red LED will begin to flash.



Duct Sensor



Rough Service Sensor

<b>Part #s:</b>	<b>N1-DCD05-5K-D-BB-C:</b>	Dual channel CO2, 0-5V output, 0-5000 ppm range, Duct Sensor version, BBox enclosure, no LEDs in the cover, Carrier® Branded
	<b>N1-DCD10-5K-D-BB-C:</b>	Dual channel CO2, 0-10V output, 0-5000 ppm range, Duct Sensor version, BBox enclosure, no LEDs in the cover, Carrier® Branded
	<b>N1-DCD10-D-BB-LED-C:</b>	Dual channel CO2, 0-10V output, 0-2000 ppm range, Duct Sensor version, BBox enclosure, “Good, Fair, Poor” status LEDs, Carrier® Branded

## Specifications

### Power:

12 to 24 VDC, 240 mA • 18 to 24 VAC, 12 VA Peak

### Field Selectable Voltage Output:

0 to 5 or 0 to 10 VDC

**Termination:** 3 Terminals, 16 to 22 AWG

### Operating Environment:

32 to 122°F (0 to 50°C)

0 to 95%RH non-condensing

### CO2 Sensing Element:

Dual Channel Non-Dispersive Infrared (NDIR)

**Unventilated Box Enclosure Rating:** NEMA 4, IP66

**Enclosure Material:** Polycarbonate, UL94 V-O

### CO2 Detection Range:

0 to 2,000, 0 to 5,000 and 0 to 50,000 ppm

**Start-Up Time:** <2 Minutes

### Response Time:

<2 Minutes for 90% step change typical (after start-up)

**LED CO2 Level Indicator (0 to 2,000 ppm units only):** Good, Green < 1,000 ppm

Fair, Yellow = 1,000 to 1,500 ppm Poor, Red > 1,500 ppm

### CO2 Accuracy:

400 to 1,000 ppm: ±75 ppm



>1,000 ppm: ±10% of reading

### CO2 Drift Stability:

<5% of full scale over life of product. Agency: RoHS, CE, Title 24 Requirements Warranty Period: 5 Years

#40698 – 4/15/24


## Dimensional Drawing

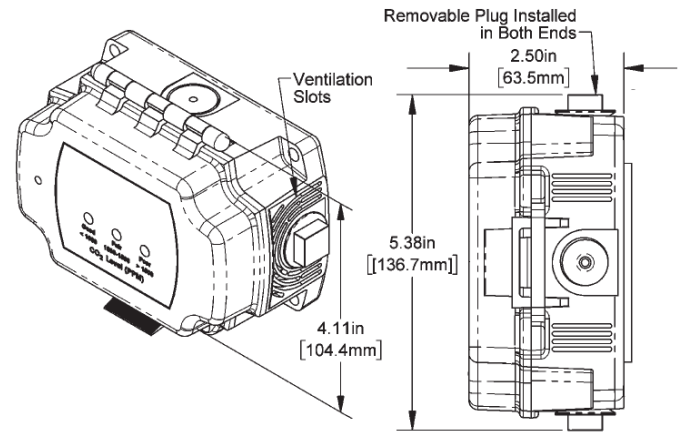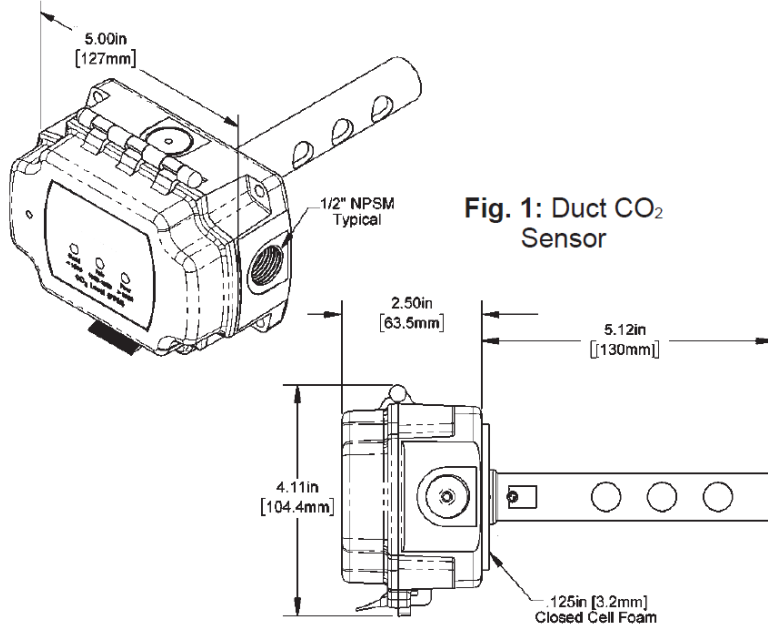

#40698 – 4/15/24

### Mounting

#### Mounting Template – Actual Size

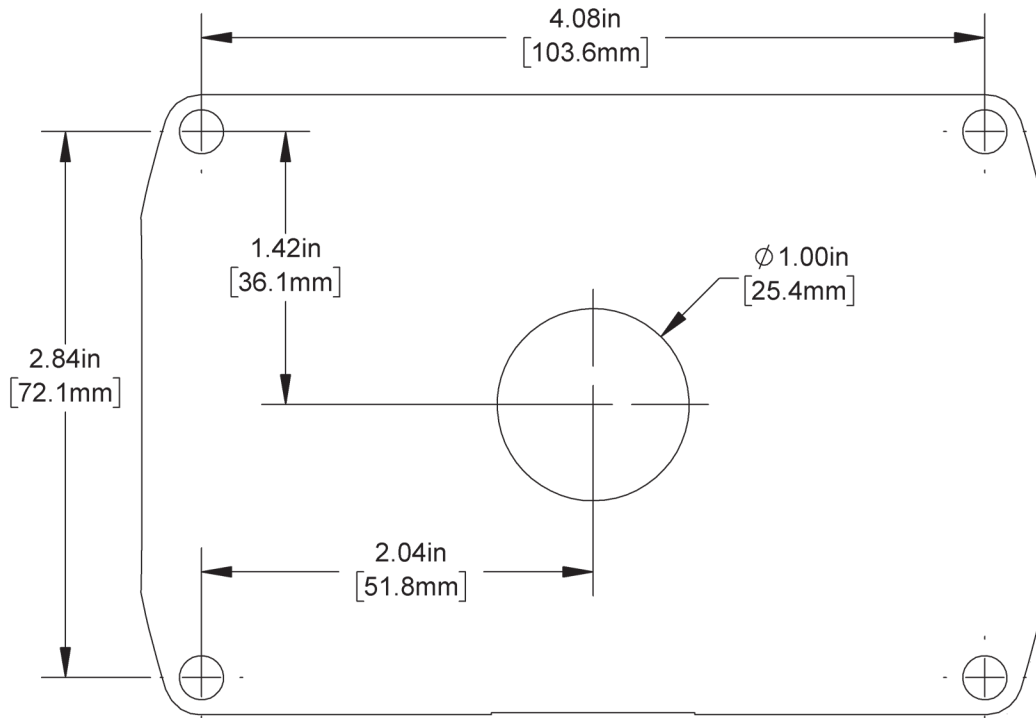


#### Rough Service Unit Mounting

Mount the Rough Service sensor on a solid, non-vibrating surface. Wall mounting in a room should be 3 to 5 feet above floor level. The Rough Service CO2 transmitter may be mounted in any orientation. If you are mounting inside a duct or mixing box, mount with the latch facing into the moving air.

Refer to local codes for further sensor/transmitter installation information.


1. We recommend #10 (provided) screws of a type and length suitable for the mounting surface. Four mounting screws keeps the box from twisting, twisting may prevent the latch from operating properly. A pilot-hole makes mounting easier. Use the enclosure mounting feet to mark the pilot-hole locations.
2. Snug up the screws so that the foam backing is depressed but do not over-tighten or strip the screw threads.
3. Place the provided #6 screws into the holes on each side of the lid latch to make the cover tamper resistant.

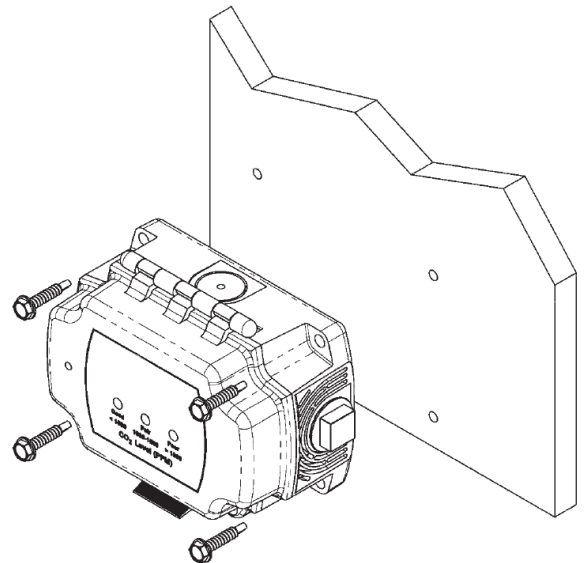




#40698 – 4/15/24

### Duct Unit Mounting

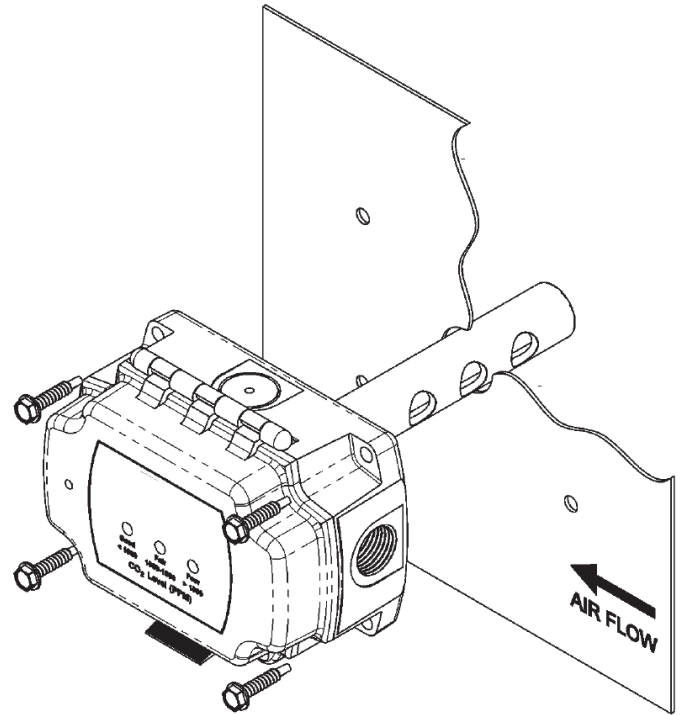1. We recommend placing the sensor in the middle of the duct wall, away from stratified air, to achieve the best reading. The unit should also be a minimum of 3 duct diameters from an elbow, damper or other duct restriction.
2. Drill a 1" hole for the aspiration probe. Position the box so that airflow is directly into the holes on one side of the aspiration probe. There are no upstream or downstream holes, the air direction is not important.
3. Mount the enclosure to the duct using recommended #10 screws (provided) through a minimum of two of the mounting feet on opposite corners. A 1/8" pilot screw hole in the duct makes mounting easier. Use the enclosure mounting feet to mark the pilot-hole locations.
4. Snug up the screws so that the foam backing is depressed to prevent air leakage but do not over-tighten or strip the threads.
5. Use the provided #6 screws to secure the cover for IP66 rating.
6. We recommend sealing the conduit opening with fiberglass insulation.



### Termination

 <b>Warning</b>	<p>Do NOT run this device's wiring in the same conduit as AC power wiring. Tests show that fluctuating and inaccurate signal levels are possible when AC power wiring is present in the same conduit as the signal lines.</p>
 <b>Caution</b>	<ul style="list-style-type: none"> <li>• Do not wire the product with power disconnected. Proper supply voltage, polarity, and wiring connections are important to a successful installation. Not observing these recommendations may damage the product and will void the warranty.</li> <li>• All wiring must comply with the National Electric Code (NEC) and local codes.</li> </ul>
 <b>Tip</b>	<p>We recommend using twisted pair of at least 22AWG and sealant filled connectors for all wire connections. Larger gauge wire may be required for long runs.</p>



# CO2 Duct and Rough Service Sensor


## Installation and Operation

#40698 – 4/15/24



Terminal	Function
VIN	12 to 24 VDC, 240mA 18 to 24 VAC, 12 VA Peak
GND	To controller Ground [GND or Common]
VOUT	Voltage Output, CO2 Signal 0 to 5 or 0 to 10 VDC, Referenced to GND

The CO2 outputs may be field configured for 0 to 5 VDC or 0 to 10 VDC outputs at any time. Set the jumpers on J1 as shown in the figures below.

### J1 set for 0 to 10 VDC output

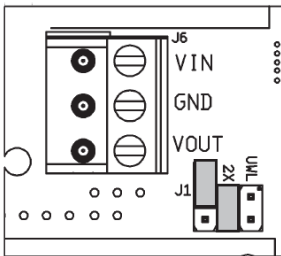


### J1 set for 0 to 5 VDC output

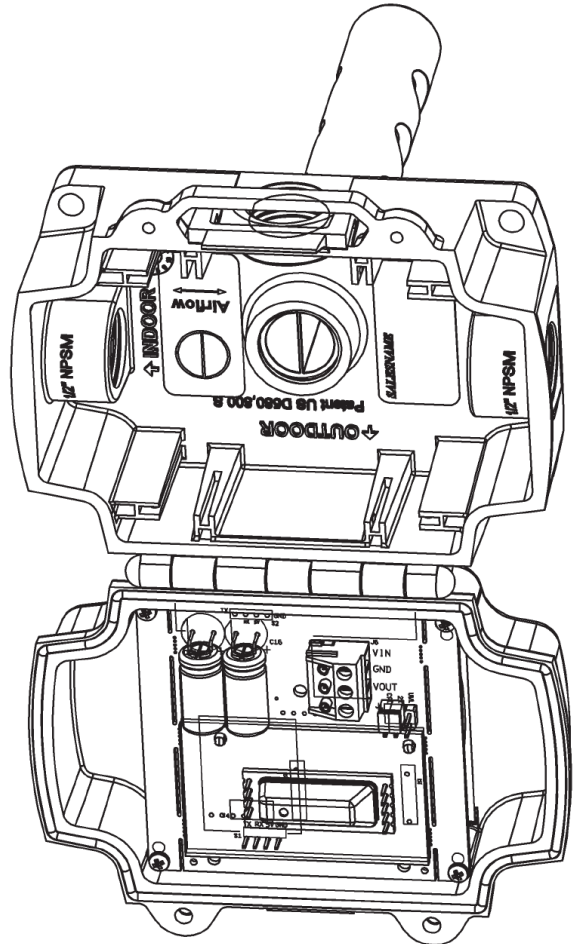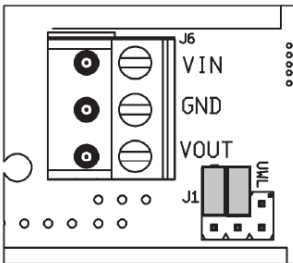

## POWERING WITH A VC350A VOLTAGE CONVERTER


The CO2 unit requires 240mA of current to operate correctly. If this is more current than can be provided by the controller power output, then the unit can be powered by a VC350A or VC350A-EZ Voltage Converter (VC350A shown here).

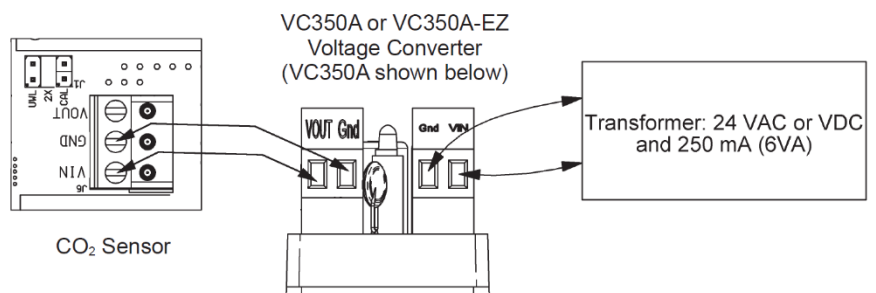

### Keeping the Enclosure Air Tight After Termination

For the sensor to work correctly, the wiring entrance must remain air tight. If the CO2 transmitter is mounted to a hollow wall and wired through its back, or wired with conduit, it is possible that a draft of clean air may fill the enclosure through the wiring opening. This draft may prevent the unit from measuring ambient CO2. We recommend either a liquid-tight fitting or plugging the conduit at the enclosure.

- **Liquid-Tight Fitting – Liquid-Tight Fitting (BA/LTF)** allows wire cables of 0.1 to 0.3 inch outside diameter to enter the box. Tightening the collar onto the wire cable keeps the wiring entrance air tight.
- **Conduit** – Included with the CO2 transmitter is a foam plug to seal the ½ inch EMT. Place the wires into the plug as shown and then insert the plug into the conduit sealing the conduit.

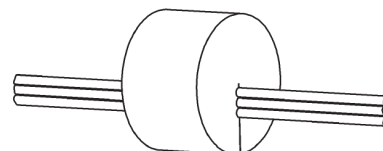




### Diagnostics

Possible Problems:	Possible Solutions:
General troubleshooting	<ul style="list-style-type: none"> <li>• Determine that the input is set up correctly in the controller's and building automation software.</li> <li>• Check wiring at the sensor and controller for proper connections.</li> <li>• Check for corrosion at either the controller or the sensor. Clean off the corrosion, re-strip the interconnecting wire and reapply the connection. In extreme cases, replace the controller, interconnecting wire and/or sensor.</li> <li>• Check the wiring between the sensor and controller. Label the terminals at the sensor end and the controller end. Disconnect the interconnecting wires from the controller and the sensor. With the wires disconnected, measure the resistance from wire-to-wire with a multimeter. The meter should read greater than 10 Meg-ohms, open or OL depending on the meter. Short the interconnecting wires together at one end. Go to the other end and measure the resistance from wire-to-wire with a multimeter. The meter should read less than 10 ohms (22 gauge or larger, 250 feet or less). If either test fails, replace the wire.</li> <li>• Check power supply/controller voltage supply</li> <li>• Disconnect sensor and check power wires for proper voltage (see specifications)</li> </ul>
Incorrect CO2 Reading	<ul style="list-style-type: none"> <li>• Wait 15 minutes after a power interruption.</li> <li>• Check all BAS controller software parameters.</li> <li>• Determine if the sensor is exposed to an external environment different from the duct area that is being measured.</li> <li>• If the sensor is reading consistently high, make sure that the power supply to the unit can provide 240mA. A low power situation will cause high CO2 readings.</li> </ul> <p>Note: If the CO2 sensor has consistently given high PPM readings for over 5 days, it will take up to 14 days for the readings to return to normal.</p>



#40698 – 4/15/24

## Appendix – Symbols Key

 <b>Warning</b>	Potential for death, serious injury, or permanent damage to a system.
 <b>Caution</b>	Potential for injury, damage to a system, or system failure.
 <b>Tip</b>	Useful information not related to injury or system damage.