

TOSHIBA

Carrier

AIR CONDITIONER (MULTI TYPE)

SERVICE MANUAL

Indoor unit

<Compact 4-way cassette type>

MMU-UB0071MHP-UL

MMU-UB0091MHP-UL

MMU-UB0121MHP-UL

MMU-UB0151MHP-UL

MMU-UB0181MHP-UL

R454B



February, 2025

CONTENTS

PRECAUTIONS FOR SAFETY	6
1. SPECIFICATIONS	13
2. CONSTRUCTION VIEWS (EXTERNAL VIEWS)	15
3. WIRING DIAGRAMS	16
4. PARTS RATING	17
5. REFRIGERANT CYCLE DIAGRAM	18
6. CONTROL OUTLINE	19
7. COMMUNICATION TYPE, MODEL NAMES AND THE MAXIMUM NUMBER OF CONNECTABLE UNITS	34
8. APPLIED CONTROL AND FUNCTIONS (INCLUDING CIRCUIT CONFIGURATION)	35
8-1. Indoor controller block diagram (MCC-1797)	35
8-1-1. In case of connection of wired remote controller	35
8-1-2. In case of connection of wireless remote controller	36
8-1-3. Connection of both wired remote controller and wireless remote controller ..	37
8-2. Indoor Print Circuit Board	38
8-3. Test run of indoor unit	40
8-4. Method to set indoor unit function DN code	42
8-5. Applied control of indoor unit	47
9. TROUBLESHOOTING	58
9-1. Overview	58
9-2. Troubleshooting method	59
9-3. Troubleshooting based on information displayed on remote controller	65
9-4. Check Codes	70
9-5. Diagnostic Procedure for Each Check Code (Indoor Unit)	85
9-6. Sensor characteristics	98
10. REPLACEMENT OF SERVICE P.C. BOARD.....	99
11. DETACHMENTS	103
12. EXPLODED VIEWS AND PARTS LIST	113

SAFETY CAUTION

Please read carefully through these instructions that contain important information and ensure that you understand them.

Generic Denomination: Air Conditioner

Definition of Qualified Installer or Qualified Service Person

The air conditioner must be installed, maintained, repaired and removed by a qualified installer or qualified service person. When any of these jobs is to be done, ask a qualified installer or qualified service person to do them for you.

A qualified installer or qualified service person is an agent who has the qualifications and knowledge described in the table below.

Agent	Qualifications and knowledge which the agent must have
Qualified installer	<ul style="list-style-type: none">• The qualified installer is a person who installs, maintains, relocates and removes the air conditioners. He or she has been trained to install, maintain, relocate and remove the air conditioners he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations.• The qualified installer who is allowed to do the electrical work involved in installation, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.• The qualified installer who is allowed to do the refrigerant handling and piping work involved in installation, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.• The qualified installer who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.
Qualified service person	<ul style="list-style-type: none">• The qualified service person is a person who installs, repairs, maintains, relocates and removes the air conditioners. He or she has been trained to install, repair, maintain, relocate and remove the air conditioners he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations.• The qualified service person who is allowed to do the electrical work involved in installation, repair, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.• The qualified service person who is allowed to do the refrigerant handling and piping work involved in installation, repair, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.• The qualified service person who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.

Definition of Protective Gear

When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.




In addition to such normal protective gear, wear the protective gear described below when undertaking the special work detailed in the table below.

Failure to wear the proper protective gear is dangerous because you will be more susceptible to injury, burns, electric shocks and other injuries.

Work undertaken	Protective gear worn
All types of work	Protective gloves 'Safety' working clothing
Electrical-related work	Gloves to provide protection for electricians Insulating shoes Clothing to provide protection from electric shock
Work done at heights (50 cm or more)	Helmets for use in industry
Transportation of heavy objects	Shoes with additional protective toecap
Repair of outdoor unit	Gloves to provide protection for electricians




The important contents concerned to the safety are described on the product itself and on this Service Manual. Please read this Service Manual after understanding the described items thoroughly in the following contents (Indications / Illustrated marks), and keep them.

[Explanation of indications]





Indication	Explanation
 DANGER	Indicates contents assumed that an imminent danger causing a death or serious injury of the repair engineers and the third parties when an incorrect work has been executed.
 WARNING	Indicates possibilities assumed that a danger causing a death or serious injury of the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.
 CAUTION	Indicates contents assumed that an injury or property damage (*) may be caused on the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.






* Property damage: Enlarged damage concerned to property, furniture, and domestic animal / pet

[Explanation of illustrated marks]

Indication	Explanation
	Indicates prohibited items (Forbidden items to do) The sentences near an illustrated mark describe the concrete prohibited contents.
	Indicates mandatory items (Compulsory items to do) The sentences near an illustrated mark describe the concrete mandatory contents.
	Indicates cautions (Including danger / warning) The sentences or illustration near or in an illustrated mark describe the concrete cautious contents.

■ Warning indications on the Air Conditioner Unit





 <div> R454B Refrigerant Safety Group A2L </div>	WARNING (Risk of fire)	This mark is for R454B refrigerant only. Refrigerant type is written on nameplate of outdoor unit. In case that refrigerant type is R454B, this unit uses a flammable refrigerant. If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.
	Read the OWNER'S MANUAL carefully before operation.	
	Service personnel are required to carefully read the OWNER'S MANUAL and INSTALLATION MANUAL before operation.	
	Further information is available in the OWNER'S MANUAL, INSTALLATION MANUAL, and the like.	

Warning indication		Description
	WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.	WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.
	WARNING Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.	WARNING Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.
	CAUTION High temperature parts. You might get burned when removing this panel.	CAUTION High temperature parts. You might get burned when removing this panel.
	CAUTION Do not touch the aluminum fins of the unit. Doing so may result in injury.	CAUTION Do not touch the aluminium fins of the unit. Doing so may result in injury.
	CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.	CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.

PRECAUTIONS FOR SAFETY



The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.

DANGER







 Turn off breaker	Before carrying out the installation, maintenance, repair or removal work, be sure to set the circuit breaker for both the indoor and outdoor units to the OFF position. Otherwise, electric shocks may result.
	Before opening the intake grille of the indoor unit or service panel of the outdoor unit, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in electric shocks through contact with the interior parts. Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the intake grille of the indoor unit or service panel of the outdoor unit and do the work required.
	Before opening the electric box cover set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in injury through contact with the rotation parts. Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the electric box cover and do the work required.
	Before starting to repair the outdoor unit fan or fan guard, be absolutely sure to set the circuit breaker to the OFF position, and place a "Work in progress" sign on the circuit breaker.
	When cleaning the filter or other parts of the indoor unit, set the circuit breaker to OFF without fail, and place a "Work in progress" sign near the circuit breaker before proceeding with the work.
	When you have noticed that some kind of trouble (such as when a check code display has appeared, there is a smell of burning, abnormal sounds are heard, the air conditioner fails to cool or heat or water is leaking) has occurred in the air conditioner, do not touch the air conditioner yourself but set the circuit breaker to the OFF position, and contact a qualified service person. Take steps to ensure that the power will not be turned on (by marking "out of service" near the circuit breaker, for instance) until qualified service person arrives. Continuing to use the air conditioner in the trouble status may cause mechanical problems to escalate or result in electric shocks or other failure.
 Electric shock hazard	When you access inside of the electric cover to repair electric parts, wait for about five minutes after turning off the breaker. Do not start repairing immediately. Otherwise you may get electric shock by touching terminals of high-voltage capacitors. Natural discharge of the capacitor takes about five minutes.
	When checking the electric parts, removing the cover of the electric parts box of Indoor Unit and/or service panel of Outdoor Unit inevitably to determine the failure, use gloves to provide protection for electricians, insulating shoes, clothing to provide protection from electric shock and insulating tools. Be careful not to touch the live part. Electric shock may result. Only "Qualified service person" is allowed to do this work.
 Prohibition	Place a "Work in progress" sign near the circuit breaker while the installation, maintenance, repair or removal work is being carried out. There is a danger of electric shocks if the circuit breaker is set to ON by mistake.
	When checking the electric parts, removing the cover of the electric parts box of Indoor Unit and/or front panel of outdoor unit inevitably to determine the failure, put a sign "Do not enter" around the site before the work. Failure to do this may result in third person getting electric shock.
	Before operating the air conditioner after having completed the work, check that the electrical parts box cover of the indoor unit and service panel of the outdoor unit are closed, and set the circuit breaker to the ON position. You may receive an electric shock if the power is turned on without first conducting these checks.
 Stay on protection	If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, wear insulated heat-resistant gloves, insulated boots and insulated work overalls, and take care to avoid touching any live parts. You may receive an electric shock if you fail to heed this warning. Only qualified service person (*1) is allowed to do this kind of work.








(*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"

WARNING



 General	Before starting to repair the air conditioner, read carefully through the Service Manual, and repair the air conditioner by following its instructions.
	Only qualified service person (*1) is allowed to repair the air conditioner. Repair of the air conditioner by unqualified person may give rise to a fire, electric shocks, injury, water leaks and / or other problems.
	Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
	Only a qualified installer (*1) or qualified service person (*1) is allowed to carry out the electrical work of the air conditioner. Under no circumstances must this work be done by an unqualified individual since failure to carry out the work properly may result in electric shocks and / or electrical leaks.
	When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.
	To connect the electrical wires, repair the electrical parts or undertake other electrical jobs, wear gloves to provide protection for electricians, insulating shoes and clothing to provide protection from electric shocks. Failure to wear this protective gear may result in electric shocks.
	Electrical wiring work shall be conducted according to law and regulation in the community and Installation Manual. Failure to do so may result in electrocution or short circuit.
	Use wiring that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws. Use of wiring which does not meet the specifications may give rise to electric shocks, electrical leakage, smoking and/or a fire.
	Only a qualified installer (*1) or qualified service person (*1) is allowed to undertake work at heights using a stand of (19.7" (50 cm)) or more or to remove the intake grille of the indoor unit to undertake work.
	When working at heights, use a ladder which complies with the ISO 14122 standard, and follow the procedure in the ladder's instructions. Also wear a helmet for use in industry as protective gear to undertake the work.
	Before working at heights, put a sign in place so that no-one will approach the work location, before proceeding with the work. Parts and other objects may fall from above, possibly injuring a person below. While carrying out the work, wear a helmet for protection from falling objects.
	When executing address setting, test run, or troubleshooting through the checking window on the electric parts box, put on insulated gloves to provide protection from electric shock. Otherwise you may receive an electric shock.
	Do not touch the aluminum fin of the unit. You may injure yourself if you do so. If the fin must be touched for some reason, first put on protective gloves and safety work clothing, and then proceed.
	Do not climb onto or place objects on top of the outdoor unit. You may fall or the objects may fall off the outdoor unit and result in injury.
	Use forklift truck to carry in the air conditioner units and use winch or hoist at installation of them.
	When transporting the air conditioner, wear shoes with protective toe caps, protective gloves and other protective clothing.
	When transporting the air conditioner, do not hold the bands around the packing carton. You may injure yourself if the bands should break.
	Be sure that a heavy unit (22lbs (10kg) or heavier) such as a compressor is carried by four persons.
	This air conditioner has passed the pressure test as specified in UL 60335-2-40 Annex EE.
 Check earth wires.	Before troubleshooting or repair work, check the earth wire is connected to the earth terminals of the main unit, otherwise an electric shock is caused when a leak occurs. If the earth wire is not correctly connected, contact an electric engineer for rework.
	After completing the repair or relocation work, check that the ground wires are connected properly.
	Connect earth wire. (Grounding work) Incomplete grounding causes an electric shock. Do not connect earth wires to gas pipes, water pipes, and lightning rods or ground wires for telephone wires.

(*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"

 Prohibition of modification.	Do not modify the products. Do not also disassemble or modify the parts. It may cause a fire, electric shock or injury.
 Use specified parts.	When any of the electrical parts are to be replaced, ensure that the replacement parts satisfy the specifications given in the Service Manual (or use the parts contained on the parts list in the Service Manual). Use of any parts which do not satisfy the required specifications may give rise to electric shocks, smoking and / or a fire.
 Do not bring a child close to the equipment.	If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, put a sign in place so that no-one will approach the work location before proceeding with the work. Third-party individuals may enter the work site and receive electric shocks if this warning is not heeded.
 Insulating measures	Connect the cut-off lead wires with crimp contact, etc., put the closed end side upward and then apply a watercut method, otherwise a leak or production of fire is caused at the users' side.
 No fire	When performing repairs using a gas burner, replace the refrigerant with nitrogen gas because the oil that coats the pipes may otherwise burn. When repairing the refrigerating cycle, take the following measures. 1) Be attentive to fire around the cycle. When using a gas stove, etc., be sure to put out fire before work; otherwise the oil mixed with refrigerant gas may catch fire. 2) Do not use a welder in the closed room. When using it without ventilation, carbon monoxide poisoning may be caused. 3) Do not bring inflammables close to the refrigerant cycle, otherwise fire of the welder may catch the inflammables.
 Refrigerant	The refrigerant used by this air conditioner is the R454B.
	Check the used refrigerant name and use tools and materials of the parts which match with it. The refrigerant name is indicated at a position on the outdoor unit where is easy to see. To prevent miss charging, the route of the service port is changed from one of the former R22.
	Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
	Never use refrigerants other than those indicated on the outdoor unit (R454B). For an air conditioner which uses other refrigerant (R22, etc.), never use R454B. If different types of refrigerant are mixed, abnormal high pressure generates in the refrigerating cycle and an injury due to breakage may be caused.
	When the air conditioner has been installed or relocated, follow the instructions in the Installation Manual and purge the air completely so that no gases other than the refrigerant will be mixed in the refrigerating cycle. Failure to purge the air completely may cause the air conditioner to malfunction.
	Do not charge refrigerant additionally. If charging refrigerant additionally when refrigerant gas leaks, the refrigerant composition in the refrigerating cycle changes resulted in change of air conditioner characteristics or refrigerant over the specified standard amount is charged and an abnormal high pressure is applied to the inside of the refrigerating cycle resulted in cause of breakage or injury. Therefore if the refrigerant gas leaks, recover the refrigerant in the air conditioner, execute vacuuming, and then newly recharge the specified amount of liquid refrigerant. In this time, never charge the refrigerant over the specified amount.
	When recharging the refrigerant, do not mix air and any refrigerant other than the specified refrigerant. If air or others is mixed with the refrigerant, abnormal high pressure generates in the refrigerating cycle resulted in cause of injury due to breakage.
	After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous. Never recover the refrigerant into the outdoor unit. When the equipment is moved or repaired, be sure to recover the refrigerant with recovering device. The refrigerant cannot be recovered in the outdoor unit; otherwise a serious accident such as breakage or injury is caused.

 Assembly / Wiring	After repair work, surely assemble the disassembled parts, and connect and lead the removed wires as before. Perform the work so that the cabinet or panel does not catch the inner wires. If incorrect assembly or incorrect wire connection was done, a disaster such as a leak or fire is caused at user's side.
 Insulator check	After the work has finished, be sure to use an insulation tester set (500VMΩ) to check the resistance is 1 MΩ or more between the charge section and the non-charge metal section (Earth position). If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side.
 Ventilation	When the refrigerant gas leaks during work, execute ventilation. If the refrigerant gas touches to a fire, poisonous gas generates. A case of leakage of the refrigerant and the closed room full with gas is dangerous because a shortage of oxygen occurs. Be sure to execute ventilation.
	If refrigerant gas has leaked during the installation work, ventilate the room immediately. If the leaked refrigerant gas comes in contact with fire, noxious gas may generate.
	After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous.
 Compulsion	When the refrigerant gas leaks, find out the leaked position and repair it surely. If the leaked position cannot be found out and the repair work is interrupted, reclaim and tighten the service valve, otherwise the refrigerant gas may leak into the room. The poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous. When installing equipment which includes a large amount of charged refrigerant in a sub-room, it is necessary that the concentration does not the limit even if the refrigerant leaks. If the refrigerant leaks and exceeds the limit concentration, an accident of shortage of oxygen is caused.
	Tighten the flare nut with a torque wrench in the specified manner. Excessive tighten of the flare nut may cause a crack in the flare nut after a long period, which may result in refrigerant leakage.
	Nitrogen gas must be used for the airtight test.
	The charge hose must be connected in such a way that it is not slack.
	For the installation / moving / reinstallation work, follow to the Installation Manual. If an incorrect installation is done, a trouble of the refrigerating cycle, water leak, electric shock or fire is caused.
 Check after repair	Once the repair work has been completed, check for refrigerant leaks, and check the insulation resistance and water drainage. Then perform a trial run to check that the air conditioner is running properly.
	After repair work has finished, check there is no trouble. If check is not executed, a fire, electric shock or injury may be caused. For a check, turn off the power breaker.
	After repair work (installation of front panel and cabinet) has finished, execute a test run to check there is no generation of smoke or abnormal sound. If check is not executed, a fire or an electric shock is caused. Before test run, install the front panel and cabinet.
	Be sure to fix the screws back which have been removed for installation or other purposes.
 Do not operate the unit with the valve closed.	Check the following matters before a test run after repairing piping. • Connect the pipes surely and there is no leak of refrigerant. • The valve is opened. Running the compressor under condition that the valve closes causes an abnormal high pressure resulted in damage of the parts of the compressor and etc. and moreover if there is leak of refrigerant at connecting section of pipes, the air is sucked and causes further abnormal high pressure resulted in burst or injury.
 Check after reinstallation	Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and / or vibration may result.
	Check the following items after reinstallation. 1) The earth wire is correctly connected. 2) The power cord is not caught in the product. 3) There is no inclination or unsteadiness and the installation is stable. If check is not executed, a fire, an electric shock or an injury is caused.
	When carrying out the reclaim work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in rupture, injury, etc.

(*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"

	<p>When the service panel of the outdoor unit is to be opened in order for the compressor or the area around this part to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel.</p> <p>If you fail to heed this warning, you will run the risk of burning yourself because the compressor pipes and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.</p>
	<p>Take care not to get burned by compressor pipes or other parts when checking the cooling cycle while running the unit as they get heated while running. Be sure to put on gloves providing protection for heat.</p>
Cooling check	<p>When the service panel of the outdoor unit is to be opened in order for the fan motor, reactor, inverter or the areas around these parts to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel.</p> <p>If you fail to heed this warning, you will run the risk of burning yourself because the fan motor, reactor, inverter heat sink and other parts will be very hot to the touch.</p> <p>In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.</p>
	<p>Only a qualified installer or service person is allowed to do installation work. Inappropriate installation may result in water leakage, electric shock or fire.</p>
	<p>Before starting to install the air conditioner, read carefully through the Installation Manual, and follow its instructions to install the air conditioner.</p>
	<p>Be sure to use the company-specified products for the separately purchased parts. Use of non-specified products may result in fire, electric shock, water leakage or other failure. Have the installation performed by a qualified installer.</p>
	<p>Do not supply power from the power terminal block equipped on the outdoor unit to another outdoor unit. Capacity overflow may occur on the terminal block and may result in fire.</p>
	<p>Do not install the air conditioner in a location that may be subject to a risk of exposure to a combustible gas. If a combustible gas leaks and becomes concentrated around the unit, a fire may occur.</p>
	<p>Install the indoor unit at least 8'2" (2.5 m) above the floor level since otherwise the users may injure themselves or receive electric shocks if they poke their fingers or other objects into the indoor unit while the air conditioner is running.</p>
	<p>Install a circuit breaker that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws.</p>
	<p>Install the circuit breaker where it can be easily accessed by the agent.</p>
	<p>If you install the unit in a small room, take appropriate measures to prevent the refrigerant from exceeding the limit concentration even if it leaks. Consult the dealer from whom you purchased the air conditioner when you implement the measures. Accumulation of highly concentrated refrigerant may cause an oxygen deficiency accident.</p>
	<p>Do not place any combustion appliance in a place where it is directly exposed to the wind of air conditioner, otherwise it may cause imperfect combustion.</p>

Explanations given to user

If you have discovered that the fan grille is damaged, do not approach the outdoor unit but set the circuit breaker to the OFF position, and contact a qualified service person to have the repairs done. Do not set the circuit breaker to the ON position until the repairs are completed.

Relocation

- Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and / or vibration may result.
- When carrying out the reclaim work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in rupture, injury, etc.

(*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"

• Refrigerant R454B

This air conditioner adopts a type refrigerant R454B which does not deplete the ozone layer.

1. Safety Caution Concerned to R454B Refrigerant

Accompanied with change of refrigerant, the refrigerating oil has been also changed.

Therefore, be sure that water, dust, the former refrigerant or the former refrigerating oil is not mixed into the refrigerating cycle of the air conditioner with new refrigerant during installation work or service work.

If an incorrect work or incorrect service is performed, there is a possibility to cause a serious accident. Use the tools and materials exclusive to R454B to purpose a safe work.

2. Cautions on Installation/Service

- (1) Do not mix the other refrigerant or refrigerating oil.

For the tools exclusive to R454B, shapes of all the joints including the service port differ from those of the former refrigerant in order to prevent mixture of them.

- (2) As the use pressure of the new refrigerant is high, use material thickness of the pipe and tools which are specified for R454B.

- (3) In the installation time, use clean pipe materials and work with great attention so that water and others do not mix in because pipes are affected by impurities such as water, oxide scales, oil, etc. Use the clean pipes.

Be sure to brazing with flowing nitrogen gas. (Never use gas other than nitrogen gas.)

- (4) For the earth protection, use a vacuum pump for air purge.

- (5) R454B refrigerant is azeotropic mixture type refrigerant.

Therefore use liquid type to charge the refrigerant. (If using gas for charging, composition of the refrigerant changes and then characteristics of the air conditioner change.)

3. Pipe Materials

For the refrigerant pipes, copper pipe and joints are mainly used.

It is necessary to select the most appropriate pipes to conform to the standard.

Use clean material in which impurities adhere inside of pipe or joint to a minimum.

- (1) Copper pipe

<Piping>

The pipe thickness, flare finishing size, flare nut and others differ according to a refrigerant type. When using a long copper pipe for R454B, it is recommended to select "Copper or copper-base pipe without seam" and one with bonded oil amount 0.0001/lbs / 32'10" (40mg/10m)

Also do not use crushed, deformed, discolored (especially inside) pipes. (Impurities cause clogging of expansion valves and capillary tubes.)

<Flare nut>

Use the flare nuts which are attached to the air conditioner unit.

- (2) Joint

The flare joint and socket joint are used for joints of the copper pipe.

The joints are rarely used for installation of the air conditioner.

However clear impurities when using them.

4. Tools

(1) Required Tools for R454B

Mixing of different types of oil may cause a trouble such as generation of sludge, clogging of capillary, etc. Accordingly, the tools to be used are classified into the following three types.

- 1) Tools exclusive for R454B
- 2) Tools exclusive for R454B, but can be also used for conventional refrigerant
- 3) Tools commonly used for R454B and for conventional refrigerant

The table below shows the tools exclusive for R454B and their interchangeability.

- 4) Joint preparation are recommend to double-flare fitting accordance to ASHRAE15 requirements.

Tools exclusive for R454B (The following tools for R454B are required.)

Tools whose specifications are changed for R454B and their interchangeability

No.	Used tool	Usage	R454B air conditioner installation		Conventional air conditioner installation
			Existence of new equipment for R454B	Whether conventional equipment can be used	Whether new equipment can be used with conventional refrigerant
①	Flare tool	Pipe flaring	Yes	*(Note 1)	Yes
②	Copper pipe gauge for adjusting projection margin	Flaring by conventional flare tool	Yes	*(Note 1)	*(Note 1)
③	Torque wrench	Connection of flare nut	Yes	No	No
④	Gauge manifold	Evacuating, refrigerant charge, run check, etc.	Yes	No	No
⑤	Charge hose				
⑥	Vacuum pump adapter	Vacuum evacuating	Yes	No	Yes
⑦	Electronic balance for refrigerant charging	Refrigerant charge	Yes	Yes	Yes
⑧	Refrigerant cylinder	Refrigerant charge	Yes	No	No
⑨	Leakage detector	Gas leakage check	Yes	No	Yes
⑨	Charging cylinder	Refrigerant charge	(Note 2)	No	No

(Note 1) When flaring is carried out for R454B using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

(Note 2) Charging cylinder for R454B is being currently developed.

General tools (Conventional tools can be used.)

In addition to the above exclusive tools, the following equipments are necessary as the general tools.

- 1) Vacuum pump
Use vacuum pump by attaching vacuum pump adapter.
- 2) Torque wrench
- 3) Pipe cutter
- 4) Reamer
- 5) Pipe bender
- 6) Level vial
- 7) Screwdriver (+, -)
- 8) Spanner or Monkey wrench
- 9) Hole core drill
- 10) Hexagon wrench (Opposite side 0.2"(4mm))
- 11) Tap measure
- 12) Metal saw

Also prepare the following equipments for other installation method and run check.

- 1) Clamp meter
- 2) Thermometer
- 3) Insulation resistance tester
- 4) Electroscopic

1. SPECIFICATIONS

Indoor unit : Compact 4-way cassette type

Model name			MMU-UB0071MHP-UL	MMU-UB0091MHP-UL	MMU-UB0121MHP-UL
Cooling Capacity (*1) (kBTU/h)			7.5	9.5	12.0
Heating Capacity (*1) (kBTU/h)			8.5	10.5	13.5
Electrical characteristics	Power supply		1Ph. 208/230V ~ 60Hz.		
	Running current (A)		0.29/0.26	0.30/0.27	0.31/0.28
	Power consumption (Kw)		0.23/0.23	0.24/0.24	0.25/0.25
	Starting current (A)		0.33/0.30	0.34/0.31	0.35/0.32
Appearance	Main unit		Zinc hot dipping steel plate		
	Ceiling panel	Model name	RBC-UM21P-UL / RBC-UM21PB-UL		
		Panel Color	13Gran White / Black		
Outer dimension	Main unit	Height (*3)(in)	10.1		
		Width (in)	22.6		
		Depth (*4)(in)	22.6		
	Ceiling panel	Height (*3)(in)	2.3		
		Width (in)	24.4		
		Depth (in)	24.4		
Total weight	Main unit (lbs)		35.3		
	Ceiling panel (lbs)		6.6		
Heat exchanger			Finned tube		
Fan unit	Fan		Turbo fan		
	Standard air flow	(H/M+/M/L+/L) (cfm)	320/275/225/200/175	340/290/230/205/175	350/300/240/225/200
	Motor (W)		60		
Air filter			Standard filter attached (Long life filter)		
Drain tube size (Outsize diameter)			1'1/4(32) - (VP25)		
Controller			Remote control		
Sound pressure level	(H/M+/M/L+/L)	(dBA)	37/35/29/27/26	38/35/30/28/26	38/36/30/28/27
Sound power level	High	(dBA)	52	53	53
Connecting pipe	Gas side	(in)	3/8	3/8	3/8
	Liquid	(in)	1/4	1/4	1/4

Note

(*1) Cooling / Heating capacity is based on single connection operation with standard piping length under

Japanese industrial standard B8615 Condition 1.

(*2) Remote controller and ceiling panel are sold separately.

(*3) Height from the ceiling

(*4) Depth doesn't including the electric parts box.

Indoor unit : Compact 4-way cassette type

Model name			MMU-UB0151MHP-UL	MMU-UB0181MHP-UL
Cooling Capacity (*1) (kBTU/h)			15.4	18.0
Heating Capacity (*1) (kBTU/h)			17.0	20.0
Electrical characteristics	Power supply		1Ph. 208/230V ~ 60Hz.	
	Running current (A)		0.36/0.33	0.45/0.41
	Power consumption (Kw)		0.31/0.31	0.41/0.41
	Starting current (A)		0.43/0.39	0.54/0.49
Appearance	Main unit		Zinc hot dipping steel plate	
	Ceiling panel	Model name	RBC-UM21P-UL / RBC-UM21PB-UL	
		Panel Color	13Gran White / Black	
Outer dimension	Main unit	Height (*3)(in)	10.1	
		Width (in)	22.6	
		Depth (*4)(in)	22.6	
	Ceiling panel	Height (*3)(in)	2.3	
		Width (in)	24.4	
		Depth (in)	24.4	
Total weight	Main unit (lbs)		35.3	
	Ceiling panel (lbs)		6.6	
Heat exchanger			Finned tube	
Fan unit	Fan		Turbo fan	
	Standard air flow	(H/M+/M/L+/L) (cfm)	390/345/290/260/230	450/420/370/330/290
	Motor (W)		60	
Air filter			Standard filter attached (Long life filter)	
Drain tube size (Outsize diameter)			1'1/4(32) - (VP25)	
Controller			Remote control	
Sound pressure level	(H/M+/M/L+/L)	(dBA)	41/38/33/32/29	44/43/38/36/33
Sound power level	High	(dBA)	56	59
Connecting pipe	Gas side	(in)	1/2	1/2
	Liquid	(in)	1/4	1/4

Note

(*1) Cooling / Heating capacity is based on single connection operation with standard piping length under


Japanese industrial standard B8615 Condition 1.

(*2) Remote controller and ceiling panel are sold separately.

(*3) Height from the ceiling

(*4) Depth doesn't including the electric parts box.

3. WIRING DIAGRAM

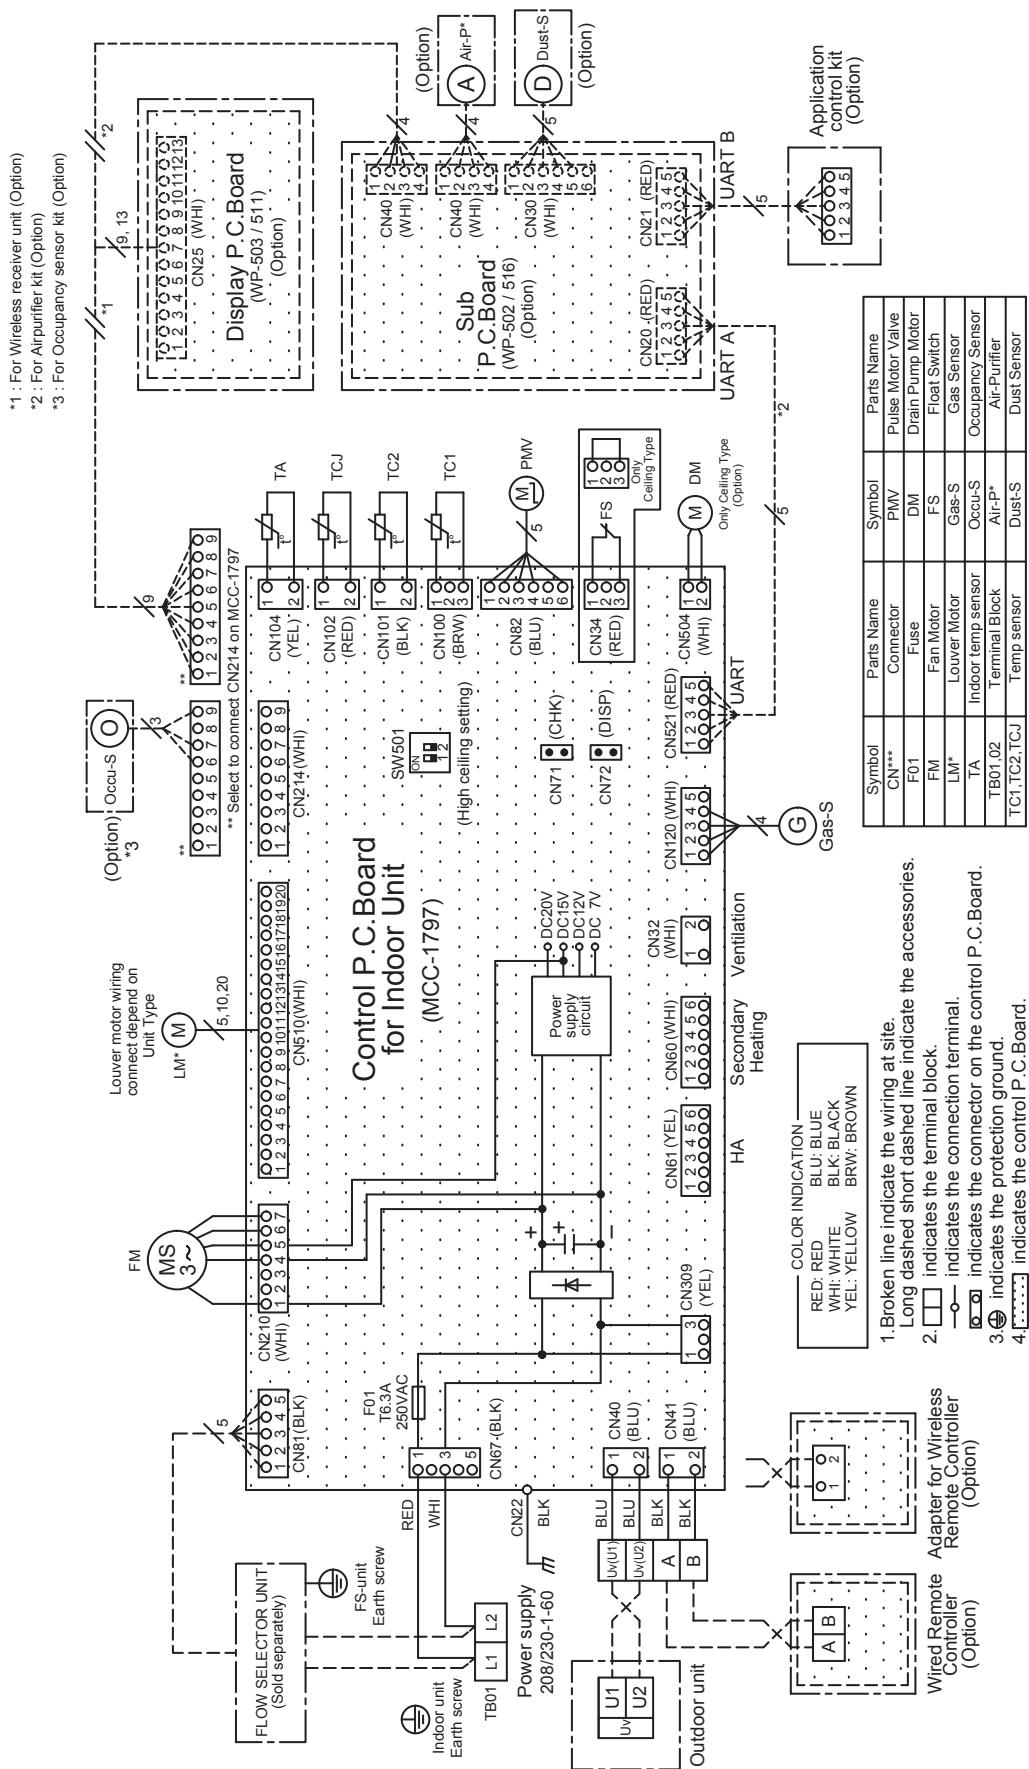


4. PARTS RATING

Indoor unit

Compact 4-way cassette type

Model	MMU-UB****MHP-UL	007	009	012	015	018
Fan motor		LDF-340-60AA1				
Drain pump motor		PMD-08D12TF-2				
Float switch		FS-1A-31-3				
Pulse motor valve		PAM-B25YGTF-2			PAM-B40YGTF-1	
P.C.board		MCC-1643				
TA sensor		Lead wire length : 32.2"(818 mm)				
TC1 sensor		Dia. 0.16" (4 mm) : size lead wire length: 19.69" (500 mm) Vinyl tube				
TC2 sensor		Dia. 0.24" (6 mm) : size lead wire length: 21.65" (550 mm) Vinyl tube (Black)				
TCJ sensor		Dia. 0.24" (6 mm) : size lead wire length: 21.65" (550 mm) Vinyl tube (Red)				

Indoor unit

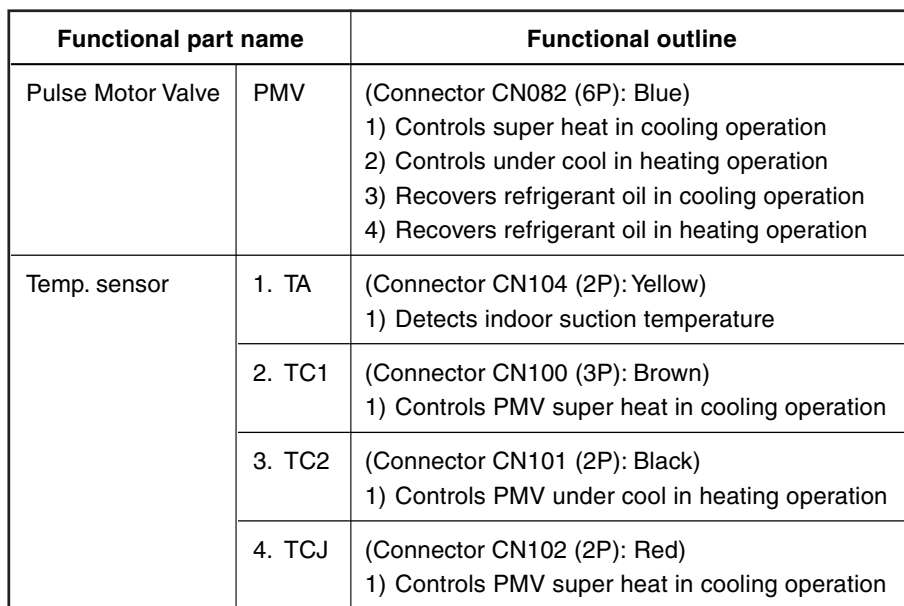

6. CONTROL OUTLINE



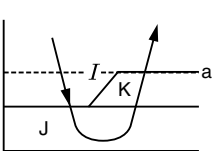
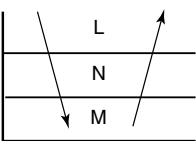
Control Specifications

No.	Item	Outline of specifications	Remarks														
1	When power supply is reset	<div>1) Distinction of outdoor unit When the power supply is reset, the outdoors are distinguished and the control is selected according to the distinguished result.</div> <div>2) Setting of indoor fan speed and existence of air direction adjustment Based on EEPROM data, select setting of the indoor fan speed and the existence of air direction adjustment.</div> <div>3) If resetting the power supply during occurrence of a trouble, the check code is once cleared. After ON/OFF button of the remote controller was pushed and the operation was resumed, if the abnormal status continues, the check code is again displayed on the remote controller.</div>															
2	Operation mode selection	<div>1) Based on the operation mode selecting command from the remote controller, the operation mode is selected.</div> <table><thead><tr><th>Remote controller command</th><th>Control outline</th></tr></thead><tbody><tr><td>STOP</td><td>Operation stops.</td></tr><tr><td>FAN</td><td>Fan operation</td></tr><tr><td>COOL</td><td>Cooling operation</td></tr><tr><td>DRY</td><td>Dry operation</td></tr><tr><td>HEAT</td><td>Heating operation</td></tr><tr><td>AUTO Heat recovery system outdoor unit type</td><td><div><div><div>• TA and Ts automatically select COOL/ HEAT operation mode for operation.</div><div>• The operation is performed as shown in the following figure according to TA value at the first time only. (In the range of $T_s - 1 - 1.8^{\circ}\text{F}$ (1°C) $< T_a < T_s + 1, 1.8^{\circ}\text{F}$ (1°C) + Cooling thermo. OFF (Fan) / Setup air volume operation continues.)</div></div><div><div><div><div><div>Ta °F</div><div>+1.8</div><div>+1.0</div></div><div><div>////</div><div>Cooling thermo. ON</div><div>////</div></div><div><div>Ta (°C)</div><div>Ts</div><div>-1.0</div><div>-1.8</div></div><div><div>—</div><div>Cooling thermo. OFF (at the first time only)</div><div>—</div></div><div><div>////</div><div>Heating thermo. ON</div><div>////</div></div></div></div></div><div><div>* Heat recovery system outdoor unit type can select automatic mode.</div><div>While a wireless remote controller is used, the mode is notified by “Pi Pi” (two times) receiving sound and the alternate flashing of [TIMER ☺] and [READY ☼].</div><div>To clear the alternate flashing, change the mode on the wireless remote controller.</div></div></div></td></tr></tbody></table>	Remote controller command	Control outline	STOP	Operation stops.	FAN	Fan operation	COOL	Cooling operation	DRY	Dry operation	HEAT	Heating operation	AUTO Heat recovery system outdoor unit type	<div><div><div>• TA and Ts automatically select COOL/ HEAT operation mode for operation.</div><div>• The operation is performed as shown in the following figure according to TA value at the first time only. (In the range of $T_s - 1 - 1.8^{\circ}\text{F}$ (1°C) $< T_a < T_s + 1, 1.8^{\circ}\text{F}$ (1°C) + Cooling thermo. OFF (Fan) / Setup air volume operation continues.)</div></div><div><div><div><div><div>Ta °F</div><div>+1.8</div><div>+1.0</div></div><div><div>////</div><div>Cooling thermo. ON</div><div>////</div></div><div><div>Ta (°C)</div><div>Ts</div><div>-1.0</div><div>-1.8</div></div><div><div>—</div><div>Cooling thermo. OFF (at the first time only)</div><div>—</div></div><div><div>////</div><div>Heating thermo. ON</div><div>////</div></div></div></div></div><div><div>* Heat recovery system outdoor unit type can select automatic mode.</div><div>While a wireless remote controller is used, the mode is notified by “Pi Pi” (two times) receiving sound and the alternate flashing of [TIMER ☺] and [READY ☼].</div><div>To clear the alternate flashing, change the mode on the wireless remote controller.</div></div></div>	<div>TA: Room temp.</div> <div>Ts: Setup temp.</div>
Remote controller command	Control outline																
STOP	Operation stops.																
FAN	Fan operation																
COOL	Cooling operation																
DRY	Dry operation																
HEAT	Heating operation																
AUTO Heat recovery system outdoor unit type	<div><div><div>• TA and Ts automatically select COOL/ HEAT operation mode for operation.</div><div>• The operation is performed as shown in the following figure according to TA value at the first time only. (In the range of $T_s - 1 - 1.8^{\circ}\text{F}$ (1°C) $< T_a < T_s + 1, 1.8^{\circ}\text{F}$ (1°C) + Cooling thermo. OFF (Fan) / Setup air volume operation continues.)</div></div><div><div><div><div><div>Ta °F</div><div>+1.8</div><div>+1.0</div></div><div><div>////</div><div>Cooling thermo. ON</div><div>////</div></div><div><div>Ta (°C)</div><div>Ts</div><div>-1.0</div><div>-1.8</div></div><div><div>—</div><div>Cooling thermo. OFF (at the first time only)</div><div>—</div></div><div><div>////</div><div>Heating thermo. ON</div><div>////</div></div></div></div></div><div><div>* Heat recovery system outdoor unit type can select automatic mode.</div><div>While a wireless remote controller is used, the mode is notified by “Pi Pi” (two times) receiving sound and the alternate flashing of [TIMER ☺] and [READY ☼].</div><div>To clear the alternate flashing, change the mode on the wireless remote controller.</div></div></div>																
3	Room temp. control	<div>1) Adjustment range: Remote controller setup temperature (°F)[°C])</div> <table><thead><tr><th></th><th>COOL/DRY</th><th>HEAT</th></tr></thead><tbody><tr><td>Wired type</td><td>64°F [18°C] to 84°F [29°C]</td><td>64°F [18°C] to 84°F [29°C]</td></tr><tr><td>Wireless type</td><td>63°F [17°C] to 86°F [30°C]</td><td>63°F [17°C] to 86°F [30°C]</td></tr></tbody></table>		COOL/DRY	HEAT	Wired type	64°F [18°C] to 84°F [29°C]	64°F [18°C] to 84°F [29°C]	Wireless type	63°F [17°C] to 86°F [30°C]	63°F [17°C] to 86°F [30°C]	<div>* Heat recovery system only</div>					
	COOL/DRY	HEAT															
Wired type	64°F [18°C] to 84°F [29°C]	64°F [18°C] to 84°F [29°C]															
Wireless type	63°F [17°C] to 86°F [30°C]	63°F [17°C] to 86°F [30°C]															





No.	Item	Outline of specifications	Remarks																
3	Room temp. control (Continued)	<div>2) By setting the CODE No. 06, the setup temperature in heating operation can be compensated.</div> <table><tr><th>Setup data</th><td>0</td><td>2</td><td>4</td><td>6</td></tr><tr><th>Setup temp. correction</th><td>+0°C</td><td>+2°C (+3.6°F)</td><td>+4°C (+7.2°F)</td><td>+6°C (+10.8°F)</td></tr></table> <div>The initial factory default value</div> <table><tr><th>Model</th><th>Set data</th></tr><tr><td>Floor standing cabinet, Floor standing concealed, Floor standing</td><td>0</td></tr><tr><td>Other models</td><td>2</td></tr></table>	Setup data	0	2	4	6	Setup temp. correction	+0°C	+2°C (+3.6°F)	+4°C (+7.2°F)	+6°C (+10.8°F)	Model	Set data	Floor standing cabinet, Floor standing concealed, Floor standing	0	Other models	2	<div>Return air temperature shift of heating operation</div> <div>Except while sensor of the remote controller is controlled (Code No. [32], "0001")</div>
Setup data	0	2	4	6															
Setup temp. correction	+0°C	+2°C (+3.6°F)	+4°C (+7.2°F)	+6°C (+10.8°F)															
Model	Set data																		
Floor standing cabinet, Floor standing concealed, Floor standing	0																		
Other models	2																		
4	Automatic capacity control	<div>1) Based on the difference between TA and Ts, the operation capacity is determined by the outdoor unit.</div> <div><div><div>Ta(°F) +3.6 +1.8 Ts -1.8</div><div>Ta(°C) +2 +1 Ts -1</div><div>COOL</div></div><div><div>Ta(°F) +1.8 Ts -1.8 -3.6</div><div>Ta(°C) +1 Ts -1 -2</div><div>HEAT</div></div></div>	<div>Ts: Setup temp. TA: Room temp.</div>																
5	Automatic cooling/heating control	<div>1) The judgment of selecting COOL/HEAT is carried out as shown below. When TA exceeds Tsh by 1.5 for 10 minutes, the operation is thermostat OFF then, the heating operation (thermostat OFF) is changed to cooling operation.</div> <div><div><div>Ta(°F) +2.7 or -2.7</div><div>Ta(°C) +1.5 Tsc -1.5</div><div>Cooling</div><div>(Cooling ON)</div><div>(Cooling OFF)</div><div>Heating</div></div><div>Description in the parentheses shows an example of cooling ON/OFF. When TA is less than Tsh by 1.5 for 10 minutes, the operation is thermostat OFF then, the cooling operation(thermostat OFF) is changed to heating operation.</div><div>2) For the automatic capacity control after judgment of cooling/heating, refer to item No.4.</div><div>3) For temperature compensation of room temp. control in automatic heating, refer to item No.3.</div></div>	<div>* Heat recovery system only</div> <div>Tsc: Setup temp. in cooling operation</div> <div>Tsh: Setup temp. in heating operation + temp. compensation of room temp. control</div>																



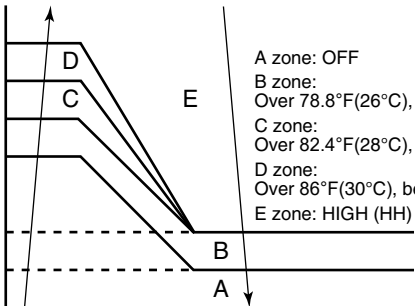



No.	Item	Outline of specifications	Remarks
6	Fan speed selection	<p>1) By the command from remote control, fan speed is changed. ((HH), (H+), (H), (L+), (L) or [AUTO])</p> <p>2) When the fan speed mode [AUTO] is selected, the fan speed varies by the difference between TA and Ts.</p> <p><COOL></p> <p style="text-align: center;">< > : Indicate automatic cooling.</p> <ul style="list-style-type: none"> • Fan speed mode [AUTO] in case when remote controller sensor works is equal to that in case when indoor unit sensor works. • If the fan speed has been changed once, it is not changed for 3 minutes. However when the air volume is changed, the fan speed changes. • When cooling operation has started, select a downward slope for the fan speed, that is, the high position. • If the temperature is just on the difference boundary, the fan speed is not changed. <p><HEAT></p> <p style="text-align: center;">< > : Indicate automatic heating.</p> <p style="text-align: center;">Body thermostat works. Remote controller thermostat works.</p> <p>() : indicate the value when the remote controller sensor is worked.</p> <ul style="list-style-type: none"> • If the fan speed has been changed once, it is not changed for 1 minute. However when the fan speed changed, the fan speed changes. • When heating operation has started, select an upward slope for the fan speed, that is, the high position. • If the temperature is at the difference boundary, the fan speed is not changed. • If $TC2 \geq 140^{\circ}F(60^{\circ}C)$, the fan speed increases by 1 step. 	<p>HH > H+ > H > L+ > L > UL</p> <p>Depends on fan speed mode selection at the remote controller. (H+) and (L+) cannot be selected.</p> <p>For Floor Standing Concealed Type, or Floor Standing Cabinet Type, (HH), (H), (L) or [AUTO] can be selected regardless of remote controller models.</p> <p>Code No. [32] 0000: Indoor unit sensor (Main unit) 0001: Remote controller sensor</p> <p>TC2: Temperature of indoor heat exchanger sensor</p>



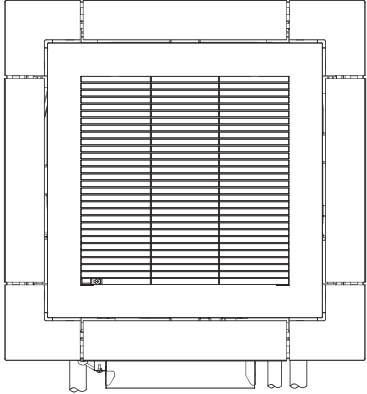

No.	Item	Outline of specifications	Remarks																																																																																																																							
6	Fan speed selection (Continued):	<p>Compact 4-way (only UP015, 018) (Fan speed selection of UP012 or less for Compact 4-way are only Standard.)</p> <table><tr><th>CODE No. [5d]</th><th colspan="2">Factory default</th><th colspan="2">Type 1</th><th colspan="2">Type 3</th></tr><tr><th></th><th colspan="2">0000</th><th colspan="2">0001</th><th colspan="2">0003</th></tr><tr><th>SW501 (1)/(2)</th><th colspan="2">OFF/OFF</th><th colspan="2">ON/OFF</th><th colspan="2">OFF/ON</th></tr><tr><th>Tap</th><th>COOL</th><th>HEAT</th><th>COOL</th><th>HEAT</th><th>COOL</th><th>HEAT</th></tr><tr><td>F1</td><td></td><td></td><td></td><td></td><td>HH</td><td>HH</td></tr><tr><td>F2</td><td></td><td></td><td>HH</td><td>HH</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td><td></td><td>H+</td><td>H+, H</td><td>H+, H</td></tr><tr><td>F4</td><td></td><td></td><td>H+</td><td></td><td></td><td></td></tr><tr><td>F5</td><td></td><td>HH</td><td></td><td>H</td><td></td><td></td></tr><tr><td>F6</td><td>HH</td><td></td><td>H</td><td></td><td>L+</td><td>L+</td></tr><tr><td>F7</td><td>H+</td><td>H+</td><td></td><td></td><td>L</td><td>L</td></tr><tr><td>F8</td><td></td><td>H</td><td></td><td>L+</td><td></td><td></td></tr><tr><td>F9</td><td>H</td><td></td><td>L+</td><td>L</td><td></td><td></td></tr><tr><td>FA</td><td></td><td>L+</td><td>L</td><td></td><td></td><td></td></tr><tr><td>FB</td><td>L+</td><td>L</td><td></td><td></td><td></td><td></td></tr><tr><td>FC</td><td>L</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>FD</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td></tr></table>	CODE No. [5d]	Factory default		Type 1		Type 3			0000		0001		0003		SW501 (1)/(2)	OFF/OFF		ON/OFF		OFF/ON		Tap	COOL	HEAT	COOL	HEAT	COOL	HEAT	F1					HH	HH	F2			HH	HH			F3				H+	H+, H	H+, H	F4			H+				F5		HH		H			F6	HH		H		L+	L+	F7	H+	H+			L	L	F8		H		L+			F9	H		L+	L			FA		L+	L				FB	L+	L					FC	L						FD	LL	LL	LL	LL	LL	LL	Setting of height ceiling mode at CODE No. [5D] or at SW501 on P.C. board.
CODE No. [5d]	Factory default		Type 1		Type 3																																																																																																																					
	0000		0001		0003																																																																																																																					
SW501 (1)/(2)	OFF/OFF		ON/OFF		OFF/ON																																																																																																																					
Tap	COOL	HEAT	COOL	HEAT	COOL	HEAT																																																																																																																				
F1					HH	HH																																																																																																																				
F2			HH	HH																																																																																																																						
F3				H+	H+, H	H+, H																																																																																																																				
F4			H+																																																																																																																							
F5		HH		H																																																																																																																						
F6	HH		H		L+	L+																																																																																																																				
F7	H+	H+			L	L																																																																																																																				
F8		H		L+																																																																																																																						
F9	H		L+	L																																																																																																																						
FA		L+	L																																																																																																																							
FB	L+	L																																																																																																																								
FC	L																																																																																																																									
FD	LL	LL	LL	LL	LL	LL																																																																																																																				
		3) In heating operation, the mode changes to [LL] if thermostat is turned off.																																																																																																																								






No.	Item	Outline of specifications	Remarks															
7	Prevention of cold air discharge	<div>1. In heating operation, the lowest temperature between TC1 sensor and the highest temperature between TC2 and TCJ sensor is set as the upper bound of the fan speed mode control.</div> <div><ul style="list-style-type: none">When B zone has been continuing for 6 minutes, the operation shifts to C zone.For the defrosting operation, the control point is set to 43°F(6°C).</div> <div><div><div>(°F) (°C)</div><div><div>89.6 32</div><div>86 30</div><div>82.4 28</div><div>78.8 26</div><div>68 20</div><div>33.8 16</div></div><div></div></div><div><div>A zone: OFF</div><div>B zone: Over 78.8°F(26°C), below 82.4°F(28°C), ULTRA LOW (LL)</div><div>C zone: Over 82.4°F(28°C), below 86°F(30°C), LOW (L)</div><div>D zone: Over 86°F(30°C), below 89.6°F(32°C), MED (H)</div><div>E zone: HIGH (HH)</div></div></div> <div>TCJ: Temperature of indoor heat exchanger sensor</div> <div><ul style="list-style-type: none">In D and E zones, priority is given to remote controller fan speed setup.In A zone “” is displayed.</div>																
8	Freeze prevention control (Low temp. release)	<div>1. In all cooling operation, the air conditioner operates as described below based upon temp. detected by TC1, TC2 and TCJ sensors.</div> <div><ul style="list-style-type: none">When “J” zone is detected for 5 minutes, the thermostat is forcedly off.In “K” zone, the timer count is interrupted, and held.When “I” zone is detected, the timer is cleared and the operation returns to the normal operation.If “J” zone continues, operation of the indoor fan in LOW mode continues until it reaches the “I” zone. It is reset when the following conditions are satisfied.</div> <div><div>Reset conditions</div><div><div>1) TC1 ≥ 53.6°F(12°C) and TC2 ≥ 53.6°F(12°C) and TCJ ≥ 53.6°F(12°C)</div><div>2) 20 minutes passed after stop.</div></div><div><div><div>(°F) (°C)</div><div><div>P1</div><div>Q1</div></div><div></div></div><div><table><tr><th></th><th>TC1</th><th>TC2, TCJ</th></tr><tr><td>P1</td><td>50°F(10°C)(41°F)(5°C)</td><td>14°F(-10°C)</td></tr><tr><td>Q1</td><td>32°F(0°C)</td><td>6.8°F(-14°C)</td></tr></table></div></div><div>2. In all cooling operation, the air conditioner operates as described below based upon temp. detected by TC2 and TCJ sensors.</div><div><ul style="list-style-type: none">When “M” zone is detected for 45 minutes, the thermostat is forcedly off.In “N” zone, the timer count is interrupted and held.When shifting to “M” zone again, the timer count restarts and continues.If “L” zone is detected, the timer is cleared and the operation returns to normal operation.</div><div><div>Reset conditions</div><div><div>1) TC1 ≥ 53.6°F(12°C) and TC2 ≥ 53.6°F(12°C) and TCJ ≥ 53.6°F(12°C)</div><div>2) 20 minutes passed after stop.</div></div><div><div><div>(°C)</div><div><div>P2</div><div>Q2</div></div><div></div></div><div><table><tr><th></th><th>TC2, TCJ</th></tr><tr><td>P2</td><td>41°F(5°C)</td></tr><tr><td>Q2</td><td>28.4°F(-2.0°C)</td></tr></table></div></div></div></div>		TC1	TC2, TCJ	P1	50°F(10°C)(41°F)(5°C)	14°F(-10°C)	Q1	32°F(0°C)	6.8°F(-14°C)		TC2, TCJ	P2	41°F(5°C)	Q2	28.4°F(-2.0°C)	<div>TC1: Temperature of indoor heat exchanger sensor</div> <div><div>() value:</div><div>When the power supply is turned on, the forced thermostat becomes OFF if the temperature is less than this indicated temperature.</div></div>
	TC1	TC2, TCJ																
P1	50°F(10°C)(41°F)(5°C)	14°F(-10°C)																
Q1	32°F(0°C)	6.8°F(-14°C)																
	TC2, TCJ																	
P2	41°F(5°C)																	
Q2	28.4°F(-2.0°C)																	

No.	Item	Outline of specifications	Remarks
9	Refrigerant (Oil) recovery control in cooling operation	Indoor units during stop/thermostat OFF or FAN operation perform following controls when a refrigerant (compressor oil) recovery signal is received from outdoor unit at the cooling operation, (1) Opening the indoor unit PMV at constant valve opening. (For a maximum of about 4 minutes) (2) Operating the drain pump for about one minute, during recovery control and after the control finished. Also, indoor unit fan or louvers may operate depending on the indoor unit type.	Control is performed per two hours or when the outdoor unit determines its need. (It varies depending on the indoor units connected.)
10	Refrigerant (Oil) recovery control in heating operation	Indoor units during stop/thermostat OFF or FAN operation perform following controls when a refrigerant (compressor oil) recovery signal is received from outdoor unit at the heating operation, (1) Opening the indoor unit PMV at constant valve opening. (For a maximum of about 20 minutes) (2) TC2 temperature is detected to close its PMV. Also, the fan, louvers, drain pump may operate for about one minute after recovery control finished depending on indoor unit types, until the number of recovery control reaches the predetermined number. NOTE The PMV, indoor fan, or louvers may operate through the outdoor unit instruction. For its detail, refer to the outdoor unit service guide.	Indoor unit during cooling thermostat OFF or FAN operation stops the indoor fan and displays "Operation standby ☺". Control is performed per one hour or when the outdoor unit determines its need. (It varies depending on the indoor units connected.)
11	Compensation control for short intermittent operation	1) For 3 minutes after start of operation, the operation is forcibly continued even if the unit enters in Thermostat-OFF condition. 2) However the thermostat is OFF giving prior to COOL/HEAT selection, READY ⚙ for operation and protective control.	Usually the priority is given to 5 minutes at outdoor controller side.
12	Drain pump control	1) Drain pump operates while in cooling operation. (including DRY operation) 2) While the drain pump is operating, if the float switch is operated, the outdoor unit will stop operating but the drain pump will keep continuously operating. After that, the check code is issued. 3) When the drain pump stops operating, if the float switch is operated, the outdoor unit will stop and the drain pump will start operating. After the float switch is being operating for roughly 5 minutes, the check code will be issued.	Check Code [P10] • A model with a drain pump : Compact 4-way 2-way cassette 1-way cassette (SH) 4-way cassette
13	Elimination of retained heat	1) When the unit stopped from [HEAT] operation, the indoor fan operates with [L] for approx. 30 seconds.	
14	HA control	1) ON/OFF operation is available by input of HA signal from the remote site when connecting to remote controller or the remote ON/OFF interface. 2) The HA terminal is ON/OFF depending on HA control output. 3) The I/O specifications of HA is in accordance with JEMA standard.	When using HA terminal (CN61) for the remote ON/OFF, a connector sold separately is necessary. In case of group operation, use the connector to connect HA terminal to either master or follower indoor unit.

No.	Item	Outline of specifications	Remarks								
15	Alarm output setup	<p>The alarm output from the indoor P.C. board is output in each indoor unit during group control, but it can be set so as to be output in the header unit and follower units. Following the table below, register the setting data in DN Code "79".</p> <table><tr><th>DN</th><th>Alarm output of the header indoor unit</th><th>Setting data</th></tr><tr><td rowspan="2">79</td><td>Not including the state of follower units</td><td>0000 (Factory default)</td></tr><tr><td>Including the state of follower units</td><td>0001</td></tr></table>	DN	Alarm output of the header indoor unit	Setting data	79	Not including the state of follower units	0000 (Factory default)	Including the state of follower units	0001	<p>Connector CN61 (Optional connector specifications of indoor P.C. board)</p> <p>Be sure to change the setting data while operation stops.</p>
DN	Alarm output of the header indoor unit	Setting data									
79	Not including the state of follower units	0000 (Factory default)									
	Including the state of follower units	0001									
16	Display of filter sign [] (Not provided to the wireless type)	<p>1) The filter sign is displayed with LC by sending the filter-reset signal to the remote controller when the specified time (150H/2500H) elapsed as a result of integration of the operation time of the indoor fan.</p> <p>2) The integrated timer is cleared when the filter-reset signal is received from the remote controller. In this time, if the specified time elapsed, the counted time is reset and the liquid crystal display is deleted.</p> <table><tr><th>Filter service life</th><th>2500H</th><th>150H</th></tr><tr><td>Type</td><td>Compact 4-way cassette type 1-way cassette type (SH) 2-way cassette type 4-way cassette</td><td>Floor standing type Floor standing concealed type Floor standing cabinet type</td></tr></table>	Filter service life	2500H	150H	Type	Compact 4-way cassette type 1-way cassette type (SH) 2-way cassette type 4-way cassette	Floor standing type Floor standing concealed type Floor standing cabinet type	<p>[ FILTER] goes on. The filter sign is not displayed in</p>		
Filter service life	2500H	150H									
Type	Compact 4-way cassette type 1-way cassette type (SH) 2-way cassette type 4-way cassette	Floor standing type Floor standing concealed type Floor standing cabinet type									
17	Display of [READY] [HEAT READY]	<p>< READY > Displayed on the remote controller * This may not be displayed depending on the connected outdoor unit.</p> <p>1) When the following check codes are indicated.</p> <ul style="list-style-type: none">• There is an indoor unit that detected the indoor overflow [P10].• There is an indoor unit that detected the interlock alarm [L30]. <p>2) When the operation mode of indoor unit is temporarily restricted. (At this time, the indoor unit stands by in forced thermostat-off state.)</p> <ul style="list-style-type: none">• [COOL/DRY] operation is unavailable because the other indoor unit operates with [HEAT] mode.• [HEAT] operation is unavailable because COOL priority (SW11-bit1 of the Outdoor I/F P.C. board is ON) is set and the other indoor unit operates with [COOL/DRY] mode.• When the operation mode of the outdoor unit is restricted by an optional board for outdoor units, central controller etc. <p>3) The indoor fan stops because the system performs [Recovery operation for heating refrigerant (Oil)].</p> <p>< HEAT READY > Displayed on the remote controller The indoor fan stops in order to prevent discharge of cool air when heating operation started or during heating operation. (including the defrost operation during thermostat-OFF)</p>	<p>• < READY  > display No display for wireless type remote controller</p> <p>• < HEAT READY  > display</p>								




No.	Item	Outline of specifications	Remarks																																																
18	Selection of central control mode	<div>1) Selection of the contents that can be operated by the remote controller at the indoor unit side is possible according to setting at the central controller side.</div> <div>2) Setting contents</div> <table><thead><tr><th rowspan="2">Operation from central controller</th><th colspan="6">Operation on remote controller</th></tr><tr><th>ON/OFF setting</th><th>Operation selection</th><th>Timer setting</th><th>Temp. setting</th><th>Fan speed setting</th><th>Air direction setting</th></tr></thead><tbody><tr><td>Individual</td><td>○</td><td>○</td><td>○</td><td>○</td><td>○</td><td>○</td></tr><tr><td>[Central 1]</td><td>×</td><td>○</td><td>×</td><td>○</td><td>○</td><td>○</td></tr><tr><td>[Central 2]</td><td>×</td><td>×</td><td>×</td><td>×</td><td>○</td><td>○</td></tr><tr><td>[Central 3]</td><td>○</td><td>×</td><td>○</td><td>×</td><td>○</td><td>○</td></tr><tr><td>[Central 4]</td><td>○</td><td>×</td><td>○</td><td>○</td><td>○</td><td>○</td></tr></tbody></table> <div>(○: Operation possible ×: Operation impossible)</div>	Operation from central controller	Operation on remote controller						ON/OFF setting	Operation selection	Timer setting	Temp. setting	Fan speed setting	Air direction setting	Individual	○	○	○	○	○	○	[Central 1]	×	○	×	○	○	○	[Central 2]	×	×	×	×	○	○	[Central 3]	○	×	○	×	○	○	[Central 4]	○	×	○	○	○	○	
Operation from central controller	Operation on remote controller																																																		
	ON/OFF setting	Operation selection	Timer setting	Temp. setting	Fan speed setting	Air direction setting																																													
Individual	○	○	○	○	○	○																																													
[Central 1]	×	○	×	○	○	○																																													
[Central 2]	×	×	×	×	○	○																																													
[Central 3]	○	×	○	×	○	○																																													
[Central 4]	○	×	○	○	○	○																																													
19	Louver control	<div>1) Louver position setup</div> <div><div>• When the louver position is changed, the position moves necessarily to downward discharge position once to return to the set position.</div><div>• The louver position can be set up in the following operation range.</div><div><div>In cooling/dry operation</div><div></div><div><div>In heating/fan operation</div><div></div></div><div><div>• In group twin/triple operation, the louver positions can be set up collectively or individually.</div><div>In case that HEAT refrigerant recovery control was performed in STOP status, the louver position becomes horizontal when the operation is resumed.</div></div></div><div>2) Swing setup</div><div>Compact 4-way, 2-way cassette, 1-way cassette (SH), 4-way cassette :</div><div><div>• [SWING] is displayed and the following display is repeated.</div><div><div>In all operations</div><div><div></div></div><div><div>• In group operation, the louver positions can be set up collectively or individually.</div></div><div>Floor standing :</div><div><div>• [SWING] is displayed and the following display is repeated.</div><div><div>In all operations</div><div></div></div><div><div>• As for Floor standing, the vertical louver operates to a horizontal direction.</div><div>(Perform vertical wind direction adjustment manually)</div><div>• In group operation, the louver positions can be set up collectively or individually.</div></div></div><div>3) When the unit stopped or the warning was output, the louver is automatically set to full closed position.</div><div>4) When PRE-HEAT  (Heating ready) is displayed (Heating operation started or defrost operation is performed), heating thermostat is off or self-cleaning is performed, the louver is automatically set to horizontal discharge position.</div><div>* The louver which air direction is individually set or the locked louver closes fully when the unit stops and the louver is automatically set to horizontal discharge position when PRE-HEAT  (Heating ready) is displayed, heating thermostat is off.</div></div></div></div>	Subject model : Compact 4-way																																																

No.	Item	Outline of specifications	Remarks
19	Louver control (Continued)	<p><<Individual air direction setup>></p> <ul style="list-style-type: none"> Pushing  Louver select button enables every discharge port to set up the air direction. (In the case of RBC-AMTU3*) The louver numbers that are displayed on the display part correspond to those in the following figure. In case of no input (key operation) for approx. 5 seconds during setting of individual air direction (during displaying of louver No. on the remote controller screen), the remote controller screen returns to the normal display screen. For the air direction illustration during normal operation, the air direction of the least No. among the louvers which are block-set is displayed. While individual air direction is being set, the remote controller operation (Illustration of air direction) and operation of the real machine are linked. When selecting a case,  Louver select button is not pushed or louver No. is not displayed, the air directions of all the louvers are collectively set up. <div data-bbox="510 851 1061 1456" style="text-align: center;"> <p>03 [F3]</p>  <p>04 [F4]</p> <p>02 [F2]</p> <p>Drain pipe 01 [F1] Refrigerant pipe</p> <p>Compact 4-way cassette type</p> </div>	<p>Subject model : Compact 4-way</p> <p>Setup from the remote controller without  button is unavailable.</p>

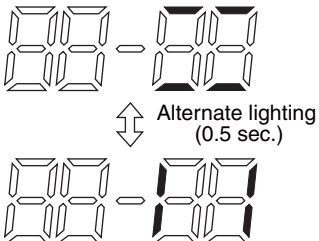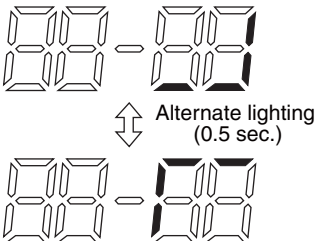No.	Item	Outline of specifications	Remarks												
19	Louver control (Continued)	<p><<Selection of Swing mode>></p> <ul style="list-style-type: none">For the Swing mode, the following three types of modes are selectable and settable by keeping Swing/Direction  button pushed for 4 seconds or more on the remote controller. (In the case of RBC-AMTU3*) Swing mode can be selected by Code No.(DN) setup [F0] (In the case of RBC-ASCU11-*). <p>1) Standard (4 pieces: same phase) swing → Data: [0001 (At shipment)] When Swing operation is selected, four louvers align at the horizontal discharge position and then start the Swing operation at the same time.</p> <p>2) Dual swing → Data: [0002] When operation is selected, the louvers of louver No. [01] and [03] move to the horizontal discharge position, the louvers of louver No. [02] and [04] move to the downward discharge position and then start the Swing operation at the same time.</p> <p>3) Cycle swing → Data: [0003] When operation is selected, the louver No. [01] moves to the horizontal discharge position, [03] to the downward discharge position, [02] and [04] to the middle position and then start the Swing operation at the same time.</p> <ul style="list-style-type: none">In case of selecting the Swing mode, “Dual swing” or “Cycle swing”, the following numerals is displayed at the center of the remote controller screen for approx. 3 seconds when  button was pushed to select [SWING]. (No display for the standard swing) (In the case of RBC-AMTU3*) <div><div><p>Dual swing</p></div><div><p>Cycle swing</p></div></div> <p><<Louver lock (Louver fix)>></p> <ul style="list-style-type: none">For the air direction setup for each discharge port, the louver position can be locked during the normal operation.An arbitrary air direction of an arbitrary louver can be registered and set by keeping  button pushed for 4 seconds or more on the remote controller. (In the case of RBC-AMTU3*) Louver lock can be selected by Code No.(DN) setup [F1], [F2], [F3] or [F4]. (In the case of RBC-ASCU11-*)The louver lock can be set by registering the setup data to Code No.(DN) [F1] to [F4] according to the following table. <table><tr><th>Code No.(DN)</th><th>Objective louver No.</th><th>Setup data</th></tr><tr><td>F1</td><td>01</td><td rowspan="4">0000: Release (At shipment) 0001: Horizontal discharge position ~ 0005: Downward discharge position</td></tr><tr><td>F2</td><td>02</td></tr><tr><td>F3</td><td>03</td></tr><tr><td>F4</td><td>04</td></tr></table>	Code No.(DN)	Objective louver No.	Setup data	F1	01	0000: Release (At shipment) 0001: Horizontal discharge position ~ 0005: Downward discharge position	F2	02	F3	03	F4	04	<p>Subject model : Compact 4-way</p> <
Code No.(DN)	Objective louver No.	Setup data													
F1	01	0000: Release (At shipment) 0001: Horizontal discharge position ~ 0005: Downward discharge position													
F2	02														
F3	03														
F4	04														

No.	Item	Outline of specifications	Remarks														
19	Louver control (Continued)	<div><div><div><div></div><div>Control which ignores lock</div></div><div><div></div><div>Objective louver No.</div></div></div><table><tr><td>①</td><td>Operation stop</td><td>Full-close position</td></tr><tr><td>②</td><td>When heating operation started</td><td>Horizontal discharge position</td></tr><tr><td>③</td><td>Heating thermostat OFF</td><td>Horizontal discharge position</td></tr><tr><td>④</td><td>During defrost operation</td><td>Horizontal discharge position</td></tr><tr><td>⑤</td><td>Initialize operation</td><td>Full-close position</td></tr></table></div> <div><div><div><div></div><div></div></div><div><div></div><div></div></div></div><div><div><div></div><div></div></div><div><div></div><div></div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div></div>	①	Operation stop	Full-close position	②	When heating operation started	Horizontal discharge position	③	Heating thermostat OFF	Horizontal discharge position	④	During defrost operation	Horizontal discharge position	⑤	Initialize operation	Full-close position
①	Operation stop	Full-close position															
②	When heating operation started	Horizontal discharge position															
③	Heating thermostat OFF	Horizontal discharge position															
④	During defrost operation	Horizontal discharge position															
⑤	Initialize operation	Full-close position															

No.	Item	Outline of specifications	Remarks																		
22	Occupancy sensor	<p>1) During the Occupancy sensor operation (DN code: [B5] [0001] and [B6] [0002 to 0005]), when there is no people in the Occupancy sensor range, it is automatically switched to the operation for the absence.</p> <p>2) The Occupancy sensor operation can change by [DN code : B6] as follows, and operates according to the operation at absent time, if time or absence of the setting contents continues. However time counting starts after the room temperature is stabilized. (after for 30 minutes operation)</p> <table><tr><td>DN [B6]</td><td>Data</td><td>Setting contents</td></tr><tr><td></td><td>0000</td><td>Invalid</td></tr><tr><td></td><td>0001 to 0005</td><td>30 minutes to 150 minutes (30 minutes each)</td></tr></table> <p>3) The operation at absent time can be changed by [DN code : B7].</p> <table><tr><td>DN [B7]</td><td>Data</td><td>Operation at absent time</td></tr><tr><td></td><td>0000</td><td>Circulator</td></tr><tr><td></td><td>0001</td><td>Operation stop</td></tr></table> <p>4) If the operation at absent time stops during group operation, or absence is fixed in each system, the operation starts circular operation once, and then the operation stops when absence was determined on all group.</p> <p>* DN [06] and DN [B7] can be set on the "Occupancy sensor" menu of the wired remote controller RBC - AMSU5*.</p>	DN [B6]	Data	Setting contents		0000	Invalid		0001 to 0005	30 minutes to 150 minutes (30 minutes each)	DN [B7]	Data	Operation at absent time		0000	Circulator		0001	Operation stop	The Occupancy sensor can be set up by wired remote controller RBC-AMSU5*
DN [B6]	Data	Setting contents																			
	0000	Invalid																			
	0001 to 0005	30 minutes to 150 minutes (30 minutes each)																			
DN [B7]	Data	Operation at absent time																			
	0000	Circulator																			
	0001	Operation stop																			
23	Soft cooling	<p>* Wired remote controller : RBC-AMSU5* is required.</p> <p>1) Sensation of draft can be suppressed by controlling performance and correcting the louver angle during cooling operation.</p> <p>2) However, it may not cool well because the operation will be performed with the cooling capacity suppressed.</p> <p>3) Perform operations from the remote controller menu to use soft cooling.</p>																			
24	Dual set point (AUTO mode)	<p>1) The temperature for heating operations and cooling operations can be set separately in AUTO mode when dual set point is valid.</p> <p>2) The compressor will turn off (thermostat-OFF) when reaching the set temperature for heating operations and cooling operations.</p> <p>3) Set CODE No. (DN) [77] to enable Dual set point.</p> <table><tr><td>DN [77]</td><td>Data</td><td>Dual set point</td></tr><tr><td></td><td>0000</td><td>Unavailable (Factory default)</td></tr><tr><td></td><td>0002</td><td>Available</td></tr></table>	DN [77]	Data	Dual set point		0000	Unavailable (Factory default)		0002	Available	This function cannot be used with remote controllers that are not RBC-AMSU5*.									
DN [77]	Data	Dual set point																			
	0000	Unavailable (Factory default)																			
	0002	Available																			

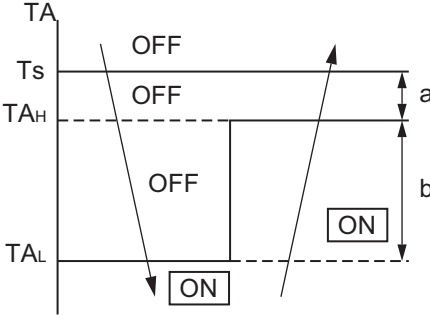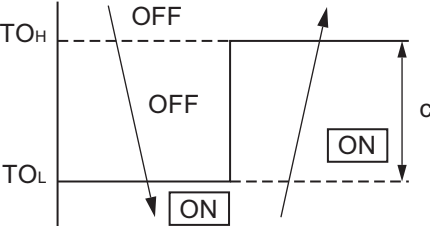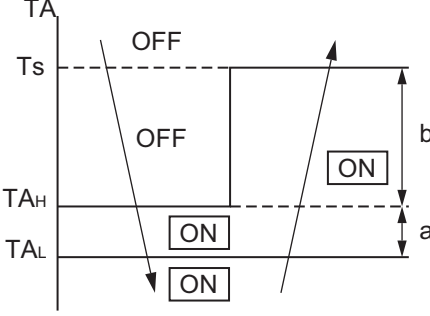No.	Item	Outline of specifications	Remarks
25	Secondary heating	<p>Secondary heating can be used while heating operations are performed.</p> <p><Control Outline (Normal Mode)></p> <ol style="list-style-type: none"> 1) If the difference between the indoor temperature and the outdoor temperature is large while the air conditioner is operating, turn ON the secondary heating. 2) This function is valid when the CODE No. (DN) [DC] is set to "0001" (32.9°F(0.5°C)) to "0010" (41°F(5.0°C)) using the wired remote controller, and the output to the external heating source will turn ON if the room temperature satisfies the condition. 3) The output will always stay ON while defrosting operations are being performed.  <p>TA_H: Temp.set air high (= Ts - a) TA_L: Temp.set air low (= TA_H - b)</p> <ol style="list-style-type: none"> 4) The output can be turned on by the outdoor temperature when CODE No. (DN) [C7] is set to "0001" (33.8°F(1°C)) to "0010" (50°F(10°C)) using the wired remote controller.  <p>TO_H: Temp.set out high TO_L: Temp.set out low (= TO_H - c)</p> <p><Control Outline (Flip Mode)></p> <ol style="list-style-type: none"> 1) If the difference between the room temperature and the set temperature is large while using secondary heating, run the air conditioner. 2) This function is valid when the CODE No. (DN) [C5] is set to "0001" (Flip mode) or the CODE No. (DN) [C7] is set to "0001" (33.8°F(1°C)) to "0010" (50°F(10°C)) using the wired remote controller, and when the output is switched ON when the room temperature satisfies the conditions. <p>* The outdoor temperature determination is invalid whilst this control is performed.</p> 	


No.	Item	Outline of specifications	Remarks																												
25	Secondary heating (Continued)	<div><div>DN [C5]</div><table><tr><td>Data</td><td>Secondary heating mode</td></tr><tr><td>0000</td><td>Normal mode (Factory default)</td></tr><tr><td>0001</td><td>Flip mode</td></tr></table></div> <div><div>DN [C6]</div><table><tr><td>Data</td><td>TO_H: Set temp. out (high) [°C]</td></tr><tr><td>-0015 to 0015</td><td>"-0015": 5°F(-15°C) to "0015": 59°F(15°C) "0000": 32°F(0°C) (Factory default)</td></tr></table></div> <div><div>DN [C7]</div><table><tr><td>Data</td><td>c : TO_H - TO_L [°C]</td></tr><tr><td>0000</td><td>Unavailable (Factory default)</td></tr><tr><td>0001 to 0010</td><td>0001: 33.8°F(1°C) to "0010": 50°F(10°C)</td></tr></table></div> <div><div>DN [DB]</div><table><tr><td>Data</td><td>b : TA_H - TA_L [°C]</td></tr><tr><td>0001 to 0010</td><td>"0001": 32.9°F(0.5°C) to "0010": 41°F(5.0°C) "0006": 37.4°F(3°C) (Factory default)</td></tr></table></div> <div><div>DN [DC]</div><table><tr><td>Data</td><td>a : Ts - TA_H (Normal mode)[°F(°C)] TA_L - Ts (Flip mode)[°F(°C)]</td></tr><tr><td>0000</td><td>Unavailable (Factory default)</td></tr><tr><td>0001 to 0010</td><td>0001: 33.8°F(1°C) to "0010": 50°F(10°C)</td></tr></table></div> <div><Wiring></div> <div><div>1) Use ① - ④ pin (Cooling output, DC 12 V) of CN60 on indoor P.C. board for output.</div><div><div>Relay (DC12V, procured locally) Corresponds to the relay up to one that the rated current of the operation coil is approx. 75mA</div><div><div><div>CN60 Option output (6P WHI)</div><div><div>11</div><div>22</div><div>33</div><div>44</div><div>55</div><div>66</div></div><div><div>Indoor control P.C. board</div><div><div>Note) Determine the cable length between the indoor control P.C.board and the relay within 2m.</div></div></div><div><div><div><div><div></div><div></div></div><div><div></div><div></div></div></div><div><div></div><div></div></div><div><div></div><div></div></div></div><div><div>Connect to secondary heating unit</div></div></div></div></div><div><div>2) If there is no CN60 on the P.C. board (MCC-1643 model), install separately-sold Application control kit (TCB-PCUC2E), and use "OUT1 to OUT3" of the Signal output terminal block (TB1). At this time, select "1" (Cool dry output) for "SW1 to SW3". Following the installation manual of the Application control kit for detailed contents relating to wiring.</div><div><div>* The output state can be checked from “Monitor function” on the wired remote controller. See page 73 or the manual for the remote controller for operation methods of “Monitor function”.</div><div><table><tr><td>Monitor CODE No. E5</td><td>Secondary heating output - - - : Unavailable 0000: OFF 0001: ON</td></tr></table></div></div></div></div></div>	Data	Secondary heating mode	0000	Normal mode (Factory default)	0001	Flip mode	Data	TO _H : Set temp. out (high) [°C]	-0015 to 0015	"-0015": 5°F(-15°C) to "0015": 59°F(15°C) "0000": 32°F(0°C) (Factory default)	Data	c : TO _H - TO _L [°C]	0000	Unavailable (Factory default)	0001 to 0010	0001: 33.8°F(1°C) to "0010": 50°F(10°C)	Data	b : TA _H - TA _L [°C]	0001 to 0010	"0001": 32.9°F(0.5°C) to "0010": 41°F(5.0°C) "0006": 37.4°F(3°C) (Factory default)	Data	a : Ts - TA _H (Normal mode)[°F(°C)] TA _L - Ts (Flip mode)[°F(°C)]	0000	Unavailable (Factory default)	0001 to 0010	0001: 33.8°F(1°C) to "0010": 50°F(10°C)	Monitor CODE No. E5	Secondary heating output - - - : Unavailable 0000: OFF 0001: ON	
Data	Secondary heating mode																														
0000	Normal mode (Factory default)																														
0001	Flip mode																														
Data	TO _H : Set temp. out (high) [°C]																														
-0015 to 0015	"-0015": 5°F(-15°C) to "0015": 59°F(15°C) "0000": 32°F(0°C) (Factory default)																														
Data	c : TO _H - TO _L [°C]																														
0000	Unavailable (Factory default)																														
0001 to 0010	0001: 33.8°F(1°C) to "0010": 50°F(10°C)																														
Data	b : TA _H - TA _L [°C]																														
0001 to 0010	"0001": 32.9°F(0.5°C) to "0010": 41°F(5.0°C) "0006": 37.4°F(3°C) (Factory default)																														
Data	a : Ts - TA _H (Normal mode)[°F(°C)] TA _L - Ts (Flip mode)[°F(°C)]																														
0000	Unavailable (Factory default)																														
0001 to 0010	0001: 33.8°F(1°C) to "0010": 50°F(10°C)																														
Monitor CODE No. E5	Secondary heating output - - - : Unavailable 0000: OFF 0001: ON																														

No.	Item	Outline of specifications	Remarks															
26	R32 refrigerant Safety measures setting	<ul style="list-style-type: none">When connecting to an outdoor unit that uses R32 refrigerant, the following settings must be made according to the safety system used.<ul style="list-style-type: none">* Floor standing type (Including concealed type and cabinet type) cannot be connected to outdoor units that use R32 refrigerant.Set the CODE No.(DN)[107] for each indoor unit. For details of each item, refer to the Install Manual and Service Manual of the outdoor unit. <table><tr><td>DN[107]</td><td>Data</td><td>Safety measures</td></tr><tr><td></td><td>0000</td><td>No safety measures</td></tr><tr><td></td><td>0001</td><td>Pump-down operation (Factory default)</td></tr><tr><td></td><td>0002</td><td>Individual shut-off operation</td></tr><tr><td></td><td>0003</td><td>Leak Detector only</td></tr></table> <ul style="list-style-type: none">* When using the optional R32 refrigerant Leak Detector, select a data other than "0000".	DN[107]	Data	Safety measures		0000	No safety measures		0001	Pump-down operation (Factory default)		0002	Individual shut-off operation		0003	Leak Detector only	Indoor unit type usable with R32 refrigerant: Compact 4-way
DN[107]	Data	Safety measures																
	0000	No safety measures																
	0001	Pump-down operation (Factory default)																
	0002	Individual shut-off operation																
	0003	Leak Detector only																
27	R32 refrigerant Leak Detector control	<p>Refrigerant detection control</p> <ol style="list-style-type: none">When the optional R32 refrigerant Leak Detector is connected and safety measures are set (Item No. 26), the indoor unit controls to detect refrigerant leakage.When the indoor unit receives the refrigerant leak detection signal, check code J30 (Refrigerant leak detection) is displayed on the remote controller.When refrigerant leakage is detected, ventilation output (CN32) is turned ON. Refer to "8-2. Indoor Print Circuit Board" for details on ventilation output (CN32).When DN[107] (R32 Safety measures) is "0001" or "0003" and DN[108] (Circulation flow operation mode) is "0000", the fan of the indoor unit is operated to prevent refrigerant from stagnating in the room (Fan speed is HH, louver position is middle). In this case, the fan continues to operate even if the operation is stopped by the remote controller.When the indoor unit receives a refrigerant leak clear signal from the Leak Detector, it stops ventilation output and fan operation. <p>Refrigerant sensor maintenance control</p> <ul style="list-style-type: none">* Operation is possible under the following conditions. <ol style="list-style-type: none">When the signal of refrigerant sensor trouble is received or the signal from the Leak Detector is interrupted, the indoor unit displays check code J29 (Leak Detector trouble) on the wired remote controller.When the energized time of the Leak Detector is near the end of its service life, the indoor unit outputs the notification code No. 204 (Leak Detector life advance display) and displays the icon of the notification code on the wired remote controller.When the energized time of the Leak Detector reaches the end of its service life, the indoor unit displays check code J31 (Refrigerant leak detection sensor exceeding its life of the product) on the wired remote controller.	Indoor unit type usable with R32 refrigerant: Compact 4-way															
28	Battery kit Lifetime Notification	When the indoor unit detects that the battery kit connected to the Flow Selector unit or shutoff valve has reached the end of its service life, it outputs notification code No. 203 (Flow Selector unit battery dead) and displays a notification code icon on the wired remote controller.	R32 refrigerant systems only															

7. COMMUNICATION TYPE, MODEL NAMES AND THE MAXIMUM NUMBER OF CONNECTABLE UNITS

If TU2C-Link (U series) is combined with TCC-Link (other than U series), the wiring specifications and the maximum number of connectable indoor units during group control operation will be changed.

- (1) For wiring specifications, carry out the installation, maintenance, or repair according to the attached Installation Manual.
- (2) For a communication type combination and the max. number of connectable indoor units, refer to the following table.
 - Only when all outdoor unit, indoor unit and remote control are a U series, communication method is TU2C-LINK, and the maximum number of connectable units will be 16.

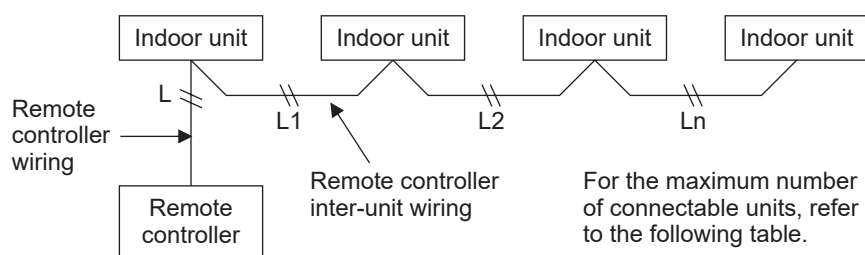

The combination of unit type and the number of the maximum connection of a communication method


	Unit type							
Outdoor unit	U series	U series	U series	U series	*	*	*	*
Indoor unit	U series	U series	*	*	U series	U series	*	*
Remote controller Remote sensor	U series	*	U series	*	U series	*	U series	*
Communication type	TU2C-Link	TCC-Link						
Maximum number of connectable units	16	8						

* Other than U series


8. CONFIGURATION OF CONTROL CIRCUIT

8-1. Indoor controller block diagram (MCC-1797)


8-1-1. In case of connection of wired remote controller

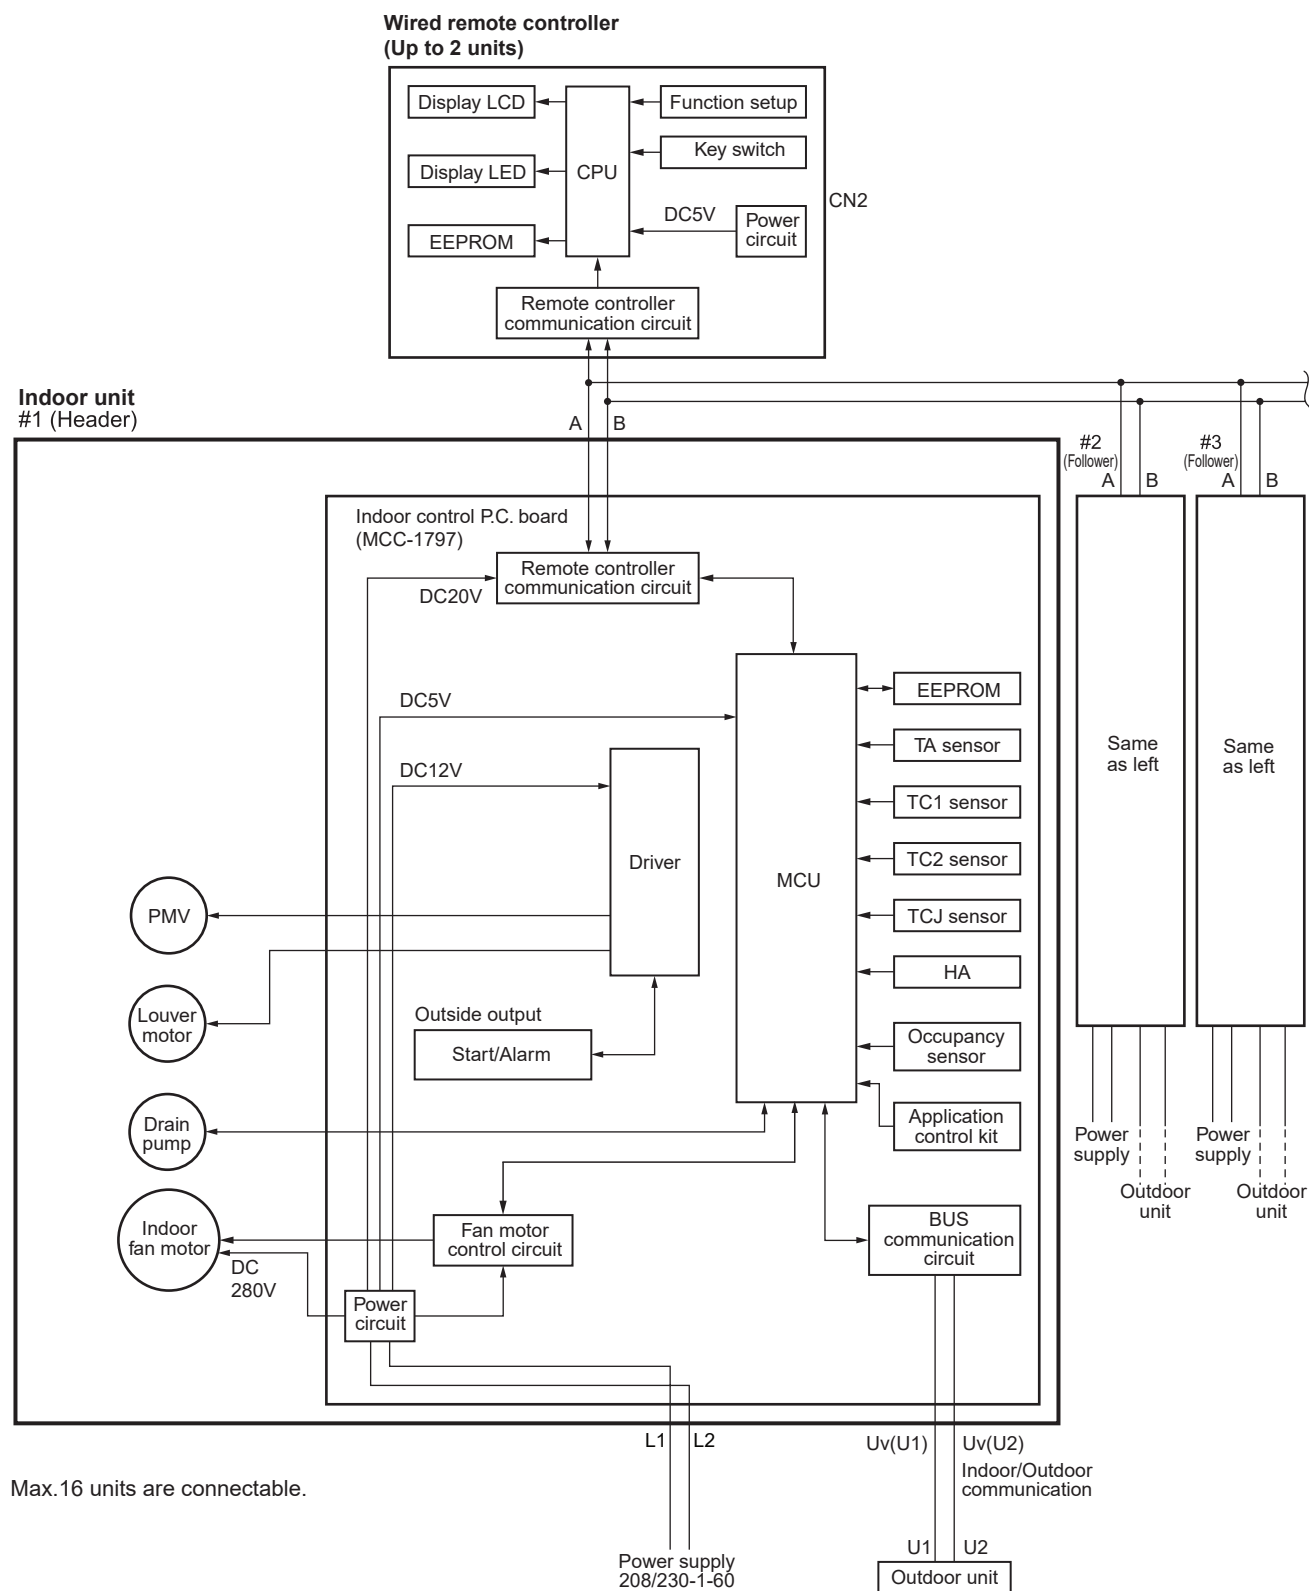


8-1-2. In case of connection of wireless remote controller

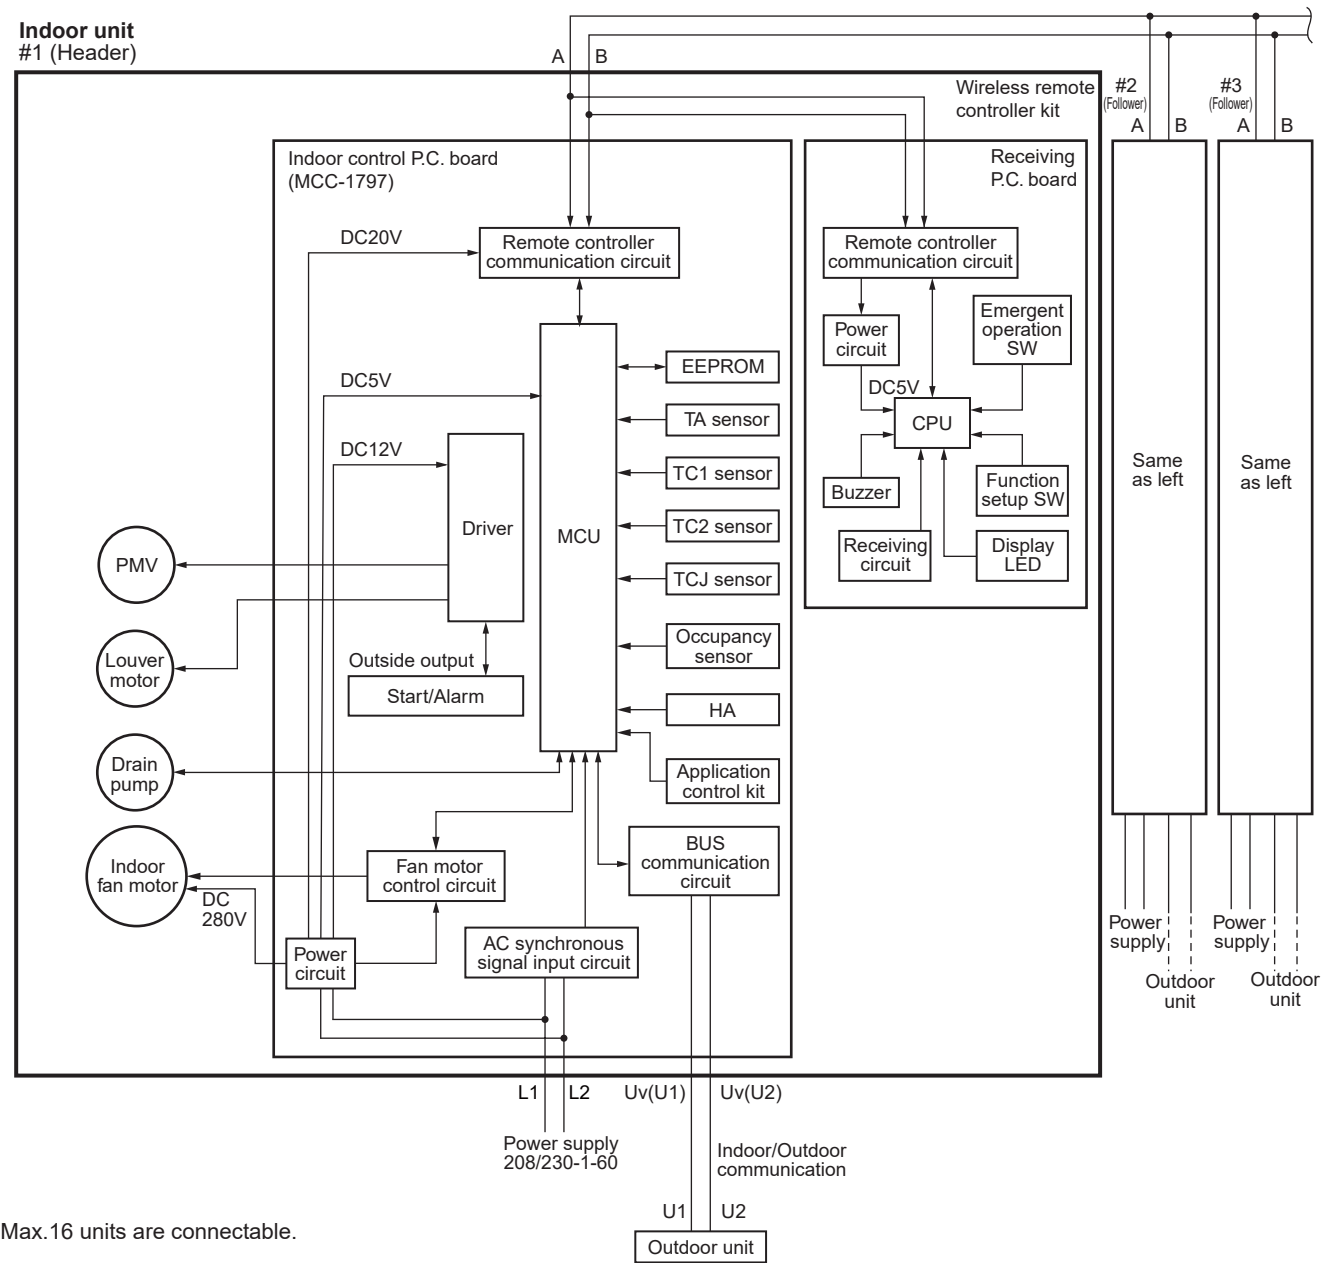

8-1-3. Connection of both wired remote controller and wireless remote controller

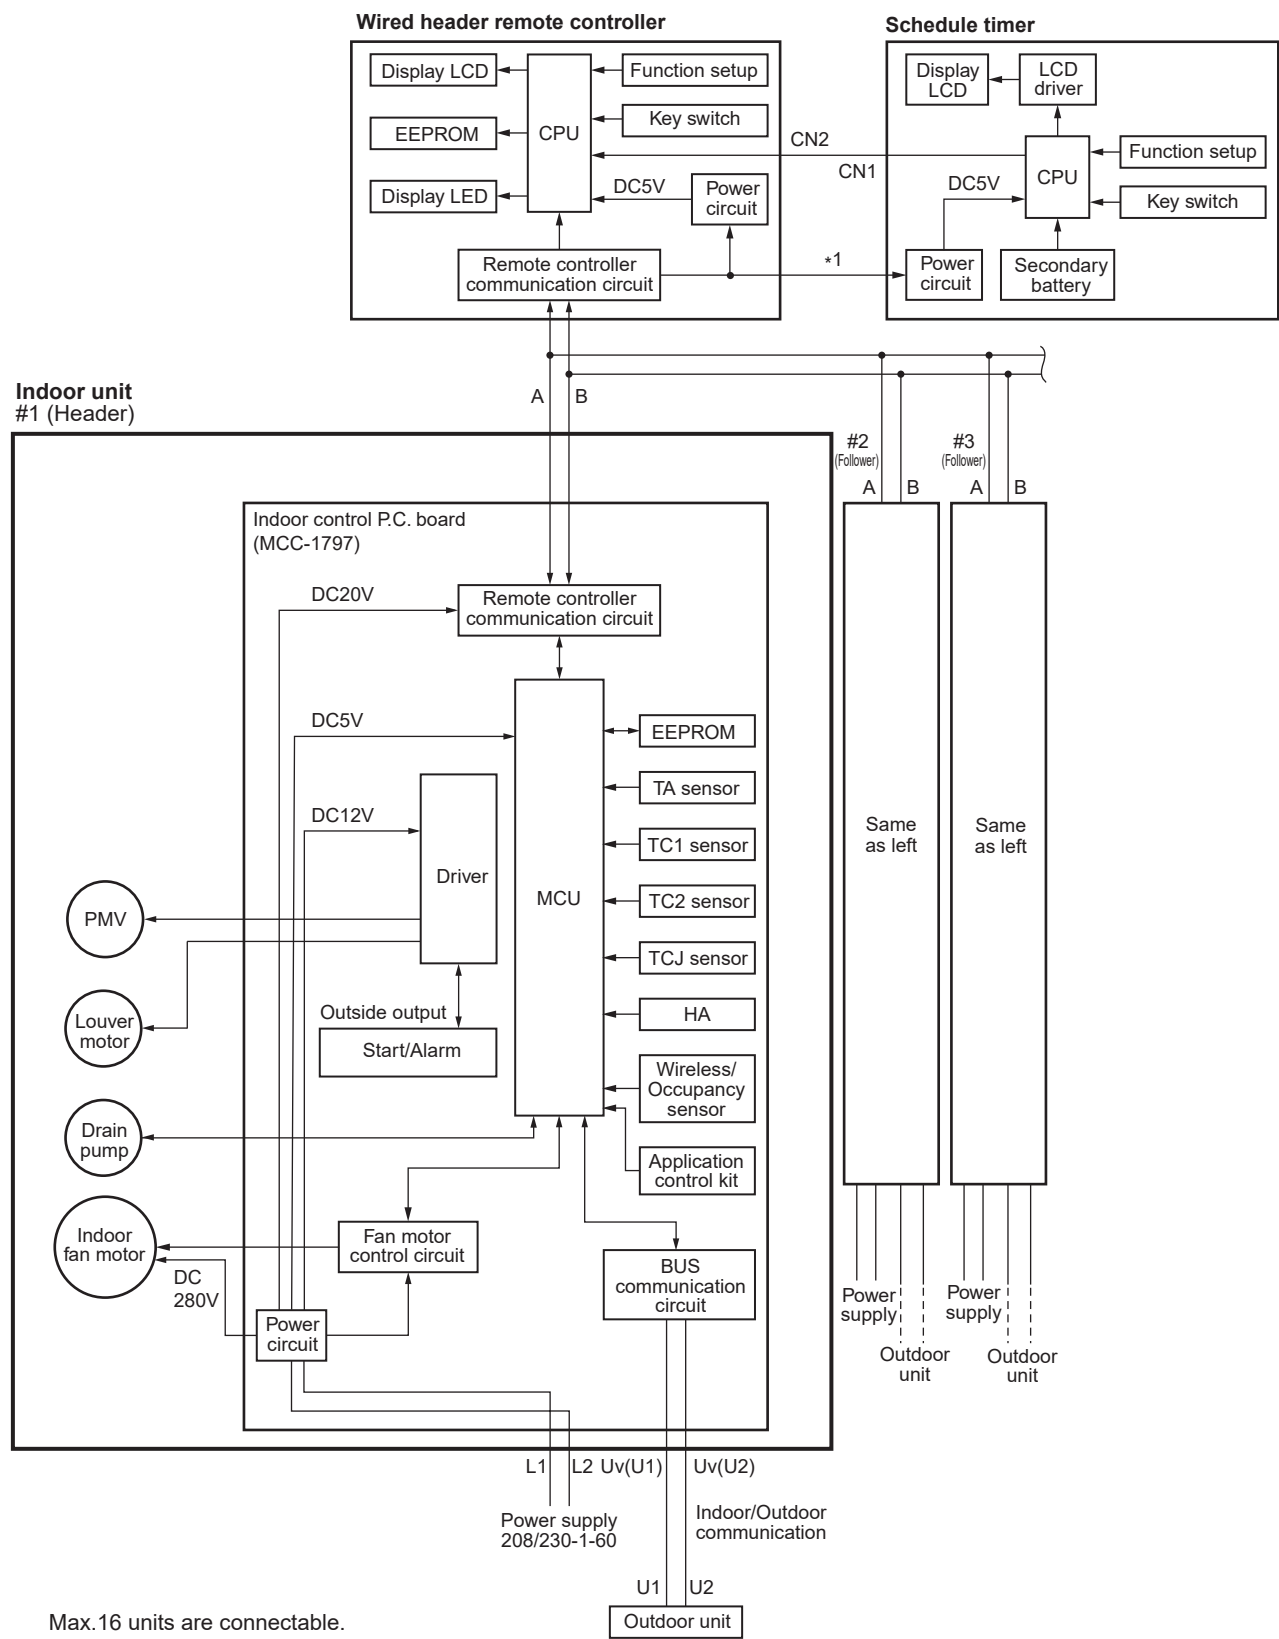

8-2. Indoor Print Circuit Board
MCC-1797

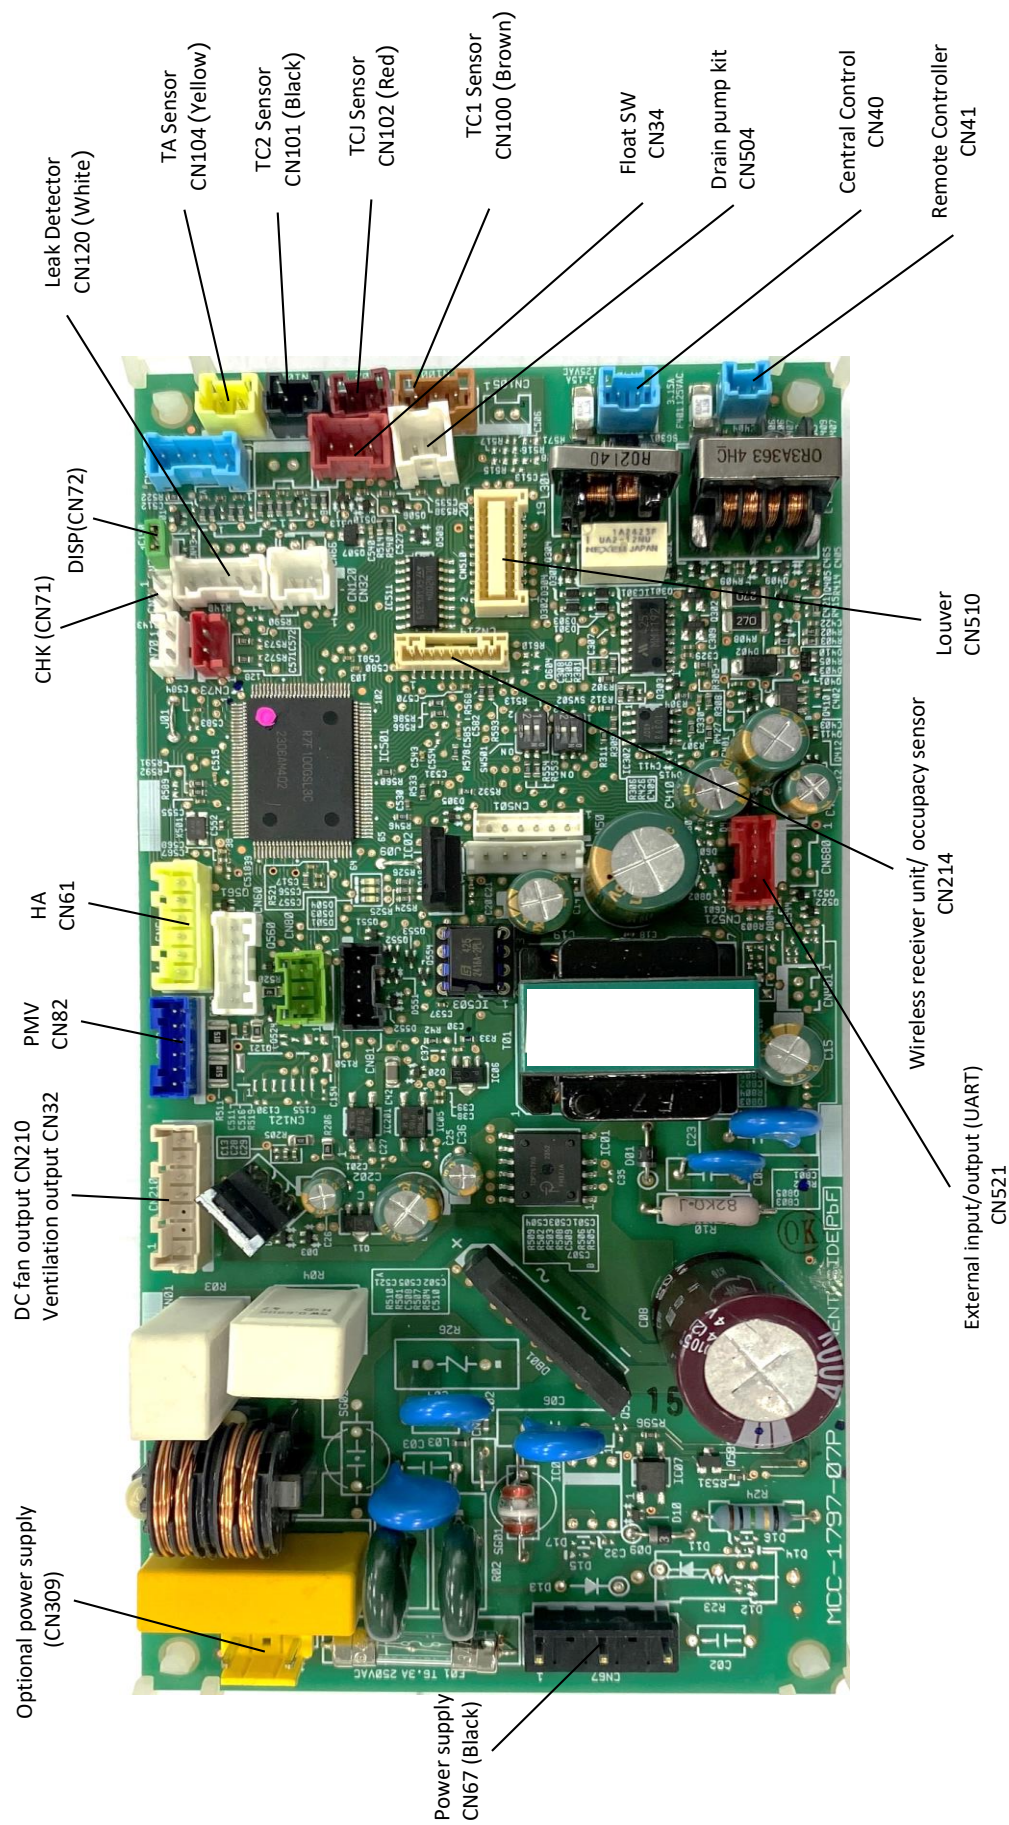

Optional connector specifications of indoor P.C. board (MCC-1797)

Connector No.	Color	Function	Pin No.	Specifications	Remarks
CN32	White	Ventilation output	①	DC12V	Setting at shipment: Interlock of ON by indoor unit operation, with OFF by stop operation * The single operation setting by FAN button on the remote controller is performed on the remote controller (DN=31).
			②	Output (Open collector)	
CN34	Red	Input for float SW	①	DC12V NC	Normal when between ①-③ short-circuits, but abnormal when open-circuits. (check code "P10" appears)
			②		
			③	Float SW input	
CN61	Yellow	HA	①	ON/OFF input	HA ON/OFF input (J01: YES/NO=Pulse (At shipment from factory) /Static input selection)
			②	0V (COM)	
			③	Remote controller prohibited input	Permission/Prohibition of remote controller operation stop is performed by input.
			④	Operation output (Open collector)	
			⑤	DC12V (COM)	Operation ON (Answer back of HA)
			⑥	Warning output (Open collector)	
CN71	White	CHK Operation check	①	Check mode input 0V	This check is used to check indoor operation. (Performs operation of indoor fan "H", Louver horizontal and Drain pump ON without communication with outdoor and remote controller)
			②		
CN72	White	DISP Exhibition mode	①	DISP mode input	Communication is available by indoor unit and remote controller only (When the power is turned on). Shortening time of timer (Always)
			②	0V	
CN81	Black	Output for Flow selector unit	①	DC12V EP valve output (Open collector) Balance valve output (Open collector) Suction valve output (Open collector) Discharge valve output (Open collector)	
			②		
			③		
			④		
			⑤		
CN309	Yellow	Output power supply for option	①	AC230V	This can be used as power supply for option devices.
			③	AC230V	
CN521	Red	Connection for option P.C.board	①	DC12V DC5V Send Receive 0V	Connected Application control kit (TCB-PCUC2E)
			②		
			③		
			④		
			⑤		

● : Use in standard, ○ : Available, △ : Use by connecting parts sold separately, x : Unavailable

* To use the functions operated by CN60, CN80, CN70 and CN73, which are provided for other P.C.board, use the Application control kit (TCB-PCUC2E) sold separately.




8-3. Test run of indoor unit

■ Cooling/Heating test run check

The test run for cooling/heating can be performed from either indoor remote controller or outdoor interface P.C. board. Refer to the Installation Manual and Service Manual of outdoor unit for the procedure of the test run from an outdoor interface P.C. board.

◆ In case of wired remote controller

<RBC-AWSU52-UL>

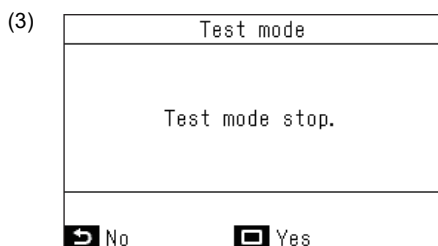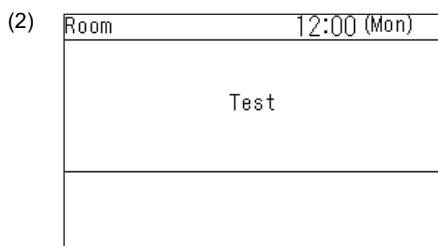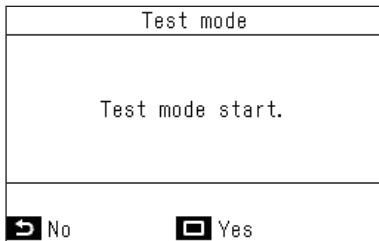

- 1** In the “Field setting menu” screen, press [] and [] to select “Test mode”, and then press [Set/Fix]

→ Test mode is set, and returns to the “Field setting menu” screen. Press the [Return] button 2 times, to open screen (2).

- 2** Press [ON/OFF]

→ Operation starts, and in test mode screen (1) opens.
(While stopped, it is screen (2))
→ Test mode is done while the operating mode is set to “Cool” or “Heat”.
→ The temperature cannot be set in test mode.
→ Check codes are displayed in the normal way.

- 3** After completing test mode, in the “Field setting menu” screen, press [] and [] to select “Test mode”, and then press [Set/Fix]

→ Screen (3) appears.
→ Press [Set/Fix] to end test mode and do normal operation.

Note) The test run returns to the normal operation after 60 minutes.

■ Check function for operation of indoor unit (Functions at indoor unit side)

This function is provided to check the operation of the indoor unit individually without connecting to the remote controller or the outdoor unit. This function can be used regardless of the ON/OFF operation. However, it is recommended to avoid using this function for a long time, otherwise the trouble of the equipment may occur.

[How to operate]

- 1) Short-circuit CHK pin (CN71 on the indoor P.C. board).
The operation mode may differ according to the indoor unit status at that time.
Normal time: Both float SW and fan motor are normal.
Abnormal time: Either one of float SW or fan motor is abnormal.
- 2) During the normal time, the minimum opening degree (30pls) of the indoor PMV can be set only when both CHK pin (CN71) and DISP pin (CN72) on the indoor P.C board are short-circuited. If the short-circuit at DISP pin (CN72) is opened, the indoor PMV will be at the maximum opening degree (1500pls).
When open DISP pin, the maximum opening degree (1500 pls) can be obtained again.
 - For the detailed positions of CHK pin (CN71 on indoor P.C. board) and DISP pin (CN72 on indoor P.C. board), refer to the indoor P.C. board.

[How to clear]

Open CHK pin. If the system is on operation, it will temporarily stop then automatically restart after a while.

* The actual indoor PMV opening degree may differ from the described values due to adjustment depending on PMV types.

	Short-circuit of CHK pin		
	Normal time		Abnormal time
	DISP pin open	DISP pin short circuit	
Fan motor	(H)	(H)	Stop
Indoor PMV (*)	Max. opening degree (1500 pls)	Min. opening degree (30 pls)	Min. opening degree (30 pls)
Louver	Vertical	Vertical	Immediate stop
Communication	All ignored	All ignored	All ignored
P.C. board LED	Lights	Lights	Flashes

- To exchange the indoor PMV coil, set the indoor PMV to Max. opening degree.


8-4. Method to set indoor unit function DN code

(When performing this task, be sure to use a wired remote controller.)




◆ Procedure



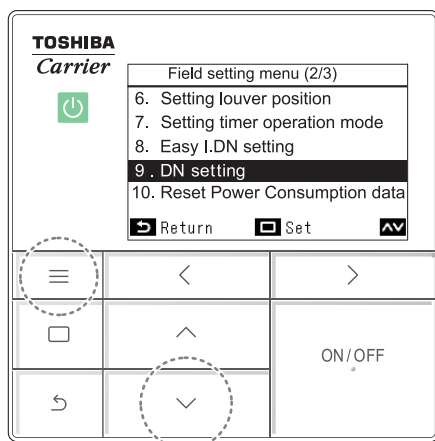



Be sure to stop the air conditioner before making settings

<RBC-AWSU52-UL>



Field setting menu (2/3)
6. Setting louver position
7. Setting timer operation mode
8. Easy I.DN setting
9. DN setting
10. Reset Power Consumption data











- 1 Press [ Menu] to open the “Menu”
- 2 Press and hold [ Menu] and [] at the same time to open “Field setting menu”
→ Press and hold 4 seconds.

- 1 In the “Field setting menu” screen, press [] and [] to select “DN setting”, and then press [ Set/Fix]
- 2 Press [] and [] to select “Indoor unit” or “Outdoor unit”, and the press [ Set/Fix]




→ If “Indoor unit” was selected, the fans and louvres of the indoor units operate.

When doing group connections:

→ The fans and louvres of the selected indoor units operate.

- 3 Press [] to black highlight the item code (DN), and then press [] and [] to set the item code
- 4 Press [] to black highlight the data, and then press [] and [] to set the data
- 5 After finishing setting the data of the item code (DN), press [ Set/Fix]
→ “Continue?” is displayed.
- 6 To set the data of other item codes (DN), press [ Set/Fix]
To not do other settings, press [ Return]
→ The changes are fixed, and the “Field setting menu” screen returns.
→ “” appears while data is changing.

When doing group connections:

→ Press [ Return] to open the unit selection screen.
In the unit selection screen, press [ Return] to briefly display “”, and then return to the “Field setting menu” screen.

NOTE

For details on item codes and data to be set, refer to the Installation Manual and Service manual of the indoor unit and outdoor unit.

Indoor unit function Code No. (DN Code) table

(includes functions needed to perform applied control on site)

DN	Item	Description	At shipment
01	Filter display delay timer	0000: None 0002: 2500H 0004: 10000H 0001: 150H 0003: 5000H	Depending on model type
02	Dirty state of filter	0000: Standard 0001: High degree of dirt (Half of standard time)	0000: Standard
03	Central control address	0001: No.1 unit to 0064: No.64 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)	00Un/0099: Unfixed *1
04	Specific indoor unit priority	0000: No priority 0001: Priority	0000: No priority
06	Heating temp. shift	0000: 0°F(0°C) 0002: +3.6°F(+2°C) to 0001: +1.8°F(+1°C) 0010: +18°F(+10°C) (Up to +6 recommended)	Depending on model type
0b	Demand control (CN73 / CN4)	0000: Demand input 0002: Card input setup.3 0004: Card input setup.4 0005: Fire alarm input (Normal close) 0007: Card input setup.5 0009: Card input setup.2 0001: O2 sensor input 0003: Fire alarm input (Normal open) 0006: Notice code (202) 0008: Card input setup.1	0000: Demand input
0d	Existence of [AUTO] mode	0000: Provided 0001: Not provided (Automatic selection from connected outdoor unit)	0001: Not provided
0F	Cooling only	0000: Heat pump 0001: Cooling only (No display of [AUTO] [HEAT])	0000: Heat pump
10	Type	Refer to Type DN code "10" list	Depending on model type
11	Indoor unit capacity	0000: Unfixed 0001 to 0044 Refer to Indoor Unit Capacity DN code "11" list	According to capacity type
12	Line address	0001: No.1 unit to 0030: No.30 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)	00Un/0099: Unfixed *1
13	Indoor unit address	0001: No.1 unit to 0064: No.64 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)	00Un/0099: Unfixed *1
14	Group address	0000: Individual 0001: Header unit of group 0002: Follower unit of group 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)	00Un/0099: Unfixed *1
19	Louver type (Air direction adjustment)	0000: No louver 0001: Swing only 0004: (4-way Air Discharge Cassette type, etc.)	Depending on model type
1E	Temp difference of AUTO] mode selection COOL → HEAT, HEAT → COOL	0000: 0°F(0°C) to 0010: 18°F(10°C) (Ts ± 9.0°F(5°C)) Ts:Remote controller setup temp.	0003: 5.4°F(3°C) (Ts ±2.7°F(1.5°C))
28	Automatic restart of power failure	0000: None 0001: Restart	0001: Restart
2A	Selection of option/Trouble input (TCB-PCUC2E: CN3)	0000: Filter input 0002: None 0001: Alarm input (Air washer, etc.)	0002: None
2E	HA terminal (CN61) select	0000: Usual 0002: Fire alarm input (Normal open) 0004: Notice code (201) 0001: Card input setup.1 (3) 0003: Card input setup.2 (4) 0005: Card input setup.5	0000: Usual (HA terminal)
31	Ventilating fan control	0000: Unavailable 0001: Available	0000: Unavailable
32	TA sensor selection	0000: Indoor unit TA sensor 0001: Remote controller sensor	0000: Indoor unit TA sensor

DN	Item	Description		At shipment
33	Temperature unit select	0000: °C	0001: °F	0001: °F
5d	External static pressure High-ceiling adjustment (Air flow selection)	Refer to page 49		0000: Standard
60	Timer setting (wired remote controller)	0000: Available (can be performed)	0001: Unavailable (cannot be performed)	0000: Available
77	Dual set point	0000: Unavailable	0002: Available	0000: Unavailable
79	Alarm output setup of the header unit	0000: Not including the state of following unit	0001: Including the state of following unit	0000: Not including the state of following unit
b3	Soft cooling	0000: Unavailable	0001: Available	0001: Available
b5	Occupancy sensor/ Wireless Remote controller Provided / None	0000: None 0002: Wireless remote controller provided	0001: Occupancy sensor provided	0000: None
b6	Occupancy sensor Enable / Invalid (Absence time judgment time)	0000: Invalid 0002: 60min. 0005: 150min.	0001: 30min. 0004: 120min.	0002: Enable (60 min.)
b7	Occupancy sensor operation at absent time	0000: Stand by	0001: operation stop	0000: Stand by
d0	Whether the power saving mode can be set by the remote controller	0000: Invalid	0001: Valid	0001: Valid
E0	Destination	0000: Domestic 0001: North America		0001: North America
E6	Wireless remote controller A-B selection	0000: A	0001: B	0000: A
F0	Swing mode	0000 : Out of sync swing 0002 : Dual swing	0001 : 4-way sync swing 0003 : Cycle swing	0000: Not including 4-way 0001: 4-way (Compact)
F1	Louver fixed position (Louver No.1)	0000 : Release 0005 : Downward discharge position	0001 : Horizontal discharge position	0000: Not fixed
F2	Louver fixed position (Louver No.2)	0000 : Release 0005 : Downward discharge position	0001 : Horizontal discharge position	0000: Not fixed
F3	Louver fixed position (Louver No.3)	0000 : Release 0005 : Downward discharge position	0001 : Horizontal discharge position	0000: Not fixed
F4	Louver fixed position (Louver No.4)	0000 : Release 0005 : Downward discharge position	0001 : Horizontal discharge position	0000: Not fixed
F6	Presence of Application control kit (TCB-PCUC2E)	0000: None	0001: Exist	0000: None
FC	Communication protocol *2	0000: TCC-LINK	0003: TU2C-LINK	0000: TCC-LINK
Fd	Priority operation mode (FS unit : Flow Selector unit)	0000: Heating	0001: Cooling	0000: Heating
FE	Flow Selector unit address	0001: No.1 unit to 0064: No.64 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)		00Un/0099: Unfixed *1
105	Flow Selector unit and Shut- off Valve unit port address	0001: Port No.1 ~	0012: Port No.12	0001: Port No. 1
106	Combining branches mode of Flow Selector unit	0000: NOT combining mode	0001: Combining mode	0000: NOT combining mode
107	Safety measures	0000: No safety measures 0002: Individual shut-off operation	0001: Pump-down operation 0003: Leak Detector only	0001: Pump-down operation
108	Circulation flow operation mode of the indoor unit	0000: ON	0001: OFF	0000: ON

DN	Item	Description	At shipment
180	Notice code number 01	0000: None 0001 ~ 0255 : Notice code 0129 : Notice code (201) 0130 : Notice code (202) (0001 ~ 0255 : TU2C-LINK only)	0000: None
181	Notice code number 02		0000: None
182	Notice code number 03		0000: None
183	Notice code number 04		0000: None
184	Notice code number 05		0000: None
185	Notice code number 06		0000: None
186	Notice code number 07		0000: None
187	Notice code number 08		0000: None
188	Notice code number 09		0000: None
189	Notice code number 10		0000: None
191	Secondary Heat / Ventilation output port switching	0000: Ventilation output 0001: Secondary heating output	0001 : Secondary heating output
1FB	Central device control state	0000: No central device control (Remote controller use is possible) 0001: Central device control (Remote controller use is impossible)	0000: No central device control
1FC	Indoor Unit terminating resistance	0000: OFF 0001: ON	0000: OFF

*1 Display order of “00Un” and “0099” varies depending on remote controller models or communication types.

For Central control address (DN [03]), Indoor unit address (DN [13]), Flow Selector unit address (DN [FE])

Remote controller	Communication type	Display order
U series	TU2C-LINK	... ⇔ 0128 ⇔ 00Un ⇔ 0001 ⇔ ...
	TCC-LINK	... ⇔ 0064 ⇔ 00Un ⇔ 0001 ⇔ ...
Other than U series	TCC-LINK	... ⇔ 0064 ⇔ 0099 ⇔ 0001 ⇔ ...

For Line address (DN [12])

Remote controller	Communication type	Display order
U series	TU2C-LINK	... ⇔ 0128 ⇔ 00Un ⇔ 0001 ⇔ ...
	TCC-LINK	... ⇔ 0030 ⇔ 00Un ⇔ 0001 ⇔ ...
Other than U series	TCC-LINK	... ⇔ 0030 ⇔ 0099 ⇔ 0001 ⇔ ...

For Group address (DN [14])

Remote controller	Communication type	Display order
U series	TU2C-LINK	... ⇔ 0002 ⇔ 00Un ⇔ 0000 ⇔ ...
	TCC-LINK	
Other than U series	TCC-LINK	... ⇔ 0002 ⇔ 0099 ⇔ 0000 ⇔ ...

*2 Communication protocol can be automatically switched with the setup in the outdoor unit during installation.

[5d] High-ceiling adjustment

<Compact 4-way Cassette>

Set data	High-ceiling adjustment
0000	Standard (Factory default)
0001	High ceiling 1 (UP015, 018 only)
0002	High ceiling 2 (UP015, 018 only)
0003	High ceiling 3 (UP015, 018 only)

Type DN code "10"

Value	Type	Model
0014	Compact 4-way Cassette	MMU-UB****MHP-UL

Indoor Unit Capacity DN code "11"

Setup data	Model
0000*	Invalid
0001	007 Type
0003	009 Type
0005	012 Type
0007	015 Type
0009	018 Type

* "0000" is default value stored in EEPROM mounted on service P.C.board

8-5. Applied control of indoor unit

Remote location ON/OFF control box (TCB-IFCB-4UL)

[Wiring and setup]

- Use the exclusive connector for connection with the indoor control P.C. board.
- In a group control, the system can operate when connecting with any indoor unit (Control P.C. board) in the group. However when taking out the operation/error signal from the other unit, it is necessary to take out from each unit individually.


1. Control items

- 1) Start/Stop input signal : Operation start/stop in unit
- 2) Operation signal : Output during normal operation
- 3) Error signal : Output during alarm
(Serial communication error or indoor/outdoor protective device) operation

2. Wiring diagram using remote control interface (TCB-IFCB-4UL)

Input IFCB-4UL : No voltage ON/OFF serial signal

Output No voltage contact for operation, error display
Contact capacity: Below Max. AC240V 0.5A

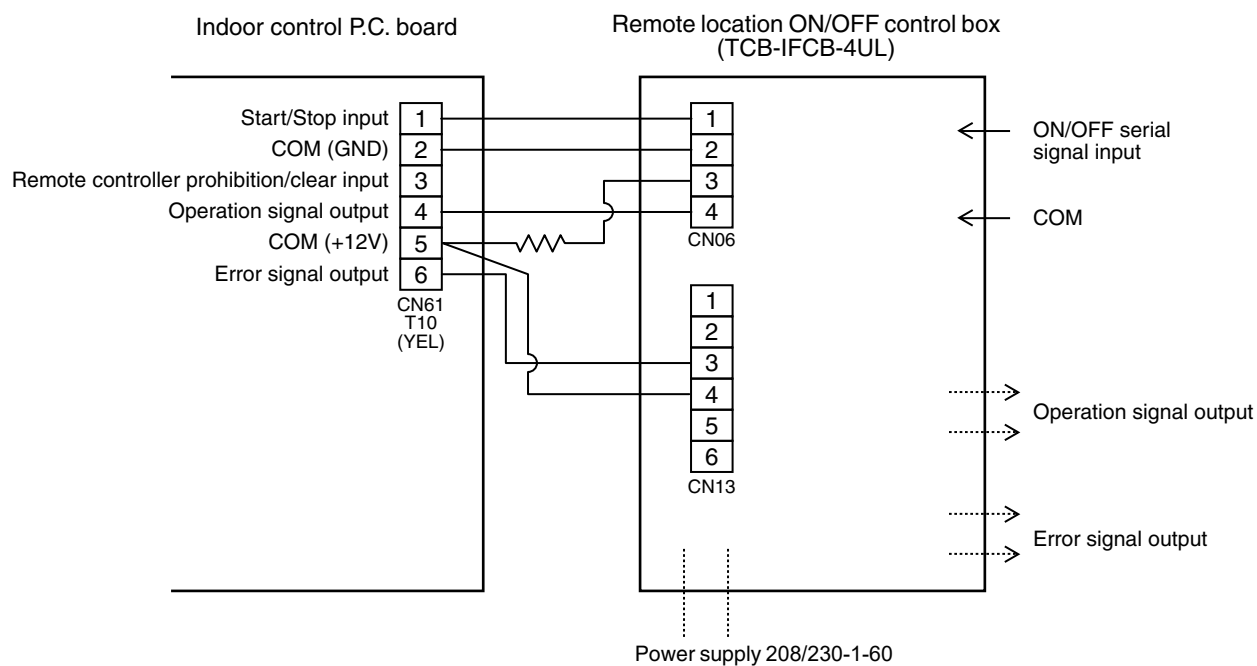

■ Ventilating fan control from remote controller

[Function]

- The start / stop operation can be operated from the wired remote controller when air to air heat exchanger or ventilating fan is installed in the system.
- The fan can be operated even if the indoor unit is not operating.
- Use a fan which can receive the no-voltage normally-open contact as an outside input signal.
- In a group control, the units are collectively operated and they cannot be individually operated.
- * **Ventilation function the code No.191 must be setting data 0000 (refer indoor unit function code no. table.)**

1. Operation

Handle a wired remote controller in the following procedure.

- * Use the wired remote controller during stop of the system.
- * Be sure to set up the wired remote controller to the header unit. (Same in group control)
- * In a group control, if the wired remote controller is set up to the header unit, both header and follower units are simultaneously operable.


<RBC-AWSU52-UL>

- 1** Press [Menu] to open the “Menu”
- 2** Press and hold [Menu] and [] at the same time to open “Field setting menu”
→ Press and hold 4 seconds.
- 3** In the “Field setting menu” screen, press [] and [] to select “DN setting”, and then press [Set/Fix]
- 4** Press [] and [] to select “Indoor unit” or “Outdoor unit”, and the press [Set/Fix]
→ If “Indoor unit” was selected, the fans and lovvres of the indoor units operate.
When doing group connections:
→ The fans and louvers of the selected indoor units operate.
- 5** Press [] to black highlight the item code (DN), and then press [] and [] to set the item code No. 31.
- 6** Press [] to black highlight the data, and then press [] and [] to set the data (At shipment : 0000).

SET DATA	Handling of operation of air to air heat exchanger or ventilating fan
0000	Unavailable (At shipment)
0001	Available

- 7** After finishing setting the data of the item code (DN), press [Set/Fix]
→ “Continue?” is displayed.
- 8** To set the data of other item codes (DN), press [Set/Fix] To not do other settings, press [Return]
→ The changes are fixed, and the “Field setting menu” screen returns.
→ “” appears while data is changing.
When doing group connections:
→ Press [Return] to open the unit selection screen.
In the unit selection screen, press [Return] to briefly display “”, and then return to the “Field setting menu” screen.

2. Wiring

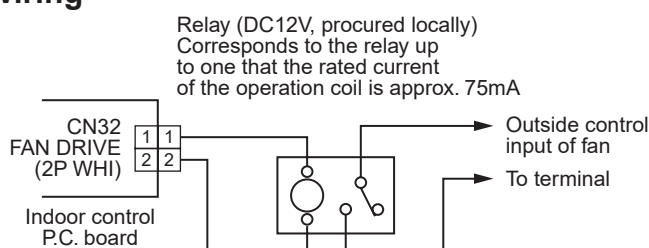

Note) Determine the cable length between the indoor control P.C. board and the relay within 2m.

■ Auto-off feature control


[Function]

- This function controls the indoor units individually. It is used when the start operation from outside is unnecessary but the stop operation is necessary.
- A card switch box or card lock helps protect customers from forgetting to turn off the indoor unit. (not including the following Card Input 3)
- It is connected with connector on the indoor control P.C. board, and switched with the Code No. and jumper wire setup for use.
- Available connectors are CN61 or CN73. For models without CN73, CN4 on the optional Application control kit (TCB-PCUC2E) can be used.
- * Leaving-ON prevention control cannot be set with both CN61 and CN73 (CN4).
If both of them are set, CN73 (CN4) setting automatically turns to a factory default.

[Setup method]


(1) Wiring

Connecting to the CN61 connector

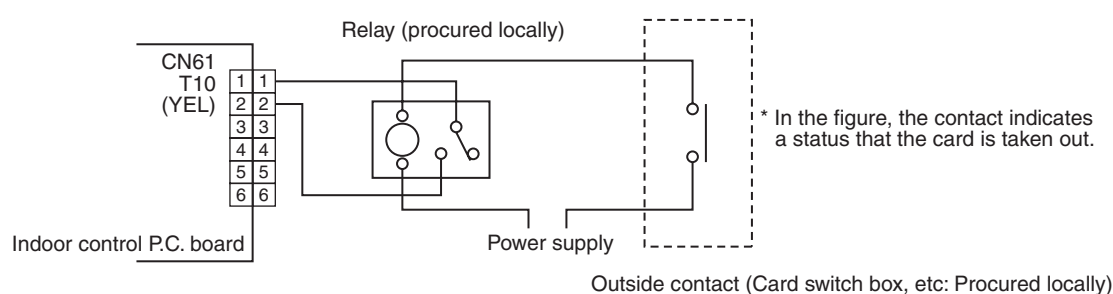

(NOTE) Determine the cable length between the indoor control P.C. board and the relay within 3m.

Connecting to the Application control kit (TCB-PCUC2E, connector : CN4)

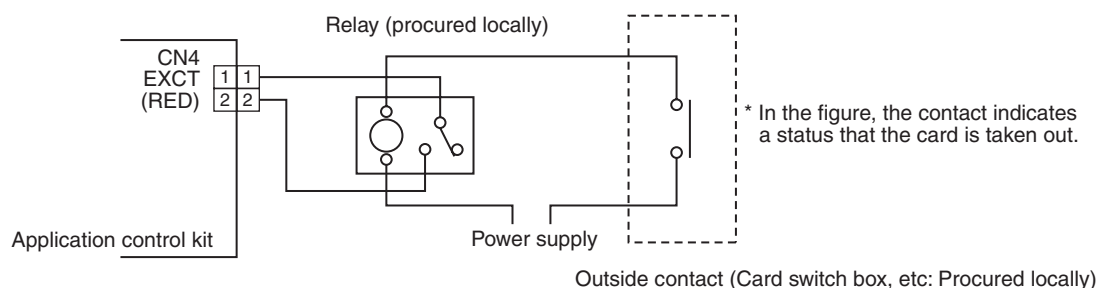

(NOTE) Determine the cable length between the indoor control P.C. board and the relay within 3m.

(2) Code (DN) setup

Set Code (DN) according to "8-4. Method to set indoor unit function DN code".

Connector	Jumper wire (J01)	Code No. (DN)	Set data	Function
CN61	Short-circuit (Factory default)	002E	0000 (Factory default)	"HA normal setup" (pulse)
			0001	"Card Input 1" setup
			0003	"Card Input 2" setup
			0005	"Card Input 5" setup
	Open-circuit (cut)		0000 (Factory default)	"HA normal setup" (Static)
			0001	"Card Input 3" setup
			0003	"Card Input 4" setup
CN73 (CN4)	Short-circuit (Factory default) or Open-circuit (cut)	000b	0000 (Factory default)	"EXCT demand" setup (Forced thermostat-OFF)
			0002	"Card Input 3" setup
			0004	"Card Input 4" setup
			0007	"Card Input 5" setup
			0008	"Card Input 1" setup
			0009	"Card Input 2" setup

* If you set "Card Input 1 to 5" for Code No. of CN61 and CN73, Code No. 000b setup becomes unavailable and the functions of Card Input 1 to 5 in CN73 cannot be used.

[Control items]

Function	External contact terminal	
	Close (Status that card is inserted)	Open (Status that card is taken out)
Card Input 1	Manual prohibition release (Manual operation)	Manual prohibition (Operation stop)
Card Input 2	Manual prohibition release (Automatic operation)	Manual prohibition (Operation stop)
Card Input 3	Operation status continues (Do nothing)	Operation status continues and setting temperature changes (COOL/DRY: 84.2°F(29°C), HEAT: 64.4°F(18°C))
Card Input 4	Manual prohibition release (The status returns to operating condition before removing the card.)	Manual prohibition (Operation stop)
Card Input 5	1) To change a setting temperature by changing data at DN code No. 172 to 174. 2) The operation mode can be set by changing data (0000, 0001, 0002) at DN code No. 16b. 0000: operation mode is the same at the current mode. (factory setting default) 0001: operation mode returns to the previous mode when card was inserted. (in case of the previous mode is off operation, the operation mode is also off.) 0002: operation mode starts at the same previous mode when the card was inserted. (the operation mode is on operation even the previous mode is off operation.) See contents below for DN settings and detailed operations.	1) To change a setting temperature, fan speed and wind direction by changing data at DN code No. 16C to 171. 2) The operation mode can be set by changing data (0000, 0001) at DN code No. 16A. 0000: operation mode is the same at the current mode. (factory setting default) 0001: operation automatically starts. See contents below for DN settings and detailed operations.

* For the card switch box that does not involve contact operation described above, convert signals with a relay including a normally-closed contact.

[Card input setup.5 Code (DN)]

DN	Item	Description	At shipment
16C	Open mode Set temp. (Cool, Dry)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0027 : 80.6°F(27°C)
16d	Open mode Set temp. (Heat)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0020 : 68°F(20°C)
16E	Open mode Set temp. (Auto)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
16F	Open mode Fan speed (All operation mode)	0000 : No change 0001 : HH 0002 : H 0003 : L	0000 : No change
170	Open mode Wind direction (Cool, Dry, Fan)	0000 : No change 0001 : F1 0002 : F2 0003 : F3	0000 : No change
171	Open mode Wind direction (Heat)	0000 : No change 0001 : F1 0002 : F2 0003 : F3 0004 : F4 0005 : F5	0000 : No change
16A	Open mode Operation	0000 : No change 0001 : Run operation	0000 : No change
172	Close mode Set temp. (Cool, Dry)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
173	Close mode Set temp. (Heat)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
174	Close mode Set temp. (Heat)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
16b	Close mode Operation	0000 : No change 0001 : Card ON mode operation 0002 : Run operation (Card ON mode setting)	0000 : No change

[The example of Card Input 5 setting]


Case.	Code No. (DN) setting									External contact terminal	
	[16A] data	[16b] data	[16C] data	[16d] data	[16F] data	[170] data	[171] data	[172] data	[173] data	Close (Status that card is inserted)	Open (Status that card is taken n out)
(1)	0000	0000	0027	0020	0000	0000	0000	0024	0024	<ul style="list-style-type: none"> The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 24°C and 24°C respectively due to change in code No. 172, 173. 	<ul style="list-style-type: none"> The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 27°C and 20°C respectively due to change in code No. 16C, 16d.
(2)*	0000	0001	0027	0020	0003	0001	0001	0024	0024	<ul style="list-style-type: none"> The operation mode is running at the same mode as the last time when the card was inserted due to change in code no. 16b. * The operation mode will be off if the mode at the last time was in off operation. Also, the fan speed will the same as the last time when the card is inserted. The setting temperature of cooling/dry and heating mode is changed to 24°C and 24°C respectively due to change in code No. 172, 173. 	<ul style="list-style-type: none"> The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 27°C and 20°C respectively due to change in code no. 172, 173. The fan speed for all operation modes is changed due to change in code no.16F. The wind direction of Cooling/dry/fan and heating mode are changed due to change in code No. 170, 171 respectively.
(3)*	0000	0002	0027	0020	0003	0001	0001	0024	0024	<ul style="list-style-type: none"> The operation mode is running at the same mode as the last time when the card was inserted. Also, the operation mode will be on even the mode was in off operation at the last time due to change in code no. 16B. * The fan speed will the same as the last time when the card is inserted. The setting temperature of cooling/dry and heating mode is changed to 24°C and 24°C respectively due to change in code No. 172, 173. 	Same operation as case (2)
(4)	0001	0000	0027	0020	0003	0001	0001	0024	0024	<ul style="list-style-type: none"> The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 24°C and 24°C respectively due to change in code No. 172, 173. 	<ul style="list-style-type: none"> Due to change in code no. 16A, the operation mode will be as below. When the operation is ON, the operation mode will continue running at the same as the current mode. When the operation is OFF, the air conditioner will turn on automatically. The setting temperature of cooling/dry and heating mode is changed to 27°C and 20°C respectively due to change in code No. 172, 173. The fan speed for all operation modes is changed due to change in code no.16F. The wind direction of Cooling/dry/fan and heating mode are changed due to change in code No. 170, 171 respectively.

* The history operation mode is only recorded when the card is inserted even if the operation mode is changed when the card is taken out, there is no related to the history operation mode.

■ Power peak-cut from indoor unit

When the relay is turned on, a forced thermostat OFF operation starts.

- For indoor P.C. boards other than MCC-1643, the “EXCT” is input with connector CN73 on the P.C. board. MCC-1643 requires Application control kit (TCB-PCUC2E) for input of a forced thermostat OFF “EXCT”. Please refer to the manual of Application control kit for a detailed setting.

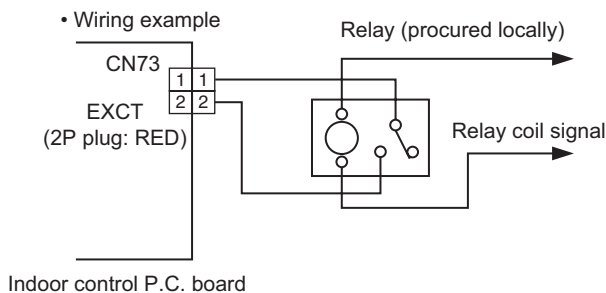

Note) Determine the cable length between the indoor or outdoor control P.C. board and the relay within 2 m.

■ Notice code signal

Notice code is a function dedicated to TU2C-Link communication.

See service manual for u series outdoor unit for details of Notice code.


[Function]

- Notice Code is issued if there is signal input to connector of outdoor unit P.C. board. This can be used in cases such as when confirming state of outdoor unit (filter clogging, etc.) by air conditioner system.
- Used by switching functions with settings of Code No. (DN Code).
- Notice Code is continuously issued while input signal is ON.

[Setup method]

(1) Wiring

Connecting to the CN61 connector

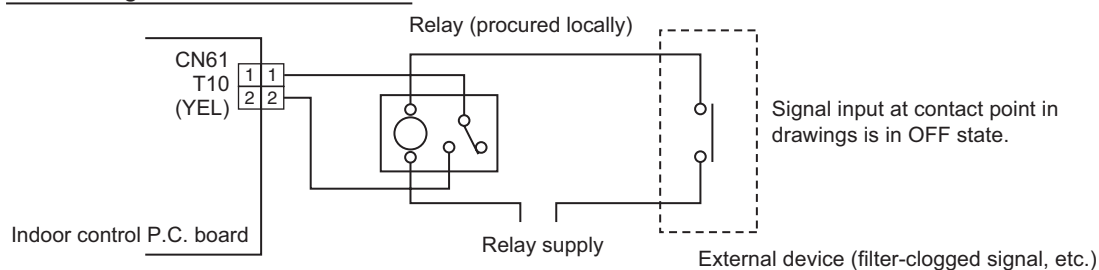

Note) Determine the cable length between the indoor control P.C. board and the relay within 3m.

(2) Code (DN) setup and Notice code

Set Code (DN) according to set indoor unit function DN code.

Connector	Code No. (DN)	Set data	Notice code
CN61	002E	0004	201

* Setting of Code No. (DN Code) is necessary to display Notice code mark at remote controller.

Set data corresponding to Notice code to be used to one of Code No. 180 to 189, in accordance with following table.
In case where data other than 0000 is already set, set to other Code No. (DN Code).


Code No. (DN)	Set data	Notice code
0180	0000	OFF (Factory default)
to	0129	201
0189	0130	202

* It may take up to ten minutes to be displayed on remote controller after Notice code is issued.

■ Manual address setting using the remote controller

Procedure when setting indoor units' addresses first under the condition that indoor wiring has been completed and outdoor wiring has not been started (manual setting using the remote controller)


▼ Wiring example of 2 refrigerant lines

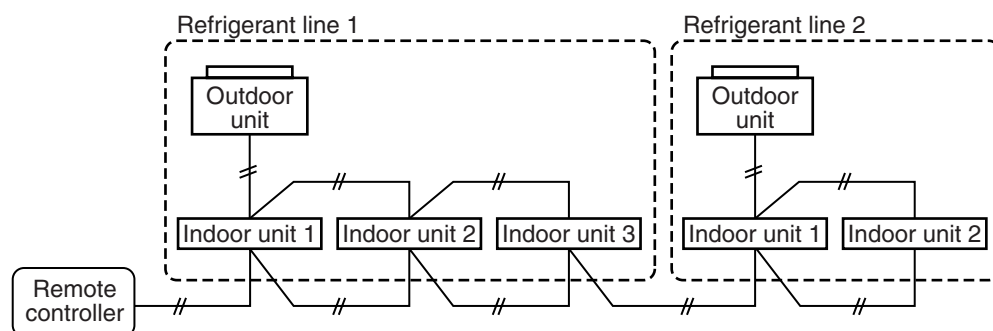

Line (system) address	1	1	1		2	2
Indoor unit address	1	2	3		1	2
Group address	1 Header unit	2 Follower unit	2 Follower unit		2 Follower unit	2 Follower unit

In the example above, disconnect the remote controller connections between the indoor units and connect a wired remote controller to the target unit directly before address setting.

<RBC-AWSU52-UL>

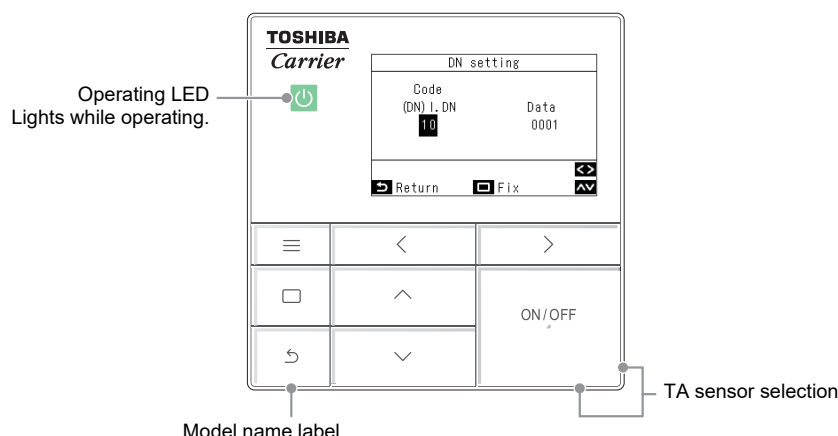


Pair the indoor unit to set and the remote controller one-to-one.
Turn on the power.

- 1** Press [Menu] to open the "Menu"
- 2** Press and hold [Menu] and [Set/Fix] at the same time to open "Field setting menu"
→ Press and hold 4 seconds.
- 3** In the "Field setting menu" screen, press [Up] and [Set/Fix] to select "DN setting", and then press [Set/Fix]
- 4** Press [Up] and [Set/Fix] to select "Indoor unit" or "Outdoor unit", and then press [Set/Fix]
→ If "Indoor unit" was selected, the fans and louvers of the indoor units operate.
When doing group connections:
→ The fans and louvers of the selected indoor units operate.




<Line (system) address>

- 5** Press [Left] to black highlight the item code (DN), and then press [Up] and [Set/Fix] to set the item code No. to 12.
- 6** Press [Right] to black highlight the data, and then press [Up] and [Set/Fix] to set the data system address.
(Match the address with the address on the interface P.C.board of the header outdoor unit in the same refrigerant line.)
- 7** After finishing setting the data of the item code (DN), press [Set/Fix]
→ "Continue?" is displayed.

<Indoor unit address>

- 8** Press [<] to black highlight the item code (DN), and then press [>] and [↓] to set the item code No. to 13.
- 9** Press [>] to black highlight the data, and then press [>] and [↓] to set the data indoor unit address.
- 10** After finishing setting the data of the item code (DN), press [ Set/Fix]
→“Continue?” is displayed.

<Group address>



- 11** Press [<] to black highlight the item code (DN), and then press [>] and [↓] to set the item code No. to 14.
- 12** Press [>] to black highlight the data, and then press [>] and [↓] to set the data indoor unit address.
a group address. If the indoor unit is individual, set the address to 0000; header unit, 0001; follower unit, 0002.
- Individual : 0000
Header unit : 0001
Follower unit : 0002 } In case of group control
- 13** After finishing setting the data of the item code (DN), press [ Set/Fix]
→“Continue?” is displayed.
- 14** To set the data of other item codes (DN), press [ Set/Fix] To not do other settings, press [ Return]

→ The changes are fixed, and the “Field setting menu” screen returns.

→ “” appears while data is changing.

When doing group connections:

→ Press [ Return] to open the unit selection screen.

In the unit selection screen, press [ Return] to briefly display “”, and then return to the “Field setting menu” screen.

NOTE

<In the case of combining with outdoor units of U series (SMMS-u etc.)>

- Turn ON DIP switch 1 of SW100 on the header outdoor unit interface P.C. board the lowest system address number.
- After finishing all the settings above, set the address of the central control devices. (For the setting of the central control address, refer to the installation manual of the central control devices.)

<In the case of combining with outdoor units other than U series>

- Set a system address for the header outdoor unit of each line with SW13 and 14 of their interface P.C. boards.
- Turn off dip switch 2 of SW30 on the interface P.C. boards of all the header outdoor units connected to the same central control, except the unit that has the lowest address. (For unifying the termination of the wiring for the central control of indoor and outdoor units)
- Connect the relay connectors between the [U1, U2] and [U3, U4] terminals on the header outdoor unit of each refrigerate line.
- After finishing all the settings above, set the address of the central control devices. (For the setting of the central control address, refer to the installation manuals of the central control devices.)

◆ To find an indoor unit's position from its address











Procedure to know the position of indoor unit body by address while indoor unit No. is known.



- Confirm each indoor unit address while indoor unit is stopped. (Be sure to stop air conditioner.)

<RBC-AWSU52-UL>


[Procedure]

The position of indoor unit body by address

- 1 Push the [ MENU] button to display the menu screen.
- 2 Push and hold the [ MENU] button and the [] button at the same time to display the "Field setting menu".
→ Push and hold the buttons for more than 4 seconds.
- 3 Push the [] / [] button to select "7. DN setting" on the "Field setting menu" screen, then push the "[] Set"
- 4 Push the unit to confirm the address of indoor unit.
→ The selected unit changes as follows each time the button is pushed:

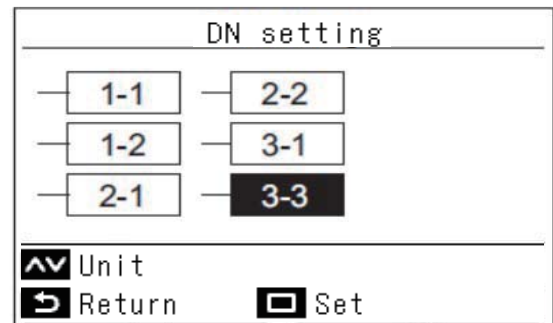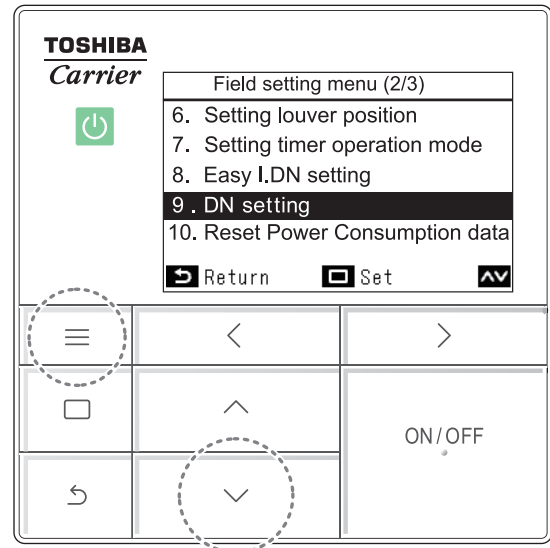- 5 Push the [ Set/Fix]
→ The setting display for the selected unit appears.
→ When the group control is used, the fan and louver of the selected indoor unit operate.
- 6 Push the [ MENU] button to set the other Code(DN) and Data. After "Continue?" is displayed on the screen, push the [ Return] to finish the setting operation. "⌚ Setting" appears on the screen for a while, then the screen returns to the "Field setting menu" screen.

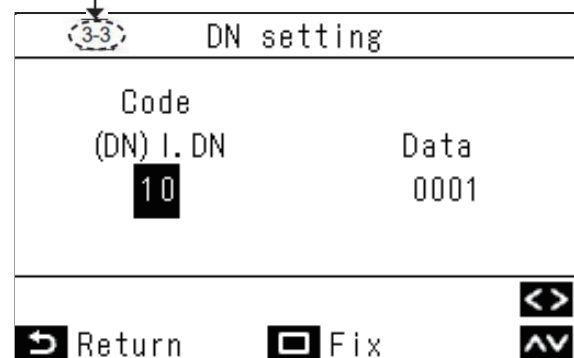

Address is displayed here.



◆ Check code clearing function

How to clear the check code using the wired remote controller

<RBC-AW5U52-UL>

Displays the last 10 check codes, and at which unit and when they occurred.

Field setting menu (1/3)	
1. Test mode	
2. Register service info.	
3. Alarm history	
4. Address	
5. Monitor function	
Return	Set

- 1 In the “Field setting menu” screen, press [] and [] to select “Alarm history”, and then press [Set/Fix]

Alarm history				
	Unit	Code	Date	Time
1.	1-3	E04	06/01/2022	01:56
2.	-	-	-	-
3.	-	-	-	-
4.	-	-	-	-
Reset				
Return				

NOTE

- The check code history data shows a history of 10 occurrences. If the occurrences exceed 10, the oldest data is deleted.
- If the same check code occurs repeatedly, the date of the first occurrence is displayed.

Deleting check code history

Alarm history	
Reset all alarm data.	
No	Yes

- 1 Press [Menu] while the “Alarm history” screen is displayed
→ “Reset all alarm data.” is displayed.
- 2 Press [Set/Fix]



REQUIREMENT




If you are using 2 remote controllers, delete the history at each remote controller.



▼ Monitoring function of wired remote controller

<RBC-AWSU52-UL>

Displays the codes and data indicating the operating condition and temperature of each sensor on the indoor units, outdoor units, and remote controllers.

Monitor function	
Code	Data
00	0024
 Return 	

1 In the “Field setting menu” screen, press [] and [] to select “Monitor function”, and then press [ Set/Fix]

→ Press [] and [] to change the item code and then check the data.

→ In a group connection, after a selection in the unit selection screen, move to the “Monitor function” screen.

2 Press [ Return]

→ Return to the “Field setting menu” screen.

◆ Indoor service monitor list

	Code No.	Data name	Display format	Unit	Remote controller display example
Indoor unit data *	00	Room temperature (Use to control)	×1	°F(°C)	
	01	Room temperature (Remote controller)	×1	°F(°C)	
	02	Indoor suction air temperature (TA)	×1	°F(°C)	
	03	Indoor coil temperature (TCJ)	×1	°F(°C)	
	04	Indoor coil temperature (TC2)	×1	°F(°C)	
	05	Indoor coil temperature (TC1)	×1	°F(°C)	
	06	Indoor discharge air temperature (TF) **	×1	°F(°C)	
	07	Indoor fan motor number of revolutions**	×1	rpm	[0600] = 600rpm
	08	Indoor PMV opening	×1/10	pls	[0150]=1500pls
	F3	Filter sign time	×1	h	[2500] = 2500h
	F9	Suction temperature of air to air heat exchanger (TSA) **	×1	°F(°C)	[0024] = 75.2°F(24°C)
	FA	Outside air temperature (TOA) **	×1	°F(°C)	

* When the units are connected to a group, data of the header indoor unit only can be displayed.

** There is also a model which cannot be displayed.

- Refer to the service manual of an outdoor unit for "outdoor service monitor list".

9. TROUBLESHOOTING

9-1. Overview

(1) Before engaging in troubleshooting

(a) Applicable models

All Super Modular Multi System (SMMS-*, SHRM-*) models.

(b) Tools and measuring devices required

- Screwdrivers (Philips, flat head), spanners, long-nose pliers, nipper, pin to push reset switch, etc.
- Multimeter, thermometer, pressure gauge, etc.

(c) Things to check prior to troubleshooting (behaviors listed below are normal)


NO.	Behavior	Possible cause
1	A compressor would not start	<ul style="list-style-type: none">• The air conditioner is being controlled by the 3-minute protective function.• It is in standby status though the room temperature has reached the setup temperature.• It is being operated in timer mode or fan mode.• It is being in initial communication.
2	An indoor fan would not start	<ul style="list-style-type: none">• The air conditioner is being controlled by the cool air discharge preventive function in "heating"?
3	An outdoor fan would not start or would change speed for no reason	<ul style="list-style-type: none">• The air conditioner is being operated in "cooling" under the low outside air temperature.• It is being operated in defrost operation.
4	An indoor fan would not stop	<ul style="list-style-type: none">• The air conditioner is being controlled by function of residual heat elimination being performed as part of the air conditioner shutdown process after heating operation.
5	The air conditioner would not respond to a start/stop command from a remote controller	<ul style="list-style-type: none">• The air conditioner is being operated under external or remote controller.

CAUTION

The cooling performance may be declining considerably when total operating capacity of cooling indoor units is less than 4 HP while ambient temperature is below.

(2) Troubleshooting procedure

When a problem occurs, proceed with troubleshooting in accordance with the procedure shown below.

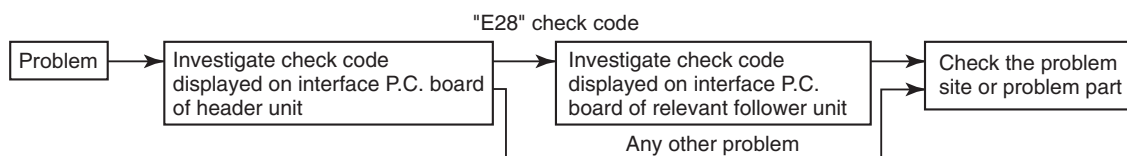

NOTE

Rather than a product trouble (see the List of Check Codes below), the problem could have been caused by a microprocessor malfunction attributable to a poor quality of the power source or an external noise. Check for possible noise sources, and shield the remote controller wiring and signal wires as necessary.

9-2. Troubleshooting method

The remote controllers (main remote controller and central control device) and the interface P.C. board of an outdoor unit are provided with an a 7-segment display (outdoor interface P.C. board) to display operational status. Using this self-diagnosis feature, the trouble site / trouble part may be identified in the event of a trouble by following the method described below.

The list below summarizes check codes detected by various devices. Analyze the check code according to where it is displayed and work out the nature of the trouble in consultation with the list.

- When investigating a trouble on the basis of a display provided on the indoor remote controller or central control device - See the “central control device or main remote controller display” section of the list.
- When investigating a trouble on the basis of a display provided on an outdoor unit - See the “Outdoor 7-segment display” section of the list.
- When investigating a trouble on the basis of a wireless remote controller-controlled indoor unit - See the “Indicator light block” section of the list.

List of check codes (indoor unit)










































































(Check code detected by indoor unit)

IPDU: Compressor / Fan inverter P.C. board














○: Lighting, ⊙: Flashing, ●: Goes off

ALT.: Flashing is alternately when there are two flashing LED





SIM: Simultaneous flashing when there are two flashing LED

Check code			Display of receiving unit				Typical trouble on site	Description of check code
Remote controller display	Outdoor 7-segment display		Indicator light block					
		Sub-code	Operation 	Timer 	Ready 	Flash 		
E03	—	—					Indoor-remote controller periodic communication check code	Communication from remote controller or network adaptor has been lost (so has central control communication).
E04	—	—					Indoor-outdoor periodic communication check code	Signals are not being received from outdoor unit.
E08	E08	Duplicated indoor address					Duplicated indoor address	Indoor unit detects address identical to its own.
E10	—	—					Communication trouble between indoor unit MCU	Communication trouble between main MCU and the motor microcomputer MCU
E11	—	—					Communication check code between Application control kit and indoor unit	Communication check code between Application control kit and indoor unit P.C. board
E18	—	—					Check cod in periodic communication between indoor header and follower unit	Periodic communication between indoor header and follower units cannot be maintained.
F01	—	—				ALT	Indoor heat exchanger temperature sensor (TCJ) check code	Heat exchanger temperature sensor (TCJ) has been open / short-circuit.
F02	—	—				ALT	Indoor heat exchanger temperature sensor (TC2) check code	Heat exchanger temperature sensor (TC2) has been open / short-circuit.
F03	—	—				ALT	Indoor heat exchanger temperature sensor (TC1) check code	Heat exchanger temperature sensor (TC1) has been open / short-circuit.
F10	—	—				ALT	Ambient temperature sensor (TA) check code	Ambient temperature sensor (TA) has been open / short-circuit.
F11	—	—				ALT	Discharge temperature sensor (TF) check code	Discharge temperature sensor (TF) has been open / short-circuit.
F29	—	—				SIM	P.C. board or other indoor check code	Indoor EEPROM is abnormal (some other trouble may be detected).
F30	—	—				ALT	Occupancy sensor trouble	Occupancy sensor trouble has been detected.
L03	—	—				SIM	Duplicated indoor group header unit	There is more than one header unit in group.
L07	—	—				SIM	Connection of group control cable to a single indoor unit	There is at least one a single indoor unit to which group control cable is connected.
L08	L08	—				SIM	Indoor group address not set	Address setting has not been performed for one or more indoor units (also detected at outdoor unit end).
L09	—	—				SIM	Indoor capacity not set	Capacity setting has not been performed for indoor unit.
L20	—	—				SIM	Duplicated central control address	There is duplication in central control address setting.
L30	L30	Detected indoor unit No.				SIM	Indoor external check code input (interlock)	Unit shutdown has been caused by external check code input (CN80).
P01	—	—				ALT	Indoor AC fan check code	Indoor AC fan check code is detected (activation of fan motor thermal relay).
P10	P10	Detected indoor unit No.				ALT	Indoor overflow check code	Float switch has been activated.
P12	—	—				ALT	Indoor DC fan check code	• Indoor DC fan check code (e.g. overcurrent or lock-up) is detected.
P31	—	—				ALT	Other indoor unit check code	Follower unit cannot be operated due to header unit alarm (E03 / L03 / L07 / L08).

(Check code detected by remote controller)

Check code			Display of receiving unit				Typical trouble site	Description of check code
Remote control	Outdoor 7-segment display		Indicator light block					
		Sub-code	Operation 	Timer 	Ready 	Flash 		
E01	—	—					No master remote control, failure remote control communication (reception)	Signals cannot be received from indoor unit; master remote control has not been set (including two remote control).
E02	—	—					Failure remote control communication (transmission)	Signals cannot be transmitted to indoor unit.
E09	—	—					Duplicated master remote control	Both remote controls have been set as master remote control in two remote control (alarm and shutdown for header unit and continued operation for follower unit)




(Check code detected by central control device)

Check code			Display of receiving unit				Typical trouble site	Description of check code
Central control	Outdoor 7-segment display		Indicator light block					
		Sub-code	Operation 	Timer 	Ready 	Flash 		
C05	—	—	No indication (when main remote control also in use)				Failure central control communication (transmission)	Central control device is unable to transmit signal due to duplication of central control device
C06	—	—					Failure central control communication (reception)	Central control device is unable to receive signal.
C12	—	—	—				Bracket alarm for general-purpose device control interface	Device connected to general-purpose device control interface is trouble.
P30 (L20)	—	—	(L20 is displayed.)				Communication Link	<ul style="list-style-type: none">• Duplication addresses of indoor units in central control device• With the combination of air conditioning system, the indoor unit may detect the check code of L20
S01	—	—						Receiving trouble in central control device.

Note: The same trouble, e.g. a communication trouble, may result in the display of different check codes depending on the device that detects it. Moreover, check codes detected by the main remote controller / central control device do not necessarily have a direct impact on air conditioner operation.

Flow selector unit (FS unit) Relation

(Check code detected by indoor unit or outdoor unit)

Check code			Display of receiving unit				Typical trouble site	Description of trouble
Main remote control	Outdoor 7-segment display		Indicator light block					
		Sub-code	Operation 	Timer 	Ready 	Flash		
E17	—	—	⦿	●	●		Communication trouble between indoor unit (s) and FS unit (s)	There is no communication from FS unit(s)
J01	—	—	●	⦿	⦿	SIM	Communication trouble between indoor unit (s) and FS unit (s)	There is no communication from indoor unit (s)
J02	—	—	●	⦿	⦿	SIM	Communication trouble between control boards in FS unit	Communication trouble between PC boards of multiport type FS unit.
J03	—	—	●	⦿	⦿		Duplicated FS units	More than one FS units have been set up in one refrigerant line.
J10	—	—	●	⦿	⦿		FS unit overflow trouble	FS unit has been shutdown in one refrigerant line due to detection of overflow
J11	—	—	●	⦿	⦿		FS unit temperature sensor (TCS) trouble	FS unit temperature sensor (TCS) has been open/short-circuited.

List of Check Codes (Outdoor Unit)

(Check code detected by outdoor interface - typical examples)







































































If "HELLO" is displayed on the outdoor 7-segment for 1 minute or more, turn off the power supply once and then turn on the power supply again after passage of 30 seconds or more. When the same symptom appears, it is considered there is a possibility of I/F board trouble.



























































○ : Lighting, ⊙ : Flashing, ● : Goes off

ALT.: Flashing is alternately when there are two flashing LED




SIM: Simultaneous flashing when there are two flashing LED

Check code			Display of receiving unit				Typical problem site	Description of check code																																																																																								
Outdoor 7-segment display		Central control or main remote controller display	Indicator light block																																																																																													
	Sub-code		Operation ⏻	Timer ⌚	Ready ⦿	Flash																																																																																										
E06	Number of indoor units from which signal is received normally	E06	●	●	⦿		Signal lack of indoor unit	<ul style="list-style-type: none">Indoor unit initially communicating normally fails to return signal (reduction in number of indoor units connected).In TU2C-LINK communication system, if the termination resistance is not set in any of the indoor units.The number of indoor units connected is decreasing. (Detected when power is turned on)																																																																																								
E07	—	(E04)	●	●	⦿		Indoor-outdoor communication circuit trouble	Signal cannot be transmitted to indoor units (→ indoor units left without communication from outdoor unit).																																																																																								
E08	Duplicated indoor address	(E08)	⦿	●	●		Duplicated indoor address	More than one indoor unit are assigned same address (also detected at indoor unit end).																																																																																								
E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	E12	⦿	●	●		Automatic address starting trouble	<ul style="list-style-type: none">Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress.Outdoor automatic address setting is started while automatic address setting for indoor units is in progress.																																																																																								
E15	—	E15	●	●	⦿		Indoor unit not found during automatic address setting	Indoor unit fails to communicate while automatic address setting for indoor units is in progress.																																																																																								
E16	00: Capacity over 01: Number of units connected	E16	●	●	⦿		Too many indoor units connected/capacity over	Combined capacity of indoor units is too large. The maximum combined of indoor units shown in the specification table.																																																																																								
E19	00: No header unit 02: Two or more header units	E19	●	●	⦿		Trouble in number of outdoor header units	There is no or more than one outdoor header unit in one refrigerant line.																																																																																								
E20	01: Connection of outdoor unit from other refrigerant line 02: Connection of indoor unit from other refrigerant line	E20	●	●	⦿		Connection to other refrigerant line found during automatic address setting	Indoor unit from other refrigerant line is detected while indoor automatic address setting is in progress.																																																																																								
E23	—	E23	●	●	⦿		Outdoor-outdoor communication transmission trouble	Signal cannot be transmitted to other outdoor units.																																																																																								
E25	—	E25	●	●	⦿		Duplicated follower outdoor address	There is duplication in outdoor addresses set manually.																																																																																								
E26	Address of outdoor unit from which signal is not received normally	E26	●	●	⦿		Signal lack of outdoor unit	Follower outdoor unit initially communicating normally fails to do so (reduction in number of follower outdoor units connected).																																																																																								
E28	Detected outdoor unit No.	E28	●	●	⦿		Outdoor follower unit trouble	Outdoor header unit detects trouble relating to follower outdoor unit (detail displayed on follower outdoor unit).																																																																																								
E31	<table><tr><th colspan="4">P.C.board</th><th colspan="4">P.C.board</th></tr><tr><th colspan="2">Compressor</th><th colspan="2">Fan Motor</th><th colspan="2">Compressor</th><th colspan="2">Fan Motor</th></tr><tr><th>1</th><th>2</th><th>1</th><th>2</th><th>1</th><th>2</th><th>1</th><th>2</th></tr><tr><td>01</td><td>○</td><td></td><td></td><td>11</td><td>○</td><td></td><td>○</td></tr><tr><td>02</td><td></td><td>○</td><td></td><td>12</td><td></td><td>○</td><td>○</td></tr><tr><td>03</td><td>○</td><td>○</td><td></td><td>13</td><td>○</td><td>○</td><td>○</td></tr><tr><td>08</td><td></td><td></td><td>○</td><td>18</td><td></td><td></td><td>○</td></tr><tr><td>09</td><td>○</td><td></td><td>○</td><td>19</td><td>○</td><td></td><td>○</td></tr><tr><td>0A</td><td></td><td>○</td><td>○</td><td>1A</td><td></td><td>○</td><td>○</td></tr><tr><td>0B</td><td>○</td><td>○</td><td>○</td><td>1B</td><td>○</td><td>○</td><td>○</td></tr><tr><td>10</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table> <p>Circle (○): Trouble P.C. board 80 : Communication trouble between MCU and Sub MCU</p>	P.C.board				P.C.board				Compressor		Fan Motor		Compressor		Fan Motor		1	2	1	2	1	2	1	2	01	○			11	○		○	02		○		12		○	○	03	○	○		13	○	○	○	08			○	18			○	09	○		○	19	○		○	0A		○	○	1A		○	○	0B	○	○	○	1B	○	○	○	10								E31	●	●	⦿		P.C. board communication trouble Sub MCU communication trouble	There is no communication between P.C. boards in inverter box.
P.C.board				P.C.board																																																																																												
Compressor		Fan Motor		Compressor		Fan Motor																																																																																										
1	2	1	2	1	2	1	2																																																																																									
01	○			11	○		○																																																																																									
02		○		12		○	○																																																																																									
03	○	○		13	○	○	○																																																																																									
08			○	18			○																																																																																									
09	○		○	19	○		○																																																																																									
0A		○	○	1A		○	○																																																																																									
0B	○	○	○	1B	○	○	○																																																																																									
10																																																																																																
F04	—	F04	⦿	⦿	○	ALT	Outdoor discharge temperature sensor (TD1) trouble	Outdoor discharge temperature sensor (TD1) has been open/short-circuited.																																																																																								
F05	—	F05	⦿	⦿	○	ALT	Outdoor discharge temperature sensor (TD2) trouble	Outdoor discharge temperature sensor (TD2) has been open/short-circuited.																																																																																								
F06	01: TE1 sensor 02: TE2 sensor 03: TE3 sensor	F06	⦿	⦿	○	ALT	Outdoor heat exchanger liquid side temperature sensor (TE1, TE2, TE3) trouble	Outdoor heat exchanger liquid side temperature sensors (TE1, TE2, TE3) have been open/short-circuited.																																																																																								











































Check code		Central control or main remote controller display	Display of receiving unit				Typical problem site	Description of check code
Outdoor 7-segment display			Indicator light block					
Sub-code			Operation 	Timer 	Ready 	Flash 		
F07	01: TL1 sensor 02: TL2 sensor 03: TL3 sensor	F07				ALT	Outdoor liquid temperature sensor (TL1,TL2,TL3) trouble	Outdoor liquid temperature sensor (TL1,TL2,TL3) has been open/short-circuited.
F08	—	F08				ALT	Outdoor outside air temperature sensor (TO) trouble	Outdoor air temperature sensor (TO) has been open/short-circuited.
F09	01: TG1 sensor 02: TG2 sensor 03: TG3 sensor	F09				ALT	Outdoor heat exchanger gas side temperature sensor (TG1, TG2, TG3) trouble	Outdoor heat exchanger gas side temperature sensors (TG1, TG2, TG3) have been open/short-circuited.
F12	01: TS1 sensor 02: TS2 sensor 03: TS3 sensor 04: TS3 sensor disconnect	F12				ALT	<ul style="list-style-type: none">Outdoor suction temperature sensor (TS1, TS2, TS3) troubleWhen TS3 detects an unusual temperature during compressor operation and PMV4 operation in cooling mode	<ul style="list-style-type: none">Outdoor suction temperature sensor (TS1,TS2, TS3) has been open/short-circuited.When the disconnect of outdoor temperature sensor (TS3) is detected.
F15	—	F15				ALT	Outdoor temperature sensor (TE1,TL1) wiring trouble	Wiring trouble in outdoor temperature sensors (TE1,TL1) has been detected.
F16	—	F16				ALT	Outdoor pressure sensor (Pd, Ps) wiring trouble	Wiring trouble in outdoor pressure sensors (Pd, Ps) has been detected.
F23	—	F23				ALT	Low pressure sensor (Ps) trouble	Output voltage of low pressure sensor (Ps) is zero.
F24	—	F24				ALT	High pressure sensor (Pd) trouble	Output voltage of high pressure sensor (Pd) is zero or provides abnormal readings when compressors have been turned off.
F31	—	F31				SIM	Outdoor EEPROM trouble	Outdoor EEPROM is failure (alarm and shutdown for header unit and continued operation for follower unit)
J29	—	J29				SIM	Leak Detector Trouble	<ul style="list-style-type: none">There is no communication from Leak DetectorA Malfunction signal received from Leal Detector.
J30	Detected indoor unit address *Not displayed depending on the DN code (I.DN) setting	J30				SIM	Refrigerant leak detection	Leak Detector detects refrigerant leak
J31	—	J31				SIM	Refrigerant leak detection sensor exceeding its life of the product	Energization time of the Leak Detector has reached its useful life.
H05	—	H05					Outdoor discharge temperature sensor (TD1) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD1) has been detected.
H06	—	H06					Activation of low-pressure protection	Low pressure (Ps) sensor detects abnormally low operating pressure.
H07	—	H07					Low oil level protection	Temperature sensor for oil level detection (TK1,TK2) detects abnormally low oil level.
H08	01: TK1 sensor trouble 02: TK2 sensor trouble	H08					Trouble in temperature sensor for oil level detection (TK1,TK2)	Temperature sensor for oil level detection (TK1,TK2) has been open/short-circuited.
H15	—	H15					Outdoor discharge temperature sensor (TD2) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD2) has been detected.
H16	01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	H16					Oil level detection circuit trouble	No temperature change is detected by temperature sensor for oil level detection (TK1,TK2) despite compressor having been started.
L02	Detected indoor unit address	L02				SIM	Indoor unit incompatible with A2L refrigerant	Indoor unit incompatible with TU2C-LINK is connected. • Indoor unit incompatible with R32 refrigerant is connected."
L04	—	L04				SIM	Duplicated outdoor refrigerant line address	Identical refrigerant line address has been assigned to outdoor units belonging to different refrigerant piping systems.
L06	Number of priority indoor units (check code L05 or L06 depending on individual unit)	L05				SIM	Duplicated priority indoor unit (as displayed on priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.
		L06				SIM	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.
L08	—	(L08)				SIM	Indoor group address not set	Address setting have not been performed for one or more indoor units (also detected at indoor end).

Check code			Display of receiving unit				Typical problem site	Description of check code																																																																																								
Outdoor 7-segment display		Central control or main remote controller display	Indicator light block																																																																																													
	Sub-code		Operation 	Timer 	Ready 	Flash 																																																																																										
L10	—	L10				SIM	Outdoor capacity not set	Outdoor unit capacity has not been set (after P.C. board replacement).																																																																																								
L11	Detected indoor unit address	L11				SIM	Flow Selector unit or Shut-off Valve unit installation trouble	<ul style="list-style-type: none">Outdoor unit is set to "HR", there is no connection to Flow Selector unit, and indoor unit is not set to "cooling only".Outdoor unit is set to "HP" and the Flow Selector unit is connected.																																																																																								
L12	01 : Flow Selector (FS) unit (s) installation trouble"	L12				SIM	Flow Selector (FS) unit(s) system trouble	FS unit(s) outside the application setting																																																																																								
L13	Detected indoor unit address	L13				SIM	Safety measures setting unmatched	<ul style="list-style-type: none">Safety measures CODE No. setting of indoor unit connected to same FS unit (or Shut-off Valve unit) is mismatched.* "No safety measures required" does not apply.* Mixture of "pump down operation" and "Only Leak Detector" is not case.Indoor unit is not connected to port1 of multiport type FS unit.The +1 port address of FS unit port with port combining branched is set.* Next to combining branches port (No.+1 side) must not be port addressed.One port in an FS unit has multiple indoor unit group settings and a group across multiple ports.Same FS unit address is set for different FS units.																																																																																								
L14	Detected indoor unit address	L14				SIM	Safety measures nonconformity	<ul style="list-style-type: none">Safety measures CODE No. setting of indoor unit is set other than "no safety measures required" and Leak Detector is not connected at the time of power input.Safety measures CODE No. setting of indoor unit is set to "pump down operation" or "individual shut-off operation" and FS unit or Shut-off Valve unit is not connected.Safety CODE No. setting of indoor unit connected to multiport type FS unit is set to "Individual shut off operation".																																																																																								
L17	—	L17				SIM	Outdoor model incompatibility trouble	Outdoor unit that cannot be connected is connected.																																																																																								
L18	Detected indoor unit address	L18				SIM	Cooling/heating FS unit trouble	Cooling/heating cycle trouble resulting from piping trouble is detected																																																																																								
L23	02: Switch setting trouble of outdoor unit	L23				SIM	SW setting trouble	Switch setting trouble of outdoor units when HWM (Hot water module) is connected.																																																																																								
L24	01: Duplication of FS units address L24 FS unit(s) setting trouble 02: Indoor units operation mode priority setting	L24				SIM	FS unit(s) setting trouble	<ul style="list-style-type: none">FS unit(s) detects address identical to its own.Duplicated priority indoor units operation mode.																																																																																								
L28	—	L28				SIM	Too many outdoor units connected	More than six outdoor units have been connected.																																																																																								
L29	<table><tr><th colspan="4">P.C.board</th><th colspan="4">P.C.board</th></tr><tr><th colspan="2">Compressor</th><th colspan="2">Fan Motor</th><th colspan="2">Compressor</th><th colspan="2">Fan Motor</th></tr><tr><th></th><th>1</th><th>2</th><th>1</th><th>2</th><th></th><th>1</th><th>2</th></tr><tr><td>01</td><td>○</td><td></td><td></td><td></td><td>11</td><td>○</td><td></td></tr><tr><td>02</td><td></td><td>○</td><td></td><td></td><td>12</td><td></td><td>○</td></tr><tr><td>03</td><td>○</td><td></td><td></td><td></td><td>13</td><td>○</td><td></td></tr><tr><td>08</td><td></td><td></td><td>○</td><td></td><td>18</td><td></td><td>○</td></tr><tr><td>09</td><td>○</td><td></td><td>○</td><td></td><td>19</td><td>○</td><td></td></tr><tr><td>0A</td><td></td><td>○</td><td>○</td><td></td><td>1A</td><td></td><td>○</td></tr><tr><td>0B</td><td>○</td><td>○</td><td>○</td><td></td><td>1B</td><td>○</td><td>○</td></tr><tr><td>10</td><td></td><td></td><td></td><td>○</td><td></td><td></td><td></td></tr></table> <p>Circle (○): Trouble P.C. board</p>	P.C.board				P.C.board				Compressor		Fan Motor		Compressor		Fan Motor			1	2	1	2		1	2	01	○				11	○		02		○			12		○	03	○				13	○		08			○		18		○	09	○		○		19	○		0A		○	○		1A		○	0B	○	○	○		1B	○	○	10				○				L29				SIM	Trouble in number of P.C. boards	There are insufficient number of P.C. board in inverter box.
	P.C.board				P.C.board																																																																																											
Compressor		Fan Motor		Compressor		Fan Motor																																																																																										
	1	2	1	2		1	2																																																																																									
01	○				11	○																																																																																										
02		○			12		○																																																																																									
03	○				13	○																																																																																										
08			○		18		○																																																																																									
09	○		○		19	○																																																																																										
0A		○	○		1A		○																																																																																									
0B	○	○	○		1B	○	○																																																																																									
10				○																																																																																												
	00	L29				SIM	The number of P.C. board trouble	When there is much number of an inverter P.C. board to model setting of an interface P.C. board.																																																																																								
L30	Detected indoor unit No.	(L30)				SIM	Indoor external trouble input (interlock)	Indoor unit has been shut down for external trouble input in one refrigerant line (detected by indoor unit).																																																																																								
P03	—	P03				ALT	Outdoor discharge (TD1) temperature trouble	Outdoor discharge temperature sensor (TD1) has detected abnormally high temperature.																																																																																								
P04	01: Compressor 1 02: Compressor 2	P04				ALT	Activation of high-pressure SW	High-pressure SW is activated.																																																																																								
P05	00: Power detection trouble 01: Open phase 02: Power supply miswiring	P05				ALT	Power detection trouble /Open phase detection /Power supply miswiring detection	Open phase is detected when power is turned on. Inverter DC voltage is too high (overvoltage) or too low (undervoltage).																																																																																								
P07	00 : Compressor 1 or 2 heat sink trouble 01 : Compressor 1 heat sink trouble 02 : Compressor 2 heat sink trouble	P07				ALT	Heat sink overheating trouble	Temperature sensor built into IPM (TH) detects overheating.																																																																																								
	04: Heat sink dewing						Heat sink dewing trouble	Outdoor liquid temperature sensor (TL2) has detected abnormally low temperature.																																																																																								
P10	Indoor unit No. detected	(P10)				ALT	Indoor unit overflow	Indoor unit has been shutdown in one refrigerant line due to detection of overflow (detected by indoor unit).																																																																																								

FS unit: Flow Selector unit

Check code			Display of receiving unit				Typical problem site	Description of check code
Outdoor 7-segment display		Central control or main remote controller display	Indicator light block					
Sub-code			Operation 	Timer 	Ready 	Flash		
P11	—	P11	●	◎	◎	ALT	Outdoor heat exchanger freeze trouble	Remaining frost on outdoor heat exchanger has been detected repeatedly.
P13	—	P13	●	◎	◎	ALT	Outdoor liquid backflow detection trouble	State of refrigerant cycle circuit indicates liquid backflow operation.
P14	01: Outdoor unit valve is close	P14	●	◎	◎	ALT	Another refrigerant cycle protection	Outdoor unit valve is forget to open during test run.
P15	01: TS condition 02: TD condition	P15	◎	●	◎	ALT	Gas leak detection	Outdoor suction temperature sensor (TS1) detects sustained and repeated high temperatures that exceed standard value.
P16	01: PMV5 02: PMV6 03: Mis installation of PMV5 and PMV6	P16	◎	●	◎	ALT	Injection circuit trouble	• Discharge temperature of either Comp 1 or Comp 2 is within the normal control range, and discharge temperature of the other is very low. • Discharge temperature of either Comp 1 or Comp 2 is very high, and discharge temperature of the other is very low.
P17	—	P17	◎	●	◎	ALT	Outdoor discharge (TD2) temperature trouble	Outdoor discharge temperature sensor (TD2) detects abnormally high temperature.
P19	0#: 4-way valves 1#: 4-way valve1 2#: 4-way valve2 * Put in outdoor unit No. in [#] mark.	P19	◎	●	◎	ALT	4-way valve reversing trouble	• Abnormality in refrigerating cycle is detected during heating operation. • Either 4WV1 or 4WV2 cannot be switched.
P20	—	P20	◎	●	◎	ALT	Activation of high-pressure protection	High pressure (Pd) sensor detects high pressure that exceeds standard value.


(Check code detected by Inverter of Compressor featuring in outdoor unit - typical examples)

Check code			Display of receiving unit				Typical problem site	Description of check code
Outdoor 7-segment display		Central control or main remote controller display	Indicator light block					
	Sub-code		Operation 	Timer 	Ready 	Flash		
F13	1*: Compressor 1 2*: Compressor 2	F13				ALT	Trouble in temperature sensor built into indoor IPM (TH)	Temperature sensor built into indoor IPM (TH) has been open/short-circuited.
H01	1*: Compressor 1 2*: Compressor 2	H01					Compressor breakdown	Inverter current (Idc) detection circuit detects overcurrent.
H02	1*: Compressor 1 2*: Compressor 2	H02					Compressor trouble (lockup)	Compressor lockup is detected
H03	1*: Compressor 1 2*: Compressor 2	H03					Current detection circuit trouble	Abnormal current is detected while inverter compressor is turned off.
H17	1*: Compressor 1 2*: Compressor 2	H17					Compressor trouble (Step-out)	Compressor is in step-out condition.
H28	1*: Compressor 1 2*: Compressor 2	H28					Compressor motor winding trouble	Compressor motor winding is layer shorted.
P05	1*: Compressor 1 side 2*: Compressor 2 side	P05				ALT	Compressor Vdc trouble	Inverter DC voltage is too high (overvoltage) or too low (undervoltage).
P07	1*: Compressor 1 side 2*: Compressor 2 side	P07				ALT	Heat sink overheat trouble	Temperature sensor built into IPM (TH) detects overheating.
P11	—	P11				ALT	Outdoor heat exchanger freeze trouble	Remaining frost on outdoor heat exchanger has been detected repeatedly.
P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	P22				ALT	Outdoor fan P.C. board trouble	Outdoor fan P.C. board detects trouble.
P25	1*: Compressor 1 2*: Compressor 2	P25				ALT	Compressor P.C. board trouble	IPM for compressor is broken. (Short-circuit etc.)
P26	1*: Compressor 1 2*: Compressor 2	P26				ALT	Compressor start up trouble	Open phase or IPM over current for compressor is detected.
P29	1*: Compressor 1 2*: Compressor 2	P29				ALT	Compressor position detection circuit trouble	Compressor motor position detection trouble is detected.

Note: The above check codes are examples only, and different check codes may be displayed depending on the outdoor unit configuration

9-3. Troubleshooting by check Display on Remote Controller


<RBC-AWSU52-UL>

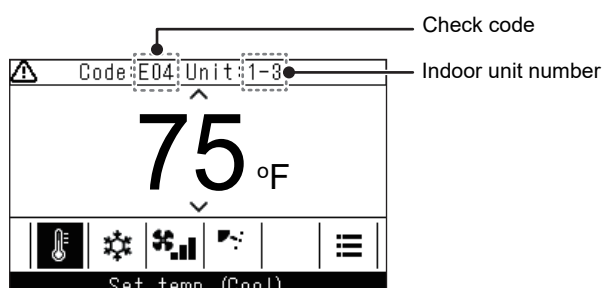

When an error occurs in the air conditioner, the check code and the indoor unit number flash on the display of the remote controller.

* The check code is only displayed during the operation.

When the check code and indoor unit number are displayed, pressing [Return] opens the “Check” screen.

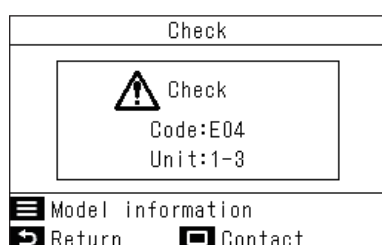

In the “Check” screen, press [Set/Fix] to show the contacts.

Press [Menu] to display “Model information”.

■ Contact information for repairs

You can look for contact information for repairs.







1 In the “Information” screen, press [] and [] to select “Service information”, and then press [Set/Fix]













Using indoor unit indicators (receiving unit light block) (wireless type)


To identify the check code, check the 7-segment display on the outdoor unit. To check for check codes not displayed on the 7-segment display, consult the “List of Check Codes (Indoor Unit)” in “9-2. Troubleshooting method”.

● : Goes off ○ : Lighting ☼ : Blinking (0.5 seconds)



Light block	Check code	Cause of trouble		
Operation Timer Ready ● ● ● All lights out	—	Power turned off or trouble in wiring between receiving and indoor units		
Operation Timer Ready ☀ ● ● Blinking	E01	Trouble reception	Receiving unit	Trouble or poor contact in wiring between receiving unit and indoor units
	E02	Trouble transmission		
	E03	Loss of communication		
	E08	Duplicated indoor unit No. (address)		Setting trouble
	E09	Duplicated master remote controller		
	E10	Communication trouble between indoor unit MCU		
	E11	Communication trouble between Application control kit and indoor unit P.C. board		
	E12	Automatic address starting trouble		
	E17	Communication trouble between indoor unit(s) and Flow Selector unit(s).		
	E18	Trouble or poor contact in wiring between indoor units, indoor power turned off		
Operation Timer Ready ● ● ☀ Blinking	E04	Trouble or poor contact in wiring between indoor and outdoor units (loss of indoor-outdoor communication)		
	E06	Trouble reception in indoor-outdoor communication (dropping out of indoor unit)		
	E07	Trouble transmission in indoor-outdoor communication		
	E15	Indoor unit not found during automatic address setting		
	E16	Too many indoor units connected / overloading		
	E19	Trouble in number of outdoor header units		
	E20	Detection of refrigerant piping communication trouble during automatic address setting		
	E23	Trouble transmission in outdoor-outdoor communication		
	E25	Duplicated follower outdoor address		
	E26	Trouble reception in outdoor-outdoor communication, dropping out of outdoor unit		
	E28	Outdoor follower unit trouble		
	E31	P.C. board communication trouble		
Operation Timer Ready ● ☀ ☀ Alternate blinking	P01	Indoor AC fan trouble		
	P10	Indoor overflow trouble		
	P11	Outdoor heat exchanger freezing trouble		
	P12	Indoor DC fan trouble		
	P13	Outdoor liquid backflow detection trouble		
	P14	Outdoor unit valve is closed		

Light block	Check code	Cause of trouble	
<div>Operation Timer Ready</div> <div></div> <div>Alternate blinking</div>	P03	Outdoor discharge (TD1) temperature trouble	
	P04	Activation of outdoor high-pressure SW	
	P05	Open phase / power failure Inverter DC voltage (Vdc) trouble MG-CTT trouble	
	P07	Outdoor heat sink overheating trouble - Poor cooling of electrical component (IGBT) of outdoor unit	
	P15	Gas leak detection - insufficient refrigerant charging	
	P16	Injection circuit trouble.	
	P17	Outdoor discharge (TD2) temperature trouble	
	P18	Outdoor discharge (TD3) temperature trouble	
	P19	Outdoor 4-way valve reversing trouble	
	P20	Activation of high-pressure protection	
	P22	Outdoor fan P.C. board trouble	
	P25	Compressor P.C. board trouble.	
	P26	Compressor trouble / Wire connection trouble. Compressor leads trouble. Compressor P.C. board trouble.	
	P29	Compressor position detection circuit trouble	
	P31	Shutdown of other indoor unit in group due to trouble (group follower unit trouble)	
<div>Operation Timer Ready</div> <div></div> <div>Alternate blinking</div>	F01	Heat exchanger temperature sensor (TCJ) trouble	Indoor unit temperature sensor trouble
	F02	Heat exchanger temperature sensor (TC2) trouble	
	F03	Heat exchanger temperature sensor (TC1) trouble	
	F10	Ambient temperature sensor (TA/TSA) trouble	
	F11	Discharge temperature sensor (TF) trouble	
<div>Operation Timer Ready</div> <div></div> <div>Alternate blinking</div>	F04	Discharge temperature sensor (TD1) trouble	Outdoor unit temperature sensor trouble
	F05	Discharge temperature sensor (TD2) trouble	
	F06	Heat exchanger temperature sensor (TE1, TE2, TE3) trouble	
	F07	Liquid temperature sensor (TL1, TL2, TL3) trouble	
	F08	Outside air temperature sensor (TO) trouble	
	F09	Heat exchanger gas side temperature sensor (TG1, TG2, TG3) trouble	
	F12	Suction temperature sensor (TS1, TS2, TS3) trouble	
	F13	Heat sink sensor (TH) trouble	
	F15	Wiring trouble in heat exchanger sensor (TE1) and liquid temperature sensor (TL) Outdoor unit temperature sensor wiring / installation trouble	
	F16	Wiring trouble in outdoor high pressure sensor (Pd) and low pressure sensor (Ps) Outdoor pressure sensor wiring trouble	
	F23	Low pressure sensor (Ps) trouble	Outdoor unit pressure sensor trouble
	F24	High pressure sensor (Pd) trouble	
<div>Operation Timer Ready</div> <div></div> <div>Synchronized blinking</div>	F29	Trouble in indoor EEPROM	




Light block	Check code	Cause of trouble	
<div>Operation Timer Ready</div> <div></div> <div>Blinking</div>	H01	Compressor breakdown	
	H02	Compressor lockup	
	H03	Current detection circuit trouble	
	H05	Wiring / installation trouble or detachment of outdoor discharge temperature sensor (TD1)	
	H06	Abnormal drop in low-pressure sensor (Ps) reading	
	H07	Abnormal drop in oil level	
	H08	Trouble in temperature sensor for oil level detection circuit (TK1, TK2)	
	H15	Wiring / installation trouble or detachment of outdoor discharge temperature sensor (TD2)	
	H16	Oil level detection circuit trouble - Trouble in outdoor unit TK1, TK2 circuit	
	H17	Compressor trouble (Step-out)	
	H28	Compressor motor winding trouble.	
<div>Operation Timer Ready</div> <div></div>	J29	Leak Detector trouble	
	J30	Refrigerant leak detection	
	J31	Refrigerant leak detection sensor has reached product life	
<div>Operation Timer Ready</div> <div></div> <div>Synchronized blinking</div>	L02	Outdoor unit model mismatched trouble	
	L03	Duplicated indoor group header unit	
	L05	Duplicated priority indoor unit (as displayed on priority indoor unit)	
	L06	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	
	L07	Connection of group control cable to stand-alone indoor unit	
	L08	Indoor group address not set	
	L09	Indoor capacity not set	
	<div>Operation Timer Ready</div> <div></div> <div>Synchronized blinking</div>	L04	Duplicated outdoor refrigerant line address
L10		Outdoor capacity not set	
L11		Flow Selector unit or Shut-off Valve unit installation trouble	
L12		Flow selector unit(s) system trouble.	
L13		Safety measures setting unmatched.	
L14		Safety measures nonconformity.	
L17		Outdoor model incompatibility	
L18		Cooling/heating Flow selector unit trouble.	
L20		Duplicated central control address	
L23		SW setting trouble	
L24		Flow selector unit(s) setting trouble.	
L28		Too many outdoor units connected	
L29	Trouble in number of P.C. boards		
L30	Indoor external interlock trouble		

Light block	Check code	Cause of trouble
Operation Timer Ready  Synchronized blinking	F30	Occupancy sensor trouble
	F31	Outdoor EEPROM trouble

Other (indications not involving check code)

Light block	Check code	Cause of trouble
Operation Timer Ready  Synchronized blinking	–	Test run in progress
Operation Timer Ready  Alternate blinking	–	Setting incompatibility (automatic cooling / heating setting for model incapable of it and heating setting for cooling-only model)

Flow selector unit (FS unit) Relation

Light block	Check code	Cause of trouble
Operation Timer Ready  Blinking	E17	Communication trouble between indoor unit(s) and FS unit(s)
Operation Timer Ready  Synchronized blinking	L12	FS unit(s) system trouble
	L24	FS unit(s) setting trouble
Operation Timer Ready  Blinking Blinking	J03	Duplicated FS units
	J10	FS unit overflow trouble
	J11	FS unit temperature sensor(TCS) trouble

9-4. Check Codes

(Displayed on remote controller and 7-segment display of outdoor Unit)

The contents of these check code tables differ depending on the outdoor unit to be connected. Refer to the service manual of the connected outdoor unit. (The table below is for the SMMS-u series.)

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
E01	—	—	Remote controller	Indoor-remote controller communication trouble (detected at remote controller end)	Stop of corresponding unit	Communication between indoor P.C. board and remote controller is disrupted.	<ul style="list-style-type: none"> • Check remote controller inter-unit tie cable (A/B). • Check for broken wire or connector bad contact. • Check indoor power supply. • Check for failure in indoor P.C. board. • Check remote controller address settings (when two remote controllers are in use). • Check remote controller P.C. board.
E02	—	—	Remote controller	Remote controller transmission trouble	Stop of corresponding unit	Signal cannot be transmitted from remote controller to indoor unit.	<ul style="list-style-type: none"> • Check internal transmission circuit of remote controller. --- Replace remote controller as necessary.
E04	—	—	Indoor unit	Indoor-outdoor communication circuit trouble (detected at indoor end)	Stop of corresponding unit	Indoor unit is not receiving signal from outdoor unit.	<ul style="list-style-type: none"> • Check order in which power was turned on for indoor and outdoor units. • Check indoor address setting. • Check indoor-outdoor tie cable. • Check outdoor terminator resistor setting (SW100, Bit 2).
E04	E06	No. of indoor units from which signal is received normally	I/F	Dropping out of indoor unit	All stop	Condition 1 All indoor unit initially communicating normally fails to return signal for specified length of time. Condition 2 Outdoor I / F board SW103, Bit4 : OFF (Factory default)	<ul style="list-style-type: none"> • Check power supply to indoor unit. (Is power turned on?) • Check connection of indoor-outdoor communication cable. • Check connection of communication connectors on indoor P.C. board. • Check connection of communication connectors on outdoor P.C. board. • Check for failure in indoor P.C. board. • Check for failure in outdoor P.C. board (I/F).
	—	—	Indoor unit	Indoor-outdoor communication circuit trouble	Only specified indoor units stop	Condition 1 Indoor unit initially communicating normally fails to return signal for specified length of time.	<ul style="list-style-type: none"> • Check power supply to indoor unit. (Is power turned on?) • Check indoor-outdoor power-on sequence. • Check indoor address setting • Check wiring of Indoor-outdoor communication wires • Check outdoor terminator resistor setting (SW100, Bit 2).

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
E04/E06	E06	No. of indoor units from which signal is received normally	Indoor unit	Indoor-outdoor communication circuit trouble (E04)	All stop	Condition 1 One indoor unit or more initially communicating normally fails to return signal for specified length of time. Condition 2 Outdoor I / F board SW103, Bit4 : ON (To switch the check code detection condition.) <div></div>	<ul style="list-style-type: none">• Check power supply to indoor unit. (Is power turned on?)• Check indoor-outdoor power-on sequence.• Check indoor address setting• Check wiring of Indoor-outdoor communication wires• Check outdoor terminator resistor setting (SW100, Bit 2).
			I/F	Dropping out of indoor unit (E06)			<div>Display on main remote controller. Indoor units unavailable for indoor / outdoor communication. :E04 Indoor units available for indoor / outdoor communication. : E06</div> In TU2C-LINK communication system, if the termination resistance is not set in any of the indoor units.
—	E07	—	I/F	Indoor-outdoor communication circuit trouble (detected at outdoor end)	All stop	Signal cannot be transmitted from outdoor to indoor units for 30 seconds continuously.	<ul style="list-style-type: none">• Check outdoor terminator resistor setting (SW100, Bit 2).• Check connection of indoor-outdoor communication circuit.
E08	E08	Duplicated indoor address	Indoor unit I/F	Duplicated indoor address	All stop	More than one indoor unit are assigned same address.	<ul style="list-style-type: none">• Check indoor addresses.• Check for any change made to remote controller connection (group/ individual) since indoor address setting.
E09	—	—	Remote controller	Duplicated master remote controller	Stop of corresponding unit	In two remote controller configuration (including wireless), both controllers are set up as master. (Header indoor unit is shut down with alarm, while follower indoor units continue operating.)	<ul style="list-style-type: none">• Check remote controller settings.• Check remote controller P.C. boards.
E10	—	—	Indoor unit	Indoor inter-MCU communication trouble	Stop of corresponding unit	Communication cannot be established/maintained upon turning on of power or during communication.	<ul style="list-style-type: none">• Check for failure in indoor P.C. board
E12	E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	I/F	Automatic address starting trouble	All stop	<ul style="list-style-type: none">• Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress.• Outdoor automatic address setting is started while automatic address setting for indoor units is in progress.	<ul style="list-style-type: none">• Check whether the outdoor unit of other systems or the indoor unit is connected to Uv (U1/U2) line or Uc (U5/U6) line.• Perform automatic address setting again after disconnecting communication cable to that refrigerant line.
E15	E15	—	I/F	Indoor unit not found during automatic address setting	All stop	Indoor unit cannot be detected after indoor automatic address setting is started.	<ul style="list-style-type: none">• Check connection of indoor-outdoor communication line.• Check for trouble in indoor power supply system.• Check for noise from other devices.• Check for power failure.• Check for failure in indoor P.C. board.

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
E16	E16	00: Capacity over 01: No. of units connected	I/F	Too many indoor units connected	All stop	<ul style="list-style-type: none"> Combined capacity of indoor units is too large. <p>Note: If this code comes up after backup setting for outdoor unit failure is performed, perform "No capacity over detected" setting.</p> <p><"No capacity over detected" setting method> Turn on SW103 / Bit 3 on I/F P.C. board of outdoor header unit. For Cooling Only model, this check code is not displayed even if it exceeds the combined capacity of indoor units.</p> <ul style="list-style-type: none"> More than 128 indoor units are connected. 	<ul style="list-style-type: none"> Check capacities of indoor units connected. Check combined HP capacities of indoor units. Check HP capacity settings of outdoor units. Check No. of indoor units connected. Check for failure in outdoor P.C. board (I/F).
E18	—	—	Indoor unit	Trouble in communication between indoor header and follower units	Stop of corresponding unit	Periodic communication between indoor header and follower units cannot be maintained.	<ul style="list-style-type: none"> Check remote controller wiring. Check indoor power supply wiring. Check P.C. boards of indoor units.
E19	E19	00: No header unit 02: Two or more header units	I/F	Trouble in number of outdoor header units	All stop	<ul style="list-style-type: none"> There are more than one outdoor header units in one line. There is no outdoor header unit in one line. 	<p>The outdoor unit which turned on SW101 and the bit 1 of the interface P.C. board is set to Header unit.</p> <ul style="list-style-type: none"> Check SW101 bit 1 of follower outdoor unit. Check connection of indoor-outdoor communication line. Check for failure in outdoor P.C. board (I/F).
E20	E20	01: Connection of outdoor unit from other line 02: Connection of indoor unit from other line	I/F	Connection to other line found during automatic address setting	All stop	Equipment from other line is found to have been connected when indoor automatic address setting is in progress.	Check whether the outdoor unit of other systems or the indoor unit is connected to Uv (U1/U2) line or Uc (U5/U6) line.
E23	E23	—	I/F	Outdoor/outdoor communication transmission trouble	All stop	Signal cannot be transmitted to other outdoor units for at least 30 seconds continuously.	<ul style="list-style-type: none"> Check power supply to outdoor units. (Is power turned on?) Check connection of tie cables between outdoor units for bad contact or broken wire. Check communication connectors on outdoor P.C. boards. Check for failure in outdoor P.C. board (I/F). Check termination resistance setting for communication between outdoor units.
E25	E25	—	I/F	Duplicated follower outdoor address	All stop	There is duplication in outdoor addresses set manually.	Note: Do not set outdoor addresses manually.
E26	E26	Address of outdoor unit from which signal is not received normally	I/F	Signal lack of outdoor unit	All stop	Outdoor unit initially communicating normally fails to return signal for specified length of time.	<ul style="list-style-type: none"> Backup setting is being used for outdoor units. Check power supply to outdoor unit. (Is power turned on?) Check connection of tie cables between outdoor units for bad contact or broken wire. Check communication connectors on outdoor P.C. boards. Check for failure in indoor P.C. board (I/F).

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)																																																																																								
	Outdoor 7-segment display																																																																																														
	Check code	Sub-code																																																																																													
The check code which occurred follower outdoor unit is displayed	E28	Detected outdoor unit No.	I/F	Outdoor follower unit trouble	All stop	Outdoor header unit receives trouble code from outdoor follower unit.	<ul style="list-style-type: none">• Check check code displayed on outdoor follower unit. <Convenient functions> If SW04 is pressed and held for at least 1 second while [E28] is displayed on the 7-segment display of outdoor header unit, the fan of the outdoor unit that has been shut down due to an trouble comes on. If SW04 and SW05 are pressed simultaneously, the fans of normal outdoor units come on. To stop the fan or fans, press SW05 on its own.																																																																																								
E31	E31	<table><tr><th colspan="4">P.C. board</th></tr><tr><th colspan="2">Compressor</th><th colspan="2">Fan Motor</th></tr><tr><th></th><th>1</th><th>2</th><th>1</th><th>2</th></tr><tr><td>01</td><td>O</td><td></td><td></td><td></td></tr><tr><td>02</td><td></td><td></td><td>O</td><td></td></tr><tr><td>03</td><td>O</td><td>O</td><td></td><td></td></tr><tr><td>08</td><td></td><td></td><td></td><td>O</td></tr><tr><td>09</td><td>O</td><td></td><td></td><td>O</td></tr><tr><td>0A</td><td></td><td>O</td><td>O</td><td></td></tr><tr><td>0B</td><td>O</td><td>O</td><td>O</td><td></td></tr><tr><td>10</td><td></td><td></td><td></td><td>O</td></tr><tr><td>11</td><td>O</td><td></td><td></td><td>O</td></tr><tr><td>12</td><td></td><td>O</td><td></td><td>O</td></tr><tr><td>13</td><td>O</td><td>O</td><td></td><td>O</td></tr><tr><td>18</td><td></td><td></td><td>O</td><td>O</td></tr><tr><td>19</td><td>O</td><td></td><td>O</td><td>O</td></tr><tr><td>1A</td><td></td><td>O</td><td>O</td><td>O</td></tr><tr><td>1B</td><td>O</td><td>O</td><td>O</td><td>O</td></tr></table> <p>Circle (O): Trouble P.C. board</p>	P.C. board				Compressor		Fan Motor			1	2	1	2	01	O				02			O		03	O	O			08				O	09	O			O	0A		O	O		0B	O	O	O		10				O	11	O			O	12		O		O	13	O	O		O	18			O	O	19	O		O	O	1A		O	O	O	1B	O	O	O	O	I/F	P.C. board communication trouble	All stop	Communication is disrupted between P.C. board in inverter box.	<ul style="list-style-type: none">• Check wiring and connectors involved in communication between P.C. board I/F P.C. board for bad contact or broken wire.• Check for failure in outdoor P.C. board (I/F, comp. P.C. board or Fan P.C. board).• Check for external noise.
		P.C. board																																																																																													
Compressor		Fan Motor																																																																																													
	1	2	1	2																																																																																											
01	O																																																																																														
02			O																																																																																												
03	O	O																																																																																													
08				O																																																																																											
09	O			O																																																																																											
0A		O	O																																																																																												
0B	O	O	O																																																																																												
10				O																																																																																											
11	O			O																																																																																											
12		O		O																																																																																											
13	O	O		O																																																																																											
18			O	O																																																																																											
19	O		O	O																																																																																											
1A		O	O	O																																																																																											
1B	O	O	O	O																																																																																											
		80		Communication trouble between MCU and Sub MCU	All stop	Communication between MCU and Sub MCU stopped.	<ul style="list-style-type: none">• Operation of power supply reset (OFF for 60 seconds or more)• Outdoor I/F PC board trouble check																																																																																								
F01	—	—	Indoor unit	Indoor TCJ sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none">• Check connection of TCJ sensor connector and wiring.• Check resistance characteristics of TCJ sensor.• Check for failure in indoor P.C. board.																																																																																								
F02	—	—	Indoor unit	Indoor TC2 sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none">• Check connection of TC2 sensor connector and wiring.• Check resistance characteristics of TC2 sensor.• Check for failure in indoor P.C. board.																																																																																								
F03	—	—	Indoor unit	Indoor TC1 sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none">• Check connection of TC1 sensor connector and wiring.• Check resistance characteristics of TC1 sensor.• Check for failure in indoor P.C. board.																																																																																								
F04	F04	—	I/F	TD1 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none">• Check connection of TD1 sensor connector.• Check resistance characteristics of TD1 sensor.• Check for failure in outdoor P.C. board (I/F).																																																																																								

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
F05	F05	—	I/F	TD2 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TD2 sensor connector. • Check resistance characteristics of TD2 sensor. • Check for failure in outdoor P.C. board (I/F).
F06	F06	01: TE1 sensor trouble 02: TE2 sensor trouble 03: TE3 sensor trouble	I/F	TE1/TE2/TE3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TE1/TE2/TE3 sensor connectors. • Check resistance characteristics of TE1/TE2/TE3 sensors. • Check for failure in outdoor P.C. board (I/F).
F07	F07	01: TL1 sensor trouble 02: TL2 sensor trouble 03: TL3 sensor trouble	I/F	TL1/TL2/TL3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TL1/TL2/TL3 sensor connector. • Check resistance characteristics of TL1/TL2/TL3 sensor. • Check for failure in outdoor P.C. board (I/F).
F08	F08	—	I/F	TO sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TO sensor connector. • Check resistance characteristics of TO sensor. • Check for failure in outdoor P.C. board (I/F).
F09	F09	01: TG1 sensor trouble 02: TG2 sensor trouble 03: TG3 sensor trouble	I/F	TG1/TG2/TG3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TG1/TG2/TG3 sensor connectors. • Check resistance characteristics of TG1/TG2/TG3 sensors. • Check for failure in outdoor P.C. board (I/F).
F10	—	—	Indoor unit	Indoor TA sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TA sensor connector and wiring. • Check resistance characteristics of TA sensor. • Check for failure in indoor P.C. board.
F11	—	—	Indoor unit	Indoor TF sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TF sensor connector and wiring. • Check resistance characteristics of TF sensor. • Check for failure in indoor P.C. board.
F12	F12	01: TS1 sensor trouble 03: TS3 sensor trouble 04: TS3 sensor disconnection	I/F	TS1/TS3 sensor trouble	All stop	<ul style="list-style-type: none"> • Sensor resistance is infinity or zero (open/short circuit). • When TS3 detects an unusual temperature during compressor operation and PMV4 operation in cooling mode. 	<ul style="list-style-type: none"> • Check connection of TS1/TS3 sensor connector • Check resistance characteristics of TS1/TS3 sensor. • The attachment check of TS3 sensor. • Check for failure in indoor P.C. board.
F13	F13	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	TH sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Failure in IPM built-in temperature sensor → Replace Compressor P.C. board.
F15	F15	—	I/F	Outdoor temperature sensor wiring trouble (TE1, TL1)	All stop	During compressor operation in HEAT mode, TL1 continuously provides temperature reading higher than indicated by TL1 by at least specified margin for 3 minutes or more.	<ul style="list-style-type: none"> • Check installation of TE1 and TL1 sensors. • Check resistance characteristics of TE1 and TL1 sensors. • Check for outdoor P.C. board (I/F) trouble

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
F16	F16	—	I/F	Outdoor pressure sensor wiring trouble (Pd, Ps)	All stop	Readings of high-pressure Pd sensor and low-pressure Ps sensor are switched. Output voltages of both sensors are zero.	<ul style="list-style-type: none"> • Check connection of high-pressure Pd sensor connector. • Check connection of low-pressure Ps sensor connector. • Check for failure in pressure sensors Pd and Ps. • Check for trouble in outdoor P.C. board (I/F). • Check for compressor poor compression.
F23	F23	—	I/F	Ps sensor trouble	All stop	Output voltage of Ps sensor is zero.	<ul style="list-style-type: none"> • Check for connection trouble involving Ps sensor and Pd sensor connectors. • Check connection of Ps sensor connector. • Check for failure in Ps sensor. • Check for compressor poor compression. • Check for failure in 4-way valve. • Check for failure in outdoor P.C. board (I/F). • Check for failure in SV4 circuit.
F24	F24	—	I/F	Pd sensor trouble	All stop	Output voltage of Pd sensor is zero (sensor open-circuited). Pd > 4.15MPa despite compressor having been turned off.	<ul style="list-style-type: none"> • Check connection of Pd sensor connector. • Check for failure in Pd sensor. • Check for failure in outdoor P.C. board (I/F).
F29	—	—	Indoor unit	Other indoor trouble	Stop of corresponding unit	Indoor P.C. board does not operate normally.	<ul style="list-style-type: none"> • Check for failure in indoor P.C. board (failure EEPROM)
F31	F31	—	I/F	Outdoor EEPROM trouble	All stop *1	Outdoor P.C. board (I/F) does not operate normally.	<ul style="list-style-type: none"> • Check power supply voltage. • Check power supply noise. • Check for failure in outdoor P.C. board (I/F).
H01	H01	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor breakdown	All stop	Inverter current detection circuit detects overcurrent and shuts system down.	<ul style="list-style-type: none"> • Check power supply voltage. (AC380V ± 10%). • Check for failure in compressor. • Check for possible cause of abnormal overloading. • Check for failure in outdoor P.C. board (Compressor).
H02	H02	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor trouble (lockup) MG-CTT trouble	All stop	Overcurrent is detected several seconds after startup of inverter compressor.	<ul style="list-style-type: none"> • Check for failure in compressor. • Check power supply voltage. (AC380V ± 10%). • Check compressor system wiring, particularly for open phase. • Check connection of connectors/terminals on compressor P.C. board. • Check conductivity of case heater. (Check for refrigerant problem inside compressor.) • Check for failure in outdoor P.C. board (Compressor). • Check outdoor MG-CTT.
H03	H03	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Current detection circuit trouble	All stop	Current flow of at least specified magnitude is detected despite inverter compressor having been shut turned off.	<ul style="list-style-type: none"> • Check current detection circuit wiring. • Check failure in outdoor P.C. board (Compressor).

*1 Total shutdown in case of header unit
Continued operation in case of follower unit

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
H05	H05	—	I/F	TD1 sensor miswiring (incomplete insertion)	All stop	Discharge temperature of compressor 1 (TD1) does not increase despite compressor being in operation.	<ul style="list-style-type: none"> • Check installation of TD1 sensor. • Check connection of TD1 sensor connector and wiring. • Check resistance characteristics of TD1 sensor. • Check for failure in outdoor P.C. board (I/F).
H06	H06	—	I/F	Activation of low-pressure protection	All stop	Low-pressure Ps sensor detects operating pressure lower than 0.02MPa.	<ul style="list-style-type: none"> • Check service valves to confirm full opening (both gas and liquid sides). • Check outdoor PMVs for clogging (PMV1, 2, 3). • Check for failure in SV4 circuits. • Check for failure in low-pressure Ps sensor. • Check indoor filter for clogging. • Check valve opening status of indoor PMV. • Check refrigerant piping for clogging. • Check operation of outdoor fan (during heating). • Check for insufficiency in refrigerant quantity.
H07	H07	—	I/F	Low oil level protection	All stop	Operating compressor detects continuous state of low oil level for about 2 hours.	<p><All outdoor units in corresponding line to be checked></p> <ul style="list-style-type: none"> • Check connection and installation of TK1 and TK2 sensors. • Check resistance characteristics of TK1 and TK2 sensors. • Check for gas or oil leak in same line. • Check for refrigerant problem inside compressor casing. • Check SV3D, SV3F valves for failure. • Check oil return circuit of oil separator for clogging. • Check oil equalizing circuit for clogging.
H08	H08	01: TK1 sensor trouble 02: TK2 sensor trouble	I/F	Trouble in temperature sensor for oil level detection	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TK1 sensor connector. • Check resistance characteristics of TK1 sensor. • Check for failure in outdoor P.C. board (I/F).
					All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TK2 sensor connector. • Check resistance characteristics of TK2 sensor. • Check for failure in outdoor P.C. board (I/F).
H15	H15	—	I/F	TD2 sensor miswiring (incomplete insertion)	All stop	Discharge temperature of (TD2) does not increase despite compressor 2 being in operation.	<ul style="list-style-type: none"> • Check installation of TD2 sensor. • Check connection of TD2 sensor connector and wiring. • Check resistance characteristics of TD2 sensor. • Check for failure in outdoor P.C. board (I/F).

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display	Sub-code					
H16	H16	01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	I/F	Oil level detection circuit trouble	All stop	No temperature change is detected by TK1 despite compressor 1 having been started. No temperature change is detected by TK2 despite compressor 2 having been started.	<ul style="list-style-type: none"> • Check for disconnection of TK1 sensor. • Check resistance characteristics of TK1 sensor. • Check for connection trouble involving TK1 and TK2 sensors • Check for clogging in oil equalizing circuit capillary. • Check for refrigerant entrapment inside compressor. • Check for disconnection of TK2 sensor. • Check resistance characteristics of TK2 sensor. • Check for connection trouble involving TK1 and TK2 sensors • Check SV3F valve malfunction. • Check for clogging in oil equalizing circuit capillary. • Check for refrigerant entrapment inside compressor.
H17	H17	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor trouble (Step-out)	All stop	Judged that the synchronization could not be taken.	<ul style="list-style-type: none"> • Check power supply voltage. (AC380V-415V ± 10%). • Check for failure in compressor. • Check for possible cause of abnormal overloading. • Check for failure in outdoor P.C. board (compressor).
J01	—	—	FS unit	Communication trouble between indoor unit(s) and FS unit	Stop of corresponding unit(s) (Indoor unit(s) connected to the same FS unit)	FS unit not receiving signal from indoor unit(s)	<ul style="list-style-type: none"> • Check wiring between FS unit and indoor unit(s). • Check FS unit port address setting of indoor unit. • Check FS unit port combining branches setting of indoor unit.
J02	—	—	Indoor unit	Communication trouble between control boards in Flow Selector unit	Stop of corresponding unit(s) (Indoor units (s) connected to the same FS unit)	There is no communication from P.C.board after No.2 of FS unit Multi-port type.	<ul style="list-style-type: none"> • Check connector connection of FS unit for PC board communication. • Check for PC board defects in FS unit. • Check FS unit control number setting (SW01 of FS unit, Bit 1 to 4).
J03	—	—	Indoor unit	Duplicated FS units	Stop of corresponding unit(s)	Multiple FS unit (or SV units) are installed in one indoor unit.	<ul style="list-style-type: none"> • Check indoor unit(s) - FS unit(s) cable
J29	J29	Detected indoor unit address	Indoor unit or Leak Detector Interface	Leak Detector Trouble	When DN code 06B = 0001 or 0002 are set • All stop	<ul style="list-style-type: none"> • There is no communication from Leak Detector. • A Malfunction signal received from Leak Detector. 	<ul style="list-style-type: none"> • Check Malfunction LED of Leak Detector. • Check disconnection and connectors of Leak Detector. • Check PC board defects of Leak Detector. • Check PC board defects of indoor unit or Leak Detector Interface.
	—	—			• Continued operation • All stop (detected when power is turned on)		

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
J30	J30	Detected indoor unit address	Indoor unit or Leak Detector Interface	Refrigerant leak detection	All stop (Safety measures setting of indoor unit is "Pump-down operation" or "Leak Detector only")	Leak Detector detects refrigerant leak	<ul style="list-style-type: none"> • Check refrigerant detection status of Leak Detector. • Check refrigerant leaks from indoor unit or Flow Selector / Shut-off Valve unit. • Check for false detection.
	—	—	Indoor unit		Stop of corresponding unit(s) (Safety measures setting of indoor unit is "Individual shut-off operation")		
J31	—	—	Indoor unit or Leak Detector Interface	Refrigerant leak detection sensor exceeding its life of the product	Continued operation	The energization time of refrigerant sensor has reached 10 years.	<ul style="list-style-type: none"> • Check Malfunction LED of Leak Detector. • Check refrigerant sensor of Leak Detector.
L02	L02	—	Indoor unit	Outdoor units model disagreement trouble	Stop of corresponding unit	In case of different outdoor unit (Not corresponded to Air to Air Heat Exchanger type)	• Check outdoor unit model. (Check whether the outdoor unit corresponds to Air to Air Heat Exchanger type or not.)
L03	—	—	Indoor unit	Duplicated indoor header unit	Stop of corresponding unit	There are more than one header units in group.	<ul style="list-style-type: none"> • Check indoor addresses. • Check for any change made to remote controller connection (group/individual) since indoor address setting.
L04	L04	—	I/F	Duplicated outdoor line address	All stop	There is duplication in line address setting for outdoor units belonging to different refrigerant piping systems.	• Check line addresses.
L05	—	—	I/F	Duplicated priority indoor unit (as displayed on priority indoor unit)	All stop	More than one indoor units have been set up as priority indoor unit.	• Check display on priority indoor unit.
L06	L06	No. of priority indoor units	I/F	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	All stop	More than one indoor units have been set up as priority indoor unit.	• Check displays on priority indoor unit and outdoor unit.
L07	—	—	Indoor unit	Connection of group control cable to standalone indoor unit	Stop of corresponding unit	There is at least one standalone indoor unit to which group control cable is connected.	• Check indoor addresses.
L08	L08	—	Indoor unit	Indoor group / addresses not set	Stop of corresponding unit	Address setting has not been performed for indoor units.	<ul style="list-style-type: none"> • Check indoor addresses. Note: This code is displayed when power is turned on for the first time after installation.
L09	—	—	Indoor unit	Indoor capacity not set	Stop of corresponding unit	Capacity setting has not been performed for indoor unit.	Set indoor capacity. (DN = 11)

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)																																																																								
Main remote controller	Outdoor 7-segment display																																																																														
	Check code	Sub-code																																																																													
L10	L10	—	I/F	Outdoor capacity not set	All stop	Initial setting of I/F P.C. board has not been implemented.	• Check model setting of P.C. board for servicing outdoor I/F P.C. board.																																																																								
L20	—	—	Network adaptor Indoor unit	Duplicated central control address	All stop	There is duplication in central control address setting.	• Check central control addresses.																																																																								
L23	—	—	I/F	SW setting mistake	All stop	Outdoor P.C. board (I/F) does not operate normally.	• Check switch setting of outdoor P.C. board (I/F).																																																																								
L28	L28	—	I/F	Too many outdoor units connected	All stop	There are more than 5 outdoor units.	• Check No. of outdoor units connected (Only up to 5 units per system allowed). • Check communication lines between outdoor units. • Check for failure in outdoor P.C. board (I/F).																																																																								
L29	L29	<table><tr><th colspan="4">P.C. board</th></tr><tr><th colspan="2">Compressor</th><th colspan="2">Fan Motor</th></tr><tr><th>1</th><th>2</th><th>1</th><th>2</th></tr><tr><td>01</td><td>O</td><td></td><td></td></tr><tr><td>02</td><td></td><td>O</td><td></td></tr><tr><td>03</td><td>O</td><td>O</td><td></td></tr><tr><td>08</td><td></td><td></td><td>O</td></tr><tr><td>09</td><td>O</td><td></td><td>O</td></tr><tr><td>0A</td><td></td><td>O</td><td>O</td></tr><tr><td>0B</td><td>O</td><td>O</td><td>O</td></tr><tr><td>10</td><td></td><td></td><td>O</td></tr><tr><td>11</td><td>O</td><td></td><td>O</td></tr><tr><td>12</td><td></td><td>O</td><td>O</td></tr><tr><td>13</td><td>O</td><td>O</td><td>O</td></tr><tr><td>18</td><td></td><td></td><td>O</td></tr><tr><td>19</td><td>O</td><td></td><td>O</td></tr><tr><td>1A</td><td></td><td>O</td><td>O</td></tr><tr><td>1B</td><td>O</td><td>O</td><td>O</td></tr></table> <p>Circle (O): Trouble P.C. board</p>	P.C. board				Compressor		Fan Motor		1	2	1	2	01	O			02		O		03	O	O		08			O	09	O		O	0A		O	O	0B	O	O	O	10			O	11	O		O	12		O	O	13	O	O	O	18			O	19	O		O	1A		O	O	1B	O	O	O	I/F	Trouble in No. of P.C. board	All stop	Insufficient number of P.C. board are detected when power is turned on.	• Check model setting of P.C. board for servicing outdoor I/F P.C. board. • Check connection of UART communication connector. • Check compressor P.C. board, fan P.C. board, and I/F P.C. board for failure.
P.C. board																																																																															
Compressor		Fan Motor																																																																													
1	2	1	2																																																																												
01	O																																																																														
02		O																																																																													
03	O	O																																																																													
08			O																																																																												
09	O		O																																																																												
0A		O	O																																																																												
0B	O	O	O																																																																												
10			O																																																																												
11	O		O																																																																												
12		O	O																																																																												
13	O	O	O																																																																												
18			O																																																																												
19	O		O																																																																												
1A		O	O																																																																												
1B	O	O	O																																																																												
L30	L30	Detected indoor address	Indoor unit	Indoor external interlock (External abnormal input)	Stop of corresponding unit	• Indoor unit has been shut down due to external abnormal input signal.	When external device is connected: 1) Check for trouble in external device. 2) Check for trouble in indoor P.C. board. When external device is not connected: 1) Check for trouble in indoor P.C. board.																																																																								
—	L31	—	I/F	Extended IC trouble	Continued operation	There is part failure in P.C. board (I/F).	Check outdoor P.C. board (I/F).																																																																								
P01	—	—	Indoor unit	Indoor fan motor trouble	Stop of corresponding unit		• Check the lock of fan motor (AC fan). • Check wiring.																																																																								
P03	P03	—	I/F	Discharge temperature TD1 trouble	All stop	Discharge temperature (TD1) exceeds 115 °C.	• Check outdoor service valves (gas side, liquid side) to confirm full opening. • Check outdoor PMVs (PMV1, 2, 3, 4) for clogging. • Check resistance characteristics of TD1 sensor. • Check for insufficiency in refrigerant quantity. • Check for failure in 4-way valve. • Check for leakage of SV4 circuit. • Check SV4 circuit (wiring or installation trouble in SV41 or SV42).																																																																								

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
P04	P04	1*: Compressor 1 side 2*: Compressor 2 side	I/F	Activation of high-pressure SW	All stop	High-pressure SW is activated.	<ul style="list-style-type: none">• Check connection of high-pressure SW connector.• Check for failure in Pd pressure sensor.• Check outdoor service valves (gas side, liquid side) to confirm full opening.• Check for failure in outdoor fan.• Check for failure in outdoor fan motor.• Check outdoor PMVs (PMV1, 2, 3) for clogging.• Check indoor/outdoor heat exchangers for clogging.• Check for short-circuiting of outdoor suction/discharge air flows.• Check for failure in outdoor P.C. board (I/F).• Check for trouble in indoor fan system (possible cause of air flow reduction).• Check opening status of indoor PMV.• Check indoor-outdoor communication line for wiring trouble.• Check for failure operation of check valve in discharge pipe convergent section.• Check gas balancing SV4 valve circuit.• Check for refrigerant overcharging.
P05	P05	00: Power detection trouble 01: Open phase 02: Power supply miswiring	I/F	Power detection trouble / Open phase detection / Power supply miswiring	All stop	<ul style="list-style-type: none">• Open phase is detected when power is turned on.• Inverter DC voltage is too high (overvoltage) or too low (undervoltage).	<ul style="list-style-type: none">• Check for failure in outdoor P.C. board (I/F).• Check wiring of outdoor power supply.• Check power supply voltage.
		1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor Vdc trouble			
P07	P07	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Heat sink overheating trouble	All stop	Temperature sensor built into IPM (TH) is overheated.	<ul style="list-style-type: none">• Check outdoor fan system trouble.• Check IPM and heat sink for thermal performance for failure installation. (e.g. mounting screws and thermal conductivity)• Check for failure in Compressor P.C. board. (failure IPM built-in temperature sensor (TH))
		01: Compressor 1 heat sink trouble 02: Compressor 2 heat sink trouble 04: Heat sink dew condensation	I/F	Heat sink overheating trouble Heat sink dew condensation trouble	All stop	Condensation detection on heat sink has occurred four times or more in operation. Temperature sensor built into IPM (TH) is overheated.	<ul style="list-style-type: none">• Check outdoor fan system trouble.• Check IPM and heat sink for thermal performance for troubled installation. (e. g. mounting screws and thermal conductivity)• Check for failure in compressor P.C. board. (failure IPM built-in temperature sensor (TH))• Check shortage of refrigerant.• Check outdoor service valves.• Check connection of TL2 sensor.• Check resistance characteristics of TL2 sensor.• Check resistance characteristics of TO sensor.• Check malfunctions of Pd and Ps sensors.• Check outdoor I/F P.C. board malfunction.• Check PMV2 and PMV3

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
P10	P10	Detected indoor address	Indoor unit	Indoor overflow trouble	All stop	<ul style="list-style-type: none">• Float switch operates.• Float switch circuit is open-circuited or disconnected at connector.	<ul style="list-style-type: none">• Check float switch connector.• Check operation of drain pump.• Check drain pump circuit.• Check drain pipe for clogging.• Check for failure in indoor P.C. board.
P11	—	—	I/F	Outdoor heat exchanger freeze trouble	All stop	<ul style="list-style-type: none">• Outdoor heat exchanger remaining frost detection has occurred eight times or more due to abnormal frost formation in heating operation.	<ul style="list-style-type: none">• Check shortage of refrigerant.• Check connection of TE1, TE2 and TE3 sensors.• Check resistance characteristics of TE1, TE2, and TE3 sensors.• Check disconnection of TS1 sensor.• Check resistance characteristics of TS1 sensor.• Check outdoor I/F P.C. board malfunction.• Check operation of 4 way valve.• Check operation of outdoor PMV (1, 2, 3).• Check short circuit from outlet air to inlet air.
P12	—	—	Indoor unit	Indoor fan motor trouble	Stop of corresponding unit	<ul style="list-style-type: none">• Motor speed measurements continuously deviate from target value.• Overcurrent protection is activated.	<ul style="list-style-type: none">• Check connection of fan connector and wiring.• Check for failure in fan motor.• Check for failure in indoor P.C. board.• Check impact of outside air treatment (OA).
P13	P13	—	I/F	Outdoor liquid backflow detection trouble	All stop	<p><During cooling operation> When system is in cooling operation, high pressure is detected in the unit that has been turned off.</p> <p><During heating operation> When system is in heating operation, low pressure is detected to be high in unit that has been turned off.</p>	<ul style="list-style-type: none">• Check full-close operation of outdoor PMV (1, 2, 3, 4).• Check for failure in Pd or Ps sensor.• Check failure in outdoor P.C. board (I/F).• Check capillary of oil separator oil return circuit for clogging.• Check for leakage of check valve in discharge pipe
P15	P15	01: TS condition	I/F	Gas leak detection (TS1 condition)	All stop	Protective shutdown due to sustained suction temperature at or above judgment criterion for at least 10 minutes is repeated four times or more. <TS trouble judgment criterion> In cooling operation: 60 °C In heating operation: 40 °C	<ul style="list-style-type: none">• Check for insufficiency in refrigerant quantity.• Check outdoor service valves (gas side, liquid side) to confirm full opening.• Check PMVs (PMV1, 2, 3, 4) for clogging.• Check resistance characteristics of TS1 sensor.• Check for failure in 4-way valve.• Check SV4 circuit for leakage
		02: TD condition	I/F	Gas leak detection (TD condition)	All stop	Protective shutdown due to sustained discharge temperature (TD1 or TD2) at or above 108 °C for at least 10 minutes is repeated four times or more.	<ul style="list-style-type: none">• Check for insufficiency in refrigerant quantity.• Check PMVs (PMV 1, 2, 3, 4) for clogging.• Check resistance characteristics of TD1 and TD2 sensors.• Check indoor filter for clogging.• Check piping for clogging.• Check SV4 circuit (for leakage or coil installation trouble).


Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
P17	P17	—	I/F	Discharge temperature TD2 trouble	All stop	Discharge temperature (TD2) exceeds 115 °C.	<ul style="list-style-type: none">• Check outdoor service valves (gas side, liquid side) to confirm full opening.• Check outdoor PMVs (PMV1, 2, 3, 4) for clogging.• Check resistance characteristics of TD2 sensor.• Check for failure in 4-way valve.• Check SV4 circuit for leakage.• Check SV4 circuit (for wiring or installation trouble involving SV41 and SV42).
P19	P19	Detected outdoor unit No.	I/F	4-way valve reversing trouble	All stop	Abnormal refrigerating cycle data is collected during heating operation.	<ul style="list-style-type: none">• Check for failure in main body of 4-way valve.• Check for coil failure in 4-way valve and loose connection of its connector.• Check resistance characteristics of TS1 and TE1,TE2 sensors.• Check output voltage characteristics of Pd and Ps pressure sensors.• Check for wiring trouble involving TE1 and TL1 sensors.
P20	P20	—	I/F	Activation of high-pressure protection	All stop	<During cooling operation> Pd sensor detects pressure equal to or greater than 3.85 MPa. <During heating operation> Pd sensor detects pressure equal to or greater than 3.6 MPa.	<ul style="list-style-type: none">• Check for failure in Pd pressure sensor.• Check service valves (gas side, liquid side) to confirm full opening.• Check for failure in outdoor fan.• Check for failure in outdoor fan motor.• Check outdoor PMV (PMV1, 2, 3, 4) for clogging.• Check indoor/outdoor heat exchangers for clogging.• Check for short-circuiting of outdoor suction/discharge air flows.• Check for failure in outdoor P.C. board (I/F).• Check for failure in indoor fan system (possible cause of air flow reduction).• Check opening status of indoor PMV.• Check indoor-outdoor communication line for wiring trouble.• Check for trouble operation of check valve in discharge pipe convergent section.• Check gas balancing SV4 valve circuit.• Check for refrigerant overcharging.



Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Main remote controller	Outdoor 7-segment display						
	Check code	Sub-code					
P22	P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	Fan INV. P.C. board	Outdoor fan P.C. board trouble	All stop	Protected operation of Fan inverter P.C. board	<ul style="list-style-type: none">• Check fan motor.• Check for failure in fan P.C. board.• Check connection of fan motor connector.• Check power voltage of the main power supply.
P26	P26	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	IPM, Compressor shortcircuit protection trouble	All stop	Overcurrent is momentarily detected during startup of compressor.	<ul style="list-style-type: none">• Check connector connection and wiring on compressor P.C. board.• Check for failure in compressor (layer shortcircuit).• Check for failure in outdoor P.C. board (Compressor).
P29	P29	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor position detection circuit trouble	All stop	Position detection is not going on normally.	<ul style="list-style-type: none">• Check wiring and connector connection.• Check for compressor layer short-circuit.• Check for failure in compressor P.C. board.
P31	—	—	Indoor unit	Other indoor trouble (group follower unit trouble)	Stop of corresponding unit	There is trouble in other indoor unit in group, resulting in detection of E07/L07/L03/L08.	<ul style="list-style-type: none">• Check indoor P.C. board.



Check codes Displayed on by Central Control Device



Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
E03	—	—	Indoor unit	Indoor-remote controller communication trouble (detected at indoor end)	Stop of corresponding unit	There is no communication from remote controller (including wireless) or network adaptor.	• Check remote controller and network adaptor wiring.
C05	—		Central control device	Central control device transmission trouble	Continued operation	Central control device is unable to transmit signal.	<ul style="list-style-type: none"> • Check for failure in central control device. • Check for failure in central control communication line. • Check termination resistance setting.
C06	—		Central control device	Central control device reception trouble	Continued operation	Central control device is unable to receive signal.	<ul style="list-style-type: none"> • Check for failure in central control device. • Check for failure in central control communication line. • Check terminator resistor setting. • Check power supply for devices at other end of central control communication line. • Check failure in P.C. boards of devices at other end of central control communication line.
C12	—		General-purpose device I/F	Batch alarm for general-purpose device control interface	Continued operation	Trouble signal is input to control interface for general-purpose devices.	• Check trouble input.
P30	Differs according to nature of alarm-causing trouble		Central control device	Group control follower unit trouble	Continued operation	Trouble occurs in follower unit under group control. ([P30] is displayed on central control remote controller.)	• Check check code of unit that has generated alarm.
	(L20 displayed.)			Duplicated central control address	Continued operation	There is duplication in central control addresses.	• Check address settings.



9-5. Diagnostic Procedure for Each Check Code (Indoor Unit)


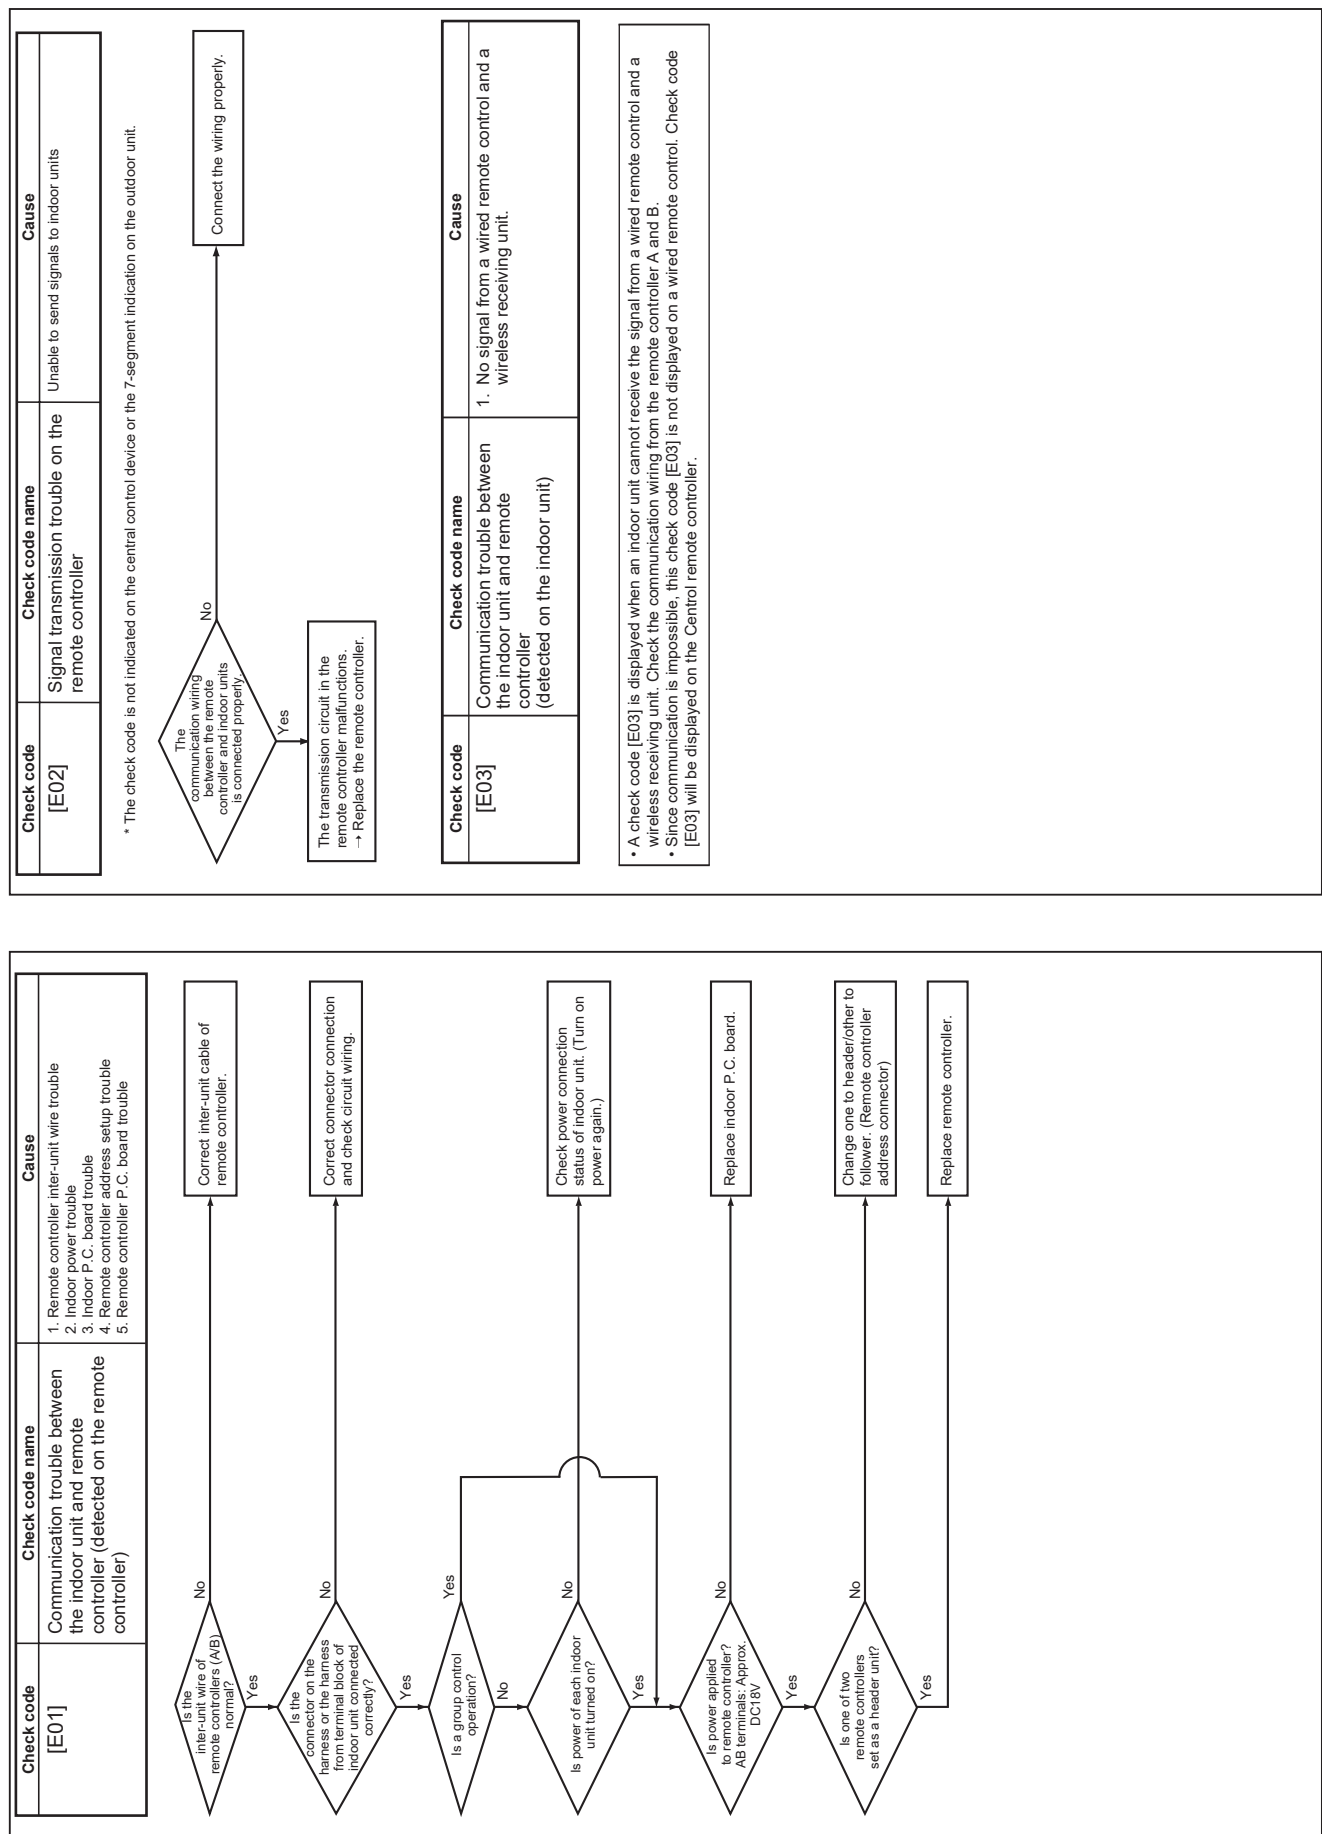


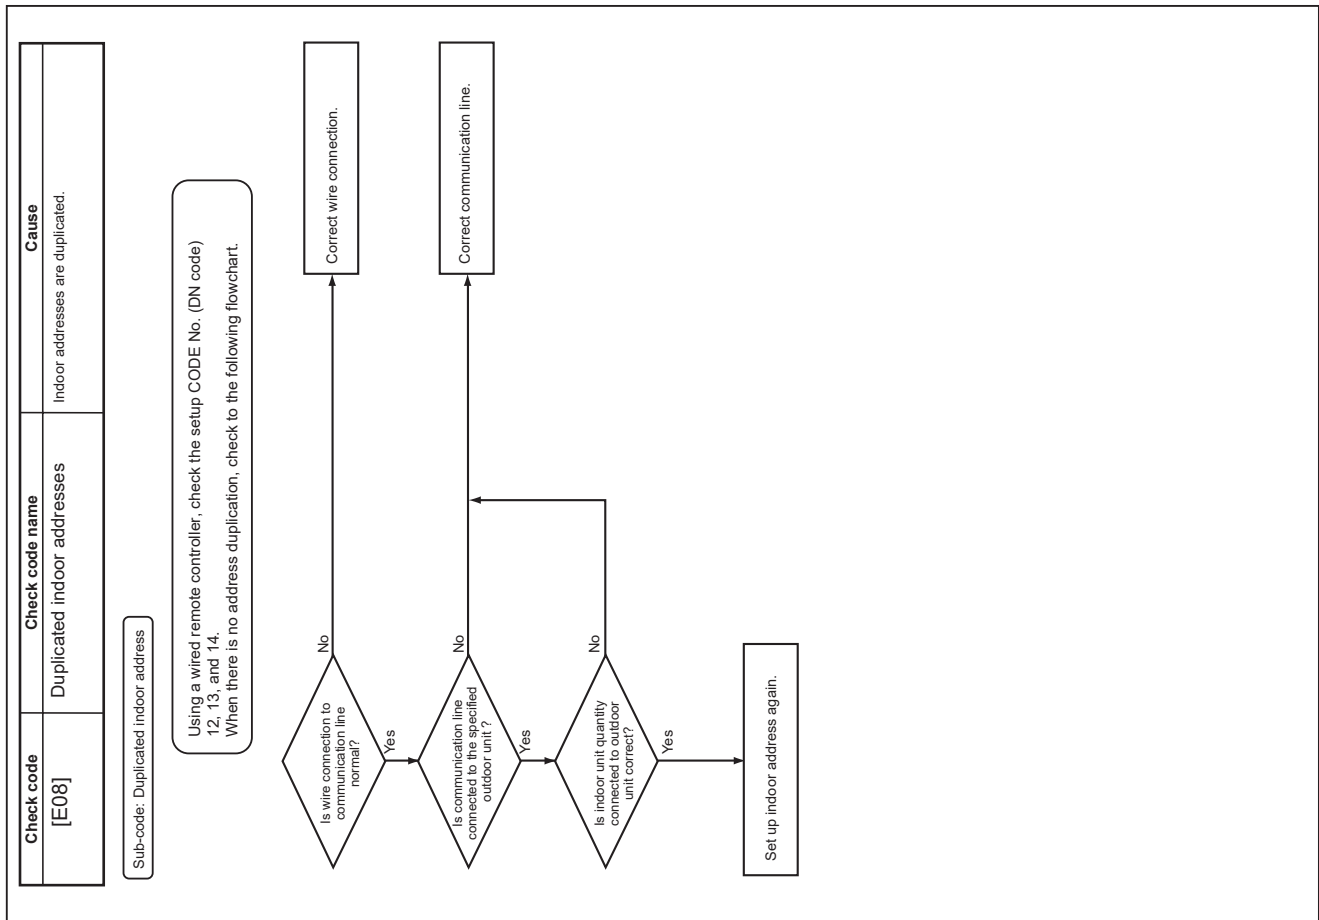
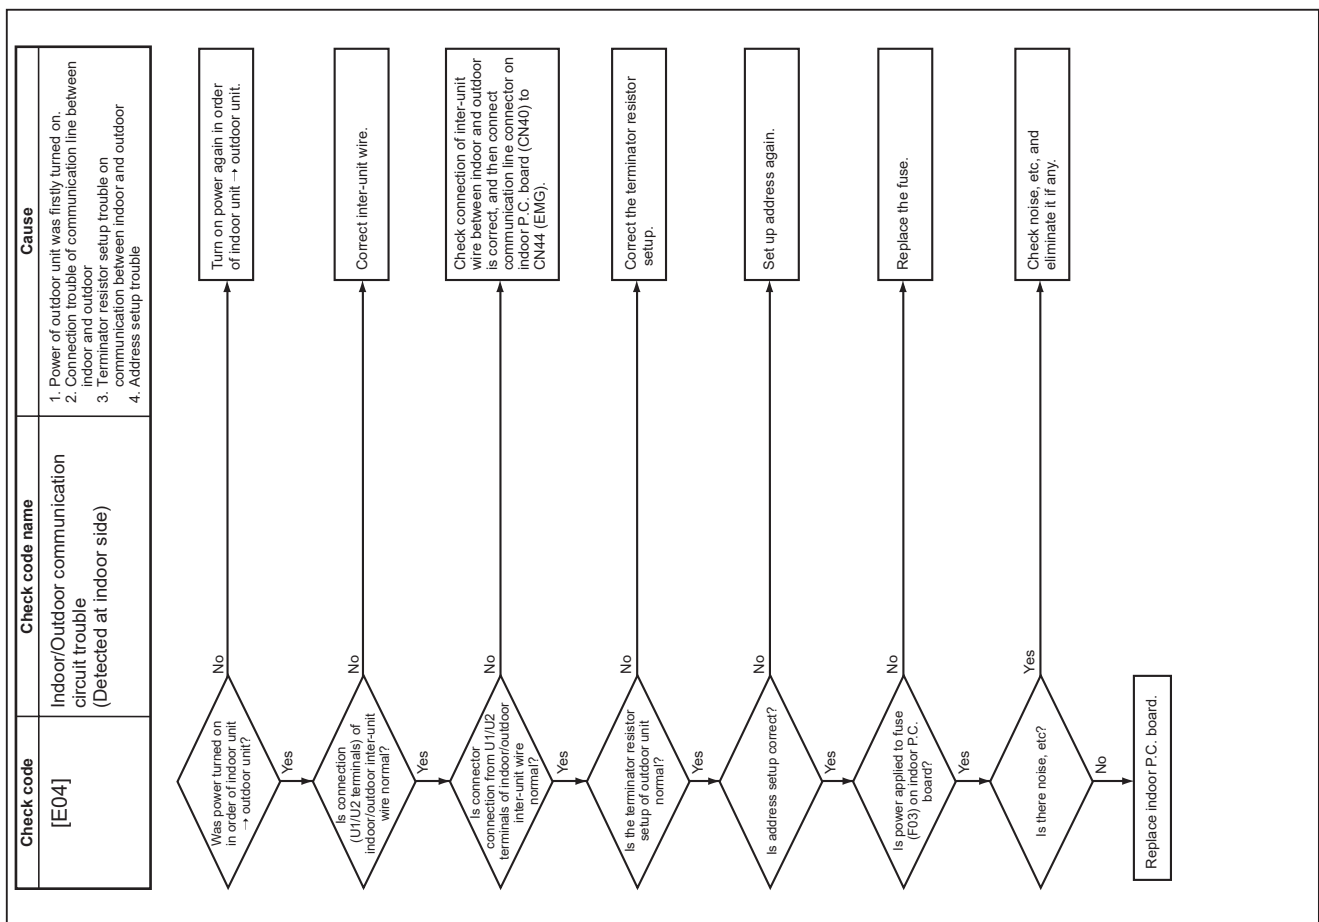


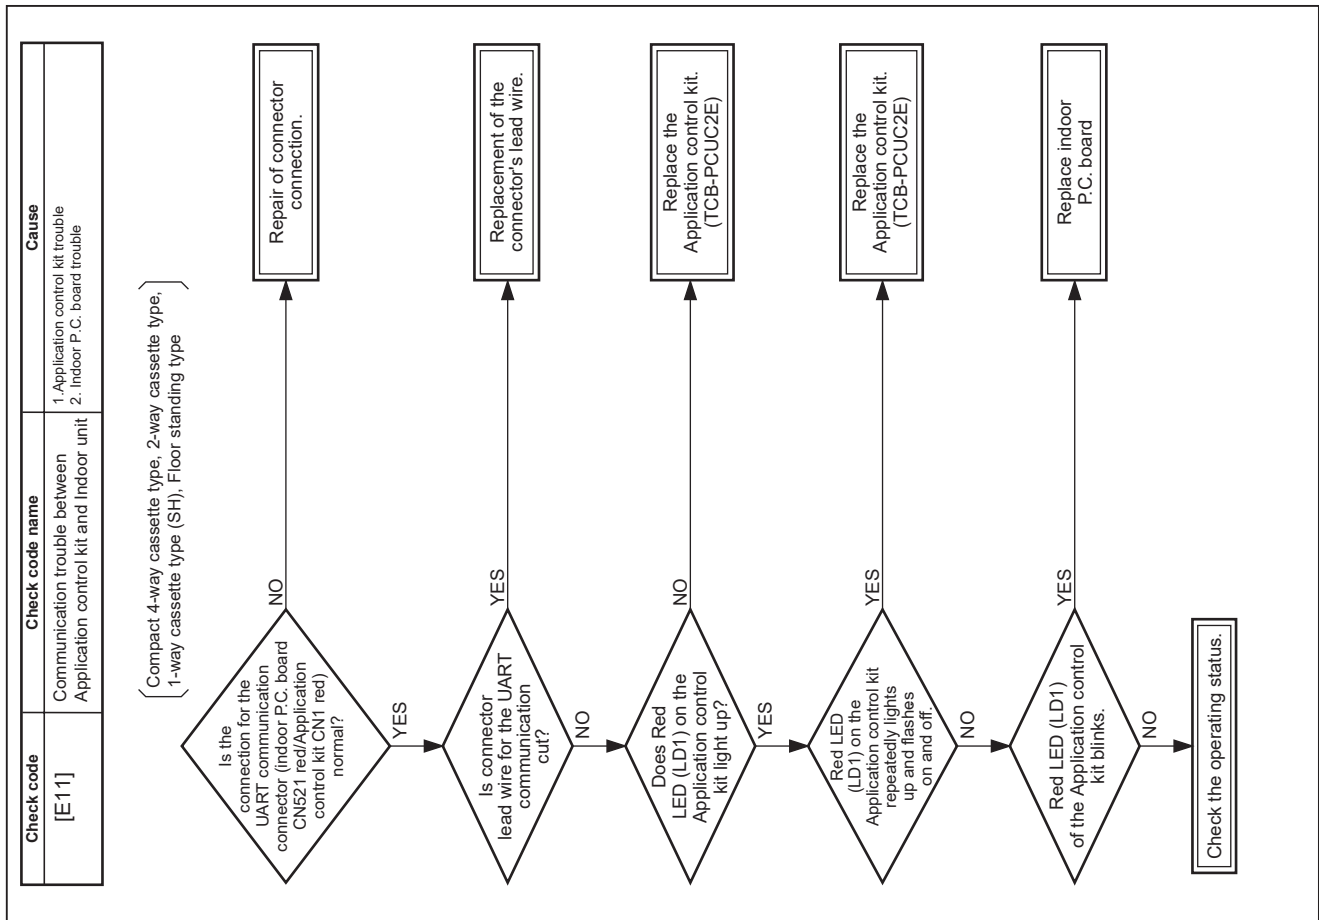
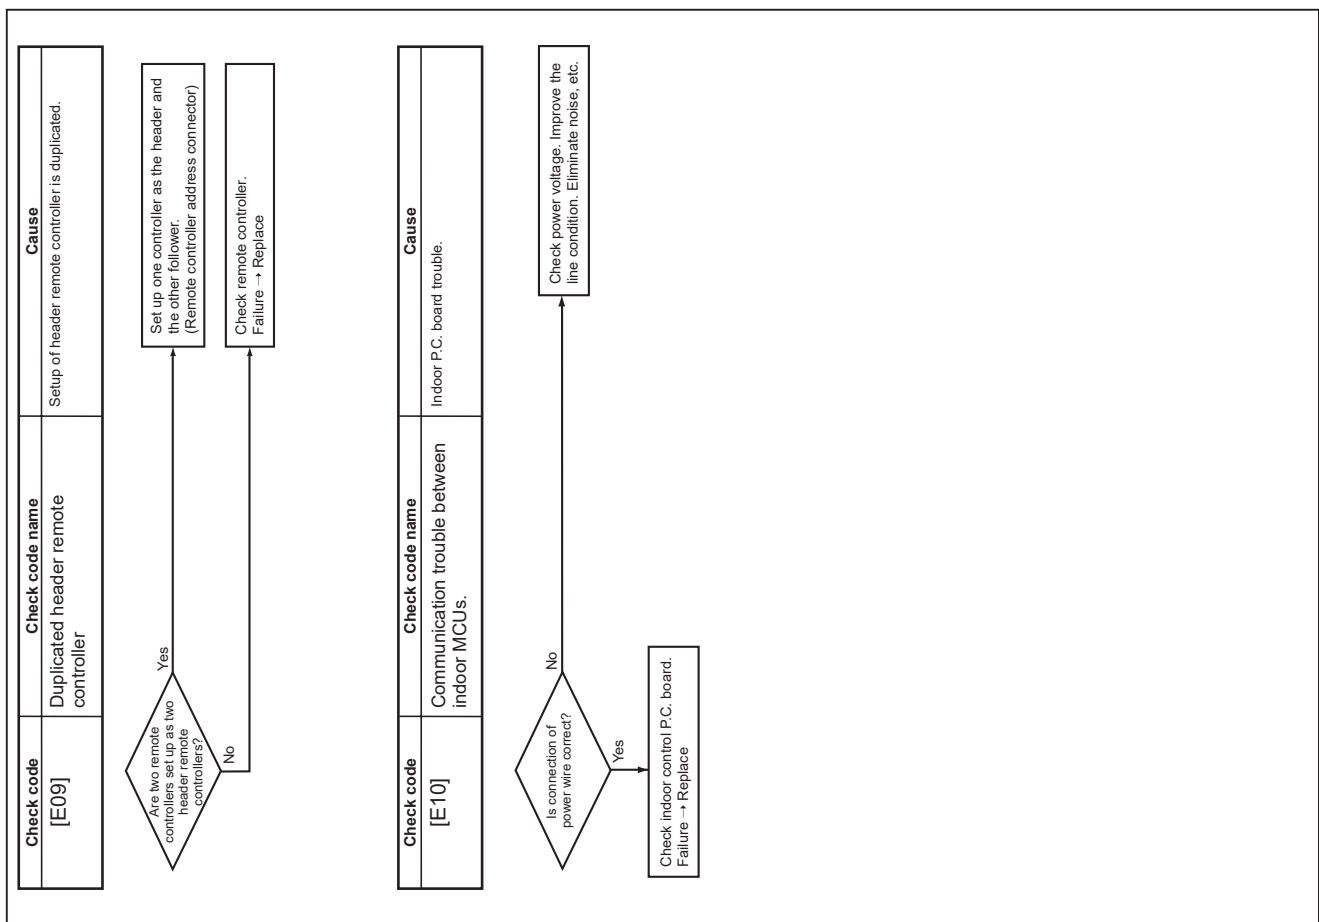


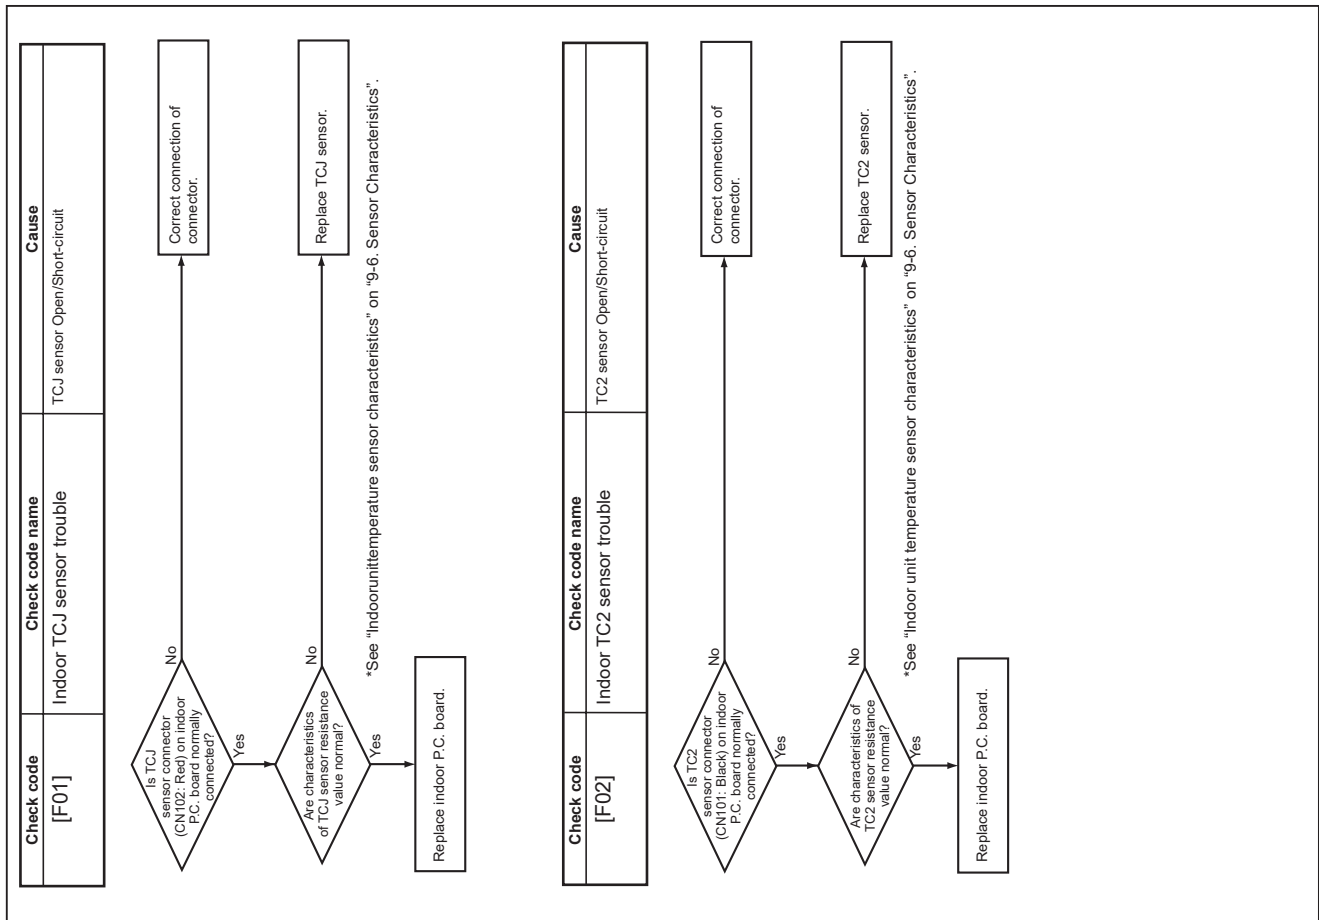
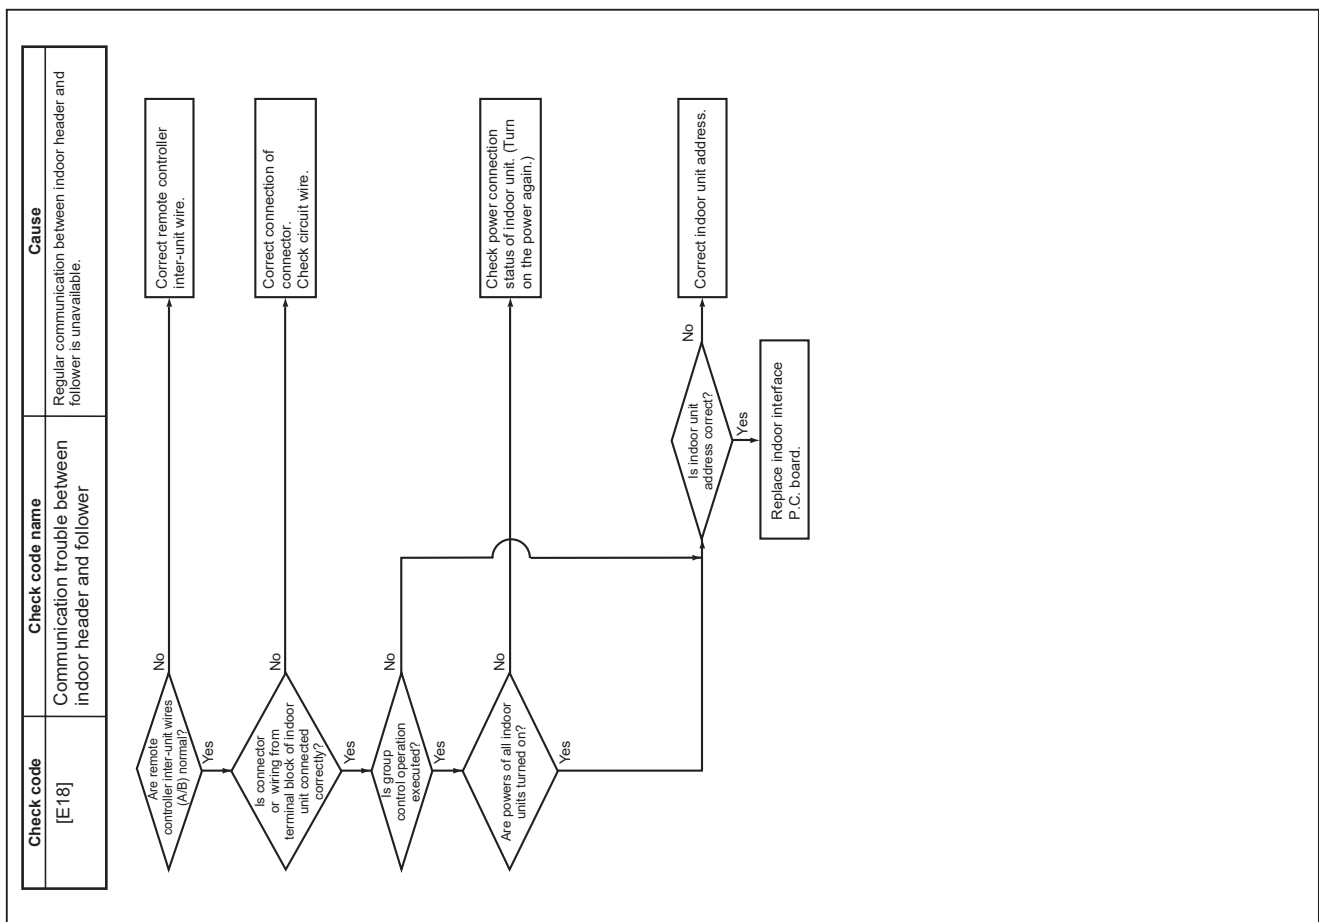


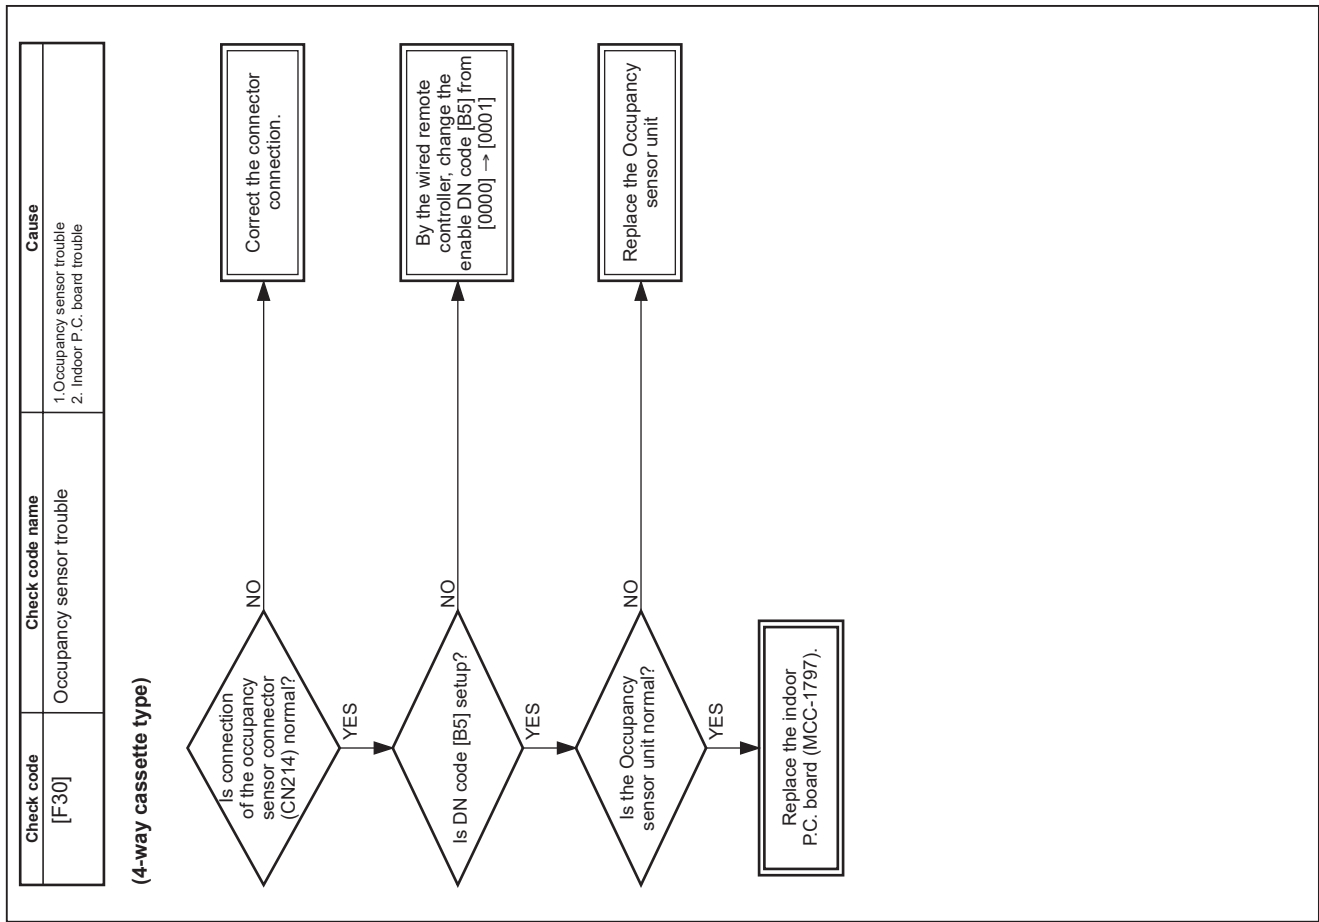
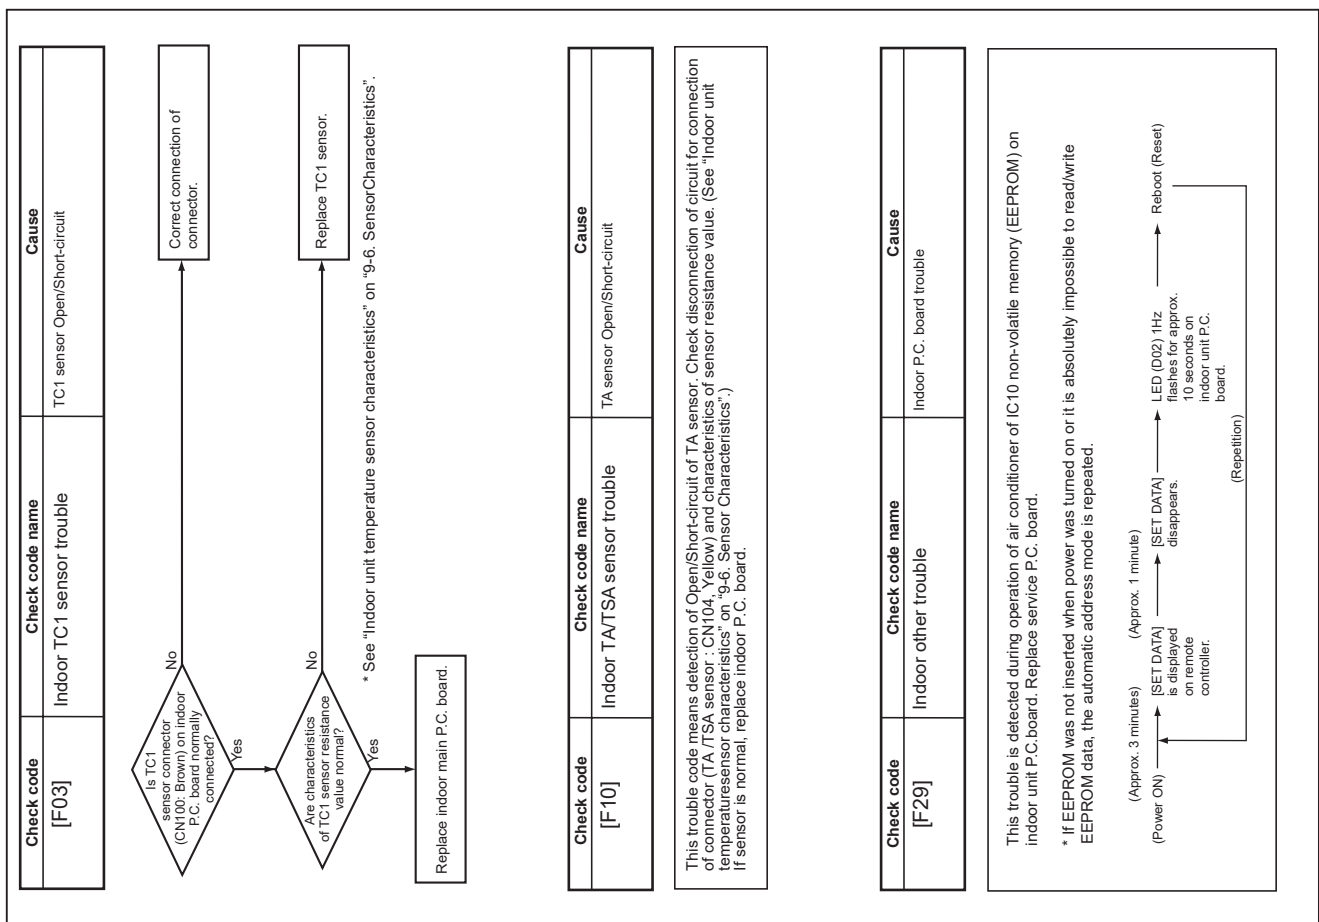


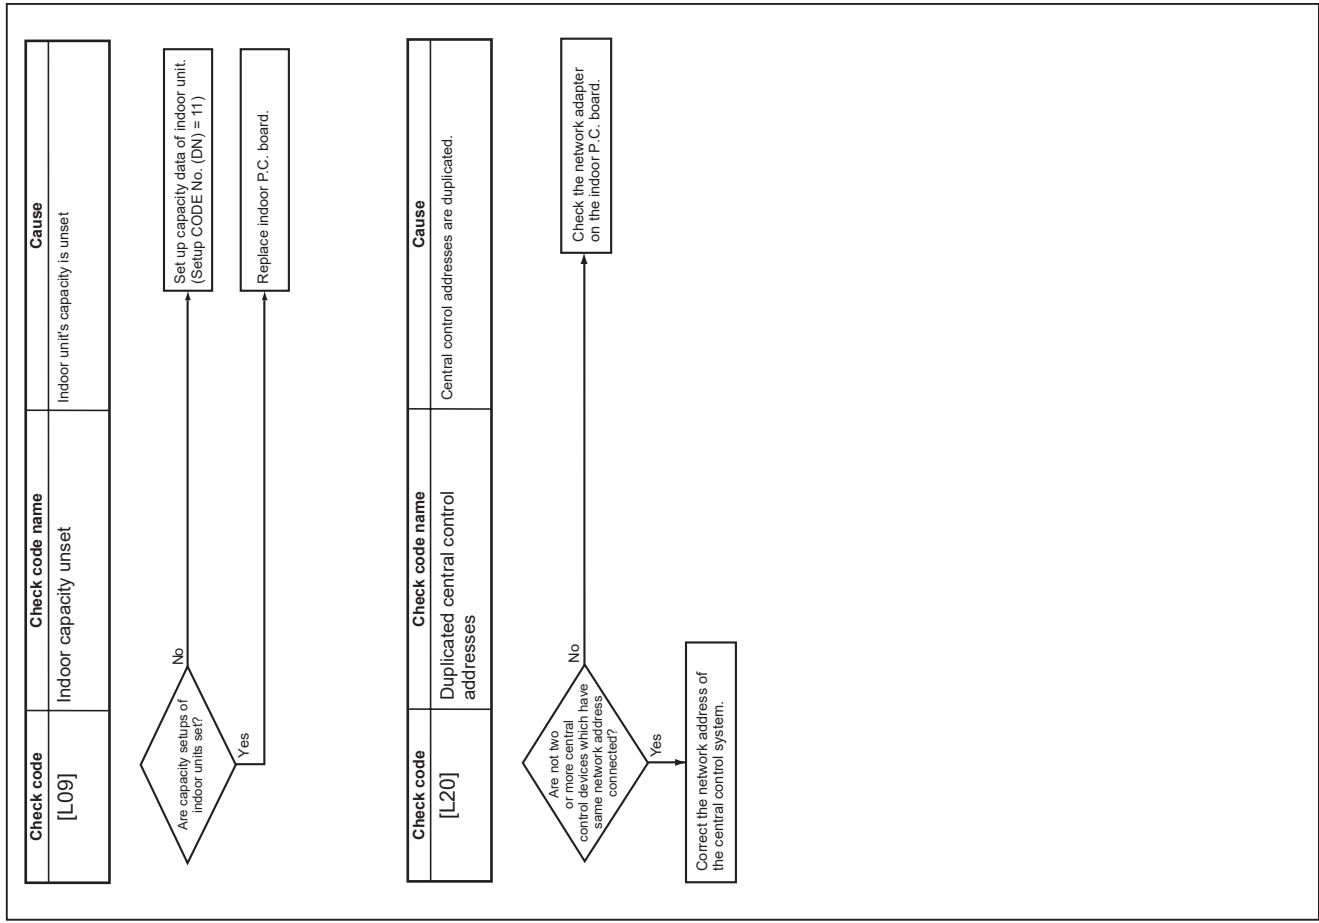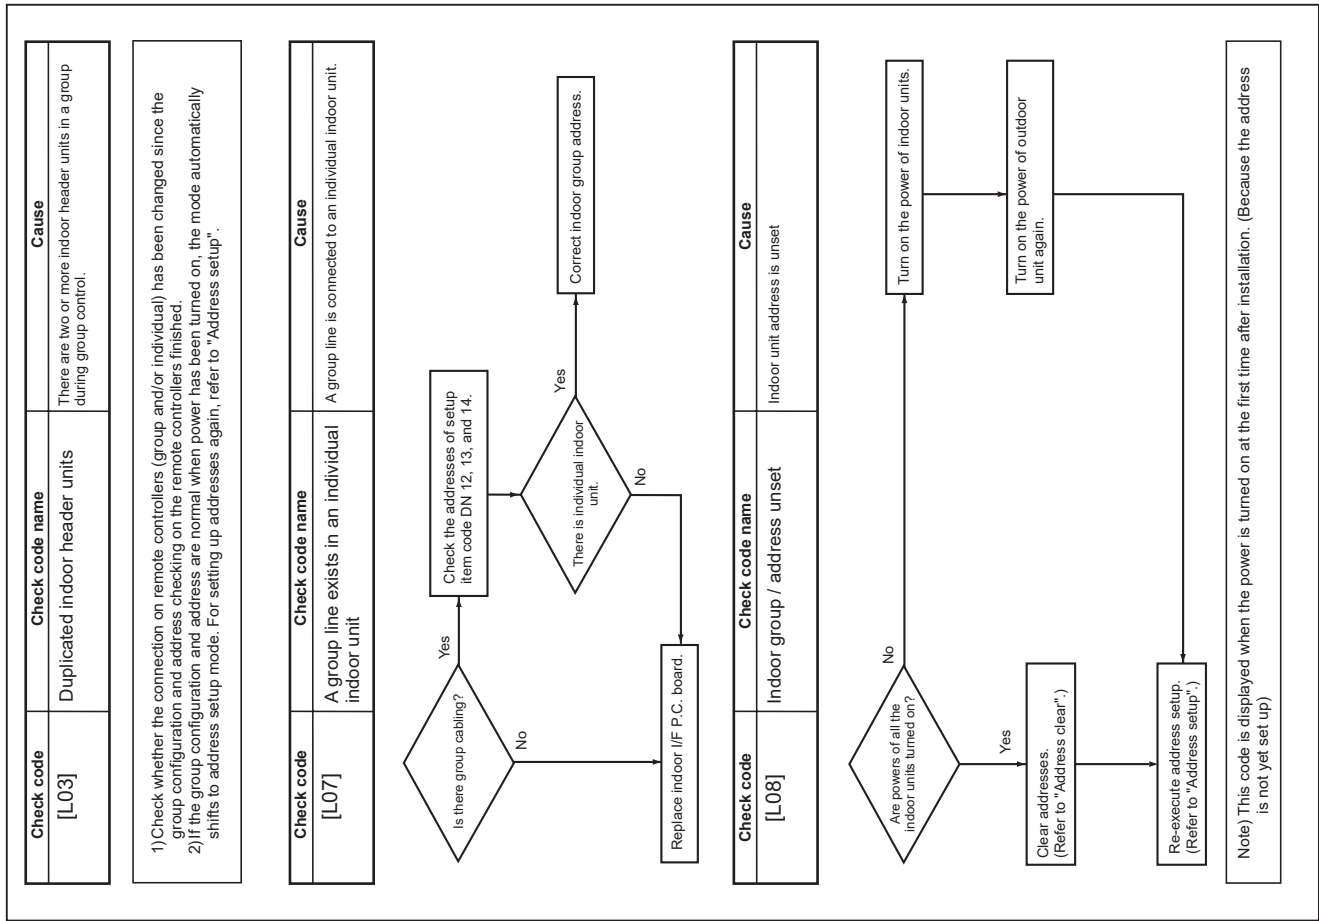


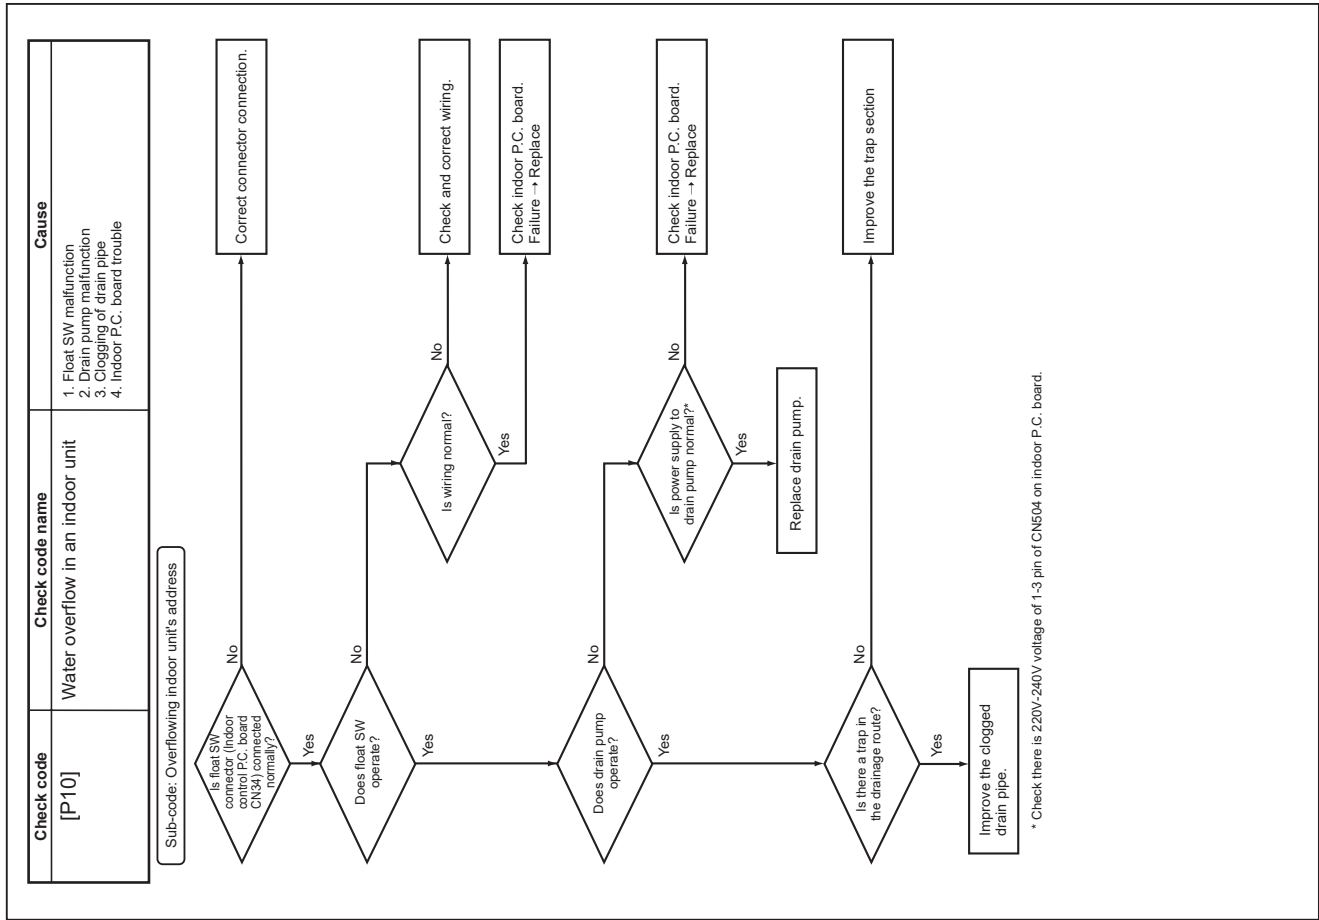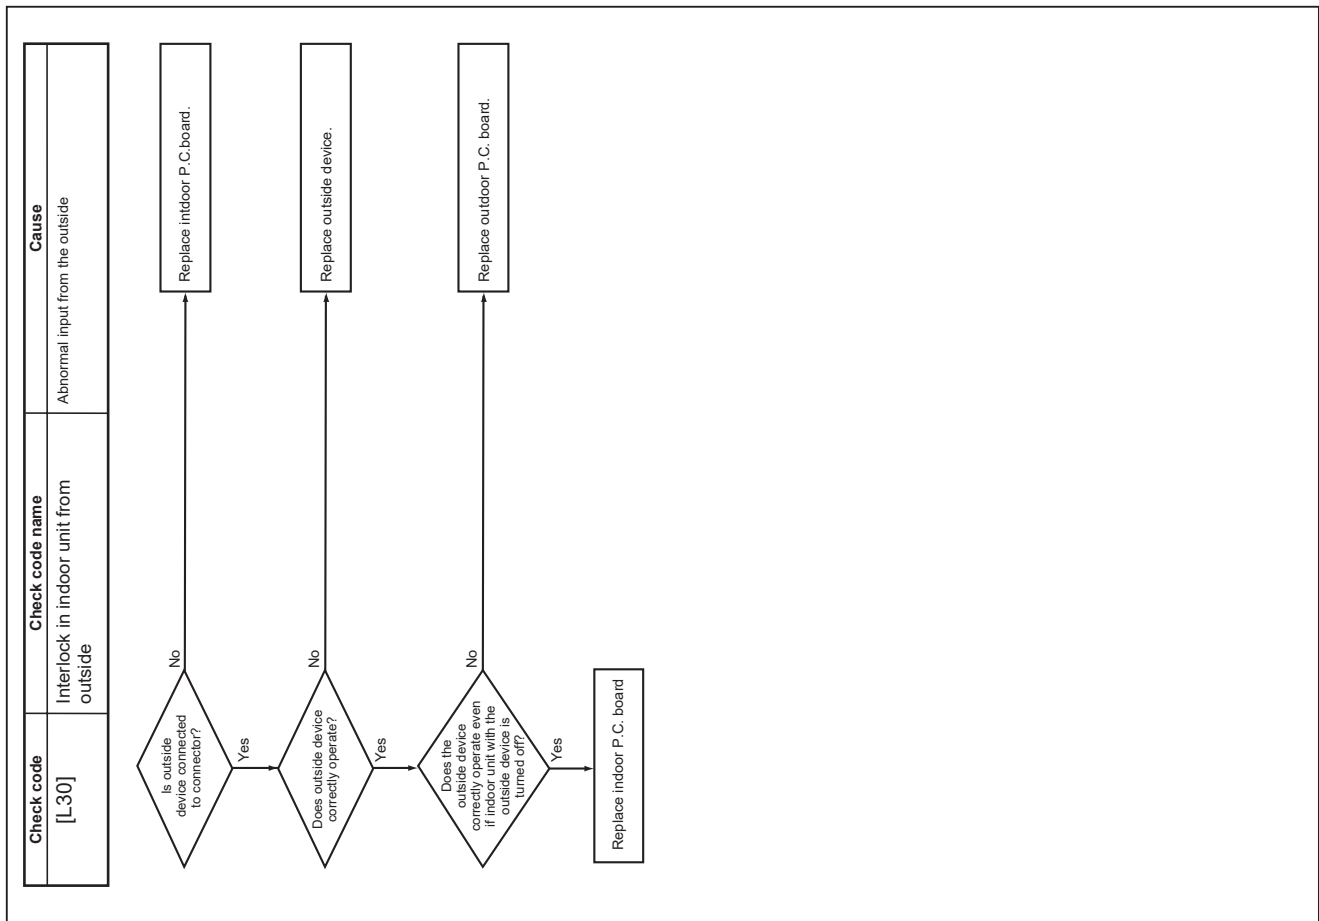

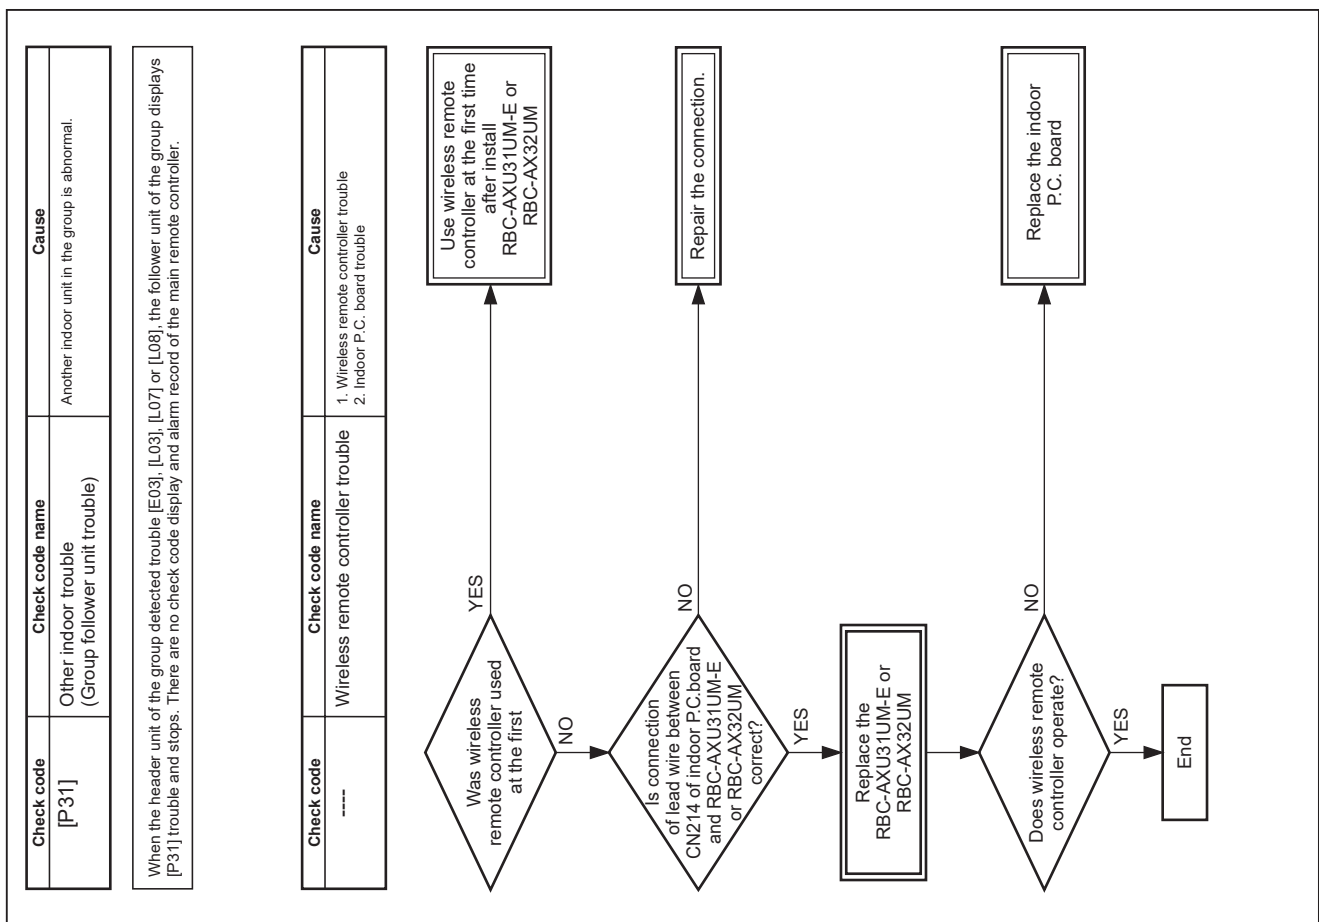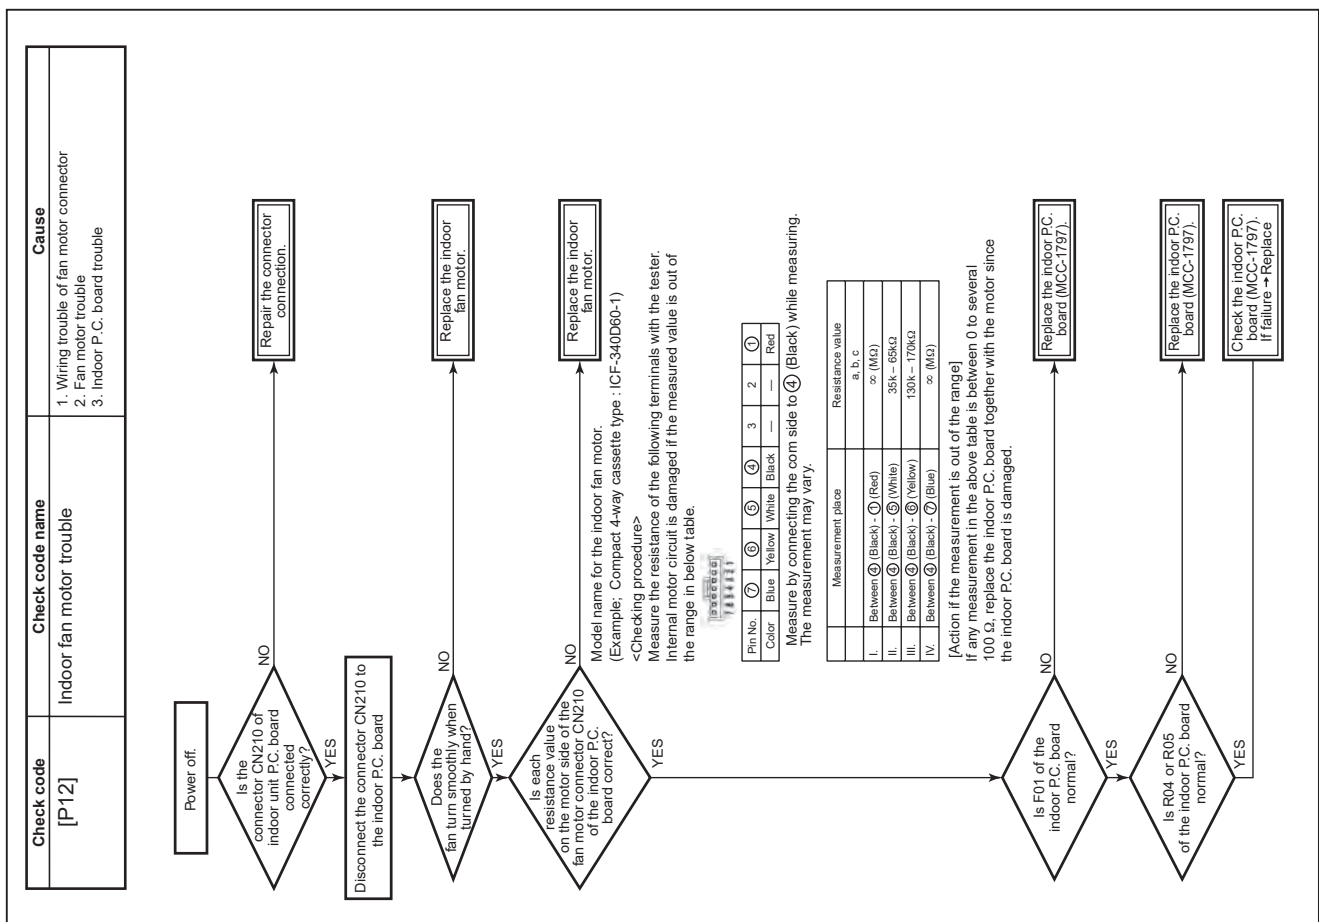

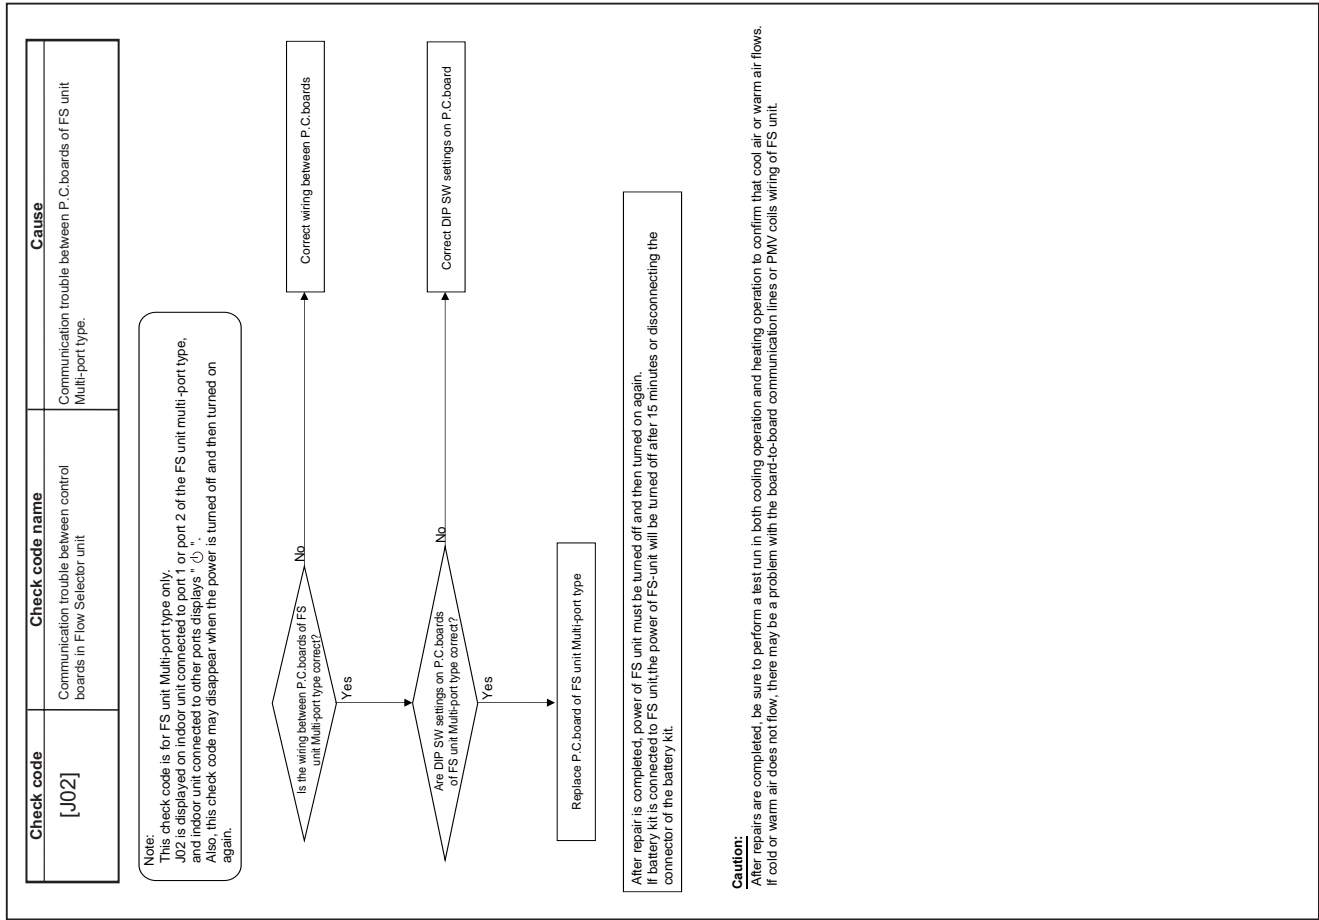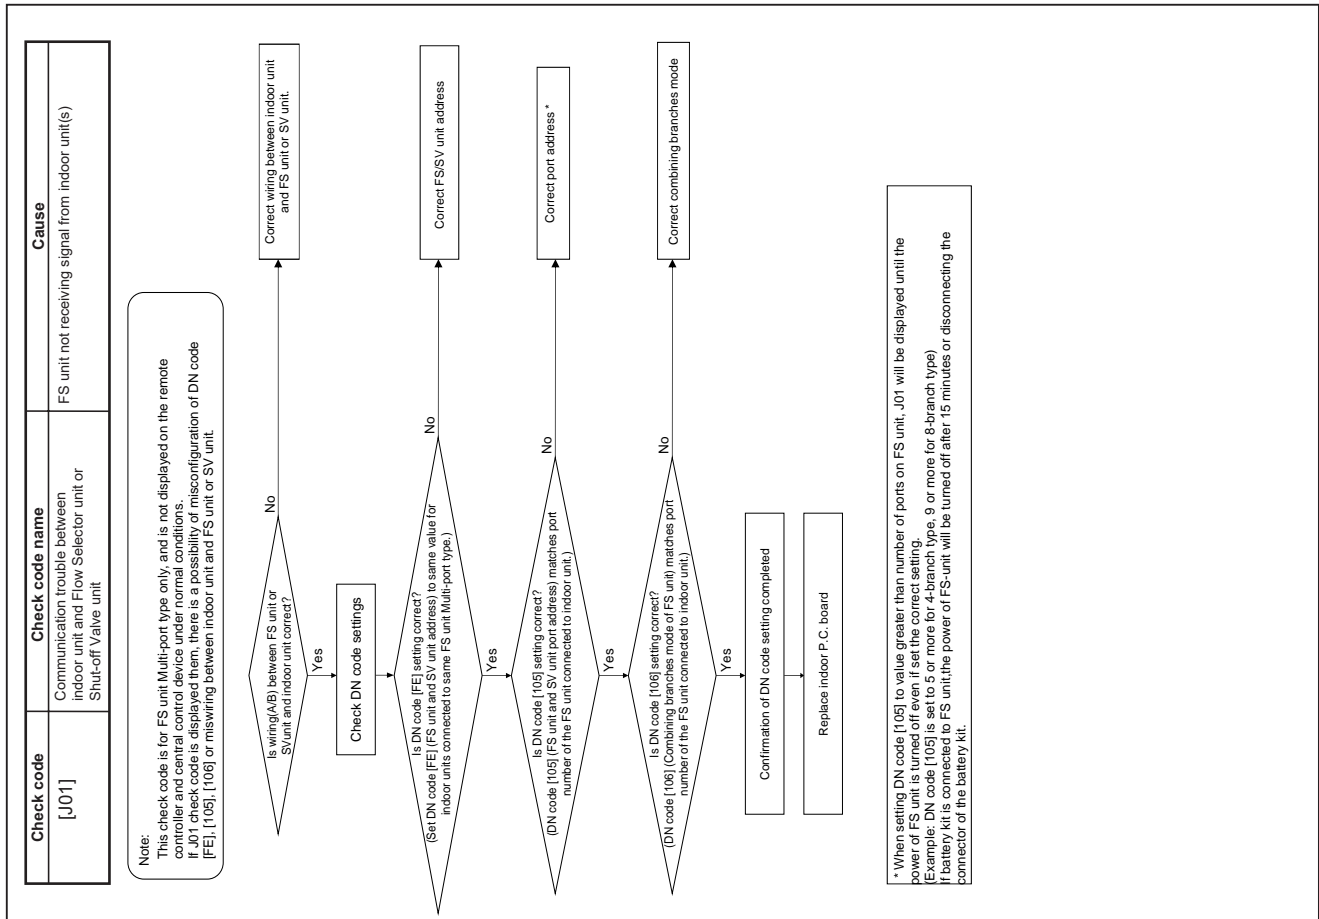


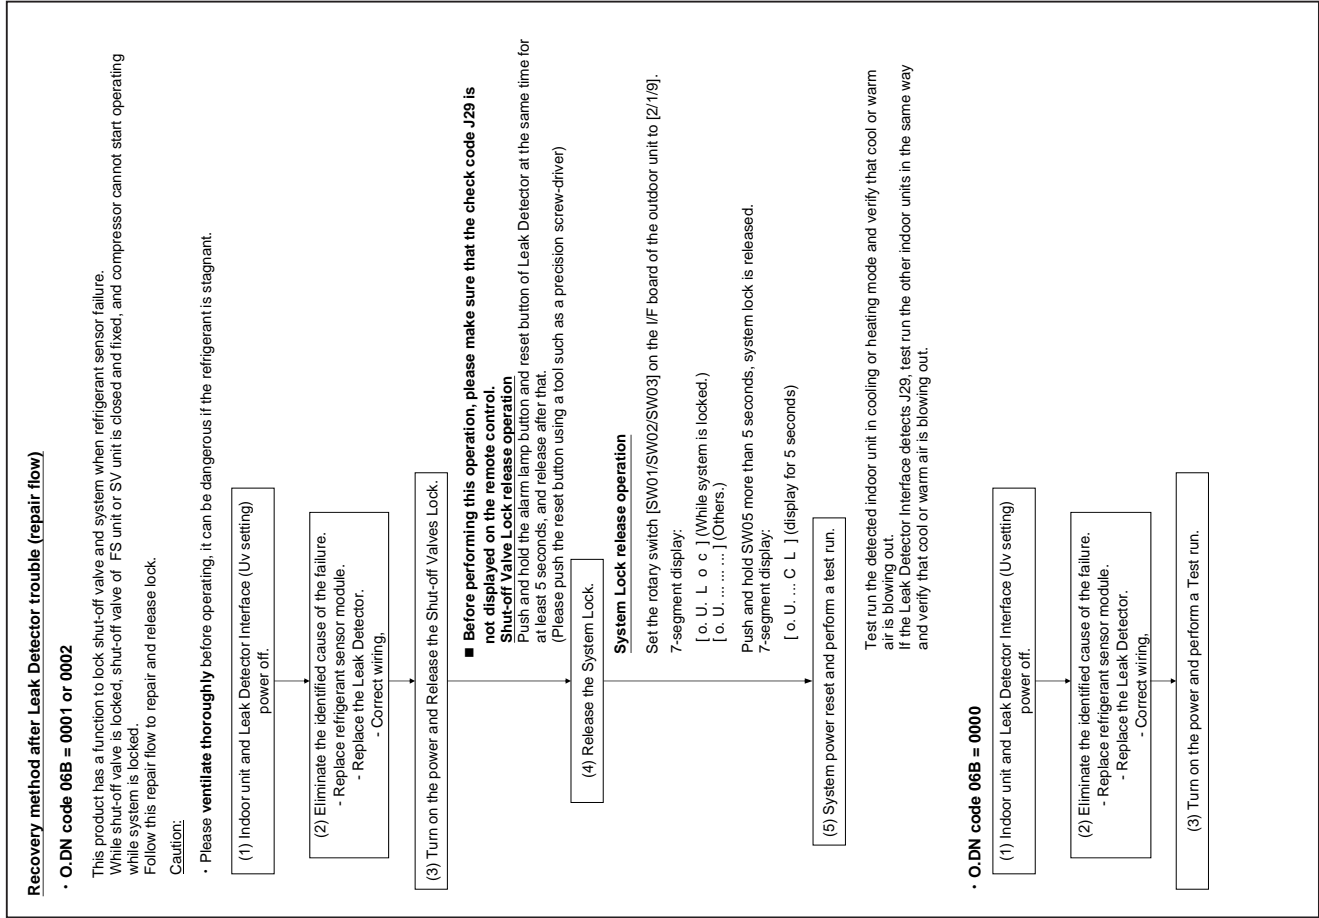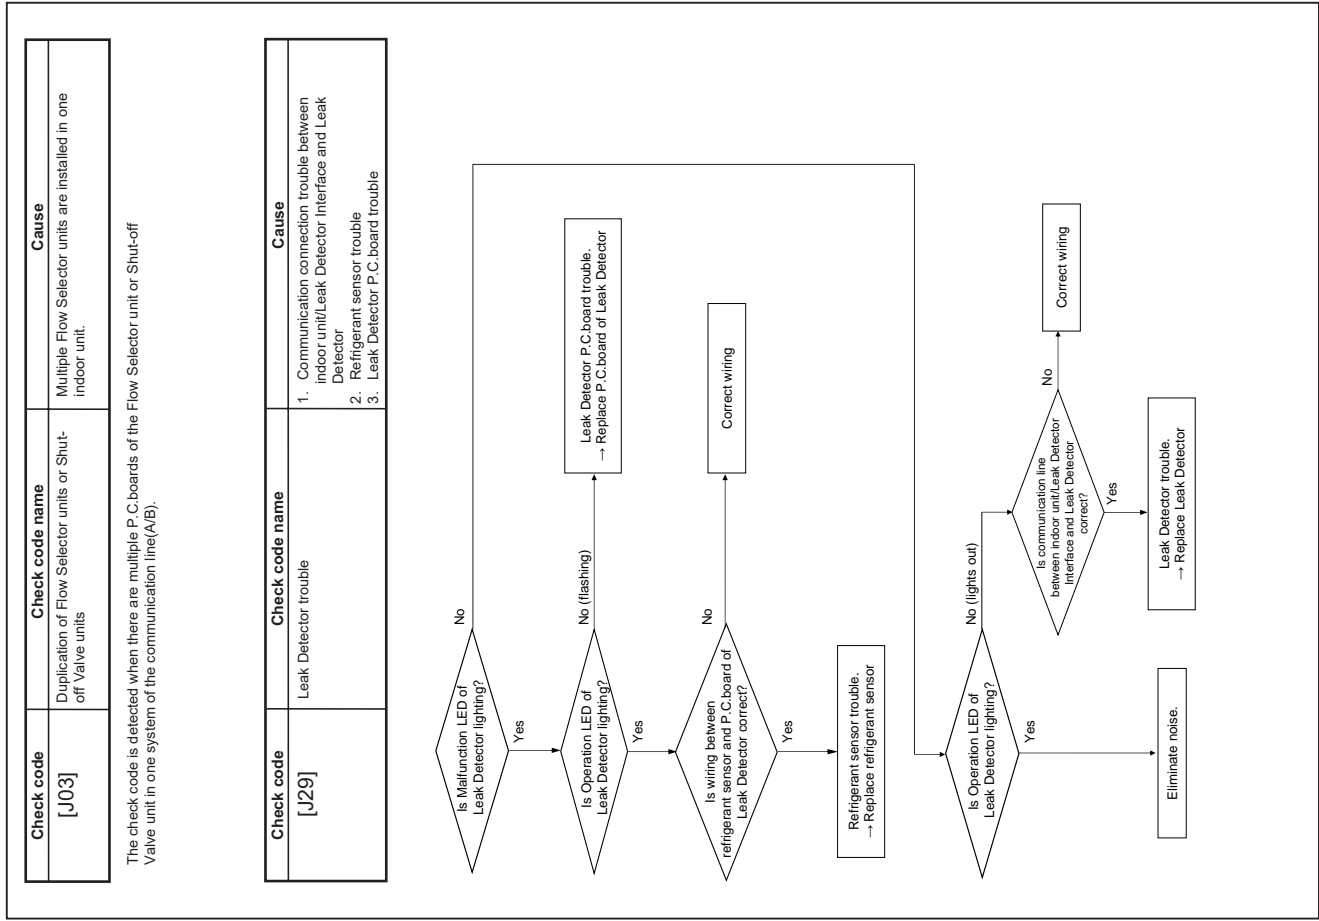

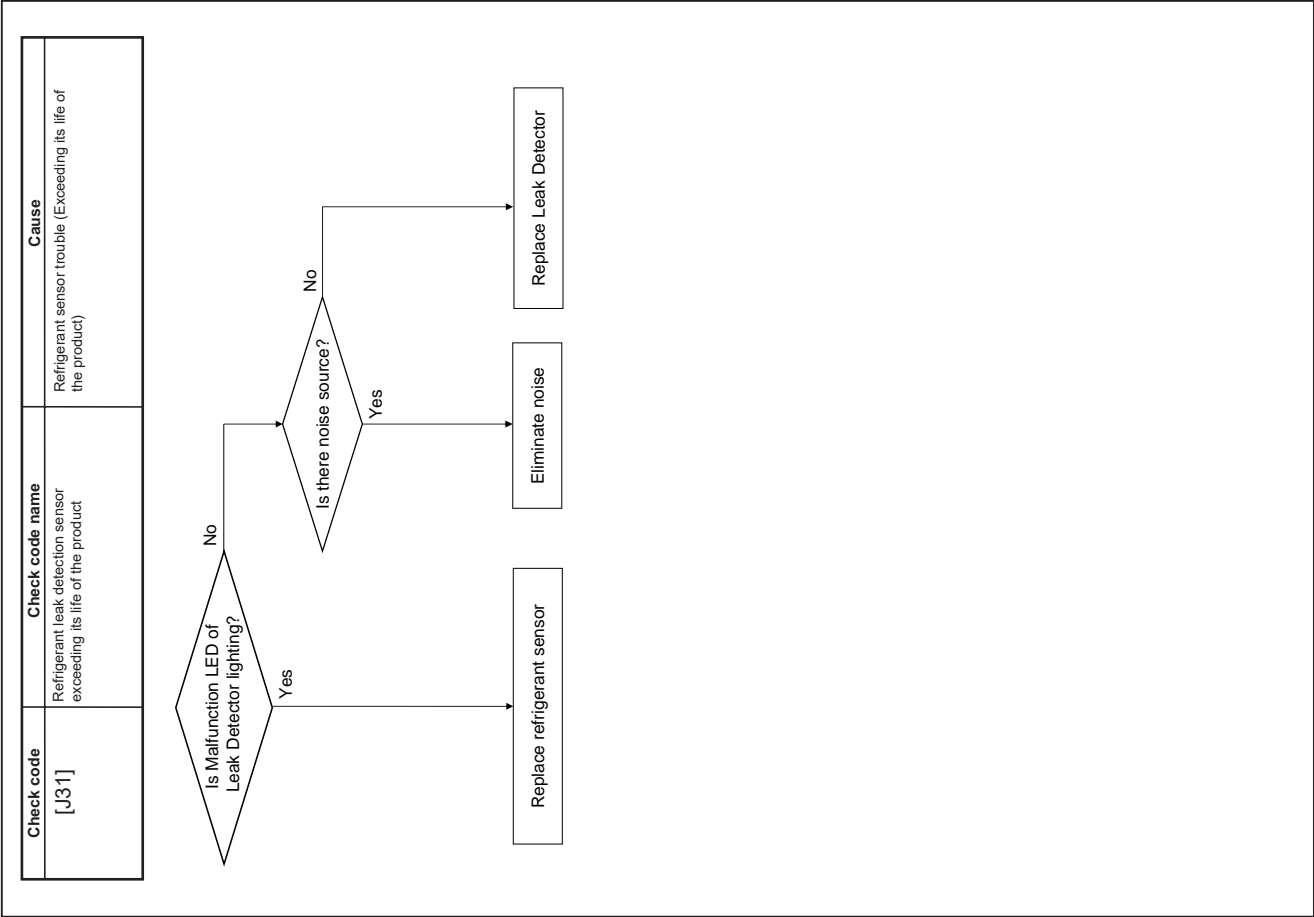

Check code	Check code name	Cause
[J30]	Refrigerant leak detection	1. Refrigerant leak detection

Caution:
Do NOT turn off power until the diagnosis is complete excluding when replacing the leak detector.

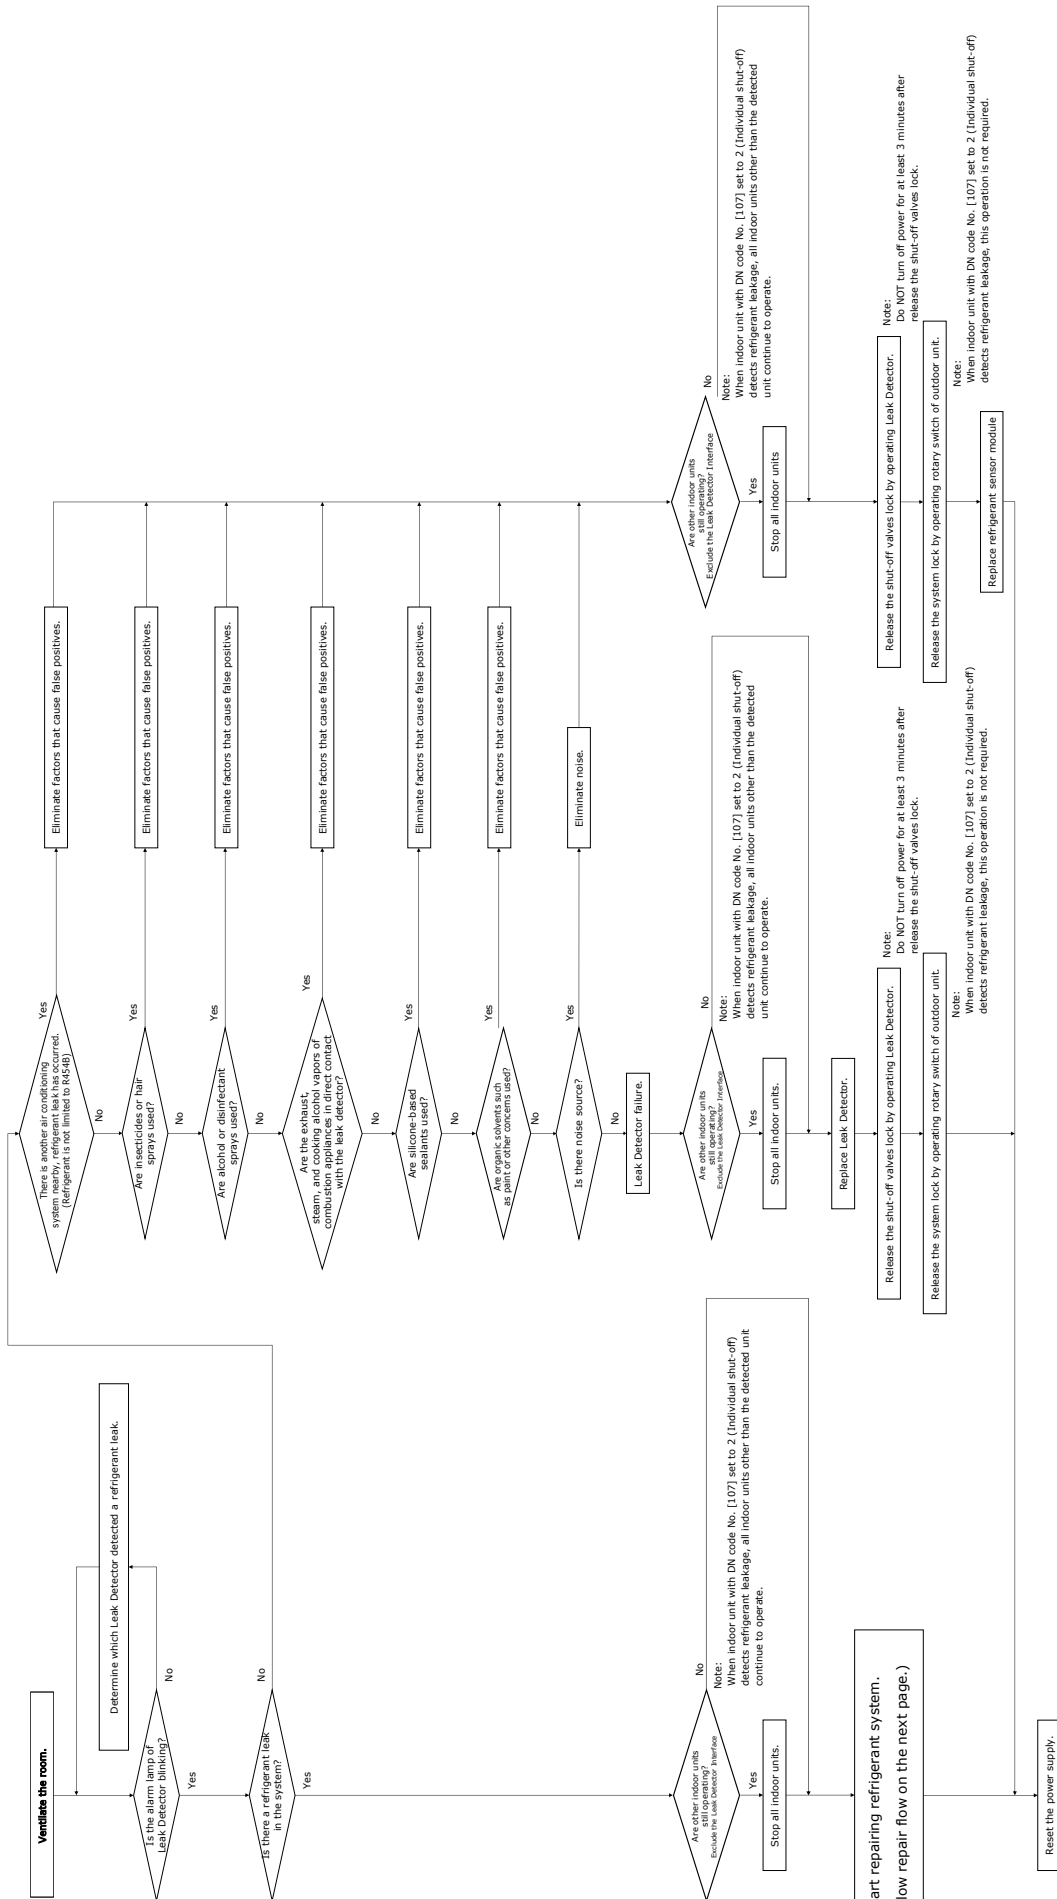

Recovery method after refrigerant leakage detection (repair flow)


This product has a function to lock shut-off valve and system when refrigerant leakage is detected. While shut-off valve is locked, shut-off valve of FS unit or SV unit is closed and fixed, and compressor cannot start operating while system is locked. Follow this repair flow to repair and release lock.

Caution:

- Please **ventilate thoroughly** before operating, it can be dangerous if the refrigerant is stagnant.

Note:

- Start repairing with the system power turned ON.
- Check DN code No. [107] setting. (Leak Detector sounds again, and please stop it again refer to "8-11. System operation when the Leak Detector detects refrigerant leak.")
- Clarify the installation location of the Leak Detector through the Leak Detector Interface and Flow Selector/Shut-off Valve unit.

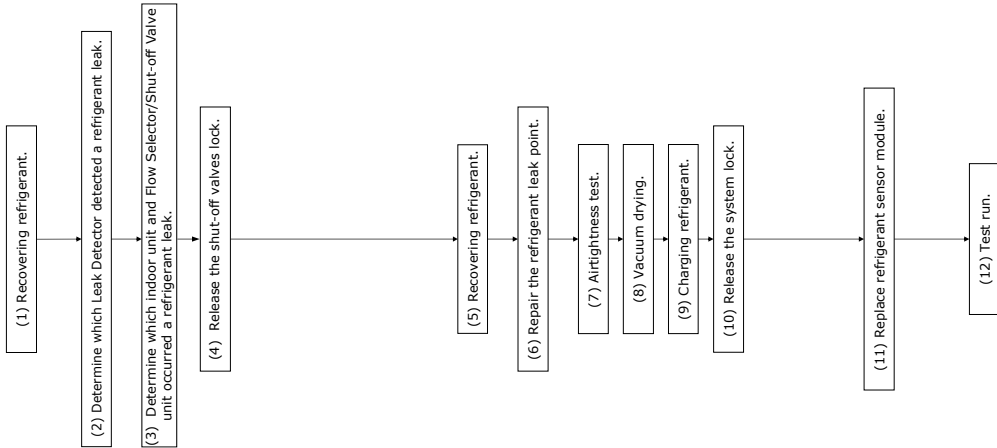

- (1) Recovering refrigerant.
Refrigerant should be collected before release the shut-off valves lock described below.
The refrigerant may leak again from the part where the refrigerant leaked, which may become dangerous.
- (2) Determine which Leak Detector detected a refrigerant leak.
When Leak Detector detects a refrigerant leak, alarm lamp is blinking. (1 Hz)
- (3) Determine which indoor unit and Flow Selector/Shut-off Valve unit occurred a refrigerant leak.
- (4) Release the shut-off valves lock by operating Leak Detector. *

With sufficient ventilation, release the shut-off valves lock.

Push and hold the alarm lamp button and reset button of Leak Detector at the same time for at least 5 seconds, and release after that. (Please push the reset button using a tool such as a precision screwdriver)

The following actions are performed:

- Leak Detector makes a sound of "beep, beep, beep, beeeeeep"
 - The shut-off valves that was locked will be released. (All shut-off valves lock in the system will be released within 3 minutes. **Do NOT turn off power until operation is completed.**)
- After release the shut-off valves lock, reset system power. When DN code [107] set to 1 or 3, the shut-off valve will not open until power is reset.

When a system power reset, Malfunction LED of Leak Detector will turn ON and Notice code is displayed on remote controller.

Caution:

After release the shut-off valves lock, refrigerant remaining downstream side of the shut-off valves may flow from leakage point. (Especially, when DN code [107] set to 3, some refrigerant remains.) When refrigerant leakage continues, close the shut-off valve connected to leak point. (Close PMV-L, PMV-S, and PMV-D).

Refer to "7-7-7. Pulse Motor Valve (PMV) Forced Open/Close Function in FS unit and shut-off valve unit" for how to operate the shut-off valves.

- * Perform this release operation even if the system is only connected to the indoor unit with the indoor unit DN code No. [107] set to 3 "Leak Detector only".

- * The release operation should be performed on all Leak Detectors that detected refrigerant leakage.

- * Perform this release operation on the Leak Detector connected to the Leak Detector Interface.

- (5) Recovering refrigerant. (Again)

After release the shut-off valves lock, check refrigerant pressure. If pressure is rising, recover refrigerant again.

- (6) Repair the refrigerant leak point.

Turn OFF system power and repair leakage point, or replace indoor unit. After repair is completed, turn ON system power.

- (7) Airtightness test.

- (8) Vacuum drying.

- (9) Charging refrigerant

- (10) Release the system lock.

Be sure to perform this operation after release the shut-off valves lock.

Set the rotary switch [SW01/SW02/SW03] on the I/F board of the outdoor unit to [2/1/9].

7-segment display: [o. U. L o c] (While system is locked.)

[o. U.] (Others.)

Push and hold SW05 more than 5 seconds, system lock is released.

7-segment display: [o. U. ... C L] (display for 5 seconds)

- (11) Replace refrigerant sensor module in Leak Detector.

After a sufficient amount of ventilation, replace the refrigerant sensor module.


Refrigerant sensor will become unusable once it has been exposed to refrigerant. (Not limited to R454B)

If more than one Leak Detector detects a refrigerant leak, replace refrigerant sensor module of all detected

Leak Detectors.

- (12) After replacing refrigerant sensor module, confirm that Malfunction LED is turned off and Notice code is cleared.

After completing all the work, system power reset and start test run.

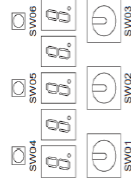

Remarks: How to manual system lock.

This product has a function to manual system lock.

Set the rotary switch [SW01/SW02/SW03] on the I/F board of the outdoor unit to [2/1/9].

Push and hold SW04 more than 5 seconds, system is locked.


To release manual system lock, push and hold SW05 more than 5 seconds.

9-6. Sensor characteristics

Indoor unit


▼ Temperature sensor characteristics

Indoor TA sensor

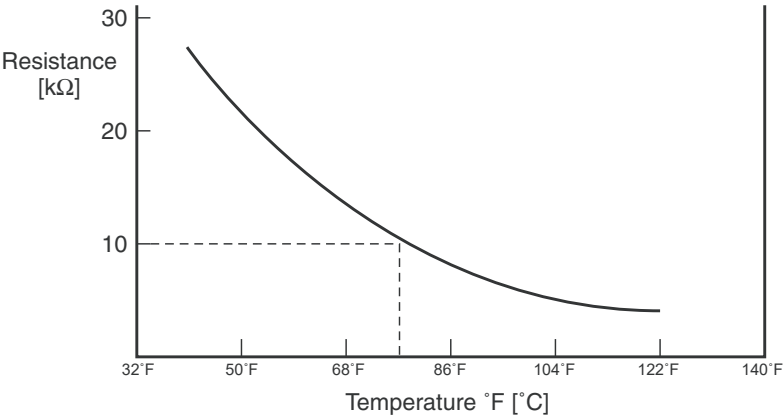


Temperature [°F(°C)]	Resistance [kΩ]
32°F(0°C)	33.9
41°F(5°C)	26.1
50°F(10°C)	20.3
59°F(15°C)	15.9
68°F(20°C)	12.6
77°F(25°C)	10.0
86°F(30°C)	8.0
95°F(35°C)	6.4
104°F(40°C)	5.2
113°F(45°C)	4.2
122°F(50°C)	3.5
131°F(55°C)	2.6
140°F(60°C)	2.4

Indoor TC1 sensor

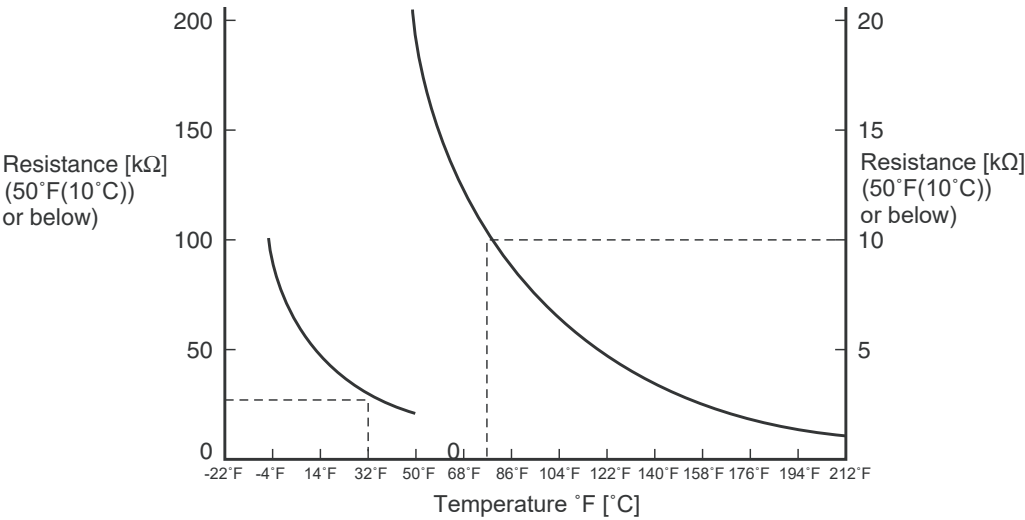

Temperature [°F(°C)]	Resistance [kΩ]
-4°F(-20°C)	99.9
-5°F(-15°C)	74.1
-14°F(-10°C)	55.6
-23°F(-5°C)	42.2
32°F(0°C)	32.8
41°F(5°C)	25.4
50°F(10°C)	19.8
59°F(15°C)	15.6
68°F(20°C)	12.4
77°F(25°C)	10.0
86°F(30°C)	8.1
95°F(35°C)	6.5
104°F(40°C)	5.3
113°F(45°C)	4.4
122°F(50°C)	3.6
131°F(55°C)	3.0
140°F(60°C)	2.5
149°F(65°C)	2.1
158°F(70°C)	1.8
167°F(75°C)	1.5
176°F(80°C)	1.3
185°F(85°C)	1.1
194°F(90°C)	1.0
203°F(95°C)	0.8
212°F(100°C)	0.7

Indoor TC2 and TCJ sensors

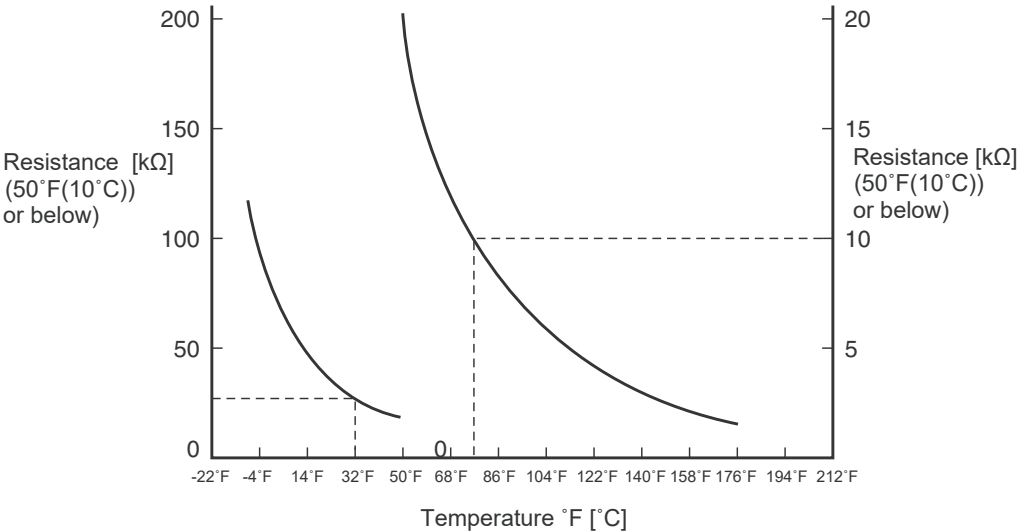

Temperature [°F(°C)]	Resistance [kΩ]
-4°F(-20°C)	115.2
-5°F(-15°C)	84.2
-14°F(-10°C)	62.3
-23°F(-5°C)	46.6
32°F(0°C)	35.2
41°F(5°C)	26.9
50°F(10°C)	20.7
59°F(15°C)	16.1
68°F(20°C)	12.6
77°F(25°C)	10.0
86°F(30°C)	8.0
95°F(35°C)	6.4
104°F(40°C)	5.2
113°F(45°C)	4.2
122°F(50°C)	3.5
131°F(55°C)	2.8
140°F(60°C)	2.4
149°F(65°C)	2.0
158°F(70°C)	1.6
167°F(75°C)	1.4
176°F(80°C)	1.2

10. REPLACEMENT OF SERVICE P.C. BOARD

Replacement of P.C. Board for Indoor Unit Servicing

<Models>

MMU-UB***1MHP-UL Series

<Note : when replacing the P.C. board for indoor unit servicing>

The nonvolatile memory (hereafter called EEPROM, IC503) on the indoor unit P.C. board before replacement includes the model specific type information and capacity codes as the factory-set value and the important setting data which have been automatically or manually set when the indoor unit is installed, such as system/indoor/group addresses, high ceiling select setting, etc. When replacing the P.C. board for indoor unit servicing, follow the procedures below. After replacement completes, confirm whether the settings are correct by checking the indoor unit No., Group header unit/follower unit settings and perform the cooling cycle confirmation through the trial operation.

<Replacement procedures>

■ Case 1

Before replacement, the indoor unit can be turned on and the setting data can be read out by wired remote control operation.

EEPROM data read out [1]



Replacement of P.C. board for Indoor unit servicing and power on [2]



Writing the read out EEPROM data [3]



Power reset(for all indoor units connected to the remote control when the group operation control is performed.)

■ Case 2

The EEPROM before replacement is defective and the setting data cannot be read out.

Writing the setting data to EEPROM, such as high ceiling installation setting and optional connection setting, etc., based on the customer information. [3]







Power reset (for all indoor units connected to the remote control when the group operation control is performed.)


[1] Setting data read out from EEPROM

The setting data modified on the site, other than factory-set value, stored in the EEPROM shall be read out.


Step 1 Push [ Menu] to open the "Menu"

Step 2 Push and hold [ Menu] and [] at the same time to open "Field setting menu".
(Push and hold 4 seconds.)




Step 3 Push [] and [] to select " DN setting", and then push [ Set / Fix].

Step 4 Select "Indoor unit", and the push [ Set / Fix].



Step 5 For group operation, all connected room in the system are displayed.

Select the unit whose EEPROM contents you want to read and push [ Set / Fix].

⇒ The fan of the selected indoor unit operates and the flap swings.

1. Push [] to black highlight the code (DN), and then push [] and [] to set the code No. to 1.

(This is the setting for the filter sign lighting time.) at this time, be sure to write down the setting data displayed.

2. Change the CODE No. (DN) by pushing  /  buttons.

Similarly, be sure to write down the setting data displayed.

3. Repeat the step 2 to set the other setting in the same way and write down the setting data in the manual that comes with the P.C board.

CODE No.required at least


DN	Contents
10	Type
11	Indoor unit capacity
12	System address
13	Indoor unit address
14	Group address
FC	Communication protocol
1FC	Indoor Unit terminating resistance

1. The CODE No. for the Indoor unit type and Indoor unit capacity are required to set the rotation number setting of the fan.
2. If the system/indoor/group addresses are different from those before replacement, the auto-address setting mode starts and the manual resetting may be required again.
(when the multiple units group operation including twin system.)

[2] P.C. Board for indoor unit servicing replacement procedures

Step 1 Replace the P.C. board to the P.C. board for indoor unit servicing.

At this time, perform the same setting of the jumper wire(J01) setting(cut),switch SW501, SW502 (short-circuit) connector CN34 as the setting of the P.C. board before replacement.

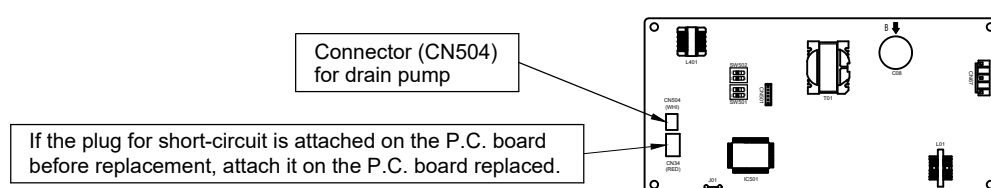

Step 2 It is necessary to set Indoor unit to be exchanged : Remote controller = 1:1

Based upon the system configuration, turn on power of the indoor unit with one of the following items.

1) Single (Individual) operation

Turn on power of the indoor units and proceed to [3].

2) Group operation

A) In case that power of the exchanged indoor unit only can be turned on

Turn on power of the exchanged indoor unit only and proceed to [3].

B) In case that power of the indoor units cannot be turned on individually (Case 1)

a) Remove temporarily the group wire connected to the terminal blocks A and B of the exchanged indoor unit.

b) After connecting the remote controller wire only to the removed terminal block, turn on power of the indoor units and proceed to [3].

When the above methods cannot be used, follow to the two cases below.


C) In case that power of the indoor units cannot be turned in individually (Case 2)

a) Remove all CN41 connectors of the indoor units in the same group except those of the exchanged indoor unit.


b) Turn on power of the indoor units and proceed to [3].

After [3] operation has finished, be sure to return the temporarily removed group wire or CN41 connector to the original connection.

(Case 1)
Indoor unit P.C.board

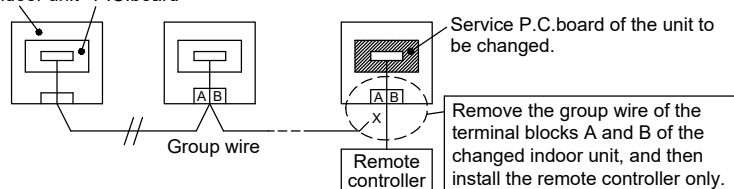







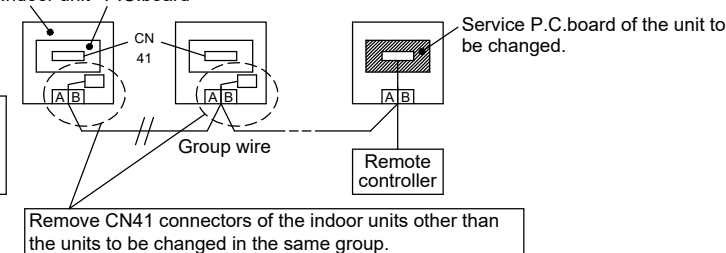




































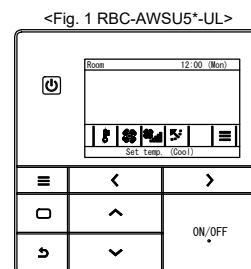
(Case 2)
Indoor unit P.C.board



[3] Writing the setting data to EEPROM

(The settings stored in the EEPROM of the P.C. board for indoor unit servicing are the factory-set values.)

- Step 1 Push [ Menu] to open the "Menu"
- Step 2 Push and hold [ Menu] and [] at the same time to open "Field setting menu".
(Push and hold 4 seconds.)
- Step 3 Push [] and [] to select "DN setting", and then push [ Set / Fix].
- Step 4 Select "Indoor unit", and the push [ Set / Fix].
- Step 5 For group operation, all connected room in the system are displayed.
Select the unit whose EEPROM contents you want to read and push [ Set / Fix].
⇒ The fan of the selected indoor unit operates and the flap swings.
- Step 6 Push [] to black highlight the code (DN), and then push [] and [] to set the code
(Set the indoor unit type and capacity)
The factory-set values shall be written to the EEPROM by changing the type and capacity.
1. Set the CODE No. (DN) to 10 (without change)
 2. Push [] to black highlight the data, and then push [] and [] to set the type.
(Refer to Type DN code "10".)
 3. After finishing setting the data of the code (DN), push [ Set / Fix]
⇒ "Continues ?" is displayed.
 4. To set the data of other codes (DN), push [ Set / Fix]
 5. Push [] to black highlight the code (DN), and then push [] and [] to set the code No. to 11.
 6. Push [] to black highlight the data, and then push [] and [] to set the capacity.
(Refer to indoor unit capacity DN code "11" on page 4.)
 7. After finishing setting the data of the code (DN), push [ Set / Fix]
⇒ "Continues ?" is displayed.
 8. Push [ Return]
When doing group connections :
⇒ Push [ Return] to open the unit selection screen. In the unit selection screen, push [ Return] to briefly display "  ", and then return to the "Field setting menu" screen.
- Step 7 Write the on-site setting data to the EEPROM, such as address setting etc. Perform the steps 1 and 4 above again.
- Step 8 Push [] to black highlight the code (DN), and then push [] and [] to set the code No. to 1.
(This is the setting for the filter sign lighting time.)
- Step 9 Check the setting data displayed at this time with the setting data put down in [1].
1. If the data is different, push [] to highlight the data in black and write, push [] and [] to change the data to what you wrote down, and push [ Set / Fix].
 2. If the data is the same, proceed to next step.
- Step 10 Push [] to black highlight the code (DN), and then push [] and [] to set the code.
As described above, check the setting data and modify to the data put down in [1].
- Step 11 Repeat the steps 8 and 9.
- Step 12 After the setting completes, push [ Return]
When doing group connections :
⇒ Push [ Return] to open the unit selection screen. In the unit selection screen, push [ Return] to briefly display "  ", and then return to the "Field setting menu" screen.
- Even after modifying the data wrongly and pushing [ Set / Fix] it is possible to return to the data before modification by pushing [ Return] if the CODE No. (DN) is not changed.



<Fig.2 EEPROM layout diagram>

The EEPROM (IC503) is attached to the IC socket. When detaching the EEPROM, use a tweezers, etc. Be sure to attach the EEPROM by fitting its direction as shown in the figure.

* Do not bend the IC lead when replacing.

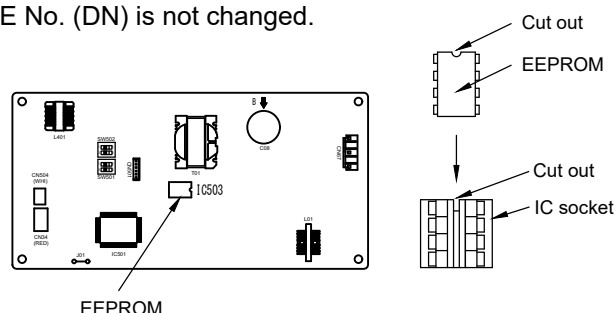


Table 1.Setting data(CODE No. table(example))

DN	Item	Setting data	Factory-set value
01	Filter display delay timer		0002 : 2500H
02	Dirty state of filter		0000 : Standard
03	Central control address		00Un/0099 : Unfixed
04	Specific indoor unit priority		0000 : No priority
06	Heating suction temperature shift		0002 : +2°C
0D	Automatic mode		0001 : No automatic
0F	Cooling only		0000 : Heat pump
10	Type		Depending on model type
11	Indoor unit capacity		According to capacity type
12	Line address		00Un/0099 : Unfixed
13	Indoor unit address		00Un/0099 : Unfixed
14	Group address		00Un/0099 : Unfixed
19	Flap type (Wind direction adjustment)		Depending on Type
1E	Temperature range of cooling/heating automatic SW control point		0003 : 3 deg (Ts±1.5)
28	Automatic restart of power failure	0001 : Enable	0000 : None
2A	Selection of option / Trouble input (TCB-PCUC2E: CN3)		0002 : None
2B	Thermo output SW		0000 : Thermo ON
2E	HA terminal (CN61) select		0000 : Usual (HA terminal)
31	Ventilating fan control		0000 : Unavailable
32	Sensor SW		0000 : Body sensor
33	Temperature unit select	0001 : Fahrenheit (°F)	0000 : Centigrade (°C)
5D	High ceiling setting		0000 : Default setting
60	Timer setting (wired remote controller)		0000 : Available
7A	Change unit 0.5°C or 1.0°C on remote	0001 : 1°C	0000 : 0.5°C
D0	Remote controller operation save function		0001 : Enable
E0	Region	0001 : North America	0000 : Domestic
F6	Presence of Application control kit (TCB-PCUC2E)		0000 : None
FC	Communication protocol		0000 : TCC-LINK
FE	FS unit adress		00Un/0099 : Unfixed
1Fb	Remote controller operation		0000 : Operation possible
1FC	Indoor Unit terminating resistance		0000 : OFF

Table 2. Type : CODE No.10

Setting data	Type	Type name abb.
0001 ^{*1}	4-way Air Discharge Cassette Type	MMU-UB***1HP-UL
0014	Compact 4-way Cassette Type	MMU-UB***1MHP-UL

*1 EEPROM initial value on the P.C. board for indoor unit servicing.

***2 ▲ CAUTION**

For the above model. Set the CODE no. to **"E0"** the setting data "0000" (initial) to "0001"

Table 3. Indoor unit capacity : CODE No.11

Setup data	Model
0000 ^{*1}	Invalid
0001	007 type
0003	009 type
0005	012 type
0007	015 type
0009	018 type

11. DETACHMENTS








Compact 4-way cassette


WARNING


Be sure to stop operation of the air conditioner before work and then turn off switch of the breaker.







CAUTION

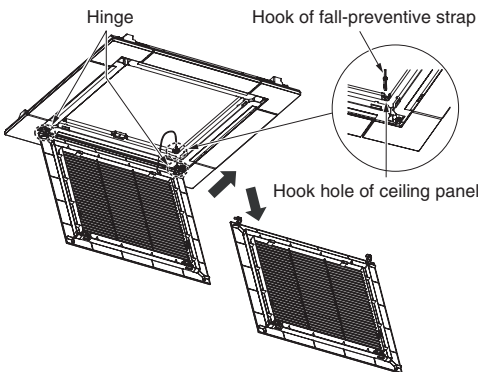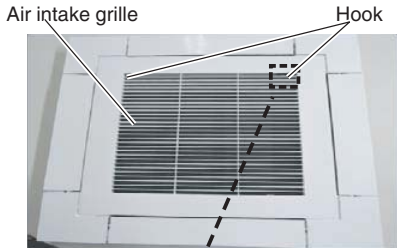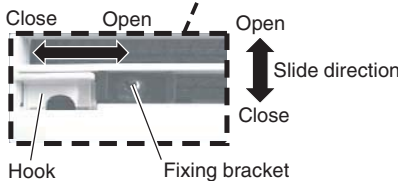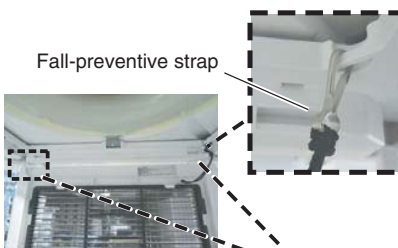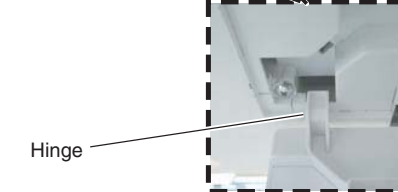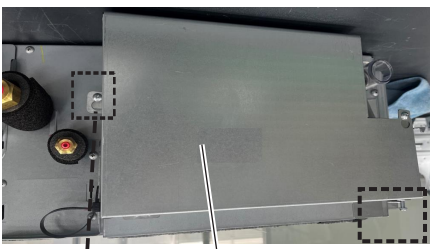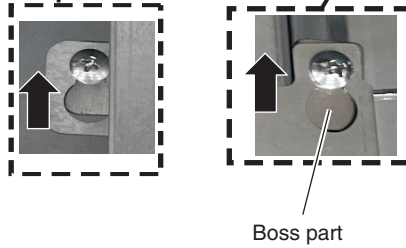

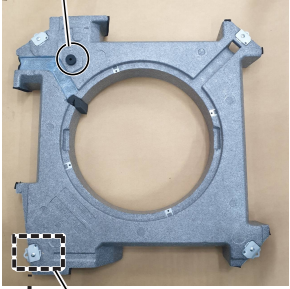
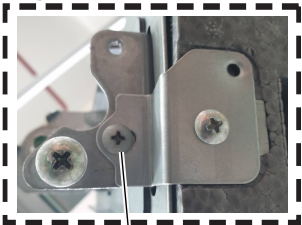

Be sure to put on gloves during working time; otherwise an injury will be caused by a part etc.


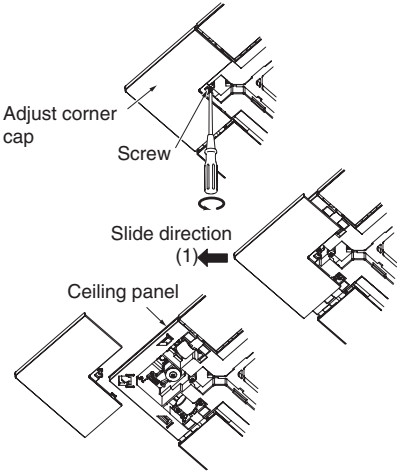
No.	Part name	Procedure	Remarks
①	Air intake grille	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Stop operation of the air conditioner and then turn off switch of the circuit breaker. 2) Loosen the fixing screw. And slide the fixing bracket toward the inside. (M 4 × 8, 1 pcs.) 3) Holding the air intake grille, slide the hook in the direction of the arrow and slowly open the grille. 4) Remove the hook of the fall-preventive strap from the ceiling panel. Remove the hinge section of the air intake grille from the ceiling panel while the air intake grille is opened. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Hook the hinge of the air intake grille to the main panel, and then attach the fall-preventive strap. 2) Close the air intake grille, and then slide the hook. 3) Slide the grille fixing bracket to fix it with the screws. (M 4 × 8, 1pc.) 	   
②	Electric parts cover	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Loosen the fixing screws (2 places) of the electric parts cover. (M 4 × 8, 2 pcs.) 2) Slide the electric parts cover toward upper side to remove it. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Slide the electric parts cover to attach it. (Arrange the boss at the electric parts side just on the boss hole at the cover side.) 2) Tighten the screws of the electric parts cover (2 positions) to fix it. (M 4 × 8, 2 pcs.) 	 


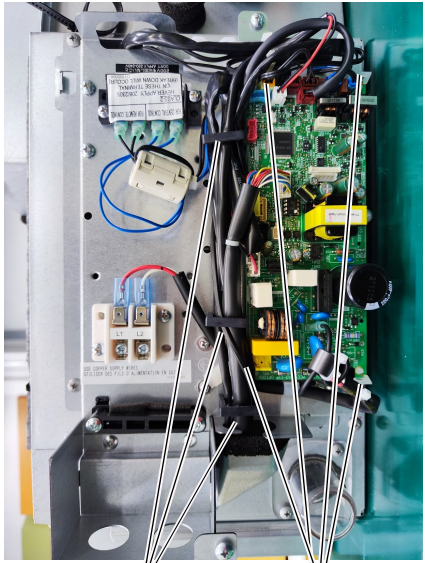

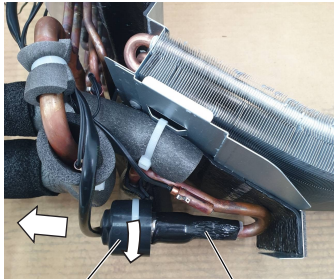
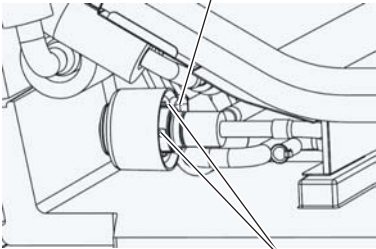
No.	Part name	Procedure	Remarks
③	Adjust corner cap	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the air intake grille. (Refer to 1 of ①.) 2) Loosen the fixing screws on the adjust corner cap. (M 4 × 10, 4 pcs.) 3) Slide the adjust corner cap to outside to remove it. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Matching claws (5 positions) of the adjust corner cap to holes of the panel main unit holes and attach them. 2) Tighten the fixing screws of the adjust corner cap (M 4 × 10, 4 pcs.). <p>NOTE</p> <p>Tighten the screw with a hand screwdriver and do not use a tool such as a electric screwdriver. Tightening torque : 1 N•m or less</p>	
④	Ceiling panel	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the air intake grille and the adjust corner cap. (Refer to 1 of ① and 1 of ③.) 2) Remove the louver motor connector. 3) By sliding the panel fixing bracket of the corner part, remove it from the fixing screws. (Total 4 positions) 4) Push the tentative hanging hook at the center part of the ceiling panel main body toward the outside of the ceiling panel, and then remove the ceiling panel from the indoor unit. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Match the louver motor connector of the ceiling panel so that it directs to the electric parts side, and then hook the tentative hanging hook at the center part of the ceiling panel main body to the bell mouth. 2) Connect the louver motor connectors at the ceiling panel side and the indoor unit side. 3) Lift up the panel corner part and put out the screw head of the panel fixed implement. Slide the panel fixed bracket, and then fix the indoor unit and the ceiling panel. (Total 4 positions). * In case of loosening screws of the panel fixed implement so that screw head is out under the panel fixed implement, retighten the screws after work. 4) Following to the works in items ③-2 and ①-2, attach the adjust corner cap and the air intake grille as original. <p>NOTE</p> <ul style="list-style-type: none"> • The ceiling panel aligns directionally with the indoor unit. Check that the lead wires of louver motor connector are on the electrical control box side. • When a clearance is found between the ceiling surface and the ceiling panel, readjust height of the indoor unit even if the screws have been tightened. 	


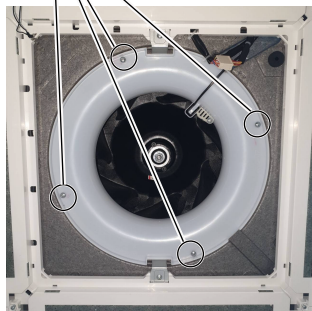

No.	Part name	Procedure	Remarks
⑤	Control P.C. board	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the electric parts cover. (Refer to 1 of ②) 2) Remove connectors which are connected from the control P.C. board to the other parts and then remove wiring from the clamp. <p>NOTE</p> <p>Unlock the lock of the housing part and then remove the connector.</p> <p>CN34 : Float switch (3P, Red) CN41 : Remote controller (2P, Blue) CN40 : Control wires (2P, Blue) CN67 : Power supply wires (5P, Black) CN100 : TC1 sensor (3P, Brown) CN101 : TC2 sensor (2P, Black) CN102 : TCJ sensor (2P, Red) CN104 : Room temp. (TA) sensor (2P, Yellow) CN82 : PMV (6P, Blue) CN510 : Louver motor (20P, White) CN504 : Drain pump (2P, White) CN210 : Fan motor (7P, White) CN22 : Earth wire (Tab terminal)</p> <ol style="list-style-type: none"> 3) Unlock the locks of the card edge spacer (4 positions) and remove the control P. C. board. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Fix the control board to the card edge spacer (4 positions). 2) Connect the removed connectors as original, which were unconnected in item 1. Detachment, and fix the wires with clamps. 3) Following to the work in ②-2, attach the electric parts covers as original. 	 <p>Clamp</p> <p>Card edge spacer</p>

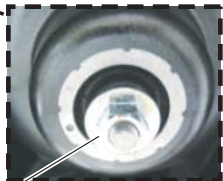
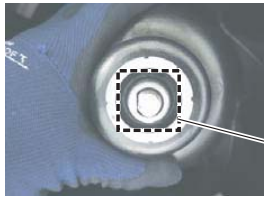
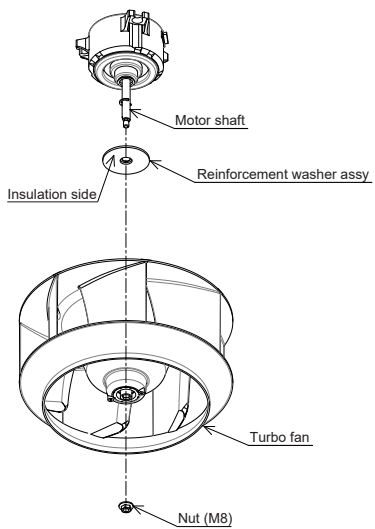

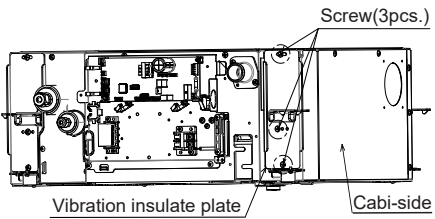
No.	Part name	Procedure	Remarks
⑤	Turbo fan and Reinforcement washer assy	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the air intake grille. (Refer to 1 of ①.) 2) Remove the fix screws (4 positions) of the bell mouth, and then take off it. (M 4 × 8, 4 pcs) 3) Loosen the flange nut (M8) at the center part of the turbo fan, and then take off (Counter clockwise) <p>* Supporting with hands, take off the turbo fan so that it will not fall down.</p> <p>NOTE</p> <hr/> <p>Use a box wrench for attachment and detachment of the turbo fan. If using adjustable wrench etc., the other parts may be damaged in work.</p> <hr/> <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Match the D-cut of the motor shaft with the boss part D-cut of the turbo fan, and then insert the turbo fan into the motor shaft. 2) Tighten M8 nut with flange. (Tightening torque of the turbo fan: 5.4+0.5, -0.2N•m) 3) Attach Bell mouth then fix it with screws. (M 4 × 8, 4 pcs.). 4) Following to the work in item ①-2, attach the air intake grille as original. <p>NOTE</p> <hr/> <p>(Tightening torque of the turbo fan: 5.4 (+0.5, -0.2)N•m)</p> <hr/>	<p>Fixing screw of bell mouth</p>  <p>Lock release direction</p>    <p>Flange nut (M8)</p>  <p>D-cut</p>  <p>Motor shaft</p> <p>Reinforcement washer assy</p> <p>Insulation side</p> <p>Turbo fan</p> <p>Nut (M8)</p>





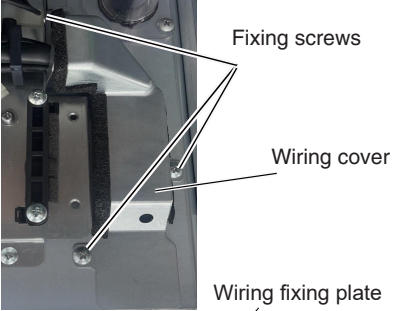
No.	Part name	Procedure	Remarks
⑦	Drain pan	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the ceiling panel and the electrical parts covers. (Refer to items ④-1 and ②-1.) 2) Remove the wiring cover. (Fixing screw M 4 × 8, 3pcs.) 3) Remove the wiring fixing plate. (Fixing screw M 4 × 8, 1pc.) 4) Remove the connectors of the fan motor lead wire, louver motor lead wire, and room temperature (TA) sensor from the control P.C. board, and then remove the wiring from the clamp. * Pull out the wires from the hole at the side face of the electric parts. CN210: Fan motor (7P, White) CN510: Louver motor lead wire (20P, White) CN104: TA (Room temperature) sensor (2P, Yellow) 5) Remove the drain plug of the drain pan, and extract the stayed drain water. * Be careful that water is extracted at a stretch when taking off the drain plug. * When taking off the drain plug, be sure to prepare a bucket, etc. for spilled water. 6) Remove the fixing screws of the drain pan fixing bracket. (M 4 × 8, 4 pcs.) 7) Using the both hands, hold the water-spilling port part of the drain pan and then slowly pull out the foaming parts firstly. * As there is remained water in the drain pan, clear it carefully. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Arrange direction of the drain pan directly to the foaming parts and insert it. * Pass the fan motor lead wire through the inner side of the drain pan. 2) Attach the fixing screws of the drain pan fixing bracket which was taken off in item 1-6). (M4 × 8, 4 pcs.) 3) Insert the drain plug. (Put the tool with thin top in the hole of the drain plug, and then push the plug in.) 4) Perform wiring works to original arrangement, wiring of the fan motor, louver motor lead wires, and the room temperature (TA) sensor, and then attach the wiring fixing bracket and the wiring cover. 5) Following to works in items ④-2 and ②-2, attach the panel, electric parts cover as original. 	     <p>Push in the drain plug with the thin tip tool.</p>

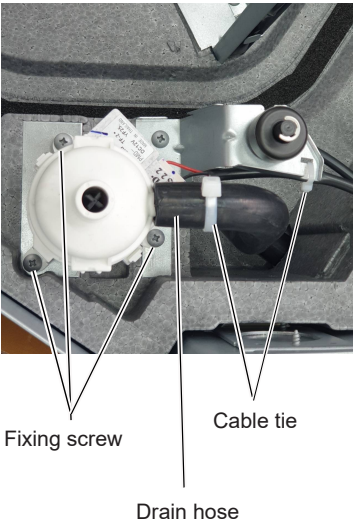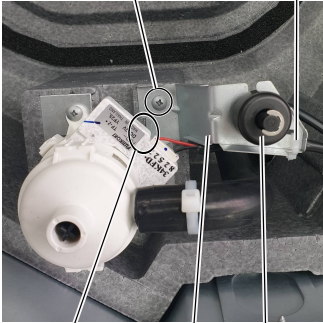No.	Part name	Procedure	Remarks
⑧	Drain pump	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the drain pan. (Refer to ⑦-1.) 2) Remove the drain pump connector (CN504: 2P, White) connected to the control P.C. board and remove the lead wires from the clamp. 3) Remove the fixing screws to remove the drain pump. (M 4 × 10, 3 pcs.) 4) Cut the cable tie 2 place and then remove the drain hose from the drain pump. * Be careful that water may be out. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Confirm the direction of the drain pump, and then fix it with screws. (M 4 × 10, 3 pcs.) 2) Connect the drain hose to the drain pump. * For the drain hose, insert up to the root of the connecting part. * Fasten a cable tie (Locally procured) to the marked position of the drain hose. 3) Pass the drain pump wiring through side plate and clamp, and then connect the connector to the control P.C. board. 4) Following to work in ⑦-2, attach the drain pan, panel, and electrical parts covers as original. 	 <p>Fixing screw</p> <p>Cable tie</p> <p>Drain hose</p>
⑨	Float switch	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the drain pan. (Refer to ⑦-1.) 2) Remove the float switch connector (CN34 3P, Red) connected to the control P.C. board, and then take off the lead wires from the clamp. 3) Cut the cable tie and remove the screws which fix the float switch. (M4 × 10, 1 pc.) 4) Slide the float switch fixed bracket as direction shown in the right figure, and then take off it from the claw. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Insert the float switch fixing plate into the claw, and tighten the fixing screw. 2) Fasten float switch and drain pump lead wires with a cable tie (Locally procured) to hole of the fixing plate. 3) Pass the float switch lead wires through the side plate and the clamp, and then connect the connector to the control P.C. board. 4) Following to work in ⑦-2, attach the covers of the drain pan, panel, and electric parts box as original. 	 <p>Fixing screw</p> <p>Cable tie</p> <p>Claw</p> <p>Fixing plate of float switch</p> <p>Float switch</p>

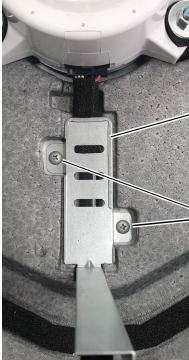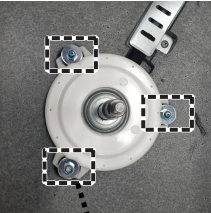
No.	Part name	Procedure	Remarks
⑩	Fan motor	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the turbo fan, electric parts cover, wiring cover and wiring fixing plate. (Refer to ⑥-1, ②-1, ⑦-1-2, ⑦-1-3.) 2) Remove the fan motor connector (CN210, White, 7P) connected to the control P.C. board, and then take off the lead wires from the clamp. 3) Remove screws (M4 x 8, 2pcs.) of the motor lead wiring cover, and separate the lead wires and the lead wire cover. 4) Remove the hexagon nuts (M6) which fix the motor, and the washers. (3 pcs. Each). * When taking off them, hold them with a hand so that motor will not fall down. 5) Remove the motor with rubber cushion from the bolt. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Pass rubber cushion of the motor in the bolt, put the washer and the hexagon nut in this order, and then tighten to fix them. (Tightening torque: $4.9 \pm 0.5\text{N}\cdot\text{m}$) 2) Pass the lead wire through the motor lead wire fixing plate removed in 1-3), and then fix it with shoulder screw. 3) Perform wiring of the motor lead wires as original, connect the connector to the control P.C. board, and then attach the wiring fixing plate and the wiring cover. 4) Following to works in ⑥-2 and ②-2, attach the turbo fan and the electric parts covers. 	  
⑪	PMV coil	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the drain pan. (Refer to ⑦-1) 2) Remove the PMV connectors (CN82, Blue, 6P) connected to the control P.C. board, and take off the lead wires from the clamp. 3) A little PMV coil is rotated, pressing down so that a PMV body may not turn, and it removes in the direction of an arrow. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the PMV coil as original. <p>NOTE</p> <p>Be careful of direction of a PMV coil. Check that four projections of the fixed claw of PMV coil and PMV body have fitted in.</p>	 <p>PMV coil PMV body</p> <p>The lead wire of PMV coil is turned in the top plate direction.</p>  <p>PMV coil fixed claw</p>

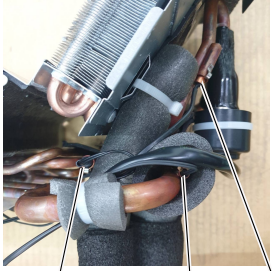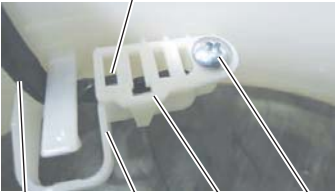No.	Part name	Procedure	Remarks
⑫	TC1 TC2 TCJ Sensor	1. Detachment <ol style="list-style-type: none"> 1) Remove the drain pan. (Refer to ⑦-1.) 2) Pull out the sensor to be exchanged from the sensor holder. 3) Remove the connector connected to the control P.C. board, and take off wires from the clamp. (Refer to ⑤.) 2. Attachment <ol style="list-style-type: none"> 1) Insert the sensor to be exchanged into the specified sensor. (Refer to the right figure.) 2) Perform wiring of the sensor as original. 	 <p>TCJ sensor TC1 sensor TC2 sensor</p>
⑬	TA sensor	1. Detachment <ol style="list-style-type: none"> 1) Remove the panel, electric parts box cover, wiring cover and wiring fixing plate. (Refer to ④-1, ②-1, ⑦-1-2, ⑦-1-3.) 2) Disconnect TA sensor connector (CN104 Yellow, 2P) which is connected to the control P.C. board, and take off the lead wire from the clamp. 3) Remove the screw of the TA sensor cover. (M 4 × 8, 1pc.) 4) Remove TA sensor from the TA sensor fixing bracket. 2. Attachment <ol style="list-style-type: none"> 1) Fix TA sensor to TA sensor fixing bracket, and fix the TA sensor cover with screw. (M 4 × 8, 1 pc.) 2) Perform wiring of TA sensor as original. 	<p>Adjust position of the tube so that the tube of TA sensor will be included in the cover.</p>  <p>TA sensor TA sensor fixing bracket Fixing screw TA sensor cover</p> <p>Groove for wiring of the drain pan</p>  <p>Fixing screw Wiring fixing plate</p>

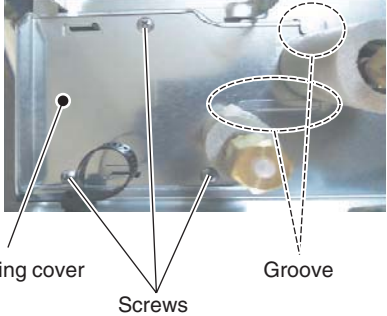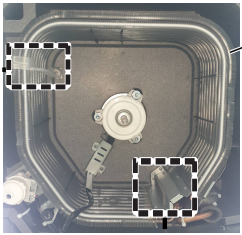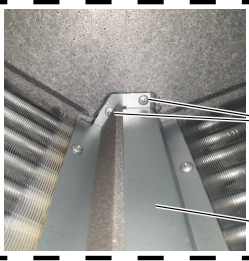No.	Part name	Procedure	Remarks
⑭	Heat exchanger	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Recover refrigerant gas. 2) Remove the refrigerant pipe at indoor unit side. 3) Remove the drain pan. (Refer ⑦-1.) 4) Disconnect the heat exchanger sensor (TC1, TC2, TCJ), PMV lead wires connectors from the control P.C. board, and then remove their lead wires from the clamp. (Refer to ⑤-1.) 5) Remove the fixing screws of the piping cover and take off the piping cover. (M 4 × 8, 3 pcs.) 6) Remove the screws of the separate plate (2 positions) and fixing band (1 position), and then remove the heat exchanger. (3 screws) <p>NOTE</p> <p>* Supporting with a hand, remove the heat exchanger so that it will not be fallen down.</p> <p>* Take note that you will not get hurt by touching to Aluminum fin. Be sure to put on the protective gloves and the safety working clothing.</p> <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the heat exchanger as original with the separate plate and the fixing plate. 2) Slide the piping cover to the groove, fix it to the side plate, and then use the screws. (M 4 × 8, 3 pcs.) 3) Perform wiring of the sensor and PMV lead wires as original. 4) Connect the refrigerant pipe as before and then apply vacuuming. 5) Following to the work in ⑦-2, attach the parts as original. <p>NOTE</p> <p>After assembling, check if that there is no abnormal sound, vibration, or puncture. Check the exchange point when you have a problem.</p>	   
⑮	Vibration insulate plate	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the fixing screws (3 places) of Vibration insulate plate. (M 4 × 10, 3 pcs.) 2) Remove the Vibration insulate plate from Cabi-side. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the Vibration insulate plate to Cabi-side. 2) Using screws taken off from the fix the assembly as original. 3) Tighten the screws of the Vibration insulate plate (3 positions) to fix it. (M 4 × 10, 3 pcs.) 	

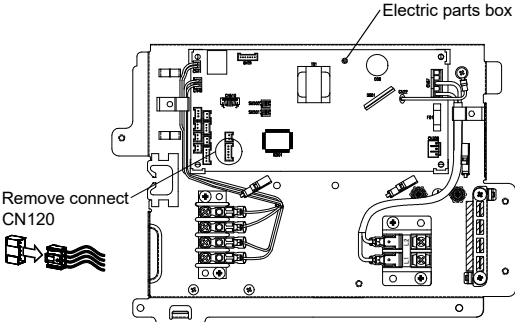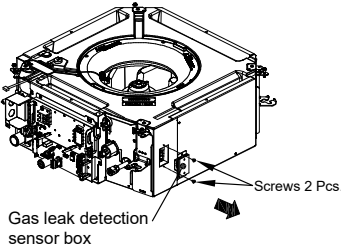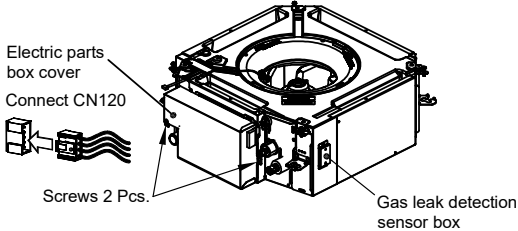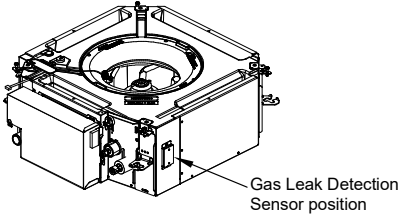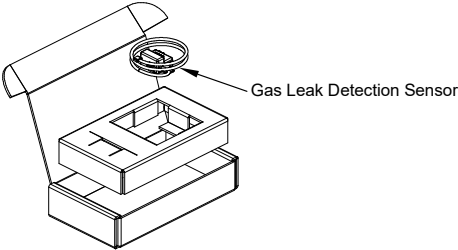
No.	Part name	Procedure	Remarks
①⑥	Gas Leak Detection	<p>1. Detachment</p> <p>1) Perform works until opening of the electric parts box cover in works of item 1 of ②</p> <p>2) Remove the connectors which connect to gas leak detection sensor the control P.C. board CN120 : gas leak detection sensor (4P : White)</p>  <p>3) Remove the fixing screws (2 positions) of gas leak detection sensor box</p>  <p>2. Attachment</p> <p>1) Open gas leak detection sensor accessory.</p> <p>2) Insert the gas leak detection sensor into unit and fix it by the screw.</p> <p>3) Connect the gas leak detection sensor box wiring as original and close the electric parts box cover for fixing.</p> 	<p><u>Installation position (Inside Indoor Unit)</u></p>  <p><u>How to install Gas Leak Detection Sensor</u></p> <p>⚠ Caution : Turn off power supply before installation.</p> <p><u>Gas Leak Detection Sensor Accessory</u></p> 

Compact 4-way cassette type

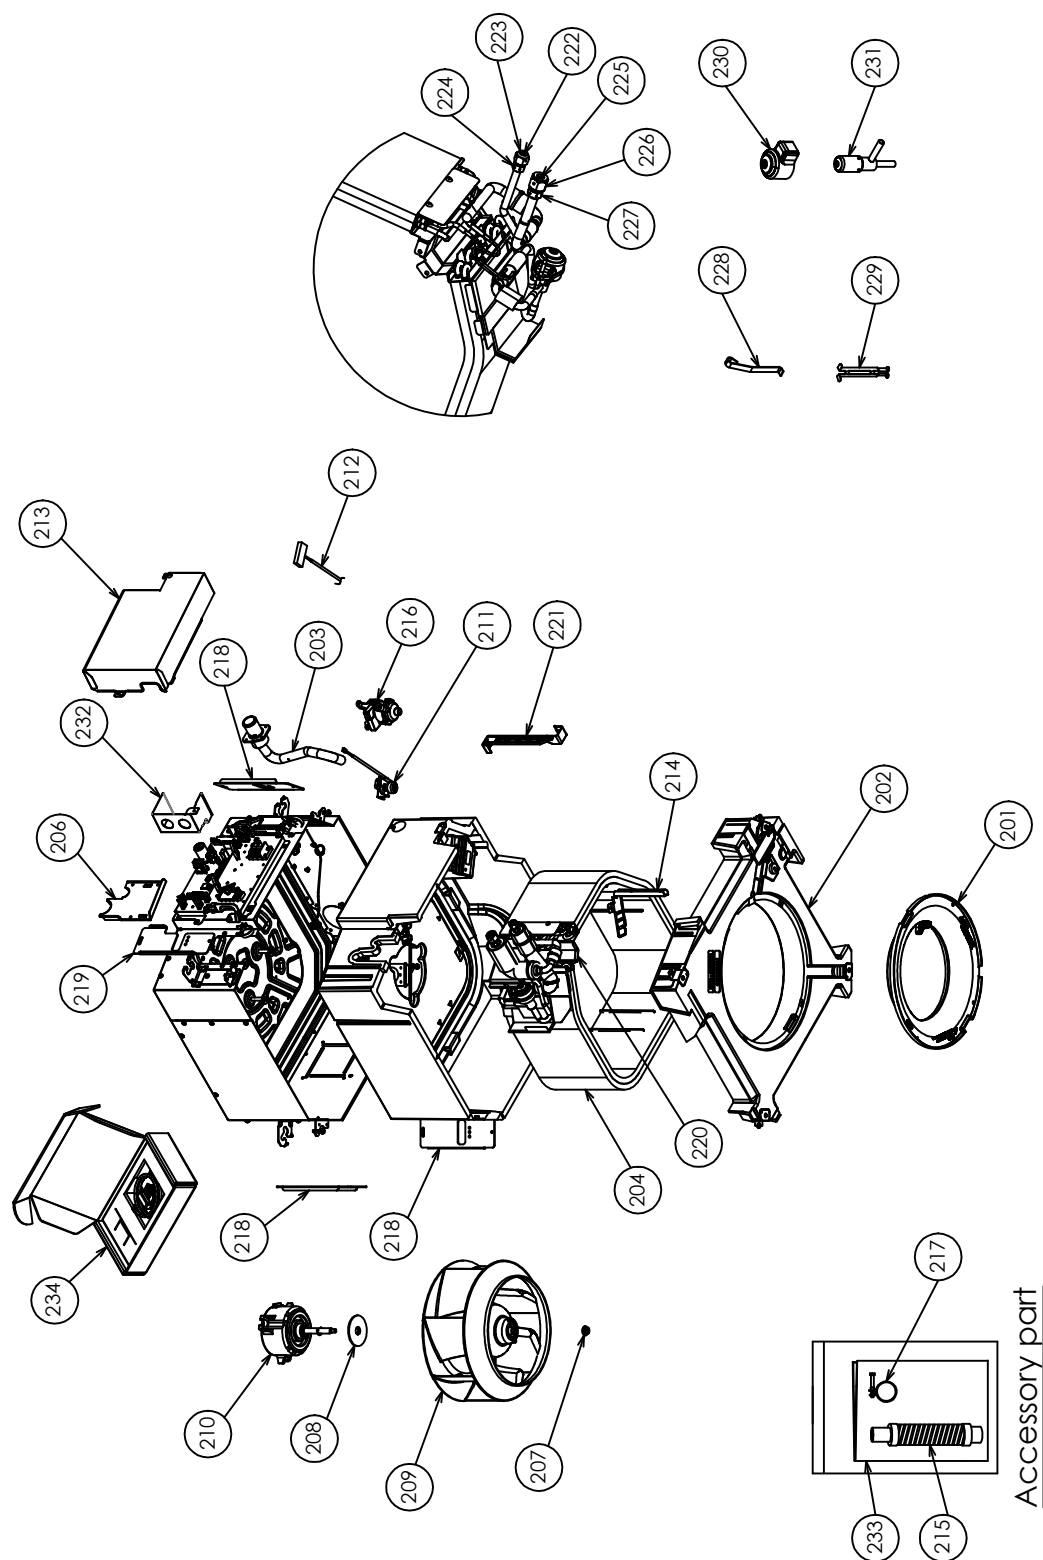

Location No.	Part No.	Description	Model name MMU-UB				
			0071MHP-UL	0091MHP-UL	0121MHP-UL	0151MHP-UL	0181MHP-UL
201	43T22414	BELLMOUTH	1	1	1	1	1
202	43T72411	DRAIN PAN ASSY	1	1	1	1	1
203	43T70330	DRAIN HOSE ASSY	1	1	1	1	1
204	43T44835	REFRIGERATION CYCLE ASSY	1	1	1		
205	43T44836	REFRIGERATION CYCLE ASSY				1	1
206	43T04509	PIPE COVER ASSY	1	1	1		
207	43T97001	NUT	1	1	1	1	1
208	43T22415	REINFORCEMENT WASHER ASSY	1	1	1	1	1
209	43T20371	TURBO FAN ASSY	1	1	1	1	1
210	43T21544	MOTOR FAN ASSY	1	1	1	1	1
211	43T51318	FLOAT SWITCH ASSY	1	1	1	1	1
212	43T60633	MOTOR LEAD	1	1	1	1	1
213	43T62416	ELECTRICAL PARTS COVER	1	1	1	1	1
214	43T63403	HOLDER LEAD FAN MOTOR	1	1	1	1	1
215	43T70326	HOSE, DRAIN	1	1	1	1	1
216	43T77305	PUMP ASSY	1	1	1	1	1
217	43T83311	BAND, HOSE	1	1	1	1	1
218	43T02309	VIBRATION INSULATE PLATE	3	3	3	3	3
219	43T02310	VIBRATION INSULATE PLATE	1	1	1	1	1
220	43T49404	EVAPORATOR PLATE FIXTURE	1	1	1	1	1
221	43T39459	EVAPORATOR BAND FIXTURE	1	1	1	1	1
222	43T49405	PLASTIC BONNET 6.35DIA	1	1	1	1	1
223	43T97320	NUT, FLARE, 1/4 IN	1	1	1	1	1
224	43T82319	SOCKET	1	1	1	1	1
225	43T49406	PLASTIC BONNET 9.52DIA	1	1	1		
225	43T49407	PLASTIC BONNET 12.7DIA				1	1
226	43T97321	NUT, FLARE, 3/8 IN	1	1	1		
226	43T97322	NUT, FLARE, 3/8 IN				1	1
227	43T82318	SOCKET	1	1	1		
227	43T82338	SOCKET				1	1
228	43T19333	HOLDER, SENSOR	2	2	2	2	2
229	43T19321	FIX-P-SENSOR	1	1	1	1	1
230	43T46515	COIL, PMV	1	1	1	1	1
231	43T46517	BODY, PMV				1	1
231	43T46568	BODY, PMV	1	1	1		
232	43T62417	CONDUIT MOUNT	1	1	1	1	1
233	43T85964	INSTALLATION MANUAL	1	1	1	1	1
234	43T63420	PACKING SENSOR ASSEMBLY	1	1	1	1	1


Electric Parts

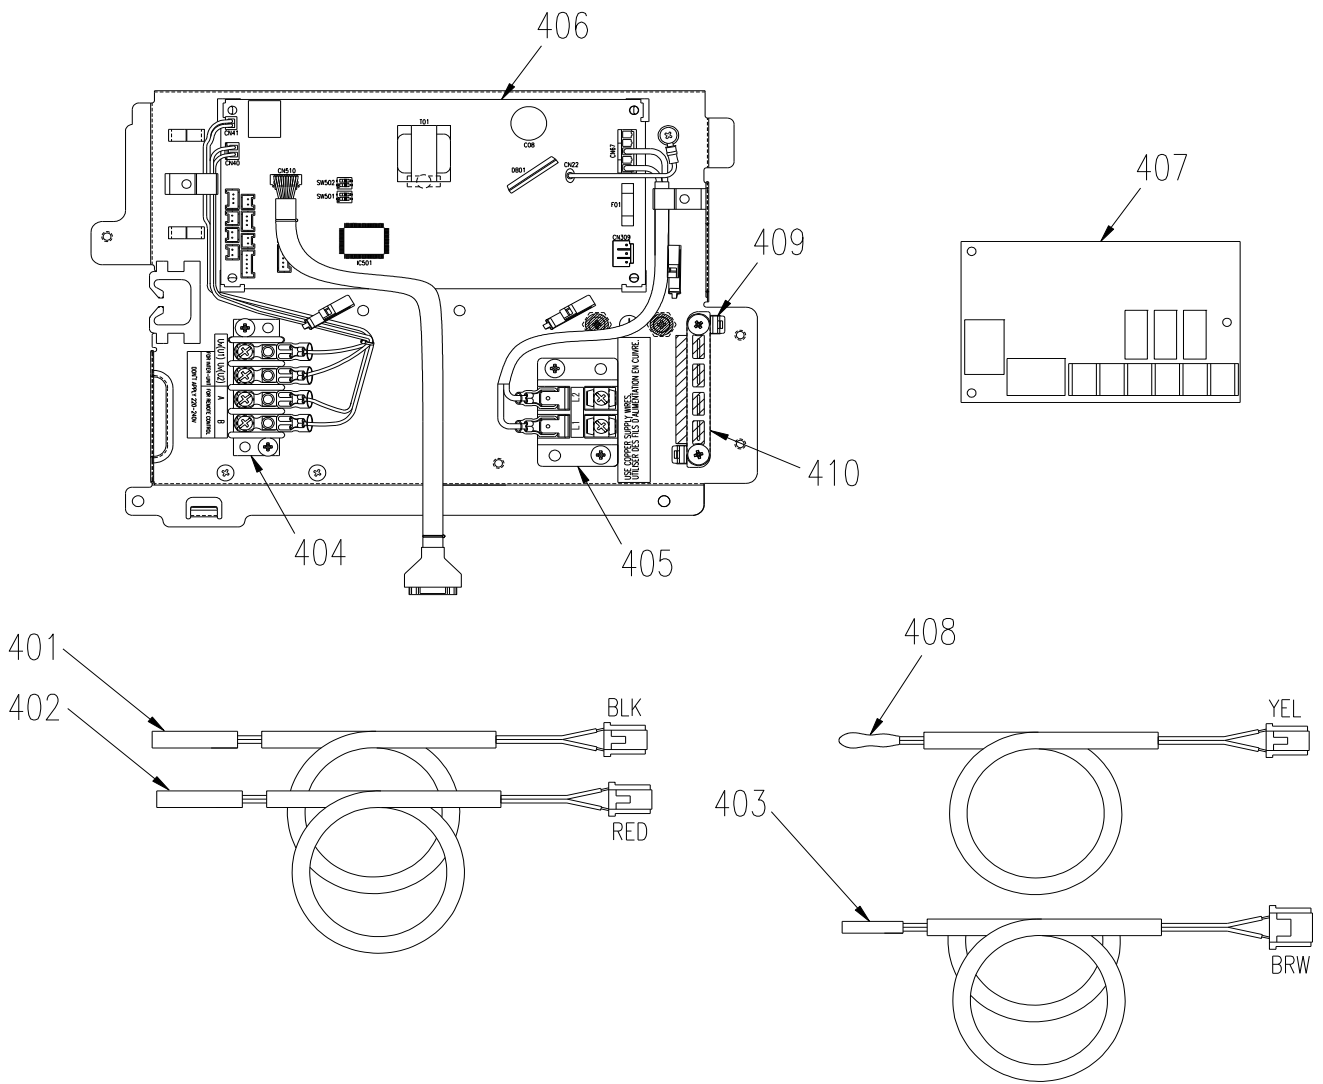

Location No.	Part No.	Description	Model name MMU-UB				
			0071MHP-UL	0091MHP-UL	0121MHP-UL	0151MHP-UL	0181MHP-UL
401	43T60605	TEMPERATURE SENSOR	1	1	1	1	1
402	43T50456	SENSOR,TC	1	1	1	1	1
403	43T50410	TC-SENSOR	1	1	1	1	1
404	43T60362	TERMINAL	1	1	1	1	1
405	43T60435	SERV-TERMINAL	1	1	1	1	1
406	43TNV644	PC BOARD ASSY (MCC-1797)	1	1	1	1	1
407	43459017	ASM-PCB(OP)	1	1	1	1	1
408	43T50455	SENSOR,TA	1	1	1	1	1
409	43T63348	CLAMP, DOWN	1	1	1	1	1
410	43T63349	CLAMP, UP	1	1	1	1	1

◆ Ceiling panel

RBC-UM21P-UL, RBC-UM21PB-UL

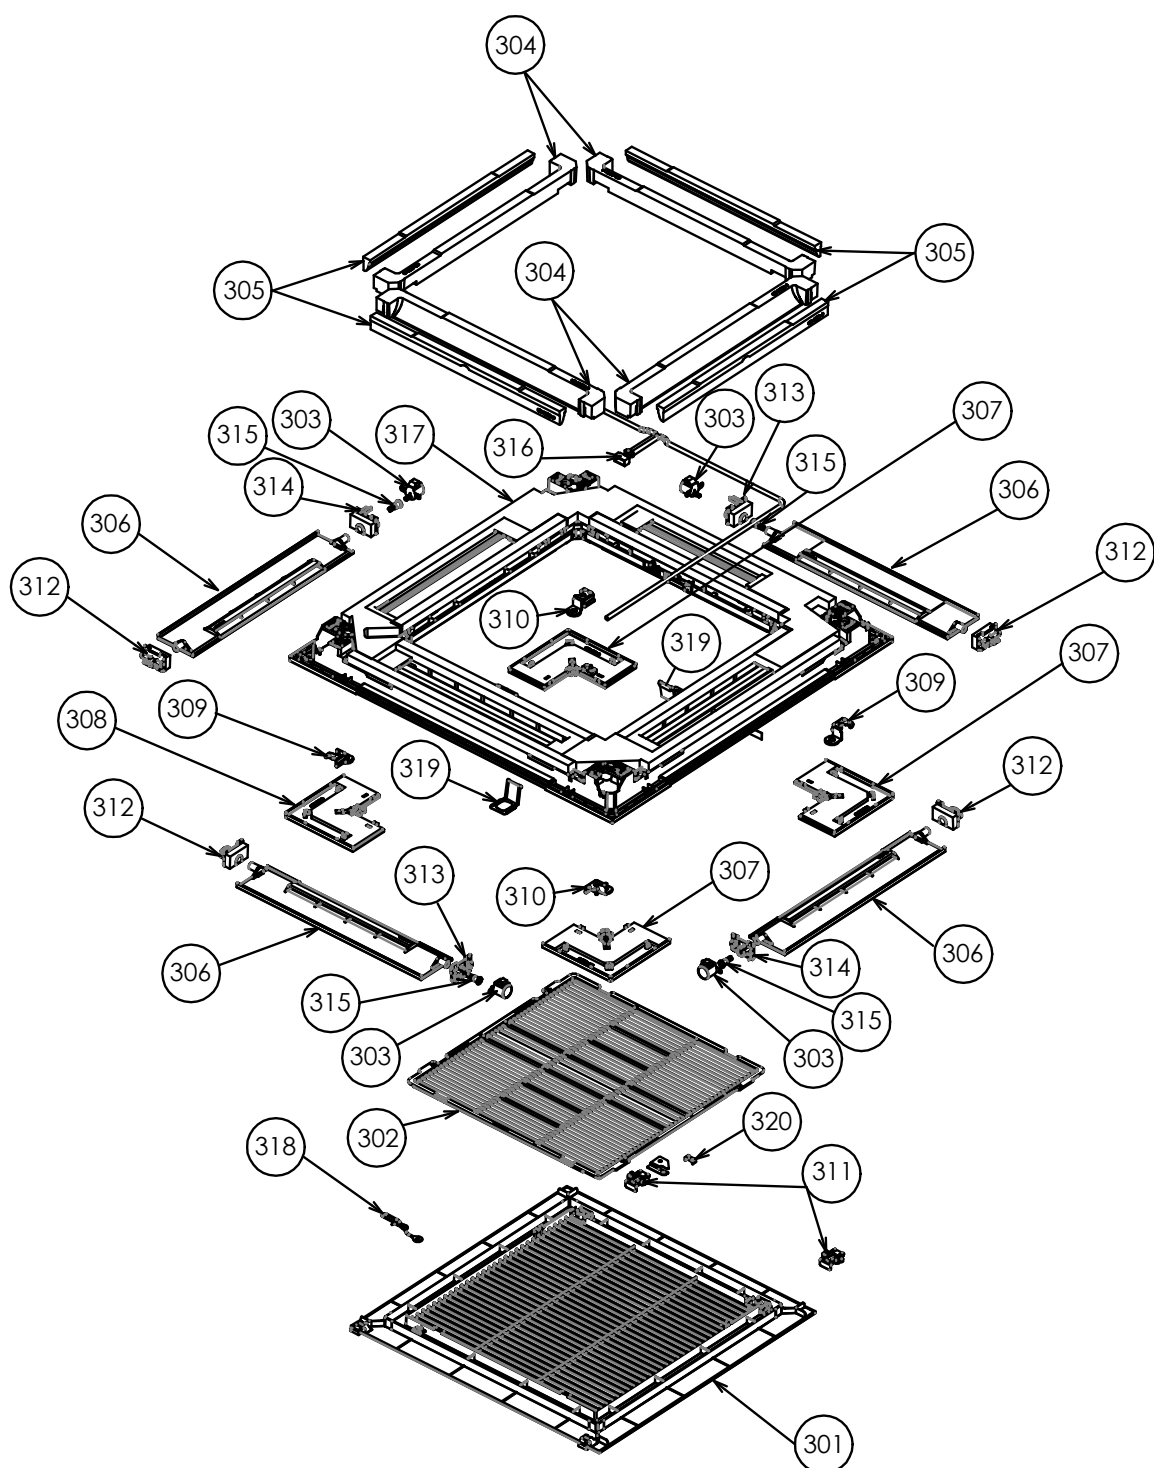

Location No.	Part No.	Description	Model name	
			RBC-UM21P-UL	RBC-UM21PB-UL
301	43T09659	AIR INLET GRILLE	1	-
301	43T09660	AIR INLET GRILLE	-	1
302	43T80373	AIR FILTER	1	1
303	43T21434	STEPPING-MOTOR	4	4
304	43T11352	AIR OUTLET FOAM A	4	4
305	43T11353	AIR OUTLET FOAM B	4	4
306	43T22416	HORIZONTAL LOUVER ASSY	4	-
306	43T22417	HORIZONTAL LOUVER ASSY	-	4
307	43T01361	PANEL COVER ASSY	3	-
307	43T01363	PANEL COVER ASSY	-	3
308	43T01369	PANEL COVER ASSY	1	-
308	43T01370	PANEL COVER ASSY	-	1
309	43T07349	PANEL FIXTURE PLATE A	2	2
310	43T07350	PANEL FIXTURE PLATE B	2	2
311	43T07354	HOOK-GRILLE	2	-
311	43T07355	HOOK-GRILLE	-	2
312	43T07351	AXIS COVER ASSY	4	4
313	43T07352	MOTOR FIXTURE ASSY	2	2
314	43T07353	MOTOR FIXTURE ASSY	2	2
315	43T07338	AXIS COVER	1	1
316	43T60632	MOTOR LEAD	1	1
317	43T00945	PANEL, INSULATION ASSY	1	-
317	43T00946	PANEL, INSULATION ASSY	-	1
318	43T19390	STRING	1	1
319	43T07347	HANGER FIXTURE	2	2
320	43T07348	GRILLE FIXTURE	1	1

WARNINGS ON REFRIGERANT LEAKAGE

Important

Check of Concentration Limit

The room in which the air conditioner is to be installed requires a design that in the event of refrigerant gas leaking out, its concentration will not exceed a set limit.

The refrigerant R454B which is used in the air conditioner is safe, without the toxicity or combustibility of ammonia, and is not restricted by laws to be imposed which protect the ozone layer. However, since it contains more than air, it poses the risk of suffocation if its concentration should rise excessively. Suffocation from leakage of R454B is almost non-existent. With the recent increase in the number of high concentration buildings, however, the installation of multi air conditioner systems is on the increase because of the need for effective use of floor space, individual control, energy conservation by curtailing heat and carrying power etc.

Most importantly, the multi air conditioner system is able to replenish a large amount of refrigerant compared with conventional individual air conditioners. If a single unit of the multi conditioner system is to be installed in a small room, select a suitable model and installation procedure so that if the refrigerant accidentally leaks out, its concentration does not reach the limit (and in the event of an emergency, measures can be made before injury can occur).

In a room where the concentration may exceed the limit, create an opening with adjacent rooms, or install mechanical ventilation combined with a gas leak detection device.


The concentration is as given below.

$$\frac{\text{Total amount of refrigerant (lbs/ft(kg))}}{\text{Min. volume of the indoor unit installed room (ft}^3\text{(m}^3\text{))}} \leq \text{Concentration limit (lbs/ft}^3\text{(kg/m}^3\text{))}$$

Refrigerant Concentration limit shall be in accordance with local regulation.

NOTE 1 :

If there are 2 or more refrigerating systems in a single refrigerating device, the amounts of refrigerant should be as charged in each independent device.

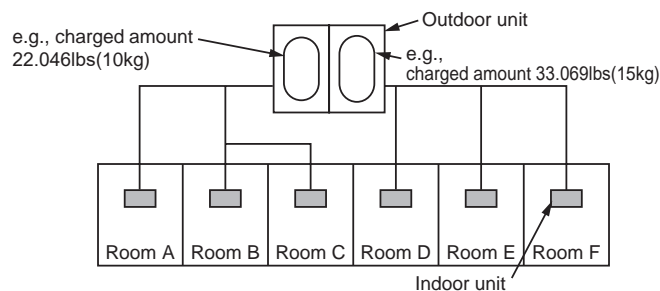

For the amount of charge in this example:


The possible amount of leaked refrigerant gas in rooms A, B and C is 22.046lbs (10kg).

The possible amount of leaked refrigerant gas in rooms D, E and F is 33.069lbs (15kg).


NOTE 2 :

The standards for minimum room volume are as follows.


- 1) No partition (shaded portion)

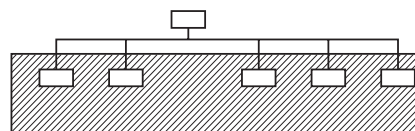

- 2) When there is an effective opening with the adjacent room for ventilation of leaking refrigerant gas (opening without a door, or an opening 0.15% or larger than the respective floor spaces at the top or bottom of the door).

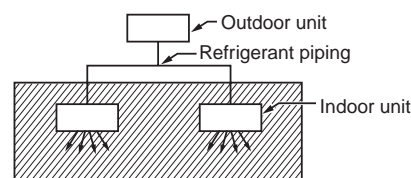

- 3) If an indoor unit is installed in each partitioned room and the refrigerant piping is interconnected, the smallest room of course becomes the object. But when a mechanical ventilation is installed interlocked with a gas leakage detector in the smallest room where the density limit is exceeded, the volume of the next smallest room becomes the object.

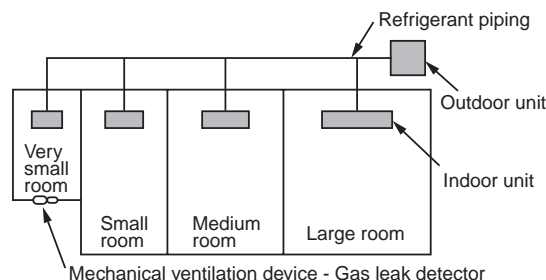

CARRIER AIR CONDITIONING (THAILAND) CO., LTD.

144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI,
AMPHUR MUANGPATHUMTHANI, PATHUMTHANI 12000, THAILAND