## 577C--K, Legacy™13.4 SEER2 Single-Packaged Air Conditioner and Gas Furnace System with Puron® (R-410A) Refrigerant Single Phase 2-5 Nominal Tons (Sizes 24-60) Three Phase 3-5 Nominal Tons (Sizes 36-60)



## **Installation Instructions**


**IMPORTANT:** Effective January 1, 2015, all split system and packaged air conditioners must be installed pursuant to applicable regional efficiency standards issued by the Department of Energy.

**NOTE:** Read the entire instruction manual before starting the installation.

**NOTE:** Installer: Make sure the Owner's Manual and Service Instructions are left with the unit after installation.

### **Table of Contents**

Safety Considerations 1
Introduction
Receiving and Installation
Pre-Start-up
Start-up
Maintenance
Troubleshooting
Start-up Checklist

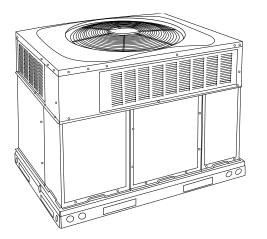

A09033

Fig. 1 – Unit 577C (Low NOx Model Available)

## **Safety Considerations**

Improper installation, adjustment, alteration, service maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury, or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Have a fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit. consult local building codes, the current editions of the National Fuel Gas Code (NFGC) NFPA 54/ANSI Z223.1, and the National Electrical Code (NEC) NFPA 70.

In Canada refer to the current editions of the National Standards of Canada CAN/CSA-B149.1 and 2 Natural Gas and Propane Installation codes, and Canadian Electrical Code CSA C22.1

Recognize safety information. This is the safety-alert symbol  $\triangle$ . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury. Understand these signal words: DAN-GER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies hazards which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

# WARNING

### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury and/or death.

Carbon Monoxide (CO) is a colorless, odorless, and tasteless poisonous gas that can be fatal when inhaled. Follow all installation, maintenance, and service instructions. See additional information below regarding the installation of a CO Alarm.

Most states is the USA and jurisdictions in Canada have laws that require the use of Carbon Monoxide (CO) alarms with fuel burning products. Examples of fuel burning products are furnaces, boilers, space heaters, generators, water heaters, stoves/ranges, clothes dryers, fireplaces, incinerators, automobiles, and other internal combustion engines. Even if there are no laws in your jurisdiction requiring a CO Alarm, it's highly recommended that whenever any fuel burning product is used in or around the home or business that the dwelling be equipped with a CO Alarm(s). The Consumer Product Safety Commission recommends the use of CO Alarm(s). The CO Alarm(s) must be installed, operated, and maintained according to the CO Alarm manufacturer's instructions. For more information about Carbon Monoxide, local laws, or to purchase a CO Alarm only, please visit the following website https://www.kidde.com

# WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death. Before installing or servicing system, always turn off main power to system and install lockout tag. There may be more than one disconnect switch. Turn off accessory heater power switch if applicable.

# WARNING

# FIRE, EXPLOSION, ELECTRICAL SHOCK AND CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or unit damage.

A qualified installer or agency must use only factory-authorized kits or accessories when modifying this product.

# WARNING

### FIRE, INJURY, OR DEATH HAZARD

Failure to follow this warning could result in property damage, personal injury, or death.

This unit was manufactured to operate with natural gas. When fuel supply is liquid propane gas (LP), this unit MUST be converted with a factory approved LP conversion kit. See rating plate for approved conversion kits.

# WARNING

# PERSONAL INJURY AND PROPERTY DAMAGE HAZARD

For continued performance, reliability, and safety, the only approved accessories and replacement parts are those specified by the equipment manufacturer. The use of non-manufacturer approved parts and accessories could invalidate the equipment limited warranty and result in fire risk, equipment malfunction, and failure. Please review manufacturer's instructions and replacement part catalogs available from your equipment supplier.

## Introduction

This unit (see Fig. 1) is a fully self-contained, combination Category I gas heating/electric cooling unit designed for outdoor installation (See Fig. 3 and Fig. 4 for unit dimensions). All unit sizes have return and discharge openings for both horizontal and downflow configurations, and are factory shipped with all downflow duct openings covered. Units may be installed either on a rooftop or on a cement slab. (See Fig. 5 for roof curb dimensions).

In gas heating mode, this unit is designed for a minimum continuous return-air temperature of 55°F (13°C) db and a maximum continuous return-air temperature of 80°F (27°C) db. Failure to follow these return-air temperature limits may affect reliability of heat exchangers, motors, and other components.

Models with a N in the 13th position of the model number are dedicated that are Low NOx units designed for California installations. These models meet the California maximum oxides of nitrogen (NOx) emissions requirements of 40 nanograms/joule or less as shipped from the factory and must be installed in California Air Quality Management Districts or any other regions in North America where a Low NOx rule exists.

NOTE: Low NOx requirements apply only to natural gas installations.

# **NOTICE**

If the unit gasketing or insulation must be replaced, ensure the material used is compliant with the two agency requirements listed.

- 1. Insulation and adhesives shall meet NFPA 90.1 requirements for flame spread and smoke generation.
- 2. Cabinet insulation shall meet ASHRAE Standard 62.2.

## **Receiving and Installation**

## Step 1 – Check Equipment Identify Unit

The unit model number and serial number are stamped on the unit information plate. Check this information against shipping papers.

### **Inspect Shipment**

Inspect for shipping damage before removing packaging materials. If unit appears to be damaged or is torn loose from its anchorage, have it examined by transportation inspectors before removal. Forward claim papers directly to transportation company. Manufacturer is not responsible for any damage incurred in transit. Check all items against shipping list. Immediately notify the nearest equipment distribution office if any item is missing. To prevent loss or damage, leave all parts in original packages until installation.

If the unit is to be mounted on a curb in a downflow application, review Step 9 to determine which method is to be used to remove the downflow panels before rigging and lifting into place. The panel removal process may require the unit to be on the ground.

## Step 2 – Provide Unit Support

For hurricane tie downs, contact distributor for details and PE (Professional Engineering) Certificate if required.

## Roof Curb

Install accessory roof curb in accordance with instructions shipped with curb (See Fig. 5). Install insulation, cant strips, roofing, and flashing. Ductwork must be attached to curb.

**IMPORTANT:** The gasketing of the unit to the roof curb is critical for a water tight seal. Install gasketing material supplied with the roof curb. Improperly applied gasketing also can result in air leaks and poor unit performance.

Curb should be level to within 1/4 in. (6 mm). This is necessary for unit drain to function properly. Refer to accessory roof curb installation instructions for additional information as required.

### Installation on older "G" series roof curbs.

Two accessory kits are available to aid in installing a new "G" series unit on an old "G" roof curb.

- 1. Accessory kit number CPADCURB001A00, (small chassis) and accessory kit number CPADCURB002A00, (large chassis) includes roof curb adapter and gaskets for the perimeter seal and duct openings. No additional modifications to the curb are required when using this kit.
- 2. An alternative to the adapter curb is to modify the existing curb by removing the outer horizontal flange and use accessory kit number CPGSKTKIT001A00 which includes spacer blocks (for easy alignment to existing curb) and gaskets for the perimeter seal and duct openings. This kit is used when existing curb is modified by removing outer horizontal flange.

# CAUTION

## UNITS/STRUCTURAL DAMAGE HAZARD


Failure to follow this caution may result in property damage.

Ensure there is sufficient clearance for saw blade when cutting the outer horizontal flange of the roof curb so there is no damage to the roof or flashing.

## **Slab Mount**

Place the unit on a solid, level pad that is at least 2 in. (51 mm) above grade. The pad should extend approximately 2 in. (51 mm) beyond the casing on all 4 sides of the unit. (See Fig. 2.) Do not secure the unit to the pad except when required by local codes.

Manufacturer reserves the right to change, at any time, specifications and designs without notice and without obligations.

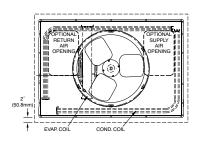

A07926

### Fig. 2 – Slab Mounting Details Step 3 – Field Fabricate Ductwork

Secure all ducts to roof curb and building structure on vertical discharge units. Do not connect ductwork to unit. For horizontal applications, unit is provided with flanges on the horizontal openings. All ductwork should be secured to the flanges. Insulate and weatherproof all external ductwork, joints, and roof openings with counter flashing and mastic in accordance with applicable codes.

Ducts passing through an unconditioned space must be insulated and covered with a vapor barrier.

If a plenum return is used on a vertical unit, the return should be ducted through the roof deck to comply with applicable fire codes.

Read unit rating plate for any required clearances around ductwork. Cabinet return-air static shall not exceed -.25 IN. W.C.

## Step 4 – Provide Clearances

**IMPORTANT:** The unit must be secured to the curb by installing screws through the bottom of the curb flange and into the unit base rails. When installing large base units onto the common curb, the screws must be installed before allowing the full weight of the unit to rest on the curb. A minimum of six screws are required for large base units. Failure to secure unit properly could result in an unstable unit. See Warning near Rigging/Lifting information and accessory curb instructions for more details.

The required minimum operating and service clearances are shown in Fig. 3 and Fig. 4. Adequate combustion, ventilation and condenser air must be provided.

**IMPORTANT:** Do not restrict outdoor airflow. An air restriction at either the outdoor-air inlet or the fan discharge may be detrimental to compressor life.

The condenser fan pulls air through the condenser coil and discharges it through the top grille. Be sure that the fan discharge does not recirculate to the condenser coil. Do not locate the unit in either a corner or under an overhead obstruction. The minimum clearance under a partial overhang (such as a normal house overhang) is 48-in. (1219 mm) above the unit top. The maximum horizontal extension of a partial overhang must not exceed 48-in. (1219 mm).

Do not place the unit where water, ice, or snow from an overhang or roof will damage or flood the unit. Do not install the unit on carpeting or other combustible materials. Slab-mounted units should be at least 2 in. (51 mm) above the highest expected water and runoff levels. Do not use unit if it has been under water.

## Step 5 – Rig and Place Unit

# WARNING

# PERSONAL INJURY OR PROPERTY DAMAGE HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

When installing the unit on a rooftop, be sure the roof will support the additional weight.

Rigging and handling of this equipment can be hazardous for many reasons due to the installation location (roofs, elevated structures, etc.).

Only trained, qualified crane operators and ground support staff should handle and install this equipment.

When working with this equipment, observe precautions in the literature, on tags, stickers, and labels attached to the equipment, and any other safety precautions that might apply.

Training for operators of the lifting equipment should include, but not be limited to, the following:

- 1. Application of the lifter to the load, and adjustment of the lifts to adapt to various sizes or kinds of loads.
- 2. Instruction in any special operation or precaution.
- 3. Condition of the load as it relates to operation of the lifting kit, such as balance, temperature, etc.

Follow all applicable safety codes. Wear safety shoes and work gloves.

### Inspection

Prior to initial use, and at monthly intervals, all rigging shackles, clevis pins, and straps should be visually inspected for any damage, evidence of wear, structural deformation, or cracks. Particular attention should be paid to excessive wear at hoist hooking points and load support areas. Materials showing any kind of wear in these areas must not be used and should be discarded.

## WARNING

### PROPERTY DAMAGE HAZARD

Failure to follow this warning could result in personal injury/death or property damage.

When straps are taut, the clevis should be a minimum of 36 in. (914 mm) above the unit top cover.

# WARNING

### UNIT FALLING HAZARD

Failure to follow this warning could result in personal injury or death. Never stand beneath rigged units or lift over people.

## Rigging/Lifting of Unit (See Fig. 6)

## WARNING

### UNIT FALLING HAZARD

Failure to follow this warning could result in personal injury or death. Large base units must be secured to common curb before allowing full weight of unit to rest on curb. Install screws through curb into unit base rails while rigging crane is still supporting unit.

Lifting holes are provided in base rails as shown in Fig. 3 and Fig. 4.

- 1. Leave top shipping skid on the unit for use as a spreader bar to prevent the rigging straps from damaging the unit. If the skid is not available, use a spreader bar of sufficient length to protect the unit from damage.
- 2. Attach shackles, clevis pins, and straps to the base rails of the unit. Be sure materials are rated to hold the weight of the unit (See Fig. 6).
- 3. Attach a clevis of sufficient strength in the middle of the straps. Adjust the clevis location to ensure unit is lifted level with the ground.

After the unit is placed on the roof curb or mounting pad, remove the top skid.

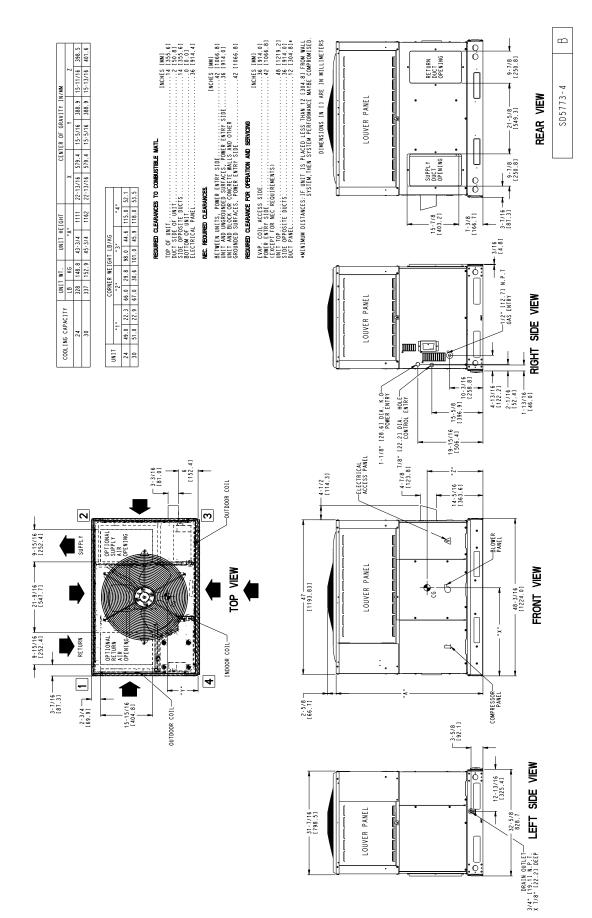
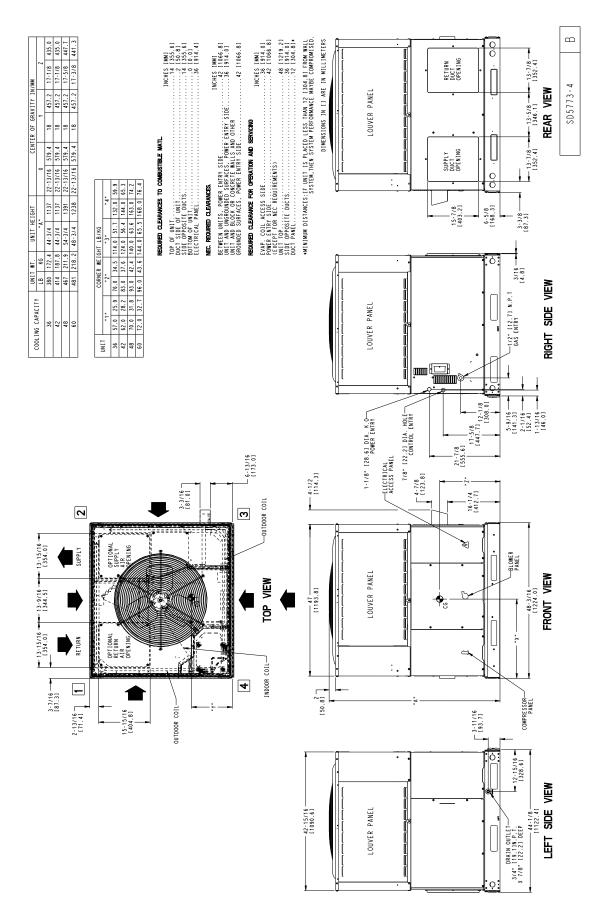



Fig. 3 – 577C 24-30 Dimensions

A230133



**Fig. 4 – 577C 36-60 Dimensions** 

A230134

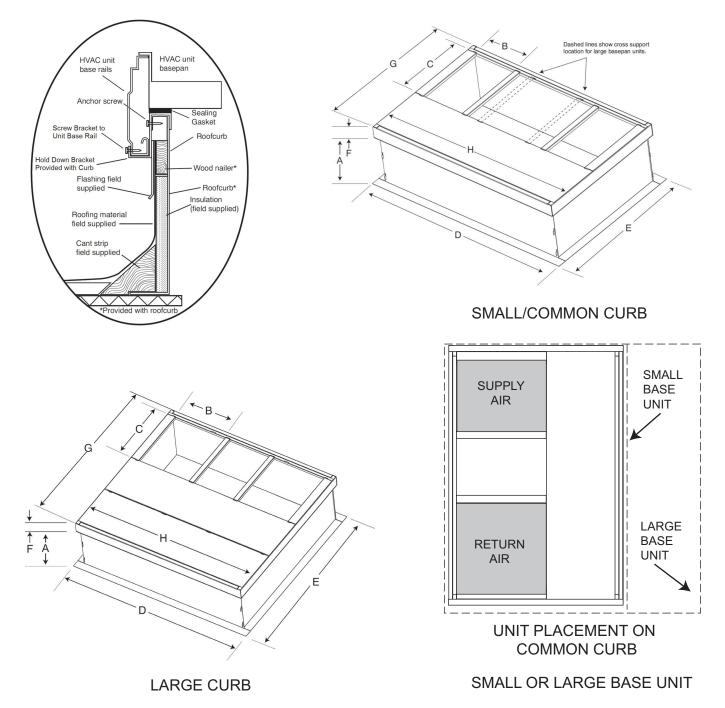

A180216

UNIT SIZE	CATALOG NUMBER	A IN. (mm)	B (small / common base) IN. (mm)*	B (large base) IN. (mm) <sup>*</sup>	C IN. (mm)	D IN. (mm)	E IN. (mm)	F IN. (mm)	G IN. (mm)	H IN. (mm)
Small or Large	CPRFCURB011B00	14 (356)	10 (254)	14 (356)	16	47.8	32.4 (822)	2.7 (69)	30.6 (778)	46.1 (1170)
Large	CPRFCURB013B00	14 (356)	14 (356)	14 (000)	(406)	(1214)	43.9 (1116)	2.7 (00)	42.2 (1072)	40.1 (1170)

\*. Part Number CPRCURB011B00 can be used on both small and large basepan units. The cross supports must be located based on whether the unit is a small basepan or a large basepan.

NOTES:

1. Roof curb must be set up for unit being installed.

2. Seal strip must be applied, as required, to unit being installed.

3. Roof curb is made of 16-gauge steel.


Attach ductwork to curb (flanges of duct rest on curb).
 Insulated panels: 1-in. (25.4 mm) thick fiberglass 1 lb. density.

### Fig. 5 – Roof Curb Dimensions

## ▲ CAUTION - NOTICE TO RIGGERS ▲ PRUDENCE - AVIS AUX MANIPULATEUR

ACCESS PANELS MUST BE IN PLACE WHEN RIGGING. PANNEAUX D'ACCES DOIT ÊTRE EN PLACE POUR MANIPULATION.

Use top skid as spreader bar. / Utiliser la palette du haut comme barre de répartition

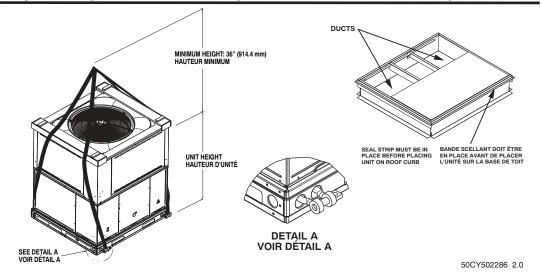

A09051

	SM	ALL CABI	NET					LAF	RGE CABI	NET			
Unit	2	4	3	0	Unit	3	6	4	2	4	8	6	0
Onit	lb	kg	lb	kg	Unit	lb	kg	lb	kg	lb	kg	lb	kg
Rigging Weight	339	154	348	158	Rigging Weight	394	179	428	194	481	218	495	225

NOTE: See dimensional drawing for corner weights.

Fig. 6 –	Unit Suggested	Rigging

7

		Table 1 –	Physical Dat	a				
UNIT SIZE	24040	24060	30040	30060	36060	36090	42060	42090
NOMINAL CAPACITY (ton)	2	2	2-1/2	2-1/2	3	3	3-1/2	3-1/2
SHIPPING WEIGHT Ib.	339	339	348	348	394	394	428	428
SHIPPING WEIGHT (kg)	154	154	158	158	179	179	194	194
COMPRESSOR / QUANTITY		<u> </u>	ļ	Scroll	/ 1	Į	ļ	ļ
REFRIGERANT (R-410A)								
Quantity lb.	6.4	6.4	6.0	6.0	5.75	5.75	6.0	6.0
Quantity (kg)	2.9	2.9	2.7	2.7	2.6	2.6	2.7	2.7
REFRIGERANT METERING DEVICE				Orific	e			
ORIFICE ID in. / mm	.059 / 1.5	.059 / 1.5	.063 / 1.60	.063 / 1.60	.070	/ 1.78	.073 / 1.85	.073 /1.85
OUTDOOR COIL								
RowsFins/in.	121	121	121	121	121	121	121	121
Face Area (sq ft)	11.9	11.9	13.6	13.6	13.6	13.6	13.6	13.6
OUTDOOR FAN								
Nominal CFM	2500	2500	3200	3200	3500	3500	3500	3500
Diameter in.	24	24	24	24	26	24	26	26
Diameter (mm)	609.6	609.6	609.6	609.6	660.4	609.6	660.4	660.4
Motor Hp (Rpm)	1/12 (810)	1/12 (810)	1/5 (810)	1/5 (810)	1/2 (810)	1/2 (810)	3/4 (810	3/4 (810)
INDOOR COIL								
RowsFins/in.	317	317	317	317	217	217	317	317
Face Area (sq ft)	3.7	3.7	3.7	3.7	5.6	5.6	4.7	4.7
INDOOR BLOWER								
Nominal Cooling Airflow (CFM)	750	750	950	950	1150	1150	1350	1350
Size in.	10x10	10x10	10x10	10x10	11x10	11x10	11x10	11x10
Size (mm.)	254x254	254x254	254x254	254x254	279.4x254	279.4x254	279.4x254	279.4x254
Motor HP (RPM)	1/2 (1050)	1/2 (1050)	1/2 (1050)	1/2 (1050)	3/4 (1000)	3/4 (1000)	1/2 (1050)	1/2 (1050)
FURNACE SECTION <sup>*</sup>								
Burner Orifice No. (QtyDrill Size)								
Natural Gas (Factory Installed)	244	344	244	344	344	338	344	338
Propane Gas	255	355	255	355	355	353	355	353
HIGH-PRESSURE SWITCH		I	I.	650 +/-	15			1
(psig) Cut-out Reset (Auto)				420 +/-	25			
LOSS-OF-CHARGE / LOW-PRESSURE								
SWITCH (Liquid Line) (psig) cut-out Reset (auto)				NA				
					1 each 2	24x16x1	1 each 2	24x14x1
RETURN-AIR FILTERS <sup>† ‡</sup>					610x4	06x25	610x3	56x25
Throwaway Size in.		2 each 2	0x12x1		24x	18x1	24x <sup>2</sup>	16x1
(mm)		508x30	5x25		610x4	57x25	610x4	06x25

Table 1 – Physical Data

\*. Based on altitude of 0 to 2000 ft (0-610 m).
†. Required filter sizes shown are based on the larger of the AHRI (Air Conditioning Heating and Refrigeration Institute) rated cooling airflow or the heating airflow velocity of 300 to 350 ft/minute for throwaway type. Air filter pressure drop for non-standard filters must not exceed 0.08 IN. W.C.
‡. If using accessory filter rack refer to the filter rack installation instructions for correct filter sizes and quantity

UNIT SIZE	48090	48115	48130	60090	60115	60130
NOMINAL CAPACITY (ton)	4	4	4	5	5	5
SHIPPING WEIGHT Ib	481	481	481	495	495	495
SHIPPING WEIGHT kg	218	218	218	225	225	225
COMPRESSOR / QUANTITY			Scro	oll / 1		ļ
REFRIGERANT (R-410A)						
Quantity Ib	9.0	9.0	9.0	10.75	10.75	10.75
Quantity (kg.)	4.1	4.1	4.1	4.9	4.9	4.9
REFRIGERANT METERING DEVICE		Orifice	1		TXV	1
ORIFICE ID in./mm		.080 / 2.03			N/A	
OUTDOOR COIL						
RowsFins/in.	121	121	121	221	221	221
Face Area (sq ft)	23.3	23.3	23.3	17.5	17.5	17.5
OUTDOOR FAN						
Nominal CFM	3500	3500	3500	3500	3500	3500
Diameter in.	26	26	26	26	26	26
Diameter (mm)	660.4	660.4	660.4	660.4	660.4	660.4
Motor Hp (Rpm)	1/5 (810)	1/5 (810)	1/5 (810)	1/5 (810)	1/5 (810)	1/5 (810)
INDOOR COIL						
RowsFins/in.	317	317	317	317	317	317
Face Area (sq ft)	5.6	5.6	5.6	5.6	5.6	5.6
INDOOR BLOWER						
Nominal Cooling Airflow (CFM)	1600	1600	1600	1750	1750	1750
Size in.	11x10	11x10	11x10	11x10	11x10	11x10
Size (mm)	279.4x254	279.4x254	279.4x254	279.4x254	279.4x254	279.4x254
Motor HP (RPM)	1.0 (1075)	1.0 (1075)	1.0 (1075)	1.0 (1040)	1.0 (1040)	1.0 (1040)
FURNACE SECTION <sup>*</sup>						
Burner Orifice No. (QtyDrill Size)						
Natural Gas (Factory Installed)	338	333	331	331	331	331
Propane Gas	353	351	349	349	349	349
HIGH-PRESSURE SWITCH		1	650 ·	+/- 15	1	1
(psig) Cut-out Reset (Auto)			420 -	+/- 25		
LOSS-OF CHARGE / LOW-PRESSURE						
SWITCH (Liquid Line) (psig) cut-out Reset			Ν	/A		
(auto)						
RETURN-AIR FILTERS Throwaway <sup>†</sup> <sup>‡</sup> in.			1 each 3	24x16x1		
mm			610x4	06x25		
			24x	18x1		
			610x4	57x25		

 Table 1—Physical Data (Continued)

\*. Based on altitude of 0 to 2000 ft (0-610 m).

t. Required filter sizes shown are based on the larger of the AHRI (Air Conditioning Heating and Refrigeration Institute) rated cooling airflow or the heating airflow velocity of

300 to 350 ft/minute for throwaway type. Air filter pressure drop for non-standard filters must not exceed 0.08 IN. W.C.

:. If using accessory filter rack refer to the filter rack installation instructions for correct filter sizes and quantity.


### Step 6 – Connect Condensate Drain

**NOTE:** When installing condensate drain connection be sure to comply with local codes and restrictions.

This unit disposes of condensate water through a 3/4 in. NPT fitting which exits through the base on the evaporator coil access side. See Fig. 3 and for location.

Condensate water can be drained directly onto the roof in rooftop installations (where permitted) or onto a gravel apron in ground level installations. Install a field-supplied 2-in. (51 mm) condensate trap at the end of condensate connection to ensure proper drainage. Make sure that the outlet of the trap is at least 1 in. (25 mm) lower than the drain-pan condensate connection to prevent the pan from overflowing (See Fig. 7). Prime the trap with water. When using a gravel apron, make sure it slopes away from the unit.

Connect a drain tube using a minimum of 3/4-in. PVC or 3/4-in. copper pipe (all field-supplied) at the outlet end of the 2-in. (51 mm) trap. Do not undersize the tube. Pitch the drain tube downward at a slope of at least 1-in. (25 mm) for every 10 ft (3.1 m) of horizontal run. Be sure to check the drain tube for leaks.

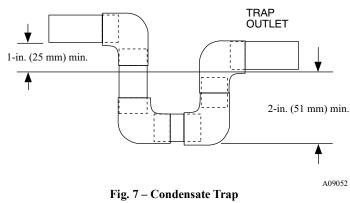

### Step 7 – Install Flue Hood

The flue assembly is secured and shipped in the return air duct. Remove duct cover to locate the assembly (See Fig. 9).

**NOTE:** Dedicated low NOx models MUST be installed in California Air Quality Management Districts where a Low NOx rule exists.

These models meet the California maximum oxides of nitrogen (NOx) emissions requirements of 40 nanograms/joule or less as shipped from the factory.

NOTE: Low NOx requirements apply only to natural gas installations.

# **WARNING**

### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death. The venting system is designed to ensure proper venting. The flue hood assembly must be installed as indicted in this section of the unit installation instructions.

Install the flue hood as follows:

- 1. This installation must conform with local building codes and with NFPA 54/ANSI Z223.1 National Fuel Gas Code (NFGC), (in Canada, CAN/CGA B149.1, and B149.2) latest revision. Refer to Provincial and local plumbing or wastewater codes and other applicable local codes.
- 2. Remove flue hood from shipping location (inside the return section of the blower compartment-see Fig. 9). Remove the return duct cover to locate the flue hood. Place flue hood assembly over flue panel. Orient screw holes in flue hood with holes in the flue panel.
- 3. Secure flue hood to flue panel by inserting a single screw on the top flange and the bottom flange of the hood.

### Step 8 – Install Gas Piping

The gas supply pipe enters the unit through the access hole provided. The gas connection to the unit is made to the 1/2-in. (12.7 mm) FPT gas inlet on the gas valve.

Install a gas supply line that runs to the heating section. Refer to the NFGC for gas pipe sizing. Do not use cast-iron pipe. It is recommended that a black iron pipe is used. Check the local utility for recommendations concerning existing lines. Size gas supply piping for 0.5 IN. W.C. maximum pressure drop. Never use pipe smaller than the 1/2-in. (12.7 mm) FPT gas inlet on the unit gas valve.

For natural gas applications, the gas pressure at unit gas connection must not be less than 4.0 IN. W.C. or greater than 13 IN. W.C. while the unit is operating. For propane applications, the gas pressure must not be less than 11.0 IN. W.C. or greater than 13 IN. W.C. at the unit connection.

A 1/8-in. (3.2 mm) NPT plugged tapping, accessible for test gauge connection, must be installed immediately upstream of the gas supply connection to the gas valve.

When installing the gas supply line, observe local codes pertaining to gas pipe installations. Refer to the NFPA 54/ANSI Z223.1 latest edition (in Canada, CAN/CGA B149.1).

### NOTE: In the state of Massachusetts:

1. Gas supply connections MUST be performed by a licensed plumber or gas fitter.

- 2. When flexible connectors are used, the maximum length shall not exceed 36 in. (915 mm).
- 3. When lever handle type manual equipment shutoff valves are used, they shall be T-handle valves.
- 4. The use of copper tubing for gas piping is NOT approved by the state of Massachusetts.

In the absence of local building codes, adhere to the following pertinent recommendations:

- 1. Avoid low spots in long runs of pipe. Grade all pipe 1/4 in. (6.35 mm) for every 15 ft (4.6 m) of length to prevent traps. Grade all horizontal runs downward to risers. Use risers to connect to heating section and to meter.
- 2. Protect all segments of piping system against physical and thermal damage. Support all piping with appropriate straps, hangers, etc. Use a minimum of one hanger every 6 ft (1.8 m). For pipe sizes larger than 1/2 in., follow recommendations of national codes.
- 3. Apply joint compound (pipe dope) sparingly and only to male threads of joint when making pipe connections. Use only pipe dope that is resistant to action of liquefied petroleum gases as specified by local and/or national codes. Never use Teflon tape.
- 4. Install sediment trap in riser leading to heating section (See Fig. 8). This drip leg functions as a trap for dirt and condensate.
- 5. Install an accessible, external, manual main shutoff valve in gas supply pipe within 6 ft (1.8 m) of heating section.
- 6. Install ground-joint union close to heating section between unit manual shutoff and external manual main shut-off valve.
- 7. Pressure test all gas piping in accordance with local and national plumbing and gas codes before connecting piping to unit.

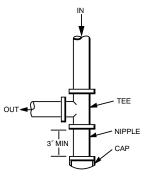


Fig. 8 – Sediment Trap

C99020

**NOTE:** Pressure test the gas supply system after the gas supply piping is connected to the gas valve. The supply piping must be disconnected from the gas valve during the testing of the piping systems when test pressure is in excess of 0.5 psig. Pressure test the gas supply piping system at pressures equal to or less than 0.5 psig. The unit heating section must be isolated from the gas piping system by closing the external main manual shutoff valve and slightly opening the ground-joint union.

Table 2 – Gas Flow Capacity\*

NOMINAL	INTERNAL						LEN	gth of	PIPE FT	(m) <sup>†</sup>					
IRON PIPE SIZE (IN.)	DIAMETER (IN.)	10 (3)	20 (6)	30 (9)	40 (12)	50 (15)	60 (18)	70 (21)	80 (24)	90 (27)	100 (30)	125 (38)	150 (46)	175 (53)	200 (61)
1/2	.622	175	120	97	82	73	66	61	57	53	50	44	40		—
3/4	.824	360	250	200	170	151	138	125	118	110	103	93	84	77	72
1	1.049	680	465	375	320	285	260	240	220	205	195	175	160	145	135
1-1/4	1.380	1400	950	770	600	580	530	490	460	430	400	360	325	300	280
1-1/2	1.610	2100	1460	1180	990	900	810	750	690	650	620	550	500	460	430

\*. Capacity of pipe in cu ft of gas per hr for gas pressure of 0.5 psig or less. Pressure drop of 0.5-IN. W.C. (based on a 0.60 specific gravity gas). Refer to Table 2 and National Fuel Gas Code NFPA 54/ANSI Z223.1.

This length includes an ordinary number of fittings.

# WARNING

### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

- Connect gas pipe to unit using a backup wrench to avoid damaging gas controls.
- Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.
- Use proper length of pipe to avoid stress on gas control manifold.
- If a flexible connector is required or allowed by authority having jurisdiction, black iron pipe shall be installed at furnace gas valve and extend a minimum of 2 in. (51 mm) outside furnace casing.
- If codes allow a flexible connector, always use a new connector.
   Do not use a connector which has previously serviced another gas appliance.
- Check for gas leaks at the field-installed and factory-installed gas lines after all piping connections have been completed. Use a commercially available soap solution (or method specified by local codes and/or regulations).

### Step 9 – Install Duct Connections

The unit has duct flanges on the supply- and return-air openings on the side and bottom of the unit. For downshot applications, the ductwork connects to the roof curb (See Fig. 3 and Fig. 4 for connection sizes and locations).

# Configuring Units for Downflow (Vertical) Discharge

## WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death. Before installing or servicing system, always turn off main power to system and install lockout tag. There may be more than one disconnect switch.

- 1. Open all electrical disconnects before starting any service work.
- 2. Remove horizontal (metal) duct covers to access vertical (downflow) discharge duct knockouts in unit basepan. (See Fig. 9.)

# CAUTION

### PROPERTY DAMAGE HAZARD

Failure to follow this caution may result in property damage.


Collect ALL screws that were removed. Do not leave screws on rooftop as permanent damage to the roof may occur.

- 3. For single-phase models only, on the discharge side only, remove the insulation covering the downshot (plastic) knockout. Insulation is held in place with aluminum tape. Please note that large chassis units have 2 pieces of insulation, and only the piece over the downshot knockout needs to be removed. Discard insulation.
- 4. To remove the downshot (plastic) knockouts for both supply and returns, break front and right side connecting tabs with a

screwdriver and hammer. Push cover down to break rear and left side tabs. These plastic knockouts are held in place with tabs similar to an electrical knockout. Discard plastic knockout covers.


- 5. Set unit on roof curb.
- 6. Verify that the downshot ducts are aligned with the downshot knockout areas.
- 7. Re-install horizontal (metal) covers as needed to seal unit. Ensure openings are air and watertight.

**NOTE:** The design and installation of the duct system must be in accordance with the standards of the NFPA for installation of nonresidence-type air conditioning and ventilating systems, NFPA 90A or residence-type, NFPA 90B; and/or local codes and ordinances.

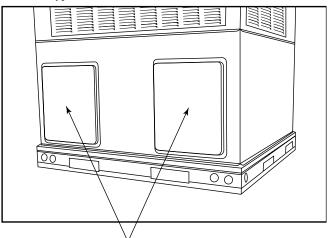

Horizontal Duct Covers

A09076

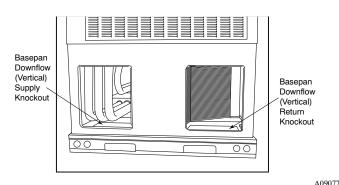

### Fig. 9 – Supply and Return Duct Opening

Adhere to the following criteria when selecting, sizing, and installing the duct system:

- 1. Units are shipped for horizontal duct installation (by removing duct covers).
- 2. Select and size ductwork, supply-air registers, and return-air grilles according to American Society of Heating, Refrigeration and Air Conditioning Engineers (ASHRAE) recommendations.
- 3. Use flexible transition between rigid ductwork and unit to prevent transmission of vibration. The transition may be screwed or bolted to duct flanges. Use suitable gaskets to ensure weather-tight and airtight seal.
- 4. All units must have field-supplied filters or accessory filter rack installed in the return-air side of the unit. Recommended sizes for filters are shown in Table 1.
- 5. Size all ductwork for maximum required airflow (either heating or cooling) for unit being installed. Avoid abrupt duct size increases or decreases or performance may be affected.
- 6. Adequately insulate and weatherproof all ductwork located outdoors. Insulate ducts passing through unconditioned space, and

use vapor barrier in accordance with latest issue of Sheet Metal and Air Conditioning Contractors National Association (SMACNA) and Air Conditioning Contractors of America (ACCA) minimum installation standards for heating and air conditioning systems. Secure all ducts to building structure.

7. Flash, weatherproof, and vibration isolate all openings in building structure in accordance with local codes and good building practices.

Step 10 – Install Electrical Connections

## WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death. The unit cabinet must have an uninterrupted, unbroken electrical ground. This ground may consist of an electrical wire connected to the unit ground screw in the control compartment, or conduit approved for electrical ground when installed in accordance with NFPA 70 (NEC) (latest edition) (in Canada, Canadian Electrical Code CSA C22.1) and local electrical codes.

# **CAUTION**

### UNIT COMPONENT DAMAGE HAZARD

Failure to follow this caution may result in damage to the unit being installed.

- Make all electrical connections in accordance with NFPA 70 (NEC) (latest edition) and local electrical codes governing such wiring. In Canada, all electrical connections must be in accordance with CSA standard C22.1 Canadian Electrical Code Part 1 and applicable local codes. Refer to unit wiring diagram.
- 2. Use only copper conductor for connections between field-supplied electrical disconnect switch and unit. DO NOT USE ALUMINUM WIRE.
- 3. Be sure that high-voltage power to unit is within operating voltage range indicated on unit rating plate. On 3-phase units, ensure phases are balanced within 2 percent. Consult local power company for correction of improper voltage and/or phase imbalance.
- Insulate low-voltage wires for highest voltage contained within conduit when low-voltage control wires are in same conduit as high-voltage wires.
- 5. Do not damage internal components when drilling through any panel to mount electrical hardware, conduit, etc.
- Route field power supply(s) away from areas that could be damaged by lawn and garden equipment or other accidental damage.

### **High-Voltage Connections**

When routing power leads into unit, use only copper wire between disconnect and unit. The high voltage leads should be in a conduit until they enter the duct panel; conduit termination at the duct panel must be watertight.

The unit must have a separate electrical service with a field-supplied, waterproof disconnect switch mounted at, or within sight from, the unit. Refer to the unit rating plate, NEC and local codes for maximum fuse/circuit breaker size and minimum circuit amps (ampacity) for wire sizing.

The field-supplied disconnect switch box may be mounted on the unit over the high-voltage inlet hole when the standard power and low-voltage entry points are used (See Fig. 3 and Fig. 4 for acceptable location).

**NOTE:** Field supplied disconnect switch box should be positioned so that it does not cover up any of the unit gas combustion supply air louvers.

See unit wiring label (Fig. 14 - Fig. 19) and Fig. 10 for reference when making high voltage connections. Proceed as follows to complete the high-voltage connections to the unit.

### Single phase units:

- 1. Run the high-voltage (L1, L2) and ground lead into the control box.
- 2. Connect ground lead to chassis ground connection.
- 3. Locate the black and yellow wires connected to the line side of the contactor (if equipped).
- 4. Connect field L1 to black wire on connection 11 of the compressor contactor.
- 5. Connect field wire L2 to yellow wire on connection 23 of the compressor contactor.

### Three-phase units:

- 1. Run the high-voltage (L1, L2, L3) and ground lead into the control box.
- 2. Connect ground lead to chassis ground connection.
- 3. Locate the black and yellow wires connected to the line side of the contactor (if equipped).
- 4. Connect field L1 to black wire on connection 11 of the compressor contactor.
- 5. Connect field wire L3 to yellow wire on connection 13 of the compressor contactor.
- 6. Connect field wire L2 to blue wire from compressor.

### **Special Procedures for 208-v Operation**

# WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death. Make sure the power supply to the unit is switched OFF and install lockout tag before making any wiring changes. With disconnect switch open, move black wire from transformer (3/16 in. [4.8mm]) terminal marked 230 to terminal marked 208. This retaps transformer to primary voltage of 208 vac.

# WARNING

### ELECTRICAL SHOCK FIRE/EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death and property damage.

Before making any wiring changes, make sure the gas supply is switch off first. *Then* switch off the power supply to the unit and install lockout tag.

## **Control Voltage Connections**


Do not use any type of power-stealing thermostat. Unit control problems may result.

Use no. 18 American Wire Gage (AWG) color-coded, insulated (35°C minimum) wires to make the control voltage connections between the thermostat and the unit. If the thermostat is located more than 100 ft (30.5 m) from the unit (as measured along the control voltage wires), use no. 16 AWG color-coded, insulated (35°C minimum) wires.

## **Standard Connection**

Run the low-voltage leads from the thermostat, through the inlet hole, and into unit low-voltage splice box.

Locate six (seven for 3-phase) 18-gage wires leaving control box. These low-voltage connection leads can be identified by the colors red, green, yellow, brown, blue, and white (See Fig. 10). A gray wire is standard on 3-phase units for connection to an economizer. Ensure the leads are long enough to be routed into the low-voltage splice box (located below right side of control box). Route leads through hole in bottom of control box and make low-voltage connections (See Fig. 10). Secure all cut wires, so that they do not interfere with operation of unit.

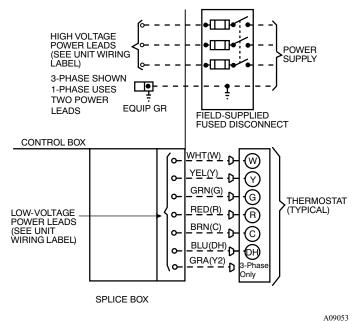

## Fig. 10 – High- and Control-Voltage Connections Heat Anticipator Setting (Electro-Mechanical Thermostats only)

The room thermostat heat anticipator must be properly adjusted to ensure proper heating performance. Set the heat anticipator, using an ammeter between the W and R terminals to determine the exact required setting.

**NOTE:** For thermostat selection purposes, use 0.18 amp for the approximate required setting. Failure to make a proper heat anticipator adjustment will result in improper operation, discomfort to the occupants of the conditioned space, and inefficient energy utilization; however, the required setting may be changed slightly to provide a greater degree of comfort for a particular installation.

### **Transformer Protection**

The transformer is of the energy-limiting type, however a direct short will likely blow a secondary fuse. If an overload or short is present, correct overload condition and check for blown fuse on Indoor Fan board or Integrated Gas Controller. Replace fuse as required with correct size and rating.

## Pre-Start-up

## WARNING

# ENVIRONMENTAL, FIRE, EXPLOSION, ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

- 1. Follow recognized safety practices and wear protective goggles when checking or servicing refrigerant system.
- 2. Do not operate compressor or provide any electric power to unit unless compressor plug is in place and secured.
- 3. Do not remove compressor plug until all electrical sources are disconnected and tagged.
- 4. Relieve and recover all refrigerant from system before touching or disturbing compressor plug if refrigerant leak is suspected around compressor terminals.
- 5. Never attempt to repair soldered connection while refrigerant system is under pressure.
- 6. Do not use torch to remove any component. System contains oil and refrigerant under pressure.

To remove a component, wear protective goggles and proceed as follows:

- -Shut off electrical power to unit and install lockout tag.
- -Relieve and reclaim all refrigerant from system using both high- and low-pressure ports.

-Cut component connecting tubing with tubing cutter and remove component from unit.

-Carefully unsweat remaining tubing stubs when necessary. Oil can ignite when exposed to torch flame.

Use the Start-Up Checklist supplied at the end of this book and proceed as follows to inspect and prepare the unit for initial start-up:

- 1. Remove access panels (see Fig. 22).
- 2. Read and follow instructions on all DANGER, WARNING, CAUTION, and INFORMATION labels attached to, or shipped with unit.
- 3. Make the following inspections:
  - a. Inspect for shipping and handling damage, such as broken lines, loose parts, disconnected wires, etc.
  - b. Inspect all field- and factory-wiring connections. Be sure that connections are completed and tight.
  - c. Ensure wires do not touch refrigerant tubing or sharp sheet metal edges.
  - d. Inspect coil fins. If damaged during shipping and handling, carefully straighten fins with a fin comb.

# WARNING

### FIRE, EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Do not purge gas supply into the combustion chamber. Do not use a match or other open flame to check for gas leaks.

Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

- 4. Verify the following conditions:
  - a. Make sure gas line is free of air. Before lighting the unit for the first time, perform the following with the gas valve in the OFF position:

**NOTE:** If the gas supply pipe was not purged before connecting the unit, it will be full of air. It is recommended that the ground joint union be loosened, and the supply line be allowed to purge until the odor of gas is detected. Never purge gas lines into a combustion chamber. Immediately upon detection of gas odor, retighten the union. Allow 5 minutes to elapse, then light unit.

- b. Ensure fan hub is positioned correctly with respect to motor housing.
- c. Make sure that air filter(s) is in place.
- d. Make sure that condensate drain trap is filled with water to ensure proper drainage.
- e. Make sure that all tools and miscellaneous loose parts have been removed.

## Start-up


# ! WARNING

### FIRE, INJURY, OR DEATH HAZARD

Failure to follow this warning could result in property damage, personal injury, or death.

Do not bypass any of the safety controls in the unit, including but not limited to the main limit switch, rollout or burner rollout switch, and pressure switch/pressure transducer.

## Step 1 – Check for Refrigerant Leaks

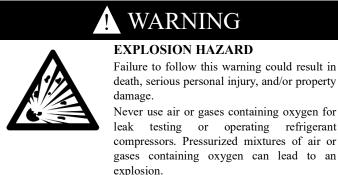

Proceed as follows to locate and repair a refrigerant leak and to charge the unit:

- 1. Locate leak and make sure that refrigerant system pressure has been relieved and reclaimed from both high- and low-pressure ports.
- 2. Repair leak following accepted practices.

**NOTE:** Install a filter drier whenever the system has been opened for repair.

- 3. Add a small charge of Puron (R-410A) refrigerant vapor to system and leak-test unit.
- 4. Recover refrigerant from refrigerant system and evacuate to 500 microns if no additional leaks are found.
- 5. Charge unit with Puron (R-410A) refrigerant, using an accurate scale. Refer to unit rating plate for required charge.

### Step 2 – Start-up Heating and Make Adjustments

Complete the required procedures given in the Pre-Start-Up section before starting the unit. Do not jumper any safety devices when operating the unit. Make sure that burner orifices are properly aligned. Unstable operation my occur when the burner orifices in the manifold are misaligned. Follow the lighting instructions on the heating section operation label (located on the inside of the control access panel) to start the heating section.

**NOTE:** Make sure that gas supply has been purged, and that all gas piping has been checked for leaks.


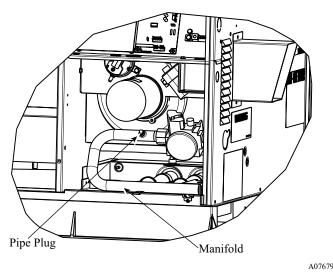


Fig. 11 – Burner Assembly

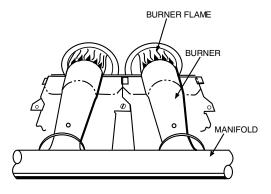

C99021

### Fig. 12 – Monoport Burner

### **Check Heating Control**

Start and check the unit for proper heating control operation as follows (see furnace lighting instructions located on the inside of the control access panel):

- 1. Place room thermostat SYSTEM switch in the HEAT position and the fan switch is placed in AUTO position.
- 2. Set the heating temperature control of the thermostat above room temperature.
- 3. The induced-draft motor will start.
- 4. On a call for heating, the main burner should light within 5 sec. of the spark being energized. If the burners do not light, there is a 22-sec. delay before another 5-sec. try. If the burners still do not light, this sequence is repeated. For 3-phase models if the burners do not light within 15 minutes from the initial call for heat, there is a lockout. For single phase models, if the burners do not light on the 4th ignition attempt, there is a lockout. To reset the control, break the 24-v power to W.
- 5. For 3-phase models the evaporator fan will turn on 45 sec. after the flame has been established. The evaporator fan will turn off 45 sec. after the thermostat has been satisfied. For single phase models the evaporator fan will turn on 30 sec. after the flame has been established. The evaporator fan will turn off 90 sec. After the thermostat has been satisfied. Please note that the integrated gas

unit controller (IGC) has the capability to automatically reduce the evaporator "ON" delay and increase the evaporator "OFF" delay in the event of high duct static and/or partially-clogged filter.

### **Check Gas Input**

Check gas input and manifold pressure after unit start-up (See Table 5). If adjustment is required proceed as follows:

• The rated gas inputs shown in Table 5 are for altitudes from sea level to 2000 ft (610 m) above sea level. These inputs are based on natural gas with a heating value of 1025 Btu/ft<sup>3</sup> at 0.60 specific gravity, or propane gas with a heating value of 2500 Btu/ft<sup>3</sup> at 1.5 specific gravity.

### IN THE U.S.A.:

The input rating for altitudes above 2,000 ft (610 m) must be reduced by 4% for each 1,000 ft (305 m) above see level.

For installations below 2,000 ft (610 m), refer to the unit rating plate.

For installations above 2,000 ft (610 m). multiply the input on the rating plate by the derate multiplier in Table 3 for correct input rate.

Altitude ft (m)	Percent of Derate	Derate Multiplier Factor <sup>†</sup>
0-2000 (0-610)	0	1.00
2001-3000 <sup>*</sup> (610-914)	8-12	0.90
3001-4000 (915-1219)	12-16	0.86
4001-5000 (1220-1524)	16-20	0.82
5001-6000 (1524 -1829)	20-24	0.78
6001-7000 (1829-2134)	24-28	0.74
7001-8000 (2134-2438)	28-32	0.70
8001-9000 (2439-2743)	32-36	0.66
9001-10,000 (2744-3048)	36-40	0.62

Table 3 – Altitude Derate Multiplier for U.S.A.\*

\*. In Canada see Canadian Altitude Adjustment.

†. Derate multiplier factors are based on midpoint altitude for altitude range.

### IN CANADA:

The input rating for altitudes from 2,000 (610 m) to 4,500 ft (1372 m) above sea level must be derated 10% by an authorized Gas Conversion Station or Dealer.

### EXAMPLE:

90,000 Btu/hr Input Furnace Installed at 4300 ft.

Furnace Input Rate at		Derate Multiplier		Furnace Input Rate at
Sea Level		Factor		Installation Altitude
90,000	х	0.90	=	81,000

When the gas supply being used has a different heating value or specific gravity, refer to national and local codes, or contact your distributor to determine the required orifice size.

# **CAUTION**

### UNIT DAMAGE HAZARD

Failure to follow this caution may result in reduced unit and/or component life.

Do Not redrill an orifice. Improper drilling (burrs, out-of-round holes, etc.) can cause excessive burner noise and misdirection of burner flame. If orifice hole appears damaged or it is suspected to have been redrilled, check orifice hole with a numbered drill bit of correct size.

## **Adjust Gas Input**

The gas input to the unit is determined by measuring the gas flow at the meter or by measuring the manifold pressure. Measuring the gas flow at the meter is recommended for natural gas units. The manifold pressure must be measured to determine the input of propane gas units.

### Measure Gas Flow (Natural Gas Units)

Minor adjustment to the gas flow can be made by changing the manifold pressure. The manifold pressure must be maintained between 3.2 and 3.8 IN. W.C.

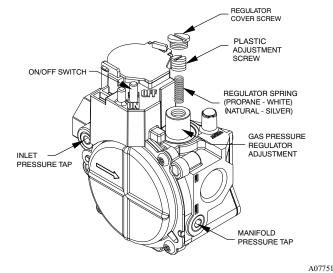


Fig. 13 – Single-Stage Gas Valve

If larger adjustments are required, change main burner orifices following the recommendations of national and local codes.

**NOTE:** All other appliances that use the same meter must be turned off when gas flow is measured at the meter.

Proceed as follows:

- 1. Turn off gas supply to unit.
- 2. Remove pipe plug on manifold (See Fig. 11) and connect manometer. Turn on gas supply to unit.
- 3. Record number of seconds for gas meter test dial to make one revolution.
- 4. Divide number of seconds in Step 3 into 3600 (number of seconds in one hr).
- 5. Multiply result of Step 4 by the number of cubic feet (cu ft) shown for one revolution of test dial to obtain cubic feet (cu ft) of gas flow per hour.
- 6. Multiply result of Step 5 by Btu heating value of gas to obtain total measured input in Btuh. Compare this value with heating input shown in Table 5 (Consult the local gas supplier if the heating value of gas is not known).

EXAMPLE: Assume that the size of test dial is 1 cu ft, one revolution takes 32 sec, and the heating value of the gas is  $1050 \text{ Btu/ft}^3$ . Proceed as follows:

- 1. 32 sec. to complete one revolution.
- 2. 3600, 32 = 112.5.
- 3. 112.5 x 1 =112.5 ft3 of gas flow/hr.
- 4. 112.5 x 1050 = 118,125 Btuh input.

If the desired gas input is 115,000 Btuh, only a minor change in the manifold pressure is required.

Observe manifold pressure and proceed as follows to adjust gas input:

- 1. Remove regulator cover screw over plastic adjustment screw on gas valve (See Fig. 13).
- 2. Turn plastic adjustment screw clockwise to increase gas input, or turn plastic adjustment screw counterclockwise to decrease input (See Fig. 13). Manifold pressure must be between 3.2 and 3.8 IN. WC.

## WARNING

### FIRE AND UNIT DAMAGE HAZARD

Failure to follow this warning could result in personal injury or death and/or property damage.

Unsafe operation of the unit may result if manifold pressure is outside this range.

- 3. Replace regulator cover screw on gas valve (See Fig. 13).
- 4. Turn off gas supply to unit. Remove manometer from pressure tap and replace pipe plug on gas valve. (See Fig. 11.) Turn on gas to unit and check for leaks.

### **Measure Manifold Pressure (Propane Units)**

Refer to propane kit installation instructions for properly checking gas input.

NOTE: For installations below 2,000 ft (610 m), refer to the unit rating plate for proper propane conversion kit. For installations above 2,000 ft (610 m), contact your distributor for proper propane conversion kit.

### **Check Burner Flame**

With control access panel (see Fig. 22) removed, observe the unit heating operation. Watch the burner flames to see if they are light blue and soft in appearance, and that the flames are approximately the same for each burner. Propane will have blue flame (See Fig. 12). Refer to the Maintenance section for information on burner removal.

	Table 4 – High Altitude Compensation, Natural Gas - All Models									
Nameplate	Rated	Heating Input (Btu/hr), Na	tural Gas at Installation Altitude Above Sea Level, U.S.A.*							
Input (Btu/hr)	0 to 2000 ft (0-610 m)	2001 to 3000 ft* (611 to 914 m)	3001 to 4000 ft (915 to 1219 m)	4001 to 5000 ft (1220 to 1524 m)	5001 to 6000 ft (1524 to 1829 m)					
40000	40000	36000	34400	32800	31200					
60000	60000	54000	51600	49200	46800					
90000	90000	81000	77400	73800	70200					
115000	115000	103500	98900	94300	89700					
127000	127000	114300	109200	104100	99100					

#### **T 11** 4 TT. 1 A 14.4


In the U.S.A., the input rating for altitudes above 2000 ft (610m) must be reduced by 4% for each 1000 ft (305 m) above sea level. In Canada, the input rating for altitudes from 2001 to 4500 ft (611 to 1372 m) above sea level must be derated by 10% by an authorized gas conversion station or dealer. For Canadian Installations from 2000 to 4500 ft (610-1372 m), use U.S.A. column 2001 to 3000 ft (611 to 914 m).

		G	AS SUPPLY PRE	ESSURE (IN. W.C	C.)	MANIFOLD	PRESSURE
HEATING INPUT (BTUH)	NUMBER OF ORIFICES	Nati	ural <sup>*</sup>	Prop	ane <sup>*†</sup>	(IN.	W.C.)
(Bron)		Min	Max	Min	Max	Natural{	Propane*†
40,000	2	4.0	13.0	11.0	13.0	3.2~3.8	10.0~11.0
60,000	3	4.0	13.0	11.0	13.0	3.2~3.8	10.0~11.0
90,000	3	4.5	13.0	11.0	13.0	3.2~3.8	10.0~11.0
115,000	3	4.5	13.0	11.0	13.0	3.2~3.8	10.0~11.0
130,000	3	4.5	13.0	11.0	13.0	3.2~3.8	10.0~11.0

### Table 5 – Heating Inputs

Based on altitudes from sea level to 2000 ft (610 m) above sea level. In U.S.A. for altitudes above 2000 ft (610 m), reduce input rating 4 percent for each additional 1000 ft (305 m) above sea level. In Canada, from 2000 ft (610 m) above sea level to 4500 ft (1372 m) above sea level, derate the unit 10 percent.

When a unit is converted to propane, different size orifices must be used. See separate, natural-to-propane conversion kit instructions.



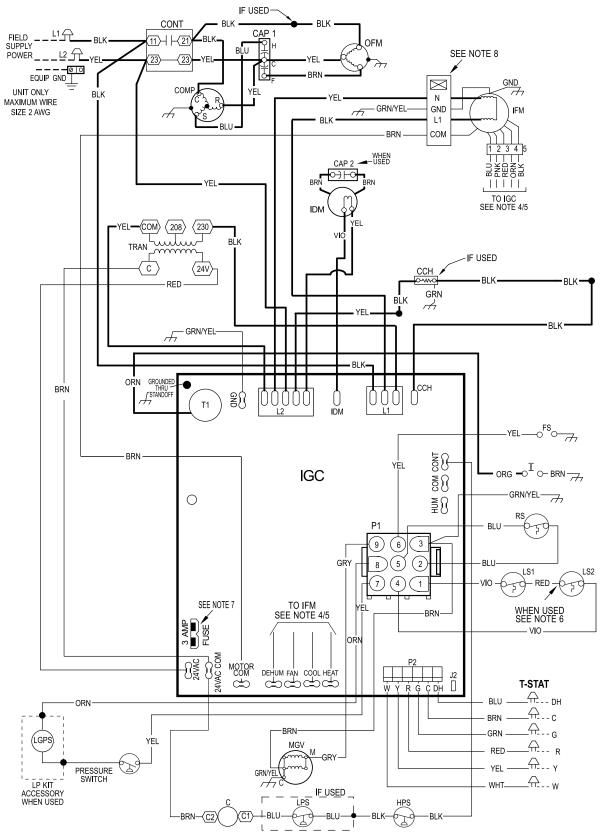


Fig. 14 – 208/230-1-60 Connection Wiring Diagram



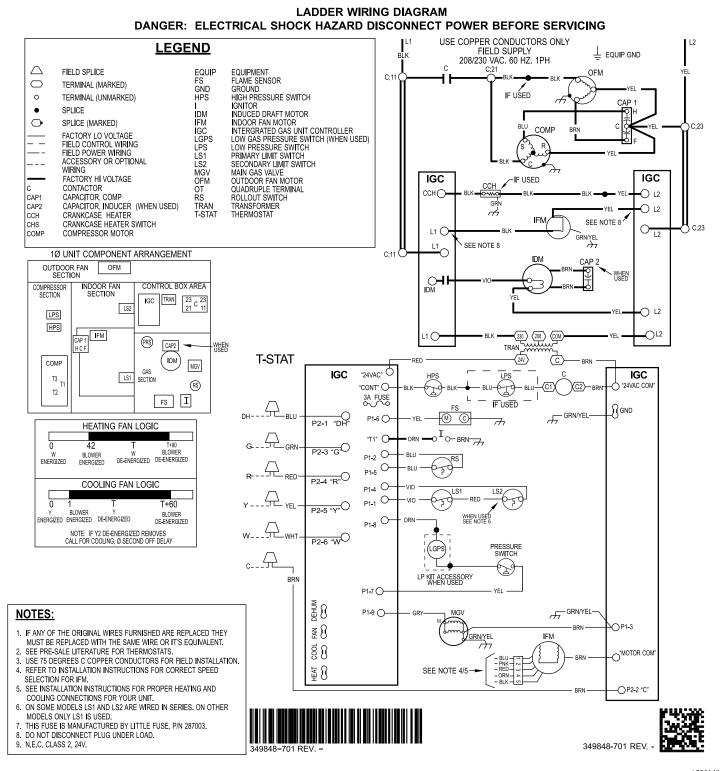


Fig. 15 – 208/230-1-60 Ladder Wiring Diagram

#### 18

## CONNECTION WIRING DIAGRAM DANGER: ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING SCHEMATIC 208/230-3-60

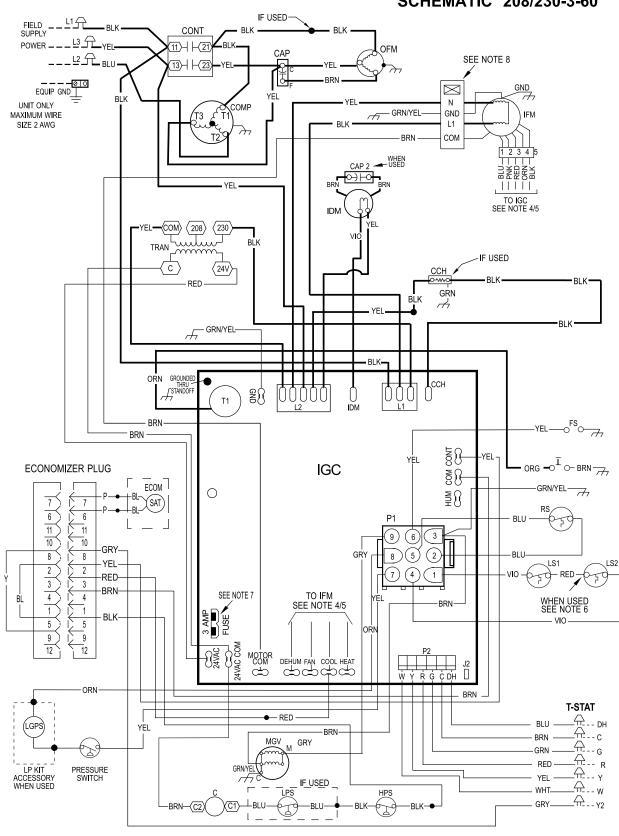


Fig. 16 – 208/230-3-60 Connection Wiring Diagram

A230150

### LADDER WIRING DIAGRAM DANGER: ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING

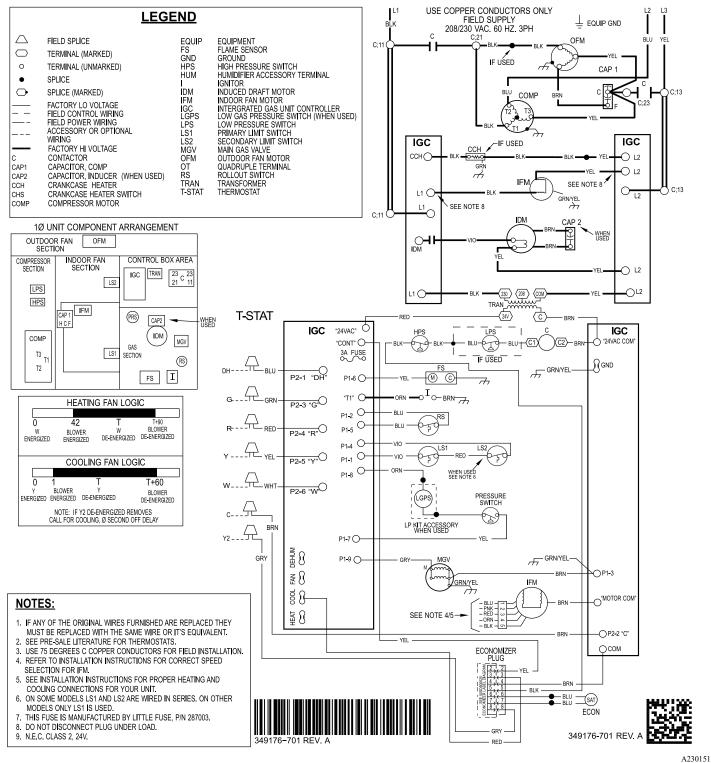


Fig. 17 – 208/230-3-60 Ladder Wiring Diagram

Manufacturer reserves the right to change, at any time, specifications and designs without notice and without obligations.

## CONNECTION WIRING DIAGRAM DANGER: ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING


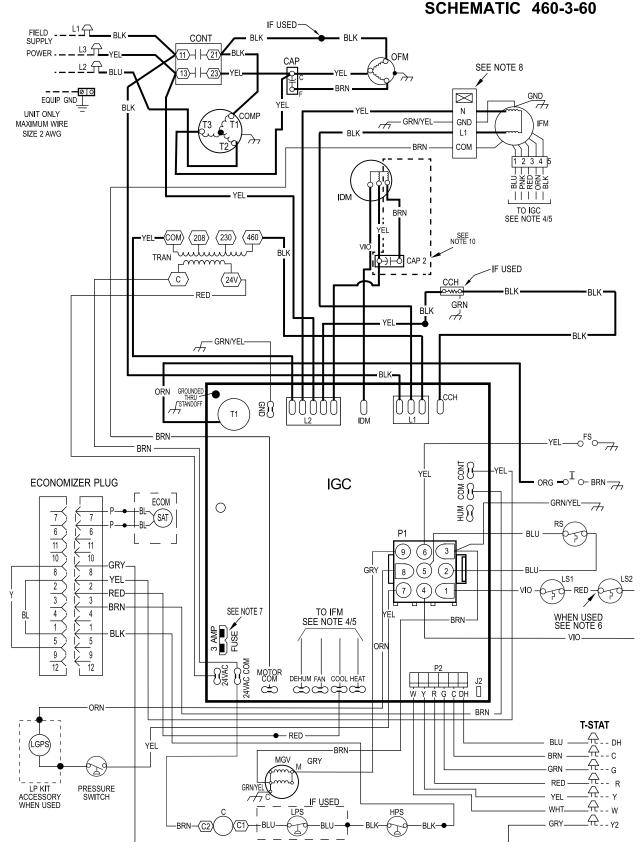


Fig. 18 – 460-3-60 Connection Wiring Diagram

A230152

### LADDER WIRING DIAGRAM DANGER: ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING

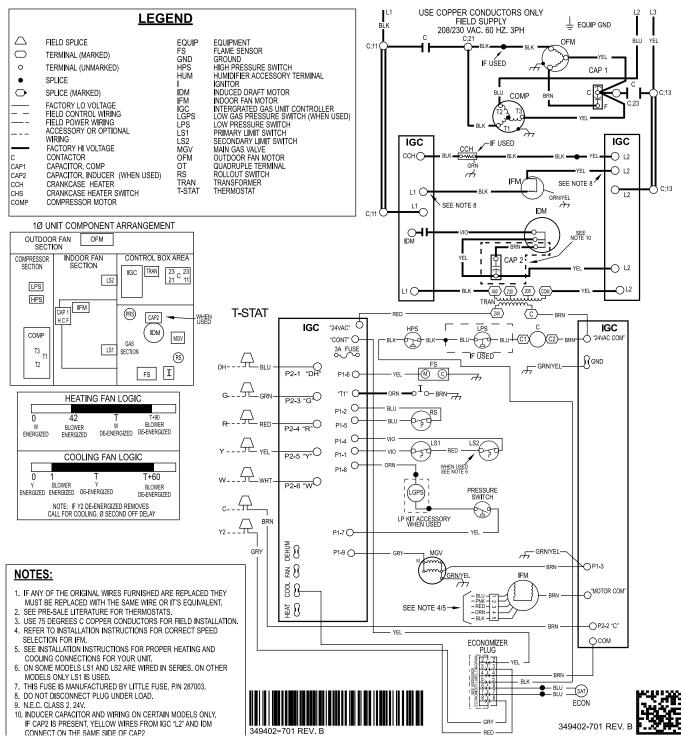

A230153

Fig. 19 – 460-3-60 Ladder Wiring Diagram

## **Normal Operation**

An LED (light-emitting diode) indicator is provided on the integrated gas unit controller (IGC) to monitor operation. The IGC is located by removing the control access panel (see Fig. 22). During normal operation, the LED is continuously on (See Table 6 for error codes).

### **Airflow and Temperature Rise**

The heating section for each size unit is designed and approved for heating operation within the temperature-rise range stamped on the unit rating plate. Table 9 show the approved temperature rise range for each heating input, and the air delivery CFM at various temperature rises for a given external static pressure. The heating operation airflow must produce a temperature rise that falls within the approved range. For single phase units only, "High" blower speed is for high static cooling only and must not be used for gas heating speed.

Refer to Indoor Airflow and Airflow Adjustments section to adjust heating airflow when required.

### **Heating Sequence of Operation**

### (See Fig. 14, Fig. 15 and unit wiring label)

On a call for heating, terminal W of the thermostat is energized, starting the induced-draft motor for a 5 second pre-purge. When the pressure switch senses that the induced-draft motor is moving sufficient combustion air, the burner sequence begins. This function is controlled by the integrated gas unit controller (IGC). The indoor (evaporator) –fan motor is energized 30 seconds after flame is established. When the thermostat is satisfied and W is de-energized, the burners stop firing and the indoor (evaporator) fan motor shuts off after a 90 second time-off delay. Please note that the IGC has the capability to automatically reduce the indoor fan motor on delay and increase the indoor fan motor off delay in the event of high duct static and/or a partially-clogged filter.

### **Limit Switches**

Normally closed limit switch (LS) completes the control circuit. Should the leaving-air temperature rise above the maximum allowable temperature, the limit switch opens and the control circuit "breaks." Any interruption in the control circuit instantly closes the gas valve and stops gas flow to the burners. The blower motor continues to run until LS resets.

When the air temperature at the limit switch drops to the low-temperature setting of the limit switch, the switch closes and completes the control circuit. The direct-spark ignition system cycles and the unit returns to normal heating operation.

STATUS CODE	LED INDICATION								
Normal Operation <sup>*</sup>	On								
No Power or Hardware Failure	Off								
Check fuse, low voltage circuit	1 Flash								
Limit Switch Fault	2 Flashes								
Flame Sense Fault	3 Flashes								
Four Consecutive Limit Switch Faults	4 Flashes								
Ignition Lockout Fault	5 Flashes								
Pressure Switch Fault	6 Flashes								
Rollout Switch Fault	7 Flashes								
Internal Control Fault	8 Flashes								
Temporary 1 hr auto reset <sup>†</sup>	9 Flashes								

Table 6 – LED Indications

\*. LED indicates acceptable operation. Do not change ignition control board.

This code indicates an internal processor fault that will reset itself in one hr. Fault can be caused by stray RF signals in the structure or nearby. This is a UL requirement. NOTES:

1. When W is energized the burners will remain on for a minimum of 60 sec. 2. If more than one error code exists they will be displayed on the LED in sequence.

### **Rollout Switch**

The function of the rollout switch is to close the main gas valve in the event of flame rollout. The switch is located above the main burners. When the temperature at the rollout switch reaches the maximum allowable temperature, the control circuit trips, closing the gas valve and stopping gas flow to the burners. The indoor (evaporator) fan motor (IFM) and induced draft motor continue to run until switch is reset. The IGC LED will display FAULT CODE 7.

### Step 3 – Start-up Cooling and Make Adjustments

Complete the required procedures given in the Pre-Start-Up section before starting the unit. Do not jumper any safety devices when operating the unit. Do not operate the compressor when the outdoor temperature is below 40°F (4.4°C) (unless accessory low-ambient kit is installed). Do not rapid-cycle the compressor. Allow 5 minutes between on cycles to prevent compressor damage.

## **Checking Cooling Control Operation**

Start and check the unit for proper cooling control operation as follows:

- 1. Place room thermostat SYSTEM switch in OFF position. Observe that blower motor starts when FAN switch is placed in ON position and shuts down when FAN switch is placed in AUTO position.
- 2. Place SYSTEM switch in COOL position and FAN switch in AUTO position. Set cooling control below room temperature. Observe that compressor, condenser fan, and evaporator blower motors start. Observe that cooling cycle shuts down when control setting is satisfied. The evaporator fan will continue to run for 90 sec.
- 3. When using an auto-changeover room thermostat, place both SYSTEM and FAN switches in AUTO positions. Observe that unit operates in Heating mode when temperature control is set to call for heating (above room temperature) and operates in Cooling mode when temperature control is set to call for cooling (below room temperature).

**IMPORTANT:** Three-phase, scroll compressors are direction oriented. Unit must be checked to ensure proper compressor 3-phase power lead orientation. If not corrected within 5 minutes, the internal protector will shut off the compressor. The 3-phase power leads to the unit must be reversed to correct rotation. When turning backwards, the difference between compressor suction and discharge pressures will be minimal.

## **Checking and Adjusting Refrigerant Charge**

The refrigerant system is fully charged with Puron (R-410A) refrigerant and is tested and factory sealed. Allow system to operate a minimum of 15 minutes before checking or adjusting charge.



## EXPLOSION HAZARD

WARNING

Failure to follow this warning could result in death, serious personal injury, and/or property damage.

Never use air or gases containing oxygen for leak testing or operating refrigerant compressors. Pressurized mixtures of air or gases containing oxygen can lead to an explosion.

**NOTE:** Adjustment of the refrigerant charge is not required unless the unit is suspected of not having the proper Puron (R-410A) charge.

**NOTE:** Some units have fixed orifice refrigerant metering devices. There is a different charging procedure for both expansion devices. Refer to the correct procedure for your unit.

The charging label and the tables shown refer to system temperatures and pressures in cooling mode only. A refrigerant charging label is attached to the inside of the compressor access panel. (See Table 8 Subcool chart for units with TXV and superheat chart for units with fixed orifice.) The chart includes the required liquid line temperature at given discharge line pressures and outdoor ambient temperatures.

A superheat chart is attached to the inside of the compressor access panel for the unit with fixed metering device. Refer to the charging procedure on the label.

An accurate thermocouple- or thermistor-type thermometer, and a gauge manifold are required when using the subcooling charging method for evaluating the unit charge. Do not use mercury or small dial-type thermometers because they are not adequate for this type of measurement.

# **CAUTION**

### UNIT DAMAGE HAZARD

Failure to follow this caution may result in unit damage.

When evaluating the refrigerant charge, an indicated adjustment to the specified factory charge must always be very minimal. If a substantial adjustment is indicated, an abnormal condition exists somewhere in the cooling system, such as insufficient airflow across either coil or both coils.

Proceed as follows:

- 1. Remove caps from low- and high-pressure service fittings.
- 2. Using hoses with valve core depressors, attach low- and high-pressure gauge hoses to low- and high-pressure service fittings, respectively.
- 3. Start unit in Cooling Mode and let unit run until system pressures stabilize.
- 4. Measure and record the following:
  - a. Outdoor ambient-air temperature (°F [°C] db).
  - b. Liquid line temperature (°F [°C]).
  - c. Discharge (high-side) pressure (psig).
  - d. Suction (low-side) pressure (psig) (for reference only).
- 5. Using "Cooling Charging Charts," compare outdoor-air temperature (°F [°C] db) with the discharge line pressure (psig) to determine desired system operating liquid line temperature (See Table 8).
- 6. Compare actual liquid line temperature with desired liquid line temperature. Using a tolerance of ± 2°F (±1.1°C), add refrigerant if actual temperature is more than 2°F (1.1°C) higher than proper liquid line temperature, or remove refrigerant if actual temperature is more than 2°F (1.1°C) lower than required liquid line temperature.

**NOTE:** If the problem causing the inaccurate readings is a refrigerant leak, refer to the Check for Refrigerant Leaks section.

### Indoor Airflow and Airflow Adjustments

# CAUTION

### UNIT OPERATION HAZARD

Failure to follow this caution may result in unit damage.

For cooling operation, the recommended airflow is 350 to 450 cfm for each 12,000 Btuh of rated cooling capacity. For heating operation, the airflow must produce a temperature rise that falls within the range stamped on the unit rating plate.

**NOTE:** Be sure that all supply-and return-air grilles are open, free from obstructions, and adjusted properly.

# 🚹 WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death. Disconnect electrical power to the unit and install lockout tag before changing blower speed.

This unit has independent fan speeds for gas heating and cooling modes. Single phase models also have a dedicated continuous fan speed. All models (1 phase and 3 phase), have a field-selectable capability to run two different cooling speeds: A normal cooling fan speed (350-450 CFM/Ton) and an enhanced dehumidification fan speed (As low as 320

CFM/Ton) for use with either a dehumidistat or a thermostat that supports dehumidification.

This unit is factory-set for use with a single cooling fan speed. For single phase models, the cooling speed is marked "COOL" on the IGC (See Fig. 20). For 3-phase models, the cooling speed is marked "LOW" on the interface board (IFB) (See Fig. 20). The factory-shipped settings are noted in Table 9. There are up to 3 additional speed tap wires available for use in either gas heating mode, cooling mode, or continuous fan mode (For color coding on the indoor fan motor leads, see Table 7). For single phase models, one of the additional speed tap wires is connected to the continuous fan, with the other 2 wires shipped loose in the control box near the IGC. For three phase models, the additional 3 speed tap wires are shipped loose with vinyl caps and are located in the control box near the interface fan board (IFB) (See Fig. 20).

### Gas Heating Fan Speed Set-up:

To change the gas heating speed:

- 1. Remove existing speed tap wire from the "HEAT" terminal on the IGC.
- 2. Connect the desired speed tap wire on the "HEAT" terminal on the IGC board. Make sure that the speed chosen delivers temperature rise within the rise range listed on the unit. "High" speed is for high static cooling only, and must not be used for gas heating. "High" blower speed is for high static cooling only and must not be used for gas heating speed.

# Cooling Fan Speed Set-up (Dehumidification feature not used):

To change cooling speed:

- 1. Remove existing speed tap wire from the "COOL" terminal on the IGC board. Add the wet coil pressure drop in Table 10 to the system static to determine the correct cooling airflow speed in Table 7 that will deliver the nominal cooling airflow listed in Table 1 for each size.
- 2. Connect the desired speed tap wire on the "COOL" terminal on the IGC board.

## Dehumidification Cooling Fan Speed Set-up :

**IMPORTANT:** Dehumidification control must open control circuit on humidity rise above set point.

Use of the dehumidification cooling fan speed requires use of either a 24 VAC dehumidistat or a thermostat which includes control of a 24 VAC dehumidistat connection. In either case, the dehumidification control must open the control circuit on humidity rise above the dehumidification set point.

- 1. Move shunt jumper on IGD board to "DH" (See Fig. 20).
- 2. Refer to airflow table (Table 9) to determine allowable speeds for the dehumidification cooling fan speed. Speeds that are not allowed are shaded in Table 9.
- 3. Connect selected speed tap wire to "DHUM" terminal on the IGC board. Verify that static pressure is in the acceptable range for the speed tap to be used for dehumidification cooling.

## **Continuous Fan Speed Set-up:**

To change continuous fan speed:

- 1. Remove existing speed tap wire from the "FAN" terminal on the IGC.
- 2. Connect the desired speed tap wire on the "FAN" terminal on the IGC board.

Table 7 - Color Coding for Indoor Fan Motor Leads

Black = High Speed
Orange = Med-High Speed
Red = Med Speed
Pink = Med-Low Speed
Blue = Low Speed

### **Cooling Sequence of Operation**

With the room thermostat SYSTEM switch in the COOL position and the FAN switch in the AUTO position, the cooling sequence of operation is as follows:

- 1. When the room temperature rises to a point that is slightly above the cooling control setting of the thermostat, the thermostat completes the circuit between thermostat terminal R to terminals Y and G.
- 2. The normally open contacts of energized contactor (C) close and complete the circuit through compressor motor (COMP) to condenser (outdoor) fan motor (OFM). Both motors start instantly.
- 3. The set of normally open contacts on the interface fan board (IFB) are closed which energizes a circuit to the indoor fan motor (IFM).

**NOTE:** Once the compressor has started and then stopped, it should not be started again until 5 minutes have elapsed. The cooling cycle remains on until the room temperature drops to a point that is slightly below the cooling control setting of the room thermostat. At this point, the thermostat breaks the circuit between thermostat terminal R to terminals Y and G. These open circuits deenergize contactor coil C. The condenser and compressor motors stop. After a 60-sec. delay, the blower motor stops. The unit is in a standby condition, waiting for the next call for cooling from the room thermostat.

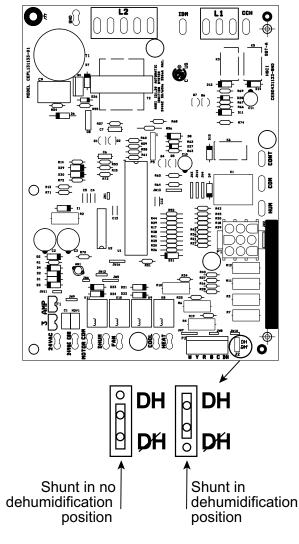


Fig. 20 - IGC Board

A14399

25

### Table 8 – Cooling Charging Chart

EVAPORATOR ENTERING ARF (* C) 'V6         Initiality         Deparate link minimum of 10 minutes           56 (10) 52 (11) 4 (26) 11 (42) 55 (16) 62 (17) 4 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (16) 64 (17) 64 (17) 74 (12) 74 (13) 74 (12) 74 (13) 74 (13) 74 (12) 74 (13) 74 (12) 74 (13) 74 (12) 74 (13) 74 (13) 74 (12) 74 (13) 74 (14) 74 (17) 74 (14) 74 (17) 74 (14) 74 (12) 74 (13) 74																CO	OLING ONLY CHARGING PROCEDURE
OUTDOOR         EVXPORATOR ENTERING ARF * CO_WB         béfore checking charge.           1580 * C(*)         50 (10)         52 (11)         54 (12)         74 (12)         74 (23)         76 (23)         76 (24) <td></td> <td></td> <td></td> <td></td> <td>(SUPERH</td> <td>IEAT °F (°C</td> <td>) AT COMPI</td> <td>RESSOR SL</td> <td>JCTION SEE</td> <td>RVICE POR</td> <td>т)</td> <td></td> <td></td> <td></td> <td></td> <td>1. (</td> <td>Operate unit a minimum of 10 minutes</td>					(SUPERH	IEAT °F (°C	) AT COMPI	RESSOR SL	JCTION SEE	RVICE POR	т)					1. (	Operate unit a minimum of 10 minutes
TEMP + TC 5       60 (10)       82 (11)       84 (13)       60 (15)       66 (17)       66 (13)       66 (15)       66 (15)       67 (21)       77 (22)       77 (23) <td></td> <td>before checking charge</td>																	before checking charge
98       12/27       9       12/67       14/68       17/64       12/67       14/62															76 (24)	2. 1	Measure suction pressure by attaching
<b>68</b> (8.3)               -             6 (3.3)             10 (5.6)             13 (7.2)             16 (9.9)             9 (11)             21 (12)             24 (13)             27 (15)             30 (17)             33 (16)             36 (20)             38 (21)             41 (20)             39 (20)             38 (21)             31 (16)             33 (16)             36 (20)             39 (22)             39 (22)             39 (23)             32 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (16)             31 (17)             31 (17)             31 (17)            31 (18)             31 (17)             31 (17)             31 (17)             31 (18)             32 (11)             31 (17)             31 (18)             31 (17)             31 (18)             31 (17)             31 (18)             31 (17)             31 (18)             31 (17)             31 (18)             31 (17)             31 (18)             31 (17)             31 (18)             31 (17)             31 (18)             31 (18)             31 (18)             31 (17)             31		- ()				~ /									45 (25)		an accurate gauge to compressor suction
TP (21:1)       -       -       7 (23)       10 (56)       13 (72)       11 (6,7)       12 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       24 (13)       27 (12)       26 (14)       31 (17)       35 (19)       11 (12)       12 (12)       26 (14)       28 (12)       27 (15)       31 (17)       35 (19)       100 (37,7)       -       -       -       -       6 (3,3)       10 (15)       14 (7,8)       16 (10)       22 (12)       26 (14)       29 (13)       27 (15)       31 (17)       56 (28)       05 (13)       17 (13)       11 (12)       21 (12)       21 (13)       27 (15)       11 (17)       16 (13)       17 (13)       17 (13)       16 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       21 (13)       <	side service port.																
Tr       G23.9		(BUPENELT Y C) AT COMPRESSOR SUCTION SERVICE PORT)         1         1         0														Measure suction side temperature	
80 (28.7)       -       -       -       -       -       -       -       -       -       -       -       -       -       -       -       -       -       -       -       8(28.4)       11 (c)       15 (c)       19 (1)       22 (12)       25 (14)       30 (17)       35 (19)       .	UCENERATE T COLARGESSOR SUCTOR SERVICE PORT.       1. Operate unit a minimum of 10 min before checking charge.         CUTOOR 52 (1) 54 (2) 56 (1) 56 (1) 66 (1) 62 (17) 64 (18) 66 (19) 65 (20) 70 (21) 72 (22) 74 (23) 76 (24) 65 (26) 74 (26) 71 (26) 23 (17) 23 (18) 23 (17) 32 (18) 26 (19) 38 (21) 40 (22) 43 (22) 45 (23) 76 (24) 73 (21) 26 (14) 21 (12) 24 (13) 27 (15) 30 (17) 33 (18) 62 (20) 38 (21) 40 (22) 43 (22) 40 (22) 43 (22) 40 (22) 43 (22) 40 (22) 43 (22) 40 (22) 43 (22) 40 (22) 43 (22) 40 (22) 43 (22) 40 (22) 43 (22) 40 (22) 43 (22) 40 (22) 43 (22) 40 (22) 43 (22) 40 (22) 43 (23) 40 (22) 43 (23) 40 (22) 40 (22) 43 (23) 40 (22) 41 (23) 40 (22) 41 (23																
86 (29.4)       -       -       -       -       8 (44)       11 (6.1)       15 (8.3)       19 (11)       22 (12)       28 (14)       30 (17)       33 (18)       4.       Measure outdoor air dry-bulb temperature with temmometer.         96 (03.2)       -       -       -       -       -       -       6 (3.3)       10 (5.6)       14 (412)       12 (12)       26 (14)       29 (15)       31 (16)       16 (3.2)       27 (15)       11 (142)       12 (12)       26 (14)       29 (15)       31 (16)       16 (3.2)       17 (14)       29 (12)       22 (12)       26 (14)       20 (15)       18 (14)       14 (12)       18 (10)       22 (12)       26 (14)       20 (15)       18 (14)       14 (12)       18 (10)       21 (12)       26 (14)       14 (12)       18 (11)       16 (15)       20 (11)       23 (12)       16 (16)       0utdoor air dry-bulb temperature or electronic equivalent.       10 (14)       14 (12)       18 (10)       23 (13)       14 (12)       18 (11)       16 (15)       20 (11)       23 (12)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)       16 (16)	UCENERATOR ENTERING ARF * (C) MB         1. Operate unit a minimum of 10 mi before checking charge.           CUTDOC 0         52 (12)         56 (12)         56 (12)         56 (12)         56 (12)         57 (12)         14 (12)         17 (12)         27 (12)         14 (12)         16 (12)         57 (12)         14 (12)         17 (12)         24 (13)         27 (14)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         36 (12)         37 (12)         36 (12)         37 (12)         36 (12)         37 (12)         36 (12)         37 (12)         36 (12)         37 (12)         36 (12)         37 (12)         36 (12)         37 (12)         36 (12)         37 (12)         36 (12)         37 (12)         36 (12)         37 (12)         36 (12)         37																
99 (32.2)       -       -       -       -       -       5 (28)       9 (50)       13 (72)       18 (10)       22 (15)       31 (77)       with thermometer         95 (35.0)       -       -       -       -       -       6 (3.3)       10 (56)       14 (7.8)       18 (10)       22 (12)       25 (14)       22 (15)       31 (77)       mean ratio       with thermometer         110 (43.3)       -       -       -       -       -       6 (2.8)       16 (2.0)       13 (72)       17 (9.4)       22 (12)       26 (14)       22 (14)       31 (77)       mean ratio       mean rati	(BUPERNET * (**) AT COMPRESION BERVICE PORT)         Image: Colspan="2">Image: Colspan="2"           CUTDOR (TEM)         52 (13)         62 (13)         62 (13)         62 (13)         62 (13)         62 (13)         62 (13)         62 (13)         72 (22)         74 (23)         72 (23)         46 (23)         47 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23)         46 (23) <td< td=""><td></td></td<>																
95 (35.0)       -       -       -       -       -       6 (3.3)       10 (3.7)       2 (12)       25 (14)       29 (15)       5. Weasure indoor air (return air) web-bulb         100 (37.7)       -       -       -       -       0 (4.4)       12 (6.1)       15 (8.3)       20 (11)       25 (13)       27 (15)         110 (43.3)       -       -       -       -       -       -       6 (3.3)       11 (6.1)       15 (8.3)       20 (11)       25 (13)       67 (16)       100 (37)	(BUPERIEAT Y C) AT COMPRESOR SUCTION SERVICE PORT)         1. Operate unit a minimum of 10 m           OUTDOOR         SUPERIEAT         (BO (13) 56 (11) 67 (13) 56 (14) 60 (16) 27 (17) 64 (16) 61 (20) 77 (22) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 76 (24) 74 (23) 74 (23) 76 (24) 74 (23) 74 (23) 76 (24) 74 (23) 74 (23) 74 (23) 76 (24) 74 (23) 74													Measure outdoor air dry-bulb temperature			
100 (37.7)       -       -       -       -       -       6 (4.2)       12 (6.7)       15 (6.3)       27 (15)       23 (13)       27 (15)       18 (10)       23 (13)       27 (15)       19 (24)       22 (12)       26 (14)       61 (15)       113 (2.2)       71 (24)       22 (12)       26 (14)       61 (15)       113 (2.2)       71 (24)       22 (12)       26 (14)       61 (15)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       11 (16)       12 (16)       11 (16) <td colspan="13">(BUFERNET Y (*C) AT COMPRESION BERVICE PORT)         Image: Colspan="2"&gt;Image: Colspan="2"           CUTDOR (TEM)         52 (13)         62 (13)         62 (13)         62 (13)         62 (13)         62 (13)         62 (13)         62 (13)         72 (23)         74 (23)         76 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         <td< td=""><td></td></td<></td>	(BUFERNET Y (*C) AT COMPRESION BERVICE PORT)         Image: Colspan="2">Image: Colspan="2"           CUTDOR (TEM)         52 (13)         62 (13)         62 (13)         62 (13)         62 (13)         62 (13)         62 (13)         62 (13)         72 (23)         74 (23)         76 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23)         72 (23)         46 (23)         42 (23) <td< td=""><td></td></td<>																
105 (40.6)         -         6 (3.3)         11 (1.01)         15 (8.3)         20 (11)         25 (14)         6.         Using Superheat Charging Table find outdoor air webbulb temperature. At this intersection note superheat. Where a das (-) appears on table do not attempt to charge unit under these conditions or refrigerant situation refrigerant situation refrigerant (8.0)         36 (4.4)         14 (7.8)         18 (10)         23 (13)         41 (6.0)         43 (6.1)         45 (7.2)         47 (8.3)         49 (9.4)         61 (11)         53 (12)         55 (13)         67 (14)         59 (15)         61 (16)         63 (17)         65 (18)         67 (14)         59 (15)         61 (16)         63 (17)         65 (18)         67 (14)         59 (15)         61 (16)         63 (17)         65 (18)         67 (19)         69 (15)         71 (12)         73 (23)         75 (24)         71 (12)	(by Der Reverse 1* 0* (c) a colore service Port)         1. Operate unit a minimum of 10 m           CUTDOOR         EVPORATOR ENTERING AIR ** (C) WB         (c) WB         (c) WB           (c) 00(0) 52 (11) 54 (12) 56 (13) 57 (14) 69 (11) 041 (21) 12 24 (13) 27 (16) 30 (17) 33 (10) 36 (20) 38 (21) 40 (22) 42 (22) 45 (25) 30 (17) 33 (10) 31 (20) 16 (80) 19 (11) 21 (12) 24 (13) 27 (15) 30 (17) 33 (10) 36 (20) 38 (21) 40 (22) 44 (23) 27 (15) 30 (17) 33 (10) 40 (20) 34 (22) 24 (24) 24 (21) 22 (21) (22) 44 (13) 22 (21) 22 (21) 43 (21) 22 (21) 43 (21) 22 (21) 43 (21) 22 (21) 43 (21) 22 (21) 43 (21) 22 (21) 44 (21) 42 (21) 22 (21) 44 (21) 42 (21) 22 (21) 44 (21) 42 (21) 22 (21) 44 (21) 42 (21) 22 (21) 44 (21) 42 (21) 22 (21) 44 (21) 42 (21) 22 (21) 44 (21) 42 (21) 22 (21) 44 (21) 42 (21) 22 (21) 44 (21) 42 (21) 22 (21) 44 (21) 42 (21) 42 (21) 42 (21) 42 (21) 44 (21) 42 (21) 42 (21) 44 (21) 42 (21) 42 (21) 44 (21) 42 (21) 42 (21) 44 (21) 42 (21) 42 (21) 44 (21) 42 (21) 42 (21) 44 (21) 42 (21) 42 (21) 44 (21) 42 (21) 44 (21) 42 (21) 42 (21) 44 (21) 42 (21) 42 (21) 44 (21) 42 (21) 44 (21) 42 (21) 44 (21) 42 (21) 44 (21) 42 (21) 44 (21) 42 (21) 44 (21) 42 (21) 44 (21) 42 (21) 44 (21) 42 (21) 4																
110 (43.3)       -	(BUPERHEAT ** (**) AT COMPRESION BERVICE PORT)         1         1         0													temperature with a sling psychrometer			
115 (46.1)       -		TEMP * (*C)       50 (10)       52 (11)       54 (12)       56 (13)       58 (14)       60 (16)       62 (17)       64 (18)       66 (19)       63 (19)       72 (22)       74 (23)       76 (24)       2.       Measure suction pressure by a accurate gauge to compres         55 (12.7)       9 (5.0)       12 (6.7)       14 (7.8)       18 (10)       21 (12)       24 (13)       27 (15)       30 (17)       33 (18)       36 (20)       38 (21)       45 (25)         76 (23.1)       -       -       7 (3.9)       10 (5.6)       13 (7.2)       16 (8.9)       19 (11)       21 (12)       24 (13)       27 (15)       30 (17)       33 (18)       36 (20)       38 (21)       43 (22)       45 (25)         76 (23.1)       -       -       -       6 (3.3)       19 (11)       21 (12)       24 (13)       27 (15)       30 (17)       33 (18)       36 (20)       38 (21)       42 (23)       45 (23)       45 (23)       45 (23)       46 (23)       40 (22)       43 (13)       56 (20)       76 (23)       76 (24)       22 (13)       36 (13)       31 (13)       56 (20)       93 (23)       41 (20)       16 (3)       110 (21)       24 (13)       27 (15)       31 (17)       56 (3)       96 (3)       117 (23)       16 (3)															
REQUIRED SUCTION TUBE TEMPERATURE *F (*C)           Multiple Suction Suppressore suction service PORT           SUPERHEAT		75 (23.9)       -       -       6 (3.3)       9 (5.0)       12 (6.7)       15 (6.3)       18 (10)       21 (12)       24 (13)       28 (16)       31 (17)       34 (19)       37 (21)         80 (26.7)       -       -       -       5 (2.8)       8 (4.4)       12 (6.7)       15 (8.3)       18 (10)       21 (12)       25 (14)       28 (16)       31 (17)       34 (19)       35 (19)       31 (17)       35 (19)       36 (17)       34 (19)       21 (12)       28 (16)       31 (17)       34 (19)       37 (21)       tipe about 10 inches fi         90 (32.2)       -       -       -       -       -       -       6 (3.3)       10 (5.6)       14 (7.8)       18 (10)       22 (12)       25 (14)       29 (16)       31 (17)       31 (18)       31 (17)       31 (17)       31 (17)       31 (17)       31 (17)       31 (17)       31 (17)       31 (17)       31 (17)       31 (17)       31 (17)       31 (17)       31 (18)       31 (18)														Using Superneat Charging Table find	
(MEASURED AT COMPRESSOR SUCTION SERVICE PORT PSIG (kPa)           SUPERHEAT TEMP *F (*C)         (TG6)         (1) </td <td>115 (46.1)</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>8 (4.4)</td> <td>14 (7.0)</td> <td>18 (10)</td> <td>23 (13)</td> <td></td> <td>outdoor temperature and indoor air wet</td>	115 (46.1)								-	-	-	8 (4.4)	14 (7.0)	18 (10)	23 (13)		outdoor temperature and indoor air wet
SUCTON PRESSURE AT SUCTON SERVICE PORT PSIG (PPa)           107         111         116         120         125         130         130         140         145           100         35 (17)         37 (2.8)         39 (3.9)         41 (5.0)         43 (6.1)         45 (7.2)         47 (8.3)         49 (9.4)         51 (11)         53 (12)         55 (13)         57 (14)         59 (15)         61 (16)         63 (17)         67 (13)         49 (9.4)         51 (11)         53 (12)         55 (13)         67 (14)         59 (15)         61 (16)         63 (17)         65 (13)         57 (14)         59 (15)         61 (16)         63 (17)         65 (13)         57 (14)         59 (15)         61 (16)         63 (17)         65 (18)         67 (19)         69 (21)         71 (22)         75 (14)         59 (15)         61 (16)         63 (17)         65 (18)         67 (19)         69 (21)         71 (22)         73 (23)         75 (24)         71 (22)         73 (23)         75 (24)         73 (23)         75 (24)         77 (25)         79 (26)         71 (22)         73 (23)         75 (24)         71 (22)         73 (23)         75 (24)         71 (22)         73 (23)         75 (24)         73 (23)         75 (24)         73 (23)         75 (24)																	
SUPERHEAT TEMP F (°C)       107       111       116       120       125       130       135       146       145         0       0       35 (1.7)       37 (2.8)       39 (3.9)       41 (5.0)       43 (6.1)       45 (7.2)       47 (8.3)       49 (9.4)       51 (11)       53 (12)       57 (13)       57 (14)       59 (15)       61 (16)       53 (1.7)       57 (12)       47 (8.3)       49 (9.4)       51 (11)       53 (12)       55 (13)       57 (14)       59 (15)       61 (16)       63 (17)       64 (16)       63 (17)       65 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (13)       67 (14)       59 (15)       61 (16)       63 (17)       65 (13)       67 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (23)       75 (24)       78 (24)       77 (25)       79 (26)       79 (26)       79 (26)       79 (26)       79 (26)       79 (26)	INFORMENT P. (C) AT COMPRESION BERVICE PORT)           TOUTDOOR           SIGLEDOOR           SIGLEDOOR																
<ul> <li>(1EMP + (*C)</li> <li>(738)</li> <li>(766)</li> <li>(800)</li> <li>(828)</li> <li>(862)</li> <li>(897)</li> <li>(931)</li> <li>(966)</li> <li>(1000)</li> <li>(100)</li> <li>35 (1.7)</li> <li>37 (2.8)</li> <li>39 (3.9)</li> <li>41 (5.0)</li> <li>43 (6.1)</li> <li>45 (7.2)</li> <li>47 (8.3)</li> <li>49 (9.4)</li> <li>51 (11)</li> <li>53 (12)</li> <li>55 (13)</li> <li>57 (14)</li> <li>59 (15)</li> <li>1111</li> <li>53 (12)</li> <li>55 (13)</li> <li>57 (14)</li> <li>59 (15)</li> <li>1111</li> <li>53 (12)</li> <li>55 (13)</li> <li>57 (14)</li> <li>59 (15)</li> <li>1111</li> <li>53 (12)</li> <li>55 (13)</li> <li>57 (14)</li> <li>59 (15)</li> <li>51 (11)</li> <li>53 (12)</li> <li>55 (13)</li> <li>57 (14)</li> <li>59 (15)</li> <li>51 (15)</li> <li>57 (14)</li> <li>59 (15)</li> <li>51 (16)</li> <li>63 (17)</li> <li>65 (18)</li> <li>67 (19)</li> <li>69 (21)</li> <li>71 (22)</li> <li>73 (23)</li> <li>75 (24)</li> <li>75 (24)</li> <li>79 (26)</li> <li>71 (22)</li> <li>73 (23)</li> <li>75 (24)</li> <li>75 (24)</li> <li>79 (26)</li> <li>71 (22)</li> <li>73 (23)</li> <li>75 (24)</li> <li>77 (25)</li> <li>79 (26)</li> <li>71 (22)</li> <li>73 (23)</li> <li>75 (24)</li> <li>77 (25)</li> <li>79 (26)</li> <li>71 (22)</li> <li>73 (23)</li> <li>75 (24)</li> <li>77 (25)</li> <li>79 (26)</li> <li>71 (22)</li> <li>73 (23)</li> <li>75 (24)</li> <li>77 (25)</li> <li>79 (26)</li> <li>71 (22)</li> <li>73 (23)</li> <li>75 (24)</li> <li>77 (25)</li> <li>79 (26)</li> <li>71 (22)</li> <li>73 (23)</li> <li>75 (24)</li> <li>77 (25)</li> <li>79 (26)</li> <li>71 (22)</li> <li>73 (23)</li> <li>75 (24)</li> <li>77 (25)</li> <li>79 (26)</li> <li>71 (22)</li> <li>73 (23)</li> <li>75 (24)</li> <li>77 (25)</li> <li>79 (26)</li> <li>71 (22)</li></ul>	SUPERHEAT	107								145							
<ul> <li>2 (1.1) 37 (2.8) 39 (3.9) 41 (5.0) 43 (6.1) 45 (7.2) 47 (8.3) 49 (9.4) 51 (11) 53 (12) 55 (13) 57 (14) 59 (15) (15) (15) (15) (15) (15) (15) (15)</li></ul>	. ,	(738)	(766)	(800)	(828)	(862)	(897)	(931)	(966)	(1000)							slugging may occur. In this situation
<ul> <li>4 (2.2) 39 (3.9) 41 (5.0) 43 (6.1) 45 (7.2) 47 (8.3) 49 (9.4) 51 (11) 53 (12) 55 (13) 57 (14) 59 (15) (11) 53 (12) 55 (13) 57 (14) 59 (15) (11) 53 (12) 55 (13) 57 (14) 59 (15) (11) 53 (12) 55 (13) 57 (14) 59 (15) (11) 53 (12) 55 (13) 57 (14) 59 (15) (11) 53 (12) 55 (13) 57 (14) 59 (15) (11) 53 (12) 55 (13) 57 (14) 59 (15) (11) 53 (12) 55 (13) 57 (14) 59 (15) (11) 53 (12) 55 (13) 57 (14) 59 (15) (11) 53 (12) 55 (13) 57 (14) 59 (15) (11) 53 (12) 55 (13) 57 (14) 59 (15) (16) (63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 55 (13) 57 (14) 59 (15) (16) (63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (14) 59 (15) (16) (63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) (21) (21) (21) (21) 73 (23) 75 (24) 77 (25) 79 (26) (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) (21) (21) (21) (21) 73 (23) 75 (24) 77 (25) 79 (26) (21) (21) (21) (21) 73 (23) 75 (24) 77 (25) 79 (26) (21) (21) (21) (21) (21) 73 (23) 75 (24) 77 (25) 79 (26) (21) (21) (21) (21) (21) (21) (21) (21</li></ul>					41 (5.0)												
<ul> <li>6 (3.3) 41 (5.0) 43 (6.1) 45 (7.2) 47 (8.3) 49 (9.4) 51 (11) 53 (12) 55 (13) 57 (14) 59 (15) 61 (16) 53 (17) 53 (12) 55 (13) 57 (14) 59 (15) 61 (16) 63 (17) 65 (18) 77 (14) 59 (15) 61 (16) 63 (17) 65 (18) 77 (14) 59 (15) 61 (16) 63 (17) 65 (18) 77 (14) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (14) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (14) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) 81 (27) 83 (28) 83 (28) 83 (28) 83 (28) 83 (28) 85 (29)</li></ul>																	
8 (4.4)       43 (6,1)       45 (7.2)       47 (8.3)       49 (9.4)       51 (11)       53 (12)       55 (13)       57 (14)       59 (15)       61 (16)         10 (5.6)       45 (7.2)       47 (8.3)       49 (9.4)       51 (11)       53 (12)       55 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       55 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       75 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (23)       75 (24)       81 (10)       71 (22)       73 (23)       75 (24)       77 (25)       79 (26)       81 (10)       83 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (23)       75 (24)       77 (25)       79 (26)       81 (20)       81 (20)       81 (20)       81 (20)       81 (20)       81 (20)       81 (20)       81 (20)       81 (20)       81 (20)       81 (20)       81 (20)       81 (20)       81 (21)       81 (21)       81 (21)       81 (21)       81 (21) <td colspan="14">(supermetary rc), at compression sucron service root)         1. Operate unit a minimum of 10 m           OUTDOOR         Supermetary rc), at compression sucron service root         1. Operate unit a minimum of 10 m           TEMP F (C)         50 (12)         52 (12)         1. Operate unit a minimum of 10 m           Sig (22)         7 (23)         64 (18)         65 (18.3)         1. Operate unit a minimum of 10 m           Sig (23, 0         52 (12, 0)         52 (23, 0)         7 (23,</td> <td></td>	(supermetary rc), at compression sucron service root)         1. Operate unit a minimum of 10 m           OUTDOOR         Supermetary rc), at compression sucron service root         1. Operate unit a minimum of 10 m           TEMP F (C)         50 (12)         52 (12)         1. Operate unit a minimum of 10 m           Sig (22)         7 (23)         64 (18)         65 (18.3)         1. Operate unit a minimum of 10 m           Sig (23, 0         52 (12, 0)         52 (23, 0)         7 (23,																
<ul> <li>10 (5.6) 45 (7.2) 47 (8.3) 49 (9.4) 51 (11) 53 (12) 55 (13) 57 (14) 59 (15) 61 (16) (16) (16) (17) (14) (78) 49 (9.4) 51 (11) 53 (12) 55 (13) 57 (14) 59 (15) 61 (16) 63 (17) 65 (18) (17) (16) (16) (16) (16) (16) (16) (16) (16</li></ul>		(BUPENEAT P (C) AT COMPRESSOR SUCTION SERVICE PORT)       INVERTING ARF P (C) WB														Refer to Required Suction Tube Temp.	
12 (6.7)       47 (8.3)       49 (9.4)       51 (11)       53 (12)       55 (13)       57 (14)       59 (15)       61 (16)       63 (17)         14 (7.8)       49 (9.4)       51 (11)       53 (12)       55 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (18)         16 (8.9)       51 (11)       53 (12)       55 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (23)       75 (24)       77 (12)       67 (19)       69 (21)       71 (22)       73 (23)       75 (24)       77 (25)       79 (26)       81 (27)       83 (28)       83 (28)       85 (29)       85 (29)       85 (29)       85 (29)       85 (29)       85 (29)       87 (31)       89 (32)       91 (3)       91 (	(BUPENELT Y C) AT COMPRESSOR BUTCHO SERVICE PORT)       1. Operate unit a minimum of 10 perote checking charge.         OUTDOOR       7 (2) 50 (10) 52 (11) 54 (12) 56 (13) 58 (14) 60 (16) 62 (17) 64 (16) 66 (19) 68 (07) 72 (21) 72 (22) 74 (23) 76 (24) 66 (25) 69 (156) 73 (23) 10 (56) 13 (72) 16 (20) 19 (21) 22 (12) 24 (13) 22 (15) 30 (17) 33 (16) 36 (19) 36 (20) 38 (21) 40 (22) 43 (22) 43 (25) 16 (25) 16 (25) 10 (156) 13 (156) 13 (156) 13 (156) 13 (157) 14 (12) 17 (12) (12) (12) (12) (12) (12) (12) (12)														table. Find superheat temperature located		
<ul> <li>14 (7.8) 49 (9.4) 51 (11) 53 (12) 55 (13) 57 (14) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 155 (13) 57 (14) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 155 (13) 57 (14) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 11 (22) 73 (23) 75 (14) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (14) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 71 (25) 79 (26) 81 (27) 83 (28) 85 (29) 85 (29) 85 (29) 85 (29) 87 (31) 89 (32) 91 (33)</li> <li>50/1500518 REV.A</li> </ul>		OUTDOOR EMP "F (*C)         EVAPORATOR ENTENNG AIR "F (*C) WE         1. Operate unit a minimum sector checking charge.         1. Masure suction charge.         1. Operate unit a minimum sector checking charge.         1. Masure suction charge.         1. Operate unit a minimum sector checking charge.         1. Masure suction charge.         1. Masure suction charge.         1. Masure suction cha															
16 (8.0)       51 (11)       53 (12)       55 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)         18 (10.0)       55 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (23)       75 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (23)       75 (24)       77 (25)       73 (23)       75 (24)       77 (25)       73 (23)       75 (24)       77 (25)       79 (26)       81 (27)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       85 (29)		05 (40.6)       -															
18 (10.0)       53 (12)       55 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)         20 (11.1)       55 (13)       57 (14)       59 (15)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (23)       75 (24)       71 (22)       73 (23)       75 (24)       71 (22)       73 (23)       75 (24)       71 (22)       73 (23)       75 (24)       71 (22)       73 (23)       75 (24)       71 (22)       73 (23)       75 (24)       77 (25)       79 (26)       81 (27)       83 (28)       50ZH500518       REV.A       50ZH500518       REV.A         26 (14.4)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (23)       75 (24)       77 (25)       79 (26)       81 (27)       83 (28)       50ZH500518       REV.A       50ZH500518       REV.A       10 in thas a lower suction line temperature is reached.       10. if outdoor air temperature or pressure at suction port changes, charge to new suction line temperature is reached.       10. if outdoor air temperature indicated on chart         34 (18.9)       69 (21)       71 (22)       73 (23)       75 (24)       81 (27)       81 (27)       83 (28)       87 (31)       89 (32)       81 (37)       <														3483	C I	8. 1	If unit has a higher suction line temperature
<ul> <li>20 (11.1) 55 (13) 57 (14) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 71 (25) 79 (26) 81 (27) 83 (28) 83 (28) 83 (28) 83 (28) 83 (28) 85 (29) 85 (29) 85 (29) 85 (29) 85 (29) 85 (29) 87 (31) 89 (32)</li> <li>9. If unit has a lower suction line temperature rediating the more suction line temperature, redaim refrigerant until charted temperature is reached.</li> <li>9. If unit has a lower suction line temperature is reached.</li> <li>9. If unit has a lower suction line temperature is reached.</li> <li>10. If outdoor air temperature or pressure at suction pressure at suction pressure at suction line temperature indicated on chart 41 (18.9) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) 81 (27) 83 (28) 85 (29) 87 (31) 89 (32) 87 (31) 89 (32) 91 (33)</li> </ul>		,												9.90	5		
<ul> <li>22 (12.2) 57 (14) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24)</li> <li>24 (13.3) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24)</li> <li>25 (14.4) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25)</li> <li>26 (14.4) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25)</li> <li>26 (14.4) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25)</li> <li>27 (23) 75 (24) 77 (25) 79 (26) 81 (27)</li> <li>32 (17.8) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) 81 (27)</li> <li>32 (17.8) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) 81 (27)</li> <li>34 (18.9) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) 81 (27) 83 (28) 85 (29)</li> <li>36 (20.0) 71 (22) 73 (23) 75 (24) 81 (27) 81 (27) 83 (28) 85 (29)</li> <li>36 (21.1) 73 (23) 75 (24) 83 (28) 83 (28) 83 (28) 85 (29) 87 (31) 89 (32)</li> <li>40 (22.2) 75 (24) 85 (29) 85 (29) 85 (29) 85 (29) 85 (29) 87 (31) 89 (32) 91 (33)</li> </ul>														- de 52	•		
<ul> <li>24 (13.3) 59 (15) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24)</li> <li>26 (14.4) 61 (16) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25)</li> <li>28 (15.6) 63 (17) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25)</li> <li>29 (15.6) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26)</li> <li>30 (16.7) 65 (18) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) 81 (27)</li> <li>32 (17.8) 67 (19) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) 81 (27)</li> <li>34 (18.9) 69 (21) 71 (22) 73 (23) 75 (24) 77 (25) 79 (26) 81 (27) 83 (28)</li> <li>36 (20.0) 71 (22) 73 (23) 75 (24) 81 (27) 83 (28) 83 (28) 83 (28) 83 (28) 83 (28) 85 (29) 87 (31)</li> <li>38 (21.1) 73 (23) 75 (24) 85 (29) 85 (29) 85 (29) 85 (29) 87 (31) 89 (32)</li> <li>40 (22.2) 75 (24) 85 (29) 85 (29) 85 (29) 85 (29) 85 (29) 87 (31) 89 (32) 91 (33)</li> </ul>																	
26 (14.4)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (23)       75 (24)       77 (25)       79 (26)         28 (14.4)       61 (16)       63 (17)       65 (18)       67 (19)       69 (21)       71 (22)       73 (23)       75 (24)       77 (25)       79 (26)       81 (27)       73 (23)       75 (24)       77 (25)       79 (26)       81 (27)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (28)       83 (29)       87 (11)       73 (23)       75 (24)       77 (25)       79 (26)       81 (27)       83 (28)       85 (29)       85 (29)       85 (29)       85 (29)       85 (29)       85 (29)       85 (29)       87 (31)       89 (32)       91 (33)															ē l		
28 (15.6)         63 (17)         65 (18)         67 (19)         69 (21)         71 (22)         73 (23)         75 (24)         77 (25)         79 (26)           30 (16.7)         65 (18)         67 (19)         69 (21)         71 (22)         73 (23)         75 (24)         77 (25)         79 (26)           32 (17.8)         67 (19)         69 (21)         71 (22)         73 (23)         75 (24)         77 (25)         79 (26)         81 (27)           32 (17.8)         67 (19)         69 (21)         71 (22)         73 (23)         75 (24)         77 (25)         79 (26)         81 (27)         83 (26)           34 (18.9)         69 (21)         71 (22)         73 (23)         75 (24)         87 (26)         81 (27)         83 (28)         85 (29)           36 (20.0)         71 (22)         73 (23)         75 (24)         81 (27)         83 (28)         85 (29)           38 (21.1)         73 (23)         75 (24)         83 (28)         85 (29)         87 (31)         89 (32)           40 (22.2)         75 (24)         85 (29)         85 (29)         85 (29)         85 (29)         85 (29)         85 (29)         85 (29)		· · · /													-		
30 (16.7)         65 (18)         67 (19)         69 (21)         71 (22)         73 (23)         75 (24)         77 (25)         79 (26)         81 (27)           32 (17.8)         67 (19)         69 (21)         71 (22)         73 (23)         75 (24)         77 (25)         79 (26)         81 (27)         83 (28)         suction port changes, charge to new suction line temperature indicated on chard           34 (18.9)         69 (21)         71 (22)         73 (23)         75 (24)         79 (26)         81 (27)         83 (28)         85 (29)           36 (20.0)         71 (22)         73 (23)         75 (24)         81 (27)         81 (27)         83 (28)         85 (29)         87 (31)           36 (21.1)         73 (23)         75 (24)         81 (27)         81 (27)         83 (28)         83 (28)         83 (28)         85 (29)         87 (31)           38 (21.1)         73 (23)         75 (24)         85 (29)         85 (29)         87 (31)         89 (32)         91 (3)           40 (22.2)         75 (24)         85 (29)         85 (29)         85 (29)         87 (31)         89 (32)         91 (3)													50ZH50	0518 RE	V. A		
32 (17.8)         67 (19)         69 (21)         71 (22)         73 (23)         75 (24)         77 (25)         79 (26)         81 (27)         83 (28)         suction line temperature indicated on chart           34 (18.9)         69 (21)         71 (22)         73 (23)         75 (24)         79 (26)         81 (27)         83 (28)         85 (29)         85 (29)         85 (29)         85 (29)         85 (29)         87 (31)         83 (28)         83 (28)         87 (31)         89 (32)         84 (29)         87 (31)         89 (32)         84 (29)         85 (29)         85 (29)         85 (29)         85 (29)         87 (31)         89 (32)         94 (32)																10.	It outdoor air temperature or pressure at
34 (18.9)         69 (21)         71 (22)         73 (23)         75 (24)         79 (26)         79 (26)         81 (27)         83 (28)         85 (29)           36 (20.0)         71 (22)         73 (23)         75 (24)         81 (27)         81 (27)         83 (28)         85 (29)         87 (31)           38 (21.1)         73 (23)         75 (24)         83 (28)         83 (28)         83 (28)         83 (28)         83 (28)         83 (29)         87 (31)           40 (22.2)         75 (24)         85 (29)         85 (29)         87 (31)         89 (32)         91 (33)		· · · /	<u>`</u>			· · ·			. ,								suction port changes, charge to new
36 (20.0)         71 (22)         73 (23)         75 (24)         81 (27)         81 (27)         83 (28)         85 (29)         87 (31)           38 (21.1)         73 (23)         75 (24)         83 (28)         83 (28)         83 (28)         85 (29)         87 (31)           40 (22.2)         75 (24)         85 (29)         85 (29)         87 (31)         89 (32)															l	I	suction line temperature indicated on chart
38 (21.1)         73 (23)         75 (24)         83 (28)         83 (28)         83 (28)         83 (28)         83 (28)         85 (29)         87 (31)         89 (32)           40 (22.2)         75 (24)         85 (29)         85 (29)         85 (29)         85 (29)         85 (29)         87 (31)         89 (32)																	
40 (22.2) 75 (24) 85 (29) 85 (29) 85 (29) 85 (29) 85 (29) 85 (29) 87 (31) 89 (32) 91 (33)																	
507H500518 REV A	40 (22.2)	75 (24)	65 (29)	65 (29)	65 (29)	65 (29)	85 (29)	67 (31)	89 (32)	91 (33)	I						
																	50ZH500518 REV.A

Superheat charging table is derived from optimum performance point.  $(95^{\circ}F [35^{\circ}C] \text{ outdoor ambient and } (80^{\circ}F [27^{\circ}C] \text{ dry bulb}; 67^{\circ}F [19^{\circ}C] \text{ wet bulb indoor condition.})$ Where a dash (-) appears do not attempt to check charge or charge unit under these conditions using the superheat method. (Weigh in method should be used.)

A150625

		Required Su	bcooling °F(°(	C)		1			Re	auired Lie	uid Line	Temperature for a Specifi	c Subcoolin	a (R-410.	<b>A</b> )			
	1		nbient Tempe					Boguiro	d Subco			Temperature for a opecini	COUDCOOMI	g (it=410)	<i>'</i>	d Subcoo	ling (°C)	
Model Size			I		1	Pressure		Require		Jing (F)	-		Pressure	-	Require		ning ( c)	-
	75 (24)	85 (29)	95 (35)	105 (41)	115 (46)	(psig)	5	10	15	20	25		(kPa)	3	6	8	11	14
		1	1	1	1	189	61	56	51	46	41		1303	16	13	11	8	5
		1	1	1	1	196	63	58	53	48	43		1351	17	15	12	9	6
		1	1	1	1	203	66	61	56	51	46		1399	19	16	13	10	8
		1				210	68	63	58	53	48		1448	20	17	14	11	9
		1				217	70	65	60	55	50		1496	21	18	15	13	10
060	18(10)	18(10)	16(8.8)	16(8.8)	15(8.3)	224	72	67	62	57	52		1544	22	19	16	14	11
	. ,					231	74	69	64	59	54		1593	23	20	18	15	12
			1	1	1	238	76	71	66	61	56		1641	24	21	19	16	13
Notes:						245	77	72	67	62	57		1689	25	22	20	17	14
Svetom is t	factory char	ged to provid	o propor cub	cooling		252	79	74	69	64	59		1737	26	23	21	18	15
		is opened or			e	260	81	76	71	66	61		1792	27	25	22	19	16
		oling must be		lee issues ar	-	268	83	78	73	68	63		1848	29	26	23	20	17
1						276	85	80	75	70	65		1903	30	27	24	21	19
						284	87	82	77	72	67		1958	31	28	25	22	20
Charging	Procedure	:				292	89	84	79	74	69		2013	32	29	26	23	21
4	Dia ahaana lia	ne pressure b				300	91	86	81	76	71		2068	33	30	27	24	22
1- measure	Discharge IIr	ie pressure b	y attaching a	gauge to the	service port.	309	93	88	83	78	73		2130	34	31	28	26	23
2- Measure	the Liquid lin	ne temperatur	e by attaching	g a temperatu	re sensing	318	95	90	85	80	75		2192	35	32	29	27	24
device to it.						327	97	92	87	82	77		2254	36	33	31	28	25
3- Insulate t	he temperatu	ure sensing d	evice so that	the Outdoor A	Ambient	336	99	94	89	84	79		2316	37	34	32	29	26
doesn't affe	ct the readin	ıg.				345	101	96	91	86	81		2378	38	35	33	30	27
4-Refer to t	he required \$	Subcooling in	the table bas	ed on the mo	del size and	354	103	98	93	88	83		2440	39	36	34	31	28
the Outdoor	r Ambient ter	nperature.				364	105	100	95	90	85		2509	40	38	35	32	29
5- Interpola	te if the Outd	loor ambient t	emperature li	es in betweer	n the table	374	107	102	97	92	87		2578	41	39	36	33	30
values.						384	108	103	98	93	88		2647	42	40	37	34	31
		ue in the tabl		ing to the the	measured	394	110	105	100	95	90		2716	44	41	38	35	32
Pressure of	the Compres	ssor Discharg	e line.			404	112	107	102	97	92		2785	45	42	39	36	33
		Pressure rea		the Liquid lir	ne	414	114	109	104	99	94		2854	46	43	40	37	34
	•	ed Subcooling	-			424	116	111	106	101	96		2923	47	44	41	38	35
8- Add Char	rge if the mea	asured tempe	rature is high	er than the tal	ble value.	434	118	113	108	103	98		2992	48	45	42	39	36
						444	119	114	109	104	99		3061	48	46	43	40	37
9 - Remove	charge if the	measured te	mperature is I	lower than the	e table value.	454	121	116	111	106	101		3130	49	47	44	41	38
1						464	123	118	113	108	103		3199	50	48	45	42	39
						474	124	119	114	109	104	l l'an herde	3268	51	48	46	43	40
						484	126	121	116	111	106	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	3337	52	49	47	44	41
						494	127	122	117	112	107		3406	53	50	47	45	42
						504	129	124	119	114	109		3475	54	51	48	46	43
						514	131	126	121	116	111	Hann Hannahan Man	3544	55	52	49	46	44
349623	3–701 R	EV. –				524	132	127	122	117	112	349623-701 REV	3612	56	53	50	47	45
1						534	134	129	124	119	114	0100207011121.	3681	56	54	51	48	45

A230061

	Heating				y Coil Air Delivery	y" - 110/120	fintar and D	owninow L	0	(in. W.C.)					
Unit Size	Rise °F (°C)	Motor Speed	Тар	Allowable Functions		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	. ( .,				CFM	640	553	454	310						
					BHP	0.07	0.08	0.08	0.09						
		Low†	Blue	Alternate Heating	Gas Heat Rise ( <sup>O</sup> F)	47	54	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	26	30	NA	NA	NA	NA	NA	NA	NA	NA
					CFM	830	758	688	607	514	393	254			
			<b>.</b>	Heating	BHP	0.12	0.13	0.13	0.13	0.14	0.14	0.15			
		Med-Low‡	Pink	Alternate Cooling	Gas Heat Rise ( <sup>o</sup> F)	36	39	43	49	NA	NA	NA	NA	NA	NA
				Ū	Gas Heat Rise ( <sup>o</sup> C)	20	22	24	27	NA	NA	NA	NA	NA	NA
04040	25 - 55				CFM	1080	1025	969	910	852	787	718	638	541	457
24040	(14 - 31)	<b></b>		Cooling	BHP	0.21	0.22	0.23	0.23	0.24	0.24	0.25	0.25	0.26	0.27
		Medium**	Red	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	28	29	31	33	35	38	41	47	55	NA
				Ũ	Gas Heat Rise ( <sup>o</sup> C)	15	16	17	18	19	21	23	26	31	NA
					CFM	1101	1046	993	936	878	816	749	676	599	498
			~	Alternate Cooling	BHP	0.22	0.23	0.24	0.24	0.25	0.26	0.26	0.27	0.27	0.28
		Med-High	Orange	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	27	28	30	32	34	36	40	44	50	NA
					Gas Heat Rise ( <sup>o</sup> C)	15	16	17	18	19	20	22	24	28	NA
		Llinda	Black	High Static Cooling	CFM	1222	1173	1123	1072	1021	967	912	853	787	712
		High	ыаск	Only	BHP	0.29	0.29	0.30	0.31	0.31	0.32	0.33	0.34	0.34	0.34
					CFM	640	553	454	310						
		Low†	Blue		BHP	0.07	0.08	0.08	0.09						
		LOWI	Diue		Gas Heat Rise ( <sup>O</sup> F)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					CFM	830	758	688	607	514	393	254			
		Med-Low	Pink	Alternate Cooling	BHP	0.12	0.13	0.13	0.13	0.14	0.14	0.15			
		Med-Low	FILK	Alternate Heating	Gas Heat Rise ( <sup>O</sup> F)	54	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	30	NA	NA	NA	NA	NA	NA	NA	NA	NA
24060	25 - 55				CFM	1080	1025	969	910	852	787	718	638	541	457
24000	(14 - 31)	Medium**	Red	Cooling	BHP	0.21	0.22	0.23	0.23	0.24	0.24	0.25	0.25	0.26	0.27
		wealum	Red	Alternate Heating	Gas Heat Rise ( <sup>O</sup> F)	41	44	46	49	52	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	23	24	26	27	29	NA	NA	NA	NA	NA
					CFM	1101	1046	993	936	878	816	749	676	599	498
		Mad Linht	0	Heating	BHP	0.22	0.23	0.24	0.24	0.25	0.26	0.26	0.27	0.27	0.28
		Med-High‡	Orange	Alternate Cooling	Gas Heat Rise ( <sup>o</sup> F)	41	43	45	48	51	55	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	23	24	25	26	28	30	NA	NA	NA	NA
		High	Black	High Static Cooling	CFM	1222	1173	1123	1072	1021	967	912	853	787	712
		High	DIACK	Only	BHP	0.29	0.29	0.30	0.31	0.31	0.32	0.33	0.34	0.34	0.34

	Heating			Table 9 – Dry Con					0	(in. W.C.)	)				
Unit Size	Rise <sup>o</sup> F ( <sup>o</sup> C)	Motor Speed	Тар	Allowable Functions		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
					CFM	643	552	455	348	225					
		Louit	Blue	Alternate Lleating	BHP	0.09	0.10	0.11	0.11	0.11					
		Low†	Blue	Alternate Heating	Gas Heat Rise ( <sup>O</sup> F)	46	54	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	26	30	NA	NA	NA	NA	NA	NA	NA	NA
					CFM	817	744	673	597	516	431	325	190		
		Med-Low‡	Pink	Heating	BHP	0.14	0.15	0.15	0.16	0.17	0.17	0.18	0.18		
		Med-LOW1	FILK	Alternate Cooling	Gas Heat Rise ( <sup>O</sup> F)	36	40	44	50	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	20	22	25	28	NA	NA	NA	NA	NA	NA
30040	25 - 55				CFM	1159	1104	1045	990	937	878	821	759	693	618
30040	(14 - 31)	Madium	Ded	Alternate Cooling	BHP	0.31	0.32	0.33	0.33	0.34	0.35	0.36	0.37	0.37	0.38
		Medium	Red	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	26	27	28	30	32	34	36	39	43	48
					Gas Heat Rise ( <sup>o</sup> C)	14	15	16	17	18	19	20	22	24	27
					CFM	1201	1147	1095	1037	987	934	877	818	755	671
			0	Cooling	BHP	0.34	0.35	0.36	0.37	0.37	0.38	0.39	0.40	0.41	0.40
		Med-High**	Orange	Alternate Heating	Gas Heat Rise ( <sup>O</sup> F)	25	26	27	29	30	32	34	36	39	44
				_	Gas Heat Rise ( <sup>o</sup> C)	14	14	15	16	17	18	19	20	22	25
		High	Black	High Static Cooling	CFM	1291	1236	1181	1131	1080	1033	978	909	792	661
		nigii	DIACK	Only	BHP	0.41	0.42	0.43	0.43	0.44	0.45	0.46	0.45	0.43	0.40
					CFM	643	552	455	348	225					
		Low†	Blue		BHP	0.09	0.10	0.11	0.11	0.11					
		LOWI	Diue		Gas Heat Rise ( <sup>o</sup> F)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					CFM	817	744	673	597	516	431	325	190		
		Med-Low	Pink	Alternate Cooling	BHP	0.14	0.15	0.15	0.16	0.17	0.17	0.18	0.18		
		IVIEU-LOW	FIIK	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	55	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	30	NA	NA	NA	NA	NA	NA	NA	NA	NA
30060	25 - 55				CFM	1159	1104	1045	990	937	878	821	759	693	618
30000	(14 - 31)	Medium‡	Red	Heating	BHP	0.31	0.32	0.33	0.33	0.34	0.35	0.36	0.37	0.37	0.38
		mediumt	Reu	Alternate Cooling	Gas Heat Rise ( <sup>O</sup> F)	39	40	43	45	48	51	54	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	21	22	24	25	26	28	30	NA	NA	NA
					CFM	1201	1147	1095	1037	987	934	877	818	755	671
		Modium High**	Oronac	Cooling	BHP	0.34	0.35	0.36	0.37	0.37	0.38	0.39	0.40	0.41	0.40
		Medium-High**	Orange	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	37	39	41	43	45	48	51	55	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	21	22	23	24	25	27	28	30	NA	NA
		High	Black	High Static Cooling	CFM	1291	1236	1181	1131	1080	1033	978	909	792	661
		підії	DIACK	Only	BHP	0.41	0.42	0.43	0.43	0.44	0.45	0.46	0.45	0.43	0.40

Table 9 – Dry Coil Air Delivery\* - Horizontal and Downflow Discharge Sizes 24-60 (Continued)

	Heating			Table 9 – Dry Coll					8	(in. W.C.)	)				
Unit Size	Rise <sup>o</sup> F ( <sup>o</sup> C)	Motor Speed	Тар	Allowable Functions		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	. ,				CFM	1096	1044	994	945	892	837	780	717	664	612
				Alternate Cooling,	BHP	0.14	0.15	0.16	0.18	0.19	0.19	0.20	0.21	0.22	0.23
		Low†	Blue	Alternate Gas	Gas Heat Rise ( <sup>o</sup> F)	41	43	45	47	50	53	NA	NA	NA	NA
				Heating	Gas Heat Rise ( <sup>o</sup> C)	23	24	25	26	28	30	NA	NA	NA	NA
					CFM	1151	1103	1056	1002	953	897	845	788	729	678
		Med-Low‡	Pink	Gas Heating,	BHP	0.16	0.17	0.18	0.19	0.20	0.21	0.22	0.23	0.24	0.25
		Med-LOW1	FIIK	Alternate Cooling	Gas Heat Rise ( <sup>O</sup> F)	39	40	42	45	47	50	53	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	22	22	23	25	26	28	29	NA	NA	NA
36060	25 - 55				CFM	1299	1252	1204	1155	1106	1059	1007	959	905	844
30000	(14 - 31)	Maaliuma	Ded	Alternate Cooling,	BHP	0.22	0.23	0.24	0.25	0.26	0.27	0.28	0.29	0.30	0.31
		Medium	Red	Alternate Gas	Gas Heat Rise ( <sup>o</sup> F)	34	36	37	39	40	42	44	47	49	53
				Heating	Gas Heat Rise ( <sup>o</sup> C)	19	20	21	21	22	23	25	26	27	29
				0 1	CFM	1382	1335	1292	1246	1202	1152	1106	1058	1007	957
		Mar al 111 auto **	0	Cooling,	BHP	0.26	0.27	0.28	0.29	0.30	0.31	0.32	0.33	0.34	0.35
		Med-High**	Orange	Alternate Gas	Gas Heat Rise ( <sup>o</sup> F)	32	33	35	36	37	39	40	42	44	47
				Heating	Gas Heat Rise ( <sup>o</sup> C)	18	19	19	20	21	22	22	23	25	26
		High	Black	High Static Cooling	CFM	1530	1485	1442	1398	1354	1309	1263	1217	1169	1120
		nigii	DIACK	Only	BHP	0.33	0.35	0.36	0.37	0.38	0.39	0.40	0.41	0.42	0.43
				Alternate Cooling,	CFM	1096	1044	994	945	892	837	780	717	664	612
		Low†	Blue	Alternate Gas	BHP	0.14	0.15	0.16	0.18	0.19	0.19	0.20	0.21	0.22	0.23
		LOWI	Dide	Heating	Gas Heat Rise ( <sup>o</sup> F)	61	64	NA	NA	NA	NA	NA	NA	NA	NA
				ricating	Gas Heat Rise ( <sup>o</sup> C)	34	36	NA	NA	NA	NA	NA	NA	NA	NA
				Alternate Cooling	CFM	1151	1103	1056	1002	953	897	845	788	729	678
		Med-Low	Pink	Alternate Cooling, Alternate Gas	BHP	0.16	0.17	0.18	0.19	0.20	0.21	0.22	0.23	0.24	0.25
		Wed-Low		Heating	Gas Heat Rise ( <sup>O</sup> F)	58	61	63	NA	NA	NA	NA	NA	NA	NA
				ricating	Gas Heat Rise ( <sup>o</sup> C)	32	34	35	NA	NA	NA	NA	NA	NA	NA
36090	35 - 65				CFM	1299	1252	1204	1155	1106	1059	1007	959	905	844
30030	(19 - 36)	Medium±	Red	Gas Heating,	BHP	0.22	0.23	0.24	0.25	0.26	0.27	0.28	0.29	0.30	0.31
		wealunt	Reu	Alternate Cooling	Gas Heat Rise ( <sup>O</sup> F)	52	53	56	58	61	63	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	29	30	31	32	34	35	NA	NA	NA	NA
				0 ľ	CFM	1382	1335	1292	1246	1202	1152	1106	1058	1007	957
		Mad Lligh**	Orange	Cooling,	BHP	0.26	0.27	0.28	0.29	0.30	0.31	0.32	0.33	0.34	0.35
		Med-High**	Orange	Alternate Gas Heating	Gas Heat Rise ( <sup>O</sup> F)	48	50	52	54	56	58	61	63	NA	NA
				neaung	Gas Heat Rise ( <sup>o</sup> C)	27	28	29	30	31	32	34	35	NA	NA
		High	Black	High Static Cooling	CFM	1530	1485	1442	1398	1354	1309	1263	1217	1169	1120
		підп	DIACK	Only	BHP	0.33	0.35	0.36	0.37	0.38	0.39	0.40	0.41	0.42	0.43

Table 9 – Dry Coil Air Delivery\* - Horizontal and Downflow Discharge Sizes 24-60 (Continued)

	Heating			Table 9 – Dry Coll				on Distin	0	(in. W.C.)	nucu)				
Unit Size	Rise <sup>o</sup> F ( <sup>o</sup> C)	Motor Speed	Тар	Allowable Functions		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	. ( .)				CFM	956	899	843	786	729	676	621	558	504	435
					BHP	0.13	0.13	0.14	0.15	0.16	0.16	0.17	0.18	0.18	0.19
		Low†	Blue	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	47	50	53	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	26	28	29	NA	NA	NA	NA	NA	NA	NA
					CFM	1201	1153	1107	1060	1012	965	917	871	828	782
		Madlauth	Pink	Heating	BHP	0.21	0.22	0.22	0.23	0.24	0.25	0.26	0.27	0.28	0.29
		Med-Low‡	PINK	Alternate Cooling	Gas Heat Rise ( <sup>o</sup> F)	37	39	40	42	44	46	49	51	54	NA
					Gas Heat Rise ( <sup>o</sup> C)	21	22	22	23	25	26	27	28	30	NA
42060	25 - 55				CFM	1443	1402	1361	1322	1284	1243	1204	1164	1124	1084
42000	(14 - 31)	Madium	Red	Alternate Cooling	BHP	0.32	0.33	0.34	0.35	0.36	0.37	0.38	0.39	0.40	0.42
		Medium	Red	Alternate Heating	Gas Heat Rise ( <sup>O</sup> F)	31	32	33	34	35	36	37	38	40	41
					Gas Heat Rise ( <sup>o</sup> C)	17	18	18	19	19	20	21	21	22	23
					CFM	1529	1491	1451	1411	1376	1338	1300	1261	1223	1185
		Mad Ligh**	Oranga	Cooling	BHP	0.37	0.39	0.40	0.41	0.42	0.43	0.44	0.45	0.46	0.47
		Med-High**	Orange	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	29	30	31	32	32	33	34	35	36	38
					Gas Heat Rise ( <sup>o</sup> C)	16	17	17	18	18	19	19	20	20	21
		High	Black	High Static Cooling	CFM	1604	1565	1529	1490	1455	1421	1385	1348	1310	1274
		riigii	DIACK	Only	BHP	0.42	0.44	0.45	0.46	0.47	0.48	0.49	0.50	0.51	0.52
					CFM	956	899	843	786	729	676	621	558	504	435
		Low†	Blue		BHP	0.13	0.13	0.14	0.15	0.16	0.16	0.17	0.18	0.18	0.19
		LOWI	Dide		Gas Heat Rise ( <sup>o</sup> F)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					CFM	1201	1153	1107	1060	1012	965	917	871	828	782
		Med-Low	Pink	Alternate Cooling	BHP	0.21	0.22	0.22	0.23	0.24	0.25	0.26	0.27	0.28	0.29
		Med Low	1	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	56	58	60	63	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	31	32	34	35	NA	NA	NA	NA	NA	NA
42090	35 - 65				CFM	1443	1402	1361	1322	1284	1243	1204	1164	1124	1084
	(19 - 36)	Medium‡	Red	Heating	BHP	0.32	0.33	0.34	0.35	0.36	0.37	0.38	0.39	0.40	0.42
		Weddint	dium‡ Red	Alternate Cooling	Gas Heat Rise ( <sup>o</sup> F)	46	48	49	51	52	54	56	58	60	62
					Gas Heat Rise ( <sup>o</sup> C)	26	27	27	28	29	30	31	32	33	34
					CFM	1529	1491	1451	1411	1376	1338	1300	1261	1223	1185
		Med-High**	Orange	Cooling	BHP	0.37	0.39	0.40	0.41	0.42	0.43	0.44	0.45	0.46	0.47
		Mcd-High	Orange	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	44	45	46	47	49	50	52	53	55	57
					Gas Heat Rise ( <sup>o</sup> C)	24	25	26	26	27	28	29	29	30	31
		High	Black	High Static Cooling	CFM	1604	1565	1529	1490	1455	1421	1385	1348	1310	1274
			2.40.1	Only	BHP	0.42	0.44	0.45	0.46	0.47	0.48	0.49	0.50	0.51	0.52

Table 9 – Dry Coil Air Delivery\* - Horizontal and Downflow Discharge Sizes 24-60 (Continued)

	Heating			Table 9 – Dry Coll				on Disting	0	(in. W.C.)					
Unit Size	Rise °F (°C)	Motor Speed	Тар	Allowable Functions		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	. ,				CFM	641	551	462	385	289	216	163	115		
					BHP	0.05	0.06	0.06	0.07	0.07	0.08	0.08	0.09		
		Low†	Blue		Gas Heat Rise ( <sup>O</sup> F)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					CFM	1437	1395	1351	1307	1265	1221	1176	1132	1084	1039
		Madlowt	Pink	Heating	BHP	0.29	0.30	0.31	0.32	0.33	0.34	0.35	0.36	0.37	0.38
		Med-Low‡	PINK	Alternate Cooling	Gas Heat Rise ( <sup>o</sup> F)	47	48	50	51	53	55	57	59	62	64
					Gas Heat Rise ( <sup>o</sup> C)	26	27	28	28	29	30	32	33	34	36
48090	35 - 65				CFM	1771	1735	1699	1664	1627	1592	1557	1522	1486	1450
46090	(19 - 36)	Mar 11	Dud	Cooling	BHP	0.51	0.52	0.53	0.55	0.56	0.57	0.58	0.59	0.61	0.62
		Medium**	Red	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	38	39	39	40	41	42	43	44	45	46
				_	Gas Heat Rise ( <sup>o</sup> C)	21	21	22	22	23	23	24	24	25	26
					CFM	1928	1897	1862	1830	1796	1764	1732	1698	1620	1512
		March I.B.	0	Alternate Cooling	BHP	0.64	0.65	0.67	0.68	0.69	0.71	0.72	0.73	0.71	0.66
		Med-High	Orange	Alternate Heating	Gas Heat Rise ( <sup>O</sup> F)	35	35	36	37	37	38	39	39	41	44
				_	Gas Heat Rise ( <sup>o</sup> C)	19	20	20	20	21	21	21	22	23	25
		Lliab	Black	High Static Cooling	CFM	2212	2167	2124	2061	1976	1892	1794	1699	1567	1438
		High	DIACK	Only	BHP	0.97	0.99	1.00	0.97	0.95	0.91	0.86	0.82	0.77	0.71
					CFM	641	551	462	385	289	216	163	115		
		Lowt	Blue		BHP	0.05	0.06	0.06	0.07	0.07	0.08	0.08	0.09		
		Low†	Diue		Gas Heat Rise ( <sup>o</sup> F)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					CFM	1437	1395	1351	1307	1265	1221	1176	1132	1084	1039
		Med-Low	Pink	Alternate Cooling	BHP	0.29	0.30	0.31	0.32	0.33	0.34	0.35	0.36	0.37	0.38
		Med-Low	PINK	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	60	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	33	NA	NA	NA	NA	NA	NA	NA	NA	NA
48115	30 - 60				CFM	1771	1735	1699	1664	1627	1592	1557	1522	1486	1450
40113	(17 - 33)	Ma aliuwa **	Red	Cooling	BHP	0.51	0.52	0.53	0.55	0.56	0.57	0.58	0.59	0.61	0.62
		Medium**	Rea	Alternate Heating	Gas Heat Rise ( <sup>O</sup> F)	48	49	50	51	53	54	55	56	58	59
				_	Gas Heat Rise ( <sup>o</sup> C)	27	27	28	29	29	30	31	31	32	33
					CFM	1928	1897	1862	1830	1796	1764	1732	1698	1620	1512
		Mad Llink'	0.000	Heating	BHP	0.64	0.65	0.67	0.68	0.69	0.71	0.72	0.73	0.71	0.66
		Med-High‡	Orange	Alternate Cooling	Gas Heat Rise ( <sup>o</sup> F)	44	45	46	47	48	49	49	50	53	57
					Gas Heat Rise ( <sup>o</sup> C)	25	25	26	26	26	27	27	28	29	31
		High	Black	High Static Cooling	CFM	2212	2167	2124	2061	1976	1892	1794	1699	1567	1438
		High	DIACK	Only	BHP	0.97	0.99	1.00	0.97	0.95	0.91	0.86	0.82	0.77	0.71

Table 9 – Dry Coil Air Delivery\* - Horizontal and Downflow Discharge Sizes 24-60 (Continued)

	Heating			Allowable					0	(in. W.C.)	,				
Unit Size	Rise <sup>o</sup> F ( <sup>o</sup> C)	Motor Speed	Тар	Allowable Functions		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
					CFM	641	551	462	385	289	216	163	115		
		1	Blue		BHP	0.05	0.06	0.06	0.07	0.07	0.08	0.08	0.09		
		Low†	Diue		Gas Heat Rise ( <sup>O</sup> F)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					CFM	1437	1395	1351	1307	1265	1221	1176	1132	1084	1039
		Med-Low	Pink	Alternate Cooling	BHP	0.29	0.30	0.31	0.32	0.33	0.34	0.35	0.36	0.37	0.38
		wed-Low	PINK	Alternate Cooling	Gas Heat Rise ( <sup>o</sup> F)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
48130	35 - 65				CFM	1771	1735	1699	1664	1627	1592	1557	1522	1486	1450
40130	(19 - 36)	NA - 11 **	Red	Cooling	BHP	0.51	0.52	0.53	0.55	0.56	0.57	0.58	0.59	0.61	0.62
		Medium**	Rea	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	53	54	56	57	58	59	61	62	64	65
				_	Gas Heat Rise ( <sup>o</sup> C)	30	30	31	32	32	33	34	34	35	36
					CFM	1928	1897	1862	1830	1796	1764	1732	1698	1620	1512
			~	Heating	BHP	0.64	0.65	0.67	0.68	0.69	0.71	0.72	0.73	0.71	0.66
		Med-High‡	Orange	Alternate Cooling	Gas Heat Rise ( <sup>o</sup> F)	49	50	51	52	53	54	55	56	58	62
				_	Gas Heat Rise ( <sup>o</sup> C)	27	28	28	29	29	30	30	31	32	35
		Lliab	Black	High Static Cooling	CFM	2212	2167	2124	2061	1976	1892	1794	1699	1567	1438
		High	DIACK	Only	BHP	0.97	0.99	1.00	0.97	0.95	0.91	0.86	0.82	0.77	0.71
					CFM	641	551	462	385	289	216	163	115		
		Low†	Blue	Alternate Heating	BHP	0.05	0.06	0.06	0.07	0.07	0.08	0.08	0.09		
		LOWI	Diue	Allemale nealing	Gas Heat Rise ( <sup>O</sup> F)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
					CFM	1437	1395	1351	1307	1265	1221	1176	1132	1084	1039
		Med-Low‡	Pink	Heating	BHP	0.29	0.30	0.31	0.32	0.33	0.34	0.35	0.36	0.37	0.38
		Med-LOW1	FIIK	Alternate Cooling	Gas Heat Rise ( <sup>O</sup> F)	47	48	50	51	53	55	57	59	62	64
					Gas Heat Rise ( <sup>o</sup> C)	26	27	28	28	29	30	32	33	34	36
60090	35 - 65				CFM	1914	1881	1848	1814	1780	1748	1716	1681	1619	1512
00030	(19 - 36)	Medium**	Red	Cooling	BHP	0.62	0.64	0.65	0.67	0.68	0.69	0.71	0.72	0.71	0.66
		Medium	Red	Alternate Heating	Gas Heat Rise ( <sup>O</sup> F)	35	36	36	37	38	38	39	40	41	44
					Gas Heat Rise ( <sup>o</sup> C)	19	20	20	21	21	21	22	22	23	25
					CFM	1928	1897	1862	1830	1796	1764	1732	1698	1620	1512
		Modiliat	Orange	Alternate Cooling	BHP	0.64	0.65	0.67	0.68	0.69	0.71	0.72	0.73	0.71	0.66
		Med-High	Orange	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	35	35	36	37	37	38	39	39	41	44
					Gas Heat Rise ( <sup>o</sup> C)	19	20	20	20	21	21	21	22	23	25
		High	Black	High Static Cooling	CFM	2212	2167	2124	2061	1976	1892	1794	1699	1567	1438
		підії	DIACK	Only	BHP	0.97	0.99	1.00	0.97	0.95	0.91	0.86	0.82	0.77	0.71

Table 9 – Dry Coil Air Delivery* - Horizontal and Downflow Discharge Sizes 24-60 (Continu	ed)
Tuble > Dig Contrin Denverg Tion Loncur and Downhow Discharge Sizes 21 00 (Continu	cuj

		Heating			Table 9 – Dry Com					8	(in. W.C.)	)				
$ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	Unit Size	Rise	Motor Speed	Тар	Allowable Functions		0.1	0.2	0.3		· · · · ·	0.6	0.7	0.8	0.9	1
$ 0.011 \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $						-			-							
$ 6015 \ 135 \ 135 \ 135 \ 135 \ 135 \ 135 \ 135 \ 135 \ 135 \ 135 \ 136 \ 13$				Dhue												
60115         30 - 60 (17 - 33)         0.34 (17 - 33)         0.31 (17 - 33			LOW	Diue		Gas Heat Rise ( <sup>O</sup> F)			NA	NA	NA	NA	NA		NA	NA
60115         Med-Low         Pink         Alternate Loosing Alternate Heading         BHP         0.29         0.30         0.31         0.32         0.33         0.34         0.35         0.36         0.37         0.38           60115         30 - 60         (17 - 33)         Med.um**         Pink         Alternate Rise (°)         30         NA         N						Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA			NA	NA
80115         90-60 (17-33)         Med-Low         Pink         Atternate Heating (Gas Heat Rise (°))         60         NA																
6015         No         NA         N			Modelow	Dink	Alternate Cooling											
80115         30 - 60 (17 - 33)         Medium**         Red Medium**         Cooling Alternate Heating Alternate Cooling Med-Hight         Cooling Alternate Meating Alternate Cooling Alternate Co			Med-Low	PINK	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	60	NA	NA	NA	NA	NA	NA	NA	NA	NA
60115         (17 - 33)         Medium**         Red         Cooling Alternate Heating Alternate Heating Alternate Heating Alternate Cooling         BHP         0.62         0.64         0.65         0.67         0.68         0.69         0.71         0.72         0.71         0.66           6as Heat Rise (°C)         25         25         26         26         27         28         28         29         31           Medi-High‡         Orang         Heating Alternate Cooling         Heating Alternate Cooling         FMP         0.62         26         27         28         28         29         31           Gas Heat Rise (°C)         25         25         26         26         27         27         28         29         31           Medi-High‡         Orang         Heating Alternate Cooling         CFM         1928         1897         1862         1830         1764         1722         0.73         0.71         0.66         0.67         0.69         0.69         0.71         0.72         0.71         0.66         0.67         0.68         0.69         0.71         0.72         0.71         0.61         0.67         0.69         0.69         0.61         0.69         0.69         0.61         0.69<						Gas Heat Rise ( <sup>o</sup> C)	33	NA	NA	NA	NA	NA	NA	NA	NA	NA
	60115	30 - 60					1914	1881	1848	1814	1780	1748	1716	1681	1619	
	00115	(17 - 33)	M	Dud	Cooling	BHP	0.62	0.64	0.65	0.67	0.68	0.69	0.71	0.72	0.71	0.66
60130         35 - 65         (19 - 36)         Pink         Alternate Cooling         CFM         1928         1897         1862         1830         1796         1764         1732         1698         1620         1512           Med-Hight         Orange         Heating Alternate Cooling         BHP         0.64         0.65         0.67         0.68         0.69         0.71         0.72         0.73         0.71         0.66           High         Black         High Static Cooling Only         Gas Heat Rise (°C)         25         25         26         26         27         27         28         29         31           Black         High Static Cooling Only         CFM         641         551         462         385         289         216         163         115			wealum**	Red		Gas Heat Rise ( <sup>o</sup> F)	45	45	46	47	48	49	50	51	53	57
60130         35 - 65         (19 - 36)         Heating Heating Atternate Cooling Attern					_	Gas Heat Rise ( <sup>o</sup> C)	25	25	26	26	27	27	28	28	29	31
							1928	1897	1862	1830	1796	1764	1732	1698	1620	1512
$ \left( \begin{array}{c c c c c c c c c c c c c c c c c c c $				~	Heating	BHP	0.64	0.65	0.67	0.68	0.69	0.71	0.72	0.73	0.71	0.66
60130         High High High High Medi-Hight         Black High High Black         High Static Cooling Only         CFM BHP         2212         2167         2124         2061         1976         1892         1794         1699         1567         1438           0nly         BHP         0.97         0.99         1.00         0.97         0.95         0.91         0.86         0.82         0.77         0.71           Low†         Blue         CFM         641         551         462         385         289         216         163         115             BHP         0.05         0.06         0.07         0.07         0.08         0.08         0.09             Gas Heat Rise (°F)         NA         NA <td< td=""><td></td><td></td><td>Med-High‡</td><td>Orange</td><td></td><td>Gas Heat Rise (<sup>o</sup>F)</td><td>44</td><td>45</td><td>46</td><td>47</td><td>48</td><td>49</td><td>49</td><td>50</td><td>53</td><td>57</td></td<>			Med-High‡	Orange		Gas Heat Rise ( <sup>o</sup> F)	44	45	46	47	48	49	49	50	53	57
60130         High High High N         Black Black         High Static Cooling Only         CFM         2212         2167         2124         2061         1976         1892         1794         1699         1567         1438           0nly         BHP         0.97         0.99         1.00         0.97         0.95         0.91         0.86         0.82         0.77         0.71           Low†         Blue         CFM         641         551         462         385         289         216         163         115             BHP         0.05         0.06         0.06         0.07         0.08         0.08         0.09             Gas Heat Rise (°F)         NA         Sa         Sa<					_	Gas Heat Rise ( <sup>o</sup> C)	25	25	26	26	26	27	27	28	29	31
60130         0.35 - 65         0.11			Lliab	Block	High Static Cooling	CFM	2212	2167	2124	2061	1976	1892	1794	1699	1567	1438
$60130  \left( 19 \cdot 36 \right) \\ 60130  \left( 19 \cdot 36 \right) \\ Medium^{**}  Red  Medium^{**}  Medium^{**}  Red  Medium^{**}  Medium^{**$			High	ыаск	Only	BHP	0.97		1.00		0.95				0.77	0.71
60130         35 - 65 (19 - 36)         Low†         Blue         Gas Heat Rise (°F) Gas Heat Rise (°C)         NA         NA <td></td>																
$60130  \left( \begin{array}{cccccccccccccccccccccccccccccccccccc$				Dhue												
$60130  \left( 19 - 36 \right)  \left( 19 - 36 \right)  \left( 19 - 36 \right)  \left( 19 - 48 \right)  \left( 1$			LOW	Diue		Gas Heat Rise ( <sup>O</sup> F)										
$60130  Med-Low  Pink  Med-Low  Pink  Alternate Cooling \\ Medium^{**}  Medium^{**}  Red  Medium^{**}  Red  Medium^{**}  Red  Medium^{**}  Red  Medium^{**}  Red  Medium^{**}  Red  Medium^{**}  Medium^{**}  Medium^{**}  Red  Medium^{**}  Medium^{$						Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
$60130  \left  \begin{array}{c} Med-Low \\ (19-36) \end{array} \right  \\ 60130  \left  \begin{array}{c} Med-Low \\ Med-Low \end{array} \right  \\ Pink \\ Medium^{**} \\ Hedium^{**} \\ Hedium^{**} \end{array} \right  \\ Red  \left  \begin{array}{c} Alternate Cooling \\ Gas Heat Rise (^{0}C) \\ Alternate Heating \end{array} \right  \\ CFM \\ Alternate Heating \end{array} \right  \\ CFM \\ FFM \\ Product \\ CFM \\ Product \\ Produc$														-		
$60130  \left  \begin{array}{cccccccccccccccccccccccccccccccccccc$			Modelow	Dink	Altornata Cooling											
60130       35 - 65 (19 - 36)       Medium**       Red       Cooling Alternate Heating       1914       1881       1848       1814       1780       1748       1716       1681       1619       1512         Medium**       Red       Cooling Alternate Heating       Exception (0)       0.62       0.64       0.65       0.67       0.68       0.69       0.71       0.72       0.71       0.66         Gas Heat Rise (°F)       49       50       51       52       53       54       55       56       58       62         Gas Heat Rise (°F)       49       50       51       52       53       54       55       56       58       62         Med-High‡       Orange       Heating Alternate Cooling       1928       1897       1862       1830       1796       1764       1732       1698       1620       1512         Med-High‡       Orange       Heating Alternate Cooling       EFM       1928       1897       1862       1830       1796       1764       1732       1698       1620       1512         Med-High‡       Orange       Heating Alternate Cooling       EFM       49       50       51       52       53       54       55			Med-Low	PINK	Alternate Cooling	Gas Heat Rise ( <sup>o</sup> F)	NA		NA	NA	NA	NA	NA	NA	NA	
60130       (19 - 36)       Medium**       Red       Cooling Alternate Heating       BHP       0.62       0.64       0.65       0.67       0.68       0.69       0.71       0.72       0.71       0.66         Alternate Heating       Alternate Heating       Gas Heat Rise (°F)       49       50       51       52       53       54       55       56       58       62         Med-High‡       Med-High‡       Orange       Heating Alternate Cooling       CFM       1928       1897       1862       1830       1796       1764       1732       1698       1620       1512         Med-High‡       Orange       Heating Alternate Cooling       CFM       1928       1897       1862       1830       1796       1764       1732       1698       1620       1512         Gas Heat Rise (°C)       27       28       28       29       29       30       31       31       32       35         High-High‡       Medium**       Heating Alternate Cooling       CFM       1928       1897       1862       1830       1796       0.71       0.72       0.71       0.66         Gas Heat Rise (°C)       27       28       28       29       29       30 <td></td> <td></td> <td></td> <td></td> <td></td> <td>Gas Heat Rise (<sup>o</sup>C)</td> <td>NA</td>						Gas Heat Rise ( <sup>o</sup> C)	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
(19-36)       Medium**       Red       Cooling Alternate Heating       BHP       0.62       0.64       0.65       0.67       0.68       0.69       0.71       0.72       0.71       0.66         Medium**       Red       Aternate Heating       Gas Heat Rise (°F)       49       50       51       52       53       54       55       56       58       62         Gas Heat Rise (°C)       27       28       28       29       29       30       31       31       32       35         Med-High‡       Orange       Heating Alternate Cooling       CFM       1928       1897       1862       1830       1796       1764       1732       1698       1620       1512         Med-High‡       Orange       Heating Alternate Cooling       BHP       0.64       0.65       0.67       0.68       0.69       0.71       0.72       0.73       0.71       0.66         Gas Heat Rise (°F)       49       50       51       52       53       54       55       56       58       62         Gas Heat Rise (°F)       49       50       51       52       53       54       55       56       58       62         Gas Heat Ri	60130	35 - 65				-	1914	1881	1848	1814	1780	1748	1716	1681	1619	1512
Med-High‡         Orange         High Static Cooling         CFM         2212         2167         2124         2061         1976         1892         1892         1897         1862         1830         1796         1764         1732         1698         1620         1512           Med-High‡         0range         Heating Alternate Cooling         0.64         0.65         0.67         0.68         0.69         0.71         0.72         0.73         0.71         0.66           Gas Heat Rise (°C)         27         28         28         29         29         30         31         31         32         35           Med-High‡         0range         Heating Alternate Cooling         CFM         1928         1897         1862         1830         1796         1764         1732         1698         1620         1512           Gas Heat Rise (°F)         49         50         51         52         53         54         55         56         58         62           High         Black         High Static Cooling         CFM         2212         2167         2124         2061         1976         1892         1794         1699         1567         1438	00130	(19 - 36)	Maaliuuaa**	Ded	Cooling	BHP										
Med-High‡         Orange         Heating Alternate Cooling         CFM         1928         1897         1862         1830         1796         1764         1732         1698         1620         1512           Med-High‡         Orange         Heating Alternate Cooling         BHP         0.64         0.65         0.67         0.68         0.69         0.71         0.72         0.73         0.71         0.66           Gas Heat Rise (°F)         49         50         51         52         53         54         55         56         58         62           Gas Heat Rise (°C)         27         28         28         29         29         30         30         31         32         35           High         High Static Cooling         CFM         2212         2167         2124         2061         1976         1892         1794         1699         1567         1438			Wedium	∕ledium** Red	Alternate Heating	Gas Heat Rise ( <sup>o</sup> F)	49	50	51	52	53	54	55	56	58	62
Med-High‡         Orange         Heating Alternate Cooling         CFM         1928         1897         1862         1830         1796         1764         1732         1698         1620         1512           Med-High‡         Heating Alternate Cooling         BHP         0.64         0.65         0.67         0.68         0.69         0.71         0.72         0.73         0.71         0.66           Gas Heat Rise (°F)         49         50         51         52         53         54         55         56         58         62           Gas Heat Rise (°C)         27         28         28         29         29         30         30         31         32         35           High         High Static Cooling         CFM         2212         2167         2124         2061         1976         1892         1794         1699         1567         1438			Medium** Red		Gas Heat Rise ( <sup>o</sup> C)	27	28	28	29	29	30	31	31	32	35	
Med-High‡         Orange         High and ternate Cooling         Gas Heat Rise (°F)         49         50         51         52         53         54         55         56         58         62           Gas Heat Rise (°C)         27         28         28         29         29         30         30         31         32         35           High         High Static Cooling         CFM         2212         2167         2124         2061         1976         1892         1794         1699         1567         1438						CFM	1928	1897	1862	1830	1796	1764	1732	1698	1620	1512
High         High Static Cooling         CFM         2212         2167         2124         2061         1976         1892         1794         1699         1567         1438			Mad Link	0	Heating	BHP					0.69					
High         Block         High Static Cooling         CFM         2212         2167         2124         2061         1976         1892         1794         1699         1567         1438			Med-High‡	Orange		Gas Heat Rise ( <sup>o</sup> F)	49	50	51	52	53	54	55	56	58	62
High Black High Static Cooling CFM 2212 2167 2124 2061 1976 1892 1794 1699 1567 1438						Gas Heat Rise ( <sup>o</sup> C)	27	28	28	29	29	30	30	31	32	35
			ا انجام	Dicali	High Static Cooling		2212	2167	2124	2061	1976	1892	1794	1699	1567	1438
			High	ыаск												

Table 9 – Dry Coil Air Delivery\* - Horizontal and Downflow Discharge Sizes 24-60 (Continued)

Shaded areas indicate speed/static combinations that are not permitted for dehumidification speed.

\* Air delivery values are without air filter and are for dry coil (See Wet Coil Pressure Drop Table).

† Factory-shipped continuous fan speed

‡ Factory-shipped heating speed

\*\* Factory-shipped cooling speed

"NA" = Not allowed for heating speed "High Static Cooling" = Only to be used for cooling function (not allowed for heating function) NOTE: Deduct field-supplied air filter pressure drop and wet coil pressure drop to obtain static pressure available for ducting.

### Table 10 – Wet Coil Pressure Drop (IN. W.C.)

Unit								Stand	ard CFM (S	SCFM)							
Size	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000	2100	2200
24	0.03	0.04	0.04	0.05	0.06												
30				0.05	0.06	0.07	0.08	0.11									
36				0.06	0.06	0.09	0.10	0.11	0.14								
42					0.05	0.05	0.06	0.07	0.08	0.08	0.09	0.09	0.11				
48							0.04	0.06	0.09	0.10	0.10	0.11	0.12	0.13	0.14		
60										0.06	0.07	0.01	0.08	0.09	0.10	0.12	0.13

### Table 11 – Economizer with 1-in. Filter Pressure Drop (IN. W.C.)

Filter Size in. (mm)	Cooling	Standard CFM (SCFM)																
Filter Size III. (IIIII)	Tons	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000	2100	2200
600-1400 CFM 12x20x1+12x20x1 (305x508x25+305x508x25)	2.0, 2.5	-	-	0.09	0.14	0.16	0.18	0.25	0.28	0.30	-	-	-	-	-	-	-	-
1200-1800 CFM 16x24x1+14x24x1 (406x610x25+356x610x25)	3.5	-	-	-	-	-	-	0.10	0.11	0.12	0.13	0.14	0.16	0.16	-	-	-	-
1500-2200 CFM 16x24x1+18x24x1 (406x610x25+457x610x25)	3.0, 4.0, 5.0	-	-	-	-	-	.08	.10	.11	.13	0.15	0.17	0.18	0.20	0.21	0.22	0.23	0.23

### Table 12 – Filter Pressure Drop Table (IN. W.C.)

Filter Size in. (mm)	Cooling	Standard CFM (SCFM)																
Filter Size III. (IIIII)	Tons	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000	2100	2200
600-1400 CFM 12x20x1+12x20x1 (305x508x25+305x508x25)	2.0, 2.5	0.03	0.05	0.06	0.08	0.10	0.11	0.13	0.14	0.16	-	-	-	-	-	-	-	-
1200-1800 CFM 16x24x1+14x24x1 (406x610x25+356x610x25)	3.5	-	-	-	-	-	-	0.07	0.08	0.09	0.09	0.10	0.11	0.12	-	-	-	-
1100-2200 CFM 16x24x1+18x24x1 (406x610x25+457x610x25)	3.0 4.0 5.0	-	-	-	-	-	.02	.02	.03	.03	0.04	0.06	0.08	0.10	0.11	0.13	0.14	0.15

## Maintenance

To ensure continuing high performance and to minimize the possibility of premature equipment failure, periodic maintenance must be performed on this equipment. This unit should be inspected at least once each year by a qualified service person. To troubleshoot unit, refer to Table 13, Table 14, Table 15, Troubleshooting Chart.

NOTE TO EQUIPMENT OWNER: Consult your local dealer about the availability of a maintenance contract.

# WARNING

### PERSONAL INJURY AND UNIT DAMAGE HAZARD

Failure to follow this warning could result in personal injury or death and unit component damage.

The ability to properly perform maintenance on this equipment requires certain expertise, mechanical skills, tools and equipment. If you do not possess these, do not attempt to perform any maintenance on this equipment, other than those procedures recommended in the Owner's Manual.

# WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow these warnings could result in personal injury or death:

- 1. Turn off electrical power to the unit and install lock out tag before performing any maintenance or service on this unit.
- 2. Use extreme caution when removing panels and parts.
- 3. Never place anything combustible either on or in contact with the unit.

# **CAUTION**

### UNIT OPERATION HAZARD

Failure to follow this caution may result in improper operation.

Errors made when reconnecting wires may cause improper and dangerous operation. Label all wires prior to disconnecting when servicing.

# **CAUTION**

### ENVIRONMENTAL HAZARD

Failure to follow this caution may result in environmental pollution. Remove and re-cycle all components or materials (i.e. oil, refrigerant, etc) before unit final disposal.

The minimum maintenance requirements for this equipment are as follows:

- 1. Inspect air filter(s) each month. Clean or replace when necessary.
- 2. Inspect indoor coil, drain pan, and condensate drain each cooling season for cleanliness. Clean when necessary.
- 3. Inspect blower motor and wheel for cleanliness at the beginning of each heating and cooling season. Clean when necessary. For first heating and cooling season, inspect blower wheel bi-monthly to determine proper cleaning frequency.
- 4. Check electrical connections for tightness and controls for proper operation each heating and cooling season. Service when necessary.
- 5. Ensure electric wires are not in contact with refrigerant tubing or sharp metal edges.

- 6. Check and inspect heating section before each heating season. Clean and adjust when necessary.
- 7. Check flue hood and remove any obstructions, if necessary.

### Air Filter

**IMPORTANT:** Never operate the unit without a suitable air filter in the return-air duct system. Always replace the filter with the same dimensional size and type as originally installed. See Table 1 for recommended filter sizes.

Inspect air filter(s) at least once each month and replace (throwaway-type) or clean (cleanable-type) at least twice during each cooling season and twice during the heating season, or whenever the filter becomes clogged with dust and lint.

### Indoor Blower and Motor

**NOTE:** All motors are pre-lubricated. Do not attempt to lubricate these motors.

For longer life, operating economy, and continuing efficiency, clean accumulated dirt and grease from the blower wheel and motor annually.



## ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death. Disconnect and tag electrical power to the unit before cleaning the blower motor and wheel.

To clean the blower motor and wheel:

- 1. Remove and disassemble blower assembly as follows: a. Remove blower access panel (see Fig. 22).
  - b. Disconnect 5 pin plug and 4 pin plug from indoor blower motor. Remove capacitor if required.
  - c. On all units remove blower assembly from unit. Remove screws securing blower to blower partition and slide assembly out. Be careful not to tear insulation in blower compartment.
  - d. Ensure proper reassembly by marking blower wheel and motor in relation to blower housing before disassembly.
  - e. Loosen setscrew(s) that secures wheel to motor shaft, remove screws that secure motor mount brackets to housing, and slide motor and motor mount out of housing.
- 2. Remove and clean blower wheel as follows:
  - a. Ensure proper reassembly by marking wheel orientation.
  - b. Lift wheel from housing. When handling and/or cleaning blower wheel, be sure not to disturb balance weights (clips) on blower wheel vanes.
  - c. Remove caked-on dirt from wheel and housing with a brush. Remove lint and/or dirt accumulations from wheel and housing with vacuum cleaner, using soft brush attachment. Remove grease and oil with mild solvent.
  - d. Reassemble wheel into housing.
  - e. Reassemble motor into housing. Be sure setscrews are tightened on motor shaft flats and not on round part of shaft. Reinstall blower into unit. Reinstall capacitor.
  - f. Connect 5 pin plug and 4 pin plug to indoor blower motor.
  - g. Reinstall blower access panel (see Fig. 22).
- 3. Restore electrical power to unit. Start unit and check for proper blower rotation and motor speeds during heating and cooling cycles.

## Induced Draft (combustion air) Blower Assembly

The induced-draft blower assembly consists of the inducer motor, the blower housing, and the induced-draft blower wheel.

Clean periodically to assure proper airflow and heating efficiency. Inspect blower wheel every fall and periodically during the heating

season. For the first heating season, inspect blower wheel bimonthly to determine proper cleaning frequency.

To inspect blower wheel, remove draft hood assembly. Shine a flashlight into opening to inspect wheel. If cleaning is required, remove induced-draft blower assembly as follows:

- 1. Remove control access panel (See Fig. 22).
- 2. Remove the 5 screws that attach induced-draft blower assembly to the flue collector box cover.
- 3. Slide the assembly out of the unit. (See Fig. 24). Clean the blower wheel. If additional cleaning is required, continue with Steps 4 and 5.
- 4. To remove blower wheel, remove 2 setscrews.
- 5. To remove inducer motor, remove screws that hold the inducer motor to the blower housing.
- 6. To reinstall, reverse the procedure outlined above.

## Flue Gas Passageways

To inspect the flue collector box and upper areas of the heat exchanger:

- 1. Remove the induced draft blower assembly according to directions in the Induced Draft Blower Assembly section.
- Remove the 11 screws holding the flue collector box cover (See Fig. 21) to the heat exchanger assembly. Inspect the heat exchangers.
- 3. Clean all surfaces, as required, using a wire brush.

## Limit Switch

Remove blower access panel (see Fig. 22). Limit switch is located on the fan partition.

### **Burner Ignition**

Unit is equipped with a direct spark ignition 100 percent lockout system. Ignition module (IGC) is located in the control box (See Fig. 19). Module contains a self-diagnostic LED. During servicing, refer to label diagram or Table 6 in these instructions for LED interpretation.

If lockout occurs, unit may be reset by either momentarily interrupting power supply to unit or by turning selector switch to OFF position at the thermostat.

### **Main Burners**

At the beginning of each heating season, inspect for deterioration or blockage due to corrosion or other causes. Observe the main burner flames and adjust, if necessary.

### **Removal of Gas Train**

To remove the gas train for servicing:

- 1. Shut off main gas valve.
- 2. Shut off power to unit and install lockout tag.
- 3. Remove control access panel (See Fig. 22).
- 4. Disconnect gas piping at unit gas valve.
- 5. Remove fan partition mounting bracket (2 screws located on the left side of control compartment on the fan partition panel). Slide bracket forward, bottom first, to remove. (See Fig. 21.)
- 6. Remove wires connected to gas valve. Mark each wire.
- 7. Remove the mounting screw that attaches the burner rack to the unit base (See Fig. 21).
- 8. Partially slide the burner rack out of the unit (see Fig. 21 and Fig. 24). Remove ignitor and sensor wires at the burner assembly. Remove wires to rollout switch.
- 9. Slide the burner rack out of the unit (See Fig. 21 and Fig. 24).
- 10. To reinstall, reverse the procedure outlined above.
- 11. Check all connections for leaks.

# WARNING

### FIRE, EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Do not purge gas supply into the combustion chamber. Do not use a match or other open flame to check for gas leaks.

Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.


# Outdoor Coil, Indoor Coil, and Condensate Drain Pan

Inspect the condenser coil, evaporator coil, and condensate drain pan at least once each year.

The coils are easily cleaned when dry; therefore, inspect and clean the coils either before or after each cooling season. Remove all obstructions, including weeds and shrubs, that interfere with the airflow through the condenser coil.

Straighten bent fins with a fin comb. If coated with dirt or lint, clean the coils with a vacuum cleaner, using the soft brush attachment. Be careful not to bend the fins. If coated with oil or grease, clean the coils with a mild detergent and water solution. Rinse coils with clear water, using a garden hose. Be careful not to splash water on motors, insulation, wiring, or air filter(s). For best results, spray condenser coil fins from inside to outside the unit. On units with an outer and inner condenser coil, be sure to clean between the coils. Be sure to flush all dirt and debris from the unit base.

Inspect the drain pan and condensate drain line when inspecting the coils. Clean the drain pan and condensate drain by removing all foreign matter from the pan. Flush the pan and drain trough with clear water. Do not splash water on the insulation, motor, wiring, or air filter(s). If the drain trough is restricted, clear it with a "plumbers snake" or similar probe device.

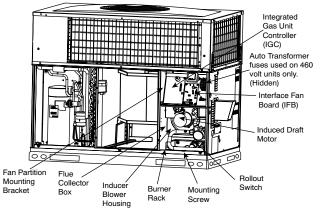

A170031

Fig. 21 – Blower Housing and Flue Collector Box



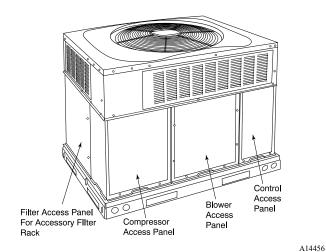


Fig. 22 – Unit Access Panels



C99085

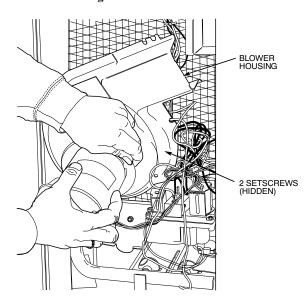

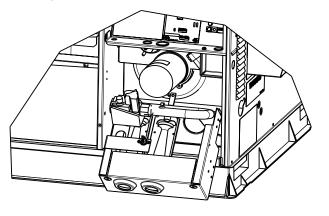

A07680

### **Outdoor Fan**

# WARNING

Fig. 24 - Burner Rack Removed

### UNIT OPERATION HAZARD

Failure to follow this caution may result in damage to unit components. Keep the condenser fan free from all obstructions to ensure proper cooling operation. Never place articles on top of the unit.


- 1. Remove 6 screws holding outdoor grille and motor to top cover.
- 2. Turn motor/grille assembly upside down on top cover to expose fan blade.
- 3. Inspect the fan blades for cracks or bends.
- 4. If fan needs to be removed, loosen setscrew and slide fan off motor shaft.
- 5. When replacing fan blade, position blade as shown in Fig. 25.
- 6. Ensure that setscrew engages the flat area on the motor shaft when tightening.
- 7. Replace grille.

### **Electrical Controls and Wiring**

Inspect and check the electrical controls and wiring annually. Be sure to turn off the electrical power to the unit.

Remove access panels (see Fig. 22) to locate all the electrical controls and wiring. Check all electrical connections for tightness. Tighten all screw connections. If any smoky or burned connections are noticed, disassemble the connection, clean all the parts, re-strip the wire end and reassemble the connection properly and securely.

After inspecting the electrical controls and wiring, replace all the panels. Start the unit, and observe at least one complete cooling cycle to ensure proper operation. If discrepancies are observed in operating cycle, or if a suspected malfunction has occurred, check each electrical component with the proper electrical instrumentation. Refer to the unit wiring label when making these checks.

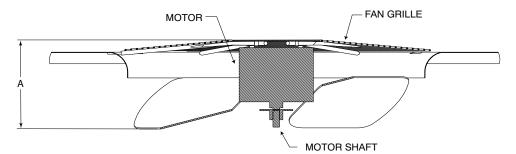

A08505

### Max Distance Between Top of Fan Grille and Bottom of Fan Blade

Size	" <b>A</b> "						
5126	IN.	mm					
24	9.0	228					
30	8.0	203					
36	7.6	193					
42	7.6	193					
48	7.6	193					
60	7.6	193					

### Fig. 25 – Fan Blade Position

## **Refrigerant Circuit**

Annually inspect all refrigerant tubing connections.

# WARNING

## EXPLOSION, SAFETY AND ENVIRONMENTAL HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

System under pressure. Relieve pressure and recover all refrigerant before system repair or final unit disposal. Use all service ports and open all flow-control devices, including solenoid valves.

If low cooling performance is suspected, leak-test all refrigerant tubing using an electronic leak-detector or liquid-soap solution. If a refrigerant leak is detected, refer to the Check for Refrigerant Leaks section.

If no refrigerant leaks are found and low cooling performance is suspected, refer to the Checking and Adjusting Refrigerant Charge section.

### **Gas Input**

The gas input does not require checking unless improper heating performance is suspected. If a problem exists, refer to the Start-Up section.

### **Evaporator Airflow**

The heating and/or cooling airflow does not require checking unless improper performance is suspected. If a problem exists, be sure that all supply- and return-air grilles are open and free from obstructions, and that the air filter is clean. When necessary, refer to the Indoor Airflow and Airflow Adjustments section to check the system airflow.

### **Puron Items**

The indoor metering device is either a TXV or orifice type device depending on size.

### **Pressure Switches**

Pressure switches are protective devices wired into control circuit (low voltage). They shut off compressor if abnormally high or low pressures are present in the refrigeration circuit. These pressure switches are specifically designed to operate with Puron (R-410A) systems. R-22

pressure switches must not be used as replacements for the Puron (R-410A) system.

### Low Pressure Switch (if used)

This switch is located on the suction line and protects against low suction pressures caused by such events as loss of charge, low airflow across indoor coil, dirty filters, etc. It opens at 50  $\rangle$  psig. If system pressure is above this, switch should be closed. To check switch:

- 1. Turn off all power to unit.
- 2. Disconnect leads on switch.
- 3. Apply ohm meter leads across switch. You should have continuity on a closed switch.

**NOTE:** Because these switches are attached to refrigeration system under pressure, it is not advisable to remove this device for troubleshooting unless you are reasonably certain that a problem exists. If switch must be removed, remove and recover all system charge so that pressure gauges read 0 psig. Never open system without breaking vacuum with dry nitrogen.

### **High-Pressure Switch**

The high-pressure switch is located in the discharge line and protects against excessive condenser coil pressure. It opens at 650 psig.

High pressure may be caused by a dirty outdoor coil, failed fan motor, or outdoor air recirculation. To check switch:

- 1. Turn off all power to unit.
- 2. Disconnect leads on switch.
- 3. Apply ohm meter leads across switch. You should have continuity on a closed switch.

### **Compressor (Puron Refrigerant)**

The compressor used in this product is specifically designed to operate with Puron (R-410A) refrigerant and cannot be interchanged.

The compressor is an electrical (as well as mechanical) device. Exercise extreme caution when working near compressors. Power should be shut off, if possible, for most troubleshooting techniques. Refrigerants present additional safety hazards.

38

# • WARNING

### FIRE/EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death and/or property damage.

Wear safety glasses and gloves when handling refrigerants. Keep torches and other ignition sources away from refrigerants and oils.

For models that have a scroll compressor, the compressor pumps refrigerant throughout the system by the interaction of a stationary and an orbiting scroll. The scroll compressor has no dynamic suction or discharge valves, and it is more tolerant of stresses caused by debris, liquid slugging, and flooded starts. The compressor is equipped with a noise reducing shutdown device and an internal pressure relief port. The pressure relief port is a safety device, designed to protect against extreme high pressure. The relief port has an operating range between 550 (26.34 kPa) and 625 psig (29.93 kPa) differential pressure.

# ! WARNING

### **EXPLOSION, ENVIRONMENTAL SAFETY HAZARD**

Failure to follow this warning could result in personal injury, death or equipment damage.

This system uses Puron (R-410A) refrigerant which has higher operating pressures than R-22 and other refrigerants. No other refrigerant may be used in this system. Gauge set, hoses, and recovery system must be designed to handle Puron (R-410A). If you are unsure, consult the equipment manufacturer.

## **Refrigerant System**

This information covers the refrigerant system including the compressor oil needed, servicing systems on roofs containing synthetic materials, the filter drier and refrigerant charging.

### **Compressor Oil**

The Copeland scroll compressor uses 3MAF POE oil. If additional oil is needed, use Uniqema RL32-3MAF. If this oil is not available, use Copeland Ultra 32 CC or Mobil Arctic EAL22 CC. This oil is extremely hygroscopic, meaning it absorbs water readily. POE oils can absorb 15 times as much water as other oils designed for HCFC and CFC refrigerants. Take all necessary precautions to avoid exposure of the oil to the atmosphere.

# Servicing Systems on Roofs with Synthetic Materials

POE (polyolester) compressor lubricants are known to cause long term damage to some synthetic roofing materials.

Exposure, even if immediately cleaned up, may cause embrittlement (leading to cracking) to occur in one year or more. When performing any service that may risk exposure of compressor oil to the roof, take appropriate precautions to protect roofing. Procedures which risk oil leakage include, but are not limited to, compressor replacement, repairing refrigerant leaks, replacing refrigerant components such as filter drier, pressure switch, metering device, coil, accumulator, or reversing valve.

### Synthetic Roof Precautionary Procedure

- 1. Cover extended roof working area with an impermeable polyethylene (plastic) drip cloth or tarp. Cover an approximate 10 X 10 ft. (3.1 m X 3.1 m) area.
- 2. Cover area in front of the unit service panel with a terry cloth shop towel to absorb lubricant spills and prevent run-offs, and protect drop cloth from tears caused by tools or components.

- Place terry cloth shop towel inside unit immediately under component(s) to be serviced and prevent lubricant run-offs through the louvered openings in the unit base.
- 4. Perform required service.
- 5. Remove and dispose of any oil contaminated material per local codes.

## Liquid Line Filter Drier

This filter drier is specifically designed to operate with Puron (R-410A). Use only factory-authorized components. Filter drier must be replaced whenever the refrigerant system is opened. When removing a filter drier, use a tubing cutter to cut the drier from the system. Do not unsweat a filter drier from the system. Heat from unsweating will release moisture and contaminants from drier into system.

### Puron (R-410A) Refrigerant Charging

Refer to unit information plate and charging chart. Some R-410A refrigerant cylinders contain a dip tube to allow liquid refrigerant to flow from cylinder in upright position. For cylinders equipped with a dip tube, charge Puron (R-410A) units with cylinder in upright position and a commercial metering device in manifold hose. Charge refrigerant into suction-line.

## Troubleshooting

Use the Troubleshooting Guides (See Table 13, Table 14, and Table 15) if problems occur with these units.

## Start-up Checklist

Use Start-Up checklist to ensure proper start-up procedures are followed.

My Learning Center is your central location for professional residential HVAC training resources that help strengthen careers and businesses. We believe in providing high quality learning experiences both online and in the classroom.

Access My Learning Center with your HVACpartners credentials at www.MLCtraining.com. Please contact us at mylearning@carrier.com with questions.

Table 13 – Troubleshooting Chart	
----------------------------------	--

SYMPTOM	CAUSE	REMEDY				
	Power failure	Call power company				
	Fuse blown or circuit breaker tripped	Replace fuse or reset circuit breaker				
Compressor and condenser fan will not start.	Defective contactor, transformer, or high-pressure, loss-of-charge or low-pressure switch	Replace component				
	Insufficient line voltage	Determine cause and correct				
	Incorrect or faulty wiring	Check wiring diagram and rewire correctly				
	Thermostat setting too high	Lower thermostat temperature setting below room temperature				
	Faulty wiring or loose connections in compressor circuit	Check wiring and repair or replace				
	Compressor motor burned out, seized, or	Determine cause				
Compressor will not start but condensor for runs	internal overload open	Replace compressor				
Compressor will not start but condenser fan runs	Defective run/start capacitor, overload, start relay	Determine cause and replace				
	One leg of 3-phase power dead	Replace fuse or reset circuit breaker Determine cause				
	Low input voltage	Determine cause and correct				
Three-phase scroll compressor makes		Correct the direction of rotation by reversing the				
excessive noise, and there may be a low pressure differential.	Scroll compressor is rotating in the wrong direction	3-phase power leads to the unit. Shut down unit to allow pressures to equalize.				
	Refrigerant overcharge or undercharge	Recover refrigerant, evacuate system, and recharge to capacities shown on rating plate				
	Defective compressor	Replace and determine cause				
Compressor cycles (other than normally	Insufficient line voltage	Determine cause and correct				
satisfying thermostat)	Blocked outdoor coil	Determine cause and correct				
	Defective run/start capacitor	Determine cause and replace				
	Faulty outdoor fan motor or capacitor	Replace				
	Restriction in refrigerant system	Locate restriction and remove				
	Dirty air filter	Replace filter				
	Unit undersized for load	Decrease load or increase unit size				
	Thermostat temperature set too low	Reset thermostat				
Compressor operates continuously	Low refrigerant charge	Locate leak, repair, and recharge				
	Air in system	Recover refrigerant, evacuate system, and recharge				
	Outdoor coil dirty or restricted	Clean coil or remove restriction				
	Dirty air filter	Replace filter				
	Dirty condenser coil	Clean coil				
Excessive head pressure	Refrigerant overcharged	Recover excess refrigerant				
	Air in system	Recover refrigerant, evacuate system, and recharge				
	Condenser air restricted or air short-cycling	Determine cause and correct				
Head pressure too low	Low refrigerant charge	Check for leaks, repair, and recharge.				
	Restriction in liquid tube	Remove restriction				
Excessive suction pressure	Refrigerant overcharged	Recover excess refrigerant				
	Dirty air filter	Replace filter				
	Low refrigerant charge	Check for leaks, repair and recharge				
	Metering device or low side restricted	Remove source of restriction				
Suction pressure too low	Insufficient evaporator airflow	Increase air quantity Check filter–replace if necessary				
	Temperature too low in conditioned area	Reset thermostat				
	Outdoor ambient below 55 F (13 C)	Install low-ambient kit				
	Filter drier restricted	Replace filter				

### Table 14 – Troubleshooting Guide–Heating

SYMPTOM	CAUSE	REMEDY					
	Water in gas line	Drain. Install drip leg.					
	No power to furnace	Check power supply fuses, wiring or circuit breaker.					
	No 24-v power supply to control circuit	Check transformer. NOTE: Some transformers have internal over-current protection that requires a cool-down period to reset.					
Burners will not ignite	Mis-wired or loose connections	Check all wiring and wire nut connections					
	Misaligned spark electrodes	Check flame ignition and sense electrode positioning. Adjust as necessary.					
	No gas at main burners	<ol> <li>Check gas line for air. Purge as necessary. NOTE: After purging gas line of air, wait at least 5 minutes for any gas to dissipate before attempting to light unit.</li> <li>Check gas valve.</li> </ol>					
	Dirty air filter	Clean or replace filter as necessary					
	Gas input to furnace too low	Check gas pressure at manifold match with that on unit nameplate					
Inadequate heating	Unit undersized for application	Replace with proper unit or add additional unit					
	Restricted airflow	Clean or replace filter. Remove any restriction.					
	Limit switch cycles main burners	Check rotation of blower, temperature rise of unit. Adjust as necessary.					
Poor flame characteristics	Incomplete combustion results in: Aldehyde odors, carbon monoxide, sooting flame, floating flame	<ol> <li>Tighten all screws around burner compartment</li> <li>Cracked heat exchanger. Replace.</li> <li>Unit over-fired. Reduce input (change orifices or adjust gas line or manifold pressure).</li> <li>Check burner alignment.</li> <li>Inspect heat exchanger for blockage. Clean as necessary.</li> </ol>					

### Table 15 - Troubleshooting Guide-LED Status Codes

SYMPTOM	CAUSE	REMEDY
No Power or Hardware failure (LED OFF)	Loss of power to control module (IGC)*.	Check 5-amp fuse son IGC*, power to unit, 24-v circuit breaker, and transformer. Units without a 24-v circuit breaker have an internal overload in the 24-v transformer. If the overload trips, allow 10 minutes for automatic reset.
Check fuse, low voltage circuit (LED 1 flash)	Fuse is blown or missing or short circuit in secondary (24VAC) wiring.	Replace fuse if needed. Verify no short circuit in low voltage (24 VAC wiring).
Limit switch faults (LED 2 flashes)	High temperature limit switch is open.	Check the operation of the indoor (evaporator) fan motor. Ensure that the supply-air temperature rise is in accordance with the range on the unit nameplate. Clean or replace filters.
Flame sense fault (LED 3 flashes)	The IGC* sensed flame that should not be present.	Reset unit. If problem persists, replace control board.
4 consecutive limit switch faults (LED 4 flashes)	Inadequate airflow to unit.	Check the operation of the indoor (evaporator) fan motor and that supply-air temperature rise agrees with range on unit nameplate information.
Ignition lockout fault (LED 5 flashes)	Unit unsuccessfully attempted ignition for 15 minutes.	Check ignitor and flame sensor electrode spacing, gaps, etc. Ensure that fame sense and ignition wires are properly terminated. Verify that unit is obtaining proper amount of gas.
Pressure Switch fault (LED 6 flashes)	Open pressure switch.	Verify wiring connections to pressure switch and inducer motor. Verify pressure switch hose is tightly connected to both inducer housing and pressure switch. Verify inducer wheel is properly attached to inducer motor shaft. Verify inducer motor shaft is turning.
Rollout switch fault (LED 7 flashes)	Rollout switch has opened.	Rollout switch will automatically reset, but IGC* will continue to lockout unit. Check gas valve operation. Ensure that induced-draft blower wheel is properly secured to motor shaft. Inspect heat exchanger. Reset unit at unit disconnect.
Internal control fault (LED 8 flashes)	Microprocessor has sensed an error in the software or hardware.	If error code is not cleared by resetting unit power, replace the IGC*.
Temporary 1 hr auto reset <sup>1</sup> (LED 9 flashes)	Electrical interference impeding IGC software	Reset 24-v. to control board or turn thermostat off, then on again. Fault will automatically reset itself in one (1) hour.

\*WARNING  $\triangle$ : If the IGC must be replaced, be sure to ground yourself to dissipate any electrical charge that my be present before handling new control board. The IGC is sensitive to static electricity and my be damaged if the necessary precautions are not taken.

IMPORTANT: Refer to Table 14-Troubleshooting Guide-Heating for additional troubleshooting analysis.

LEGEND

IGC—Integrated Gas Unit Controller LED—Light-Emitting Diode

## Start-Up Checklist

(Remove and Store in Job Files)

### I. PRELIMINARY INFORMATION

MODEL NO.:

SERIAL NO.:

DATE:

TECHNICIAN:

### II. PRESTART-UP (Insert check mark in box as each item is completed)

 $(\cap{l}^{l})$  ) VERIFY THAT ALL PACKING MATERIALS HAVE BEEN REMOVED FROM UNIT

- ( ) REMOVE ALL SHIPPING HOLD DOWN BOLTS AND BRACKETS PER INSTALLATION INSTRUCTIONS
- ( ) CHECK ALL ELECTRICAL CONNECTIONS AND TERMINALS FOR TIGHTNESS
- ( ) CHECK GAS PIPING FOR LEAKS (WHERE APPLICABLE)
- ( ) CHECK THAT INDOOR (EVAPORATOR) AIR FILTER IS CLEAN AND IN PLACE
- ( ) VERIFY THAT UNIT INSTALLATION IS LEVEL
- ( ) CHECK FAN WHEEL, AND PROPELLER FOR LOCATION IN HOUSING/ORIFICE AND SETSCREW TIGHTNESS
- ( ) INSPECT TUBING

### III. START-UP

ELECTRICAL

SUPPLY VOLTAGE			
COMPRESSOR AMPS			
INDOOR (EVAPORATOR) FAN AMPS	S		
TEMPERATURES OUTDOOR (CONDENSER) AIR TEM	PERATURE	DB	
RETURN-AIR TEMPERATURE	DB	WB	
COOLING SUPPLY AIR	DB	WB	
GAS HEAT SUPPLY AIR			
PRESSURES			
GAS INLET PRESSURE		IN. W.C.	
GAS MANIFOLD PRESSURE		IN. W.C.	
REFRIGERANT SUCTION	PSIG,SUCTI	ON LINE TEMP*_	
REFRIGERANT DISCHARGE	PSI	[G,	LIQUID TEMP†
( ) VERIFY REFRIGERANT CHARG	GE USING CHAF	RGING CHARTSC	
GAS HEAT TEMPERATURE RISE TEMPERATURE RISE (See Literature)	) RANGE		
MEASURED TEMPERATURE RISE			

\* Measured at suction inlet to compressor

†Measured at liquid line leaving condenser.