

Installation Instructions

CONTENTS

SAFETY CONSIDERATIONS	1
INTRODUCTION	1
INSTALLATION	2
Unit Identification	2
Installation Precautions	3
General	3
Unit/Ceiling Coordination	8
Unit-to-Unit Connections	8
Unit Suspension	8
• T-BAR SUPPORT	
• OTHER SUPPORTS	
Unit Installation	9
• T-BAR CEILING	
• REGULAR CEILING	
• NON-ACCESSIBLE CEILINGS	
Controls	16
• GENERAL	
• CONTROL ARRANGEMENTS	
• OPERATING SEQUENCES	
• CONTROL INSTALLATION	
• AIRFLOW ADJUSTMENT	
• FUNCTIONAL CHECKOUT	
START-UP	30
Principles of Operation	30
• GENERAL	
• CONSTANT VOLUME OPERATION	
• VARIABLE AIR VOLUME OPERATION	
Preliminary System Check	30
Initial Start-Up	30
• GENERAL CHECKOUT	
SERVICE	30
Gaining Access to Control Area	30
TROUBLESHOOTING	31
General	31
Checking for Obstruction	31
Checking for Leaks	31
To Check Duct Pressure	31

SAFETY CONSIDERATIONS

Air-handling equipment will provide safe and reliable service when operated within design specifications. The equipment should be operated and serviced only by authorized personnel who have a thorough knowledge of system operation, safety devices and emergency procedures.

When installing this unit, observe precautions in the literature, tags and labels attached to the equipment, and any other safety precautions that may apply.

See Fig. 1 for Proposition 65 warning label.




Fig. 1 — Proposition 65 Warning Label

INTRODUCTION

Moduline® units are integral diffuser air terminals. They are available with various control devices for constant volume and variable volume heating and cooling applications.

All units consist of a plenum, valve assembly and diffuser. A typical unit is shown in Fig. 2. The plenum is thermally and acoustically insulated and contains a distribution baffle to provide well-distributed flow to the valve assembly. Figure 3 shows a cross section of a typical 37HS unit.

The valve assembly includes the bellows, which is inflated in proportion to the duct pressure to regulate airflow to the space. The bellows is constructed of durable polyurethane. The assembly is connected at either end to 1/4-in. OD control tubing.

The diffuser assembly is available in a 2-slot, one-way or 2-way blow configuration. A 3-slot director diffuser is available for use in cooling/heating applications.

The standard diffuser assembly is not removable. Control access is made through a ceiling opening (e.g., a removable ceiling tile) or nearby light fixture. The 37HS Moduline terminal is also available with a removable diffuser for installation in non-accessible ceilings.

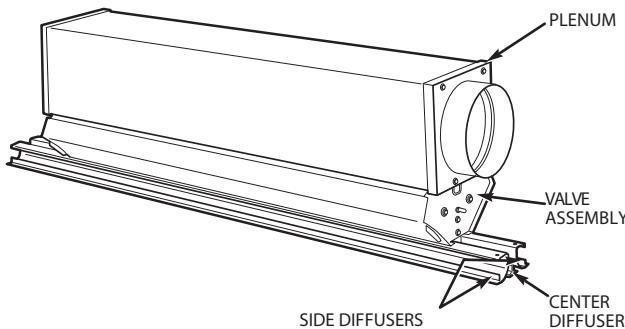


Fig. 2 — Typical 37HS Moduline Air Terminal

INSTALLATION

Unit Identification

Units are factory-shipped one per carton. Compare unit nameplate with model number nomenclature shown in Fig. 4 to be sure correct unit has been received.

Installation Precautions

When installing units, make sure that construction debris does not enter unit or ductwork. Do not remove protective tape from diffuser until installation is complete.

Do not operate the central station air-handling fan without the final filter in place. Accumulated dust and debris can smudge ceilings and damage unit controls.

CAUTION

To avoid damage to bottom units, do not stack units more than 8 high. Make sure that arrows on cartons point up.

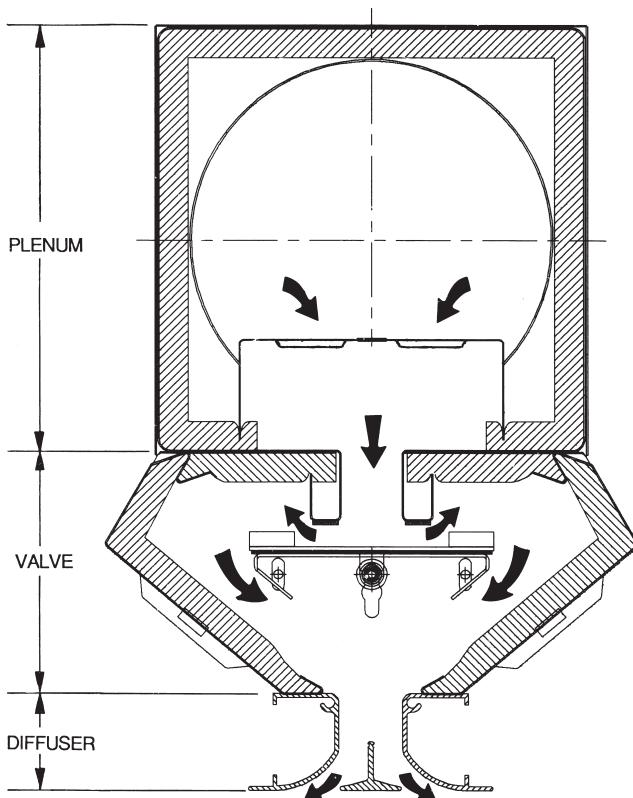


Fig. 3 — Typical 37HS Moduline Unit Cross Section

DIGIT MODEL NO.	1	2	3	4	5	6	7	8	9	10	11	12	13
37HS — System-Powered Terminal Unit	3	7	H	S	2	-	3	8	6	2	L	N	C
<hr/>													
Unit Size — Airflow (Nominal Cfm)													
1 — 100 2 — 200 4 — 400													
- — Not used													
Plenum Size													
1 — 5" x 7" 2 — 7" x 7" 3 — 9" x 9" 4 — 11" x 11" 5 — 13" x 13" X — Special (Quote Control)													
Inlet Diameter													
4 — 4" Round 6 — 6" Round 8 — 8" Round 0 — 10" Round 2 — 12" Round X — Special (Quote Control)													
Outlet Diameter													
N — None 4 — 4" Round 6 — 6" Round 8 — 8" Round 0 — 10" Round 2 — 12" Round X — Special (Quote Control)													
Diffuser Length													
A — 22.92" (unit size 1 only) B — 23" (unit size 1 only) C — 23.38" (unit size 1 only) D — 23.99" (unit size 1 only) G — 1174 mm H — 46.92" J — 47" (standard) K — 1200 mm L — 47.38" M — 48" Q — 58.92" (unit sizes 2 and 4 only) R — 59" (unit sizes 2 and 4 only) S — 59.38" (unit sizes 2 and 4 only) T — 60" (unit sizes 2 and 4 only) X — Special													
Discharge and Slots													
1 — One-Way Blow, 2-Slot 2 — 2-Way Blow, 2-Slot 3 — 3-Slot Director Diffuser 7 — Removable Diffuser (2-Way Blow, 2-Slot, Aluminum)													

EXAMPLE: Model No. 37HS2-3862LNC describes a 37HS2 unit with a 9-in. x 9-in. plenum, inlet diameter of 8 in., outlet diameter of 6 in. and a 2-way blow, 2-slot, 47.38-in. long diffuser. The unit is standard order and is shipped in a single carton.


Fig. 4 — Model Number Nomenclature for Unit Identification

General

The Moduline® 37HS units are designed for installation in standard, narrow and Tegular T-bar ceilings, and for continuous run, concealed spine or plaster ceilings. They can also be provided for custom ceilings.

All 37HS Moduline units can be installed as single units or in an air series. Layout guidelines for proper installations can be found in the 37HS Application Data book.

Unit dimensions are shown in Fig. 5-7. Dimensions for diffuser options are shown in Fig. 8 and 9. See Fig. 10 for accessory return-air diffuser dimensions and Fig. 11 for accessory dummy diffuser dimensions. Table 1 lists installation accessories for 37HS Moduline units.

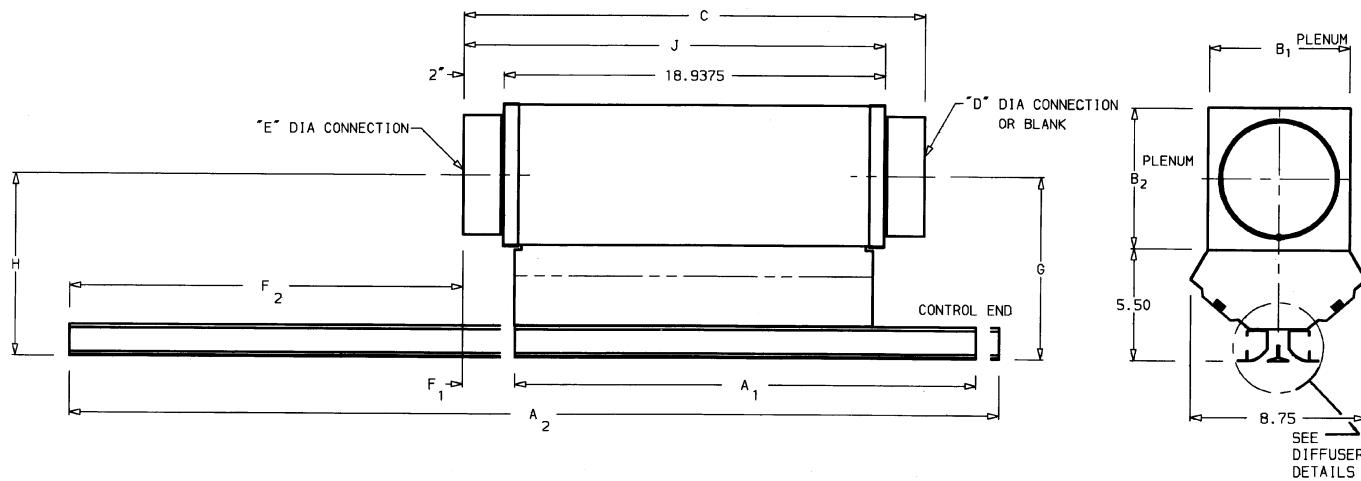

37HS1 Plenum Dimensions


PLENUM SIZE		C	D	E	G	H	J
B ₁	B ₂						
7	5	-	-	4	-	8	20.94
7	7	22.94	4	6	8	9	-
7	7	22.94	6	6	9	9	-
9	9	22.94	6	8	9	10	-
9	9	22.94	8	8	10	10	-
11	11	22.94	8	10	10	11	-
11	11	22.94	10	10	11	11	-

NOTE: Dimensions are in inches.

37HS1 Standard Diffuser Lengths Available (in inches)

A ₁	22.92	23.00	23.38	23.99	
F ₁	2.60	2.60	2.60	2.60	
A ₂					46.92 47.00 47.38 48.00
F ₂					19.56 19.56 19.56 19.56

Fig. 5 — 37HS1 Unit Dimensions

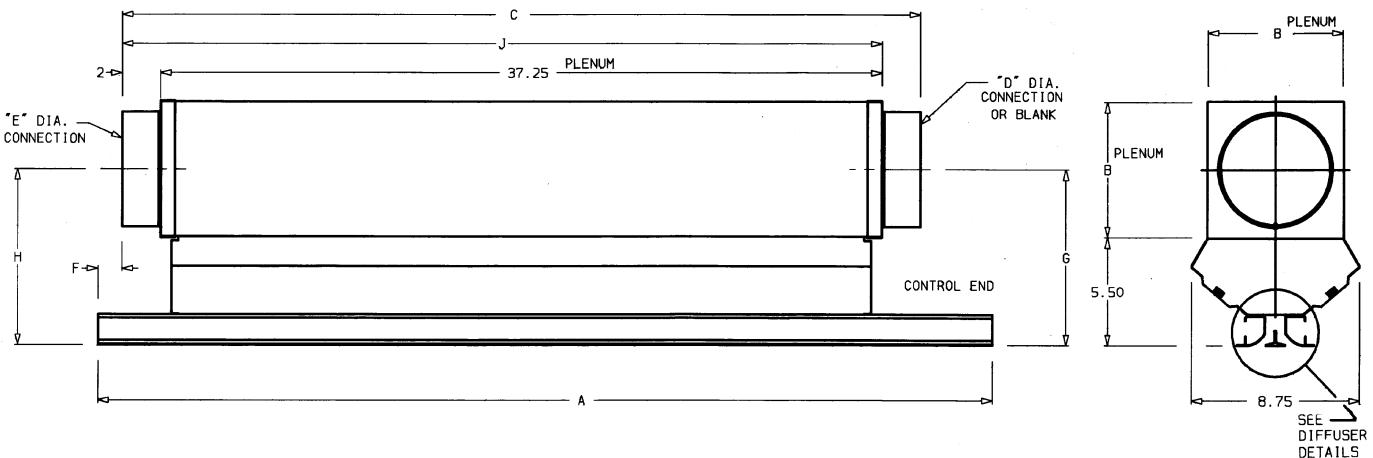

37HS2 Plenum Dimensions


PLENUM SIZE (sq) B	C	D	E	G	H	J
7	-	-	6	-	9	39.25
7	41.25	6	6	9	9	-
9	41.25	6	8	9	10	-
9	41.25	8	8	10	10	-
11	41.25	8	10	10	11	-
11	41.25	10	10	11	11	-

NOTE: Dimensions are in inches.

37HS2 Standard Diffuser Lengths Available (in inches)

A	46.92	47.00	47.38	48.00	58.92	59.00	59.38	60.00
F	1.25	1.25	1.25	1.25	7.25	7.25	7.25	7.25

Fig. 6 — 37HS2 Unit Dimensions

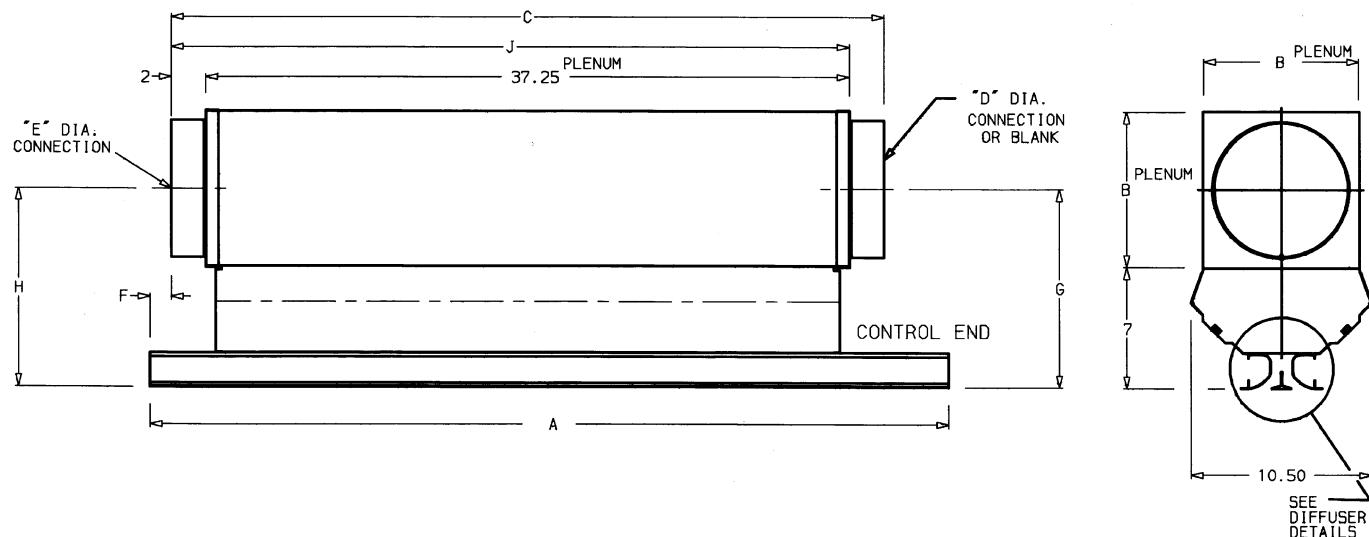

37HS4 Plenum Dimensions


PLENUM SIZE (sq) B	C	D	E	G	H	J
9	-	-	8	-	11.50	39.25
9	41.25	8	8	11.50	11.50	-
11	41.25	8	10	11.50	12.50	-
11	41.25	10	10	12.50	12.50	-
13	41.25	10	12	12.50	13.50	-
13	41.25	12	12	13.50	13.50	-

NOTE: Dimensions are in inches.



37HS4 Standard Diffuser Lengths Available (in inches)

A	46.92	47.00	47.23	47.38	48.00	58.92	59.00	59.38
F	1.25	1.25	1.25	1.25	1.25	7.25	7.25	7.25


Fig. 7 — 37HS4 Unit Dimensions

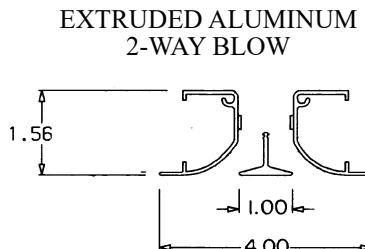


Dimensions are in inches.

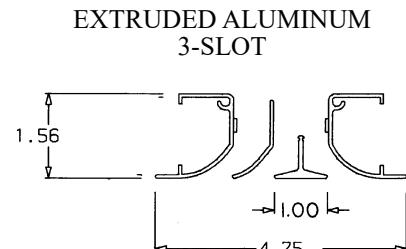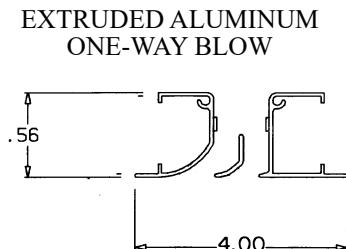

REMOVABLE DIFFUSER (STEEL)

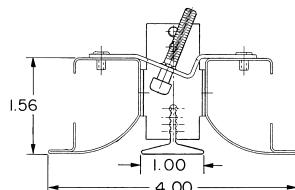

REMOVABLE DIFFUSER (ALUMINUM)

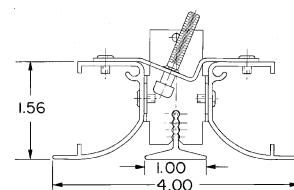




37HS1 (100 cfm) Diffuser Options

CEILING T-BAR STYLE AND WIDTH	DIFFUSER LENGTH (in.)
STANDARD 15/16 T-BAR	23.00 47.00
TEGULAR 15/16 T-BAR	22.92 46.92
CONTINUOUS RUN 15/16 T-BAR	24.00 48.00
NARROW 9/16 T-BAR	23.38 47.38


37HS2 (200 cfm) Diffuser Options

CEILING T-BAR STYLE AND WIDTH	DIFFUSER LENGTH (in.)
STANDARD 15/16 T-BAR	47.00 59.00
TEGULAR 15/16 T-BAR	46.92 58.92
CONTINUOUS RUN 15/16 T-BAR	48.00 60.00
NARROW 9/16 T-BAR	47.38 59.38

Fig. 8 — Optional Diffusers for 37HS1, HS2

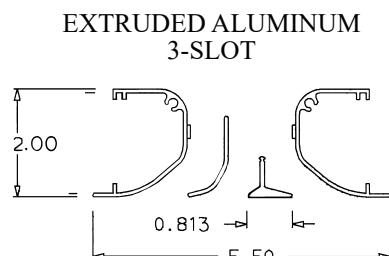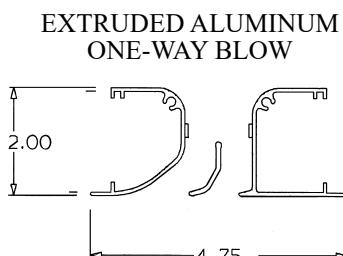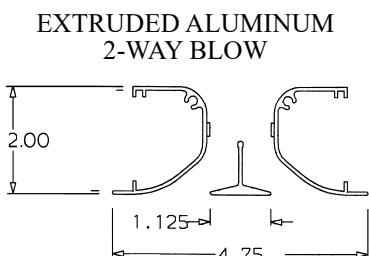


REMOVABLE DIFFUSER (STEEL)

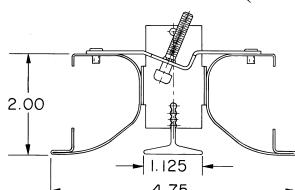

Dimensions are in inches.

REMOVABLE DIFFUSER (ALUMINUM)

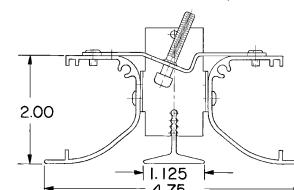


37HS4 (400 cfm) Diffuser Options


CEILING T-BAR STYLE AND WIDTH	DIFFUSER LENGTH (in.)
STANDARD 15/16 T-BAR	47.00 59.00
TEGULAR 15/16 T-BAR	46.92 58.92
CONTINUOUS RUN 15/16 T-BAR	48.00 60.00
NARROW 9/16 T-BAR	47.38 59.38

Fig. 9 — Optional Diffusers for 37HS4


EXTRUDED ALUMINUM
2-WAY BLOW

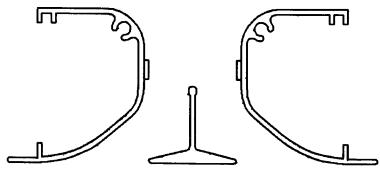

EXTRUDED ALUMINUM
ONE-WAY BLOW

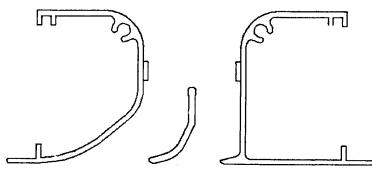



EXTRUDED ALUMINUM
3-SLOT

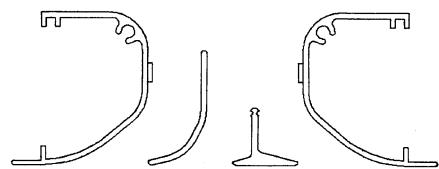

Available Lengths (in.) of Accessory
Return-Air Diffusers

37HS1	37HS2	37HS4
23.00	47.00	47.00
47.00	47.38	47.38
-	59.00	59.00

Fig. 10 — Accessory Return-Air Diffusers

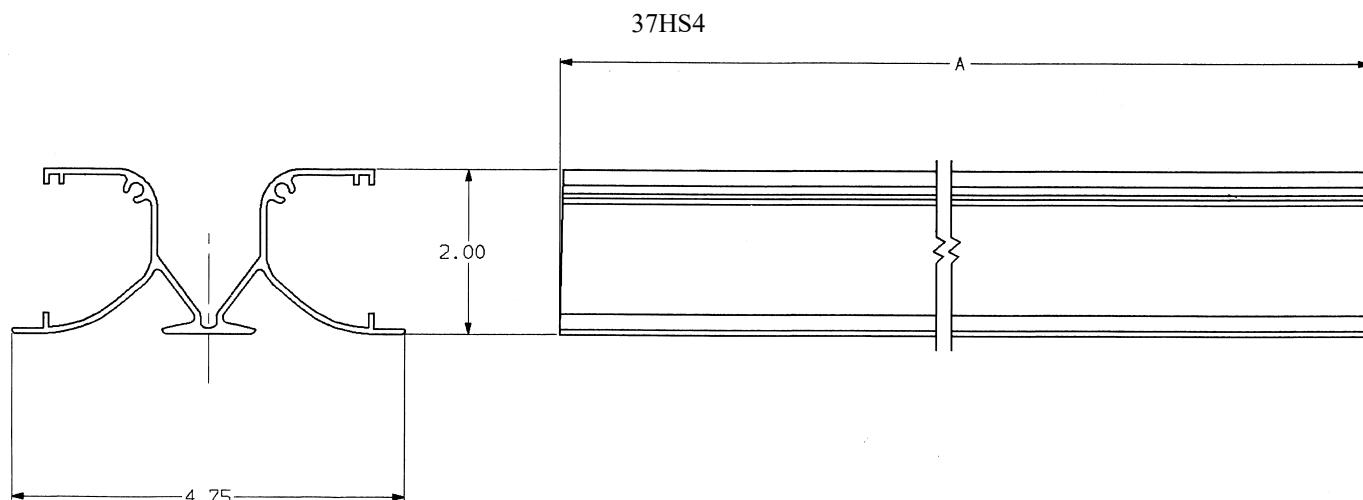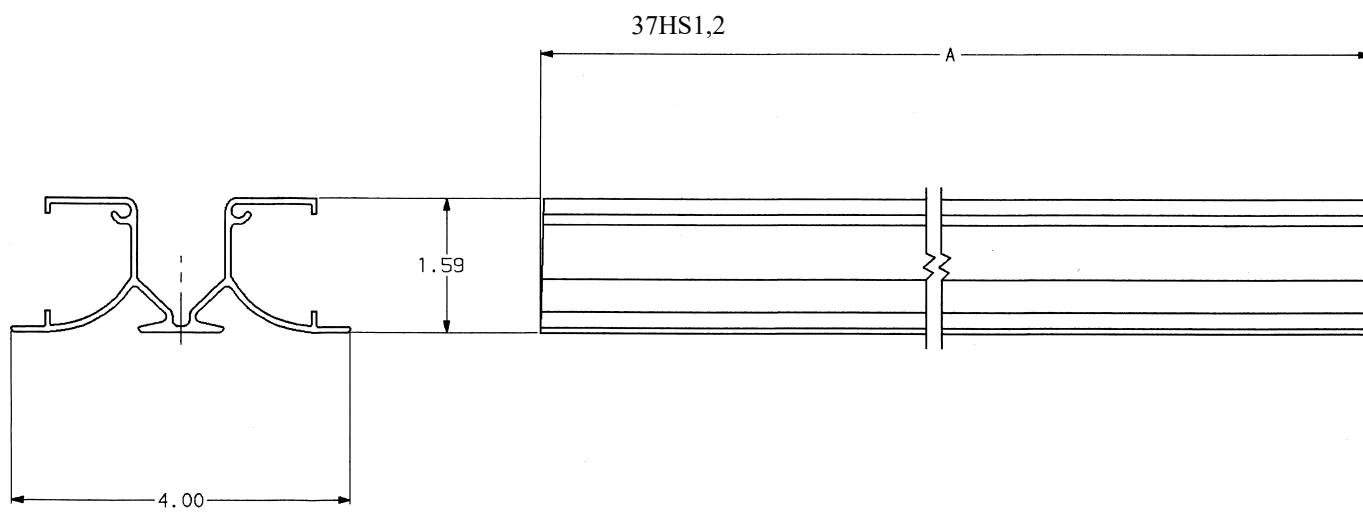

NOTES:

1. Dummy diffusers for other lengths can be field-cut from standard sizes.
2. Dummy diffusers are suspended in T-bar ceilings using one-piece mountings brackets.

A (in.)
47.00
48.00
59.00
60.00

Fig. 11 — Accessory Dummy Diffusers

Table 1 — Installation Accessories for 37HS Units

ADAPTER CAP, Qty 12		
Adapter		Package No.
For 6-in. round adapter		37AH900102
For 8-in. round adapter		37AH900042
For 10-in. round adapter		37AH900212
DIFFUSER BAFFLE, Qty 50		
Used On	Length (in.)	Package No.
37HS1, HS2	8	37AH900072
37HS4	8 $\frac{1}{2}$	37CN900622
T-BAR MOUNTING BRACKETS, Qty 24 (with wedges)		
Used on 37HS1, HS2		Package No.
2-Slot T-Bar		37CM900002
2-Slot Tegular	1/2-in.	37CM900032
	7/16-in.	37CM900042
	3/8-in.	37CM900052
	5/16-in.	37CM900062
	1/4-in.	37CM900072
3-Slot T-Bar		37CM900012
3-Slot Tegular	1/2-in.	37CM900082
	7/16-in.	37CM900092
	3/8-in.	37CM900102
	5/16-in.	37CM900112
	1/4-in.	37CM900122
Used on 37HS4		Package No.
2-Slot T-Bar		37CN900002
2-Slot Tegular	1/2-in.	37CN900042
	7/16-in.	37CN900052
	3/8-in.	37CN900062
	5/16-in.	37CN900072
	1/4-in.	37CN900082
3-Slot T-Bar		37CN900012
3-Slot Tegular	1/2-in.	37CN900092
	7/16-in.	37CN900102
	3/8-in.	37CN900112
	5/16-in.	37CN900122
	1/4-in.	37CN900132
MOUNTING BRACKETS FOR RETURN AIR AND DUMMY DIFFUSERS		
UNIT	PACKAGE NO.	QTY
One-Piece Mounting Bracket		
37HS1, HS2 2-Slot T-Bar	35BD900002	50
37HS1, HS2 3-Slot T-Bar	37CM900022	50
37HS4 2-Slot T-Bar	37CN900022	50
2-Piece-Mounting Bracket		
37HS4 3-Slot T-Bar	37CN900012	24
FILLER TRIM PIECE, Qty 100		
Used On	Diffuser	Package No.
37HS1, HS2	2-Slot, One-Way or 2-Way Blow	37CM900712
	3-Slot	37CM900722
37HS4	2-Slot, One-Way or 2-Way Blow	37CM900722
	3-Slot	37CN900642

NOTE: For use with wire-hung units and continuous run units in accessible ceilings. Do not use removable diffusers.










Table 1 — Installation Accessories for 37HS Units (cont)


END TRIM, Qty 50		
Used on 37HS1, HS2	Color	Package No.
2-Slot T-Bar*	White	37CM900132
	White	37CM900252
	Black	37CM900352
	Black and White	37CM900452
3-Slot T-Bar*	White	37CM900142
	White	37CM900302
	Black	37CM900402
	Black and White	37CM900502
Used on 37HS4	Color	Package No.
2-Slot T-Bar*	White	37CN900142
	White	37CN900162
	Black	37CN900262
	Black and White	37CN900362
3-Slot T-Bar*	White	37CN900152
	White	37CN900212
	Black	37CN900312
	Black and White	37CN900412

*Used in continuous run units in non-accessible ceilings (to fill space between units) and in concealed spline and plaster ceilings to finish off end of diffuser.

†Used to finish the exposed end of diffuser.

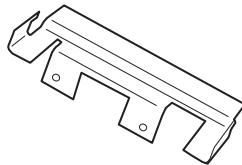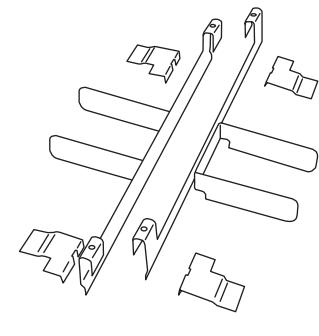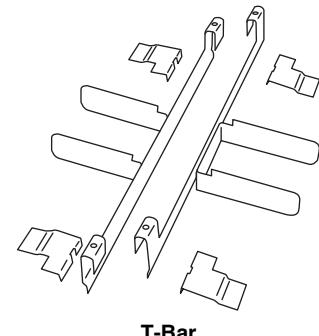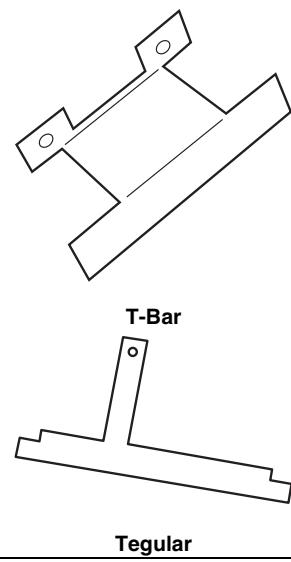

ALIGNMENT CHANNEL		
Used On	Diffuser	Package No.
37HS1, 37HS2	2-Slot, One-Way or 2-Way Blow, and 3-Slot	37CM900752
37HS4	2-Slot, One-Way or 2-Way Blow, and 3-Slot	37CN900652

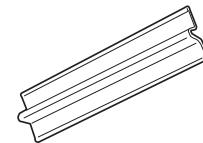

NOTE: For use with wire-hung units and continuous run units in accessible ceilings. Do not use with removable diffusers.

TUBING PACKAGES		
Usage	Type	Package No.
Wall Thermostat and Interconnecting Units	1/4-in. OD FR (Fire Retardant Tubing)	35BB900172 (250 ft roll)
Miscellaneous Connections	3/16-in. ID EPDM (Synthetic Rubber Tubing)	37AE900592 (100 ft roll)
HANGER MOUNTING BRACKET		
Package No. 37AE901032		

Unit/Ceiling Coordination

Set up a ceiling mock-up to familiarize all trades with their functions during installation. Coordinate unit installation with ceiling construction. This is particularly important in custom installations with special mounting considerations.

Unit-to-Unit Connections

Use field-fabricated round duct or flex duct as required.

Unit Suspension

T-BAR SUPPORT

Units are held in place by 2 accessory T-bar mounting brackets and are locked in place with factory-supplied wedges.

The mounting brackets fit over the main T-bars, allowing the T-bars to carry unit weight. Install T-bar support wires close to each end of T-bar mounting brackets. Make sure that only wire-hung, main T-bars are used to support unit weight.

Figure 12 shows a 37HS unit suspended in a T-bar ceiling.

OTHER SUPPORTS

When installed in non-accessible ceilings, or in accessible ceilings that require wire-hung units, the 37HS is held in place by field-installed accessory hanger mounting brackets. The brackets are wire-hung from the building structure and are adjustable for proper unit alignment. Figure 13 shows a 37HS unit wire-hung from the building structure.

NOTE: When units are wire-hung in *accessible* ceilings, T-bar mounting brackets can be used for ceiling alignment.

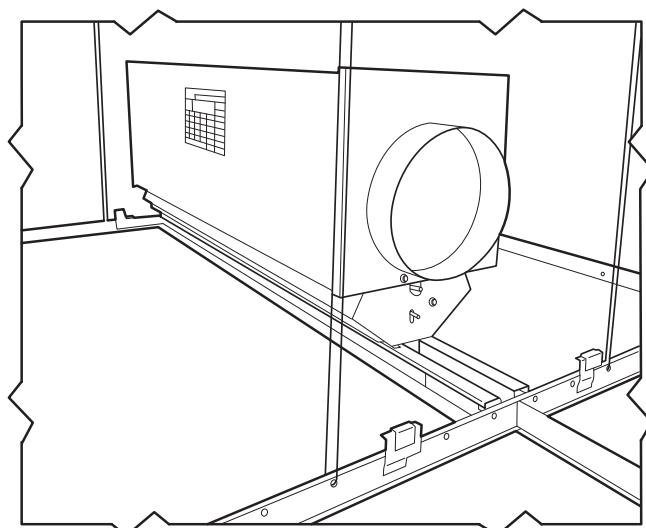


Fig. 12 — 37HS Unit Installed in a T-Bar Ceiling

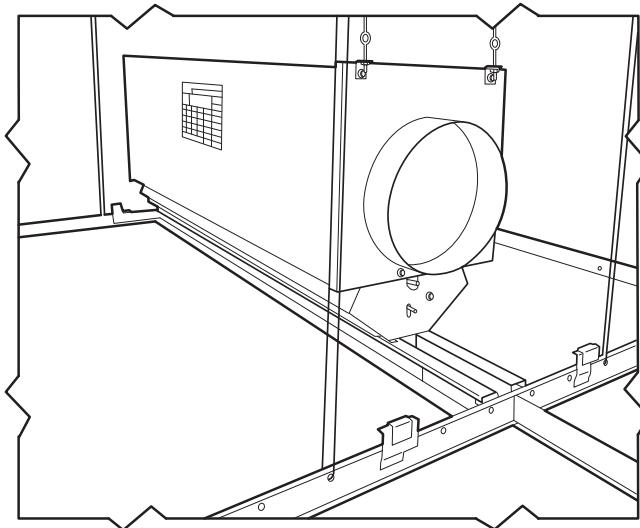


Fig. 13 — 37HS Unit Wire-Hung in a T-Bar Ceiling

Unit Installation

T-BAR CEILING

NOTE: Moduline® systems are normally designed with multiple unit and control arrangements within a single system.

Proper system operation is dependent on careful adherence to the specified job layout. Become familiar with and check the various control arrangements required on a particular job before installing the terminals. Additional information on unit types and control combinations is given in Control Arrangements section on page 16.

1. Move units in cartons to installation area.
2. Remove units from cartons and discard packaging material. Do not remove protective tape from diffuser. When handling units, take care not to damage diffusers and adapters.
3. Arrange units on floor per design layout, diffuser side up. Check unit identification.
4. Wherever a unit is to be installed directly to another unit, attach field-supplied connecting duct (flex or metal duct) to one unit with screws or other mechanical fasteners before installing the next unit. Seal joint.
5. Install controls in designated units as indicated in job layout and as described in Control Installation section on page 23, then proceed to Step 6.
6. Install T-bar mounting bracket in each end of unit as shown in Fig. 14. Insert bracket in unit side diffusers and push evenly until bracket seats against diffuser end.
7. Raise unit above ceiling and lower into position. Engage T-bar mounting bracket tabs securely over main T-bars. Do not rest unit diffusers on T-bar flanges. Install 2 locking wedges on each bracket between bracket and T-bar. See Fig. 15. It may be desirable to crimp the bracket wedge assembly with pliers to ensure tightness.
8. On single-unit applications, make supply-air connection directly to adapter on end of unit.
9. If other units are to be connected to the first unit, install T-bar mounting brackets on each end of the adjoining units.
10. Raise each unit above ceiling and lower into position. Engage mounting brackets over main T-bar. Reposition locking wedges at mounting bracket so that they also secure the mounting bracket of the adjoining unit.
11. Connect interconnecting duct between units, and seal.

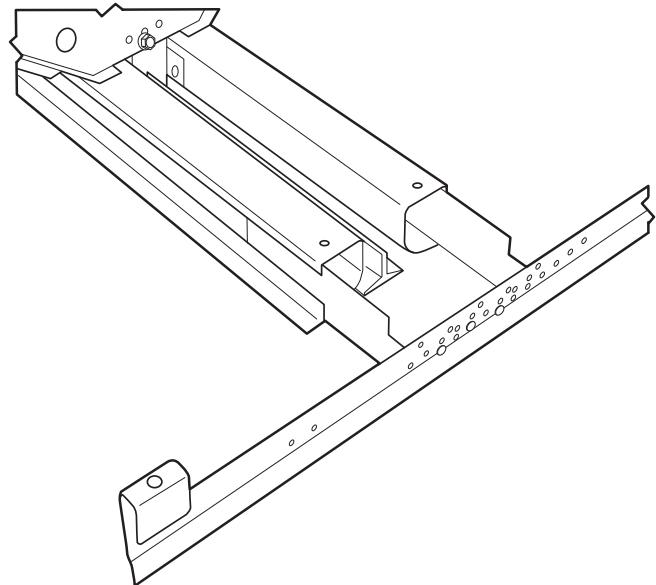


Fig. 14 — Installing T-Bar Mounting Bracket

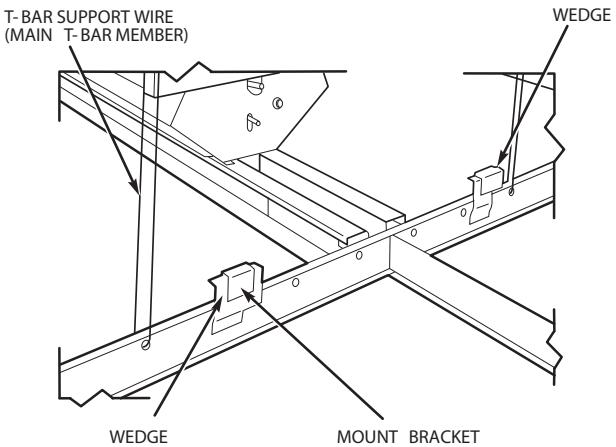


Fig. 15 — T-Bar Mounting Details

Installation of Return-Air Diffusers and Dummy Diffusers

Install one-piece mounting brackets onto diffuser ends using screws provided. See Fig. 16. (For 37HS 3-slot director diffuser, use 2-piece mounting bracket.) Raise unit to ceiling and set in position with the tabs of the mounting bracket placed securely over the T-bar upright.

Wire-Hung Installations (With T-Bar Mounting Brackets Used for Alignment)

Install accessory hanger mounting brackets, 2 on each end of the 37HS unit, and attach eyebolts as illustrated in Fig. 17. Install T-bar mounting brackets in end of diffuser; then raise units above ceiling and lower to previously installed hanger wires. Be sure to engage tabs of T-bar mounting brackets over T-bar. Adjust eyebolts to permit T-bar mounting brackets to just sit on the ceiling T-bars. All unit weight must be supported by the hanger wires on the unit.

Continuous Run Installations

Continuous run units have diffuser lengths equal to the full length of the ceiling module; for 2, 4 and 5-ft modules, the diffusers measure 24, 48 and 60-in., respectively.

Units are wire-hung as described in Wire-Hung Installations section, except that no T-bar mounting brackets are used, not even for alignment. Instead, accessory alignment channels are used in the side diffusers of adjoining units to ensure alignment of the diffuser assemblies from unit to unit. As shown in Fig. 18 and 19, the channel is inserted first into a

unit that has already been installed, and then into the next unit as the unit is being positioned in the ceiling structure. After alignment channel is installed, filler trim piece can be snapped into place.

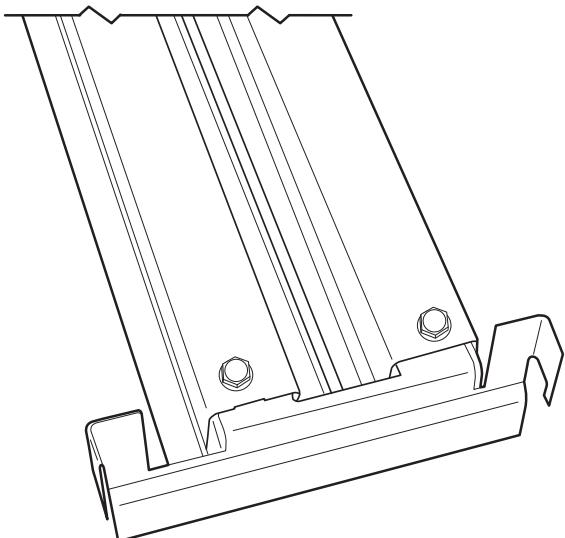


Fig. 16 — One-Piece Mounting Bracket Installed on Diffuser End

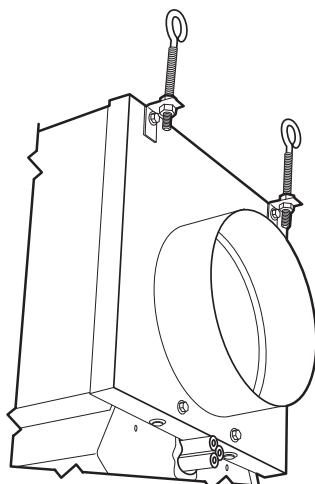


Fig. 17 — Installed Hanger Mounting Brackets

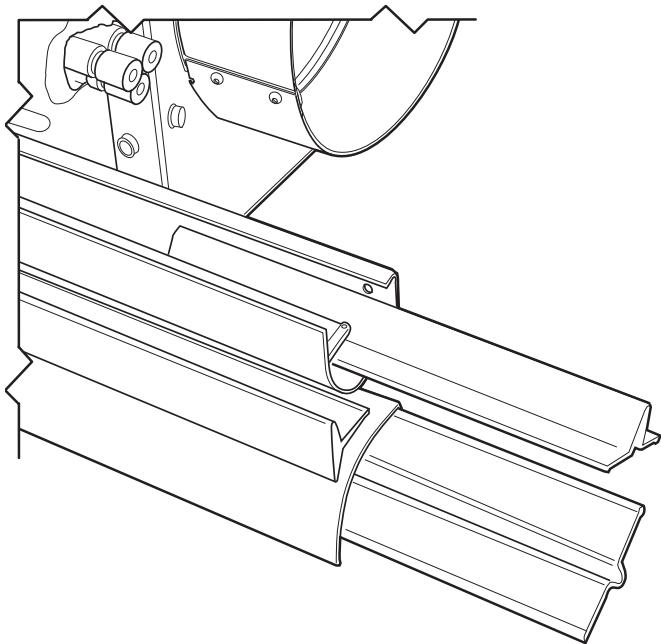


Fig. 18 — Inserting Alignment Channel into Unit

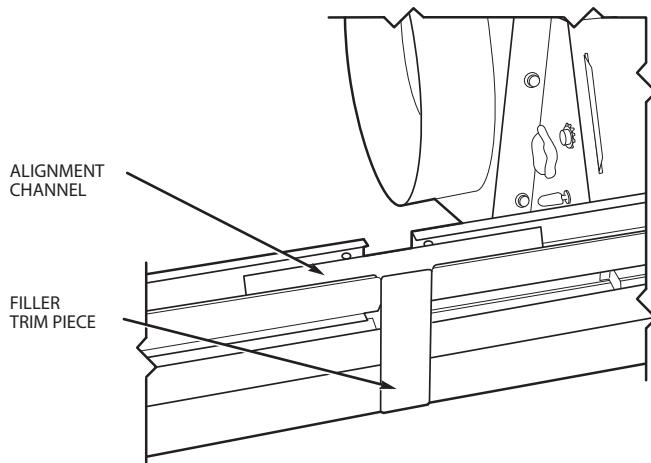


Fig. 19 — Installed Alignment Channel and Filler Trim Piece

TEGULAR CEILING

A tegular (recessed T-bar) ceiling is constructed the same as a standard T-bar type ceiling, except that each lay-in ceiling panel is rabbeted. This means that the panel is notched to fit over the T-bar. When installed in the T-bar frame, the panel hangs below the grid. From inside the room, the ceiling effect is that of a recessed grid. This variation of the standard T-bar concept provides all the T-bar ceiling advantages (simplicity, ease of installation, low first-cost and accessibility) with an architecturally more attractive appearance.

Tegular (recessed T-bar) ceilings are provided by many ceiling manufacturers under various trade names, but are basically of the same design. All models of Moduline® 37HS air terminals are adaptable to the recessed T-bar ceiling. They are applied in a manner similar to the standard T-bar ceiling.

The system usually consists of a $1\frac{5}{16}$ -in. grid member suspended by wires to form a 4 ft x 4 ft module. These support wires should be located very near to the terminals and lights to avoid twisting of the grid. The module is further subdivided using cross T-bar members creating sub-modules. Each sub-module may be filled with a light fixture or a tile.

The 37HS Moduline terminal may be used in the center of a 2 ft x 4 ft ceiling tile, or to replace a recessed T-bar member. In either case, the tile is cut and rests directly on the unit side diffuser, so that the unit is flush with the ceiling tile plane.

The recessed T-bar may be painted (usually black with white tiles) to create an interesting grid pattern. The 37HS unit center diffuser (when installed on the grid line) may be painted to match.

The depth of the notch or rabbet (dimension from grid face to tile face) varies from manufacturer to manufacturer but is normally between $\frac{3}{16}$ -in. and $\frac{5}{8}$ -inches. The mounting package for recessed grid (tegular) installation differs from the standard T-bar mounting package. The proper mounting package for the Moduline 37HS air terminal must drop the unit to the level of the tile face (below the T-bar grid face). The mounting bracket slides into the ends of the diffuser and engages the T-bar. Wedges are used to secure the units in place. It may be desirable to crimp the bracket wedge assembly with pliers to ensure tightness and unit alignment.

Figure 20 shows a Moduline 37HS air terminal unit in a typical 2 ft x 4 ft recessed T-bar ceiling. For this application, the overall diffuser length of the unit is 46.92 inches. For 5 ft x 5 ft ceiling module, the diffuser length used is 58.92 inches. This shorter diffuser is used to allow room for 2 end trim pieces which finish the exposed end of the installed unit. This length is also used for dummy diffusers and return-air diffusers when used in recessed T-bar ceilings. The end trim piece is installed between the unit diffuser ends and the T-bar and is held in place by bending the end piece over the unit mounting bracket as shown in Fig. 20.

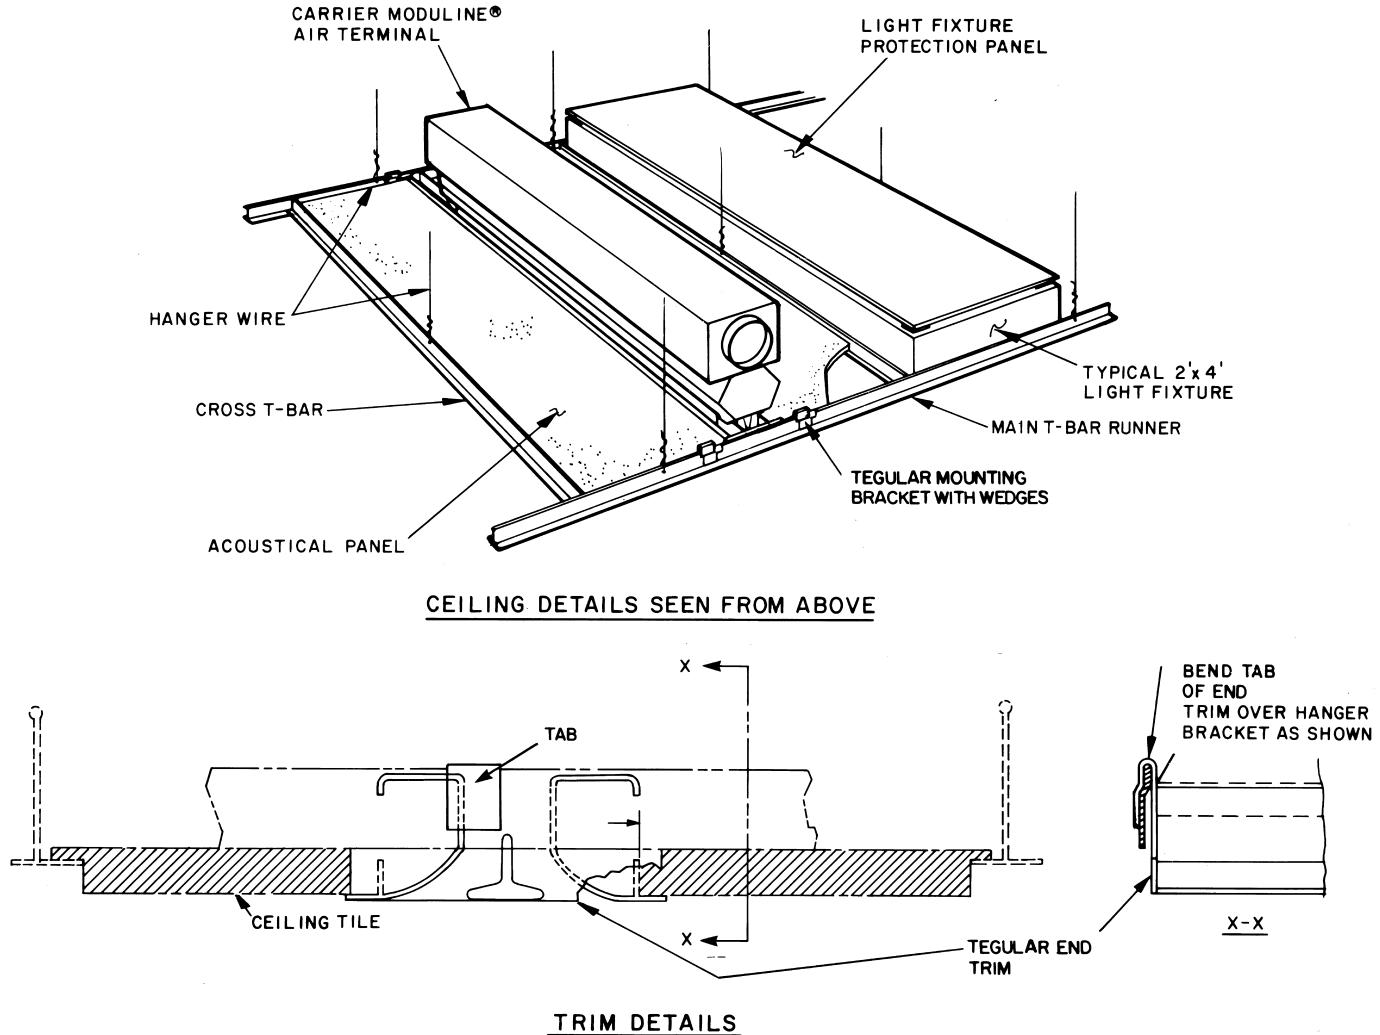


Fig. 20 — Typical Tegular (Recessed T-Bar) Ceiling Installation Using 37HS Air Terminals

NON-ACCESSIBLE CEILINGS

Non-accessible ceilings include plaster and concealed spline ceilings. These applications require the 37HS unit equipped with a removable diffuser assembly. Removal of the diffuser assembly allows access to the unit controls and tubing connections. To remove diffuser assembly, loosen 3 screws by inserting an allen wrench through diffuser slot as shown in Fig. 21. After diffuser is removed, disconnect aspirator tube and the tube connected to thermostat. When using removable diffuser with standard controls, longer tubing must be installed between thermostat and volume controller and between aspirator and unit end. This will enable connections to be retained when diffuser assembly is dropped below the ceiling line. Disconnect aspirator and thermostat connections before completely removing diffuser. When diffuser assembly is reinstalled, the connections can be made below the ceiling line and the assembly completed with the capscrews.

Plaster Ceiling

Obtain plaster frames field fabricated to the dimensions shown in Fig. 22. Install accessory hanger mounting brackets on the unit. The diffuser protective tape should be left in place during the installation.

Unit installation details may differ due to the many plastering methods used. The actual installation procedure is left to the

discretion of the individual plasterer. One typical method, shown in Fig. 21, shows 2 Model Moduline® 37HS air terminals installed. Wire hangers with eyebolts for leveling and supporting the terminals are shown at the plenum ends. The units are directly coupled for a feed-thru application, with an end trim piece used between units. The end trim piece may be fastened to either unit. One unit is a control unit and the other a slave unit. A 12-in. crossover tube is used to make the control connection. The end trim strip is added to the diffusers of the end units before the actual installation. Then the units are suspended below the finished ceiling level. A field-supplied plaster frame is installed completely around the unit. A wire mesh, which is supported by wires from the ceiling cross members, is then attached to the plaster frame. These cross members have been wired to main runners which have been suspended from the building structure. The plaster scratch coat is then troweled beyond the edge of the side diffuser. When the plaster has set, the unit is then raised to the proper level. This is accomplished either through hand holes cut into the plaster, through a nearby light fixture, or by removing the diffuser assembly. The final surface finish is now applied with diffuser assembly lowered $\frac{3}{8}$ -in. from unit.

NOTE: The entire diffuser assembly must be removable from the unit for access to the unit and controls.


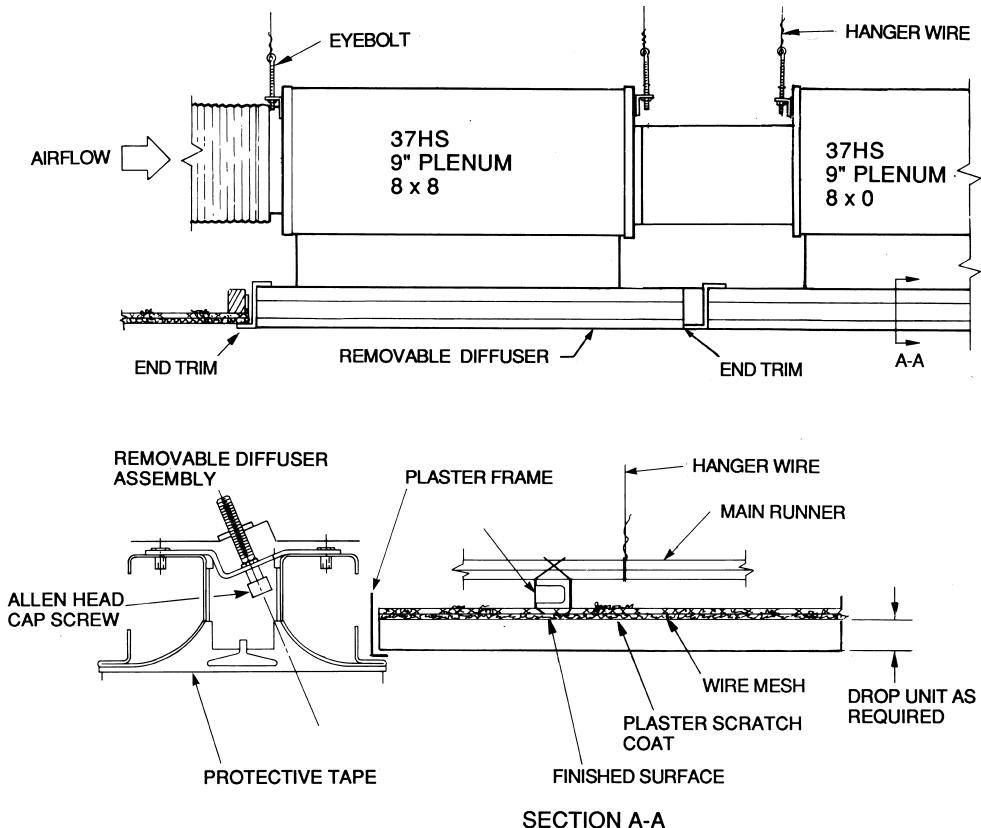


Fig. 21 — Installation Details, Moduline® Air Terminals in a Plaster Ceiling

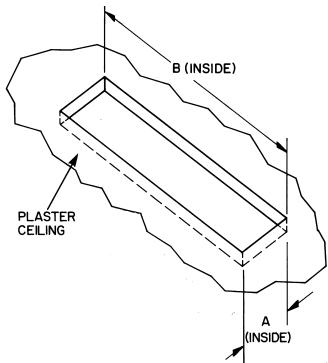

Plaster Ceiling Openings

UNIT	DIFFUSER	DIMENSIONS (in.)	
		A	B
37HS1	2-Way	3 ⁵ / ₁₆	24
	One-Way		
	3-Slot	4	48
37HS2	2-Way	3 ⁵ / ₁₆	48
	One-Way		
	3-Slot	4	60
37HS4	2-Way	4	48
	One-Way		
	3-Slot	3 ³ / ₄	60

Fig. 22 — Plaster Ceiling Opening for 37HS Removable Diffuser Unit

When this final finish has dried, the protective tape on the diffuser is removed and the diffuser raised tight to the ceiling.

Figure 23 shows Moduline® units installed in a plaster ceiling along with standard 2 ft x 4 ft light fixtures. Also shown are 2 cross-sectional detail views of the diffuser. Section A-A shows the installed unit and the plaster interface.

Section B-B is a view of the plaster frame resting on the diffuser end trim strip. The installed Moduline® air terminal provides an excellent, secure installation.

The 37HS Moduline matching dummy and return-air diffusers may also be independently suspended when applied in a plaster ceiling.

Concealed Spline Ceiling

In a concealed spline ceiling, the tiles butt together to provide the roomside appearance of a smooth, nondirectional surface. Each tile (usually 12-in. square) is grooved on 4 sides so that it locks into a spline which is fastened to the main runners by a secondary runner (typically Z-shaped). The main runners, usually located 4 ft on centers, are suspended from the building structure by wires. This system also accommodates a 2 ft x 4 ft standard light fixture. Because the tiles must be removed with a special knife-like tool to provide access to the ceiling cavity, this ceiling also offers the kind of security required for such installations as classrooms and other institutional applications.

The 37HS Moduline® ceiling air terminals easily integrate into concealed spline ceiling systems without compromising any features. Moduline units equipped with removable diffuser assemblies (as shown in Fig. 21) allow access to unit controls and tubing connections. The units are suspended by wires from the building structure independent of the suspended ceiling. Hanger brackets with eyebolts, helpful in leveling the suspended units, are also available.

When the terminal is installed, the tile will rest on the unit side diffuser. For T-bar ceilings, diffusers with lengths of 23-in., 47-in., or 59-in. can be used. For continuous run units, diffusers with lengths of 24-in., 48-in., or 60-in. should be used. Return-air diffusers, dummy diffusers and other accessory hardware are available to suit a variety of application requirements. The return-air and dummy diffusers are similar in shape and width so that when matched with a Moduline air terminal system, a ceiling pattern is retained or created. A typical Moduline concealed spline installation is shown in Fig. 24 and 25.

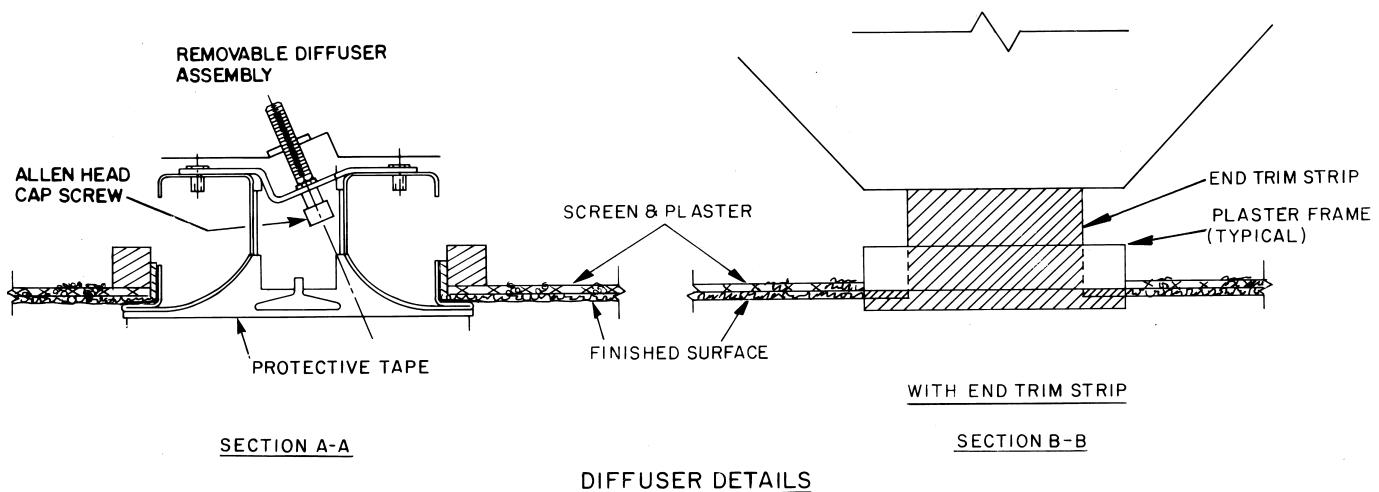
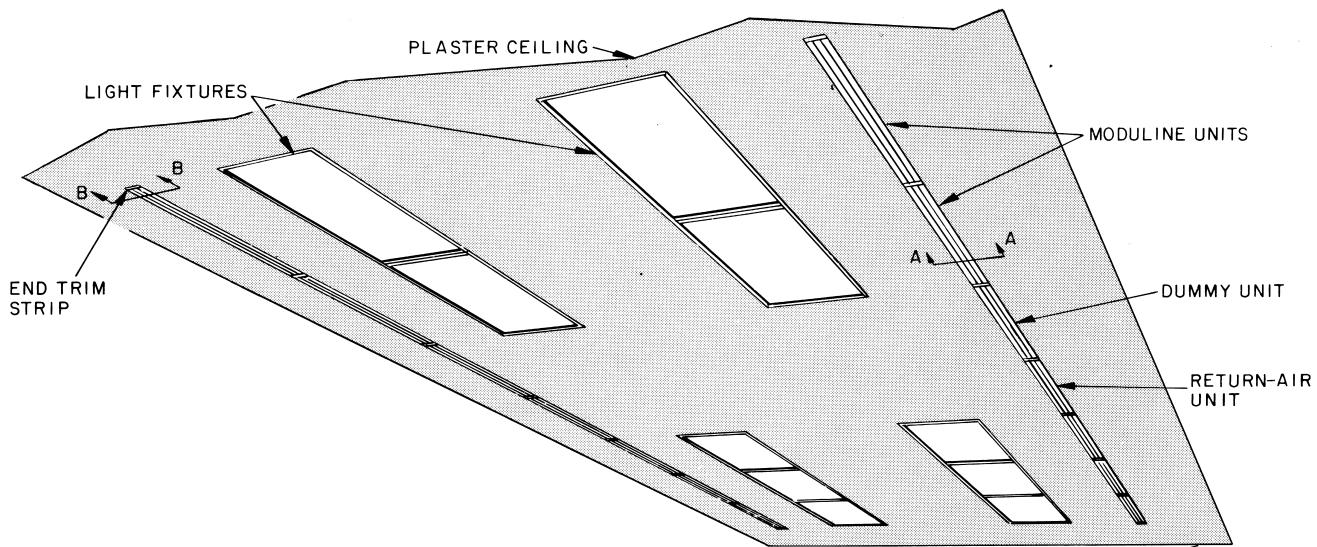


Fig. 23 — 37HS Moduline® Units Installed in a Plaster Ceiling

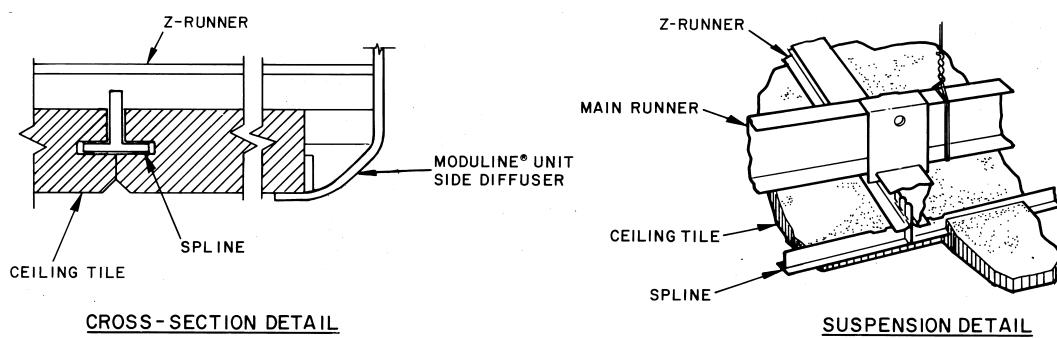


Fig. 24 — Typical Concealed Spline Ceiling Using 37HS Air Terminals (Details)

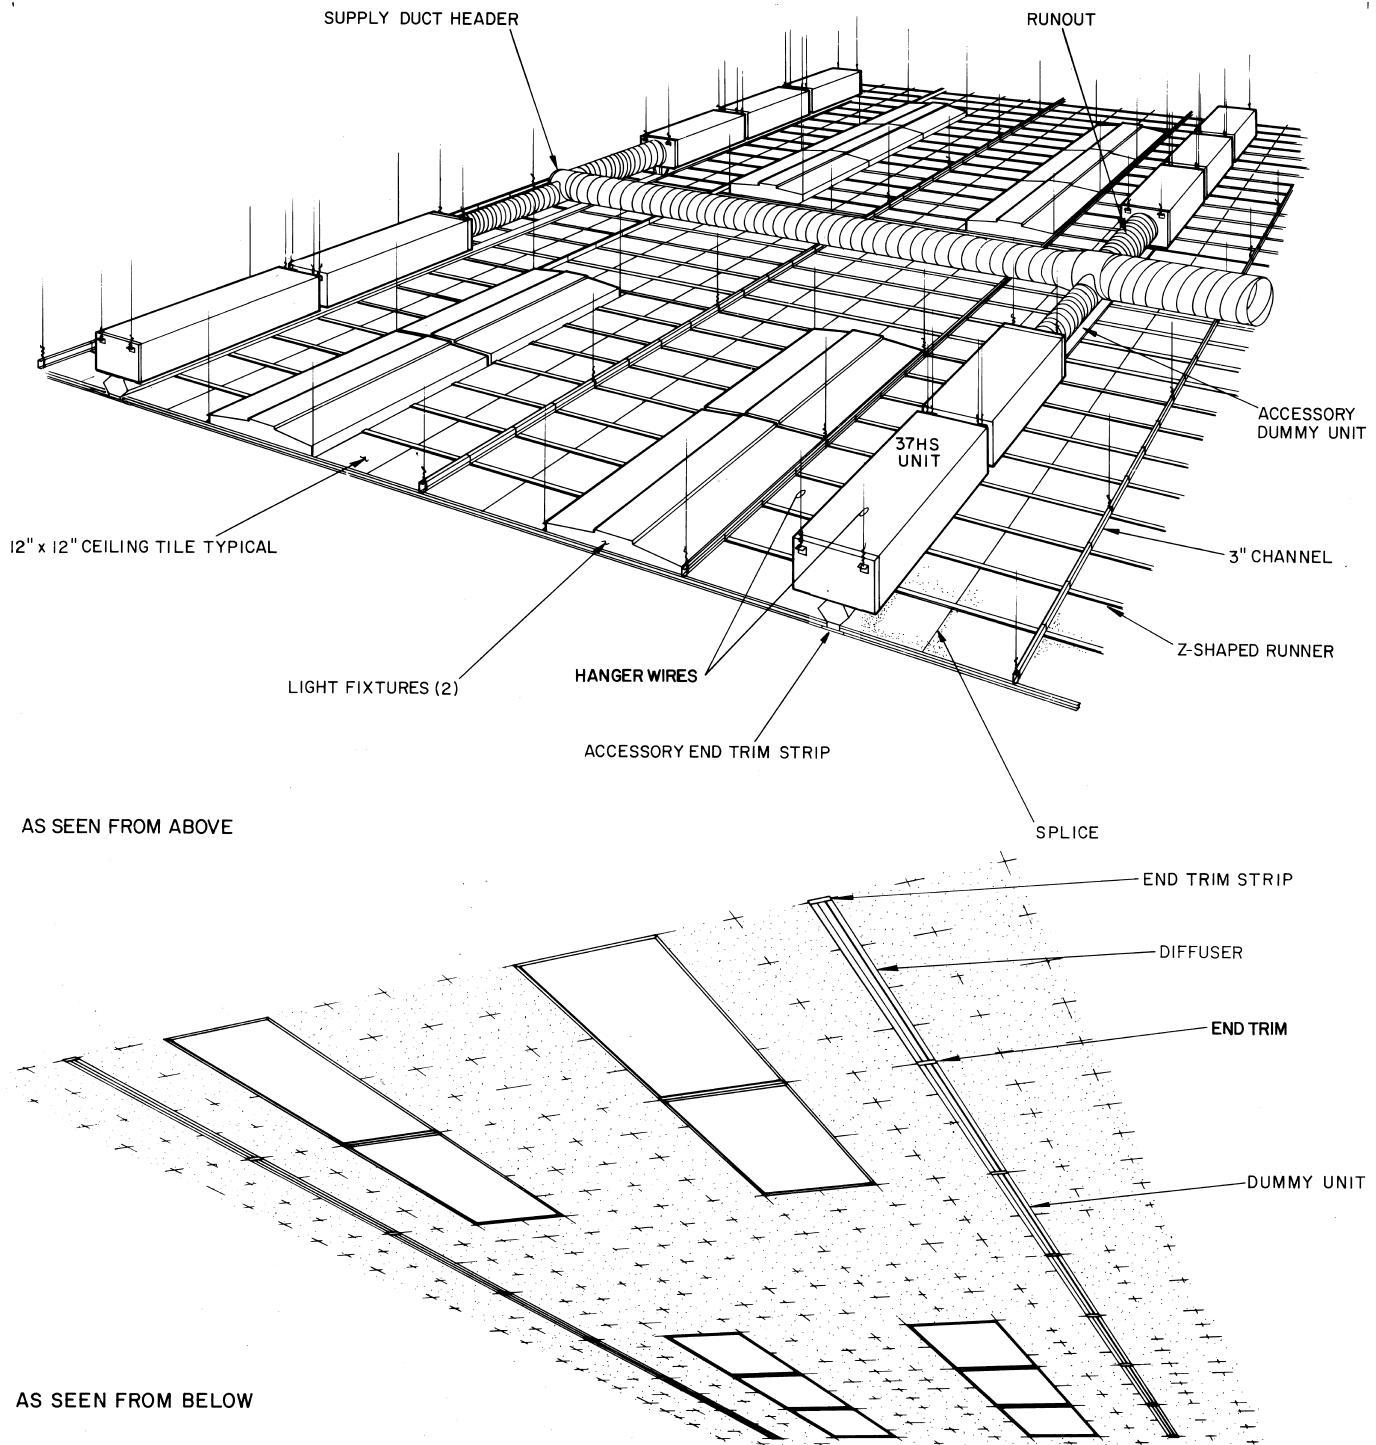


Fig. 25 — Typical Concealed Spline Ceiling Using 37HS Air Terminals

Controls


GENERAL

System-powered or duct pressure controls used with Moduline® terminals provide both volume and temperature control without the need for separate pneumatic or electric energy. The plenum pressure supplies the power required by the control devices. Figure 26 shows the variable air volume system-powered controls installed on the unit. The standard 37HS control arrangement is shown in Fig. 27.

NOTE: Although 37A, 37C and 37HS controls operate on similar principles, the pressure relationships between the 3 models of units are different. Therefore, 37HS units cannot be operated with 37A or 37C controls.

CONTROL ARRANGEMENTS

Table 2 shows the many control combinations available for 37HS Moduline air terminals and the control packages required for each set of functions. Figure 28 shows the installation of 3 control arrangements.

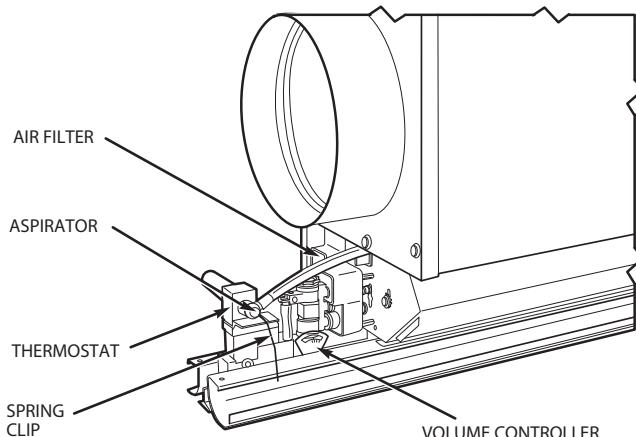

**Fig. 26 — Variable Air Volume Controls
Installed on Unit**

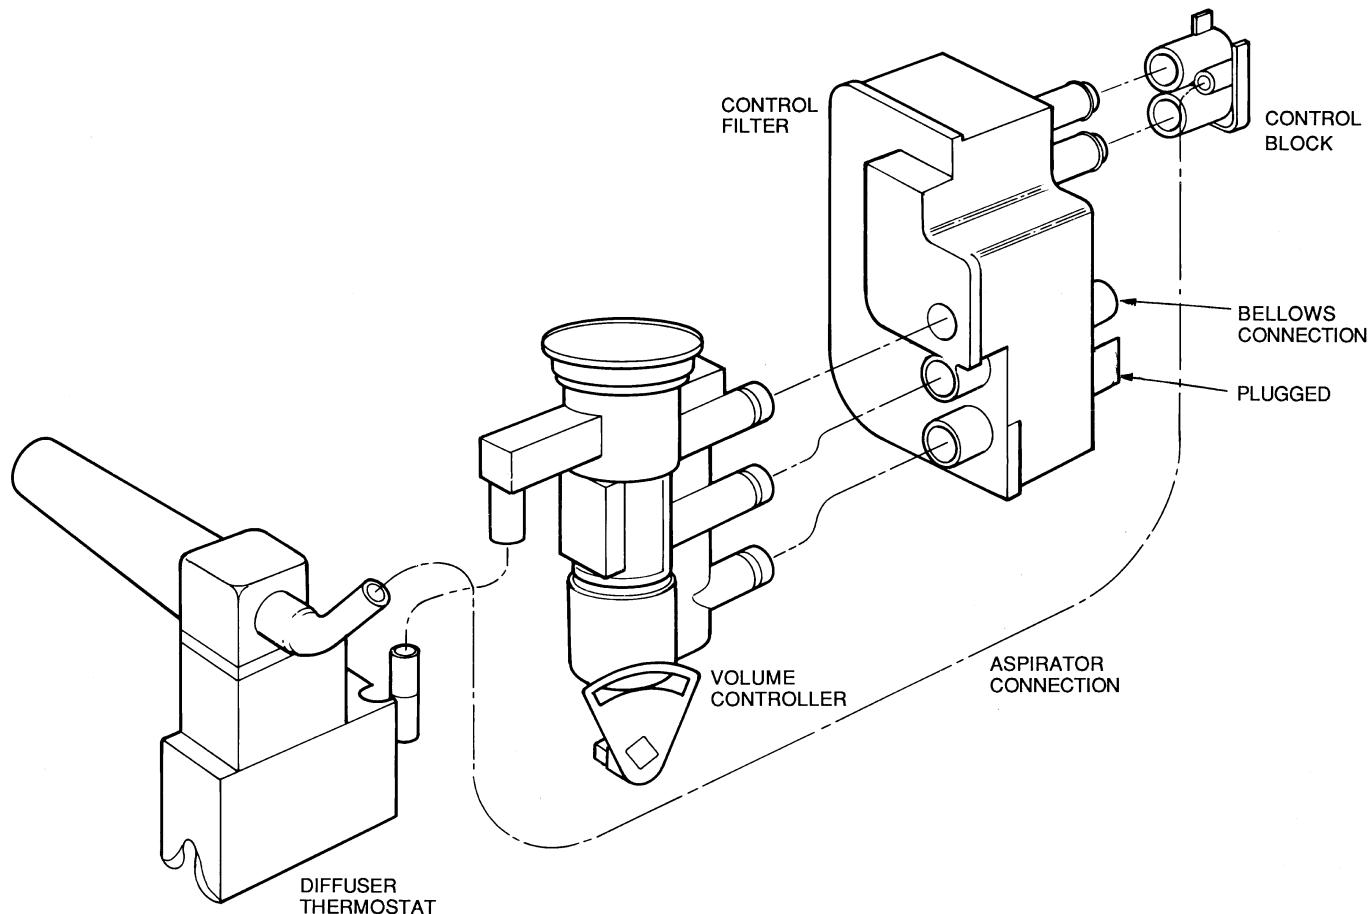


Fig. 27 — Standard 37HS Control Arrangement.

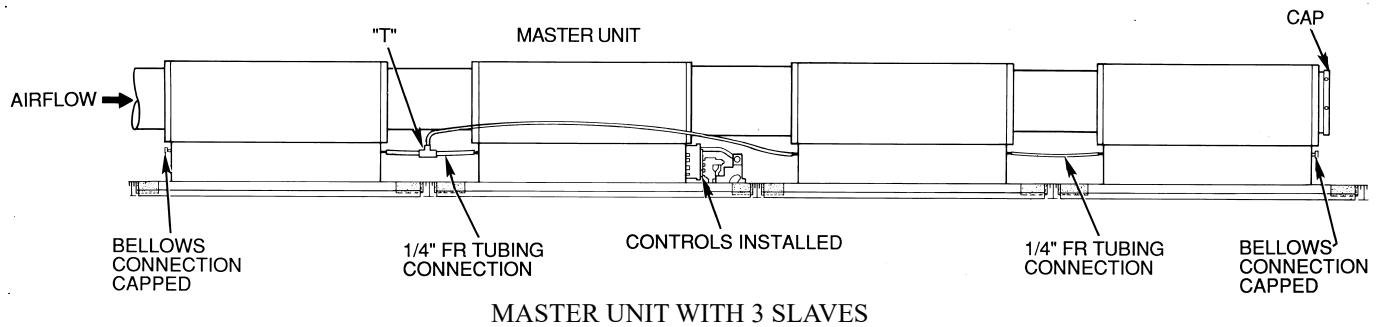
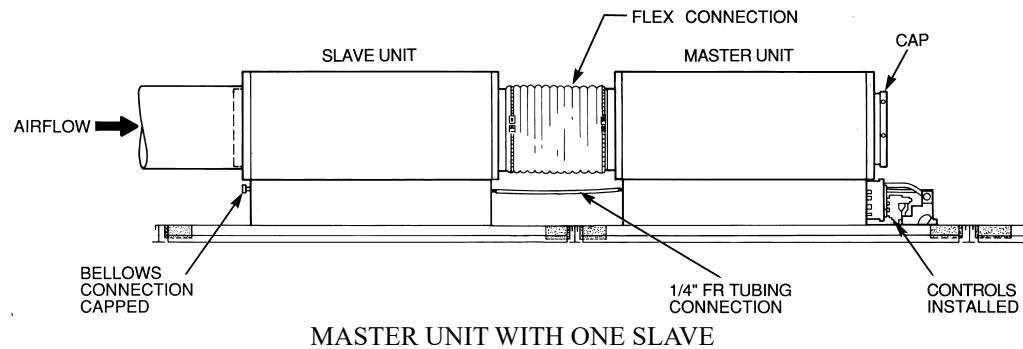
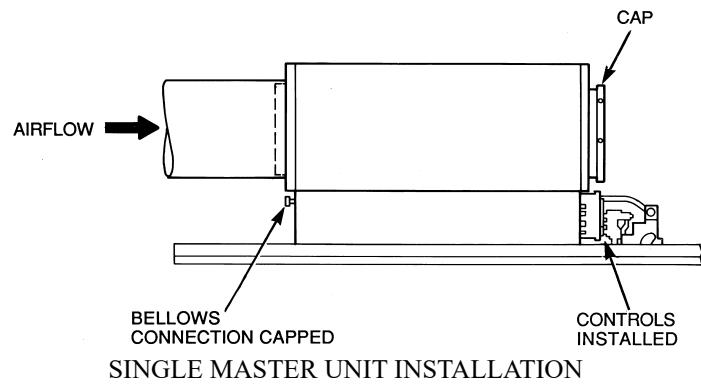


Fig. 28 — Control Arrangements - Master Units with Slaves

OPERATING SEQUENCES

System powered control for the Moduline® terminal is shown schematically in Fig. 29.

System Powered Cooling

A high-pressure signal and a low-pressure signal, measured across the control unit distribution baffle, are transmitted through the unit control block to the control air filter and to the volume controller. The difference between the high and low pressure is an indication of the unit airflow. The control air filter, besides preventing dirt from entering the control system, also acts as a manifold to connect the volume controller to the unit.

The high-pressure and low-pressure signals act on diaphragms in the volume controller to position a seat relative to a bleed nozzle. The relationship of the seat to the bleed nozzle determines the air pressure transmitted back through the control filter to the unit bellows, which inflates to a position necessary to provide the airflow as preset on the volume controller. A change in input pressures caused by changes in duct pressures will cause the seat to be repositioned, relative to the bleed nozzle, and change the output pressure to the bellows to maintain the unit airflow. The airflow is pre-set using the maximum airflow adjusting lever.

The thermostat, wall-mounted or diffuser-mounted, is connected to the volume controller to provide a means of varying the airflow delivery as room temperature varies from the thermostat set point. As room temperature cools to the cooling thermostat set point, another bleed orifice in the thermostat opens and bleeds control air from the volume controller low side. This causes the volume controller seat to move toward

the bleed nozzle, increasing the bellows output pressure, thus closing the unit.

A minimum airflow can be set on the volume controller to prevent the unit from closing completely. The minimum airflow adjustment restricts the volume controller seat from closing the bleed nozzle, thus preventing the unit from fully closing. A hood airflow measurement is required to set minimum airflow.

System Powered Cooling With Warm-Up

The cooling thermostat (diffuser-mounted or wall-mounted) is a direct acting thermostat. With the space temperature at a nighttime condition below the set point, the thermostat port is open, reducing the pressure on the upper diaphragm (A) and causing the element assembly (B) to rise. This closes the bleed port (C), which diverts high pressure to the bellows, reducing the unit flow. In warm-up, hot air flows over the immersion warm-up switch installed in unit plenum. The switch closes, raising the low-side pressure on the volume controller diaphragm and moving the element away from the bleed nozzle. This reduces the bellows pressure and permits warm duct air to flow to the space.

System Powered Heating and Cooling

The 37HS can provide heating as well as cooling with the addition of a changeover switch installed in the unit plenum and a wall heating/cooling thermostat. A separate amplifier is not required.

With cold air below 65°F in the duct, the changeover is connected to the cooling side of the thermostat, and the bellows is bled at the volume controller according to the pilot pressure from the thermostat. Hot air in the plenum shifts the connection to the heating side of the thermostat.

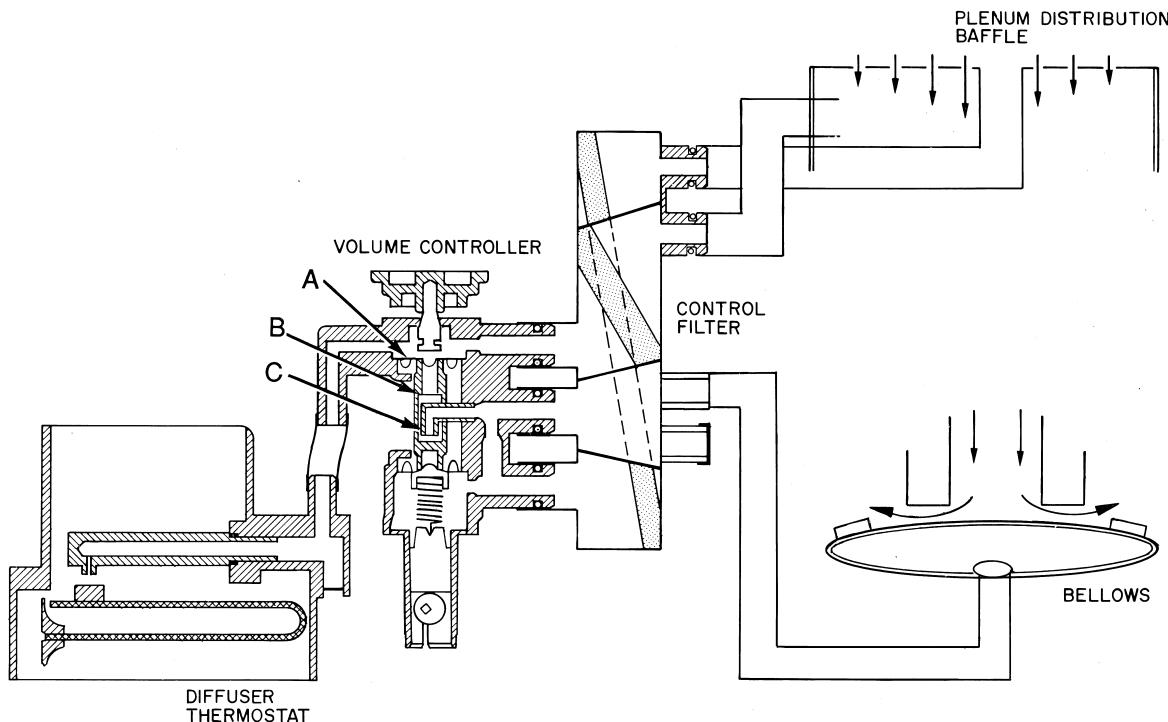


Fig. 29 — 37HS Control Schematic

Table 2 — 37HS Control Combinations

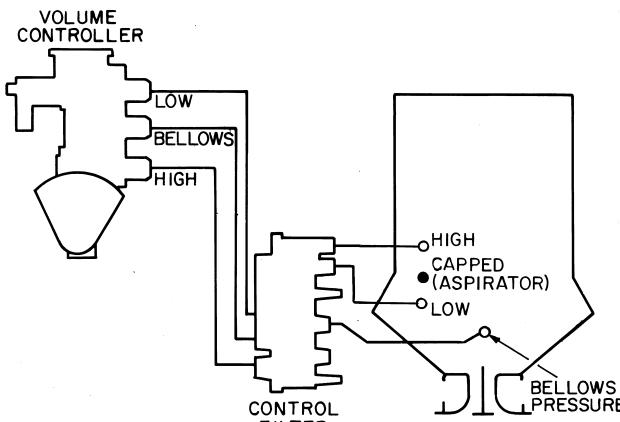
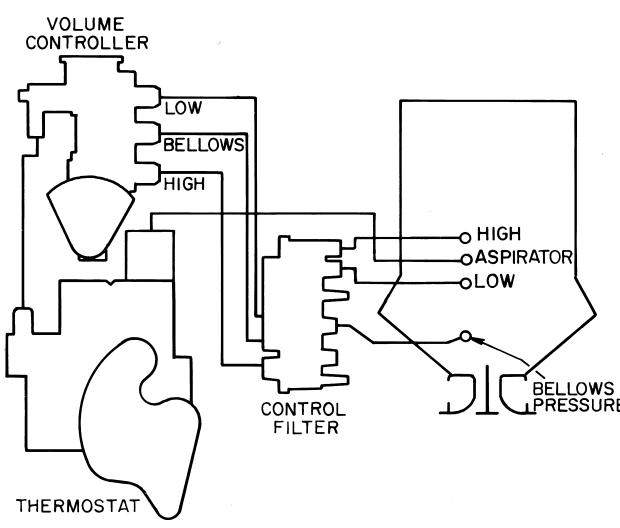
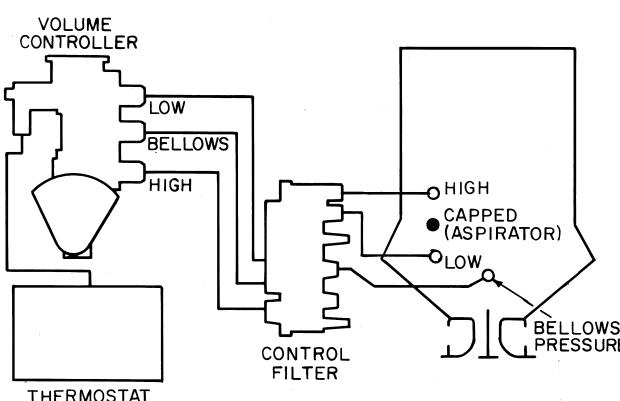
NO.	FUNCTION	MODEL	CONTROL PACKAGES REQUIRE	CONNECTION ARRANGEMENT	
1	SYSTEM POWERED CONSTANT VOLUME COOLING		37HS1 37HS2 37HS4	37HS900003 37HS900003 37HS900003	
2	SYSTEM POWERED VARIABLE VOLUME COOLING DIFFUSER THERMOSTAT		37HS1 37HS2 37HS4	37HS900001 37HS900002 37HS900004	
3	SYSTEM POWERED VARIABLE VOLUME COOLING WALL THERMOSTAT		37HS1 37HS2 37HS4	37HS900003 37CM901012 37HS900003 37CM901012 37HS900003 37CM901012	

Table 2 — 37HS Control Combinations (cont)

NO.	FUNCTION	MODEL	CONTROL PACKAGES REQUIRE	CONNECTION ARRANGEMENT
4	SYSTEM POWERED VARIABLE VOLUME COOLING SYSTEM POWERED WARM-UP WALL THERMOSTAT*	37HS1	37HS900003 37CM900152 37CM901012	
		37HS2	37HS900003 37CM900152 37CM901012	
		37HS4	37HS900003 37CM900152 37CM901012	
5	SYSTEM POWERED VARIABLE VOLUME HEATING AND COOLING SYSTEM POWERED CHANGEOVER WALL THERMOSTAT	37HS1	37HS900003 37CM900192 37CM901992	
		37HS2	37HS900003 37CM900192 37CM901992	
		37HS4	37HS900003 37CM900192 37CM901992	
6	SYSTEM POWERED VARIABLE VOLUME COOLING ELECTRIC WARM-UP WALL THERMOSTAT*	37HS1	37HS900003 37CM900792† 37CM901012	
		37HS2	37HS900003 37CM900792† 37CM901012	
		37HS4	37HS900003 37CM900792† 37CM901012	

LEGEND

- DA — Direct Acting
- NC — Normally Closed
- NO — Normally Open
- RA — Reverse Acting

*To use a diffuser thermostat in place of the wall thermostat, replace constant volume package 37HS900003 and wall thermostat 37CM901012 with variable volume package 37HS900001 (37HS1), 37HS900002 (37HS2) or 37HS900004 (37HS4).

†Package 37CM900792 is 24-v; other voltages available. (See Table 3, pages 26-27.)

**To use a wall thermostat in place of the diffuser thermostat, replace variable volume packages 37HS900001 (37HS1), 37HS900002 (37HS2) or 37HS900004 (37HS4) with constant volume package 37HS900003 and add wall thermostat 37CM901012.

††For night set back heating, a field-supplied dual set point DA thermostat must be substituted for thermostat packages shown. For VAV Moduline® cooling/separate system heating, a field-supplied dual set point DA/RA thermostat must be substituted for thermostat packages shown.

Table 2 — 37HS Control Combinations (cont)

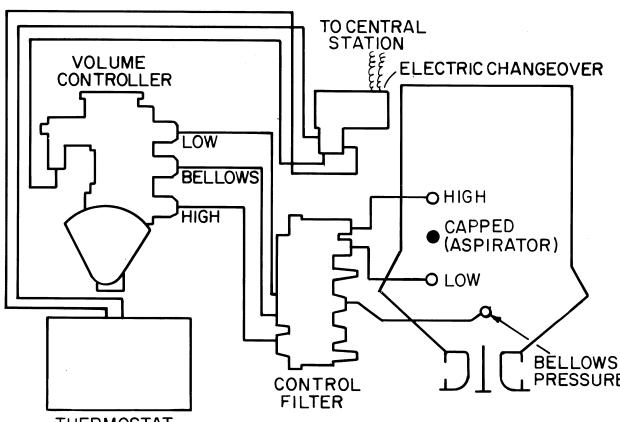
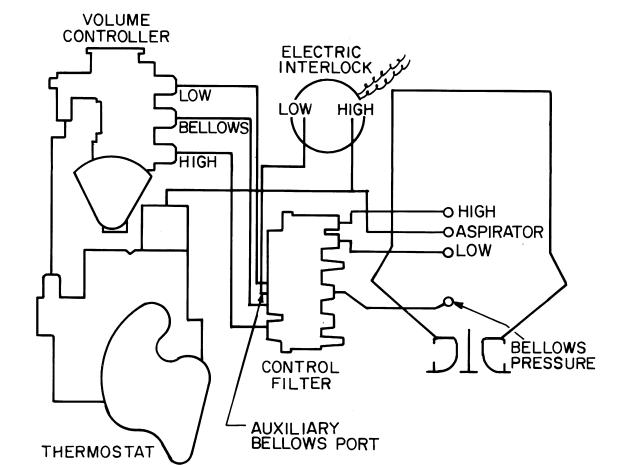
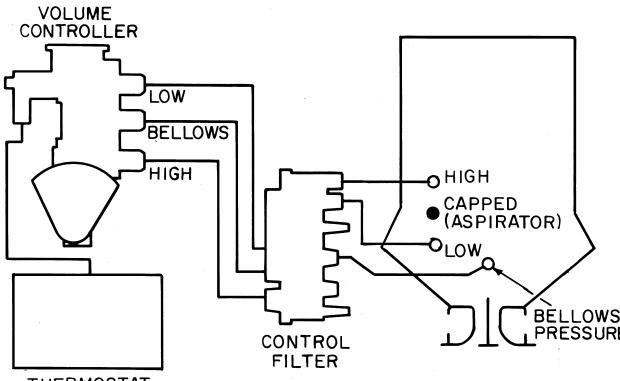
NO.	FUNCTION	MODEL	CONTROL PACKAGES REQUIRE	CONNECTION ARRANGEMENT
7	SYSTEM POWERED VARIABLE VOLUME HEATING AND COOLING ELECTRIC CHANGEOVER WALL THERMOSTAT	37HS1	37HS900003 37CM900792† 37CM901992	
		37HS2	37HS900003 37CM900792† 37CM901992	
		37HS4	37HS900003 37CM900792† 37CM901992	
8	SYSTEM POWERED VARIABLE VOLUME COOLING DIFFUSER THERMOSTAT** ELECTRIC INTERLOCK TO FAN COIL OR BASEBOARD HEATING	37HS1	37HS900001 37CM900922	
		37HS2	37HS900002 37CM900922	
		37HS4	37HS900004 37CM900922	
9	SYSTEM POWERED VARIABLE VOLUME HEATING WALL THERMOSTAT	37HS1	37HS900003 37CM901002	
		37HS2	37HS900003 37CM901002	
		37HS4	37HS900003 37CM901002	

Table 2 — 37HS Control Combinations (cont)

NO.	FUNCTION	MODEL	CONTROL PACKAGES REQUIRE	CONNECTION ARRANGEMENT
10	SYSTEM POWERED VARIABLE VOLUME COOLING PNEUMATIC PILOT VALVE FOR HEATING/COOLING SEQUENCE PNEUMATIC WALL THERMOSTAT††	37HS1	37HS900003 37CM900972 (NO) with 37HS900007 (DA)	
			37CM900982 (NC) with 37HS900008 (RA)	
		37HS2	37HS900003 37CM900972 (NO) with 37HS900007 (DA)	
			37CM900982 (NC) with 37HS900008 (RA)	
		37HS4	37HS900003 37CM900972 (NO) with 37HS900007 (DA)	
			37CM900982 (NC) with 37HS900008 (RA)	
		37HS1	37HS900003 37CM901012 37HS900017	
			37HS900003 37CM901012 37HS900017	
			37HS900003 37CM901012 37HS900017	
		37HS2	37HS900003 37CM901012 37HS900017	
			37HS900003 37CM901012 37HS900017	
		37HS4	37HS900003 37CM901012 37HS900017	
			37HS900003 37CM901012 37HS900017	
11	SYSTEM POWERED VARIABLE VOLUME COOLING WALL THERMOSTAT PNEUMATIC WARM-UP/FIRE SWITCH		37HS1	
			37HS2	
			37HS4	
12	SYSTEM POWERED VARIABLE VOLUME COOLING DIFFUSER THERMOSTAT PNEUMATIC WARM-UP/FIRE SWITCH	37HS1	37HS900001 37HS900017	
			37HS900002 37HS900017	
			37HS900004 37HS900017	
		37HS2	37HS900001 37HS900017	
			37HS900002 37HS900017	
		37HS4	37HS900001 37HS900017	
			37HS900002 37HS900017	

See Legend and Notes on page 20.

CONTROL INSTALLATION

Controls may be installed in the unit before or after the unit is hung or placed in the ceiling grid. However, if warm-up switches or changeover valves are used, the controls should be installed before the unit is placed in the ceiling structure.

Refer to Table 3 for control packages and accessory identification.

Constant Volume Applications

1. Remove the plugs from the high-pressure and low-pressure ports located at the control block of the unit.
2. Remove cap from bellows fitting (see Fig. 30) and install $1\frac{1}{16}$ -in. piece of $\frac{1}{4}$ -in. OD pneumatic tubing onto the bellows fitting (push on full length of fitting).
3. Push the diffuser baffle into the space between side diffusers and down onto the center diffuser at the end away from the unit. Then push down the end close to the unit. The baffle will form around the legs of the diffuser spacer and lock onto the center diffuser. See Fig. 31.
4. To prepare the control filter for installation, be sure that the bellows chamber filter plug is pushed tightly into the correct connection. Figure 32 shows the connection ports on both sides of the filter. The lower bellows port on the unit side and the small slave bellows pressure connection on the control side should be capped or plugged before installation. Moisten the 2 O-rings with water, then push the filter into the unit end block until the standoffs rest on or close to the unit end plate. See Fig. 33.
5. Remove cap from thermostat port of volume controller. See Fig. 34. Pull shim down until released from thermostat port and then pull shim out from volume controller body. See Fig. 35. Discard shim. Re-install cap on the thermostat port.
6. To complete installation, moisten the O-rings of the volume controller with water and push the volume controller directly into the control filter. See Fig. 36 and 37.

NOTE: The thermostat port of the volume controller must be capped.

7. If more than one unit is being controlled by a single volume controller, attach interconnecting tubing as follows (refer to Fig. 28, page 17):
 - a. Use $\frac{1}{4}$ -in. OD FR tubing. Connect tubing to the unit bellows connection on the end of the master unit opposite the control end. Do not connect tubing to filter bellows connection.
 - b. Using T-tap arrangement, connect the tubing from the master unit to the 2 slave units on each side of the master unit.
 - c. Attach interconnecting tubing from these 2 slave units to other slave units in the air series.

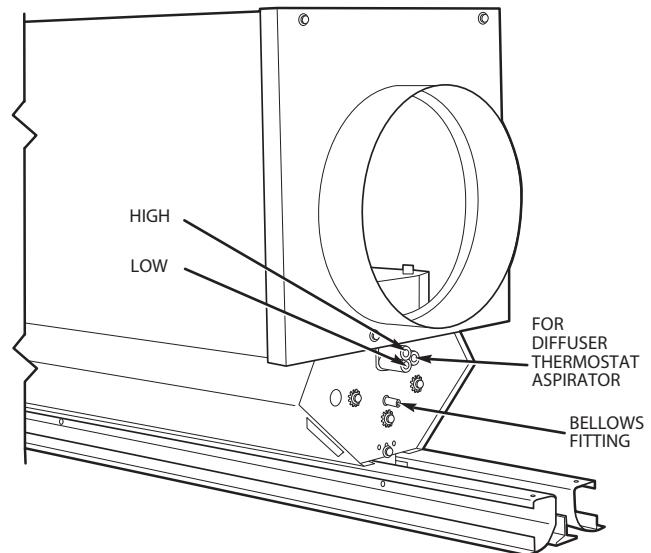


Fig. 30 — Typical 37HS Air Terminal Before Installation of Controls

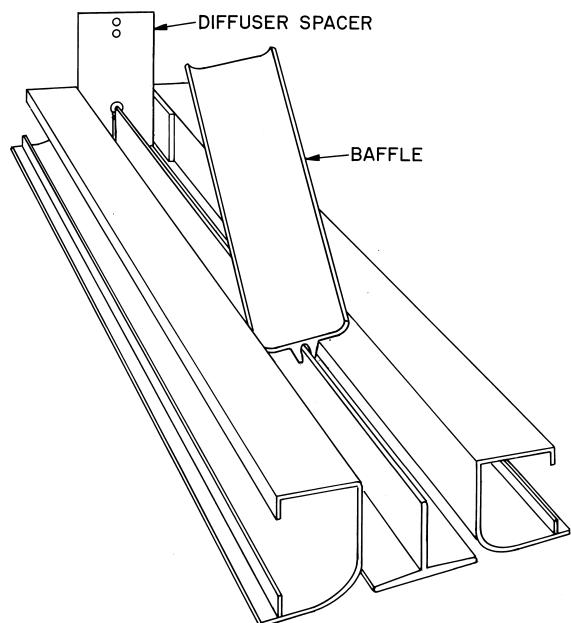


Fig. 31 — Diffuser Baffle Assembly

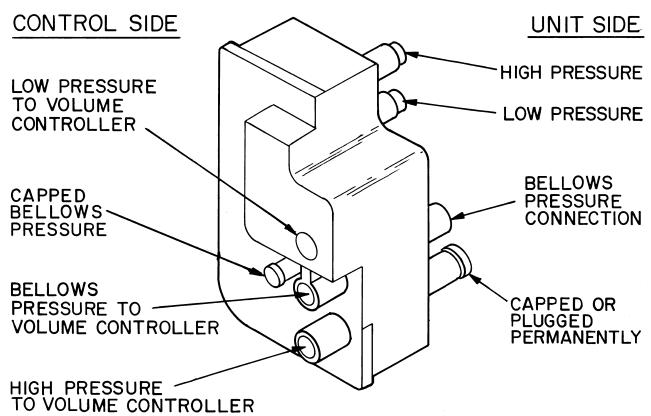


Fig. 32 — Filter/Manifold Connections

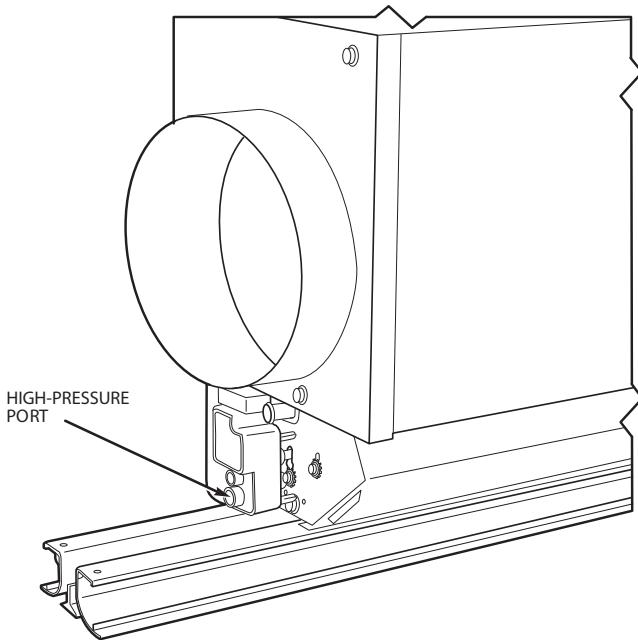


Fig. 33 — Control Filter Installed

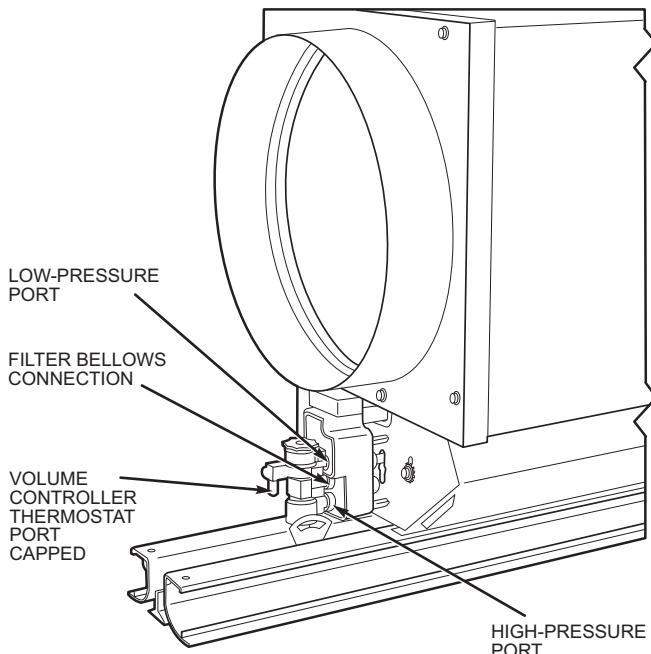


Fig. 36 — Constant Volume Control Installed on Unit

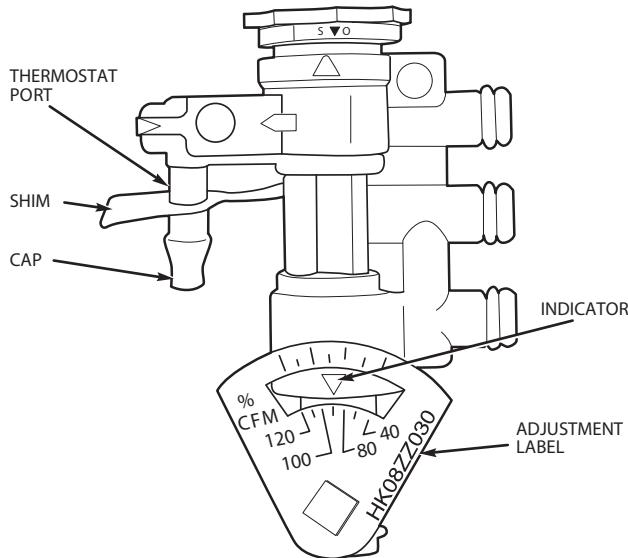


Fig. 34 — Setting Maximum Volume (37HS Controller)

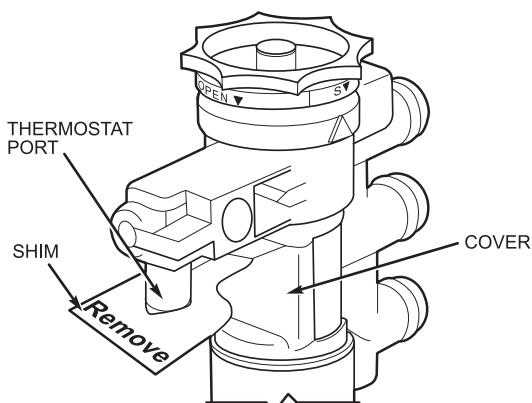


Fig. 35 — Shim Removal

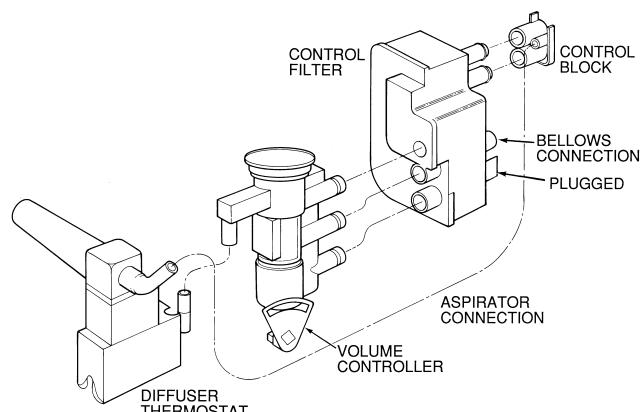


Fig. 37 — 37HS Control Connections

Variable Air Volume Applications

1. Remove the plugs from the high-pressure and low-pressure ports located at the control block of the unit.
2. Remove cap from bellows fitting and install $1\frac{1}{16}$ -in. long piece of $\frac{1}{4}$ -in. OD pneumatic adaptor tubing onto the bellows fitting (push on full length of fitting). See Fig. 30.
3. Push the diffuser baffle into the space between side diffusers and down onto the center diffuser at the end away from the unit. Then push down the end close to the unit. The baffle will form around the legs of the diffuser spacer and lock onto the center diffuser. See Fig. 31.
4. To prepare the control filter for installation, be sure that the bellows chamber filter plug is pushed tightly into the correct connection. Figure 32 shows the connection ports on both sides of the filter. The lower bellows port on the unit side and the small slave bellows pressure connection on the control side should be capped or plugged before installation. Moisten the 2 O-rings with water, then push the filter into the unit end block until the standoffs rest on the unit end plate. See Fig. 33.
5. *37HS2 and 37HS4:* The VAV control packages are shipped with the diffuser thermostat and volume

controller connected by a flexible offset tube. Verify that the offset is in the correct direction. See Fig. 38. Remove cap from thermostat port of volume controller. See Fig. 34. Pull shim down until released from thermostat port and then pull shim out from volume controller body. See Fig. 35. Discard shim.

- a. Refer to Fig. 37. Moisten the O-rings of the volume controller with water and push the controller directly into the filter.
- b. Push the thermostat down onto the center diffuser.
- c. Snap spring clip over thermostat and onto the side diffusers to hold thermostat in place. See Fig. 39. Make sure that thermostat lever will rotate.
- d. Remove cap from the aspirator supply port on the unit end block. Connect the aspirator supply tube to the end block connection.

37HS1: Because of the limited space on the 23-in. 37HS1 unit, the 37HS1 VAV control has a different method of assembly.

- a. Remove cap from thermostat port of volume controller. See Fig. 34. Pull shim down until released from thermostat port and then pull shim out from volume controller body. See Fig. 35. Discard shim.
- b. Refer to Fig. 37. Moisten the O-rings of the volume controller with water and push the controller directly into the filter extensions.
- c. Install the thermostat on the center diffuser, then snap spring clip over thermostat and onto the side diffusers to hold thermostat in place. See Fig. 40. Make sure that thermostat lever will rotate.
- d. Connect the thermostat to the volume controller with the $\frac{3}{16}$ -in. ID rubber tube with spring.
- e. Remove cap from the aspirator supply port on the unit control block. Connect the aspirator supply tube to the control block connection.
6. If more than one unit is being controlled by a single volume controller, attach interconnecting tubing as follows (refer to Fig 28, page 17):
 - a. Use $\frac{1}{4}$ -in. OD FR tubing. Connect tubing to the unit bellows connection on end of the master unit opposite the control end. Do not connect tubing to capped filter bellows connection.
 - b. Using T-tap arrangement, connect the tubing from the master unit to the 2 slave units on each side of the master unit.
 - c. Attach interconnecting tubing from these 2 slave units in the air series.

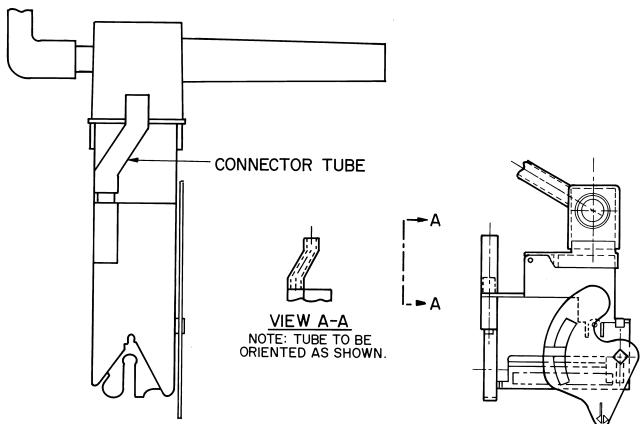


Fig. 38 — Correct Orientation of Connector Tube

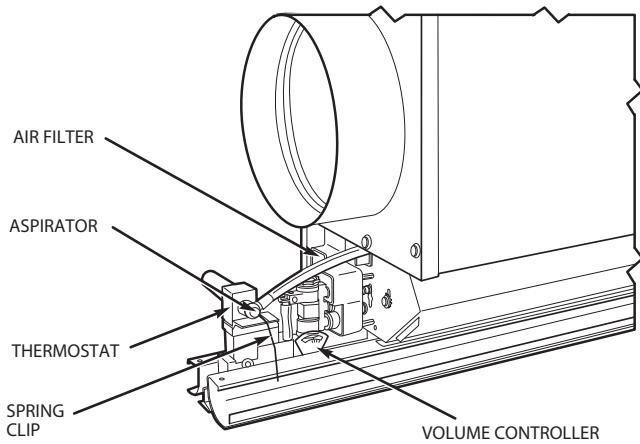


Fig. 39 — 37HS2 and 37HS4 Variable Air Volume Control Installation


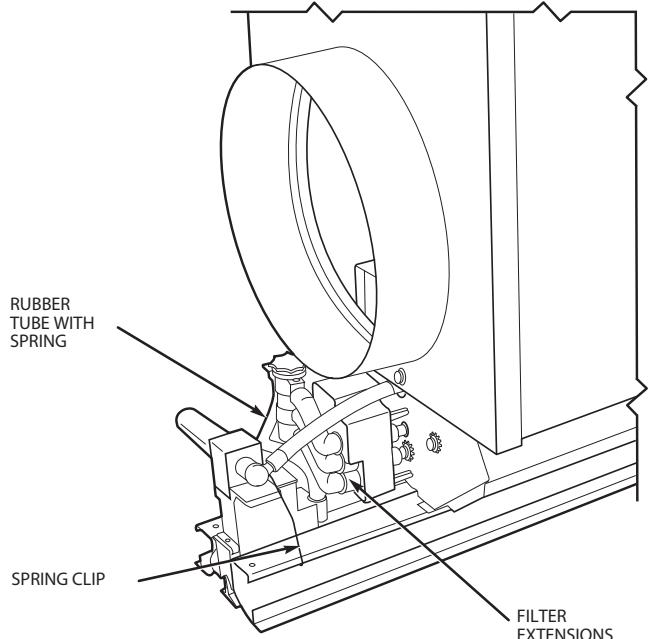



Fig. 40 — 37HS1 Variable Air Volume Control Installation

Table 3 — Control Identification

CONTROL PACKAGE, VARIABLE VOLUME, QTY 1	
Used On	Package No.
37HS1	37HS900001
37HS2	37HS900002
37HS4	37HS900004

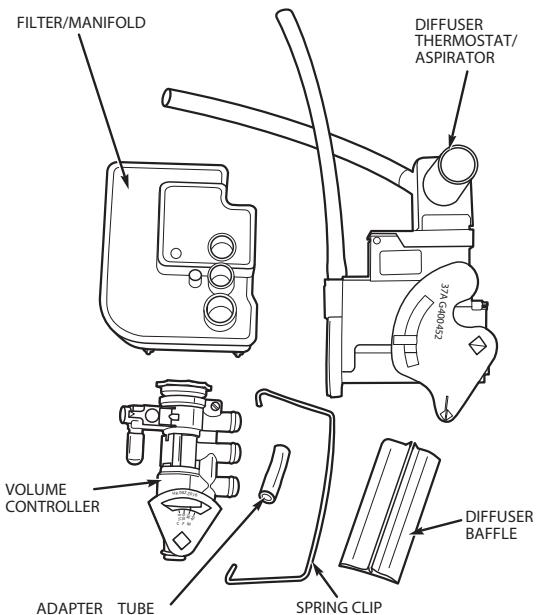


37HS2 and 37HS4 VAV Control Package

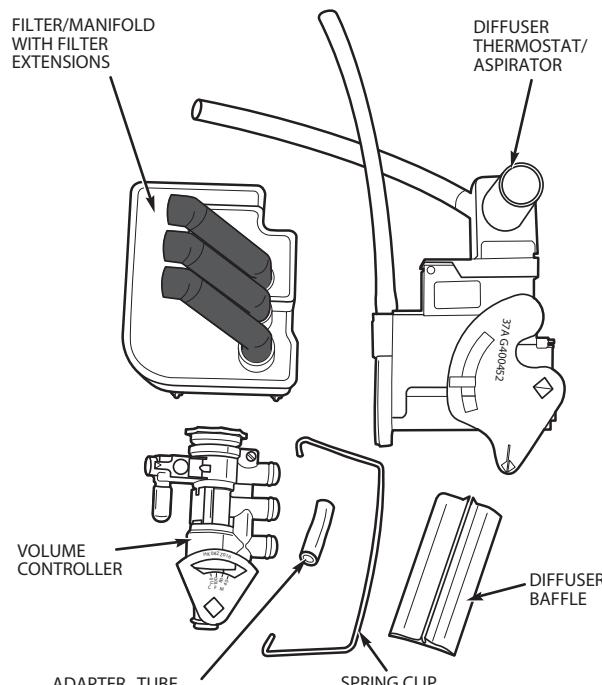

37HS1 VAV Control Package

CONTROL PACKAGE, CONSTANT VOLUME, QTY 1	
Used On	Package No.
37HS1	37HS900003
37HS2	37HS900003
37HS4	37HS900003

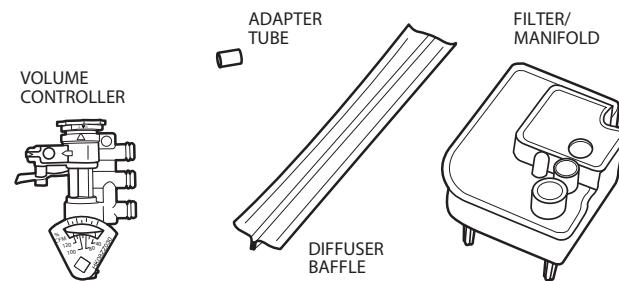

SYSTEM POWERED WARM-UP CONTROL, QTY 1

Package No. 37CM900152

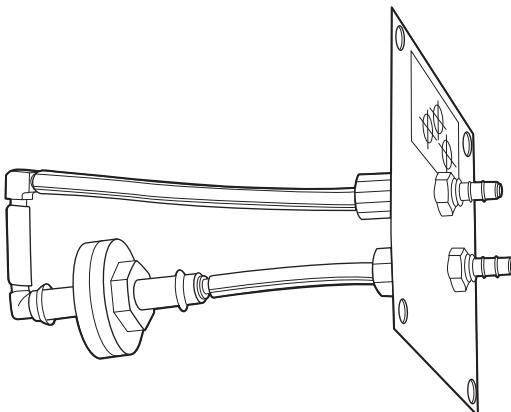
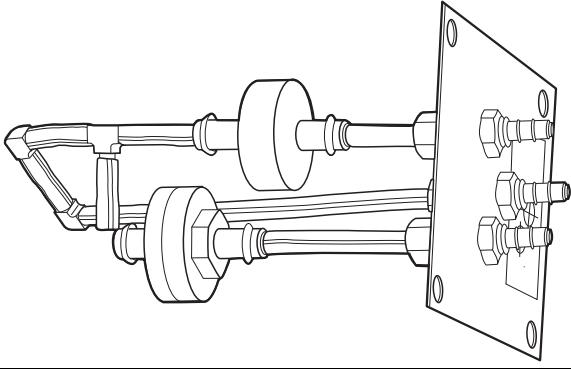
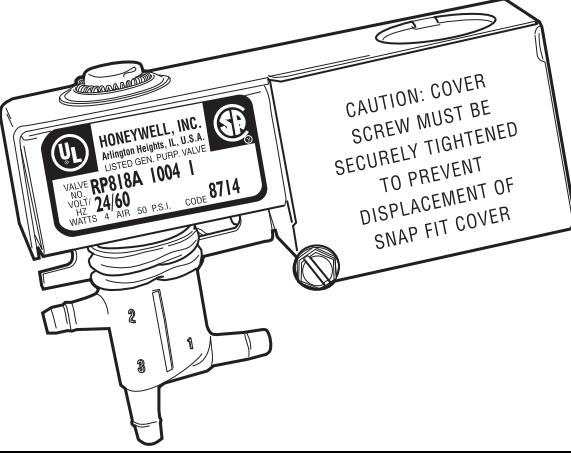


Table 3 — Control Identification (cont)

SYSTEM POWERED CHANGEOVER CONTROL, QTY1		
Package No. 37CM900192		
SYSTEM POWERED WALL-MOUNTED THERMOSTATS		
Thermostat Type	Part No.	Package No.
DA (Cooling)	HL08TE006	37CM901012
RA (Heating)	HL08TE005	37CM901002
RA/DA (Heating/Cooling)	HL08TE004	37CM900992
ELECTRIC WARM-UP/CHANGEOVER VALVE		
Voltage	Package No.	
24	37CM900792	
120	37CM900802	
240	37CM900812	
208	37CM900822	
277	37CM900832	
480	37CM900842	
ELECTRIC INTERLOCK		
Used On		Package No.
37HS1		37CM900922
37HS2		37CM900922
37HS4		37CM900922
PNEUMATIC PILLOW VALVE FOR HEATING/COOLING SEQUENCE		
Used On		Package No.
37HS1		37CM900972 (NO) OR 37CM900982 (NC)
37HS2		
37HS4		
PNEUMATIC WALL THERMOSTAT		
Used On		Package No.
37HS1		37HS900007 (DA) OR 37HS900008 (RA)
37HS2		
37HS4		
PNEUMATIC WARM-UP/FIRE SWITCH		
Used On		Package No.
37HS1		37HS900017
37HS2		37HS900017
37HS4		37HS900017

LEGEND
DA - Direct Acting
NC - Normally Closed
NO - Normally Open
RA - Reverse Acting

AIRFLOW ADJUSTMENT

Each 37HS volume controller is equipped with a maximum cfm lever for setting the required unit airflow in the field. The lever is located at the bottom of the controller. See Fig. 41. The controller has a star wheel located at the top of the controller for setting the minimum airflow. The star wheel is also shown in Fig. 41.

Maximum Airflow (cfm) Adjustment

The 37HS maximum airflow adjustment lever is common to all sizes and is divided into levels of percent cfm. Table 4 shows the approximate unit airflow that will be obtained by each lever setting for each unit size.

Table 4 — Maximum Airflow Settings

LEVER SETTING (% CFM)	UNIT AIRFLOW (CFM)		
	37HS1	37HS2	37HS4
120	120	240	480
100	100	200	400
80	80	160	320
40	40	80	160

The maximum cfm is the unit airflow obtained when the thermostat is calling for full cooling in a VAV system; it is the design cfm for the space conditioned by the unit or units regulated by one controller.

The variation in maximum airflow for a given setting of the lever is a function of the unit plenum size, the model and the number of units in an air series on one controller. See Tables 5 and 6.

Table 5 — Maximum cfm Through the Inlet Collar of a Single Unit or of Units in Air Series

MODEL	PLENUM SIZE (in.)	INLET COLLAR DIAM (in.)	MAXIMUM TOTAL AIRFLOW (cfm)
37HS1	5 x 7	4	110
	7 x 7	6	400
	9 x 9	8	800
	11 x 11	10	1100
37HS2	7 x 7	6	400
	9 x 9	8	800
	11 x 11	10	1100
37HS4	9 x 9	8	800
	11 x 11	10	1100
	13 x 13	12	1600

Table 6 — Maximum Number of Units in an Air Series on One Control

MODEL	PLENUM SIZE (in.) ALL UNITS IN AIR SERIES	NUMBER OF UNITS ON ONE CONTROL			
		2	3	4	5
37HS1	5 x 7*	—	—	—	—
	7 x 7	X	X	—	—
	9 x 9	X	X	X	X
	11 x 11	X	X	X	X
37HS2	7 x 7	X	—	—	—
	9 x 9	X	X	X	—
	11 x 11	X	X	X	—
37HS4	9 x 9	X	—	—	—
	11 x 11	X	X	—	—
	13 x 13	X	X	X	—

*The 37HS1 unit with 5 x 7 size plenum is available with blank end only; multiple units of this size would not be used on one control.

NOTE: The conditions stated in Table 5 must be included in evaluations for selecting the number of units in an air series.

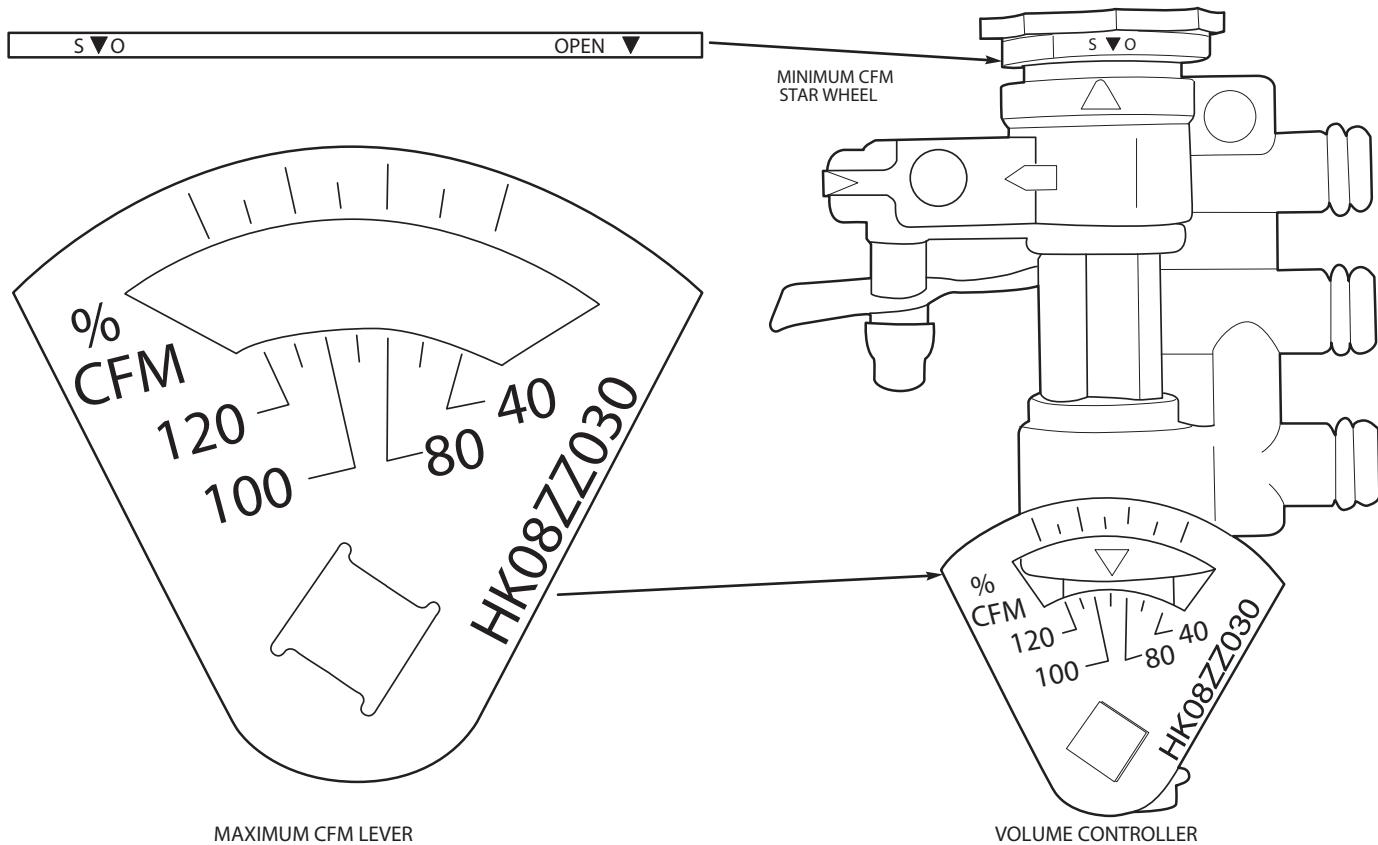


Fig. 41 — Minimum and Maximum Airflow Adjustments, 37HS Controller

To set maximum cfm with zero minimum cfm:

1. Set diffuser or wall thermostat for maximum cooling.
2. Turn the minimum cfm star wheel counterclockwise until the internal stop is reached. Do not attempt to override stop. (Minimum cfm has been set at zero, and the unit will turn off when required.)
3. Adjust maximum cfm lever to desired percent cfm.

Minimum Airflow (Cfm) Adjustment

Some applications require both a design maximum cfm and a minimum cfm. The 37HS controller can be set to provide both airflow requirements.

To set maximum and minimum cfm:

1. Set diffuser or wall thermostat for maximum cooling.
2. Turn the minimum cfm star wheel counterclockwise until the internal stop is reached. Do not attempt to override stop.
3. Shut off unit by adjusting thermostat to zero cooling, or disconnect tube from volume controller to thermostat.
4. Place a standard airflow hood against the outlet of the master unit and slowly turn the minimum cfm star wheel on the controller clockwise until the desired minimum cfm is reached.
5. Return the thermostat to the desired setting and/or reconnect tube between volume controller and thermostat.
6. Adjust maximum cfm lever to desired percent cfm.

FUNCTIONAL CHECKOUT

With building temperature within Moduline® thermostat set point limits (70°F to 80°F), VAV supply air at design temperature, and VAV supply pressure between 0.75 and 3.0 in. wg, check each control circuit:

1. Verify that air volume controllers are set at specified design value.

2. Move thermostat lever to extreme right (red - warm) position. Then check that bellows of control (master) unit and all slave units in circuit close to negligible airflow.

Failure of unit(s) to close may be due to:

- a. leakage or obstruction in control circuit.
- b. low duct pressure in control unit.

3. Move thermostat lever to extreme left (blue-cold) position. Verify that all bellows in the circuit open to approximately the same airflow. (See Table 4.)

Different airflows may be due to:

- a. faulty duct arrangement.
- b. control circuit obstruction.

4. Set thermostat lever at desired setting. See Table 7 and Fig. 42.

Table 7 — Lever Position

LEVER POSITION	TEMPERATURE
Left (blue - cold)	65°F (approx)*
Right (red - warm)	85°F (approx)*
Centered	75°F (approx)*

*With unit delivering 50°F to 60°F supply air.

NOTE: Only slight movement of lever is necessary to change temperature setting several degrees.

5. Refer to Tables 8 and 9 for normal cfm/duct pressure relationships.

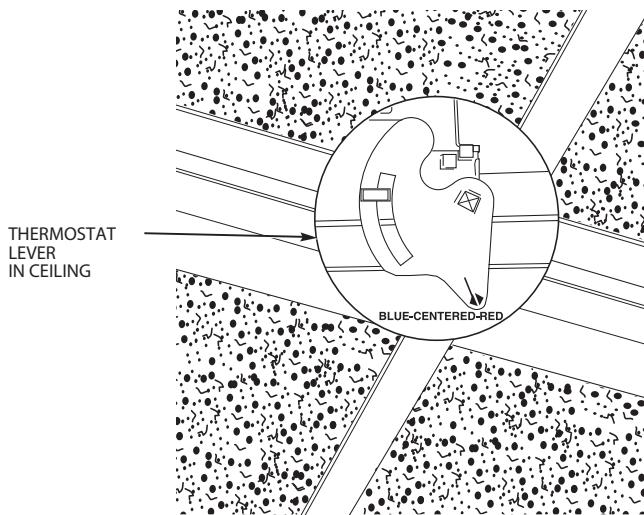


Fig. 42 — Thermostat Level Detail

Table 8 — Minimum Static Pressure at Control (Master) Unit - Units with System-Powered Controls and Standard Diffusers

AIRFLOW (cfm)	37HS1		37HS2	37HS4
	PLENUM SIZE (in.)			
	5 X 7	7 X 7	7 X 7	9 X 9
		9 X 9	9 X 9	11 X 11
40				
50	0.75	0.75	—	—
60				
70				
80				
90	0.75	0.75	0.75	—
100				
110	0.90	0.90	0.75	—
120	—	—	0.75	—
140	—	—	—	—
160	—	—	0.75	0.75
180	—	—	—	—
200	—	—	—	—
220	—	—	0.90	0.75
240	—	—	—	—
280	—	—	—	—
320	—	—	—	0.75
360	—	—	—	—
400	—	—	—	—
440	—	—	—	0.90

NOTE: Maximum inlet pressure — 3.0-in. wg.

Table 9 — Minimum Airflow (cfm)

MINIMUM AIRFLOW (cfm)		
37HS1	37HS2	37HS4
40	80	160

START-UP

Principles of Operation

GENERAL

Units are normally open (bellows deflated). Rise in bellows pressure closes unit. When thermostat is calling for no flow, pressure differences between unit plenum (measured at control filter) and bellows should be less than 0.1-in. wg.

A leak may cause bellows in circuit to be fully open, partially open or fully closed depending on location of the leak.

An obstruction prevents operation of all bellows downstream. The inoperative bellows may remain open or closed, depending on whether air has been trapped in them.

CONSTANT VOLUME OPERATION

Both high-pressure and low-pressure control air from the plenum of the master unit passes through the filter to the volume controller. An adjustable bleed orifice reacting to the relative change of high and low pressure allows a set amount of control air to pressurize the bellows until unit air delivery matches the controller setting.

VARIABLE AIR VOLUME OPERATION

The constant volume control becomes variable volume control with the addition of a thermostat. The thermostat enables the control to sense changes in the room temperature, override the volume controller and reduce the unit flow to match the thermostat setting. If room temperature rises, the bellows will bleed, increasing unit flow until the thermostat is satisfied. If room temperature falls, the bellows will inflate, decreasing the unit flow until the thermostat is satisfied.

Preliminary System Check

Perform air balancing and control system checkout before building is occupied but after conditioned spaces are reasonably clean. The high induction ratio of 37HS Moduline® diffusers can produce ceiling smudges within a few days if construction dirt is present.

Before starting system, thoroughly check the air handling apparatus and controls. Verify that the fan static pressure control is operating properly so that starting the fan without airflow at terminals will not cause duct damage from overpressure.

1. Check fan and system controls for proper hookup.
2. Be sure that all dampers, including fan inlet, fan outlet and outdoor-air and return-air dampers, have proper freedom of movement. Lubricate as required.
3. Check fan belts, motors, sheave alignment and fan wheel rotation. Check bearings for proper lubrication. Refer to fan manufacturer's recommendations.
4. Be sure that fan final filters are in place. If not, accumulated dirt will be distributed throughout the system and can accumulate in unit or fall into space. Dirt can also disrupt air terminal operation.
5. Be sure that fan, coil, filter section and ductwork are clean and free of any construction debris.
6. Remove protective tape from all diffusers.

Initial Start-Up

GENERAL CHECKOUT

1. Start the variable volume air-supply system and obtain suitable supply-air temperature and pressure. If design speed of supply fan is based on a diversified block load, close zone fire dampers or set Moduline thermostats at highest setting to obtain sufficient pressure at terminal being balanced.
2. Check the air terminal system for open control loops. Noise and excessive airflow at unit may indicate disconnected tubes, loose plugs or fittings. Correct the problem before beginning detailed checkout below.

SERVICE

Gaining Access to Control Area

On standard units, center diffuser is not removable. Remove ceiling tile or reach through nearby light fixture to gain access to controls.

TROUBLESHOOTING

General

If system design parameters have been met, such as ductwork size, airflow rate, etc., improper operation can often be traced to leaks or obstructions. The following paragraphs describe the general procedure for checking for leaks or obstructions.

Before performing any check, be sure that plenum pressure is a minimum of 0.75-in. wg and that supply-air temperature is 50°F to 60°F and room temperature is 70°F to 80°F.

Checking for Obstruction

If there is an obstruction, the unit fails to respond either partially or completely to thermostat changes, but does not show any indication of a control circuit leak.

Check the bellows pressure at each inlet and outlet. Pressure at every point in bellows circuit should be the same. The obstruction may be kinked control tube.

Checking for Leaks

The center diffuser of these units is not removable. Gain access to unit controls by raising ceiling tile.

1. Master units can be identified by means of thermostat lever extending below diffuser. See Fig 42.
2. Disconnect slave from master by disconnecting the inter-unit tubing. Mark tubes clearly to assure proper reassembly. Cap ports on master unit to isolate it. Then move thermostat lever to full red (warm) setting and observe whether unit shuts off.
3. Check for cracked plastic parts, loose or cracked tubing or a loose filter. Remove filter and check that filter opening is not obstructed; then replace filter.
4. Remove thermostat/volume controller assembly. Attach Magnehelic gage to bellows connection with rubber tube. (See Fig. 43.) Blow into tube until unit shuts off. Hold tube so that no air escapes. Dial on Magnehelic gage dropping or the opening of the diffuser slot discharging air will indicate a bellows leak. If after approximately 30 seconds no leak is detected, the bellows are satisfactory.
5. If unit appears satisfactory, replace the thermostat/volume controller assembly and connect it to the unit. See Control Installation section page 23.
6. Test whether master unit (isolated, without slave units) will control. If no control, check duct pressure as described in the section below.
7. If master unit controls properly, add one slave unit, making sure air is flowing from both sides of diffuser. If both units control, add another slave; and so on down the line.

8. If control is lost by adding a new slave, check for loose, cracked or disconnected tubing. Isolate that slave and cap all bellows ports. Attach a Magnehelic gage to one port and blow into it. The Magnehelic gage will be needed to detect a leaking bellows.
9. If possible, check bellows pressure at each unit by attaching Magnehelic gage tubing to a bellows port for 2 to 3 minutes after stabilization takes place. Record values.
10. Take duct readings with all units connected and operating. Reference the Check Duct Pressure section. To record data on slave unit, remove high-pressure port plug (Fig. 36) and insert Magnehelic gage tube into opening. Replace plug after test.
11. If units are still not controlling, check inter-unit control tubing for possible holes, breaks or pinching between the 2 units where control apparently was lost.

To Check Duct Pressure

To check duct pressure on master unit, remove the volume controller from the filter and connect a Magnehelic gage tube to the filter high-pressure port (shown on Fig. 33). After checking, replace volume controller. Check the slave unit by removing the plug from the high-pressure port on the slave unit (shown on Fig. 30) and connecting the Magnehelic gage tube. Replace plug after checking.

See Table 6 for minimum required duct pressures at various air quantities.

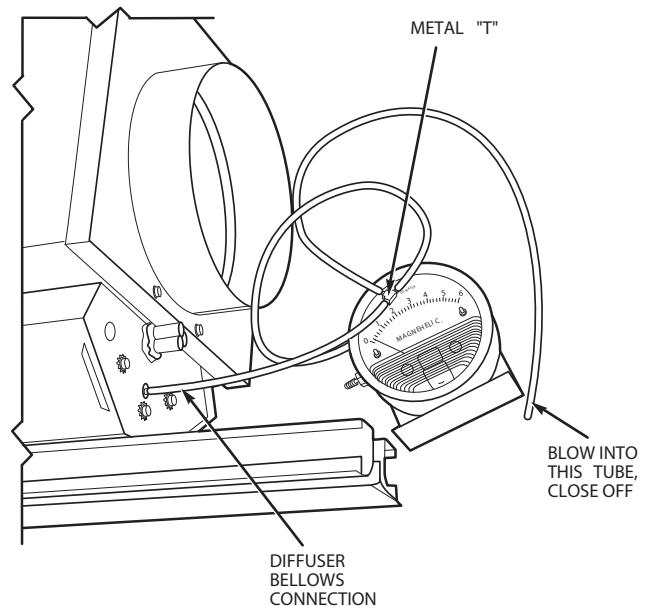


Fig. 43 — Checking Unit Bellows for Leaks

Table 10 — Troubleshooting Chart

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE PROCEDURE
ROOM TOO COLD	Thermostat Setting Incorrect	Check thermostat setting—move thermostat lever slightly toward red area. If unit shuts off, leave in this (or in an intermediate) position. See Fig. 42.
	Volume Controller Setting Incorrect	Check actual volume controller setting vs design cfm — readjust volume controller setting. Minimum flow set above stop.
	Minimum Flow Set Above Internal Stop	Turn minimum flow star wheel counterclockwise to zero position.
	Supply-Air Temperature Too Low	Check actual temperature of supply air vs design supply air temperature. If required, raise supply-air temperature.
	Controls Improperly Seated	Check connections between filter and plenum, volume controller and filter, filter and bellows.
	Tubing Loose or Kinked	Check interconnecting tubing between units. Refer to job drawings; check control arrangement — secure as required.
	Plugs and Caps Not Installed Properly	Check cap on bellows end connection. Check caps and plugs on filter.
	Unit Controlled by More than One Set of Controls	Check job drawings for proper control arrangement—make changes as required.
	Filter Clogged	Visually check filter media — replace only if excessively dirty. (Normally, filter will not require replacement.)
	Volume Controller Defective	Check volume controller operation with thermostat lever set at extreme blue area — replace volume controller if unit airflow does not decrease when cfm setting is decreased.
	Thermostat Defective	Check thermostat operation — replace thermostat if temperature at thermostat is below 75°F and airflow does not shut off when lever is at extreme red area.
	Bellows Defective	Check bellows — remove controls, cap one end of bellows, connect tube to other end and inflate until unit shuts off. Trap air in bellows. If unit flow increases, bellows is defective — replace.
	Supply Pressure to Filter Not Correct	Remove controls including filter. Check pressures at end plug. There must be pressure reading at each connection. Top connection pressure reading must be higher than low connection pressure reading. If pressure readings are the same or opposite of above — move controls to another unit.
ROOM TOO WARM	Thermostat Setting Incorrect	Check thermostat setting—move thermostat lever slightly toward blue area. If air is discharged from unit, leave lever in this (or in an intermediate) position. See Fig. 42.
	Volume Controller Setting Incorrect	Check actual volume controller setting vs design cfm —readjust volume controller setting.
	Supply-Air Temperature Too High	Check actual temperature of supply air vs design supply air temperature. If required, reduce supply-air temperature.
	Duct Pressure Incorrect	Measure duct pressure — verify per Table 6.
	Unit Controlled by More than One Set of Controls	Check job drawings for proper control arrangement—make changes as required.
	Tubing Loose; Control Caps Not Installed Properly	Check interconnecting tube between volume controller and thermostat. Check caps on volume controller at thermostat connection.
	Volume Controller Defective	Check volume controller operation with thermostat lever set at extreme blue area. Replace volume controller if airflow does not increase when volume controller cfm setting is increased.
	Thermostat Defective	Check thermostat operation — replace thermostat if temperature at thermostat is above 69°F and the cfm is not at design requirements, although lever is at the extreme blue area.