

Installation Instructions

IMPORTANT: This installation instruction contains basic unit installation information including installation of field control devices. For information on unit start-up, service, and operation, refer to the unit Controls, Start-Up, Operation, Service, and Troubleshooting Instructions also enclosed in the unit literature packet.

CONTENTS

	Page
SAFETY CONSIDERATIONS	2
A2L REFRIGERATION INFORMATION	6
Transportation	6
Minimum Conditioned Space Area	6
GENERAL	7
PRE-INSTALLATION	7
Inspection	7
Unit Storage	7
Storage Guidelines	7
• DRY LOCATION	
• DRAINAGE	
• CONDENSATION PREVENTION	
• PROTECTION	
Temporary Operation for a Completed Building	7
Temporary Operation for an Under-Construction Building	7
INSTALLATION	7
Step 1 — Check Jobsite	7
• INSTALLATION GUIDELINES (ALL UNITS)	
Step 2 — Check Unit	8
• INSPECT UNIT	
Step 3 — Provide Unit Support	8
• ROOF CURB	
Step 4 — Rig and Place Unit	8
• LIFTING A PACKAGED DOAS	
• MOVING/LIFTING A PACKAGED AIR CONDITIONING UNIT	
• POSITIONING	
• ROOF MOUNT	
• SLAB MOUNT	
• INSTALLATION ONTO CURB	
Step 5 — Field Fabricate Ductwork	23
• DUCTWORK CONSIDERATIONS:	
• RETURN AIR DUCTWORK	
• DISCHARGE DUCTWORK	
Step 6 — Make Unit Duct Connections	23
• VERTICAL SUPPLY/RETURN CONNECTIONS	
• HORIZONTAL SUPPLY CONNECTIONS	
Step 7 — Install External Trap for Evaporator Condensate Drain	23
Step 8 — Install Gas Piping (Gas Heat Units Only)	24
• E AND EXL CABINETS (300 TO 600 MBH)	
• EXL CABINETS (800 TO 1600 MBH)	
• GAS HEAT SAFETY CONTROLS	
Step 9 — Install Gas Heat Condensate Drain	25
Step 10 — Install Hot Water (Hot Water Units Only)	25
• HOT WATER COIL PIPE ROUTING	
• HOT WATER HEATING CONTROL	
Step 11 — Water-Source Setup and Installation	25
• COMPONENTS AND CONFIGURATIONS	
• WATER QUALITY	
• WATER PIPING	
• PIPING MATERIALS	
• FLOW RATES AND TEMPERATURES	
• PIPING INSULATION	
• HOSE KITS AND VALVING	
• STRAINERS	
• ANTIFREEZE	
• FLUSHING	
• OPERATING LIMITS	
Step 12 — Make Electrical Connections	28
• OPTIONAL UNIT-POWERED TYPE CONVENIENCE OUTLET	
• OPTIONAL NON-UNIT-POWERED TYPE (FIELD WIRED) CONVENIENCE OUTLET	
• FIELD POWER SUPPLY	
• SENSOR WIRING	
Step 13 — Open Exhaust Damper (Units with Optional Exhaust or Energy Conservation Wheel Only)	29
Step 14 — Install all Accessories	30
Step 15 — Configure Controls	30
• SEQUENCE OF OPERATION	
• OCCUPIED MODE	
• STAGED HEAT (ELECTRIC HEAT) 2-STAGE HEAT	
• STAGED HEAT (ELECTRIC HEAT) 4-STAGE HEAT	
• STAGED HEAT (GAS HEATER) 2-STAGE	
• STAGED HEAT (GAS HEATER) 4-STAGE	
• MODULATED HEAT	
• UNOCCUPIED MODE	
• SAFETY SHUTDOWN	
• REFRIGERANT CHARGING	
Step 16 — Unit Start-Up	33
Step 17 — Test Mode and Fan Balancing	33
Typical Wiring Diagrams	33
MAINTENANCE	61
Installation Code and Quarterly Inspections	61
General	61
• QUARTERLY	
Unit Exterior	61
• CABINET EXTERIOR	
• UNIT LOCATION	
Direct Drive Supply and Exhaust Fans	61
• BLOWER WHEEL	
• MOTORS	
Outdoor Fans	
(Air cooled and ASHP units only)	61
Outdoor Coil Water Valves	
(WSHP units only)	61

Refrigeration Circuit Components	61
• INDOOR COIL	
• OUTDOOR COIL	
• COMPRESSORS	
Condensate Drain Pan and Drain	61
Dampers	61
• DAMPERS	
• DAMPER MOTOR/LINKAGES	
Energy Conservation Wheel	62
• BEARINGS	
• DRIVE MOTOR	
• DRIVE BELTS	
• SEALS	
• WHEEL	
Gas Heater	62
• GAS LINE	
• MANUAL SAFETY SHUT OFF VALVE	
• DIRECT SPARK IGNITER	
• GAS VALVE	
• BURNERS	
• HEAT EXCHANGER	
• DRAFT INDUCER	
• VENT PIPE/TERMINAL	
• CONDENSATION DRAIN	
Electric Heater Wiring and Wiring Connections	62
• CONTROL PANEL	
• HEATING ELEMENTS	
Filters	62
TROUBLESHOOTING	63

SAFETY CONSIDERATIONS

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury, or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

When working on air-conditioning equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that may apply. Refer to Fig. 1 to locate label placement.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Have a fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit. Affix any labels that ship with the unit or accessory installation instructions to the unit. Consult local building codes, the current editions of the National Fuel Gas Code (NFGC) NFPA 54/ANSI Z223.1, and the National Electrical Code (NEC)/National Fire Protection Association (NFPA) 70.

In Canada refer to the current editions of the National Standards of Canada CAN/CSA-B149.1 and 149.2 Natural Gas and Propane Installation Codes, and Canadian Electrical Code (CEC) CSA C22.1.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury. Understand the signal words DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies hazards which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal

injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

The following symbols may be seen on the equipment:

SYMBOL	CODE	MEANING
	GHS02: Flammable	Flammable gas
	ISO 7000-0790 (2004-01)	Read operator's manual.
	ISO 7000-1659 (2004-01)	Service indicator: read technical manual.
	ISO 7000-1641 (2004-01)	Operator's manual: operating instructions

WARNING

Before performing service or maintenance operations on unit, turn off main power switch to unit. Electrical shock could cause personal injury.

AVERTISSEMENT

Avant d'effectuer des opérations d'entretien ou de maintenance sur l'appareil, coupez l'alimentation principale de l'appareil. Un choc électrique peut entraîner des blessures corporelles.

DANGER

Disconnect gas piping from units when leak testing at pressures greater than 0.5 psig. Pressures greater than 0.5 psig will cause gas valve damage resulting in a hazardous condition. If gas valve is subjected to pressure greater than 0.5 psig, it must be replaced. When pressure testing field-supplied gas piping at pressures of 0.5 psig or less, the unit connected to such piping must be isolated by manually closing the gas valve.

DANGER

Si vous sentez une odeur de gaz, n'essayez pas d'allumer un appareil. Ne touchez aucun interrupteur ou prise électrique. Evacuez immédiatement le bâtiment et appelez le fournisseur de gaz. Suivez les instructions du fournisseur de gaz. Si vous ne parvenez pas à joindre votre fournisseur de gaz,appelez les pompiers.

DANGER

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

⚠ DANGER

Ne stockez pas et n'utilisez pas d'essence ou d'autres vapeurs et liquides inflammables à proximité de cet appareil ou de tout autre appareil.

IMPORTANT: Read the entire instruction manual before starting installation.

⚠ WARNING

RISK OF FIRE OR EXPLOSION

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Leave the building immediately.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

⚠ WARNING

CARBON-MONOXIDE POISONING HAZARD

Failure to follow instructions could result in severe personal injury or death due to carbon-monoxide poisoning, if combustion products infiltrate into the building.

Check that all openings in the outside wall around the vent (and air intake) pipe(s) are sealed to prevent infiltration of combustion products into the building.

Check that furnace vent (and air intake) terminal(s) are not obstructed in any way during all seasons.

⚠ AVERTISSEMENT

RISQUE D'INTOXICATION AU MONOXYDE DE CARBONE

Si ces directives ne sont pas suivies, cela peut entraîner des blessures graves ou une intoxication au monoxyde de carbone pouvant causer la mort, si des produits de combustion s'infiltrent dans le bâtiment.

Vérifier que toutes les ouvertures pratiquées dans le mur extérieur autour du ou des tuyaux d'évent (et de la prise d'air) sont scellées de manière à empêcher l'infiltration de produits de combustion dans le bâtiment.


Veiller à ce que la ou les sorties de l'évent de l'appareil de chauffage (et la prise d'air) ne soient, en aucune façon, obstruées, quelle que soit la saison.

⚠ WARNING

FIRE HAZARD

Failure to follow this warning could result in severe personal injury and/or property damage.

Inlet pressure tap set screw must be tightened and 1/8 in. NPT pipe plug must be installed to prevent gas leaks.

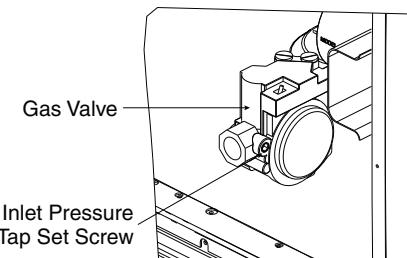

⚠ AVERTISSEMENT

RISQUE D'INCENDIE OU D'EXPLOSION

Si les consignes de sécurité ne sont pas suivies à la lettre, cela peut entraîner la mort, de graves blessures ou des dommages matériels.

Ne pas entreposer ni utiliser d'essence ni autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.

QUE FAIRE SI UNE ODEUR DE GAZ EST DÉTECTÉE

- Ne mettre en marche aucun appareil.
- Ne toucher aucun interrupteur électrique; ne pas utiliser de téléphone dans le bâtiment.
- Quitter le bâtiment immédiatement.
- Appeler immédiatement le fournisseur de gaz en utilisant le téléphone d'un voisin. Suivre les instructions du fournisseur de gaz.
- Si le fournisseur de gaz n'est pas accessible, appeler le service d'incendie.


L'installation et l'entretien doivent être effectués par un installateur ou une entreprise d'entretien qualifié, ou le fournisseur de gaz.

⚠ WARNING

FIRE HAZARD

Failure to follow this warning could result in severe personal injury and/or property damage.

Manifold pressure tap set screw must be tightened and 1/8 in. NPT pipe plug must be installed to prevent gas leaks.

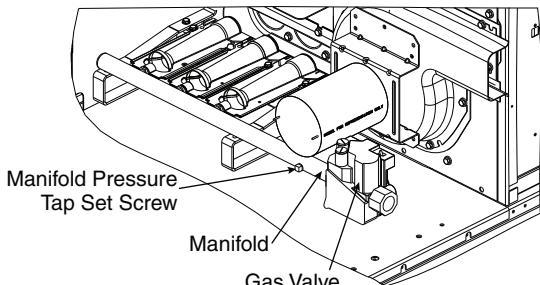


⚠ ADVERTISSEMENT

RISQUE D'INCENDIE

Le non-respect de cet avertissement pourrait entraîner des blessures graves et/ou des dommages matériels.

La vis de réglage du robinet de pression d'entrée doit être serrée et un bouchon de tuyau NPT de 1/8 po doit être installé pour éviter les fuites de gaz.

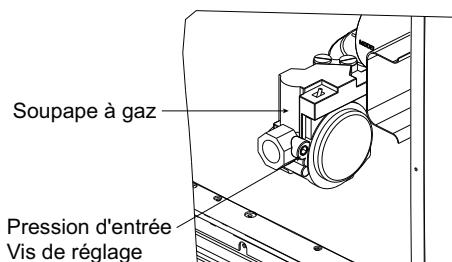


⚠ ADVERTISSEMENT

RISQUE D'INCENDIE

Le non-respect de cet avertissement pourrait entraîner des blessures graves et/ou des dommages matériels.

La vis de réglage du robinet de pression du collecteur doit être serrée et un bouchon de tuyau NPT de 1/8 po doit être installé pour éviter les fuites de gaz.

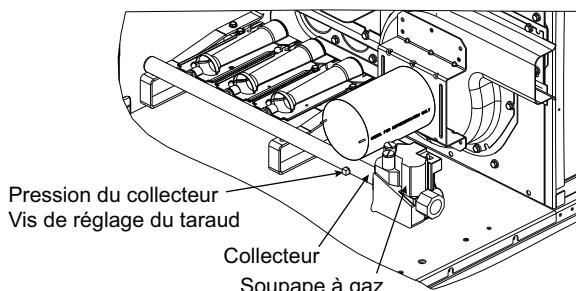

⚠ WARNING

This equipment may contain a UV-C LAMP. Look for this UVC warning on panels or doors before opening. Disconnect UVC power before opening access doors, removing panels, or installing, maintaining, or servicing UVC lamps or fixtures. Do not operate UVC with open access doors or with panels removed. Do not operate

UVC outside of unit cabinet. Exposure to UVC can cause harm to the eyes and skin. Review the UVC lamp accessory installation instructions for details on installing, testing, and maintaining UVC lamps.



⚠ ADVERTISSEMENT

Cet équipement peut contenir une LAMPE UV-C. Recherchez ces avertissements UVC sur les panneaux ou les portes avant de les ouvrir. Débranchez l'alimentation UVC avant d'ouvrir les portes d'accès, de retirer les panneaux ou d'installer, d'entretenir ou de réparer des lampes ou des luminaires UVC. N'utilisez pas de lampes UVC en dehors du boîtier de l'appareil.

L'exposition aux UVC peut endommager les yeux et la peau. Consultez les instructions d'installation des accessoires de lampe UVC pour plus de détails sur l'installation, le test et l'entretien des lampes UVC.



⚠ WARNING

ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Before performing installation, service, or maintenance on this unit, turn off the main power disconnect to the unit and install lock and lockout tag. Ensure electrical service to DOAS unit agrees with voltage and amperage listed on the unit rating plate. Some equipment may have multiple power disconnects

⚠ ADVERTISSEMENT

RISQUE DE CHOC ÉLECTRIQUE

Le non-respect de cet avertissement pourrait entraîner des blessures corporelles, voire la mort.

Avant d'effectuer l'installation, l'entretien ou la maintenance de cet appareil, coupez l'alimentation principale de l'appareil et installez un verrou et une étiquette de verrouillage. Assurez-vous que le service électrique de l'unité DOAS correspond à la tension et à l'ampérage indiqués sur la plaque signalétique de l'appareil. Certains équipements peuvent avoir plusieurs disjoncteurs d'alimentation.

⚠ WARNING

This equipment is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

⚠ CAUTION

PERSONAL INJURY HAZARD

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing air conditioning equipment.

⚠ ADVERTISSEMENT


Cet équipement n'est pas destiné à être utilisé par des personnes (y compris des enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou un manque d'expérience et de connaissances, à moins qu'elles n'aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil par une personne responsable de leur sécurité. Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.

⚠ ADVERTISSEMENT

RISQUE DE BLESSURE CORPORELLE

Le non-respect de cette mise en garde peut entraîner des blessures corporelles.

Les pièces en tôle peuvent présenter des bords tranchants ou des bavures. Soyez prudent et portez des vêtements de protection appropriés, des lunettes de sécurité et des gants lors de la manipulation des pièces et de l'entretien des équipements de climatisation.

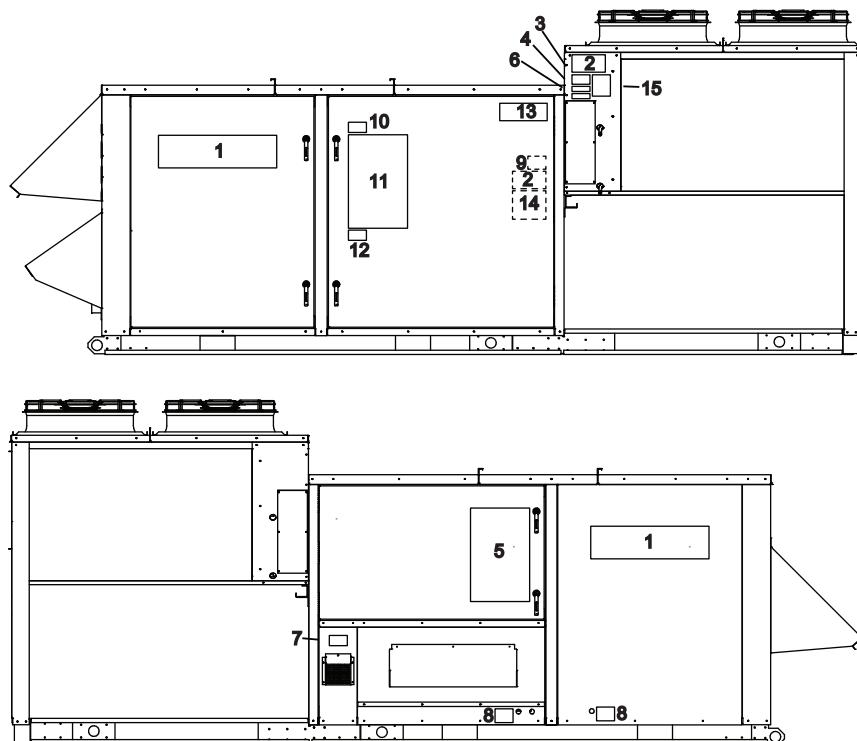

Description:	Location:
Brand Logo	1
Serial Data Plate	2
CA Prop 65 Label	3
R-454B Label	4
Fan Warning Label	5
Quality Inspection Stamp	6
Hot Surface Label	7
Condensate Trap Label	8
Copper Conductors Label	9
Additional Parts Label	10
Electrical Warning Label	11
Door Latch & Lock Label	12
R-454B Data Label	13
R-454B Warning Label	14
R-454B Warning Label	15

Fig. 1 — Label Placement

A2L REFRIGERATION INFORMATION

This equipment contains R-454B, a mildly flammable refrigerant classified as A2L. Read all instructions prior to transporting, storing, installing, or servicing this equipment.



⚠️ WARNING

Only use equipment and components that are designed for use with R-454B refrigerant.

⚠️ ADVERTISSEMENT

Utilisez uniquement les équipements et les composants conçus pour être utilisés avec le réfrigérant R-454B.

Transportation

Follow all local, state, or federal regulations when transporting equipment containing A2L refrigerant. Carrier packaged DOAS units are designed to be transported on a flatbed trailer or flatbed rail car. Ensure the proper safety equipment, driver training, and any required trailer markings are in place prior to transporting equipment containing an A2L refrigerant. Units with an A2L refrigerant charge are not approved for air or cargo vessel transportation.

Minimum Conditioned Space Area

The space area served by ducted equipment with A2L refrigerant is restricted by building code based on refrigerant volume that the releasable to the conditioned space served by the duct system.

Determine the conditioned space area by calculating the floor area (room length x room width) of all spaces served by a common duct system and adding them all together to get the total conditioned space area.

Compare the calculated total conditioned space area to the minimum conditioned space area (TA_{min}) listed in Tables 1-2, based on the unit size.

If the space area is above the minimum conditioned space area listed in Table 1 based on unit size and configuration, no action is needed.

If the conditioned space area is below the minimum conditioned space area listed in Table 1 based on unit size and configuration, then additional ventilation may be required. Refer to local code, UL-60335-2-40, or ASHRAE standard 15.

⚠️ CAUTION

Do not install an ignition source or potential ignition source in a space where the total conditioned area is below the minimum total conditioned area (TA_{min}), unless a flame arresting device has been installed.

⚠️ ADVERTISSEMENT

N'installez pas de source d'inflammation ou de source potentielle d'inflammation dans un espace où la surface totale conditionnée est inférieure à la surface totale conditionnée minimale (TA_{min}), à moins qu'un dispositif pare-flammes n'ait été installé.

Table 1 – 62L Cooling Only

Capacity (Tons)	R-454B Refrigerant Charge (mc)		Qmin Minimum circulation airflow circulated to the total conditioned space (GG.15DV)	CFM	TA min (m ²) Minimum area of the total conditioned space in m ² (GG.17DV)	
	lb	kg			m ²	ft ²
40	78	35.1	3475	2047	105	1134
45	85	38.3	3787	2231	115	1235
50	85	38.3	3787	2231	115	1235
55	114	51.3	5079	2992	154	1657
60	114	51.3	5079	2992	154	1657
65	114	51.3	5079	2992	154	1657
70	114	51.3	5079	2992	154	1657
80	114	51.3	5079	2992	154	1657
100	140	63.0	6238	3674	189	2035
120	140	63.0	6238	3674	189	2035
140	140	63.0	6238	3674	189	2035

Table 2 — 62L Heating Only

Capacity (Tons)	R-454B Refrigerant Charge (mc)		Q _{min} Minimum circulation airflow circulated to the total conditioned space (GG.15DV)		TA min (m ²) Minimum area of the total conditioned space in m ² (GG.17DV)	
	lb	kg	m ³ h	CFM	m ²	ft ²
40	120	54.0	5347	3149	162	1744
45	120	54.0	5347	3149	162	1744
50	120	54.0	5347	3149	162	1744
55	144	64.8	6416	3779	194	2093
60	144	64.8	6416	3779	194	2093
65	144	64.8	6416	3779	194	2093
70	144	64.8	6416	3779	194	2093
80	144	64.8	6416	3779	194	2093
100	169	76.1	7530	4435	228	2456
120	169	76.1	7530	4435	228	2456
140	169	76.1	7530	4435	228	2456

GENERAL

This Installation Instructions literature is for Carrier 62L Series packaged dedicated outdoor air units. 62L units are designed for outdoor installation only, do not install indoors.

PRE-INSTALLATION

Inspection

Upon receipt of shipment, carefully check the shipment against the bill of lading. Make sure all units have been received. Inspect each unit for damage on both the interior and exterior. Ensure the shipping company makes proper notation of any shortages or damage on all copies of the freight bill.

Concealed damage not discovered during unloading must be reported to the shipping company within 5 days of receipt of shipment.

NOTE: It is the responsibility of the purchaser to file all necessary claims with the shipping company.

Unit Storage

Carrier 62X are designed for outdoor installation. However, due to scheduling or building closures, it may need to be stored either on the ground or in its final position. During storage, internal components, whether powered in standby mode or unpowered, may be exposed to conditions unsuitable for subsequent operation. Proper steps must be taken to ensure they remain operational without damage.

Storage Guidelines

DRY LOCATION

Store the equipment in a dry location. Ensure adequate blocking under the base rail to provide proper support. Inadequate support may result in damage when removing screws and opening doors. Ensure the unit is well supported along the entire length of the base rail.

DRAINAGE

Provide proper drainage around the equipment to prevent flooding.

CONDENSATION PREVENTION

Take steps to prevent condensation inside the unit's electrical components and motors. Isolate all side panel service openings, such as conduits, flue, supply air, and return air holes, to minimize the introduction of ambient air until the unit is installed on the curb and prepared for start-up.

PROTECTION

Provide adequate protection from vandalism, mechanical contact, and other potential damages. Condenser fins are particularly vulnerable and can be damaged even by light contact.

Temporary Operation for a Completed Building

Carrier does not recommend operating the supply fan, cooling, dehumidification, or heating systems of this equipment prior to equipment start-up being performed. Operating the equipment prior to start-up can cause damage to the equipment. Damage caused by improper operation is not covered under Carrier's standard or extended warranties.

If temporary operation of equipment is required, Carrier recommends performing a start-up on the equipment system that requires temporary operation, such as heating or cooling. Performing a start-up on the system will help ensure proper operation.

Temporary Operation for an Under-Construction Building

This product is not designed to operate in a construction environment. Extensive equipment damage can be caused by operating this equipment while construction, renovation, or remodeling is occurring in the space or near the equipment. Carrier recommends using equipment designed for specific construction duty or specialized application duty based on the construction or application need.

INSTALLATION

Step 1 — Check Jobsite

Installation, operation and maintenance instructions are provided with each unit. Before unit start-up, read all manuals and become familiar with the unit and its operation. Thoroughly check out the system before operation. Complete the inspections and instructions listed below to prepare a unit for installation. See Tables 4-5 for required clearances and unit example physical data. See the unit submittal for actual unit dimensions.

⚠ WARNING

Electrical shock can cause personal injury and death. Shut off all power to this equipment during installation and service. There may be more than one disconnect switch. Tag all disconnect locations to alert others not to restore power until work is completed.

IMPORTANT: The installation of dedicated outdoor air units and all associated components, parts, and accessories which make up the installation shall be in accordance with the regulations of ALL authorities having jurisdiction and MUST conform to all applicable codes. It is the responsibility of the installing contractor to determine and comply with ALL applicable codes and regulations.

INSTALLATION GUIDELINES (ALL UNITS)

1. Be sure that the location chosen for unit installation provides adequate space for condenser airflow.
2. Verify that the outdoor air intake is away from any from any exhaust or other contaminant sources and is in accordance with local codes.
3. For units with gas heat, ensure proper clearance for flue gas exhaust. Ensure flue gas exhaust is away from the outdoor air intake of other equipment. For proper unit operation, adequate combustion and ventilation air must be provided in accordance with Section 5.3 (Air for Combustion and Ventilation) of the National Fuel Gas Code, ANSI Z223.1 (American National Standards Institute). Verify proper access to make gas pipe connections.
4. For units with a power exhaust, verify that the exhaust outlet is free from obstruction.
5. For units with hot water heat, verify access for hot water pipe routing and valve installation.
6. Verify that the unit is installed with proper access and clearance in accordance with recommended service clearances, which is 48 in. on all sides of the unit. See Fig. 5-6 for typical unit dimensions.
7. Be sure that the unit can be installed with the proper pitch to encourage condensate drainage.
8. Verify the installation location is isolated from sleeping areas, private offices and other acoustically sensitive spaces.
9. For units with horizontal duct connection, provide sufficient space for duct connections and transitions.
10. Provide sufficient access to make power and control wiring connections.
11. Verify the unit power connection and control panel are away from any conductive services in accordance with local code.

Step 2 — Check Unit

Upon receipt of equipment at the jobsite, inspect each unit for damage on both the interior and exterior. Note any damage and contact your local equipment sales office.

INSPECT UNIT

To prepare the unit for installation, complete the procedures listed below:

1. Verify that the correct unit has been received. Check the unit capacity (tonnage), voltage, orientation, and configuration.
2. Compare the electrical data on the unit nameplate with the submittal report to verify the jobsite power feed (voltage, amperage, MCA) and power protection (MOCP).
3. Verify that the unit is the correct model number.
4. Verify all required field installed components, including sensors, control interface, etc. have been received.
5. Check the refrigerant piping connections to make sure they are free from defects, kinks, dents, and leaks.
6. Inspect the blower assembly. Verify that the blower has not come lose during shipping. Verify free blower rotation.

7. For units with energy conservation wheel (ECW), verify the ECW assembly and the drive assembly (belt and motor).
8. Inspect all electrical connections. Be sure connections are clean and tight at the terminals.
9. Verify that the control interface Equipment Touch (standard feature) is installed. Alternate control interfaces may be available. See Controls, Operations and Start-up Manual. Consult Unitary Applications.

Step 3 — Provide Unit Support

ROOF CURB

Assemble or install accessory roof curb in accordance with instructions shipped with this accessory. See submittal drawings for roof curb dimensions. Install insulation, cant strips, roofing, and counter flashing, if required. For vertical supply and return connections, ductwork can be installed to roof curb before unit is set in place. Ductwork must be attached to curb and not to the unit. Curb must be level. This is necessary to permit unit drain to function properly. Unit leveling tolerance is $\pm 1/16$ in. per linear ft in any direction. Refer to Accessory Roof Curb Installation Instructions for additional information as required. When accessory roof curb is used, unit may be installed on class A, B, or C roof covering material. Carrier roof curb accessories are for flat roofs or slab mounting.

IMPORTANT: The gasketing of the unit to the roof curb is critical for a watertight seal. Install gasket with the roof curb. Improperly applied gasket can also result in air leaks and poor unit performance. Do not slide unit to position on roof curb.

Step 4 — Rig and Place Unit

See Tables 4-5 for physical data. See Fig. 4 for illustrations on lifting large units. File any claim with transportation agency.

CAUTION

UNIT DAMAGE HAZARD

Failure to follow this caution may result in equipment damage.

All panels must be in place when rigging. Unit is not designed for handling by fork truck when packaging is removed.

If using top crate as spreader bar, once unit is set, carefully lower wooden crate off building roof top to ground. Ensure that no people or obstructions are below prior to lowering the crate.

Do not drop unit; keep upright. Use wooden top skid or spreader bars over unit to prevent sling or cable damage. Rollers may be used to move unit across a roof. Level by using unit rail as a reference; leveling tolerance is $\pm 1/16$ in. per linear ft in any direction. Refer to the DOAS (Dedicated Outdoor Air System) Builder generated submittal for weights and dimensions of a unit.

LIFTING A PACKAGED DOAS

The unit must be installed in compliance with all applicable codes. The qualified installer or service technician must use best building practices when installing the unit.

MOVING/LIFTING A PACKAGED AIR CONDITIONING UNIT

Preparing to Move/Lift the Unit:

Prior to moving/lifting the unit, the following steps must be performed.

1. Remove all packaging or blockers.
2. Remove all packages that were shipped inside the unit.
3. Inspect the unit to:
 - a. Verify that there is no damage as a result of shipping.

- b. Ensure that it is appropriately rated for the utilities available at the installation site.
- c. Verify that the lifting lugs are intact, undamaged and secured to the packaged air conditioning unit.
- d. Ensure factory-installed hardware is torqued as specified.

4. Prepare the installation location to be ready to accept the unit (i.e. roof curb is correct size).

5. Verify that the moving/lifting equipment can handle the unit's weight. Verify that forklift forks extend through the unit frame and that crane has required reach.

Moving the Unit with a Forklift

On smaller A, B, and some C cabinet units, forklift pockets are provided for lifting and moving. The following must be considered before using this option.

- Forklift must be rated for the weight of the unit.
- Forklift must have forks long enough to go through both side pockets and not rest on the underside basepans of the unit.
- Care must be taken to not jar the unit, bounce, or drop the unit during move.

****WARNING****

CRUSH HAZARD

Use proper lifting equipment and practices. Failure to follow these instructions can result in death, injury, or property damage.

Lifting the Unit with Crane

Lift the unit into place installing appropriate hardware (supplied by others) into all four lifting lugs holes on small units, and up to 8 on larger cabinets. Use spreader bars to ensure that the lifting cables clear the sides of the unit. See Figures 3 - 5. Test lift to 12" [30.5 cm] to check stability of rigging before completing the lift. Use caution as the load may be unbalanced. The unit must be kept level during the lift to prevent tipping, twisting or falling. If lifted improperly, product damage may occur.

POSITIONING

Maintain clearance around and above unit to provide minimum distance from combustible materials, proper airflow, and service access.

Do not install unit in an indoor location. Do not locate air inlets near exhaust vents or other sources of contaminated air. For proper unit operation, adequate combustion and ventilation air must be provided in accordance with Section 5.3 (Air for Combustion and Ventilation) of the National Fuel Gas Code, ANSI Z223.1 (American National Standards Institute).

Although unit is weatherproof, guard against water from higher level runoff and overhangs. Select a location where external water drainage cannot collect around the unit. Where snowfall is anticipated, mount the unit so all intakes and discharges are above the maximum snow depth for the area.

Unit shall not be installed with inlet opening facing into the prevailing wind direction in order to help prevent the possibility of moisture entrainment.

For gas heat units, locate mechanical draft system flue assembly at least 4 ft from any opening through which combustion products could enter the building, and at least 4 ft from any adjacent building (or per local codes). When the unit is located adjacent to public walkways, flue assembly must be at least 7 ft above grade. Locate unit at least 10 ft away from adjacent units.

Clearances

The clearances below are the required distances that the unit must be away from objects and other units to allow service access and proper operation of the unit. For unit dimensions, refer to Fig. 5-6.

Service Clearances

The minimum recommended service clearance is 48 in. on all sides of unit with access doors.

Ventilation Clearances

In order to ensure proper operation of an air source unit, a 24 in. clearance for ventilation must be maintained on the sides. In addition, specific ventilation situational clearance guidelines are listed below:

- Do not locate the unit under an overhang or near a wall or other equipment that fosters short circuiting hot air to the condenser coil intakes.
- Do not locate unit within 10 ft, or directly downwind, from exhaust fans or flues.
- Do not locate adjacent unit condenser sections closer than 6 ft to one another to reduce the possibility of condenser air circulation. Follow the minimum required clearances listed above or in Fig. 2 and Table 3, whichever is greater.

Required Clearances

Clearances are the required distances that the unit must be away from objects and other units to allow service access and proper operation of the unit.

Table 3 — Required Clearances^a

CABINET	A (in.)	B (in.)	C (in.)	D (in.)
E	104	48	56	60

NOTE(S):

- a. Minimum clearance required for the side removal of energy recovery wheels and/or DX coils.

ROOF MOUNT

Check building codes for weight distribution requirements. Unit operating weight is shown in the DOAS Builder generated submittal. When installing the equipment on top of a building, the following should be considered. Structural members supporting the unit must be sufficiently strong for the weight of the unit and mounting rails. Transmission of sound into the building is sometimes a problem when the structure is not strong enough.

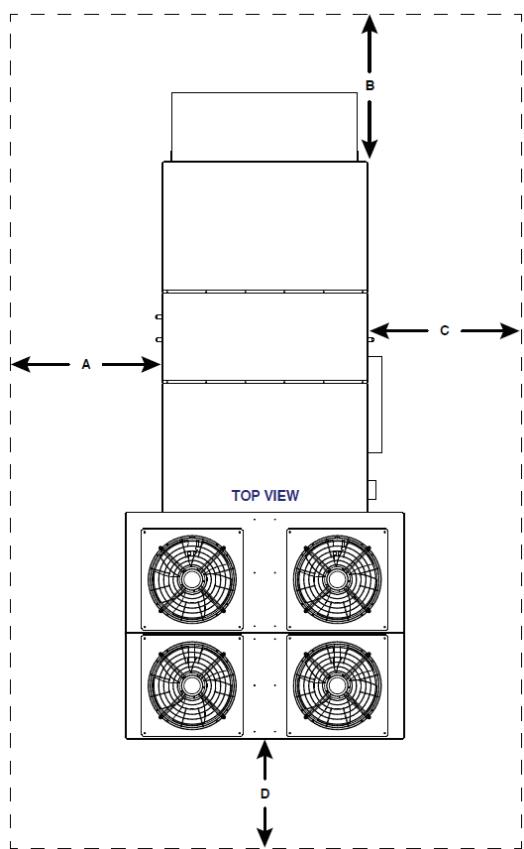


Fig. 2 — Required Clearances

SLAB MOUNT

When installed at ground level, the unit should be mounted on a level concrete slab which should extend at least 2 in. beyond the unit on all sides. The top of the slab should be 2 in. above the ground level. The depth of the slab below the ground level and its structural design is governed by the type of soil and climatic conditions. The slab must not be in contact with any part of the building wall or foundation. The space between the slab and building wall prevents the possibility of transmitting vibration to the building. The dimensions of the slab or roof mount should be checked and verified before the equipment arrives. Consider the condensate water trap height when mounting the unit on a slab. The unit is typically mounted on a curb with ductwork and utility connections usually going through the curb. It may also be pad-mounted. (Contact factory for specific instructions if unit is to be mounted in a different way [ie. on mounting stand].)

INSTALLATION ONTO CURB

Correct placement of the unit onto the curb is important to operating performance. Refer to product submittal drawings to assure proper duct opening alignment. For locations with seismic or wind load requirements, field engineered and provided curb attachment clips must be provided. The standard Carrier curb is not wind or seismic rated.

The unit is typically mounted on a curb with ductwork and utility connections usually going through the curb. It may also be pad-mounted. (Contact factory for specific instructions if unit is to be mounted in a different way [ie. on mounting stand].)

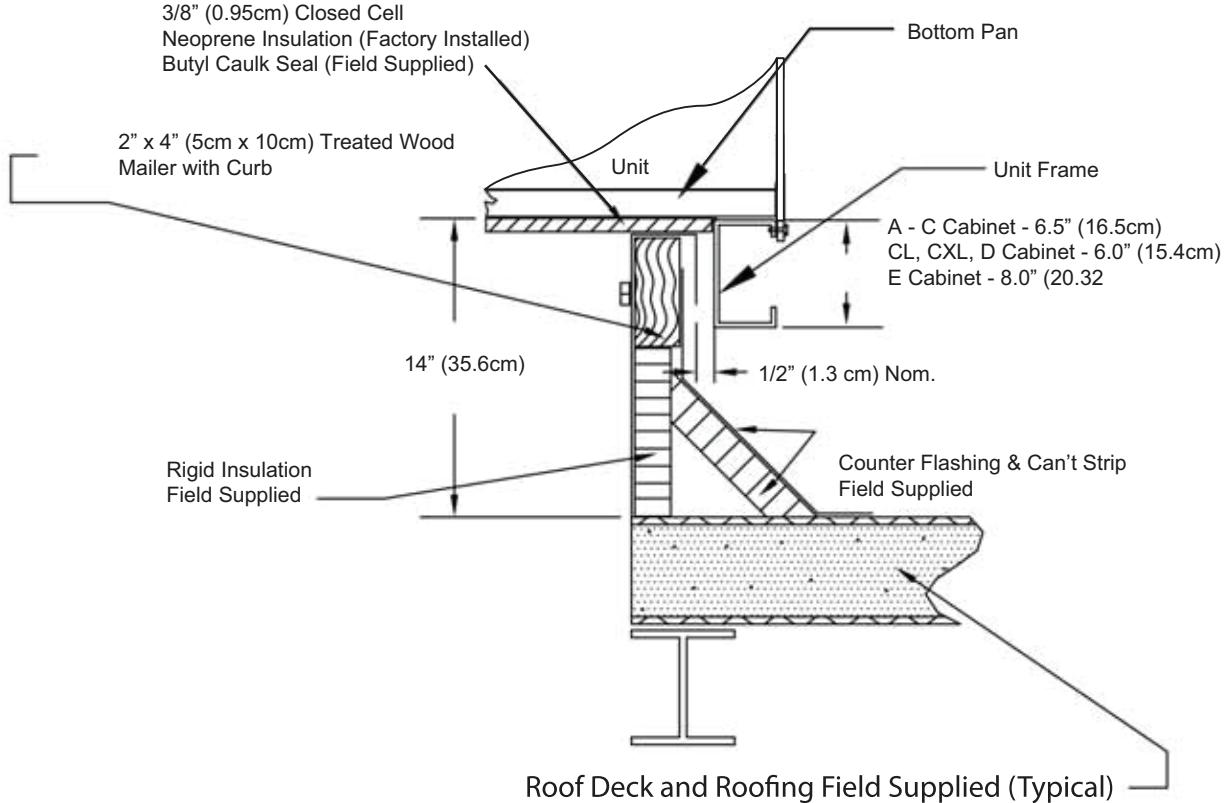


Fig. 3 — Roof Curb Installation

NOTE: Refer to unit certified drawing for details on the actual cross section shape of the base rail, the above drawing is showing a reference only of the base rail. The actual shape of the base rail may defer from the above shown.

⚠ CAUTION

Do not slide unit into position when it is sitting on the curb. Curb gasketing material may be damaged and leaks may result.

NOTE: For weight references, consult the DOAS Builder program submittal.

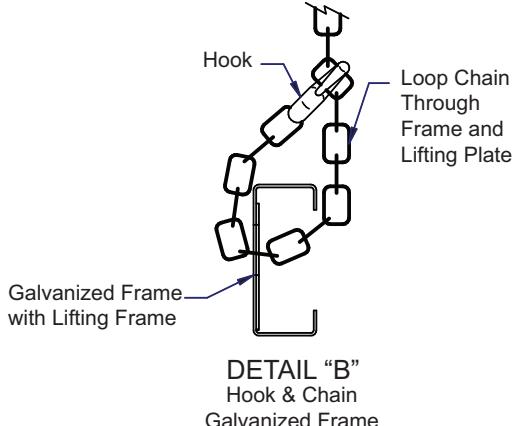
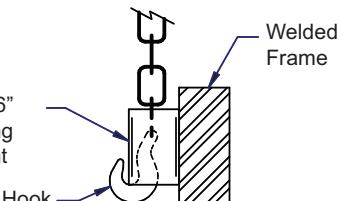
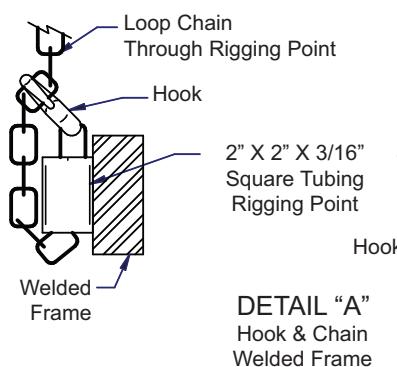
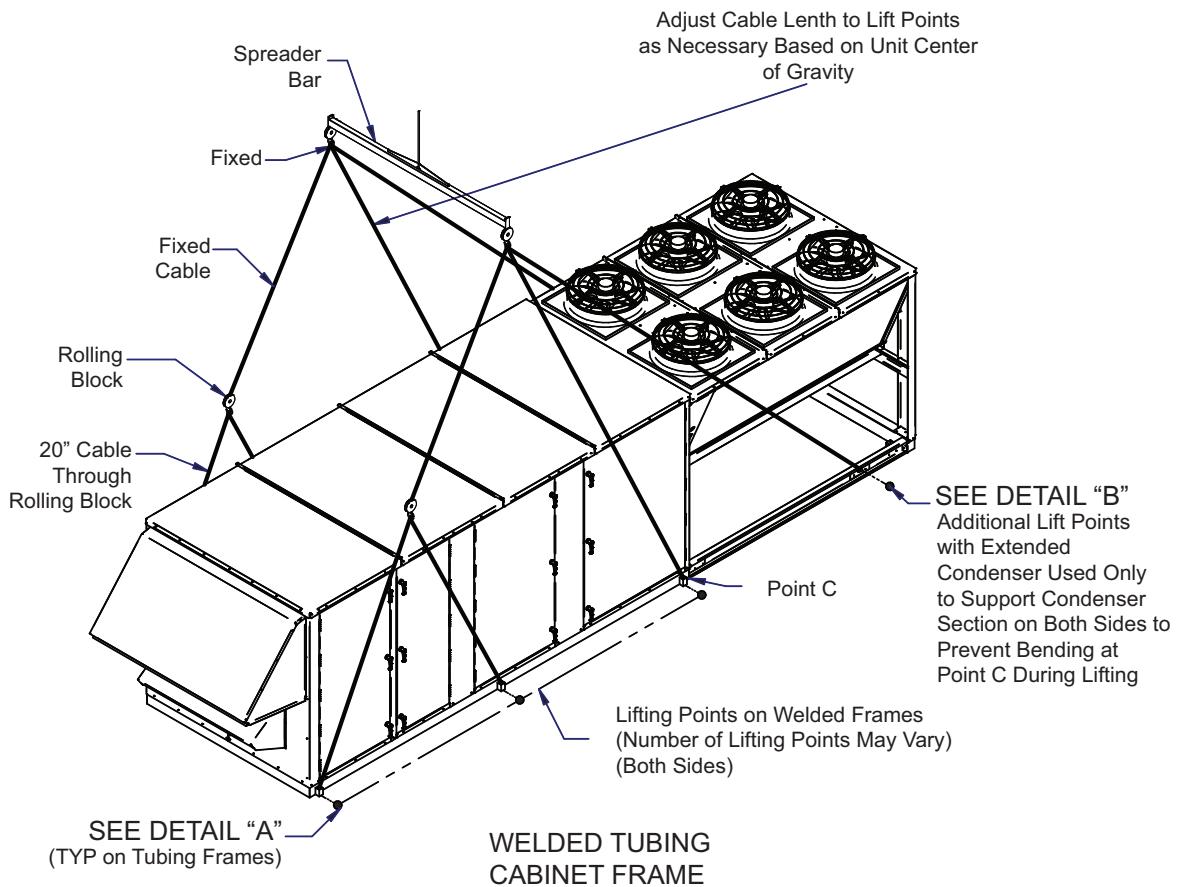


Fig. 4 — Lifting a Large Unit (E Cabinets¹)

1. NOTE: WSHP Units do not have the extended condenser assembly. Refer to the "SEE DETAIL B" note above. Use the provided lifting points.

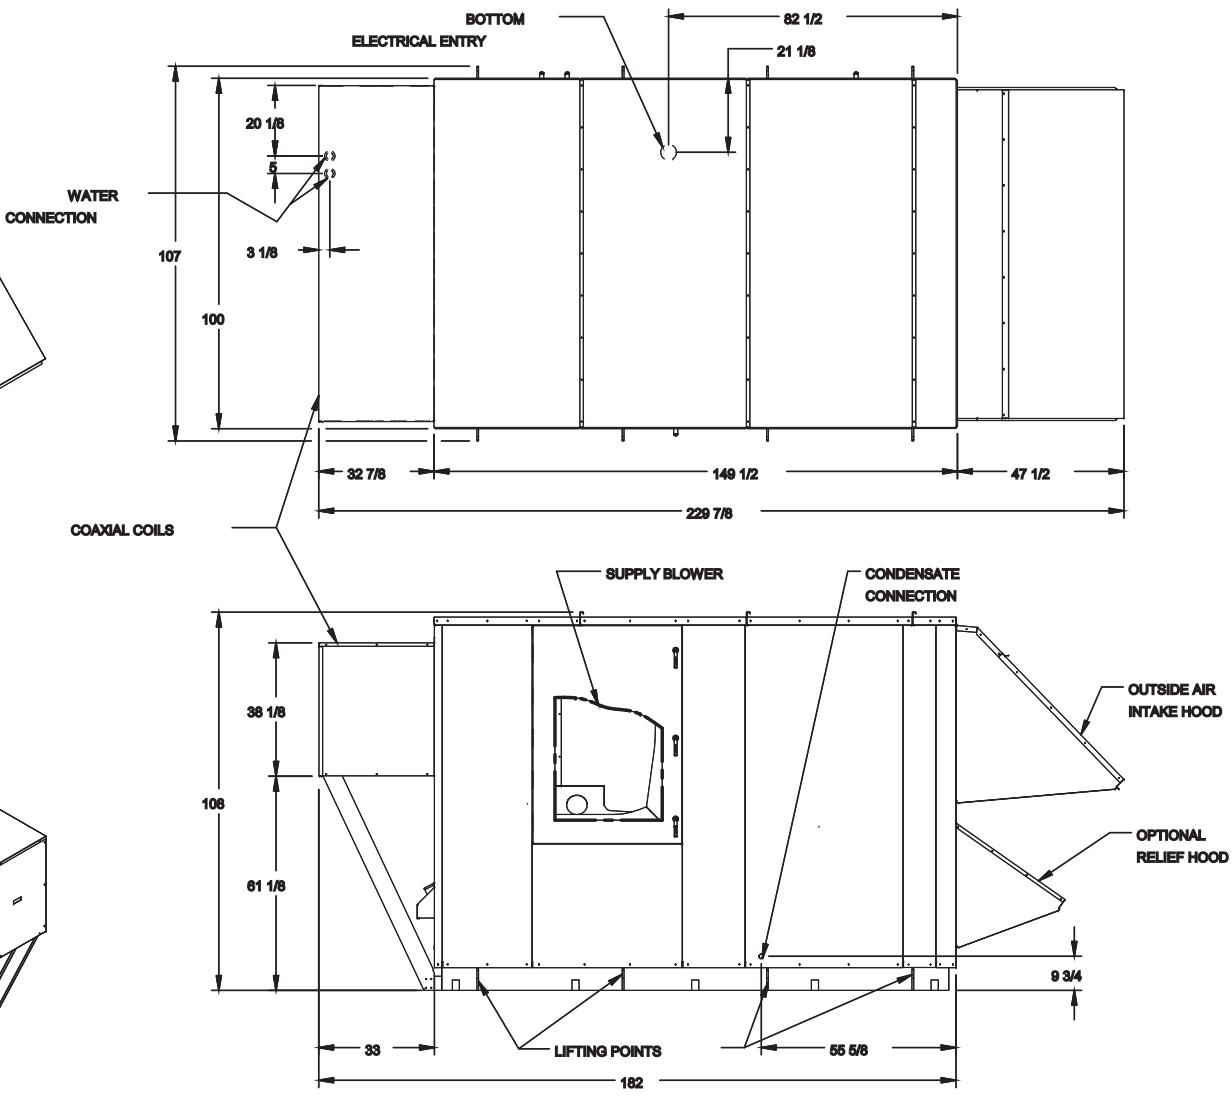
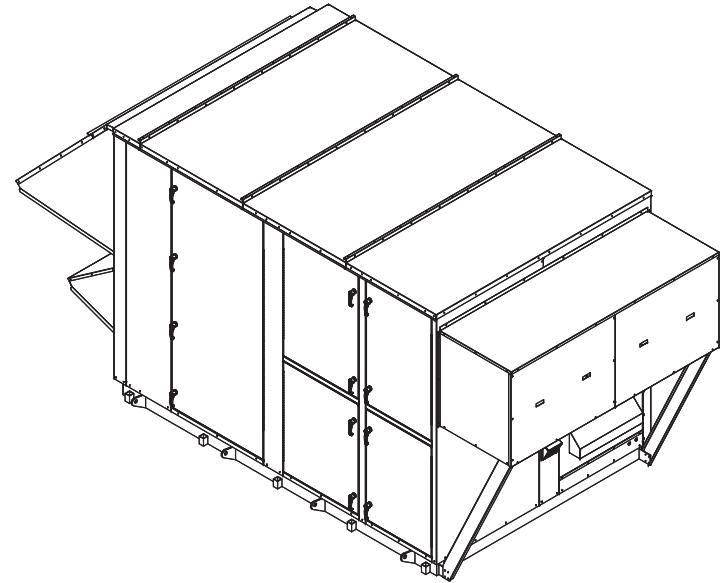
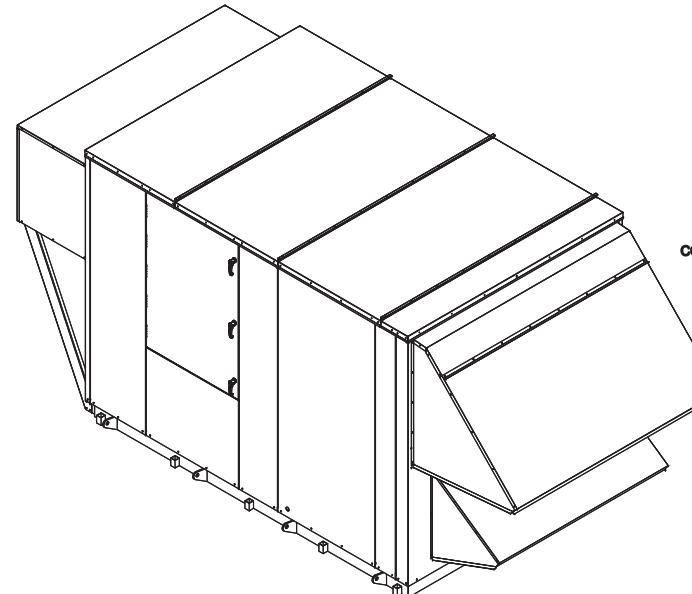


Fig. 5 – 62L E0 Cabinet 60-80 T Vertical Supply No Return Without Exhaust Fan or ERV

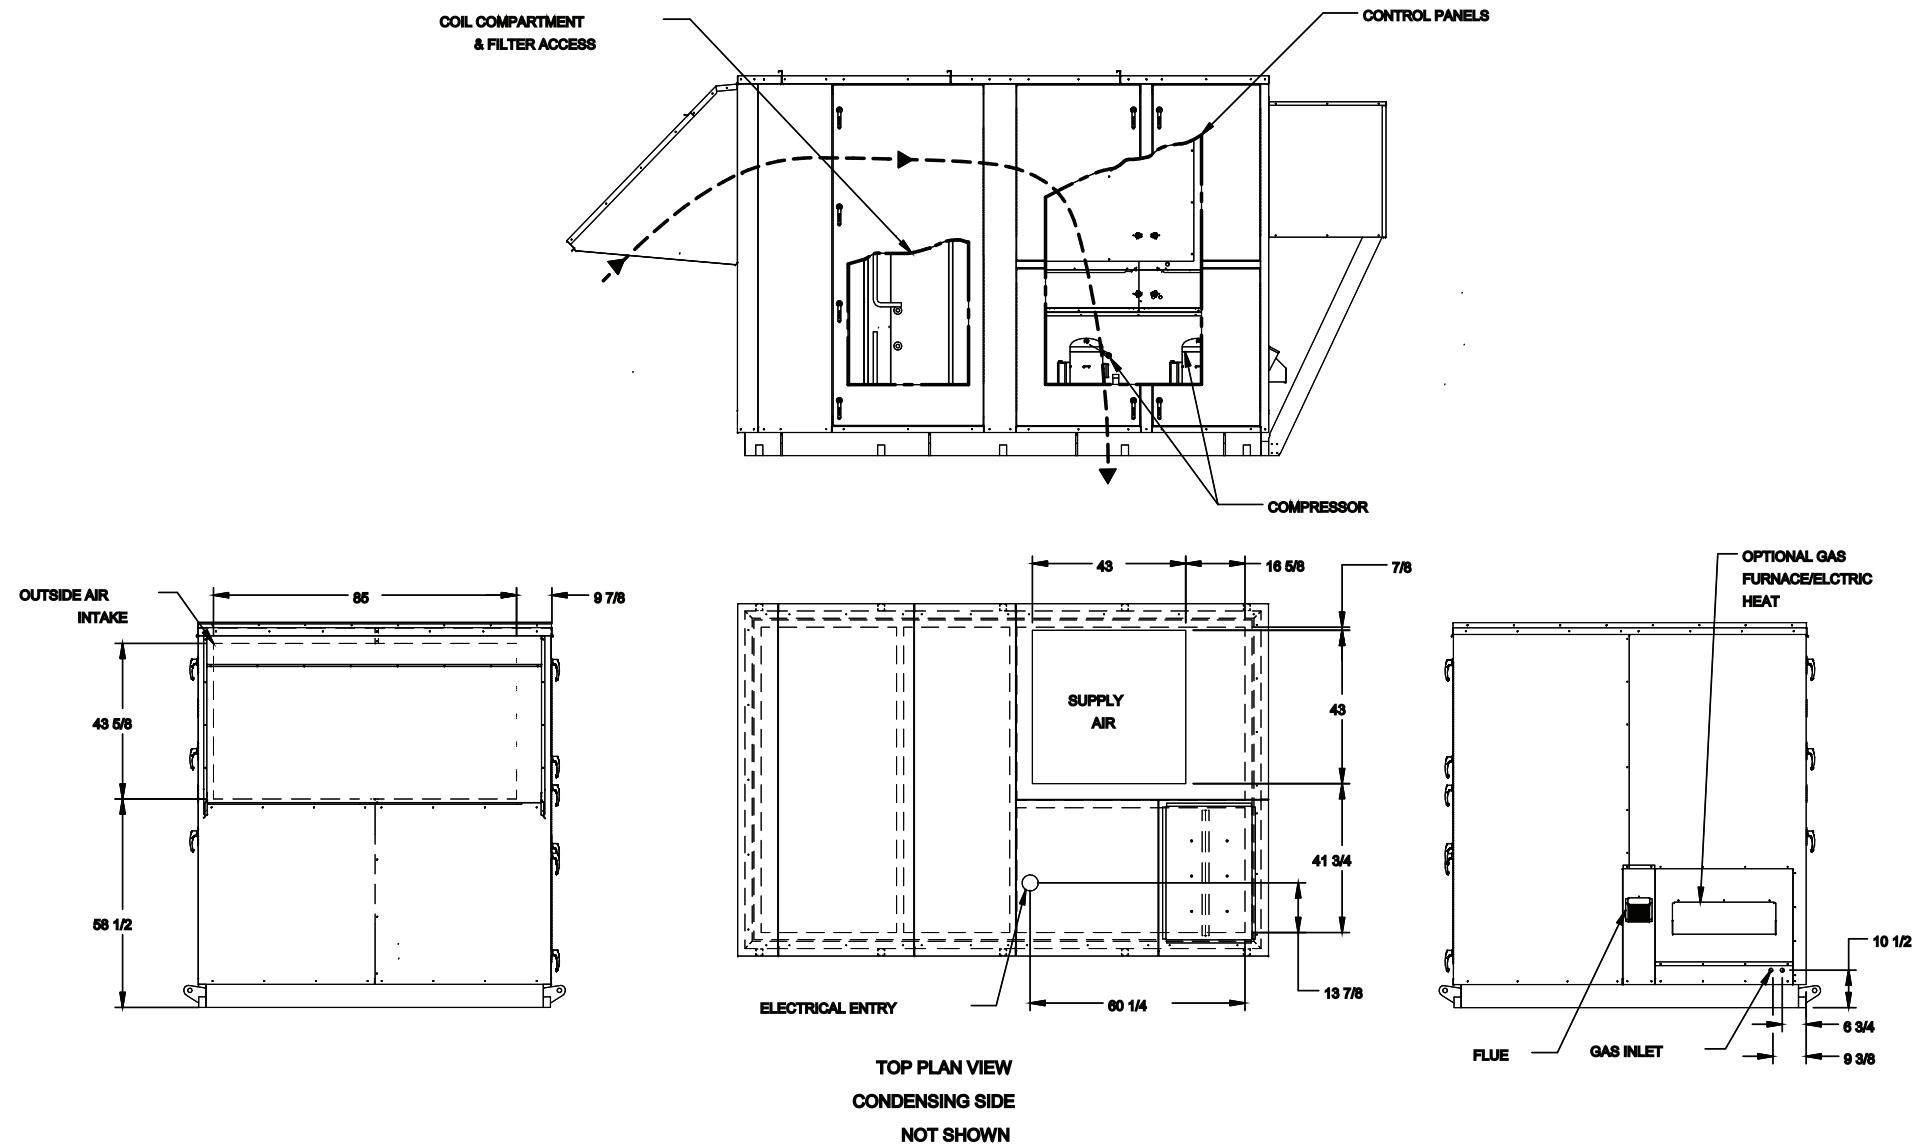


Fig. 5 – 62L E0 Cabinet 60-80 T Vertical Supply No Return Without Exhaust Fan (cont)



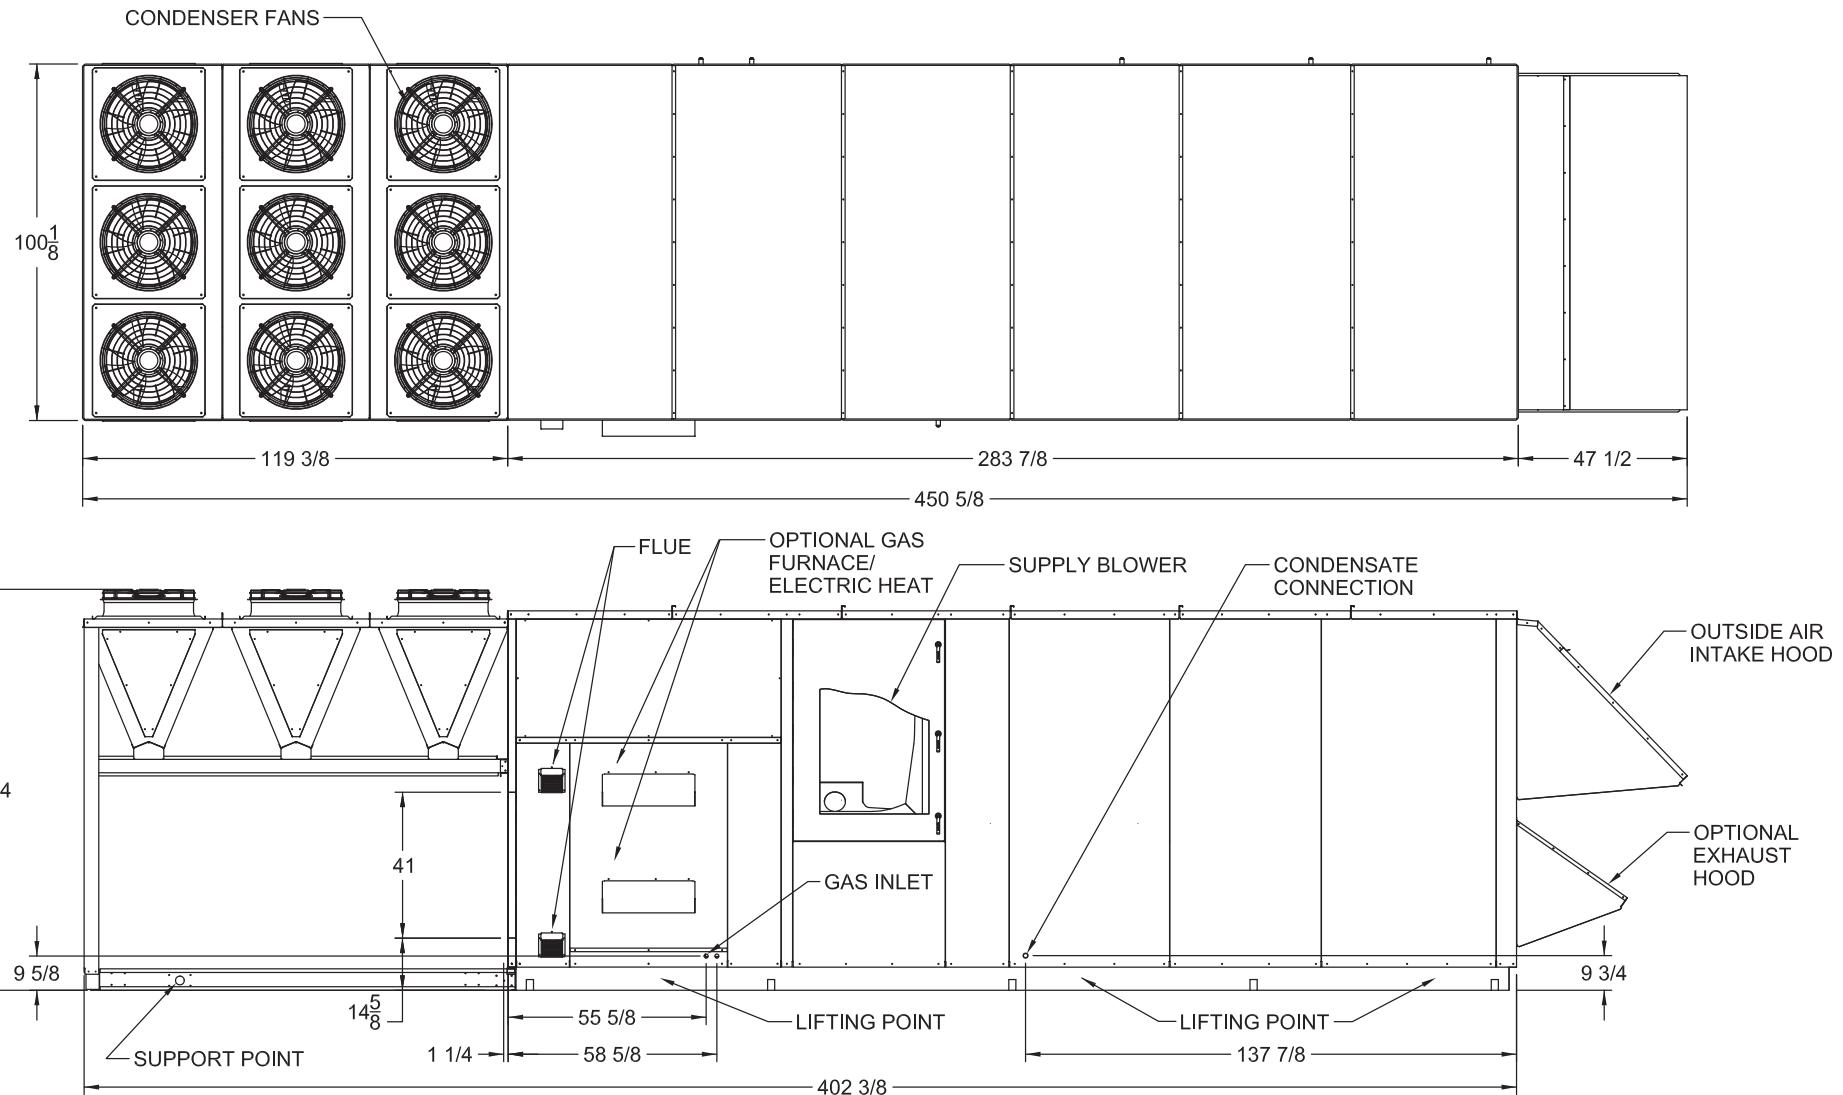


Fig. 6 – 62L E9XL Cabinet High Efficiency 100-140 T Horizontal Supply Vertical Return with Exhaust Fan

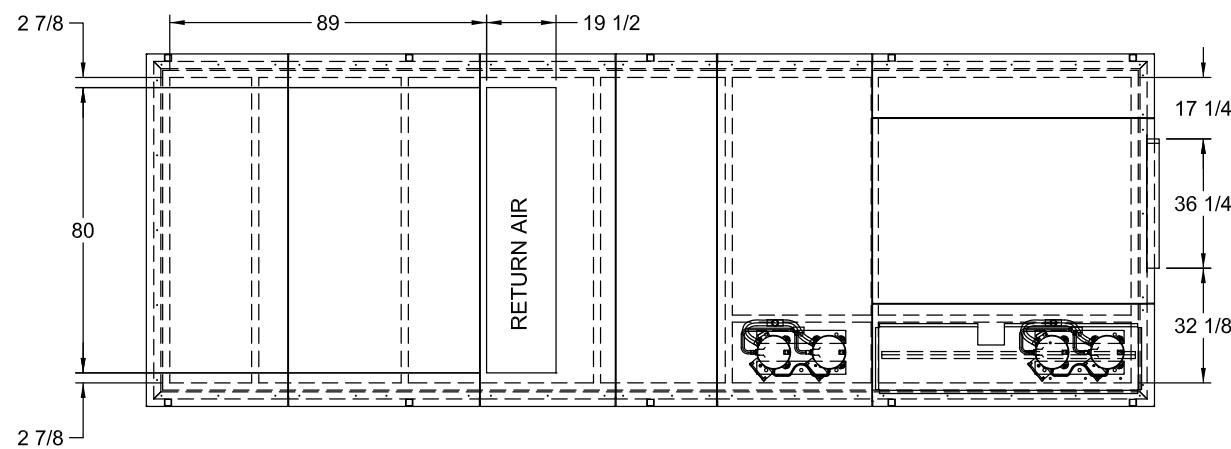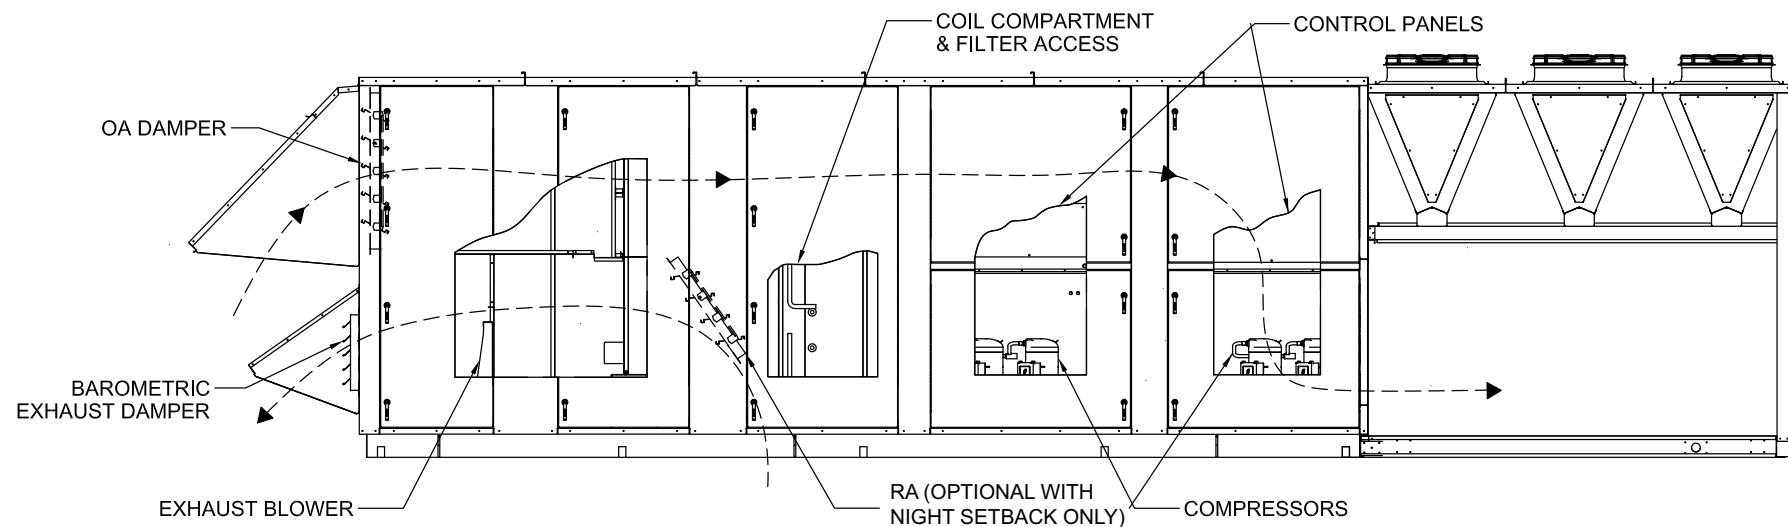

TOP PLAN VIEW
CONDENSING SIDE
NOT SHOWN

Fig. 6 — 62L E9XL Cabinet High Efficiency 100-140 T Horizontal Supply Vertical Return with Exhaust Fan (cont)

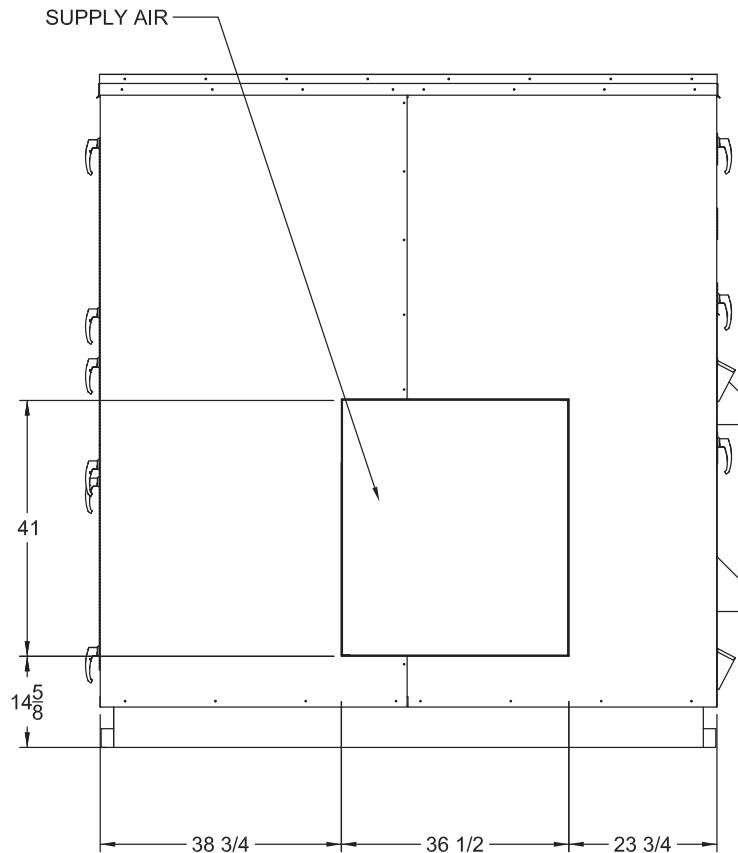
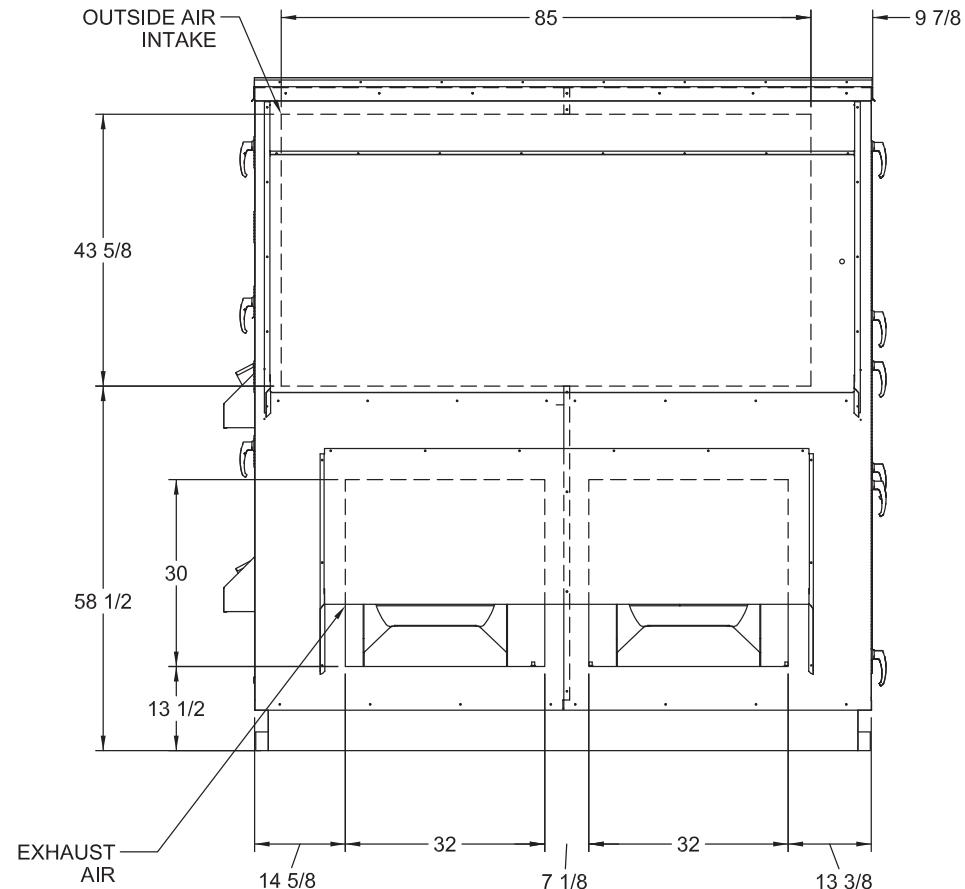


Fig. 6 — 62L E9XL Cabinet High Efficiency 100-140 T Horizontal Supply Vertical Return with Exhaust Fan (cont)

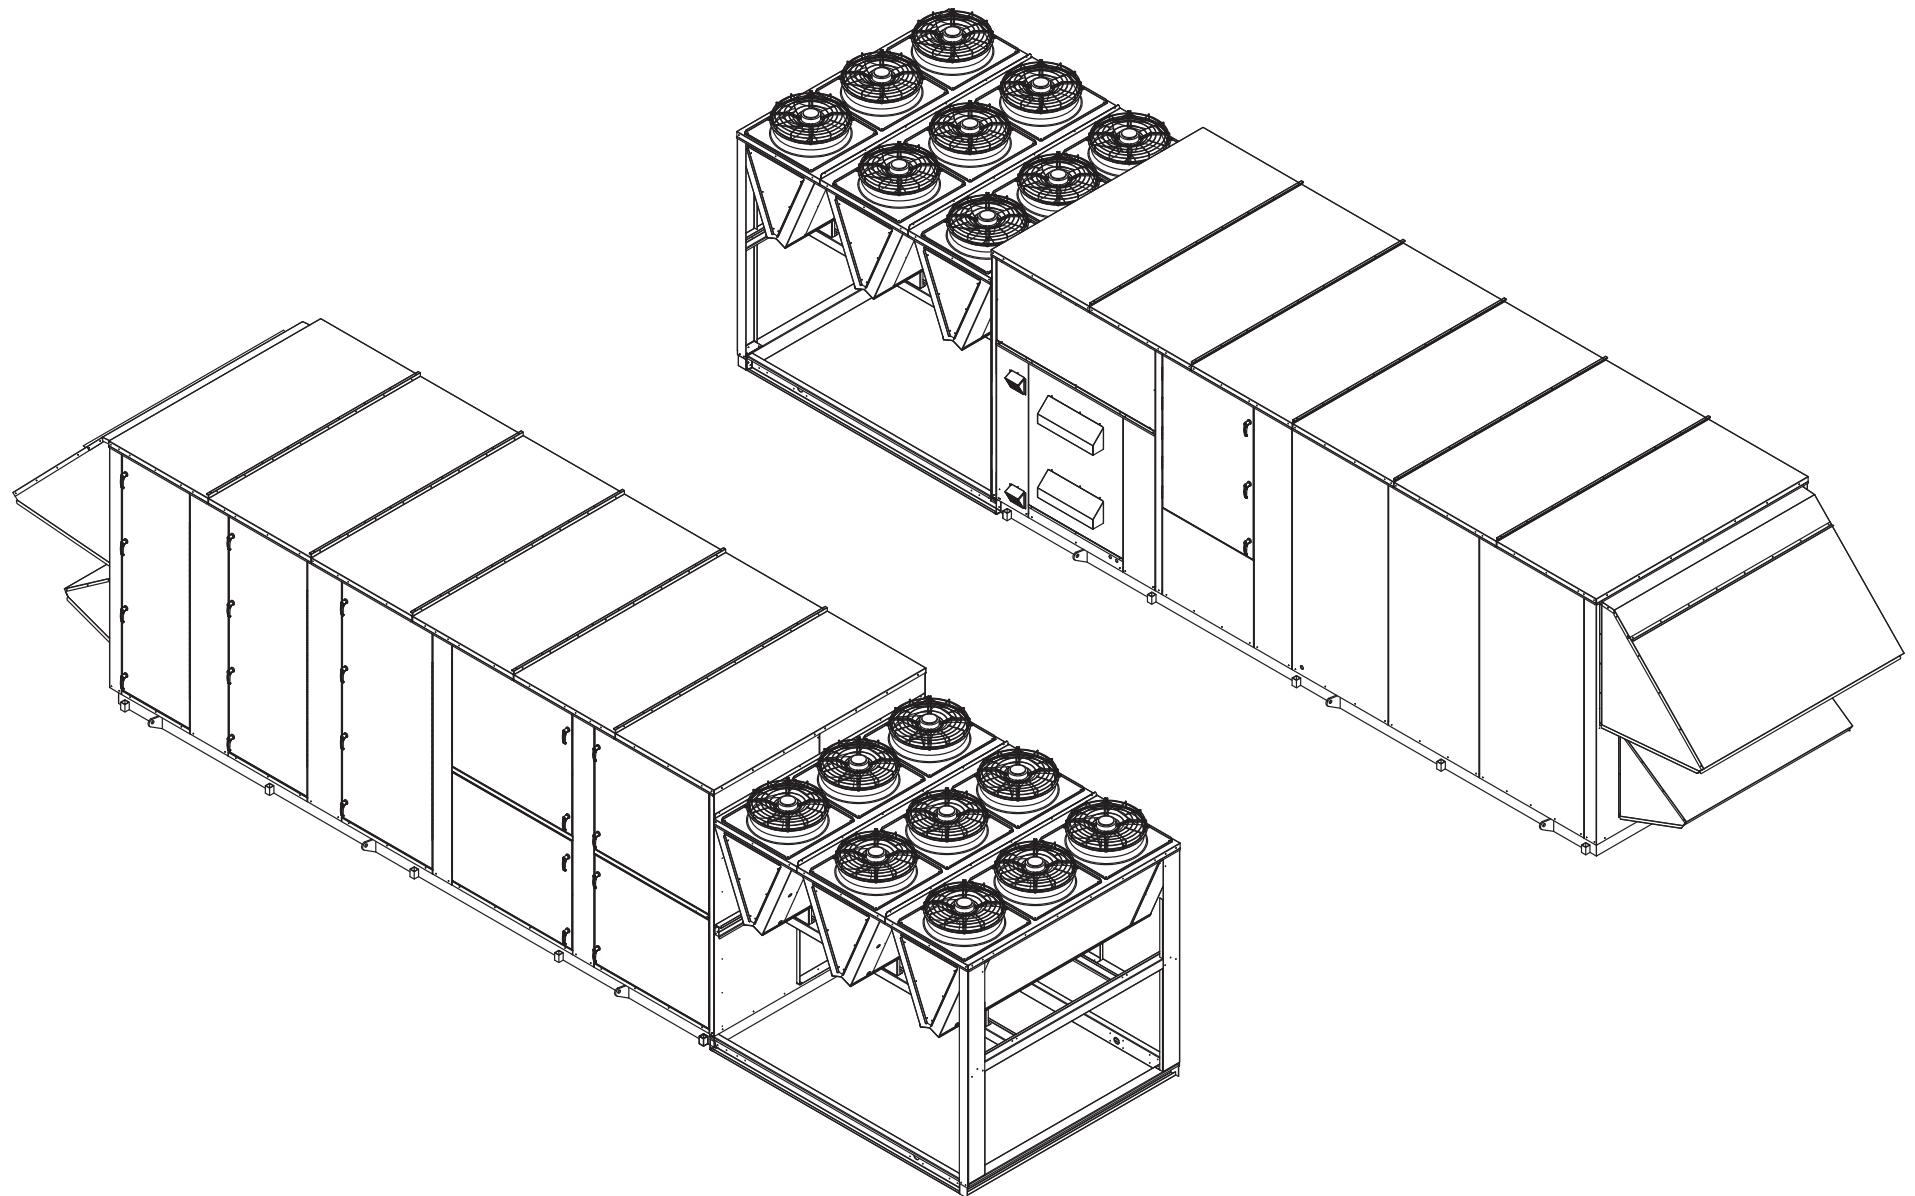


Fig. 6 — 62L E9XL Cabinet High Efficiency 100-140 T Horizontal Supply Vertical Return with Exhaust Fan (cont)

Table 4 — Physical Data — 62L E Cabinet (40 to 65 Ton)^{a,b,c,d,e}

UNIT 62L E, EXL CABINET	40	45	50	55	60	65
NOMINAL CAPACITY (TONS) ^{d,e}	40	45	50	55	60	65
No. of Refrigerant Circuits			2			
Oil			Pre-Charged			
REFRIGERANT TYPE			R-454B			
OUTDOOR COIL (Air Source)						
Air Source Standard Efficiency Condenser (sq ft)			119.2			
Air Source High-Efficiency Condenser (sq ft)			119.2			
OUTDOOR FAN (Air Source)						
Standard Efficiency Condenser without ERV						
Quantity...Diameter (mm)			Use D Cabinet		6...710	
Motor Hp					1.7	
High Efficiency Condenser without ERV						
Quantity...Diameter (mm)			Use D Cabinet		—	
Motor Hp					—	
Standard Efficiency Condenser with ERV						
Quantity...Diameter (mm)			6...630		6...710	
Motor Hp			1.48		1.7	
High Efficiency Condenser with ERV						
Quantity...Diameter (mm)	—		6...710		—	
Motor Hp	—		1.7		—	
OUTDOOR COIL (Water Source)						
Type			Coaxial (tube in tube) heat exchanger. Copper or Cupronickel inner tube and steel outer tube.			
Nominal GPM	120	136	150	164	180	196
COAX HX WPD (ft H ₂ O)	12.5	16.8	23.2	21.7	19.5	22.8
OUTDOOR COIL WATER CONNECTION SIZE FPT (in.)		2			2.5	
INDOOR COIL						
Face Area without ERV (sq ft)			Use D Cabinet		41.7	
Face Area with ERV (sq ft)		41.7		47.2		41.7
SUPPLY FAN						
Backward Curved ECM (mm)			Dual 450 (High), Dual 500 (Low), Dual 500 (High) 460V Only, Dual 560 208,230V Only			
Airfoil (in.)			22, 25, Dual 14, Dual 16, Dual 18, Dual 20			
Backward Inclined (in.)			22, 25, Dual 14, Dual 16, Dual 18, Dual 20			
Nominal cfm 100% OA	6000	6750	7500	8250	9000	9750
Motor Hp Range			Dual ECM, 3, 5, 7.5, 10, 15, Dual 1, Dual 1.5, Dual 2, Dual 3, Dual 5, Dual 7.5, Dual 10, Dual 15, Dual 20 (AF Only)			
OPTIONAL HOT GAS REHEAT AND LIQUID SUBCOOLING COIL						
Face Area without ERV (sq ft)			Use D Cabinet		41.7	
Face Area with ERV (sq ft)		41.7		47.2		41.7
CONDENSATE DRAIN CONNECTION (NPT) (in.)			1			
OPTIONAL GAS HEAT SECTION						
Gas Input Sizes (Btuh x 1000)			300, 350, 400, 500, 600			
Gas Input Sizes (Btuh x 1000) XL Cabinet			600, 800, 1000, 1200, 1400, 1600			
Control Type						
Stages (no. of stages)			2			
Stages XL Cabinet (no. of stages)			2, 4, 8			
Modulating (% range) ^b			10:1, 20:1 ^b			
Efficiency (Steady State) (%)			81			
Supply Line Pressure Range (in. wg)			5.0 min. - 13.5 max.			
Rollout Switch Cutout Temp (°F)			350			
Gas Valve Quantity			1 Std - 2 with modulating option			
Manifold Pressure (in. wg)						
Natural Gas Std			3.5			
LP Gas Special Order			10			
OPTIONAL ELECTRIC HEAT						
Size Range (kW)			20, 25, 30, 35, 40, 50, 60, 70, 80, 100, 110, 120, 130, 140, 150			
Control Type						
Stages (no. of stages)			2, 4			
SCR (% range) ^b			0 - 100			
OPTIONAL HOT WATER HEAT COIL WITH ERV			47.5 x 47.0, 4 row, 8 FPI (See Hot Water Coil Drawings)			
OPTIONAL HOT WATER HEAT COIL WITHOUT ERV			47.5 x 47.0, 4 row, 8 FPI (See Hot Water Coil Drawings)			

Table 4 — Physical Data — 62L E Cabinet (40 to 65 Ton)^{a,b,c,d,e}(cont)

UNIT 62L E, EXL CABINET	40	45	50	55	60	65
NOMINAL CAPACITY (TONS) ^{de}	40	45	50	55	60	65
OUTDOOR AIR FILTERS						
Quantity...Size (in.) with ERV						
Standard 2 in. MERV 8		9...20x25, 3...25x25		6...20x25, 9...20x20, 1...25x25		9...20x25, 3...25x25
Optional 4 in.						
MERV 8				6...20x25,		
MERV 11				9...20x20,		
MERV 13				1...25x25		
9...20x25, 3...25x25						
Quantity...Size (in.) without ERV						
Standard 2 in. MERV 8			Use D Cabinet		9...20x25, 3...25x25	
Optional 4 in.						
MERV 8					9...20x25, 3...25x25	
MERV 11						
MERV 13						
Use D Cabinet						
OPTIONAL ERV						
Type				Molecular Sieve		
Diameter...depth (in.)		60...4, 60...6, 66...4, 66...6, 72...4, 72...6, 78...4, 78...6, 78...12, 84...4, 84...6, 84...12				
OPTIONAL ERV FILTERS						
Quantity...Size (in.) Standard 2 in. MERV 8						
with 60 in. ECW				8...15x20, 8...18X20		
with 66 in. ERV				4...18x25, 12...18X20		
with 72 in. ERV				2...14x20, 6...25x25, 6...14x25, 2...20x25		
with 78 in. ERV				6...18x25, 6...25x24, 2...18x20, 2...20x24		
with 84 in. ERV				8...20x25, 8...20x20, 2...25x16, 2...16x20		
OPTIONAL EXHAUST FAN						
Backward Curved ECM (mm)			Dual 450 (High), Dual 500 (Low), Dual 500 (High) 460V Only, Dual 560 208,230V Only			
Airfoil (in.)			22, 25, Dual 14, Dual 16, Dual 18, Dual 20			
Backward Inclined (in.)			22, 25, Dual 14, Dual 16, Dual 18, Dual 20			
Nominal cfm	6000	6750	7500	8250	9000	9750
Motor Hp Range	Dual ECM, 3, 5, 7.5, 10, 15, Dual 1, Dual 1.5, Dual 2, Dual 3, Dual 5, Dual 7.5, Dual 10, Dual 15, Dual 20 (AF Only)					

NOTE(S):

- a. For unit and component weights, refer to the latest edition of Carrier's Dedicated Outdoor Air Systems Builder.
- b. 20:1 modulating control available on EXL Cabinet (800-1600 MBtuh only).
- c. Refer to the DOAS NG builder for the latest product data within the equipment submittal report. The above is to be used as reference only.
- d. Air Source Heat Pumps are available up from 60 to 70 Tons without ERV and from 40 to 70 tons with ERV.
- e. Water Source Heat Pumps are available up from 60 to 140 Tons without ERV and from 40 to 55 tons with ERV.

LEGEND

ECM	— Electronically Commutated Motor
ERV	— Energy Recovery Ventilator
FPI	— Fins per Inch
LP	— Liquid Propane
OA	— Outdoor Air
SCR	— Silicon-Controlled Rectifier

Table 5 — Physical Data — 62L E Cabinet (70 to 140 Tons) ^{a,b,c,d,e}

UNIT 62L E, EXL CABINET	70	80	100	120	140
NOMINAL CAPACITY (TONS) ^{de}	70	80	100	120	140
No. of Refrigerant Circuits			2		
Oil			Pre-Charged		
REFRIGERANT TYPE			R-454B		
OUTDOOR COIL (Air Source)					
Air Source Standard Efficiency Condenser (sq ft)		119.2		—	
Air Source High-Efficiency Condenser (sq ft)		119.2		118.8	
OUTDOOR FAN (Air Source)					
Standard Efficiency Condenser without ERV					
Quantity...Diameter (mm)		6...710		—	
Motor Hp		1.7		—	
High Efficiency Condenser without ERV					
Quantity...Diameter (mm)		—		9...710	
Motor Hp		—		1.7	
Standard Efficiency Condenser with ERV					
Quantity...Diameter (mm)		6...710		—	
Motor Hp		1.7		—	
High Efficiency Condenser with ERV					
Quantity...Diameter (mm)			—		
Motor Hp			—		
OUTDOOR COIL (Water Source)					
Type	Coaxial (tube in tube) heat exchanger. Copper or Cupronickel inner tube and steel outer tube.				Stainless Steel Brazed-Plate Heat Exchanger
Nominal GPM	210	270	338	380	416
COAX HX WPD (ft H ₂ O)	15.8	16.2	17.7	18.1	18.5
OUTDOOR COIL WATER CONNECTION SIZE FPT (in.)	2.5			3	
INDOOR COIL					
Face Area without ERV (sq ft)			47.2		
Face Area with ERV (sq ft)		47.2		—	
SUPPLY FAN					
Backward Curved ECM (mm)			Dual 450 (High), Dual 500 (Low), Dual 500 (High) 460V Only, Dual 560 208,230V Only		
Airfoil (in.)			22, 25, Dual 14, Dual 16, Dual 18, Dual 20		
Backward Inclined (in.)			22, 25, Dual 14, Dual 16, Dual 18, Dual 20		
Nominal cfm 100% OA	10500	12000	15000	18000	21000
Motor Hp Range			Dual ECM, 3, 5, 7.5, 10, 15, Dual 1, Dual 1.5, Dual 2, Dual 3, Dual 5, Dual 7.5, Dual 10, Dual 15, Dual 20 (AF Only)		
OPTIONAL HOT GAS REHEAT AND LIQUID SUBCOOLING COIL					
Face Area without ERV (sq ft)			47.2		
Face Area with ERV (sq ft)		47.2		—	
CONDENSATE DRAIN CONNECTION (NPT) (in.)				1	
OPTIONAL GAS HEAT SECTION					
Gas Input Sizes (Btuh x 1000)			300, 350, 400, 500, 600		
Gas Input Sizes (Btuh x 1000) XL Cabinet			600, 800, 1000, 1200, 1400, 1600		
Control Type					
Stages (no. of stages)			2		
Stages XL Cabinet (no. of stages)			2, 4, 8		
Modulating (% range) ^b			10:1, 20:1b		
Efficiency (Steady State) (%)			81		
Supply Line Pressure Range (in. wg)			5.0 min. - 13.5 max.		
Rollout Switch Cutout Temp (°F)			350		
Gas Valve Quantity			1 Std - 2 with modulating option		
Manifold Pressure (in. wg)					
Natural Gas Std			3.5		
LP Gas Special Order			10		
OPTIONAL ELECTRIC HEAT					
Size Range (kW)			20, 25, 30, 35, 40, 50, 60, 70, 80, 100, 110, 120, 130, 140, 150		
Control Type					
Stages (no. of stages)			2, 4		
SCR (% range) ^b			0 - 100		
OPTIONAL HOT WATER HEAT COIL WITH ERV			47.5 x 47.0, 4 row, 8 FPI (See Hot Water Coil Drawings)		
OPTIONAL HOT WATER HEAT COIL WITHOUT ERV			47.5 x 47.0, 4 row, 8 FPI (See Hot Water Coil Drawings)		

Table 5 — Physical Data — 62L E Cabinet (70 to 140 Tons) ^{a,b,c,d,e}(cont)

UNIT 62L E, EXL CABINET	70	80	100	120	140					
NOMINAL CAPACITY (TONS) ^{de}	70	80	100	120	140					
OUTDOOR AIR FILTERS										
Quantity...Size (in.) with ERV										
Standard 2 in. MERV 8	6...20x25, 9...20x20, 1...25x25									
Optional 4 in.										
MERV 8	6...20x25, 9...20x20, 1...25x25									
MERV 11										
MERV 13										
Quantity...Size (in.) without ERV										
Standard 2 in. MERV 8	6...20x25, 9...20x20, 1...25x25									
Optional 4 in.										
MERV 8	6...20x25, 9...20x20, 1...25x25									
MERV 11										
MERV 13										
OPTIONAL ERV										
Type	Molecular Sieve									
Diameter...depth (in.)	60...4, 60...6, 66...4, 66...6, 72...4, 72...6, 78...4, 78...6, 78...12, 84...4, 84...6, 84...12									
OPTIONAL ERV FILTERS										
Quantity...Size (in.) Standard 2 in. MERV8										
with 60 in. ECW	8...15x20, 8...18X20									
with 66 in. ERV	4...18x25, 12...18X20									
with 72 in. ERV	2...14x20, 6...25x25, 6...14x25, 2...20x25									
with 78 in. ERV	6...18x25, 6...25x24, 2...18x20, 2...20x24									
with 84 in. ERV	8...20x25, 8...20x20, 2...25x16, 2...16x20									
OPTIONAL EXHAUST FAN										
Backward Curved ECM (mm)	Dual 450 (High), Dual 500 (Low), Dual 500 (High) 460V Only, Dual 560 208,230V Only									
Airfoil (in.)	22, 25, Dual 14, Dual 16, Dual 18, Dual 20									
Backward Inclined (in.)	22, 25, Dual 14, Dual 16, Dual 18, Dual 20									
Nominal cfm	10500	12000	15000	18000	21000					
Motor Hp Range	Dual ECM, 3, 5, 7.5, 10, 15, Dual 1, Dual 1.5, Dual 2, Dual 3, Dual 5, Dual 7.5, Dual 10, Dual 15, Dual 20 (AF Only)									

NOTE(S):

- a. For unit and component weights, refer to the latest edition of Carrier's Dedicated Outdoor Air Systems Builder.
- b. 20:1 modulating control available on EXL Cabinet (800-1600 MBtuh only).
- c. Refer to the DOAS NG builder for the latest product data within the equipment submittal report. The above is to be used as reference only.
- d. Air Source Heat Pumps are available up from 60 to 70 Tons without ERV and from 40 to 70 tons with ERV.
- e. Water Source Heat Pumps are available up from 60 to 140 Tons without ERV and from 40 to 55 tons with ERV.

LEGEND

ECM	— Electronically Commutated Motor
ERV	— Energy Recovery Ventilator
FPI	— Fins per Inch
LP	— Liquid Propane
OA	— Outdoor Air
SCR	— Silicon-Controlled Rectifier

Step 5 — Field Fabricate Ductwork

The unit is not designed to support the weight of ductwork. Ductwork must be constructed in a fashion that is self-supporting. Ductwork for curb-mounted units should be attached to the curb prior to setting the unit, and may not be attached to the bottom of the unit.

Units ordered in a horizontal discharge are supplied with flanges to attach ductwork. Neither the flanges nor exterior skin of the unit are capable of supporting the load of the ductwork. Ductwork support must come from the structure itself that the unit is servicing. Ductwork passing through unconditioned spaces must be insulated (including a vapor barrier) to prevent unnecessary energy losses and/or condensation.

If a plenum return is used on a vertical unit, the return should be ducted through the roof deck to comply with applicable fire codes. A minimum clearance is not required around ductwork.

DUCTWORK CONSIDERATIONS:

The unit has been designed to operate at the specific air volume and external static pressure that was ordered. This static pressure is generated by any additional components that are added to the unit (i.e. ductwork, etc). Additional static pressure beyond that ordered will affect the performance of the packaged air conditioning unit and lessen the air volume that can be delivered.

Proper engineering methods need to be employed when calculating duct and component static pressure (i.e. 2017 ASHRAE Handbook - Fundamentals, Chapter 21). The system ductwork must comply with Sheet Metal and Air Conditioning Contractors National Association (SMACNA) or any other recognized standards.

It is recommended that flexible duct connections be incorporated into the ductwork design to prevent the transmission of any vibrations, either mechanical or harmonic.

As a general rule, all ducts should have a straight run of at least 3 hydraulic duct diameters immediately before and after the unit before adding any fittings, elbows, restrictions, etc.

Hydraulic duct diameter for round ducts (in inches):

$$D_h = d$$

D_h: hydraulic diameter

d: round duct inside diameter

Hydraulic duct diameter for rectangular ducts (in inches):

$$D_h = (2*H*W)/(H+W)$$

D_h: hydraulic diameter

H: rectangular duct inside height

W: rectangular duct inside width

RETURN AIR DUCTWORK

Return air ductwork height and width must be no smaller than the unit return air opening height and width.

DISCHARGE DUCTWORK

Discharge air ductwork height and width must be no smaller than the unit discharge air opening height and width.

Step 6 — Make Unit Duct Connections

All 62LA, C, D, G, J, K, P, R and S units bring in 100% outdoor air through the outdoor air intake hood and do not have a return air connection. The 62L A, C, G, J, P and R units have a vertical sup-

ply duct opening in the bottom of the unit. The 62LD, K and S units have a horizontal supply duct opening in the side of the unit.

All 62LB, E, F, H, M, N, Q, T and U units bring in 100% outside air through the intake hood and also have a return duct opening in the bottom of the unit for exhaust. They will also be equipped with a factory-installed power exhaust and may be equipped with an energy recovery ventilator (ERV) and/or an energy conservation wheel. The return air to these units is not re-circulated or mixed with the incoming outdoor air. The return air may be used to transfer energy to the incoming air via the energy recovery ventilator and is then exhausted. The 62LB, E, H, M, Q and T units have a vertical supply and return duct opening in the bottom of the unit. The 62LF, N and U units have a horizontal supply duct opening in the side of the unit and a vertical return opening in the bottom of the unit. To determine the specifics regarding a particular unit, see the model number nomenclature found in the product data guide for the 62L unit.

VERTICAL SUPPLY/RETURN CONNECTIONS

For vertical supply or return connections, ductwork openings are shown in the DOAS Builder generated submittal. Attach the ductwork to the roof curb. Do not attach duct directly to the unit.

WARNING

PERSONAL INJURY HAZARD

Failure to follow this warning could cause personal injury.

For vertical supply and return units, tools or parts could drop into ductwork and cause an injury. Install a 90 degree turn in the return ductwork between the unit and the conditioned space. If a 90 degree elbow cannot be installed, then a grille of sufficient strength and density should be installed to prevent objects from falling into the conditioned space. Due to electric heater, supply duct will require 90 degree elbow.


HORIZONTAL SUPPLY CONNECTIONS

For horizontal supply connections, ductwork openings are shown in the DOAS Builder generated submittal. The 62L units do not have horizontal return connections.

Step 7 — Install External Trap for Evaporator Condensate Drain

The unit's condensate drain connection is located on the side of the unit (1 in. condensate drain connection on E or EXL cabinet units). Refer to the DOAS Builder generated submittal for condensate location.

All units must have an external trap for condensate drainage. Install a trap following "A" and "B" dimensions at minimum (see Fig. 7). Protect trap against freeze-up to avoid trap damage. If drain line is installed downstream from the external trap, pitch the line away from the unit at minimum 1/8 in. per 1 ft of run. Use higher pitch on the line if required by local code. Do not use a pipe size smaller than the unit connection. Refer to the physical data table for condensate drain connection sizes. Failure to follow these guidelines could cause condensate not to drain properly, and potential intrusion of water into the space and/or other negative effects. It is also recommended to pre-prime traps before initial operation, or long shutdown periods. Open vents and drain plugs are recommended. See Fig. 7.

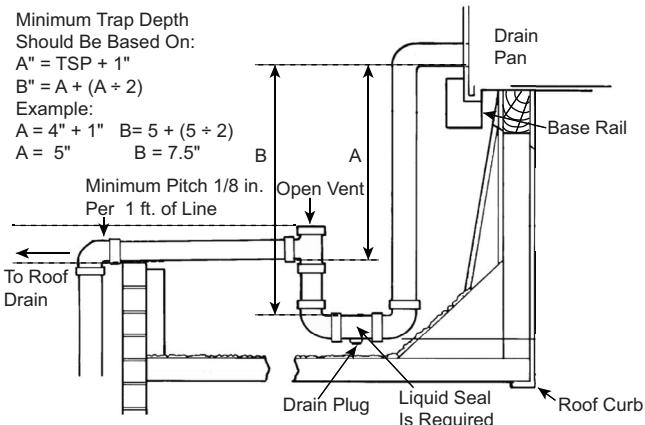

NOTE(S):
 1. Trap should be deep enough to offset maximum unit static difference.
 (See submittal and calculate the trap depth based on the above).
 2. TSP = Total Static Pressure

Fig. 7 – Condensate Drain Piping Details

Step 8 – Install Gas Piping (Gas Heat Units Only)

62L unit heaters are only designed to work with Natural Gas. A special order is available for liquid propane (LP).

E AND EXL CABINETS (300 TO 600 MBH)

When equipped with gas heat, the above cabinets only use a single heater. Units with a single heater will include a panel knockout for the gas piping connections.

EXL CABINETS (800 TO 1600 MBH)

When equipped with gas heat, the above cabinets have two heaters (800 to 1200 MBH) or four heaters (1400 to 1600 MBH). Units with two or four heaters require a field knockout for the gas heat piping connection and require a field fabricated and installed gas pipe manifold to connect the two or four heaters to the main gas supply line.

Refer to Table 7 for gas manifold sizes and pressures. Refer to local building codes, or in the absence of local codes, to ANSI. Z223.1-latest year and addendum Z223.1A-latest year entitled HFGC. In Canada, installation must be in accordance with the CAN1.B149.1 and CAN1.B149.2 installation codes for gas burning appliances.

Gas piping length and capacity is shown in Table 6. See Fig. 8 for typical pipe guide and locations of external manual gas shutoff valve. Gas supply piping must be supported starting from connection of the unit. If long stretches of piping are expected to be used, there must be supports at intervals of every 6 to 8 ft. Metal straps, blocks, or hooks are acceptable to support the gas piping. The piping should never be strained or bent.

Table 6 – Gas Piping Capacity (cubic ft per hr)

GAS PIPE LENGTH (ft)	PIPE SIZE (in.)				
	3/4	1	1-1/4	1-1/2	2
10	278	520	1050	1600	2700
20	190	350	730	1100	2100
30	152	285	590	890	1650
40	130	245	500	760	1450
50	115	215	440	670	1270
60	105	195	400	610	1105
70	96	180	370	560	1050
90	84	160	320	490	930
100	79	150	305	460	870
125	72	130	275	410	780
150	64	120	250	380	710

175	59	110	225	350	650
200	55	100	210	320	610

WARNING

Do not pressure test gas supply while connected to unit. Always disconnect union before servicing. High pressures can cause gas valve damage resulting in a hazardous condition.

IMPORTANT: Natural gas pressure at unit gas connection must not be less than 5.0 in. wg or greater than 13.0 in. wg for all heat sizes.

Install field-supplied manual gas shutoff valve with a 1/8 in. NPT pressure tap for test gauge connection at unit. The pressure tap is located on the gas manifold, adjacent to the gas valve. Field gas piping must include sediment trap and union (see Fig. 8). Install a field-supplied gas regulator. Refer to Table 7 for gas manifold sizes and pressures.

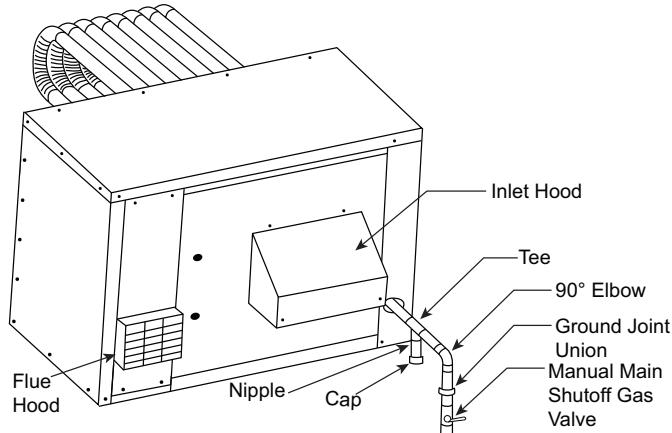


Fig. 8 – Gas Heat Section (Single Heater Unit)

Table 7 – Gas Heat Connection Sizes and Pressures

INDIV. GAS HEATER INPUT (MBH)	GAS NPT CONNECTION (in.)	MIN. INLET GAS PRESSURE	
		NG in.wg (MBAR)	LPG in. wg (MBAR)
300	0.75	5.0 (12.5)	11.0 (27.4)
350	0.75	5.0 (12.5)	11.0 (27.4)
400	1.00	6.0 (14.9)	12.0 (29.9)
500	1.00	6.0 (14.9)	12.0 (29.9)
600	1.00	6.0 (14.9)	12.0 (29.9)

LEGEND

LPG — Liquid Propane Gas
 NG — Natural Gas

Size gas-supply piping for 0.3 in. wg maximum pressure drop. Do not use supply pipe smaller than unit gas connection.

GAS HEAT SAFETY CONTROLS

Safety systems are required for proper performance of the gas heater. The gas heater shall not be permitted to operate with any safety system disabled. If a fault is found in any of the safety systems, then the system shall be repaired only by a contractor qualified in the installation and service of gas-fired heating equipment.

- **Combustion Airflow Switch:** An airflow switch is provided as part of the control system to verify airflow through an induced draft fan by monitoring the difference in pressure between the fan and the atmosphere. If sufficient negative pressure is not present, indicating lack of proper air movement through heat exchange, the switch opens, shutting off gas supply through the ignition control mod-

ule. The air pressure switch has fixed settings and is not adjustable.

- **Rollout Switch (Manual Reset):** The heater is equipped with manual reset rollout switch(es) in the event of burner flame rollout. The switch will open on temperature rise and shut off gas supply through the ignition control module. Flame rollout can be caused by insufficient airflow for the burner firing rate (high gas pressure), blockage of the vent system, or in the heat exchanger. The heater should not be placed back in operation until the cause of the rollout condition is identified. The rollout switch can be reset by pressing the button on top of the switch.
- **Primary High Limit Switch:** To prevent the heater from operating under low airflow conditions, the unit is equipped with a fixed temperature high limit switch, mounted on the vestibule panel. This switch will shut off gas to the heater through the ignition control module before the air temperature reaches 250.0°F (121.1°C). Reduced airflow may be caused by restrictions upstream or downstream of the circulating air blower, such as dirty or blocked filters or restriction of the air inlet or outlet to the unit. The high limit switch will shut off the gas when the temperature reaches its set point and then resets when the temperature drops 30.0°F (16.7°C) below the set point, initiating a heater ignition. The heater will continue to cycle on limit until the cause of the reduced air flow is corrected.
- **Ignition Control Module:** Ignition control modules are available with a number of different operating functions. Refer to the Sequence of Operation and Control Diagnostic data sheets, provided in the instructions package, for a detailed description of the control features, operation, and troubleshooting for the model control installed.

Step 9 — Install Gas Heat Condensate Drain

Units with natural gas or LP heat also require a condensate drain for heater condensate collection. Condensate in gas heaters can occur during low operating temperatures or during heater start-up.

The unit's gas heat condensate drain connection is located on the side of the unit. Refer to the DOAS Builder generated submittal for condensate location.

All units must have an external trap for condensate drainage. Install a trap following "A" and "B" dimensions at minimum (see Fig. 7). Protect trap against freeze-up to avoid trap damage. If drain line is installed downstream from the external trap, pitch the line away from the unit at minimum 1/8 in. per 1 ft of run. Use higher pitch on the line if required by local code. Do not use a pipe size smaller than the unit connection. Refer to the physical data table for condensate drain connection sizes. Failure to follow these guidelines could cause condensate not to drain properly, and potential intrusion of water into the space and/or other negative effects. It is also recommended to pre-prime traps before initial operation, or long shutdown periods. Open vents and drain plugs are recommended. See Fig. 7.

NOTE: Check with local codes for any requirements for draining of gas heat condensate. Also verify any compatibility issues with roofing material or roof warranty and gas heat condensate disposal.

Step 10 — Install Hot Water (Hot Water Units Only)

Coils should be piped according to any relevant local codes. All external piping must be supported independently from the coil. External piping must be insulated to prevent freeze up. See Table 8 for hot water coil connection sizes. Control valves for hot water coils are to be field provided and installed. Coil freeze protection operation (open HW valve when coil temp approaches freeze limit) must be field provided.

Table 8 — Hot Water Coil Connections

CABINET	ERV	HOT WATER COIL CONNECTION, SWEAT (in.)
E / EXL	No	3-1/8
	Yes	3-1/8

HOT WATER COIL PIPE ROUTING

The piping for the hot water coil can be routed either through the bottom of the unit or through the side of the cabinet (see Fig. 9). The contractor must make a hole for the supply and return water pipes and seal it appropriately.

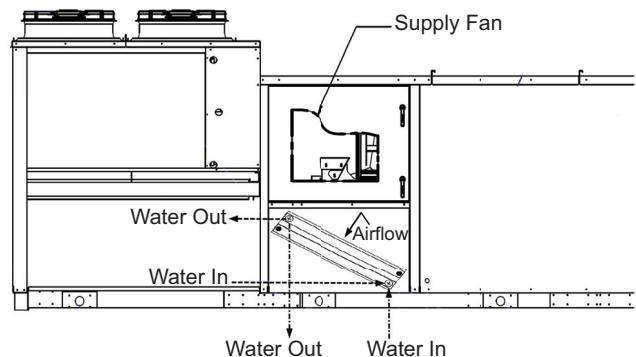


Fig. 9 — Hot Water Coil Pipe Routing Options

HOT WATER HEATING CONTROL

The control valve for units equipped with hot water coils is to be field provided and installed. The control valve will also require field provided power (not from unit). The control signal for the control valve will be provided by the ALC controller by wiring the valve input signal to UO-6 (0 to 10V signal). Consult the wiring diagram furnished with the unit. Valve selection is to be determined by power requirements, pipe size, and water flow and temperature. See Fig. 10.

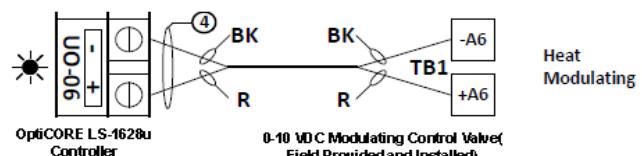


Fig. 10 — Hot Water Coil - Control Valve Wiring

Step 11 — Water-Source Setup and Installation

The 62L WSHP units can be configured as a self-contained water-source heat pump. The 62L can be installed on either geothermal loops, boiler/tower loops, or a combination thereof. The following section covers building loop piping to the unit, and other considerations for this unit and system configuration. See Fig. 11 for Water piping example.

COMPONENTS AND CONFIGURATIONS

There are many different building water loop variations available. Depending on the configuration, the unit may require the following components:

- Water piping
- Piping insulation
- Manual isolation ball valves
- Motorized isolation ball valves
- Stainless steel hoses
- Strainers (Y or Basket)
- Intermediate heat exchanger
- Pumps
- Antifreeze

Table 9 — Unit GPM and WPD Data No ECW

UNIT SIZE (NO ERV)	NOMINAL GPM	COAX HX WPD (ft H ₂ O)
40	120	12.5
45	136	168
50	150	23.2
55	164	21.7
60	180	19.5
65	196	22.8
70	210	15.8
80 ^a	270	16.2
100 ^a	338	17.7
120 ^a	480	18.1
140 ^a	416	18.5

NOTE(S):

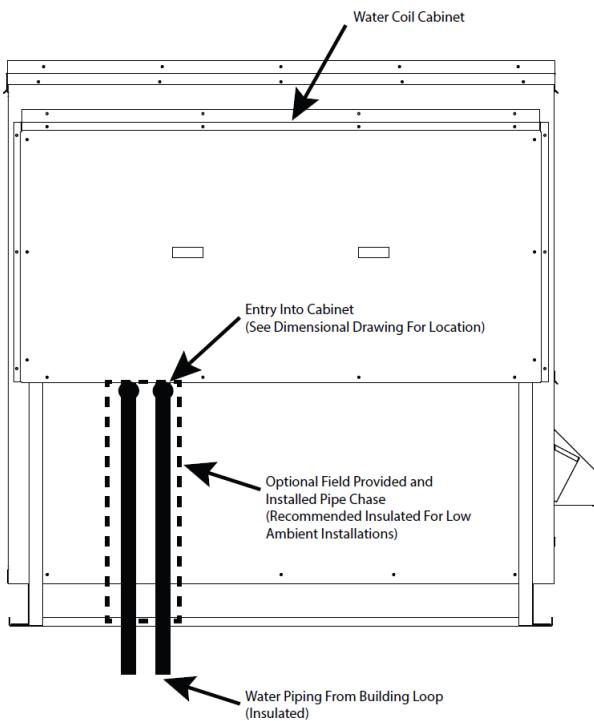
a. Check water regulating valve (if equipped) for valve pressure drop and add it to the numbers above. These models features a stainless steel brazed-plate heat exchanger. All other models utilize coaxial heat exchangers (WSHP only).

Table 10 — Unit GPM and WPD Data With ECW^a

UNIT SIZE (WITH ERV)	NOMINAL GPM	COAX HX WPD (ft H ₂ O)
40	120	12.5
45	136	16.8
50	150	23.2
55	164	21.7

NOTE(S):

a. Check water regulating valve (if equipped) for valve pressure drop and add it to the numbers above.

**Fig. 11 — Water Piping Example**

WATER QUALITY

For consistent unit performance and longevity, proper water quality is essential for every installation. Poor water quality can lead to heat exchanger scaling, corrosion, or other issues that could require additional maintenance, or lead to premature unit failure.

Table 11 outlines Carrier prescribed water quality requirements.

WATER PIPING

When designing the building loop water piping that supplies the 62L, there are several considerations to take into account.

For units permanently connected to the water mains, hose sets are not to be used.

PIPING MATERIALS

All interior piping to the unit must be made of a material that is rated to handle the flow rate, temperature, and pressure of the building loop. Materials such as steel or HDPE are recommended. PVC of any type must not be used on these systems.

FLOW RATES AND TEMPERATURES

All piping to the unit must be designed and sized for proper flow rates. The unit is capable of operating at flow rates between 1-3 gpm (gallons per minute) per ton.

Water temperatures entering the unit should be between 40°F to 120°F in cooling mode, and between 30°F and 90°F in heating mode. Consult the submittal document for the flow ranges and temperatures for the specific project the unit is applied to. For operation outside of the submittal document, consult the factory.

PIPING INSULATION

In areas where the water temperature in the building loop is regularly below the dew point, all water piping must be insulated to prevent condensation. A closed-cell Armaflex-type insulation of at least 3/8 in. wall thickness that completely encircles the piping is recommended.

Table 11 — Water Quality Standards^a

POTENTIAL FAILURE MODE	WATER CHEMISTRY PARAMETER	COPPER COAXIAL HEAT EXCHANGER (STANDARD)	CUPRONICKEL COAXIAL HEAT EXCHANGER (OPTIONAL)	STAINLESS STEEL BRAZED-PLATE HEAT EXCHANGER (SELECT MODELS)
Corrosion and Scaling	pH Level	7 - 9	7 - 9	7 - 9
	Hardness (Calcium or Magnesium Carbonate)	< 350 ppm	< 350 ppm	< 350 ppm
	Langelier Saturation Index (LSI)	-0.5 to 0	-0.5 to 0	-0.5 to 0
	Ryznar Stability Index	6.2 - 6.8	6.2 - 6.8	6.2 - 6.8
	Hydrogen Sulfide	< 0.5 ppm	< 0.5 ppm	< 0.5 ppm
	Sulfates	< 125 ppm	< 125 ppm	< 125 ppm
	Chlorine	< 0.5 ppm	< 0.5 ppm	< 0.5 ppm
	Chlorides	< 20 ppm	< 125 ppm	< 200 ppm
	Carbon Dioxide	< 5 ppm	< 5 ppm	< 5 ppm
	Ammonia	< 2 ppm	< 2 ppm	< 5 ppm
	Ammonia Chloride, Nitrate, Hydroxide, Sulfate	< 0.5 ppm	< 0.5 ppm	< 0.5 ppm
	Total Dissolved Solids (TDS)	< 1000 ppm	< 1500 ppm	< 1500 ppm
Iron Fouling	Iron, Iron Bacteria	< 0.2 ppm	< 0.2 ppm	< 0.2 ppm
	Iron Oxide	< 1 ppm	< 1 ppm	< 1 ppm
Erosion	Suspended Solids	< 10 ppm, < 600 micron or 30 mesh filter size	< 10 ppm, < 600 micron or 30 mesh filter size	< 10 ppm, < 600 micron or 30 mesh filter size
	Design Water Velocity	3 GPM per Tom	3 GPM per Tom	3 GPM per Tom

NOTE(S):

a. A CuproNickel heat exchanger is required for any seawater, brackish water or open loop (well water), or any other application where the water quality is subject to change. In applications where, water chemistry cannot be prescribed to the limits per the table above, the use of secondary or intermediate heat exchanger is recommended separating the unit heat exchanger from contaminated water. Operation of a Carrier unit with poor water quality could lead to denial and/or revocation of warranty.

HOSE KITS AND VALVING

Water piping to the unit should be designed with provisions for installation, service and annual maintenance taken into consideration. Components such as isolation valves and hose kits make for easier installation, and easier service should the unit need to be taken off the building loop. Carrier provides motorized water regulating valves internal to the unit. However, an additional set of isolation valves is recommended outside of the unit.

Additionally, other components such as flow meters, temperature sensors, strainers, should be installed in such a manner that they can be isolated from the building loop for easier service.

CAUTION

PRODUCT DAMAGE HAZARD

Systems with brazed-plate heat exchangers must have a strainer with a minimum of 60 mesh on the entering water side of the HX. Failure to do so could result in a clogged heat exchanger and potential unit damage.

WARNING

Fire Hazard

Use alcohol-based antifreeze only in a well ventilated area.

When utilizing or working with flammable antifreeze solutions, extreme care must be taken when mixing or pouring any solution. No open flame of any kind can be present when handling these solutions. Additionally, all power to the unit should be off to prevent sparking and potential ignition.

STRAINERS

For units equipped with brazed-plate heat exchangers, a strainer with a minimum of 60 mesh must be used before the entering water fitting of the heat exchanger. Heat exchanger damage could occur if a strainer is not included. Strainers should be checked and cleaned on a regular basis to insure proper flow through the unit.

ANTIFREEZE

In applications where the expected building loop temperature will fall below 40°F during operation, or in buildings where loop piping could be exposed to freezing temperatures, some form of antifreeze is required for unit operation. Antifreeze is commonly available in several different varieties such as propylene glycol, methanol, and ethanol. Each type has its advantages and disadvantages in regards to safety, cost, performance, and stability.

Additionally, state and local codes may restrict which antifreeze is allowed to be used in your application.

Consult with the project engineer to ensure the proper antifreeze is chosen, and the proper percentage for the application is calculated.

Use a hydrometer specific to your antifreeze type/solution to determine the percentage found in the building water loop. Each antifreeze type has a specific gravity that will indicate the percentage in solution, and amount of provided freeze protection.

Failure to properly select and apply antifreeze to the system could not only lead to unit damage, but damage to other parts of the building loop system as well.

FLUSHING

Prior to unit startup and commissioning, the building loop, and unit loop must be purged of any debris or air that may be present. Debris that remains in the system could erode or plug the unit heat exchangers, or damage pumps. Additionally, trapped air could impact unit performance and cause unwanted turbulence noise.

OPERATING LIMITS

- Minimum Entering Water (Cooling): 30°F [-1.0°C]
- Minimum Entering Water (Heating): 40°F [4.5 °C]
- Maximum Entering Water (Cooling): 120°F [49.0°C]
- Maximum Entering Water (Heating): 90°F [32.0°C]
- Minimum Water Pressure: 25 psi [172.4 kPa]
- Maximum Water Pressure 300 psi [2068.4 kPa]

Step 12 – Make Electrical Connections

For units without the factory installed disconnect, power wiring should be connected to the main power terminal block located within the unit main control section. The power wiring connections on units with non-fused factory disconnects should be made at the line side of the disconnect switch.

The internal power and control wiring of these units is factory-installed and each unit is thoroughly tested prior to shipment. See Fig. 15 for the typical wiring diagram. Standard 62L units have an SCCR (short circuit current rating) of 5KA. A higher SCCR rating is available as a special order. Consult the unit nameplate to verify SCCR rating. Contact the local service representative if assistance is required.

It is recommended that an independent 115-volt power source be brought to the vicinity of the rooftop unit for portable lights and tools used by the service mechanic, if a factory-installed convenience outlet is not on the unit.

OPTIONAL UNIT-POWERED TYPE CONVENIENCE OUTLET

A unit-mounted transformer is factory-installed to step down the main power supply voltage to the unit to 115-v at the duplex receptacle. This option also includes a manual switch with fuse, located in a utility box and mounted on a bracket behind the convenience outlet. The primary leads to the convenience outlet transformer are not factory-connected. Selection of primary power source is a customer option. If national or local codes permit, the transformer primary leads can be connected at the line-side terminals on the unit-mounted non-fused disconnect (if equipped); this will provide service power to the unit when the unit disconnect switch is open. Other connection methods will result in the convenience outlet circuit being de-energized when the unit disconnects.

⚠ WARNING

Depending on how the convenience outlet and transformer are wired, they may remain HOT regardless of the disconnect switch on/off positions. Before performing service or maintenance operations on unit, turn off main power switch to unit. Electrical shock could cause personal injury.

OPTIONAL NON-UNIT-POWERED TYPE (FIELD WIRED) CONVENIENCE OUTLET

This type requires the field installation of a general-purpose 125-v 15-A circuit powered from a source elsewhere in the building. Observe national and local codes when selecting wire size, fuse or breaker requirements and disconnect switch size and location, Route 125-v power supply conductors into the bottom of the utility box containing the duplex receptacle.

FIELD POWER SUPPLY

The units are factory wired for the voltage shown on the nameplate. Main power wiring should be sized for the minimum wire ampacity shown on the nameplate. An external weather-tight disconnect switch properly sized for the unit total load is required for each unit. Disconnect must be installed in accordance with local and/or national electric codes. This disconnect can be supplied by the factory or by others.

Power wiring may enter the rooftop unit through the unit base and roof curbs on all models. Install conduit connectors at the entrance locations. External connectors must be weatherproof.

All units must be properly grounded. The ground lug is provided for this purpose. **DO NOT** use the ground lug for connecting a neutral conductor. The unit must be electrically grounded in accordance with local codes, or in the absence of local codes, with the NEC (National Electrical Code) ANSI/NFPA (National Fire Protection Association) 70 1981.


Once it is established that supply voltage is within the utilization range, check and calculate if an unbalanced condition exists between phases.

Use the following formula to determine the percent of voltage imbalance.

% Voltage imbalance

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.



AB = 452 v

BC = 464 v

AC = 455 v

$$\text{Average Voltage} = \frac{452 + 464 + 455}{3}$$

$$= \frac{1371}{3}$$

$$= 457$$

Determine maximum deviation from average voltage.

$$(AB) 457 - 452 = 5 \text{ v}$$

$$(BC) 464 - 457 = 7 \text{ v}$$

$$(AC) 457 - 455 = 2 \text{ v}$$

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times (7 / 457)$$

$$= 1.53\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.

Unit failure as a result of operation on improper line voltage or excessive phase imbalance constitutes abuse and may cause damage to electrical components.

Consult the wiring diagram furnished with the unit. These packaged units are manufactured for each application selection. The unit wiring diagram is located inside the control panel of each unit.

When installing units without a factory-installed disconnect, provide disconnect per NEC Article 440 or local codes. For non-fused disconnects, size the disconnect according to the sizing data provided on unit nameplate. If a fused disconnect is used, determine the minimum size for the switch based on the disconnect sizing data and then coordinate the disconnect housing size to accommodate the maximum overcurrent protection (MOCP) device size as marked on the unit informative plate. All field wiring must comply with NEC and local codes. Size wire based on MCA (minimum circuit amps) on the unit informative plate.

See Fig. 15 for typical installation wiring diagrams.

⚠ CAUTION

The correct power phasing is critical to the operation of the scroll compressors. An incorrect phasing will result in an alarm being generated and compressor operation lockout. Should this occur, power phase correction must be made to the incoming power. Damage to compressor could result.

⚠️ WARNING

Unit cabinet must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur. This ground may consist of electrical wire connected to unit ground lug in control compartment, or conduit approved for electrical ground when installed in accordance with NEC; ANSI/NFPA, latest edition, and local electrical codes. *Do not use gas piping as an electrical ground.* Failure to follow this warning could result in the installer being liable for personal injury of others.

⚠️ WARNING

Disconnect all power to the unit before performing maintenance or service. Unit may automatically start if power is not disconnected. Failure to follow this warning could cause personal injury, death, and/or equipment damage.

SENSOR WIRING

The 62L unit uses a variety of sensors for control purposes. The sensors provided will depend upon the features of the unit as detailed below.

All units are equipped with an outdoor air sensor (OAT) and a combination of supply air temperature (SAT) and duct relative humidity sensor.

The combination sensor should be installed in the supply duct downstream of the heat section. The sensor must be far enough downstream of the heat section so that the discharge air is adequately mixed for proper sensing. If the unit is not equipped with heat, the combination sensor is factory-installed in the cabinet. The sensor is connected to the unit controller as indicated in the wiring diagram with 18 AWG (American Wire Gauge) shielded wire. Do not run the sensor wiring in the same conduit as high voltage wiring.

A zone temperature sensor (ZS) may be provided as an accessory with units that have ordered the space temperature override control function. The ZS should be installed in the space and connected to the unit controller at the Rnet connection as shown in the wiring diagram. See Tables 12 and 13 for Rnet wiring specifications.

Use the specified type of wire and cable for maximum signal integrity (see Table 12).

To wire the sensor to the controller:

1. Partially cut, then bend and pull off the outer jacket of the Rnet cable(s), being careful not to nick inner insulation.
2. Strip about 1/4 in. of the inner insulation from each wire (see Fig. 12).
3. Wire each terminal on the sensor to the same terminal on the controller. Table 13 shows the recommended Rnet wiring scheme.

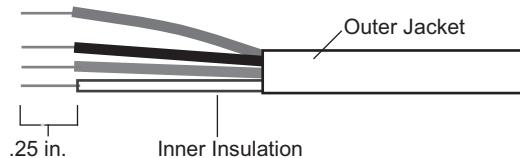


Fig. 12 — Rnet Cable Wire

Table 12 — Rnet Wiring Specifications

RNET WIRING SPECIFICATIONS	
Description	4 conductor, unshielded, CMP, plenum rated cable
Conductor	18 AWG
Maximum Length	500 ft
Recommended Coloring	Jacket: white Wiring: black, white, green, red
UL Temperature	32°F to 167°F
Voltage	300-vac, power limited
Listing	UL: NEC CL2P, or better

LEGEND

AWG	— American Wire Gauge
CMP	— Communications Plenum Cable
NEC	— National Electrical Code
UL	— Underwriters Laboratories

Table 13 — Rnet Wiring

WIRE	TERMINAL
Red	+12-v
Black	Rnet-
White	Rnet+
Green	Gnd

NOTE(S):

The wire should be connected to the terminal shown.

Step 13 — Open Exhaust Damper (Units with Optional Exhaust or Energy Conservation Wheel Only)

The optional exhaust damper is secured to the exhaust assembly for shipping. Remove the two screws holding the damper to the panel. Damper should be free to swing open during operation (see Fig. 13).



Fig. 13 — Optional Exhaust Damper

Step 14 — Install all Accessories

After all of the factory-installed options have been adjusted, install all of the field-installed accessories. Refer to the accessory installation instructions included with each accessory.

Step 15 — Configure Controls

The unit controller is pre-configured with default set points as detailed below. If changes to the set points are desired, this may be accomplished via the factory-installed Equipment Touch™ device (see Fig. 14). See the Controls, Operation, and Start-up manual for wiring and instructions.

NOTE: Rev H and J 62L units are compatible with the Equipment Touch 2 (P/N: EQT2) and not with the previous version Equipment Touch (P/N: EQT1).



Fig. 14 — Equipment Touch 2

SEQUENCE OF OPERATION

100% outdoor air units — 62L

The 62L unit is designed to condition 100% outdoor air to room neutral conditions for ventilation purposes. As such, the 62L unit is not designed to, nor will the 62L unit maintain space cooling, heating or relative humidity conditions. A separate ancillary device must be installed to provide primary space heating, cooling, and humidity control.

The controller is turned on by a switch located on its front, upper left corner. Several Occupancy Control options are available for starting the unit. These can be selected from the Equipment Touch display pad on the Controls screen (requires user password). The Resident Program has an adjustable scheduler that uses the internal time clock to allow for separate Sequences for Occupied and Unoccupied periods. This can be accessed from the Equipment Touch display pad on the Schedules screen (requires user password).

NOTE: All temperature-related events have an additional 10-second (fixed) “delay on make” to allow temperatures to settle.

OCCUPIED MODE

When the Equipment Touch Schedule calls for the start of the Occupied mode, and the controller has verified that there are no fault or shutdown conditions, after a 30-second (fixed) delay the unit goes into Occupied mode.

Outdoor Air Damper (OD)

After the unit goes into Occupied mode, the Outdoor Air (OA) damper will open. As the OA damper opens, the Outdoor Air Damper Actuator (OADA) auxiliary switches close. The OA damper stays open until the system reaches the end of the Occupied mode period. It will remain open until the supply fan turns off. After the supply fan turns off, the OA damper will close.

Supply Fan (SF)

As the OA damper opens, the OADA auxiliary switch (adjustable) will close and the SF will turn on. The SF shall operate continuously while the unit is in the Occupied mode. When the system reaches the end of the Occupied mode period, the SF will continue to run for an additional 2 minutes before turning off.

The SF will operate based on one of four control methods, depending on the unit and control configuration.

Constant Volume (CV)

The unit will operate the SF at full speed or the commanded manual override speed.

Duct Pressure Control (VAV-DPT)

The unit will operate the SF to maintain the supply duct pressure set point.

Air Monitor Control (VAV-AMS)

The unit will operate the SF to maintain the SF airflow set point.

- Space Pressure Control (VAV-SPT)
- The unit will operate the SF to maintain the space pressure set point (special order).

Exhaust fan (EF)

At the same time the SF turns on, the EF will be enabled to run. The EF shall be enabled to run continuously while the unit is in the Occupied mode. When the system reaches the end of the Occupied mode period, the EF will be enabled to run for an additional 2 minutes before turning off.

The EF will operate based on one of three control methods, depending on the unit and control configuration.

Constant Volume (CV)

- The unit will operate the EF at full speed or the commanded manual over-ride speed.

Space Pressure Control (VAV-SPT)

- The unit will operate the EF to maintain the space pressure set point.

Air Monitor Control (VAV-AMS)

- The unit will operate the EF to maintain the EF airflow set point.

Energy Conservation Wheel (ECW)

After the OA damper opens and the SF turns on, the ECW turns on. The ECW Bypass Damper will open when the ECW is off and it will close when the ECW is on.

- *ECW Standard Operation* — When the OAT is 3°F (adjustable) or more above or below the RAT, the ECW will be on, otherwise it is off.
- *ECW with VFD Controlled Defrost (WM-VFD)* — When the OAT is 3°F (adjustable) or more above or below the RAT, the ECW will be on. It will be off, if the OAT is less than 3°F (adjustable) above or below the RAT. It will decrease speed or stop as the WExAT goes below 25°F (adjustable) to allow for wheel defrosting. It will start back up and increase speed when the WExAT rises toward 25°F (adjustable) or more.

Cooling Mode

Cooling mode is available when the Entering Coil Air Temperature (ECAT) is above the ECAT cooling lower limit (55°F, adjustable) and there is a demand for cooling. When the Entering Coil Air Temperature (ECAT) is 1°F (adjustable) or more above the Supply Air Temperature (SAT) cooling set point (70°F, adjustable), compressor no. 1 turns on. When the SAT is 2°F (adjustable) or more above the SAT cooling set point (70°F, adjustable), compressor no. 2 turns on — not less than 10 minutes (adjustable) after compressor no. 1 turned on. When the SAT is 2°F (adjustable) or more below the SAT cooling set point (70°F, adjustable), compressor no. 2 turns off. When the ECAT is 1°F (adjustable) or more below the Supply Air Temperature (SAT) cooling set point (70°F, adjustable), compressor no. 1 turns off.

- *Variable Speed Compressors (Size 40-140)* — The controller regulates the capacity of the variable speed lead compressor with a 0-10 vdc output signal that controls the VFD's output to the compressor, resulting in an increase or decrease of the compressors motor speed. The variable speed compressor will modulate based upon the Supply Air Temperature (SAT) sensor and set point (70°F, adjustable). The compressor will ramp up to 100% once an hour, for 60 seconds, to push oil back to the compressor. The hot gas reheat circuit and subcooling circuits (if present), will be enabled for the duration of the oil purge. If the DX LAT drops to 38°F or less for 10 minutes, the controller will issue an alarm and the compressor stops. When the DX LAT warms back up to 55°F or more, the compressor turns back on. If there is a current call for first stage cooling and compressor no. 1 is shut down due to an alarm (HPS1, LPS1, or DX LAT1), compressor no. 2 will be turned on to take its place until it returns.
- *Hot Gas Reheat (HGRH) – Modulating* — When the SAT is 1°F (adjustable) or more below the SAT cooling set point, HGRH turns on and modulates to maintain the SAT cooling set point. When the SAT is 2°F (adjustable) or more above the SAT cooling set point, HGRH turns off.

Dehumidification Mode

Dehumidification Mode is available if the ECAT is 1°F (fixed) above the dehumidification lower limit of 60°F (adjustable) and there is no call for heating. When the Entering Coil Air Dew Point (ECDP) is 1°F (adjustable) or more above the Supply Air Dew Point (SADP) set point (55°F, adjustable), dehumidification mode is enabled. After the minimum time-off delay, compressor no. 1 turns on.

When the SADP is 2°F (adjustable) or more above the SADP set point, and after minimum time-off delay, compressor No. 2 turns on — not less than 10 minutes (adjustable) after compressor No. 1 turns on.

When the SADP is 1°F (adjustable) or more below the SADP set point, compressor No. 2 turns off. When ECDP is 2°F (adjustable) or more below the SADP set point, compressor no. 1 turns off and dehumidification mode is disabled.

- *Variable Speed Compressor (Size 40-140)* - The variable speed compressor will modulate based upon the DX Leaving Air Temperature (DX LAT) sensor and set point (55°F, adjustable). See Variable Speed. Freeze protection, oil purge, and back-up sequence are also in effect. See Cooling sequence for details.
- *Hot Gas Reheat (HGRH) – Modulating* - When the SAT is 1°F (adjustable) or more below the SAT cooling set point, HGRH turns on and modulates to maintain the SAT cooling set point. When the SAT is 2°F (adjustable) or more above the SAT cooling set point, HGRH turns off.
- *Liquid Subcooling Reheat (LSRH)* - if equipped When either of the compressor are enabled during dehumidification mode, the subcooling coil is enabled. When the compressors are disabled, the subcooling coil is disabled.

Zone Air Temperature Reset (Optional)

ZAT/SAT Set Point Reset is selectable using the Equipment Touch display pad or Building Automation System (BAS) (default is "OFF"). As the ZAT goes above the ZAT cooling set point, the SAT cooling set point will decrease by a ratio (adjustable) in order to lower the ZAT. As the ZAT goes below the ZAT cooling set point, the SAT cooling set point will increase by a ratio (adjustable) in order to raise the ZAT. When the ZAT equals the ZAT cooling set point, the SAT cooling set point will return to the original value. As the ZAT goes below the ZAT heating set point, the SAT heating set point will increase by a ratio (adjustable) in order to raise the ZAT. As the ZAT goes above the ZAT heating set point, the SAT heating set point will decrease by a ratio (adjustable) in order to lower the ZAT.

When the ZAT equals the ZAT heating set point, the SAT heating set point will return to the original value.

Example: A ZAT:SAT ratio of 1:3 means for every 1°F of ZAT increase the SAT set point will decrease by 3°F; maximum -15°F (ZAT = 73°F, SAT = 69°F; ZAT = 74°F, SAT = 66°F; ZAT = 75°F, SAT = 63°F; etc.).

Heat Pump Heating Mode

Heat Pump Mode is available when the ECAT is 1°F (fixed) below the ECAT heating upper limit (60°F, adjustable) and there is a demand for heating.

Reversing Valve is "ON" in Heating Mode.

When the SAT is 2°F (adjustable) or more below the SAT heating set point (70°F, adjustable), compressor #2 turns on — not less than 10 minutes (adjustable) after compressor #1 turned on.

When the SAT is 2°F (adjustable) or more above the SAT heating set point, compressor #2 turns off.

When the ECAT is 1°F (adjustable) or more below the ECAT heating set point (55°F, adjustable), compressor #1 turns on.

When the ECAT is 1°F (adjustable) or more above the ECAT heating set point, compressor #1 turns off.

Heat pump operation shall be disabled if the SF-VSC modulation drops below 85% (factory suggestion; adj.).

Optional: When enabled, if there is a call for 1st stage heating, second stage heating will be enabled after a 10 minute (adjustable) delay. Default is "OFF".

Compressor enabling logic includes a 5-minute (fixed) minimum run-time as well as the 5 minute (fixed) minimum time off delay to prevent compressor short cycling.

Standard Lead Compressor with VFD

The compressor will modulate based on the SAT heating set point. The compressor will ramp to 100% once an hour, for 60 seconds, to push oil back to the compressor.

If there is a current call for 1st stage heating and compressor #1 is shut down due to an alarm (HPS1, LPS1, or Freeze Protection #1), compressor #2 will be turned on to take its place until it returns.

CAUTION

(WSHP Only) Still water freezes at 32°F. Steps must be taken by purchaser to ensure that water does not freeze in any components during winter conditions, including any loss of power or malfunction. Failure to provide freeze protection can lead to equipment and property damage.

Defrost Mode (ASHP Only)

On defrost mode, the reversing valve will switch to cooling to defrost the built-up ice on the outdoor coil.

The unit is equipped with a Defrost Timer. The defrost timer provides a selectable time interval between defrost cycles. It will allow a 10 minute defrost every 30/60/90 minutes as long as the defrost thermostat is closed. The timer is factory set at 60 minutes. The time interval may be changed to 30 or 90 minutes if desired (disconnect power to the unit before moving the jumper). The hold input on the defrost timer allows the timer to accumulate time while the compressor is running in heating mode. A warm outdoor coil causes the defrost thermostat to open which will prevent time accumulation or end the Defrost period. The defrost timer allows up to a 10 minutes defrost cycle if the defrost thermostat is closed. When the defrost period ends, either by opening of the defrost thermostat or after the 10 minutes defrost period has elapsed, the timer is reset. By shorting the two test terminals together on the defrost timer, a 60 minute delay is reduced to 14 seconds and a 10 minute delay is reduced to 2.3 seconds for testing purposes.

Auxiliary Heating Mode (If equipped)

After the heat pump has been enabled, when the SAT is 2°F (adjustable) or more below the SAT heating set point (70°F, adjustable), and after a 10-minute (adjustable) delay period, auxiliary heating will be enabled. When the SAT is above the SAT heating set point, auxiliary heating will be disabled.

On demand for auxiliary heating, the ALC controller modulates the auxiliary Gas, Electric or Hot Water heating based upon the SAT heating set point (70°F, adjustable).

Emergency Heating Mode (If equipped)

The Compressor is “OFF” in Emergency Heating Mode.

Emergency Heating mode is selectable using the Equipment Interface or Building Automation System (BAS) (default is “OFF”). Emergency Heating mode will automatically be turned on if the heat pump compressor fails or is disabled due to either the OAT going below the Compressor Disable set point of 26°F (adjustable) or the SF-VSC modulating below 85% (adjustable).

Emergency Heating Mode is available when the ECAT is 1°F (fixed) below the ECAT heating upper limit (60°F, adjustable) and there is a demand for heating.

When the ECAT is 1°F (adjustable) or more below the ECAT heating set point (55°F, adjustable), emergency heating is enabled. When the ECAT is 1°F (adjustable) or more above the ECAT heating set point, emergency heating is disabled.

On demand for emergency heating, the ALC controller modulates the emergency Gas, Electric or Hot Water heating based upon the SAT heating set point (70°F, adjustable).

Heating Mode

Heating mode is available when the OAT is below the OAT heating upper limit (60°F, adjustable) and there is a demand to temper outdoor air to room neutral conditions. When the ECAT is 1°F (adjustable) or more below the ECAT heating set point (50°F, adjustable), heating is enabled and operates to maintain SAT heating set point (70°F, adjustable). When ECAT is 1°F (adjustable) or more above ECAT heating set point (50°F, adjustable), heating is disabled.

STAGED HEAT (ELECTRIC HEAT) 2-STAGE HEAT

Terminal W1 turning on enables first-stage heating. As SAT goes further below the SAT heating set point (70°F, adjustable), terminal W2 energizes and second-stage heating is enabled. As SAT rises, terminal W2 turns off and second-stage heating turns off. As the SAT goes 1°F (adjustable) or more above the SAT heating set point (70°F, adjustable), terminal W1 turns off and first-stage heating turns off.

STAGED HEAT (ELECTRIC HEAT) 4-STAGE HEAT

Terminal W1 turning on enables the Heating Analog Relay Module (HARM) on the control panel which activates the different stages of heating. As the SAT goes further below the SAT heating set point (70°F, adjustable), the different stages will turn on. As the SAT goes further above the SAT heating set point (70°F, adjustable), the different stages will turn off.

STAGED HEAT (GAS HEATER) 2-STAGE

Terminal W1 turning on enables first-stage heating. As SAT goes further below the SAT heating set point (70°F, adjustable), terminal W2 energizes and second-stage heating is enabled. As SAT rises, terminal W2 turns off and second-stage heating turns off. As the SAT goes 1°F (adjustable) or more above the SAT heating set point (70°F, adjustable), terminal W1 turns off and first-stage auxiliary heating turns off.

STAGED HEAT (GAS HEATER) 4-STAGE

Terminal W1 turning on enables the Heating Analog Relay Module (HARM) on the control panel which activates the different stages of heating. As the SAT goes further below the SAT heating set point (70°F, adjustable), the different stages will turn on. As the SAT goes further above the SAT heating set point (70°F, adjustable), the different stages will turn off.

Gas Heater

Terminal W1 turning on energizes the gas heat controller and first-stage axillary heating is enabled. If the SAT is 1°F (adjustable) or more above the SAT heating set point (70°F, adjustable) terminal W1 turns off, which deenergizes the gas heat controller, and first-stage axillary heating is turned off. All other stages operate as above.

MODULATED HEAT

SCR Electric Heat

On demand to temper outdoor air to room neutral conditions, the controller modulates the electric heating SCR in order to maintain the SAT heating set point (70°F, adjustable).

Modulating Gas Heater

On demand to temper outdoor air to room neutral conditions, the controller modulates the gas heat controller to control the gas flow in order to maintain the SAT heating set point (70°F, adjustable).

Modulating Hot Water Heat

On demand to temper outdoor air to room neutral conditions, the controller modulates the hot water valve to control the hot water flow in order to maintain the SAT heating set point (70°F, adjustable).

UNOCCUPIED MODE

When the Occupancy Control indicates the end of the Occupied mode, the compressor(s) and outdoor fan(s) will turn off (subject to minimum run-time) or the heating system will turn off. The SF and EF will continue to run for 2 minutes before turning off. After this, the ECW will turn off and the OA damper will close. The unit is now off.

Safety Switches

- *High Pressure Switch (HPS1)*: If HPS1 is open, compressor no. 1 will turn off and the controller will issue an alarm. After manually resetting HPS1, the HPS1 alarm will reset. Following a minimum time off delay, compressor no. 1 will turn on. If the controller records 3 high pressure start/restart failure incidents within 1 hour, compressor no. 1 is locked out and the controller will issue an alarm. The compressor lockout can be reset in the Equipment Touch display pad or by cycling the power of the controller. This sequence is the same for compressor no. 2, Y2, and HPS2.
- *Low Pressure Switch (LPS1)*: If LPS1 is open after the LPS1 bypass time, the controller will issue an alarm and compressor no. 1 turns off. After 30 seconds (fixed), the LPS1 alarm will reset. Following a minimum time off delay, compressor no. 1 will turn on. If the controller records 3 low pressure start/restart failure incidents within 1 hour, compressor no. 1 is locked out and the controller will issue an alarm. The compressor lockout can be reset in the Equipment Touch display pad or by cycling the power of the controller. This sequence is the same for compressor no. 2, Y2, and LPS2.
- *Condensate Overflow Switch*: When the condensate overflow switch (COFS) detects an overflow condition at the drain pan, the contact closes at the unit controller and the unit will disable the cooling system and issue an alarm.

SAFETY SHUTDOWN

Smoke Detector: When a smoke detector (SD) is provided, it is wired directly to the controller. If smoke is detected, the controller will shut down the unit. Other instances where shutdown will occur are as follows: if a compressor fails to start 3 times in an hour due to high/low pressure switch or DX leaving air temperature lock out, or if the controller detects an SAT sensor failure.

Energy Management Relay: The energy management relay (EMR) can be configured to force unoccupied mode or to force an emergency shutdown. When the EMR contact is open, the EMR signal is triggered and the unit will shutdown or go into unoccupied mode (depending on the configuration).

REFRIGERANT CHARGING

The 62L series units come from the factory with the appropriate operating charge of R-454B.

Charge adjustment might be necessary if subcooling temperatures are too high due to excess refrigerant in the system that is subsequently backed up in the condenser. This symptom could also indicate a failed TXV or line restriction. If there is no line restriction and the TXV is working correctly, reclaim enough R-454B refrigerant so the system ambient compensated pressure readings are at the desired levels. Use a refrigerant recovery unit to safely remove the refrigerant, because it is illegal to release R-454B refrigerant into the atmosphere. After the addition or removal of refrigerant, the unit must be allowed to stabilize for at least 10 minutes before reaching any conclusions if any other adjustments need to be made.

All 62L series units are equipped with hot gas reheat or liquid subcooling reheat. Operation of the reheat system must be disabled prior to charging unit. To disable, use the unit control interface to disable reheat operation, or disconnect the power or control signal to the reheat valve or solenoid assembly.

The type of unit and operation determines the ranges for liquid subcooling and evaporator superheat. The system is overcharged if the subcooling temperature is too high and the evaporator is fully loaded. High superheat results in increased subcooling. The system is defined as undercharged if the superheat is too high and the subcooling is too low.

To correct an undercharged system, add refrigerant to reduce the superheat and raise subcooling. If the subcooling is correct and the superheat is too high, the TXV may need adjustment to correct the superheat. When checking the charge, units with hot gas reheat must be checked with the hot gas reheat valves closed and the system in cooling mode. To confirm proper charge, the unit should be left in reheat mode to check for proper operation. See Tables 14 and 15 for proper charge levels.

Table 14 – Superheat and Subcooling - 100% OA

AMBIENT AIR TEMP.	95°F	85°F	75°F	65°F	55°F	45°F
Subcooling		8°F - 10°F				In heating mode.
Superheat		10°F - 13°F				In heating mode.

NOTE(S):

Subcooling readings must be taken with the reheat circuit disabled and in the cooling mode. On water-source units, water regulating valves need to be open 100%.

Circuit #1 Subcooling and Superheat readings must be taken with circuit #2 disabled/not running.

Circuit #2 Subcooling and Superheat readings must be taken with circuit #1 energized/running.

Table 15 – Superheat and Subcooling - Heat Pump

AMBIENT AIR TEMP.	95°F	85°F	75°F	65°F	55°F	45°F
Subcooling	8°F - 12°F		8°F - 10°F			In heating mode.
Superheat		6°F - 15°F				In heating mode.

NOTE(S):

Subcooling and Superheat readings must be taken with the reheat circuit disabled and in the cooling mode.

Step 16 – Unit Start-Up

Complete unit start-up. Refer to the unit Controls, Operation, and Start-up manual for start-up check lists and start-up instructions.

Step 17 – Test Mode and Fan Balancing

Carrier recommends all 62L unit undergo proper air balancing to verify unit supply and exhaust airflow. Consult the Controls, Operation, and Start-up manual.

Typical Wiring Diagrams

See Fig. 15-17 for typical wiring diagrams. See Fig. 18 and 19 for factory mounted convenience outlet diagrams.

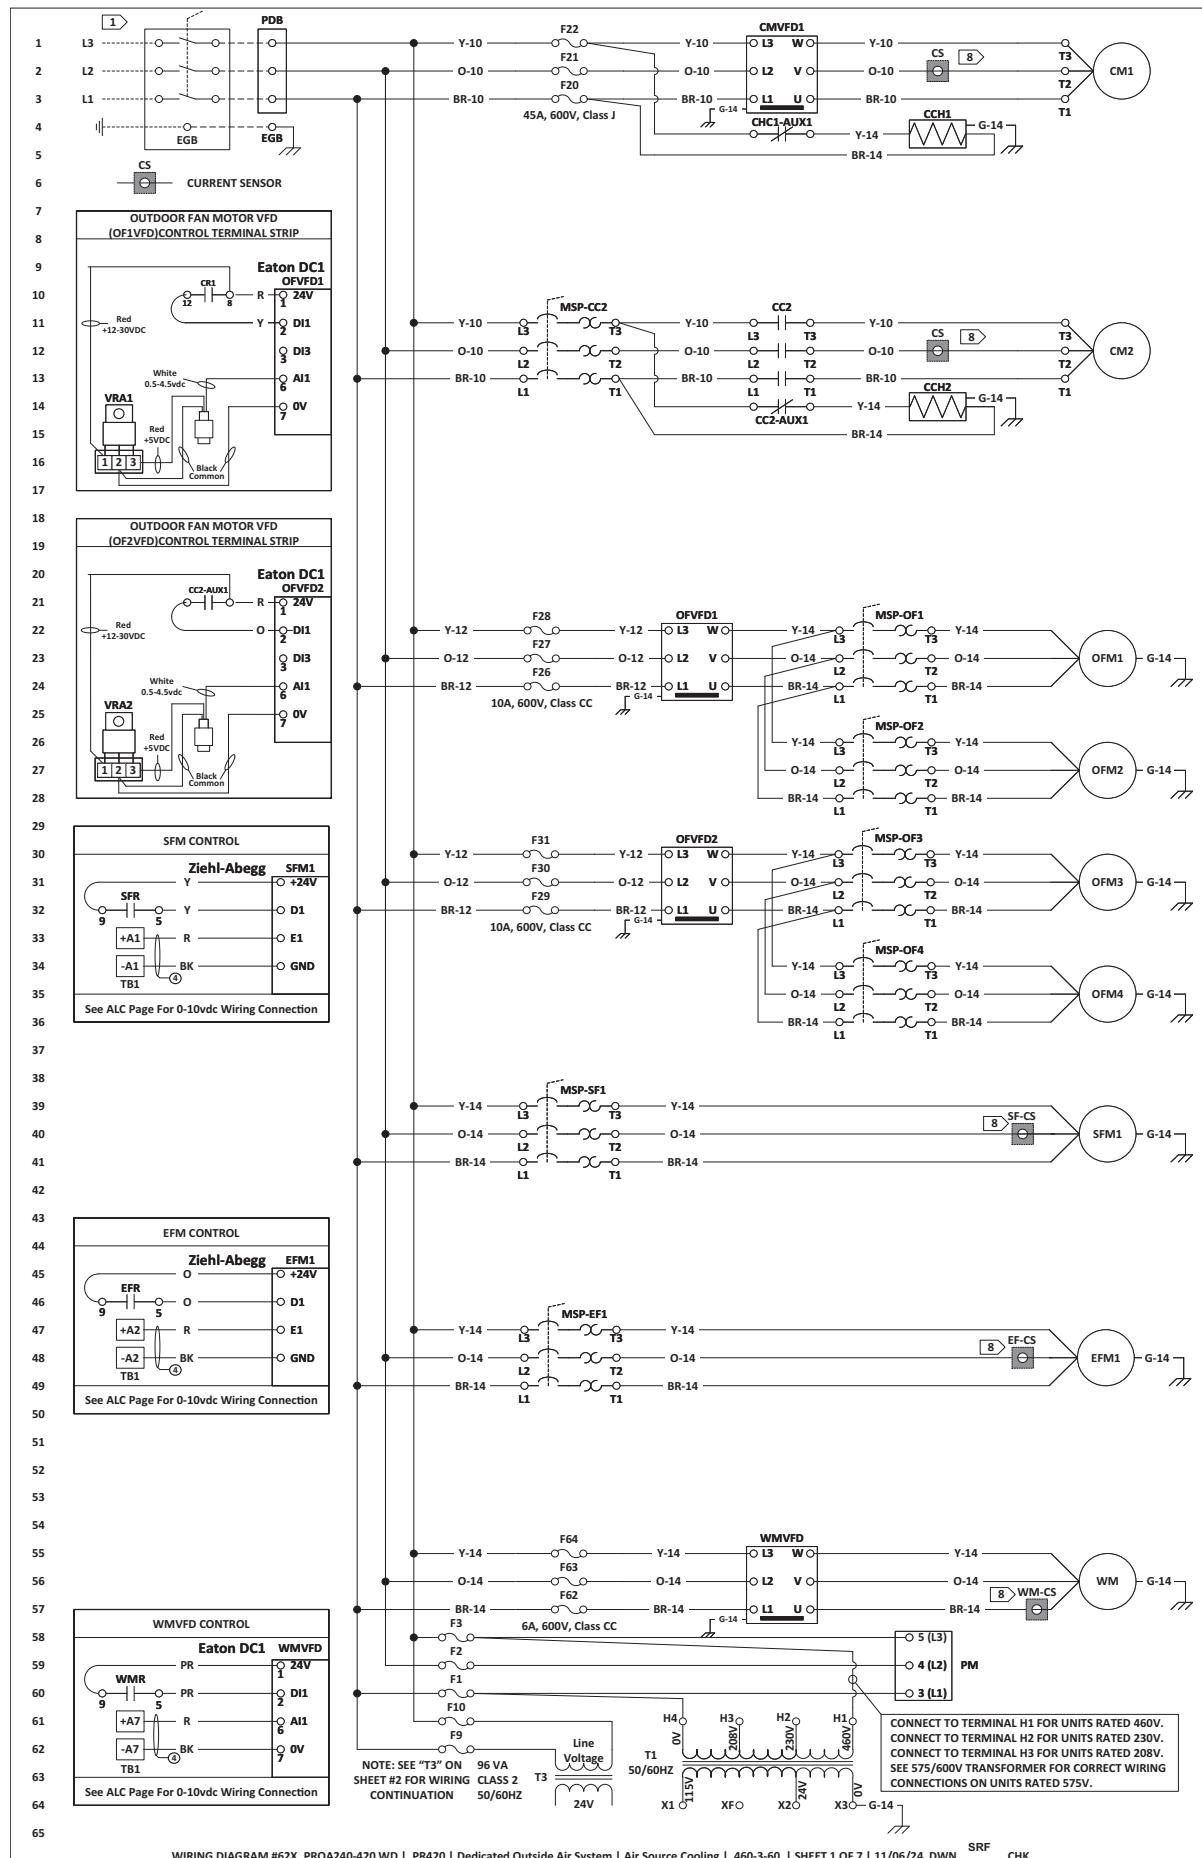


Fig. 15 – 62L (Air Cooled), A2L - WD Typical Wiring Diagram

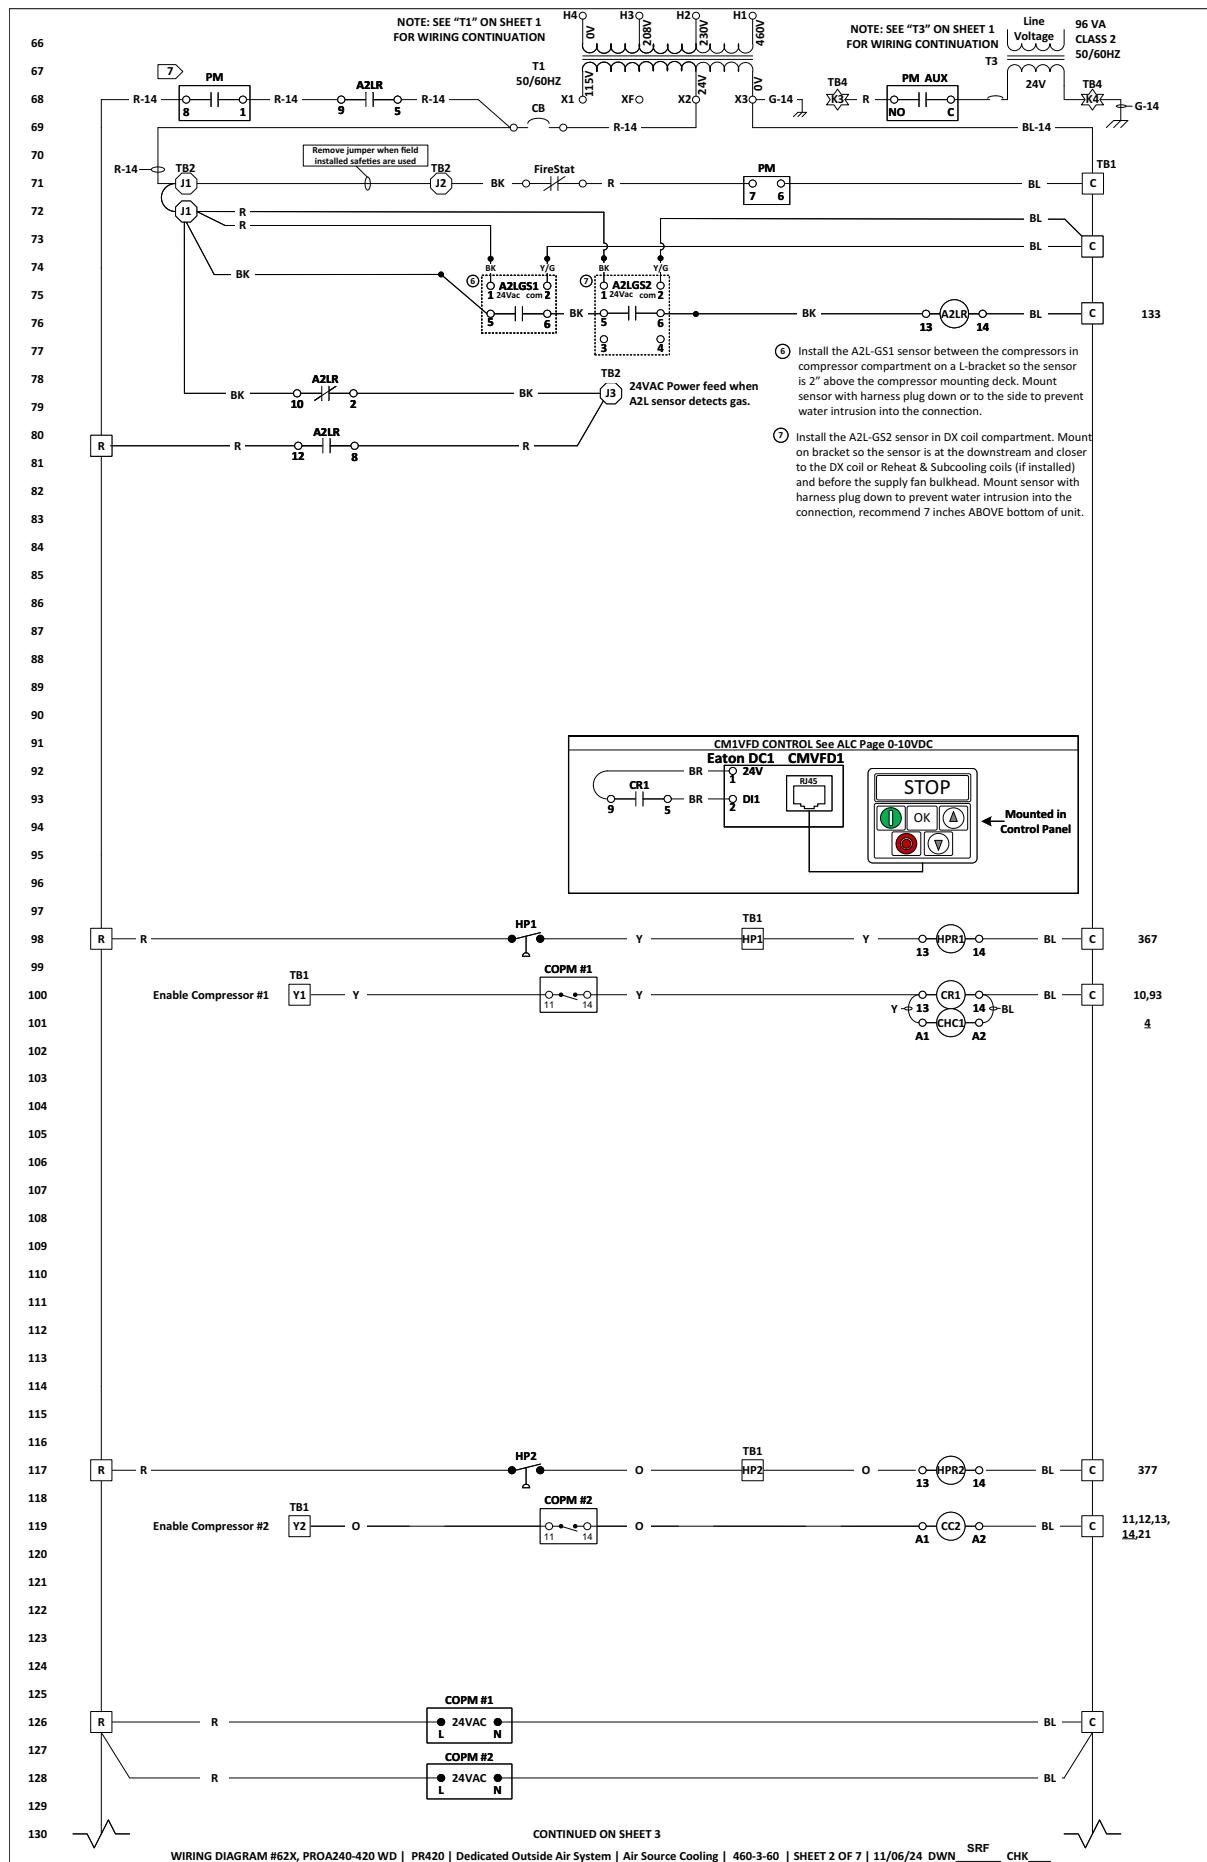


Fig. 15 – 62L (Air Cooled), A2L - WD Typical Wiring Diagram (cont)

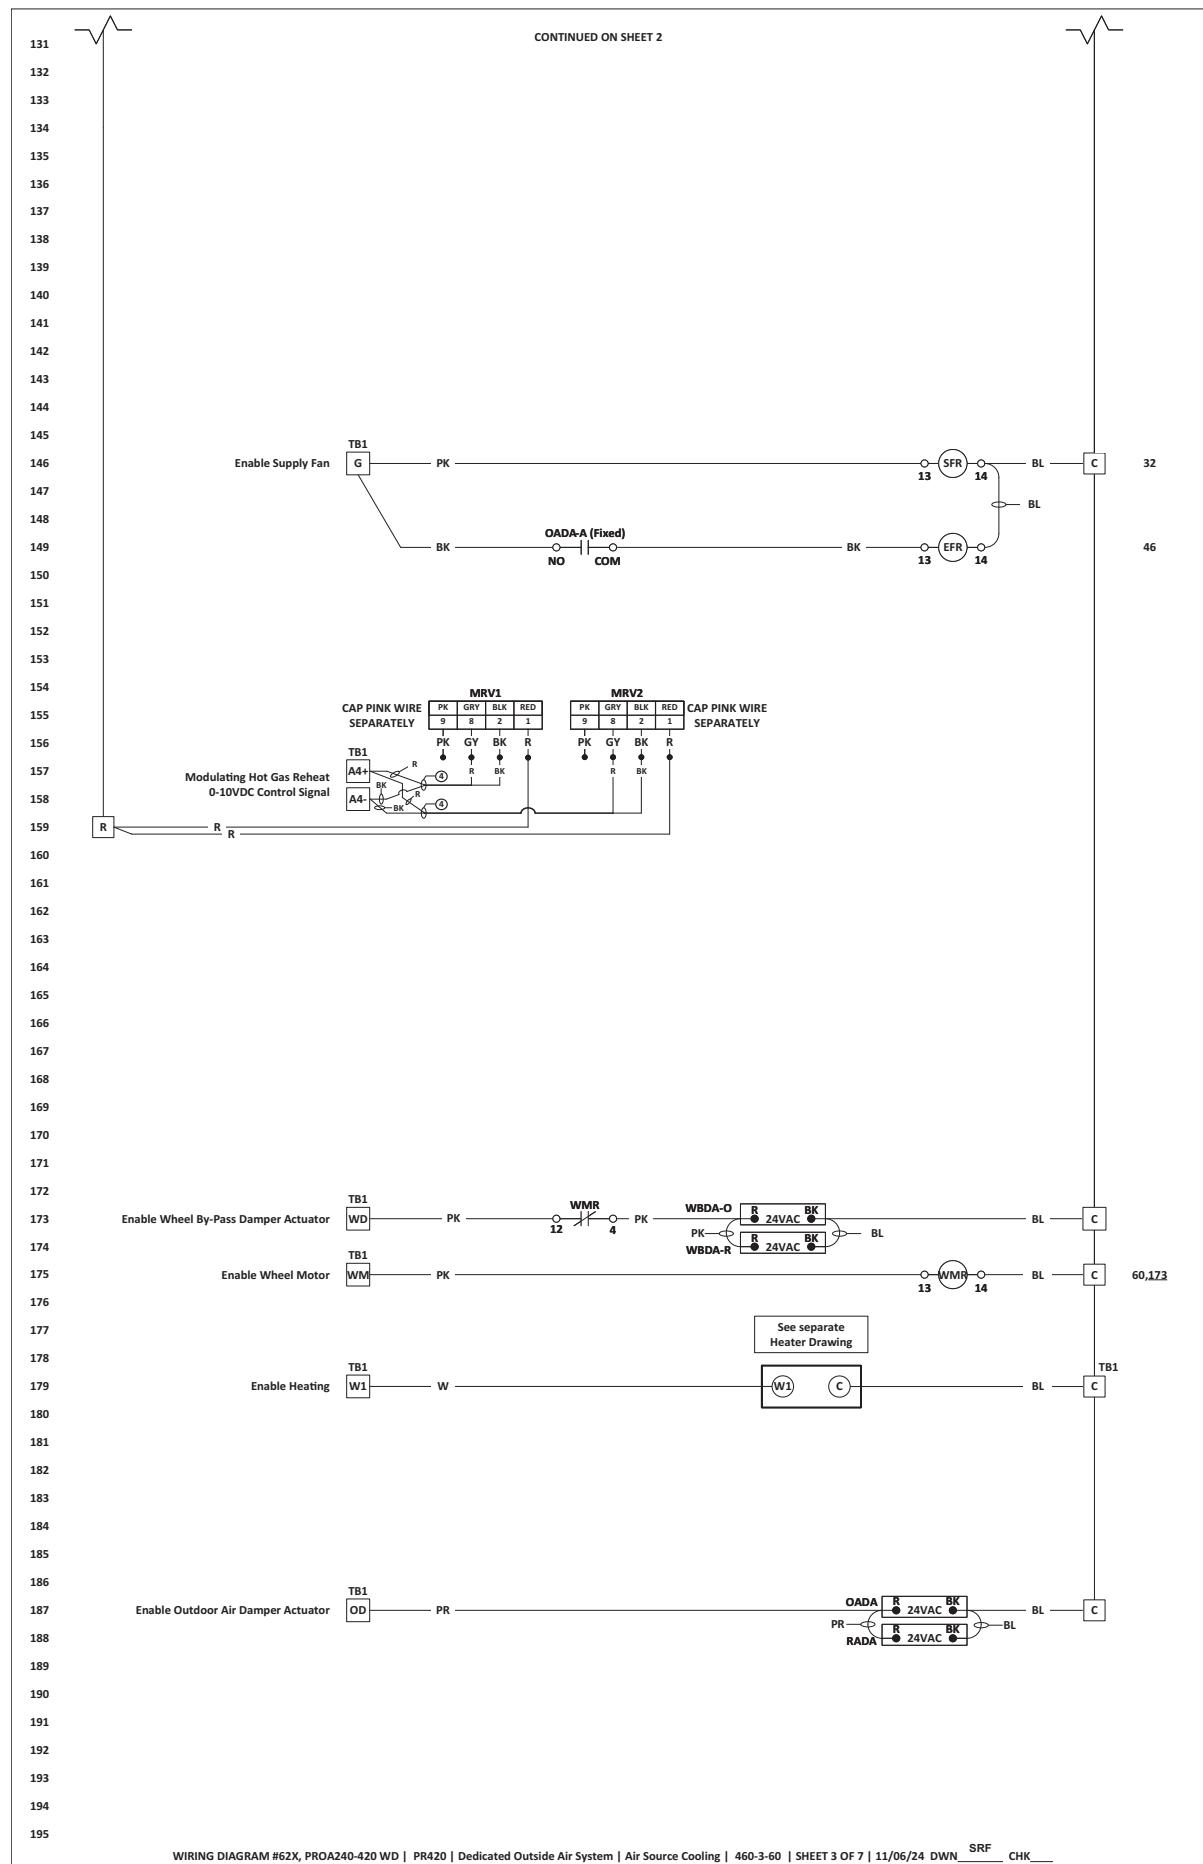


Fig. 15 – 62L (Air Cooled), A2L - WD Typical Wiring Diagram (cont)

196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260


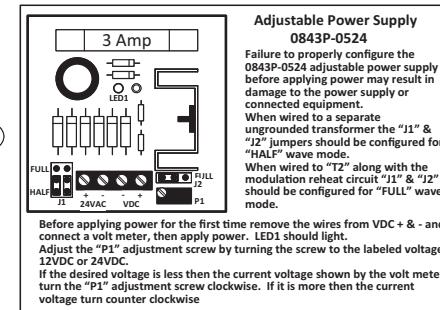
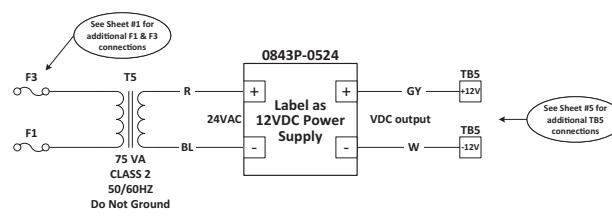


Fig. 15 – 62L (Air Cooled), A2L - WD Typical Wiring Diagram (cont)


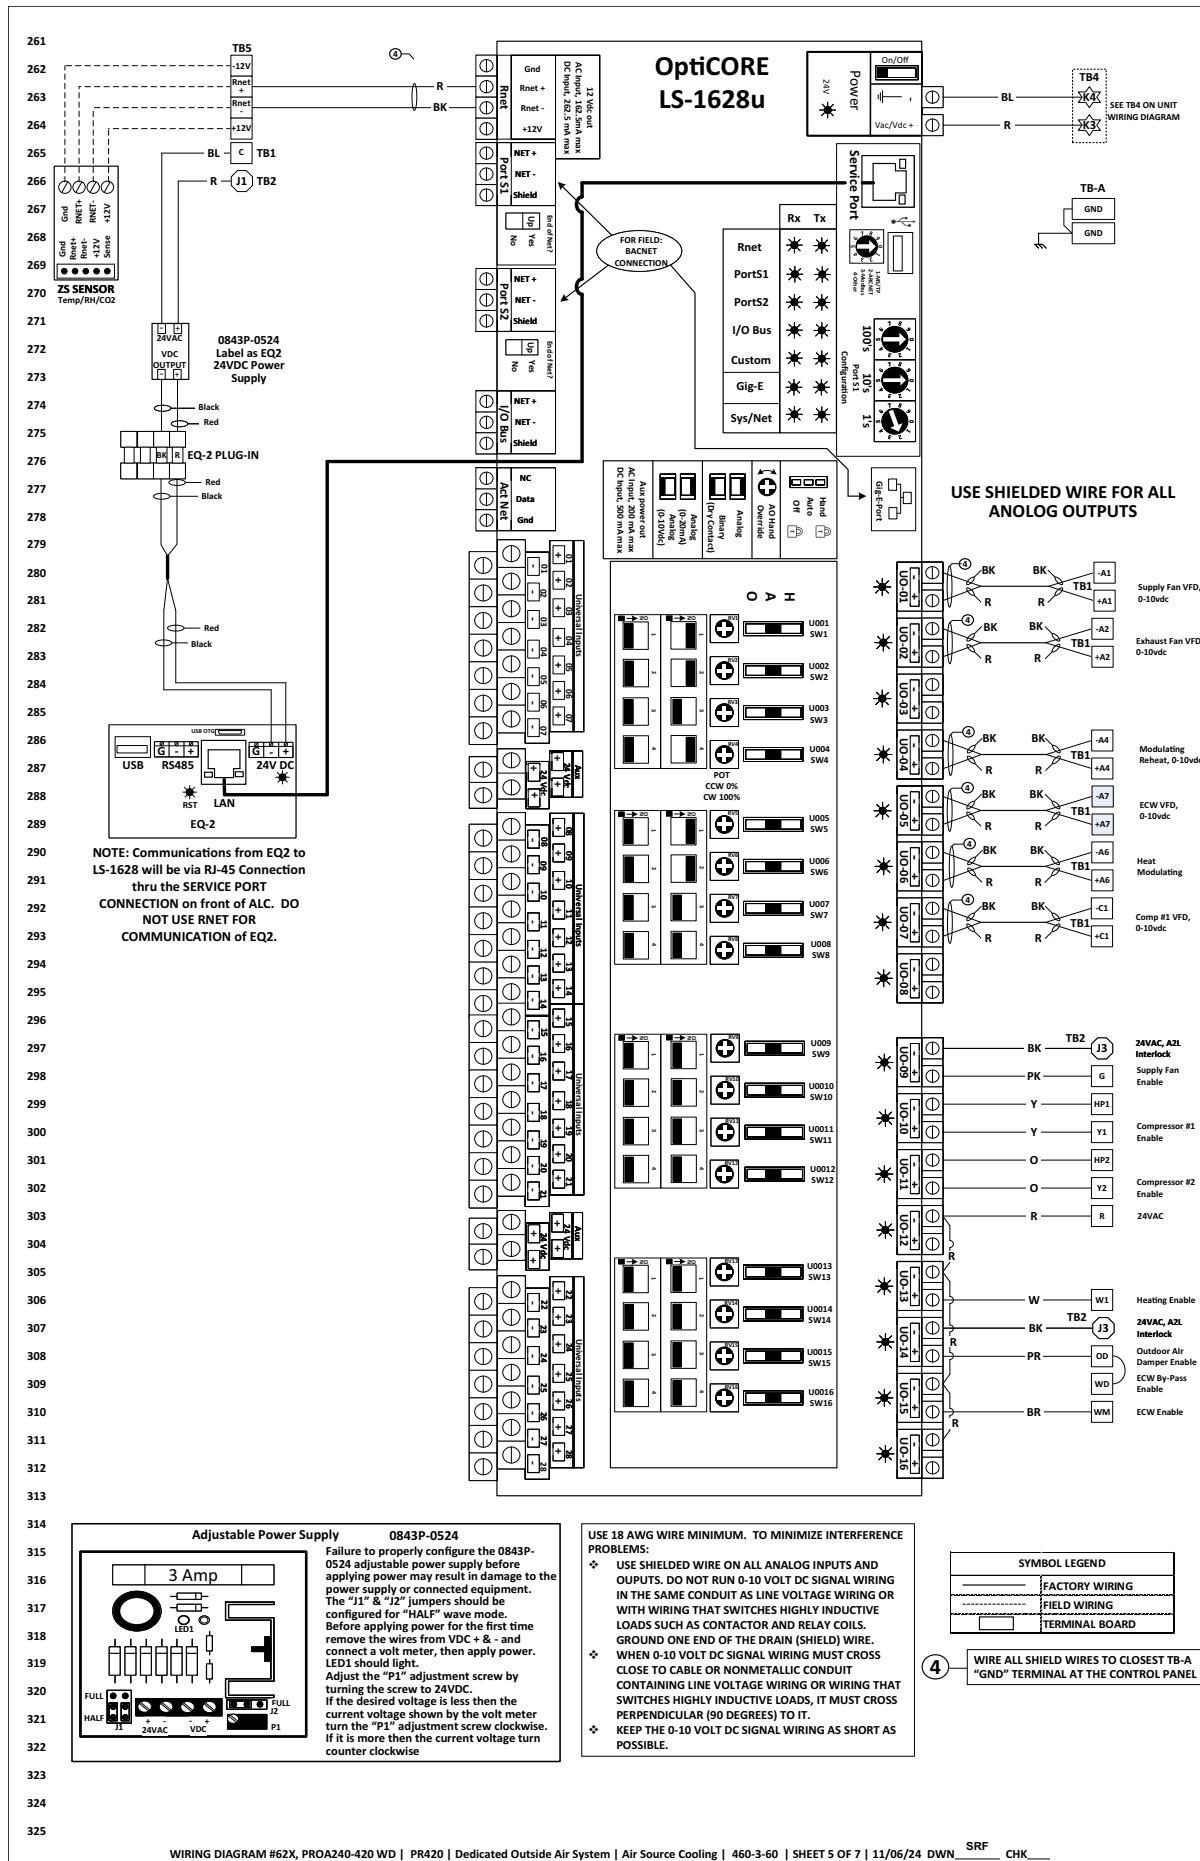


Fig. 15 – 62L (Air Cooled), A2L - WD Typical Wiring Diagram (cont)

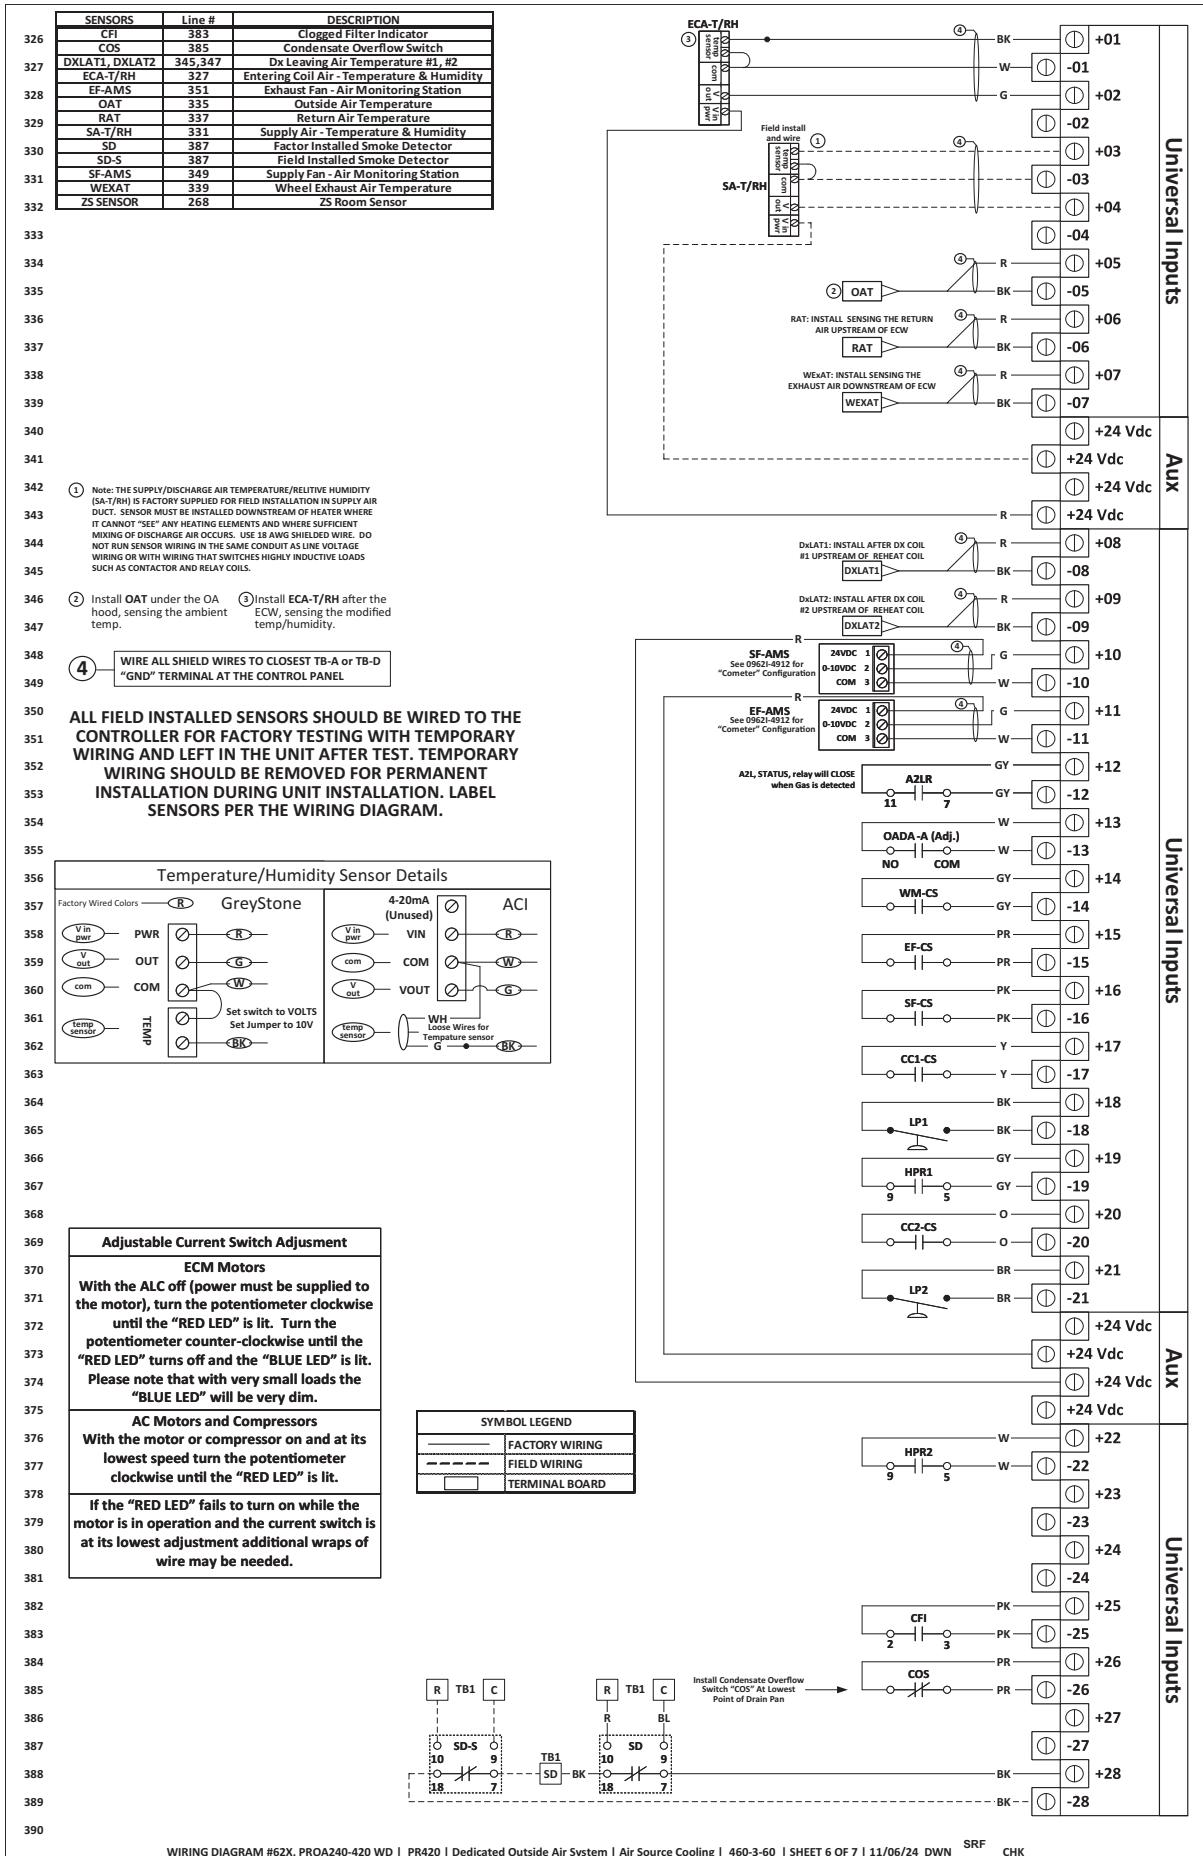

LEGEND - ITEMS INSIDE CONTROL PANEL				LEGEND - ITEMS OUTSIDE CONTROL PANEL			
ITEM	FUNCTIONAL DESIGNATION	LINE NUMBER	DESCRIPTION	ITEM	FUNCTIONAL DESIGNATION	LINE NUMBER	DESCRIPTION
101	CC1-CS	363	Compressor #1 - Current Switch	101	CCH1	4	Crankcase Heater #1
102	CC2	119	Compressor Contactor no. 2	102	CCH2	14	Crank Case Heater #2
103	CC2-AUX1	#	CC2 - Auxiliary Contact no. 1	103	CM1	2	Compressor Motor No.1
104	CC2-CS	369	Compressor #2 - Current Switch	104	CM2	12	Compressor Motor No.2
105	CHC1	101	Crankcase Heater Contactor #1	105	COPM #1	100,126	Compressor Overload Protection Module #1
106	CHC1-AUX1	#	CHC1 - Auxiliary Contact no. 1	106	COPM #2	119,128	Compressor Overload Protection Module #2
107	CMVFD1	1,92	Compressor #1 VFD	107	EFM1	45,48	Exhaust Fan Motor #1
108	CR1	100	Compressor Relay #1	108	HP1	98	High Pressure Switch #1
109	EF-CS	359	Exhaust Fan - Current Switch	109	HP2	117	High Pressure Switch #2
110	EFR	149	Exhaust Fan Relay	110	LP1	365	Low Pressure Switch #1
111	EGB	4	Equipment Grounding Bar	111	LP2	371	Low Pressure Switch #2
112	HPR1, HPR2	98,117	High Pressure Relay #1, #2	112	MRV1, MRV2	155,155	Modulating Reheat Valve #1, #2
113	MSP-CC2	11	Motor Starter Protection - CC2	113	OADA	149,187,355	Outside Air Damper Actuator
114	MSP-EF1	47	Motor Starter Protection - Exhaust Motor #1	114	OFM1	23	Outdoor Fan Motor #1
115	MSP-OF1	22	Motor Starter Protection- Outdoor Fan no.1	115	OFM2	27	Outdoor Fan Motor #2
116	MSP-OF2	26	Motor Starter Protection- Outdoor Fan no.2	116	OFM3	31	Outdoor Fan Motor #3
117	MSP-OF3	30	Motor Starter Protection- Outdoor Fan no.3	117	OFM4	35	Outdoor Fan Motor #4
118	MSP-OF4	34	Motor Starter Protection- Outdoor Fan no.4	118	RADA	188	Return Air Damper Actuator
119	MSP-SF1	39	Motor Starter Protection - Supply Motor #1	119	SFM1	31,40	Supply Fan Motor #1
120	OFVFD1, OFVFD2	10,22,21,30	Outdoor Fan VFD #1, #2	120	WBDA-O	173	Wheel Bypass Damper Actuator - OA
121	PDB	1,234	Power Distribution Block	121	WBDA-R	174	Wheel Bypass Damper Actuator - RA
122	PM	59,68,68,71	Power/Phase Monitor	122	WM	56	Wheel Motor
123	SF-CS	361	Supply Fan Current Switch				
124	SFR	146	Supply Fan Motor Relay				
125	VRA1, VRA2	15,26	Voltage Regulator Assembly #1, #2				
126	WM-CS	357	Wheel Motor - Current Sensor				
127	WMR	175	Wheel Motor Relay				
128	WMVFD	55,59	Wheel Motor Variable Frequency Drive				

SEE LINE NUMBER TO THE RIGHT OF CONTACTOR COIL ON WIRING DIAGRAM.

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

1 FIELD POWER SUPPLY 208/230/460/575-3-60. MINIMUM CIRCUIT AMPACITY AND MAXIMUM SIZE AND TYPE OF BRANCH-CIRCUIT SHORT-CIRCUIT AND GROUND-FAULT PROTECTION PER UNIT RATING PLATE. PROVIDE DISCONNECTING MEANS AS REQUIRED.

2 TYPICAL MOTORS AND COMPRESSORS SHOWN. SEE CONNECTION DIAGRAM ON MOTOR OR COMPRESSOR FOR ACTUAL WIRING DETAIL.

5 SET TIME DELAY PERIOD TO 5-MINUTES. UPON INITIAL APPLICATION OF POWER TO "TD", CONTACTOR "CC" IS ENERGIZED AFTER A 5-MINUTE START DELAY. WHEN POWER IS REMOVED, A LOCKOUT CONDITION AND 5-MINUTE TIME DELAY PERIOD (ADJUSTABLE) IS INITIATED. DURING THIS PERIOD, CONTACTOR "CC" CANNOT BE ENERGIZED.

8 WRAP WIRE THREE TIMES THRU CURRENT SENSOR IF WIRE IS 14 GAUGE. WRAP WIRE TWO TIMES THRU CURRENT SENSRO IF WIRE IS 12 GAUGE.

WIRING DIAGRAM #62X, PROA240-420 WD | PR420 | Dedicated Outside Air System | Air Source Cooling | 460-3-60 | SHEET 7 OF 7 | 11/06/24 DWN SRF CHK

Fig. 15 – 62L (Air Cooled), A2L - WD Typical Wiring Diagram (cont)

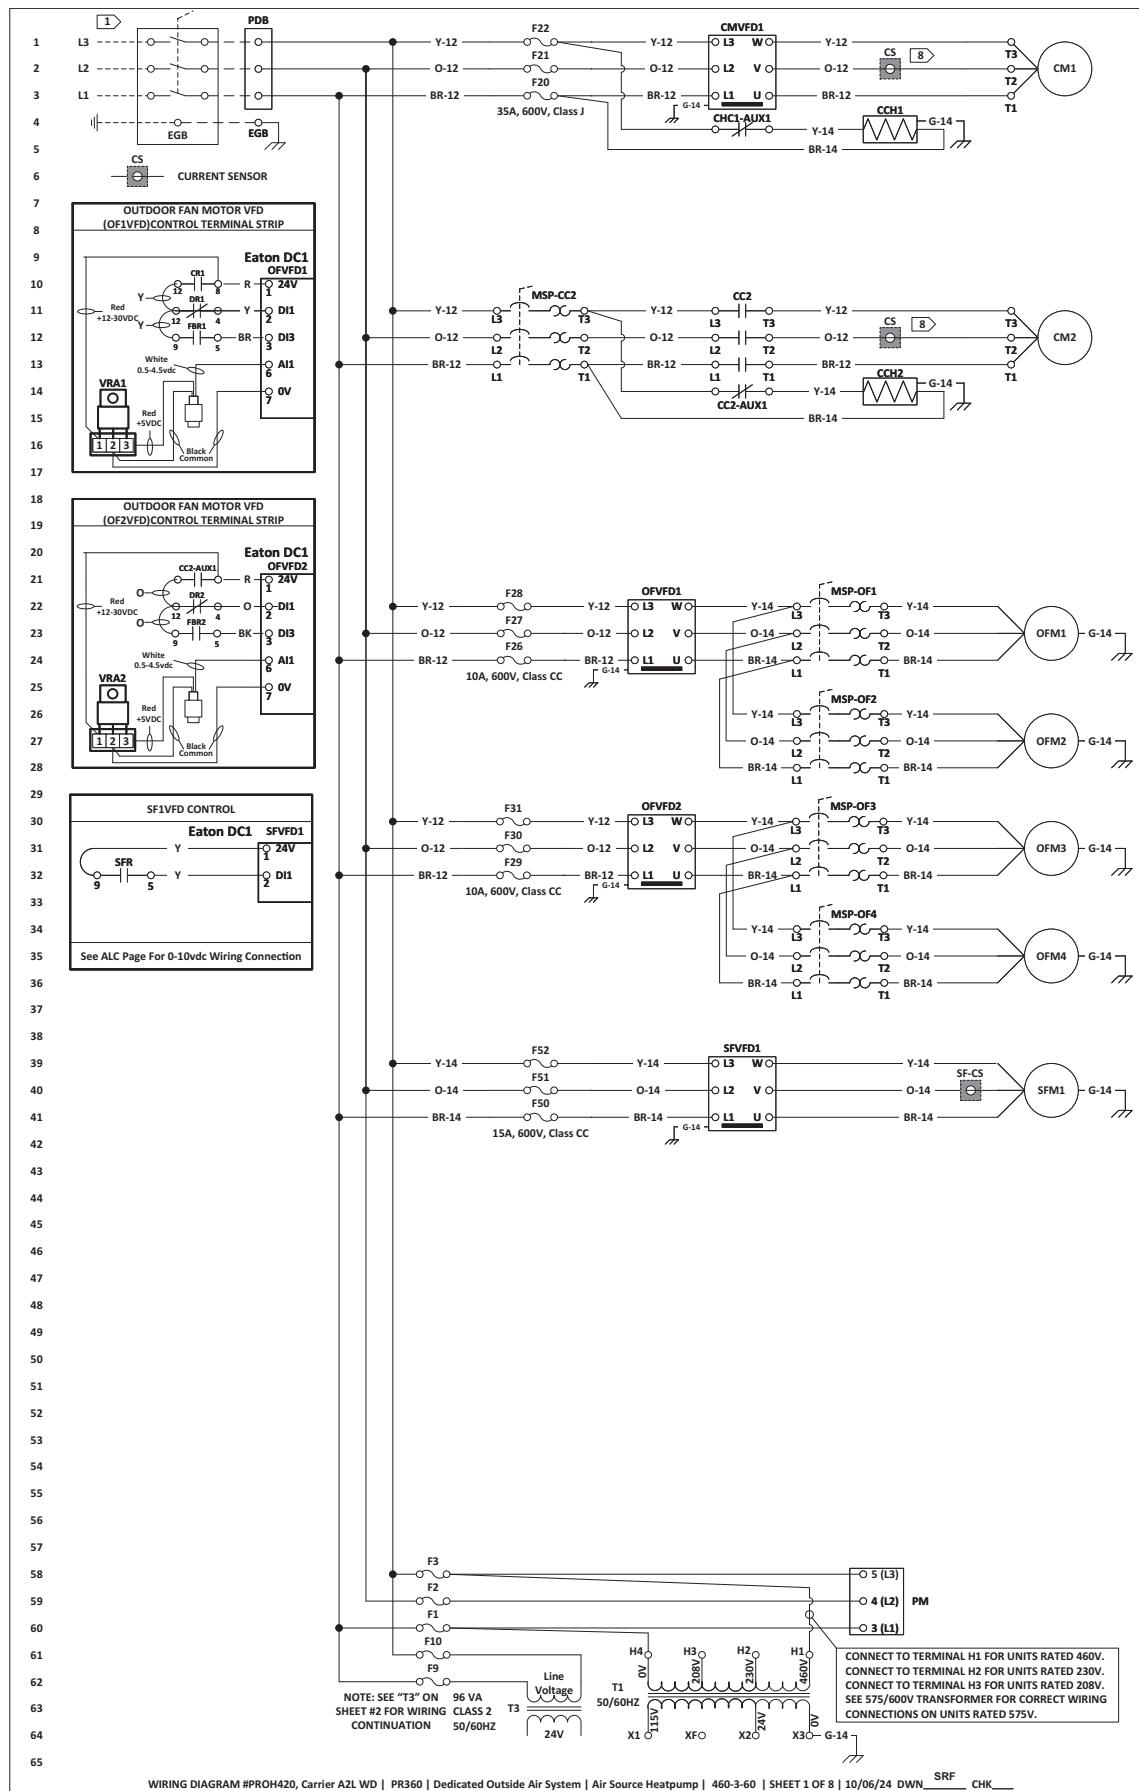


Fig. 16 – 62L (ASHP), A2L - WD Typical Wiring Diagram

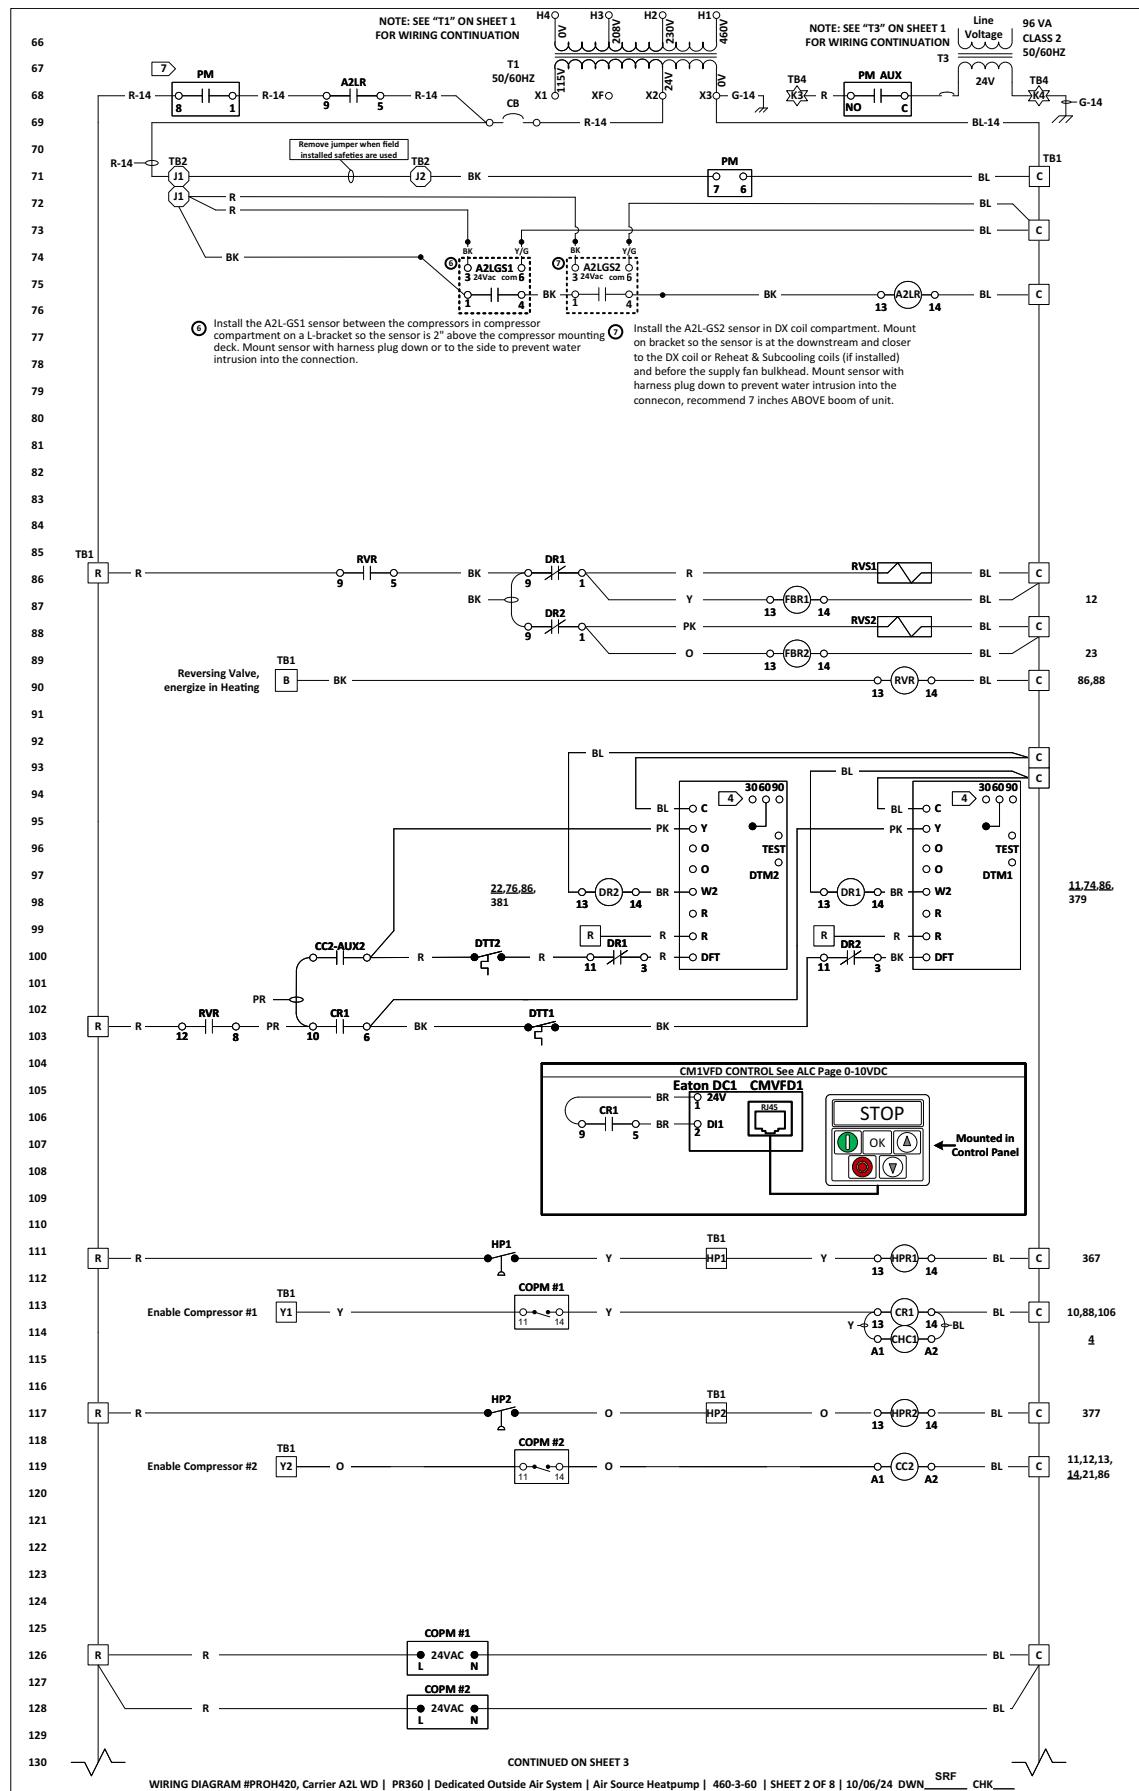


Fig. 16 – 62L (ASHP), A2L - WD Typical Wiring Diagram (cont)

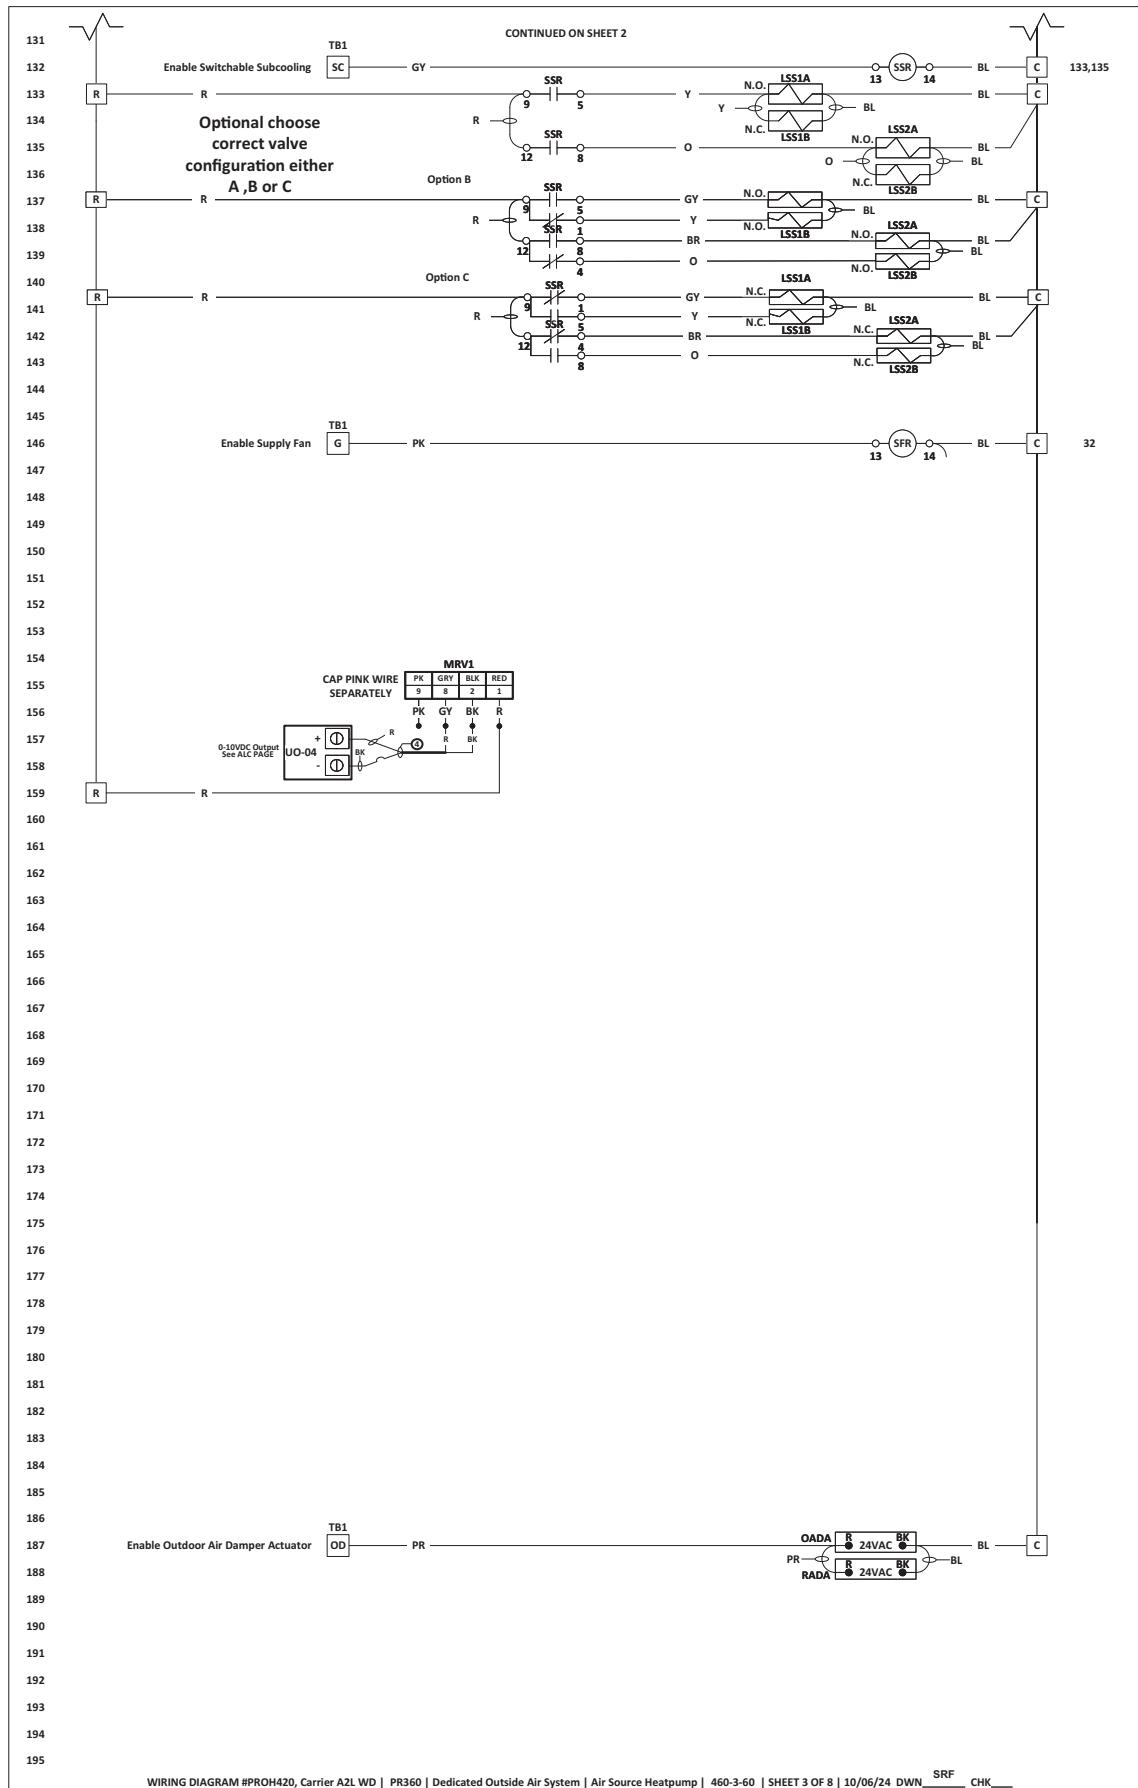


Fig. 16 — 62L (ASHP), A2L - WD Typical Wiring Diagram (cont)


196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245

WIRING DIAGRAM FOR 62L ASHP (A2L/WD/WD/WD)

Calibration and Setup

- Set the INPUT RANGE jumper to the correct position for the signal to be used (0-15 V).
- Set the deadband jumper to the desired value (3%). This can be changed at any time with the power on.
- Connect the power supply and the input signal to the correct terminals.
- Turn on the power and the POWER LED will light.
- Apply an input signal equal to the R1 setpoint (0.5V).
- Adjust the R1 pot clockwise until the RELAY1 LED goes out, then slowly adjust the R1 pot counterclockwise until the LED just lights.
- Test the operation by increasing the input signal and watch as R1 turns on at the selected setpoints.
- Then decrease the signal and watch as the relays turn off at the selected setpoints minus the deadband.

Auxiliary Heat is "ON" in Defrost Mode.

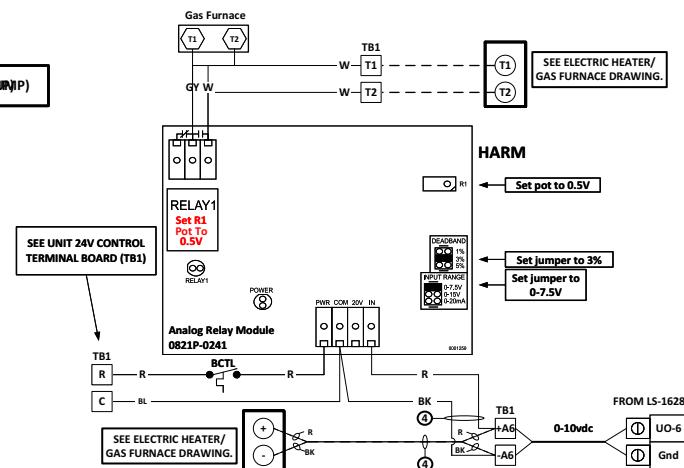

WIRING DIAGRAM #PROH420, Carrier A2L WD | PR360 | Dedicated Outside Air System | Air Source Heatpump | 460-3-60 | SHEET 4 OF 8 | 10/06/24 DWN SRF CHK

Fig. 16 — 62L (ASHP), A2L - WD Typical Wiring Diagram (cont)


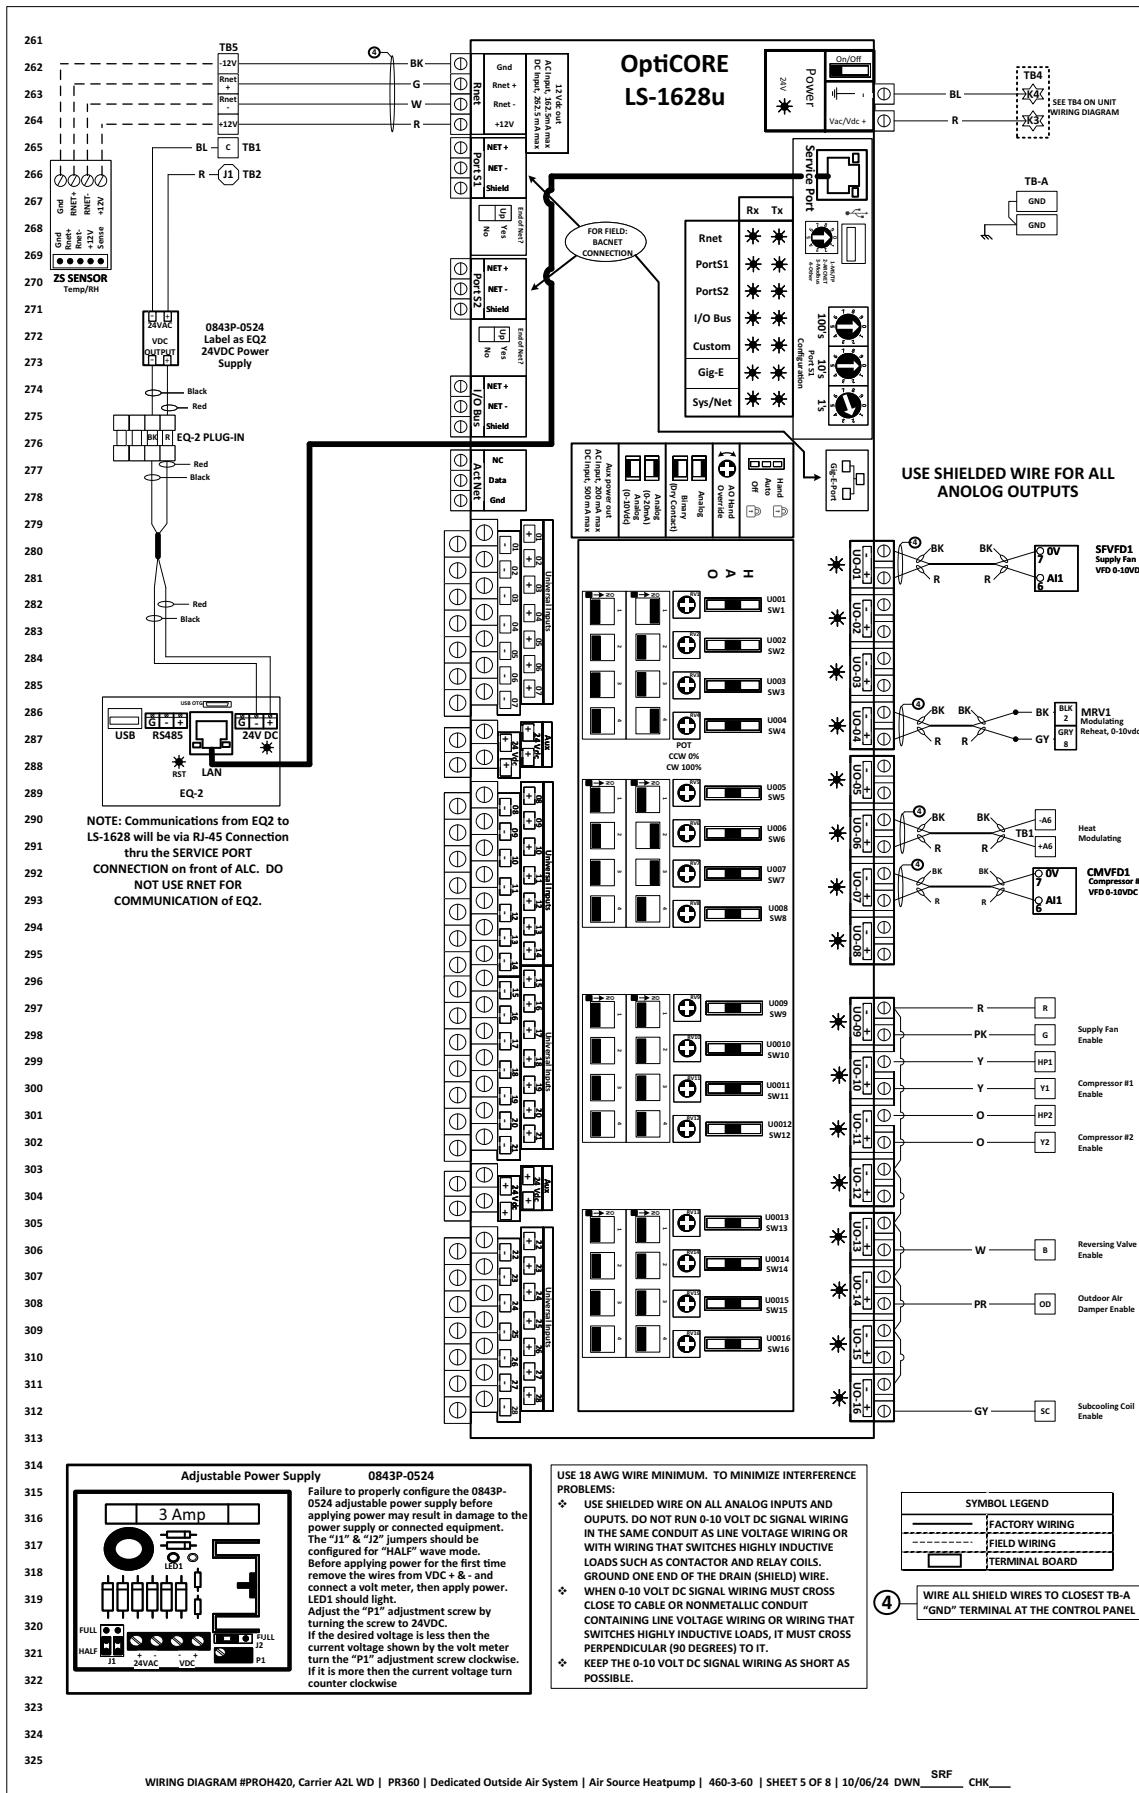


Fig. 16 — 62L (ASHP), A2L - WD Typical Wiring Diagram (cont)

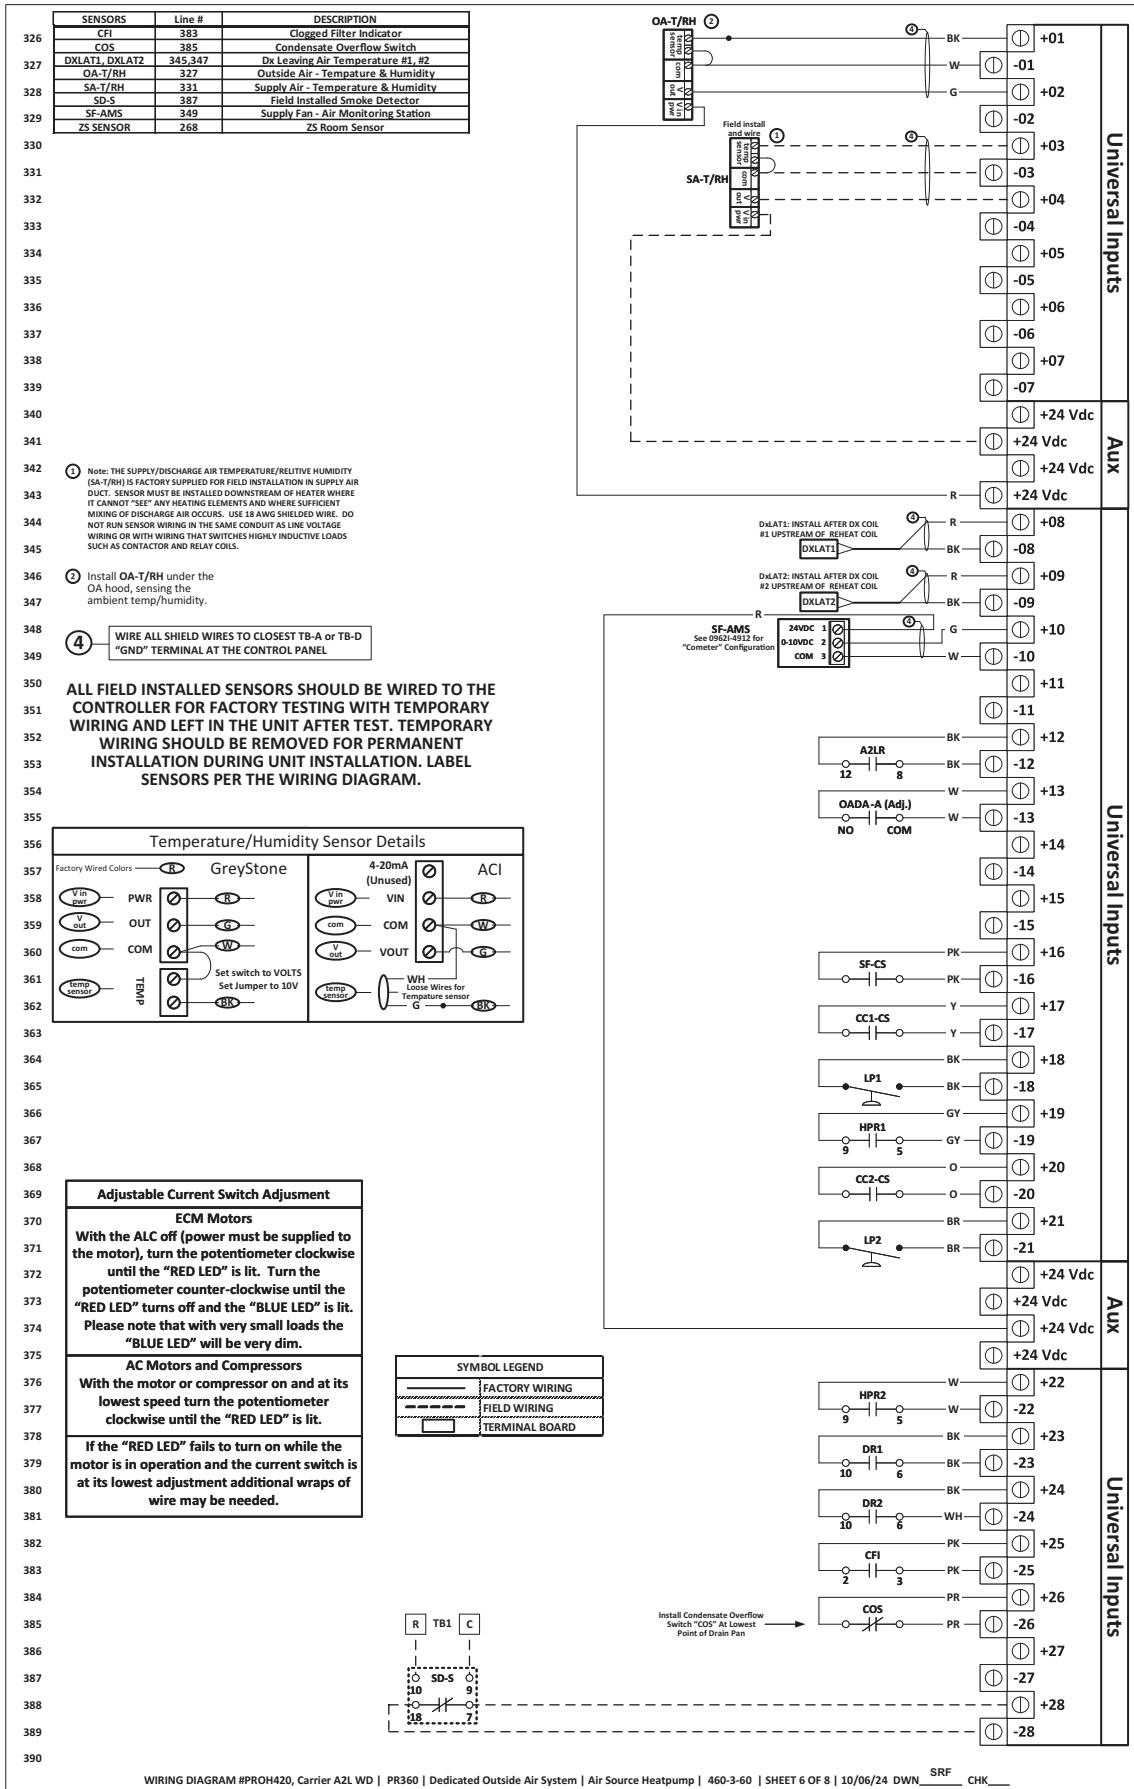

LEGEND - ITEMS INSIDE CONTROL PANEL				LEGEND - ITEMS OUTSIDE CONTROL PANEL			
ITEM	FUNCTIONAL DESIGNATION	LINE NUMBER	DESCRIPTION	ITEM	FUNCTIONAL DESIGNATION	LINE NUMBER	DESCRIPTION
391	A2LR	75	A2L Sensor Relay	101	A2LGS1	75	A2L GAS SENSOR #1
392	CC1-CS	363	Compressor #1 - Current Switch	102	A2LGS2	75	A2L GAS SENSOR #2
393	CC2	119	Compressor Contactor no. 2	103	BCTL	256	Blower Compartment Thermal Limit
394	CC2-AUX1, CC2-AUX2	#	CC2 - Auxiliary Contacts no. 1 and 2	104	CCH1	4	Crankcase Heater #1
395	CHC1	114	Crankcase Heater Contactor #1	105	CCH2	14	Crank Case Heater #2
396	CHC1-AUX1	#	CHC1 - Auxiliary Contact no. 1	106	CM1	2	Compressor Motor No.1
397	CMVF1	1,105,292	Compressor VFD	107	CM2	12	Compressor Motor No.2
398	CR1	113	A2L RELAY #1	108	COPM#1	113,126	Compressor Overload Protection Module #1
399	DR1, DR2	83, 83	Defrost Relay #1, #2	109	COPM#2	113,128	Compressor Overload Protection Module #2
400	DTM1, DTM2	83,83	Defrost Timer #1, #2	110	DT1, DTT2	87,85	Defrost Timer #1, #2
401	EGB	4	Equipment Grounding Bar	111	HP1	111	High Pressure Switch #1
402	EBR1, EBR2	87, 89	Fan Bypass Relay #1, #2	112	HP2	117	High Pressure Switch #2
403	HARM	247	Heat Analog Relay Module	113	LP1	365	Low Pressure Switch #1
404	HPR1, HPR2	111, 117	High Pressure Relay #1, #2	114	LP2	371	Low Pressure Switch #2
405	MSP-CC2	11	Motor Starter Protection - CC2	115	LSS1A, LSS1B	133,134	Liquid Sub-Cooling Solenoid no. 1A, 1B
406	MSP-OF1	22	Motor Starter Protection- Outdoor Fan no. 1	116	LSS2A, LSS2B	135,136	Liquid Sub-Cooling Solenoid no. 2A, 2B
407	MSP-OF2	26	Motor Starter Protection- Outdoor Fan no. 2	117	MRV1	155	Modulating Reheat Valve #1
408	MSP-OF3	30	Motor Starter Protection- Outdoor Fan no. 3	118	OADA	187,355	Outside Air Damper Actuator
409	MSP-OF4	34	Motor Starter Protection- Outdoor Fan no. 4	119	OFM1	23	Outdoor Fan Motor #1
410	OFVFD1, OFVFD2	10,22,21,30	Outdoor Fan VFD #1, #2	120	OFM2	27	Outdoor Fan Motor #2
411	PDB	1,456	Power Distribution Block	121	OFM3	31	Outdoor Fan Motor #3
412	PM	59,68,68,71	Power/Phase Monitor	122	OFM4	35	Outdoor Fan Motor #4
413	RVR	90	Reversing Valve Relay	123	RADA	188	Return Air Damper Actuator
414	SF-CS	361	Supply Fan - Current Switch	124	RV51, RV52	86,88	Reversing Valve #1, #2
415	SFR	146	Supply Fan Motor Relay	125	SEM1	40	Supply Fan Motor #1
416	SVFD1	31,39,280	Supply Fan - Variable Frequency Drive #1				
417	SS1	1	Switchable Subpanel Relay				
418	V208/460/573-60	19,26	Voltage Transformer Accessible #1, #2				
419	# SEE LINE NUMBER TO THE RIGHT OF CONTACTOR COIL ON WIRING DIAGRAM.						
420							
421							
422							
423							
424							
425							
426							
427							
428							
429							
430							
431							
432							
433	FUSE TABLE						
434	FUSE NO.	CLASS	VAC	AMPS-208/230V	AMPS-460V	XFMR	TIME DELAY
435	F1, F3	CC	600	3	2	350VA	YES
436		CC	600	2	1.5	250VA	YES
437		CC	600	2	1.5	200VA	YES
438		CC	600	1.5	3/4	150VA	YES
439	F2, F9, F10	CC	600	1	1	N/A	YES
440		CC	600	16	16	350VA	YES
441		CC	600	10	10	250VA	YES
442		CC	600	10	10	200VA	YES
443	1) FIELD POWER SUPPLY 208/230/460/573-60. MINIMUM CIRCUIT AMPACITY AND MAXIMUM SIZE AND TYPE OF BRANCH-CIRCUIT SHORT-CIRCUIT AND GROUND-FAULT PROTECTION PER UNIT RATING PLATE. PROVIDE DISCONNECTING MEANS AS REQUIRED.						
444	2) TYPICAL MOTORS AND COMPRESSORS SHOWN. SEE CONNECTION DIAGRAM ON MOTOR OR COMPRESSOR FOR ACTUAL WIRING DETAIL.						
445							
446							
447							
448							
449							
450							
451							
452							
453							
454							
455							
	WIRING DIAGRAM #PROH420, Carrier A2L WD PR360 Dedicated Outside Air System Air Source Heatpump 460-3-60 SHEET 7 OF 8 10/06/24 DWN_____ SRF_____ CHK_____						
	5) SET TIME DELAY PERIOD TO 5-MINUTES. UPON INITIAL APPLICATION OF POWER TO "TD", CONTACTOR "CC" IS ENERGIZED AFTER A 5-MINUTE START DELAY. WHEN POWER IS REMOVED, A LOCKOUT CONDITION AND 5-MINUTE TIME DELAY PERIOD (ADJUSTABLE) IS INITIATED. DURING THIS PERIOD, CONTACTOR "CC" CANNOT BE ENERGIZED.						
	8) WRAP WIRE THREE TIMES THRU CURRENT SENSOR IF WIRE IS 14 GAUGE. WRAP WIRE TWO TIMES THRU CURRENT SENSRO IF WIRE IS 12 GAUGE.						
	SYMBOL LEGEND						
	FACTORY WIRING		NORMALLY OPEN CONTACTS				
	FIELD WIRING		NORMALLYCLOSED CONTACTS				
	EARTH GROUND		IDENTIFIABLE TERMINAL				
	CHASSIS (PANEL) GROUND		NON-IDENTIFIABLE TERMINAL, OTHER WIRE JUNCTIONS, INCLUDING SCHEMATIC				
	COIL		●				
	WIRE COLOR LEGEND						
	ABBREVIATION	COLOR					
	8K	BLACK					
	BL	BLUE					
	BR	BROWN					
	G	GREEN					
	O	ORANGE					
	PK	PINK					
	PR	PURPLE					
	R	RED					
	W	WHITE					
	Y	YELLOW					
	NOTE: NUMBER PLACED AFTER DASH FOLLOWING COLOR CODE INDICATES WIRE GAGE. EX. - BK-12 IS A BLACK, 12 AWG WIRE.						
	NO NUMBER AFTER COLOR CODE INDICATES 18 AWG WIRE. EX - BK IS A BLACK 18 AWG WIRE.						

Fig. 16 — 62L (ASHP), A2L - WD Typical Wiring Diagram (cont)

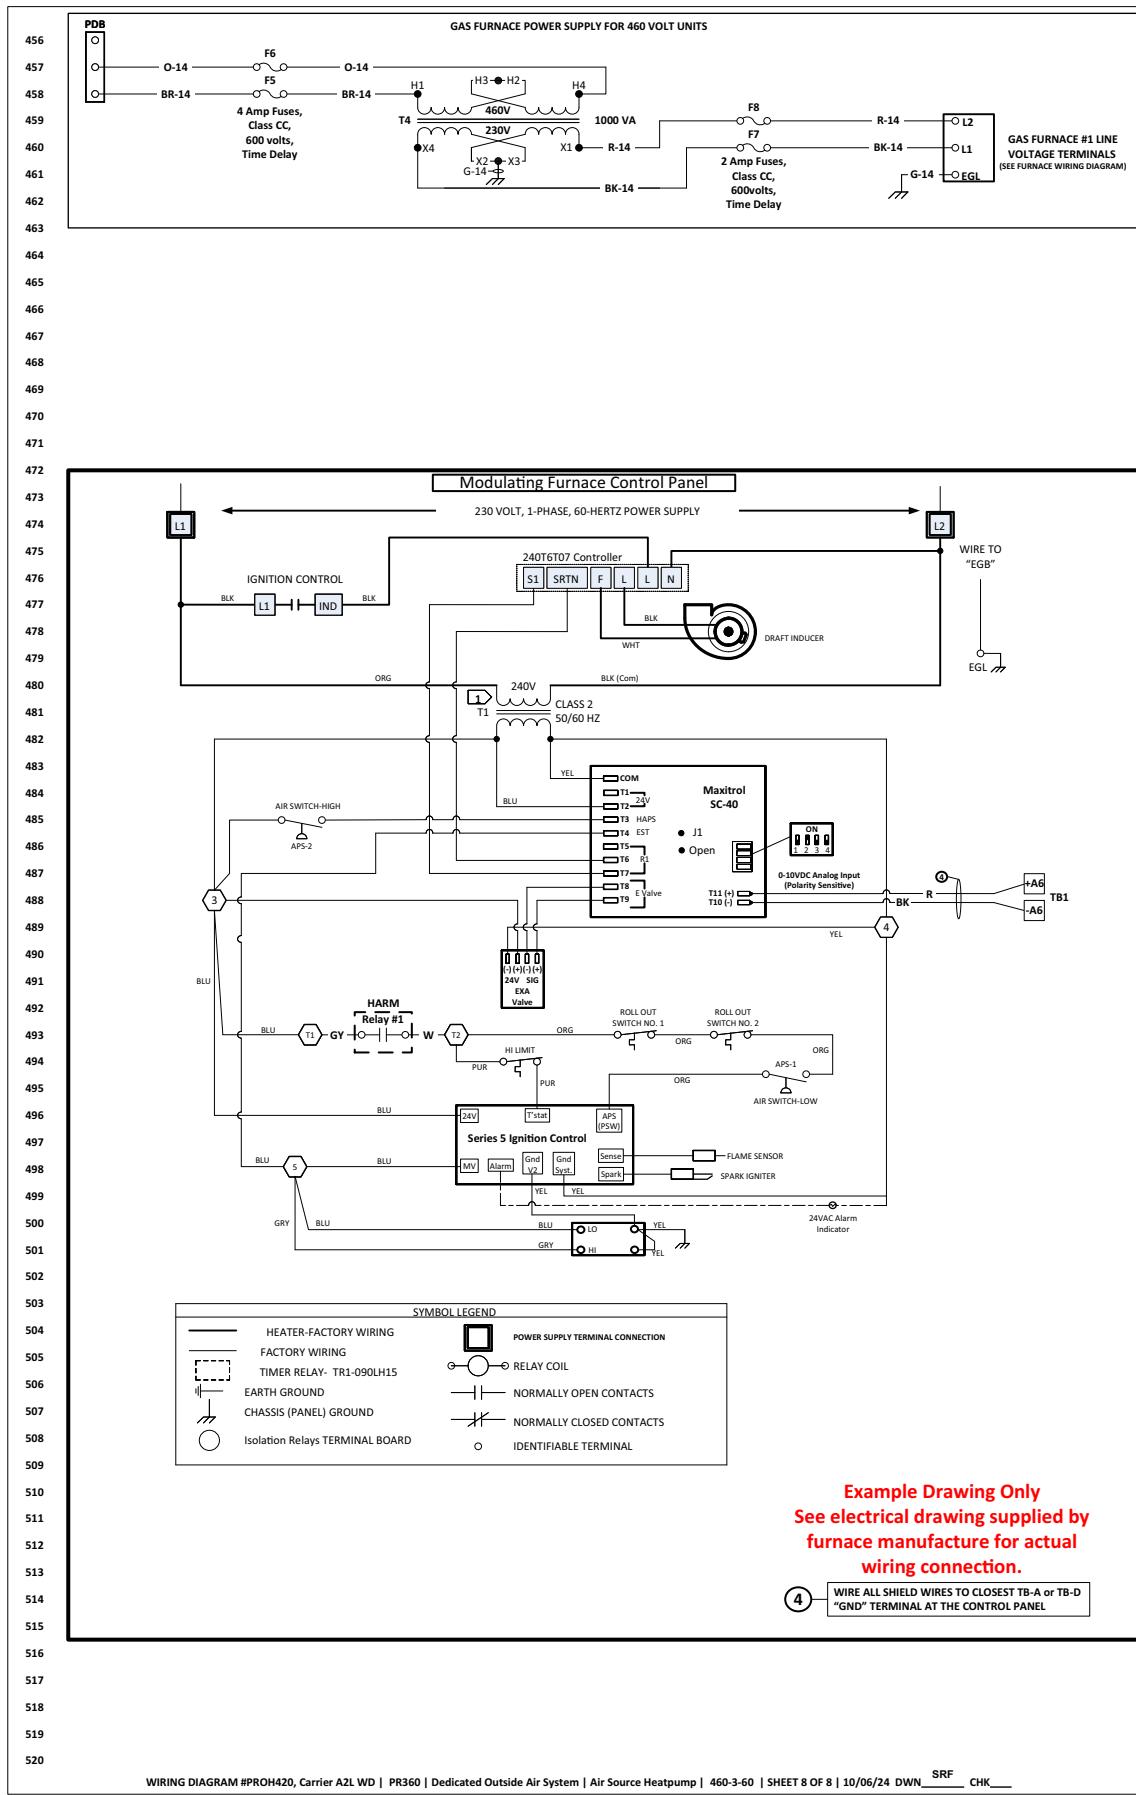


Fig. 16 – 62L (ASHP), A2L - WD Typical Wiring Diagram (cont)

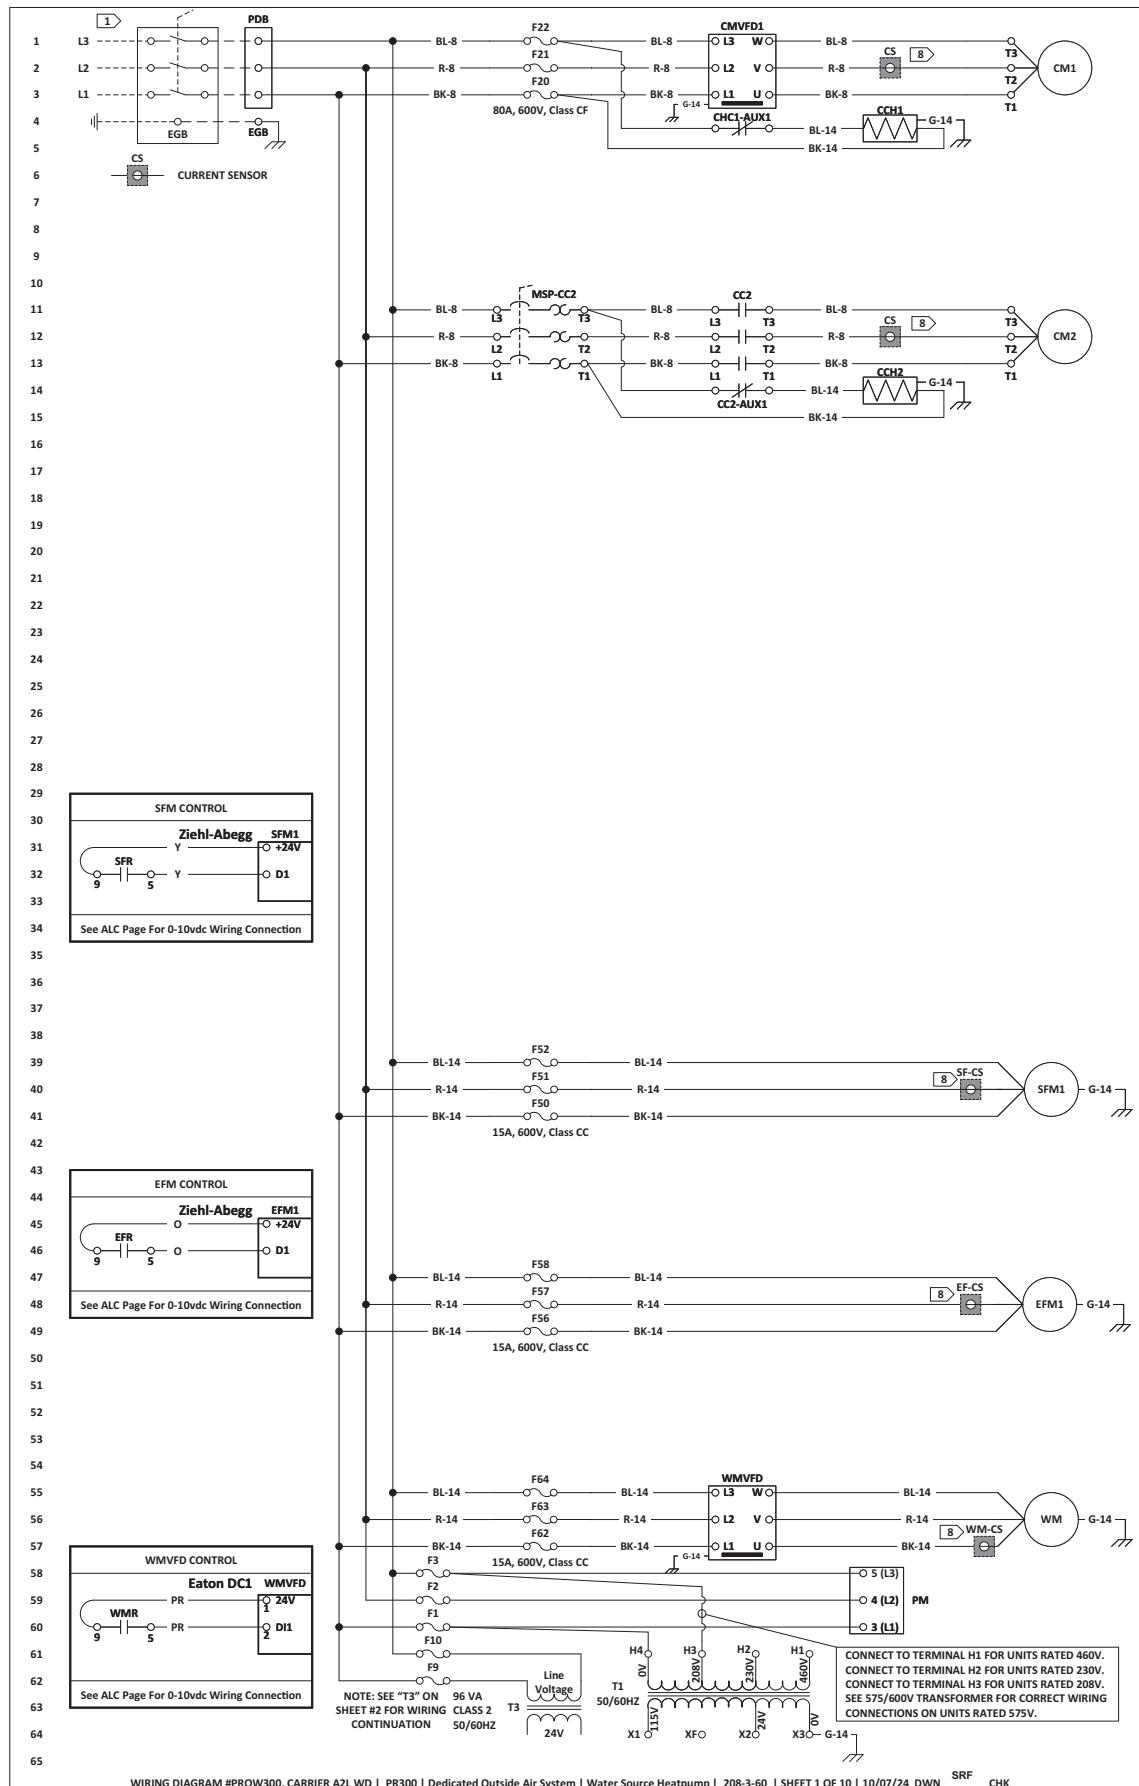


Fig. 17 – 62L (WSHP), A2L - WD Typical Wiring Diagram

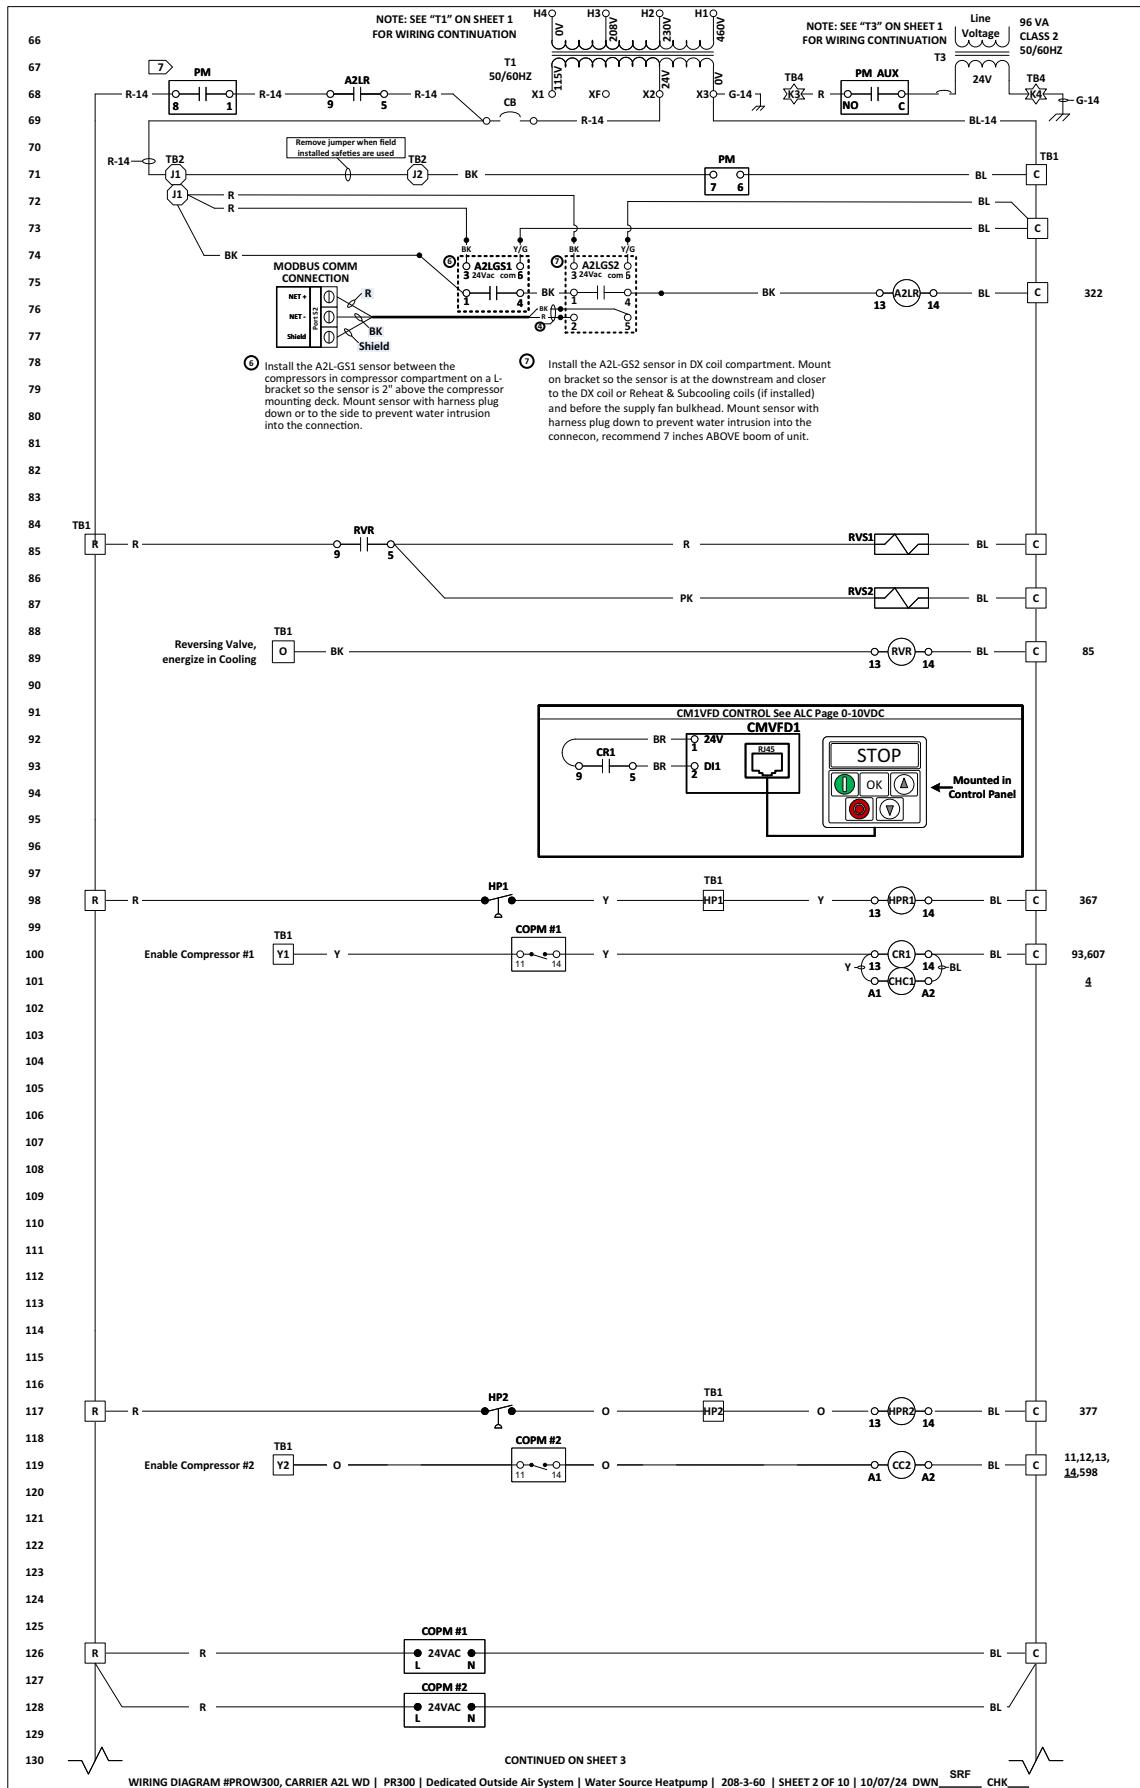


Fig. 17 – 62L (WSHP), A2L - WD Typical Wiring Diagram (cont)

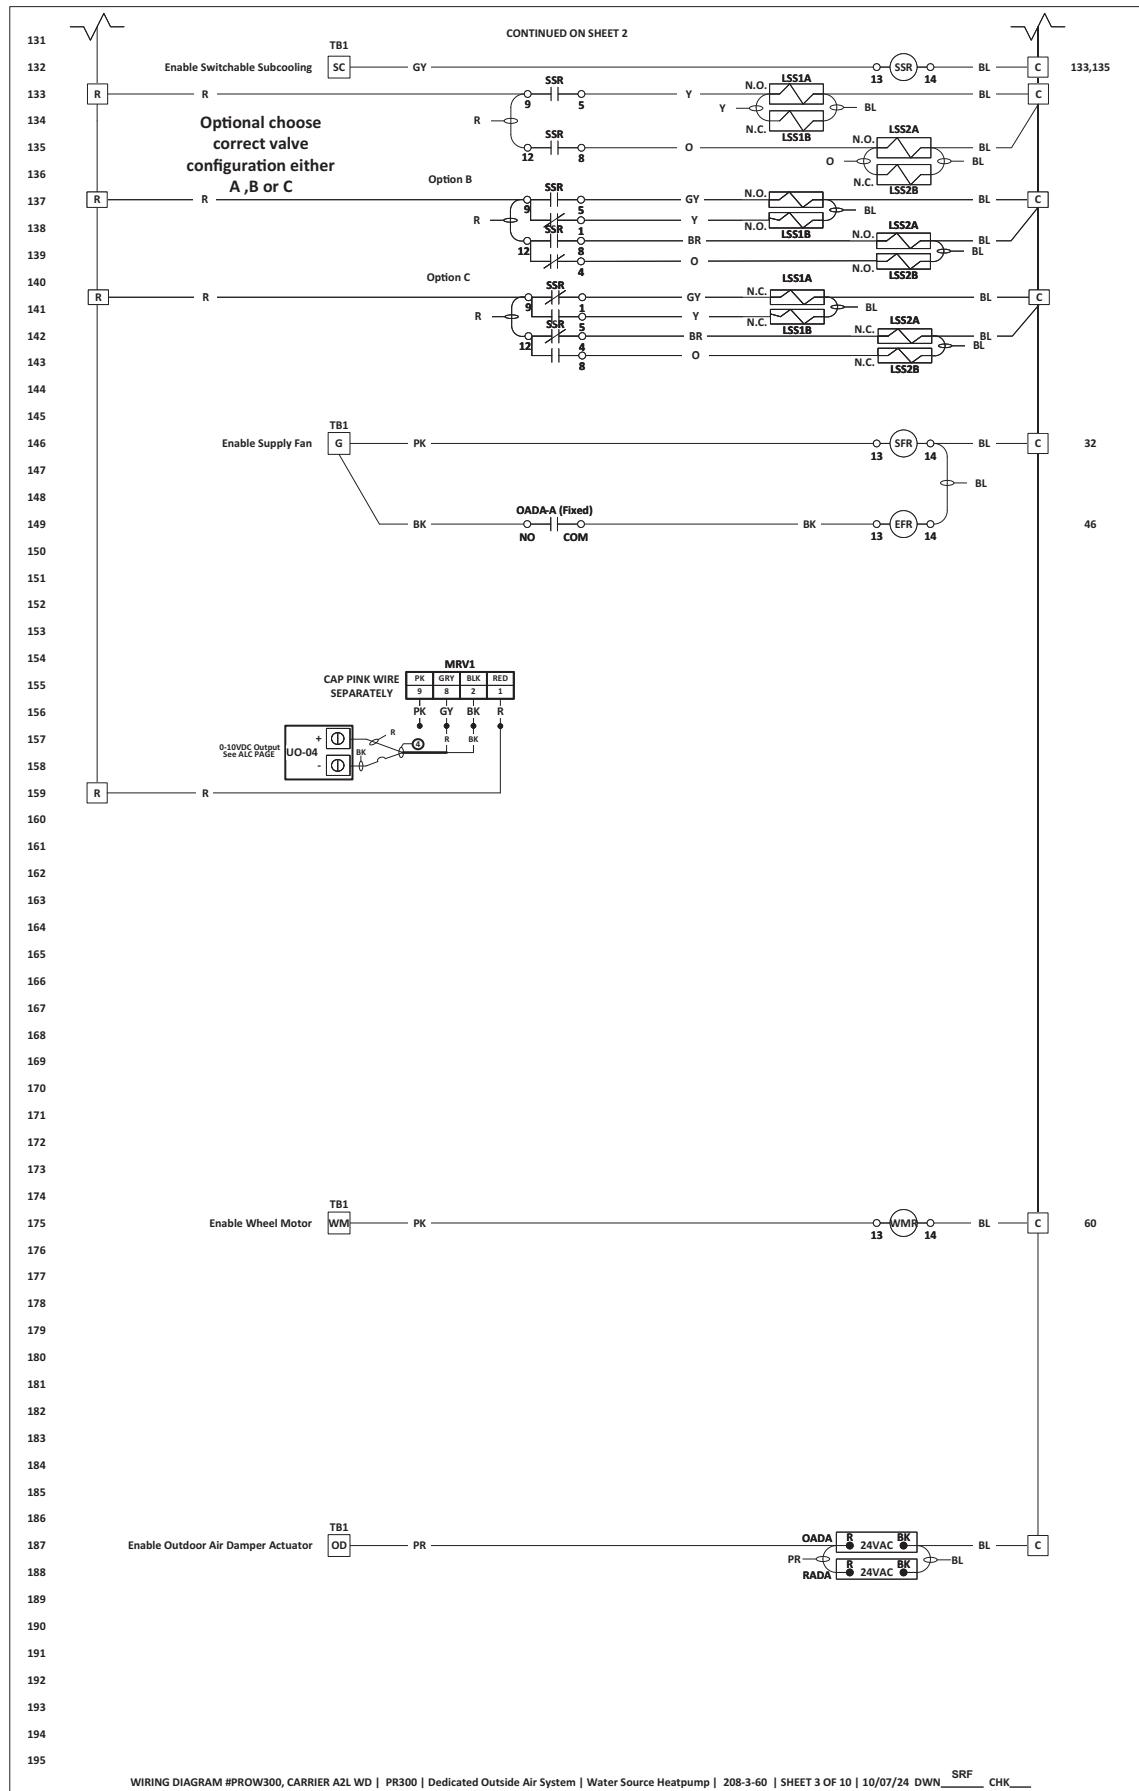


Fig. 17 – 62L (WSHP), A2L - WD Typical Wiring Diagram (cont)

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242


243

244

245

WIRING DIAGRAM FOR MOD. GAS FURNACE (HEAT PUMP)**Calibration and Setup**

- Set the INPUT RANGE jumper to the correct position for the signal to be used (0-15 V).
- Set the deadband jumper to the desired value (3%). This can be changed at any time with the power on.
- Connect the power supply and the input signal to the correct terminals.
- Turn on the power and the POWER LED will light.
- Apply an input signal equal to the R1 setpoint (0.5V).
- Adjust the R1 pot clockwise until the RELAY1 LED goes out, then slowly adjust the R1 pot counterclockwise until the LED just lights.
- Test the operation by increasing the input signal and watch as R1 turn on at the selected setpoints.
- Then decrease the signal and watch as the relays turn off at the selected setpoints minus the deadband.

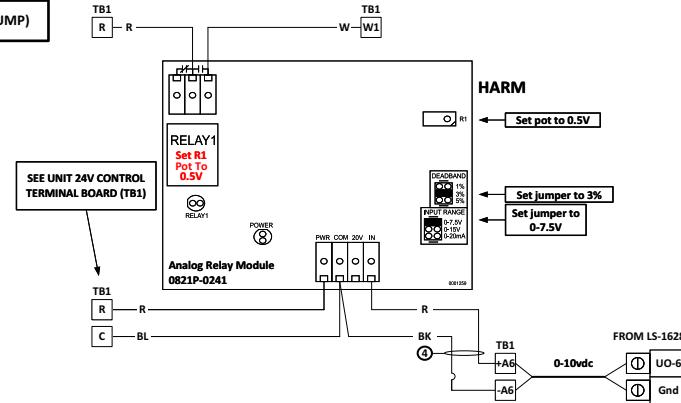WIRING DIAGRAM #PROW300, CARRIER A2L WD | PR300 | Dedicated Outside Air System | Water Source Heatpump | 208-3-60 | SHEET 4 OF 10 | 10/07/24 DWN ^{SRF} CHK _____**Fig. 17 – 62L (WSHP), A2L - WD Typical Wiring Diagram (cont)**

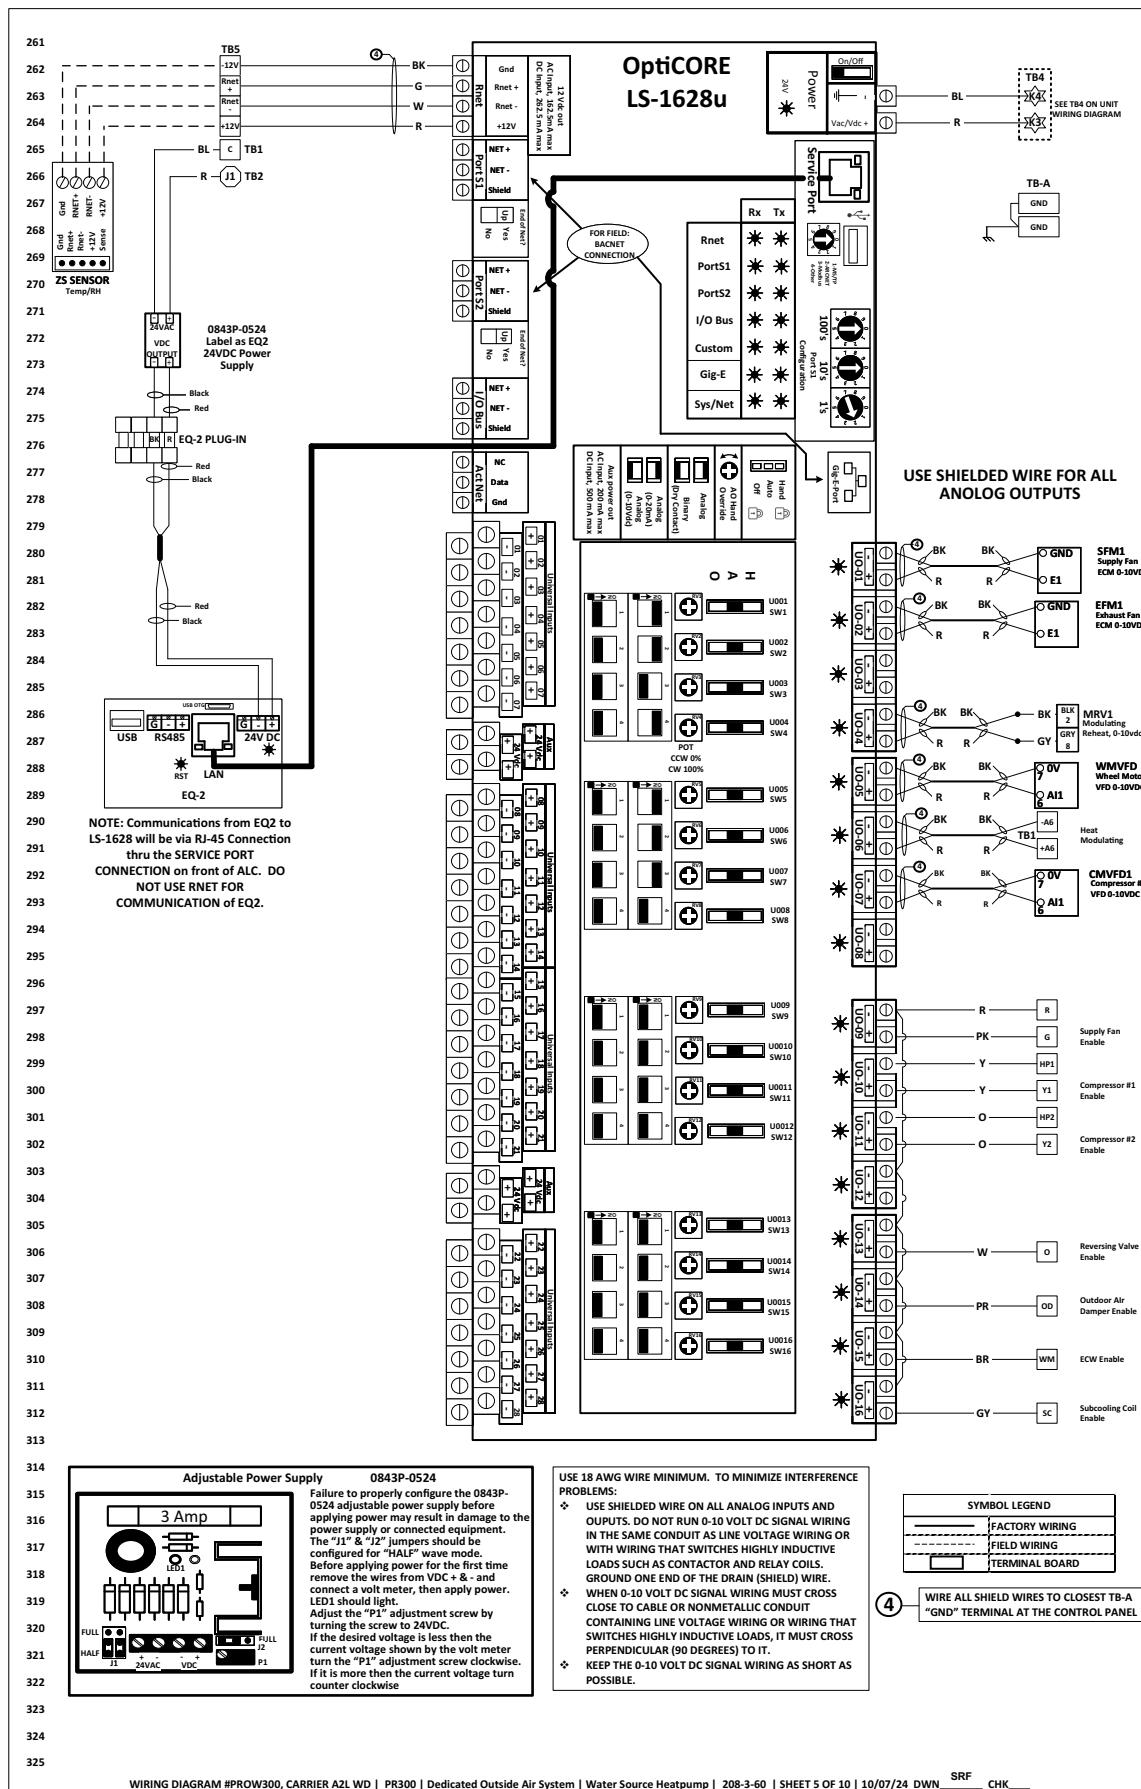


Fig. 17 – 62L (WSHP), A2L - WD Typical Wiring Diagram (cont)

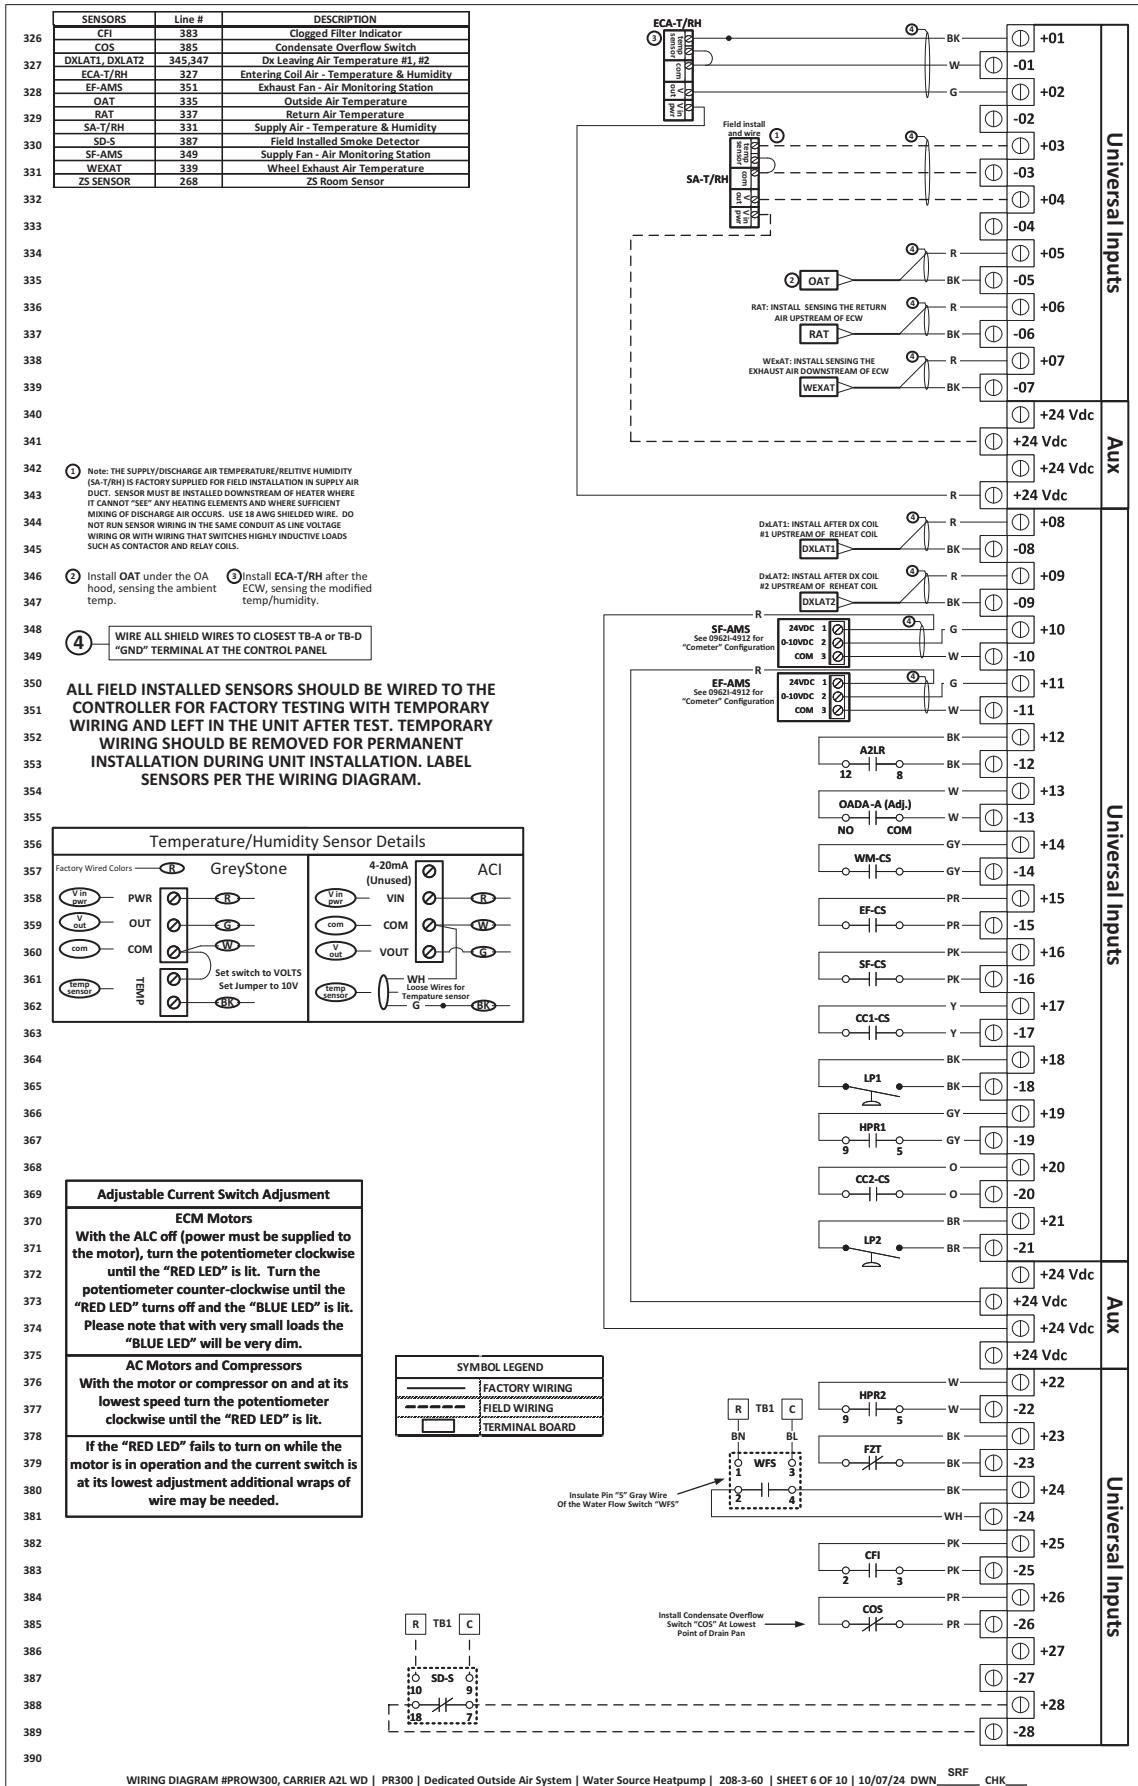


Fig. 17 – 62L (WSHP), A2L - WD Typical Wiring Diagram (cont)

LEGEND - ITEMS INSIDE CONTROL PANEL				LEGEND - ITEMS OUTSIDE CONTROL PANEL				
ITEM	FUNCTIONAL DESIGNATION	LINE NUMBER	DESCRIPTION	ITEM	FUNCTIONAL DESIGNATION	LINE NUMBER	DESCRIPTION	
391	101	CC1-CS	363	101	CC1	4	Compressor #1 - Current Switch	
392	102	CC2	119	102	CC2	14	Compressor Contactor no. 2	
393	103	CC2-AUX1	#	103	CC2	2	CC2 - Auxiliary Contact no. 1	
394	104	CC2-CS	369	104	CM1	12	Compressor #2 - Current Switch	
395	105	CHC1	101	105	CM2	12	Crankcase Heater Contactor #1	
396	106	CHC1-AUX1	#	106	COPM #1	100,126	CHC1 - Auxiliary Contact no. 1	
397	107	CMVFD1	1,92,292	107	COPM #2	119,128	Compressor Overload Protection Module #1	
398	108	CR1	101	108	EFM1	45,48,282	Compressor Overload Protection Module #2	
399	109	EF-CS	359	109	EF1	373	Exhaust Fan Current Switch	
400	110	EFR	149	110	HP1	98	Exhaust Fan Relay	
401	111	FCB	4	111	HP2	117	Equipment Grounding Bar	
402	112	HARM	247	112	LP1	365	Heat Analog Relay Module	
403	113	HPR1, HPR2	98,117	113	LP2	371	High Pressure Relay #1, #2	
404	114	HR	117	114	LSS1A, LSS1B	133,134	Heat Relay	
405	115	MSP-CC2	11	115	LSS2A, LSS2B	135,136	Motor Starter Protection - CC2	
406	116	PDB	1,456	116	MRV1	155	Power Distribution Block	
407	117	PM	59,68,68,71	117	OADA	149,187,355	Power / Phase Monitor	
408	118	RVR	89	118	RADA	188	Reversing Valve #1, #2	
409	119	SF-CS	361	119	RV1, RV2	85,87	Supply Fan - Current Switch	
410	120	SFR	146	120	SFM1	31,40,280	Supply Fan Motor Relay	
411	121	SSR	132	121	WFS	380	Switchable Subcooling relay	
412	122	WIR	611	122	WM	56	Water Interlock Relay	
413	123	WM-CS	357	123	WIR	611	Wheel Motor - Current Sensor	
414	124	WMR	175	124	WV	175	Wheel Motor Relay	
415	125	WMVFD	55,59,288	125	WVED	55,59,288	Wheel Motor Variable Frequency Drive	
416	# SEE LINE NUMBER TO THE RIGHT OF CONTACTOR COIL ON WIRING DIAGRAM.							
417	406	407	408	409	410	411	412	413
418	419	420	421	422	423	424	425	426
427	428	429	430	431	432	433	434	435
436	437	438	439	440	441	442	443	444
445	446	447	448	449	450	451	452	453
454	455	456	457	458	459	460	461	462
463	464	465	466	467	468	469	470	471
472	473	474	475	476	477	478	479	480
481	482	483	484	485	486	487	488	489
490	491	492	493	494	495	496	497	498
499	500	501	502	503	504	505	506	507
508	509	510	511	512	513	514	515	516
517	518	519	520	521	522	523	524	525
526	527	528	529	530	531	532	533	534
535	536	537	538	539	540	541	542	543
544	545	546	547	548	549	550	551	552
553	554	555	556	557	558	559	560	561
562	563	564	565	566	567	568	569	570
571	572	573	574	575	576	577	578	579
580	581	582	583	584	585	586	587	588
589	590	591	592	593	594	595	596	597
598	599	600	601	602	603	604	605	606
607	608	609	610	611	612	613	614	615
616	617	618	619	620	621	622	623	624
625	626	627	628	629	630	631	632	633
634	635	636	637	638	639	640	641	642
643	644	645	646	647	648	649	650	651
652	653	654	655	656	657	658	659	660
661	662	663	664	665	666	667	668	669
670	671	672	673	674	675	676	677	678
679	680	681	682	683	684	685	686	687
688	689	690	691	692	693	694	695	696
697	698	699	700	701	702	703	704	705
706	707	708	709	710	711	712	713	714
715	716	717	718	719	720	721	722	723
724	725	726	727	728	729	730	731	732
733	734	735	736	737	738	739	740	741
742	743	744	745	746	747	748	749	750
751	752	753	754	755	756	757	758	759
760	761	762	763	764	765	766	767	768
769	770	771	772	773	774	775	776	777
778	779	780	781	782	783	784	785	786
787	788	789	790	791	792	793	794	795
796	797	798	799	800	801	802	803	804
805	806	807	808	809	8010	8011	8012	8013
8014	8015	8016	8017	8018	8019	8020	8021	8022
8023	8024	8025	8026	8027	8028	8029	8030	8031
8032	8033	8034	8035	8036	8037	8038	8039	8040
8041	8042	8043	8044	8045	8046	8047	8048	8049
8050	8051	8052	8053	8054	8055	8056	8057	8058
8059	8060	8061	8062	8063	8064	8065	8066	8067
8068	8069	8070	8071	8072	8073	8074	8075	8076
8077	8078	8079	8080	8081	8082	8083	8084	8085
8086	8087	8088	8089	8090	8091	8092	8093	8094
8095	8096	8097	8098	8099	80100	80101	80102	80103
80104	80105	80106	80107	80108	80109	80110	80111	80112
80113	80114	80115	80116	80117	80118	80119	80120	80121
80122	80123	80124	80125	80126	80127	80128	80129	80130
80131	80132	80133	80134	80135	80136	80137	80138	80139
80140	80141	80142	80143	80144	80145	80146	80147	80148
80149	80150	80151	80152	80153	80154	80155	80156	80157
80158	80159	80160	80161	80162	80163	80164	80165	80166
80167	80168	80169	80170	80171	80172	80173	80174	80175
80176	80177	80178	80179	80180	80181	80182	80183	80184
80185	80186	80187	80188	80189	80190	80191	80192	80193
80194	80195	80196	80197	80198	80199	80200	80201	80202
80203	80204	80205	80206	80207	80208	80209	80210	80211
80212	80213	80214	80215	80216	80217	80218	80219	80220
80221	80222	80223	80224	80225	80226	80227	80228	80229
80230	80231	80232	80233	80234	80235	80236	80237	80238
80239	80240	80241	80242	80243	80244	80245	80246	80247
80248	80249	80250	80251	80252	80253	80254	80255	80256
80257	80258	80259	80260	80261	80262	80263	80264	80265
80266	80267	80268	80269	80270	80271	80272	80273	80274
80275	80276	80277	80278	80279	80280	80281	80282	80283
80284	80285	80286	80287	80288	80289	80290	80291	80292
80293	80294	80295	80296	80297	80298	80299	80300	80301
80302	80303	80304	80305	80306	80307	80308	80309	80310
80311	80312	80313	80314	80315	80316	80317	80318	80319
80320	80321	80322	80323	80324	80325	80326	80327	80328
80329	80330	80331	80332	80333	80334	80335	80336	80337
80338	80339	80340	80341	80342	80343	80344	80345	80346
80347	80348	80349	80350	80351	80352	80353	80354	80355
80356	80357	80358	80359	80360	80361	80362	80363	80364
80365	80366	80367	80368	80369	80370	80371	80372	80373
80374	80375	80376	80377	80378	80379	80380	80381	80382
80383	80384	80385	80386	80387	80388	80389	80390	80391
80392	80393	80394	80395	80396	80397	80398	80399	80400
80401	80402	80403	80404	80405	80406	80407	80408	80409
80410	80411	80412	80413	80414	80415	80416	80417	80418
80419	80420	80421	80422	80423	80424	80425	80426	80427
80428	80429	80430	80431	80432	80433	80434	80435	80436
80437	80438	80439	80440	80441	80442	80443	80444	80445
80446	80447	80448	80449	80450	80451	80452	80453	80454
80455	80456	80457	80458	80459	80460	80461	80462	80463
80464	80465	80466	80467	80468	80469	80470	80471	80472
80473	80474	80475	80476	80477	80478	80479	80480	80481
80482	80483	80484	80485	80486	80487	80488	80489	80490
80491	80492	80493	80494	80495	80496	80497	80498	80499
80500	80501	80502	80503	80504	80505	80506	80507	80508
80509	80510	80511	80512	80513	80514	80515	80516	80517
80518	80519	80520	80521	80522	80523	80524	80525	80526
80527	80528	80529	80530	80531	80532	80533	80534	80535
80536	80537	80538	80539	80540	80541	80542	80543	80544
80545	80546	80547	80548	80549	80550	80551	80552	80553
80554	80555	80556						

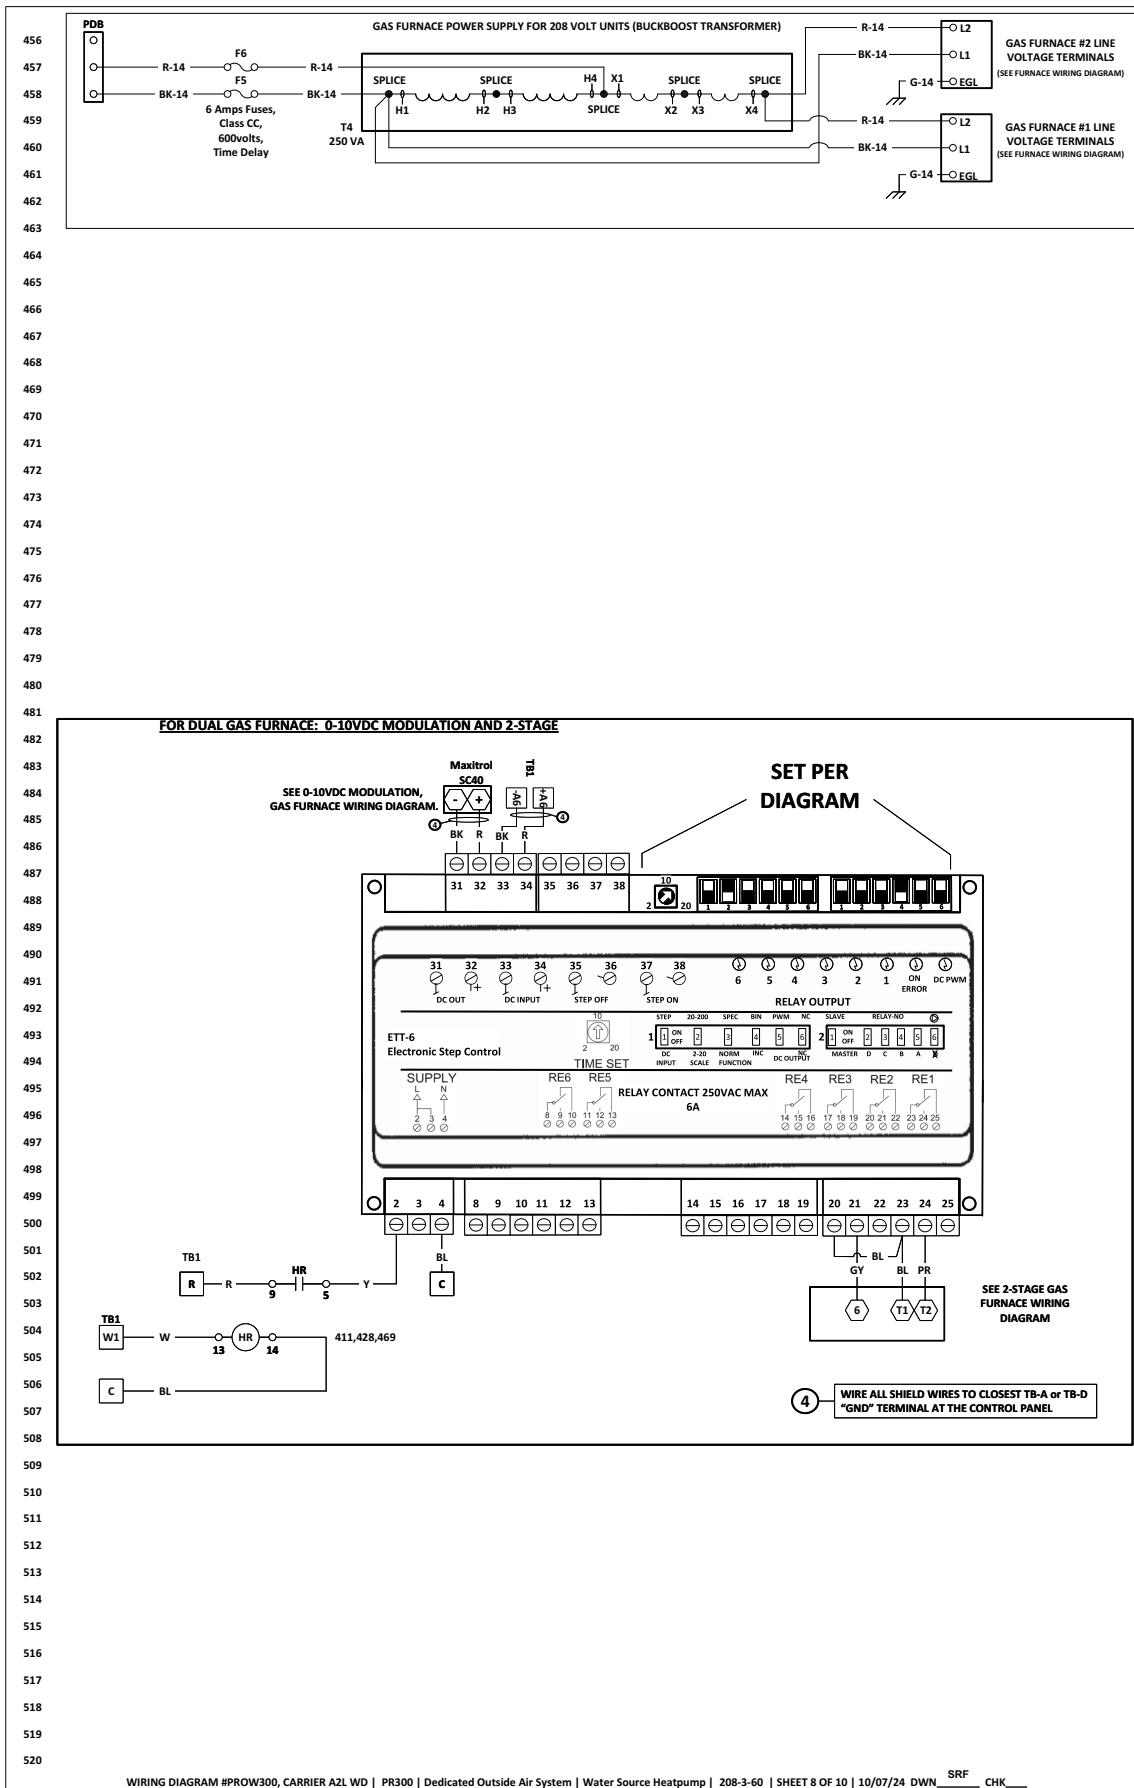


Fig. 17 – 62L (WSHP), A2L - WD Typical Wiring Diagram (cont)

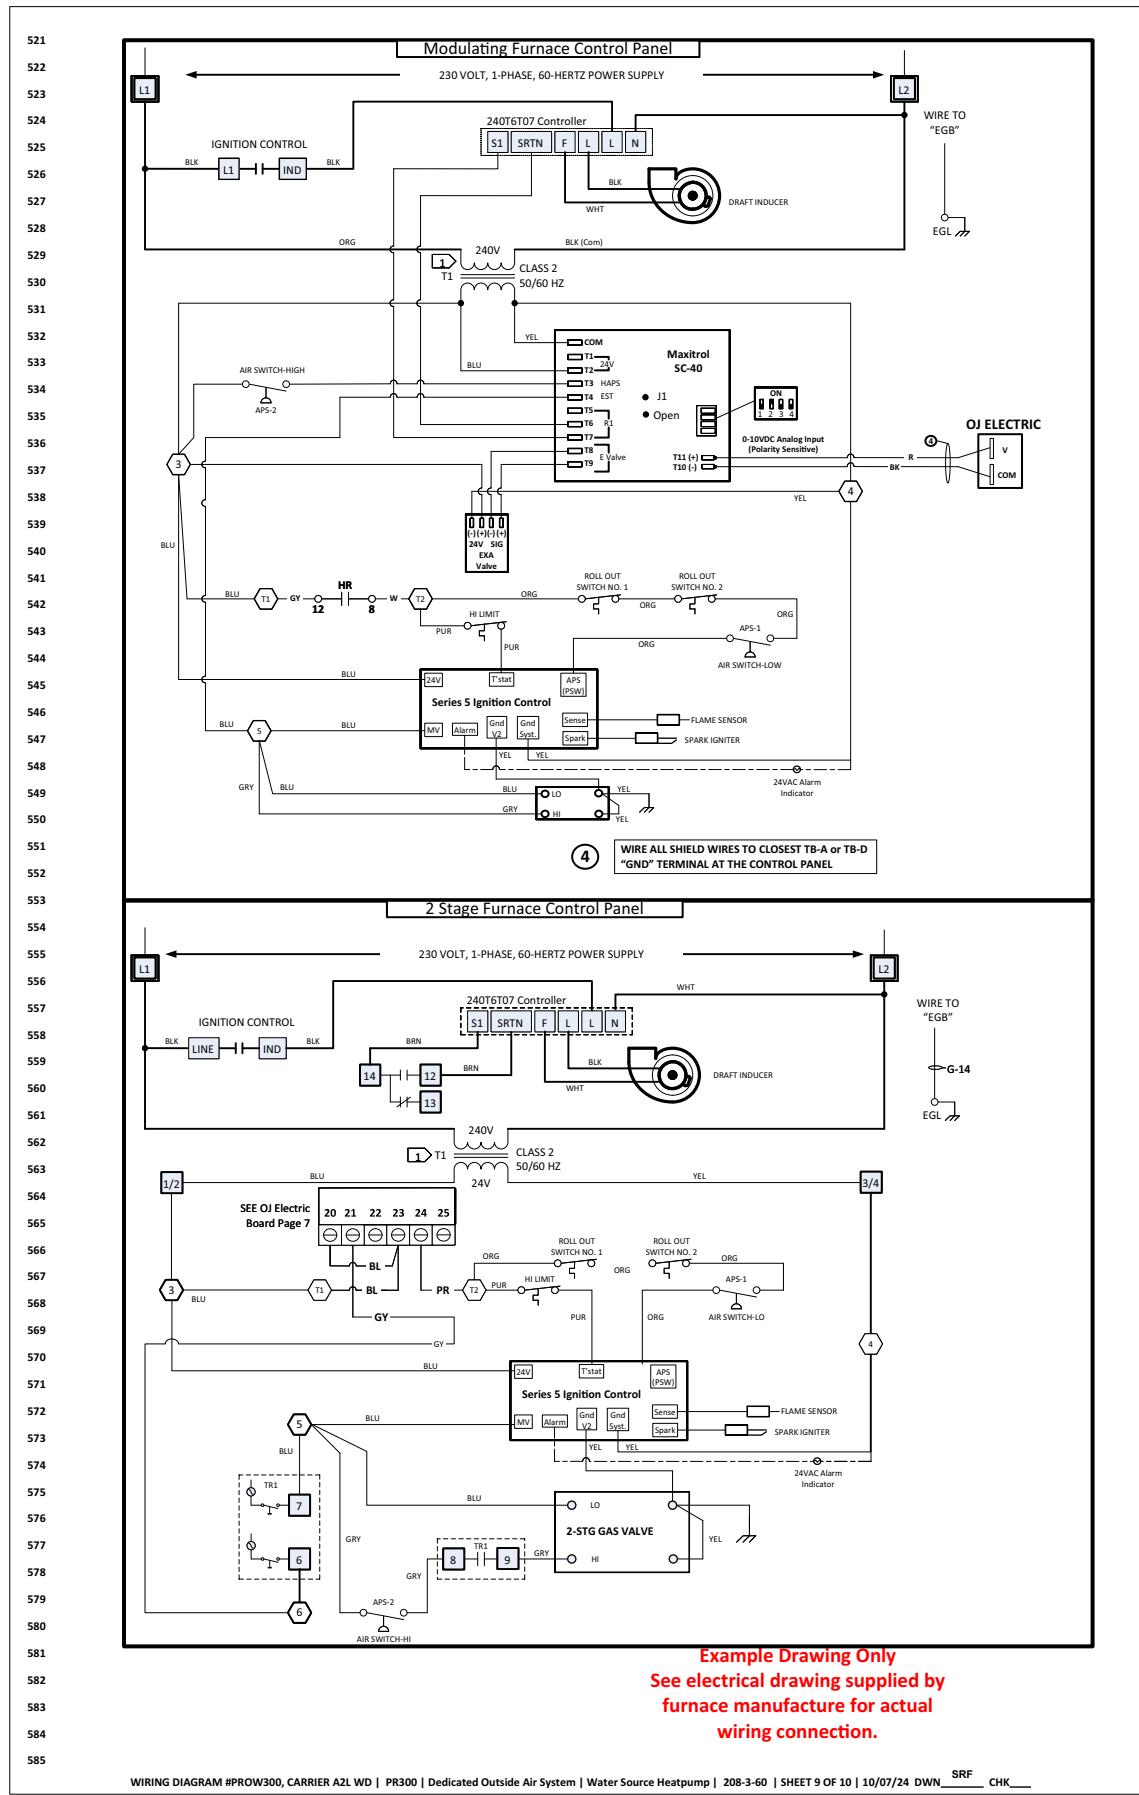


Fig. 17 – 62L (WSHP), A2L - WD Typical Wiring Diagram (cont)


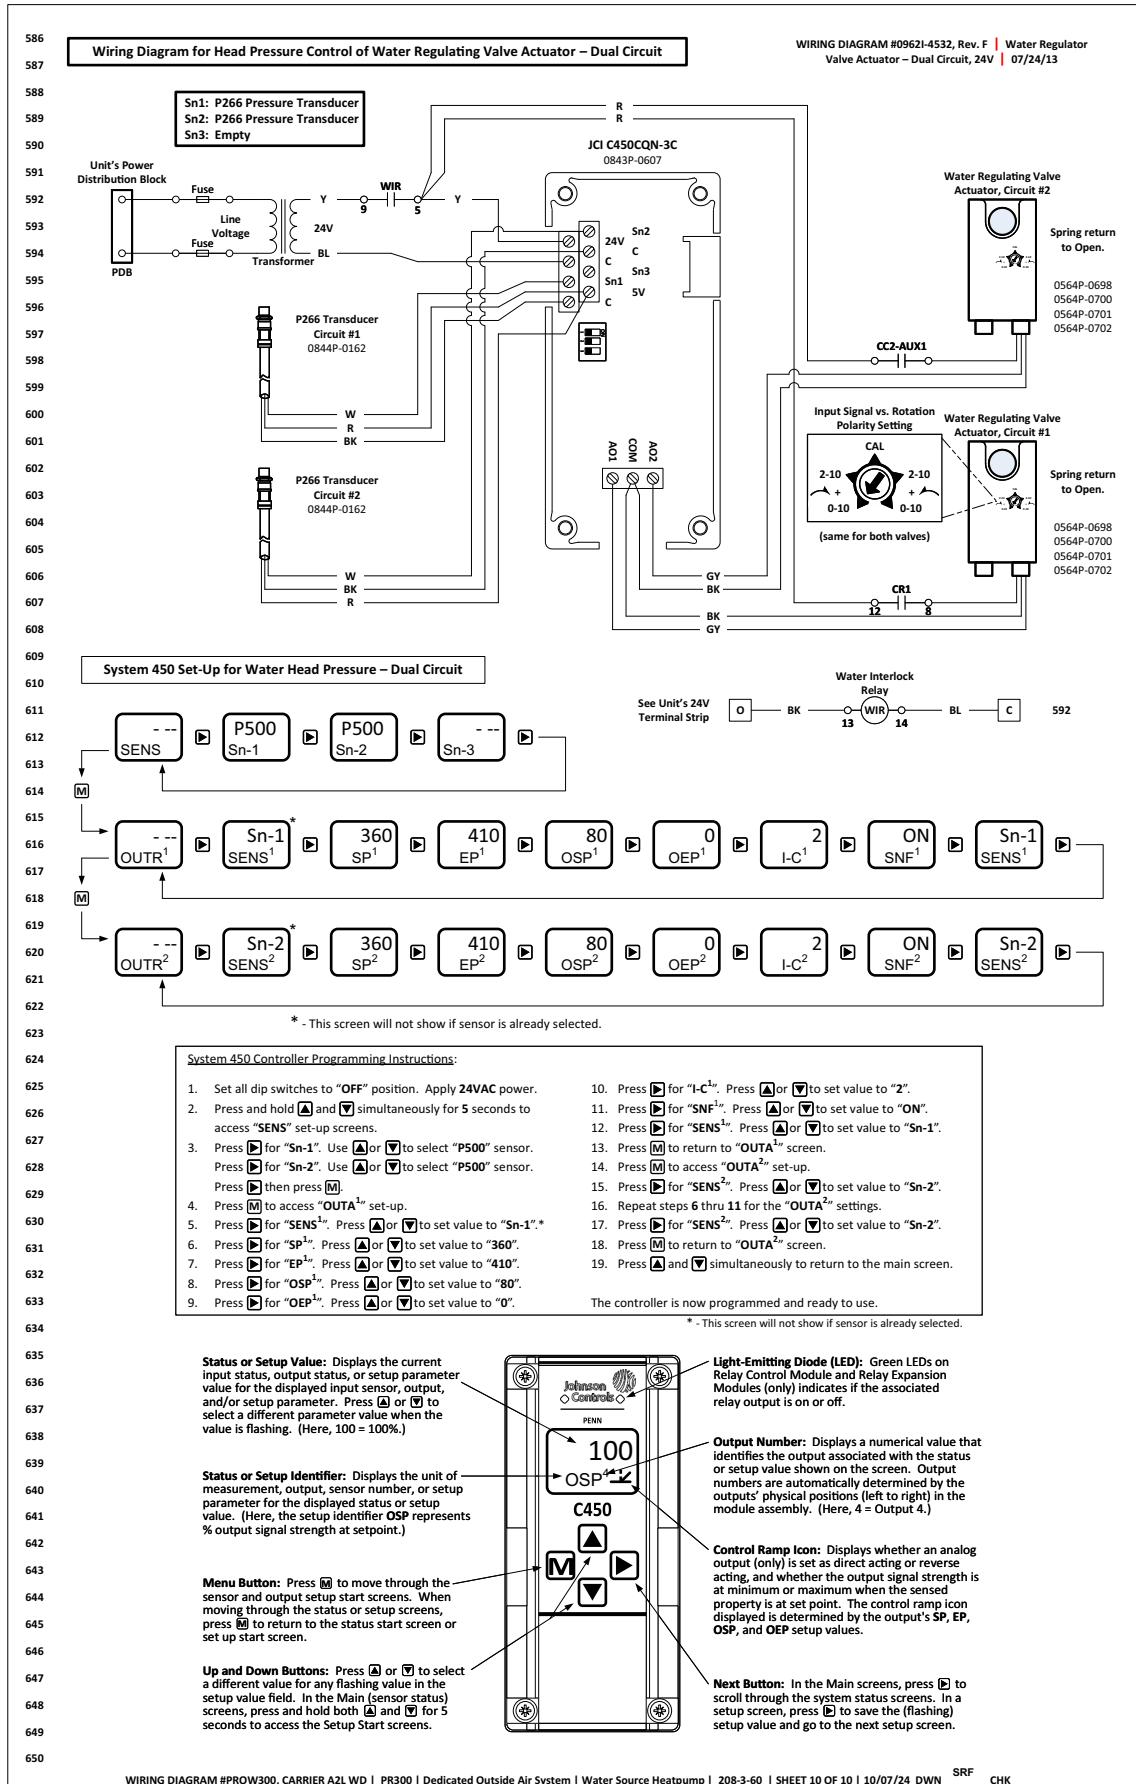


Fig. 17 – 62L (WSHP), A2L - WD Typical Wiring Diagram (cont)


WIRING FOR 208V FACTORY MOUNTED CONVENIENCE OUTLET

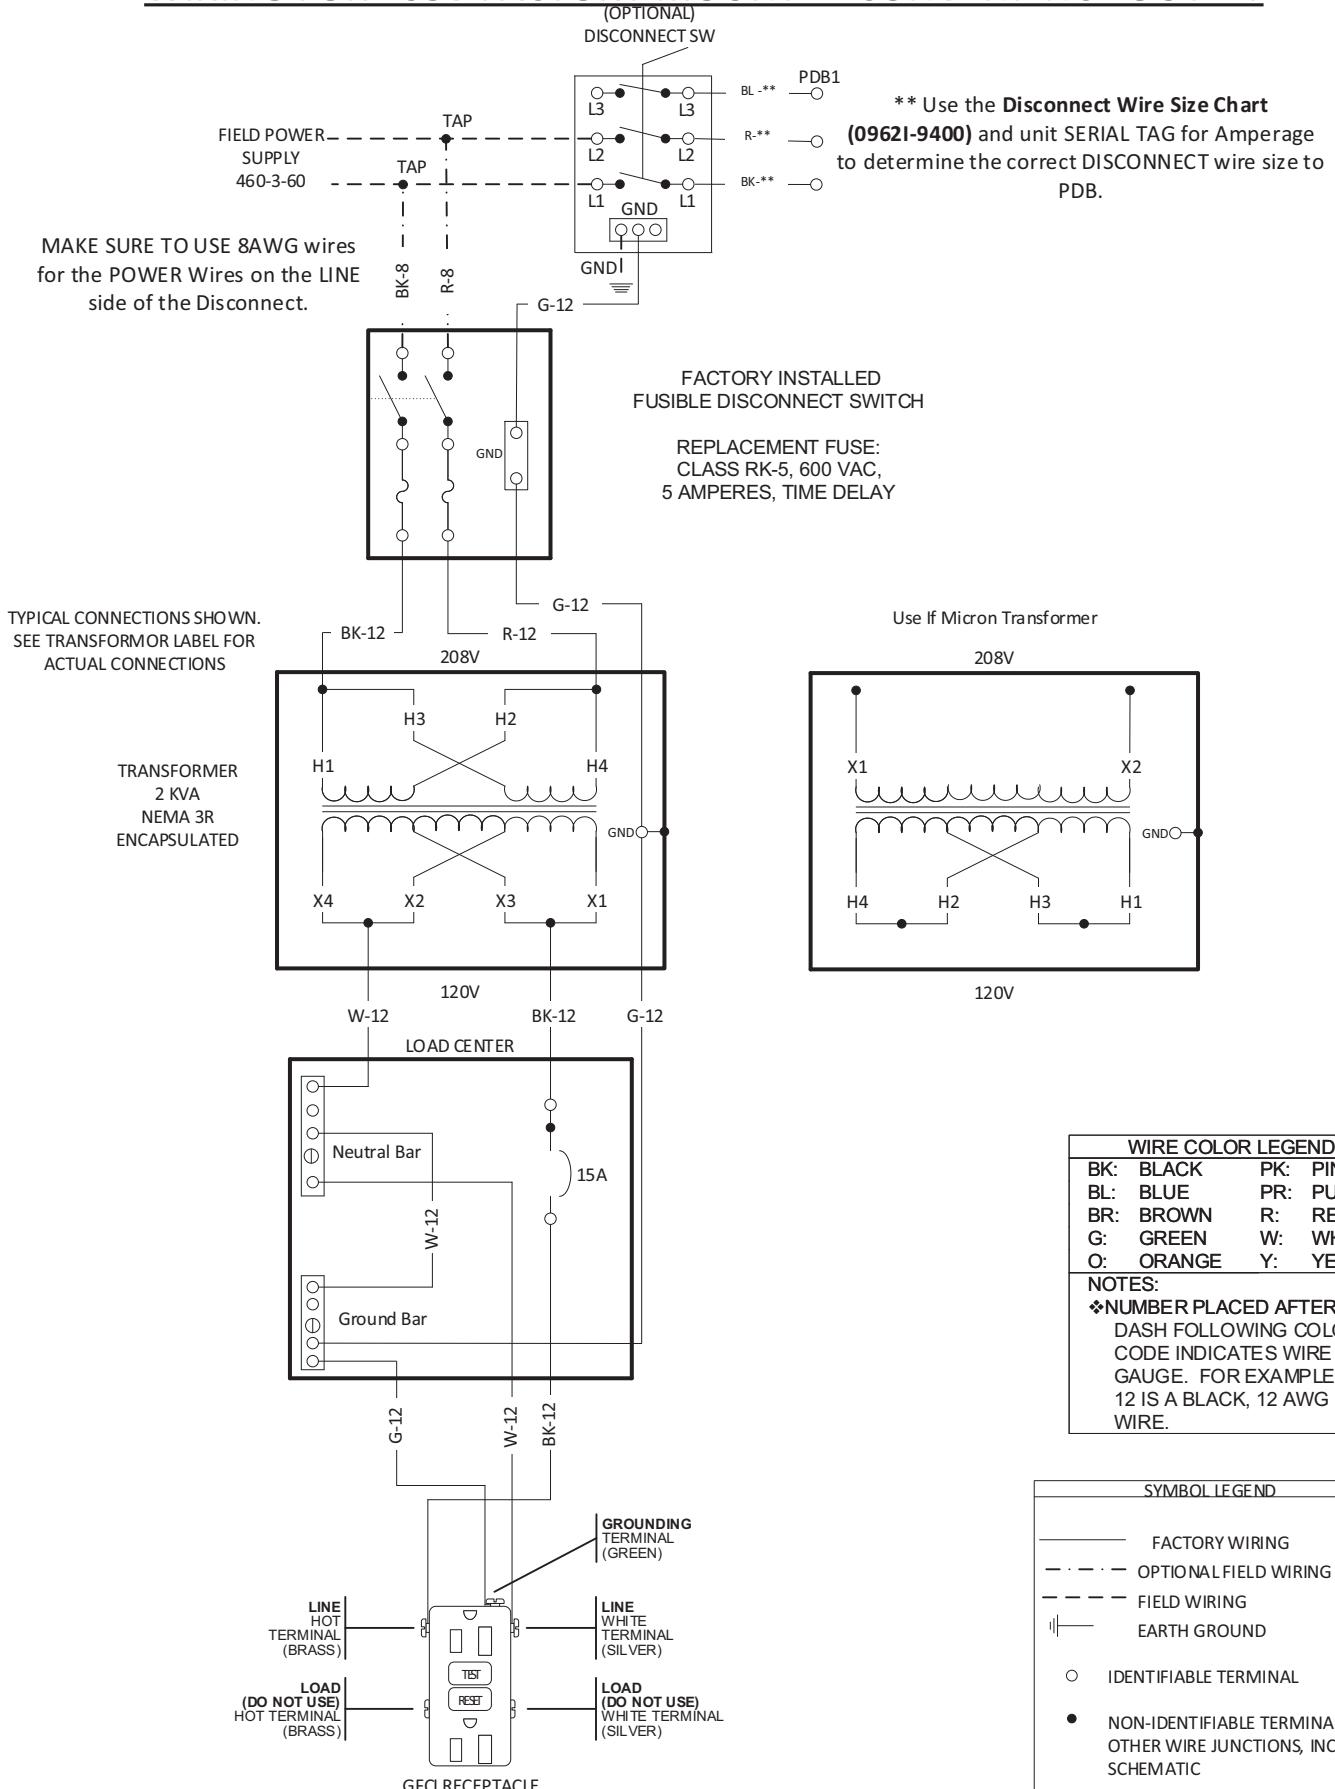

WIRING DIAGRAM #09621-3611 REV F | 115V Convenience Outlet Wiring | 208-3-60 | SHEET 1 OF 1 | 07/01/21 DWN LWF CHK SFR

Fig. 18 – Wiring Diagram for 208V Factory Mounted Convenience Outlet

WIRING FOR 480V FACTORY MOUNTED CONVENIENCE OUTLET

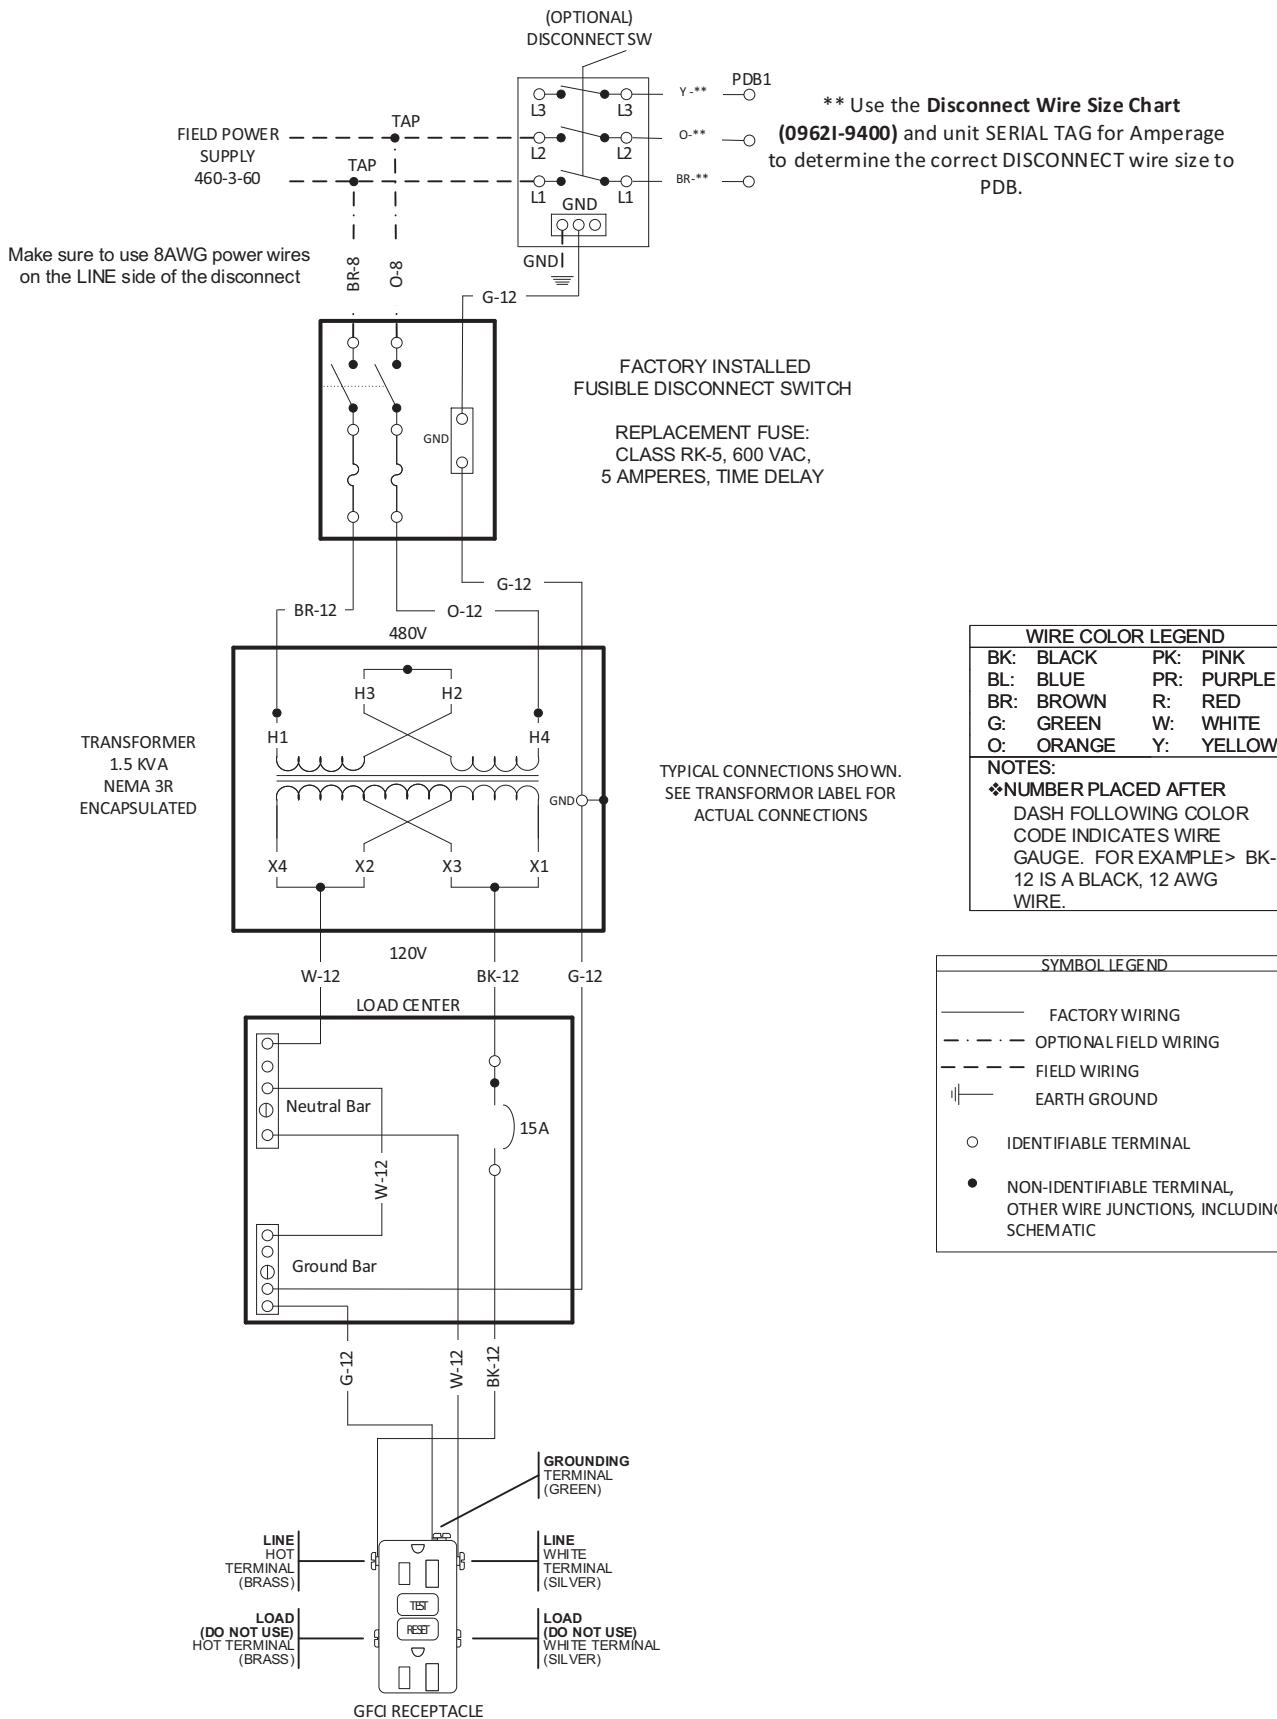

WIRING DIAGRAM #09621-3582A REV B |115V Convenience Outlet Wiring| 460-3-60 | SHEET 1 OF 1 | 07/01/21 DWN_SRF_CHK_LWF

Fig. 19 — Wiring Diagram for 480V Factory Mounted Convenience Outlet

MAINTENANCE

Prior to any maintenance or service to the unit, shut off, lockout, and tagout the electrical disconnect and fuel valve (if applicable) that supplies the unit in accordance with OSHA regulations and, if the unit includes electric or gas heat, allow ample time for the unit to cool. After maintenance is performed or the unit is serviced, the unit shall be re-commissioned per the start-up procedure.

Installation Code and Quarterly Inspections

All installation and service of Carrier's 62L equipment must be performed by a contractor qualified in the installation and service of equipment sold and supplied by Carrier, as well as conform to all requirements set forth in the manuals and all applicable governmental authorities pertaining to the installation, service, operation, and labeling of the equipment.

To help facilitate optimum performance and safety, Carrier recommends that a qualified contractor conducts, at a minimum, quarterly inspections of your 62L Series equipment and perform service where necessary, using only replacements parts sold and supplied by Carrier.

General

QUARTERLY

Follow the entire start-up procedure at this time and check settings (controls, operating temperatures, operating pressures, power, and control voltages) and operation.

Unit Exterior

CABINET EXTERIOR

After installation, fix scratches. Periodic painting should be done thereafter, as required. The caulk should be inspected annually. Re-apply caulk as needed to maintain integrity. For units with harsh coating protection, contact your Carrier sales office to purchase a touch up coating kit.

UNIT LOCATION

Verify that no flammable objects, liquids, or vapors are present near the unit. If unit includes gas heat, clearances to combustibles around the vent must be adhered to (see Clearances, page 9). Do not hang anything from or place anything on the unit. Keep the area around the unit free of all objects.

Direct Drive Supply and Exhaust Fans

BLOWER WHEEL

Inspect blower wheel and clean as necessary. A small build-up of dust can cause a significant decrease in blower performance. Check for excessive vibration. Clean and repair as required.

MOTORS

Inspection

Inspect motor every 3 months. Keep the motor clean and vent openings clear.

Lubrication

1. Motors with grease fittings must be lubricated as indicated in Table 16.

Table 16 — Motor Lubrication Intervals

NEMA FRAME SIZE (MOTOR HP)	RATED AT 1800 RPM (HRS)
up to 210 (3-5)	6,000
210-280 (7.5-20)	4,750
280-360 (25-30)	3,700

NOTE(S):

These intervals are based on severe duty. Over lubricating bearings could result in reduced motor life.

2. A high grade ball or roller bearing grease must be used. Recommended grease for standard service is Mobil Polyrex^{TM1} EM. Other compatible greases include ChevronTexaco Polystar^{®1}, ChevronTexaco Rykon^{®1} Premium 2, Pennzoil^{®1} Pen 2 Lube, and ChevronTexaco SRI.
3. Motors without grease fittings are sealed for life and do not require re-lubrication.

Lubricating Instructions

Before greasing, be sure fittings are clean and free from dirt. Remove grease relief plug or plate and, using a low-pressure grease gun, pump in the required grease. Do not over-grease. Re-lubrication intervals are specified in Table 16. After re-lubricating, allow motor to run for 10 minutes before replacing relief hardware.

IMPORTANT: In general, it is not recommended to mix greases of different brands. The mixing of different types of thickeners may destroy the composition and physical properties of the grease. In the event that a different grease is required by the end user, the following steps can be taken. Using the Lubricating Instructions, open grease outlet and purge the system as much as possible of the old or unwanted grease. Repeat this same operation after one week of service.

Outdoor Fans (Air cooled and ASHP units only)

Manually rotate to ensure free movement. Check that all fan mounting hardware is tight. Check motor bearings for wear.

Outdoor Coil Water Valves (WSHP units only)

Check that the factory installed water balancing valves operate properly. Review controls manual for valve operation in DX cooling and DX heating mode.

Refrigeration Circuit Components

INDOOR COIL

Check for dirt and bent fins. Clean with water from blower side towards filter side.

OUTDOOR COIL

Check for dirt and bent fins. Clean by brushing off with broom (Air cooled and ASHP units only).

Check for higher waterside pressure drops as compared to initial unit start-up. Check fluid temperature differential as compared to initial start up. Check the water quality in the loop. Scaled outdoor coil may require cleaning (WSHP units only).

COMPRESSORS

Compressors are factory-supplied with a charge of oil and should not require additional maintenance.

Condensate Drain Pan and Drain

Check for blockages. Clean as necessary with a mixture of 1/2 cup (0.1 L) bleach and 1 gallon (1.9 L) of warm water, if signs of mold or algae are present.

Dampers

DAMPERS

Check and clean blades.

DAMPER MOTOR/LINKAGES

Verify that all damper linkages move freely. Lubricate if necessary.

1. Third-party trademarks and logos are the property of their respective owners.

Energy Conservation Wheel

BEARINGS

Small ECWs (smaller than ECW666) are provided with no maintenance inboard bearings. These bearings should require no maintenance during the life of the unit. Larger ECWs come equipped with an external flanged bearing that should be greased annually. Use a petroleum based lubricant.

DRIVE MOTOR

The drive motors should not require maintenance. Replace as necessary.

DRIVE BELTS

Belts are multi-link belts with individual links constructed of a high performance polyurethane elastomer reinforced with multiple plies of polyester fabric. This belt provides a strong, yet flexible belting. The multi-link feature provides quick, easy servicing or replacement. Adjust and/or replace as necessary.

SEALS

Adjust and/or replace as necessary. The seals are made to clip on the cassette or post metal easily.

WHEEL

The wheel is somewhat self-cleaning through its normal action of rotating in and out of counter current airflow streams. In the event that routine quarterly inspection indicates that there is dirt or dust buildup within the wheel causing an excessive pressure drop, then wheel cleaning should be performed as follows:

1. Using a standard shop vacuum, vacuum any debris from both faces of the wheel. Slowly work around the entire face of the wheel to complete the procedure. Do not damage wheel face by excessive pressure of the vacuum nozzle on the wheel face.
2. Using 20 psi clean, dry air and a small air nozzle, blow air through one face of the wheel. At a similar location on the opposite side of the wheel, gently apply a shop vacuum to "receive" any remaining debris exiting the wheel. In the event that this method does not remove visual buildup or return pressure drop to within normal parameters, a wheel washing procedure is recommended. The energy conservation wheels can be washed thoroughly with water without affecting the performance of the wheel. The wheel will simply dry out following a washing procedure and resume normal energy transfer without any deviation in performance. If the energy conservation wheel can be easily removed from the cassette or unit, it is recommended to do so to facilitate the washing process. However, in most cases, it is impractical to remove larger wheels. Therefore, the washing procedure must take place within the air handling unit, and provisions need to be made to collect the runoff water from the bottom of the unit or collect the water by using a wet vac on the opposite side of the wheel during the procedure.
3. Shield all electrical components and bearings with plastic sheeting. Ensure that an adequate drainage system exists to collect runoff water from the bottom of the unit. Alternatively, use a wet vac with a wide nozzle on the opposite face of the wheel to collect the water during the washing procedure.
4. Disable the drive motor.
5. Using standard pressure water (do not use a high pressure washer) and working from the one side of the wheel, wash the wheel with a standard "garden" nozzle to flush any debris trapped within the flutes of the wheel. If desired, a mild detergent can also be used to enhance cleaning without affecting the performance of the wheel.

Gas Heater

GAS LINE

Check for gas leaks.

MANUAL SAFETY SHUT OFF VALVE

Check for gas leaks.

DIRECT SPARK IGNITER

Check for cracked ceramics, excessive carbon residue, or erosion of the electrode. Replace as required.

GAS VALVE

Check that gas valve seat is not leaking.

BURNERS

Soft brush or vacuum inside burner, at burner ports, and at air inlet between burner and manifold pipe to eliminate accumulation of lint and/or dirt.

HEAT EXCHANGER

Inspect for cracks, sagging, bending, or distortion. Clean with vacuum and/or stiff brush.

DRAFT INDUCER

Clean with compressed air or vacuum.

VENT PIPE/TERMINAL

Venting must be intact. Using a flashlight, look for obstructions, cracks on the pipe, gaps in the sealed areas, or corrosion. Clean vent terminal.

CONDENSATION DRAIN

Check for blockages.

Electric Heater Wiring and Wiring Connections

Check all wiring connections. Tighten as necessary. Check internal wiring. Replace as necessary with type THHN 221°F (105°C), 600-v, 16-gauge wire or equivalent.

CONTROL PANEL

Check heater control panel for dust/dirt and moisture. Clean as necessary.

HEATING ELEMENTS

Check heating elements for dust/dirt buildup and/or broken elements. Replace elements and/or clean elements with low pressure air as necessary. Check element male/female chassis insulators for breaks and/or cracks. Replace as necessary. Check element support frame insulators. Replace missing or broken insulators as necessary.

Filters

Filters should be checked for dirt restriction on a monthly basis (or as required). Replace filters with filters of equal specification when they appear dirty.

TROUBLESHOOTING

See Tables 17-23 for possible causes and solutions to problems that may arise.

Table 17 — Supply Fan

PROBLEM	POSSIBLE CAUSE	SOLUTION
Blower motor does not run	Damper limit switch not closed or inoperative	Repair or replace switch.
	Motor thermal overloads tripped	For tripped condition - reset.
	Fuses blown or missing	Replace fuses.
	External power source lacking	Have incoming power lines checked.
	Motor inoperative	Repair or replace.
Blower motor runs, but fans do not supply enough make-up air	Intake filters dirty	Replace or clean.
	Obstruction in the intake	<ul style="list-style-type: none"> Check dampers for proper operation. Clear all intake passages of obstructions.
	Fan wheel loose on shaft	Reposition and tighten.
	Access doors and panels not closed	Close.
	Excessive discharge resistance from: <ul style="list-style-type: none"> Dirty filters in discharge External dampers 	Clean filters and/or re-adjust dampers.
Excessive fan noise	Fan motor bearing	Replace.
	Fan wheel loose on shaft	Reposition and re-tighten.
	Fan wheel rubbing	<ul style="list-style-type: none"> Loosen setscrews. Reposition cone and tighten.
	Fan wheel dirty	Clean.
	Loose duct	Tighten or reinforce.
	Foreign article in fan or duct	Remove.

Table 18 — Compressor

PROBLEM	POSSIBLE CAUSE	SOLUTION
Compressor will not start	Power off, loose electrical connections or fuse open	Check disconnect switch, fuses and wiring.
	Compressor contactor not closing	Check voltage to contactor coil, transformer slave relay, thermostat.
	Internal compressor thermal overload open	If compressor is hot, allow 2 hours to cool – see below.
	Compressor defective	Check compressor for electrical failure. Compressor may be seized; check for lock rotor amps (LRA).
	High or low pressure switch open or defective	Check calibration of high or low pressure switch.
	Oil pressure control open or defective	Check oil failure control – see below.
Compressor starts but cuts out on low pressure switch	Low on refrigerant	Check sight glass and check pressures.
	Airflow restricted	Check for dirty evaporator coil, dirty filters, dampers closed, iced evaporator, VFD settings, check motor amps, duct design.
	Restriction in liquid line	Check head pressure. Check and adjust TXV, if not functioning properly. Check pressure drop across filter drier.
	Defective low pressure switch	Check calibration of switch.
Compressor starts but cuts out on high pressure switch	Refrigerant overcharged	Check pressures and charge by subcooling.
	Condenser fan control has incorrect setting	Check calibration of the low ambient control.
	Fan motor defective	Check fan motor.
	Condenser coil inlet obstructed or dirty	Check coil and inlet clearances and for possible air recirculation.
	Air or non-condensables in system	Compare liquid refrigerant pressure with the saturated pressure. If the presence of air or non-condensables is suspected, the refrigerant must be reclaimed through a service port. The system must then be re-evacuated to 250-500 microns and recharged. The filter-drier should also be replaced before charging.
	Defective high pressure switch	Replace switch.
Compressor cuts out on thermal overload	Restriction in discharge or liquid line.	Check discharge and liquid line pressures. Check TXV.
	Low voltage	Check incoming voltage leg-to-leg. All three legs must be within 10% of the required voltage and the leg-to-three-leg average voltage variation must be less than 2% on each leg.
	Sustained high discharge pressure	Check running amperage and conditions described under high discharge pressure.
	High suction and discharge pressures	Check TXV setting. Check for air in system.
	Defective compressor overload	Allow compressor to cool for two hours if compressor is hot. Recheck for open circuit.
	Defective run capacitor	Check run capacitor for compressor and fan motor.
	Improper refrigerant charge	Check subcooling.
	Bearings or pistons too tight	Check for low oil level.
Noisy compressor	Allow time for compressor to cool	Check dome temperature of compressor.
	Scroll compressors are rotation sensitive	Reverse wiring at disconnect switch may require blower to be rechecked for rotation.
	Refrigerant overcharged	Check pressures and subcooling.
	Excess or insufficient oil in compressor crankcase	Check oil level on hermetic compressors. Check total equivalent feet of piping. Add oil, as recommended.
	Liquid flood-back	Check TXV setting. Refrigerant overcharge refrigerant circuit problem.
	Cyclical noise pattern	Digital compressors have a significant shift in generated noise when running uploaded.
Unit shutdown (A2L alarm)	Compressor defective	Replace compressor.
	A2L sensor contact is closed.	Check for refrigerant leaks. Check for faulty leak detection sensors.

LEGEND

TXV — Thermal Expansion Valve
VFD — Variable Frequency Drive

Table 19 — Refrigeration Circuit

PROBLEM	POSSIBLE CAUSE	SOLUTION
Noisy operation	Air noise	Check ductwork. Air velocity too high.
	Chattering contactor	Check for adequate control voltage. Check for shorts or breaks. Check thermostat. Check contactor points.
	Tubing rattle	Dampen by taping or clamping. Bend tubing away from contact, where possible.
High suction pressure	Excessive load on evaporator coil	Check for high entering wet bulb temperature. Check for excessive airflow.
	Broken compressor valves. Scroll compressors do not have valves	Scroll compressors should not be pumped down below 5 PSI.
	Compressor is unloaded	Recalibrate unloader pressure switch.
	Leaking check valve	Check temperature across check valve.
High discharge pressure	Expansion valve not secured to suction line or TXV defective	Check the TXV, ensure bulb is insulated.
	TXV setting	Check TXV setting and calibrate superheat.
	Air inlet to condenser dirty or obstructed	Check for proper clearances and possible air recirculation.
	Condenser fan, motor defective	Check condenser fan motor and run capacitor.
	Condenser fan control has incorrect setting	Check calibration of low ambient head pressure control.
Suction pressure too low	Refrigerant undercharge	Check pressures and subcooling.
	Blower running backwards	Interchange any two wires connected to motor.
	Defective or improperly adjusted expansion valve	Check superheat and adjust TXV.
	Dirty filter	Check filter and evaporator coil.
	Too little airflow or low entering air temperature	Check airflow and entering air wet bulb conditions.
Head pressure too low	Restriction in suction or liquid line	Check refrigerant circuit for restriction.
	Insufficient refrigerant charge	Check subcooling. Check for leak.
	Defective or improperly adjusted expansion valve	Check superheat and adjust TXV.
	Low suction pressure	See above – suction pressure too low .
	Condenser fan control setting	Check calibration of low ambient control.
Compressor short cycles	Defective compressor	See above – high suction pressure .
	Thermostat location or malfunction	Check thermostat. Check heat anticipator setting.
	Improper refrigerant charge	Check subcooling. Verify superheat.
	Defective high or low pressure control	Check high or low pressure switch.
	Cycling on internal overload	Possible tight bearings – see above.
	Defective expansion valve	Check TXV and superheat.
	Poor air distribution	Check ductwork for recirculation.
Running cycle too long or unit operates continuously	High discharge pressure	See above – high discharge pressure .
	Leaking discharge valves in compressor	See above – high suction pressure .
	Refrigerant undercharged	Check subcooling.
	Dirty filter or evaporator coil	Check filter, coil and airflow.
	Dirty or clogged condenser coil	Check coil and airflow.
	Air or other non-condensables in system	Check equalized high side pressure with equivalent outdoor temperature.
	Defective compressor	See above – high suction pressure .
Supply air temperature too high	Restriction in suction and liquid line	Check for restrictions in refrigerant circuit.
	Control contacts stuck	Check thermostat, shorts in wiring, slave relay compressor contactor.
	Refrigerant undercharge or leak in system	Check subcooling and check for leaks.
	Evaporator plugged with dirt or ice	Check evaporator, airflow, and filter.
	Improperly adjusted or defective expansion valve	Check superheat and adjust TXV. Check bulb.
	Defective compressor	Check compressor for proper operation.
	High discharge pressure	See above – high discharge pressure .
Supply air temperature too low	Airflow is too high	Check external static pressure.
	Airflow is too low	Check evaporator coil, filter. Check for closed dampers, grills, drive for loose parts, belts, misalignment. Check external static pressure.
	Return air temperature too low	Check entering air wet bulb conditions.
Liquid line too hot	Refrigerant undercharged	See above – high discharge pressure .
	High discharge pressure	Restriction upstream at point of frosting.
Suction line frosting	Insufficient evaporator airflow	Check airflow. Check fan VFD, closed dampers.
	Restriction in suction or liquid line	Restriction upstream at point of frosting.
	Malfunctioning or defective expansion valve	Check bulb of TXV.
Blower motor not running	Improper wiring	Check wiring diagram.
	Defective motor	Check motor controller.
	Defective thermostat or control circuit	Check "R" and "G" circuit.
	Motor off on overload protector	Allow motor to cool. Check amperage.

Table 20 — Variable Speed Head Pressure Control

PROBLEM	POSSIBLE CAUSE	SOLUTION
No fan operation	No 24V control voltage	Check for 24 VAC at control.
	No input pressure to control	Check alignment of capillary fitting. Schrader valve depressor must depress Schrader valve enough to allow pressure into capillary.
	Bad fan motor	Disconnect power. When P266 is used, place a jumper from L1 to M1 and connect power. If fan does not start, motor is bad and should be replaced.
	Pressure transducer problem	Disconnect 6 pin connector from right side of control. Place a jumper wire between third pin from the top and bottom pin on the control (not the cable). If fan goes to full speed, check for input pressure. If it has been determined there is adequate pressure, the transducer is bad and the control must be replaced.
Fan stops when pressure reached high end of operating range.	Control is not wired correctly	See wiring diagrams.
No fan modulation (on-off operation)	Control is not wired correctly	See wiring diagrams.
Fan starts at full speed	Control is not wired correctly	See wiring diagrams.
Erratic fan operation	Control is not wired correctly	See wiring diagrams.
	Dirty or blocked condenser coil	Clean condenser coil.
Fan motor is cycling on thermal overload	Dirty or blocked condenser coil	Clean condenser coil.
	Wrong motor for fan speed control application	Replace with motor approved for fan speed control application.
Erratic pressure control	Defective regulator	Replace defective part.
	Dirt causing regulator to bind	Disassemble regulator and clean internal parts. Install strainer.
	Power source to hot gas solenoid or operation of the solenoid is intermittent	Determine if problem is caused by supply voltage, solenoid, or excessive MOPD. Make changes necessary to correct problem.
Regulator leakage	Dirt in regulator causing seat to remain open	Clean regulator. Install strainer.
	Worn or eroded seating surface on regulator	Replace defective part.
Regulator hunting (chattering) with large fluctuations in controlled pressures	Regulator is oversized	Contact a certified technician for correctly sized regulator.
	Regulator and liquid injection thermovalve have control interaction	Increase superheat setting. Dampen bulb response by repositioning.
	Regulator and cylinder unloaders have control interaction	Increase differential between the controls by lowering the regulator's set point.
Regulator will provide pressure control	Regulator seat is restricted	Locate and remove stoppage. Install strainer.
	Pressure adjusting stem is set at a point so high that suction pressure never reaches the set point	Re-adjust the regulator.
	Strainer clogged at the regulator inlet	Locate and remove stoppage.
	MOPD exceeded across the solenoid or loss of source voltage	Replace solenoid or troubleshoot the electrical problem.
	Solenoid coil burned out	Replace coil.
	Wrong type of distributor for hot gas bypass to the evaporator	Install proper Venturi-Flo ^a type distributor for low pressure drop.
Regulator fails to close	Dirt under seat of regulator	Locate and remove stoppage. Install strainer or filter drier.
	Diaphragm failure (leakage around the adjusting stem)	Replace defective parts.
	Pressure adjusting stem is set at a point so high that suction never reaches the set point	Re-adjust the regulator.
	Blocked external equalizer passage	Locate and remove stoppage. Install strainer.
	Worn or eroded regulator seat	Replace defective part.

NOTE(S):

a. Third-party trademarks and logos are the property of their respective owners.

LEGEND

MOPD — Maximum Opening Pressure Difference

Table 21 — Energy Wheel Conservation

PROBLEM	POSSIBLE CAUSE	SOLUTION
Inadequate wheel performance	Incorrect wheel rotation speed	Check wheel rotation speed.
	Worn wheel media or worn/out-of-place seals	Check wheel integrity and seals. Adjust and/or replace seals.
	Unanticipated entering air conditions	Check entering air conditions and compare to design.
	Dirty media	Check media for dirt and clean.
Improper wheel rotation	Misaligned belts	Check drive belts for engagement with sheaves.
	Improper motor operation	Check drive motor and drive motor wiring for proper voltage.
	Improper VFD operation	Check VFD programming.
	Improper VFD sensor operation	Check VFD input sensor (temperature/relative humidity) for malfunctioning.
High pressure drop	Unanticipated airflow	Check airflow and compare to design.
	Dirty filters	Check filters and clean/replace.
	Dirty media	Check media for dirt and clean.
Noise	Out-of-place seals	Check seals and adjust.
	Worn bearings	Check bearings.
	Misaligned belts	Check belts for slippage.

Table 22 — Gas Heater

PROBLEM	POSSIBLE CAUSE	SOLUTION
Steady on - No operation	Internal control fault	
One flash - Combustion airflow fault	Faulty combustion blower	Check for 230V supply and tightness at fan connections. If no power, replace.
	Airflow switch not closing	
	Airflow switch opened during operation	
Two flashes - Flame with no call for heat	Faulty gas valve	Check voltage to gas valve with thermostat off. Valve should not be powered. If there is gas flow, replace valve.
Three flashes - Ignition lockout	Ignition control miscommunication	Reset ignition control by removing 24V power to ignition control terminal 24VAC.
	Dirty burners	Clean burners to ensure proper flame carryover.
	Faulty spark igniter	Check if connecting lead or spark igniter are damaged. If yes, replace.
	Faulty flame sensor	Check if connecting lead or flame probe are damaged and/or touching earthed components. If yes, replace.
	Incorrect gas pressure at gas valve	Check that the gas pressure at inlet of valve is correct for the gas type. If not, correct pressure problem.
	Faulty gas valve	Check that the gas pressure at outlet of the valve rises when valve turns on and returns to zero, or lower, when valve turns off. If not, replace.

NOTE(S):

a. LED flashed on for 0.25 seconds and off for 0.25 seconds during fault condition. The pause between fault codes is 3 seconds.

Table 23 — Electric Heater

PROBLEM	POSSIBLE CAUSE	SOLUTION
No heat	No call for heat	Check that the controls are set to call for heating.
	No power and control voltage to heater	Check that heater has power and control voltage.
	Faulty component	Check components with continuity meter. Replace as necessary.
Not enough heat	Faulty component	Check that ampere draw is reasonably close to that on the heater data plate. If more than 10% short, begin testing individual components. Replace, as necessary.
	Heat anticipator current draw too low, causing short cycling	Check current draw.
Heater cycling on automatic limit	Improper airflow	Check for obstructions to return air, loose or broken fan belt, and clogged filters and/or evaporator coils.
	Faulty temperature limit switch	Test, and if necessary, replace.
Open secondary protective device	Stuck contactor	Check contactor.
Contractor chatter	Improper wiring	Check wiring.
	Insufficient transformer capacity	Check transformer.
Element failure	Corroded hardware and/or loose connections	Check hardware.

