




# 58CTA/58CTX 2 Stage Deluxe Induced-Combustion 4-Way Multipoise Furnace

## Installation, Start-up, Operating, and Service and Maintenance Instructions -Series 100

### THE WEATHERMAKER® 8000TS GAS FURNACE

The 58CTA/CTX Two-Stage, 4-way Multipoise Gas Furnaces offer unmatched comfort in their class with ComfortHeat™ Technology in an 80% AFUE gas furnace. You get the benefits of a ComfortHeat™ Technology furnace: reduced drafts, reduced sound levels, longer cycles, less temperature swings between cycles, and less temperature differences between rooms. Its exclusive, intelligent microprocessor control adapts to the heating needs of the home by automatically adjusting high and low heat times to maximize comfort. The 58CTA/CTX furnaces are approved for use with natural or propane gas, and the 58CTX is also approved for use in Low NOx Air Quality Management Districts.

*ComfortHeat™*  
TECHNOLOGY

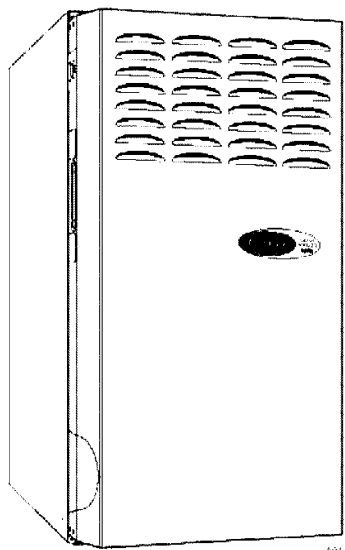

### STANDARD FEATURES

- **ComfortHeat™ Technology**  
Two-stage heating with single-stage thermostat  
Very low operating sound through low-stage operation and **QuietTech™** system
- **Media Filter Cabinet Included**
- **Microprocessor based "smart" control center**  
Adapts heating stages to meet demand  
Dehumidification selection for summer-time cooling  
Adjustable heating air temperature rise  
Adjustable cooling airflow  
**ComfortFan™**--Constant fan speed selectable from thermostat  
LED diagnostics and self test feature  
Stores fault codes during power outages
- **4-way Multipoise furnace, 13 vent applications**
- **Hot surface ignition (HSI)**
- **Draft safeguard switch to ensure proper furnace venting**
- **All Models Chimney-Friendly when used with the accessory vent kit.**
- **Insulated blower compartment**
- **Heat pump compatible**
- **Residential installations eligible for consumer financing through the Retail Credit Program**

### LIMITED WARRANTY

- 20-year warranty on "Super S™" heat exchanger
- 5-year parts warranty on all other components



# 2-Stage Deluxe Induced-Combustion 4-Way Multipoise Furnace

Cancels: II 312A-45-1

II 312A-45-2  
6-02

## Installation, Start-up, Operating, and Service and Maintenance Instructions Series 100/A

**NOTE:** Read the entire instruction manual before starting the installation.

### TABLE OF CONTENTS


|                                                              |    |
|--------------------------------------------------------------|----|
| SAFETY CONSIDERATIONS .....                                  | 2  |
| INTRODUCTION .....                                           | 2  |
| CODES AND STANDARDS .....                                    | 3  |
| Safety .....                                                 | 3  |
| General Installation .....                                   | 3  |
| Combustion and Ventilation Air .....                         | 3  |
| Duct Systems .....                                           | 3  |
| Acoustical Lining and Fibrous Glass Duct .....               | 3  |
| Gas Piping and Gas Pipe Pressure Testing .....               | 3  |
| Electrical Connections .....                                 | 3  |
| ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS<br>PROCEDURE ..... | 3  |
| LOCATION .....                                               | 5  |
| General .....                                                | 5  |
| Location Relative to Cooling Equipment .....                 | 6  |
| AIR FOR COMBUSTION AND VENTILATION .....                     | 6  |
| Unconfined Space .....                                       | 7  |
| Confined Space .....                                         | 7  |
| INSTALLATION .....                                           | 8  |
| Upflow Installation .....                                    | 8  |
| Bottom Return Air Inlet .....                                | 8  |
| Side Return Air Inlet .....                                  | 8  |
| Leveling Legs (If Desired) .....                             | 8  |
| Downflow Installation .....                                  | 9  |
| Horizontal Installation .....                                | 9  |
| Suspended Unit Support .....                                 | 9  |
| Platform Unit Support .....                                  | 9  |
| Roll-Out Protection .....                                    | 9  |
| Filter Arrangement .....                                     | 9  |
| Air Ducts .....                                              | 9  |
| General Requirements .....                                   | 9  |
| Ductwork Acoustical Treatment .....                          | 10 |
| Supply Air Connections .....                                 | 12 |
| Return Air Connections .....                                 | 13 |
| Gas Piping .....                                             | 13 |
| Electrical Connections .....                                 | 15 |
| 115-V Wiring .....                                           | 15 |
| Electrical Connection to J-Box .....                         | 16 |



REGISTERED QUALITY SYSTEM

|                                              |    |
|----------------------------------------------|----|
| For Power Cord Installation .....            | 16 |
| For BX Cable Installation .....              | 16 |
| J-Box Cover Installation .....               | 17 |
| J-Box Relocation .....                       | 15 |
| 24-V Wiring .....                            | 17 |
| Accessories .....                            | 17 |
| Venting .....                                | 17 |
| General Venting Requirements .....           | 17 |
| Masonry Chimney Requirements .....           | 20 |
| Appliance Application Requirements .....     | 22 |
| Additional Venting Requirements .....        | 22 |
| Sidewall Venting .....                       | 25 |
| START-UP, ADJUSTMENT, AND SAFETY CHECK ..... | 25 |
| General .....                                | 25 |
| Start-Up Procedures .....                    | 25 |
| Adjustments .....                            | 27 |
| Check Safety Controls-All Furnaces .....     | 30 |
| Checklist .....                              | 33 |
| SERVICE AND MAINTENANCE PROCEDURES .....     | 33 |
| Introduction .....                           | 36 |
| General .....                                | 36 |
| Electrical Controls and Wiring .....         | 36 |
| Care and Maintenance .....                   | 36 |
| Cleaning and/or Replacing Air Filter .....   | 38 |
| Blower Motor and Wheel .....                 | 38 |
| Cleaning Heat Exchanger .....                | 39 |
| Sequence of Operation .....                  | 42 |
| Wiring Diagrams .....                        | 44 |
| Troubleshooting .....                        | 44 |

Manufacturer reserves the right to discontinue, or change at any time, specifications or designs without notice and without incurring obligations.

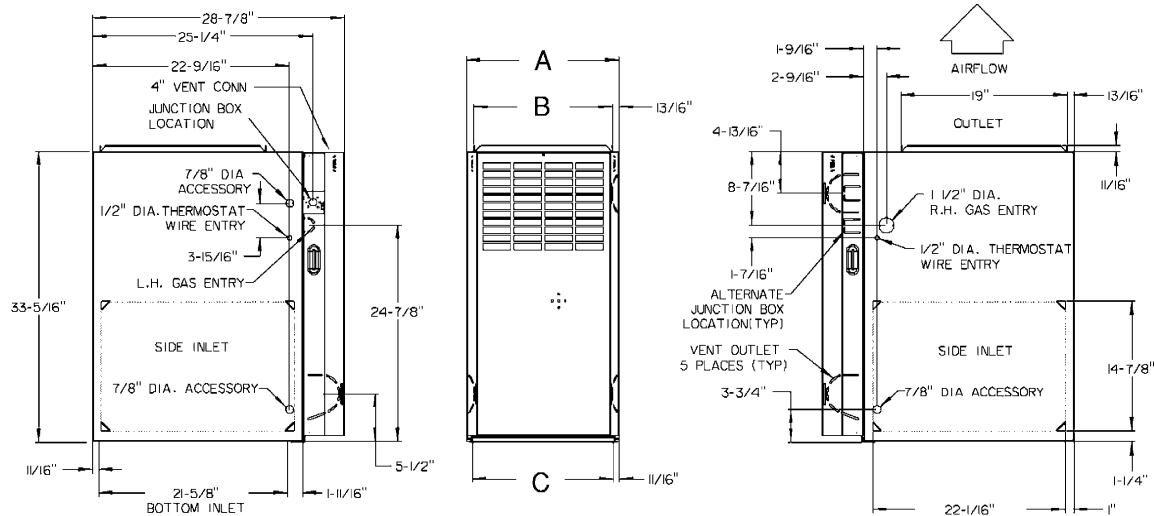

A02096

#### NOTES:

1. Two additional 7/8-in. diameter holes are located in the top plate.
2. Minimum return-air openings at furnace, based on metal duct. If flex duct is used, see flex duct manufacturer's recommendations for equivalent diameters.
  - a. For 800 CFM-16-in. round or 14 1/2 x 12-in. rectangle.
  - b. For 1200 CFM-20-in. round or 14 1/2 x 19 1/2-in. rectangle.
  - c. For 1600 CFM-22-in. round or 14 1/2 x 23 1/4-in. rectangle.
  - d. For airflow requirements above 1800 CFM, see Air Delivery table in Product Data literature for specific use of single side inlets. The use of both side inlets, a combination of 1 side and the bottom, or the bottom only will ensure adequate return air openings for airflow requirements above 1800 CFM.

**Fig. 1—Dimensional Drawing**

#### SAFETY CONSIDERATIONS

**Only trained and qualified personnel should install, repair, or service heating equipment.** Untrained personnel can perform basic maintenance functions such as cleaning and replacing air filters.

Observe precautions in the literature, on tags, and on labels attached to or shipped with the unit and other safety precautions that may apply.

These instructions cover minimum requirements and conform to existing national standards and safety codes. In some instances, these instructions exceed certain local codes and ordinances, especially those that may not have kept up with changing residential construction practices. We require these instructions as a minimum for a safe installation.

Wear safety glasses and work gloves. Have fire extinguisher available during start-up and adjustment procedures and service calls.

This is the safety alert symbol . When you see this symbol on the furnace and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words **DANGER**, **WARNING**, **CAUTION**, and **NOTE**. These words are used with the safety-alert symbol. **DANGER** identifies the most serious hazards which **will** result in severe personal injury or death. **WARNING** signifies a hazard which **could** result in personal injury or death. **CAUTION** is used to identify unsafe practices which **would** result in minor personal injury or product and property damage. **NOTE** is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

1. Use only with type of gas approved for this furnace. Refer to the furnace rating plate.
2. Install this furnace only in a location and position as specified in the "Location" section of these instructions.
3. Provide adequate combustion and ventilation air to the furnace space as specified in "Air for Combustion and Ventilation" section.

4. Combustion products must be discharged outdoors. Connect this furnace to an approved vent system only, as specified in the "Venting" section of these instructions.
5. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections, as specified in the "Gas Piping" section.
6. Always install furnace to operate within the furnace's intended temperature-rise range with a duct system which has an external static pressure within the allowable range, as specified in the "Start-Up, Adjustments, and Safety Check" section. See furnace rating plate.
7. When a furnace is installed so that supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by duct(s) sealed to the furnace casing and terminating outside the space containing the furnace. See "Air Ducts" section.
8. A gas-fired furnace for installation in a residential garage must be installed as specified in the warning box in the "Location" section.
9. The furnace is not to be used for temporary heating of buildings or structures under construction. See page 5 for caution note.

#### INTRODUCTION

The Series 100/A 4-way multipoise Category I furnace is CSA (A.G.A. and C.G.A.) design-certified for natural and propane gas and for installation in alcoves, attics, basements, closets, utility rooms, crawlspaces, and garages. The furnace is factory-shipped for use with natural gas. A CSA (A.G.A. and C.G.A.) listed gas conversion kit is required to convert furnace for use with propane gas. This furnace is **not** approved for installation in mobile homes, recreational vehicles, or outdoors.

These furnaces **shall not** be installed directly on carpeting, tile, or any other combustible material other than wood flooring. For downflow installations, a factory accessory floor base **must** be

**Table 1—Dimensions (IN.)**

| UNIT SIZE     | A       | B       | C        | VENT<br>CONN.* | SHIP WT. (LB) |
|---------------|---------|---------|----------|----------------|---------------|
| 045-08/024045 | 14-3/16 | 12-9/16 | 12-11/16 | 4              | 116           |
| 045-12/036045 | 14-3/16 | 12-9/16 | 12-11/16 | 4              | 117           |
| 070-08/024070 | 14-3/16 | 12-9/16 | 12-11/16 | 4              | 120           |
| 070-12/036070 | 14-3/16 | 12-9/16 | 12-11/16 | 4              | 126           |
| 070-16/048070 | 17-1/2  | 15-7/8  | 16       | 4              | 135           |
| 090-14/042090 | 17-1/2  | 15-7/8  | 16       | 4              | 137           |
| 090-16/048090 | 21      | 19-3/8  | 19-1/2   | 4              | 150           |
| 090-20/060090 | 21      | 19-3/8  | 19-1/2   | 4              | 155           |
| 110-12/036110 | 17-1/2  | 15-7/8  | 16       | 4              | 145           |
| 110-16/048110 | 21      | 19-3/8  | 19-1/2   | 4              | 157           |
| 110-22/066110 | 21      | 19-3/8  | 19-1/2   | 4              | 162           |
| 135-16/048135 | 21      | 19-3/8  | 19-1/2   | 4              | 162           |
| 135-22/066135 | 24-1/2  | 22-7/8  | 23       | 4              | 174           |
| 155-20/060155 | 24-1/2  | 22-7/8  | 23       | 4              | 181           |

\* 5" or 6" vent connector may be required in some cases.

used when installed on combustible materials and wood flooring. This special base is not required when this furnace is installed on the manufacturer's coil assembly, or when the manufacturer's coil box is used. See Figure 2 for clearance to combustible material information.

### **⚠ WARNING**

Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage. Consult a qualified installer, service agency, local gas supplier, or your distributor or branch for information and assistance. The qualified installer or agency must use only factory-authorized and listed kits or accessories when modifying this product. Failure to follow this warning could result in electrical shock, fire, personal injury or death.

This furnace is designed for minimum continuous return-air temperature of 60°F db or intermittent operation down to 55°F db. Return-air temperature must not exceed 85°F db. See Figure 3.

For accessory installation details, refer to the applicable instruction literature.

**NOTE:** Remove all shipping brackets and materials before operating the furnace.

### **CODES AND STANDARDS**

**Follow all national and local codes and standards in addition to these instructions.** The installation must comply with regulations of the serving gas supplier, local building, heating, plumbing, and other codes. In absence of local codes, the installation must comply with the national codes listed below and all authorities having jurisdiction.

In the United States and Canada, follow all codes and standards for the following:

#### **Step 1—Safety**

- US: National Fuel Gas Code (NFGC) NFPA 54–1999/ANSI Z223.1–1999 and the Installation Standards, Warm Air Heating and Air Conditioning Systems ANSI/NFPA 90B
- CANADA: CAN/CGA-B149.1–and .2–M00 National Standard of Canada. Natural Gas and Propane Installation Codes (NSC-NGPIC)

#### **Step 2—General Installation**

- US: Current edition of the NFGC and the NFPA 90B. For copies, contact the National Fire Protection Association Inc., Batterymarch Park, Quincy, MA 02269; or for only the NFGC, contact the American Gas Association, 400 N. Capitol, N.W., Washington DC 2001 or www.NFPA.org.
- CANADA: NSCNGPIC. For a copy, contact Standard Sales, CSA International, 178 Rexdale Boulevard, Etobicoke (Toronto), Ontario, M9W 1R3 Canada

#### **Step 3—Combustion and Ventilation Air**

- US: Section 5.3 of the NFGC, Air for Combustion and Ventilation
- CANADA: Part 7 of NSCNGPIC, Venting Systems and Air Supply for Appliances

#### **Step 4—Duct Systems**

- US and CANADA: Air Conditioning Contractors Association (ACCA) Manual D, Sheet Metal and Air Conditioning Contractors National Association (SMACNA), or American Society of Heating, Refrigeration, and Air Conditioning Engineers (ASHRAE) 1997 Fundamentals Handbook Chapter 32.

#### **Step 5—Acoustical Lining and Fibrous Glass Duct**

- US and CANADA: current edition of SMACNA and NFPA 90B as tested by UL Standard 181 for Class I Rigid Air Ducts

#### **Step 6—Gas Piping and Gas Pipe Pressure Testing**

- US: NFGC; chapters 2, 3, 4, and 9 and National Plumbing Codes
- CANADA: NSCNGPIC Part 5

#### **Step 7—Electrical Connections**

- US: National Electrical Code (NEC) ANSI/NFPA 70–2002
- CANADA: Canadian Electrical Code CSA C22.1

### **ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS PROCEDURE**

Use this procedure for all installed and uninstalled furnaces. An ESD service kit (available from commercial sources) may be used to prevent ESD damage.

**INSTALLATION**

**MINIMUM INCHES CLEARANCE TO COMBUSTIBLE CONSTRUCTION  
DISTANCE MINIMALE EN POUCES AUX CONSTRUCTIONS COMBUSTIBLES**

This forced air furnace is equipped for use with natural gas at altitudes 0-10,000 ft (0-3,050m).  
An accessory kit, supplied by the manufacturer, shall be used to convert to propane gas use or may be required for some natural gas applications.

This furnace is for indoor installation in a building constructed on site.

This furnace may be installed on combustible flooring in alcove or closet at minimum clearance as indicated by the diagram from combustible material.

This furnace may be used with a Type B-1 Vent and may be vented in common with other gas-fired appliances.

Cette fournaise à air pulsé est équipée pour utilisation avec gaz naturel et altitudes comprises entre 0-3,050m (0-10,000 pi).

Utiliser une trousse de conversion, fournie par le fabricant, pour passer au gaz propane ou pour certaines installations au gaz naturel.

Cette fournaise est prévue pour être installée dans un bâtiment construit sur place.

Cette fournaise peut être installée sur un plancher combustible dans une alcôve ou dans un garde-robe en respectant le minimum d'espace libre des matériaux combustibles, tel qu'indiqué sur le diagramme.

Cette fournaise peut être utilisée avec un conduit d'évacuation de Type B-1 ou connectée au conduit commun d'autres appareils à gaz.

This furnace is approved for UPFLOW, DOWNFLOW, and HORIZONTAL installations.

Cette fournaise est approuvée pour l'installation HORIZONTALE et la circulation d'air VERS LE HAUT et VERS LE BAS.

Clearance arrows do not change with furnace orientation.

Les flèches de dégagement ne changent pas avec l'orientation de la fournaise.

Clearance in inches  
Dégagement (po).

Vent Clearance to combustibles:  
For Single Wall vents 6 inches (6 po).  
For Type B-1 vent type 1 inch (1 po).

Dégagement de l'évent avec combustibles:  
Pour conduit d'évacuation à paroi simple 6 po (6 inches).  
Pour conduit d'évacuation de Type B-1 1 po (1 inch).

**MINIMUM INCHES CLEARANCE TO COMBUSTIBLE CONSTRUCTION**

† DOWNFLOW POSITIONS:  
Installation on non-combustible floors only.  
For Installation on combustible flooring only when installed on special base, Part No. KGASB0201ALL,  
Ø Coil Assembly, Part No. CD5 or CK5, or Coil Casing, Part No. KCAKC.  
18 inches front clearance required for alcove.

\* Indicates supply or return sides when furnace is in the horizontal position. Line contact only permissible between lines formed by intersections of the Top and two Sides of the furnace jacket, and building joists, studs or framing.

† POUR LA POSITION COURANT DESCENDANT:  
Pour l'installation sur plancher non combustible seulement.  
Pour l'installation sur un plancher combustible seulement quand on utilise la base spéciale, pièce n° KGASB0201ALL,  
Ø l'ensemble serpentin, pièce n° CD5 ou CK5, ou le carter de serpentin, pièce n° KCAKC.  
Dans une alcôve, on doit maintenir un dégagement à l'avant de 18 po (450 mm).

\* La position indiquée concerne le côté d'entrée ou de retour quand la fournaise est dans la position horizontale.  
Le contact n'est permis qu'entre les lignes formées par les intersections du dessus et des deux côtés de la chemise de la fournaise et les solives, montant sous cadre de charpente.

**DÉGAGEMENT MINIMUM EN POUCES AVEC ÉLÉMENTS DE CONSTRUCTION COMBUSTIBLES**

† POUR LA POSITION COURANT DESCENDANT:  
Pour l'installation sur plancher non combustible seulement.  
Pour l'installation sur un plancher combustible seulement quand on utilise la base spéciale, pièce n° KGASB0201ALL,  
Ø l'ensemble serpentin, pièce n° CD5 ou CK5, ou le carter de serpentin, pièce n° KCAKC.  
Dans une alcôve, on doit maintenir un dégagement à l'avant de 18 po (450 mm).

\* La position indiquée concerne le côté d'entrée ou de retour quand la fournaise est dans la position horizontale.  
Le contact n'est permis qu'entre les lignes formées par les intersections du dessus et des deux côtés de la chemise de la fournaise et les solives, montant sous cadre de charpente.

† POUR LA POSITION COURANT DESCENDANT:  
Pour l'installation sur plancher non combustible seulement.  
Pour l'installation sur un plancher combustible seulement quand on utilise la base spéciale, pièce n° KGASB0201ALL,  
Ø l'ensemble serpentin, pièce n° CD5 ou CK5, ou le carter de serpentin, pièce n° KCAKC.  
Dans une alcôve, on doit maintenir un dégagement à l'avant de 18 po (450 mm).

\* La position indiquée concerne le côté d'entrée ou de retour quand la fournaise est dans la position horizontale.  
Le contact n'est permis qu'entre les lignes formées par les intersections du dessus et des deux côtés de la chemise de la fournaise et les solives, montant sous cadre de charpente.

**327590-101 REV. A**

**Fig. 2—Clearances to Combustibles**

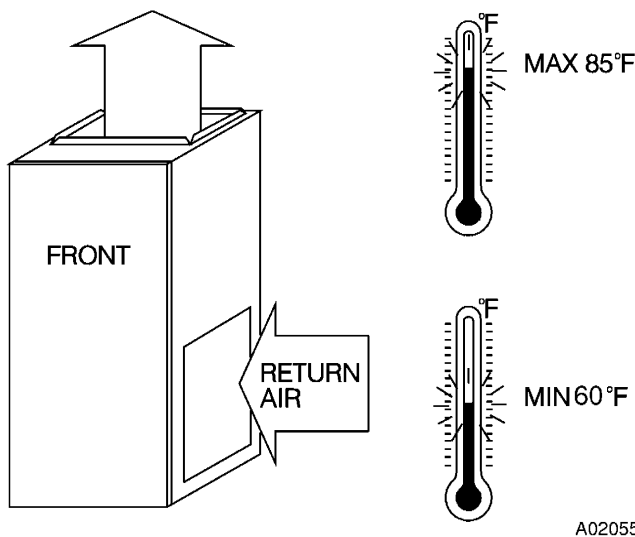


**Fig. 3—Return Air Temperature**

### ⚠ CAUTION

Electrostatic discharge can affect electronic components. Follow the Electrostatic Discharge Precautions Procedure listed below during furnace installation and servicing to protect the furnace electronic control. Precautions will prevent electrostatic discharges from personnel and hand tools which are held during the procedure. These precautions will help to avoid exposing the control to electrostatic discharge by putting the furnace, the control, and the person at the same electrostatic potential.

1. Disconnect all power to the furnace. Multiple disconnects may be required. **DO NOT TOUCH THE CONTROL OR ANY WIRE CONNECTED TO THE CONTROL PRIOR TO DISCHARGING YOUR BODY'S CHARGE TO GROUND.**
2. Firmly touch a clean, unpainted metal surface on the furnace chassis close to the control. Tools held in hand during grounding will be discharged.
3. You may proceed to service the control or connecting wires as long as you do nothing to recharge your body (moving or shuffling feet, touching ungrounded objects, etc.)
4. If you touch ungrounded objects, firmly touch a clean, unpainted metal surface again before touching control or wires.
5. Before removing a new control from its container, discharge your body's charge to the ground. If the control is to be installed in a furnace, follow items 1 through 4 before bringing the control or yourself in contact with the furnace. Put all used and new controls into containers before touching ungrounded objects.

## LOCATION

### Step 1—General

This multipoise furnace is shipped in packaged configuration. Some assembly and modifications are required when used in any of the four applications shown in Figure 4.

**NOTE:** For high-altitude installations, the high-altitude conversion kit **MUST** be installed at or above 5500 ft above sea level. Obtain high-altitude conversion kit from your area authorized distributor.

This furnace must:

- be installed so the electrical components are protected from water.
- **not** be installed directly on any combustible material other than wood flooring (refer to INTRODUCTION).
- be located as close to the chimney/vent and attached to an air distribution system. Refer to Air Ducts section.
- be provided ample space for servicing and cleaning. Always comply with minimum fire protection clearances shown on the furnace rating plate.

### ⚠ CAUTION

Do not install furnace in a corrosive or contaminated atmosphere. Make sure all combustion and circulating air requirements are met, in addition to all local codes and ordinances.

### ⚠ CAUTION

→ This gas furnace may be used for construction heat provided that:

-The furnace is permanently installed with all electrical wiring, piping, venting and ducting installed according to these installation instructions. A return air duct is provided, sealed to the furnace casing, and terminated outside the space containing the furnace. This prevents a negative pressure condition as created by the circulating air blower, causing a flame rollout and/or drawing combustion products into the structure.

-The furnace is controlled by a thermostat. It may not be "hot wired" to provide heat continuously to the structure without thermostatic control.


-Clean outside air is provided for combustion. This is to minimize the corrosive effects of adhesives, sealers and other construction materials. It also prevents the entrainment of drywall dust into combustion air, which can cause fouling and plugging of furnace components.

-The temperature of the return air to the furnace is no less than 55 degrees F, with no evening setback or shutdown. The use of the furnace while the structure is under construction is deemed to be intermittent operation per our installation instructions.

-The air temperature rise is within the rated rise range on the furnace rating plate, and the firing rate has been set to the nameplate value.

-The filters used to clean the circulating air during the construction process must be either changed or thoroughly cleaned prior to occupancy.

-The furnace, ductwork and filters are cleaned as necessary to remove drywall dust and construction debris from all HVAC system components after construction is completed.

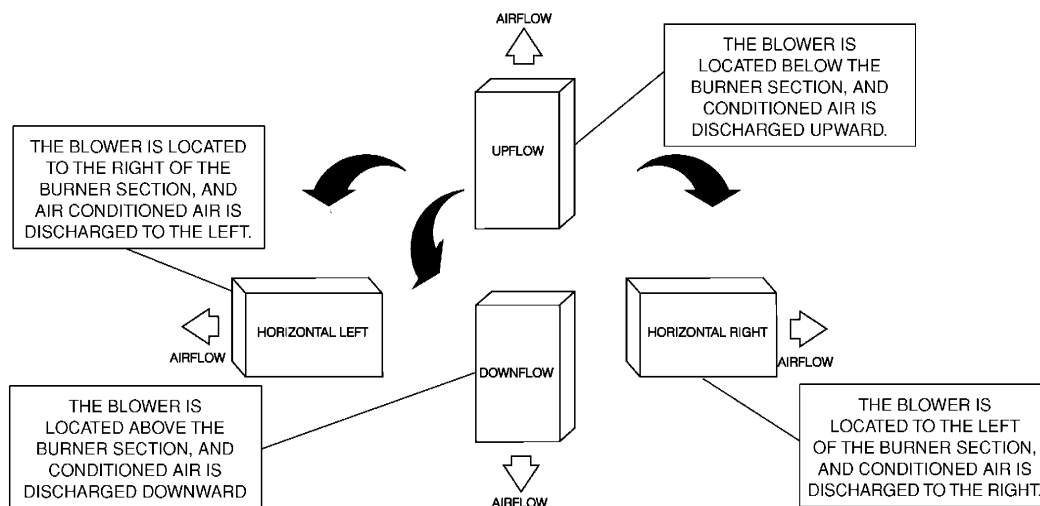


A02097

Fig. 4—Multipoise Orientations

**⚠ WARNING**

DO NOT install the furnace on its back, or hang furnace with control compartment facing down. Safety control operation will not perform properly. Failure to follow this warning can cause a fire, personal injury, or death. (See Fig. 5.)

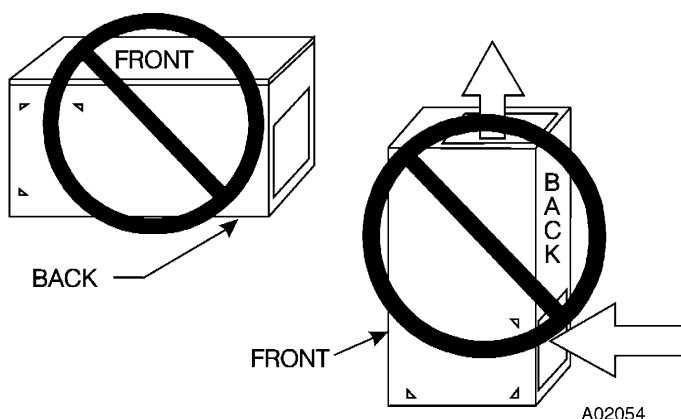

A02054

Fig. 5—Prohibit Installation on Back


## Step 2—Location Relative to Cooling Equipment

The cooling coil must be installed parallel with, or on the downstream side of the unit to avoid condensation in the heat exchangers. When installed parallel with the furnace, dampers or other flow control must prevent chilled air from entering the furnace. If the dampers are manually operated, they must be equipped with means to prevent operation of either unit unless the damper is in the full-heat or full-cool position.

## AIR FOR COMBUSTION AND VENTILATION

Provisions for adequate combustion and ventilation air must be provided in accordance with Section 5.3 of the NFGC, Air for Combustion and Ventilation, or applicable provisions of the local building codes.

Canadian installations must be installed in accordance with NSC-NGPIC Part 7 and all authorities having jurisdiction.

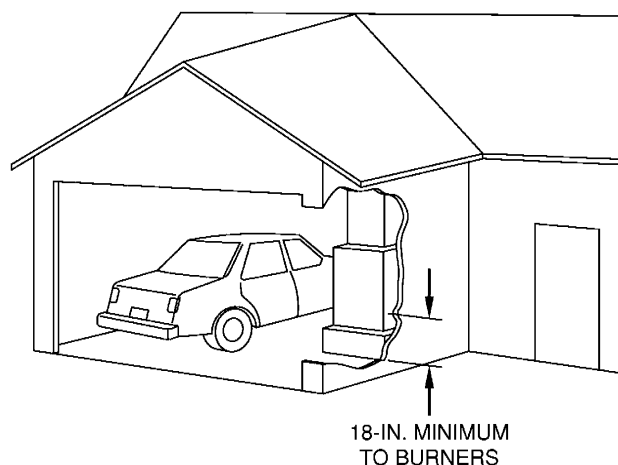

A93044

Fig. 6—Installation in a Garage

**⚠ WARNING**

When the furnace is installed in a residential garage, the burners and ignition sources must be located at least 18 inches above the floor. The furnace must be located or protected to avoid damage by vehicles. When the furnace is installed in a public garage, airplane hangar, or other building having a hazardous atmosphere, the furnace must be installed in accordance with the National Fire Protection Association, Inc. requirements. (See Fig. 6.)

**⚠ CAUTION**

Air for combustion must not be contaminated by halogen compounds, which include fluoride, chloride, bromide, and iodide. These elements are found in aerosol sprays, detergents, bleaches, cleaning solvents, salts, air fresheners, and other household products.

All fuel-burning equipment must be supplied with air for fuel combustion. Sufficient air **must** be provided to avoid negative pressure in the equipment room or space. A positive seal **must** be made between the furnace cabinet and the return-air duct to prevent pulling air from the burner area and from blocked vent safeguard opening.

**Table 2—Minimum Free Area of Combustion Air Opening\***

| FURNACE INPUT (BTUH) | AIR FROM INDOOR UNCONFINED SPACE | OUTDOOR AIR THROUGH VERTICAL DUCTS      |                      | OUTDOOR AIR THROUGH HORIZONTAL DUCTS   |                      | OUTDOOR AIR THROUGH SINGLE DUCT        |                      |
|----------------------|----------------------------------|-----------------------------------------|----------------------|----------------------------------------|----------------------|----------------------------------------|----------------------|
|                      | Free Area of Opening (Sq In.)    | Free Area of Opening and Duct (Sq. In.) | Round Pipe (in. Dia) | Free Area of Opening and Duct (sq In.) | Round Pipe (in. Dia) | Free Area of Opening and Duct (Sq In.) | Round Pipe (In. Dia) |
| 44,000               | 100                              | 11                                      | 4                    | 22                                     | 6                    | 14.7                                   | 5                    |
| 66,000               | 100                              | 16.5                                    | 5                    | 33                                     | 7                    | 22.0                                   | 6                    |
| 88,000               | 100                              | 22.0                                    | 6                    | 44.0                                   | 8                    | 29.3                                   | 7                    |
| 110,000              | 110                              | 27.5                                    | 6                    | 55                                     | 9                    | 36.7                                   | 7                    |
| 132,000              | 132                              | 33                                      | 7                    | 66                                     | 10                   | 44.0                                   | 8                    |
| 154,000              | 154                              | 38.5                                    | 7                    | 77                                     | 10                   | 51.3                                   | 8                    |

\* Free area shall be equal to or greater than the sum of the areas of all vent connectors in the confined space. Opening area must be increased if other gas appliances in the space require combustion air.

### ⚠ CAUTION

The operation of exhaust fans, kitchen ventilation fans, clothes dryers, attic exhaust fans or fireplaces could create a **NEGATIVE PRESSURE CONDITION** at the furnace. Make-up air **MUST** be provided for the ventilation devices, in addition to that required by the furnace.

The requirements for combustion and ventilation air depend upon whether the furnace is located in an unconfined or confined space.

#### Step 1—Unconfined Space

An **unconfined space** has a volume of at least 50 cu ft for each 1000 Btuh total input for all appliances (furnaces, clothes dryers, water heaters, etc.) in the space.

For example:

| FURNACE INPUT (BTUH) | MINIMUM WITH 7-1/2 FT CEILING (SQ. FT.) |
|----------------------|-----------------------------------------|
| 44,000               | 294                                     |
| 66,000               | 441                                     |
| 88,000               | 587                                     |
| 110,000              | 734                                     |
| 132,000              | 881                                     |
| 154,000              | 1028                                    |


If the unconfined space is constructed unusually tight, air for combustion and ventilation **must** come from either the outdoors or spaces freely communicating with the outdoors. Combustion and ventilation openings must be equivalent to those used for a confined space (defined below). Return air must not be taken from the room unless an equal or greater amount of air is supplied to the room.

#### Step 2—Confined Space

A **confined space** has a volume less than 50 cu ft per 1000 Btuh of total input ratings of all appliances installed in that space. A confined space **must** have provisions for supplying air for combustion, ventilation, and dilution of flue gases using one of the following methods in Table 2 and Fig. 7 and 8.

**NOTE:** When determining the free area of an opening, the blocking effect of louvers, grilles, and screens must be considered. If the free area of the louver or grille design is unknown, assume wood louvers have a 20 percent free area and metal louvers or grilles have a 60 percent free area. Screens must not be smaller than 1/4-in. mesh. Louvers and grilles must be constructed so they cannot be closed.

The opening size depends upon whether air comes from outside of the structure or an unconfined space inside the structure.

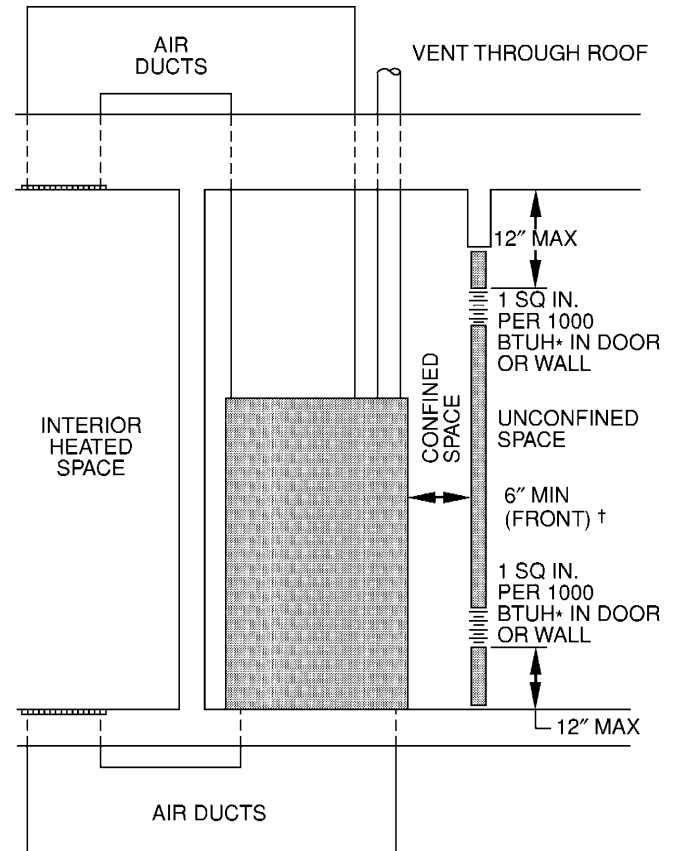


\* Minimum opening size is 100 sq in. with minimum dimensions of 3 in.

† Minimum of 3 in. when type-B1 vent is used.

A02038

**Fig. 7—Confined Space: Air for Combustion and Ventilation from an Unconfined Indoor Space**

- Air from inside the structure requires 2 openings (for structures not of unusually tight construction):
  - Each opening must have a minimum free area of not less than 1 sq in per 1000 Btuh of total input rating for all gas utilization equipment in the confined space, but not less than 100 sq in. The minimum dimension of air openings should be no smaller than 3 in. (See Table 2 and Fig. 7.)
  - If building construction is unusually tight, a permanent opening directly communicating with the outdoors shall be provided. (See next section).

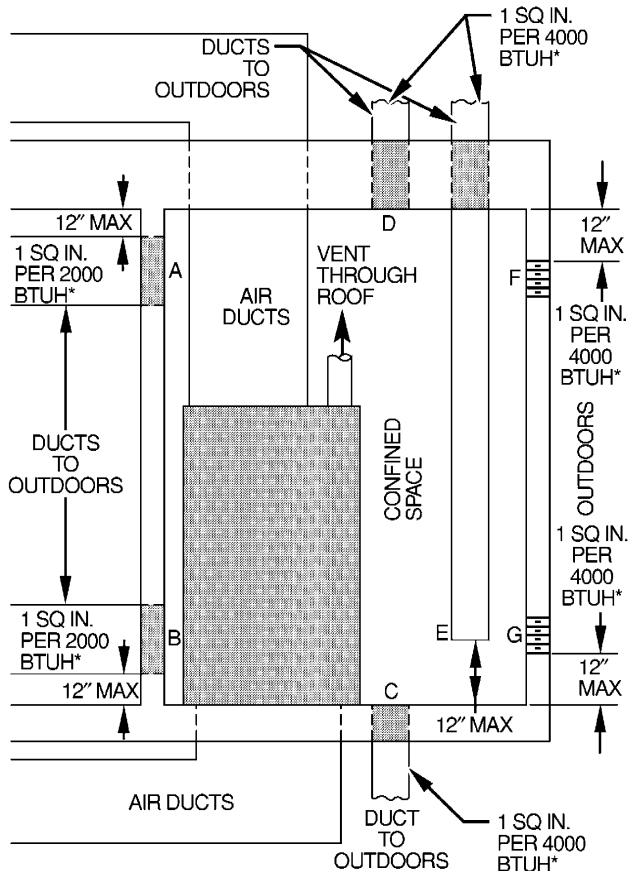

\*Minimum dimensions of 3 in.

**NOTE:** Use any of the following combinations of openings:  
A & B C & D D & E F & G

A02165

**Fig. 8—Confined Space: Air for Combustion and Ventilation from Outdoors**

- c. If the furnace is installed on a raised platform to provide a return-air plenum, and return air is taken directly from the hallway or space adjacent to furnace, all air for combustion must come from outdoors.
2. Air from outside the structure requires 1 of the following:
  - a. If combustion air is taken from outdoors through 2 vertical ducts, the openings and ducts **must** have at least 1 sq in. of free area per 4000 Btuh of total input for all equipment within the confined space. (See Fig. 8 and Table 2.)
  - b. If combustion air is taken from outdoors through 2 horizontal ducts, the openings and ducts **must** have at least 1 sq in. of free area per 2000 Btuh of total input for all equipment within the confined space. (See Fig. 8 and Table 2.)
  - c. If combustion air is taken from the outdoors through a single opening or duct (horizontal or vertical) commencing within 12 in. of the top of the confined space, the opening and duct **must** have at least 1 sq in. of free area per 3000 Btuh of the total input for all equipment within the confined space and not less than the sum of the areas of all vent connectors in the confined space. Equipment clearances to the structure shall be at least 1 in. from the sides and back and 6 in. from the front of the appliances. See Table 2 and Fig. 8.

When ducts are used, they must be of the same cross sectional area as the free area of the openings to which they connect. The minimum dimension of ducts must not be less than 3 in.

## INSTALLATION

### Step 1—Upflow Installation

#### BOTTOM RETURN AIR INLET

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. Remove and discard this panel when bottom return air is used. To remove bottom closure panel, perform the following:

1. Tilt or raise furnace and remove 2 screws holding front filler panel. (See Fig. 9.)
2. Rotate front filler panel downward to release holding tabs.
3. Remove bottom closure panel.
4. Reinstall front filler panel and screws.

#### SIDE RETURN AIR INLET

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. This panel **MUST** be in place when only side return air is used.

**NOTE:** Side return-air openings can be used in UPFLOW and most HORIZONTAL configurations ONLY.


#### LEVELING LEGS (IF DESIRED)

In upflow position with side return inlet(s), leveling legs may be used. (See Fig. 10.) Install field-supplied, 5/16 X 1 1/2 in. (max) corrosion-resistant machine bolts, washers and nuts.

**NOTE:** Bottom closure must be used when leveling legs are used. It may be necessary to remove and reinstall bottom closure panel to install leveling legs. To remove bottom closure panel, see Step 1


To install leveling legs:

1. Position furnace on its back. Locate and drill a hole in each bottom corner of furnace. (See Fig. 10.)
2. For each leg, install nut on bolt and then install bolt and nut in hole. (Install flat washer if desired.)
3. Install another nut on other side of furnace base. (Install flat washer if desired.)
4. Adjust outside nut to provide desired height, and tighten inside nut to secure arrangement.
5. Reinstall bottom closure panel if removed.

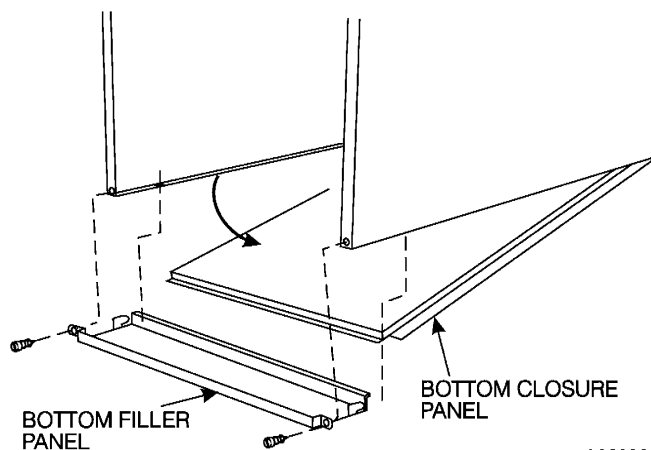

A02098

**Fig. 9—Removing Bottom Closure Panel**

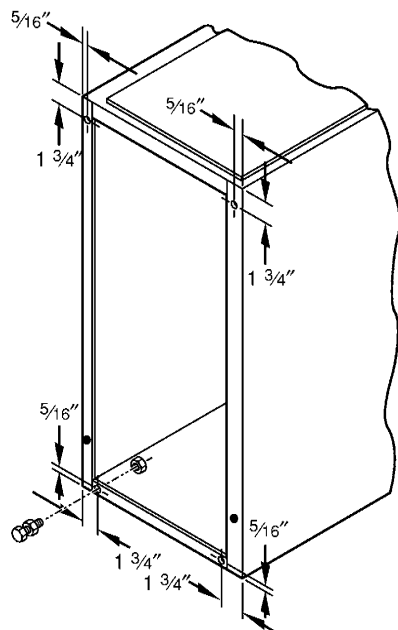

A02071

**Fig. 10—Leveling Legs**

### Step 2—Downflow Installation

**NOTE:** For downflow applications, this furnace is approved for use on combustible flooring when any one of the 3 accessories are used:

- Special Base, KGASB0201ALL
  - Cased Coil Assembly Part No. CD5 or CK5
  - Coil Box Part No. KCAKC
1. Determine application being installed from Table 3.
  2. Construct hole in floor per Table 3 and Fig. 11.
  3. Construct plenum to dimensions specified in Table 3 and Fig. 11.
  4. If downflow subbase, KGASB0201ALL is used, install as shown in Fig. 12. If Coil Assembly Part No. CD5 or CK5 or Coil Box Part No. KCAKC is used, install as shown in Fig. 13.

**NOTE:** Completely fold over or remove the perforated supply-air duct flanges from furnace when installing the furnace on a factory-supplied cased coil or coil box. To remove the supply-air duct flange, use wide duct pliers or hand seamers to bend flange back and forth until it breaks off. Be careful of sharp edges. (See Fig. 14.)

#### **⚠ WARNING**

If duct flanges are not removed, bent up, or bent over more than 120°, airflow across heat exchangers will be affected. This may cause limit cycling or premature heat exchanger failure.

### Step 3—Horizontal Installation

#### **⚠ WARNING**

Do not install the furnace on its back or hang furnace with control compartment facing downward. Safety control operation will be adversely affected. Never connect return-air ducts to the back of the furnace. Failure to follow this warning could result in fire, personal injury, or death.

The furnace can be installed horizontally in an attic or crawl space on either the left-hand (LH) or right-hand (RH) side. The furnace

can be hung from floor joists, rafters or trusses or installed on a platform, non-combustible blocks, bricks or pad.

### SUSPENDED UNIT SUPPORT

The furnace may be supported under each end with threaded rod, angle iron or metal plumber's strap as shown. (See Fig 15 and 16.) Secure angle iron to bottom of furnace as shown. Heavy-gauge sheet metal straps (plumber's straps) may be used to suspend the unit from each bottom corner. To prevent screws from pulling out, use 2 # 8 x 3/4-in. screw into the side and 2 # 8 x 3/4-in. screw in the bottom of the furnace casing for each strap. (See Fig. 15 and 16.)

### PLATFORM UNIT SUPPORT

Construct working platform at location where all required furnace clearances are met. (See Fig. 2 and 17.) For furnaces with 1-in. clearance requirement on side, set unit on non-combustible blocks, bricks or angle iron. For crawlspace installations, if the unit is not suspended from the floor joists, the ground underneath unit must be level and the unit set on blocks or bricks.

### ROLL-OUT PROTECTION

Provide a minimum 17 3/4" X 22" piece of sheet metal for roll-out protection in front of burner area for units closer than 12 inches above the combustible deck or suspended units closer than 12-in. to joists. The sheet metal **MUST** extend underneath the furnace casing by 1 in. with the door removed.

The bottom closure pan on furnaces of widths 17 1/2 in. and larger may be used for roll-out protection when bottom of furnace is used for return air connection. See Fig. 17 for proper orientation of roll-out shield.

### Step 4—Filter Arrangement

There are no provisions for an internal filter rack in these furnaces. An external filter rack is required.

This furnace is shipped with a factory-supplied Media Filter Cabinet. The Media Filter Cabinet uses either a factory-supplied standard 1 inch filter or 4 inch wide Media Filter which can be purchased separately.

Refer to the instructions supplied with Media Cabinet for assembly and installation options.

#### **⚠ WARNING**

Never operate a furnace without a filter or with filter access door removed. Failure to follow this warning could result in fire, personal injury, or death.

### Step 5—Air Ducts

#### GENERAL REQUIREMENTS

The duct system should be designed and sized according to accepted national standards such as those published by: Air Conditioning Contractors Association (ACCA), Sheet Metal and Air Conditioning Contractors National Association (SMACNA) or American Society of Heating, Refrigerating and Air Conditioning Engineers (ASHRAE). Or consult *The Air Systems Design Guidelines* reference tables available from your local distributor. The duct system should be sized to handle the required system design CFM at the design external static pressure.

When a furnace is installed so that the supply ducts carry air to areas outside the space containing the furnace, the return air must also be handled by a duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.

Secure ductwork with proper fasteners for type of ductwork used. Seal supply- and return-duct connections to furnace with code approved tape or duct sealer.

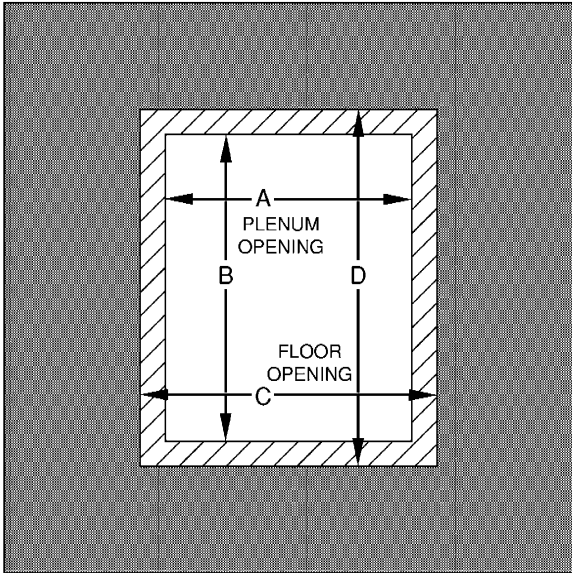


Fig. 11—Floor and Plenum Opening Dimensions<sup>A96283</sup>

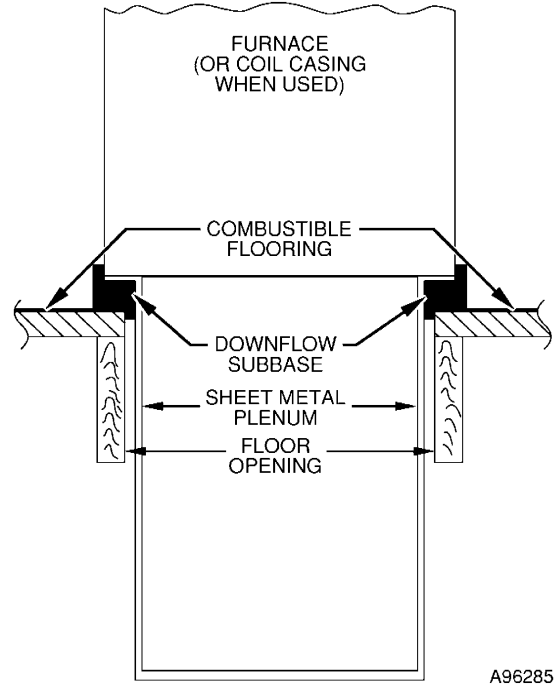


Fig. 12—Furnace, Plenum, and Subbase Installed on a Combustible Floor<sup>A96285</sup>

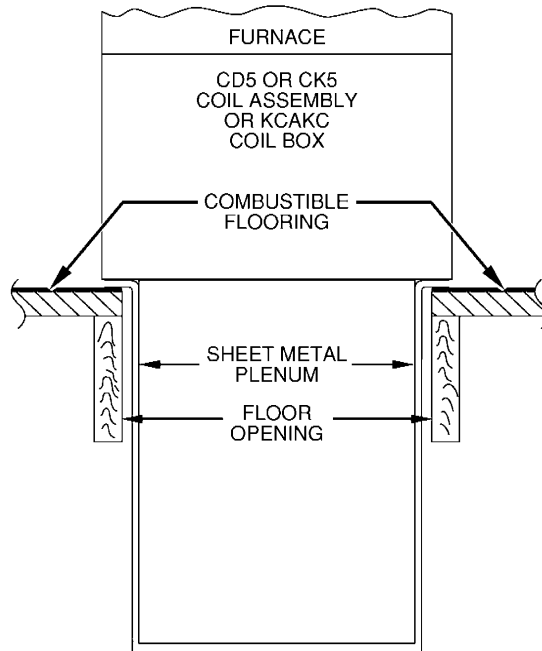


Fig. 13—Furnace, Plenum, and Coil Assembly or Coil Box Installed on a Combustible Floor<sup>A96284</sup>

**Installation tip:** Flexible connections should be used between ductwork and furnace to prevent transmission of vibration.

Ductwork passing through unconditioned space should be insulated to enhance system performance. When air conditioning is used, a vapor barrier is recommended.

Maintain a 1-in. clearance from combustible materials to supply air ductwork for a distance of 36 in. horizontally from the furnace. See NFPA 90B or local code for further requirements.


For a furnace not equipped with a cooling coil, the outlet duct shall be provided with a removable access panel. This opening shall be accessible when the furnace is installed and shall be of such a size that the heat exchanger can be viewed for possible openings using light assistance or a probe can be inserted for sampling the air stream.

#### DUCTWORK ACOUSTICAL TREATMENT

**Installation tip:** Metal duct systems that do not have a 90 degree elbow and 10 ft of main duct to the first branch take-off may require internal acoustical lining. As an alternative, fibrous ductwork may be used if constructed and installed in accordance with the latest edition of SMACNA construction standard on fibrous

**Table 3—Opening Dimensions (In.)**


| FURNACE CASING WIDTH | APPLICATION                                                                                                                | PLENUM OPENING |        | FLOOR OPENING |        |
|----------------------|----------------------------------------------------------------------------------------------------------------------------|----------------|--------|---------------|--------|
|                      |                                                                                                                            | A              | B      | C             | D      |
| 14–3/16              | Upflow Applications on Combustible or Noncombustible Flooring (KGASB subbase not required)                                 | 12-11/16       | 21-5/8 | 13-5/16       | 22-1/4 |
|                      | Downflow Applications on Noncombustible Flooring (KGASB subbase not required)                                              | 12-9/16        | 19     | 13-3/16       | 19-5/8 |
|                      | Downflow applications on combustible flooring ( <b>KGASB subbase required</b> )                                            | 11-13/16       | 19     | 13-7/16       | 20-5/8 |
|                      | Downflow Applications on Combustible Flooring with CD5 or CK5 Coil Assembly or KCAKC coil box (KGASB subbase not required) | 12-5/16        | 19     | 13-5/16       | 20     |
| 17–1/2               | Upflow Applications on Combustible or Noncombustible Flooring (KGASB subbase not required)                                 | 16             | 21-5/8 | 16-5/8        | 22-1/4 |
|                      | Downflow Applications on Noncombustible Flooring (KGASB subbase not required)                                              | 15-7/8         | 19     | 16-1/2        | 19-5/8 |
|                      | Downflow applications on combustible flooring ( <b>KGASB subbase required</b> )                                            | 15-1/8         | 19     | 16-3/4        | 20-5/8 |
|                      | Downflow Applications on Combustible Flooring with CD5 or CK5 Coil Assembly or KCAKC coil box (KGASB subbase not required) | 15-1/2         | 19     | 16-1/2        | 20     |
| 21                   | Upflow Applications on Combustible or Noncombustible Flooring (KGASB subbase not required)                                 | 19-1/2         | 21-5/8 | 20-1/8        | 22-1/4 |
|                      | Downflow Applications on Noncombustible Flooring (KGASB subbase not required)                                              | 19-3/8         | 19     | 20            | 19-5/8 |
|                      | Downflow applications on combustible flooring ( <b>KGASB subbase required</b> )                                            | 18-5/8         | 19     | 20-1/4        | 20-5/8 |
|                      | Downflow Applications on Combustible Flooring with CD5 or CK5 Coil Assembly or KCAKC coil box (KGASB subbase not required) | 19             | 19     | 20            | 20     |
| 24-1/2               | Upflow Applications on Combustible or Noncombustible Flooring (KGASB subbase not required)                                 | 23             | 21-1/8 | 23-5/8        | 22-1/4 |
|                      | Downflow Applications on Noncombustible Flooring (KGASB subbase not required)                                              | 22-7/8         | 19     | 23-1/2        | 19-5/8 |
|                      | Downflow applications on Combustible flooring ( <b>KGASB subbase required</b> )                                            | 22-1/8         | 19     | 23-3/4        | 20-5/8 |
|                      | Downflow Applications on Combustible Flooring with CD5 or CK5 Coil Assembly or KCAKC coil box (KGASB subbase not required) | 22-1/2         | 19     | 23-1/2        | 20     |

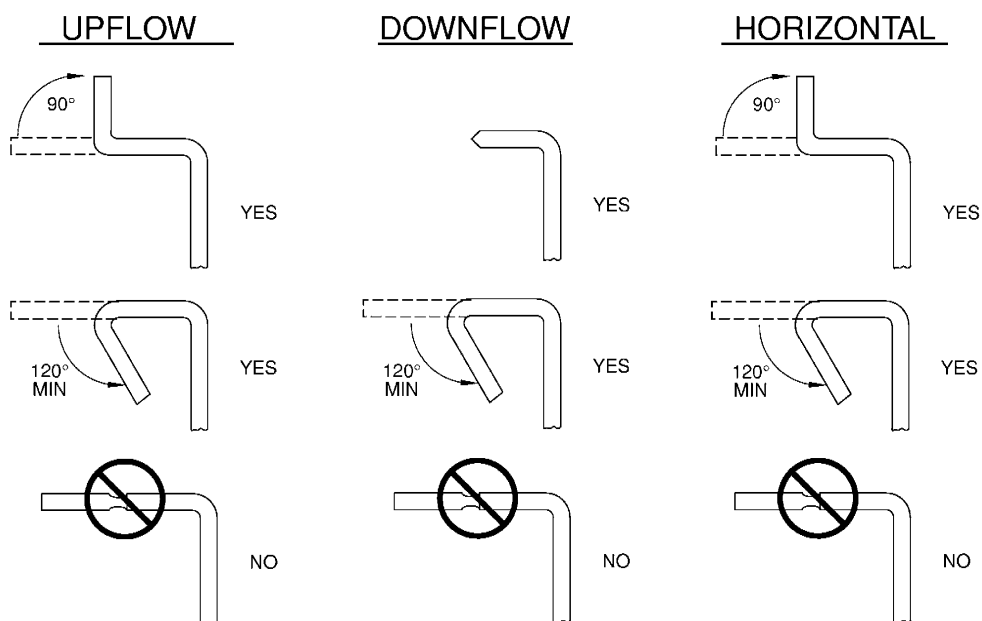

A02020


**Fig. 14—Duct Flanges**

glass ducts. Both acoustical lining and fibrous ductwork shall comply with NFPA 90B as tested by UL Standard 181 for Class 1 Rigid air ducts.

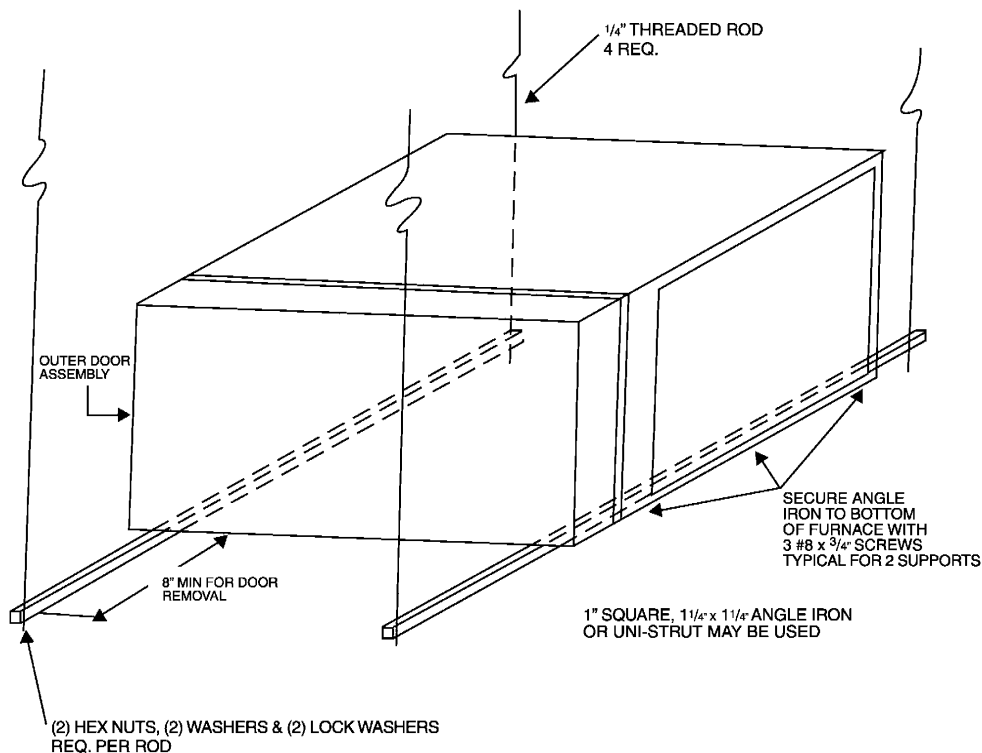

A02013

**Fig. 15—Horizontal Unit Suspension**

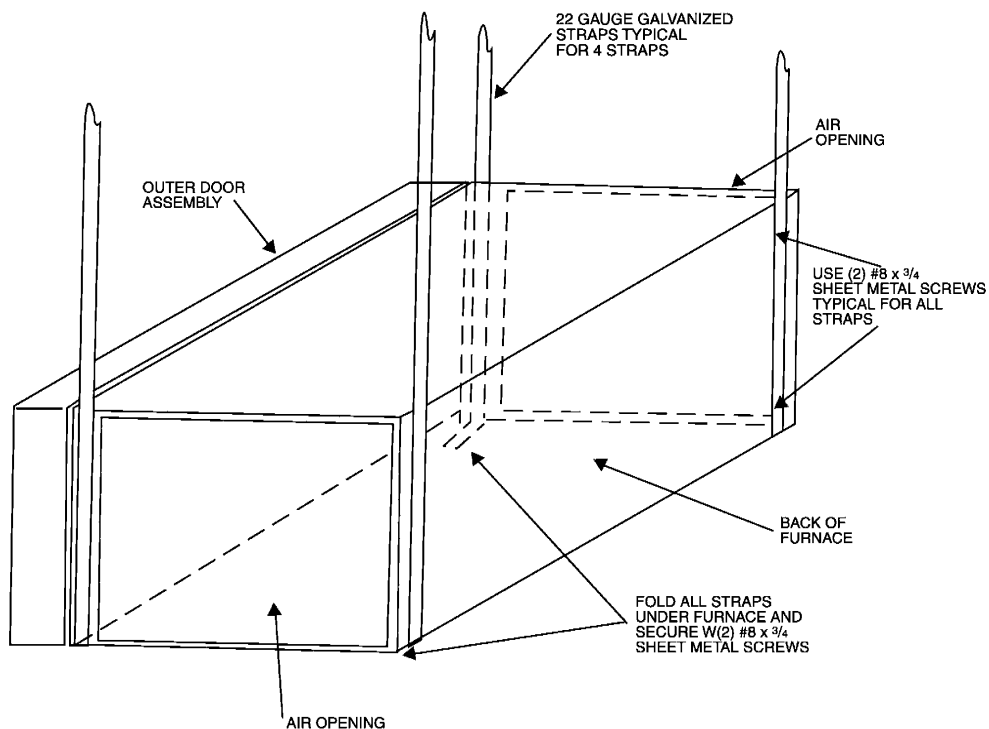

A02014

**Fig. 16—Horizontal Suspension with Straps**


## SUPPLY AIR CONNECTIONS

### Upflow and Horizontal Furnaces

Connect supply-air duct to flange on furnace supply-air outlet. Bend flange upward to 90° with wide duct pliers. The supply-air duct attachment must **ONLY** be connected to furnace supply-outlet-air duct flanges or air conditioning coil casing (when used).

DO NOT cut main furnace casing to attach supply side air duct, humidifier, or other accessories. All accessories **MUST** be connected external to furnace main casing. Supply air opening duct flanges must be modified per Fig. 14.

→ **Installation tip:** For horizontal applications, the top-most flange may be bent past 90 degrees to allow the evaporator coil to hang on the flange temporarily while the remaining attachment and sealing of the coil are performed.

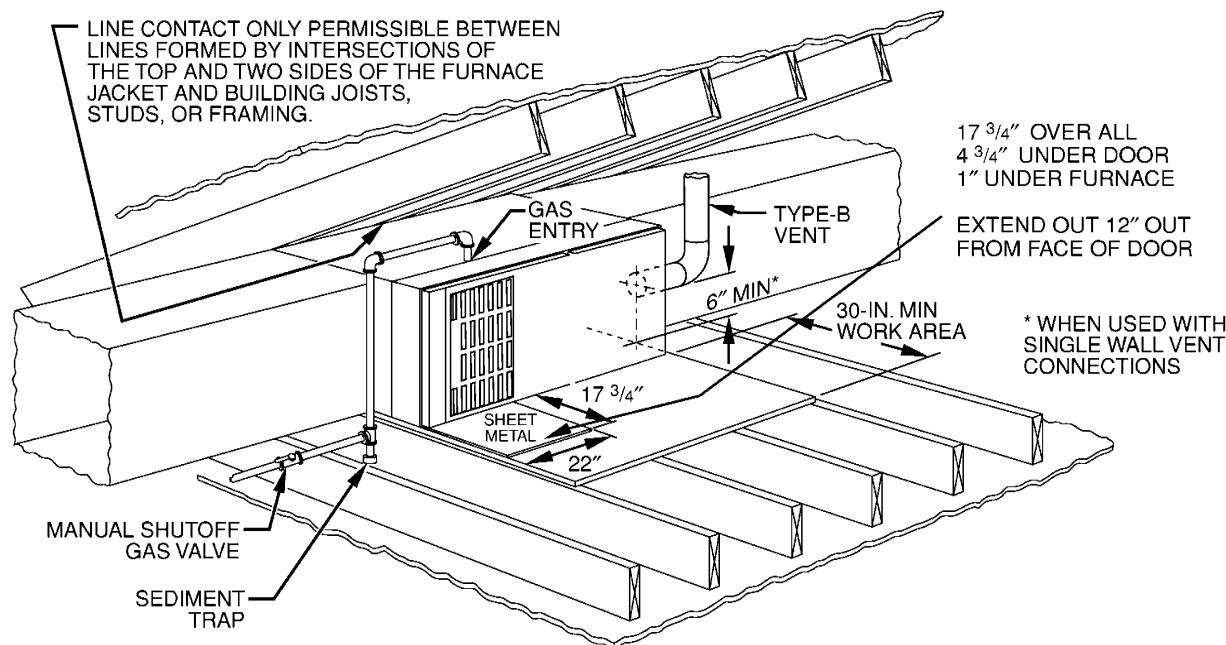

A02164

**Fig. 17—Typical Attic Installation**

#### Downflow Furnaces

Connect supply-air duct to supply-air opening on furnace. The supply-air duct attachment must **ONLY** be connected to furnace supply/outlet or air conditioning coil casing (when used). When installed on combustible material, supply-air duct attachment must **ONLY** be connected to the accessory subbase, KGASB0201ALL, or factory approved air conditioning coil casing. **DO NOT** cut main furnace casing to attach supply side air duct, humidifier, or other accessories. All accessories **MUST** be connected external to furnace casing. Supply air opening duct flanges must be modified per Fig. 14.

#### RETURN AIR CONNECTIONS

##### **⚠ WARNING**

Never connect return-air ducts to the back of the furnace. A failure to follow this warning can cause a fire, personal injury, or death.

#### Downflow Furnaces

The return-air duct must be connected to return-air opening (bottom inlet) as shown in Fig. 1. **DO NOT** cut into casing sides (left or right). Side opening is permitted for only upflow and most horizontal furnaces. Bypass humidifier connections should be made at ductwork or coil casing sides exterior to furnace. (See Fig. 19.)

#### Upflow and Horizontal Furnaces

The return-air duct must be connected to bottom, sides (left or right), or a combination of bottom and side(s) of main furnace casing as shown in Fig. 1. Bypass humidifier may be attached into unused side return air portion of the furnace casing. See Fig. 18, and 20.

→ Not all horizontal furnaces are approved for side return air connections. See Fig. 20.

#### Step 6—Gas Piping

Gas piping must be installed in accordance with national and local codes. Refer to current edition of NFGC in the U.S. and the NSCNGPIC in Canada.

Installations must be made in accordance with all authorities having jurisdiction. If possible, the gas supply line should be a separate line running directly from meter to furnace.

Refer to Table 4 for recommended gas pipe sizing. Risers must be used to connect to furnace and to meter. Support all gas piping with appropriate straps, hangers, etc. Use a minimum of 1 hanger every 6 ft. Joint compound (pipe dope) should be applied sparingly and only to male threads of joints. Pipe dope must be resistant to the action of propane gas.

##### **⚠ CAUTION**

If a flexible connector is required or allowed by the authority having jurisdiction, black iron pipe shall be installed at the gas valve and extend a minimum of 2 in. outside the furnace. Use a new flexible connector for each installation. Never re-use an old flexible connector.

##### **⚠ CAUTION**

Connect gas pipe to furnace using a backup wrench to avoid damaging gas controls.

##### **⚠ WARNING**

Never purge a gas line into a combustion chamber. Never use matches, candles, flame, or other sources of ignition for purpose of checking leakage. Use a commercially available soap-and-water solution to check for leakage. A failure to follow this warning could result in fire, explosion, personal injury, or death.

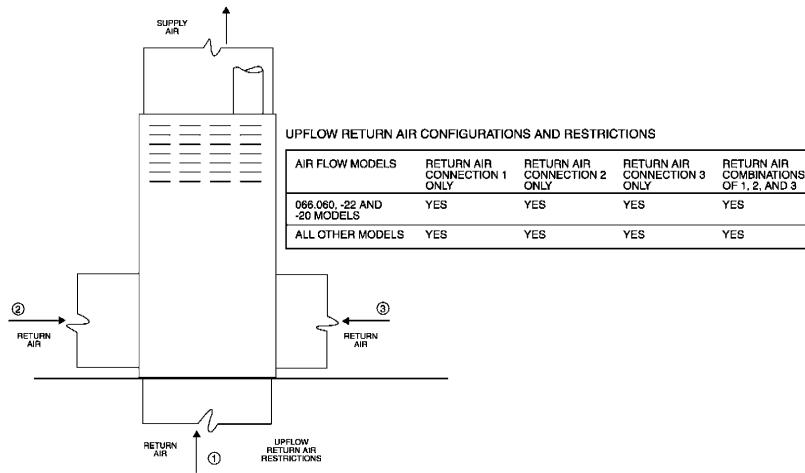


Fig. 18—Upflow Return Air Configurations and Restrictions

A02075

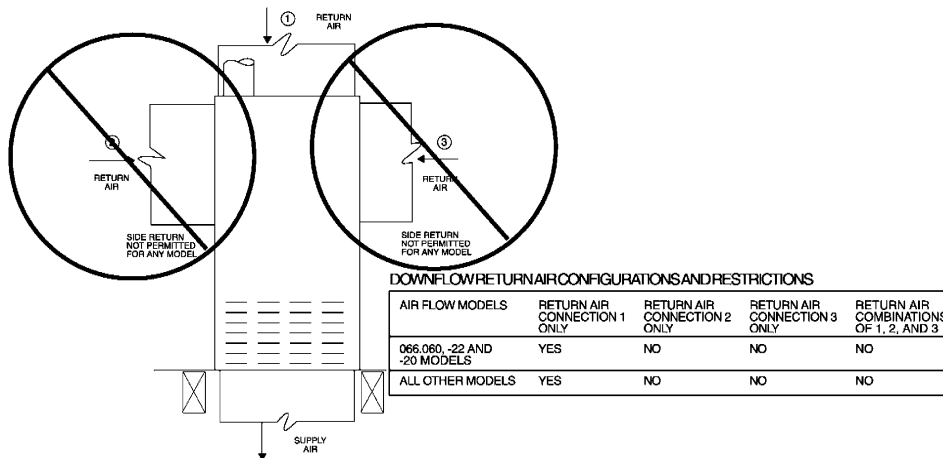


Fig. 19—Downflow Return Air Configurations and Restrictions

A02163

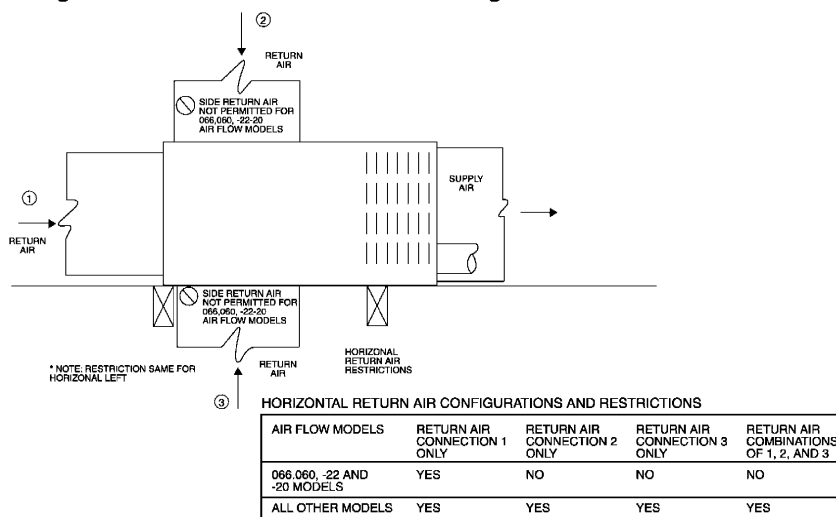


Fig. 20—Horizontal Return Air Configurations and Restrictions

A02162

### ⚠ WARNING

Use proper length of pipe to avoid stress on gas control manifold. Failure to follow this warning could result in a gas leak resulting in fire, explosion, personal injury, or death.

**Table 4—Maximum Capacity of Pipe\***

| NOMINAL<br>IRON<br>PIPE<br>SIZE<br>(IN.) | INTERNAL<br>DIAMETER<br>(IN.) | LENGTH OF PIPE (FT) |     |     |     |     |
|------------------------------------------|-------------------------------|---------------------|-----|-----|-----|-----|
|                                          |                               | 10                  | 20  | 30  | 40  | 50  |
| 1/2                                      | 0.622                         | 175                 | 120 | 97  | 82  | 73  |
| 3/4                                      | 0.824                         | 360                 | 250 | 200 | 170 | 151 |
| 1                                        | 1.049                         | 680                 | 465 | 375 | 320 | 285 |

\* Cubic ft of gas per hr for gas pressure of 0.5 psig (14-in wc) or less, and a pressure drop of 0.5-in wc (based on a 0.60 specific gravity gas).  
Ref: Table 9-2 NFPA.

Install a sediment trap in riser leading to furnace as shown in Fig 21. Connect a capped nipple into lower end of tee. Capped nipple should extend below level of gas controls. Place a ground joint union between gas control manifold and manual gas shutoff valve. A 1/8-in. NPT plugged tapping, accessible for test gage connection, **MUST** be installed immediately upstream of gas supply connection to furnace and downstream of manual shutoff valve.

Piping should be pressure tested in accordance with the NFPA, national plumbing codes or local gas and plumbing codes before the furnace has been attached. For test pressures above 14-in. wc (0.5 psig), disconnect and cap the gas supply at the furnace. In Canada, refer to current edition of NSCNGPIC.

If the test pressure is less than 14-in. w.c. (0.5 psig), turn off electric shutoff switch located on the gas valve before the test. It is recommended that the ground joint union be loosened before pressure testing. After all connections have been made, purge the lines and check for gas leakage with regulated gas supply pressure.

**NOTE:** The gas valve inlet pressure tap connection is suitable to use as test gage connection providing test pressure **DOES NOT** exceed maximum 0.5 psig (14-in. wc) stated on gas valve. (See Fig. 47.)

### Step 7—Electrical Connections

See Fig. 22 for field wiring diagram showing typical field 115-v wiring. Check all factory and field electrical connections for tightness.

### ⚠ WARNING


Blower access panel door switch opens 115-v power to control. No component operation can occur. Do not bypass or close switch with panel removed. Failure to follow this warning could result in personal injury or death.

### ⚠ CAUTION

Furnace control must be grounded for proper operation or control will lock out. Control is grounded through green wire routed to gas valve and burner box screw.

### 115-V WIRING

Verify that the voltage, frequency, and phase correspond to that specified on unit rating plate. Also, check to be sure that service provided by utility is sufficient to handle load imposed by this equipment. Refer to rating plate or Table 5 for equipment electrical specifications. Make all electrical connections in accordance with National Electrical Code (NEC) ANSI/NFPA 70-2002 and any

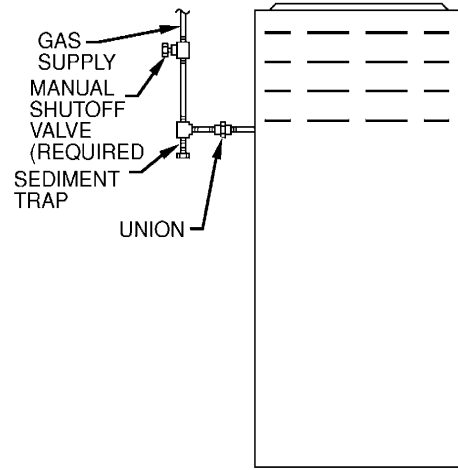

A02035

**Fig. 21—Typical Gas Pipe Arrangement**

local codes or ordinances that might apply. For Canadian installations, all electrical connections must be made in accordance with Canadian Electrical Code CSA C22.1 or authorities having jurisdiction.

### ⚠ CAUTION

Do not connect aluminum wire between disconnect switch and furnace. Use only copper wire.

Use a separate branch electrical circuit with a properly sized fuse or circuit breaker for this furnace. See Table 5 for wire size and fuse specifications. A readily accessible means of electrical disconnect must be located within sight of the furnace.

**NOTE:** Proper polarity must be maintained for 115-v wiring. If polarity is incorrect, control LED status indicator light will flash rapidly and furnace will **NOT** operate.

### ⚠ WARNING


The cabinet **MUST** have an uninterrupted or unbroken ground according to NEC ANSI/NFPA 70-2002 and Canadian Electrical Code CSA C22.1 or local codes to minimize personal injury if an electrical fault should occur. This may consist of electrical wire, conduit approved for electrical ground or a listed, grounded power cord (where permitted by local code) when installed in accordance with existing electrical codes. Refer to the power cord manufacturer's ratings for proper wire gage. Do not use gas piping as an electrical ground. Failure to follow this warning could result in electrical shock, fire, or death.

### J-BOX RELOCATION

→ **NOTE:** If factory location of J-Box is acceptable, go to next section (J-Box Cover Installation).

→ **NOTE:** On 14" wide casing models, the J-Box cannot be relocated to other side of furnace casing when the vent pipe is routed within the casing.

1. Remove screws holding auxiliary J-box. (See Fig. 23.)
2. Cut wire tie on loop in wires to J-box.
3. Locate box to desired location.
4. Fasten J-Box to casing with screw.
5. Route J-box wires within furnace away from sharp edges and hot surfaces.
6. Route electrical wires through hole in J-box and secure electrical box or cable to J-box

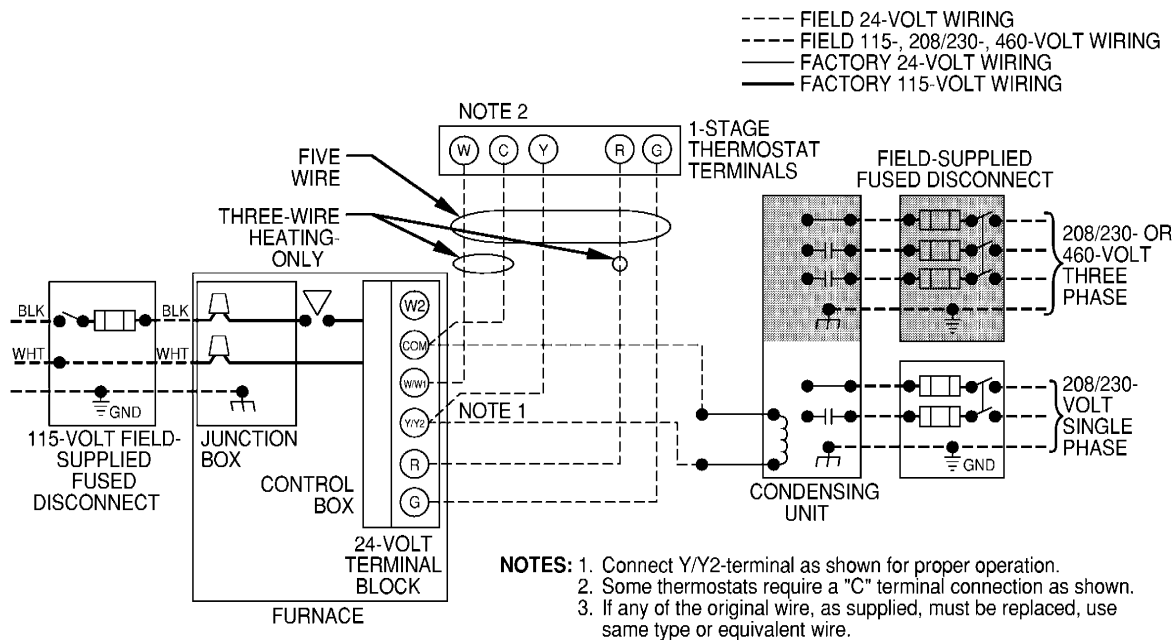

A95236

Fig. 22—Field Wiring Diagram

Table 5—Electrical Data

| UNIT SIZE       | VOLTS-HERTZ-PHASE | OPERATING VOLTAGE RANGE |          | MAXIMUM UNIT AMPS | MAXIMUM WIRE LENGTH (FT)‡ | MAXIMUM FUSE OR CKT BKR AMPS† | MINIMUM WIRE GAGE |
|-----------------|-------------------|-------------------------|----------|-------------------|---------------------------|-------------------------------|-------------------|
|                 |                   | Maximum*                | Minimum* |                   |                           |                               |                   |
| 045-08/024045   | 115-60-1          | 127                     | 104      | 5.4               | 50                        | 15                            | 14                |
| 045-12/036045   | 115-60-1          | 127                     | 104      | 7.1               | 39                        | 15                            | 14                |
| 070-08/024070   | 115-60-1          | 127                     | 104      | 5.2               | 52                        | 15                            | 14                |
| 070-12/036070   | 115-60-1          | 127                     | 104      | 7.3               | 38                        | 15                            | 14                |
| 070-16/048070** | 115-60-1          | 127                     | 104      | 9.8               | 29                        | 15                            | 14                |
| 090-14/042090   | 115-60-1          | 127                     | 104      | 8.2               | 35                        | 15                            | 14                |
| 090-16/048090   | 115-60-1          | 127                     | 104      | 9.9               | 29                        | 15                            | 14                |
| 090-20/060090** | 115-60-1          | 127                     | 104      | 12.9              | 35                        | 20                            | 12                |
| 110-12/036110   | 115-60-1          | 127                     | 104      | 8.3               | 35                        | 15                            | 14                |
| 110-16/048110   | 115-60-1          | 127                     | 104      | 10.2              | 28                        | 15                            | 14                |
| 110-22/066110   | 115-60-1          | 127                     | 104      | 13.8              | 33                        | 20                            | 12                |
| 135-16/048135   | 115-60-1          | 127                     | 104      | 10.0              | 29                        | 15                            | 14                |
| 135-22/066135   | 115-60-1          | 127                     | 104      | 14.3              | 32                        | 20                            | 12                |
| 155-20/060155   | 115-60-1          | 127                     | 104      | 15.0              | 30                        | 20                            | 12                |

\* Permissible limits of the voltage range at which the unit operates satisfactorily.

† Time-delay type is recommended.

‡ Length shown is as measured 1 way along wire path between unit and service panel for maximum 2 percent voltage drop.

\*\* Preliminary

- Attach electrical leads as shown in Fig 22 and secure ground wire to green ground screw in J-Box

#### ELECTRICAL CONNECTION TO J-BOX

- Attach electrical box to J-Box bracket.
- Route wires through hole in electrical box and J-Box bracket.
- Secure ground wire to green screw on J-Box bracket.
- Connect line voltage leads as shown in Fig.22.

#### FOR POWER CORD INSTALLATION


Power cords must be able to handle the electrical requirements listed in Table 5. Refer to power cord manufacturer's listings.

- Route listed power cord through hole in J-Box

- Secure power cord to J-Box bracket with a strain relief bushing or a connector approved for the type of cord used.
- Secure ground wire to green screw on J-Box bracket.
- Connect line voltage leads as shown in Fig. 22.

#### FOR BX CABLE INSTALLATION

- Route BX cable to hole in J-Box.
- Secure BX cable to J-Box bracket with connectors approved for the type of cable used.
- Secure ground wire to green screw on J-Box bracket.
- Connect line voltage leads as shown in Fig. 24.

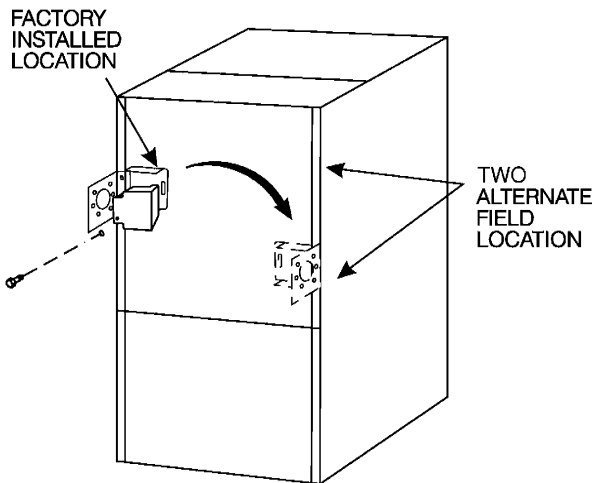

A02099

**Fig. 23—Relocating J-Box**

#### J-BOX COVER INSTALLATION

1. Remove J-Box cover from blower access door on furnace and reinstall blower access door screw.
2. Fold tab on J-Box bracket with pliers.
3. Insert tab of J-Box cover into slot of J-Box bracket.
4. Secure J-Box cover to bracket with screw provided.
5. Remove U-shaped cut-out from outer door to clear J-box

#### **⚠ CAUTION**

If manual disconnect switch is to be mounted on furnace, select a location where a drill or fastener will not contact electrical or gas components.

#### 24-V WIRING

Make field 24-v connections at the 24-v terminal strip. (See Fig. 31.) Connect terminal Y/Y2 as shown in Fig. 22 or Fig. 24-30 for proper cooling operation. Use only AWG No. 18, color-coded, copper thermostat wire.

The 24-v circuit contains an automotive-type, 3-amp fuse located on the control. Any direct shorts during installation, service, or maintenance could cause this fuse to blow. If fuse replacement is required, use **ONLY** a 3-amp fuse of identical size.

#### ACCESSORIES

1. Electronic Air Cleaner (EAC)  
Connect an accessory Electronic Air Cleaner (if used) using 1/4-in female quick connect terminals to the two male 1/4-in quick-connect terminals on the control board marked EAC-1 and EAC-2. The terminals are rated for 115VAC, 1.0 amps maximum and are energized during blower motor operation.
2. Humidifier (HUM)  
Connect an accessory 24 VAC, 0.5 amp maximum humidifier (if used) to the 1/4-in male quick-connect HUM terminal and COM-24V screw terminal on the control board thermostat strip. The HUM terminal is energized when gas valve is energized.

**NOTE:** A field-supplied, 115-v controlled relay connected to EAC terminals may be added if humidifier operation is desired during blower operation.

#### **⚠ WARNING**

DO NOT connect furnace control HUM terminal to HUM (humidifier) terminal on Thermostat, Zone Controller or similar device. See Thermostat™, Zone Controller, thermostat, or controller manufacturer's instructions for proper connection.

#### Step 8—Venting

→ When an existing furnace is removed or replaced in a venting system, the venting system may not be properly sized to vent the attached appliances.

#### **⚠ WARNING**

##### CARBON MONOXIDE POISONING HAZARD

Failure to follow the steps outlined below for each appliance connected to the venting system being placed into operation could result in carbon monoxide poisoning or death.


The following steps shall be followed for each appliance connected to the venting system being placed into operation, while all other appliances connected to the venting system are not in operation:

1. Seal any unused openings in venting system.
2. Inspect the venting system for proper size and horizontal pitch, as required in the National Fuel Gas Code, ANSI Z223.1/NFPA 54 or the CSA B149.1, Natural Gas and Propane Installation Codes and these instructions. Determine that there is no blockage or restriction, leakage, corrosion and other deficiencies, which could cause an unsafe condition.
3. As far as practical, close all building doors and windows and all doors between the space in which the appliance(s) connected to the venting system are located and other spaces of the building.
4. Close fireplace dampers.
5. Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they are operating at maximum speed. Do not operate a summer exhaust fan.
6. Follow the lighting instructions. Place the appliance being inspected into operation. Adjust the thermostat so appliance is operating continuously.
7. Test for spillage from draft hood equipped appliances at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle.
8. If improper venting is observed during any of the above tests, the venting system must be corrected in accordance with the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and/or CSA B149.1, Natural Gas and Propane Installation Codes.
9. After it has been determined that each appliance connected to the venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-fired burning appliance to their previous conditions of use.

#### GENERAL VENTING REQUIREMENTS


Follow all safety codes for proper vent sizing and installation requirements, including local building codes, the National Fuel Gas Code (NFGC) ANSI Z223.1-1999/NFPA 54-1999, Parts 7 and 10 in the United States or the National Standard of Canada, Natural Gas and Propane Installation Code (NSCNGPIC) CSA-B149.1-00, Section 7 and Appendix C in Canada.

These furnaces are design-certified as Category I furnaces in accordance with ANSI Z21.47/CSA 2.3-2001 and operate with a non-positive vent static pressure to minimize the potential for vent gas leakage. Category I furnaces operate with a flue loss not less

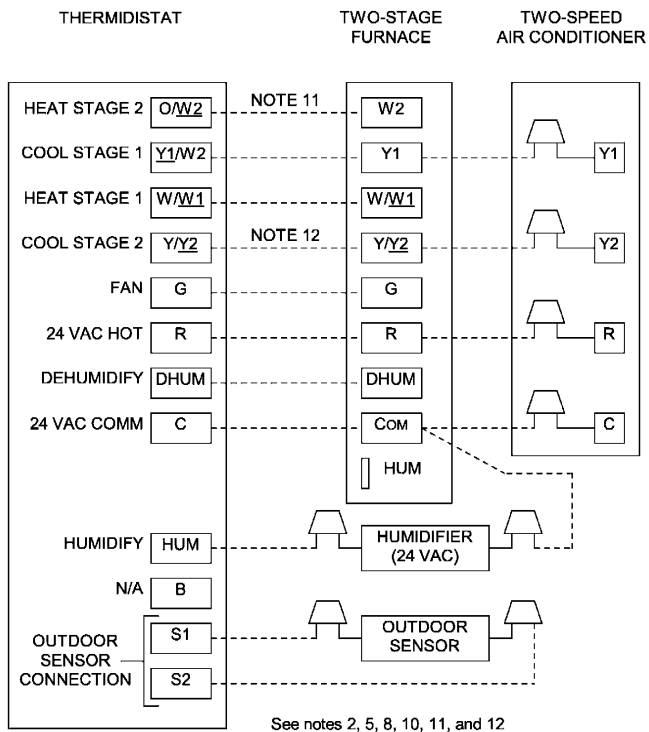


A00276

**Fig. 24—Two-Stage Furnace with Two-Speed Air Conditioner**

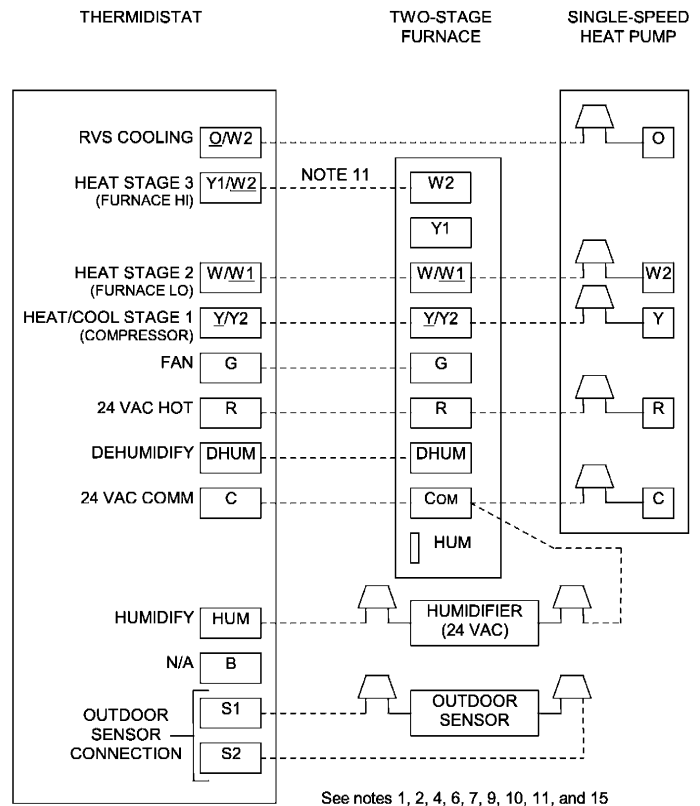

A00277

**Fig. 25—Two-Stage Furnace with Single-Speed Heat Pump (Dual Fuel)**

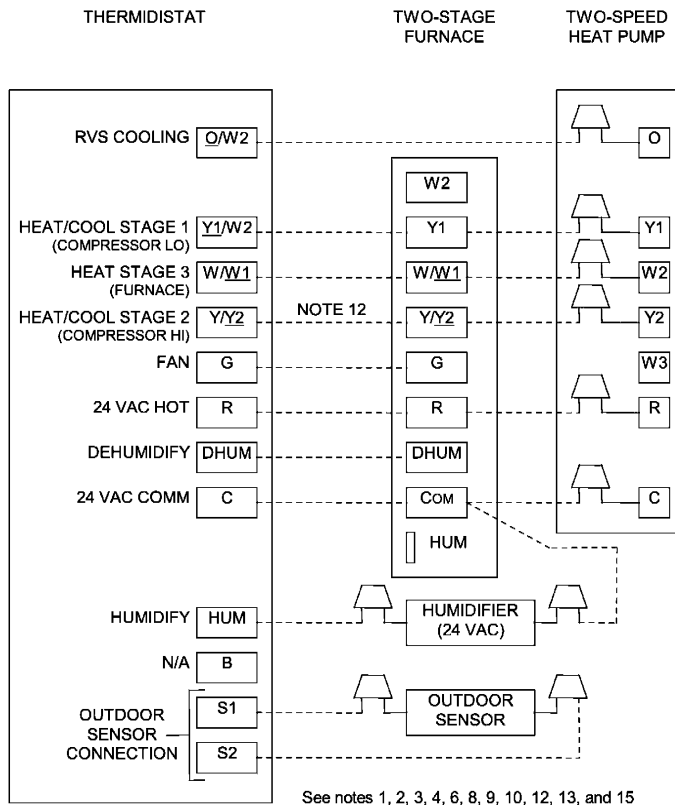

A00278

**Fig. 26—Two-Stage Furnace with Two-Speed Heat Pump (Dual Fuel)**

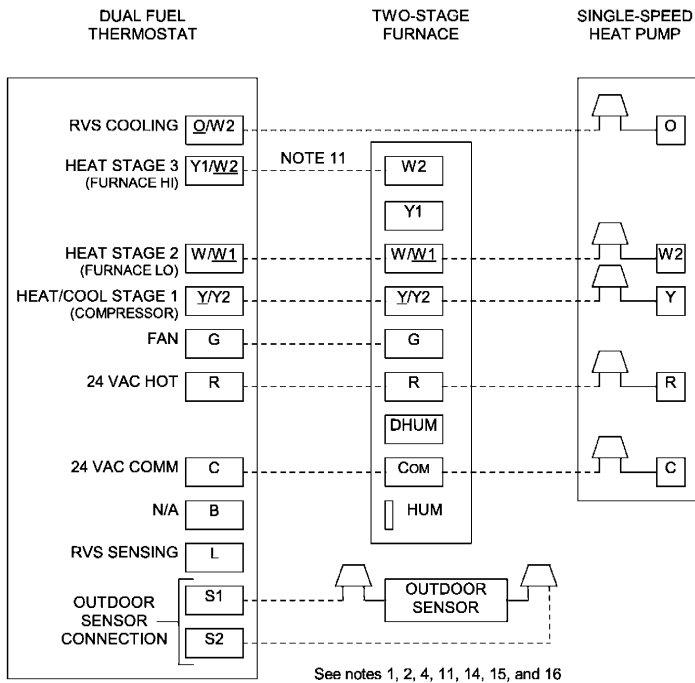


**Fig. 27—Dual Fuel Thermostat with Two-Stage Furnace and Single-Speed Heat Pump**

A00279

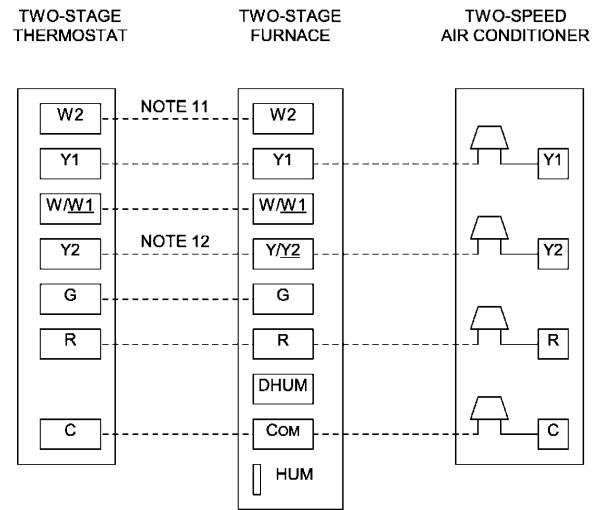


**Fig. 29—Two-Stage Thermostat with Two-Stage Furnace and Two-Speed Air Conditioner**

A00281

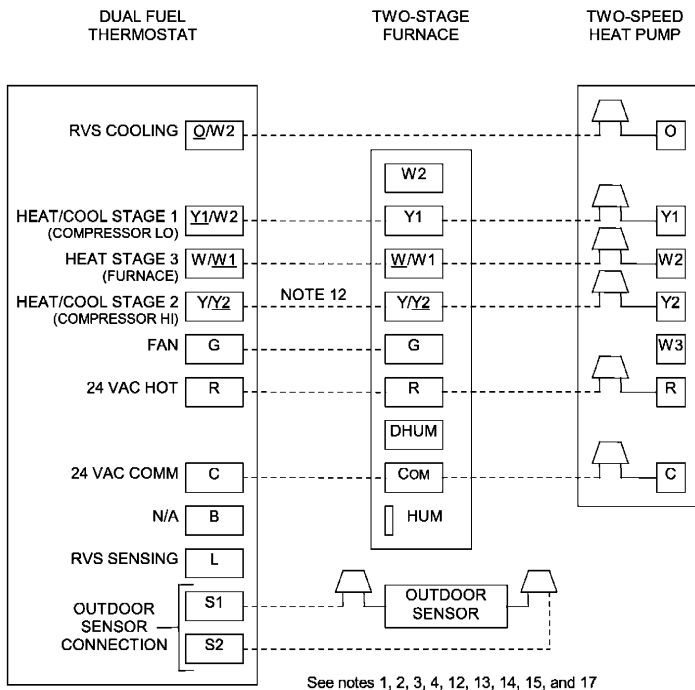


**Fig. 28—Dual Fuel Thermostat with Two-Stage Furnace and Two-Speed Heat Pump**

A00280

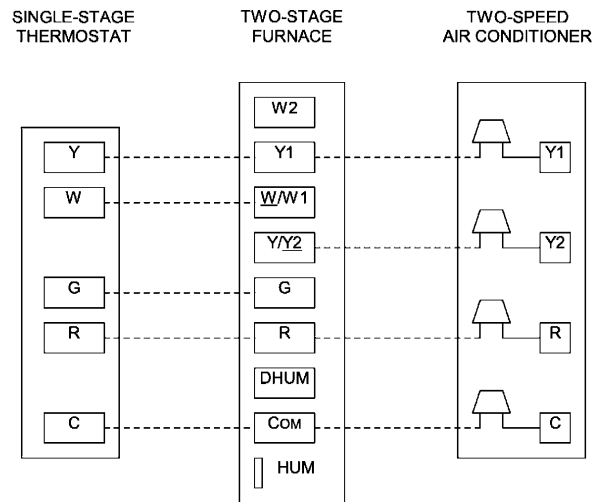


**Fig. 30—Single-Stage Thermostat with Two-Stage Furnace and Two-Speed Air Conditioner**

A00282

than 17 percent to minimize the potential for condensation in the venting system. These furnaces are approved for common venting and multistory venting with other fan assisted or draft hood equipped appliances in accordance with the NFGC or the NSC-NGPIC.

The following information and warning must be considered in addition to the requirements defined in the NFGC and the NSCNGPIC.

1. If a vent (common or dedicated) becomes blocked, the furnace will be shut off by the draft safeguard switch located on the vent elbow.

### ⚠ WARNING

Do not bypass the draft safeguard switch, as an unsafe condition could exist which must be corrected. Failure to follow this warning could result in a build-up of carbon monoxide and lead to personal injury or death.

2. Two-stage furnaces require Type B vent connectors outside the casing in all configurations. Single wall vent connector may be used inside the furnace casing with the transition to Type B vent outside the furnace casing. Size the connector so that the minimum vent connector capacity is lower than the low fire rate of the furnace and the maximum vent connector capacity is higher than the furnace high fire rate.
3. Do not connect this appliance to a single wall dedicated or common vent. The dedicated or common vent is considered to be the vertical portion of the vent system that terminates outdoors.
4. Vent connectors serving Category I furnaces shall not be connected into any portion of a mechanical draft system operating under positive pressure.
5. In the US: Do not vent this appliance with any solid fuel burning appliance. In Canada, check with the authority having jurisdiction for approval on use with solid fuel burning appliance.

## MASONRY CHIMNEY REQUIREMENTS

### ⚠ CAUTION

These furnaces are CSA design-certified for use in exterior tile-lined masonry chimneys with a factory accessory Chimney Adapter Kit. Refer to the furnace rating plate for correct kit usage. The Chimney Adapter Kits are for use with ONLY furnaces having a Chimney Adapter Kit numbers marked on the furnace rating plate.

If a clay tile-lined masonry chimney is being used and it is exposed to the outdoors below the roof line, relining might be required. Chimneys shall conform to the Standard for Chimneys, Fireplaces, Vents, and Solid Fuel Burning Appliances ANSI/NFPA 211-2000 in the United States and to a Provincial or Territorial Building Code in Canada (in its absence, the National Building Code of Canada) and must be in good condition.

**U.S.A.-**Refer to Sections 10.1.9 and 10.2.18 of the NFGC or the authority having jurisdiction to determine whether relining is required. If relining is required, use a properly sized listed metal liner, Type-B vent, or a listed alternative venting design.

**NOTE:** See the NFGC, 10.2.18 regarding alternative venting design and the Exception, which cover installations such as the Chimney Adapter Kits KGACA02014FC and KGACA02015FC, which are listed for use with these furnaces.

The Chimney Adapter Kit is listed alternative venting system for these furnaces. See the kit instructions for complete details.

**Canada-**This furnace is permitted to be vented into a clay tile-lined masonry chimney that is exposed to the outdoors below the roof line, provided:

1. Vent connector is Type-B double-wall, and
2. This furnace is common vented with at least 1 draft hood-equipped appliance, and
3. The combined appliance input rating is less than the maximum capacity given in Table A, and
4. The input rating of each space heating appliance is greater than the minimum input rating given in Table B for the local winter design temperature. Chimneys having internal areas greater than 38 square inches require furnace input ratings greater than the input ratings of these furnaces. See footnote at bottom of Table B, and
5. The authority having jurisdiction approves.

If all of these conditions cannot be met, an alternative venting design shall be used, such as the listed chimney adapter kit with a furnace listed for use with the kit, a listed chimney-lining system, or a Type-B common vent.

## Exterior Masonry Chimney FAN + NAT Installations with Type-B Double-Wall Vent Connectors

→ **Table A—Combined Appliance  
Maximum Input Rating in  
Thousands of BTU per Hour**

| VENT<br>HEIGHT (FT) | INTERNAL AREA OF CHIMNEY<br>(SQ. IN.) |     |     |     |
|---------------------|---------------------------------------|-----|-----|-----|
|                     | 12                                    | 19  | 28  | 38  |
| 6                   | 74                                    | 119 | 178 | 257 |
| 8                   | 80                                    | 130 | 193 | 279 |
| 10                  | 84                                    | 138 | 207 | 299 |
| 15                  | NR                                    | 152 | 233 | 334 |
| 20                  | NR                                    | NR  | 250 | 368 |
| 30                  | NR                                    | NR  | NR  | 404 |

→ **Table B—Minimum Allowable Input Rating of  
Space-Heating Appliance in  
Thousands of BTU per Hour**

| VENT<br>HEIGHT (FT)                                         |    | INTERNAL AREA OF CHIMNEY<br>(SQ. IN.) |     |     |     |
|-------------------------------------------------------------|----|---------------------------------------|-----|-----|-----|
|                                                             |    | 12                                    | 19  | 28  | 38  |
| Local 99% Winter Design<br>Temperature: 17 to 26 degrees F* |    |                                       |     |     |     |
| 17 to 26 F                                                  | 6  | 0                                     | 55  | 99  | 141 |
|                                                             | 8  | 52                                    | 74  | 111 | 154 |
|                                                             | 10 | NR                                    | 90  | 125 | 169 |
|                                                             | 15 | NR                                    | NR  | 167 | 212 |
|                                                             | 20 | NR                                    | NR  | 212 | 258 |
|                                                             | 30 | NR                                    | NR  | NR  | 362 |
| Local 99% Winter Design<br>Temperature: 5 to 16 degrees F*  |    |                                       |     |     |     |
| 5 to 16 F                                                   | 6  | NR                                    | 78  | 121 | 166 |
|                                                             | 8  | NR                                    | 94  | 135 | 182 |
|                                                             | 10 | NR                                    | 111 | 149 | 198 |
|                                                             | 15 | NR                                    | NR  | 193 | 247 |
|                                                             | 20 | NR                                    | NR  | NR  | 293 |
|                                                             | 30 | NR                                    | NR  | NR  | 377 |
| Local 99% Winter Design<br>Temperature: -10 to 4 degrees F* |    |                                       |     |     |     |

## NOTES for Fig. 24-30

1. Heat pump **MUST** have a high pressure switch for dual fuel applications.
2. Refer to outdoor equipment Installation Instructions for additional information and setup procedure.
3. Select the "ZONE" position on the two-speed heat pump control.
4. Outdoor Air Temperature Sensor must be attached in all dual fuel applications.
5. Dip switch No. 1 on Thermidistat should be set in **OFF** position for air conditioner installations. This is factory default.
6. Dip switch No. 1 on Thermidistat should be set in **ON** position for heat pump installations.
7. Dip switch No. 2 on Thermidistat should be set in **OFF** position for single-speed compressor operation. This is factory default.
8. Dip switch No. 2 on Thermidistat should be set in **ON** position for two-speed compressor operation.
9. Configuration Option No. 10 "Dual Fuel Selection" must be turned **ON** in all dual fuel applications.
10. **NO** connection should be made to the furnace **HUM** terminal when using a Thermidistat.
11. Optional connection: If wire is connected, dip switch No. 1 on furnace control should be set in **ON** position to allow Thermidistat/Thermostat to control furnace casing.
12. Optional connection: If wire is connected, ACRDJ jumper on furnace control should be removed to allow Thermidistat/Thermostat to control outdoor unit staging.
13. When using both a two-stage furnace and a two-stage heat pump, the furnace must control its own high-stage heating operation via furnace control algorithm.
14. The RVS Sensing terminal "L" should not be connected. This is internally used to sense defrost operation.
15. **DO NOT SELECT** the "FURNACE INTERFACE" or "BALANCE POINT" option on the two-speed heat pump control board. This is controlled internally by the Thermidistat/Dual Fuel Thermostat.
16. Dip switch D on Dual Fuel Thermostat should be set in **OFF** position for single-speed compressor operation. This is factory default.
17. Dip switch D on Dual Fuel Thermostat should be set in **ON** position for two-speed compressor operation.

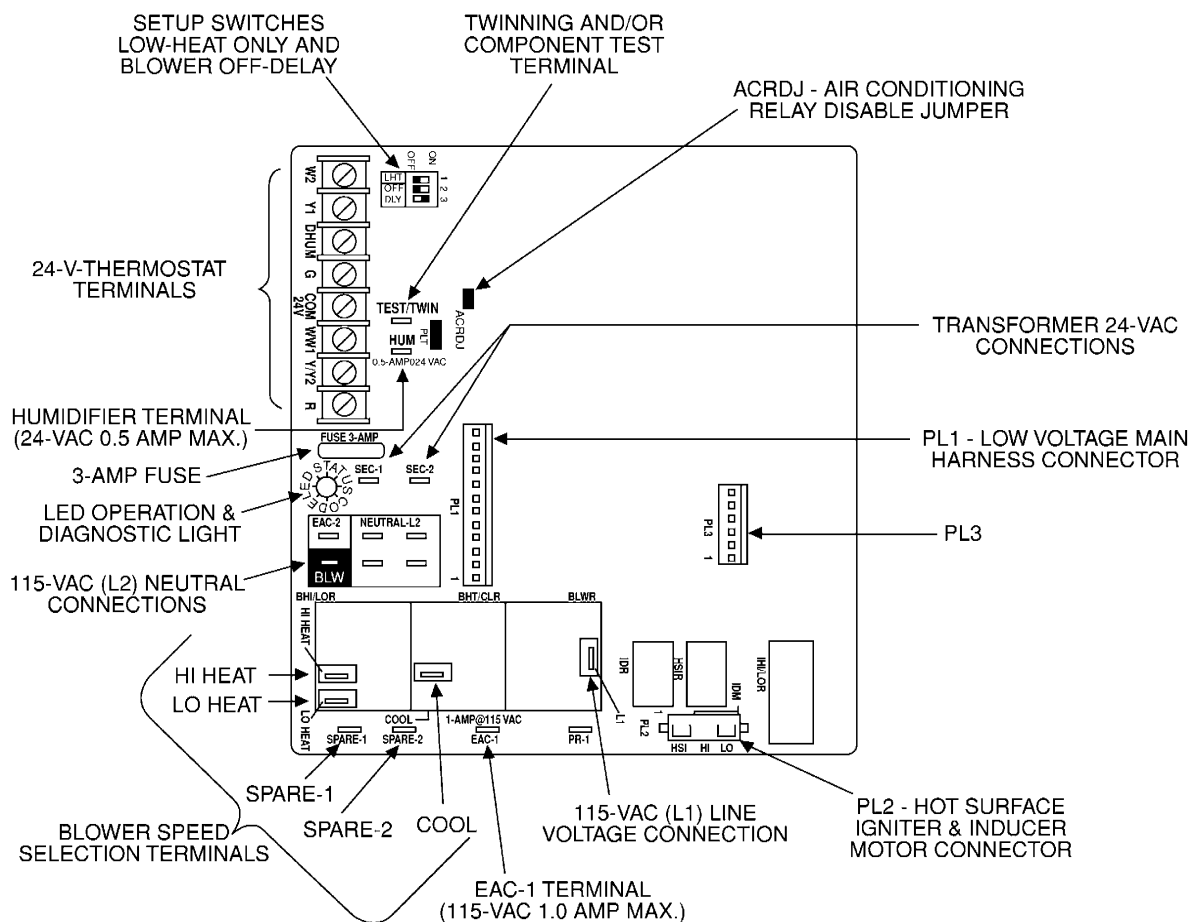


Fig. 31—2-Stage Furnace Control-PSC Blower Motor

A02017

|            |    |    |    |     |     |
|------------|----|----|----|-----|-----|
| -10 to 4 F | 6  | NR | NR | 145 | 196 |
|            | 8  | NR | NR | 159 | 213 |
|            | 10 | NR | NR | 175 | 231 |
|            | 15 | NR | NR | NR  | 283 |
|            | 20 | NR | NR | NR  | 333 |
|            | 30 | NR | NR | NR  | NR  |

**Local 99% Winter Design  
Temperature: -11 degrees F or lower\***

|                |                                            |  |  |  |  |
|----------------|--------------------------------------------|--|--|--|--|
| -11 F or lower | Not recommended for any vent configuration |  |  |  |  |
|----------------|--------------------------------------------|--|--|--|--|

\*The 99% Winter Design Dry-Bulb (db) temperatures are found in the 1993 ASHRAE Fundamentals Handbook, Chapter 24, Table 1 (United States) and 2 (Canada), or use the 99.6% heating db temperatures found in the 1997 or 2001 ASHRAE Fundamentals Handbook, Climatic Design Information chapter, Table 1A (United States) and 2A (Canada).

Inspections before the sale and at the time of installation will determine the acceptability of the chimney or the need for repair and/or (re)lining. Refer to the Fig. 32 to perform a chimney inspection. If the inspection of a previously used tile-lined chimney:

- Shows signs of vent gas condensation, the chimney should be relined in accordance with local codes and the authority having jurisdiction. The chimney should be relined with a listed metal liner, Type-B vent, or a listed chimney adapter kit shall be used to reduce condensation. If a condensate drain is required by local code, refer to the NFGC, Section 7.9 for additional information on condensate drains.
- Indicates the chimney exceeds the maximum permissible size in the tables, the chimney should be rebuilt or relined to conform to the requirements of the equipment being installed and the authority having jurisdiction.

A chimney without a clay tile liner, which is otherwise in good condition, shall be rebuilt to conform to ANSI/NFPA 211 or be lined with a UL listed (ULC listed in Canada) metal liner or UL listed Type-B vent. Relining with a listed metal liner or Type-B vent is considered to be a vent-in-a-chase.

If a metal liner or Type-B vent is used to line a chimney, no other appliance shall be vented into the annular space between the chimney and the metal liner.

#### APPLIANCE APPLICATION REQUIREMENTS

Appliance operation has a significant impact on the performance of the venting system. If the appliances are sized, installed, adjusted, and operated properly, the venting system and/or the appliances should not suffer from condensation and corrosion. The venting system and all appliances shall be installed in accordance with applicable listings, standards, and codes.

The furnace should be sized to provide 100 percent of the design heating load requirement plus any margin that occurs because of furnace model size capacity increments. Heating load estimates can be made using approved methods available from Air Conditioning Contractors of America (Manual J); American Society of Heating, Refrigerating, and Air-Conditioning Engineers; or other approved engineering methods. Excessive oversizing of the furnace could cause the furnace and/or vent to fail prematurely.

When a metal vent or metal liner is used, the vent must be in good condition and be installed in accordance with the vent manufacturer's instructions.

To prevent condensation in the furnace and vent system, the following precautions must be observed:

- The return-air temperature must be at least 60°F db except for brief periods of time during warm-up from setback at no lower than 55°F db or during initial start-up from a standby condition.
- Adjust the gas input rate per the installation instructions. Low gas input rate causes low vent gas temperatures, causing condensation and corrosion in the furnace and/or venting system. Derating is permitted only for altitudes above 2000 ft.
- Adjust the air temperature rise range to the midpoint or slightly above. Low air temperature rise can cause low vent gas temperature and potential for condensation problems.
- Set the thermostat heat anticipator or cycle rate to reduce short cycling.

Air for combustion must not be contaminated by halogen compounds which include chlorides, fluorides, bromides, and iodides. These compounds are found in many common home products such as detergent, paint, glue, aerosol spray, bleach, cleaning solvent, salt, and air freshener, and can cause corrosion of furnaces and vents. Avoid using such products in the combustion-air supply. Furnace use during construction of the building could cause the furnace to be exposed to halogen compounds, causing premature failure of the furnace or venting system due to corrosion.

Vent dampers on any appliance connected to the common vent can cause condensation and corrosion in the venting system. Do not use vent dampers on appliances common vented with this furnace.

#### ADDITIONAL VENTING REQUIREMENTS

A 4" round vent elbow is supplied with the furnace. A 5 inch or 6 inch vent connector maybe required for some model furnaces. A field-supplied 4 inch to 5 inch or 4 inch to 6 inch sheet metal increaser fitting is required when 5 inch or 6 inch vent connector is used. See Fig. 33-45 Venting Orientation for approved vent configurations.

**NOTE:** Vent connector length for connector sizing starts at furnace vent elbow. The 4 inch vent elbow is shipped for upflow configuration and may be rotated for other positions. Remove the 3 screws that secure vent elbow to furnace, rotate furnace vent elbow to position desired, re-install screws. The factory-supplied vent elbow does NOT count as part of the number of vent connector elbows.

The vent connector can exit the door through one of 5 locations on the door.

- Attach the single wall vent connector to the furnace vent elbow, and fasten the vent connector to the vent elbow with at least two field-supplied, corrosion-resistant, sheet metal screws located 180° apart.
- Vent the furnace with the appropriate connector as shown in Fig 33-45.
- Orient the door to determine the correct location of the door cutout to be removed.
- Use aviation-type tin snips to remove the correct U-shaped cut-out on door.

#### **⚠ CAUTION**

Personal injury can result from sharp metal edges, etc. Be careful when removing parts. Gloves and safety glasses should be worn when servicing equipment.

An accessory Vent Guard Kit, KGAVG0101DFG is REQUIRED for downflow applications for use where the vent exits through the lower portion of the furnace casing door. Refer to the Vent Guard Kit Instructions for complete details.

## CHIMNEY INSPECTION CHART

For additional requirements refer to the National Fuel Gas Code NFPA 54/ANSI Z223.1 and ANSI/NFPA 211 Chimneys, Fireplaces, Vents, and Solid Fuel Burning Appliances in the U.S.A. or to the Canadian installation Codes CSA-B149.1 in Canada.


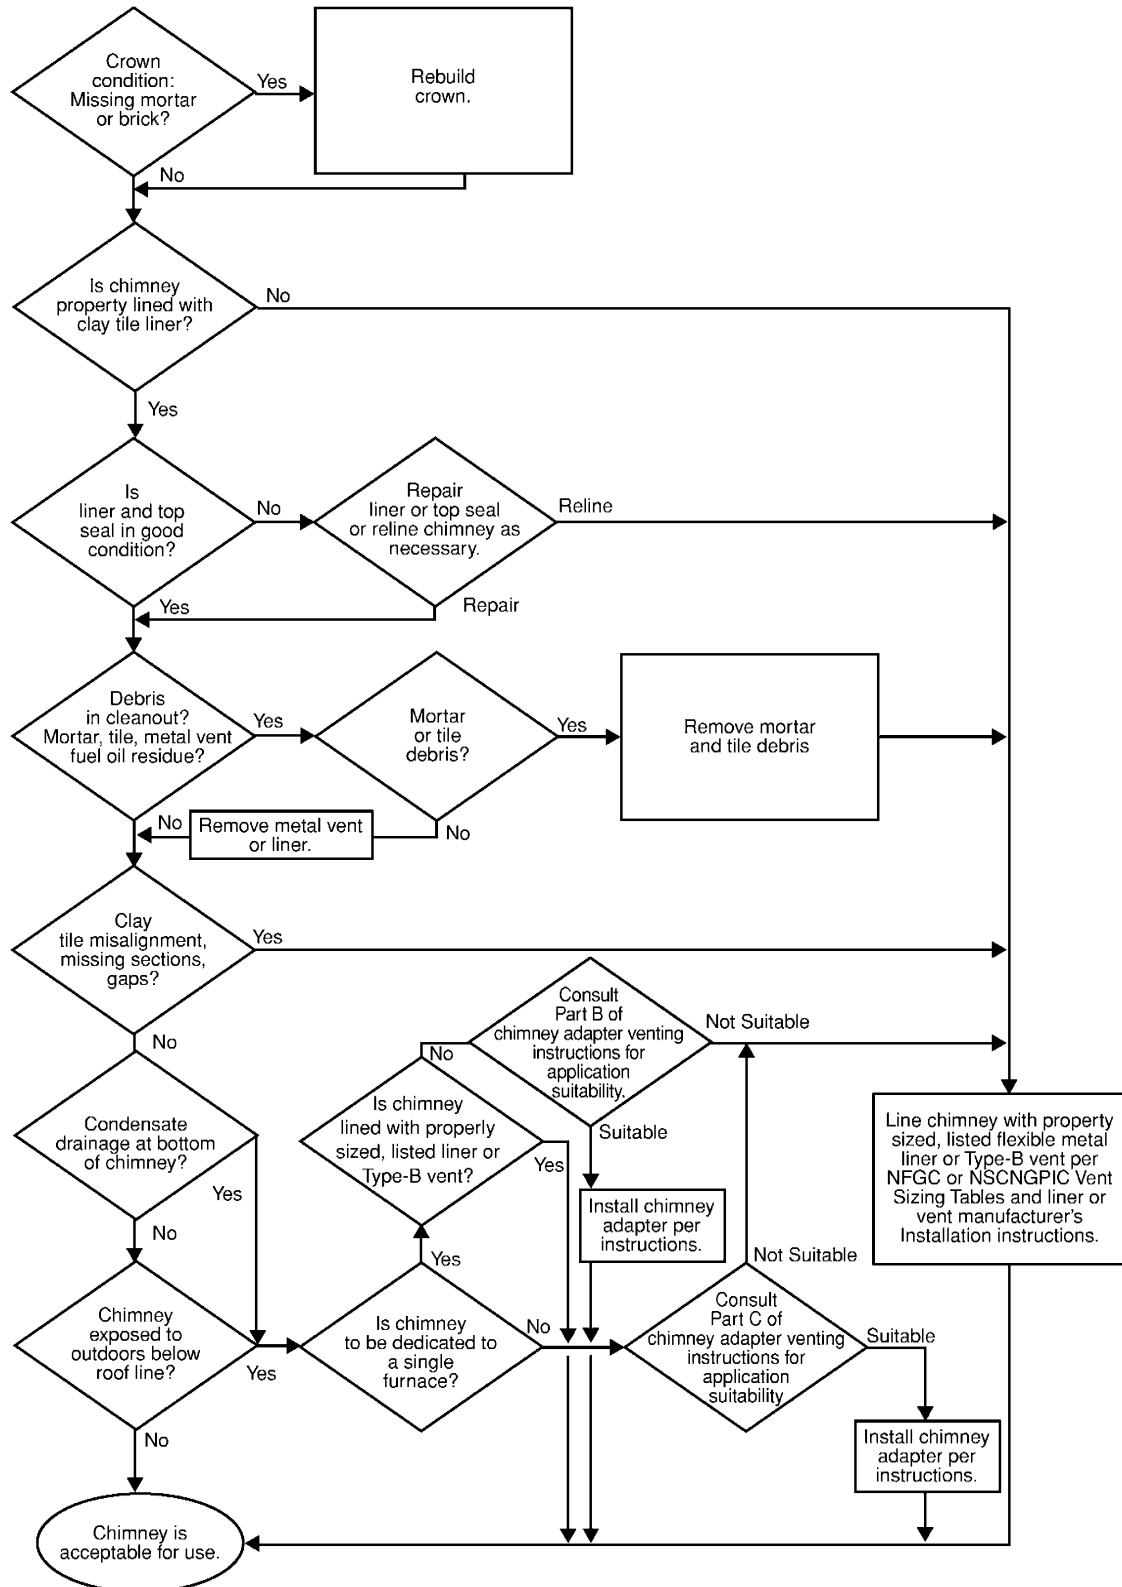


**Fig. 32—Chimney Inspection Chart**


A02101

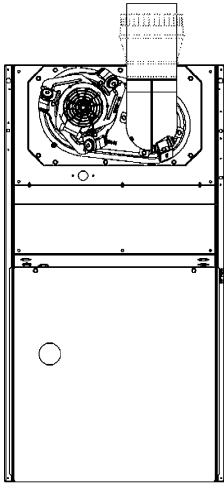

SEE NOTES: 1,2,4,7,8,9

A02058


**Fig. 33—Upflow Application-Vent Elbow Up**

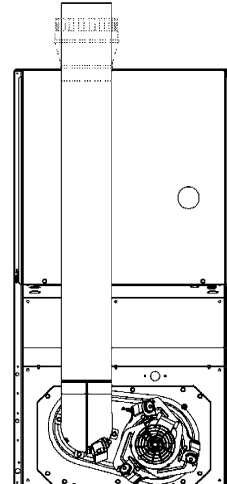

SEE NOTES: 1,2,4,5,7,8,9

A02061


**Fig. 36—Downflow Application-Vent Elbow Up**

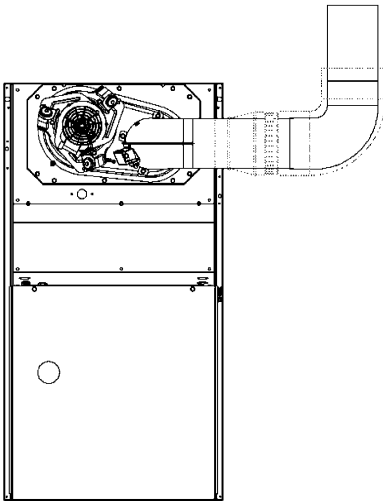

SEE NOTES: 1,2,3,4,7,8,9

A02059


**Fig. 34—Upflow Application-Vent Elbow Right**

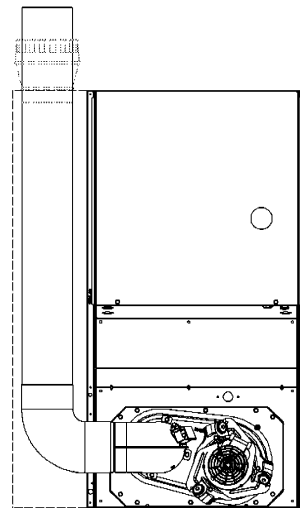

SEE NOTES: 1,2,4,5,6,7,8,9

A02062


**Fig. 37—Downflow Application-Vent Elbow Left then Up**

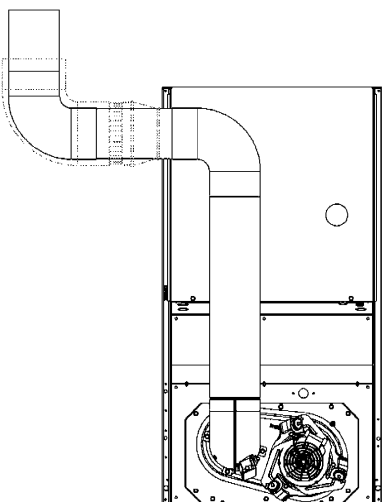

SEE NOTES: 1,2,3,4,5,7,8,9

A02060


**Fig. 35—Downflow Application-Vent Elbow Up then Left**

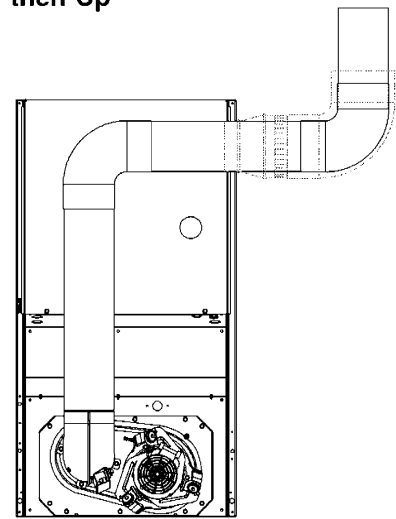

SEE NOTES: 1,2,3,4,7,8,9

A02063


**Fig. 38—Downflow Application-Vent Elbow Up then Right**

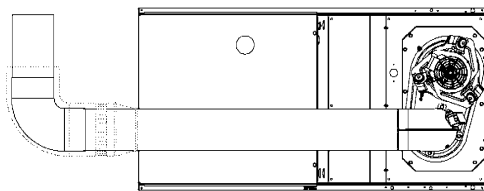

SEE NOTES: 1,2,4,5,7,8,9

A02068

**Fig. 45—Horizontal Right Application-Vent Elbow Left Ventilation from Outdoors**

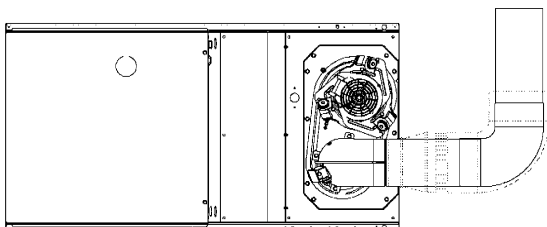

SEE NOTES: 1,2,4,7,8,9

A02069

**Fig. 43—Horizontal Right Application-Vent Elbow Right**

The horizontal portion of the venting system shall maintain a minimum of 1/4-in. upward slope per linear ft and it shall be rigidly supported every 5 ft or less with metal hangers or straps to ensure there is no movement after installation.

#### SIDEWALL VENTING

This furnace is not approved for direct sidewall horizontal venting without the use of an add-on power venter is prohibited.

**In the U.S.:** Per the NFGC, any listed power venter may be used, when approved by the authority having jurisdiction.

**In Canada:** Only power venters approved by the appliance manufacturer and where allowed by the authority having jurisdiction may be used for sidewall venting.

The only approved power venter is the Field Controls SWG-4D and SWG-5D sidewall power venter. Select the power venter to match the btuh input of the appliance being vented. Follow all manufacturer's installation requirements for venting and termination included with the power venter.

#### START-UP, ADJUSTMENT, AND SAFETY CHECK

##### Step 1—General

1. Maintain 115-v wiring and ground. Improper polarity will result in rapid flashing LED and no furnace operation.
2. Make thermostat wire connections at the 24-v terminal block on the furnace control. Failure to make proper connections will result in improper operation. See Fig. 22.
3. Gas supply pressure to the furnace must greater than 4.5-in. wc (0.16 psig ) but not exceed 14-in. wc (0.5 psig ).

#### ⚠ CAUTION

This furnace is equipped with manual reset limit switches in the gas control area. The switches open and shut off power to the gas valve, if a flame rollout or overheating condition occurs in the gas control area. DO NOT bypass the switches. Correct inadequate combustion air supply problem and reset the switches.

4. Check all manual-reset switch for continuity.

5. Install blower compartment door. Door must be in place to operate furnace.


##### 6. Setup switch descriptions

The 2 stage furnace has DIP switches use to select thermostat staging and blower off delay timings.

**DIP switch functions on 2 stage furnaces** see Table 7. For switch locations on 2 Stage Furnace control board, See Fig 31 and 46.

##### 7. Setup switch descriptions

#### Step 2—Start-Up Procedures

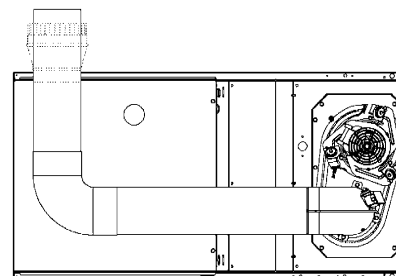

SEE NOTES: 1,2,4,5,7,8,9

A02070

**Fig. 44—Horizontal Right Application-Vent Elbow Left then Up**

1. Purge gas lines after all connections have been made.
2. Check gas lines for leaks.

#### ⚠ WARNING

Never purge a line into a combustion chamber. Never use matches, candles, flame, or other sources of ignition for the purpose of checking leakage. Use a soap-and-water solution to check for leakage. Failure to follow this warning can cause fire, explosion, personal injury, or death.


##### 3. To Begin Component Self-Test:

Remove blower access door. Disconnect the thermostat R lead from from furnace control board. Manually close blower door switch. Short (jumper) for approximately 2 sec. the COM-24v terminal on control to the TEST/TWIN 3/16-inch quick-connect terminal on control until the LED goes out. Remove jumper from terminals. (See Fig. 31.)

**NOTE:** The furnace control allows all components, except the gas valve, to be run for short period of time. This feature helps diagnose a system problem in case of a component failure. Component test feature will not operate if any thermostat signal is present at the control.

a. Component test sequence is as follows for 2-stage furnace:


- (1.) LED will display previous status code 4 times.
- (2.) Inducer motor starts on high-speed and continues to run until Step 7 of component test sequence.
- (3.) Hot surface ignitor is energized for 15 sec., then off.
- (4.) Blower motor operates on LO-HEAT speed for 10 sec.
- (5.) Blower motor operates on HI-HEAT speed for 10 sec.
- (6.) Blower motor operates on COOL speed for 10 sec.
- (7.) Inducer motor goes to low-speed for 10 sec., then stops.
- (8.) Reconnect R lead to furnace control board, remove tape from blower door switch and re-install blower door.

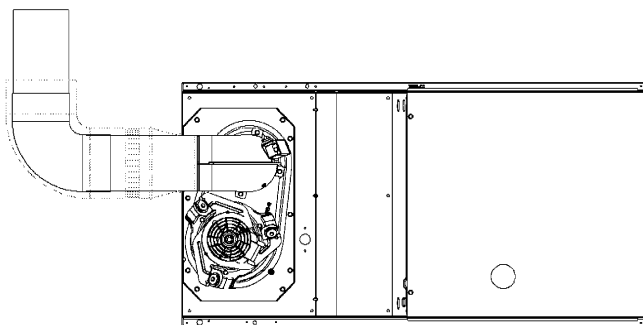

SEE NOTES: 1,2,4,7,8,9

A02064


**Fig. 39—Horizontal Left Application-Vent Elbow Left**

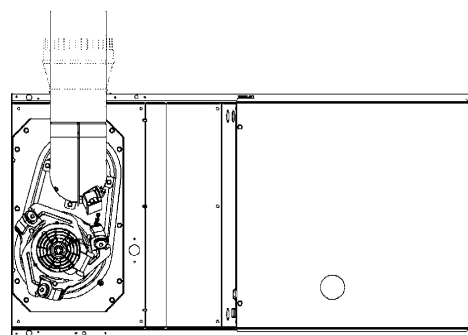

SEE NOTES: 1,2,4,5,7,8,9

A02066


**Fig. 41—Horizontal Left Application-Vent Elbow Up**

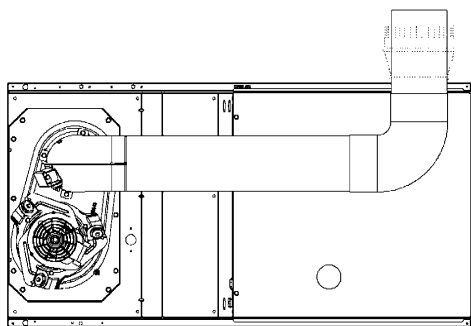

SEE NOTES: 1,2,4,5,7,8,9

A02065

**Fig. 40—Horizontal Left Application-Vent Elbow Right then Up**

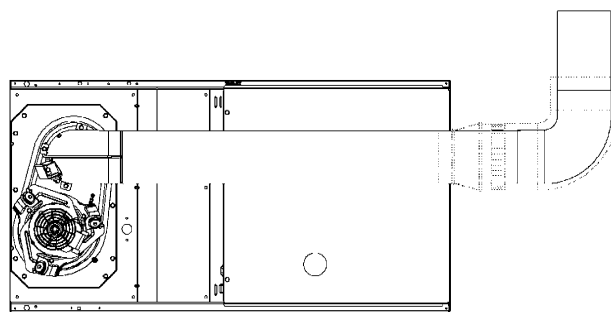

SEE NOTES: 1,2,4,5,7,8,9

A02067

**Fig. 42—Horizontal Left Application-Vent Elbow Right**

**Venting Notes for Fig. 35-47**

1. For common vent, vent connector sizing and vent material: United States, latest edition of the National Fuel Gas Code (NFGC), ANSI Z223.1/NFPA 54. In Canada, latest edition of the National Standards of Canada, Natural Gas and Propane Installation Code (NSCNGPIC), CSA B149.1-00.
2. Immediately increase to 5-inch or 6-inch vent connector outside furnace casing when 5-inch vent connector required, refer to Note 1.
3. Side outlet vent for upflow and downflow installations must use Type B vent immediately after exiting the furnace, except when KGAVG0101DFG, Accessory downflow vent guard kit, is used in the downflow position.
4. Type-B vent where required, refer to Note 1.
5. 4" single-wall vent must be used inside furnace casing and the KGAVG0101DFG Downflow Vent Guard Kit.
6. Accessory Downflow Vent Guard Kit, KGAVG0101DFG required in downflow installations with lower vent configuration.
7. Chimney Adapter Kit required for exterior masonry chimney applications. Refer to Chimney Adapter Kit, KGACA02014FC or KGACA02015FC for sizing and complete application details.
8. Secure vent connector to furnace elbow with (2) corrosion-resistant sheet metal screws, spaced approximately 180° apart.
9. Secure all other single wall vent connector joints with (3) corrosion resistant screws spaced approximately 120° apart. Secure Type-B vent connectors per vent connector manufacturer's recommendations.

| FURNACE ORIENTATION | VENT ORIENTATION                        | FURNACE INPUT(BTU/HR)                       | MINIMUM VENT DIAMETER (IN.)* | MINIMUM VERTICAL VENT HEIGHT (FT)** |
|---------------------|-----------------------------------------|---------------------------------------------|------------------------------|-------------------------------------|
| Downflow            | Vent elbow left, then up<br>Fig. 37     | 154,000<br>132,000<br>110,000(036/-12 only) | 5                            | 12                                  |
| Horizontal Left     | Vent elbow right,<br>then up<br>Fig. 40 | 154,000<br>132,000                          | 5                            | 7                                   |
| Horizontal Left     | Vent Elbow up<br>Fig. 41                | 154,000<br>132,000                          | 5                            | 7                                   |
| Horizontal Left     | Vent elbow right<br>Fig. 42             | 154,000                                     | 5                            | 7                                   |
| Downflow            | Vent elbow up then left<br>Fig. 35      | 110,000<br>(036/-12 only)                   | 5                            | 10                                  |
| Downflow            | Vent elbow up, then right<br>Fig. 38    | 110,000<br>(036/-12 only)                   | 5                            | 10                                  |

NOTE: All vent configurations must also meet National Fuel Gas Code venting requirements NFGC.

\*4 in. inside casing or vent guard

\*\*Including 4 in. vent section(s)

4. Operate furnace per instruction on inner door.

**Table 7—2 Stage Furnace Setup Switch Description**

| SETUP SWITCH NO. | SWITCH NAME        | NORMAL POSITION | DESCRIPTION OF USE                                                                                                                                                                                              |
|------------------|--------------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SW-1             | Adaptive Heat Mode | OFF             | When OFF, allows 2-stage operation with a single stage thermostat. Turn ON when using 2 stage thermostat to allow Low Heat operation when R to W/W1 closes and High Heat operation when R to W/W1 and W2 close. |
| SW-2             | Blower OFF delay   | ON or OFF       | Control blower OFF delay time. Used in conjunction with SW-3 See Table 10.                                                                                                                                      |
| SW-3             | Blower OFF delay   | ON or OFF       | Control blower OFF delay time. Used in conjunction with SW-2 See Table 10.                                                                                                                                      |

5. Verify furnace shut down by lowering thermostat setting below room temperature.
6. Verify furnace restarts by raising thermostat setting above room temperature.

### Step 3—Adjustments Motors

Furnace gas input rate on rating plate is for installations at altitudes up to 2000 ft. Furnace input rate must be within  $\pm 2$  percent of furnace rating plate input.

In the U.S.A., the input rating for altitudes above 2,000 ft. must be reduced by 4 percent for each 1,000 ft. above sea level. In Canada, input rating must be reduced by 10 percent for altitudes of 2,000 ft. to 4,500 ft. above sea level. For altitudes above 5500 ft., a field-supplied high altitude pressure switch is required.

1. Determine the correct gas input rate.  
In the U.S.:  
For installations below 2000 ft., refer to the unit rating plate.  
For installations above 2000 ft., multiply the input on the rating plate by the de-rate multiplier in Table 6 for the correct input rate.

**Table 6—ALTITUDE DERATE MULTIPLIER FOR U.S.A.**

| ALTITUDE (FT) | PERCENT OF DERATE | DERATE MULTIPLIER FACTOR FOR U.S.A.* |
|---------------|-------------------|--------------------------------------|
| 0–2000        | 0                 | 1.00                                 |
| 2001–3000     | 8–12              | 0.90                                 |
| 3001–4000     | 12–16             | 0.86                                 |
| 4001–5000     | 16–20             | 0.82                                 |
| 5001–6000     | 20–24             | 0.78                                 |
| 6001–7000     | 24–28             | 0.74                                 |
| 7001–8000     | 28–32             | 0.70                                 |
| 8001–9000     | 32–36             | 0.66                                 |
| 9001–10,000   | 36–40             | 0.62                                 |

\* Derate multiplier factor is based on midpoint altitude for altitude range.

In Canada:

At installation altitudes from 2000 to 4500 ft, this furnace must be derated 10 percent by an authorized Gas Conversion Station or Dealer. To determine correct input rate for altitude, see example and use 0.90 as derate multiplier factor.

#### EXAMPLE:

#### 88,000 BTUH INPUT FURNACE INSTALLED AT 4300 FT.

|                    |   |                   |   |                                    |
|--------------------|---|-------------------|---|------------------------------------|
| Furnace Input Rate | X | Derate Multiplier | = | Furnace Input Rate at Installation |
| at Sea Level       |   | Factor            |   | Altitude                           |
| 88,000             | X | 0.90              | = | 79,200                             |

2. Determine the correct orifice and manifold pressure adjustment. All models in all positions except Low NOx models in downflow and horizontal positions use Table 11 (22,000 BTUH per burner)  
Low NOx models in downflow or horizontal positions MUST use Table 12 (21,000 BTUH per burner). See input listed on rating plate.
  - a. Obtain average yearly gas heat value (at installed altitude) from local gas supplier.
  - b. Obtain average yearly gas specific gravity from local gas supplier.
  - c. Find installation altitude in Table 11 or 12.
  - d. Find closest natural gas heat value and specific gravity in Table 11 or 12.
  - e. Follow heat value and specific gravity lines to point of intersection to find orifice size and low-and high-heat manifold pressure settings for proper operation.
  - f. Check and verify burner orifice size in furnace. NEVER ASSUME ORIFICE SIZE. ALWAYS CHECK AND VERIFY.
  - g. Replace orifice with correct size if required by Table 11 or 12. Use only factory-supplied orifices. See EXAMPLE 2. 22,000 BTUH/burner application-use Table 11.

#### EXAMPLE 2: (0–2000 ft altitude)

Heating value = 1000 Btu/cu ft

Specific gravity = 0.62

Therefore: Orifice No. 43\*


Manifold pressure: 3.7-in. wc for high-heat

1.6-in. wc for low-heat

\* Furnace is shipped with No. 43 orifices. In this example all main burner orifices are the correct size and do not need to be changed to obtain proper input rate.

3. Adjust manifold pressure to obtain low fire input rate.
  - a. Turn gas valve ON/OFF switch to OFF.
  - b. Remove manifold pressure tap plug from gas valve.
  - c. Connect a water column manometer or similar device to manifold pressure tap.
  - d. Turn gas valve ON/OFF switch to ON.
  - e. Move setup switch LHT (SW-1) on 2 stage furnace control to ON position. (See Fig. 31 or Table 7) to lock furnace in low-heat operation.
  - f. Manually close blower door switch.
  - g. Jumper R and W/W1 thermostat connections on control to start furnace. (See Fig. 31.)

- h. Remove regulator adjustment cap from low-heat gas valve pressure regulators. (See Fig. 47) and turn low-heat adjusting screw (5/64 hex Allen wrench) counterclockwise (out) to decrease input rate or clockwise (in) to increase input rate.

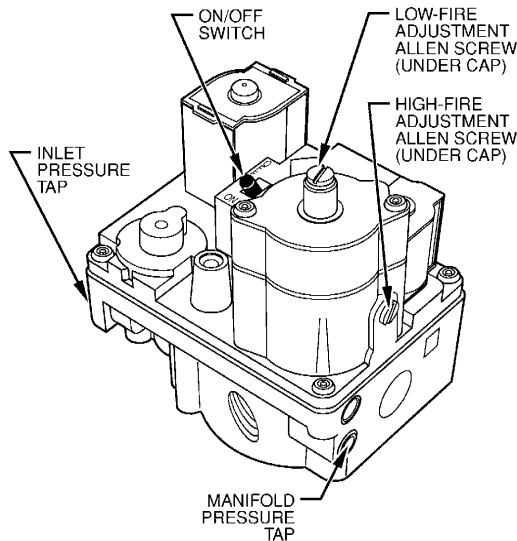

A00158

**Fig. 47—Redundant Automatic Gas Control Valve**

**NOTE:** DO NOT set low-heat manifold pressure less than 1.4-in. wc or more than 1.7-in. wc for natural gas. If manifold pressure is outside this range, change main burner orifices.

- i. Install low-heat regulator adjustment cap.
- j. Leave manometer or similar device connected and proceed to Step 4


### ⚠ CAUTION

DO NOT bottom out gas valve regulator adjusting screw. This can result in unregulated manifold pressure and result in excess overfire and heat exchanger failures.

**NOTE:** If orifice hole appears damaged or it is suspected to have been redrilled, check orifice hole with a numbered drill bit of correct size. Never redrill an orifice. A burr-free and squarely aligned orifice hole is essential for proper flame characteristics.

### ⚠ CAUTION

DO NOT redrill orifices. Improper drilling (burrs, out-of-round holes, etc.) can cause excessive burner noise and misdirection of burner flames. This can result in flame impingement of heat exchangers, causing failures. (See Fig. 48.)

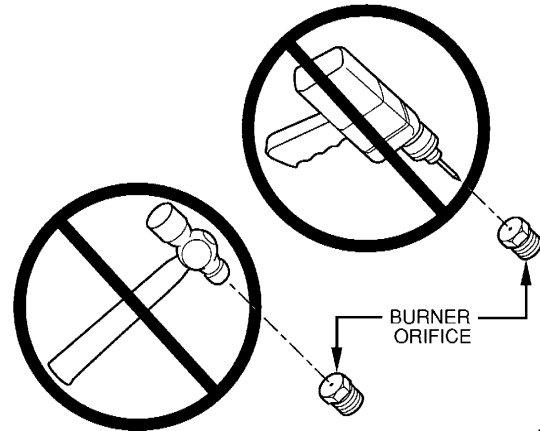

A93059

**Fig. 48—Orifice Hole**

4. Verify natural gas low-heat input rate by clocking meter.

**NOTE:** Gas valve regulator adjustment caps must be in place for proper input to be clocked.

- a. Turn off all other gas appliances and pilots.
- b. Run for 3 minutes in low-heat operation.
- c. Measure time (in sec) for gas meter to complete 1 revolution. And note reading.
- d. Refer to Table 9 for cubic ft of gas per hr.
- e. Multiply gas rate cu ft/hr by heating value (Btu/cu ft) to obtain input.

**NOTE:** Using the 2 cu. ft. or 5 cu. ft. gas meter dial provides greater accuracy in verifying gas input rate.

If clocked rate does not match required input from Step 1, increase manifold pressure to increase input or decrease manifold pressure to decrease input. Repeat steps b through c until correct low fire input is achieved. Re-install low-fire regulator seal cap on gas valve.

5. Set low-heat temperature rise.

The furnace must operate within the temperature rise ranges specified on the furnace rating plate. Do not exceed temperature rise ranges specified on unit rating plate for high-and low-heat. Determine the temperature rise as follows:

**NOTE:** Blower access door must be installed when taking temperature rise reading. Leaving blower access door off will result in incorrect temperature measurements.

- a. Verify unit is running in low heat per Step 4. Place thermometers in return and supply ducts as close to furnace as possible. Be sure thermometers do not see radiant heat from heat exchangers. Radiant heat affects temperature rise readings. This practice is particularly important with straight-run ducts.
- b. When thermometer readings stabilize, subtract return-air temperature from supply-air temperature to determine air temperature rise.

- NOTE:** If the temperature rise is outside this range, first check:
- 1.) Gas input for low heat operation.
  - 2.) Derate for altitude if applicable.
  - 3.) Return and supply ducts for excessive restrictions causing static pressures greater than 0.50-in. wc.
  - c. Adjust air temperature rise by adjusting blower speed. Increase blower speed to reduce temperature rise. Decrease blower speed to increase temperature rise. For low heat, speed selection can be low (factory setting), med-low, or med (5-speed blowers only).

### ⚠ WARNING

Disconnect 115-v electrical power before changing speed tap. Failure to follow this warning could result in personal injury.

- d. Remove thermostat jumpers and release Blower Access Door Switch.
- e. To change motor speed selection for low heat, remove blower motor lead from control LO-HEAT terminal. (See Fig. 31 and Table 8.) Select desired blower motor speed lead from 1 of the other terminals and relocate it to the LO-HEAT terminal. (See Table 8 for lead color identification). Reconnect original lead to SPARE terminal.

**Table 8 —Speed Selection**

| COLOR   | SPEED    | AS SHIPPED |
|---------|----------|------------|
| White   | Common   | BLW        |
| Black   | High     | COOL       |
| Yellow  | Med-High | SPARE      |
| Orange† | Med      | SPARE      |
| Blue    | Med-Low  | HI-HEAT    |
| Red     | Low*     | LO HEAT    |

\* Continuous-blower speed-as shipped default

† Not all models equipped with 5 speed motors

- f. Repeat step a and b.

### ⚠ CAUTION

Recheck temperature rise. It must be within limits specified on the rating plate. Recommended operation is at the mid-point of rise range or slightly above.

- g. When correct low fire input rate and temperature rise is achieved, proceed to Step 6.
6. Adjust Manifold Pressure to Obtain High Fire Rate
  - a. Remove high fire regulator adjustment cap from gas valve pressure regulator.
  - b. Manually close blower access door switch
  - c. Jumper R, W/W1 and W2 thermostat connections on control to run furnace in high fire. (See Fig. 31.)
  - d. Turn high-heat adjusting screw (5/64 hex Allen wrench) counterclockwise (out) to decrease input rate or clockwise (in) to increase rate.
  - e. Re-install high-fire adjustment caps.
  - f. Leave manifold or similar device connected and proceed to Step 7.

**NOTE:** DO NOT set high-heat manifold pressure less than 3.2-in. wc or more than 3.8-in. wc for natural gas. If manifold pressure is outside this range, change main burner orifices.

7. Verify natural gas high heat input rate by clocking meter.

**NOTE:** Gas valve regulator adjustment caps must be in place for proper input to be clocked.

- a. Turn off all other gas appliances and pilots.
- b. Run for 3 minutes in high-heat operation.
- c. Measure time (in sec) for gas meter to complete 1 revolution and note reading.
- d. Refer to Table 9 for cubic ft of gas per hr.
- e. Multiply gas rate cu ft/hr by heating value (Btu/cu ft) to obtain input.

**TABLE 9—GAS RATE (CU FT/HR)**

| SECONDS<br>FOR 1<br>REVOLUTION | SIZE OF TEST DIAL |            |            | SECONDS<br>FOR 1<br>REVOLUTION | SIZE OF TEST DIAL |            |            |
|--------------------------------|-------------------|------------|------------|--------------------------------|-------------------|------------|------------|
|                                | 1<br>Cu Ft        | 2<br>Cu Ft | 5<br>Cu Ft |                                | 1<br>Cu Ft        | 2<br>Cu Ft | 5<br>Cu Ft |
| 10                             | 360               | 720        | 1800       | 50                             | 72                | 144        | 360        |
| 11                             | 327               | 655        | 1636       | 51                             | 71                | 141        | 355        |
| 12                             | 300               | 600        | 1500       | 52                             | 69                | 138        | 346        |
| 13                             | 277               | 555        | 1385       | 53                             | 68                | 136        | 340        |
| 14                             | 257               | 514        | 1286       | 54                             | 67                | 133        | 333        |
| 15                             | 240               | 480        | 1200       | 55                             | 65                | 131        | 327        |
| 16                             | 225               | 450        | 1125       | 56                             | 64                | 129        | 321        |
| 17                             | 212               | 424        | 1059       | 57                             | 63                | 126        | 316        |
| 18                             | 200               | 400        | 1000       | 58                             | 62                | 124        | 310        |
| 19                             | 189               | 379        | 947        | 59                             | 61                | 122        | 305        |
| 20                             | 180               | 360        | 900        | 60                             | 60                | 120        | 300        |
| 21                             | 171               | 343        | 857        | 62                             | 58                | 116        | 290        |
| 22                             | 164               | 327        | 818        | 64                             | 56                | 112        | 281        |
| 23                             | 157               | 313        | 783        | 66                             | 54                | 109        | 273        |
| 24                             | 150               | 300        | 750        | 68                             | 53                | 106        | 265        |
| 25                             | 144               | 288        | 720        | 70                             | 51                | 103        | 257        |
| 26                             | 138               | 277        | 692        | 72                             | 50                | 100        | 250        |
| 27                             | 133               | 267        | 667        | 74                             | 48                | 97         | 243        |
| 28                             | 129               | 257        | 643        | 76                             | 47                | 95         | 237        |
| 29                             | 124               | 248        | 621        | 78                             | 46                | 92         | 231        |
| 30                             | 120               | 240        | 600        | 80                             | 45                | 90         | 225        |
| 31                             | 116               | 232        | 581        | 82                             | 44                | 88         | 220        |
| 32                             | 113               | 225        | 563        | 84                             | 43                | 86         | 214        |
| 33                             | 109               | 218        | 545        | 86                             | 42                | 84         | 209        |
| 34                             | 106               | 212        | 529        | 88                             | 41                | 82         | 205        |
| 35                             | 103               | 206        | 514        | 90                             | 40                | 80         | 200        |
| 36                             | 100               | 200        | 500        | 92                             | 39                | 78         | 196        |
| 37                             | 97                | 195        | 486        | 94                             | 38                | 76         | 192        |
| 38                             | 95                | 189        | 474        | 96                             | 38                | 75         | 188        |
| 39                             | 92                | 185        | 462        | 98                             | 37                | 74         | 184        |
| 40                             | 90                | 180        | 450        | 100                            | 36                | 72         | 180        |
| 41                             | 88                | 176        | 439        | 102                            | 35                | 71         | 178        |
| 42                             | 86                | 172        | 429        | 104                            | 35                | 69         | 173        |
| 43                             | 84                | 167        | 419        | 106                            | 34                | 68         | 170        |
| 44                             | 82                | 164        | 409        | 108                            | 33                | 67         | 167        |
| 45                             | 80                | 160        | 400        | 110                            | 33                | 65         | 164        |
| 46                             | 78                | 157        | 391        | 112                            | 32                | 64         | 161        |
| 47                             | 76                | 153        | 383        | 116                            | 31                | 62         | 155        |
| 48                             | 75                | 150        | 375        | 120                            | 30                | 60         | 150        |
| 49                             | 73                | 147        | 367        |                                |                   |            |            |

**NOTE:** Using the 2 cu. ft. or 5 cu. ft. gas meter dial provides greater accuracy in verifying gas input rate.

If clocked rate does not match required input from Step 1, increase manifold pressure to increase input or decrease manifold pressure to decrease input. Repeat steps b through e until correct high heat input is achieved. Re-install high-heat regulator seal cap on gas valve.

**Table 10—2 Stage Furnace Blower OFF Delay Setup Switch**

| DESIRED HEATING MODE<br>BLOWER OFF DELAY (SEC.) | SETUP SWITCH<br>SW-2 | SETUP SWITCH<br>SW-3 |
|-------------------------------------------------|----------------------|----------------------|
| 90                                              | OFF                  | OFF                  |
| 120                                             | OFF                  | ON                   |
| 150                                             | ON                   | OFF                  |
| 180                                             | ON                   | ON                   |

8. Set high heat temperature rise.

Jumper R to W/W1 and W2 to check high-gas-heat temperature rise. Do not exceed temperature rise ranges specified on unit rating plate for high fire. The furnace must operate within the temperature rise ranges specified on the furnace rating plate.

Determine the air temperature as follows:

**NOTE:** Blower access door must be installed when taking temperature rise reading. Leaving blower access door off will result in incorrect temperature measurements.

- Verify the unit is operating in high fire per Step 6. Place thermometers in return and supply ducts as close to furnace as possible. Be sure thermometers do not see radiant heat from heat exchangers. Radiant heat affects temperature rise readings. This practice is particularly important with straight-run ducts.
- When thermometer readings stabilize, subtract return-air temperature from supply-air temperature to determine air temperature rise.

**NOTE:** If the temperature rise is outside this range, first check:

- Gas input for low-and high-fire operation.
- Derate for altitude if applicable.
- Return and supply ducts for excessive restrictions causing static pressures greater than 0.50-in. wc.
- Adjust air temperature rise by adjusting blower speed. Increase blower speed to reduce temperature rise. Decrease blower speed to increase temperature rise. For high fire, speed selection can be med-high, med (5-speed blowers only), or med-low (factory setting).

**⚠ WARNING**

Disconnect 115-v electrical power before changing speed tap. Failure to follow this warning could result in personal injury.

- Remove thermostat jumpers and release blower access door switch.
- To change motor speed selection for high heat, remove blower motor lead from control HI-HEAT terminal. (See Fig. 31 and Table 8.) Select desired blower motor speed lead from 1 of the other terminals and relocate it to the HI-HEAT terminal. **DO NOT** use the low-heat tap that was already set. (See Table 8 for lead color identification). Reconnect original lead to SPARE terminal.
- Repeat steps a thru e.
- When correct low fire input rate and temperature rise is achieved, turn gas valve ON/OFF switch to OFF.
- Release Blower Access Door switch.
- Remove manometer or similar device from gas valve.
- Re-install manifold pressure tap plug in gas valve. (See Fig 47).
- Remove thermostat jumper wire from furnace control board.

→

- Turn LHT switch OFF.
- Turn gas valve ON/OFF switch to ON.
- Proceed to Step 9, "Set Blower Off Delay" before installing blower access door.

**⚠ CAUTION**

Recheck temperature rise. It must be within limits specified on the rating plate. Recommended operation is at the mid-point of rise range or above.

9. Set Blower Off Delay

- Remove Blower Access Door if installed.
- Turn Dip switch 2 and 3 ON or OFF for desired blower off delay. See Table 10 and Fig 31.

10. Set thermostat heat anticipator.

- Non-electric thermostat—Set thermostat heat anticipator to match the amp draw of the electrical components in the R-W/W1 circuit. Accurate amp draw readings can be obtained at the wires normally connected to thermostat subbase terminals, R and W. The thermostat anticipator should **NOT** be in the circuit while measuring current.

- Set LHT switch on furnace control board to ON.
- Remove thermostat from sub-base or from wall.
- Connect an amp meter as shown in Fig. 49 across the R and W terminals or R and W wires.
- Record amp draw across terminals when furnace is in low heat and after blower starts.
- Set heat anticipator on thermostat per thermostat instructions and install on subbase or wall.
- Turn LHT switch OFF
- Install blower access door.

- Electronic thermostat: Set cycle rate for 3 cycles per hr.

**Step 4—Check Safety Controls**

The flame sensor, gas valve, and pressure switch were all checked in the Start-up procedure section as part of normal operation.

1. Check Main Limit Switches

This control shuts off combustion control system and energizes air-circulating blower motor, if furnace overheats. By using this method to check limit control, it can be established that limit is functioning properly and will operate if there is a restricted return-air supply or motor failure. If limit control does not function during this test, cause must be determined and corrected.

- Run furnace for at least 5 minutes.
- Gradually block off return air with a piece of cardboard or sheet metal until the limit trips.
- Unblock return air to permit normal circulation.
- Burners will re-light when furnace cools down.

**TABLE 11—Orifice Size and Manifold Pressure for Gas Input Rate(Tabulated Data Based On 22,000 Btuh High-Heat/14,500 Btuh for Low-Heat Per Burner, Derated 4 Percent For Each 1000 Ft Above Sea Level)**

| ALTITUDE RANGE (FT) |                                                                | AVG GAS HEAT VALUE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                   |             |                   |             |                   |             |                   |
|---------------------|----------------------------------------------------------------|--------------------------------|---------------------------------|-------------------|-------------|-------------------|-------------|-------------------|-------------|-------------------|
|                     |                                                                |                                | 0.58                            |                   | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |                                                                |                                | Orifice no.                     | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure |
| U.S.A. and Canada   | 0 to 2000                                                      | 900                            | 42                              | 3.5/1.5           | 42          | 3.6/1.6           | 42          | 3.7/1.6           | 41          | 3.5/1.5           |
|                     |                                                                | 925                            | 42                              | 3.3/1.4           | 42          | 3.4/1.5           | 42          | 3.5/1.5           | 42          | 3.7/1.6           |
|                     |                                                                | 950                            | 43                              | 3.8/1.7           | 42          | 3.3/1.4           | 42          | 3.4/1.5           | 42          | 3.5/1.5           |
|                     |                                                                | 975                            | 43                              | 3.6/1.6           | 43          | 3.8/1.6           | 42          | 3.2/1.4           | 42          | 3.3/1.4           |
|                     |                                                                | 1000                           | 43                              | 3.5/1.5           | 43          | 3.6/1.6           | 43          | 3.7/1.6           | 43          | 3.8/1.7           |
|                     |                                                                | 1025                           | 43                              | 3.3/1.4           | 43          | 3.4/1.5           | 43          | 3.5/1.5           | 43          | 3.6/1.6           |
|                     |                                                                | 1050                           | 44                              | 3.6/1.6           | 43          | 3.2/1.4           | 43          | 3.4/1.5           | 43          | 3.5/1.5           |
|                     |                                                                | 1075                           | 44                              | 3.4/1.5           | 44          | 3.5/1.5           | 43          | 3.2/1.4           | 43          | 3.3/1.4           |
|                     |                                                                | 1100                           | 44                              | 3.3/1.4           | 44          | 3.4/1.5           | 44          | 3.5/1.5           | 43          | 3.2/1.4           |
| ALTITUDE RANGE (FT) |                                                                | AVG GAS HEAT VALUE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                   |             |                   |             |                   |             |                   |
|                     |                                                                |                                | 0.58                            |                   | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |                                                                |                                | Orifice no.                     | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure |
| U.S.A. and Canada   | U.S.A. Altitudes 2001 to 3000 or Canada Altitudes 2001 to 4500 | 800                            | 42                              | 3.4/1.5           | 42          | 3.5/1.5           | 42          | 3.6/1.6           | 42          | 3.7/1.6           |
|                     |                                                                | 825                            | 42                              | 3.2/1.4           | 42          | 3.3/1.4           | 42          | 3.4/1.5           | 42          | 3.5/1.5           |
|                     |                                                                | 850                            | 43                              | 3.7/1.6           | 43          | 3.8/1.6           | 42          | 3.2/1.4           | 42          | 3.3/1.4           |
|                     |                                                                | 875                            | 43                              | 3.5/1.5           | 43          | 3.6/1.6           | 43          | 3.7/1.6           | 43          | 3.8/1.7           |
|                     |                                                                | 900                            | 43                              | 3.3/1.4           | 43          | 3.4/1.5           | 43          | 3.5/1.5           | 43          | 3.6/1.6           |
|                     |                                                                | 925                            | 44                              | 3.5/1.5           | 43          | 3.2/1.4           | 43          | 3.3/1.4           | 43          | 3.4/1.5           |
|                     |                                                                | 950                            | 44                              | 3.4/1.5           | 44          | 3.5/1.5           | 44          | 3.6/1.6           | 43          | 3.2/1.4           |
|                     |                                                                | 975                            | 44                              | 3.2/1.4           | 44          | 3.3/1.4           | 44          | 3.4/1.5           | 44          | 3.5/1.5           |
|                     |                                                                | 1000                           | 45                              | 3.7/1.6           | 45          | 3.8/1.7           | 44          | 3.2/1.4           | 44          | 3.4/1.5           |
| ALTITUDE RANGE (FT) |                                                                | AVG GAS HEAT VALUE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                   |             |                   |             |                   |             |                   |
|                     |                                                                |                                | 0.58                            |                   | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |                                                                |                                | Orifice no.                     | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure |
| U.S.A. Only         | 3001 to 4000                                                   | 775                            | 42                              | 3.2/1.4           | 42          | 3.3/1.4           | 42          | 3.4/1.5           | 42          | 3.5/1.5           |
|                     |                                                                | 800                            | 43                              | 3.6/1.6           | 43          | 3.8/1.6           | 42          | 3.2/1.4           | 42          | 3.3/1.4           |
|                     |                                                                | 825                            | 43                              | 3.4/1.5           | 43          | 3.5/1.5           | 43          | 3.7/1.6           | 43          | 3.8/1.6           |
|                     |                                                                | 850                            | 43                              | 3.2/1.4           | 43          | 3.3/1.4           | 43          | 3.4/1.5           | 43          | 3.6/1.5           |
|                     |                                                                | 875                            | 44                              | 3.5/1.5           | 44          | 3.6/1.6           | 43          | 3.3/1.4           | 43          | 3.4/1.5           |
|                     |                                                                | 900                            | 44                              | 3.3/1.4           | 44          | 3.4/1.5           | 44          | 3.5/1.5           | 43          | 3.2/1.4           |
|                     |                                                                | 925                            | 45                              | 3.8/1.6           | 44          | 3.2/1.4           | 44          | 3.3/1.5           | 44          | 3.4/1.5           |
|                     |                                                                | 950                            | 46                              | 3.8/1.6           | 45          | 3.7/1.6           | 45          | 3.8/1.7           | 44          | 3.3/1.4           |
| ALTITUDE RANGE (FT) |                                                                | AVG GAS HEAT VALUE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                   |             |                   |             |                   |             |                   |
|                     |                                                                |                                | 0.58                            |                   | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |                                                                |                                | Orifice no.                     | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure |
| U.S.A. Only         | 4001 to 5000                                                   | 750                            | 43                              | 3.6/1.6           | 43          | 3.8/1.6           | 42          | 3.2/1.4           | 42          | 3.3/1.4           |
|                     |                                                                | 775                            | 43                              | 3.4/1.5           | 43          | 3.5/1.5           | 43          | 3.6/1.6           | 43          | 3.8/1.6           |
|                     |                                                                | 800                            | 43                              | 3.2/1.4           | 43          | 3.3/1.4           | 43          | 3.4/1.5           | 43          | 3.5/1.5           |
|                     |                                                                | 825                            | 44                              | 3.4/1.5           | 44          | 3.6/1.5           | 43          | 3.2/1.4           | 43          | 3.3/1.4           |
|                     |                                                                | 850                            | 44                              | 3.2/1.4           | 44          | 3.4/1.5           | 44          | 3.5/1.5           | 44          | 3.6/1.6           |
|                     |                                                                | 875                            | 45                              | 3.7/1.6           | 45          | 3.8/1.7           | 44          | 3.3/1.4           | 44          | 3.4/1.5           |
|                     |                                                                | 900                            | 46                              | 3.7/1.6           | 46          | 3.8/1.7           | 45          | 3.7/1.6           | 44          | 3.2/1.4           |
|                     |                                                                | 925                            | 46                              | 3.5/1.5           | 46          | 3.6/1.6           | 46          | 3.7/1.6           | 46          | 3.8/1.7           |

\* Orifice numbers 43 are factory installed

2. Check draft safeguard switch.

The purpose of this control is to permit the safe shutdown of the furnace during certain blocked vent conditions.

- Verify vent pipe is cool to the touch.
- Disconnect power to furnace and remove vent connector from furnace vent elbow.

c. Restore power to furnace and set room thermostat above room temperature.

d. After normal start-up, allow furnace to operate for 2 minutes, then block vent elbow in furnace 80 percent of vent area with a piece of flat sheet metal.

e. Furnace should cycle off within 2 minutes.

**TABLE 11—(Tabulated Data Based On 22,000 Btuh High-Heat/14,500 Btuh for Low-Heat Per Burner,  
Derated 4 Percent For Each 1000 Ft Above Sea Level)**

| Altitude Range (ft) |              | Avg Gas Heat Value at Altitude (BTU/cu ft) | Specific Gravity of Natural Gas |                    |             |                   |             |                   |             |                   |
|---------------------|--------------|--------------------------------------------|---------------------------------|--------------------|-------------|-------------------|-------------|-------------------|-------------|-------------------|
|                     |              |                                            | 0.58                            |                    | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |              |                                            | Orifice No.                     | Manifold Pressure  | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure |
| U.S.A. Only         | 5001 to 6000 | 725                                        | 43                              | 3.4/1.5            | 43          | 3.5/1.5           | 43          | 3.6/1.6           | 43          | 3.7/1.6           |
|                     |              | 750                                        | 43                              | 3.2/1.4            | 43          | 3.3/1.4           | 43          | 3.4/1.5           | 43          | 3.5/1.5           |
|                     |              | 775                                        | 44                              | 3.4/1.5            | 44          | 3.5/1.5           | 43          | 3.2/1.4           | 43          | 3.3/1.4           |
|                     |              | 800                                        | 44                              | 3.2/1.4            | 44          | 3.3/1.4           | 44          | 3.4/1.5           | 44          | 3.5/1.5           |
|                     |              | 825                                        | 46                              | 3.8/1.7            | 45          | 3.8/1.6           | 44          | 3.2/1.4           | 44          | 3.3/1.4           |
|                     |              | 850                                        | 46                              | 3.6/1.6            | 46          | 3.7/1.6           | 46          | 3.8/1.7           | 45          | 3.8/1.6           |
|                     |              | 875                                        | 47                              | 3.8/1.7            | 46          | 3.5/1.5           | 46          | 3.6/1.6           | 46          | 3.7/1.6           |
|                     |              | 900                                        | 47                              | 3.6/1.6            | 47          | 3.8/1.6           | 46          | 3.4/1.5           | 46          | 3.5/1.5           |
| Altitude Range (ft) |              | Avg Gas Heat Value at Altitude (BTU/cu ft) | Specific Gravity of Natural Gas |                    |             |                   |             |                   |             |                   |
|                     |              |                                            | 0.58                            |                    | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |              |                                            | Orifice No.                     | Manifold Pressure  | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure |
| U.S.A. Only         | 6001 to 7000 | 675                                        | 43                              | 3.4/1.5            | 43          | 3.5/1.5           | 43          | 3.6/1.6           | 43          | 3.7/1.6           |
|                     |              | 700                                        | 44                              | 3.6/1.6            | 43          | 3.3/1.4           | 43          | 3.4/1.5           | 43          | 3.5/1.5           |
|                     |              | 725                                        | 44                              | 3.4/1.5            | 44          | 3.5/1.5           | 44          | 3.6/1.6           | 43          | 3.2/1.4           |
|                     |              | 750                                        | 45                              | 3.8/1.7            | 44          | 3.3/1.4           | 44          | 3.4/1.5           | 44          | 3.5/1.5           |
|                     |              | 775                                        | 46                              | 3.7/1.6            | 45          | 3.7/1.6           | 45          | 3.8/1.7           | 44          | 3.2/1.4           |
|                     |              | 800                                        | 46                              | 3.5/1.5            | 46          | 3.6/1.6           | 46          | 3.8/1.6           | 45          | 3.7/1.6           |
|                     |              | 825                                        | 47                              | 3.7/1.6            | 46          | 3.4/1.5           | 46          | 3.5/1.5           | 46          | 3.6/1.6           |
|                     |              | 850                                        | 47                              | 3.5/1.5            | 47          | 3.6/1.6           | 47          | 3.8/1.6           | 46          | 3.4/1.5           |
| Altitude Range (ft) |              | Avg Gas Heat Value at Altitude (BTU/cu ft) | Specific Gravity of Natural Gas |                    |             |                   |             |                   |             |                   |
|                     |              |                                            | 0.58                            |                    | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |              |                                            | Orifice No.                     | Mainifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure |
| U.S.A. Only         | 7001 to 8000 | 650                                        | 44                              | 3.6/1.6            | 43          | 3.2/1.4           | 43          | 3.4/1.5           | 43          | 3.5/1.5           |
|                     |              | 675                                        | 44                              | 3.3/1.5            | 44          | 3.5/1.5           | 44          | 3.6/1.6           | 43          | 3.2/1.4           |
|                     |              | 700                                        | 45                              | 3.8/1.6            | 44          | 3.2/1.4           | 44          | 3.3/1.4           | 44          | 3.4/1.5           |
|                     |              | 725                                        | 46                              | 3.7/1.6            | 46          | 3.8/1.7           | 45          | 3.7/1.6           | 44          | 3.2/1.4           |
|                     |              | 750                                        | 46                              | 3.4/1.5            | 46          | 3.6/1.5           | 46          | 3.7/1.6           | 46          | 3.8/1.6           |
|                     |              | 775                                        | 47                              | 3.6/1.6            | 47          | 3.8/1.6           | 46          | 3.4/1.5           | 46          | 3.6/1.5           |
|                     |              | 800                                        | 47                              | 3.4/1.5            | 47          | 3.5/1.5           | 47          | 3.7/1.6           | 47          | 3.8/1.6           |
|                     |              | 825                                        | 48                              | 3.7/1.6            | 48          | 3.8/1.6           | 47          | 3.4/1.5           | 47          | 3.6/1.5           |
| Altitude Range (ft) |              | Avg Gas Heat Value at Altitude (BTU/cu ft) | Specific Gravity of Natural Gas |                    |             |                   |             |                   |             |                   |
|                     |              |                                            | 0.58                            |                    | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |              |                                            | Orifice No.                     | Manifold Pressure  | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure |
| U.S.A. Only         | 8001 to 9000 | 625                                        | 44                              | 3.3/1.5            | 44          | 3.5/1.5           | 44          | 3.6/1.6           | 43          | 3.2/1.4           |
|                     |              | 650                                        | 45                              | 3.7/1.6            | 44          | 3.2/1.4           | 44          | 3.3/1.4           | 44          | 3.4/1.5           |
|                     |              | 675                                        | 46                              | 3.6/1.6            | 46          | 3.8/1.6           | 45          | 3.7/1.6           | 45          | 3.8/1.7           |
|                     |              | 700                                        | 47                              | 3.8/1.7            | 46          | 3.5/1.5           | 46          | 3.6/1.6           | 46          | 3.7/1.6           |
|                     |              | 725                                        | 47                              | 3.6/1.6            | 47          | 3.7/1.6           | 47          | 3.8/1.7           | 46          | 3.5/1.5           |
|                     |              | 750                                        | 48                              | 3.8/1.7            | 47          | 3.5/1.5           | 47          | 3.6/1.6           | 47          | 3.7/1.6           |
|                     |              | 775                                        | 48                              | 3.6/1.5            | 48          | 3.7/1.6           | 48          | 3.8/1.7           | 47          | 3.5/1.5           |

\* Orifice numbers 43 are factory installed

**TABLE 11—(Tabulated Data Based On 22,000 Btuh High-Heat/14,500 Btuh for Low-Heat Per Burner, Derated 4 Percent For Each 1000 Ft Above Sea Level)**

| ALTITUDE RANGE (FT) |                | AVG GAS HEAT VALUE AT ALTITUDE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                   |             |                   |             |                   |             |                   |
|---------------------|----------------|--------------------------------------------|---------------------------------|-------------------|-------------|-------------------|-------------|-------------------|-------------|-------------------|
|                     |                |                                            | 0.58                            |                   | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |                |                                            | Orifice No.                     | Manifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure |
| U.S.A. Only         | 9001 to 10,000 | 600                                        | 45                              | 3.7/1.6           | 45          | 3.8/1.7           | 44          | 3.3/1.4           | 44          | 3.4/1.5           |
|                     |                | 625                                        | 46                              | 3.6/1.6           | 46          | 3.7/1.6           | 46          | 3.8/1.7           | 45          | 3.8/1.6           |
|                     |                | 650                                        | 47                              | 3.8/1.6           | 46          | 3.4/1.5           | 46          | 3.6/1.5           | 46          | 3.7/1.6           |
|                     |                | 675                                        | 47                              | 3.5/1.5           | 47          | 3.6/1.6           | 47          | 3.7/1.6           | 46          | 3.4/1.5           |
|                     |                | 700                                        | 48                              | 3.7/1.6           | 48          | 3.8/1.7           | 47          | 3.5/1.5           | 47          | 3.6/1.6           |
|                     |                | 725                                        | 48                              | 3.5/1.5           | 48          | 3.6/1.6           | 48          | 3.7/1.6           | 48          | 3.8/1.7           |

\* Orifice numbers 43 are factory installed

- f. Remove blockage and reconnect vent pipe to furnace vent elbow.
- g. Switch will auto-reset when it cools.
- h. Re-install vent pipe.

**NOTE:** If switch is open longer than 3 minutes, furnace control board will lockout the furnace for 3 hours. To reset furnace control board, turn thermostat above room temperature or from HEAT to OFF and turn 115 v power OFF, then back ON.


### 3. Check Pressure Switch(es)

This control proves operation of the draft inducer blower.

- a. Turn off 115-v power to furnace.
- b. Disconnect inducer motor lead wires from wire harness.
- c. Turn on 115-v power to furnace.
- d. Set thermostat to "call for heat" and wait 1 minute. When pressure switch is functioning properly, hot surface igniter should NOT glow and control diagnostic light flashes a status code 32. If hot surface igniter glows when inducer motor is disconnected, shut down furnace immediately.
- e. Determine reason pressure switch did not function properly and correct condition.
- f. Turn off 115-v power to furnace.
- g. Reconnect inducer motor wires, replace outer door, and turn on 115-v power.
- h. Blower will run for 90 seconds before beginning the call for heat again.
- i. Furnace should ignite normally.

### Step 5—Checklist

1. Put away tools and instruments. Clean up debris.
2. Check that switches for LHT and OFF-DELAY are blower OFF-DELAY are selected as desired.
3. Verify that blower and burner access doors are properly installed.
4. Cycle test furnace with room thermostat.
5. Check operation of accessories per manufacturer's instructions.
6. Review User's Guide with owner.
7. Attach literature packet to furnace.

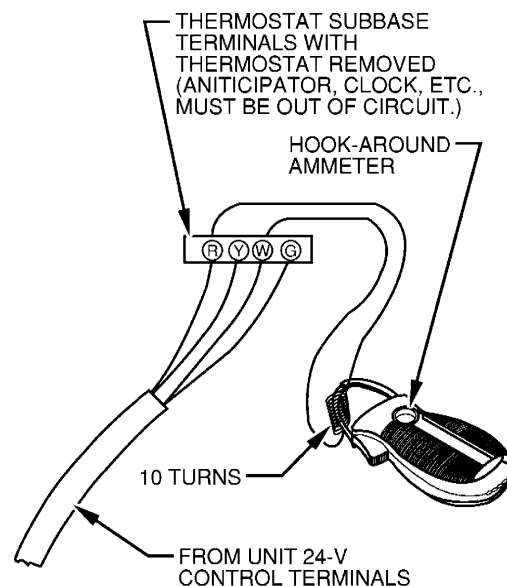

EXAMPLE:  $\frac{5.0 \text{ AMPS ON AMMETER}}{10 \text{ TURNS AROUND JAWS}} = 0.5 \text{ AMPS FOR THERMOSTAT ANTICIPATOR SETTING}$

A96316

**Fig. 49—Amp Draw Check With Ammeter**

## SERVICE AND MAINTENANCE PROCEDURES

### ⚠ WARNING

**ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD**  
Failure to follow safety warnings exactly, could result in dangerous operation, serious injury, death or property damage.

Improper servicing could result in dangerous operation, serious injury, death or property damage.

-Before servicing, disconnect all electrical power to furnace.

-When servicing controls, label all wires prior to disconnecting. Reconnect wires correctly.

-Verify proper operation after servicing.

### ⚠ WARNING

The ability to properly perform maintenance on this equipment requires certain knowledge, mechanical skills, tools, and equipment. If you do not possess these, do not attempt to perform any maintenance on this equipment other than those procedures recommended in the User's Manual.

**TABLE 12—Orifice Size and Manifold Pressure for Gas Input Rate(Tabulated Data Based On 21,000 Btuh High-Heat/14,500 Btuh for Low-Heat Per Burner, Derated 4 Percent For Each 1000 Ft Above Sea Level)**

| ALTITUDE RANGE (FT) |                                                                | AVG GAS HEAT VALUE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                                |                                 |                   |             |                   |             |                   |
|---------------------|----------------------------------------------------------------|--------------------------------|---------------------------------|--------------------------------|---------------------------------|-------------------|-------------|-------------------|-------------|-------------------|
|                     |                                                                |                                | 0.58                            |                                | 0.60                            |                   | 0.62        |                   | 0.64        |                   |
|                     |                                                                |                                | Orifice no.                     | Manifold Pressure              | Orifice no.                     | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure |
| U.S.A. and Canada   | 0 to 2000                                                      | 900                            | 42                              | 3.2/1.5                        | 42                              | 3.3/1.6           | 42          | 3.4/1.6           | 42          | 3.5/1.7           |
|                     |                                                                | 925                            | 43                              | 3.7/1.8                        | 43                              | 3.8/1.8           | 42          | 3.2/1.5           | 42          | 3.3/1.6           |
|                     |                                                                | 950                            | 43                              | 3.5/1.7                        | 43                              | 3.6/1.7           | 43          | 3.7/1.8           | 43          | 3.8/1.8           |
|                     |                                                                | 975                            | 43                              | 3.3/1.6                        | 43                              | 3.4/1.6           | 43          | 3.5/1.7           | 43          | 3.7/1.7           |
|                     |                                                                | 1000                           | 44                              | 3.6/1.7                        | 43                              | 3.3/1.6           | 43          | 3.4/1.6           | 43          | 3.5/1.7           |
|                     |                                                                | 1025                           | 44                              | 3.4/1.6                        | 44                              | 3.6/1.7           | 43          | 3.2/1.5           | 43          | 3.3/1.6           |
|                     |                                                                | 1050                           | 44                              | 3.3/1.6                        | 44                              | 3.4/1.6           | 44          | 3.5/1.7           | 43          | 3.2/1.5           |
|                     |                                                                | 1075                           | 45                              | 3.8/1.8                        | 44                              | 3.2/1.5           | 44          | 3.3/1.6           | 44          | 3.4/1.6           |
|                     |                                                                | 1100                           | 46                              | 3.8/1.8                        | 45                              | 3.7/1.8           | 44          | 3.2/1.5           | 44          | 3.3/1.6           |
| ALTITUDE RANGE (FT) |                                                                | AVG GAS HEAT VALUE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                                |                                 |                   |             |                   |             |                   |
|                     |                                                                |                                | 0.58                            |                                | 0.60                            |                   | 0.62        |                   | 0.64        |                   |
|                     |                                                                |                                | Orifice no.                     | Manifold Pressure              | Orifice no.                     | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure |
| U.S.A. and Canada   | U.S.A. Altitudes 2001 to 3000 or Canada Altitudes 2001 to 4500 | 800                            | 43                              | 3.8/1.8                        | 42                              | 3.2/1.5           | 42          | 3.3/1.6           | 42          | 3.4/1.6           |
|                     |                                                                | 825                            | 43                              | 3.5/1.7                        | 43                              | 3.7/1.7           | 43          | 3.8/1.8           | 42          | 3.2/1.5           |
|                     |                                                                | 850                            | 43                              | 3.3/1.6                        | 43                              | 3.5/1.6           | 43          | 3.6/1.7           | 43          | 3.7/1.8           |
|                     |                                                                | 875                            | 43                              | 3.2/1.5                        | 43                              | 3.3/1.6           | 43          | 3.4/1.6           | 43          | 3.5/1.7           |
|                     |                                                                | 900                            | 44                              | 3.4/1.6                        | 44                              | 3.5/1.7           | 43          | 3.2/1.5           | 43          | 3.3/1.6           |
|                     |                                                                | 925                            | 44                              | 3.2/1.5                        | 44                              | 3.3/1.6           | 44          | 3.5/1.6           | 44          | 3.6/1.7           |
|                     |                                                                | 950                            | 45                              | 3.7/1.8                        | 45                              | 3.8/1.8           | 44          | 3.3/1.6           | 44          | 3.4/1.6           |
|                     |                                                                | 975                            | 46                              | 3.7/1.8                        | 46                              | 3.8/1.8           | 45          | 3.8/1.8           | 44          | 3.2/1.5           |
|                     |                                                                | 1000                           | 46                              | 3.5/1.7                        | 46                              | 3.6/1.7           | 46          | 3.8/1.8           | 45          | 3.7/1.8           |
| ALTITUDE RANGE (FT) |                                                                | AVG GAS HEAT VALUE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                                |                                 |                   |             |                   |             |                   |
|                     |                                                                |                                | 0.58                            |                                | 0.60                            |                   | 0.62        |                   | 0.64        |                   |
|                     |                                                                |                                | Orifice no.                     | Manifold Pressure              | Orifice no.                     | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure |
| U.S.A. Only         | 3001 to 4000                                                   | 775                            | 43                              | 3.5/1.7                        | 43                              | 3.7/1.7           | 43          | 3.8/1.8           | 42          | 3.2/1.5           |
|                     |                                                                | 800                            | 43                              | 3.3/1.6                        | 43                              | 3.4/1.6           | 43          | 3.5/1.7           | 43          | 3.7/1.7           |
|                     |                                                                | 825                            | 44                              | 3.6/1.7                        | 43                              | 3.2/1.5           | 43          | 3.3/1.6           | 43          | 3.4/1.6           |
|                     |                                                                | 850                            | 44                              | 3.4/1.6                        | 44                              | 3.5/1.7           | 44          | 3.6/1.7           | 43          | 3.2/1.5           |
|                     |                                                                | 875                            | 45                              | 3.8/1.8                        | 44                              | 3.3/1.6           | 44          | 3.4/1.6           | 44          | 3.5/1.7           |
|                     |                                                                | 900                            | 46                              | 3.8/1.8                        | 45                              | 3.8/1.8           | 44          | 3.2/1.5           | 44          | 3.3/1.6           |
|                     |                                                                | 925                            | 46                              | 3.6/1.7                        | 46                              | 3.7/1.8           | 45          | 3.7/1.8           | 45          | 3.8/1.8           |
|                     |                                                                | 950                            | 46                              | 3.4/1.6                        | 46                              | 3.5/1.7           | 46          | 3.7/1.7           | 46          | 3.8/1.8           |
|                     |                                                                | ALTITUDE RANGE (FT)            |                                 | AVG GAS HEAT VALUE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                   |             |                   |             |                   |
| 0.58                |                                                                |                                |                                 |                                | 0.60                            |                   | 0.62        |                   | 0.64        |                   |
| Orifice no.         | Manifold Pressure                                              |                                |                                 |                                | Orifice no.                     | Manifold Pressure | Orifice no. | Manifold Pressure | Orifice no. | Manifold Pressure |
| U.S.A. Only         | 4001 to 5000                                                   | 750                            | 43                              | 3.3/1.6                        | 43                              | 3.4/1.6           | 43          | 3.5/1.7           | 43          | 3.6/1.7           |
|                     |                                                                | 775                            | 44                              | 3.6/1.7                        | 43                              | 3.2/1.5           | 43          | 3.3/1.6           | 43          | 3.4/1.6           |
|                     |                                                                | 800                            | 44                              | 3.3/1.6                        | 44                              | 3.4/1.6           | 44          | 3.6/1.7           | 43          | 3.2/1.5           |
|                     |                                                                | 825                            | 45                              | 3.8/1.8                        | 44                              | 3.2/1.5           | 44          | 3.4/1.6           | 44          | 3.5/1.6           |
|                     |                                                                | 850                            | 46                              | 3.8/1.8                        | 45                              | 3.7/1.8           | 45          | 3.8/1.8           | 44          | 3.3/1.6           |
|                     |                                                                | 875                            | 46                              | 3.5/1.7                        | 46                              | 3.7/1.7           | 46          | 3.8/1.8           | 45          | 3.7/1.8           |
|                     |                                                                | 900                            | 47                              | 3.8/1.8                        | 46                              | 3.5/1.7           | 46          | 3.6/1.7           | 46          | 3.7/1.8           |
|                     |                                                                | 925                            | 47                              | 3.6/1.7                        | 47                              | 3.7/1.8           | 47          | 3.8/1.8           | 46          | 3.5/1.7           |

\* Orifice numbers 43 are factory installed

**TABLE 12--(Tabulated Data Based On 21,000 Btuh High-Heat/14,500 Btuh for Low-Heat Per Burner,  
Derated 4 Percent For Each 1000 Ft Above Sea Level)**

| ALTITUDE RANGE (FT) |              | AVG GAS HEAT VALUE AT ALTITUDE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                   |             |                   |             |                   |             |                   |
|---------------------|--------------|--------------------------------------------|---------------------------------|-------------------|-------------|-------------------|-------------|-------------------|-------------|-------------------|
|                     |              |                                            | 0.58                            |                   | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |              |                                            | Orifice No.                     | Manifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure |
| U.S.A. Only         | 5001 to 6000 | 725                                        | 44                              | 3.5/1.7           | 43          | 3.2/1.5           | 43          | 3.3/1.6           | 43          | 3.4/1.6           |
|                     |              | 750                                        | 44                              | 3.3/1.6           | 44          | 3.4/1.6           | 44          | 3.5/1.7           | 43          | 3.2/1.5           |
|                     |              | 775                                        | 45                              | 3.7/1.8           | 44          | 3.2/1.5           | 44          | 3.3/1.6           | 44          | 3.4/1.6           |
|                     |              | 800                                        | 46                              | 3.7/1.8           | 46          | 3.8/1.8           | 45          | 3.8/1.8           | 44          | 3.2/1.5           |
|                     |              | 825                                        | 46                              | 3.5/1.7           | 46          | 3.6/1.7           | 46          | 3.7/1.8           | 46          | 3.8/1.8           |
|                     |              | 850                                        | 47                              | 3.7/1.8           | 47          | 3.8/1.8           | 46          | 3.5/1.7           | 46          | 3.6/1.7           |
|                     |              | 875                                        | 47                              | 3.5/1.7           | 47          | 3.6/1.7           | 47          | 3.7/1.8           | 46          | 3.4/1.6           |
| U.S.A. Only         | 6001 to 7000 | 900                                        | 48                              | 3.8/1.8           | 47          | 3.4/1.6           | 47          | 3.5/1.7           | 47          | 3.7/1.7           |
|                     |              | 675                                        | 44                              | 3.5/1.7           | 43          | 3.2/1.5           | 43          | 3.3/1.6           | 43          | 3.4/1.6           |
|                     |              | 700                                        | 44                              | 3.3/1.6           | 44          | 3.4/1.6           | 44          | 3.5/1.7           | 43          | 3.2/1.5           |
|                     |              | 725                                        | 45                              | 3.7/1.8           | 45          | 3.8/1.8           | 44          | 3.3/1.6           | 44          | 3.4/1.6           |
|                     |              | 750                                        | 46                              | 3.6/1.7           | 46          | 3.8/1.8           | 45          | 3.7/1.8           | 45          | 3.8/1.8           |
|                     |              | 775                                        | 46                              | 3.4/1.6           | 46          | 3.5/1.7           | 46          | 3.6/1.7           | 46          | 3.8/1.8           |
|                     |              | 800                                        | 47                              | 3.6/1.7           | 47          | 3.8/1.8           | 46          | 3.4/1.6           | 46          | 3.5/1.7           |
| U.S.A. Only         | 7001 to 8000 | 825                                        | 47                              | 3.4/1.6           | 47          | 3.5/1.7           | 47          | 3.6/1.7           | 47          | 3.8/1.8           |
|                     |              | 850                                        | 48                              | 3.7/1.7           | 48          | 3.8/1.8           | 47          | 3.4/1.6           | 47          | 3.5/1.7           |
|                     |              | 650                                        | 44                              | 3.3/1.6           | 44          | 3.4/1.6           | 44          | 3.5/1.7           | 43          | 3.2/1.5           |
|                     |              | 675                                        | 45                              | 3.7/1.8           | 45          | 3.8/1.8           | 44          | 3.3/1.6           | 44          | 3.4/1.6           |
|                     |              | 700                                        | 46                              | 3.6/1.7           | 46          | 3.7/1.8           | 46          | 3.8/1.8           | 45          | 3.8/1.8           |
|                     |              | 725                                        | 47                              | 3.8/1.8           | 46          | 3.5/1.7           | 46          | 3.6/1.7           | 46          | 3.7/1.8           |
|                     |              | 750                                        | 47                              | 3.5/1.7           | 47          | 3.7/1.8           | 47          | 3.8/1.8           | 46          | 3.5/1.6           |
| U.S.A. Only         | 8001 to 9000 | 775                                        | 48                              | 3.8/1.8           | 47          | 3.4/1.6           | 47          | 3.6/1.7           | 47          | 3.7/1.7           |
|                     |              | 800                                        | 48                              | 3.6/1.7           | 48          | 3.7/1.8           | 48          | 3.8/1.8           | 47          | 3.4/1.6           |
|                     |              | 825                                        | 48                              | 3.3/1.6           | 48          | 3.5/1.6           | 48          | 3.6/1.7           | 48          | 3.7/1.8           |
|                     |              | 625                                        | 45                              | 3.7/1.8           | 45          | 3.8/1.8           | 44          | 3.3/1.6           | 44          | 3.4/1.6           |
|                     |              | 650                                        | 46                              | 3.6/1.7           | 46          | 3.7/1.8           | 46          | 3.8/1.8           | 45          | 3.8/1.8           |
|                     |              | 675                                        | 47                              | 3.8/1.8           | 46          | 3.4/1.6           | 46          | 3.5/1.7           | 46          | 3.7/1.7           |
|                     |              | 700                                        | 47                              | 3.5/1.7           | 47          | 3.6/1.7           | 47          | 3.7/1.8           | 46          | 3.4/1.6           |
| U.S.A. Only         |              | 725                                        | 48                              | 3.7/1.8           | 48          | 3.8/1.8           | 47          | 3.5/1.7           | 47          | 3.6/1.7           |
|                     |              | 750                                        | 48                              | 3.5/1.7           | 48          | 3.6/1.7           | 48          | 3.7/1.8           | 48          | 3.8/1.8           |
|                     |              | 775                                        | 49                              | 3.8/1.8           | 48          | 3.4/1.6           | 48          | 3.5/1.7           | 48          | 3.6/1.7           |

\* Orifice numbers 43 are factory installed

**TABLE 12—(Tabulated Data Based On 21,000 Btuh High-Heat/14,500 Btuh for Low-Heat Per Burner, Derated 4 Percent For Each 1000 Ft Above Sea Level)**

| ALTITUDE RANGE (FT) |                | AVG GAS HEAT VALUE AT ALTITUDE (BTU/CU FT) | SPECIFIC GRAVITY OF NATURAL GAS |                   |             |                   |             |                   |             |                   |
|---------------------|----------------|--------------------------------------------|---------------------------------|-------------------|-------------|-------------------|-------------|-------------------|-------------|-------------------|
|                     |                |                                            | 0.58                            |                   | 0.60        |                   | 0.62        |                   | 0.64        |                   |
|                     |                |                                            | Orifice No.                     | Manifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure | Orifice No. | Manifold Pressure |
| U.S.A. Only         | 9001 to 10,000 | 600                                        | 46                              | 3.6/1.7           | 46          | 3.7/1.8           | 46          | 3.8/1.8           | 45          | 3.7/1.8           |
|                     |                | 625                                        | 47                              | 3.7/1.8           | 47          | 3.8/1.8           | 46          | 3.5/1.7           | 46          | 3.6/1.7           |
|                     |                | 650                                        | 47                              | 3.4/1.6           | 47          | 3.6/1.7           | 47          | 3.7/1.8           | 47          | 3.8/1.8           |
|                     |                | 675                                        | 48                              | 3.6/1.7           | 48          | 3.8/1.8           | 47          | 3.4/1.6           | 47          | 3.5/1.7           |
|                     |                | 700                                        | 48                              | 3.4/1.6           | 48          | 3.5/1.7           | 48          | 3.6/1.7           | 48          | 3.7/1.8           |
|                     |                | 725                                        | 49                              | 3.7/1.8           | 49          | 3.8/1.8           | 48          | 3.4/1.6           | 48          | 3.5/1.7           |

\* Orifice numbers 43 are factory installed

### ⚠ CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

## Step 1—Introduction

### GENERAL

These instructions are written as if the furnace is installed in an upflow application. An upflow furnace application is where the blower is located below the combustion and controls section of the furnace, and conditioned air is discharged upward. Since this furnace can be installed in any of the 4 positions shown in Fig. 4, you must revise your orientation to component location accordingly.

### ELECTRICAL CONTROLS AND WIRING

### ⚠ CAUTION

There may be more than 1 electrical supply to the unit. Check accessories and cooling unit for additional electrical supplies

The electrical ground and polarity for 115-v wiring must be properly maintained. Refer to Fig. 22 for field wiring information and to Fig. 46 for furnace wiring information.

**NOTE:** If the polarity is not correct, the STATUS LED on the control will flash rapidly and prevent the furnace from heating. The control system also requires an earth ground for proper operation of the control and flame-sensing electrode.

The 24-v circuit contains an automotive-type, 3-amp fuse located on the control. (See Fig. 31.) Any shorts of the 24-v wiring during installation, service, or maintenance will cause this fuse to blow. If fuse replacement is required, use ONLY a 3-amp fuse. The control LED will display status code 24 when fuse needs to be replaced.

Proper instrumentation is required to service electrical controls. The control in this furnace is equipped with a Status Code LED (Light-Emitting Diode) to aid in installation, servicing, and troubleshooting. It can be viewed through the sight glass in blower access door. The furnace control LED is either ON continuously, rapid flashing, or a code composed of 2 digits. The first digit is the number of short flashes, the second digit is the number of long flashes.

For an explanation of status codes, refer to service label located on blower access door or Fig. 50, and the troubleshooting guide at the end of this procedure.

### For Controls with an Amber LED

The stored status codes will NOT be erased from the control memory, if 115- or 24-v power is interrupted. The control will store up to five (5) status codes.

- To retrieve status codes, proceed with the following:

**NOTE:** NO thermostat signal may be present at control, and all blower-OFF delays must be completed.

- Leave 115-v power to furnace turned on.
- Remove outer access door.
- Look into blower access door sight glass for current LED status. Removing blower access door will open blower access door switch and terminate 115-v power to control so that status code is not displayed.
- BRIEFLY remove insulated terminal wire from the draft safeguard (DSS) switch until LED goes out, then reconnect it.

**NOTE:** If wire to DSS is disconnected longer than 4 sec, main blower starts, and retrieval request is ignored.

- When above items have been completed, the LED flashes status code 4 times. Record this status code for further troubleshooting. After the LED flashes status code four times, BRIEFLY remove wire again from DSS switch until LED goes out, then reconnect it to retrieve previous status code (if available). Repeat as needed for more previous status codes or until Code 11 appears.

## Step 2—Care and Maintenance

For continuing high performance and to minimize possible equipment failure, periodic maintenance must be performed on this equipment. Consult your local dealer about proper frequency of maintenance and the availability of a maintenance contract.

### ⚠ WARNING

Never store anything on, near, or in contact with the furnace, such as:

- Spray or aerosol cans, rags, brooms, dust mops, vacuum cleaners, or other cleaning tools.
- Soap powders, bleaches, waxes or other cleaning compounds, plastic or plastic containers, gasoline, kerosene, cigarette lighter fluid, dry cleaning fluids, or other volatile fluids.
- Paint thinners and other painting compounds, paper bags, or other paper products.

A failure to follow this warning could result in corrosion of the heat exchanger, fire, personal injury, or death.



### **⚠ WARNING**

Turn off the gas and electrical supplies to the unit before performing any maintenance or service. Follow the operating instructions on the label attached to the furnace. A failure to follow this warning could result in personal injury.

The minimum maintenance on this equipment is as follows:

1. Check and clean air filter each month or more frequently if required. Replace if torn.
2. Check blower motor and wheel for cleanliness each heating and cooling season. Clean as necessary.
3. Check electrical connections for tightness and controls for proper operation each heating season. Service as necessary.
4. Inspect burner compartment before each heating season for rust, corrosion, soot or excessive dust. If necessary, have furnace and burner serviced by a qualified professional.
5. Inspect the vent pipe/vent system before each heating season for rust, corrosion, water leakage, sagging pipes or broken fittings. Have vent pipes/vent system serviced by a qualified professional.
6. Inspect any accessories attached to the furnace such as a humidifier or electronic air cleaner. Perform any service or maintenance to the accessories as recommended in the accessory instructions.

### **⚠ CAUTION**

Personal injury can result from sharp metal edges, etc. Be careful when removing parts. Gloves and safety glasses should be worn when servicing equipment

#### **CLEANING AND/OR REPLACING AIR FILTER**

The air filter arrangement may vary depending on the application.

**NOTE:** If the filter has an airflow direction arrow, the arrow must point towards the blower.

### **⚠ WARNING**

Never operate unit without a filter or with filter access door removed. A failure to follow this warning could result in fire, personal injury, or death.

**Table 13—FILTER SIZE INFORMATION (IN.)**

| FURNACE<br>CASING WIDTH | FILTER SIZE |               | FILTER<br>TYPE |
|-------------------------|-------------|---------------|----------------|
|                         | Side Return | Bottom Return |                |
| 14-1/2                  | 16 X 25 X 1 | 14 X 25 X 1   | Cleanable*     |
| 17-1/2                  | 16 X 25 X 1 | 16 X 25 X 1   | Cleanable*     |
| 21                      | 16 X 25 X 1 | 20 X 25 X 1   | Cleanable*     |
| 24                      | 16 X 25 X 1 | 24 X 25 X 1   | Cleanable*     |

\* Recommended

**Media cabinet filter procedures:** NOTE: Media Cabinet is included with two-stage furnace.

1. Turn off electrical supply to furnace before removing filter access door.
2. Remove filter cabinet door.
3. Slide filter out of cabinet.
4. If equipped with permanent, washable filter, clean filter by spraying cold tap water through filter in opposite direction of airflow. Rinse filter and let dry. Oiling or coating of the filter

is not recommended. See Table 13 for size information.

5. If equipped with factory-specified disposable media filter, replace only with media filter having the same part number and size. For expandable replacement media, refer to the instructions included with the replacement media. If equipped with accessory KGAFR0301ALL external filter rack, See Table 13.
6. Slide filter into cabinet.
7. Replace filter cabinet door.
8. Turn on electrical supply to furnace.

#### **BLOWER MOTOR AND WHEEL**

**The following steps should be performed by a qualified service technician.**

To ensure long life and high efficiency, clean accumulated dirt and grease from blower wheel and motor annually.

The inducer and blower motors are pre-lubricated and require no additional lubrication. These motors can be identified by the absence of oil ports on each end of the motor.

Clean blower motor and wheel as follows:

1. Turn off electrical supply to furnace.
2. Loosen the thumbscrew from outer door and remove outer door.
3. For downflow or horizontal furnaces having vent pipes within the furnace that pass in front of the blower access door:
  - a. Disconnect vent connector from furnace vent elbow.
  - b. Disconnect and remove short piece of vent pipe from within furnace.
4. Remove 2 screws from blower access door and remove blower access door.
5. Disconnect blower leads from furnace control. Notice wire color and location for reassembly. All other factory wires can be left connected, but field thermostat connections may need to be disconnected depending on their length and routing.
6. Remove 2 screws from control box to blower shelf.
7. Hang control box from front of furnace casing and away from blower compartment.
8. Remove 2 screws holding blower assembly to blower deck and slide blower assembly out of furnace.
9. Clean blower wheel and motor using a vacuum with soft brush attachment. Blower wheel blades may be cleaned with a small paint or flux brush. Do not remove or disturb balance weights (clips) on blower wheel blades.
10. Vacuum any loose dust from blower housing, wheel and motor.
11. If a greasy residue is present on blower wheel, remove wheel from the blower housing and wash it with an appropriate degreaser. To remove wheel:

**NOTE:** Before disassembly, mark blower mounting arms, motor, and blower housing so motor and each arm is positioned at the same location during reassembly.

### **⚠ CAUTION**

The blower wheel should not be dropped or bent as balance will be affected.

- a. Disconnect capacitor wires (if equipped) and ground wire attached to blower housing.

- b. Remove screws securing cutoff plate and remove cutoff plate from housing.
  - c. Loosen setscrew holding blower wheel on motor shaft.
  - d. Remove bolts holding motor to blower housing and slide motor out of wheel.
  - e. Remove blower wheel from housing.
  - f. Clean wheel and housing.
12. Reassemble motor and blower by reversing steps 11f, finishing with 11a. Be sure to reattach ground wire to the blower housing.
  13. Verify that blower wheel is centered in blower housing and set screw contacts the flat portion of the motor shaft. Loosen set screw on blower wheel and reposition if necessary.
  14. Spin the blower wheel by hand to verify that the wheel does not rub on the housing.
  15. Reinstall blower assembly in furnace.
  16. Reinstall control box assembly in furnace.
- NOTE:** Refer to Table 8 for motor speed lead relocation if leads were not identified before disconnection.
17. Reconnect blower leads to furnace control. Refer to furnace wiring diagram, and connect thermostat leads if previously disconnected.
  18. To check blower for proper rotation:
    - a. Turn on electrical supply.
    - b. Manually close blower access door switch.

### ⚠ WARNING

Blower access door switch opens 115-v power to furnace control. No component operation can occur. Caution must be taken when manually closing this switch for service purposes. Failure to follow this warning could result in electrical shock, personal injury, or death.

**NOTE:** If thermostat terminals are jumpered at the time blower access door switch is closed, blower will run for 90 sec before beginning a heating or cooling cycle.

- c. Perform component self-test as shown at the bottom of the SERVICE label, located on the front of blower access door.
  - d. Verify blower is rotating in the correct direction
19. If furnace is operating properly, **RELEASE BLOWER ACCESS DOOR SWITCH**, then replace blower access door. Remove any jumpers or reconnect any disconnected thermostat leads.
  20. Downflow or horizontal furnaces with vent pipe through furnace only:
    - a. Install and connect short piece of vent pipe inside furnace to existing vent.
    - b. Connect vent connector to vent elbow.
  21. Reinstall blower access door and outer door.

### ⚠ CAUTION

Heating fan speed(s) **MUST** be adjusted to provide proper air temperature rise as specified on the rating plate. Failure to adjust the heating speed(s) may shorten heat exchanger life. Recommended operation is at the midpoint of the rise range or slightly above.

22. Turn on gas supply and cycle furnace through one complete heating and cooling cycle. Verify the unit temperature rise as shown in Adjustments Section. Adjust temperature rise as

shown in Adjustments Section. If outdoor temperature is below 70° F, turn off circuit breaker to outdoor unit before running furnace in the cooling cycle. Turn outdoor circuit breaker on after completing cooling cycle.

## CLEANING HEAT EXCHANGER

**The following steps should be performed by a qualified service technician:**

**NOTE:** If the heat exchangers get a heavy accumulation of soot and carbon, they should be replaced rather than trying to clean them thoroughly. A build-up of soot and carbon indicates that a problem exists which needs to be corrected, such as improper adjustment of manifold pressure, insufficient or poor quality combustion air, incorrect size or damaged manifold orifice(s), improper gas, or a restricted heat exchanger. Action must be taken to correct the problem.

If it becomes necessary to clean the heat exchangers because of dust or corrosion, proceed as follows:


1. Turn OFF gas and electrical power to furnace.
2. Remove outer access door.
3. Disconnect vent connector from furnace vent elbow.
4. For downflow or horizontal furnace having an internal vent pipe, remove internal vent pipe within the casing.
5. Disconnect wires to the following components. Mark wires to aid in reconnection of:
  - a. Draft safeguard switch.
  - b. Inducer motor.
  - c. Pressure switches.
  - d. Limit overtemperature switch.
  - e. Gas valve.
  - f. Hot surface igniter.
  - g. Flame-sensing electrode
  - h. Flame rollout switches.
6. Remove screws that fasten the collector box assembly to the cell panel. Be careful not to damage the collector box. Inducer assembly and elbow need not be removed from collector box.
7. Disconnect gas line from gas manifold.
8. Remove the 5 screws that attach the burner assembly to the cell panel. The gas valve and individual burners need not be removed from support assembly. Remove NOx baffles if installed.

**NOTE:** Be very careful when removing burner assembly to avoid breaking igniter. See Fig. 51 and 52 for correct igniter location.




→ **Fig. 51—Position of Igniter to Burner**

A02151

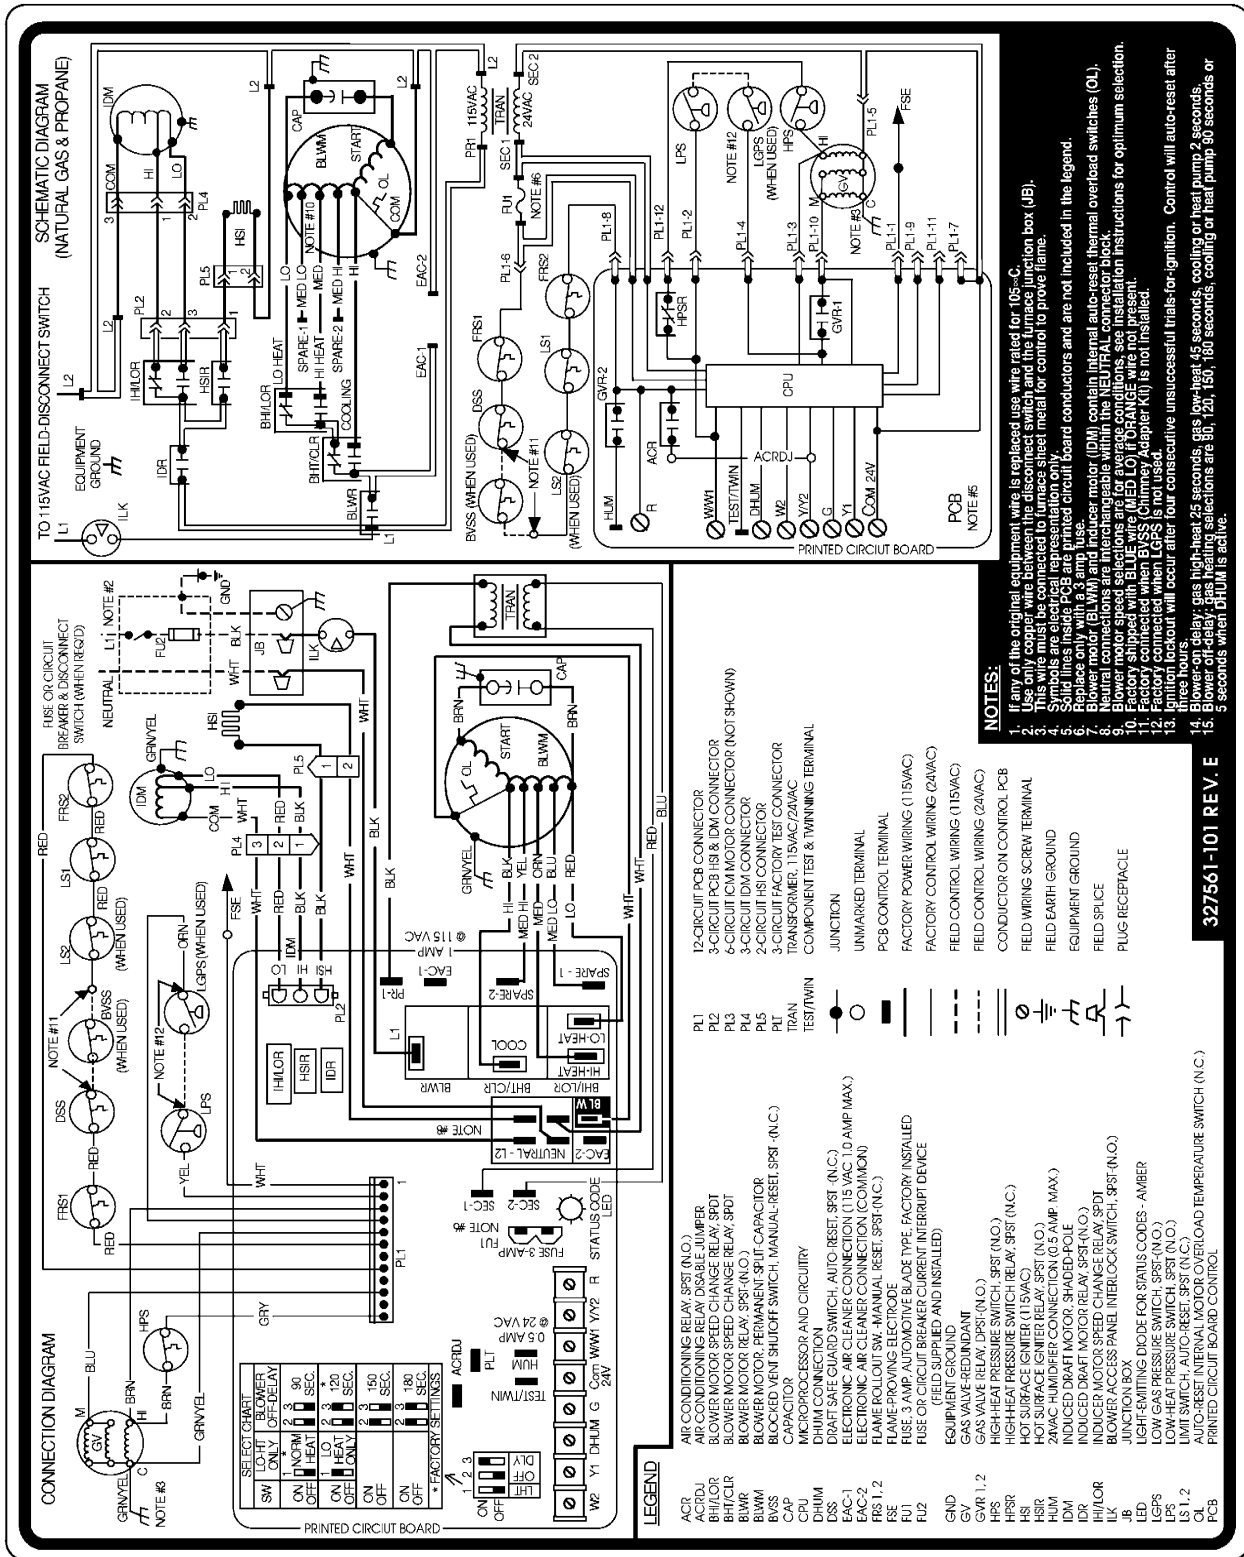

A02159

Fig. 46-Wiring Diagram

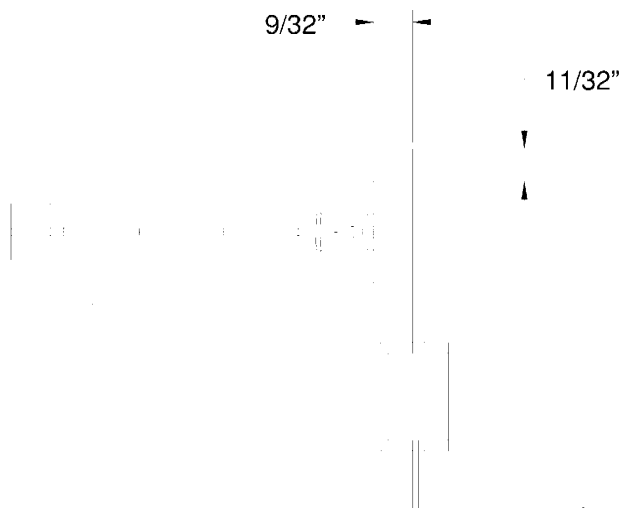

→ **Fig. 52—Position of Igniter to Burner**


9. Using field-provided 25-caliber rifle cleaning brush, 1/4" diameter steel spring cable, 36 in. long, a variable speed, reversible electric drill, and vacuum cleaner, clean cells as follows:

- a. Remove metal screw fitting from wire brush to allow insertion into cable.
- b. Insert the twisted wire end of brush into end of spring cable, and crimp tight with crimping tool or crimp by striking with ball-peen hammer. **TIGHTNESS IS VERY IMPORTANT.**

**NOTE:** The materials needed in item 9 can usually be purchased at local hardware stores.

- (1.) Attach variable-speed, reversible drill to the end of spring cable (end opposite brush).
- (2.) Insert brush end of cable into the outlet opening of cell and slowly rotate with drill. **DO NOT** force cable. Gradually insert cable into upper pass of cell. (See Fig. 53.)
- (3.) Work cable in and out of cell 3 or 4 times to obtain sufficient cleaning. **DO NOT** pull cable with great force. Reverse drill and gradually work cable out.
- (4.) Insert brush end of cable in burner inlet opening of cell, and proceed to clean 2 lower passes of cell in same manner as upper pass.
- (5.) Repeat foregoing procedures until each cell in furnace has been cleaned.
- (6.) Using vacuum cleaner, remove residue from each cell.

(7.) Using vacuum cleaner with soft brush attachment,

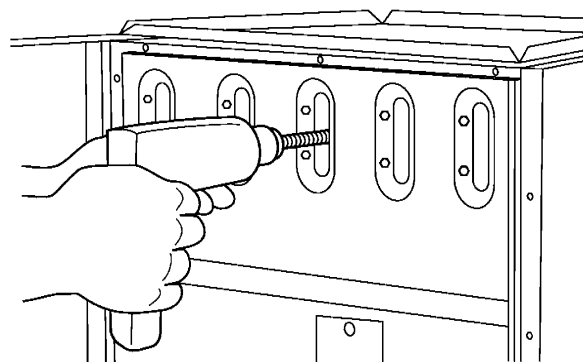

A91252

**Fig. 53—Cleaning Heat Exchanger Cell**

clean burner assembly.

(8.) Clean flame sensor with fine steel wool.

(9.) Install NOx baffles (if removed.)

(10.) Reinstall burner assembly. Center burners in cell openings.

**NOTE:** A releasing agent such as cooking spray or equivalent (must not contain corn or canola oil, aromatic or halogenated hydrocarbons or inadequate seal may occur) and RTV sealant (G.E. 162, 6702, or Dow-Corning 738) are needed before starting installation. **DO NOT** substitute any other type of RTV sealant. G.E. 162 (P771-9003) is available through RCD in 3-oz tubes.

10. Remove old sealant from cell panel and inducer backing plate flange.
11. Spray releasing agent on the heat exchanger cell panel where collector box assembly contacts cell panel.
12. Apply new sealant to flange of inducer assembly and attach to cell panel using existing screws, making sure all screws are secure.
13. Reconnect wires to the following components (Use connection diagram on wiring label, if wires were not marked for reconnection locations.):
  - a. Draft safeguard switch.
  - b. Inducer motor.
  - c. Pressure switches.
  - d. Limit overtemperature switch.
  - e. Gas valve.
  - f. Hot surface igniter.
  - g. Flame-sensing electrode.
  - h. Flame rollout switches.
14. Reinstall internal vent pipe, if applicable.
15. Reinstall vent connector on furnace vent elbow. Securely fasten vent connector to vent elbow with 2 field-supplied, corrosion-resistant, sheet metal screws located 180° apart.
16. Replace blower access door only.
17. Set thermostat above room temperature and check furnace for proper operation.
18. Verify blower airflow and speed changes between heating and cooling.
19. Check for gas leaks.

## ⚠ WARNING

Never use a match or other open flame to check for gas leaks. Use a soap-and-water solution. A failure to follow this warning could result in fire, personal injury, or death.

20. Replace outer access door.

### Step 3—Sequence of Operation

## ⚠ CAUTION

Furnace control must be grounded for proper operation or control will lockout. Control is grounded through green wire connected to gas valve and burner bracket screw.

Using the schematic diagram in Fig. 46, follow the sequence of operation through the different modes. Read and follow the wiring diagram very carefully.

→ **NOTE:** If a power interruption occurs during a call for heat (W/W1 or W/W1-and-W2), the control run the blower for the selected blower off-delay period two seconds after power is restored and if the thermostat is still calling for gas heating. The LED light will flash code 12 during this period, after which the LED will be ON continuous, as long as no faults are detected. After this period, the furnace will respond to the thermostat normally.

The blower door must be installed for power to be conducted through the blower door interlock switch ILK to the furnace control CPU, transformer TRAN, inducer motor IDM, blower motor BLWM, hot-surface igniter HSI, and gas valve GV.

#### 1. Two-Stage Heating (Adaptive mode) with Single-Stage Thermostat

(See Fig. 22 or 30 for thermostat connections)

**NOTE:** The low-heat only switch (LHT) selects either the low-heat only operation mode when ON, (see item 2. below) or the adaptive heating mode when OFF in response to a call for heat. (See Fig. 32.) When the W2 thermostat terminal is energized it will always cause high-heat operation when the R to W circuit is closed, regardless of the setting of the low-heat only switch.

This furnace can operate as a two-stage furnace with a single-stage thermostat because the furnace control CPU includes a programmed adaptive sequence of controlled operation, which selects low-heat or high-heat operation. This selection is based upon the stored history of the length of previous gas-heating periods of the single-stage thermostat.

The furnace will start up in either low- or high-heat. If the furnace starts up in low-heat, the control CPU determines the low-heat on-time (from 0 to 16 minutes) which is permitted before switching to high-heat.

If the power is interrupted, the stored history is erased and the control CPU will select low-heat for up to 16 minutes and then switch to high-heat, as long as the thermostat continues to call for heat. Subsequent selection is based on stored history of the thermostat cycle times.

The wall thermostat "calls for heat", closing the R to W circuit. The furnace control performs a self-check, verifies the low-heat and high-heat pressure switch contacts LPS and HPS are open, and starts the inducer motor IDM in high-speed.

##### a. Inducer Prepurge Period

- (1.) If the furnace control CPU selects low-heat operation the inducer motor IDM comes up to speed, the low-heat pressure switch LPS closes, and the furnace control CPU begins a 15-second prepurge period. After the low-heat pressure switch re-closes the fur-

nace control CPU will begin a 15-second prepurge period, and continue to run the inducer motor IDM at high-speed.

- (2.) If the furnace control CPU selects high-heat operation, the inducer motor IDM remains running at high-speed, and the high-heat pressure switch relay HPSR is de-energized to close the NC contact. When sufficient pressure is available the high-heat pressure switch HPS closes, and the high-heat gas valve solenoid GV-HI is energized. The furnace control CPU begins a 15-second prepurge period after the low-heat pressure switch LPS closes. If the high-heat pressure switch HPS fails to close and the low-heat pressure switch LPS closes, the furnace will operate at low-heat gas flow rate until the high-heat pressure switch closes for a maximum of 2 minutes after ignition.
- b. **Igniter Warm-Up**-At the end of the prepurge period, the HSI is energized for a 17-second igniter warm-up period.
- c. **Trial-for-Ignition Sequence**-When the igniter warm-up period is completed the main gas valve relay contacts GVR-1 and -2 close to energize the gas valve solenoid GV-M, the gas valve opens, and 24 vac power is supplied for a field-installed humidifier at the HUM terminal. The gas valve solenoid GV-M permits gas flow to the burners where it is ignited. After 5 seconds, the igniter HSI is de-energized and a 2-second Flame-Proving period begins. If the furnace control CPU selects high-heat operation, the high-heat gas valve solenoid GV-HI is also energized.
- d. **Flame-Proving**-When the burner flame is proved at the flame-proving sensor electrode FSE, the inducer motor IDM switches to low-speed unless running at high-speed, and the furnace control CPU begins the blower-ON delay period and continues to hold the gas valve GV-M open. If the burner flame is not proved within two seconds, the control CPU will close the gas valve GV-M, and the control CPU will repeat the ignition sequence for up to three more Trials-For-Ignition before going to Ignition-Lockout. **Lockout will be reset** automatically after three hours, by momentarily interrupting 115 vac power to the furnace, or by interrupting 24 vac power at SEC1 or SEC2 to the furnace control CPU (not at W/W1, G, R, etc.). If flame is proved when flame should not be present, the furnace control CPU will lock out of Gas-Heating mode and operate the inducer motor IDM on high speed until flame is no longer proved.
- e. **Blower-ON Delay**-If the burner flame is proven the blower-ON delay for low-heat and high-heat are as follows:  
**Low-Heat**-45 seconds after the GV-M is energized the blower motor (BLWM) is energized at LO HEAT speed.  
**High-Heat**-25 seconds after the GV-M is energized the BLWM is energized at HI HEAT speed. Simultaneously, the electronic air cleaner (EAC-1) terminal is energized and remains energized as long as the BLWM is energized.
- f. **Switching from Low-to High-Heat**-If the furnace control CPU switches from low-heat to high-heat, the furnace control CPU will switch the inducer motor IDM speed from low to high. The high-heat pressure switch relay HPSR is de-energized to close the NC contact. When sufficient pressure is available the high-heat pressure switch HPS closes, and the high-heat gas valve solenoid GV-HI is energized. The blower motor BLWM will switch to HI HEAT speed five seconds after the furnace control CPU switches from low-heat to high-heat.

- g. **Switching from High- to Low-Heat**-The furnace control CPU will not switch from high-heat to low-heat while the thermostat R to W circuit is closed when using a single-stage thermostat.
- h. **Blower-OFF Delay**-When the thermostat is satisfied, the R to W circuit is opened, de-energizing the gas valve GV-M, stopping gas flow to the burners, and de-energizing the humidifier terminal HUM. The inducer motor IDM will remain energized for a 5-second post-purge period. The blower motor BLWM and air cleaner terminal EAC-1 will remain energized for 90, 120, 150, or 180 seconds (depending on selection at blower-OFF delay switches). The furnace control CPU is factory-set for a 120-second blower-OFF delay.

## 2. Two-Stage Thermostat and Two-Stage Heating

(See Fig. 29 for thermostat connections)

**NOTE:** In this mode the LHT must be ON to select the low-heat only operation mode in response to closing the thermostat R-to-W1 circuit. Closing the thermostat R-to-W1-and-W2 circuits always causes high-heat operation, regardless of the setting of the low-heat-only switch.

The wall thermostat "calls for heat", closing the R to W1 circuit for low-heat or closing the R to W1 and-W2 circuits for high-heat. The furnace control performs a self-check, verifies the low-heat and high-heat pressure switch contacts LPS and HPS are open, and starts the inducer motor IDM in high-speed.

The start up and shut down functions and delays described in item 1. above apply to the 2-stage heating mode as well, except for switching from low- to high-Heat and vice versa.

- a. **Switching from Low- to High-Heat**-If the thermostat R to W1 circuit is closed and the R to W2 circuit closes, the furnace control CPU will switch the inducer motor IDM speed from low to high. The high-heat pressure switch relay HPSR is de-energized to close the NC contact. When sufficient pressure is available the high-heat pressure switch HPS closes, and the high-heat gas valve solenoid GV-HI is energized. The blower motor BLWM will switch to HI HEAT speed five seconds after the R to W2 circuit closes.
- b. **Switching from High- to Low-Heat**-If the thermostat R to W2 circuit opens, and the R to W1 circuit remains closed, the furnace control CPU will switch the inducer motor IDM speed from high to low. The high-heat pressure switch relay HPSR is energized to open the NC contact and de-energize the high-heat gas valve solenoid GV-HI. When the inducer motor IDM reduces pressure sufficiently, the high-heat pressure switch HPS will open. The gas valve solenoid GV-M will remain energized as long as the low-heat pressure switch LPS remains closed. The blower motor BLWM will switch to LO HEAT speed five seconds after the R to W2 circuit opens.

## 3. Cooling Mode-The thermostat "calls for cooling" closing the R-to-G-and-Y circuits

### a. Single-Speed Cooling-

(See Fig. 22 for thermostat connections)

The thermostat closes the R to G and Y circuits. The R to Y circuit starts the outdoor unit, and the R to G-and-Y/Y2 circuits start the furnace blower motor BLWM on COOL speed.

The electronic air cleaner terminal EAC-1 is energized with 115 vac when the blower motor BLWM is operating.

When the thermostat is satisfied, the R to G and Y circuits are opened. The outdoor unit will stop, and the furnace

blower motor BLWM will continue operating on the COOL speed for an additional 90 seconds. Jumper Y/Y2 to DHUM to reduce the cooling off-delay to 5 seconds. (See Fig. 31.)

### b. Single-Stage Thermostat and Two-Speed Cooling (Adaptive Mode)

(See Fig. 30 for thermostat connections)

This furnace can operate a two-speed cooling unit with a single-stage thermostat because the furnace control CPU includes a programmed adaptive sequence of controlled operation, which selects low-cooling or high-cooling operation. This selection is based upon the stored history of the length of previous cooling period of the single-stage thermostat.

**NOTE:** The air conditioning relay disable jumper ACRDJ must be connected to enable the adaptive cooling mode in response to a call for cooling. (See Fig. 31.) When in place the furnace control CPU can turn on the air conditioning relay ACR to energize the Y/Y2 terminal and switch the outdoor unit to high-cooling.

The furnace control CPU can start up the cooling unit in either low- or high-cooling. If starting up in low-cooling, the furnace control CPU determines the low-cooling on-time (from 0 to 20 minutes) which is permitted before switching to high-cooling.

If the power is interrupted, the stored history is erased and the furnace control CPU will select low-cooling for up to 20 minutes and then energize the air conditioning relay ACR to energize the Y/Y2 terminal and switch the outdoor unit to high-cooling, as long as the thermostat continues to call for cooling. Subsequent selection is based on stored history of the thermostat cycle times. The wall thermostat "calls for cooling", closing the R to G-and-Y circuits. The R to Y1 circuit starts the outdoor unit on low-cooling speed, and the R to G-and-Y1 circuits starts the furnace blower motor BLWM at low-cool speed (same speed as LO HEAT).

If the furnace control CPU switches from low-cooling to high-cooling, the furnace control CPU will energize the air conditioning relay ACR. When the air conditioning relay ACR is energized the R to Y1-and-Y2 circuits switch the outdoor unit to high-cooling speed, and the R to G-and-Y1-and-Y/Y2 circuits switch the furnace blower motor BLWM to COOL speed.

**NOTE:** When transitioning from low-cooling to high-cooling the outdoor unit compressor will shut down for 1 minute while the BLWM continues to run at low-cool speed (same speed as LO-HEAT) until the outdoor unit compressor comes back on at high speed.

The electronic air cleaner terminal EAC-1 is energized with 115 vac whenever the blower motor BLWM is operating.

When the thermostat is satisfied, the R to G-and-Y circuit are opened. The outdoor unit stops, and the furnace blower BLWM and electronic air cleaner terminal EAC-1 will remain energized for an additional 90 seconds. Jumper Y1 to DHUM to reduce the cooling off-delay to 5 seconds. (See Fig. 31.)

### c. Two-Stage Thermostat and Two-Speed Cooling

(See Fig. 29 for thermostat connections)

**NOTE:** The ACRDJ must be disconnected to allow thermostat control of the outdoor unit staging. (See Fig. 31.)

The thermostat closes the R to G and-Y1 circuits for low-cooling or closes the R to G and-Y1-and-Y2 circuits for high-cooling. The R to Y1 circuit starts the outdoor unit on low-cooling speed, and the R to G-and-Y1 circuit starts the furnace blower motor BLWM on low-cool speed (same speed as LO HEAT). The R to Y1-and-Y2 circuits start the outdoor unit on high-cooling speed, and the R to G-and-Y/Y2 circuits start the furnace blower motor BLWM on

COOL speed.

The electronic air cleaner terminal EAC-1 is energized with 115 vac whenever the blower motor BLWM is operating. When the thermostat is satisfied, the R to G-and-Y1 or R to G-and-Y1-and-Y2 circuits are opened. The outdoor unit stops, and the furnace blower BLWM and electronic air cleaner terminal EAC-1 will remain energized for an additional 90 seconds. Jumper Y1 to DHUM to reduce the cooling off-delay to 5 seconds. (See Fig. 31.)

#### 4. Thermidistat Mode

(See Fig. 24–26 for Thermidistat connections)

The dehumidification output, DHUM on the Thermidistat should be connected to the furnace control thermostat terminal DHUM. When there is a dehumidify demand, the DHUM input is activated, which means 24 vac signal is removed from the DHUM input terminal. In other words, the DHUM input logic is reversed. The DHUM input is turned ON when no dehumidify demand exists. Once 24 vac is detected by the furnace control on the DHUM input, the furnace control operates in Thermidistat mode. If the DHUM input is low for more than 48 hours, the furnace control reverts back to non-Thermidistat mode.

The cooling operation described in item 3. above also applies to operation with a Thermidistat. The exceptions are listed below:

- a. When the R-to-G-and-Y1 circuit is closed and there is a demand for dehumidification, the furnace blower motor BLWM will continue running at low-cool speed (same speed as LO HEAT).
- b. When the R-to-G-and-Y/Y2 circuit is closed and there is a demand for dehumidification, the furnace blower motor BLWM will drop the blower speed from COOL to HI HEAT for a maximum of 10 minutes before reverting back to COOL speed. If there is still a demand for dehumidification after 20 minutes, the furnace control CPU will drop the blower speed back to HI HEAT speed. This alternating 10-minute cycle will continue as long as there is a call for cooling.
- c. When the “call for cooling” is satisfied and there is a demand for dehumidification, the cooling blower-off delay is decreased from 90 seconds to 5 seconds.

#### 5. Continuous Blower Mode

When the R to G circuit is closed by the thermostat, the blower motor BLWM will operate on continuous-blower speed (can be set to LO HEAT, HI HEAT, or COOL speed). Factory default is LO HEAT speed. Terminal EAC-1 is energized as long as the blower motor BLWM is energized.

During a call for heat, the blower BLWM will stop during igniter warm-up (17 seconds), ignition (7 seconds), and blower-ON delay (45 seconds in low-heat, and 25 seconds in high-heat), allowing the furnace heat exchangers to heat up more quickly, then restarts at the end of the blower-ON delay period at LO HEAT or HI HEAT speed respectively.

The blower motor BLWM will revert to continuous-blower speed after the heating cycle is completed. In high-heat, the furnace control CPU will hold the blower motor BLWM at HI HEAT speed during the selected blower-OFF delay period before reverting to continuous-blower speed.

When the thermostat “calls for low-cooling”, the blower motor BLWM will switch to operate at low-cool speed (same speed as LO HEAT). When the thermostat is satisfied, the blower motor BLWM will operate an additional 90 seconds on low-cool speed before reverting back to continuous-blower speed.

When the thermostat “calls for high-cooling”, the blower

motor BLWM will operate at COOL speed. When the thermostat is satisfied, the blower motor BLWM will operate an additional 90 seconds on COOL speed before reverting back to continuous-blower speed.

When the R to G circuit is opened, the blower motor BLWM will continue operating for an additional 5 seconds, if no other function requires blower motor BLWM operation.

**Continuous Blower Speed Selection from Thermostat** –To select different continuous-blower speeds from the room thermostat, momentarily turn off the FAN switch or push-button on the room thermostat for 1-3 seconds after the blower motor BLWM is operating. The furnace control CPU will shift the continuous-blower speed from the factory setting of LO HEAT to HI HEAT speed. Momentarily turning off the FAN switch again at the thermostat will shift the continuous-blower speed from HI HEAT to COOL. Repeating the procedure will shift the continuous-blower speed from COOL to LO HEAT speed. The selection can be changed as many times as desired and is stored in the memory to be automatically used following a power interruption.

#### 6. Heat Pump

(See Fig. 27 and 28 for thermostat connections)

When installed with a heat pump, the furnace control automatically changes the timing sequence to avoid long blower off times during demand defrost cycles. When the R to W/W1-and-Y1 or R to W/W1-and-Y1-and-G circuits are energized the furnace control CPU will switch to or turn on the blower motor BLWM at low-cool speed (same speed as LO HEAT), and begin a low-heat cycle. The blower motor BLWM will remain on until the end of the prepurge period, then shut off for 24 seconds then come back on at LO HEAT speed. When the W/W1 input signal disappears, the furnace control begins a normal inducer post-purge period and the blower remains running at LO HEAT speed. If the R to W/W1-and-Y1-and-G signals disappear at the same time, the blower motor BLWM will remain on for the selected blower-OFF delay period. If the R to W/W1-and-Y1 signals disappear, leaving the G signal, the blower motor BLWM will remain on for the selected blower-OFF delay period then switch to continuous-blower speed.

When the R to W/W1-and-Y/Y2, R to W/W1-and-Y/Y2-and-G, R to W/W1-and-Y1-and-Y/Y2, or R to W/W1-and-Y1-and-Y/Y2-and-G circuits are energized the furnace control CPU will switch to or turn on the blower motor BLWM at COOL speed, and begin a high-heat cycle. The blower motor BLWM will remain on until the end of the prepurge period, then shut off for 24 seconds then come back on at HI HEAT speed. When the W/W1 input signal disappears, the furnace control begins a normal inducer post-purge period and the blower switches to COOL speed after a 3 second delay. If the R to W/W1-and-Y/Y2-and-G or R to W/W1-and-Y1-and-Y/Y2-and-G signals disappear at the same time, the blower motor BLWM will remain on for the selected blower-OFF delay period. If the R to W/W1-and-Y/Y2 or R to W/W1-and-Y1-and-Y/Y2 signals disappear, leaving the G signal, the blower motor BLWM will remain on for the selected blower-OFF delay period then switch to continuous-blower speed.

### Step 4—Wiring Diagrams

Refer to wiring diagrams.


### Step 5—Troubleshooting


See pages 45 and 46.

Refer to the service label. (See Fig. 50—Service Label.)

The Troubleshooting Guide can be a useful tool in isolating furnace operation problems. Beginning with the word “Start,” answer each question and follow the appropriate arrow to the next item.

The Guide will help to identify the problem or failed component. After replacing any component, verify correct operation sequence.

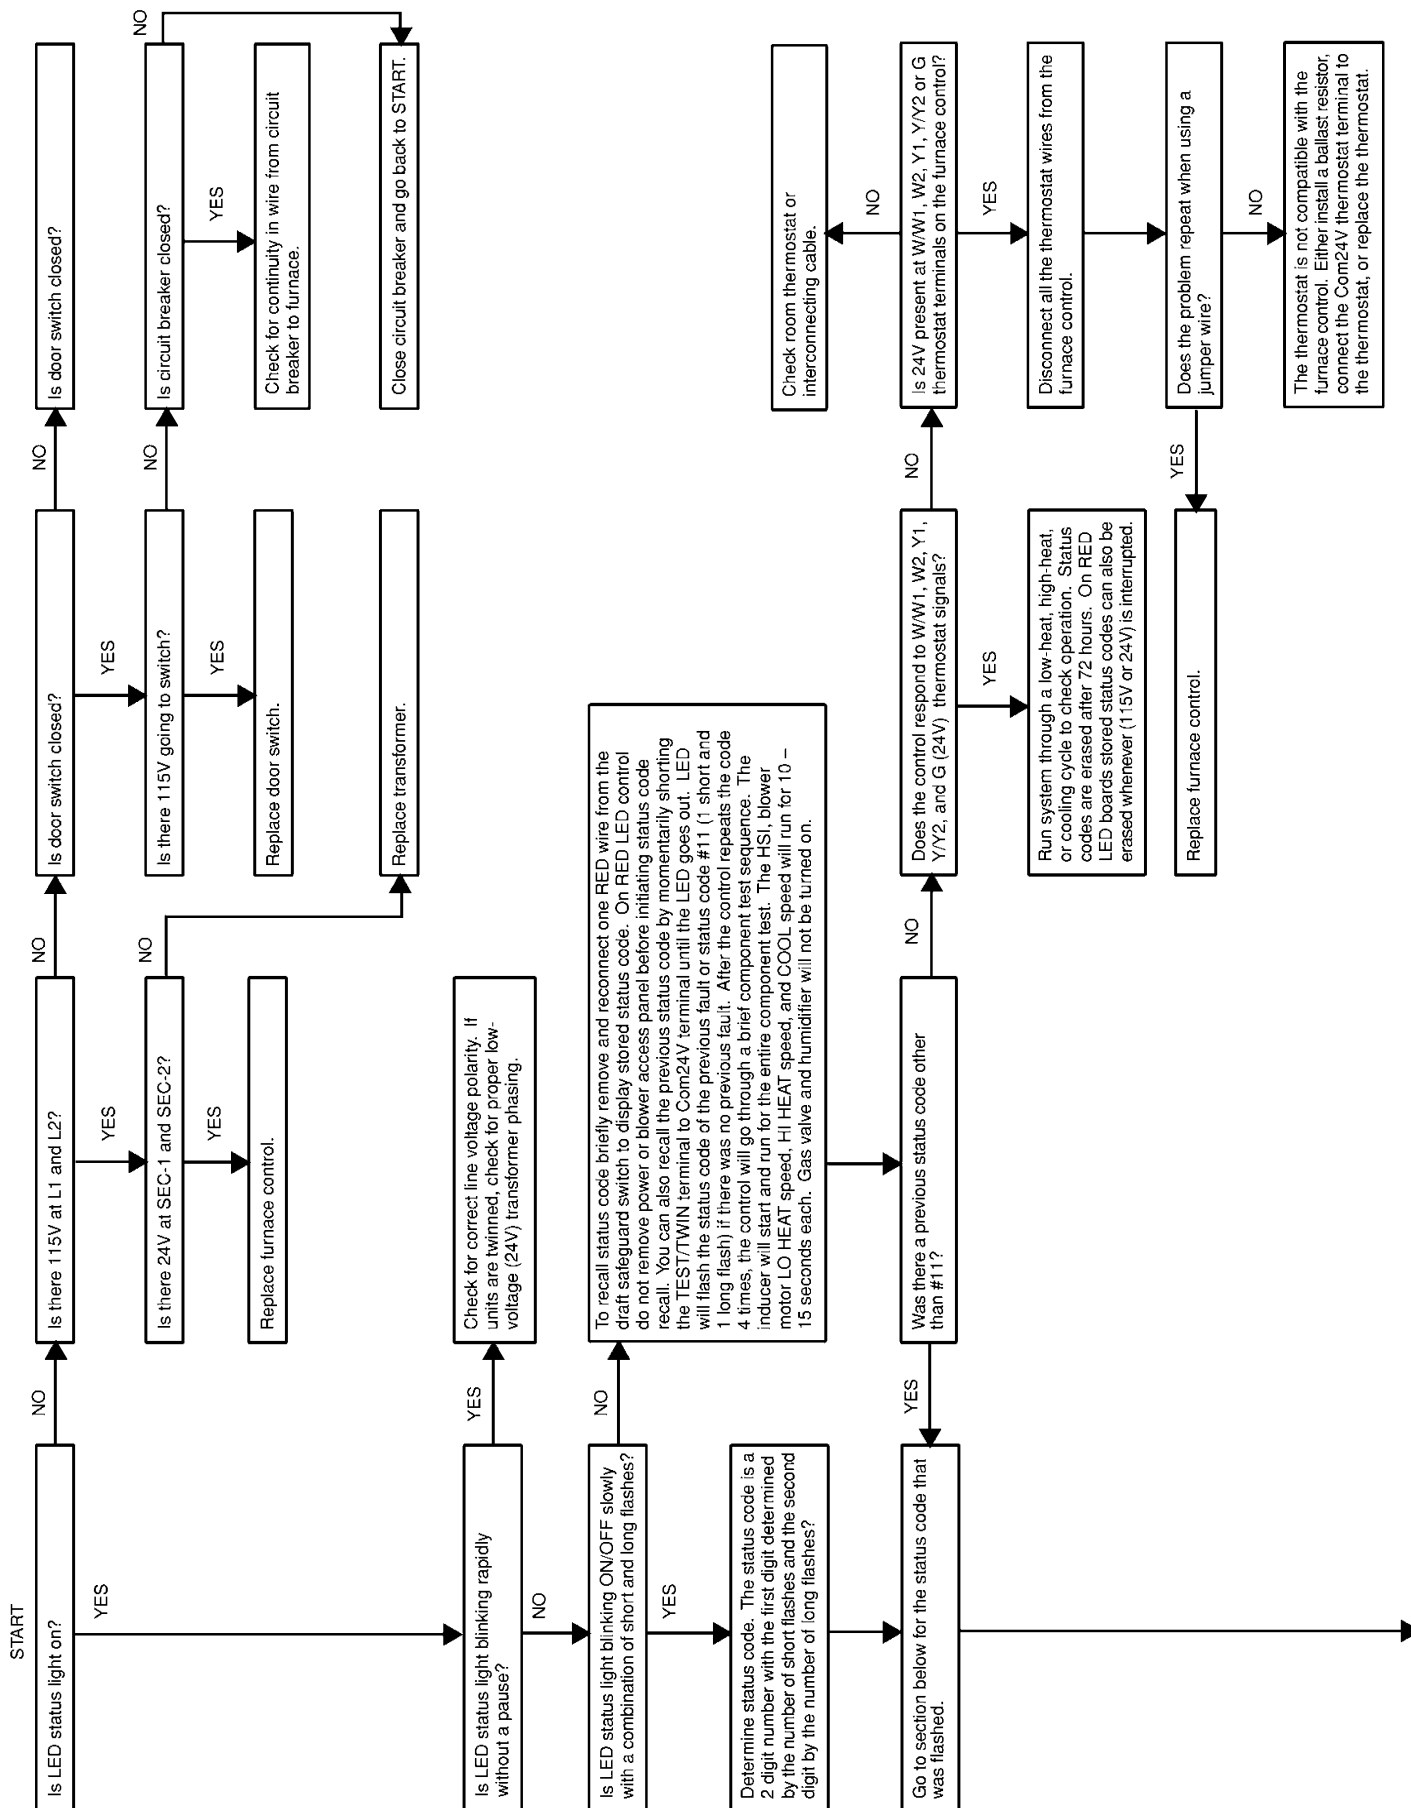

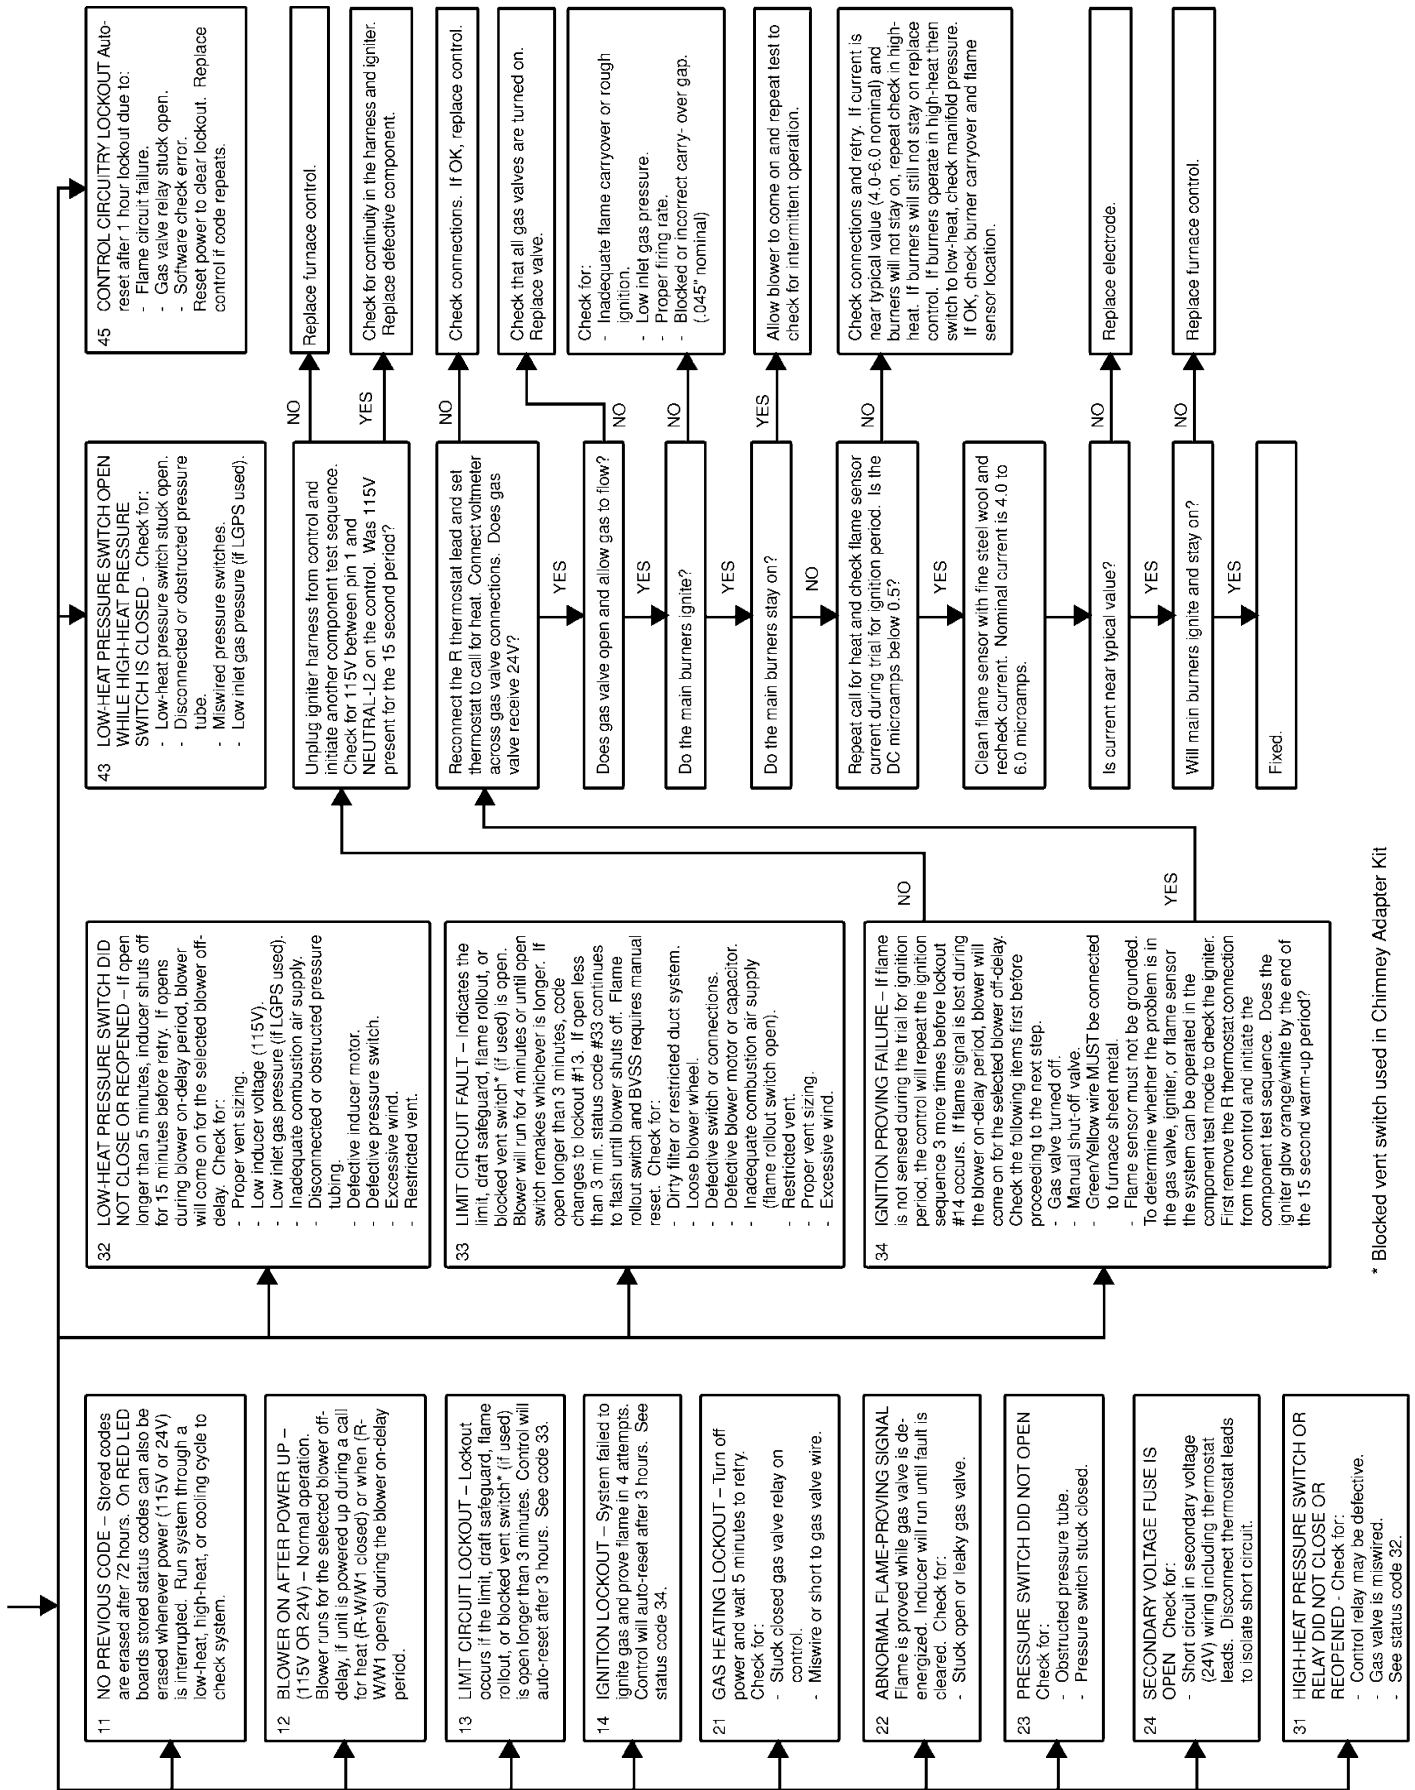

\* Blocked vent switch used in Chimney Adapter Kit

