

Installation, Start-Up and Service Instructions

For Sizes 060, 080, and 100 (130 Series)

NOTE: Read these instructions carefully and completely before installing the furnace.

INTRODUCTION

Before installing the furnace, refer to "Procedure for Deluxe Gas-Fired Condensing Furnaces" (packaged with the equipment) for information concerning combustion, venting, piping, and other standard installation practices. Further reference is made to the current edition of the National Fuel Gas Code NFPA No. 54-1988/ANSI Z223.1-1988.

Installations made in Canada must comply with CAN/CGA1-B149.1 and .2 Installation Codes and CSA C22.1 Electrical Code.

Each Model 58SXB is shipped from the factory with a variable speed direct drive blower, variable speed inducer motor wired and ready for an indoor heating installation. The furnace features a microprocessor control center programmed to ensure optimum performance and maximum heating and electrical efficiency.

The output capacity and any representation of efficiency for this furnace are based on standard Department of Energy test procedures.

The installed operation may vary, depending on installation, weather, and other factors.


The Model 58SXB Deluxe Gas-Fired Condensing Furnace is designed for installation in alcoves, attics, basements, closets, and utility rooms. This furnace shall not be installed directly on carpeting, or any combustible material other than wood flooring. This furnace is NOT designed for installation in mobile homes, recreation vehicles, or outdoors.

⚠ WARNING

Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage. Consult a qualified installer, service agency, local gas supplier or your Distributor or Branch for information or assistance. The qualified installer or agency must use only factory authorized and listed kits or accessories when modifying this product. A failure to adhere to this warning can cause electrical shock, fire, personal injury, or death.

⚠ CAUTION

Do not use the rear of the furnace for a return-air duct connection. Use the side(s) and/or bottom only. Air delivery above 1800 cfm requires that both sides of the furnace be used, or a combination of one side and the bottom, or the bottom only.

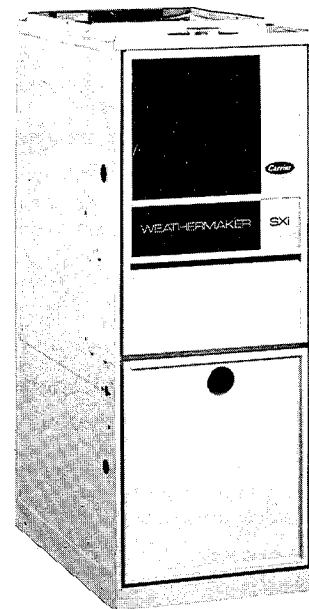

A87340

Fig. 1—Model 58SXB

Installation requires the following:

- *I. Inspection
- *II. Canadian Installations
- *III. Location and Air for Ventilation
- *IV. Gas Piping
- *V. Combustion-Air, Vent, and Condensate Piping
- VI. Electrical
- VII. Sequence of Operation
- VIII. Filter
- IX. Startup and Adjustment
- X. Care and Maintenance

*For these sections (or installation steps), refer to the appropriate sections of "Procedures for Deluxe Gas-Fired Condensing Furnaces" booklet packaged with this unit.

For accessory installation details, refer to the applicable installation literature.

VI. ELECTRICAL CONNECTIONS

A. Line-Voltage Wiring

IMPORTANT: Before proceeding with the electrical connections, make certain that voltage, frequency, and phase correspond to that specified on the unit rating plate. Also, check to be sure that the service provided by the utility is sufficient to handle the load imposed by this equipment. Refer to the unit rating plate for the equipment electrical specifications.

⚠ CAUTION


Do not connect aluminum wire between the disconnect switch and the furnace.

→ Table 1—Dimensions (In Inches)

Size	A	D	E
060	17-1/2	15-7/8	15
080	17-1/2	15-7/8	15
100	21	19-3/8	18-1/2

→ Table 2—Clearances (In Inches)

SIZE	060, 080, & 100
Sides	0
Back	0
Top of Plenum	1
Vent Connector	0
Front—Casing Ventilation Service	30

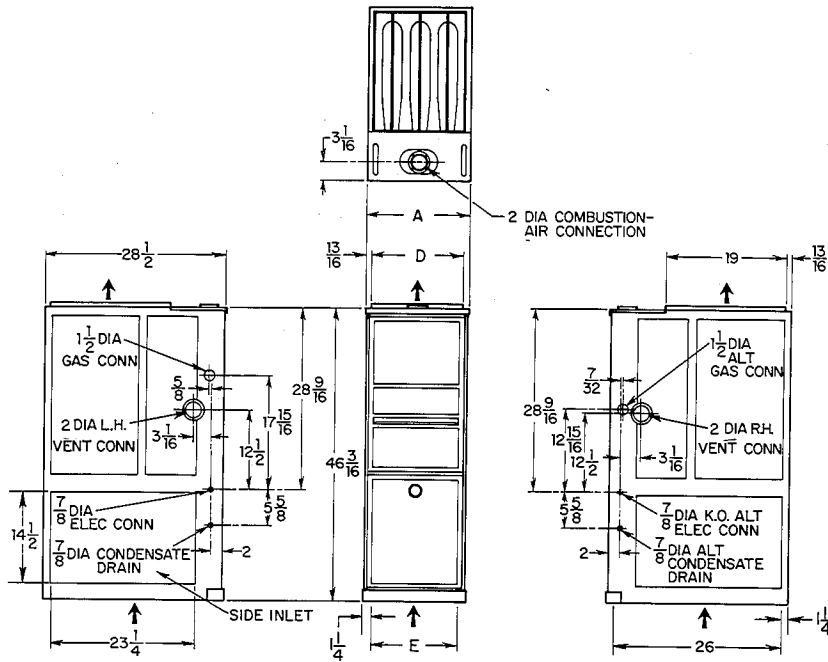

→ Fig. 2—Dimensional Drawing

A87331

Table 3—Ratings and Performance


Size	Input Btuh*	Capacity Btuh†‡	Temperature Rise Range	Heating		Cooling		Motor HP & Type	Approx Shipping Weight
				Ext Static Pressure	CFM**	Ext Static Pressure	CFM**		
060	43,500	41,000	70—80	—	500	0.50	1200	1/2 ICM	185
	63,000	60,000	55—65	0.12	925				
080	58,000	55,000	70—80	—	665	0.50	1200	1/2 ICM	195
	84,000	80,000	55—65	0.15	1235				
100	72,500	68,000	70—80	—	835	0.50	1400	1/2 ICM	233
	105,000	100,000	65—75	0.20	1320				

*Gas input ratings are certified for elevations to 2000 feet. For elevations above 2000 feet, reduce ratings 4% for each 1000 feet above sea level. In Canada, from 2000 to 4500 feet above sea level, derate the unit 10%.

†Determined by U.S. Government tests.

‡Tentative ratings.

**Air delivery above 1800 cfm, or systems with a total static pressure drop above 0.5 in. wc require that both sides, or a combination of one side and bottom or bottom only, of the furnace be used for return air.

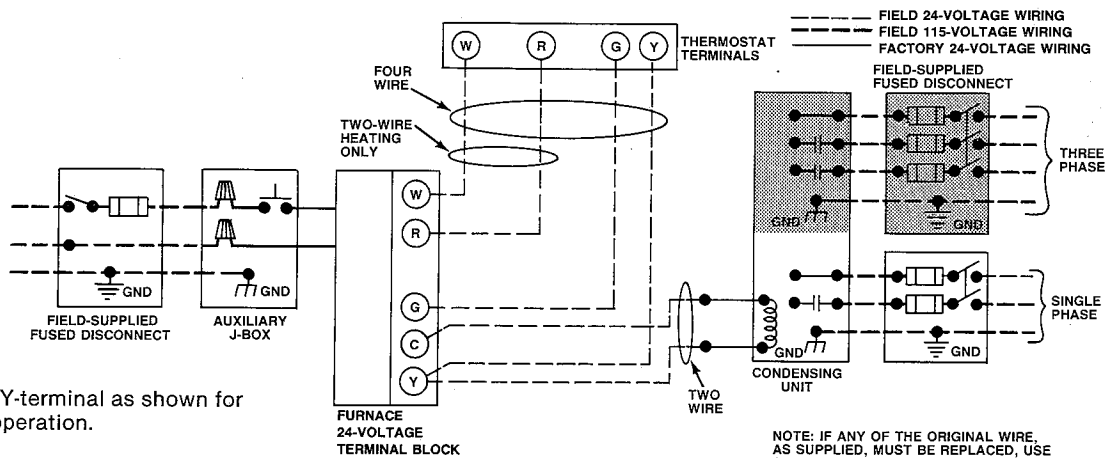

NOTE: Connect Y-terminal as shown for proper cooling operation.

NOTE: IF ANY OF THE ORIGINAL WIRE, AS SUPPLIED, MUST BE REPLACED, USE SAME TYPE OR EQUIVALENT WIRE.

A87502

→ Fig. 3—Heating and Cooling Application Wiring Diagram

See Fig. 3 for a wiring diagram showing the proper field 115- and 24-voltage wiring. Make all electrical connections in accordance with the National Electrical Code, in Canada CSA Standard C22.1, Canadian Electric Code Part 1, and any local codes or ordinances that might apply.

Use a separate, fused branch electrical circuit containing a properly sized fuse or HACR-type circuit breaker for this furnace. A disconnecting means must be located within sight of, and readily accessible to, the furnace. The blower door switch may be acceptable in some areas as a discon-

necting means.

The auxiliary J-box can be moved to the right-hand side of the furnace when a right-side power supply is desired.

1. Remove two screws holding auxiliary J-box.
2. Drill two holes in same position on opposite side and mount auxiliary J-box. (Rotate the J-box 180° so that the switch will be in the notch in the casing flange.)
3. Plug or cap unused electrical entry holes in left side of casing.

⚠ WARNING

The furnace must be electrically grounded in accordance with local codes and/or National Electrical Code ANSI/NFPA 70-1987, CSA 22.1 Electrical Code in Canada. Do not use gas piping as an electrical ground. A failure to adhere to this warning can cause personal injury or death.

If 115-voltage wiring to the unit is encased in a nonmetallic sheath, connect the incoming ground wire to the grounding wire inside the furnace J-box. If properly grounded metallic conduit is used, it will serve as the furnace ground.

B. Control-Voltage (24V) Wiring


Make field 24-voltage connections at the 24-voltage terminal strip. See Fig. 3.

NOTE: Use AWG No. 18 "color-coded" copper thermostat wire for lengths up to 100 ft. For wire lengths over 100 ft, use AWG No. 16 wire.

IMPORTANT: The thermostat heat anticipation must be set to match the amp draw of the gas valve and other electrical components in the R-W circuit while operating in low heat. An accurate amp draw reading can be obtained at thermostat subbase terminals R and W. See installation procedures Section V for adjustment. The room thermostat should be located where it will be in the natural circulation path of room air. Avoid locations where the thermostat would be:

1. Exposed to cold-air infiltration.
2. Exposed to drafts from windows, doors, or other openings leading to the outside.
3. Exposed to air currents from warm- or cold-air registers.
4. Located behind doors, above or below shelves, mantels, or any other location where the natural circulation of air is cut off.
5. Exposed to heat from fireplaces, radios, televisions, lamps, or the rays of the sun.
6. Located on a wall containing pipes or warm-air ducts, or flue or vent pipes.
7. Located on a wall that is inadequately sealed from the attic, crawlspace, or basement.

Any hole in the plaster or panel through which the wires pass from the thermostat should be adequately sealed with suitable material to prevent drafts from affecting the thermostat.

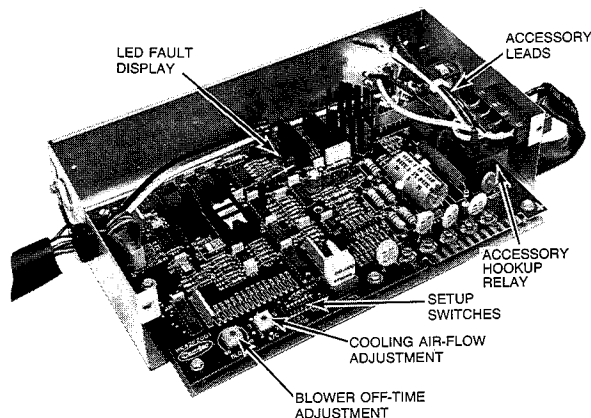

A87335

Fig. 4—Microprocessor Control Center

C. Microprocessor Control Center

This furnace features a microprocessor control center. This control center will aid the installer and service technician when installing or servicing the unit. The 24-voltage connections are provided for easy connection of field wiring. See Fig. 5.

The microprocessor control center features state-of-the-art control of combustion, temperature, and airflow to maximize comfort while operating at peak efficiency.

Combustion control is obtained by taking the appropriate inducer motor RPM readings when the low- and high-fire pressure switches make. Using this information, the microprocessor maintains consistent air to fuel ratio independent of vent sizing.

A single stage thermostat is used to provide two-stage heating. The first cycle after power reset will provide six minutes of low heat before switching to high heat unless the room thermostat has been satisfied. Subsequent thermostat cycles will provide anywhere from 0 to 15 minutes of low heat depending on the length of the previous thermostat cycle.

Airflow control is accomplished by using a technique involving the microprocessor and blower motor whereby the static load on the air delivery system is measured each heating cycle. The microprocessor then uses this information to deliver correct airflow independent of variations in system restrictions. (For example, dirty filter and zone damper.)


Additional features are as follows: (See Fig. 4 for location.)

1. Adjustable blower off-time from 60 to 240 seconds in 20 second intervals. Adjust by turning blower switch RSW1 in the direction indicated on the printed circuit board. After a change in blower off-time or cooling airflow the thermostat must be cycled to set the new values.
2. Variable cooling airflow switch RSW2 for selecting cooling airflow which matches the cooling capacity of the air conditioning system. (See Section IX B for additional details.)
3. LED fault code display to aid the installer and service technician while installing or servicing the unit.
4. Accessory connection for easy field wiring.
5. System modification and setup switches are provided for startup and proper operation of the furnace. See Fig. 4 and Table 4 for location, description, and function of the switches.

Table 4—Setup Switch Information

Switch No.	Normal Position	Description of use
1 (FLT)	Down	Turn switch up for fault history display.
2 (LO)	Down	Turn switch up to lock furnace in the low heat mode operation only.
3 (HI)	Down	Turn switch up to lock furnace in the high heat mode operation only.
4 (EMER HEAT)	Down	Turn switch up to bypass microprocessor control. Furnace will operate at high heat only with main blower and inducer motor operating at maximum conditions. NO safeties are bypassed.
5 (MZ)	Down	Turn switch up when modulating dampers are used. In this mode the main blower speed is re-calculated once every minute while the furnace is in the low heat mode.
6	NAT	Up for natural gas operation.
	Prop*	Down for propane gas operation.
7 (BPH)	Down	Turn switch up when a bypass humidifier is used. This will compensate for the higher return air temperature.

*Series 100, 110, and 120 furnaces are not propane convertible.



A87332

VII. SEQUENCE OF OPERATION

Heating Cycle

The control circuit of the furnace shown in the schematic wiring diagram, Fig. 6, results in the following sequence of operation for the heating cycle:

NOTE: After power is reset, the CPU goes through a self test sequence. This self test sequence takes approximately 20 seconds to complete. Seven seconds after power is reset, the green LED fault light comes on for 12 seconds, followed by one second where both the green and yellow LED are on. If the wall thermostat has a "call for heat" immediately after the conclusion of the self test sequence, the CPU starts intergrated control and motor (ICM) MRT2 on low speed (approximately 400-500 RPM) for 20 seconds. At this time the CPU takes a calibration reading and subsequently makes the necessary blower motor MRT2 speed adjustments to deliver low-fire airflow. After the blower motor MRT2 has been on for an elapsed time of one minute, the blower motor MRT2 will be turned off and the following heating or cooling cycle will commence.

1. When the blower door is in place, 115 volts is supplied through blower door interlock switch ILK to the inducer and blower motor controllers, PCB1 and PCB2. Transformer TRAN is energized, supplying 24 volts to the microprocessor control center PCB3.
2. The wall thermostat "calls for heat," closing the R and W circuit. This closed circuit supplies power to the 24-volt flow sensing switches LPS and HPS.
3. The microprocessor control center CPU upon receiving a thermostat signal starts electronically commutated motor (ECM) MTR1 and gradually increases the inducer motor speed.
4. As inducer motor MTR1 comes up to speed, flow sensing switches LPS and HPS close, energize 24 volts to ignition relay contacts IGNR the high-fire solenoid in gas valve GV, and supply the necessary input signals to the onboard CPU.
- 5. Ten seconds after flow sensing switch HPS closes, the CPU activates ignition relay IGNR which then energizes the PILOT solenoid coil of gas valve GV and time-delay circuit of spark generator SG through fusible link FL.
- 6. When the PILOT solenoid coil of gas valve GV is energized, gas flows to the pilot. The internal pressure

switch of gas valve GV senses the pilot gas pressure and closes, completing the HOLD circuit. The normally open time-delay circuit closes after an additional 10 second purge delay, energizing spark generator SG. The pilot is ignited by a spark produced by spark generator SG.

- 7. After a short delay, during which the pilot flame heats up the flame sensing contacts PIL, the normally-closed contacts open. The PILOT solenoid coil remains energized through the HOLD circuit. Spark generator SG shuts off when flame is sensed at the spark electrode. The normally open flame-sensing switch contacts PIL close 5 to 20 seconds later, energizing the MGCV (main operator) of gas valve GV. The MGCV of gas valve GV opens immediately increasing the gas pressure approximately 5 seconds later, allowing gas flow to the main burners. The pilot flame immediately ignites the gas.
8. Simultaneously, representative control signals are sent to the CPU which start the blower on delay timer and make the appropriate inducer motor MTR1 speed adjustments necessary to maximize combustion efficiency. Approximately 35 seconds after gas valve GV opens, the CPU starts blower motor MTR2 on low speed (approximately 400-500 RPM) for 20 seconds. At this time, the CPU takes a calibration reading and subsequently makes the necessary blower motor MTR2 speed adjustments to deliver the proper airflow for low- or high-fire operation.
9. Approximately 60 seconds after gas valve GV opens the CPU makes the necessary inducer motor MTR1 speed adjustments to run the furnace in the low-fire mode for a predetermined time based on the furnace heating load unless the thermostat is satisfied. If the thermostat has not been satisfied while in low-fire within the predetermined time period the CPU makes the necessary inducer motor MTR1 and blower motor MTR2 speed adjustments to operate the furnace in the high-fire mode for the remainder of the thermostat cycle.
10. When the thermostat is satisfied, the R and W circuit is broken, deenergizing gas valve GV, which in turn sends the representative control signal to the CPU which stops inducer motor MTR1 after 15 seconds. Gas flow to the pilot and main burners stops immediately. The CPU then makes the necessary blower motor MTR2 speed adjustments to deliver low-fire airflow for

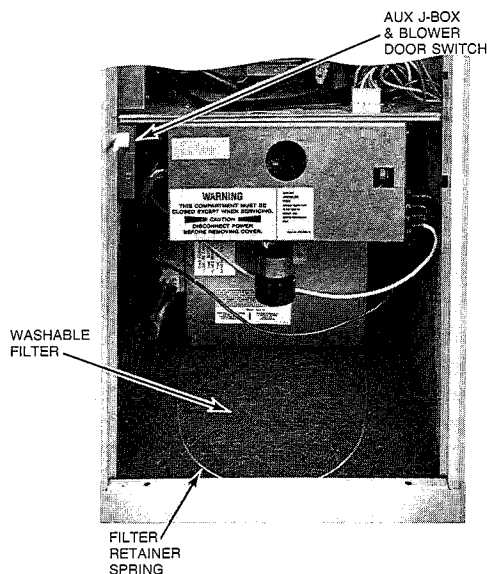


Fig. 6—Filter Installed for Bottom Inlet

A87337

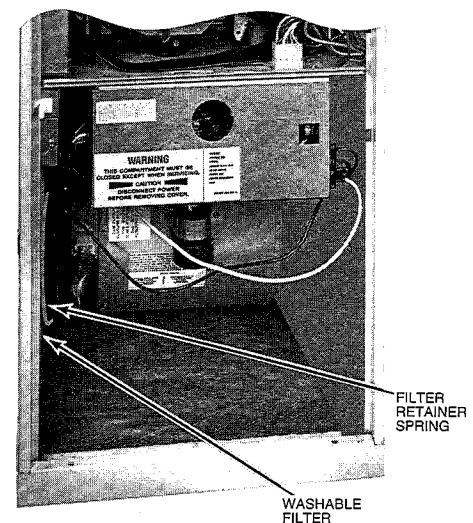


Fig. 7—Filter Installed for Left-Hand Side Inlet Only

A87336

approximately 60 to 240 seconds (depending on the blower off-time adjustment), after which the CPU stops the blower motor MTR2.

NOTE: After a brief interruption of either the electric or gas supply, the furnace will not resume operation until the contacts of pilot-flame sensing switch PIL move from the normally open position to the normally closed position.

Cooling Cycle

1. The wall thermostat "calls for cooling."
2. The R, G, and Y circuits are energized. Simultaneously, the R and Y circuit starts the outdoor condensing unit, and the R and G circuit sends the appropriate signal to the CPU which starts the integrated control and motor (ICM) MTR2 on low speed (approximately 400-500 RPM) for 20 seconds. At this time the CPU takes a calibration reading and subsequently makes the necessary blower motor MTR2 speed adjustments to deliver 400 cu ft/ton of cooling (varies depending on cooling airflow selection).

Emergency Heat Cycle (setup switch SW4 ON)

1. When the blower door is in place, 115 volts is supplied through blower door interlock switch ILK to the inducer and blower motor controller PCB1 and PCB2. Transformer TRAN is energized, supplying 24 volts to the microprocessor control center PCB3.
2. The wall thermostat "calls for heat," closing the R and W circuit. This closed circuit supplies power to the flow sensing switches LPS and HPS.
- 3. Simultaneously, the emergency heat electronic relay EHER is energized. Emergency heat electronic relay contacts EHER close. Starting electronically commutated motor (ECM) MTR1, integrated control and motor (ICM) MTR2 and activating ignition relay IGNR which then energizes the PILOT solenoid coil of gas valve GV and time-delay circuit of spark generator SG are energized through fusible link FL. Also, another set of contacts in the emergency heat electronic relay EHER close in the 24-volt circuit, and lock in the emergency heat electronic relay EHER. The emergency heat electronic relay EHER is locked in until the R and W circuit or limit switch LS open.
- 4. When the PILOT solenoid coil of gas valve GV is energized, gas flows to the pilot. The internal pressure switch of gas valve GV senses the pilot gas pressure and closes, completing the HOLD circuit. The normally open time-delay circuit closes after 10 second purge delay, energizing spark generator SG. The pilot is ignited by a spark produced by spark generator SG.
- 5. As the inducer motor MTR1 comes up to speed, flow sensing switch HPS closes contacts energizing the high-fire solenoid of gas valve GV. After a short delay, during which the pilot flame heats up the flame sensing contacts PIL, the normally-closed contacts open. The PILOT solenoid coil remains energized through the HOLD circuit. Spark generator SG shuts off when flame is sensed at the spark electrode. The normally open flame sensing switch contacts PIL close 5 to 20 seconds later, energizing the MGV (main operator) of gas valve GV. Gas valve GV opens immediately then steps up the gas pressure approximately 5 seconds later, allowing gas flow to the main burners. The pilot flame immediately ignites the gas.
6. When the thermostat is satisfied, the R and W circuit is broken, deenergizing gas valve GV, inducer motor MTR1, and CM blower motor MTR2. The gas flow to the pilot and main burners stop immediately.

VIII. FILTER

A. Filter Arrangement

The filter is supplied in the blower compartment of the furnace. For bottom inlet application, the filter should be cut to fit where necessary and installed as shown in Fig. 7.

NOTE: Remove and discard the bottom closure panel when the bottom inlet is used.

For left-hand side inlet application, see Fig. 2 for the opening size. Remove the filter and retainer spring from the bottom opening. Install the retainer spring in the holes provided—one in the blower shelf and the other in the retainer spring bracket. Install the filter as shown in Fig. 8. Move the unused retainer bracket to the left side, near the front of the furnace, to support the filter.

⚠ CAUTION

Be sure the filter retainer spring is behind the flange of the casing side.

For right-hand side inlet applications, install an accessory filter rack. See instructions packaged with filter rack for installation.

B. Leveling Legs (If Required)

When the furnace is used with side inlet(s), and leveling legs are required, refer to Fig. 9, and install field-supplied corrosion-resistant 5/16-in. machine bolts and nuts.

NOTE: The maximum length of the bolt should not exceed 1-1/2 ins.

1. Lay furnace on its back, locate and drill 5/16-in. diameter hole in each bottom corner of furnace as shown in Fig. 9.
2. Install nut on bolt and install bolt and nut in hole. (Install flat washer if desired.)
3. Install another nut on other side of furnace base. (Install flat washer if desired.)
4. Adjust outside nut to provide desired height, and tighten inside nut to secure arrangement.

C. Bottom Closure Panel

When the side inlet is used, the bottom opening must be properly sealed by installing a bottom closure panel shipped under the filter in each furnace. To install the bottom closure panel, perform the following steps:

1. After filter has been installed for side return, remove bottom closure.
2. With furnace either tilted or raised, install panel in opening from bottom of furnace with insulation up. See Fig. 10.
3. Apply appropriate material around bottom closure to obtain airtight seal.

⚠ WARNING

Never operate the unit without a filter or with the filter access door removed. A failure to adhere to this warning can cause fire, physical injury, or death.

IX. STARTUP AND ADJUSTMENT

In addition to the following information, refer to "Procedures for Deluxe Gas-Fired Condensing Furnaces."

NOTE: The furnace blower access panel must be in place to complete the 115-volt circuit to the furnace.

⚠ CAUTION

This furnace is equipped with a fusible link in the burner enclosure. This link will melt if an overheating condition caused by an inadequate combustion-air supply or improper venting practices develops. DO NOT jumper this fuse. Correct the condition and replace the fuse with an identical part.

The gas service pressure must not exceed 0.5 psig (14 in. wc) for natural gas.


NOTE: The gas valve regulator has been nominally set at 1.6 in. wc for low-fire and 3.5 in. wc for high-fire operation with natural gas. Refer to "Procedures for Deluxe Gas-Fired Condensing Furnaces" for readjusting and checking inputs.

⚠ CAUTION

The unit must not be installed, operated, and then turned off and left turned off, in an unoccupied structure during cold weather when the temperature drops to 32° F and below. Freezing condensate left in the furnace will damage the equipment.

A. When winterizing the furnace, it is necessary to proceed as follows:

1. Mix a solution of equal amounts of ethylene glycol (Prestone II antifreeze coolant or equivalent) and water.
2. Turn off electrical supply to furnace.
3. Remove control access panel.
4. Disconnect drain tube from bottom of inducer outlet box.

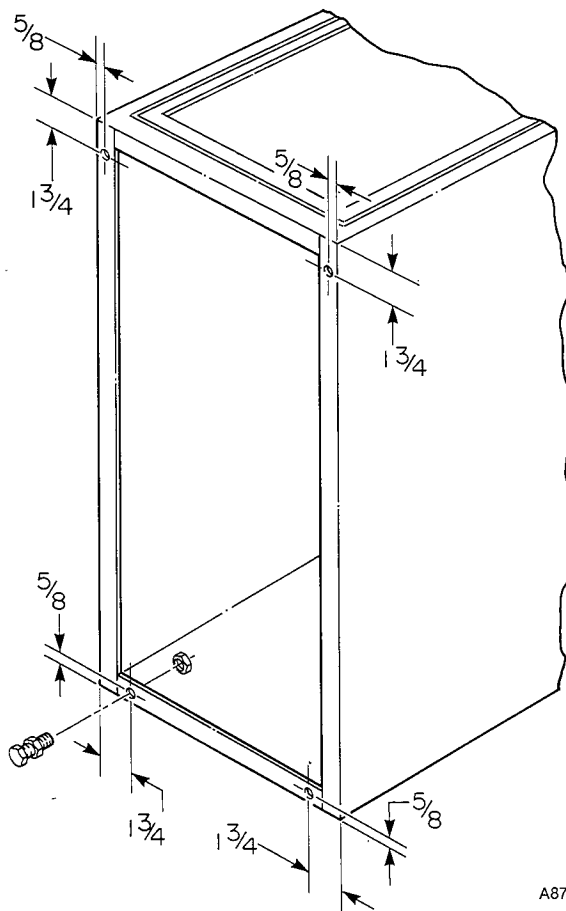

A87258

Fig. 8—Leveling Leg Installation

5. Insert funnel in drain tube and pour antifreeze/water solution into furnace until it is visible at point where condensate enters open drain.
6. Reconnect drain tube to outlet box.
7. Replace control access panel.

B. Adjustment of Cooling Airflow

The microprocessor control center is programmed to deliver 400 cfm/ton of airflow. To select the proper cooling airflow, the cooling airflow selection switch should be adjusted to match the tons of cooling being delivered by the outdoor condensing unit. See Fig. 5.

NOTE: If the low-voltage terminal block Y connection has not been made, blower motor airflow will be lower than required for cooling operation. This can cause the evaporator coil to freeze up.

C. Automatic Gas Control Valve

These units are equipped with an automatic gas control valve. If not already checked when lighting the main burner, check the proper operation of this valve by moving the room thermostat pointer above and below the room temperature and observe that the main burners light when the pointer is above and go off when the pointer is below the room temperature setting.

NOTE: For ease of adjusting the pilot flame, disconnect pilot connection PL9 and jumper the yellow and green wire. This will prevent main burner ignition and allow time to adjust the pilot. Reconnect pilot connector after adjustment. Check the flame characteristics after replacing the burner enclosure front.

X. CARE AND MAINTENANCE


⚠ CAUTION

Because of possible damage to the equipment or personal injury, maintenance should be performed by qualified persons only.

⚠ WARNING

Never store any flammables, chloride, or halogen-containing compounds near, or in contact with, the furnace. A failure to adhere to this warning can cause a fire, personal injury, or death.

For continuing high performance, and to minimize equipment failure, it is essential that periodic maintenance be performed on this equipment. Consult your local Dealer as to the proper frequency of maintenance and the availability of a maintenance contract.

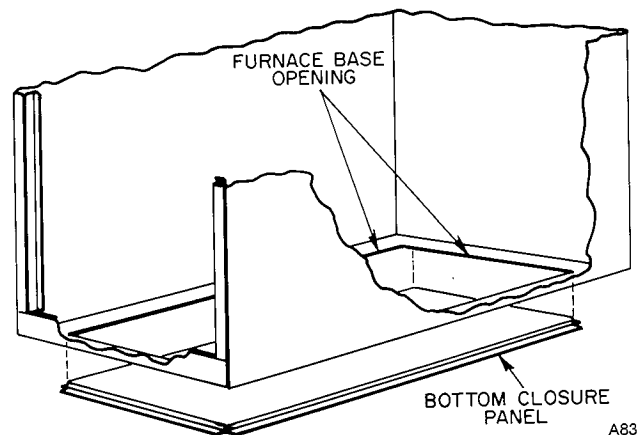

A83154

Fig. 9—Installing Bottom Closure Panel

The ability to properly perform maintenance on this equipment requires certain mechanical skills and tools. If you do not possess these skills and tools, contact your Dealer for maintenance.

⚠ WARNING

Turn off gas and electrical supply to the unit before performing any maintenance or service on the unit. Follow the relighting instructions attached to the furnace. A failure to adhere to this warning can cause personal injury.

The minimum maintenance that should be performed on this equipment is as follows:

1. Check and clean or replace air filter each month or as required.
2. Check blower motor and wheel for cleanliness and lubrication each heating and cooling season. Clean and lubricate as necessary. (See Section X B.)
3. Check electrical connections for tightness and controls for proper operation each heating season. Service as necessary.
4. Check for proper condensate drainage.
5. Check for blockages of combustion-air and vent pipes.

⚠ WARNING

As with any mechanical equipment, personal injury can result from sharp metal edges, etc.; therefore, be careful when removing parts.

A. Air Filter

Remember to disconnect electrical power before removing access panels. To clean or replace the air filter, proceed as follows:

1. Remove blower access panel.
2. Release filter retainer spring from behind flange of furnace casing.
3. Slide out filter.
4. Clean filter with cold tap water. Spray in direction opposite to airflow.
5. Rinse and let dry. DO NOT oil or coat filter.
6. Place filter in furnace with cross-sectional binding facing blower.

B. Blower Motor and Wheel

For long life, economy, and high efficiency; clean accumulated dirt and grease from blower wheel and motor annually.

The following steps should be performed by a qualified serviceperson.

Some motors have prelubricated sealed bearings and require no lubrication. These motors can be identified by the lack of oil ports on each end of the motor. For those motors with oil ports lubricate as follows:

Lubricate motor every 5 years if motor is used on intermittent operation (thermostat FAN switch in AUTO position), or every 2 years if motor is in continuous operation (thermostat FAN switch in ON position).

Remember to disconnect electrical supply before removing access panels.

Clean and lubricate as follows:

1. Remove access panels.
2. Remove control box from bottom side of blower shelf and position out of way.

3. Disconnect 9-circuit connector PL-4 from blower housing.
4. Using backup wrench, disconnect drain pipe at coupling in blower compartment.
5. Loosen hose clamps and remove 7/8-in. diameter drain hose.
6. Loosen hose clamp and disconnect 5/8-in. diameter drain hose at bottom of inducer housing located under blower shelf.
7. Remove screws securing drain trap assembly.
8. Remove screws securing blower assembly to blower shelf and slide blower assembly out of furnace.
9. Squeeze side tabs of connector PL4 and pull from blower housing bracket.
10. Mark blower wheel location on shaft and motor support location on motor before disassembly, to insure proper reassembly.
11. Loosen setscrew holding blower wheel on motor shaft.
12. Remove bolts holding motor mount to blower housing and slide motor and mount out of housing.
13. Lubricate motor.
 - a. Remove dust caps or plugs from oil ports located at each end of motor. If motor does not have these caps or plugs, bearings are sealed and need no further lubrication.
 - b. Use a good grade of SAE 20 nondetergent motor oil and put one teaspoon (5 cc, 3/16 oz, or 16 to 25 drops) in each oil port. The use of other types or grades of oil will damage the motor. Excessive oiling can cause premature bearing failures.
 - c. Allow time for total quantity of oil to be absorbed by each bearing.
 - d. After oiling motor, wipe excess oil from motor housing.
 - e. Replace dust caps or plugs on oil ports.
14. Remove blower wheel from housing.
 - a. Mark blower wheel orientation and cutoff plate location to insure proper reassembly.
 - b. Remove screws securing cutoff plate and remove cutoff plate from housing.
 - c. Remove blower wheel from housing.
15. Clean blower wheel and motor by using a vacuum with soft brush attachment. Be careful not to disturb balance weights (clips) on blower wheel vanes. Do not drop or bend wheel because balance will be affected.
16. Reassemble blower by reversing steps 14a through c. Be sure wheel is positioned for proper rotation and motor oiling plugs are pointed up when motor is installed.
17. Reassemble motor and blower by reversing steps 9 through 12. If motor has ground wire, be sure it is reconnected. Be sure wheel is centered in blower housing. Spin blower wheel to check clearance.
18. Reinstall blower assembly in furnace.
19. Inspect drain trap and hoses to insure they are not blocked or restricted. Replace drain trap and hoses. Be sure to tighten hose clamps.
20. Using backup wrench, attach drain pipe and tighten compression coupling.
21. Reconnect 9-circuit connector. Note that connector is polarized for correct assembly. DO NOT force.
22. Reinstall control box on bottom side of blower shelf.
23. Turn on electrical power and check for proper rotation and speed changes between low and high heat and cool-

ing; operate unit 10 minutes and carefully check for condensate leaks.

C. Cleaning Heat Exchangers

If it becomes necessary to clean the heat exchangers, proceed as follows:

1. Turn off gas and electrical supplies to furnace.
2. Remove control and blower access panels.
3. Loosen hose clamps on combustion-air pipe and move air pipe aside.
4. Using backup wrench, disconnect gas supply at ground joint union. Remove gas pipe from valve.
5. Disconnect pilot leads at 3-circuit connector outside of burner enclosure.
6. Disconnect high-voltage lead at spark generator.
7. Disconnect valve leads at 6-circuit connector on top of gas valve.
8. Disconnect pressure tubing from right-hand side of burner enclosure and bottom of gas valve.
9. Remove burner enclosure front.
10. Remove diffuser from inside top of burner enclosure. Remove screws that secure burner enclosure to cell panel. These screws are located inside the burner enclosure.
11. Using care not to damage cell inlet panel gasket, remove gas control assembly from furnace.
12. Loosen hose clamps at vent pipe connection; disconnect vent pipe and position out of way.
13. Disconnect both 6-circuit connectors from inducer controller mounted on left side of furnace.
14. Remove screws securing inducer controller to mounting plate attached to left side of furnace.
15. Disconnect 15-circuit connector from main control box at blower shelf.
16. Disconnect 6-circuit connector from both pressure switches.
17. Remove screws securing main control box to blower shelf and position control box out of way.
18. Loosen hose clamp and remove drain tube from inducer housing located on bottom side of blower shelf.
19. Remove mounting screws securing inducer assembly to collector box; remove inducer assembly. Remove all old sealant from parts.
20. Loosen hose clamp and remove drain tube from inducer outlet box.
21. Remove screws securing coupling box and remove from furnace. Remove all old sealant from parts.
22. Remove choke plate (when used).

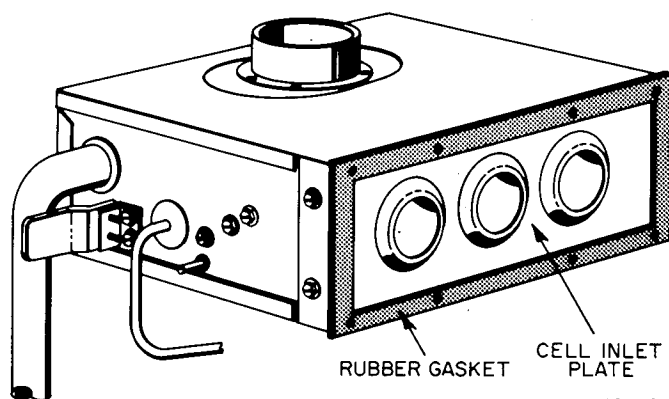



Fig. 10—Burner Closure

A84142

23. Loosen hose clamp and remove 7/8-in. drain tube from trap.
24. Place bucket under 7/8-in. drain tube in blower compartment.
25. Using garden hose, flush each cell of the condensing heat exchanger with water. Use care not to spray water onto interior surfaces of control compartment. Dry all surfaces.
26. Using field-provided small wire brush, steel "snake" cable, reversible electric drill, and vacuum cleaner; clean primary heat exchanger cells.
27. Connect 7/8-in. drain tube to trap and tighten hose clamp.

D. Reassemble Furnace

1. Install choke plate (when used).
2. Apply sealant releasing agent (Pam) to flange of coupling box.
3. Apply a generous bead (3/16 in. dia) of G.E. RTV 162 or Dow-Corning RTV 738 sealant (NO substitute is permissible) to flange of coupling box over releasing agent. Your Distributor should have G.E. RTV 162 or Dow-Corning RTV 738 sealants in stock.
4. Being careful not to smear sealant, position coupling box so that slot is on left-hand side and install coupling box.
5. Be sure small round gasket(s) is in place between blower shelf and inducer housing.
6. Apply a generous bead (3/16 in. dia) of RTV sealant to back side of inducer assembly around inlet opening.
7. Using stainless steel screws, install inducer assembly on collector box and support bracket to coupling box.
8. Connect drain tube from collector box to inducer outlet box.
9. Connect small drain tube from top of trap to fitting on bottom of inducer housing.
10. Reinstall main control box on blower shelf.
11. Reconnect 15-circuit connector at main control box on blower shelf.

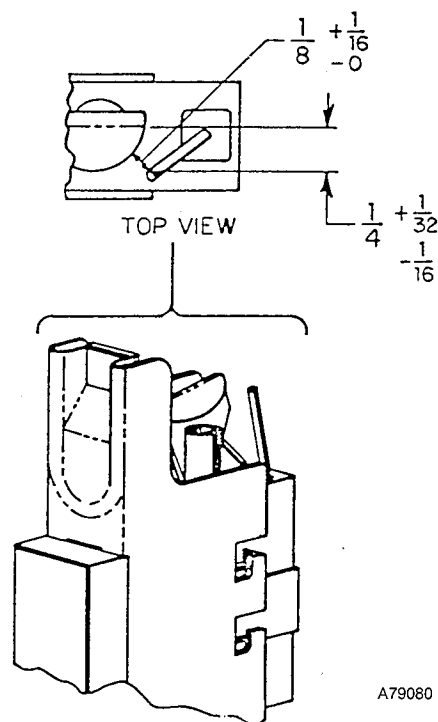

A79080

Fig. 11—Position of Electrode to Pilot

12. Reconnect vent pipe. Be sure clamps are tight.
13. Check condition of gasket on cell inlet panel of burner enclosure. Replace gasket if necessary. See Fig. 10.
14. Install gas control assembly in furnace.
15. Install burner enclosure front.
16. Reconnect pilot leads at 3-circuit connector.
17. Reconnect high-voltage lead to spark generator.
18. Reconnect gas valve leads at 6-circuit connector.
19. Reconnect inducer controller leads at both 6-circuit connectors.
20. Reconnect 6-circuit connector to both pressure switches.
21. Reconnect pressure tubes to gas valve and burner enclosure. Be sure tubes are not kinked.
22. Using backup wrench, install gas pipe in gas valve.
23. Reconnect gas pipe at ground joint union.
24. Reconnect combustion-air pipe. Tighten hose clamps. Turn on gas and electrical supplies.

⚠ WARNING

Never use matches, candles, flame, or other sources of ignition to check for gas leakage. Use a soap-and-water solution. A failure to adhere to this warning can cause a fire, personal injury, or death.

25. Check for gas leaks.

26. Check furnace operation through two complete operating cycles.
27. Check pilot tube and gas valve manifold connection for gas leaks while furnace is in operation.
28. After condensate starts to drain, check for condensate leaks.
29. Replace control and blower access panels.

E. Pilot

Check the pilot and clean if necessary at the beginning of each heating season. The pilot flame should be high enough for proper impingement of the safety element and to light the burners. Remove any accumulation of soot and carbon from the safety element. Check spark electrode gap. See Fig. 11 for proper spark gap.

F. Electrical Controls and Wiring

NOTE: There may be more than one electrical supply to unit.

With power disconnected to unit, check all electrical connections for tightness. Tighten all screws on electrical connections. If any smoky or burned connections are noticed, disassemble the connection, clean all parts, strip wire, and reassemble properly and securely. Electrical controls are difficult to check without proper instrumentation; therefore, reconnect electrical power to unit and observe unit through two complete operating cycles. If there are any discrepancies in the operating cycle, contact your Dealer and request service.