

# Installation, Start-Up, and Operating Instructions


Gas-Fired  
Natural Draft Hot Water Boilers  
Sizes 37,500 through 280,000  
Series A

BW1  
BW2




**NOTE:** Read the entire instruction manual before starting the installation. These instructions must be affixed on or adjacent to the boiler. This symbol → indicates a change since the last issue.

**MODEL BW1**  
Continuous Pilot

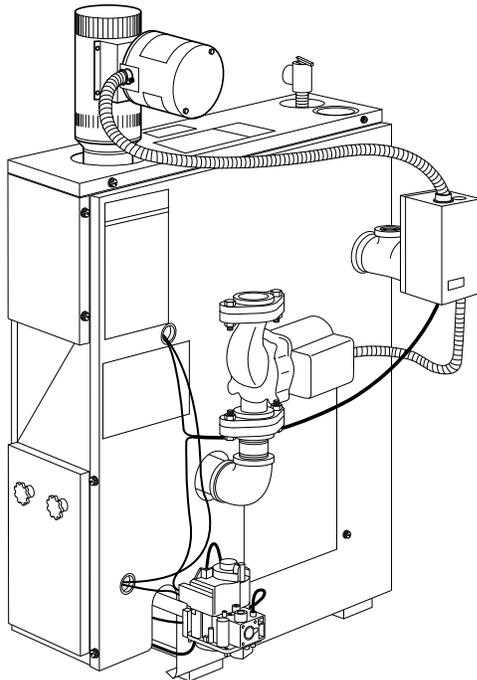

A90339

**MODEL BW2**  
Electronic Intermittent Ignition

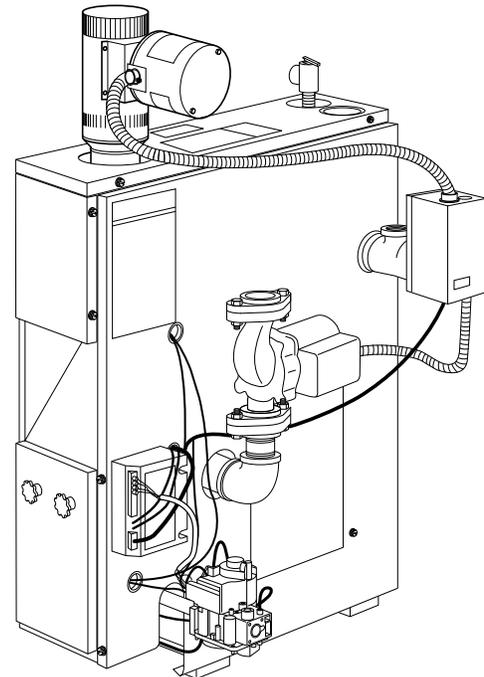

A95175

Index	Page
SAFETY CONSIDERATIONS.....	3
INTRODUCTION.....	3-4
BOILER RATINGS AND CAPACITIES.....	4
LOCATING THE BOILER.....	5
FRESH AIR FOR COMBUSTION.....	6
Boiler Located in Unconfined Space.....	6
Boiler Located in Confined Space.....	6-7

INSTALLATION—SYSTEM PIPING .....	7
For Use with Cooling Units .....	8
Low Design Water Temperature Systems (Below 140°F).....	8
CHIMNEY AND VENT PIPE CONNECTION .....	8-10
Checking Chimney.....	8
Chimney Sizing.....	8
Connecting Vent Damper and Vent Connector.....	9-10
Minimum Vent Pipe Clearance .....	10
Removing Existing Boiler from Common Venting System.....	10
VENT DAMPER OPERATION.....	10
Automatic Operation of Vent Damper.....	10
Manual Operation of Vent Damper .....	10
Notes for Canada Only.....	10
GAS SUPPLY PIPING .....	10-11
Checking Gas Supply .....	10-11
Connecting Gas Piping .....	11
Checking Gas Piping .....	11
ELECTRICAL WIRING .....	11-14
Electric Power Supply .....	11
Installing Thermostat .....	14
Wiring Diagrams .....	12-13
Vent Damper Wiring .....	14
EQUIPMENT AND OPTIONAL ACCESSORIES .....	14-16
Relief Valve .....	14
Expansion Tank .....	14
Diaphragm-Type Expansion Tank.....	14
Air-Eliminating Fitting (Air Purger).....	15
Main Air Vent for Downflow Systems or Diaphragm-Type Expansion Tank .....	15
Automatic Fill Valve .....	15
Drain Valve.....	15
Water Temperature Control.....	15
Circulating Pump .....	15
Vent Damper.....	15
Rollout Switch (Flame Rollout Safety Shutoff).....	15
Spill Switch (Blocked Vent Shutoff System).....	15
STARTING BOILER.....	15
How a Hot Water System Operates.....	15
Filling System with Water .....	15-16
FOR YOUR SAFETY READ BEFORE OPERATING .....	16
GAS VALVE OPERATING INSTRUCTIONS.....	16-17
Intermittent Ignition Boiler—VR8204A/VR8304M Gas Valve.....	16
Continuous Pilot Boiler—VR8200A/VR8300A Gas Valve.....	17
OPERATING BOILER.....	17
Automatic Gas Valve.....	17
Safety Pilot.....	18
Gas Valve Safety Shutdown Test .....	18
Relight .....	18
Thermostat.....	18
CHECKING AND ADJUSTING .....	18
Pilot Burner Adjustment.....	18
Main Burner Air Adjustment .....	18
Limit Controls Adjustment.....	18
MAINTAINING BOILER .....	19
Burners .....	19
Relief Valve .....	19
Expansion Tank .....	19
Boiler Flue Passages.....	19
Vent Pipe.....	19
Water System.....	19
Cleaning Boiler and Burners.....	19
SERVICE HINTS .....	20
REPAIR PARTS.....	21-24

## SAFETY CONSIDERATIONS

Installing and servicing heating equipment can be hazardous due to gas and electrical components. Only trained and qualified personnel should install, repair, or service heating equipment. Untrained personnel can perform basic maintenance functions such as maintaining water level. All other operations must be performed by trained service personnel. When working on heating equipment, observe precautions in literature, on tags, and on labels attached to or shipped with unit and other safety precautions that may apply.

→ Follow all safety codes. In the United States, follow all safety codes including the National Fuel Gas Code (NFGC) NFPA No. 54-1996/ANSI Z223.1-1996. In Canada, refer to the current edition of the National Standard of Canada CAN/CGA-B149.1- and .2-M95 Natural Gas and Propane Installation Codes (NSCNGPIC). Wear safety glasses and work gloves. Have fire extinguisher available during start-up and adjustment procedures and service calls.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on unit or in instructions and manuals, be alert to potential for personal injury.

Understand the signal words DANGER, WARNING, and CAUTION. These words are used with safety-alert symbol. DANGER identifies most serious hazards which **will** result in severe personal injury or death. WARNING signifies hazards which **could** result in personal injury or death. CAUTION is used to identify unsafe practices which **would** result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

## INTRODUCTION

These Gas-Fired Water Boilers are low-pressure, sectional cast iron boilers design certified by the American Gas Association (A.G.A.) and Canadian Gas Association (C.G.A.) for use with natural and propane gases. They are constructed and hydrostatically tested for a maximum working pressure of 50 psi in accordance with the American Society of Mechanical Engineers (A.S.M.E.) Boiler and Pressure Vessel Code Section IV Standards for cast iron heating boilers.

Check to be sure boiler size is correct before starting installation. See rating and capacity table shown in Fig. 1. Also be sure new boiler is for the type of gas being used. Check rating plate on right side of boiler.

The boiler must be supplied with correct type of gas, fresh air for combustion, and a suitable electrical supply. Boiler must also be connected to a suitable venting system and an adequate piping system. Finally, a properly located thermostat is needed for control of heating system. If there are any doubts as to the various requirements, check with local authorities and obtain professional help where needed. Take time to complete all the steps for SAFE and PROPER operation of heating system.

Where required by authority having jurisdiction, the installation must conform to American Society of Mechanical Engineers Safety Code for Controls and Safety Devices for Automatically Fired Boilers, No. CSD-1.

Before installing the boiler in the United States, refer to the current edition of the NFGC. For further information, the NFGC is available from National Fire Protection Association Inc., Batterymarch Park, Quincy, MA 02269; American Gas Association, 1515 Wilson Boulevard, Arlington, VA 22209; or from Literature Distribution.

Before installing the boiler in Canada, refer to the current edition of the NSCNGPIC. Contact Standards Department of Canadian Gas Association, 55 Scarsdale Road, Don Mills, Ontario, Canada M3B 2R3.

The installation must conform with requirements of the authority having jurisdiction, or in absence of local codes, to the NFGC.

The following steps are all necessary for proper installation and safe operation of boiler.

1. LOCATING THE BOILER
2. FRESH AIR FOR COMBUSTION
3. INSTALLATION—SYSTEM PIPING
4. CHIMNEY AND VENT PIPE CONNECTION
5. GAS SUPPLY PIPING
6. ELECTRICAL WIRING
7. CHECKING AND ADJUSTING

---

 **WARNING:** Keep boiler area clean and free from combustible materials, gasoline, and other flammable vapors and liquids. Failure to follow this warning could result in explosion, fire, personal injury, or death.

---

---


 **WARNING:** Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage. Consult a qualified installer, service agency, local gas supplier, or your distributor or branch for information or assistance. The qualified installer or agency must use only factory-authorized and listed kits or accessories when modifying this product. Failure to follow this warning could result in electrical shock, fire, personal injury, or death. Natural gas boilers are not to be converted to propane gas.

---

**NOTE:** Installers—Follow local regulations with respect to installation of CO detectors. Follow maintenance recommendations in this instruction manual.

**N. B. Techniciens—**Veillez vous conformer à la réglementation en vigueur concernant l'installation des détecteurs d'oxyde de carbone. Suivre les consignes d'entretien figurant dans le manuel d'instruction ci-joint.

## BOILER RATINGS AND CAPACITIES

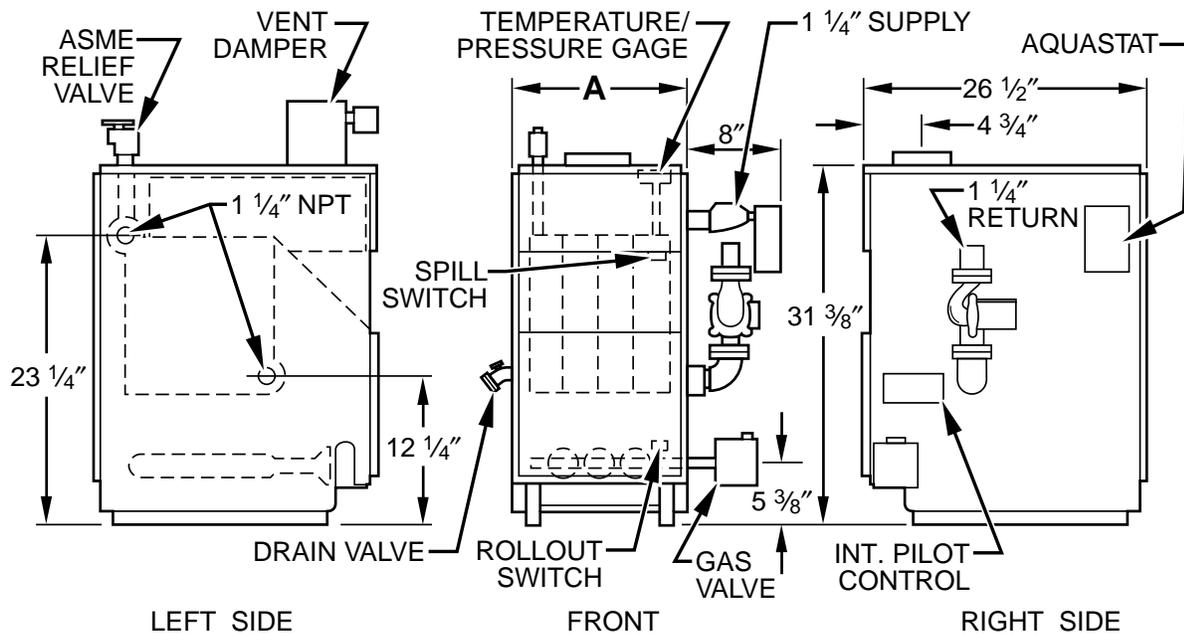

A90340

### Gas-Fired Hot Water Boilers

BOILER MODEL NUMBER*		NO. OF SECTIONS	NATURAL AND PROPANE GAS†			DIMENSIONS (IN.)	
Electronic Ignition with Vent Damper	Continuous Pilot with Vent Damper		A.G.A. Input MBH	Heating Capacity MBH	Net I=B=R Rating MBH	Flue Diameter	Width A
BW2AA-000037AAAA	BW1AA-000037AAAA	2	37.5	30	26	4‡	8
BW2AA-000070AAAA	BW1AA-000070AAAA	3	70	57	50	5	11-1/4
BW2AA-000105AAAA	BW1AA-000105AAAA	4	105	85	74	6	14-1/2
BW2AA-000140AAAA	BW1AA-000140AAAA	5	140	113	98	6	17-3/4
BW2AA-000175AAAA	BW1AA-000175AAAA	6	175	142	123	7	21
BW2AA-000210AAAA	BW1AA-000210AAAA	7	210	170	148	7	24-1/4
BW2AA-000245AAAA	BW1AA-000245AAAA	8	245	198	172	7	27-1/2
BW2AA-000280AAAA	BW1AA-000280AAAA	9	280	226	197	7	30-3/4

\* Sixth position of Model No. indicates natural or propane gas usage: N = Natural Gas  
P = Propane Gas

† Boilers are equipped for altitudes up to 2000 ft only.  
U.S.A Only—For altitudes above 2000 ft, ratings should be reduced at the rate of 4 percent for each 1000 ft above sea level.  
Canada Only—Boilers may be used at high altitude by using a certified field conversion kit, resulting in a 10 percent derate.  
Heating Capacity is based on Department of Energy (DOE) test procedure.

‡ The 2-section boilers are equipped with a 3-in. diameter flue collar on draft diverter and use a factory-supplied 3-in. X 4-in. increaser fitting to install factory-supplied 4-in. vent damper.

MBH—1000 Btuh (British Thermal Unit Per Hr)

NOTE: Add 5-1/2 in. to height for vent damper.

**Fig. 1—Dimensional Drawing and Boiler Ratings and Capacities**

The ratings marked "Net I=B=R Rating" indicate the amount of equivalent direct radiation each boiler will take care of under normal conditions and thermostatic control. The Net I=B=R Ratings shown are based on an allowance of 1.15 in accordance with the factors in the I=B=R Standard as published by The Hydronics Institute.

Selection of boiler size should be based upon "Net I=B=R Rating" being equal to or greater than calculated heat loss of building.

Consult manufacturer before selecting a boiler for installations having unusual piping and pickup requirements.

These boilers must stand on a noncombustible floor. If installed on a combustible floor, a factory-approved combustible floor base must be used.

#### BOILERS FOR USE AT HIGH ALTITUDE

This boiler is factory equipped for use at altitudes of 0-2000 ft above sea level. For use at altitudes above 2000 ft above sea level, input ratings are reduced by a change in main burner orifice size.

→ **U.S.A. Only**—For altitudes above 2000 ft above sea level, input ratings should be reduced at the rate of 4 percent for each 1000 ft above sea level. Consult the NFPA 54/ANSI Z223.1-1996 or the manufacturer for correct orifice sizing information. High-altitude orifices are available from boiler manufacturer.

**Canada Only**—For altitudes in the range of 2000-4500 ft above sea level, boilers may be field equipped for use at high altitude by using a certified field conversion kit. The change in main burner orifice size results in boiler's input rating being reduced by 10 percent. The conversion shall be carried out by a manufacturer's authorized representative in accordance with the requirements of manufacturer, provincial or territorial authorities having jurisdiction, and in accordance with the requirements of the CAN/CGA-B149.1 and CAN/CGA-B149.2 Installation Codes. The certified field conversion kit includes a conversion data plate which must be attached to boiler adjacent to rating plate indicating that boiler has been converted for high-altitude use. The conversion data plate must be filled in with the correct conversion information.

→ **LOCATING THE BOILER**

**NOTE:** This unit **MUST** be set on a concrete or other non-combustible material base or floor.

1. Select level location as centralized with piping system and as near chimney as possible.
2. Place crated boiler at selected location. Remove crate by pulling crate sides from top and bottom boards. When boiler is to be installed on a combustible floor, a combustible floor base must be used.

This boiler must **NOT** be installed on carpeting.

3. If boiler is equipped with cast iron burners, it is also equipped with stainless steel wire ties to hold back end of cast iron burners in place during shipping. To remove burners for cleaning or inspection, wire ties **MUST** be cut and removed. Wire ties are accessible through combustion air opening on back side of boiler at the bottom of rear jacket panel. Cut wire ties with pliers and remove. For boilers installed at minimum clearances, it may be difficult to reach wire ties for removal. Wire ties are needed only during shipping, and do **NOT** need to be replaced.

**NOTE:** Boilers equipped with stainless burners do **NOT** have wire ties.

4. Boiler is to be level. Metal shims may be used under base legs for final leveling.
5. The floor supporting boiler must be non-combustible. If it is combustible, place the boiler on a factory-approved combustible floor base. We use a 2-in. Cladite™ pad as a combustible floor base. These are available from your local supplier. Use a minimum 24-in. X 30-in. pad for 2-5 section boilers and a minimum 30-in. X 30-in. pad for 6-7 section boilers. The boiler must be centered on combustible floor base.
6. Accessibility clearances **MUST** take precedence over fire protection clearances. An 18-in. clearance should be maintained on each side where passage is required to access another side for cleaning, servicing, inspection, or replacement of any parts that normally may require attention. An 18-in. clearance is recommend on control side for servicing.
7. Determine boiler room size. Rooms that are large in comparison with the size of boiler are defined as rooms having a volume equal to or greater than 16 times the volume of the boiler. Where room ceiling height is greater than 8 ft, volume of room shall be figured on the basis of 8 ft ceiling height. Determination of room size should be based on total volume of all gas fired equipment installed in that room. (See Table 1.) Refer to Section 6.3 of NFPA, Central Heating Boilers and Furnaces for further information, including approved methods for reducing clearances in large rooms.
8. Table 2 shows minimum clearances from combustible materials.

→ **Table 1—Room Large In Comparison With Boiler**

BOILER SIZE (SECTIONS)	BOILER VOLUME (CU FT)	MINIMUM ROOM VOLUME REQUIRED TO BE LARGE ROOM (CU FT)*
2	3.8	61.6
3	5.4	86.6
4	7.0	111.6
5	8.5	136.6
6	10.1	161.7
7	11.7	186.7
8	13.2	211.7
9	14.8	236.7

\* For room with single boiler only.

→ **Table 2—Minimum Clearances From Combustible Materials and For Servicing**

PART OF BOILER	ALCOVE OR ROOM NOT LARGE IN COMPARISON WITH BOILER (IN.)		ROOM LARGE IN COMPARISON WITH BOILER (IN.)
	2—5 Sections	6—9 Sections	
<b>Top</b>	6	6	6
<b>Rear</b>	6	6	6
<b>Control Side</b>	8	24	6
<b>Opposite Control Side</b>	6	24	6
<b>Front</b>	18	18	18
<b>Flue/Vent Connector</b>	6	6	6
<b>Boiler Piping</b>	1	1	1

9. Equipment shall be installed in a location in which the facilities for ventilation permit satisfactory combustion of gas, proper venting, and maintenance of ambient temperature at safe limits under normal conditions of use. Equipment shall be located so as not to interfere with proper circulation of air. When normal infiltration does not provide necessary air, outside air shall be introduced as described in Fresh Air for Combustion section.
10. Advise owner to keep air passages free of obstructions. Ventilation and combustion air must enter boiler room without restrictions.
11. The boiler shall be installed such that the automatic gas ignition system components are protected from water (dripping, spraying, rain , etc.) during appliance operation and service (condensate trap, control replacement, etc.).

## FRESH AIR FOR COMBUSTION

→ Provision for combustion and ventilation air must be in accordance with Section 5.3 of NFGC, Air for Combustion and Ventilation, of the or applicable provisions of local building codes.

Canadian installations must be installed in accordance with NSCNGPIC and all authorities having jurisdiction.

---

**⚠ WARNING:** Be sure to provide enough fresh air for combustion. Enough air ensures proper combustion and ASSURES THAT NO HAZARD WILL DEVELOP DUE TO LACK OF OXYGEN. Failure to follow this warning can cause a fire, personal injury, or death.

---

**⚠ CAUTION:** Air for combustion must not be contaminated by halogen compounds, which include fluoride, chloride, bromide, and iodide. These elements are found in aerosol sprays, detergents, bleaches, cleaning solvents, salts, air fresheners, and other household products. Excessive exposure to contaminated combustion air will result in safety and performance related problems.

---

**⚠ CAUTION:** If a fireplace or a kitchen or bathroom exhaust fan is used, an outside air intake should be installed. These devices rob the boiler and water heater of combustion air.

---

Enough fresh air must be provided to assure proper combustion. The fire in the boiler uses oxygen. It must have a continuous supply. The air in a house contains only enough oxygen to supply the burner for a short time. Outside air must enter the house to replace that used by the burner. The exact fresh air requirements depend on whether the boiler is located in an unconfined or confined space.

### PROCEDURE 1—BOILER LOCATED IN UNCONFINED SPACE

An unconfined space is defined as a space with volume not less than 50 cu ft per 1000 Btuh of total input rating of all appliances installed in that space.

If boiler is in an open area (unpartitioned basement) in a conventional house, air that leaks through cracks around doors and windows will usually be adequate to provide air for combustion. The doors should not fit tightly. Cracks around windows should not be caulked.

### PROCEDURE 2—BOILER LOCATED IN CONFINED SPACE

#### A. All Air From Inside Building

The confined space shall be provided with 2 permanent openings communicating directly with an additional room(s) of sufficient volume so that the combined volume of all spaces meets the criteria for an unconfined space. The total input of all gas utilization equipment installed in the combined space shall be considered in making this determination. Each opening shall have a minimum free area of 1 sq in. per 1000 Btuh of total input rating for all gas utilization equipment in the confined space, but not less than 100 sq in. One opening shall be within 12 in. of the top and 1 within 12 in. of the bottom of the enclosure.

#### B. All Air From Outdoors


The confined space shall be provided with 2 permanent openings, 1 commencing within 12 in. of the top and 1 commencing within 12 in. of the bottom of the enclosure. The openings shall communicate directly, or by ducts, with the outdoors or spaces (crawl or attic) that freely communicate with the outdoors.

1. When directly communicating with the outdoors, each opening shall have a minimum free area of 1 sq in. per 4000 Btuh of total input rating of all equipment in the enclosure.

**Table 3—Fresh Air Duct Capacities for Ducts Supplying Fresh Air to Boiler in Tightly Constructed Houses (Btuh)\***


FRESH AIR DUCT SIZE (IN.)	1/4-IN. MESH SCREEN	WOOD LOUVERS	METAL LOUVERS
3 X 12	144,000	36,000	108,000
8 X 8	256,000	64,000	192,000
8 X 12	384,000	96,000	288,000
8-1/2 X 16	512,000	128,000	384,000

\* Based on opening covered by 1/4-in. mesh screen, wood louvers, or metal louvers.

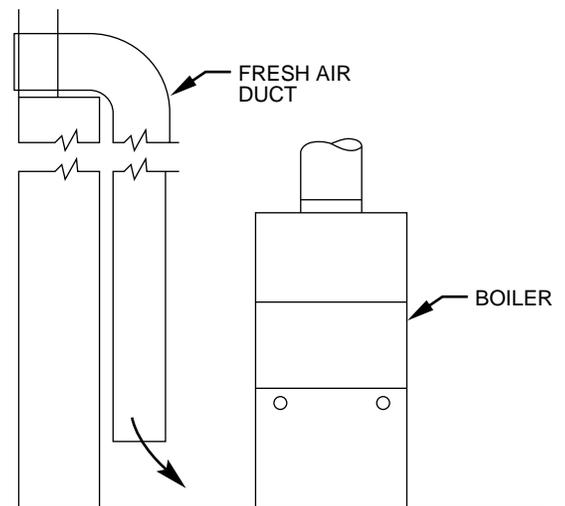


**Fig. 2—Fresh Air Duct for Tightly Sealed House**

A95141

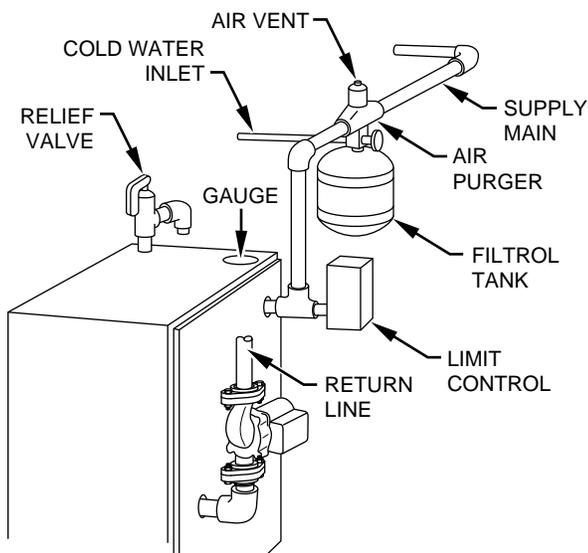

**Fig. 3—Typical Hot Water Piping**

A95176

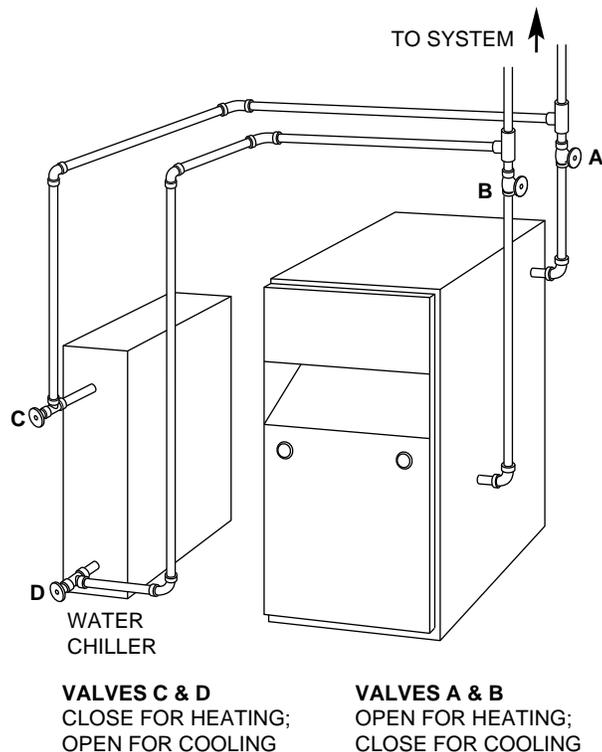

**Fig. 4—Chilled Water Piping**

A95143

2. When communicating with the outdoors through vertical ducts, each opening shall have a minimum free area of 1 sq in. per 4000 Btuh of total input rating of all equipment in the enclosure.
3. When communicating with the outdoors through horizontal ducts, each opening shall have a minimum free area of 1 sq in. per 2000 Btuh of total input rating of all equipment in the enclosure.
4. When ducts are used, they shall be of the same cross-sectional area as the free area of the openings to which they connect. The minimum dimension of rectangular air ducts shall not be less than 3 in.

#### INSTALLATION—SYSTEM PIPING

1. Place boiler in selected location (as close to chimney as possible). Boiler is shipped assembled. Only the relief valve and a drain line to carry any water or steam to a drain need to be installed.
2. Install relief valve into 3/4-in. pipe on top of boiler. (See Fig. 3.) Use 3/4-in. pipe and field-supplied elbow to carry water or steam to a nearby drain. Do not connect directly to a drain but leave an air gap. No shutoff of any description shall be placed between safety relief valve and boiler, or on any discharge pipes between such safety valves and the atmosphere. Installation of safety relief valve shall conform to the requirements of the ANSI/ASME Boiler and Pressure Vessel Code, Section IV. The manufacturer is not responsible for any water damage. Install drain valve in lower left side of boiler as marked.
3. Connect supply and return lines to boiler. The connections may require certain additional fittings and parts. (See Fig. 3 and 4.)
4. This boiler is equipped with 1-1/4 in. supply and return connections on both the left and right sides of boiler.


In connecting cold water supply to water inlet valve, make sure that a clean water supply is available. When water supply is from a well or pump, a sand strainer should be installed at pump.

A hot water boiler installed above radiation level must be equipped with a low water cut-off device. A periodic inspection is necessary as is flushing of float-type devices per the manufacturer's specific instructions.

**Table 4—Typical Chimney Sizes**

BOILER INPUT (BTUH)	FLUE AREA IN INCHES		
	Height (HT)*		
	10-15 ft	15-25 ft	25 ft up
Up to 100,000	6 X 6	6 X 5	5 X 5
Up to 155,000	6 X 7	6 X 6	6 X 5
Up to 230,000	7 X 8	7 X 7	6 X 7
Up to 350,000	9 X 9	8 X 9	8 X 8

\* HT = top of thimble to top of flue. (See Fig. 5.)  
For boiler input, refer to Fig. 1.  
For information only — not meant to imply minimum sizes.

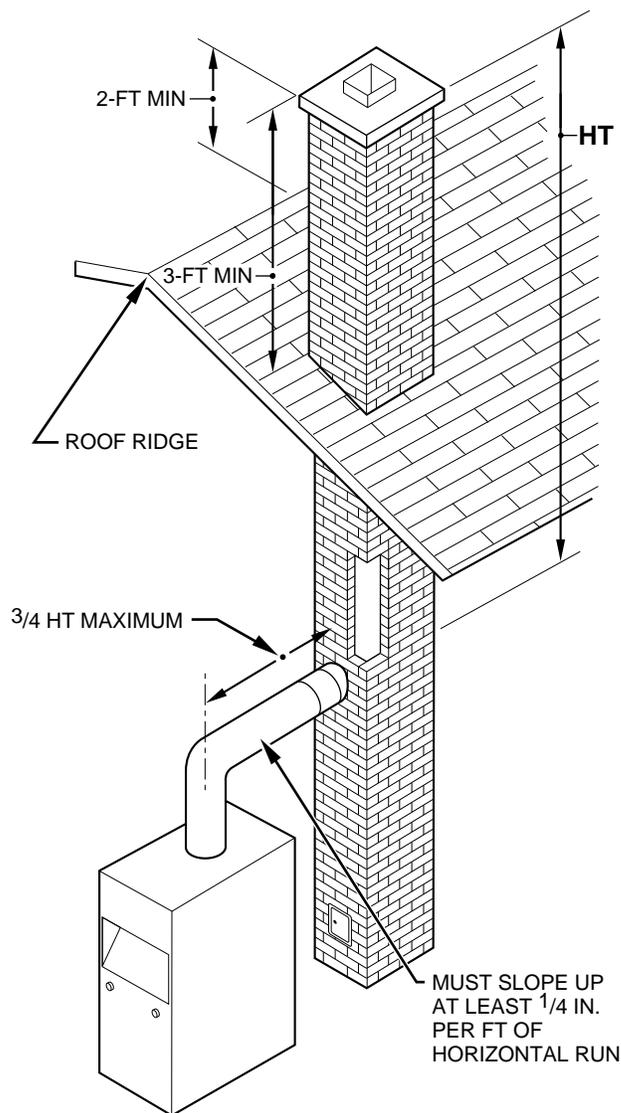

A95144

**Fig. 5—Typical Masonry Chimney Requirements**

**PROCEDURE 1—FOR USE WITH COOLING UNITS**

1. This boiler, when used in connection with chilled water systems, must be installed so that chilled water is piped in parallel with the heating boiler. Appropriate valves must be used to prevent chilled water from entering the heating boiler. (See Fig. 4.)
2. When this boiler is connected to heating coils located in air handling units where they may be exposed to refrigerated air circulation, the piping system shall be equipped with flow control valves or other automatic means to prevent gravity circulation of boiler water during cooling cycles.

**PROCEDURE 2—LOW DESIGN WATER TEMPERATURE SYSTEMS (BELOW 140°F)**

If boiler is to be used in a heating system where design water temperatures below 140°F are desired (for example radiant floor heating), a 3-way or 4-way mixing valve or suitable alternative is required to prevent low temperature return water from entering boiler. Follow mixing valve manufacturer's Installation Instructions.

The minimum design return water temperature to boiler to prevent condensation in boiler and venting system is 120°F. The minimum high limit setting is 140°F.

**CHIMNEY AND VENT PIPE CONNECTION**

→ For boilers for connection to gas vents or chimneys, vent installations shall be in accordance with Part 7 NFGC, Venting of Equipment, of the in the United States or Part 7 NFGC, Venting System and Air Supply for Appliances, in Canada, and applicable provisions of local building codes.



**PROCEDURE 1—CHECKING CHIMNEY**

The chimney is a very important part of the heating system. It must be clean, the right size, properly constructed, and in GOOD CONDITION. No boiler can function properly with a bad chimney. Table 4 gives typical chimney sizes. Fig. 5 shows how a boiler might be vented to a chimney. Note that the height (HT) is measured from the vent pipe to the top.


**PROCEDURE 2—CHIMNEY SIZING**

→ Chimney sizing and all other aspects of vent installation must be in accordance with Part 7 NFGC Venting of Equipment and applicable provisions of local building codes.

In Canada, follow CAN/CGA B149.1 and B149.2 Installation Codes for Gas Burning Appliances and Equipment.

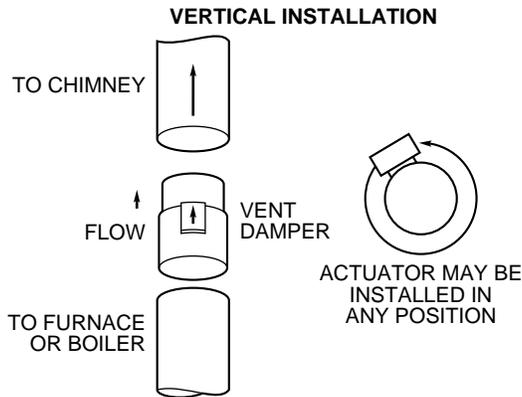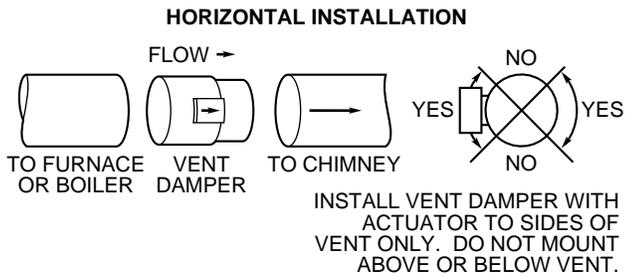

**Fig. 6—Horizontal and Vertical Vent Damper Installation** A95145

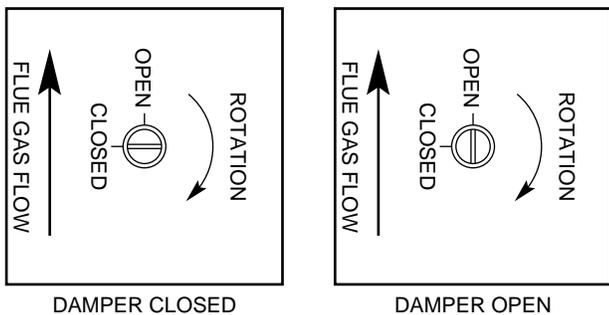

**Fig. 7—Effikal Vent Damper Position Indicator** A95147

**PROCEDURE 3—CONNECTING VENT DAMPER AND VENT CONNECTOR**

Refer to Fig. 1 flue diagram for size and location of vent (flue opening). Use 28 gage (minimum) galvanized pipe to connect to chimney.


**IMPORTANT:** The damper blade on factory-supplied vent damper has a 1/2-sq in. hole (approximately 3/4-in. diameter). On boilers equipped with standing pilot, the hole **MUST** be left open. On boilers equipped with intermittent ignition, the hole should be plugged using plug supplied with vent damper.

1. Position factory-supplied vent damper on top of flue outlet collar. Fasten damper securely to flue outlet collar with sheet metal screws. Make sure damper blade has clearance to operate inside of diverter.

On 2-section boilers equipped with vent damper, the factory-supplied 4-in. vent damper is equipped with a 3-in. to 4-in. adapter so that the 4-in. vent damper may be installed on boiler's 3-in. flue outlet collar. Fasten all fittings securely.

**As An Option (U.S.A. Only):** The damper may be installed in any horizontal or vertical position (closer to the flue outlet collar preferred). Follow diagrams shown in Fig. 6, 7, and 8.

2. Install vent damper to service only the single boiler for which it is intended. The damper position indicator shall be in a visible location following installation. Locate damper so that it is accessible for servicing.
3. The damper must be in open position when appliance main burners are operating.
4. The boiler is equipped with a factory-wired harness that plugs into vent damper.
5. Vent pipe must be same size as flue outlet collar, except 2-section boilers with vent damper as noted above.
6. Slope pipe up from boiler to chimney not less than 1/4 in. per ft.
7. Run pipe as directly as possible with as few elbows as possible.
8. Do not connect to fireplace flue.
9. End of vent pipe must be flush with inside face of chimney flue. Use a sealed-in thimble for chimney connection.
10. Horizontal run should not be longer than 3/4 the chimney height (HT). (See Fig. 6.)

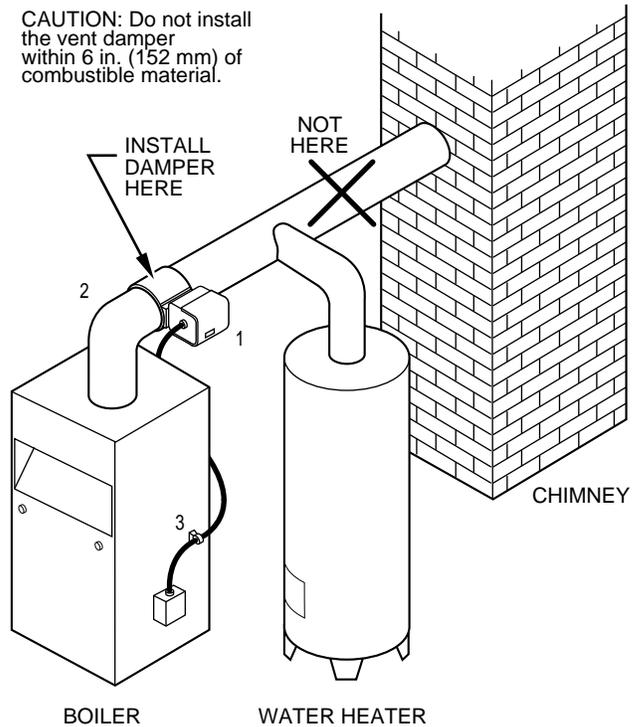

1. Install the vent damper to service only the single appliance for which it is intended. If improperly installed, a hazardous condition, such as an explosion or carbon monoxide poisoning, could result.
2. Do not install the vent damper on vent pipe curve.
3. Do not run wires near high temperature surfaces. Use stand-off brackets if necessary.

**Fig. 8—Typical Installation for Vent Damper (Note Caution and Footnotes)** A95146

The sections of vent pipe should be fastened with sheet metal screws to make piping rigid. Horizontal portions of vent system must be supported to prevent sagging. Use stovepipe wires every 5 ft to support pipe from above. If vent pipe must go through a crawlspace, double-wall vent pipe should be used. Where vent pipe passes through a combustible wall or partition, use a ventilated metal thimble. The thimble should be 4 in. larger in diameter than vent pipe.

#### **PROCEDURE 4—MINIMUM VENT PIPE CLEARANCE**

Wood and other combustible materials must not be closer than 6 in. from any surface of single-wall metal vent pipe. Listed Type-B vent pipe or other listed venting systems shall be installed in accordance with their listing.

#### **PROCEDURE 5—REMOVING EXISTING BOILER FROM COMMON VENTING SYSTEM**

When an existing boiler is removed from a common venting system, the common venting system is likely to be too large for proper venting of the appliances remaining connected to it.

At the time of removal of an existing boiler, the following items shall be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

1. Seal any unused openings in the common venting system.
2. Visually inspect the venting system for proper size and horizontal pitch and determine there is no blockage or restriction, leakage, corrosion, and other deficiencies which could cause an unsafe condition.
3. Insofar as is practical, close all building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building. Turn on clothes dryers and any appliances not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
4. Place in operation the appliance being inspected. Follow the lighting instructions. Adjust thermostat so appliance will operate continuously.
5. Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar, or pipe.
6. After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers, and any other gas-burning appliance to their previous conditions of use.
- 7. Any improper operation of the common venting system should be corrected so the installation conforms with the NFGC ANSI Z223.1-1996. When resizing any portion of the common venting system, the common venting system should be resized to approach the minimum size as determined using the appropriate tables in Part 11 of the NFGC in the United States or Appendix B of the NSCNPIC in Canada.

For boilers for connection to gas vents or chimneys, vent installations shall be in accordance with Part 7 NFGC, Venting of Equipment, in the United States or Part 7 NFGPIC, Venting System and Air Supply for Appliances, in Canada, and applicable provisions of local building codes.

Vent connectors serving appliances vented by natural draft shall not be connected into any portion of mechanical draft systems operating under positive pressure.

### **VENT DAMPER OPERATION**

The vent damper must be inspected at least once a year by a trained, experienced service technician. The name of the person who originally installed vent damper is shown on installation label.

#### **PROCEDURE 1—AUTOMATIC OPERATION OF VENT DAMPER**

For safe, efficient operation, the vent damper and all flue product carrying areas of appliance must be checked annually with particular attention given to deterioration from corrosion or other sources. If corrosion or other deterioration is observed, contact your heating contractor for repairs. Check vent damper operation as follows:

1. When boiler is off, check that vent damper position indicator points to CLOSED position. (See Fig. 8.)
2. Turn thermostat or controller up to call for heat and check that vent damper indicator points to the OPEN position. (See Fig. 8.)
3. Turn thermostat or controller down again and check that vent damper position indicator returns to CLOSED position.

#### **PROCEDURE 2—MANUAL OPERATION OF VENT DAMPER**

The Effikal vent damper may be placed in OPEN position to permit burner operation by using the HOLD DAMPER OPEN switch located on damper controller. The thermostat controls burner firing as before while damper remains open. DO NOT turn damper open manually or motor damage will result. Set switch to AUTOMATIC OPERATION to close vent damper during burner off cycle.

For further information and for a vent damper troubleshooting guide, refer to the Effikal manual packaged with vent damper.

#### **PROCEDURE 3—NOTES FOR CANADA ONLY**

1. Canadian Standard CAN1-2.28-M81 prohibits the use of vent dampers on propane-fired appliances with intermittent ignition.
2. In Canada, the vent damper must be attached directly to flue outlet collar, with the exception of 2-section boiler where the 3-in. to 4-in. adapter is supplied with vent damper. No other interconnecting pieces are allowed between boiler and vent damper.
3. In Canada, vent dampers are not an option. Boilers are either factory built for use with a vent damper and vent damper is supplied with boiler, or they are factory built for use without a vent damper. In the second case, a vent damper cannot be installed later.

### **GAS SUPPLY PIPING**

#### **PROCEDURE 1—CHECKING GAS SUPPLY**


The gas pipe to boiler must be the correct size for length of run and total Btu input of all gas utilization equipment connected to it. See Table 5 for proper size. Be sure gas line complies with local codes and gas company requirements.

**Table 5—Gas Pipe Sizes**

NATURAL GAS				
Length of Pipe (Ft)	Pipe Capacity—Btuh Input Includes Fittings			
	1/2 in.	3/4 in.	1 in.	1-1/4 in.
20	92,000	190,000	350,000	625,000
40	63,000	130,000	245,000	445,000
60	50,000	105,000	195,000	365,000
PROPANE GAS				
Length of Pipe (Ft)	Pipe Capacity—Btuh Input Includes Fittings			
	Copper Tubing*		Iron Pipe	
	5/8 in.	3/4 in.	1/2 in.	3/4 in.
20	131,000	216,000	189,000	393,000
40	90,000	145,000	129,000	267,000
60	72,000	121,000	103,000	217,000

\* Outside diameter.

**NOTE:** The length of pipe or tubing shown should be measured from gas meter or propane second-stage regulator.

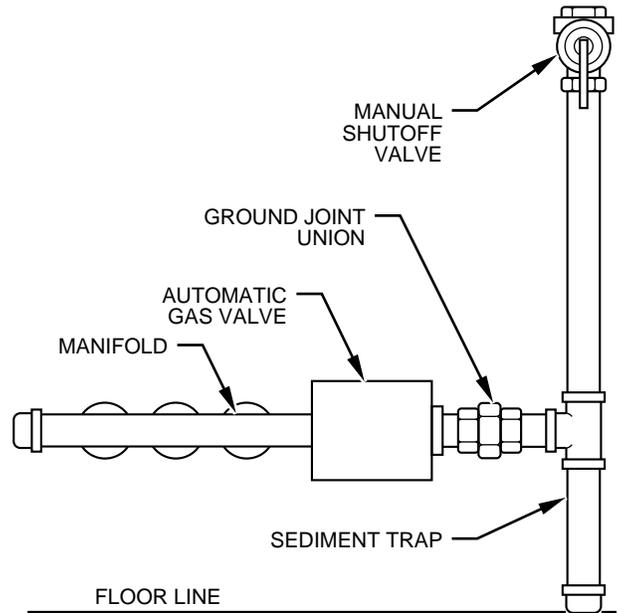

A95148

**Fig. 9—Gas Piping at Boiler**

The boiler and its individual shutoff valve must be disconnected from gas supply piping system during any pressure testing of gas supply piping system at test pressures in excess of 0.5 psig (3.5 kPa).

The boiler must be isolated from gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 0.5 psig (3.5 kPa).

**PROCEDURE 2—CONNECTING GAS PIPING**

Refer to Fig. 9 for general layout at boiler. It shows the basic fittings needed. The gas line enters boiler from right side.

The following rules apply:

- 1. Use only those piping materials and joining methods listed as acceptable by the authority having jurisdiction or in the absence of such requirements, by the NFGC ANSI Z223.1-1996. In Canada, follow the CAN/CGA B149.1 and .2 Installation Codes for Gas Burning Appliances and Equipment.
- 2. Use pipe joint compound suitable for propane gas on male threads only.
- 3. Use ground joint unions.
- 4. Install a sediment trap upstream of gas controls.
- 5. Use 2 pipe wrenches when making connection to gas valve to keep it from turning.
- 6. Install a manual shutoff valve in vertical pipe about 5 ft above floor.
- 7. Tighten all joints securely.
- 8. Propane gas connections should only be made by a licensed propane installer.
- 9. Two-stage regulation should be used by propane installer.
- 10. Propane gas piping should be checked by propane installer.

**PROCEDURE 3—CHECKING GAS PIPING**

Upon completion of piping, check immediately for gas leaks. Open the manual shutoff valve. Test for leaks by applying soap suds (or a liquid detergent) to each joint. Bubbles forming indicate a leak. **CORRECT EVEN THE SMALLEST LEAK AT ONCE.**

**⚠ WARNING: Never use a match or open flame to test for leaks. Use a soap-and-water solution. A failure to follow this warning could result in fire, explosion, personal injury, or death.**

**ELECTRICAL WIRING**

See Fig. 10 and 11 for wiring diagrams for the various models.



All electrical work must conform to local codes as well as the National Electrical Code (NEC) ANSI/NFPA-70-1996. In Canada, electrical wiring shall comply with the Canadian Electrical Codes CSA C22.1 and 2.

**PROCEDURE 1—ELECTRIC POWER SUPPLY**

**⚠ WARNING: Turn off electric power at fuse box before making any line voltage connections. Follow local electric codes. Failure to follow this warning could result in electrical shock, personal injury, or death.**

Run a separate 120-v circuit from a separate overcurrent protective device in electrical service entrance panel. This should be a 15-amp circuit. Locate a shutoff switch at boiler. It must be turned off during any maintenance. Connect 120-v power supply to aquastat terminals L1 (HOT) and L2.

### INTERMITTENT IGNITION

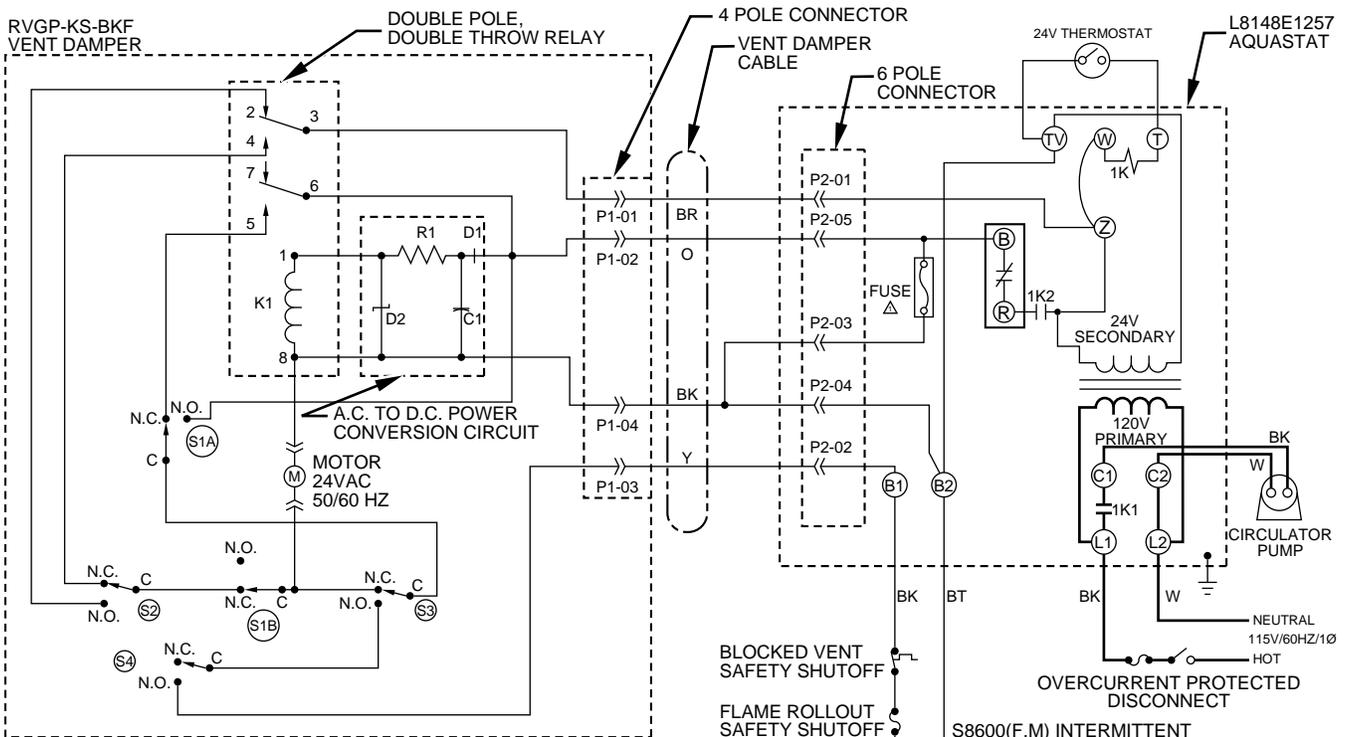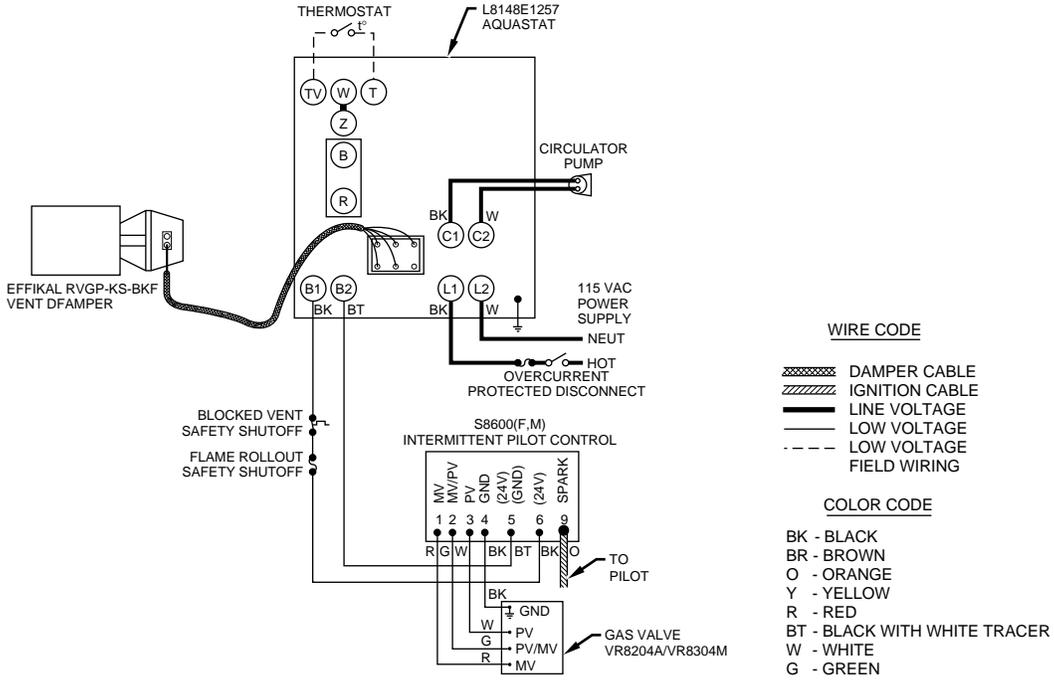



**NOTE:**  
S1A AND S1B ARE THE AUTOMATIC OPERATION/HOLD DAMPER OPEN SWITCH. SWITCH SHOWN IN AUTOMATIC POSITION. S2, S3, AND S4 ARE CAM ACTUATED SNAP SWITCHES.

FUSE  $\Delta$  BLOWS THE FIRST TIME THE THERMOSTAT CLOSES AFTER THE VENT DAMPER IS PLUGGED IN. AFTER FUSE BLOWS, THE L8148E1257 WILL OPERATE THE BURNERS ONLY IF THE VENT DAMPER IS CONNECTED (PLUGGED IN).

**NOTE:** If any of the original wire as supplied with this appliance must be replaced, it must be replaced with type 105°C thermoplastic wire or its equivalent.

Fig. 10—Wiring Diagram for Hot Water Boilers with Intermittent Ignition

### STANDING PILOT

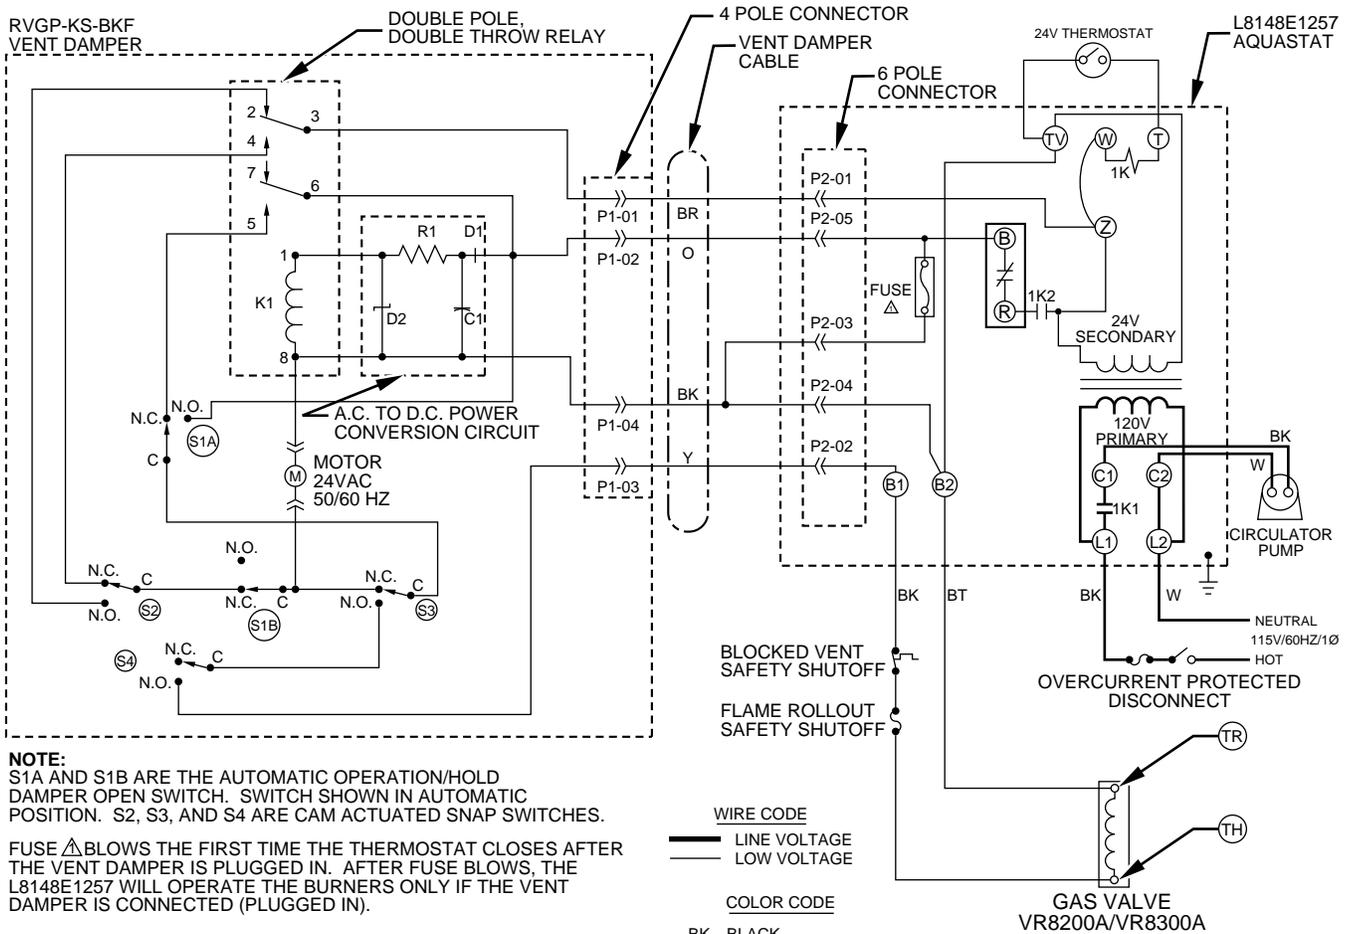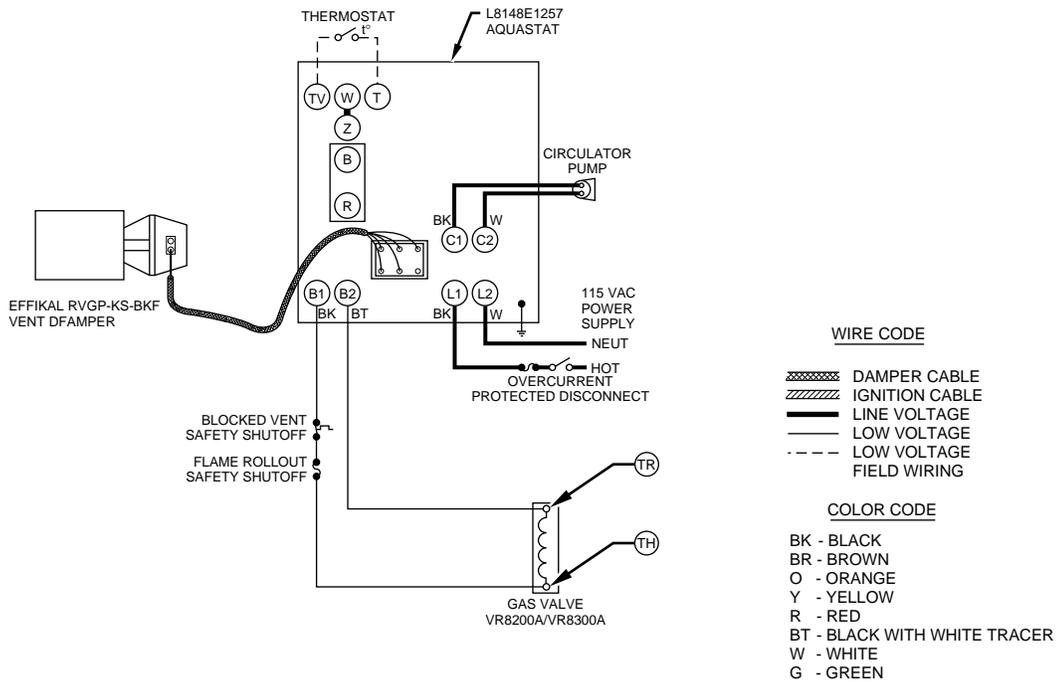

**NOTE:** If any of the original wire as supplied with this appliance must be replaced, it must be replaced with type 105°C thermoplastic wire or its equivalent.

Fig. 11—Wiring Diagram for Hot Water Boilers with Standing Pilot

The boiler, when installed, must be electrically grounded in accordance with the requirements of the authority having jurisdiction, or in the absence of such requirements, with the NEC ANSI/NFPA-70-1996. Run a 14 gage or heavier copper wire from boiler to a grounded connection in service panel or a properly driven and electrically grounded ground rod.

## **PROCEDURE 2—INSTALLING THERMOSTAT**

The thermostat location has an important effect on the operation of boiler system. BE SURE TO FOLLOW INSTRUCTIONS INCLUDED WITH THERMOSTAT.

Locate thermostat about 5 ft above floor on an inside wall. It may be mounted directly on wall or on a vertically mounted outlet box. It should be sensing average room temperature so avoid the following:

### **DEAD SPOTS:**

- Behind doors
- Corners and alcoves

### **HOT SPOTS:**

- Concealed pipes
- Fireplace
- TV sets
- Radios
- Lamps
- Direct sunlight
- Kitchens

### **COLD SPOTS:**

- Concealed pipes or ducts
- Stairwells—drafts
- Doors—drafts
- Unheated rooms on other side of wall

Set heat anticipator at 0.2 amps. The 24-v thermostat connects to aquastat terminals T and TV.

## **PROCEDURE 3—VENT DAMPER WIRING**

The boiler is equipped with a factory-wired harness with a 4-pin Molex plug which plugs into 4-pin Molex receptacle inside vent damper operator. The vent damper must be connected for boiler to operate.

---

**⚠ CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.**

---

## **EQUIPMENT AND OPTIONAL ACCESSORIES**

### **PROCEDURE 1—RELIEF VALVE**

A relief valve must be installed on boiler. Water expands as it is heated. If there is no place for water to expand into, water pressure builds up inside boiler and system. Should this happen, relief valve automatically opens at a predetermined pressure. This relieves strain on boiler and system. Run a pipe from relief valve outlet (pipe must be same size as outlet, and open end must not be threaded) to an open drain, tub or sink, or other suitable drainage point not subject to freezing. Failure to do so may cause water damage or injury should relief valve release.

### **PROCEDURE 2—EXPANSION TANK**

In a properly assembled system, expanding water flows into expansion tank. This tank should be of the correct size.

The tank is filled with air. As the water expands, it compresses the air in tank to form an air pressure cushion. This "spring-like" cushion serves to maintain correct operating water pressure regardless of water temperature. This assures a "full measure" of water even in the highest radiation unit of system. It also prevents blowing off the relief valve.

The air in tank in the beginning (with system filled with cold water) is sufficient for proper operation. The tank also serves as a trap for excess air in system. This air would cause gurgling in pipes and inefficient circulation in radiators if left in system.

It is possible for a tank to become "water-logged" (filled with water). It can also become overfilled with air. This can happen after filling system with new water. Fittings are provided on tank and in line to tank for bleeding off excess water or air.

When installing this tank, the following are important:

1. Tank should be higher than boiler top.
2. Pipe to tank should continuously rise up to tank (so that air can "bubble" up to it).

### **PROCEDURE 3—DIAPHRAGM-TYPE EXPANSION TANK**

The diaphragm-type expansion tank (EX-TROL) takes the place of a conventional expansion tank. Read instructions packed with EX-TROL tank assembly carefully.

The EX-TROL tank comes with a 10-12 psi air charge. This is the same as the pressure produced in system by automatic fill valve. When system is first filled, EX-TROL tank contains little or no water.

As water is heated, its pressure increases. It expands into EX-TROL tank compressing the air in tank. This compressed air cushion permits water in system to expand as temperature changes.

The diaphragm-type tank can be mounted on air purger fitting or at any other convenient place in supply or return line.

#### **PROCEDURE 4—AIR-ELIMINATING FITTING (AIR PURGER)**

An air purger is used to remove excess air from system. It is installed in supply line. It eliminates air from water before it reaches radiators and bleeds off this air.

#### **PROCEDURE 5—MAIN AIR VENT FOR DOWNFLOW SYSTEMS OR DIAPHRAGM-TYPE EXPANSION TANK**

Before a system is filled with water, there is air in pipes and radiation units. Some of it will be trapped as system fills. It is possible to eliminate most of this air through air vents on radiation units. A main air vent speeds and simplifies this process. It should be installed on highest point in supply main when all radiation is below top of boiler.

#### **PROCEDURE 6—AUTOMATIC FILL VALVE**

For safe, efficient operation, a hot water system must be COMPLETELY FILLED with water. Adding new water when needed can be done manually (by use of a hand valve in water supply line). This requires regular attention to system's needs. An automatic fill valve accomplishes this without attention. It is installed in supply line on hot water boilers only. The valve operates through water pressure differentials. It does not require electrical connection.

#### **PROCEDURE 7—DRAIN VALVE**

This manual valve provides a means of draining all water from boiler and system. It is often installed in the 3/4-in. tapping at bottom of end boiler section. It can also be installed in a tee where return line enters boiler.

#### **PROCEDURE 8—WATER TEMPERATURE CONTROL**

The water temperature limit control in relay is adjustable and may be set as necessary. It may be set as low as 140°F or as high as 240°F. Setting depends on the type and amount of radiation involved and weather conditions.

#### **PROCEDURE 9—CIRCULATING PUMP**

Every forced hot water system requires a circulating pump. A separate pump or zone valve is required for each zone if there are 2 or more zones. This pump must have the capacity to provide circulation required by system. The pump is connected into return main just ahead of boiler. It is also wired to electrical system.

#### **PROCEDURE 10—VENT DAMPER**

This is an automatic, motorized stack damper that has been developed to increase efficiency of heating systems by reducing standby losses from heating apparatus and conditioned air space. The damper closes chimney vent when burner is off and fully opens it when combustion is required.

#### **PROCEDURE 11—ROLLOUT SWITCH (FLAME ROLLOUT SAFETY SHUTOFF)**

The rollout switch is a temperature-sensitive fuse link device. It is located on boiler base just outside fire box. In the event of heat exchanger flueway blockage causing flame to roll out of fire box, the fuse blows shutting down flow of gas to main burners. The fuse does not change in appearance when blown.

If rollout switch blows, it must be replaced with an exact replacement. Check heat exchanger flueways for blockage when restoring system to operating condition. Do not operate system without a rollout switch.

#### **PROCEDURE 12—SPILL SWITCH (BLOCKED VENT SHUTOFF SYSTEM)**

The spill switch is a manual-reset disc thermostat with a fixed set point (340°F) and normally closed contacts. It is located at relief opening of integral draft diverter. In the event of chimney or venting system blockage causing products of combustion to spill out of relief opening, the spill switch disc heats up and spill switch contacts open shutting down flow of gas to main burners by removing power to gas valve.

In the event that the spill switch contacts open, the reset button on the back of switch pops up. The spill switch must be reset manually after switch has cooled off by pushing reset button down. Check venting system and chimney for blockage when restoring system to operating condition. DO NOT operate system without a spill switch.

### **STARTING BOILER**

#### **PROCEDURE 1—HOW A HOT WATER SYSTEM OPERATES**


The entire heating system (boiler, piping, and radiation units) is filled with water. As water in boiler is heated, it is pumped from top of boiler through supply main to radiation units. The cooler water in them flows back through return main to boiler. This provides positive and rapid response to thermostat.

#### **PROCEDURE 2—FILLING SYSTEM WITH WATER**

To fill:

1. Close air vents on all radiation units. Open valves to these units.
2. Make sure boiler and expansion tank drain cocks are closed. The air bleed screw on tank drain fitting should be closed.
3. Open valve in line from boiler to expansion tank. Refer to Maintaining Boiler section for additional information.
4. Open water inlet to boiler and leave it open.
5. Start with the LOWEST radiation unit. Open the air vent on this radiation unit. When all air has escaped and water starts to flow from vent, close air vent.
6. Proceed to next lowest radiation unit and repeat process outlined in item 5. Repeat until every radiation unit in system has been covered. End with the highest unit in system.

If units have automatic vents, this manual venting is unnecessary but speeds up proper filling of system.

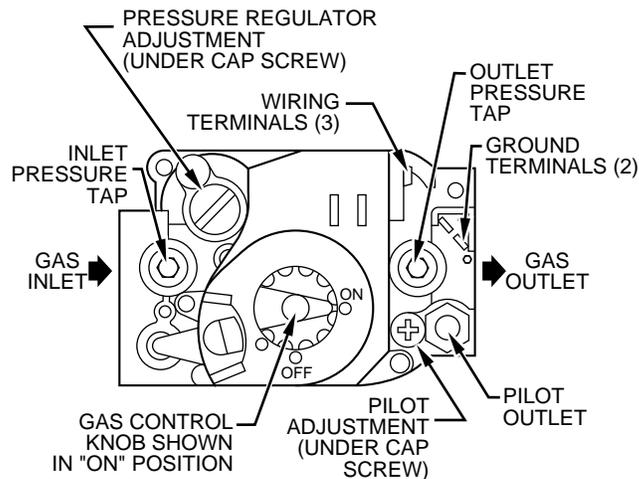

A95520

**Fig. 12—VR8204A/VR8304M Intermittent Ignition Gas Valve**

If system is a closed expansion tank system, there may be an automatic fill valve. It may be left open to refill system automatically as needed. Check temperature-pressure gage. Note position of hand indicating pressure. This should be between 10 and 15 lb. Any lowering of this movable hand below 10 lb indicates loss of water due to leakage. The automatic fill valve should compensate for this. Instructions are packaged with valve.

---

**⚠ CAUTION: Never run water into a hot, empty boiler.**

---

**FOR YOUR SAFETY READ BEFORE OPERATING**

---

**⚠ WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.**

---

A. Some boilers are equipped with an intermittent ignition device which automatically lights the pilot. Do NOT try to light pilot by hand. Some boilers are equipped with a continuous pilot and must be lit manually. See lighting instructions in Continuous Pilot Boiler section. A match holder is included in parts bag.

B. BEFORE OPERATING, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

**WHAT TO DO IF YOU SMELL GAS**

- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

C. Use only your hand to turn gas control knob. Never use tools. If knob will not turn by hand, do not try to repair it. Call a qualified service technician. Force or attempted repair may result in a fire or explosion.


D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of control system and any gas control which has been under water.

**GAS VALVE OPERATING INSTRUCTIONS**

**PROCEDURE 1—INTERMITTENT IGNITION BOILER—VR8204A/VR8304M GAS VALVE**


**A. To Turn On Gas To Appliance**

1. STOP! Read safety information in For Your Safety Read Before Operating section.
2. Set thermostat to lowest setting.
3. Turn off all electrical power to appliance.
4. This appliance is equipped with an ignition device which automatically lights the pilot. Do NOT try to light pilot by hand.
5. Remove lower front panel.
6. Turn gas control knob clockwise to OFF position. (See Fig. 12.)
7. Wait 5 minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in safety information in For Your Safety Read Before Operating section.
8. Turn gas control knob counterclockwise to ON position. (See Fig. 12.)
9. Replace lower front panel.
10. Turn on all electrical power to appliance.

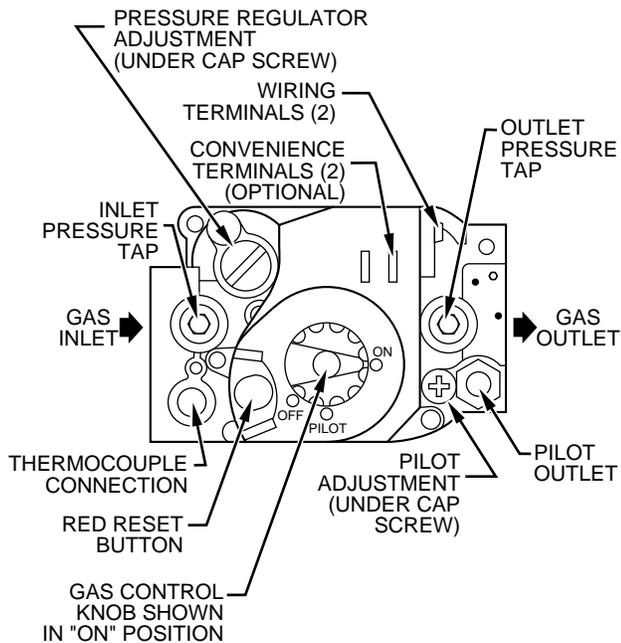

A95521

**Fig. 13—VR8200A/VR8300A Continuous Pilot Gas Valve**

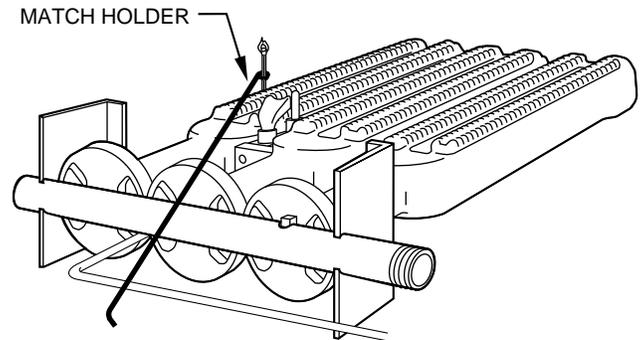

A95156

**Fig. 14—Lighting Pilot**

11. Set thermostat to desired setting.
12. If appliance will not operate, follow instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier.

**B. To Turn Off Gas To Appliance**

1. Set thermostat to lowest setting.
2. Turn off all electric power to appliance if service is to be performed.
3. Turn gas control knob clockwise to OFF position. (See Fig. 12.)

**PROCEDURE 2—CONTINUOUS PILOT BOILER—VR8200A/VR8300A GAS VALVE**

**A. To Turn On Gas To Appliance**

1. STOP! Read safety information in For Your Safety Read Before Operating section.
2. Set thermostat to lowest setting.
3. Turn off all electrical power to appliance.
4. Remove lower front panel.
5. Turn gas control knob clockwise to OFF position. (See Fig. 13.)
6. Wait 5 minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in safety information in For Your Safety Read Before Operating section.
7. Find pilot. Follow metal tube from gas control. The pilot is between 2 burner tubes. (See Fig. 15.)
8. Turn knob on gas control counterclockwise to PILOT position. (See Fig. 13.)
9. Push down and hold the red reset button while you light pilot burner with a match. After about 1 minute, release reset button. Pilot should remain lit. If it goes out, turn gas control knob clockwise to OFF position. To relight, repeat items 5-9.
  - If button does not pop up when released, stop and immediately call your service technician or gas supplier.
  - If pilot will not stay lit after several tries, turn gas control knob to OFF position and call your service technician or gas supplier.
10. After pilot remains lit when red button is released, turn gas control knob counterclockwise to ON position. (See Fig. 13.)
11. Replace lower front panel.
12. Turn on all electrical power to appliance.
13. Set thermostat to desired setting.

**B. To Turn Off Gas To Appliance**

1. Set thermostat to lowest setting.
2. Turn off all electrical power to appliance if service is to be performed.
3. Turn gas control knob clockwise to OFF position. (See Fig. 13.)

**OPERATING BOILER**

**PROCEDURE 1—AUTOMATIC GAS VALVE**

The automatic gas valve opens or closes according to heat requirements of thermostat and temperature limit control. It closes if pilot goes out. Each individual control must be operating correctly before any gas can pass to burners. Any 1 control can hold gas supply from burner regardless of demand of any other control.

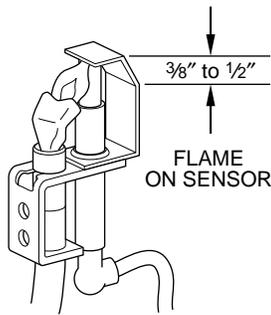


Fig. 15—Pilot Flame and Sensor

A95160

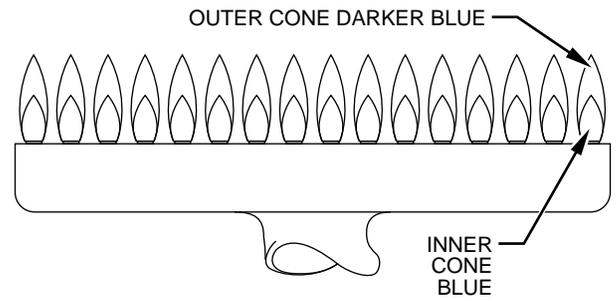


Fig. 17—Main Burner Flame

A95159

**PROCEDURE 2—SAFETY PILOT**

The safety pilot prevents flow of gas to burner if pilot goes out or will not ignite.

**PROCEDURE 3—GAS VALVE SAFETY SHUTDOWN TEST**

**A. Boilers Equipped with Continuous Pilot**

With main burners firing, disconnect thermocouple from gas valve. Gas valve should immediately shut off main burners and pilot.

**B. Boilers Equipped with Intermittent Ignition**

With main burners firing, disconnect ignition cable from intermittent pilot control box. Gas valve should shut off main burners. TURN OFF ELECTRIC POWER to boiler before reconnecting ignition cable to prevent electric shock.

**PROCEDURE 4—RELIGHT**

The electric and gas shall be off for 5 minutes before relighting.

**PROCEDURE 5—THERMOSTAT**

Keep thermostat set at desired room temperature. If windows are to be opened or heat is not needed, set thermostat to a lower setting.

**NOTE:** In the event of failure of any component, system will not operate or will go into safety lockout. The system is completely self-checking. On every call for heat, each component must be functioning properly to permit operation. On safety lockout, system has to be reset by adjusting thermostat to lowest setting for 1 minute, then back to normal setting.

Safe lighting and other performance criteria were met with gas manifold and control assembly provided on boiler when boiler underwent tests specified in ANSI Z21.13-latest revision.

**CHECKING AND ADJUSTING**

**PROCEDURE 1—PILOT BURNER ADJUSTMENT**

Pilot flame should surround 3/8 to 1/2 in. of pilot sensor. (See Fig. 15.) If flame needs adjusting, proceed as follows:

1. Remove screw cover over pilot adjusting screw.
2. Insert small screwdriver and adjust flame as needed. Turn screw counterclockwise to increase flame and clockwise to decrease flame.
3. Replace screw cover over pilot adjusting screw.

**PROCEDURE 2—MAIN BURNER AIR ADJUSTMENT**

The primary air shutters on cast iron main burners should be adjusted so flame forms a sharp blue cone with no yellow. (See Fig. 16.) It may be necessary to remove rollout shield to observe main burner flames. Replace after adjustment of air shutters.

Stainless steel main burners (propane gas boilers) do not require primary air adjustment.

**PROCEDURE 3—LIMIT CONTROLS ADJUSTMENT**

Instructions for each control are included with controls.

Table 6 shows recommended boiler water temperatures. These settings can be changed after becoming familiar with system operation. For example, if system is not giving quite enough heat in very cold weather, the limit setting can be raised to 220°F. Use boiler gage to check settings. Make adjustments according to its readings.

**Table 6—Recommended Boiler Water Temperatures**

TYPE OF HEATING UNIT	LIMIT CONTROL SETTING
Standing Radiators	180°F
Baseboard and Convector Radiators	200°F

Check thermostat operation. When set above temperature indicated on thermometer, boiler should ignite. Make certain thermostat turns boiler off when room temperature reaches selected setting and starts boiler operating when room temperature falls a few degrees.

After setting limit control to limit setting, check to see if it shuts off gas supply to burners. Set thermostat to call for heat and let boiler run until temperature of water reaches limit setting. Gas valve should shut off, and circulator should keep running until thermostat is satisfied or water cools enough to restart burners through limit control.

Finally, set thermostat for desired temperature. Special conditions in home and location of thermostat govern this setting.

## MAINTAINING BOILER

### PROCEDURE 1—BURNERS

A visual check of pilot and main burner flames should be made at least once each year, preferably at beginning of heating season. See Checking and Adjusting section.

### PROCEDURE 2—RELIEF VALVE

This valve should open automatically when system pressure exceeds pressure rating (usually 30 psi) of relief valve. Should it ever fail to open under this condition, shut down system. Drain system until pressure is reduced below relief valve pressure rating. If valve discharge occurs or if valve fails to open as described above, contact an authorized contractor or qualified service technician to replace relief valve and inspect heating system to determine the cause, as this may indicate an equipment malfunction.

This valve should be tested every month during periods of boiler operation, and at the beginning and end of any extended non-service period. Prior to testing, make certain discharge pipe is properly connected to valve outlet and arranged so as to contain and safely dispose of boiler discharge. Test at normal system operating pressure. Hold trip lever fully open for at least 5 sec in order to flush free any sediment that may lodge on valve seat, then permit valve to snap shut.

### PROCEDURE 3—EXPANSION TANK

As previously noted, this tank may become waterlogged or may receive an excess of air. Frequent automatic opening of relief valve indicates waterlogging. A high boiler temperature accompanied by unusually low radiation unit temperature (and "knocking") indicates excess air in tank.

To correct either condition, close valve between boiler and tank. Drain tank until it is empty. Check all tank plugs and fittings. Tighten as necessary. Open valve between boiler and tank. Water will rise to normal height in tank if automatic fill valve is installed, otherwise, manually refill system.

### PROCEDURE 4—BOILER FLUE PASSAGES

Under normal operating conditions with burners properly adjusted, it should not be necessary to clean boiler flue gas passages. However, to assure trouble-free operation, we recommend that flue passages, burner adjustment, and operation of controls be checked ONCE EACH YEAR by a competent service technician.

BEFORE THE START OF EACH SEASON (or whenever system has been shut down for some time), recheck whole system for leaks and recheck boiler and vent pipe for leaks. Replace or patch any boiler seals that are faulty.

### PROCEDURE 5—VENT PIPE

The venting of this unit is very important. Piping should be checked at least once a season. If vent piping shows any signs of leaking, replace it immediately.

### PROCEDURE 6—WATER SYSTEM

If system is to remain out of service during freezing weather, always DRAIN IT completely. Water left in to freeze will crack pipes and/or boiler.

### PROCEDURE 7—CLEANING BOILER AND BURNERS

Flue passages between sections should be examined yearly and cleaned if necessary. To clean:

1. Remove burners, pilot, and vent pipe.
2. Remove top and front jacket panels.
3. Remove 2 screws attaching intermediate front panel to left and right side jacket panels.
4. Remove draft diverter and intermediate front panel as 1 unit.
5. Carefully remove cerafelt gasket strips.
6. Clean passageways between sections with a flexible handle wire brush. Remove dirt from bottom of boiler and between sections by vacuuming.
7. Make sure all flame ports in burners are open and clear. Shake out or blow out all loose dirt in burners.
8. Reseal seams between adjacent sections as necessary with 400°F RTV silicone sealant.
9. Reassemble all parts. Be sure to check tightness of pilot connections and condition of burner flames after reassembly. (See Fig. 15 and 16.)
10. Be sure vent pipe connections to chimney are secure and no obstructions are present.

### SERVICE HINTS

You may avoid inconvenience and service calls by checking these points before you call for service.

**FOR YOUR SAFETY WHAT TO DO IF YOU SMELL GAS**

- 1. Do not try to light any appliance.**
- 2. Do not touch any electric switch; do not use the phone.**
- 3. Leave the building immediately, then call your gas supplier.**
- 4. If you cannot reach the gas supplier, call the fire department.**

IF SYSTEM IS NOT HEATING OR NOT GIVING ENOUGH HEAT. . .	
Possible Cause	What To Do
Thermostat is not set correctly	Reset thermostat above room temperature.
Burner is not operating properly	Check flame. If it is yellow, burner is not getting enough air. If flame is blue and noisy and seems to lift off the burner, burner is getting too much air. Contact your service technician.
No electric power to boiler	Check overcurrent protection. Check to be sure electric power supply circuit is on.
Controls out of adjustment	Reset according to instructions.
Radiators not heating	Open radiator vents to vent excess air. Check flow control valve (if used). It may be in closed position.
Circulator pump not running	Check overcurrent protection. Check relay operation.
Poor electrical contact	Check all control terminals and wire joints.
Rollout switch blown	Have your service technician check heat exchanger for blockage. Replace rollout switch with exact replacement.
Spill switch opened	Have your service technician check venting system and chimney for blockage or down draft condition. Reset spill switch.
Vent damper not operating	Consult troubleshooting guide in Effikal manual, packaged with vent damper.
IF BURNER IS NOISY. . .	
Possible Cause	What To Do
Gas input amount is incorrect	Contact your service technician.
RELIEF VALVE LEAKING. . .	
Possible Cause	What To Do
Dirt on seat	Open valve manually. Allow water to run and clear valve seat.
Waterlogged expansion tank	Drain tank. See instructions.

**HAVE YOUR SERVICE TECHNICIAN CHECK ANY PROBLEM YOU ARE UNABLE TO CORRECT.**

# REPAIR PARTS


## GAS-FIRED HOT WATER BOILERS

**—IMPORTANT—  
READ THESE INSTRUCTIONS BEFORE ORDERING**

All parts listed in the following Parts List may be ordered through your nearest supplier.

When ordering parts, first obtain the Model No. from the data plate on boiler, then determine the Part No. (not the Key No.) and the Description of each part from the following illustrations and lists. Be sure to give all this information:

The Part No. — The Part Description — The Boiler Model No.

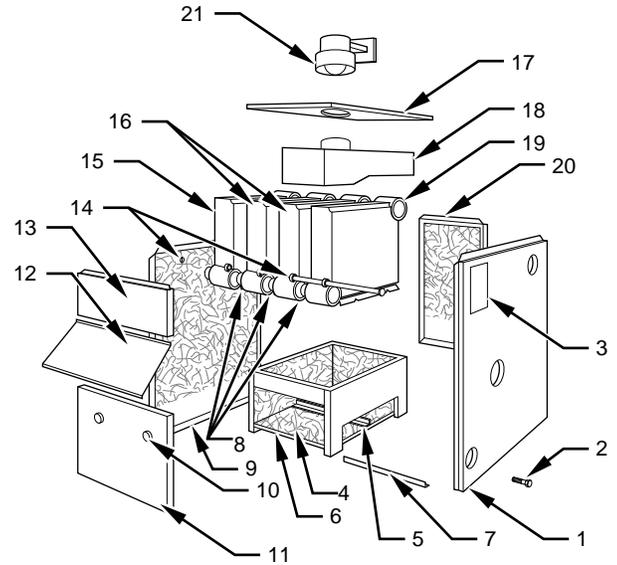

A95161


**Jacket—Section and Base Parts  
This is a Repair Parts List—Not a Packing List**

KEY NO.	DESCRIPTION	PART NO.								
		2 Section	3 Section	4 Section	5 Section	6 Section	7 Section	8 Section	9 Section	
1	Jacket, Right Side Panel	425-00-901	425-00-901	425-00-901	425-00-901	425-00-901	425-00-901	425-00-901	425-00-901	425-00-901
2	No. 10 X 1/2-in. Sheet Metal Screw	146-95-074	146-95-074	146-95-074	146-95-074	146-95-074	146-95-074	146-95-074	146-95-074	146-95-074
3	Rating Plate	146-94-016	146-94-016	146-94-016	146-94-016	146-94-016	146-94-016	146-94-016	146-94-016	146-94-016
4	Base Insulation	Base Sides (2)	146-14-020	146-14-130	146-14-130	146-14-130	146-14-130	146-14-130	146-14-130	146-14-130
		Base Front	146-14-112	146-14-113	146-14-114	146-14-115	146-14-116	146-14-117	146-14-118	146-14-119
		Base Rear	146-14-122	146-14-123	146-14-124	146-14-125	146-14-126	146-14-127	146-14-128	146-14-129
5	Base Baffle	425-00-642	425-00-643	425-00-644	425-00-645	425-00-646	425-00-647	425-00-648	425-00-649	
6	Base	425-00-662	425-00-663	425-00-664	425-00-665	425-00-666	425-00-667	425-00-668	425-00-669	
7	Jacket Tie Bar	425-00-652	425-00-653	425-00-654	425-00-655	425-00-656	425-00-657	425-00-658	425-00-659	
8	Push Nipple	433-00-976	433-00-976	433-00-976	433-00-976	433-00-976	433-00-976	433-00-976	433-00-976	
9	Jacket, Left Side Panel	425-00-900	425-00-900	425-00-900	425-00-900	425-00-900	425-00-900	425-00-900	425-00-900	
10	Knob, Service Door (Pair)	137-02-153	137-02-153	137-02-153	137-02-153	137-02-153	137-02-153	137-02-153	137-02-153	
11	Jacket, Service Door	425-00-912	425-00-913	425-00-914	425-00-915	425-00-916	425-00-917	425-00-918	425-00-919	
12	Jacket, Intermediate Panel	425-00-812	425-00-813	425-00-814	425-00-815	425-00-816	425-00-817	425-00-818	425-00-819	
13	Jacket, Front Panel	425-00-810	425-00-811	425-00-804	425-00-805	425-00-806	425-00-807	425-00-808	425-00-809	
14	1/4-in. Tie Rod and Nut	146-05-008	146-05-001	146-05-002	146-05-051	146-05-053	146-05-005	146-05-007	146-05-009	
15	Boiler Section, Left End	410-00-020	410-00-020	410-00-020	410-00-020	410-00-020	410-00-020	410-00-020	410-00-020	
16	Boiler Section, Middle	410-00-022	410-00-022	410-00-022	410-00-022	410-00-022	410-00-022	410-00-022	410-00-022	
17	Jacket, Top Panel	425-00-842	425-00-843	425-00-844	425-00-845	425-00-846	425-00-847	425-00-848	425-00-849	
18	Draft Diverter	425-00-672	425-00-673	425-00-674	425-00-675	425-00-676	425-00-677	425-00-678	425-00-679	
19	Boiler Section, Right End	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021	410-00-021	
20	Jacket, Back Panel	425-00-902	425-00-903	425-00-904	425-00-905	425-00-906	425-00-907	425-00-908	425-00-909	
*	Jacket Complete	425-70-992	425-70-993	425-70-994	425-70-995	425-70-996	425-70-997	425-70-998	425-70-990	
*	Block Assembly (8, 14, 15, 16, 19)	410-00-213	410-00-313	410-00-413	410-00-513	410-00-613	410-00-713	410-00-813	410-00-913	
*	Combustible Floor Plate	146-14-031	146-14-031	146-14-031	146-14-031	146-14-031	146-14-032	146-14-032	146-14-032	
*	Cerafelt Gasket	146-14-018	146-14-018	146-14-018	146-14-018	146-14-018	146-14-018	146-14-018	146-14-018	
21	Vent Damper	146-28-011	146-28-001	146-28-002	146-28-002	146-28-003	146-28-003	146-28-003	146-28-003	
*	Base Assembly (4, 5, 6)	433-00-662	433-00-663	433-00-664	433-00-665	433-00-666	433-00-667	433-00-668	433-00-669	

\* Not illustrated.

# REPAIR PARTS

→ FOR USE WITH NATURAL GAS ONLY

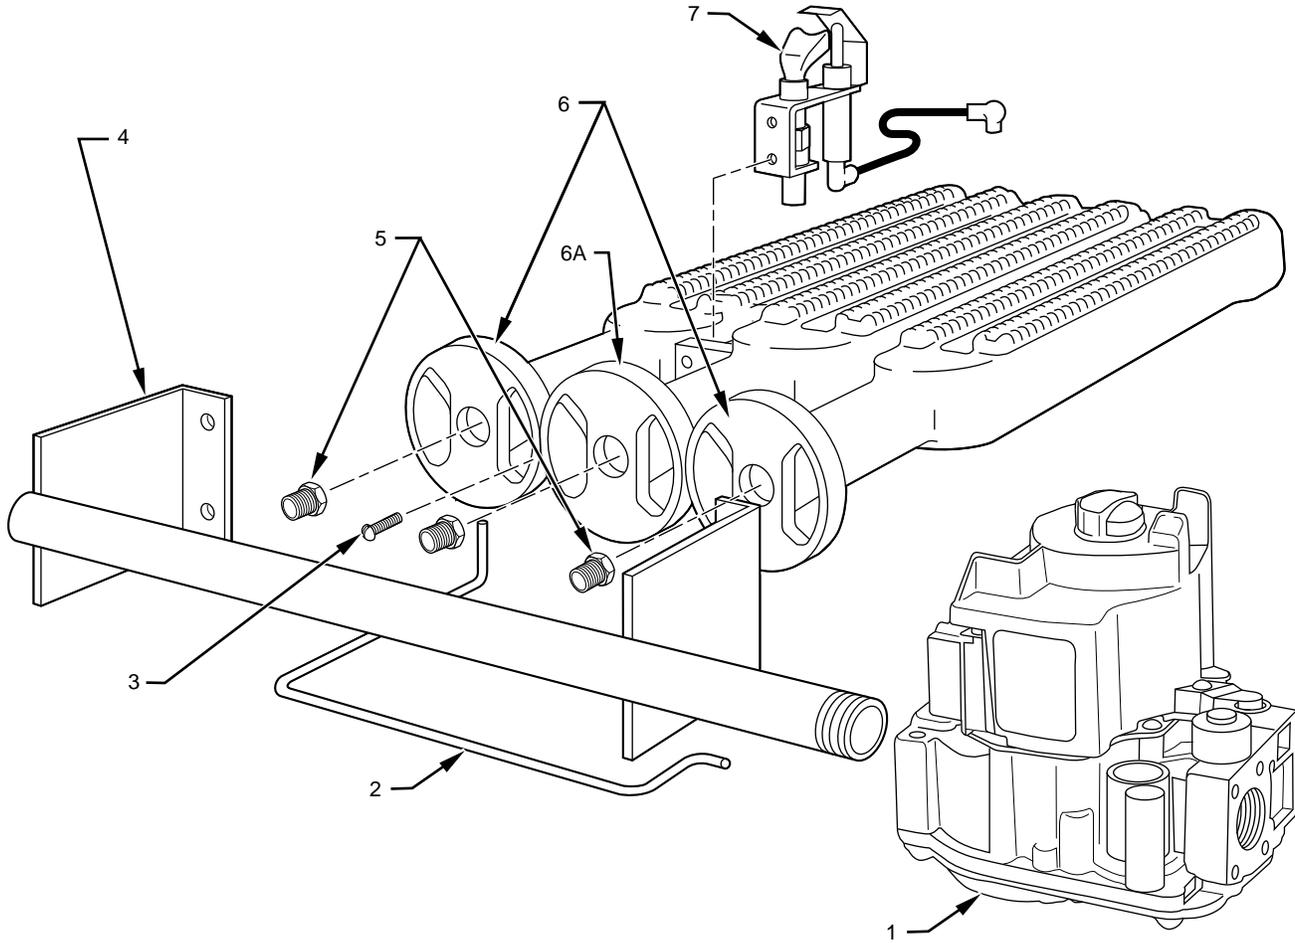

A98237

## Gas Burners and Manifold Parts This is a Repair Parts List—Not a Packing List

KEY NO.	DESCRIPTION	PART NO.							
		2 Section	3 Section	4 Section	5 Section	6 Section	7 Section	8 Section	9 Section
<b>ELECTRONIC INTERMITTENT IGNITION (Shown)</b>									
1	24-v Gas Valve, Electronic Intermittent Ignition	146-62-052	146-62-052	146-62-052	146-62-052	146-62-058	146-62-058	146-62-058	146-62-058
2	Pilot Tube	146-15-005	146-15-005	146-15-005	146-15-005	146-15-005	146-15-005	146-15-006	146-15-006
3	10-32 X 1/2-in. Hex Head Screw	146-95-307	146-95-307	146-95-307	146-95-307	146-95-307	146-95-307	146-95-307	146-95-307
4	Gas Manifold	146-16-032	146-16-033	146-16-034	146-16-035	146-16-013	146-16-014	146-16-015	146-16-016
5	Main Burner Orifice*	146-15-031	146-15-031	146-15-031	146-15-031	146-15-035	146-15-035	146-15-035	146-15-035
6	Main Burner†	—	146-15-523	146-15-523	146-15-523	146-15-523	146-15-523	146-15-523	146-15-523
6A	Main Burner with Pilot Bracket	146-15-522	146-15-522	146-15-522	146-15-522	146-15-522	146-15-522	146-15-522	146-15-522
7	Pilot Burner	146-62-095	146-62-092	146-62-092	146-62-092	146-62-092	146-62-092	146-62-092	146-62-092
‡	Air Shutter (1 per Burner)	425-00-418	425-00-418	425-00-418	425-00-418	425-00-418	425-00-418	425-00-418	425-00-418
‡	Air Shutter Spring (1 per Burner)	146-34-061	146-34-061	146-34-061	146-34-061	146-34-061	146-34-061	146-34-061	146-34-061
‡	Rollout Shield	425-00-932	425-00-933	425-00-934	425-00-935	425-00-936	425-00-937	425-00-938	425-00-939
<b>ALTERNATE PARTS FOR CONTINUOUS PILOT — 24V</b>									
1	24-v Gas Valve, Continuous Pilot	146-62-051	146-62-051	146-62-051	146-62-051	146-62-060	146-62-060	146-62-060	146-62-060
3	10-32 X 1/2-in. Hex Head Screw (2 req'd)	146-95-307	146-95-307	146-95-307	146-95-307	146-95-307	146-95-307	146-95-307	146-95-307
7	Pilot Burner	146-62-053	146-62-053	146-62-053	146-62-053	146-62-053	146-62-053	146-62-053	146-62-053
8	Thermocouple	146-62-037	146-62-037	146-62-039	146-62-039	146-62-039	146-62-039	146-62-036	146-62-036

Quantity is 1 unless otherwise noted.


\* Requires 1 less than the number of sections.

† Requires 2 less than the number of sections.

‡ Not illustrated.

# REPAIR PARTS

→ FOR USE WITH LIQUIFIED PETROLEUM GAS ONLY

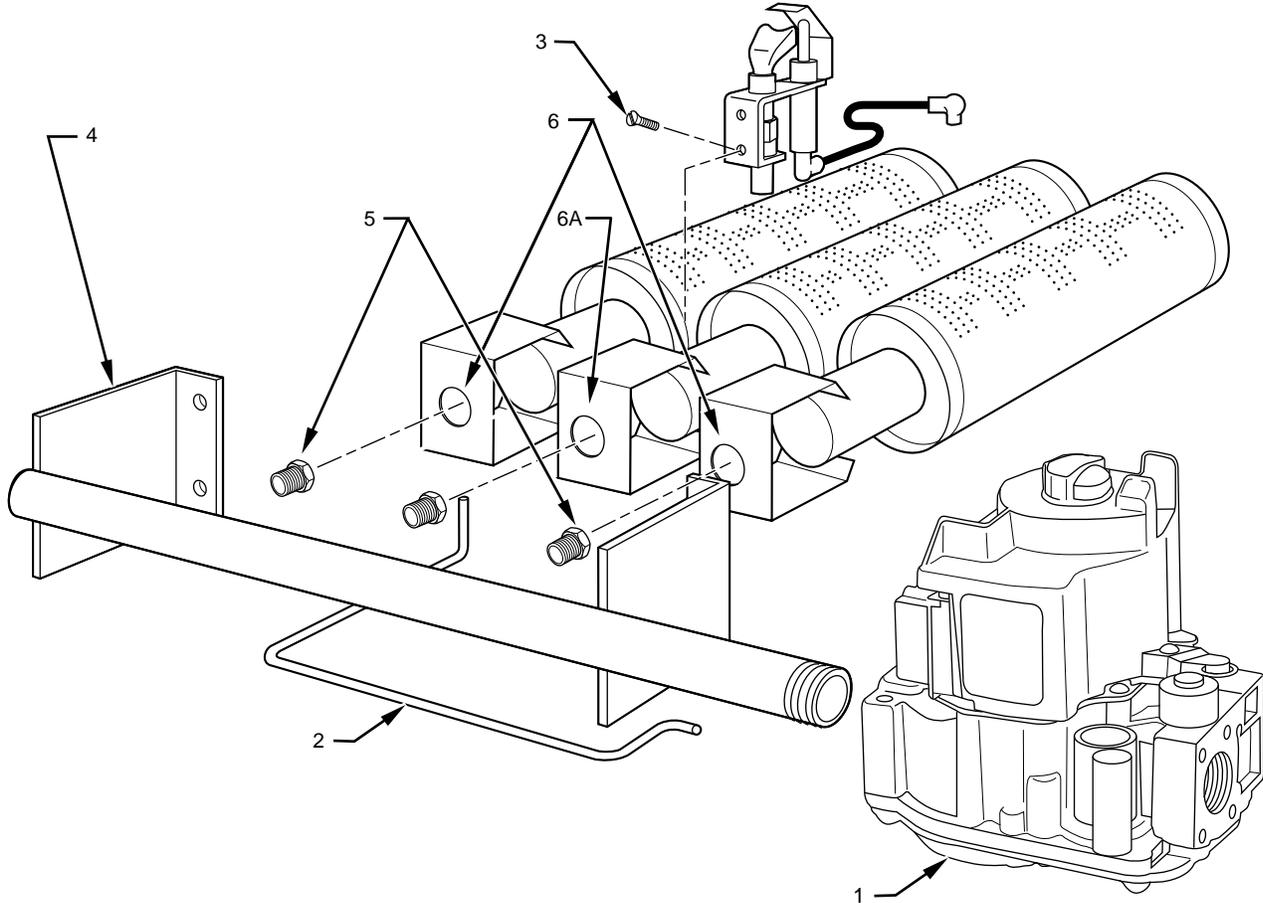

A98238

## Liquefied Petroleum Gas Burners and Manifold Parts This is a Repair Parts List—Not a Packing List

KEY NO.	DESCRIPTION	PART NO.							
		2 Section	3 Section	4 Section	5 Section	6 Section	7 Section	8 Section	9 Section
<b>ELECTRONIC INTERMITTENT IGNITION (Shown)</b>									
1	24-v Gas Valve, Electronic Intermittent Ignition	146-62-062	146-62-062	146-62-062	146-62-062	146-62-059	146-62-059	146-62-059	146-62-059
2	Pilot Tube	146-15-005	146-15-005	146-15-005	146-15-005	146-15-005	146-15-005	146-15-006	146-15-006
3	10-32 X 3/16-in Hex Head Screw	146-95-301	146-95-301	146-95-301	146-95-301	146-95-301	146-95-301	146-95-301	146-95-301
4	Gas Manifold	146-16-009	146-16-010	146-16-011	146-16-012	146-16-013	146-16-014	146-16-015	146-16-016
5	Main Burner Orifice*	146-15-036	146-15-036	146-15-036	146-15-036	146-15-036	146-15-036	146-15-036	146-15-036
6	Main Burner†	—	146-15-528	146-15-528	146-15-528	146-15-528	146-15-528	146-15-528	146-15-528
6A	Main Burner with Pilot Bracket	146-15-529	146-15-529	146-15-529	146-15-529	146-15-529	146-15-529	146-15-529	146-15-529
7	Pilot Burner	146-62-093	146-62-094	146-62-094	146-62-094	146-62-094	146-62-094	146-62-094	146-62-094
‡	Rollout Shield	425-00-932	425-00-933	425-00-934	425-00-935	425-00-936	425-00-937	425-00-938	425-00-939
<b>ALTERNATE PARTS FOR CONTINUOUS PILOT — 24V</b>									
1	24-v Gas Valve, Continuous Pilot	—	146-62-061	146-62-061	146-62-061	146-62-061	146-62-061	146-62-061	146-62-061
3	10-32 X 3/16-in. Hex Head Screw (2 req'd)	146-95-301	146-95-301	146-95-301	146-95-301	146-95-301	146-95-301	146-95-301	146-95-301
7	Pilot Burner	—	146-62-096	146-62-096	146-62-096	146-62-096	146-62-096	146-62-096	146-62-096
8	Thermocouple	—	146-62-037	146-62-039	146-62-039	146-62-039	146-62-039	146-62-036	146-62-036

Quantity is 1 unless otherwise noted.


\* Requires 1 less than the number of sections.

† Requires 2 less than the number of sections.

‡ Not illustrated.

# REPAIR PARTS

## → BOILER CONTROLS AND PIPING

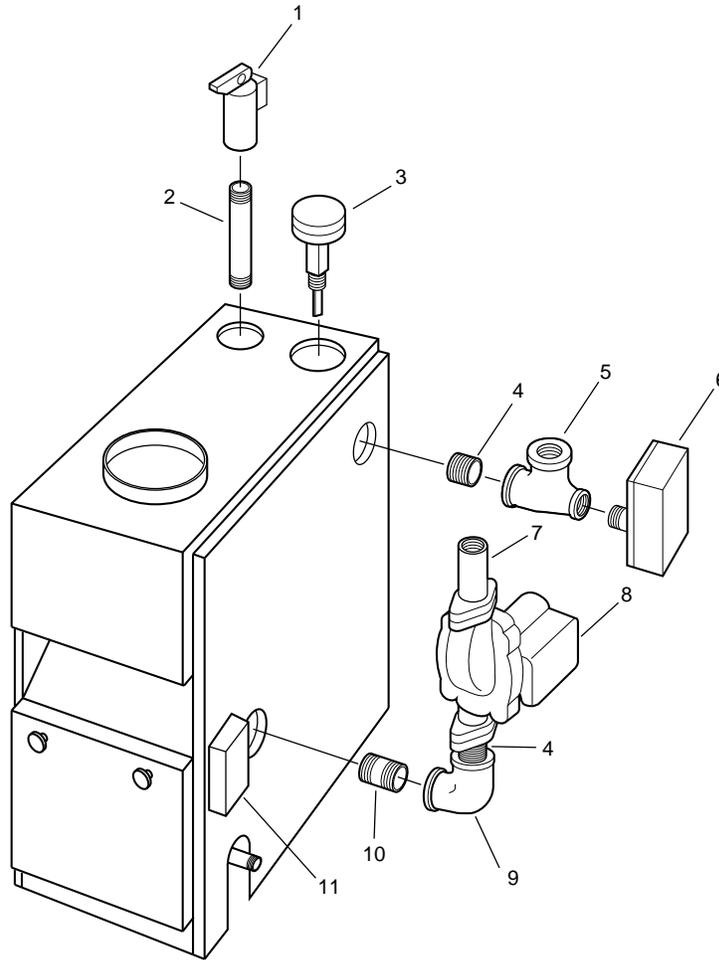

A96135

KEY NO.	DESCRIPTION	PART NO.
1	3/4-in. ASME Relief Valve	146-22-011
2	3/4-in. X 7-1/2-in. Nipple	146-07-041
3	Temperature Pressure Gage—5-in. Stem	146-23-009
4	1-1/4-in. X 2-1/2-in. Nipple	146-07-044
5	1-1/4-in. X 3/4-in. X 1-1/4-in Tee	146-93-049
6	Aquastat Relay	433-00-522
*	Isolation Valve Set—Taco	146-26-048
*	Isolation Valve Set—Grundfos	146-26-046
7	Cast Iron Flange Set—Taco	146-26-049
*	Cast Iron Flange Set—Grundfos	146-26-050
8	Taco 007 Circulator	146-26-047
*	Grundfos UP15-42F Circulator	146-26-045
9	1-1/4-in. Ell	146-93-042
10	1-1/4-in. X 3-1/2-in Nipple	146-07-008
11	Intermittent Pilot Control, Natural Gas	146-62-303
*	Intermittent Pilot Control, Propane Gas	146-62-071
*	Rollout Switch	146-29-002
*	Spill Switch (36TX16-6281) 340°F	146-60-001
*	4-in. Vent Damper (with 3-in. Adaptor)	146-28-011
*	5-in Vent Damper	146-28-001
*	6-in. Vent Damper	146-28-002
*	7-in. Vent Damper	146-28-003
*	400°F Black Silicone Rubber Adhesive Sealant (10.3 oz cartridge)	146-06-020
*	Vent Damper Operator (Motor)	146-28-006

\* Not illustrated.