KGAVT0901CVT
KGAVT1001CVT

CONCENTRIC VENT TERMINATION KITS

EXPORT

Installation Instructions

c UL LISTED

3TEP

NOTE: Read the entire instruction manual before starting the installation. **Keep these instructions with the furnace.**

SAFETY CONSIDERATIONS

Installing and servicing heating equipment can be hazardous due to gas and electrical components. Only trained and qualified personnel should install, repair, or service heating equipment.

Untrained personnel can perform basic maintenance functions such as cleaning and replacing air filters. All other operations must be performed by trained service personnel. When working on heating equipment, observe precautions in the literature, on tags, and on labels attached to or shipped with the unit, and other safety precautions that may apply.

Follow all safety codes. In the United States, follow all safety codes including the National Fuel Gas Code (NFGC) NFPA 54/ANSI Z223.1-2006.

Wear safety glasses and work gloves. Have a fire extinguisher available during start-up, adjustment procedures, and service calls.

Recognize safety information. This is the safety-alert symbol ⚠ . When you see this symbol on the furnace and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, CAUTION, and NOTE. The words DANGER, WARNING, and CAUTION are used with the safety-alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies hazards which could result in personal injury or death. CAUTION is used to identify unsafe practices which would result in minor personal injury, or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

⚠ WARNING

ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Before beginning any installation, be sure the main electrical disconnect switch is in the OFF position and a lockout tag is installed.

INTRODUCTION

This instruction covers installation of the concentric vent termination kits Part No. KGAVT0901CVT (2 in. / 51 mm) and KGAVT1001CVT (3 in. / 76 mm) on all gas-fired condensing furnaces. Use vent and termination kit combinations as stated in the furnace Installation and Start-Up Literature.

NOTE: If these instructions differ from those packaged with the furnace, follow these instructions.

DESCRIPTION AND USAGE

Two concentric combustion-air and vent pipe termination kits are available. The 2-in. (51 mm) kit Part No. KGAVT0901CVT can be used for 1-, 1-1/2, 2-, or 2-1/2 in. (25-, 38-, 51-, or 64 mm) diameter pipe systems. The 3-in. (76 mm) kit Part No. KGAVT1001CVT is for 2-1/2 or 3-in. (64 or 76 mm) diameter pipe systems. (See Fig. 3 and 6 for different applications.) Both combustion-air and vent pipes must attach to the termination kit. The termination kit must terminate outside the structure and must be installed as in one of the installations shown in Fig. 3, 6, 8, or 9. Roof termination is preferred since it is less susceptible to damage, reduces the chance of intaking contaminants, and has less visible vent vapors.

⚠ WARNING

UNIT DAMAGE AND PROPERTY DAMAGE HAZARD

Failure to follow this warning could result in unit damage, property damage, personal injury or death.

These kits are to be used only for terminating condensing Category IV vent furnaces. DO NOT use kits to terminate Category I, II, or III vent furnaces.

Field-supplied pipe and fittings are required to complete the installation.

In the USA, combustion-air and vent pipe fittings must conform to American National Standards Institute (ANSI) and American Society for Testing and Materials (ASTM) standards D1785 (schedule-40 PVC), D2665 (PVC-DWV), D2441 (SDR-21 and SDR-26 PVC), D2661 (ABS-DWV), or F628 (schedule-40 ABS). Pipe cement and primer must conform to ASTM standards D2564 (PVC) or D2235 (ABS).

INSTALLATION

Step 1 — ROOF TERMINATION

1. Determine pipe diameter from tables in furnace Installation and Start-Up Instructions.
2. Determine appropriate concentric vent termination kit for pipe diameter selected. See Description and Usage section.
3. Determine best location for termination kit.

NOTE: Roof termination is preferred since it is less susceptible to damage, reduces the chance of intaking contaminants, and has less visible vent vapors.

4. Cut 1 hole (4-in. / 102 mm dia.) for KGAVT0901CVT (2-in. / 51 mm) kit, or 1 hole (5-in. / 127 mm dia.) for KGAVT1001CVT (3-in. / 76 mm) kit.
   a. Plastic venting systems shall not pass through rated fire separations.
5. Partially assemble concentric vent termination kit. Clean and cement using procedures found in furnace Installation and Start-Up Instructions.
   b. Cement Y concentric fitting to larger diameter kit pipe. (See Fig. 1.)
   c. Cement rain cap to smaller diameter kit pipe. (See Fig. 1.)

NOTE: Instead of cementing the smaller pipe to the rain cap, a field-supplied stainless steel screw may be used to secure the 2 components together when field disassembly is desired for cleaning. (See Fig. 4.)

⚠ WARNING

CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death.

When using alternate screw assembly method, drill clearance hole in rain cap and pilot hole in vent pipe for screw size being used. Failure to drill adequate holes may cause cracking of PVC components, allowing combustion products to be recirculated.

⚠ WARNING

CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death.

Do not operate the furnace with rain cap removed or recirculation of combustion products may occur. Water may also collect inside larger combustion-air pipe and flow to the burner enclosure.

6. Install Y concentric fitting pipe assembly through structure's hole and field-supplied roof boot/flashing.

Do not allow insulation or other materials to accumulate inside pipe assembly when installing through hole.

7. Secure assembly to roof structure as shown in Fig. 5 using field-supplied metal strapping or equivalent support material.

NOTE: Ensure termination height is above the roof surface or anticipated snow level (1 ft. (0.3 M) in USA.

NOTE: In the USA, if assembly is too short to meet height requirement, the 2 pipes supplied in the kit may be replaced by using same diameter, field-supplied SDR-26 PVC (D2241) pipe. Do not extend dimension D more than 60 in. (1524 mm)(See Fig. 2.)


⚠ CAUTION

UNIT MAY NOT OPERATE HAZARD

Failure to follow this caution may result in intermittent unit operation.


DO NOT use field-supplied couplings to extend pipes. Airflow restriction will occur and the furnace pressure switch may cause intermittent operation.

8. Install rain cap and small diameter pipe assembly in roof penetration assembly. Ensure small diameter pipe is cemented and bottomed in Y concentric fitting.
9. Cement furnace combustion-air and vent pipes to concentric vent termination assembly. See Fig. 5 for proper pipe attachment.
10. Operate furnace through 1 heat cycle to ensure combustion-air and vent pipes are properly connected to concentric vent termination connections.

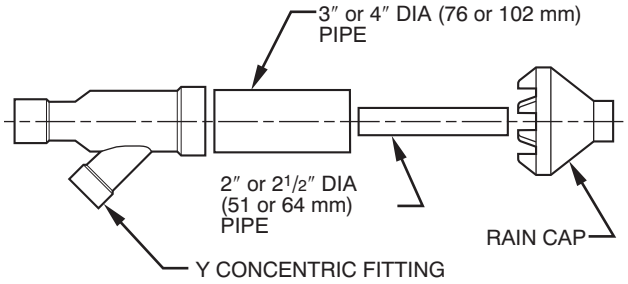

A08481

Fig. 1 - Kit Components

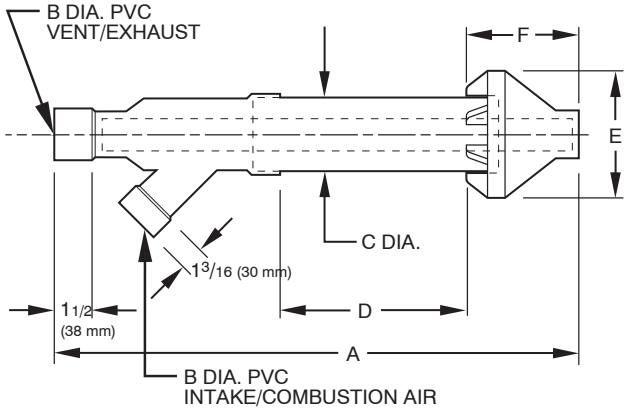

A08482A

Fig. 2 - Concentric Vent Dimensional Drawing

Table 1 – Kit Contents

DESCRIPTION	KIT PART NO. AND QUANTITY	
	KGAVT0901CVT	KGAVT1001CVT
2–In. (51 mm) Rain Cap	1	—
3–In. (76 mm) Rain Cap	—	1
2–In. (51 mm) Dia. Pipe 31–5/8 in. (803 mm) long	1	—
3–In. (51 mm) Dia. Pipe 19–1/2 in. (495 mm) long	1	—
2–1/2 In. (64 mm) Dia. Pipe 37–1/8 in. (943 mm) long	—	1
4–In. (102 mm) Dia. Pipe 24 in. (610 mm) long	—	1
2–In. (51 mm) Y Concentric Fitting	1	—
3–In. (76 mm) Y Concentric Fitting	—	1
Installation Instructions	1	1

Table 2 – Dimensions - In. (mm)

KIT PART NO.	A*	B	C	D	E	F
KGAVT0901CVT	33–3/8 (848)	2 (51)	3–1/2 (89)	16–5/8 (422)	6–1/4 (159)	5–3/4 (146)
KGAVT1001CVT	38–7/8 (987)	3 (76)	4–1/2 (114)	21–1/8 (537)	7–3/8 (187)	6–1/2 (165)

*Dimension A will change accordingly as dimension D is lengthened or shortened.
In the USA, Dimension D may be lengthened to 60 in. (1524 mm) maximum. Dimension D may also be shortened by cutting the pipes provided in the kit to 12 in. (305 mm) minimum.

Step 2 — SIDE WALL TERMINATION

Sidewall Vent Installation

1. Determine pipe diameter from tables in furnace Installation and Start-Up Instructions.
2. Determine appropriate concentric vent termination kit for pipe diameter selected. See Description and Usage section.
3. Determine best location for termination kit. (See Fig. 6.)

NOTE: Considerations for the following should be used when determining an appropriate location for the termination kit:


a. Termination kit positioned where the vent vapors will not damage plants/shrubs or air conditioning equipment.

b. Termination kit positioned so it will not be affected by wind eddy that may allow recirculation of combustion products, or airborne leaves, or light snow.

c. Termination kit positioned where it will not get damaged or be subjected to foreign objects, such as stones, balls, etc.


d. Termination kit positioned where the vent vapors will not be objectionable.

4. Cut 1 hole (4-in. / 102 mm dia.) for KGAVT0901CVT (2-in. / 51mm) kit, or 1 hole (5-in. / 127 mm diameter) for KGAVT1001CVT (3-in. / 76 mm) kit.
   a. Plastic venting systems shall not pass through rated fire separations.
5. Partially assemble concentric vent termination kit. Clean and cement using procedures found in furnace Installation and Start-Up Instructions.
   a. Cement Y concentric fitting to larger kit pipe.
   b. Cement rain cap to smaller diameter kit pipe.

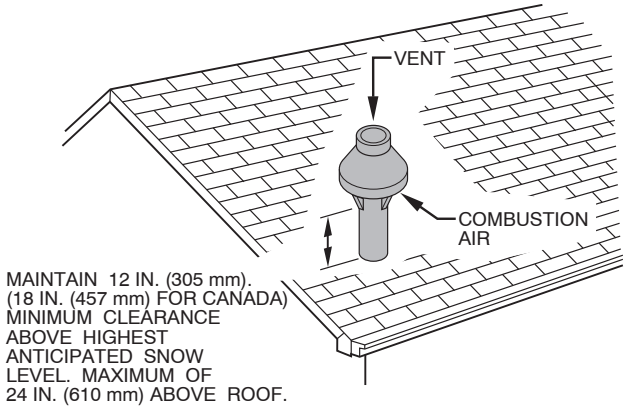

A93054

Fig. 3 - Concentric Vent and Combustion-Air Termination, Roof Termination (Preferred)

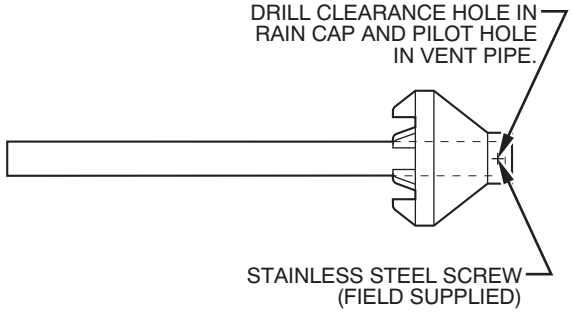

A93390

Fig. 4 - Rain Cap to Vent Pipe Alternate Assembly

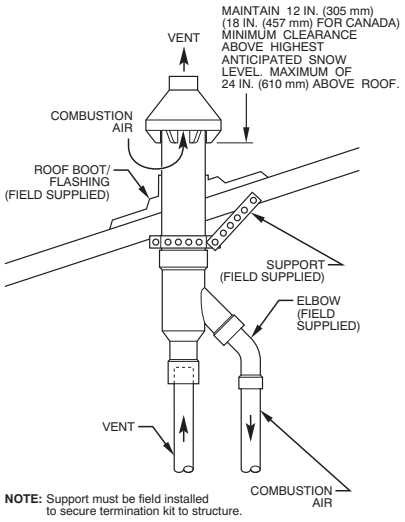


Fig. 5 - Concentric Vent Roof Installation

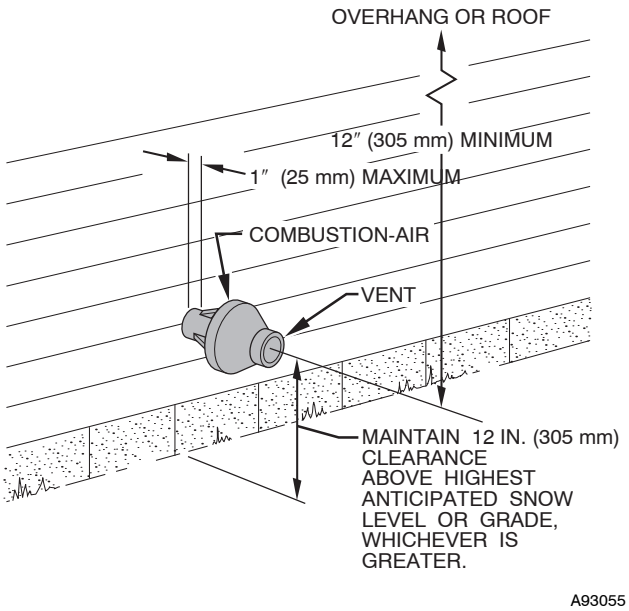


Fig. 6 - Concentric Vent and Combustion-Air Side Wall Termination

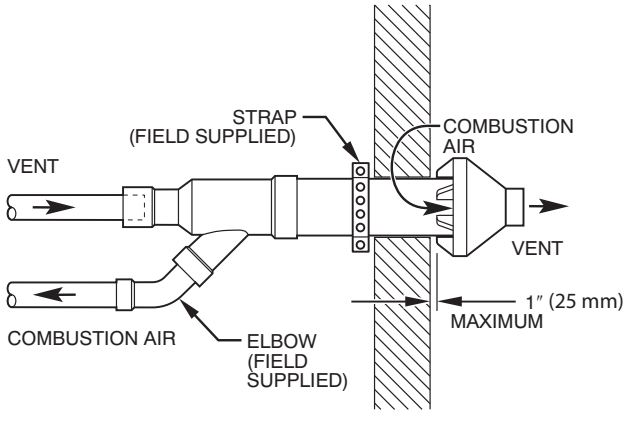


Fig. 7 - Concentric Vent Side Wall Attachment

NOTE: Instead of cementing smaller pipe to the rain cap, a field-supplied stainless steel screw may be used to secure the 2 components together when field disassembly is desired for cleaning. (See Fig. 4.)

⚠ WARNING

CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death.

Failure to drill adequate holes may cause cracking of PVC components, allowing combustion products to be recirculated. When using alternate screw assembly method, drill clearance hole in rain cap and pilot hole in vent pipe for screw size being used.

⚠ WARNING

CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in unit damage, personal injury or death.

Do not operate furnace with rain cap removed or recirculation of combustion products may occur. Water may also collect inside larger combustion-air pipe and flow to the burner enclosure.

6. Install Y concentric fitting and pipe assembly through structure's hole.

NOTE: Do not allow insulation or other materials to accumulate inside pipe assembly when installing through hole.

7. Install rain cap and small diameter pipe assembly in Y concentric fitting and large paper assembly. Ensure small diameter pipe is bottomed and cemented in Y concentric fitting.
8. Secure assembly to structure as shown in Fig. 7 using field-supplied metal strapping or equivalent support material.

NOTE: Ensure termination location clearance dimensions are as shown in Fig. 6.

NOTE: In USA, if assembly needs to be extended to allow side wall thickness requirement, the 2 pipes supplied in the kit may be replaced by using same diameter, field-supplied SDR-26 PVC (D2241) pipe. Do not extend dimension D more than 60 in. (1524 mm) (See Fig. 2.)

⚠ CAUTION

UNIT MAY NOT OPERATE HAZARD


Failure to follow this caution may result in intermittent unit operation.

DO NOT use field-supplied couplings to extend pipes. Airflow restriction will occur and the furnace pressure switch may cause intermittent operation.

9. Cement furnace combustion-air and vent pipes to concentric vent termination assembly. See Fig. 7 for proper pipe attachment.
10. Operate furnace through 1 heat cycle to ensure combustion-air and vent pipes are properly connected to concentric vent termination connections.


Step 3 — MULTI-VENTING TERMINATIONS

When 2 or more direct vent furnaces are vented near each other, each furnace must be individually vented. (See Fig. 8 and 9.) NEVER common vent or breach vent this furnace. When 2 or more direct vent furnaces are vented near each other, 2 vent terminations may be installed as shown in Fig. 8 and 9, but next to vent termination must be at least 36 in. (914 mm) away from first 2 termination. It is important that vent terminations be made as shown to avoid recirculation of flue gases. Dimension A in Fig. 8 and 9 represents distance between pipes or rain shields, as touching or 2-in. (51 mm) maximum separation.

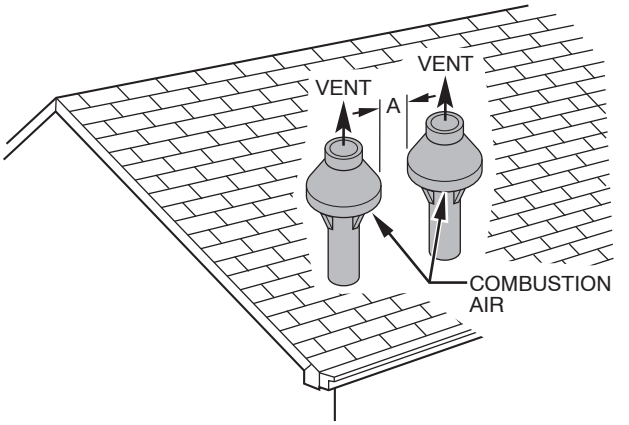

A93056

Fig. 8 - Concentric Vent and Combustion-Air Roof Termination (Dimension A as Touching or 2-in. (51 mm) Maximum Separation)

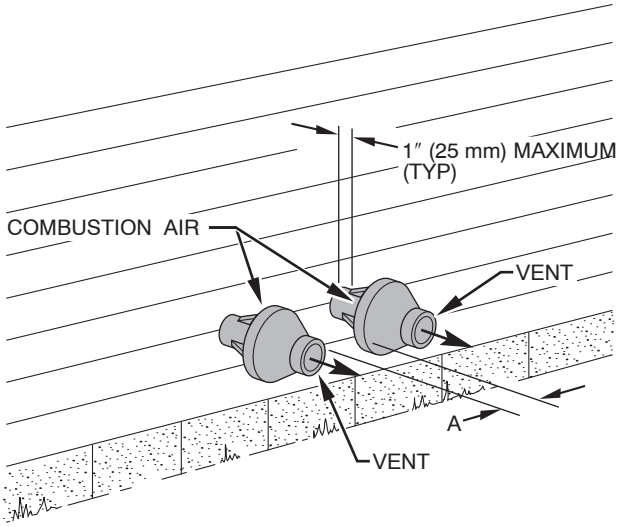

A93057

Fig. 9 - Concentric Vent and Combustion-Air Roof Termination (Dimension A as Touching or 2-in. (51 mm) Maximum Separation)

Copyright 2013 CAC / BDP ● 7310 W. Morris St. ● Indianapolis, IN 46231 . Edition Date: 02/13

Catalog No: AG–KGAVT–01

Manufacturer reserves the right to change, at any time, specifications and designs without notice and without obligations.

Replaces: New