




KVAAC0101DFT DECORATIVE FINISH RING

INSTALLATION INSTRUCTIONS

⚠ WARNING

It is recommended to wear safety glasses and gloves while performing these instructions.

1. Before installing the installation brackets, using the provided #8-18 x 0.375 in. screws, install the 4 springs provided with this kit as illustrated below.
 2. Install the brackets. Refer to the unit's installation guide for details.
 3. After the unit and drywall ceiling have been installed, push the decorative finishing ring in place.
- 💡 Prior to painting, clean the metal housing using solvent and the plastic decorative ring using water.

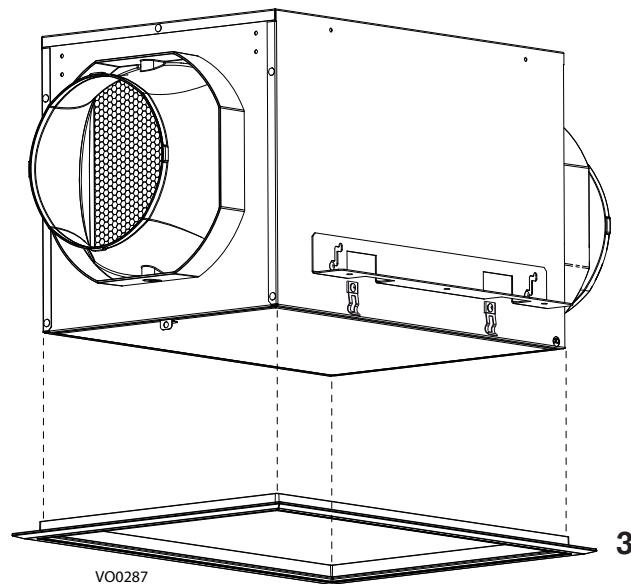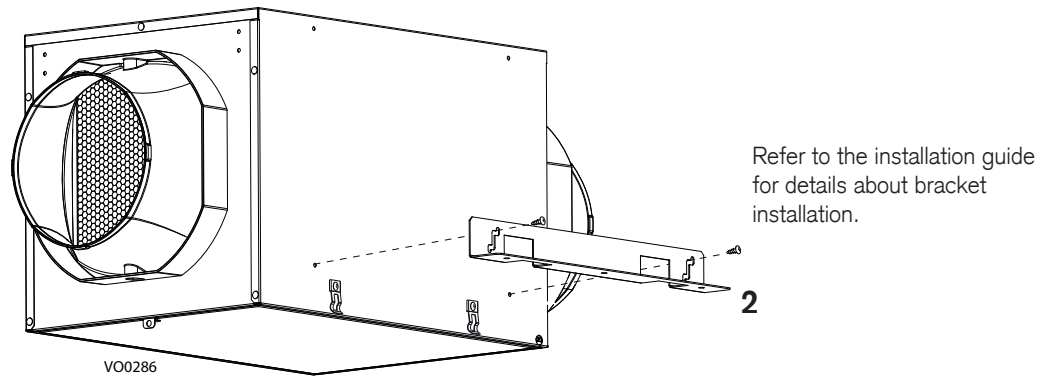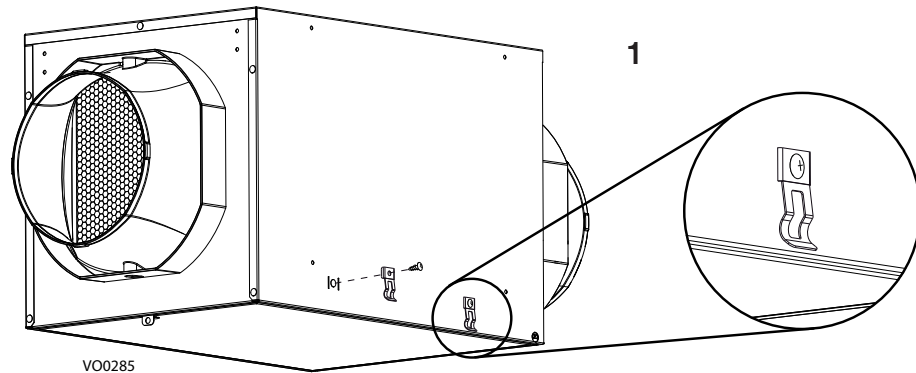

ANILLO DE ACABADO DECORATIVO KVAAC0101DFT

INSTRUCCIONES DE INSTALACIÓN

⚠ ADVERTENCIA

Se aconseja usar lentes y guantes de seguridad al ejecutar estas instrucciones.

1. Antes de instalar los soportes de instalación, instale los 4 resortes provistos con este kit, como se ilustra más adelante, utilizando para ello los tornillos n° 8-18 X 0,375 pulg.
 2. Instale los soportes. Consulte la guía de instalación del aparato para más detalles.
 3. Una vez que se hayan instalado el aparato y el techo de panel de yeso, empuje el anillo de acabado decorativo hasta que quede en su lugar.
- 💡 Antes de pintar, limpie la carcasa metálica con un disolvente y el anillo decorativo de plástico con agua.

