

INSTRUCTIONS

Rework for N9MPD, Part Number 1176652

This kit is designed to install a Drain Tee and 3" Plug on 92%
N9MPD Series Furnaces

INTRODUCTION

These instructions cover installation of the Drain Tee, yellow cap, and 3 inch plug for N9MPD, 92% furnaces.

DESCRIPTION AND USAGE

Use this kit to install components on N9MPD. This kit contains the following items:

<i>Kit Part Numbers</i>		
Part	Description	Quantity
1171915	Drain Tee	1
1013470	3 inch Plug	1
	Yellow Cap	1



CAUTION

CUT HAZARD.

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs, use care and wear appropriate protective clothing and gloves when handling parts.

INSTALLATION

Step 1 - Remove hose and clamp from bottom of coupling (Figure 1)

- Squeeze clamp tabs together and pull the hose off gently. (Leave clamp on the end of hose.)

Step 2 - Loosen top clamp (Figure 1)

Step 3 - Insert Drain Tee (Figure 2)

- Slide the tee into the coupling until it touches the small lip inside. (Do not force the tee into the coupling.)
- Tighten the clamp screw securely.

Step 4 - Install yellow cap on bottom of coupling (Figure 2)

Step 5 - Reinstall clamp and hose on bottom fitting of Drain Tee (Figure 2)

- Slide hose with clamp onto the bottom fitting of the Drain Tee.
- Squeeze clamp and slide up to the top of the hose, ensuring the hose is airtight on the coupling.

Step 6 - Insert 3" Plug in left side for top vent applications (Figure 3)

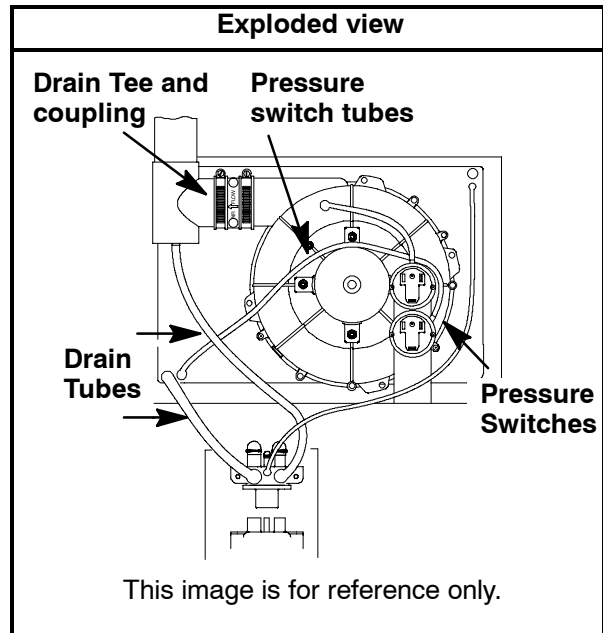


Figure 1

Hose and clamps

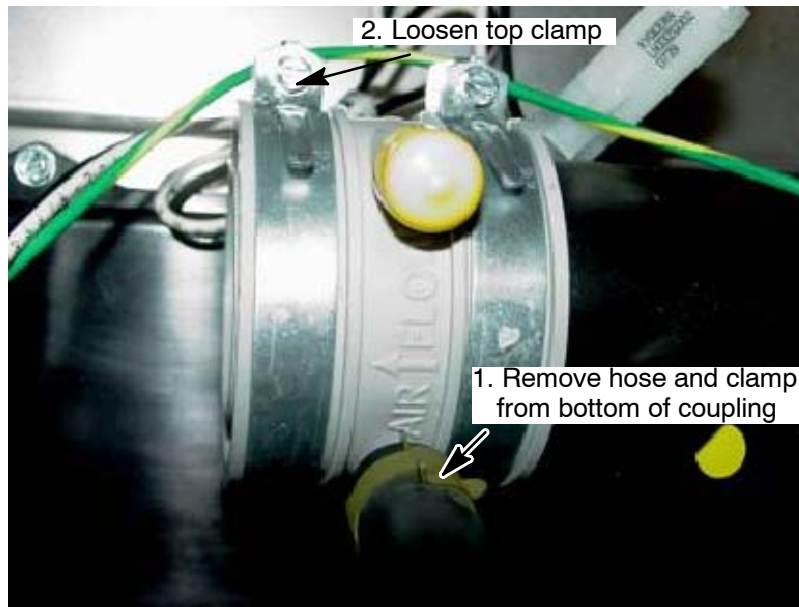


Figure 2

Drain Tee

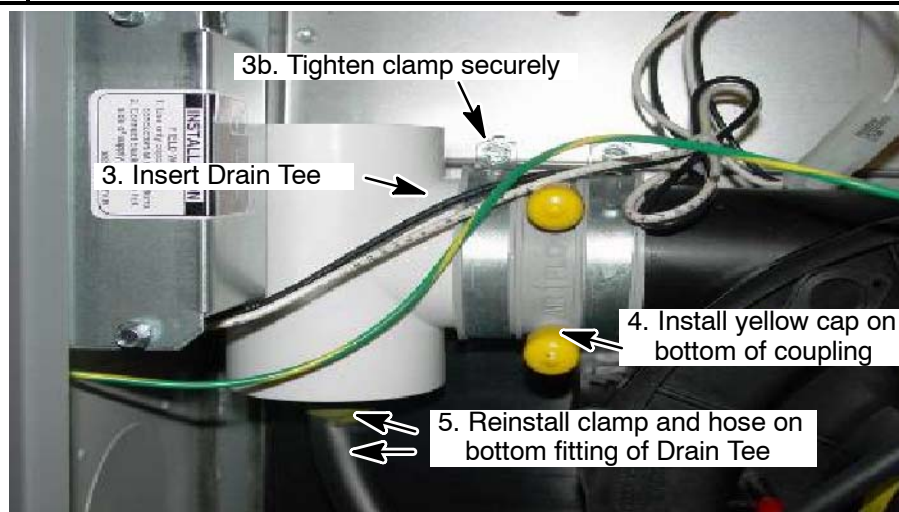


Figure 3

3 inch Plug

