



Diesel Generator Set



PARTS LIST MANUAL

For

69RG15

Generator Set Units

PID RG2051-2100 Series



PARTS LIST MANUAL

For

69RG15

Generator Set Units

PID RG2051-2100 Series

Table of Contents

Paragraph Number	Page
Introduction	1
RG Generator Set Configuration	2
Unidrive Assembly (PIDs RG2051 to RG2066)	4
Unidrive Assembly with Torsional Dampener (PID RG2068)	8
Frame Kit	12
Unit Mounting	14
Fuel System	16
Battery Kit	18
Air Filters	20
Exhaust System	21
Solid State Battery Charger (PIDS RG2051 to RG2058)	22
Solid State Battery Charger (PIDS RG2059 to RG2068)	24
Voltage Controller	25
Skins Kit	26
Labels and Decals	28
Voltage Kit (PIDs RG2051 to RG2058)	30
Voltage Kit (PIDs RG2059 to RG2068)	32
Coolant System	34
Control Box - PIDS RG2051 to RG2058	36
Control Box (PIDS RG2059 to RG2068)	40
Receptacle Box - PIDS RG2051 to RG2058	44
Receptacle Box - PIDS RG2059 to RG2068	46
Wire Harness	48
Index	Index-1

Introduction

Introduction

This parts list identifies service replacement parts for the Carrier Transicold Diesel-Driven Generator Set listed in the model chart below. This parts list does not include detailed replacement parts for the engine listed in the first chart below. Detailed parts identification for these items may be found in the applicable parts list.

The form numbers for the engine omit revision dash numbers. For example, the latest engine list may have a -01 added to the basic number to read 62-03459-01. Therefore, when forms are ordered the latest revision will be sent.

Manual Number	Engine Part Number	Equipment Covered	Type of Manual
62-11695	26-00136-13SV	V2203L-DI	Engine Parts List

Configuration Identification

Unit identification information is provided on a plate located on the back wall of the condenser section. The plate provides the unit model number, the unit serial number and the unit parts identification number (PID). The model number identifies the overall unit configuration, while the PID number provides information on specific optional equipment, factory provisioned to allow for field installation of optional equipment and differences in detailed parts.

Ordering Instructions

All orders and inquiries for parts must include: Parts Identification Number (PID), Model Number, Unit Serial Number, Part Number, Description of part as shown on list and quantity required.

For parts ordering and inquiries, go to the Contact Us page on the Carrier Container website:

<https://www.carrier.com/container-refrigeration/en/worldwide/locator/contact-us/>

Letter Designations

The following letter designations are used to classify parts throughout this list:

A/R = As Required

N/A = Not Available

NS = Not Shown in illustration

NSS = Not Sold Separately - order next higher assembly or kit


PID = Parts Identification Number - essential to identify unit configuration.

PL = Purchase Locally

SST = Stainless Steel - 300 Series unless otherwise specified.

SV = Suffix SV - added to part number designates service replacement part.


RG Generator Set Configuration

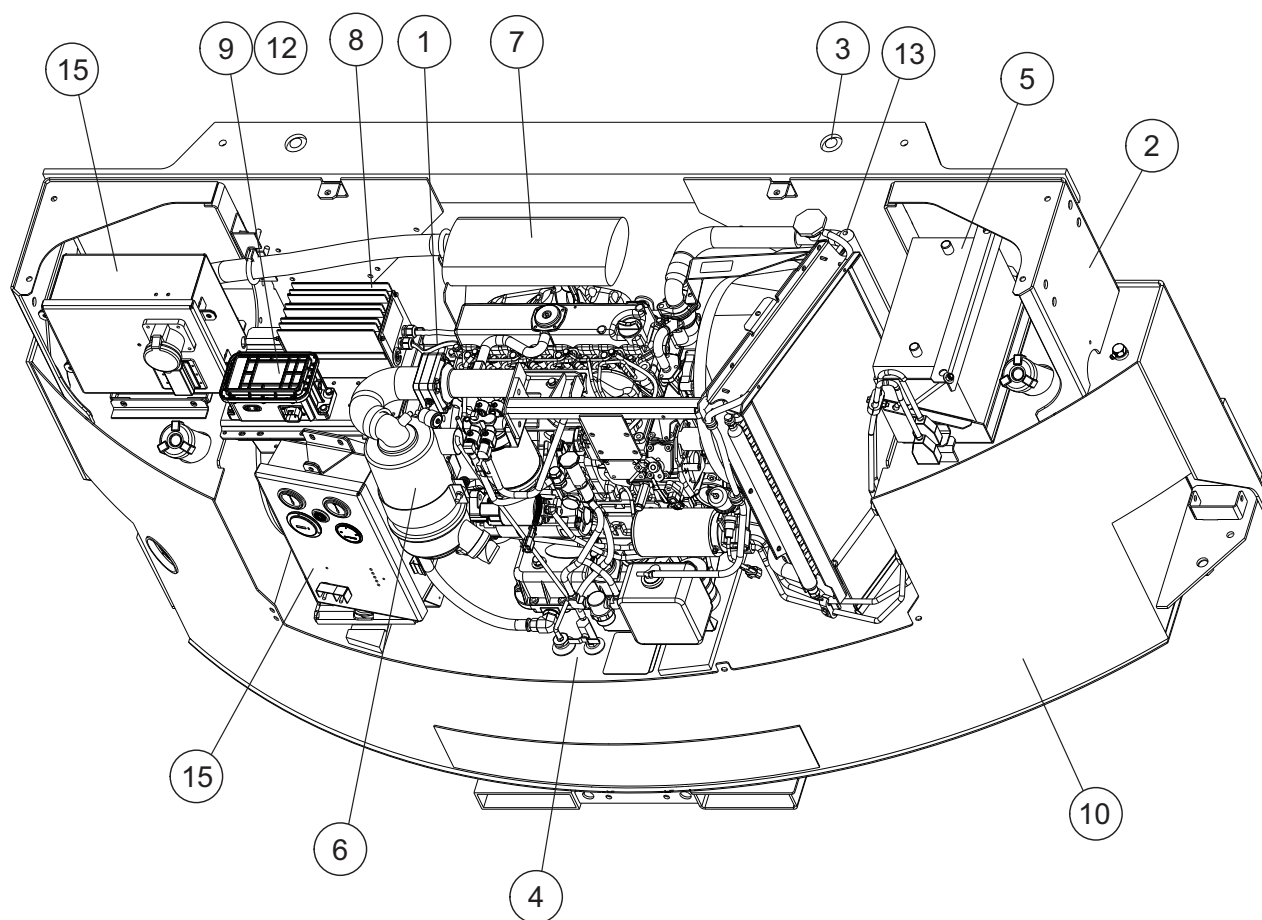

Item	Section Number	Description
1	Section 1	Unidrive Assembly (PIDs RG2050 to RG2066)
		Unidrive Assembly with Torsional Dampener (PIDs RG2068)
2	Section 2	Frame Kit
3	Section 3	Unit Mounting
4	Section 4	Fuel System
5	Section 5	Battery Kit
6	Section 6	Air Filters
7	Section 7	Exhaust System
8	Section 8	Solid State Battery Charger (PIDs RG2051 to RG2058)
		Solid State Battery Charger (PIDs RG2059 to RG2068)
9	Section 9	Voltage Controller
10	Section 10	Skins Kit
NS	Section 11	Labels
12	Section 12	Voltage Kit (PIDs RG2051 to RG2058)
		Voltage Kit (PIDs RG2059 to RG2068)

RG Generator Set Configuration		
13	Section 13	Coolant System
14	Section 14	Control Box (PIDs RG2051 to RG2058)
		Control Box (PIDs RG2059 to RG2068)
15	Section 15	Receptacle Box (PIDs RG2051 to RG2058)
		Receptacle Box (PIDs RG2059 to RG2068)
NS	Section 16	Wire Harness



1 Unidrive Assembly (PIDs RG2051 to RG2066)

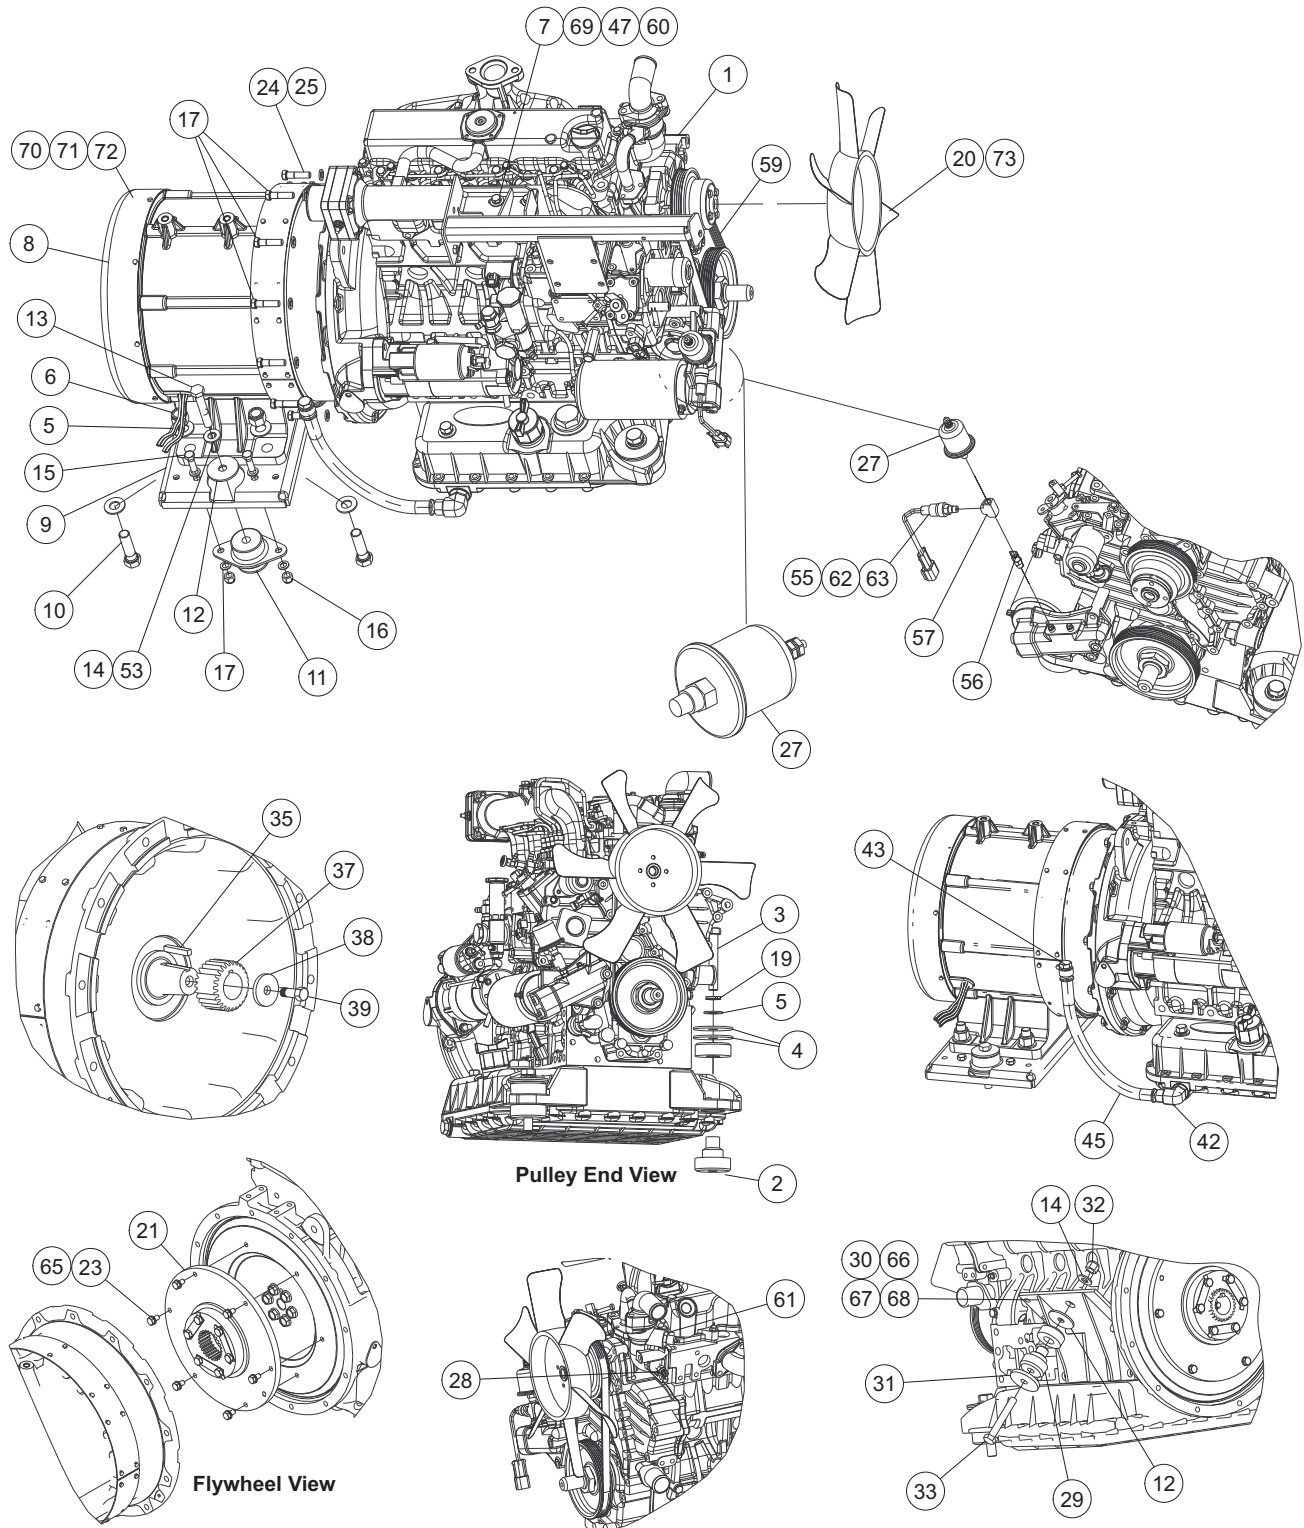

1 Unidrive Assembly (PIDs RG2051 to RG2066)			
Item	Part Number	Description	Qty
1	26-00136-21SV	Engine, Kubota	1
2	73-00198-00	Shockmount	2
3	66-U---1--5361-36	Screw, Cap Hxhd	2
4	34-06060-01	Washer, Snubbing	4
5	66-U---1--5321-9	Washer, Plain	10
6	34-00795-17	Nut, Self Lock	4
7	86-04768-01	Bracket Assembly	1
8	54-00669-25	Generator	1
9	86-04182-01	Base, Mounting	1
10	34-00804-18	Screw, Cap Hxhd	4
11	73-00175-01	Shockmount	2
12	34-00890-09	Washer, Flat	3
13	34-00833-24	Screw, Cap Hxhd	2
14	34-00829-15	Washer, Plain	3
15	34-00807-10	Screw, Cap Hxhd	4
16	34-00667-13	Nut, Self Lock	4
17	34-00829-13	Washer, Plain	11
19	66-U---1--5331-8	Washer, Lock	2
20	34-00945-06	Washer, Lock	4
21	79-04009-00	Adapter Assembly	1
23	34-01151-08	Washer, Flat	6
24	34-00807-12	Screw, Cap Hxhd	12
25	34-00663-13	Washer, Lock	12
27	66-U---1--2823-4	Oil Pressure Sender (OPS)	1
28	12-00098-04	Water Temperature Sender (WTS)	1
29	73-00305-00	Shockmount	1
30	86-05092-00	Bracket Assembly	1
31	34-00890-08	Washer, Special	1
32	34-00667-15	Nut, Self Lock	1
33	34-00308-28	Screw, Cap Hxhd	1
35	34-06029-08	Key, Square	1
37	48-01049-00	Gear	1
38	34-01319-00	Washer, Flat	1
39	34-00559-08	Screw, Cap Hxhd	1
42	40-00566-00	Elbow,90 Deg	1
43	40-00043-05	Plug	1
45	66CH---1---123-100	Hose Assembly	1
47	34-01146-08	Washer, Lock	2
53	66-U---1--5331-9	Washer, Lock	2
55	12-00592-02	Low Oil Pressure (LOP) Switch	1
56	40-00771-00	Nipple, Hex	1

1 Unidrive Assembly (PIDs RG2051 to RG2066)			
57	40-00107-01	Tee	1
59	50-60330-03	V-Belt, Poly	1
60	34-01153-15	Screw, Cap Hxhd	2
61	10-00158-03	Switch, Safety	1
62	58-00858-35	Tube, Slit	1
63	58-00079-02	Sta-Strap	2
65	34-01153-25	Screw, Cap Hxhd	6
66	34-01155-25	Screw, Cap Hxhd	4
67	34-01151-12	Washer, Flat	4
68	34-01146-12	Washer, Lock	4
69	34-00662-12	Washer, Plain	2
70	54-00669-21	Generator Fan	1
71	54-00669-22	Generator Fan Cover, End	1
72	54-00669-24	Generator Fan Key	1
73	38-00152-00	Engine Fan	1


1 Unidrive Assembly with Torsional Dampener (PID RG2068)

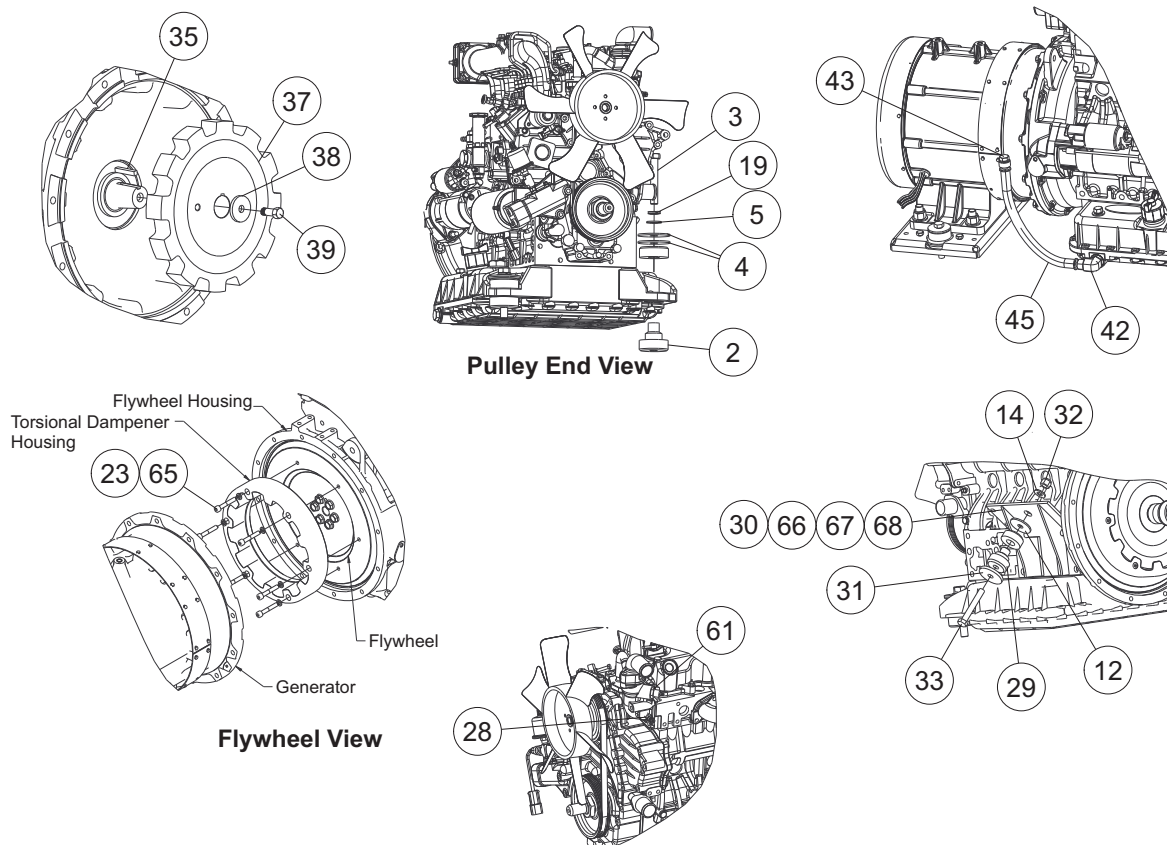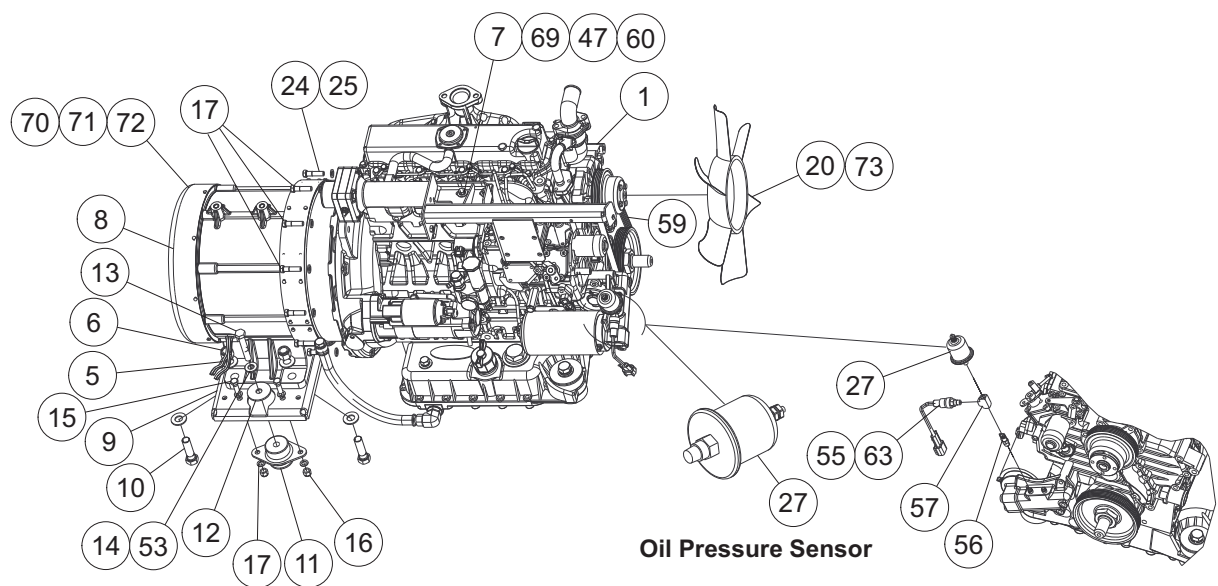

1 Unidrive Assembly with Torsional Dampener (PID RG2068)			
Item	Part Number	Description	Qty
1	26-00136-21SV	Engine, Kubota	1
2	73-00198-00	Shockmount	2
3	66-U---1--5361-36	Screw, Cap Hxhd	2
4	34-06060-01	Washer, Snubbing	4
5	66-U---1--5321-9	Washer, Plain	10
6	34-00795-17	Nut, Self Lock	4
7	86-04768-01	Bracket Assembly	1
8	54-00669-25	Generator	1
9	86-04182-01	Base, Mounting	1
10	34-00804-18	Screw, Cap Hxhd	4
11	73-00175-01	Shockmount	2
12	34-00890-09	Washer, Flat	3
13	34-00833-24	Screw, Cap Hxhd	2
14	34-00829-15	Washer, Plain	3
15	34-00807-10	Screw, Cap Hxhd	4
16	34-00667-13	Nut, Self Lock	4
17	34-00829-13	Washer, Plain	11
19	66-U---1--5331-8	Washer, Lock	2
20	34-00945-06	Washer, Lock	4
23	34-01146-58	Washer, Lock	6
24	34-00807-12	Screw, Cap Hxhd	12
25	34-00663-13	Washer, Lock	12
27	66-U---1--2823-4	Sender	1
28	12-00098-04	Sending Unit	1
29	73-00305-00	Shockmount	1
30	86-05092-00	Bracket Assembly	1
31	34-00890-08	Washer, Special	1
32	34-00667-15	Nut, Self Lock	1
33	34-00308-28	Screw, Cap Hxhd	1
35	34-06029-08	Key, Square	1
37	76-02106-00	Torsional Dampener Service Kit	1
38	34-01319-00	Washer, Flat	1
39	34-00559-08	Screw, Cap Hxhd	1
42	40-00566-00	Elbow,90 Deg	1
43	40-00043-05	Plug	1
45	66CH---1---123-100	Hose Assembly	1
47	34-01146-08	Washer, Lock	2
53	66-U---1--5331-9	Washer, Lock	2
55	12-00592-16	Switch, Pressure	1
56	40-00771-00	Nipple, Hex	1
57	40-00107-01	Tee	1

1 Unidrive Assembly with Torsional Dampener (PID RG2068)			
59	50-01198-00	Belt	1
60	34-01153-15	Screw, Cap Hxhd	2
61	10-00158-03	Switch, Safety	1
63	58-00079-02	Sta-Strap	2
65	34-01369-50	Screw, Socket Head	6
66	34-01155-25	Screw, Cap Hxhd	4
67	34-01151-12	Washer, Flat	4
68	34-01146-12	Washer, Lock	4
69	34-00662-12	Washer, Plain	2
70	54-00669-21	Generator Fan	1
71	54-00669-22	Generator Fan Cover, End	1
72	54-00669-24	Generator Fan Key	1
73	38-00152-00	Engine Fan	1


2 Frame Kit

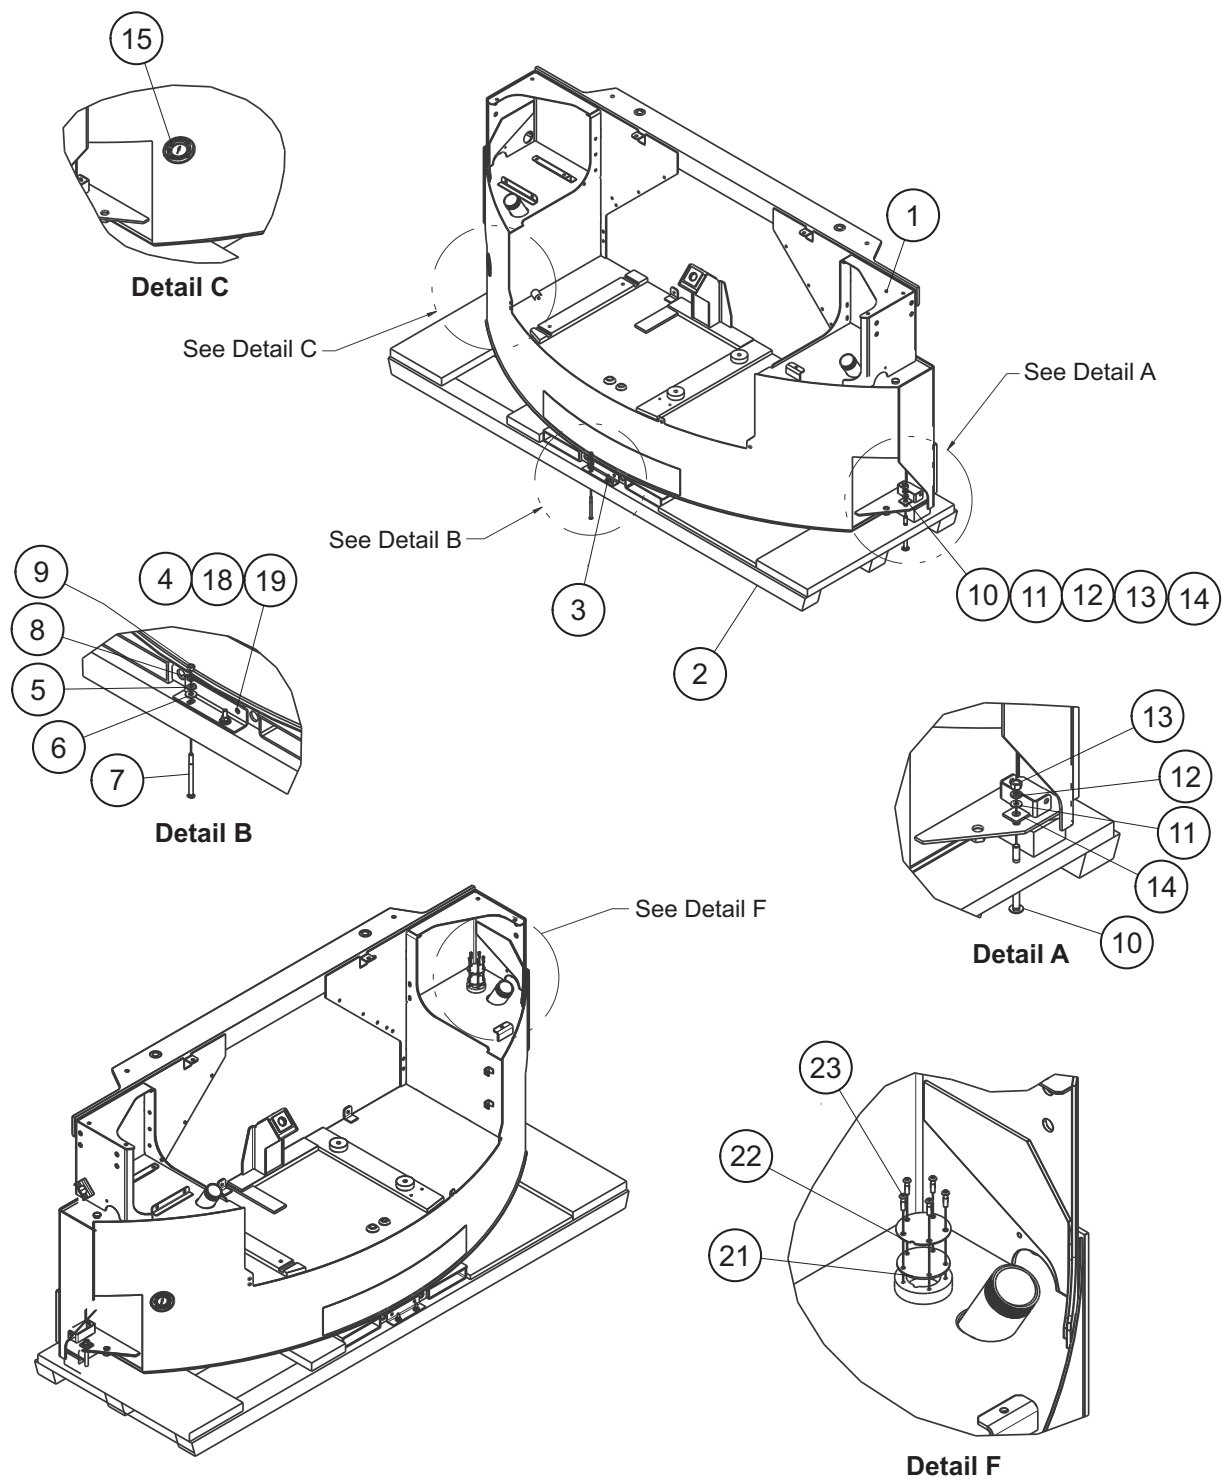

Item	Part Number	Description	Qty
1	86-03249-00	Tank Assembly	1
3	68-17328-00	Bracket	1
4	66-U---1--5361-7	Screw, Cap Hxhd	2
5	34-00588-12	Washer, Plain	2
6	34-00366-12	Washer, Plain	2




2 Frame Kit			
7	34-00354-16	Bolt, Carriage	2
8	34-00368-12	Washer, Lock	2
9	34-00363-12	Nut, Hex	2
10	34-00357-24	Bolt, Carriage	2
11	34-00366-15	Washer, Plain	2
12	34-00368-15	Washer, Lock	2
13	34-00363-15	Nut, Hex	2
14	69GC--15--1662	Spacer	2
15	12-00722-00	Fuel Gauge	1
	12-00722-20	Fuel Gauge, Dial Only	1
	12-00272-21	Fuel Gauge, Gasket	1
18	34-00588-13	Washer, Plain	2
19	34-00368-13	Washer, Lock	2
21	42-01298-00	Gasket	1
22	68-08552-01	Cover	1
23	34-01349-00	Screw, Button HD	5

3 Unit Mounting

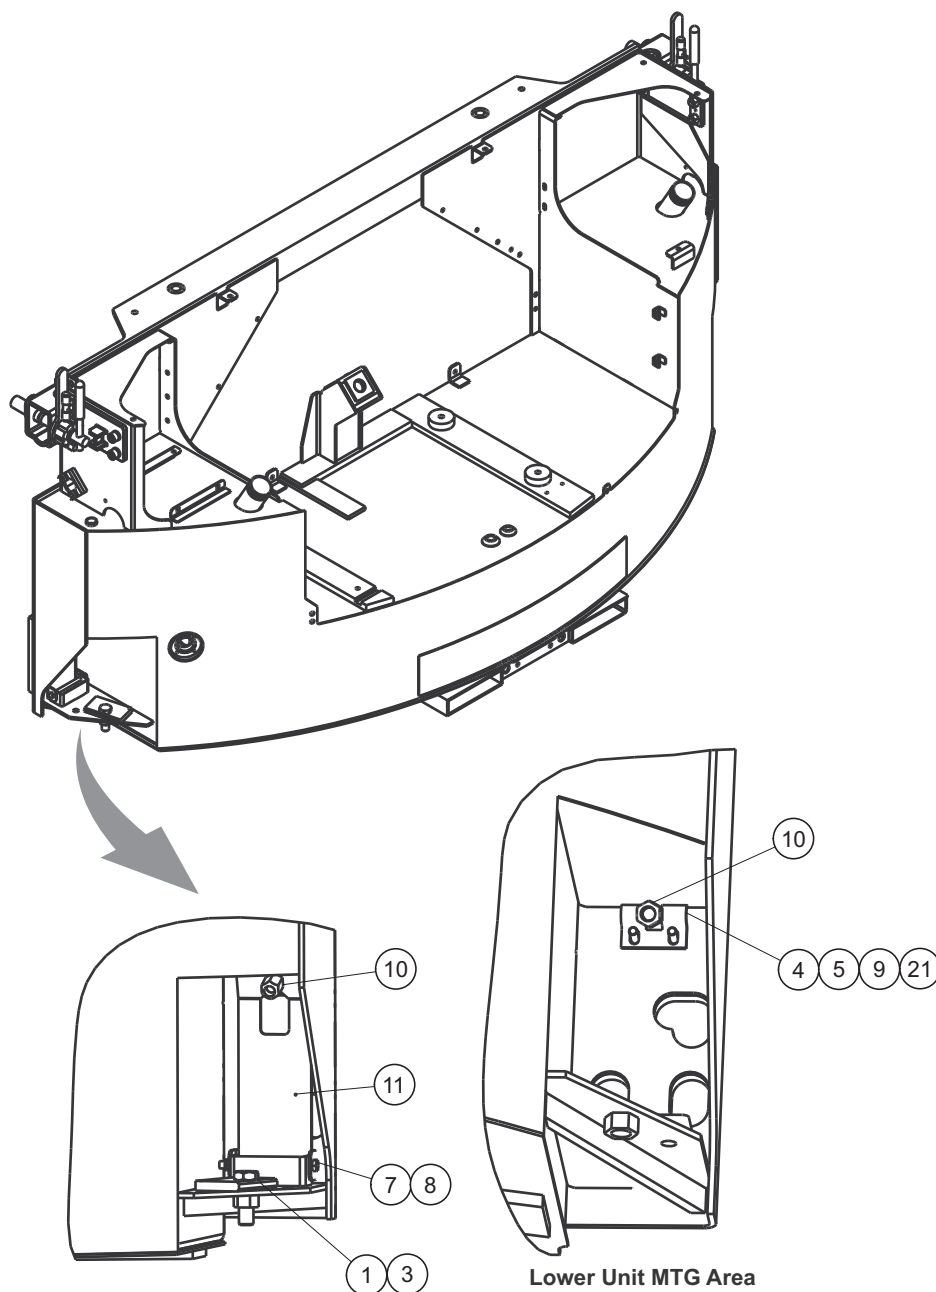


Item	Part Number	Description	Qty
1	34-06149-04	Bolt, 3/4-10X 2.75	2
3	68-17754-00	Block (Mounting Spacer)	2
4	68-17757-00	Bracket	2
5	34-00667-12	Nut, Self Lock	4
7	34-00667-13	Nut, Self Lock	2
8	34-06200-00	Screw, Cap Hex Head 3/8-16	2
9	34-06201-00	Bolt, T-Head 1/2-13 X 2.75	2
10	34-06207-00	Knob	2
11	68-17756-00	Retainer	2
21	66U1-5321-4	Washer, Plain 5/16 N Type A	4

4 Fuel System

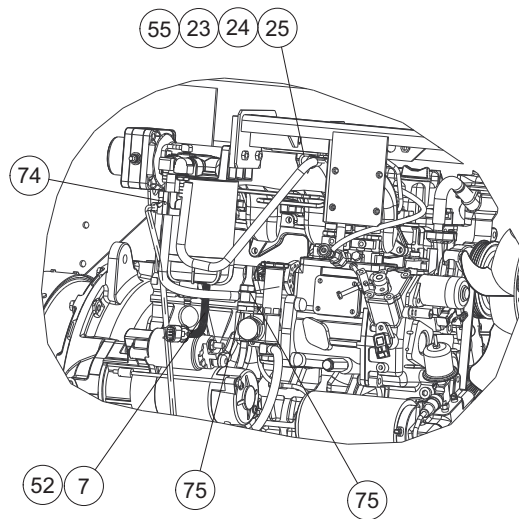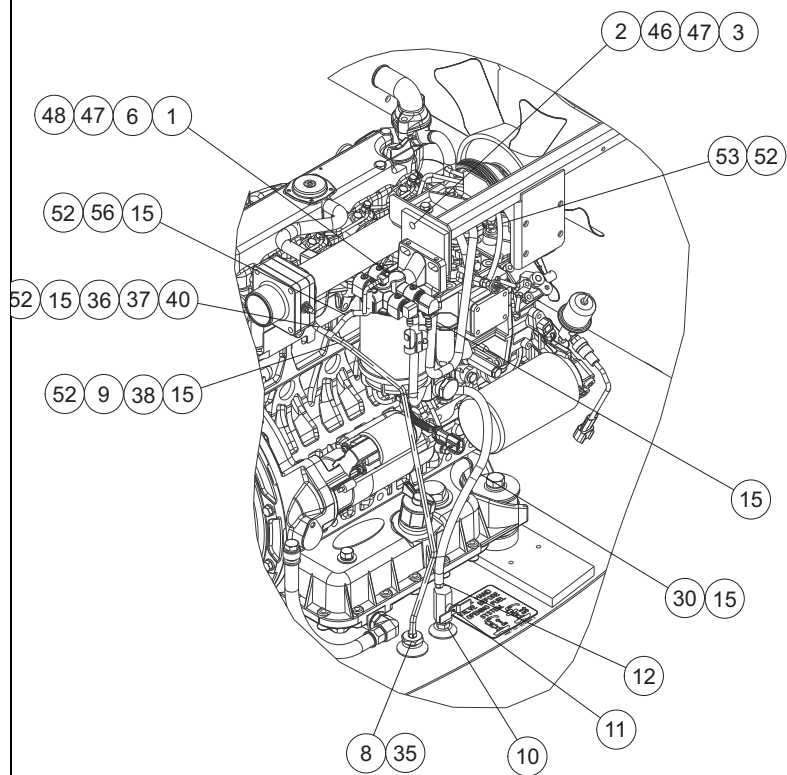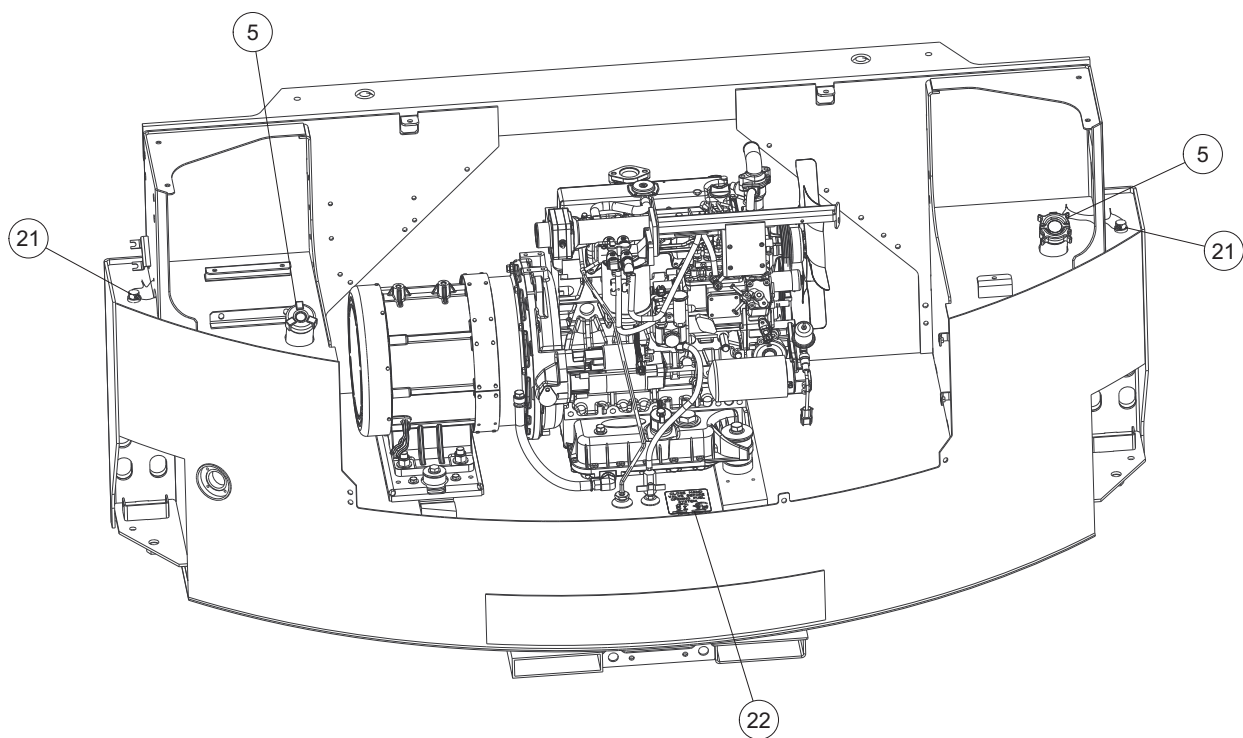


4 Fuel System			
Item	Part Number	Description	Qty
1	30-01128-00	Fuel Filter Assembly - Includes:	1
	30-01090-04	Fuel Filter / Water Separator Element	1
2	48-00449-00	Spacer	1
3	34-00667-12	Nut, Self Lock	1
5	44-00046-13	Cap Assembly	2
6	66U1-5361-38	Bolt, Machine Hex Head 5/16-18 X 1.50	2
7	58-00858-30	Tube, Slit 1/4 ID X 6.50	1
8	81-04093-01	Tube, Pickup	1
9	58-00848-20	Tube, Slit 1/2 ID X 21.00	1
10	81-04100-00	Tube, Pickup	1
11	40-00469-00	Valve Fuel Shutoff	1
12	40-00420-01	Fitting, Hose Barb 5/16 ID X 1/4 Mpt	1
15	44-00045-25	Clamp, Hose	12
21	40-00697-00	Vent Fuel Tank	2
22	69GC-15-3212	Label Fuel Shutoff	1
23	34-06212-12	Washer, Plain 1/4 N Type A	1
24	34-00663-11	Washer, Lock 1/4 Spring	1
25	34-00655-08	Screw, Cap Hex Head 1/4-20 X 1.00	1
30	58-00658-10	Hose, Fuel 5/16 ID X 14 Lg	1
35	40-00420-02	Fitting, Hose Barb 3/16 ID X 1/4 Mpt	1
36	58-00659-05	Hose, Fuel 3/16 ID X 11.00 Lg	1
37	40-01156-00	Tee, Male Branch 3/16" Hs. X 1/4" Tube	1
38	58-00659-18	Hose, Fuel 3/16 ID X 23.00 Lg	1
40	58-00848-30	Tube, Slit 1/2 ID X 9 Lg	1
44	58-00848-45	Tube, Slit 1/2 ID X 28.00 Lg	1
46	34-00792-10	Screw, Cap Hex Head 5/16-18 X 1.25	1
47	66U1-5321-4	Washer, Plain 5/16 N Type A	4
48	34-00663-12	Washer, Lock 5/16 Spring	2
52	58-00079-02	Sta-Strap	12
53	58-00848-22	Tube, Slit 1/2 ID X 10Lg	1
55	44-00102-52	Clamp, Cushioned	1
56	58-00848-01	Tube, Slit 1/2 ID X 5 Lg Corr	1
74	44-00317-00	Clip 1/2 To 5/8 Tee	1
75	42-01133-00	Seal	2
NS	12-00722-00	Fuel Gauge Assembly	1
NS	12-00722-20	Fuel Gauge - Dial Only	1
NS	12-00722-21	Fuel Gauge - Gasket	1
NS	12-00722-21	Gasket	1

5 Battery Kit

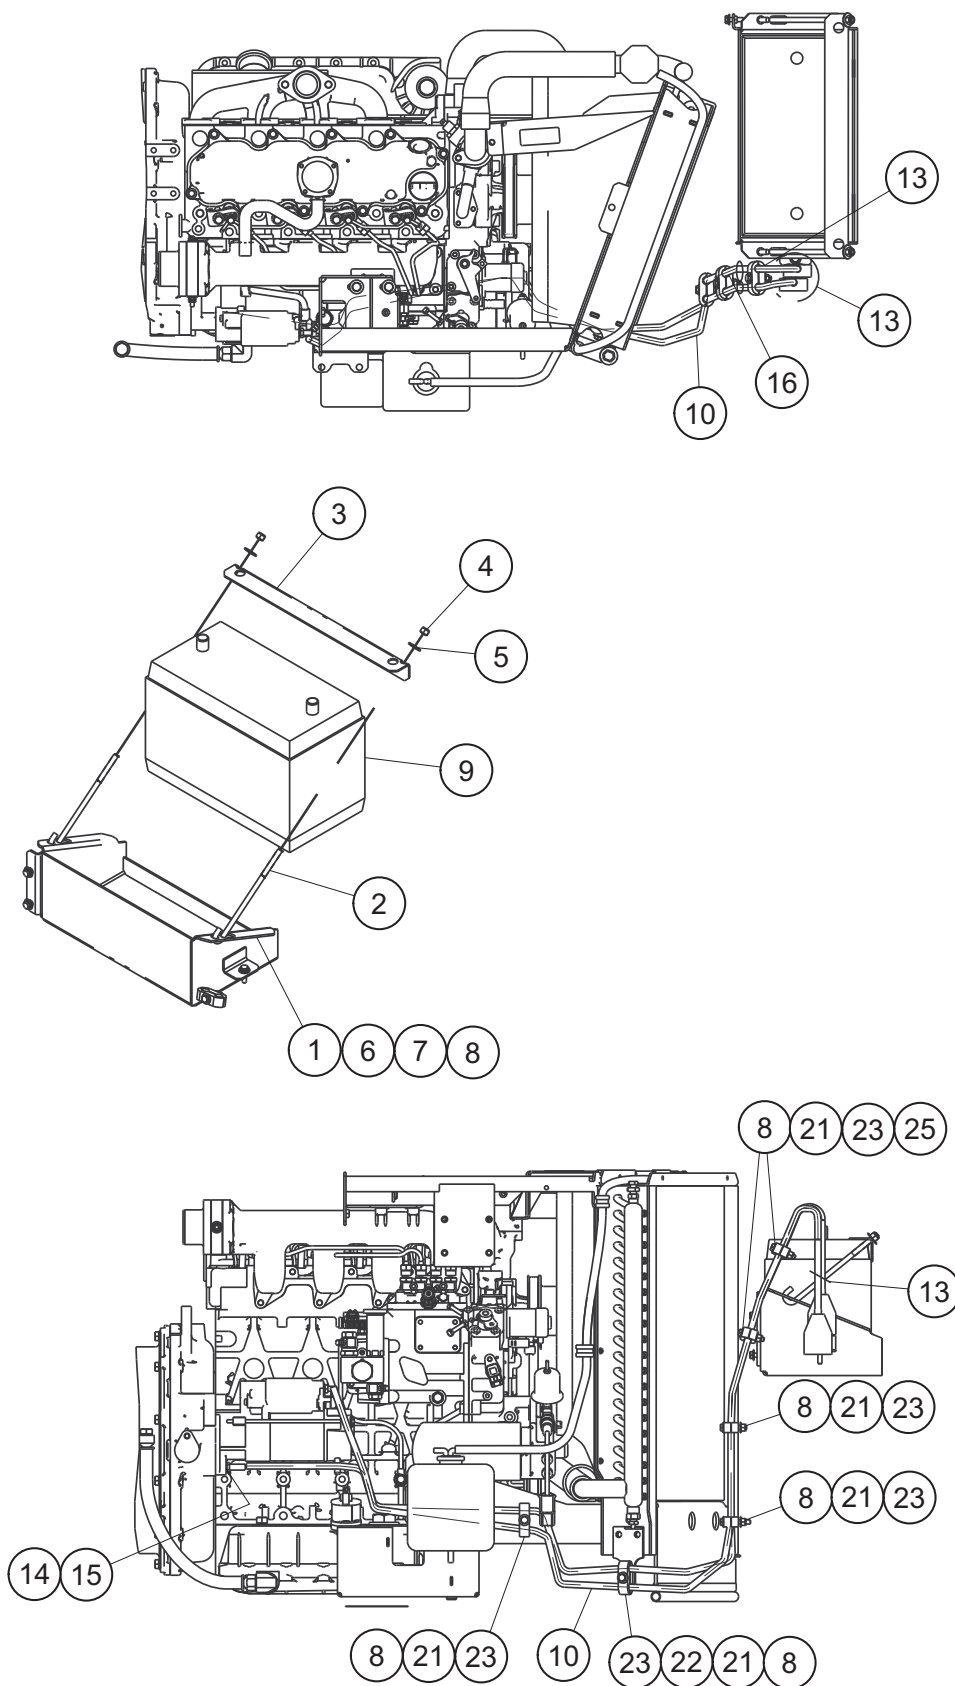


5 Battery Kit			
Item	Part Number	Description	Qty
1	86-05106-00	Box Assembly	1
2	34-06247-05	J-Hook 5/16-18 X 6.75	2
3	68-17348-00	Angle, Hold Down	1
4	34-00667-12	Nut, Self Lock	2
5	34-00662-12	Washer, Plain 5/16	2
6	34-00655-08	Screw, Cap Hex Head 1/4-20 X 1.00	3
7	34-00663-11	Washer, Lock 1/4 Spring	3
8	34-00662-11	Washer, Plain 1/4	9
9	30-50347-01	Battery 12V	1
10	22-01633-91	Cable, Battery 70" Negative Black	1
13	58-00079-02	Sta-Strap	3
14	34-00372-43	Washer, Lock	1
15	34-06134-07	Nut, Hex	1
16	22-01633-92	Cable, Battery 59" Positive Red	1
21	44-01143-09	Clamp	5
22	68-17287-00	Plate	1
23	34-00655-12	Screw, Cap Hex Head 1/4-20 X 1.50	5
25	34-00667-11	Nut, Self Lock	1

6 Air Filters

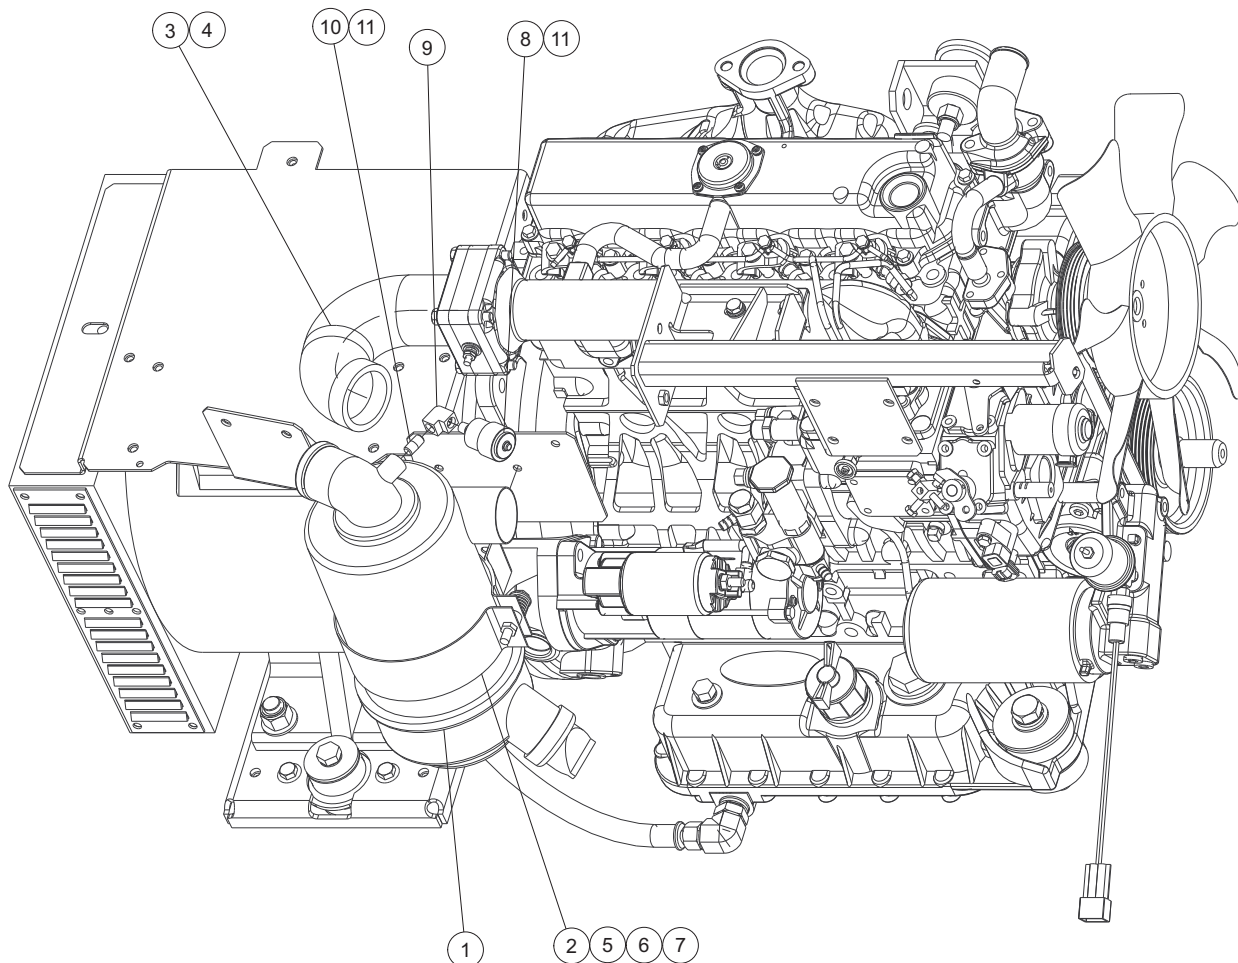


Item	Part Number	Description	Qty
1	30-00426-05	Air Cleaner, Dry Element Includes:	1
	30-00426-25	Filter Air Cleaner	1
2	44-00454-00	Bracket Air Cleaner	1
3	58-04836-00	Hose	1
4	KA69JM840	Clamp, Hose	2
5	34-00655-06	Screw, Cap Hex Head 1/4-20 X 0.75	2
6	34-00667-11	Nut, Self Lock	2
7	34-06212-12	Washer, Plain 1/4 N Type A	2
8	30-00328-00	Indicator & Fitting	1
9	40-00512-00	Elbow, Union 1/8 X 1/8 Fpt	1
10	40-01176-52	Nipple 1/8 X 1/8 Npt	1

7 Exhaust System

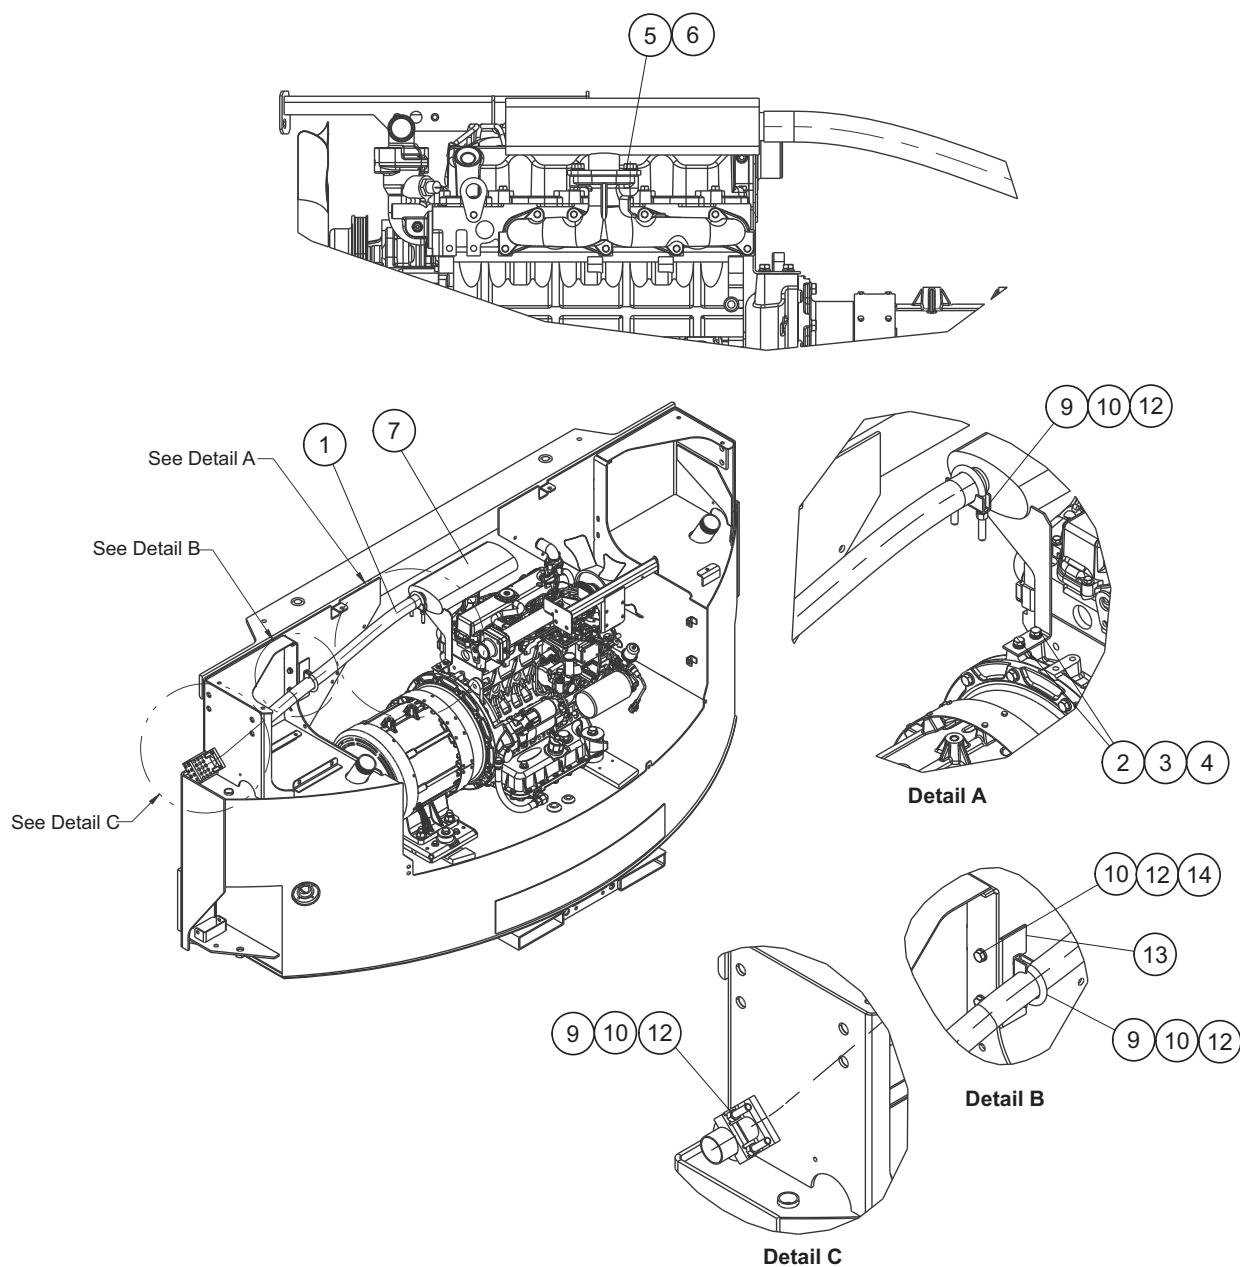

Item	Part Number	Description	Qty
1	30-00424-20	Muffler	1
2	34-01146-08	Washer, Lock M8 Spring	2
3	34-01151-08	Washer, Flat M8	2
4	34-01153-15	Screw, Cap Hex Head	2
5	34-00964-00	Stud	2
6	34-01324-13	Nut, Flanged	2
7	30-00435-01	Pipe, Flexible	1
9	30-00427-00	Clamp, U-Bolt	3
10	34-00663-13	Washer, Lock	8
12	66U1-5321-5	Washer, Plain	8
13	68-17186-00	Bracket	1
14	34-00807-08	Screw, Cap Hex Head	2

8 Solid State Battery Charger (PIDS RG2051 to RG2058)

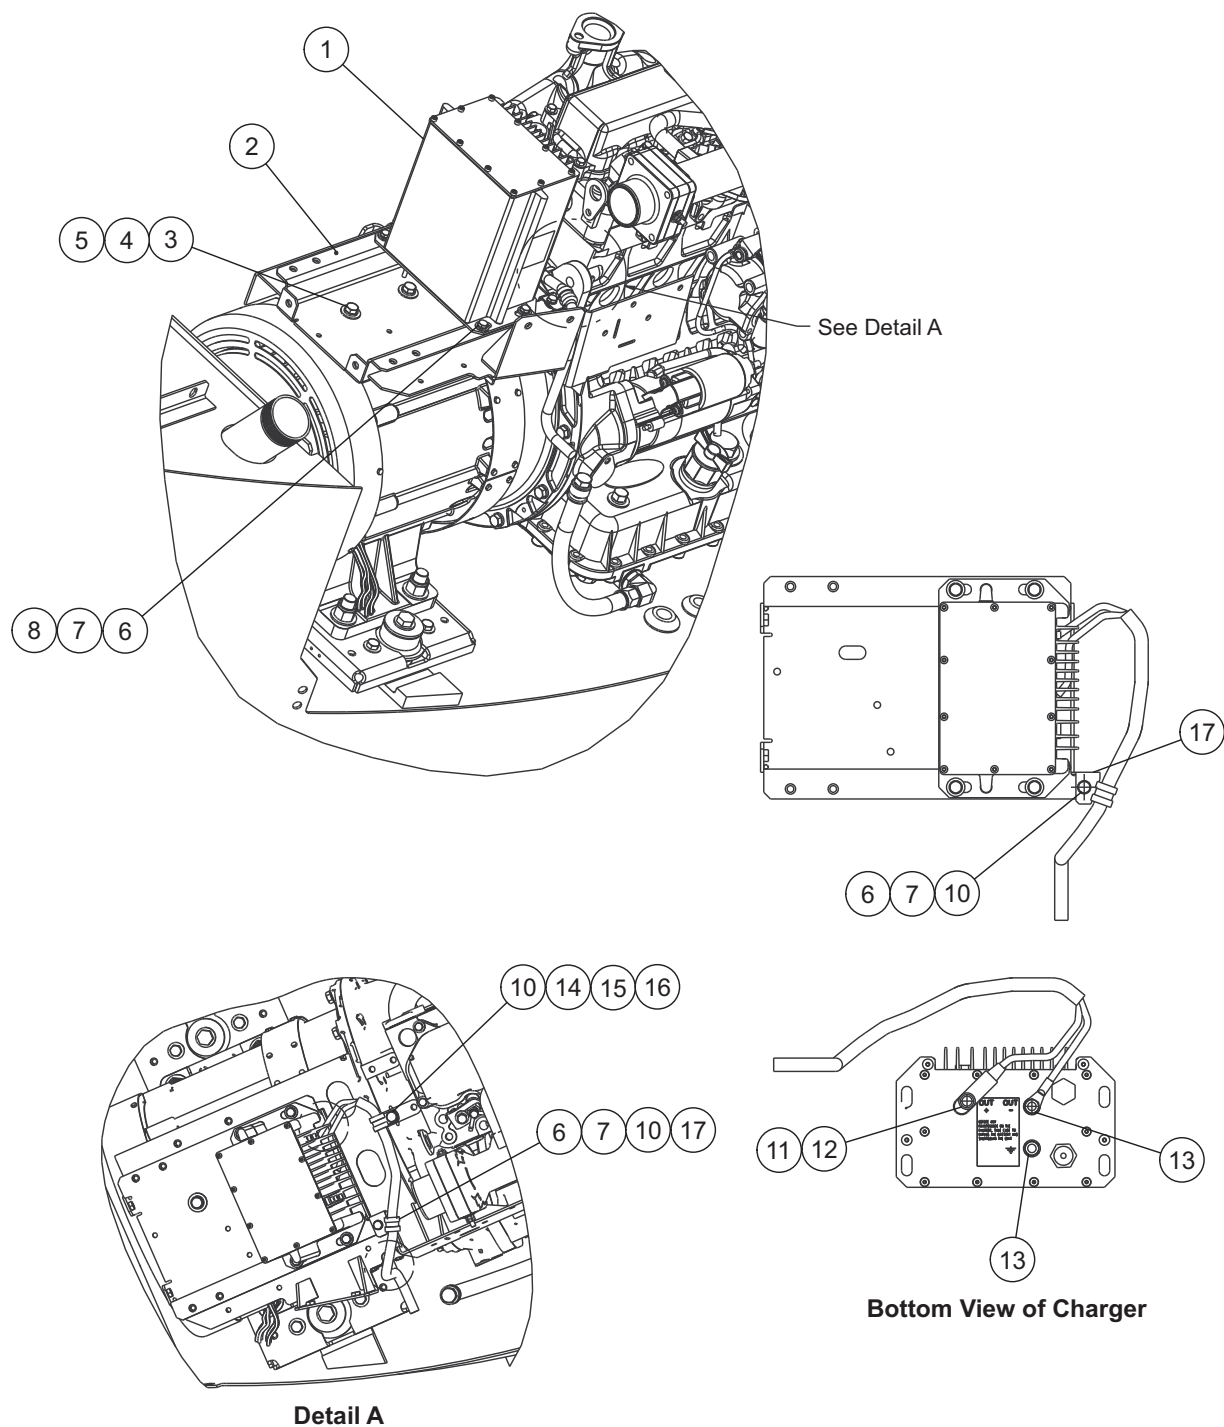


Item	Part Number	Description	Qty
1	12-00683-04	Battery Charger	1
2	86-05051-00	Channel Assembly	1
3	34-00807-08	Screw, Cap Hex Head	2
4	34-00662-13	Washer, Plain	2
5	34-00663-13	Washer, Lock	2

8 Solid State Battery Charger (PIDS RG2051 to RG2058)

6	34-00655-06	Screw, Cap Hex Head	5
7	34-00663-11	Washer, Lock	5
8	34-00662-11	Washer, Plain 1/4	4
10	44-00102-51	Clamp, Cushioned	2
12	34-01184-106	Nut, Lock	1
13	34-01184-108	Nut, Lock	2
14	34-01153-15	Screw, Cap Hex Head	1
15	34-01146-08	Washer, Lock	1
16	34-01151-08	Washer, Flat	1
17	68-17907-00	Bracket, Clamp	1


8 Solid State Battery Charger (PIDS RG2059 to RG2068)

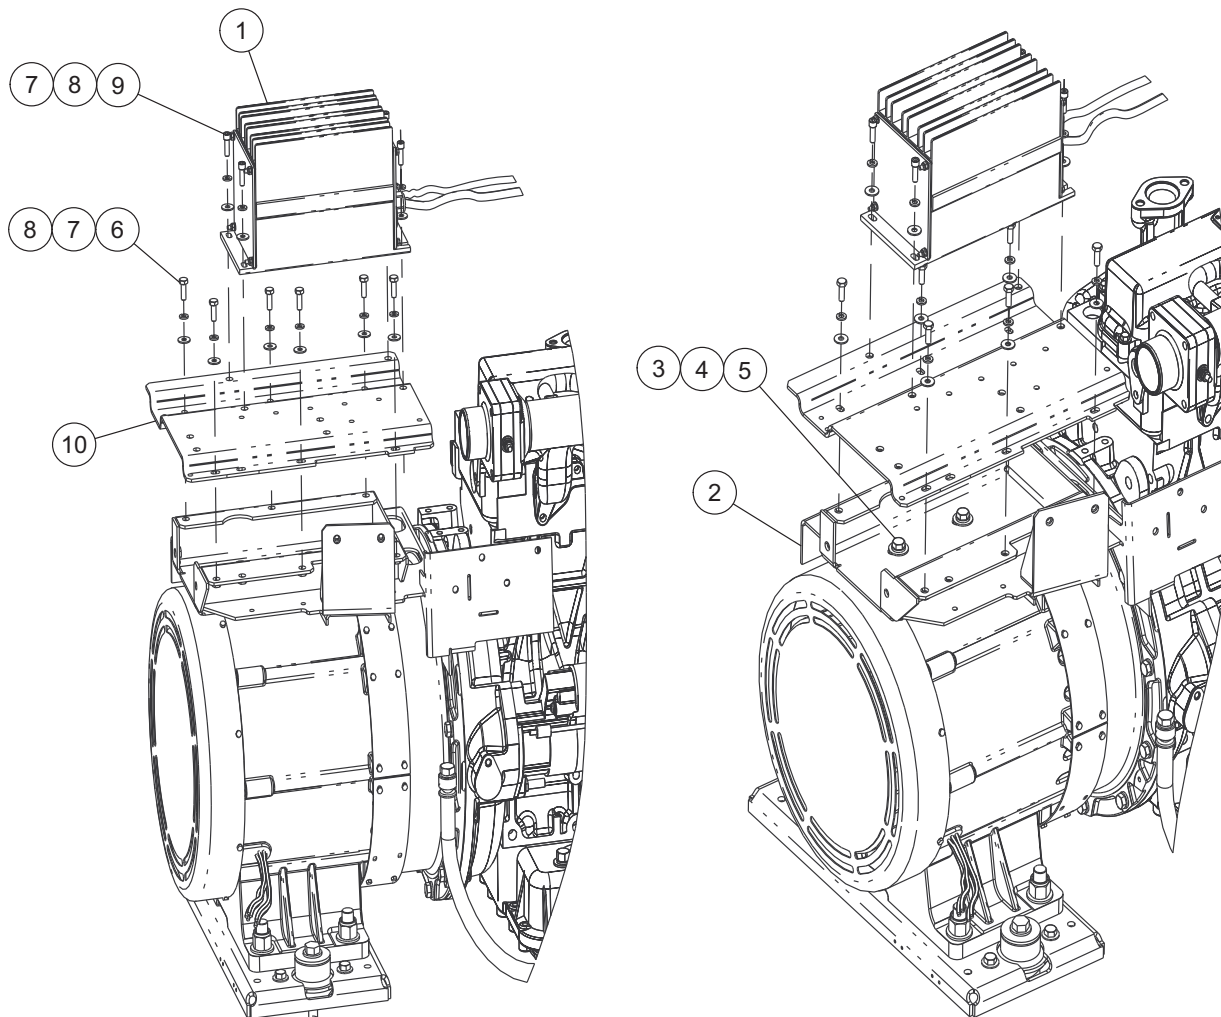


Item	Part Number	Description	Qty
1	30-00460-06	Battery Charger	1
2	86-05180-00	Channel Assembly	1
3	34-00807-08	Screw, Cap Hex Head	2
4	34-00662-13	Washer, Plain	2
5	34-00663-13	Washer, Lock	2
6	34-00655-06	Screw, Cap Hex Head	6
7	34-00663-11	Washer, Lock	10
8	34-00662-11	Washer, Plain	10
9	34-06014-12	Screw, Cap	4
10	68-17935-00	Channel	1

9 Voltage Controller

PIDs RG2050 to RG2058

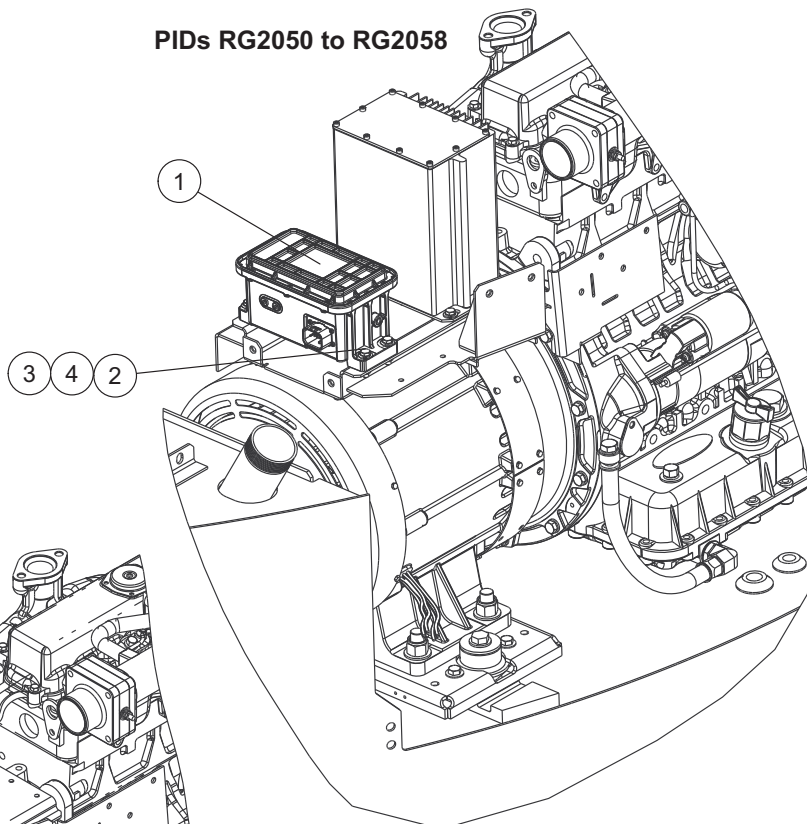


PIDs RG2059 to RG2069

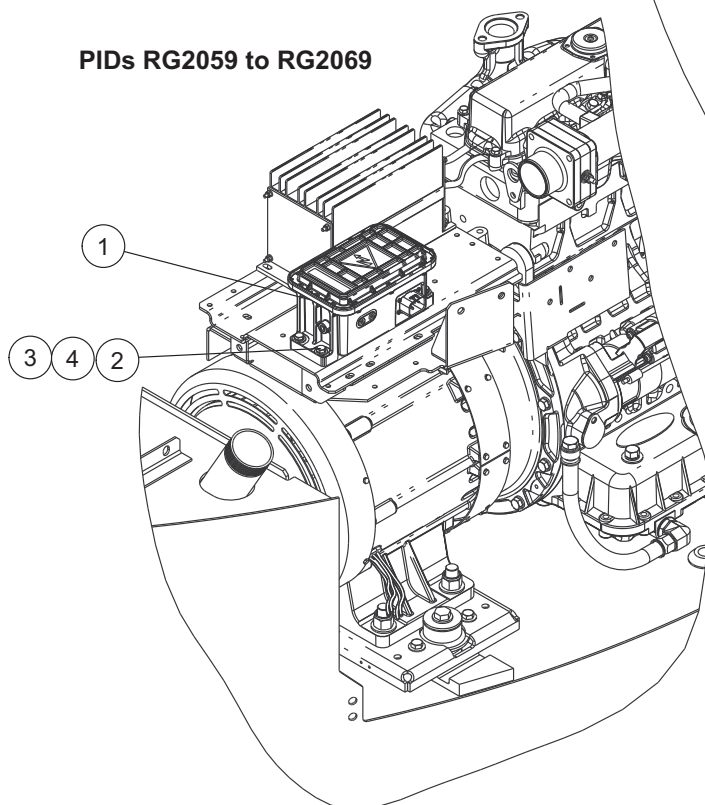

Item	Part Number	Description	Qty
1	12-00707-05	Controller	1
2	34-00655-10	Screw, Cap Hex Head 1/4-20 X 1.25	4
3	34-00663-11	Washer, Lock 1/4 Spring	4
4	34-00662-11	Washer, Plain 1/4	4
NS	12-00707-20	Voltage Controller Programing Cable	1


10 Skins Kit

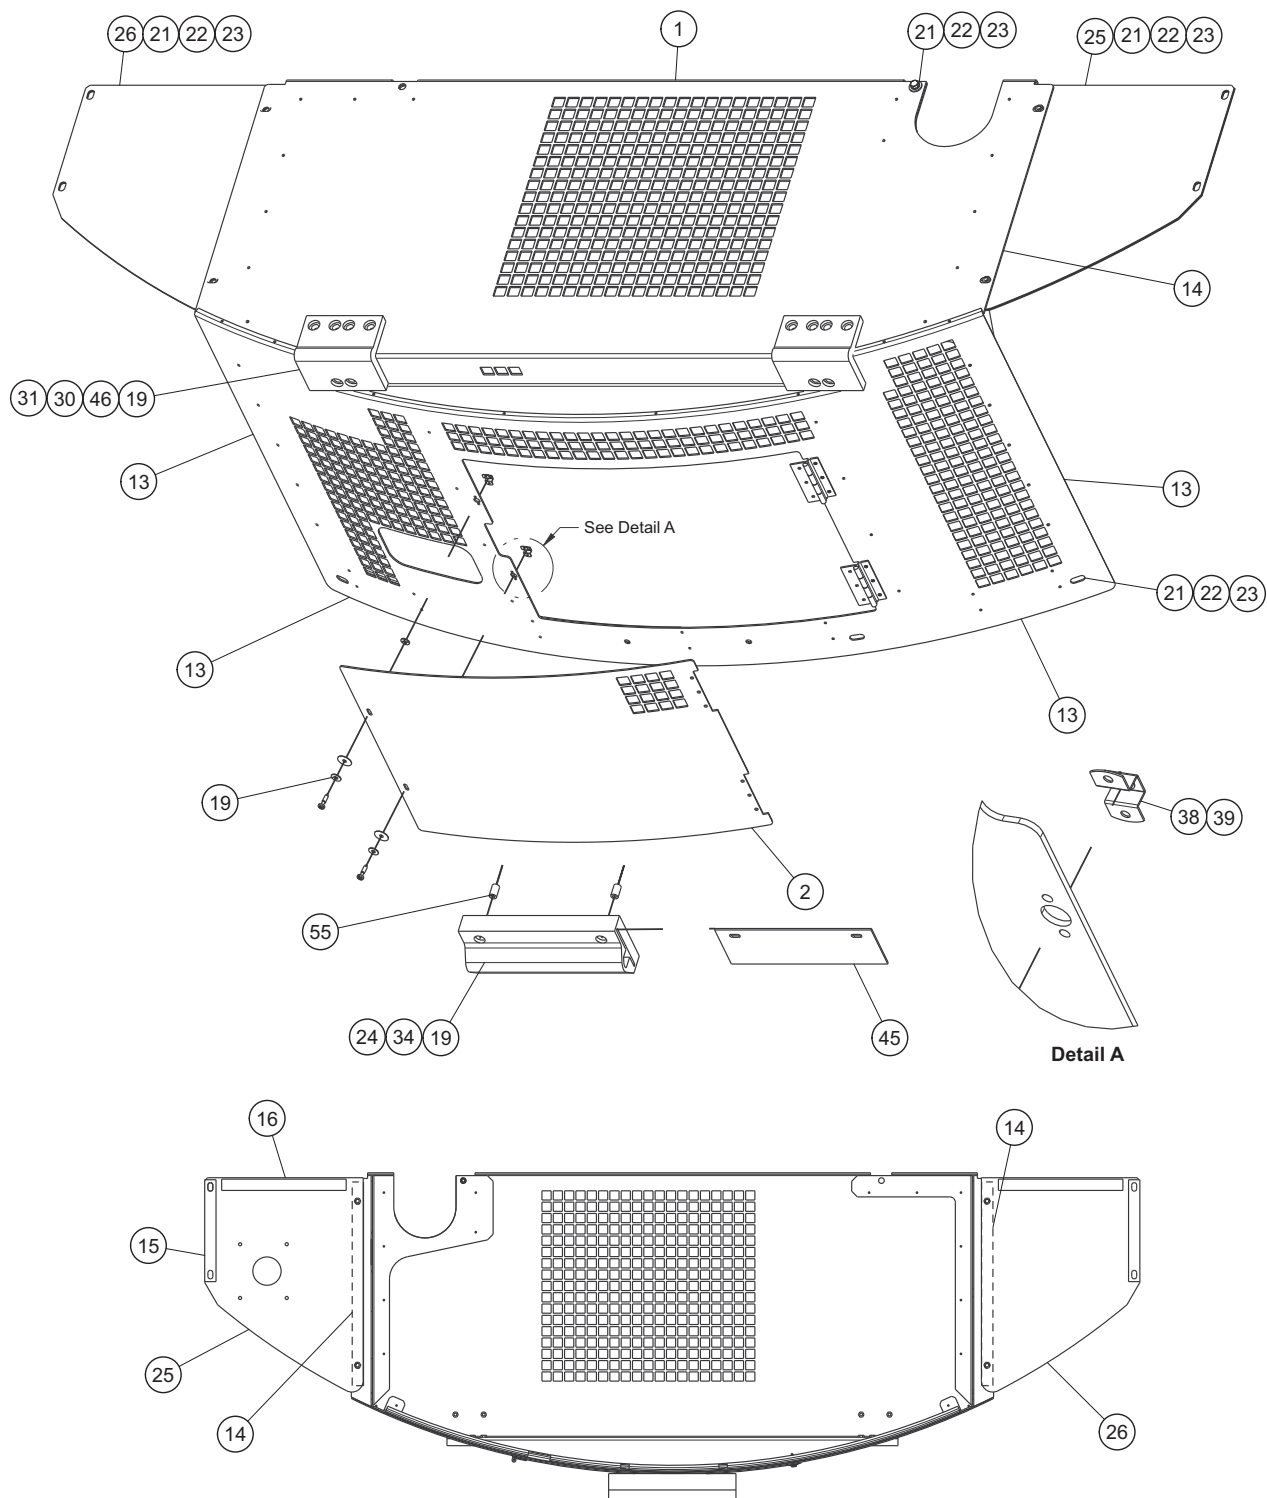

Item	Part Number	Description	Qty
1	86-05155-01	Cover Assembly	1
2	79-01674-08	Door Assembly (See next page for Assembly)	1
13	42-00363-01	Gasket	4
14	42-00269-12	Gasket	2


10 Skins Kit

15	42-00269-13	Gasket	2
16	42-00269-14	Gasket	2
19	34-00662-11	Washer, Plain	12
21	66-U---1--5361-39	Screw, Cap Hxhd	13
22	34-00663-12	Washer, Lock	13
23	34-00662-12	Washer, Plain	13
24	58-04402-01	Bumper	1
25	68-17323-00	Panel	1
	68-17323-02	Panel (with GPS)	1
26	68-17323-01	Panel	1
30	34-00655-08	Screw, Cap Hxhd	8
31	58-04433-00	Bumper	2
34	34-00655-12	Screw, Cap Hxhd	2
38	34-01142-01	Receptacle	2
39	34-00928-01	Rivet, Blind	4
45	68-13483-00	Plate	1
46	58-00836-23	Spacer	8
55	58-00836-30	Spacer	2

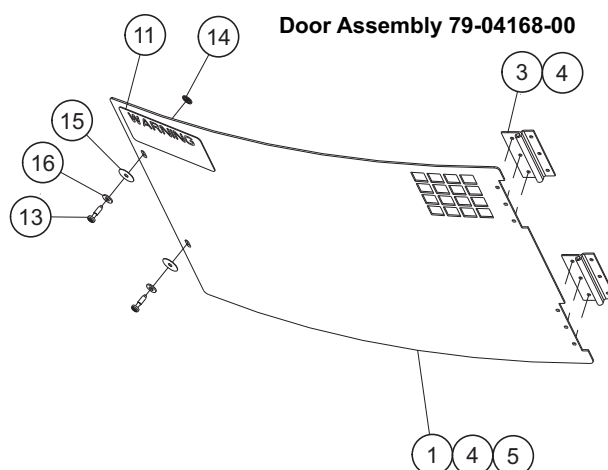

Item	Part Number	Description	Qty
Door Assembly 79-01674-08			
1	68-12540-00	Door, Access	1
3	44-00352-01	Hinge	2
4	34-00928-13	Rivet, Blind	12
5	66-U---1--2552-124	Gasket	2
11	62-11302-00	Decal	1
13	66-U---1--6811-12	Screw, Retaining	2
14	34-01226-00	Washer, Retaining	2
15	34-06053-03	Washer	2
16	66-U---1--5321-3	Washer, Plain	2


11 Labels and Decals

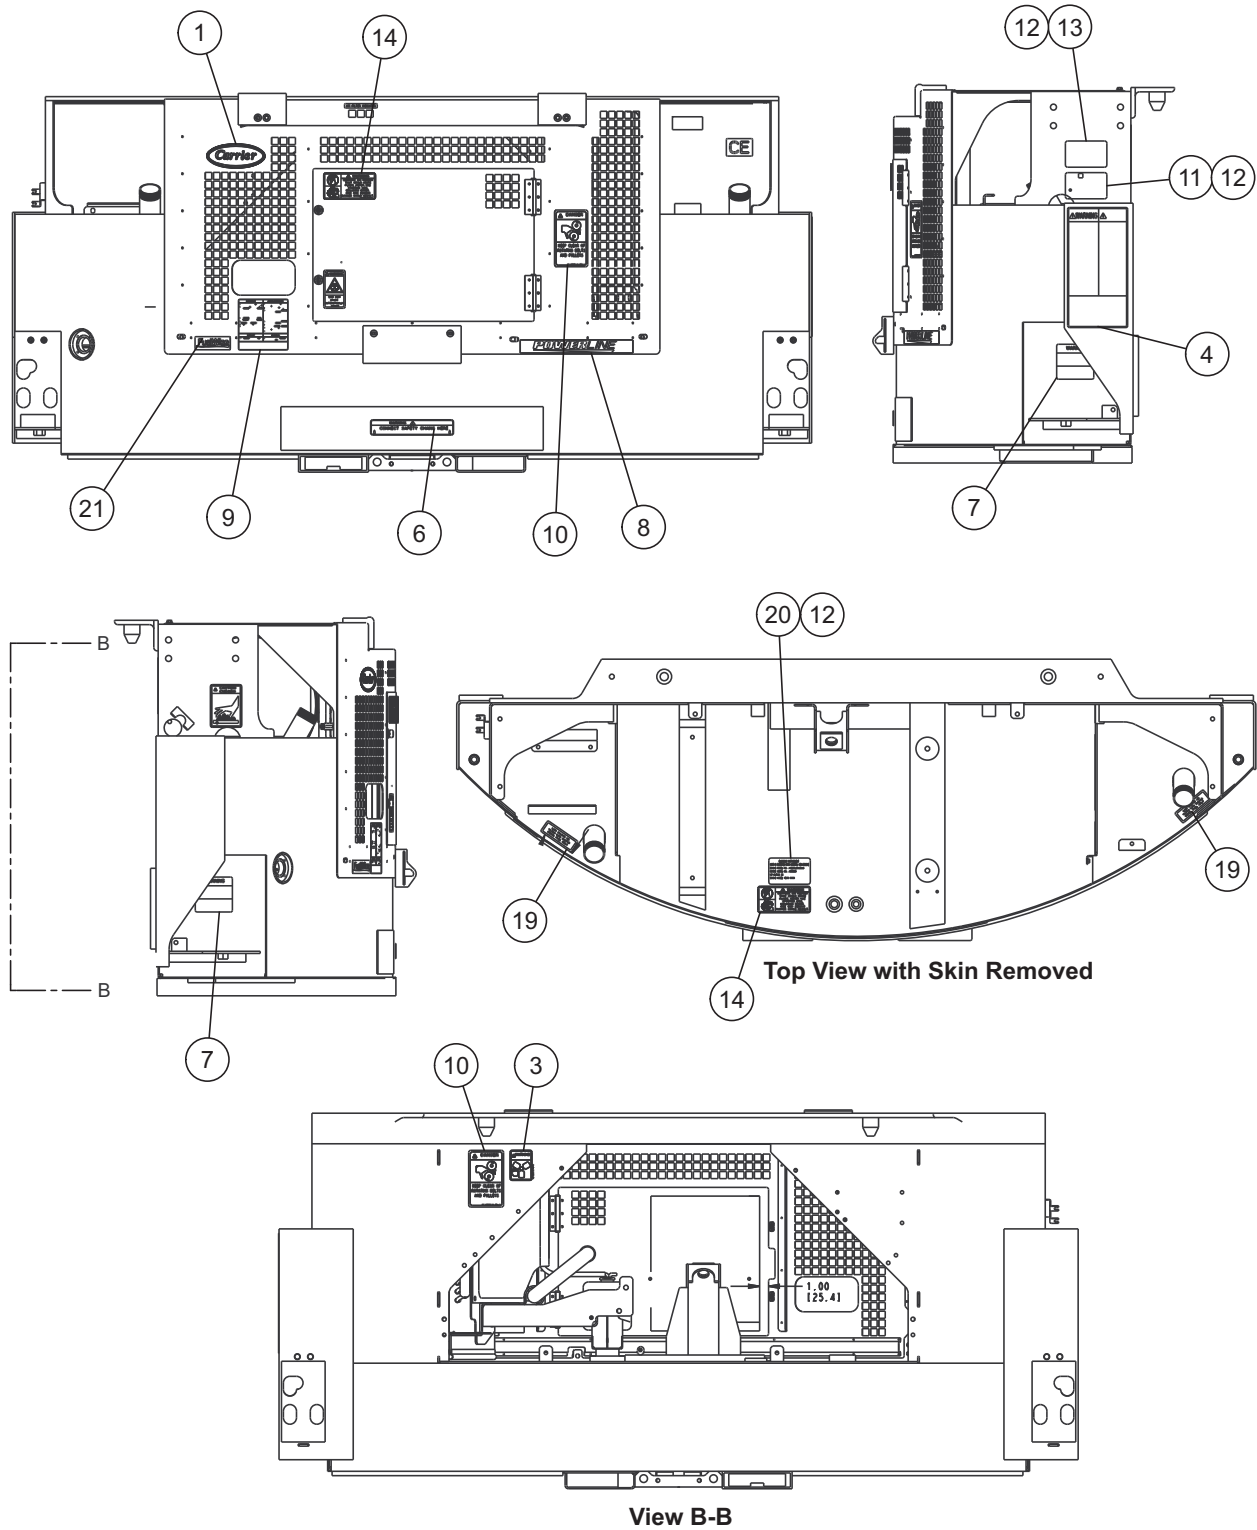

11 Labels and Decals

Item	Part Number	Description	Qty
1	62-60390-03	Decal, Carrier 175 X 70	1
3	62-02895-00	Label, Fan Warning	3
4	62-02899-04	Label, Install Pin Mount	2
6	62-02896-00	Label, Safety Chains	1
7	62-02897-00	Label, Warning Bolt Torque	2
8	62-04191-00	Label, RG PowerLINE	1
9	62-02717-08	Label, T4I Std, Start/Stop	1
10	62-02898-00	Label, Danger-Rotation	1
11	62-10572-00	Label, Genset	1
12	62-10391-01	Label, Protective	3
13	62-10571-00	Label, Genset	1
14	62-11302-00	Decal, Warning (Ether)	2
19	62-02181-02	Decal, Ulstd Only	2
20	62-10572-02	Label, RG / UG Emissions	1
21	62-11588-00	Label, RG / UG FuelWise	1


12 Voltage Kit (PIDs RG2051 to RG2058)

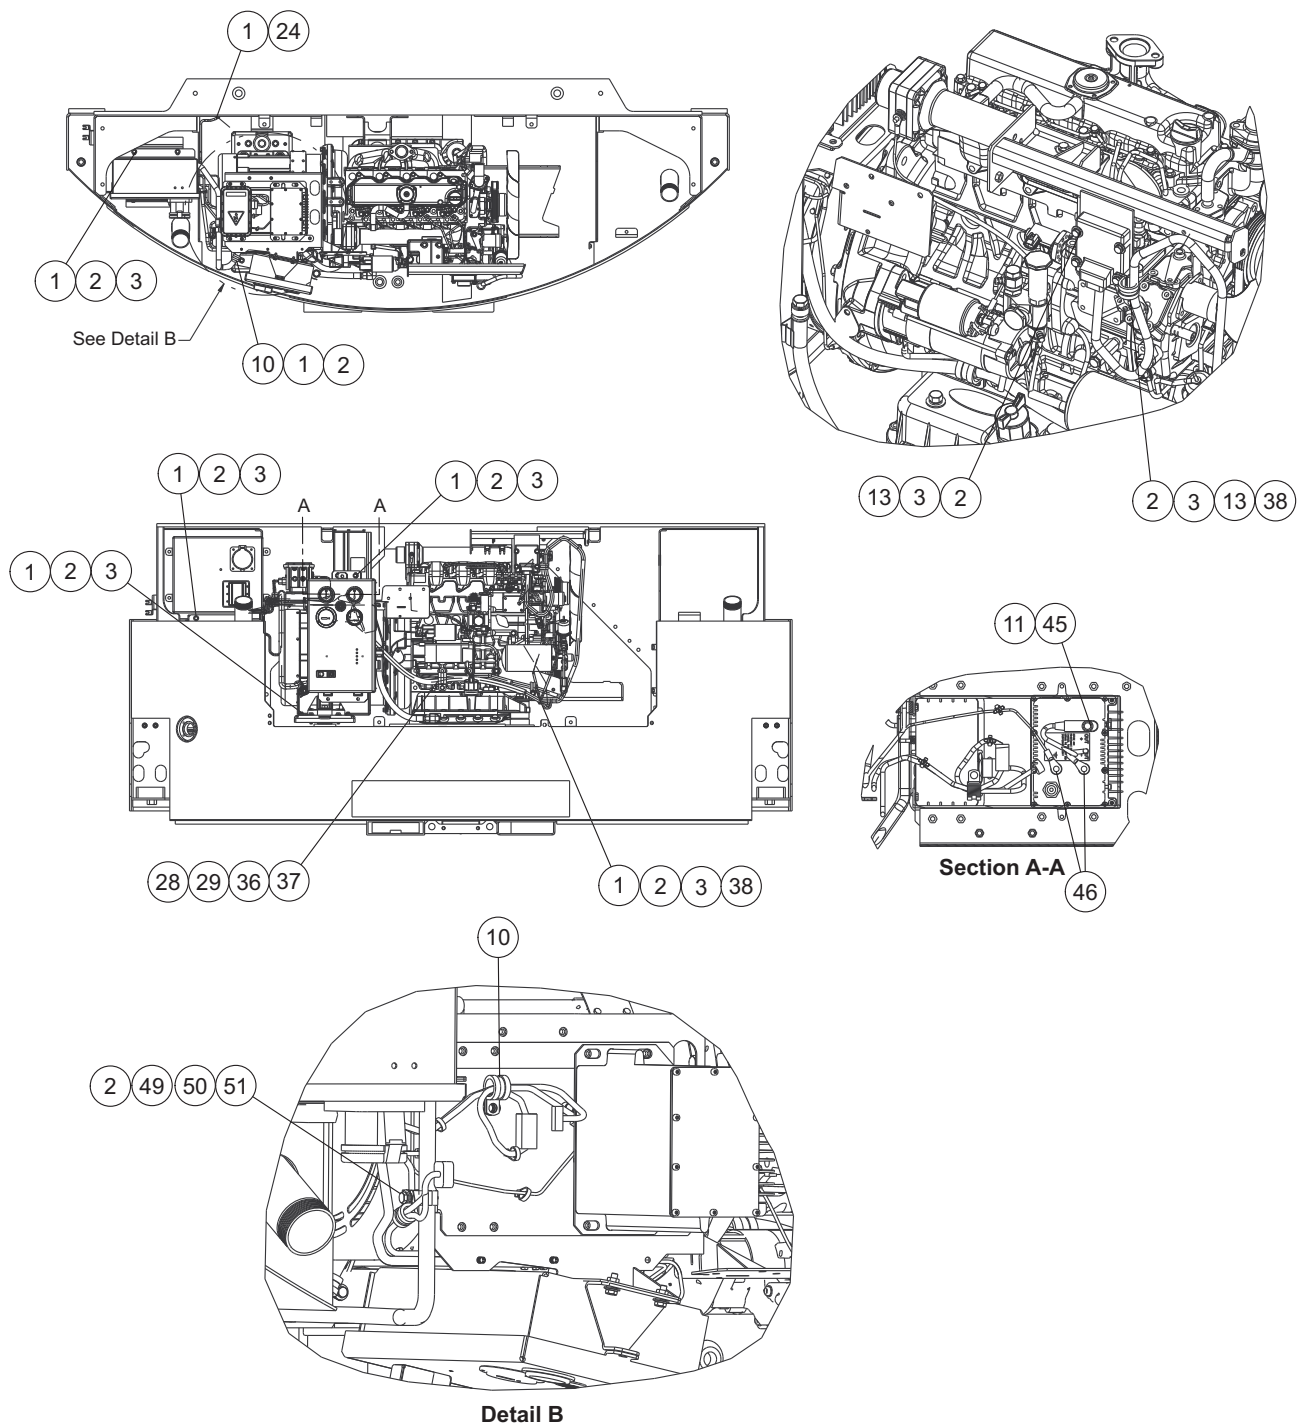

12 Voltage Kit (PIDs RG2051 to RG2058)

Item	Part Number	Description	Qty
1	34-00655-06	Screw, Cap Hex Head	12
2	34-00662-11	Washer, Plain 1/4	16
3	34-00663-11	Washer, Lock 1/4 Spring	14
10	44-00102-54	Clamp, Cushioned	2
13	66U1-5361-47	Bolt, Machine Hex Head	4
24	34-00372-41	Washer, Lock 1/4 Ext Tooth	1
28	44-00102-59	Clamp, Cushioned	1
29	34-01155-25	Screw, Cap Hex Head	1
36	34-01146-12	Washer, Lock M12 Spring	1
37	34-01151-12	Washer, Flat M12	1
38	44-00102-56	Clamp, Cushioned	3
45	34-01184-106	Nut, Lock	1
46	34-01184-108	Nut, Lock	2
49	34-00655-12	Screw, Cap Hex Head	1
50	44-01143-09	Clamp	1
51	44-00102-52	Clamp, Cushioned	1


12 Voltage Kit (PIDs RG2059 to RG2068)

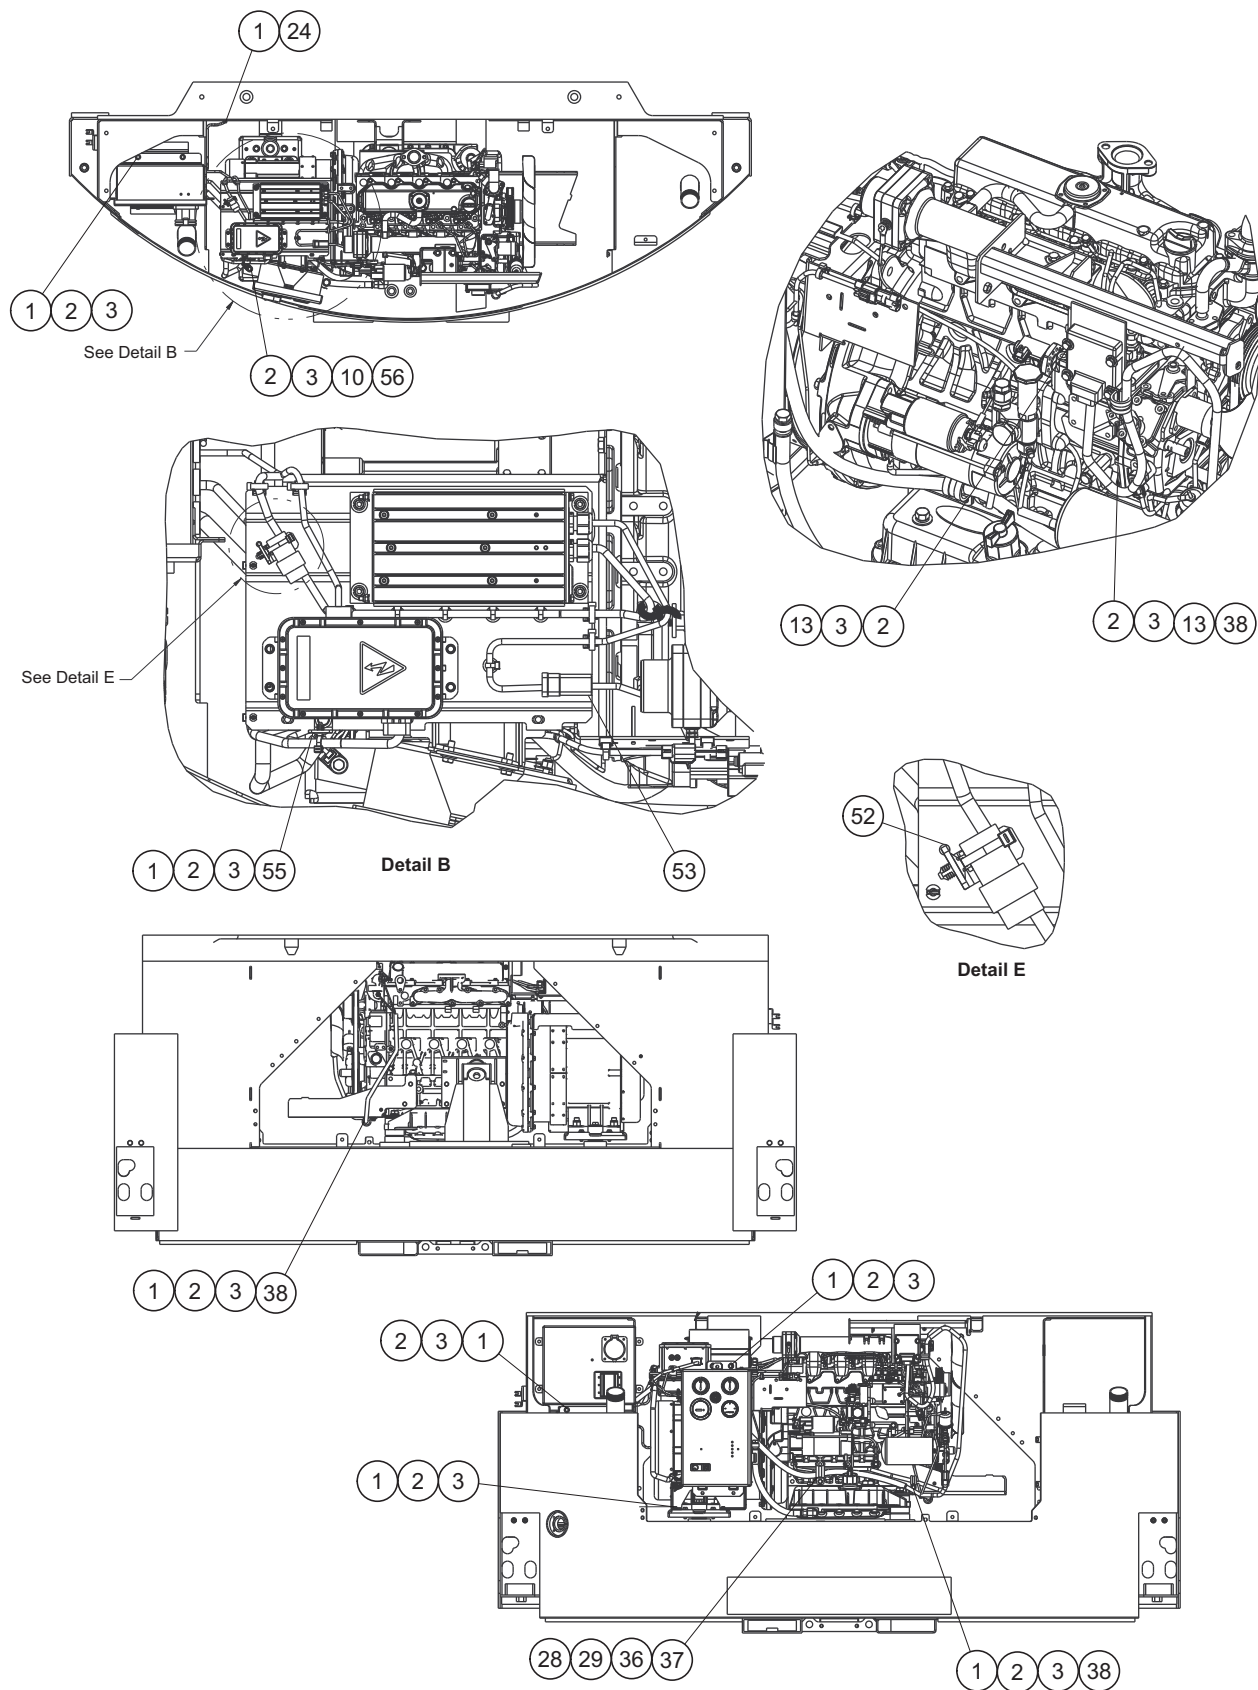

12 Voltage Kit (PIDs RG2059 to RG2068)

Item	Part Number	Description	Qty
1	34-00655-06	Screw, Cap Hex Head	12
2	34-00662-11	Washer, Plain 1/4	16
3	34-00663-11	Washer, Lock 1/4 Spring	14
10	44-60163-01	Clamp	1
13	66U1-5361-47	Bolt, Machine Hex Head	4
24	34-00372-41	Washer, Lock 1/4 Ext Tooth	1
28	44-00102-59	Clamp, Cushioned	1
29	34-01155-25	Screw, Cap Hex Head	1
36	34-01146-12	Washer, Lock M12 Spring	1
37	34-01151-12	Washer, Flat M12	1
38	44-00102-56	Clamp, Cushioned	1
52	68-17993-01	Angle, Bracket	1
53	22-04331-00	Clip. Push On	1
55	68-17993-00	Angle, Bracket	1
56	34-00655-08	Screw, Cap Hex Head	1


13 Coolant System

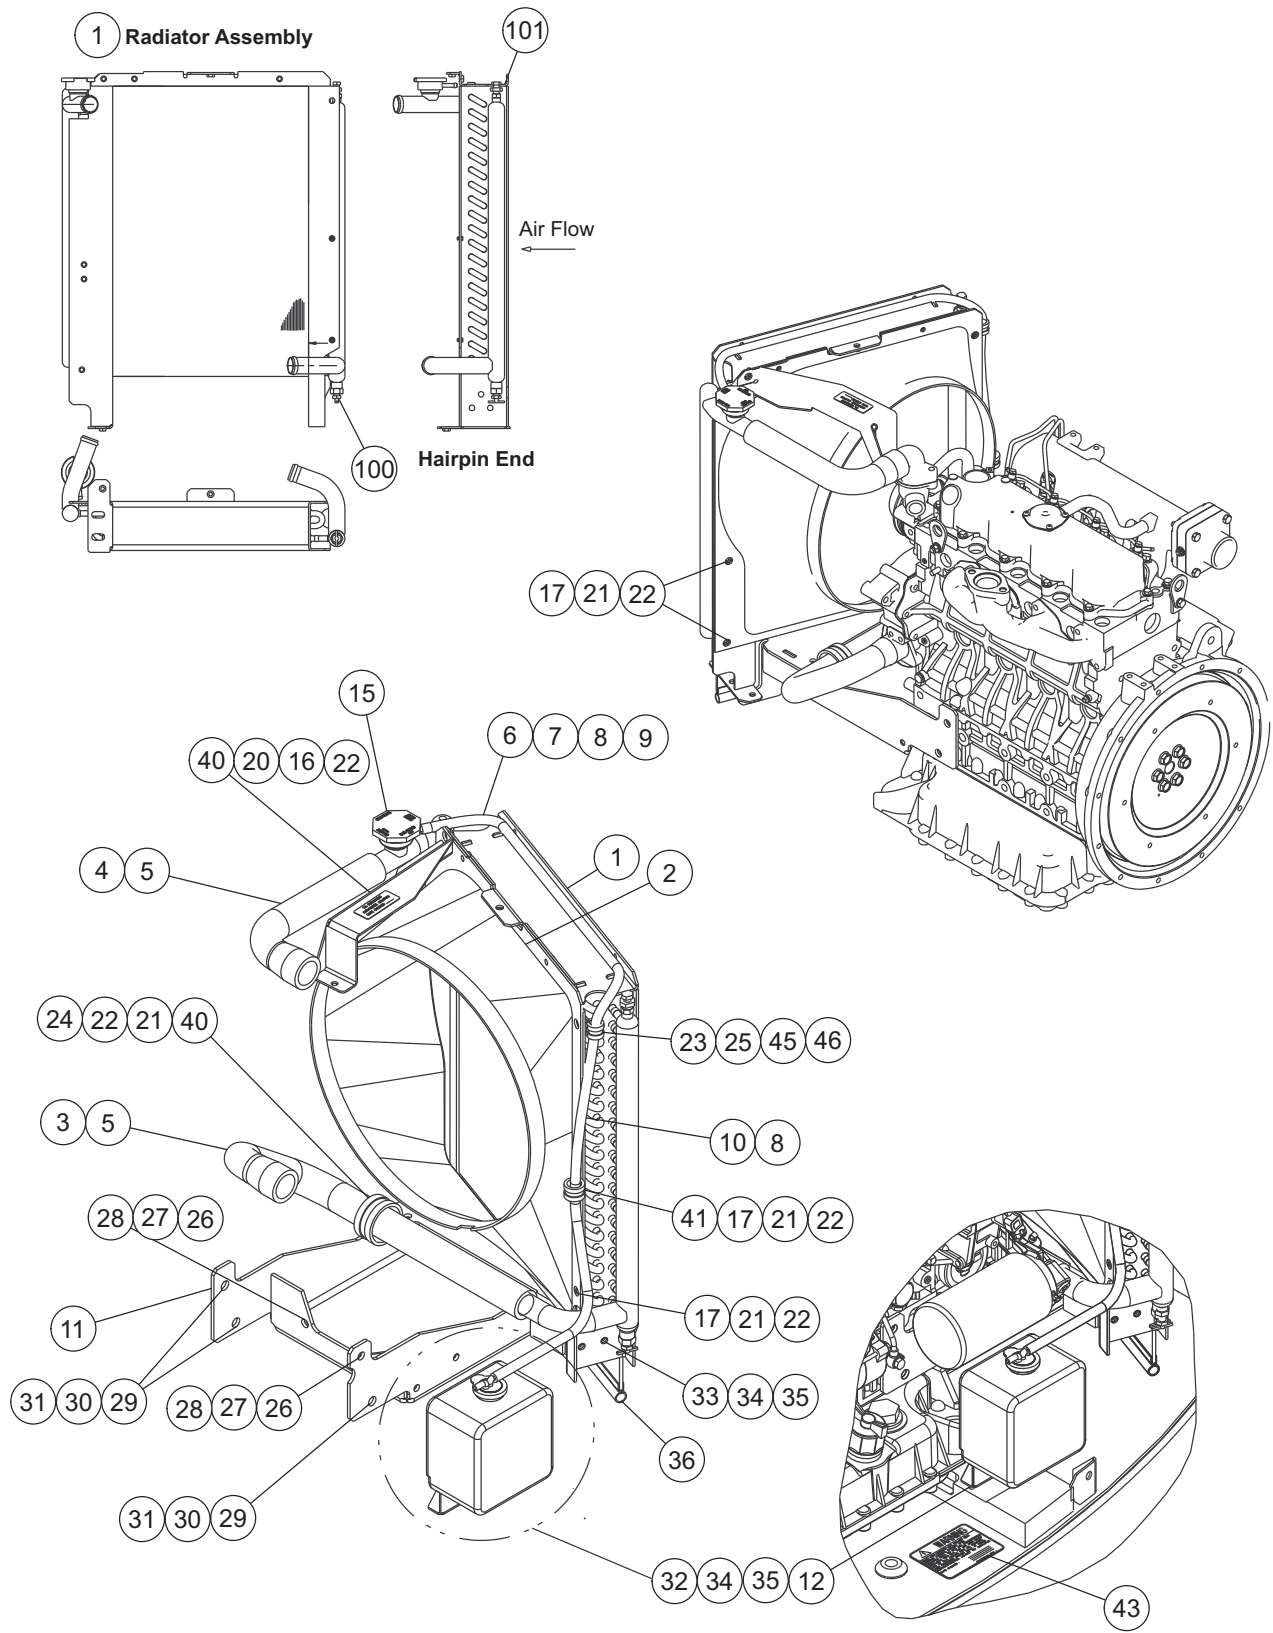

13 Coolant System

Item	Part Number	Description	Qty
1	81-04054-00	Radiator Assembly Includes:	1
	40-00117-01	Drain Cock	1
2	58-04765-00	Venturi	1
3	58-04268-10	Hose, Formed Inlet	1
4	58-04267-10	Hose, Formed Outlet	1
5	KA69JM824	Clamp, Hose	4
6	58-04184-04	Hose, Fuel 1/4 ID X 46.00	1
7	44-00388-00	Clamp, Hose	2
8	58-00079-02	Sta-Strap	4
9	58-04316-00	Base, Mounting	2
10	58-00848-20	Tube, Slit	1
11	86-04288-01	Support Assembly	1
12	86-04470-00	Bracket Assembly	1
15	30-00397-00	Cap, Radiator	1
16	86-04675-00	Support Assembly	1
17	34-00655-06	Screw, Cap Hex Head 1/4-20 X 0.75	4
20	34-00662-11	Washer, Plain	1
21	69NT35-2692-1	Washer, Fender	5
22	34-00663-11	Washer, Lock 1/4 Spring	6
23	34-00667-11	Nut, Self Lock	1
24	44-00102-61	Clamp, Cushioned	1
25	44-00102-52	Clamp, Cushioned	1
26	34-01154-25	Screw, Cap Hex Head M10 X 25mm	3
27	34-01151-10	Washer, Flat	3
28	34-01146-10	Washer, Lock	3
29	34-01155-25	Screw, Cap Hex Head M12 X 25mm	3
30	34-01151-12	Washer, Flat	3
31	34-01146-12	Washer, Lock	3
32	66U1-5361-6	Screw, Cap Hex Head 5/16-18 X 3/4	2
33	66U1-5361-39	Screw, Cap Hex Head 5/16-18 X 1.00	5
34	34-00663-12	Washer, Lock	7
35	66U1-5321-4	Washer, Plain	7
36	42-00264-09	Seal Trim, White	1
40	34-00655-08	Screw, Cap Hex Head 1/4-20 X 1.00	3
41	44-00102-54	Clamp, Cushioned	1
43	62-10903-00	Label, Warning Coolant Mix	1
45	34-00792-08	Screw, Cap Hex Head	1
46	34-00662-12	Washer, Plain	2
100	40-00117-01	Drain Cock	1
101	40-00081-00	Air Vent	1

14 Control Box - PIDS RG2051 to RG2058

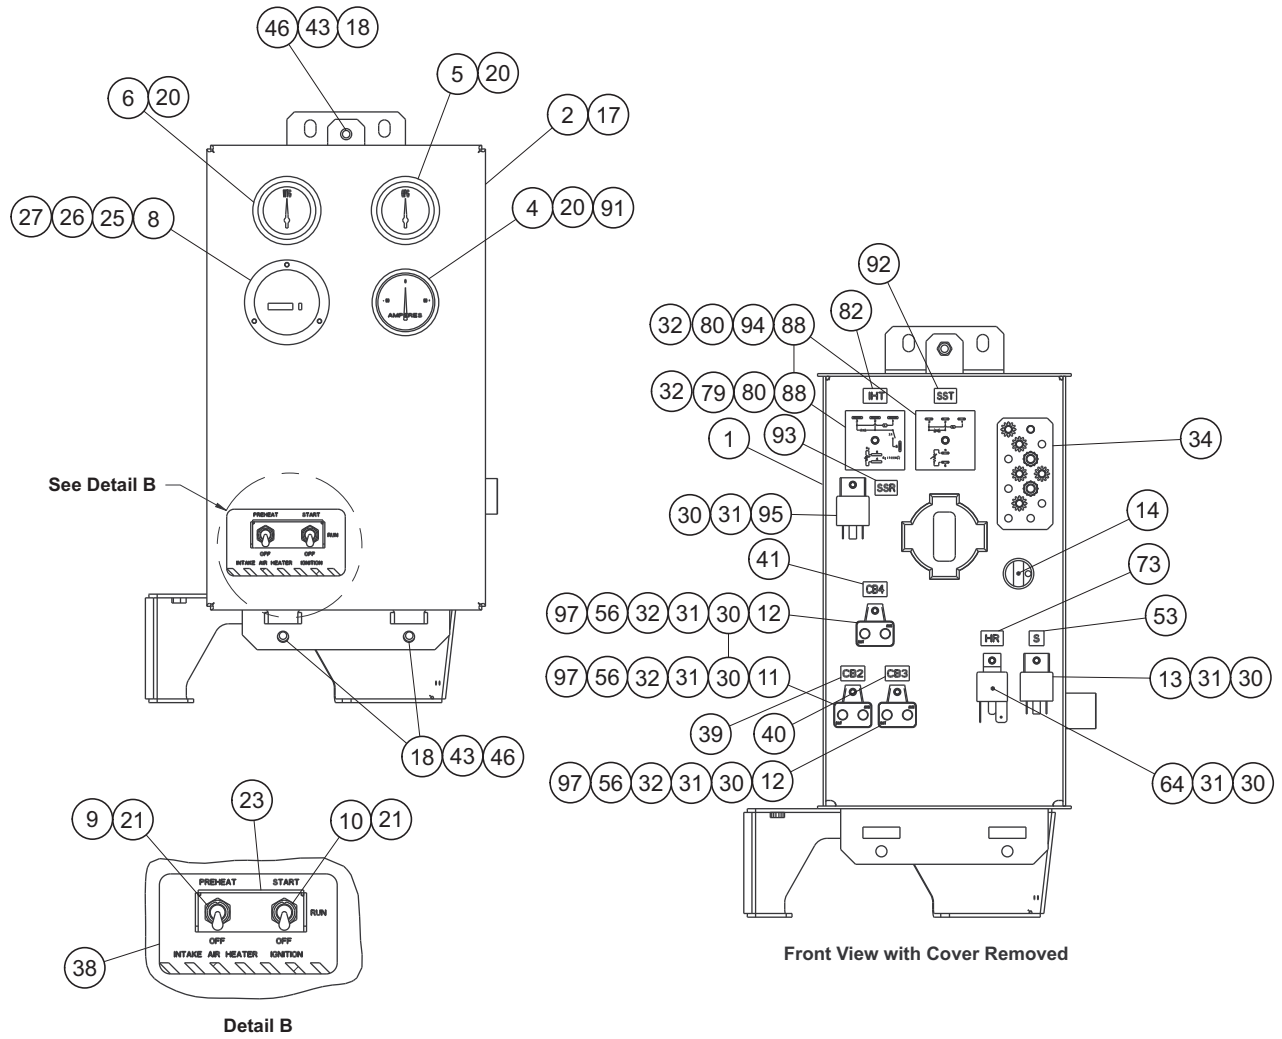


14 Control Box - PIDS RG2051 to RG2058

Item	Part Number	Description	Qty
	91-00423-01	Box Assembly Includes	1
1	86-04998-01	Control Box	1
2	86-04997-00	Cover, Control Box	1
3	22-04283-01	Wire Harness - Low Voltage for Control Box to Main Connections	1
4	22-00538-01	Ammeter	1
5	66U1-2823	Oil Pressure Gauge (OPG)	1
6	12-00097-03	Water Temperature Gauge (WTG)	1
8	10-00448-50	Hour Meter	1
9	10-01129-19	Intake Heater Switch (HS), Toggle, 4 Pole	1
10	10-01129-14	Ignition Switch (IGN), Toggle	1
11	10-00171-12	Circuit Breaker 30 Amp	1
12	10-00171-13	Circuit Breaker 50 Amp	2
13	10-00286-18	Safety Relay (S)	1
14	22-04297-00	Wire Harness - Low Voltage for Control Box and Battery Charger	1
15	66U1-9592-13	Standoff	2
17	42-00341-00	Gasket, Control Box	1
18	34-00655-08	Screw, Cap Hex Head 1/4-20 X 1.00	3
20	KK71EW223	O-Ring	3
21	42-00583-00	Seal Panel Bushing	2
23	68-12973-00	Bracket	1
25	69GS4-1582-1	Gasket	1
26	66U1-6651-15	Screw, Machine Pan Head 4-40 X 3/4	3
27	34-00667-05	Nut, Self Lock	3
30	34-00667-08	Nut, Self Lock	6
31	66U1-5321-2	Washer, Plain 8 Type A	6
32	66U1-5331-3	Washer, Lock 10 Spring	8
34	68-86230-02	Strap Assembly Ground	1
38	62-02669-01	Label, IHR & IGN Switches	1
39	66U1-3662-21	Label, CB2	1
40	66CH1-1002-5	Label, CB3	1
41	66CH1-1002-4	Label, CB4	1
42	34-00667-11	Nut, Self Lock	9
43	34-06212-12	Washer, Plain 1/4 N Type A	3
46	AU11JR171	Washer, Lock 1/4 Spring	3
47	66U1-8772	Diode, 6 Amp	1
53	66CH1-1002-132	Label, S	1

14 Control Box - PIDS RG2051 to RG2058

54	34-00372-41	Washer, Lock 1/4 Ext Tooth	11
56	AT39QA132	Nut, Hex 10-32	6
59	22-01030-54	Diode Assembly, 6 Amp	1
64	10-00328-06	Intake Heater Relay, 70A	1
73	66CH1-1002-38	Label, HR	1
75	44-00094-09	Clip, Spring	1
76	34-00928-03	Rivet, Blind	2
77	22-02200-06	Washer, Plain 6	2
78	34-00667-07	Nut, Self Lock	2
79	10-00469-00	Relay, 12VDC, 50-60 Hertz	1
80	66U1-5321-8	Washer, Plain 10 Type A	2
82	62-10530-25	Label, IHT	1
88	34-00665-09	Nut, Hex 10-32	2
91	58-00836-13	Spacer Nylon	2
92	62-10530-31	Label, SST	1
93	62-10530-32	Label, SSR	1
94	10-00488-00	Starter Solenoid Timer, 12VDC	1
95	10-00286-03	Starter Solenoid Relay, Max 30 Amp	1
97	58-01427-00	Cap Round Silicone	6

14 Control Box (PIDS RG2059 to RG2068)

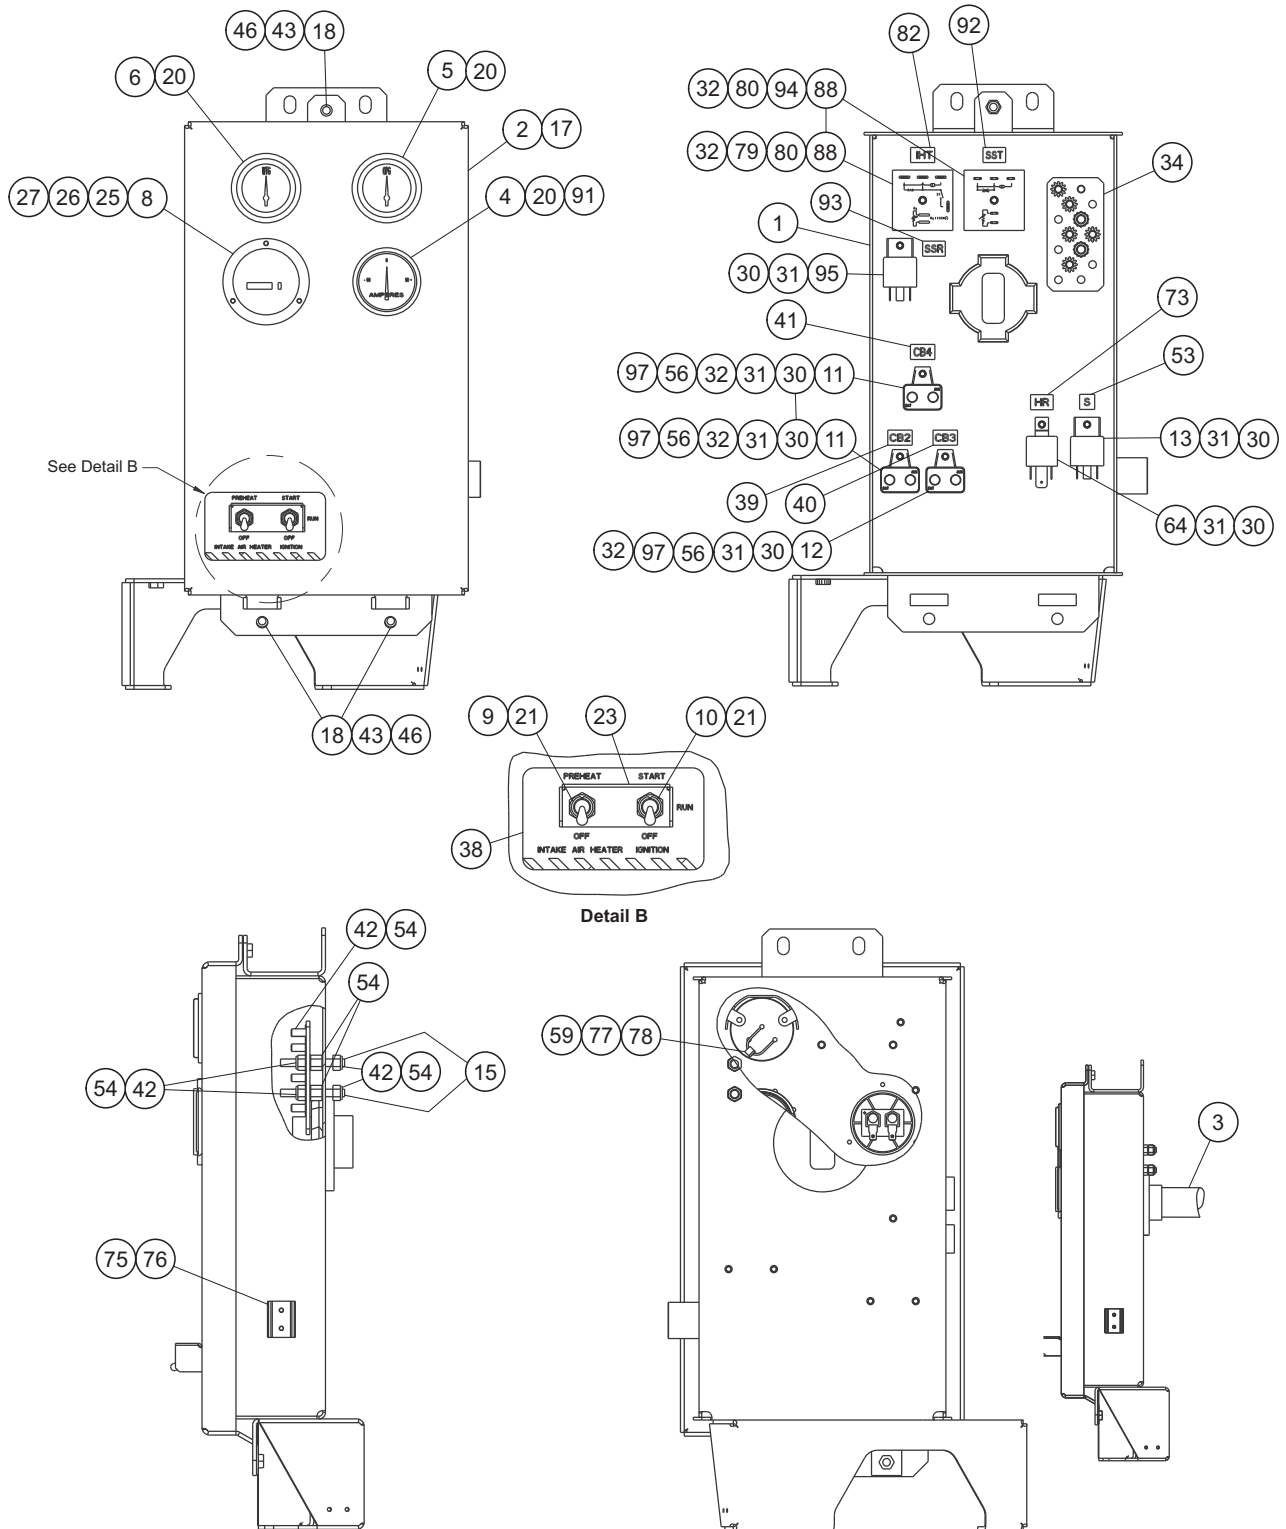


14 Control Box (PIDS RG2059 to RG2068)

Item	Part Number	Description	Qty
	91-00469-01	Box Assembly Includes:	1
1	86-05190-01	Box Assembly	1
2	86-04997-00	Cover, Control Box	1
3	22-04346-01	Wire Harness - Low Voltage	1
4	22-00538-01	Ammeter	1
5	66U-1-2823	Oil Pressure Gauge (OPG)	1
6	12-00097-03	Water Temperature Gauge (WTG)	1
8	10-00448-50	Hour Meter	1
9	10-01129-19	Intake Heater Switch (HS), Toggle, 4 Pole	1
10	10-01129-14	Ignition Switch (IGN), Toggle	1
11	10-00171-12	Circuit Breaker 30 Amp	2
12	10-00171-13	Circuit Breaker 50 Amp	1
13	10-00286-18	Safety Relay (S)	1
15	66U-1-9592-13	Standoff	2
17	42-00341-00	Gasket	1
18	34-00655-08	Screw, Cap Hex Head	3
20	KK71EW223	O-Ring	3
21	42-00583-00	Seal	2
23	68-12973-00	Bracket	1
25	69GS-4-1582-1	Gasket	1
26	66U-1-6651-15	Screw	3
27	34-00667-05	Nut, Self Lock	3
30	34-00667-08	Nut, Self Lock	6
31	66U-1-5321-2	Washer, Plain	6
32	66U-1-5331-3	Washer, Lock	8
34	68-86230-00	Strap Assembly	1
36	58-00079-02	Sta-Strap	10
38	62-02669-01	Label, IHR & IGN	1
39	66U-1-3662-21	Label, CB2	1
40	66CH-1-1002-5	Label, CB5	1
41	66CH-1-1002-4	Label, CB4	1
42	34-00667-11	Nut, Self Lock	10
43	34-06212-12	Washer, Plain	3
46	AU11JR171	Washer, Lock	3
53	66CH-1-1002-132	Label, S	1
54	34-00372-41	Washer, Lock	12

14 Control Box (PIDS RG2059 to RG2068)

56	AT39QA132	Nut, Hex	6
59	22-01030-54	Diode Assembly	1
64	10-00328-06	Intake Heater Relay, 70A	1
73	66CH-1-1002-38	Label, HR	1
75	44-00094-09	Clip, Spring	1
76	34-00928-03	Rivet, Blind	2
77	22-02200-06	Washer, Plain	2
78	34-00667-07	Nut, Self Lock	2
79	10-00469-00	Relay, 12VDC, 50-60 Hertz	1
80	66U-1-5321-8	Washer, Plain	2
82	62-10530-25	Label, IHT	1
88	34-00665-09	Nut, Hex	2
91	58-00836-13	Spacer	2
92	62-10530-31	Label, SST	1
93	62-10530-32	Label, SSR	1
94	10-00488-00	Starter Solenoid Timer, 12VDC	1
95	10-00286-03	Starter Solenoid Relay, Max 30 Amp	1
97	58-01427-00	Cap	6


15 Receptacle Box - PIDS RG2051 to RG2058

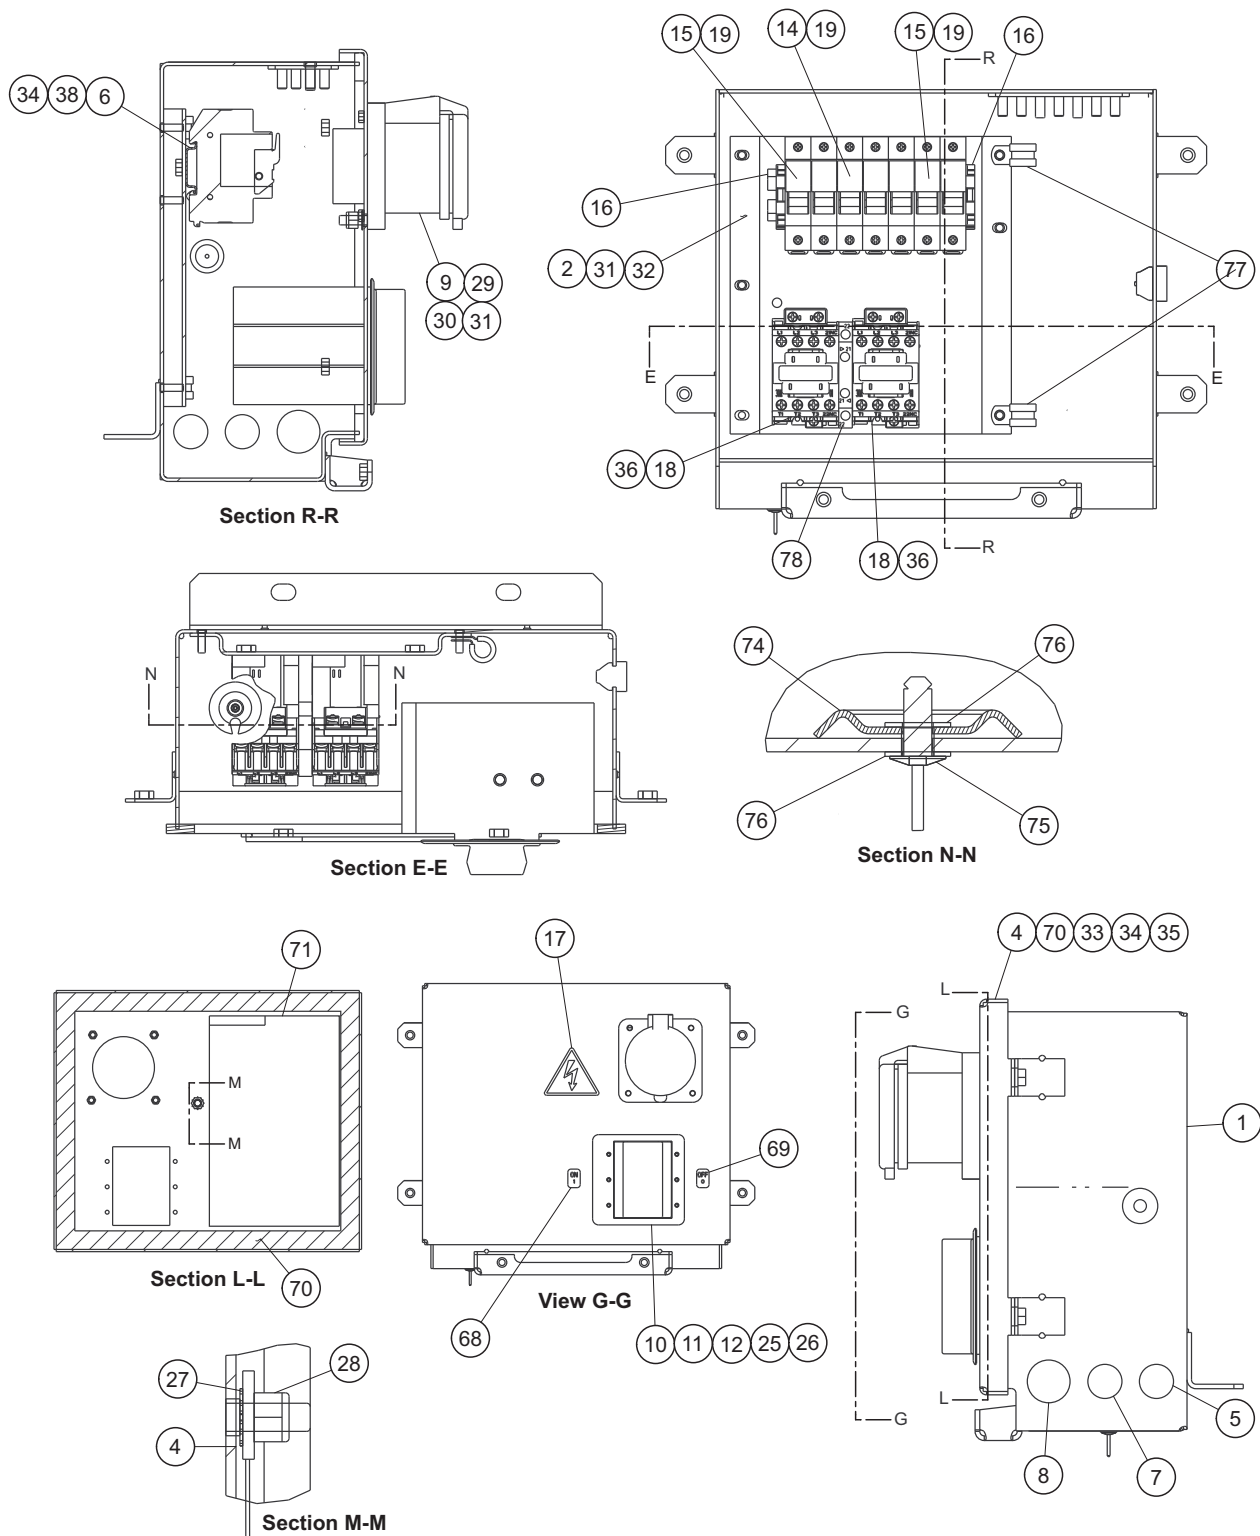

Item	Part Number	Description	Qty
	91-00424-03	Box Assembly Includes:	1
1	86-05172-00	Receptacle Box	1
2	68-16798-01	Channel	1
4	86-05029-00	Weld Assembly Cover	1

15 Receptacle Box - PIDS RG2051 to RG2058			
5	22-04294-00	Wire Harness - High Voltage for Receptacle Box, Battery Charger and Voltage Controller	1
6	68-15626-08	Rail	1
7	22-04295-00	Wire Harness - Low Voltage for Voltage and Grounds	1
8	22-04338-00	Wire Harness - High Voltage for Generator	1
9	22-01679-00	Receptacle 32 Amp	1
10	66U1-7842-5	Circuit Breaker 480V	1
11	66CH1-1092-6	Boot, Frame	1
12	66U2-1391-1	Boot With Hardware	1
13	68-86230-00	Strap Assembly	1
14	22-04178-10	Fuse Holder, 3 Poles	1
15	22-04178-11	Fuse Holder, 2 Poles	2
16	22-04158-00	Stop, Din Rail	2
17	62-03957-04	Decal, Warning High Voltage	2
18	10-00431-07	Contactor, 30 Amp	2
19	22-01196-24	Fuse, 5A 600V	7
25	66U1-7842-6	Nut, Hex 10-32 Circuit Breaker	6
26	66U1-7842-7	Washer, Flat	12
27	34-00372-41	Washer, Lock 1/4 Ext Tooth	10
28	34-00667-11	Nut, Self Lock	10
29	66U1-5371-6	Screw, Machine Hex Head	4
30	66U1-5331-3	Washer, Lock	4
31	66U1-5321-8	Washer, Plain	10
32	34-00795-09	Nut, Self Lock	6
33	66U1-5361-25	Screw, Cap Hex Head	3
34	34-06212-12	Washer, Plain	5
35	AU11JR171	Washer, Lock	3
36	34-06253-01	Screw, Cap	4
38	34-00655-04	Screw, Cap Hex Head	2
68	62-02670-00	Label, On	1
69	62-02670-01	Label, Off	1
70	42-00752-01	Gasket, Access Panel	1
71	62-11742-00	Label, Schematic	1
74	58-00660-00	Washer, Condensate Drain	1
75	34-00928-13	Rivet, Blind	1
76	34-00829-09	Washer, Plain	2
77	34-00373-54	Clamp, Tube	2
78	10-00431-21	Auxiliary Contacts	1

15 Receptacle Box - PIDS RG2059 to RG2068

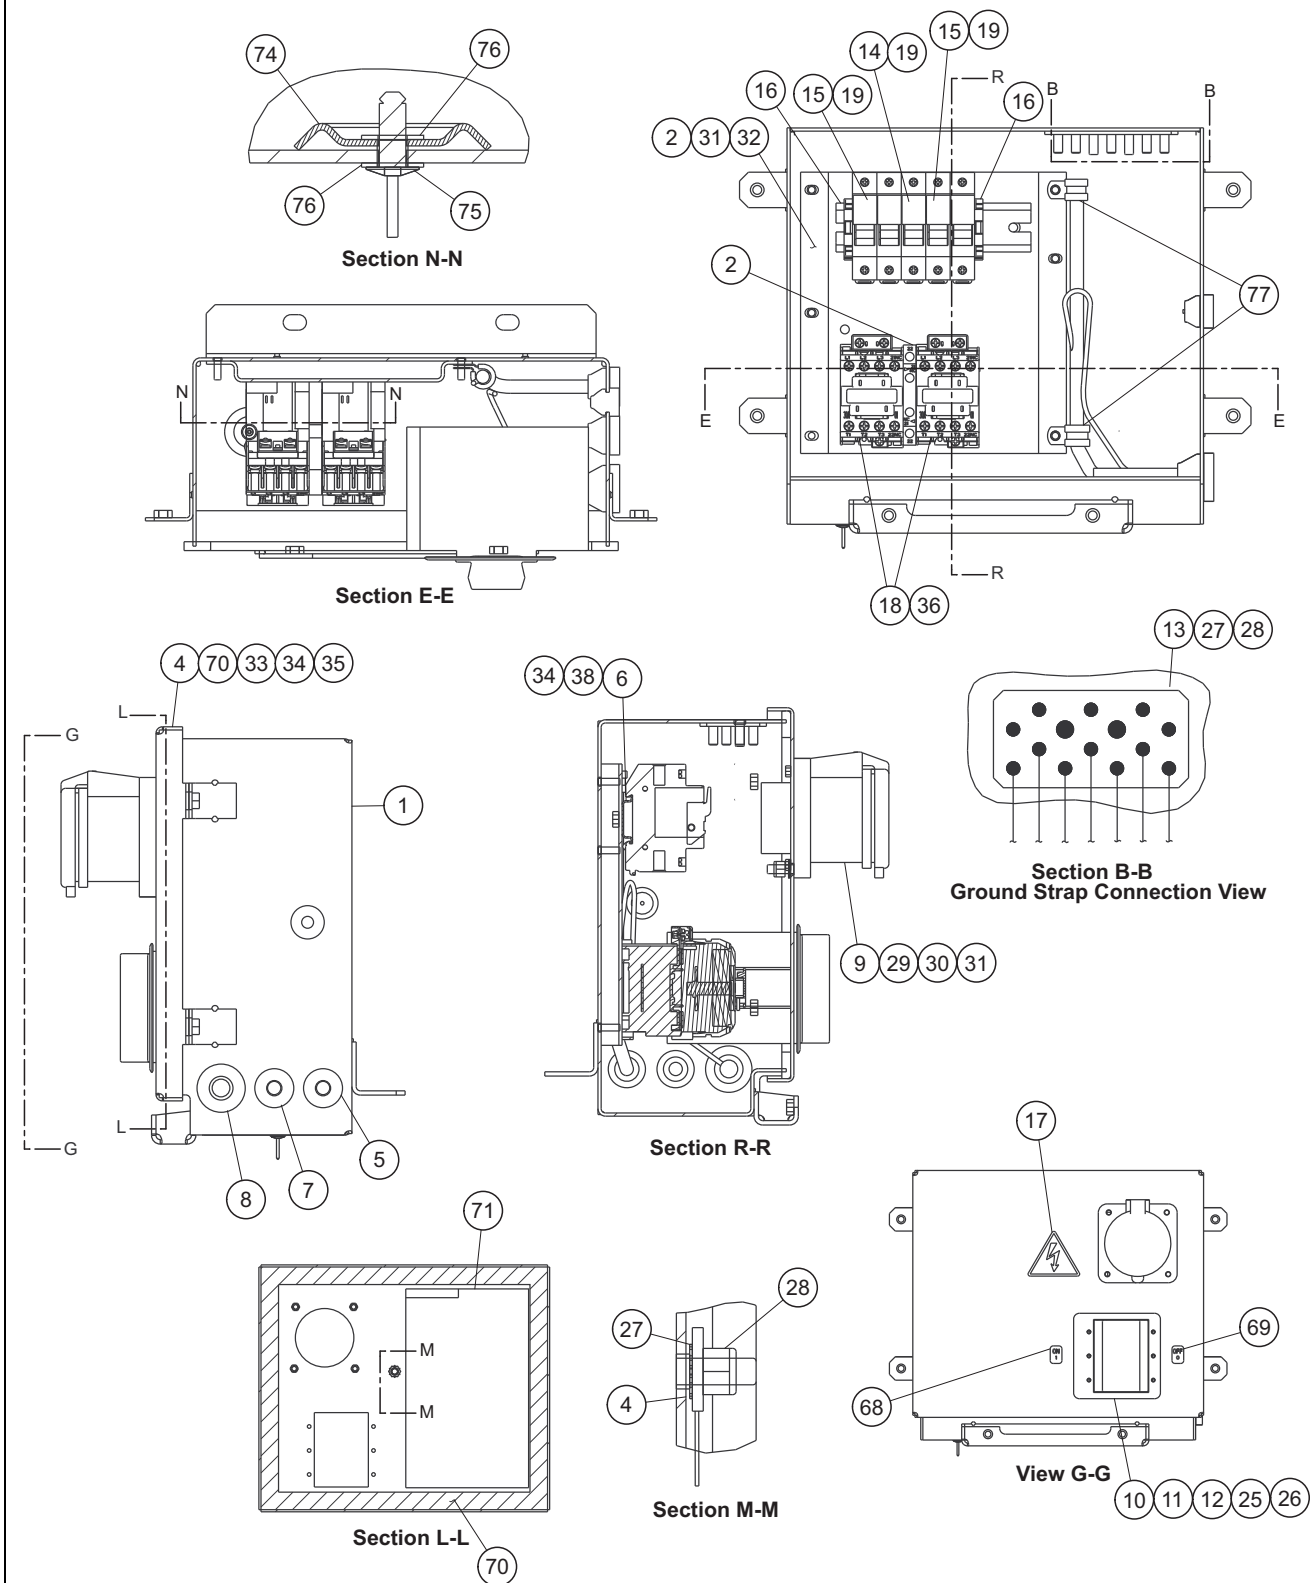


Item	Part Number	Description	Qty
1	91-00470-02	Receptacle Box 7-Wire Generator (RG2059) - includes:	1
	91-00472-04	Receptacle Box 8-Wire Generator (RG2060 to RG2068) - includes:	
2	86-05172-00	Box Assembly, Weld	1

15 Receptacle Box - PIDS RG2059 to RG2068			
4	86-05070-00	Weld Assembly	1
5	22-04404-00	Wire Harness - High Voltage for Receptacle Box, Battery Charger, Voltage Controller (RG2059)	1
	22-04347-00	Wire Harness - High Voltage for Receptacle Box, Battery Charger, Voltage Controller (RG2060 to RG2068)	1
6	68-15626-08	Rail	1
7	22-04348-00	Wire Harness - Low Voltage for Receptacle Box, Voltage Controller, Grounds	1
8	22-04403-00	Wire Harness - High Voltage for Receptacle Box and Generator (RG 2059)	1
	22-04385-00	Wire Harness - High Voltage for Receptacle Box and Generator (RG 2060 to RG2068)	1
9	22-01679-00	Receptacle	1
10	66U-1-7842-5	Circuit Breaker	1
11	66CH-1-1092-6	Boot, Frame	1
12	66U-2-1391-1	Boot	1
13	68-86230-00	Strap Assembly	1
14	22-04178-12	Fuse Holder, 1 Pole	1
15	22-04178-11	Fuse Holder, 2 Poles	2
16	22-04158-00	Stop	2
17	62-03957-04	Decal, Warning High Voltage	2
18	10-00431-01	Contactor, 30 Amp	2
19	22-01196-24	Fuse	5
20	10-00431-21	Contactor	1
25	66U-1-7842-6	Nut, Hex	6
26	66U-1-7842-7	Washer, Flat	12
27	34-00372-41	Washer, Lock	9
28	34-00667-11	Nut, Self Lock	9
29	66U-1-5371-6	Screw, Mach Hex Head	4
30	66U-1-5331-3	Washer, Lock	4
31	66U-1-5321-8	Washer, Plain	10
32	34-00795-09	Nut, Self Lock	6
33	66U-1-5361-25	Screw, Cap Hex Head	4
34	34-06212-12	Washer, Plain	6
35	AU11JR171	Washer, Lock	4
36	34-06253-01	Screw, Cap	4
38	34-00655-04	Screw, Cap Hex Head	2
68	62-02670-00	Label, On	1
69	62-02670-01	Label, Off	1
70	42-00752-01	Gasket	1
71	62-11959-00	Label, Schematic (RG2059)	1
	62-11960-00	Label, Schematic (RG2060 to RG2068)	1
74	58-00660-00	Washer	1
75	34-00928-13	Rivet, Blind	1
76	34-00829-09	Washer, Plain	2
77	34-00373-53	Clamp, Tube	2

16 Wire Harness

Part Number	Description	Unit PID Range
22-04283-01	Low Voltage for Control Box to Main Connections	RG2051 to RG2058
22-04295-00	Low Voltage for Receptacle Box, Voltage Controller, Grounds	RG2051 to RG2058
22-04297-00	Low Voltage for Control Box to Battery Charger	RG2051 to RG2058
22-04346-01	Low Voltage for Control Box	RG2059 to RG2068
22-04348-00	Low Voltage for Receptacle Box, Voltage Controller, Grounds	RG2059 to RG2068
22-04294-00	High Voltage for Receptacle Box, Battery Charger, Voltage Controller	RG2051 to RG2058
22-04338-00	High Voltage for Receptacle Box and Generator	RG2051 to RG2058
22-04347-00	High Voltage for Receptacle Box, Battery Charger, Voltage Controller	RG2060 to RG2068
22-04385-00	High Voltage for Receptacle Box and Generator	RG2060 to RG2068
22-04403-00	High Voltage for Receptacle Box and Generator	RG2059 only
22-04404-00	High Voltage for Receptacle Box, Battery Charger, Voltage Controller	RG2059 only


22-04283-01	Low Voltage for Control Box to Main Connections	RG2051 to RG2058
--------------------	--	-------------------------

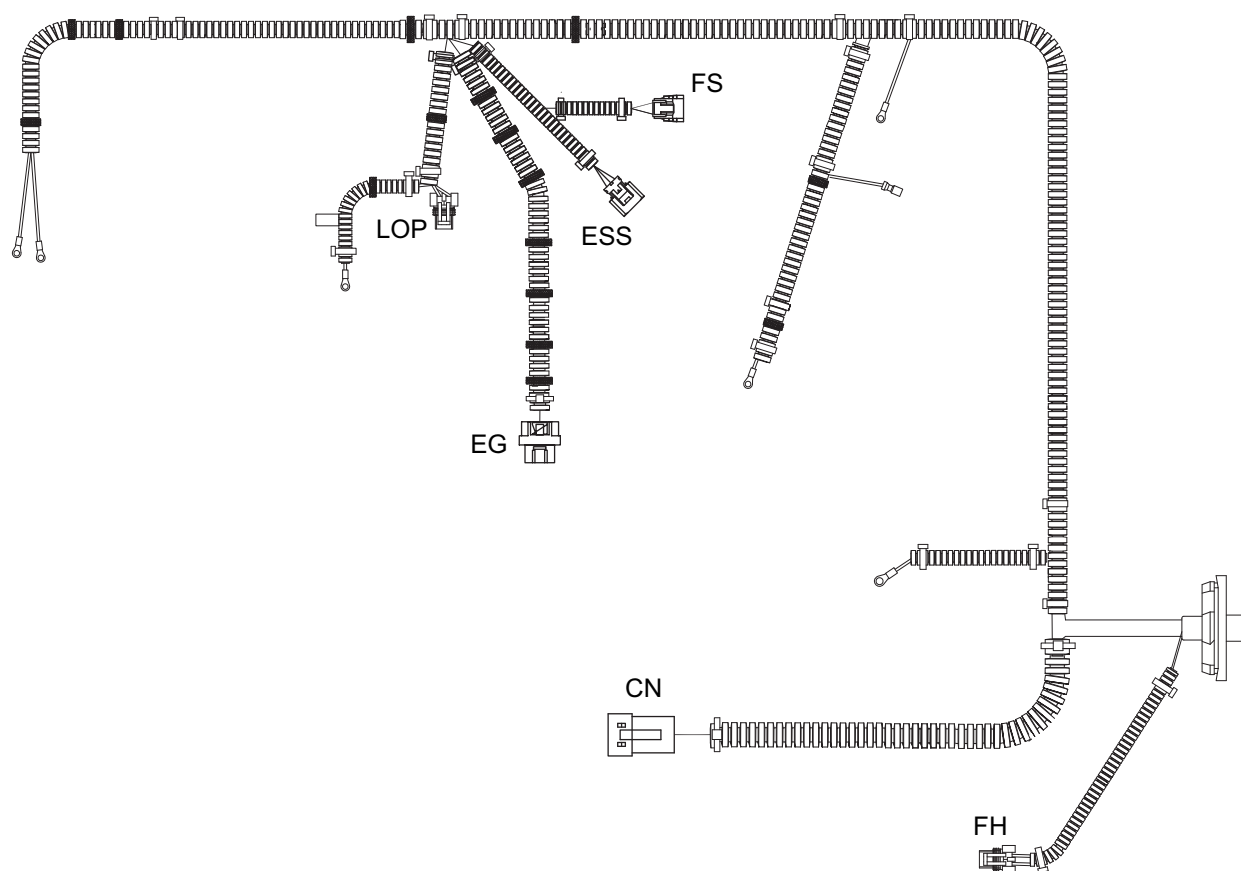

16 Wire Harness


22-04295-00 Low Voltage for Receptacle Box, Voltage Controller, Grounds

RG2051 to RG2058

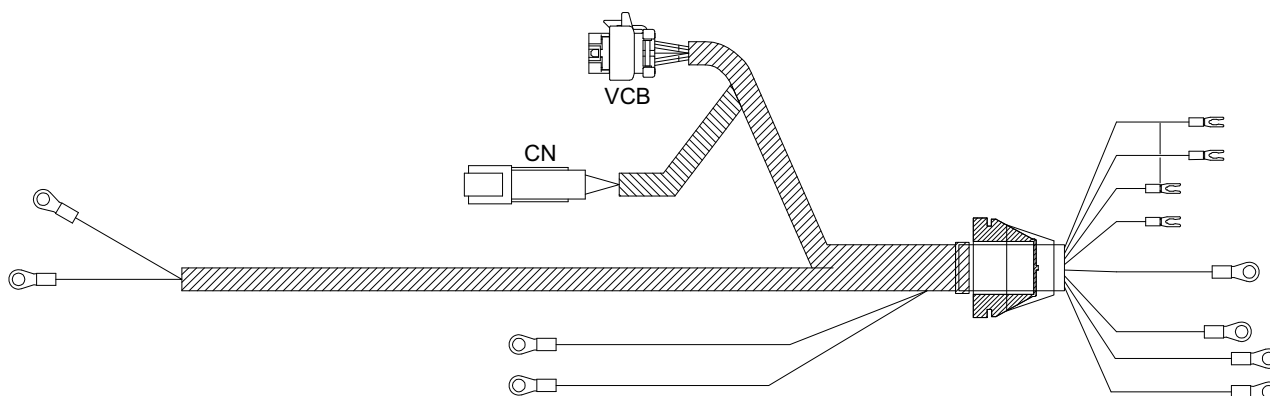


22-04297-00 Low Voltage for Control Box to Battery Charger

RG2051 to RG2058

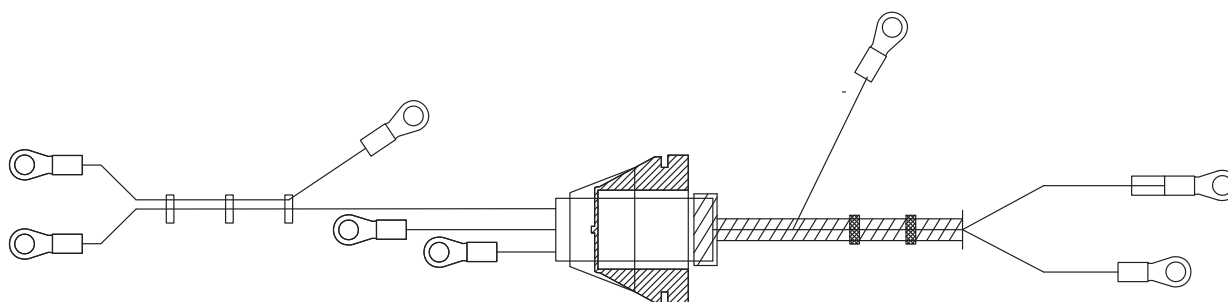


22-04346-01 Low Voltage for Control Box

RG2059 to RG2068

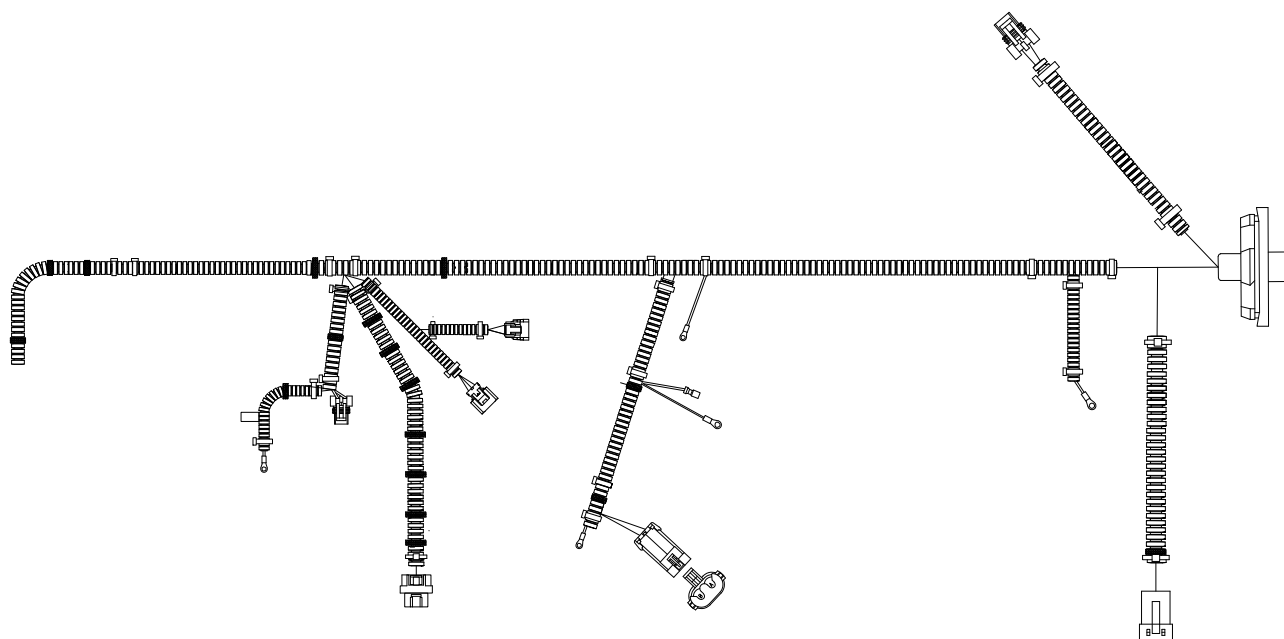


16 Wire Harness


22-04348-00	Low Voltage for Receptacle Box, Voltage Controller, Grounds	RG2059 to RG2068
-------------	---	------------------

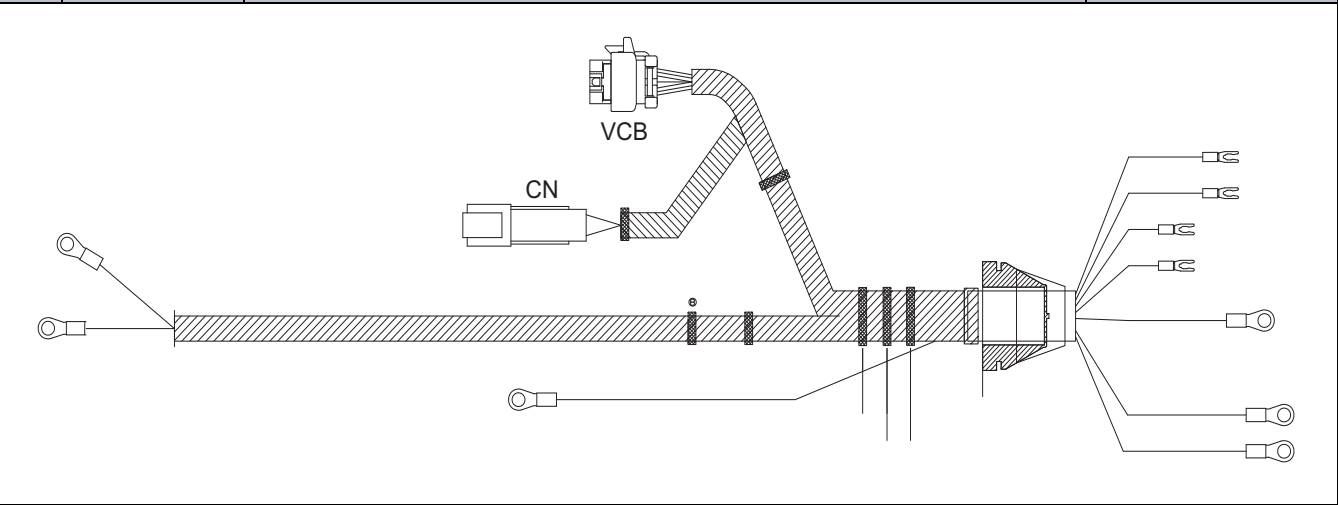

22-04294-00	High Voltage for Receptacle Box, Battery Charger, Voltage Controller	RG2051 to RG2058
-------------	--	------------------

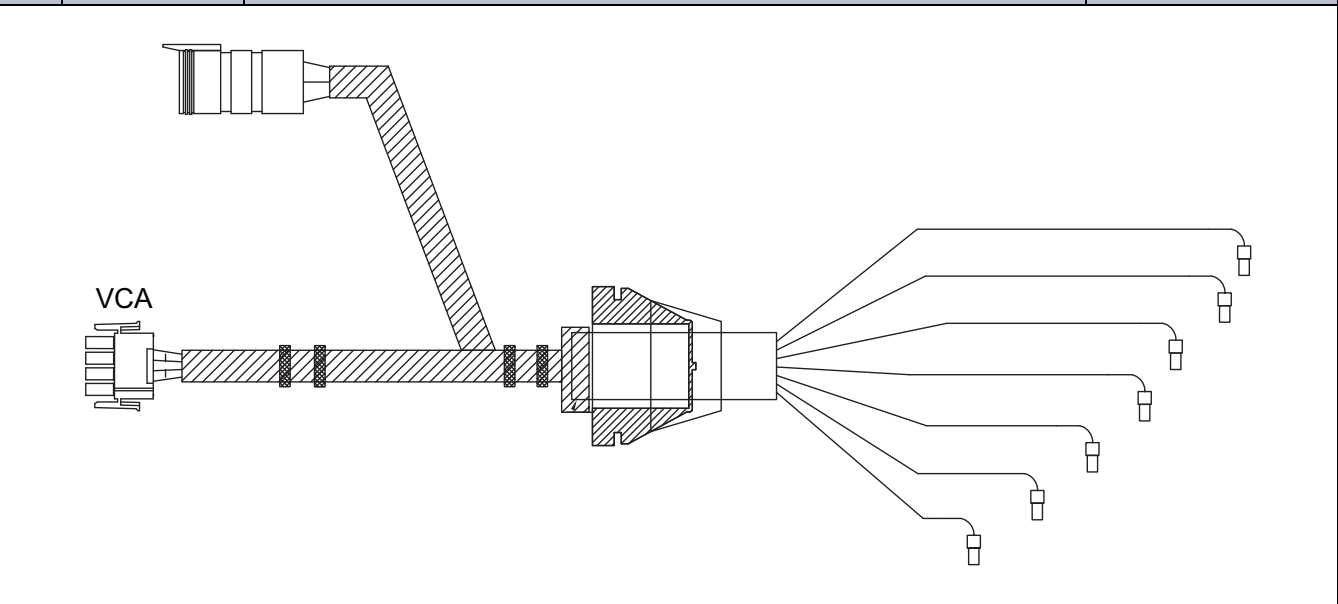


22-04338-00	High Voltage for Receptacle Box and Generator	RG2051 to RG2058
-------------	---	------------------

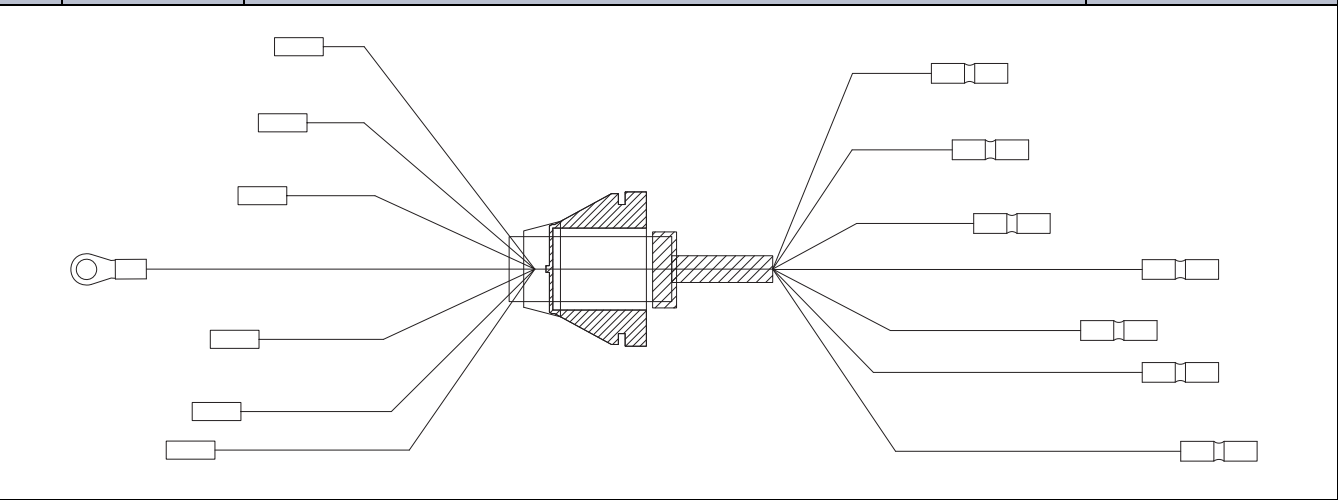


16 Wire Harness


22-04347-00	High Voltage for Receptacle Box, Battery Charger, Voltage Controller	RG2060 to RG2068
-------------	--	------------------

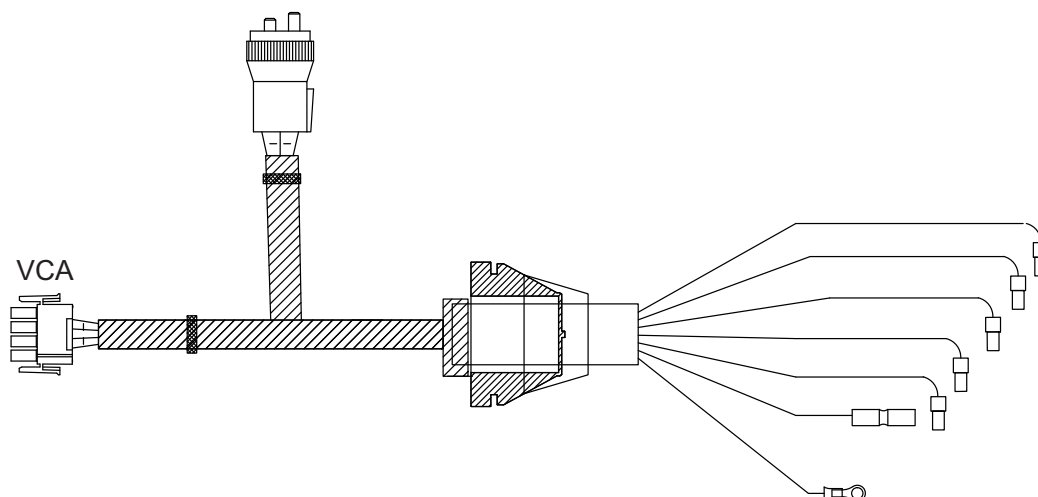

22-04385-00	High Voltage for Receptacle Box and Generator	RG2060 to RG2068
-------------	---	------------------

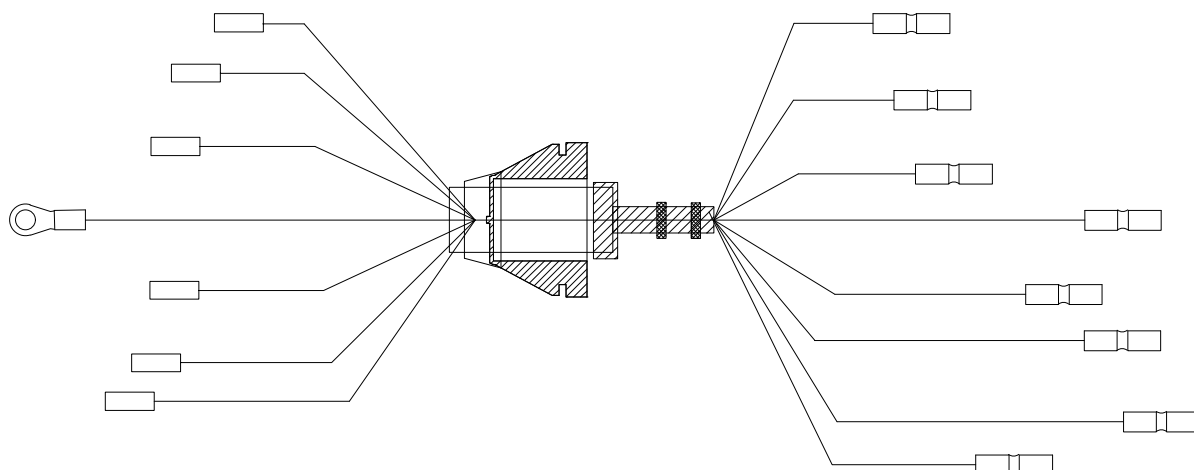

22-04403-00	High Voltage for Receptacle Box and Generator	RG2059 only
-------------	---	-------------

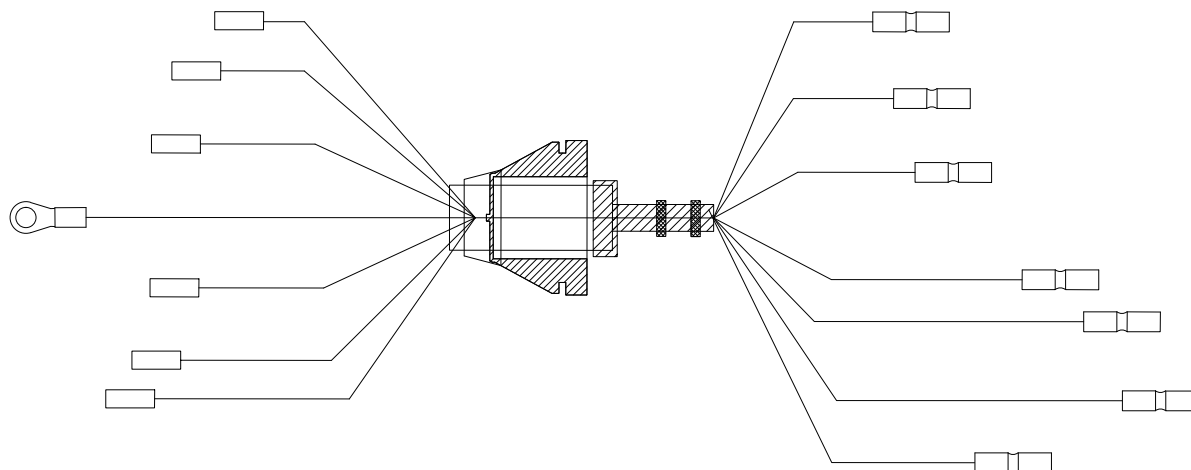


16 Wire Harness

22-04404-00

High Voltage for Receptacle Box, Battery Charger, Voltage Controller

RG2059 only

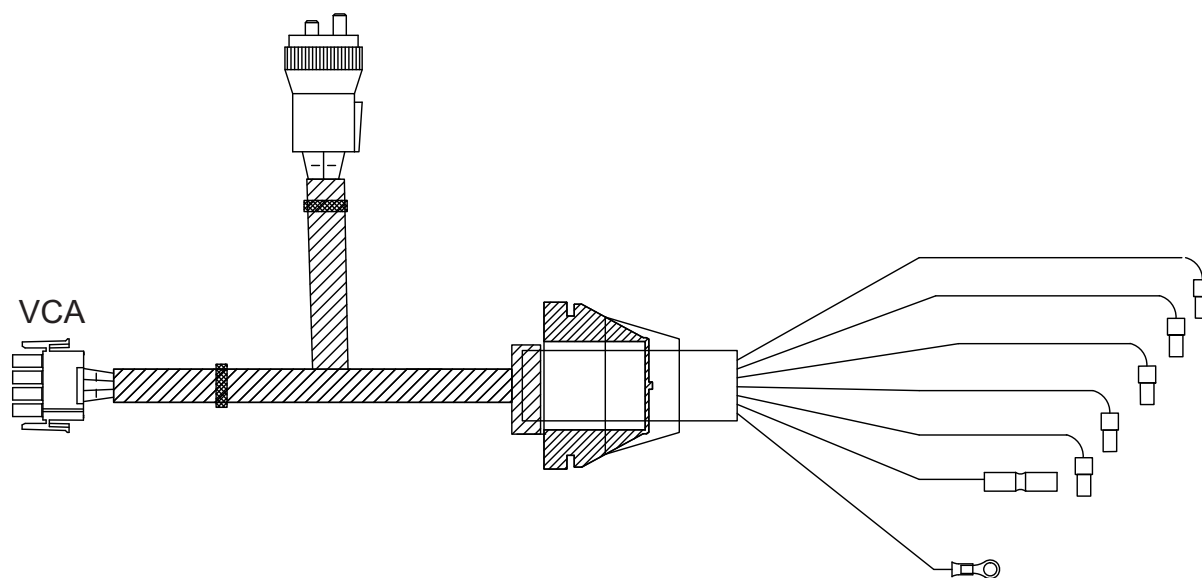

Index

Numerics

10-00158-03	6, 10	30-00435-01	21
10-00171-12	37, 41	30-00460-06	24
10-00171-13	37, 41	30-01090-04	17
10-00286-18	37, 41	30-01128-00	17
10-00431-01	47	30-50347-01	19
10-00431-07	45	34-00308-28	5, 9
10-00431-21	45, 47	34-00354-16	13
10-00448-50	37, 41	34-00357-24	13
10-01129-14	37, 41	34-00363-12	13
10-01129-19	37, 41	34-00363-15	13
12-00097-03	37, 41	34-00366-12	12
12-00098-04	5, 9	34-00366-15	13
12-00272-21	13	34-00368-12	13
12-00592-02	5, 9	34-00368-13	13
12-00683-04	22	34-00368-15	13
12-00707-05	25	34-00372-41	31, 33, 41, 45, 47
12-00707-20	25	34-00372-43	19
12-00722-00	13, 17	34-00373-53	47
12-00722-20	13, 17	34-00373-54	45
12-00722-21	17	34-00559-08	5, 9
22-00538-01	37, 41	34-00588-12	12
22-01030-54	42	34-00588-13	13
22-01196-24	45, 47	34-00655-04	45, 47
22-01633-91	19	34-00655-06	20, 23, 24, 31, 33, 35
22-01633-92	19	34-00655-08	17, 19, 27, 35, 37, 41
22-01679-00	45, 47	34-00655-10	25
22-02200-06	42	34-00655-12	19, 27, 31
22-04158-00	45, 47	34-00662-11	19, 23, 24, 25, 27, 31, 33, 35
22-04178-10	45	34-00662-12	6, 10, 19, 27, 35
22-04178-11	45, 47	34-00662-13	22, 24
22-04178-12	47	34-00663-11	17, 19, 23, 24, 25, 31, 33, 35
22-04283-01	37	34-00663-12	17, 27, 35
22-04294-00	45	34-00663-13	5, 9, 21, 22, 24
22-04295-00	45	34-00665-09	42
22-04297-00	37	34-00667-05	37, 41
22-04338-00	45	34-00667-07	42
22-04346-01	41	34-00667-08	37, 41
22-04348-00	47	34-00667-11	19, 20, 35, 37, 41, 45, 47
22-04403-00	47	34-00667-12	14, 17, 19
22-04404-00	47	34-00667-13	5, 9, 14
26-00136-21SV	5, 9	34-00667-15	5, 9
30-00328-00	20	34-00792-08	35
30-00397-00	35	34-00792-10	17
30-00424-20	21	34-00795-09	45, 47
30-00426-05	20	34-00795-17	5, 9
30-00426-25	20	34-00804-18	5, 9
30-00427-00	21	34-00807-08	21, 22, 24
		34-00807-10	5, 9
		34-00807-12	5, 9

34-00829-09	45, 47	40-00566-00	5, 9
34-00829-13	5, 9	40-00697-00	17
34-00829-15	5, 9	40-00771-00	5, 9
34-00833-24	5, 9	40-01156-00	17
34-00890-08	5, 9	40-01176-52	20
34-00890-09	5, 9	42-00264-09	35
34-00928-01	27	42-00269-12	26
34-00928-03	42	42-00269-13	27
34-00928-13	27, 45, 47	42-00269-14	27
34-00945-06	5, 9	42-00341-00	37, 41
34-00964-00	21	42-00363-01	26
34-01142-01	27	42-00583-00	37, 41
34-01146-08	5, 9, 21, 23	42-00752-01	45, 47
34-01146-10	35	42-01133-00	17
34-01146-12	6, 10, 31, 33, 35	42-01298-00	13
34-01146-58	9	44-00045-25	17
34-01151-08	5, 21, 23	44-00046-13	17
34-01151-10	35	44-00094-09	42
34-01151-12	6, 10, 31, 33, 35	44-00102-51	23
34-01153-15	6, 10, 21, 23	44-00102-52	17, 31, 35
34-01153-25	6	44-00102-54	31, 35
34-01154-25	35	44-00102-56	31, 33
34-01155-25	6, 10, 31, 33, 35	44-00102-59	31, 33
34-01184-106	23, 31	44-00102-61	35
34-01184-108	23, 31	44-00317-00	17
34-01226-00	27	44-00352-01	27
34-01319-00	5, 9	44-00388-00	35
34-01324-13	21	44-00454-00	20
34-01349-00	13	44-01143-09	19, 31
34-01369-50	10	44-60163-01	33
34-06014-12	24	48-00449-00	17
34-06029-08	5, 9	48-01049-00	5
34-06053-03	27	50-01198-00	10
34-06060-01	5, 9	50-60330-03	6
34-06134-07	19	54-00669-21	6, 10
34-06149-04	14	54-00669-22	6, 10
34-06200-00	14	54-00669-24	6, 10
34-06201-00	14	54-00669-25	5, 9
34-06207-00	14	58-00079-02	6, 10, 17, 19, 35, 41
34-06212-12	17, 20, 37, 41, 45, 47	58-00658-10	17
34-06247-05	19	58-00659-05	17
34-06253-01	45, 47	58-00659-18	17
38-00152-00	6, 10	58-00660-00	45, 47
40-00043-05	5, 9	58-00836-13	42
40-00081-00	35	58-00836-23	27
40-00107-01	6, 9	58-00836-30	27
40-00117-01	35	58-00848-01	17
40-00420-01	17	58-00848-20	17, 35
40-00420-02	17	58-00848-22	17
40-00469-00	17	58-00848-30	17
40-00512-00	20	58-00848-45	17

58-00858-30	17	66U1-3662-21	37
58-00858-35	6	66U-1-5321-2	41
58-01427-00	42	66U1-5321-2	37
58-04184-04	35	66-U---1--5321-3	27
58-04267-10	35	66U1-5321-4	14, 17, 35
58-04268-10	35	66U1-5321-5	21
58-04316-00	35	66U-1-5321-8	42, 47
58-04402-01	27	66U1-5321-8	45
58-04433-00	27	66-U---1--5321-9	5, 9
58-04765-00	35	66U-1-5331-3	41, 47
58-04836-00	20	66U1-5331-3	37, 45
62-02181-02	29	66-U---1--5331-8	5, 9
62-02669-01	37, 41	66-U---1--5331-9	5, 9
62-02670-00	45, 47	66U-1-5361-25	47
62-02670-01	45, 47	66U1-5361-25	45
62-02717-08	29	66-U---1--5361-36	5, 9
62-02895-00	29	66U1-5361-38	17
62-02896-00	29	66-U---1--5361-39	27
62-02897-00	29	66U1-5361-39	35
62-02898-00	29	66U1-5361-47	31, 33
62-02899-04	29	66U1-5361-6	35
62-03957-04	45, 47	66-U---1--5361-7	12
62-04191-00	29	66U-1-5371-6	47
62-10391-01	29	66U1-5371-6	45
62-10530-25	42	66U-1-6651-15	41
62-10530-31	42	66U1-6651-15	37
62-10530-32	42	66-U---1--6811-12	27
62-10571-00	29	66U-1-7842-11	47
62-10572-00	29	66U1-7842-5	45
62-10572-02	29	66U-1-7842-6	47
62-10903-00	35	66U1-7842-6	45
62-11302-00	27, 29	66U-1-7842-7	47
62-11588-00	29	66U1-7842-7	45
62-11742-00	45	66U1-8772	37
62-11959-00	47	66U-1-9592-13	41
62-60390-03	29	66U1-9592-13	37
66CH-1-1002-132	41	66U-2-1391-1	47
66CH1-1002-132	37	66U2-1391-1	45
66CH-1-1002-38	42	68-08552-01	13
66CH-1-1002-4	41	68-12540-00	27
66CH1-1002-4	37	68-12973-00	37, 41
66CH-1-1002-5	41	68-13483-00	27
66CH1-1002-5	37	68-15626-08	45, 47
66CH-1-1092-6	47	68-16798-01	44
66CH1-1092-6	45	68-17186-00	21
66CH---1---123-100	5, 9	68-17287-00	19
66-U---1--2552-124	27	68-17323-00	27
66U-1-2823	41	68-17323-01	27
66U1-2823	37	68-17328-00	12
66-U---1--2823-4	5, 9	68-17348-00	19
66U-1-3662-21	41	68-17754-00	14

68-17756-00	14
68-17757-00	14
68-17907-00	23
68-17935-00	24
68-86230-00	41, 45, 47
68-86230-02	37
69GC--15--1662	13
69GC-15-3212	17
69GS-4-1582-1	41
69GS4-1582-1	37
69NT35-2692-1	35
73-00175-01	5, 9
73-00198-00	5, 9
73-00305-00	5, 9
76-02106-00	9
79-01674-08	26
79-04009-00	5
81-04054-00	35
81-04093-01	17
81-04100-00	17
86-03249-00	12
86-04182-01	5, 9
86-04288-01	35
86-04470-00	35
86-04675-00	35
86-04768-01	5, 9

86-04997-00	37, 41
86-04998-01	37
86-05029-00	44
86-05051-00	22
86-05070-00	47
86-05092-00	5, 9
86-05106-00	19
86-05155-01	26
86-05172-00	44, 46
86-05180-00	24
86-05190-01	41
91-00423-01	37, 41
91-00424-03	44
91-00470-02	46
91-00472-04	46

A

AT39QA132	42
AU11JR171	37, 41, 45, 47

K

KA69JM824	35
KA69JM840	20
KK71EW223	37, 41



Carrier Transicold Division,
Carrier Corporation
P.O. Box 4805
Syracuse, NY 13221 USA

<https://www.carrier.com/container-refrigeration>