



TRANSICOLD

Diesel Driven Generator Set

**Model
69GC15-164**

**SERVICE
PARTS LIST**

T-247-05PL



Service Parts List

MODEL 69GC15-164

CONTENTS

Introduction	i
Ordering Instructions	i
Letter Designations	i
Model Chart	i
1. Quick List – Butt Connectors, Clamps, Filters, Grease, Paint, Spiral Rap, V-Belt And Wire Terminals	1
2. Diesel Generator Set Assembly	2
2.1 Diesel Generator Set – Front View With Cover Removed	2
2.2 Cover Assembly – 69GC15-164	4
2.3 Cover Assembly – 69GC15-164-1, -2, -3, -4	5
2.4 Control Box and Battery Charging Transformer	6
2.5 Fuel Filters And Related Components – 69GC15-164, -1, -2	8
2.6 Fuel Filters And Related Components – 69GC15-164-3, -4	10
2.7 Air Cleaner – 69GC15-164, -1, -2	12
2.8 Air Cleaner – 69GC15-164-3, -4	14
2.9 Radiator Assembly And Related Components	16
2.10 Generator (Main Alternator) And Related Components	18
2.11 Engine And Generator Shockmount Assembly	20
2.12 Engine V-Belt And Idler Pulley	22
2.13 Fuel Solenoid	23
2.14 Lube Oil Filter	24
2.15 Unit Mounting Assembly	25
2.16 Battery Assembly	26
2.17 Muffler Assembly	27
2.18 Battery Charger & Generator Terminal Box – 69GC15-164-3, -4	28
2.19 Labels And Decals	29

INTRODUCTION

This parts list identifies service replacement parts for the Carrier Transicold Diesel-Driven Generator Sets listed in the model chart below. This parts list does not include detailed replacement parts for the engines listed in the first chart below. Detailed parts identification for these items may be found in the applicable parts list. The form numbers for the engine omit revision dash numbers. For example, the latest engine list may have a -03 added to the basic number to read 62-03459-03. Therefore, when forms are ordered the latest revision will be sent.

MANUAL/ FORM NO.	EQUIPMENT COVERED	TYPE OF MANUAL/FORM
62-03459	CT4-134-DI	Engine Parts List
62-03741	CT4-134-DI	Workshop Manual

ORDERING INSTRUCTIONS

All orders and inquiries for parts must include: Model, Unit Serial Number, Part Number, description of part as shown on list and quantity required. Address all correspondence for parts to:

CARRIER TRANSICOLD DIVISION
Replacement Components Group
TR-20, P.O. Box 4805
Syracuse, New York 13221
or
Fax to: (315) 432-3778

LETTER DESIGNATIONS

The following letter designations are used to classify parts throughout this list:

A/R	<i>As Required.</i>	P--	<i>Suffix P-- added to part number means part is available in packaged quantity only. Example: P/N34-00373-01P10 is a package of 10 P/N 34-00373-01. Use part number and P-- suffix when ordering.</i>
NLO	<i>No Longer Offered.</i>		
NS	<i>Not Shown in the illustration.</i>		
NSA	<i>Non-Stock Assembly</i> – order components listed under the assembly.	PL	<i>Purchase Locally.</i>
NSI	<i>Non-Stock Item</i> – may be available on special order.	SST	<i>Stainless Steel</i> – 300 Series unless otherwise specified.
NSS	<i>Not Sold Separately</i> – order next higher assembly or kit.	SV	<i>Suffix SV</i> – added to part number designates service replacement part.


MODEL CHART

Model No.	Engine CT4-134DI	Solid State Battery Charger	Dual Fuel Gauges	Fuel Tank 120 U.S. Gallons
69GC15-164	X	X	—	X
69GC15-164-1	X	X	X	X
69GC15-164-2	X	X	X	X
69GC15-164-3	X	X	X	X
69GC15-164-4	X	X	X	X


PART NO.	DESCRIPTION
1. QUICK LIST – BUTT CONNECTORS, CLAMPS, FILTERS, GREASE, PAINT, SPIRAL RAP, TY-RAPS, V-BELT AND WIRE TERMINALS	
34-00373-51P10	Clamp, Tube, 1/4 – SST
34-00373-53P10	Clamp, Tube, 3/8 – SST
34-00373-05P10	Clamp, Tube, 1/2 – SST
34-00373-07P10	Clamp, Tube, 5/8 – SST
34-00373-59P10	Clamp, Tube, 3/4 – SST
34-00373-11P10	Clamp, Tube, 7/8 – SST
34-00373-65P10	Clamp, Tube, 1-1/8 – SST
34-00373-67P10	Clamp, Tube, 1-1/4 – SST
34-00373-69P10	Clamp, Tube, 1-3/8 – SST
34-00373-71P10	Clamp, Tube, 1-1/2 – SST
44-00045-25P05	Clamp, Worm, Range – 7/32 to 5/8 OD – SST
44-00045-06P05	Clamp, Worm, Range – 3/8 to 3/4 OD – SST
44-00045-01P05	Clamp, Worm, Range – 1/2 to 15/16 OD – SST
44-00045-03P05	Clamp, Worm, Range – 13/16 to 1-3/4 OD – SST
44-00045-04P05	Clamp, Worm, Range – 1-9/16 to 2-1/2 OD – SST
44-00045-05P05	Clamp, Worm, Range – 2-1/16 to 3 OD – SST
22-00066-01P25	Connector, Butt End, Wire Range – 22 to 16 Gauge
22-00066-02P25	Connector, Butt End, Wire Range – 16 to 14 Gauge
22-00066-03P25	Connector, Butt End, Wire Range – 12 to 10 Gauge
22-00041-00P25	Connector, Closed End, Wire Range – 22 to 14 Gauge
22-00041-02P25	Connector, Closed End, Wire Range – 18 to 10 Gauge
66U1-2155	Element, Air Cleaner
30-00323-00P12	Filters, Lube Oil – Full Flow – Case of 12
30-00301-00P12	Filters, Primary Fuel – Case of 12
30-00302-00P12	Filters, Secondary Fuel – Case of 12
30-01079-00P12	Filter Element, Fuel – Case of 12
30-50301-00P12	Filters, Fuel/Water Separator – Case of 12
07-00245-00	Grease, Dow 33 Lithium Base (Used for lubricating Fuel Solenoid Plunger)
36-00003-04	Paint, Spray – 16 ounces (White)
36-00070-01	Paint, Spray – 16 ounces (Gray)
22-01140-01P25	Ring Terminal, #6, Wire Range – 12 to 10 Gauge
22-01140-02P25	Ring Terminal, #10, Wire Range – 12 to 10 Gauge
22-01140-04P25	Ring Terminal, 3/8, Wire Range – 12 to 10 Gauge
22-00119-04P25	Ring Terminal, 1/4, Wire Range – 12 to 10 Gauge
22-00120-04P25	Ring Terminal, #10, Wire Range – 16 to 14 Gauge
22-00120-07P25	Ring Terminal, 5/16, Wire Range – 16 to 14 Gauge
22-00121-07P25	Ring Terminal, #10, Wire Range – 22 to 16 Gauge
22-01139-04P25	Ring Terminal, 3/8, Wire Range – 16 to 14 Gauge
22-01141-01P25	Spade Terminal, .032 x .250, Wire Range – 16 to 14 Gauge
22-00595-01P25	Spade Terminal, 3/8, Wire Range – 12 to 10 Gauge
22-01106-00F25	Spiral Wrap, 1/4 inch Diameter x 25 foot Long
22-01107-00F25	Spiral Wrap, 1/2 inch Diameter x 25 foot Long
44-01043-05P25	Ty-Raps, 5-1/2 inches long
44-01043-07P25	Ty-Raps, 11 inches long
50-00162-04	V-Belt, Water Pump

2. DIESEL GENERATOR SET ASSEMBLY

2.1 DIESEL GENERATOR SET – FRONT VIEW WITH COVER REMOVED

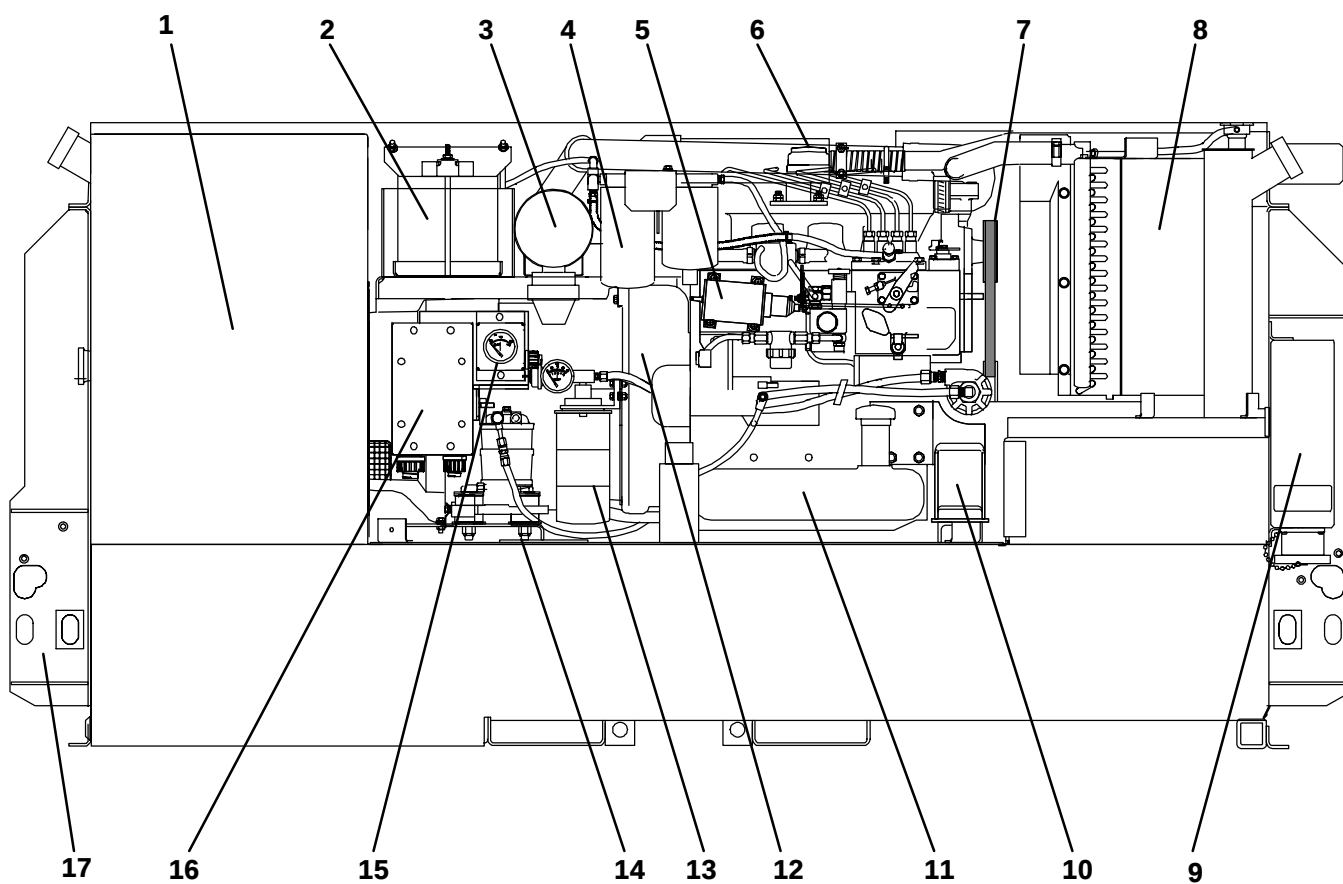


ITEM	PART NO.	DESCRIPTION	QTY
2.1	DIESEL GENERATOR SET -- FRONT VIEW WITH COVER REMOVED		
1	69GC15-884	Tank and Frame Assembly, 120-Gallon (Pin) 69GC15-164	1
1	69GC15-538	Tank and Frame Assembly, 120-Gallon (Pin) 69GC15-164-1 (NSI)	1
1	69GC15-538-1	Tank and Frame Assembly, 120-Gallon (Pin) 69GC15-164-2 (NSI)	1
1	69GC15-768	Tank and Frame Assembly, 120-Gallon (Pin) 69GC15-164-3 (NSI)	1
1	69GC15-958	Tank and Frame Assembly, 120-Gallon (Pin) 69GC15-164-4 (NSI)	1
2	—	Battery (Refer to section 2.16)	—
3	—	Air Cleaner (Refer to section 2.7 & 2.8)	—
4	—	Filters, Fuel (Refer to section 2.5 & 2.6)	—
5	—	Solenoid, Fuel (Refer to section 2.13)	—
6	—	Muffler (Refer to section 2.17)	—
7	—	V-belt, Engine (Refer to section 2.12)	—
8	—	Radiator Assembly (Refer to section 2.9)	—
9	—	Box, Control (Refer to section 2.4)	—
10	—	Shockmounts, Engine (Refer to section 2.11)	—
11	26-00093-00	Engine (CT4-134-DI) — Refer to Form 62-03459	1
12	—	Generator (Refer to section 2.10)	—
13	—	Filter, Oil (Refer to section 2.14)	—
14	—	Shockmounts, Generator (Refer to section 2.11)	—
15	—	Gauge, Water Temperature (Refer to section 2.9)	—
16	—	Box Assembly, Generator Terminal (Refer to section 2.10)	—
17	—	Mounting, Unit (Generator Set) (Refer to section 2.15)	—
NS	—	Battery Charger 69GC15-164-3, -4 (Refer to section 2.18)	—

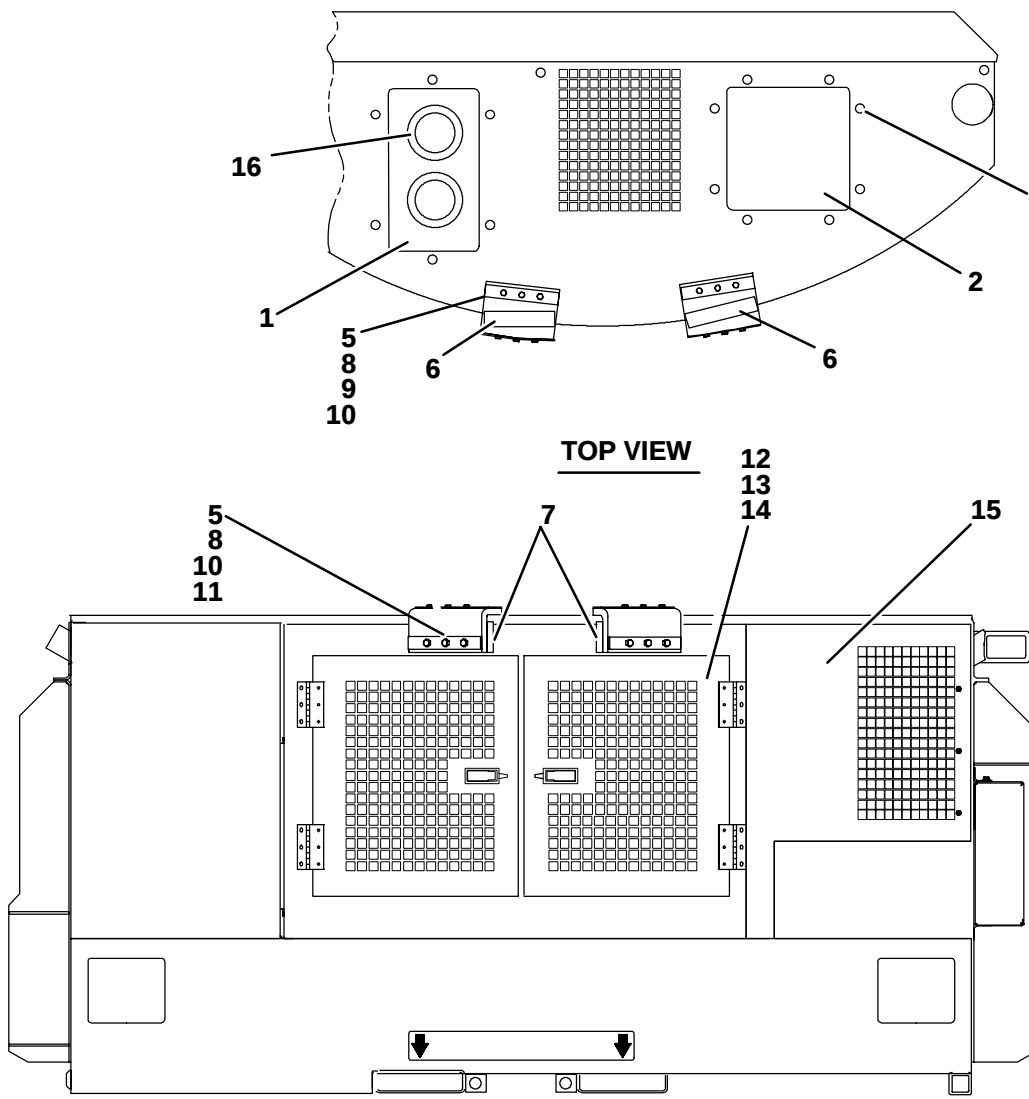ITEM	PART NO.	DESCRIPTION	QTY
2.2 COVER ASSEMBLY – 69GC15-164			
 The technical drawing consists of two views of a rectangular cover assembly. The top view shows a rectangular plate with various features: two circular openings on the left (callout 16), a central grid of small squares (callout 15), and two rectangular cutouts on the right (callout 2). Callouts 1, 5, 6, 8, 9, and 10 point to specific mounting points and components. The side view shows the assembly's profile, with callouts 5, 8, 10, 11, 7, 12, 13, 14, and 15 pointing to the edges, latches, and hinges. A downward arrow at the bottom indicates the assembly's orientation.			
1	69GC15-1973	Cover Assembly (Battery Access)	1
2	69GC15-1983	Cover (Fan Belt Access)	1
3	34-00655-06	Screw, Hex Head, 1/4-20 x 3/4 lg – SST (NSI)	A/R
4	AU11JR171	Washer, Lock, 1/4 – SST (NSI)	A/R
5	34-00662-11	Washer, Flat, 1/4 – SST (NSI)	A/R
6	58-04007-00	Pad, Bumper, 6 wide x 7 high x 0.50 inches thick (Rubber)	2
7	58-04006-00	Pad, Bumper, 6 wide x 3 high x 0.75 inches thick (Rubber)	2
8	69GC15-3252	Plate, Mounting (NSI)	4
9	34-00655-12	Screw, Flat Head, 1/4-20 x 1-1/2 lg – SST (NSI)	A/R
10	34-00667-11	Locknut, 1/4-20 – SST (NSI)	A/R
11	34-00655-16	Screw, Flat Head, 1/4-20 x 2.00 lg – SST (NSI)	A/R
12	69GC15-438	Door Assembly – Includes:	2
13	44-01105-00	Latch, Door	1
14	44-00296-01	Hinge	2
15	69GC15-418	Cover Assembly (Unit)	1
16	66U1-3633-3F07	Trim, Flexible (Cut to length as required)	A/R


ITEM	PART NO.	DESCRIPTION	QTY
2.3 COVER ASSEMBLY – 69GC15-164-1, -2, -3, -4			
TOP VIEW			
1	69GC15-2183	Cover Assembly (Battery Access)	1
2	34-00655-08	Screw, Hex Head, 1/4-20 x 1.00 lg – SST (NSI)	5
3	34-00693-00	Nut, Binkley, 1/4-20 – SST	7
4	AU11JR171	Washer, Lock, 1/4 – SST (NSI)	27
5	34-00662-11	Washer, Flat, 1/4 – SST (NSI)	39
6	66U1-3633-3F07	Trim, Flexible (Cut to length as required)	A/R
7	34-00655-06	Screw, Hex Head, 1/4-20 x 3/4 lg – SST (NSI)	16
8	69GC15-337	Door (Fan Belt Access) – Includes:	1
9	44-00330-00	Hinge – SST	1
10	44-00312-00	Latch, Door	2
11	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range – 1/8-3/16 – SST (NSI)	8
12	34-06007-00	Rivet, Blind, 3/32 Diameter, Grip Range – 1/8-1/4 – SST (NSI)	8
13	58-04007-00	Pad, Bumper, 6 wide x 7 high x 0.50 inches thick (Rubber)	2
14	69GC15-3252	Plate, Mounting	4
15	34-00655-12	Screw, Flat Head, 1/4-20 x 1-1/2 lg – SST (NSI)	6
16	34-00667-11	Locknut, 1/4-20 – SST (NSI)	12
17	34-00655-04	Screw, Hex Head, 1/4-20 x 1/2 lg – SST (NSI)	6
18	34-00655-16	Screw, Flat Head, 1/4-20 x 2.00 lg – SST (NSI)	6
19	58-04094-00	Pad, Bumper, 6 wide x 3 high x 0.75 inches thick (Rubber)	2
20	69GC15-438	Door Assembly – Includes:	2
21	44-01105-00	Latch, Door	1
22	44-00296-01	Hinge	2
23	69GC15-668-2	Cover Assembly (Unit)	1
24	34-00928-13	Rivet, Blind, .187 Diameter, Grip Range – .126-.250 – SST (NSI)	22

2.4 CONTROL BOX AND BATTERY CHARGING TRANSFORMER

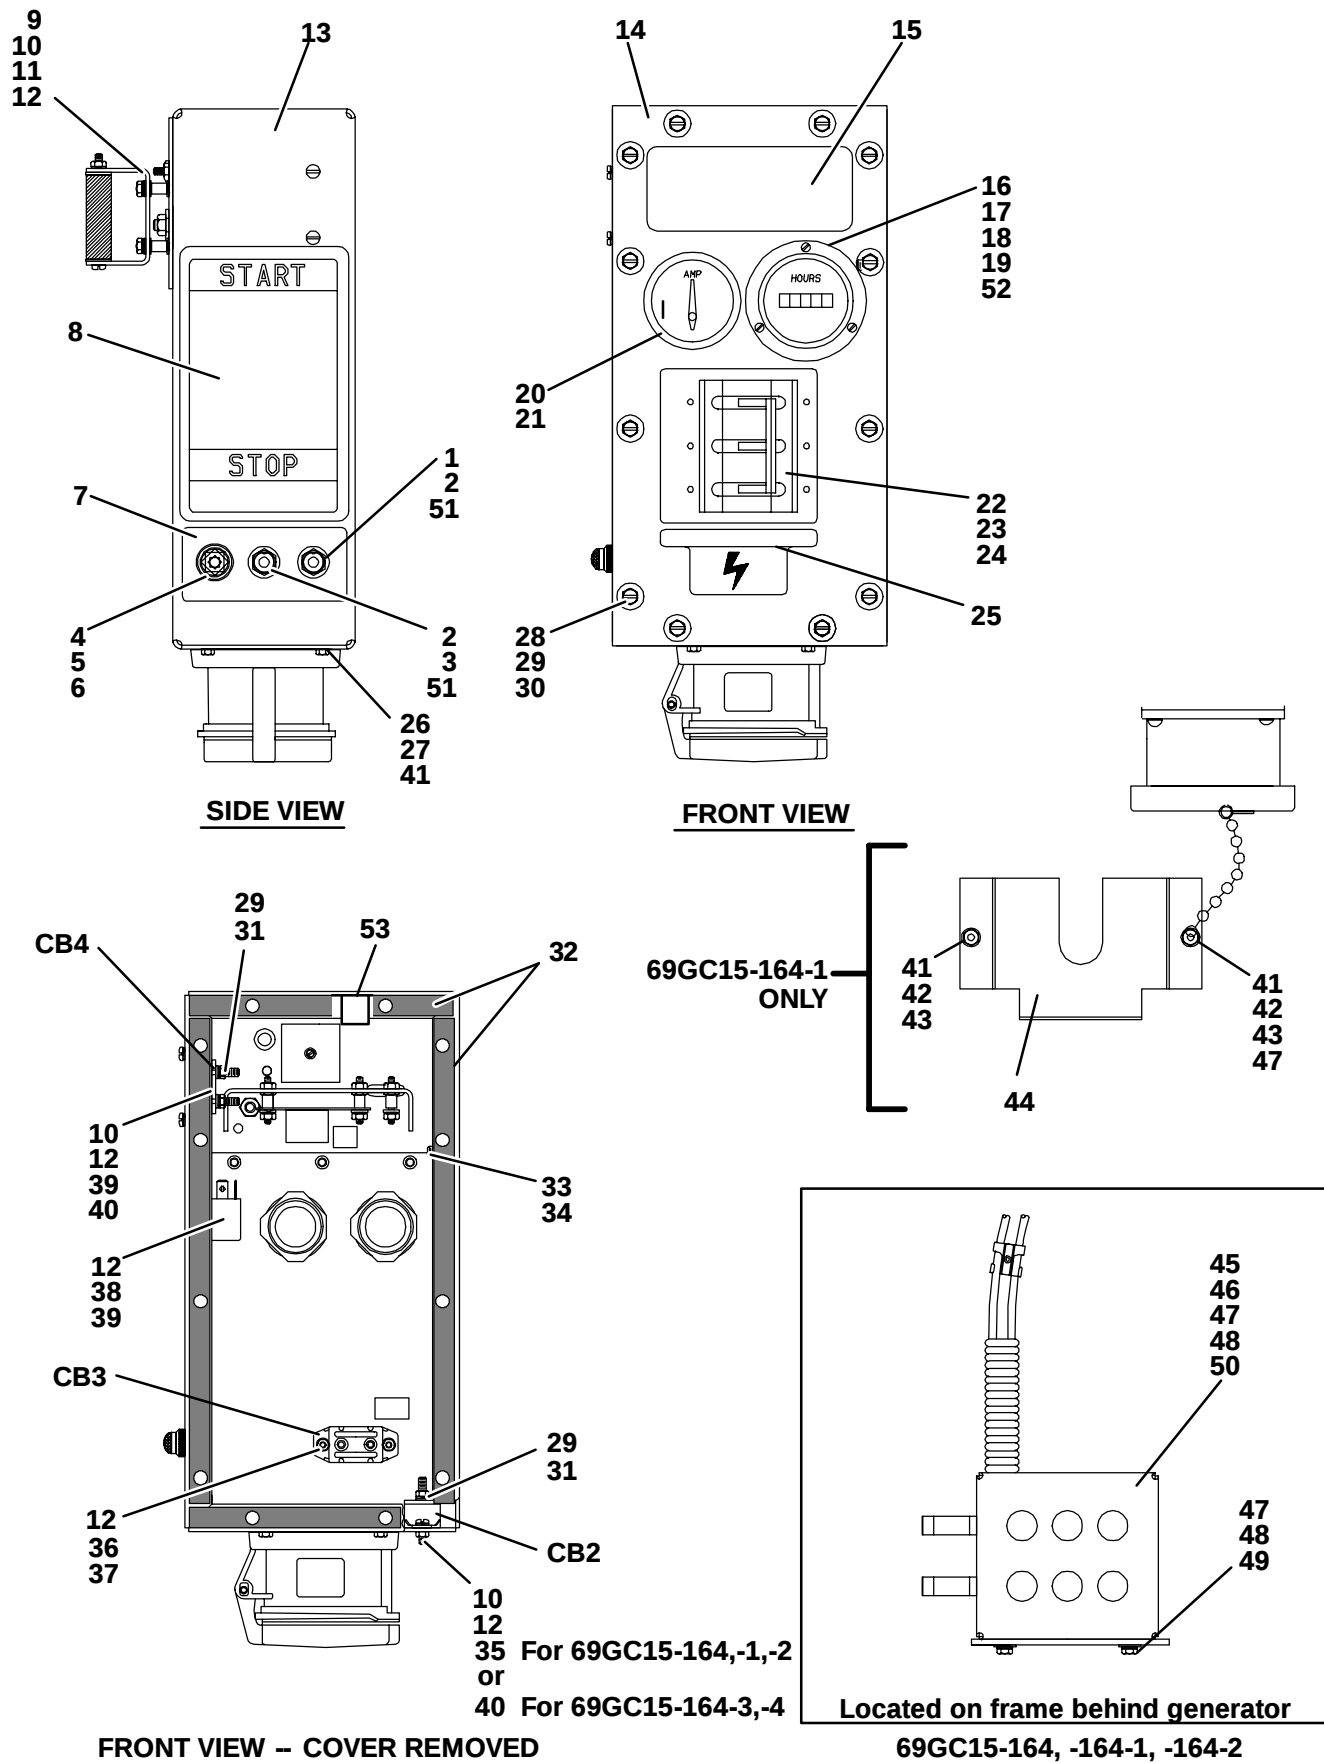


ITEM	PART NO.	DESCRIPTION	QTY
2.4	CONTROL BOX AND BATTERY CHARGING TRANSFORMER		
1	10-00222	Switch, Toggle (GPS)	1
2	66U1-9752	Seal, Bushing	2
3	10-00223	Switch, Toggle (IGN)	1
4	22-00049	Bulb	1
5	22-00518-01	Base, Pilot Light	1
6	22-00519-01	Jewel Assembly (Red)	1
7	69GC15-1823	Label, CB1 Trip Light, Start-Run-Stop, Glow Plug (NSI)	1
8	69GU15-1373	Label, Start/Stop Instructions (NSI)	1
9	30-00408-00	Charger, Battery 69GC15-164, -1, -2	1
NS	69GC15-1892	Gasket (Used between charger and box.) 69GC15-164, -1, -2	1
10	PL	Screw, Hex Head, #8-32 x 1/2 lg – SST	A/R
11	PL	Washer, Flat, #8 – SST	A/R
12	PL	Washer, Lock, #8 – SST	A/R
13	69GC15-733	Box, Control (NSI) 69GC15-164	1
13	69GC15-217	Box, Control 69GC15-164-1, -2	1
13	69GC15-377	Box, Control (NSI) 69GC15-164-3	1
13	69GC15-397	Box, Control (NSI) 69GC15-164-4	1
14	69GC15-1604	Cover, Control Box	1
15	62-03646-01	Label, Disconnect Power (NSI)	1
16	66U1-7802	Meter, Hour	1
17	69GS4-1582-1	Gasket (Hour Meter) (NSI)	1
18	PL	Screw, Pan Head, #4-40 x 3/4 lg – SST	3
19	PL	Locknut, #4-40	3
20	22-00538-01	Ammeter	1
21	42-00045-01	O-Ring	1
22	66U1-7842-5	Circuit Breaker (CB1) – 480 vac	1
23	66U2-1391	Boot – Includes:	1
24	NSS	Frame, Boot	1
25	69GC15-1693	Label, Danger – High Voltage/1-CB-0 (NSI)	1
26	22-01679-00	Receptacle, Power	1
27	PL	Screw, Hex Head, #8-32 x 1 lg – SST	A/R
28	PL	Screw, Hex Head, #10-24 x 5/8 lg – SST	A/R
29	PL	Washer, Lock, #10 – SST	A/R
30	PL	Washer, Flat, #10 – SST	A/R
31	PL	Nut, Hex Head, #10-32 – Brass	A/R
32	66U1-8095-F20	Gasket (20 Ft., Cut to length) Between cover and control box	A/R
33	PL	Nut, Hex Head, 1/4-20 – SST (Used on Ground Stud)	2
34	PL	Washer, Lock, 1/4 – SST (Used on Ground Stud)	1
35	10-00171-03	Circuit Breaker, 20 amp 69GC15-164, -1, -2	2
36	10-00171-11	Circuit Breaker (CB3), 50 amp	1
37	PL	Screw, Round Head, #8-32 x 3/8 – SST	2
38	10-00286-03	Relay, Run Control	1
39	PL	Nut, Hex Head, #8-32 – SST	4
40	10-00171-02	Circuit Breaker, 30 amp	1
41	66U1-5321-2	Washer, Flat, #8 – SST (NSI)	6
42	34-00667-08	Locknut, #8-32 – SST (NSI)	2
43	LF32MZ002	Cap, Vinyl (NSI)	2
44	69GU15-2432	Pocket, Power Plug Cap (NSI)	1
45	10-00285-00	Transformer, Battery Charging 69GC15-164, -1, -2	1
46	69GC15-398	Cover Assembly, Transformer (NSI)	1
47	AU02JA172	Washer, Flat, 1/4 – SST (NSI)	A/R
48	AA06JA168	Screw, Hex Head, 1/4-20 x 3/4 lg – SST (NSI)	A/R
49	AU11AS171	Washer, Lock, 1/4 – SST (NSI)	A/R
50	34-00667-11	Locknut, Hex Head, 1/4-20 – SST (NSI)	A/R
51	22-02002-01	Jumper (Used for Glow Plug Switch and Ignition Switch)	3
NS	66U1-8772	Diode (D3) – Located on Wire Harness	1
NS	22-02378-00	Plug, Power – Plastic (460vac)	1
52	66U1-8772	Diode (D2) 69GC15-164, -1, -2	1
52	22-01030-53	Diode (D2) 69GC15-164-3, -4	1
53	10-01120	Rectifier	1

2.5 FUEL FILTERS AND RELATED COMPONENTS -- 69GC15-164, -164-1, -164-2

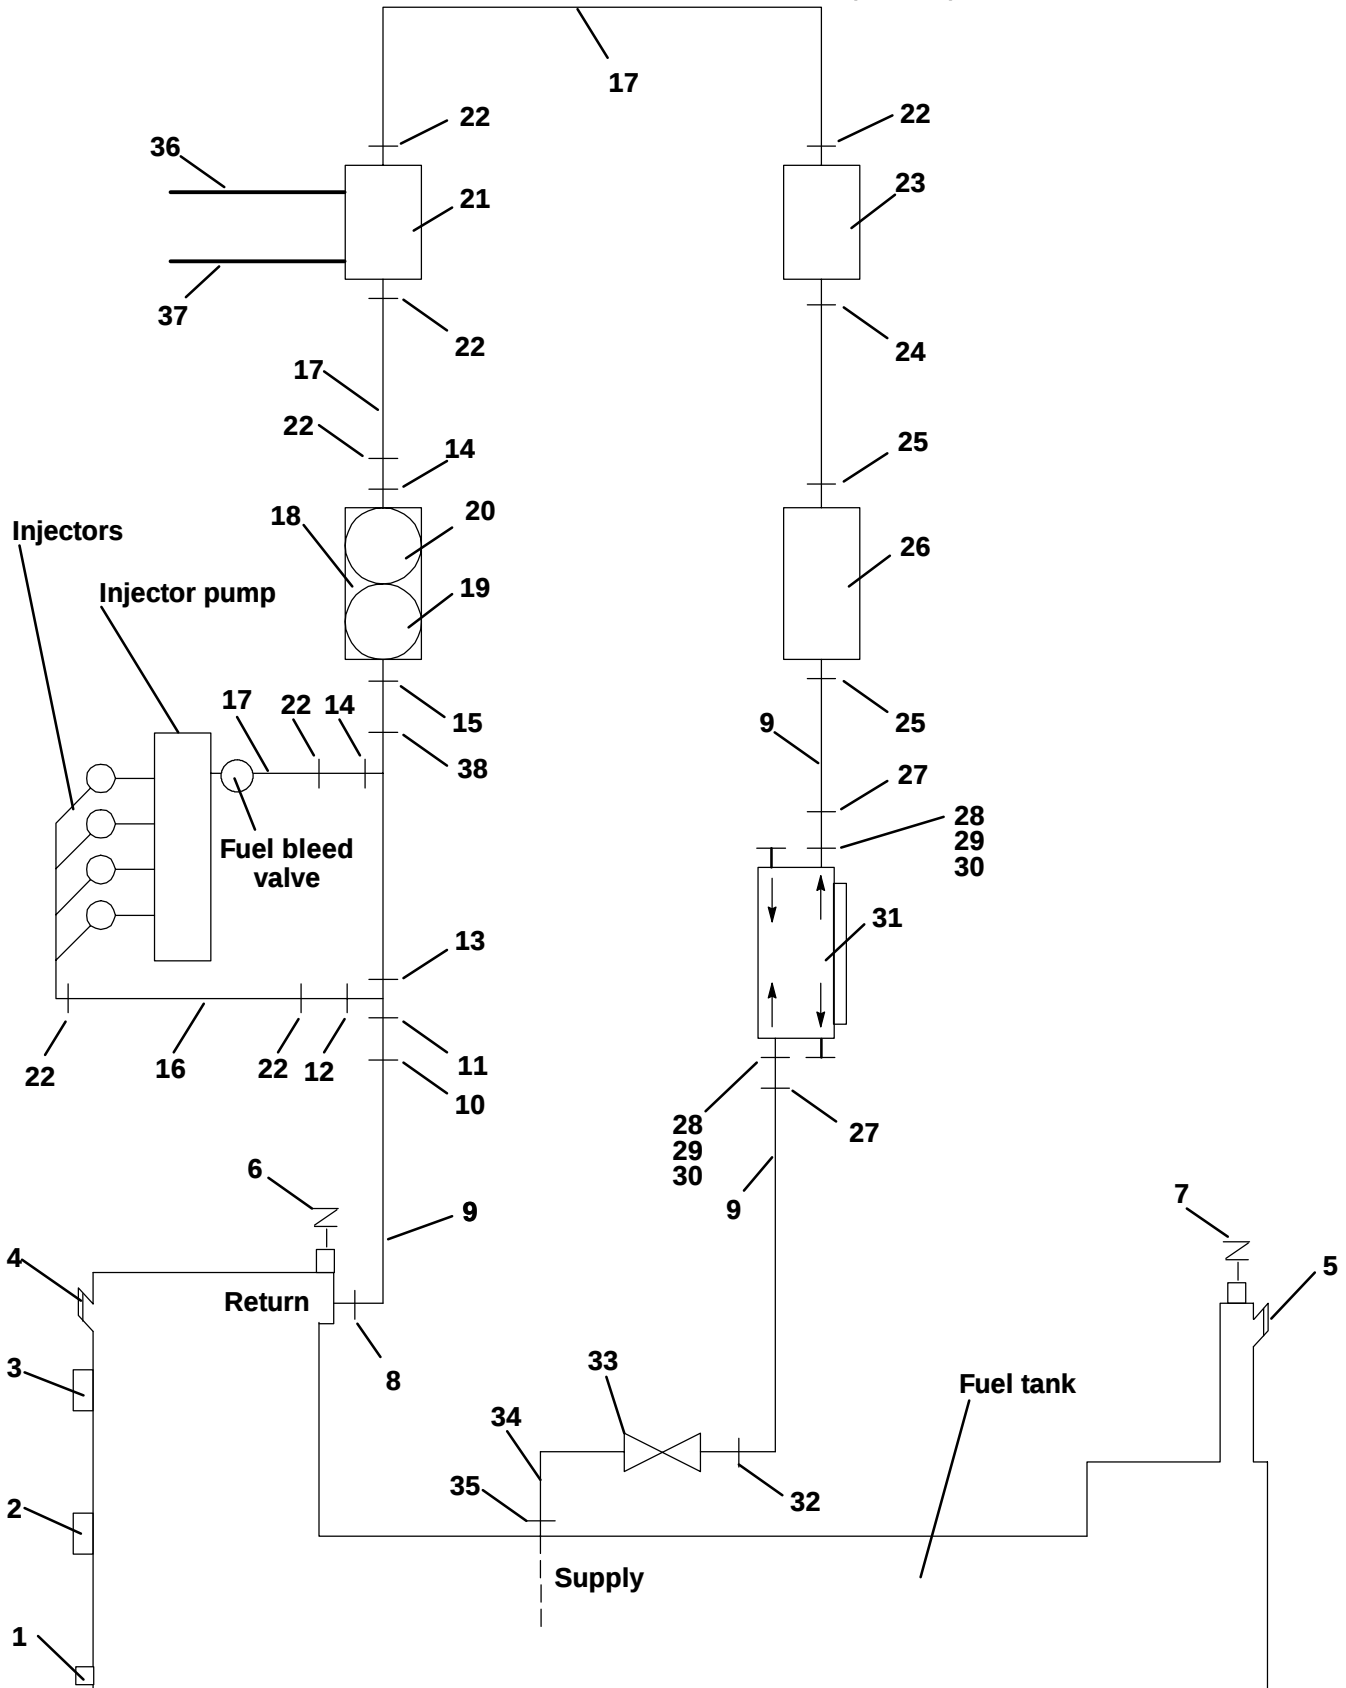

ITEM	PART NO.	DESCRIPTION	QTY
2.5	FUEL FILTERS AND RELATED COMPONENTS – 69GC15-164, -164-1, -164-2		
1	PL	Plug, Pipe, 3/8-18 nptf	1
2	12-00274-02	Gauge, Fuel (Bottom) 69GC15-164-1, -2	1
3	69GC15-458	Gauge, Fuel 69GC15-164	1
3	12-00274-01	Gauge, Fuel (Top) 69GC15-164-1, -2	1
4	44-00046-04	Cap Assembly, Fuel	1
5	44-00046-11	Cap Assembly, Fuel	1
6	40-00437-00	Vent, Fuel	1
7	40-00458-00	Vent, Fuel	1
8	40-00343-03	Connector, Male, 3/8 npt x 3/8 Tube	1
9	58-00580-00F50	Tube, 3/8 OD (50 ft., Cut to length)	A/R
10	40-00342-02	Elbow, Male, 3/8 Tube x 1/8 npt	1
11	40-00243	Tee, Street, 1/8 mpt x fpt x fpt	1
12	40-00420-00	Fitting, Hose, Barb – 3/16 ID x 1/8 mpt	1
13	40-00372-01	Plug, Pipe, Hex Head, 1/4 mpt x 1/8 fpt	1
14	40-00420-01	Fitting, Hose, Barb – 5/16 ID x 1/4 mpt	2
15	40-00249-01	Tee, Male, 1/4 fpt x fpt x mpt	1
16	58-00659-00F25	Hose, 3/16 ID (25 ft., Cut to length)	A/R
17	58-00955-00F05	Hose, 5/16 ID (5 ft., Cut to length)	A/R
18	79-01037-05	Head Assembly – Fuel Filtration – Includes:	1
NS	PL	Plug, Pipe (1/4 Square Head)	1
NS	40-00338	Nipple, 13/16	1
NS	40-00337	Nipple, 1 inch Extension	1
NS	PL	Bolt, Hex Head, 5/16 x 18 x 1-1/4 lg – SST	3
NS	PL	Washer, Lock, 5/16 – SST	3
NS	PL	Washer, Flat, 5/16 – SST	5
19	30-00302	Filter, Secondary	1
20	30-50301	Filter, Water Separator (Optional)	1
20	30-00301	Filter, Primary	1
NS	69GC15-208	Bracket, Fuel Filter (NSI)	1
NS	PL	Screw, Hex Head, 5/16-18 x 1-1/2 lg – SST	2
NS	PL	Washer, Lock, 5/16 – SST	2
NS	PL	Screw, Hex Head, 3/8-16 x 1-1/4 lg – SST	4
NS	PL	Washer, Lock, 3/8 – SST	4
NS	PL	Washer, Flat, 3/8 – SST	4
21	30-00344-04	Fuel Warmer	1
22	44-00045-25	Clamp, Worm, Range – 1/4 to 5/8 OD – SST	12
23	–	Pump, Mechanical Fuel – Refer to Form 62-03459	–
24	69GN15-202-1	Banjo Assembly	1
25	PL	Connector, Female, 3/8 Tube x 3/8 npt	2
26	30-00373-00	Filter, Fuel Strainer	1
27	40-00349-01	Union, 3/8 Tube	2
28	69GU15-592	Banjo Assembly	2
29	30-01074-03	Washer, Banjo Bolt	4
30	30-01074-02	Bolt, Banjo	2
31	30-01074-00	Separator, Water	1
NS	PL	Locknut, 5/16-18 – SST	2
NS	PL	Washer, Flat, 5/16 – SST	2
NS	69GC15-117	Bracket, Water Separator/Water Temperature Gauge/Generator Terminal Box	1
32	40-00342-03	Elbow, Male, 1/4 npt x 3/8 Tube, Brass	1
33	40-00469-00	Valve, Fuel Shutoff	1
34	69GC15-172-2	Connector Assembly, Fuel Tank – Includes:	1
35	PL	Bushing, 3/8 mpt x 1/4 fpt	1
36	58-01240-00	Tube, Formed (Fuel warmer from thermostat housing)	1
37	58-01241-00	Tube, Formed (Fuel warmer to water pump)	1
38	40-00060-02	Elbow, Street, 1/4 mpt x 1/4 fpt (NSI)	1


2.6 FUEL FILTERS AND RELATED COMPONENTS – 69GC15-164-3, -4

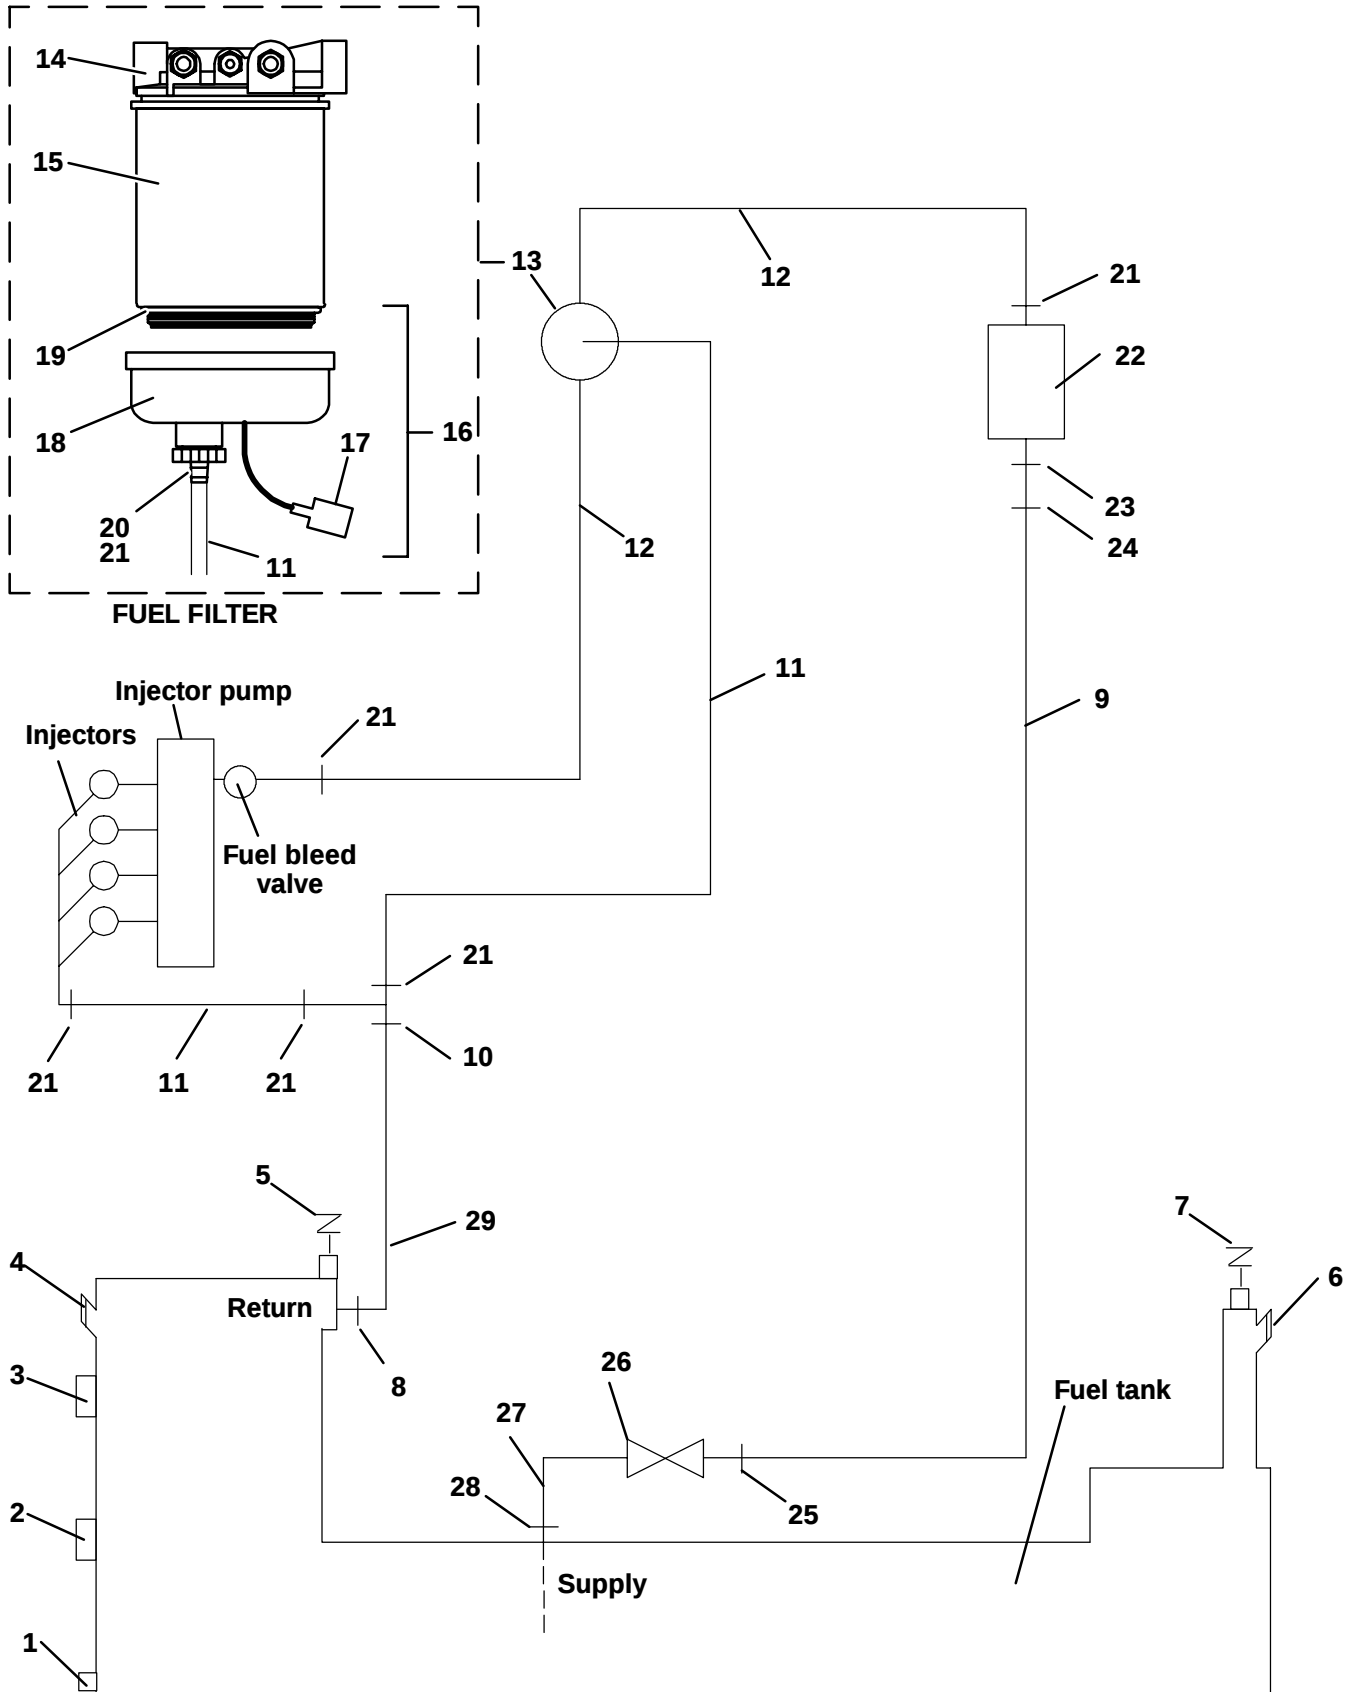


ITEM	PART NO.	DESCRIPTION	QTY
2.6	FUEL FILTERS AND RELATED COMPONENTS – 69GC15-164-3, -4		
1	PL	Plug, Pipe, 3/8-18 nptf	1
2	12-00274-02	Gauge, Fuel (Bottom)	1
3	12-00274-01	Gauge, Fuel (Top)	1
4	44-00046-04	Cap Assembly, Fuel	1
5	40-00458-00	Vent, Fuel 1	
6	44-00046-11	Cap Assembly, Fuel	1
7	40-00437-00	Vent, Fuel 1	
8	40-00343-09	Connector, Male, 1/4 Tube x 3/8 mpt, Brass (NSI)	1
9	58-00580-00F50	Tube, 3/8 OD (50 ft., Cut to length)	A/R
10	40-01156-00	Tee, 3/16 HS x 1/4 Tube, Brass (NSI)	1
11	58-00659-00F25	Hose, 3/16 ID (25 ft., Cut to length)	A/R
12	58-00955-00F05	Hose, 5/16 ID (5 ft., Cut to length)	A/R
13	30-01089-13	Filter, Fuel (With Heater) – Includes: (NSI)	1
14	30-01089-25	Head Assembly	1
15	30-01079-00	Element, Filter	1
16	30-01085-22	Heater Bowl Assembly – Includes:	1
17	NSS	Connector, Female	1
18	30-01085-23	Bowl Assembly – Includes:	1
19	30-01089-27	O-Ring, Bowl	1
20	30-01078-03	Plug Assembly, Drain	1
NS	69GC15-868	Bracket, Fuel Filter and Charger (NSI)	1
NS	PL	Screw, Hex Head, 5/16-18 x 1-1/2 lg – SST	2
NS	PL	Washer, Lock, 5/16 – SST	2
NS	PL	Screw, Hex Head, 3/8-16 x 1-1/4 lg – SST	4
NS	PL	Washer, Lock, 3/8 – SST	4
NS	PL	Washer, Flat, 3/8 – SST	4
21	44-00045-25	Clamp, Worm, Range – 1/4 to 5/8 OD – SST	12
22	–	Pump, Mechanical Fuel – Refer to Form 62-03459	–
23	69GN15-202-1	Banjo Assembly	1
24	40-00349-01	Union, 3/8 Tube	2
25	40-00342-03	Elbow, Male, 1/4 npt x 3/8 Tube, Brass	1
26	40-00469-00	Valve, Fuel Shutoff	1
27	69GC15-172-2	Connector Assembly, Fuel Tank – Includes:	1
28	PL	Bushing, 3/8 mpt x 1/4 fpt	1
29	58-04204-00	Tube, 1/4 OD x 24.50 lg (NSI)	1

Used to Mount
Fuel Filter and
Bracket Assembly

2.7 AIR CLEANER -- 69GC15-164, -164-1, -164-2

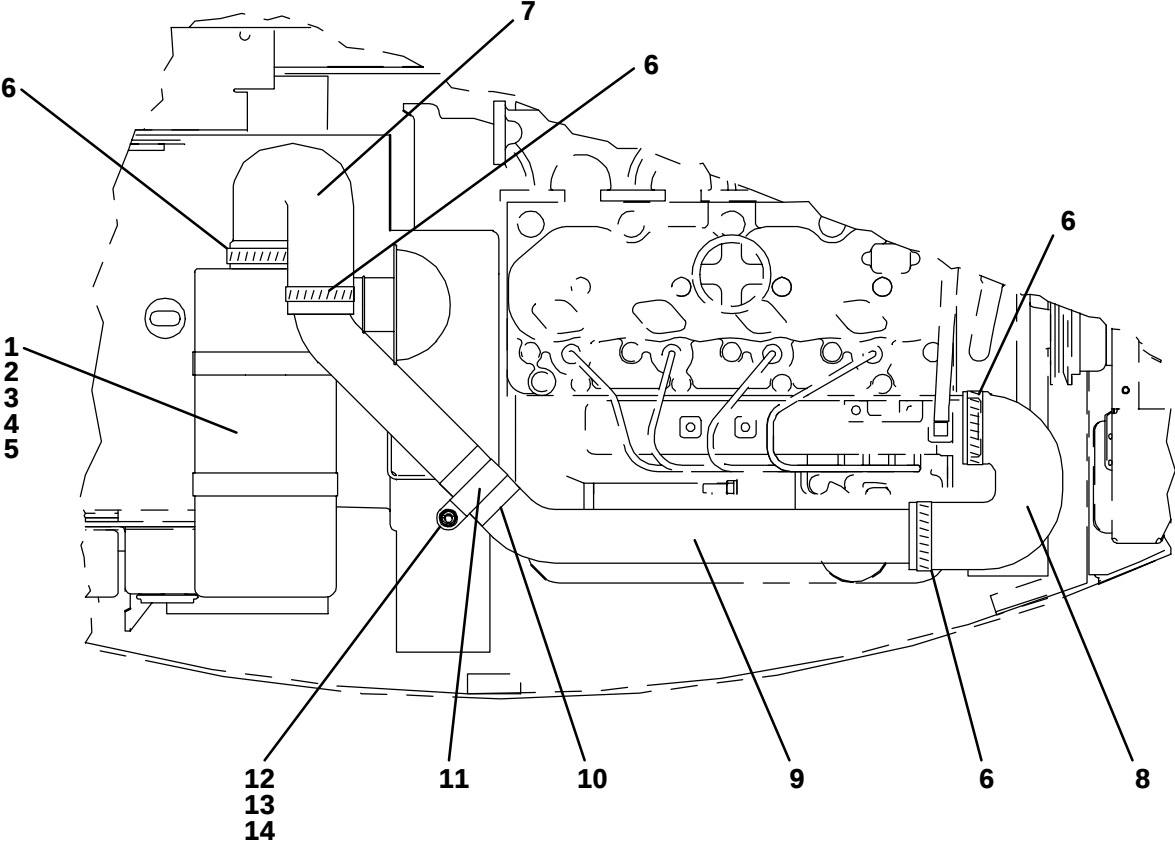


TOP VIEW

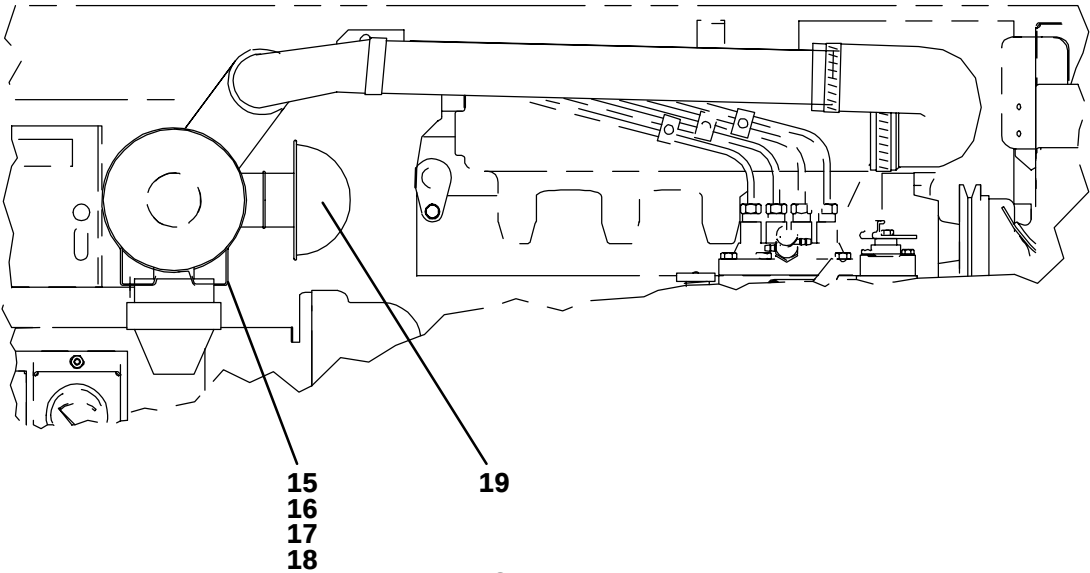


FRONT VIEW

ITEM	PART NO.	DESCRIPTION	QTY
2.7	AIR CLEANER – 69GC15-164, -164-1, -164-2		
1	66U1-5262-5	Air Cleaner (Dry Element) – Includes:	1
2	30-00336-20	Clamp, Cup	1
3	66U1-2155	Element	1
4	66U1-8365	Valve, Vacuator – Includes:	1
5	NSS	Clip, Spring	1
6	44-00045-15	Clamp, Worm, Range – 2-1/16 to 3 OD – SST	4
7	58-00961-00	Hose, Formed (Air Inlet)	1
8	58-00976-00	Hose, Formed (Air Inlet)	1
9	69GC15-823	Tube, 2 inch OD – Aluminum (NSI)	1
10	42-00234-00	Protector	1
11	69GC15-2293	Clamp, Air Inlet Tube – SST	1
12	34-00792-06	Screw, Hex Head, 5/16-18 x 3/4 lg – SST (NSI)	1
13	34-00662-12	Washer, Flat, 5/16 – SST (NSI)	1
14	34-00663-12	Washer, Lock, 5/16 – SST (NSI)	1
15	44-00022-02	Clamp, Air Cleaner Mounting	2
16	34-00655-05	Screw, Hex Head, 1/4-20 x 5/8 lg – SST (NSI)	4
17	66U1-5321-3	Washer, Flat, 1/4 – SST (NSI)	4
18	AU11JR171	Washer, Lock, 1/4 – SST (NSI)	4
19	30-00356	Cap, Air Stack	1

2.8 AIR CLEANER -- 69GC15-164-3, -4

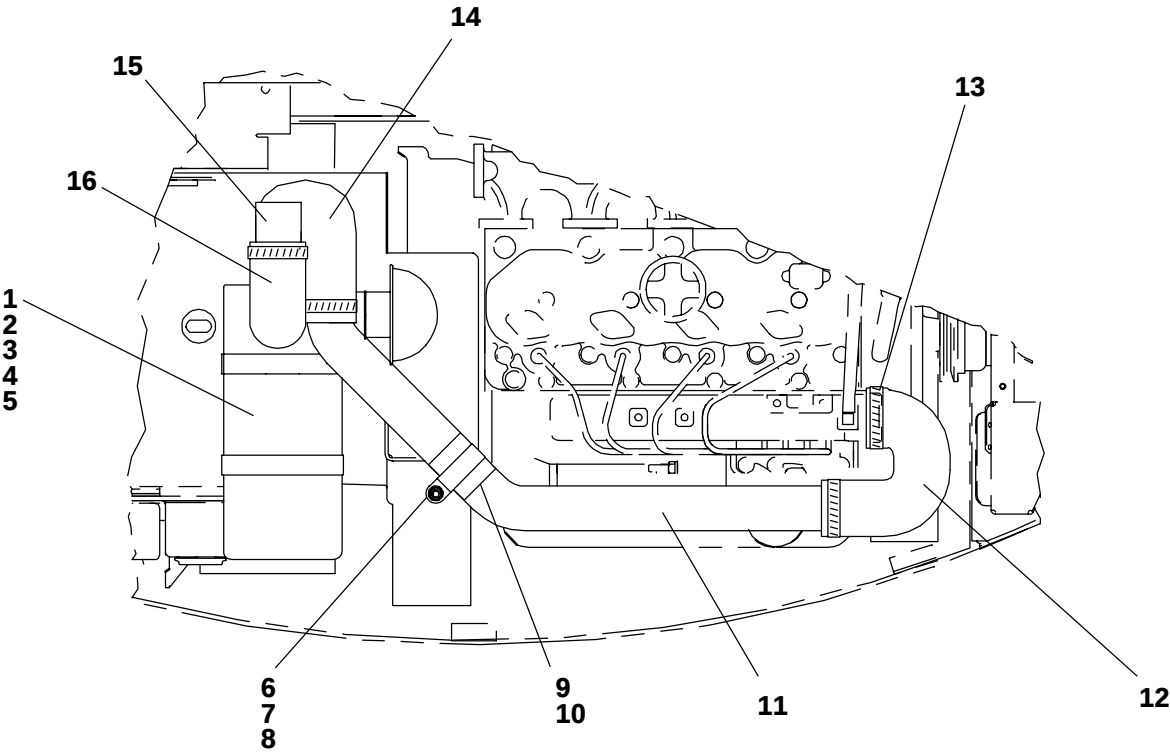


TOP VIEW

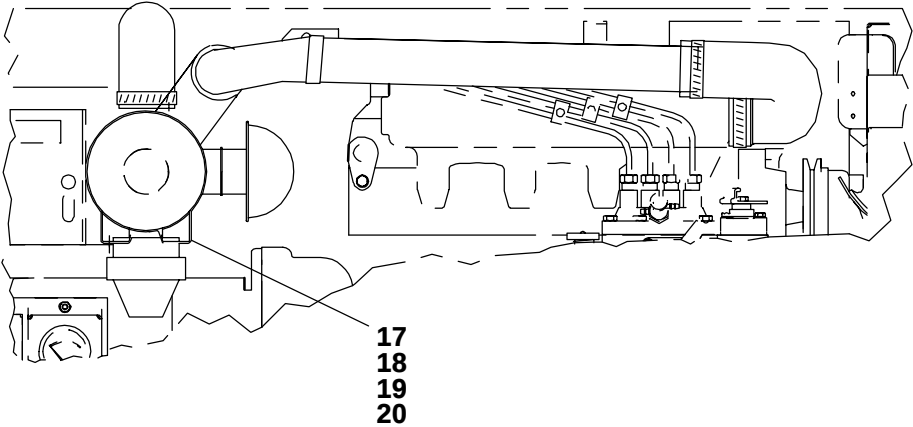

FRONT VIEW


ITEM	PART NO.	DESCRIPTION	QTY
2.8	AIR CLEANER – 69GC15-164-3, -4		
1	66U1-5262-5	Air Cleaner (Dry Element) – Includes:	1
2	30-00336-20	Clamp, Cup	1
3	66U1-2155	Element	1
4	66U1-8365	Valve, Vacuator – Includes:	1
5	NSS	Clip, Spring	1
6	34-00792-06	Screw, Hex Head, 5/16-18 x 3/4 lg – SST (NSI)	1
7	34-00662-12	Washer, Flat, 5/16 – SST (NSI)	1
8	34-00663-12	Washer, Lock, 5/16 – SST (NSI)	1
9	42-00234-00	Protector	1
10	69GC15-2293-1	Clamp, Air Inlet Tube – SST (NSI)	1
11	69GC15-823	Tube, 2 inch OD – Aluminum (NSI)	1
12	58-00976-00	Hose, Formed (Air Inlet)	1
13	44-00045-15	Clamp, Worm, Range – 2-1/16 to 3 OD – SST	6
14	58-00961-00	Hose, Formed (Air Inlet)	1
15	86-04053-01	Tube Assembly (NSI)	1
16	58-04203-00	Hose, Formed (Air Inlet) (NSI)	1
17	44-00022-02	Clamp, Air Cleaner Mounting	2
18	34-00655-05	Screw, Hex Head, 1/4-20 x 5/8 lg – SST (NSI)	4
19	66U1-5321-3	Washer, Flat, 1/4 – SST	4
20	AU11JR171	Washer, Lock, 1/4 – SST (NSI)	4

2.9 RADIATOR ASSEMBLY AND RELATED COMPONENTS

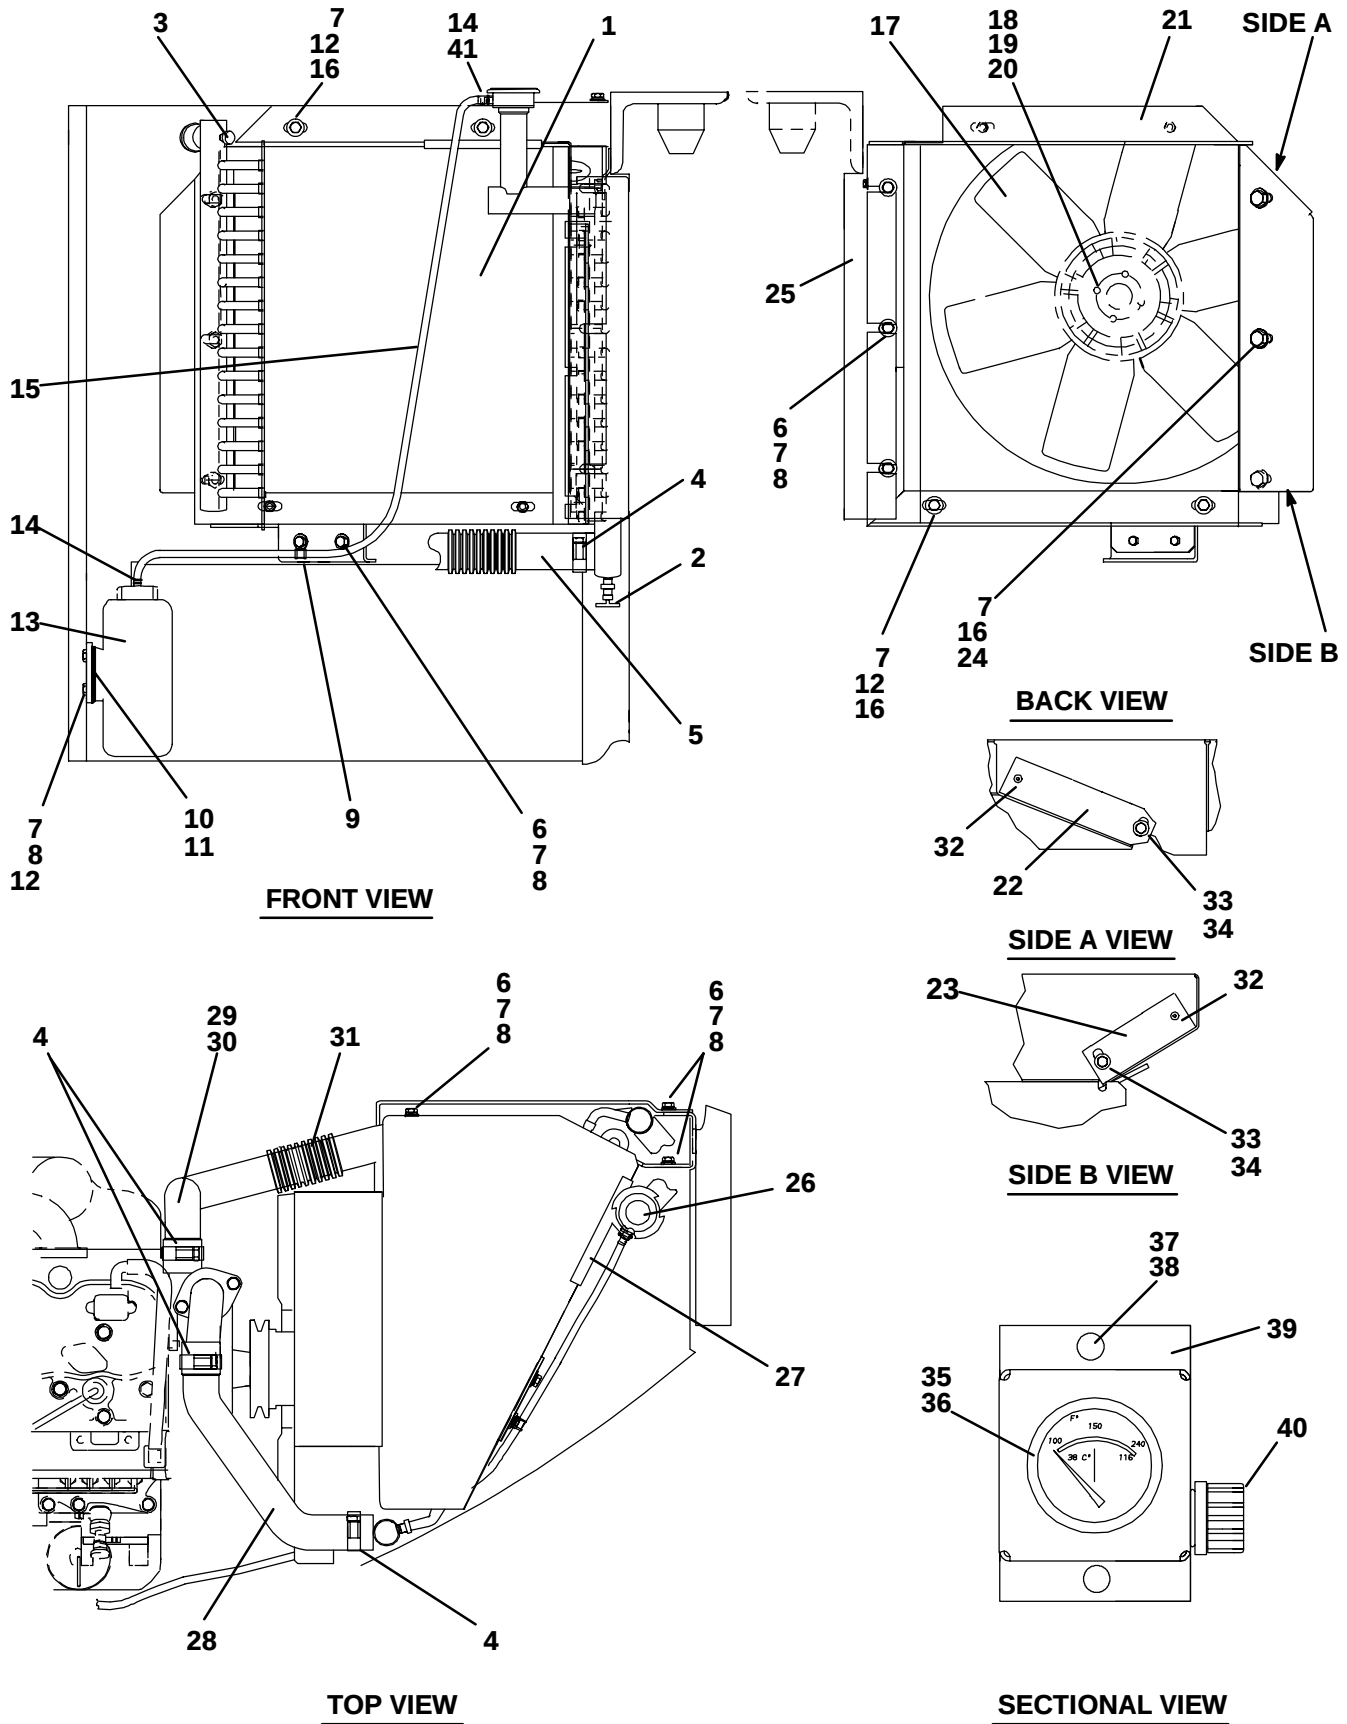


ITEM	PART NO.	DESCRIPTION	QTY
2.9	RADIATOR ASSEMBLY AND RELATED COMPONENTS		
1	69GC15-974	Radiator – Includes:	1
2	66U1-6591-1	Drain Cock, 1/4 MPT	1
3	40-00081	Air Vent	1
4	KA69JM824	Clamp, Worm, Range – 1-1/16 to 2.00 OD (NSI)	4
5	58-00959-00	Hose, Formed (Lower Radiator)	1
6	34-00655-06	Screw, Hex Head, 1/4-20 x 3/4 lg – SST (NSI)	12
7	AU11JR171	Washer, Lock, 1/4 – SST (NSI)	20
8	66U1-5321-7	Washer, Flat, 1/4 – SST	14
9	34-00373-54	Clamp, Tube, Cushioned, 7/16 Diameter – SST (NSI)	1
10	69GN15-1222	Bracket, Coolant Bottle (NSI)	1
11	69GC15-422	Plate, Water Bottle Mounting (NSI)	1
12	34-00655-05	Screw, Hex Head, 1/4-20 x 5/8 lg – SST (NSI)	6
13	941290	Bottle, Coolant	1
14	44-00045-25	Clamp, Worm, Range – 1/4 to 5/8 OD – SST	3
15	58-04176-01	Hose, Drain (Cut to length as required) (NSI)	A/R
16	69NT35-2692-1	Washer, Fender, 1/16 thick – SST (NSI)	7
17	38-00146-00	Fan – Plastic	1
18	34-01152-18	Screw, Hex Head, M6 x 18 mm lg – SST	4
19	34-00945-06	Washer, Lock, M6 – SST (NSI)	4
20	34-01151-06	Washer, Flat, M6 – SST (NSI)	4
21	69GC15-522	Venturi Assembly – Includes:	1
22	69GC15-502	Plate Assembly, Venturi (NSI)	1
23	69GC15-512	Plate Assembly, Venturi (NSI)	1
24	34-00655-04	Screw, Hex Head, 1/4-20 x 1/2 lg – SST (NSI)	3
25	69GC15-1924	Cover, Back (Radiator & Header)	1
26	30-00397-00	Cap, Radiator	1
NS	42-00146	Inhibitor, Cooling System	1
27	66U1-3633-3F07	Trim, Flexible (7 ft, Cut to length as required)	A/R
28	58-04020-00	Hose, Formed (Upper Radiator)	1
29	25-38735-00	Cover, Thermostat	1
30	25-37558	Gasket, Thermostat Cover	1
31	58-00975-02	Tube, Slit, 1-1/2 OD x 3.00 lg (NSI)	1
32	66U1-6832-6	Rivet, Blind, 1/8 Diameter, Grip Range – 1/8 to 3/16 – SST (NSI)	2
33	66U1-5371-7	Screw, Machined Truss Head, #10-24 x 1/2 lg – SST (NSI)	2
34	66U1-5321-8	Washer, Flat, #10 – SST	2
35	12-00097-03	Gauge, Water Temperature	1
36	42-00045-01	O-Ring, 2.00 ID (Used for Water Temperature Gauge)	1
37	34-00667-11	Locknut, 1/4-20 – SST (NSI)	2
38	AU02JA172	Washer, Flat, 1/4 – SST (NSI)	2
39	69GC15-137	Box, Water Temperature Gauge (NSI)	1
40	22-02302-02	Connector (NSI)	1
41	40-00410-00	Fill Neck Assembly, Radiator (NSI)	1
NS	10-00158-02	Switch, Water Temperature Safety (Located below Thermostat Cover)	1
NS	12-00098-04	Sensor, Water Temperature (Located below Thermostat Cover)	1
NS	69GC15-3192	Gasket (Used between Water Separator Bracket and Water Temperature Gauge Box)	1


2.10 GENERATOR (MAIN ALTERNATOR) AND RELATED COMPONENTS

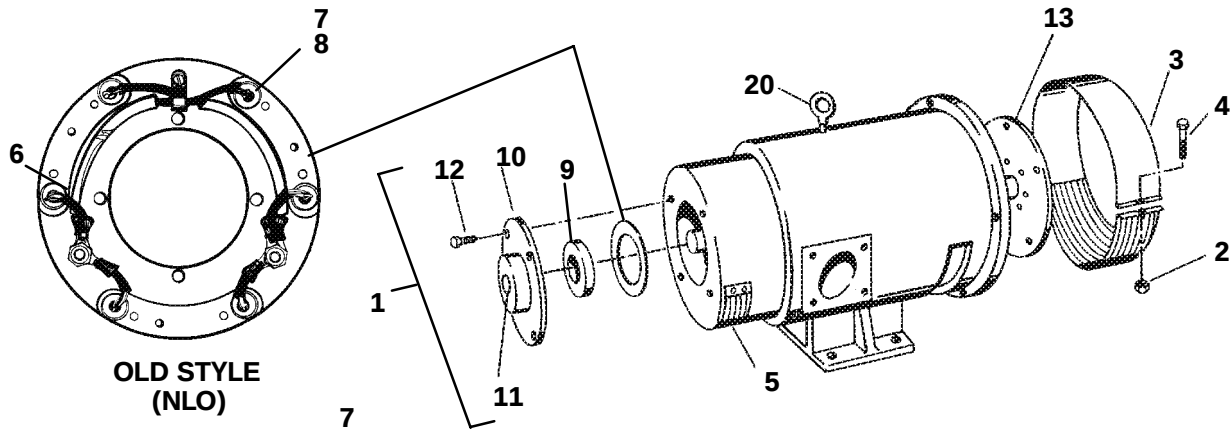

GENERATOR -- EXPLODED VIEW

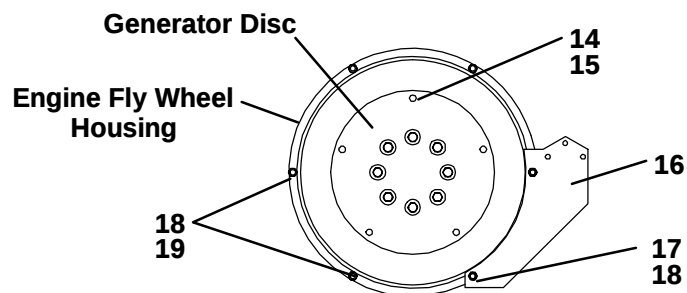


UNIDRIVE -- SECTIONAL VIEW

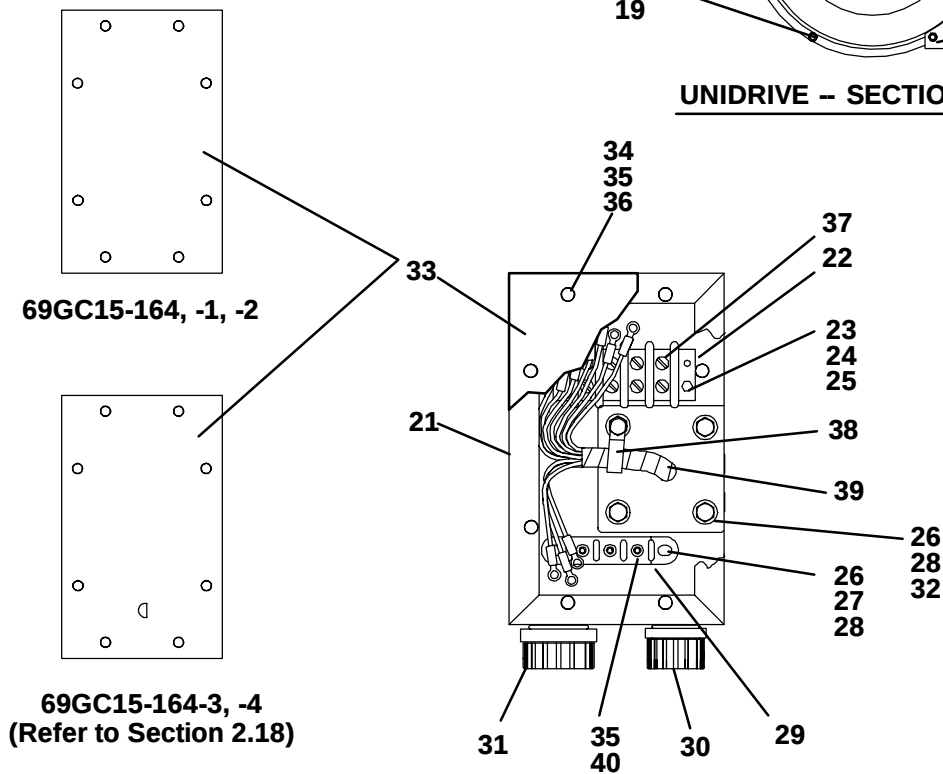

GENERATOR TERMINAL BOX -- SECTIONAL VIEW

ITEM	PART NO.	DESCRIPTION	QTY
2.10 GENERATOR (MAIN ALTERNATOR) AND RELATED COMPONENTS			
1	54-00510-01	Generator, 15 KW – Includes:	1
2	PL	Nut, Hex, 1/4-20 – SST	1
3	54-00133-06	Screen (NSI)	1
4	PL	Screw, Round Head, 1/4-20 x 1-3/4 Lg SAE Grade 5	1
5	66U1-6445	Screen, Intake (NSI)	1
6	NLO	Rectifier Assembly – Old Style – Includes:	1
7	22-50005	Diode, Forward (Red)	3
8	22-50006	Diode, Reverse (Black)	3
6	22-50082-00	Rectifier Assembly – New Style – Includes:	1
7	22-50084-00	Diode, Forward	3
8	22-50083-00	Diode, Reverse (R)	3
9	04-50012-00	Bearing (1.548 Bore)	1
10	54-50034-00	Cap, Bearing (3.50 ID) – Includes:	1
11	54-50034-02	Dust Cap	1
NS	54-50034-01	O-Ring (3.54 OD)	1
12	PL	Capscrew, Hex Head, 5/16-18 x 3/4 Lg – SST	4
13	66U1-6505	Disc Drive (.125 Thick Total)	2
14	AU02AB242	Washer, Lock, 3/8 – SST (NSI)	5
15	34-00305-06	Screw, Hex Head, 3/8-24 x 3/4 Lg – SST (NSI)	5
16	–	Bracket, Oil Filter (Refer to section 2.14)	–
17	AA06BZ203	Screw, Hex Head, 5/16-18 x 1-1/2 lg – SST (NSI)	4
18	AU11AS201	Washer, Lock, 5/16 – SST (NSI)	6
19	AA06BZ202	Screw, Hex Head, 5/16-18 x 1-1/4 Lg – SST (NSI)	2
20	PL	Eyebolt, 1/2-13	1
21	69GC15-198	Box Assembly, Generator Terminal – Includes: (NSI)	1
22	66U2-1541	Terminal Block (Four Terminal)	1
23	66U1-5371-12	Screw, Hex Head, #8-32 x 1.00 lg – SST (NSI)	2
24	66U1-5321-2	Washer, Flat, #8 – SST (NSI)	2
25	66U1-5331-4	Washer, Lock, #8 – SST (NSI)	2
26	34-00655-08	Screw, Hex Head, 1/4-20 x 1.00 lg – SST (NSI)	2
27	66U1-5321-3	Washer, Flat, 1/4 N Type A – SST	2
28	AU11JR171	Washer, Lock, 1/4 – SST (NSI)	2
29	22-01137-00	Junction Block (Three Terminal) (NSI)	1
30	22-02302-03	Connector – 3/4" Plastic (NSI)	1
31	22-02302-04	Connector – 1" Plastic (NSI)	1
26	34-00655-08	Screw, Hex Head, 1/4-20 x 1.00 lg – SST (NSI)	4
28	66U1-5321-3	Washer, Flat, 1/4 N Type A – SST	4
32	66U1-5321-7	Washer, Flat, 1/4 W Type A – SST	4
33	69GC15-1873	Cover, Terminal Box – 69GC15-164, -1, -2	1
33	–	Cover, Terminal Box – 69GC15-164-3, -4 (Refer to Section 2.18)	–
NS	69GC15-3052	Gasket (Used between Terminal Box and Terminal Box Cover)	1
NS	42-01111	Gasket (Used between Generator and Water Separator Bracket / Water Separator Bracket and Terminal Box Assembly)	2
34	AC05AB126	Screw, Hex Head, #10-24 x 1/2 lg – SST (NSI)	8
35	66U1-5331-3	Washer, Lock, #10 – SST (NSI)	11
36	66U1-5321-8	Washer, Flat, #10 – SST	8
37	PL	Screw, Binding Head, #10-32 3/8 lg – Brass	8
38	34-00373-59	Clamp, Tube, Cushion, 3/4 Diameter – SST	1
39	22-01107-00F25	Spiral Wrap, 1/2 inch Diameter x 25 foot Long (Cut to length required)	A/R
40	AT39QA131	Nut, Hex Head, #10-24 – Brass (NSI)	3
NS	34-00655-06	Screw, Hex Head, 1/4-20 x 3/4 lg – SST (NSI)	1
NS	34-00372-11	Washer, Lock, 1/4 – SST (NSI)	1
NS	34-00667-11	Locknut, 1/4-20 – SST (NSI)	1

2.11 ENGINE AND GENERATOR SHOCKMOUNT ASSEMBLY

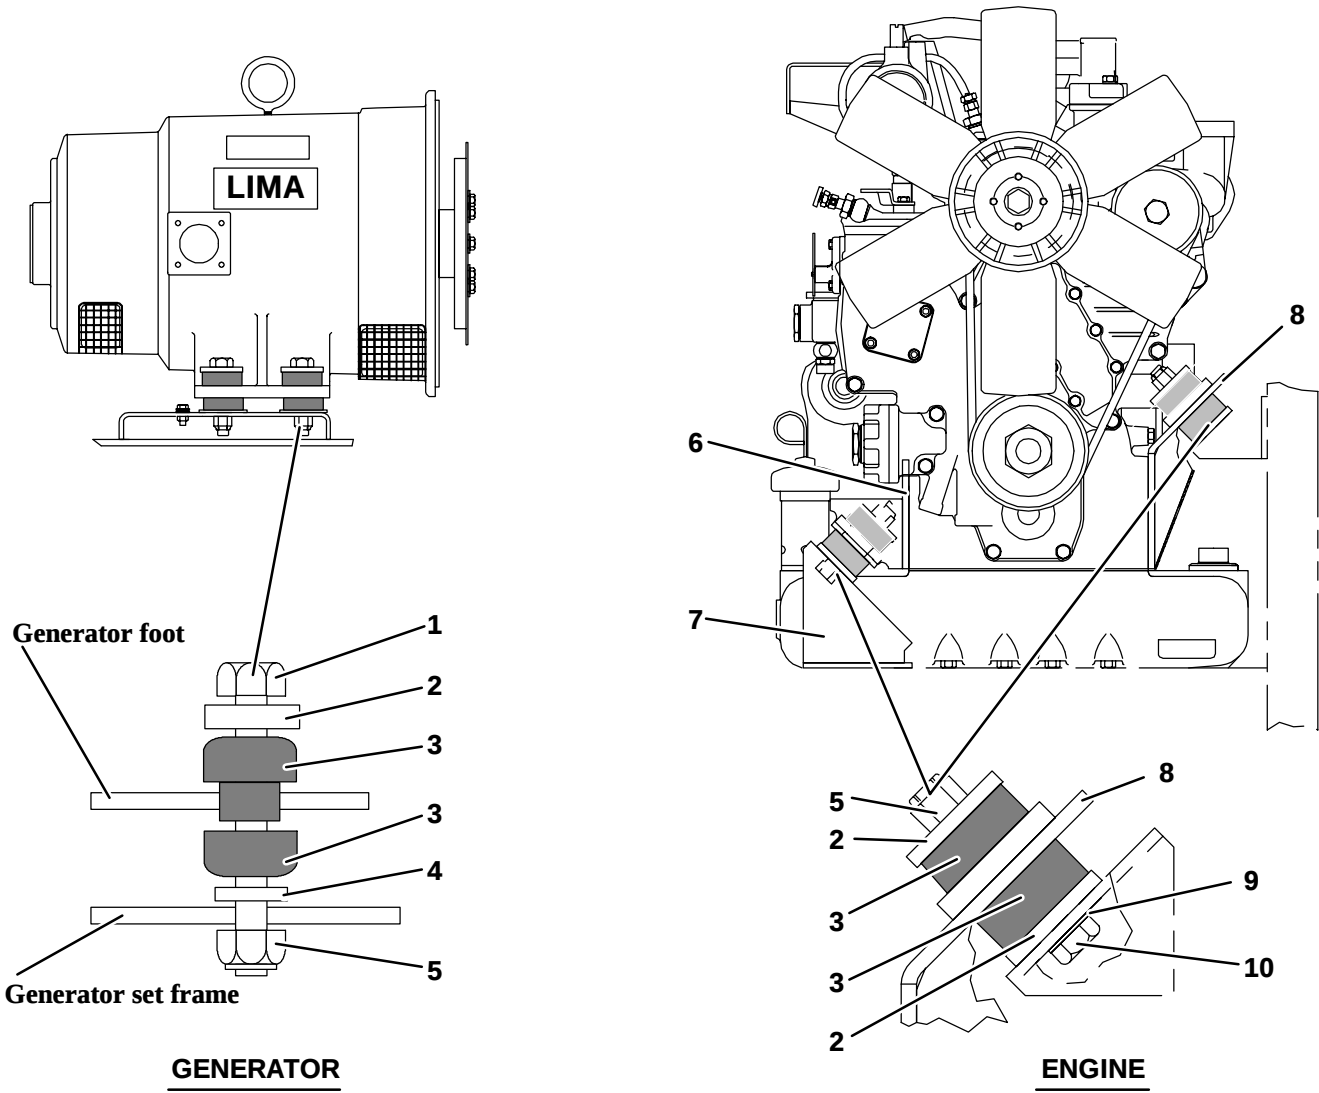

ITEM	PART NO.	DESCRIPTION	QTY
2.11 ENGINE AND GENERATOR SHOCKMOUNT ASSEMBLY			
1	PL	Screw, Hex Head, 1/2-13 x 3-1/4 lg – SST	4
2	34-00890-03	Washer, Flat, Special – SST	8
3	73-00305-02	Shockmount	6
4	34-00890	Washer, Flat, Special – SAE	4
5	PL	Locknut, Hex Head, 1/2-13 – SST	6
6	69GC15-643	Motor Mount, Engine	1
NS	34-00961-20	Screw, Hex Head, M10 x 20 MM – Grade 10.9 Steel	1
NS	PL	Washer, Flat, M10 – SAE	1
NS	25-37690	Washer, Lock, M10 – SAE	1
7	69GC15-593	Mount Assembly, Engine	1
NS	PL	Screw, Hex Head, 5/16-18 x 1 lg – Grade 10.9 Steel	3
NS	PL	Washer, Lock, 5/16 – SAE	3
NS	PL	Washer, Flat, 5/16 – SAE – SST	3
8	69GC15-633	Mount Assembly, Engine	1
NS	34-00962-25	Screw, Hex Head, M12 x 25 MM – Grade 10.9 Steel	4
NS	PL	Washer, Flat, M12 – SAE	4
NS	PL	Washer, Lock, M12 – SAE	4
9	PL	Washer, Flat, 1/2 – SAE – SST	2
10	PL	Screw, Hex Head, 1/2-13 x 3-1/2 lg – SST	2


Used to mount
bracket to engine

Used to mount
bracket to frame

Used to mount
bracket to engine

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----


2.12 ENGINE V-BELT AND IDLER PULLEY

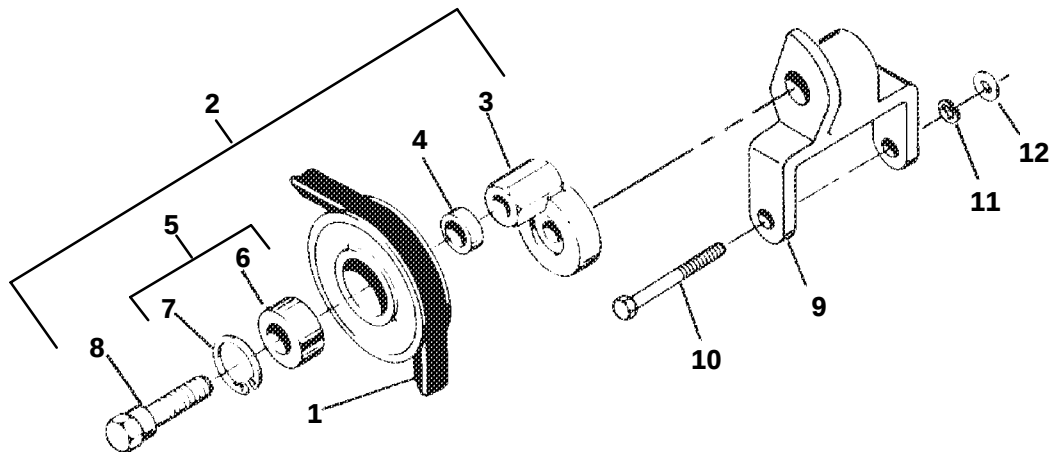

1	50-00162-04	V-Belt, Water Pump	1
2	48-00058-29	Pulley Assembly – Includes:	1
3	48-00058-04	Eccentric	1
4	48-00058-05	Spacer	1
5	48-00058-01	Pulley Assembly – Includes:	1
6	04-00018	Bearing	1
7	NSS	Retaining Ring	1
8	48-00058-02	Bolt, Shoulder	1
9	48-00217-04	Bracket, Idler Mounting	1
10	PL	Capscrew, Hex Head, 5/16-18 x 3-1/2 lg – SAE Grade 5	1
11	PL	Washer, Lock, 5/16	1
12	PL	Washer, Flat, 5/16 – SAE	1

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----

2.13 FUEL SOLENOID

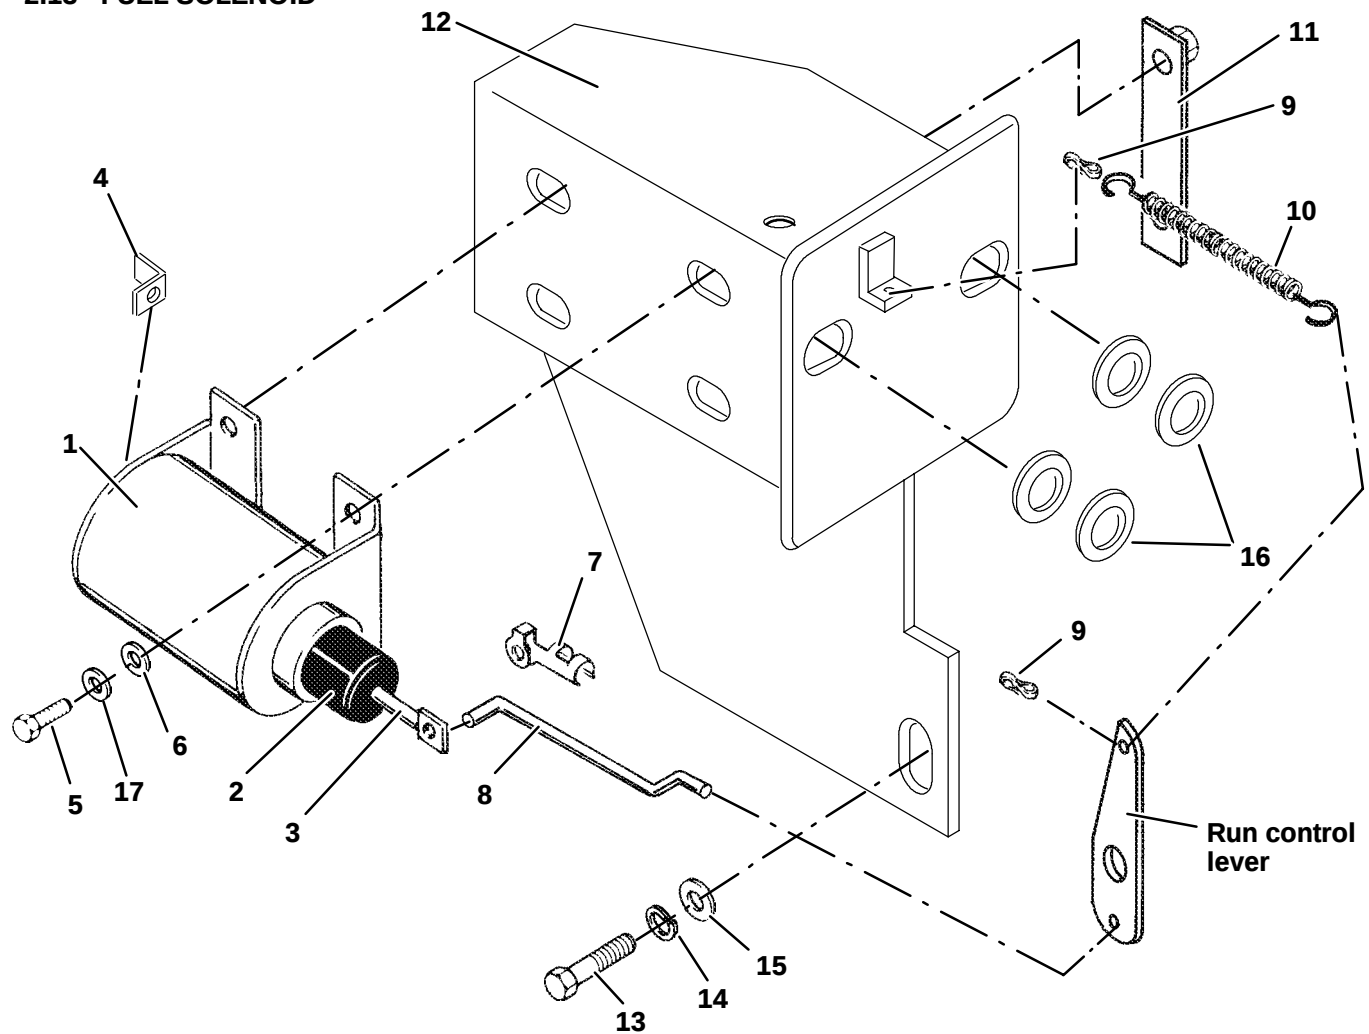

1	10-01095	Solenoid, Linear – Includes:	1
1	10-00352-00	Solenoid, Linear – 69GC15-164-2, -3, -4 – Includes:	1
2	58-50006	Boot, Solenoid	1
NS	34-50009-01	Plunger – Includes:	1
3	34-50009-00	Bolt, Eye (Solenoid)	1
4	22-50041	Terminal, Spade (Adapter)	2
NS	07-00245-00	Grease, Dow 33 Lithium Base (used on solenoid plunger)	1
5	66U1-5361-25	Screw, Hex Head, 1/4-20 x 3/4 lg – SST (NSI)	4
6	66U1-5321-7	Washer, Flat, 1/4 – SST	4
7	44-01049-01	Clip, Rod Linkage	1
8	56-03340-00	Rod, Linkage	1
9	44-00016-09	Chain, Single Link (9 Links, to be cut to length)	A/R
10	73-00093	Spring	1
11	69GU15-232	Plate Nut, Double	2
12	69GC15-434	Bracket Assembly, Solenoid	1
13	34-01155-25	Bolt, Hex Head, M12 x 1.25 x 25 mm lg – SST	1
14	34-00368-15	Washer, Lock, M12 – SST	1
15	34-01151-12	Washer, Flat, M12 – SST (NSI)	1
16	34-01151-10	Washer, Flat, M10 – SST	4
17	PL	Washer, Lock, 1/4 – SST	4
NS	34-01152-45	Screw, Hex Head, M6 x 1.00 x 45 mm lg (Low idle adjustment screw) (NSI)	1

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----

2.14 LUBE OIL FILTER

TOP VIEW


FRONT VIEW

1	69GC15-1803	Bracket, Oil Filter	1
2	PL	Screw, Hex Head, 1/4-20 x 1 1/4 lg – SST	3
3	PL	Washer, Flat, 1/4 – SST	3
4	PL	Locknut, 1/4-20 – SST	3
5	40-00343-05	Connector, Male, 3/8 npt x 1/2 Tube	1
6	40-00342-06	Elbow	1
7	40-00342-08	Elbow, Male, 1/2 Tube x 1/4 mpt	1
8	40-00121-01	Bushing, 1/4 x 1/8	1
9	40-00243	Tee, Street, 1/8 mpt x fpt x fpt (NSI)	1
10	10-00316-01	Switch, Oil Pressure Safety	1
11	40-00249-01	Tee, Male, 1/4 fpt x fpt x mpt	1
12	40-00343-08	Connector, Male, 1/4 npt x 1/2 Tube	1
13	58-00509-00F05	Tube, 1/2 OD (5 ft., Cut to length)	A/R
14	30-00323	Filter, Oil	1
15	30-00325-03	Head Assembly, Filter	1
16	12-00011-01	Gauge, Oil Pressure	1
NS	66CH1-123-98	Hose Assembly (NSI)	1
NS	40-00365-05	Pipe Cap, Hex Head, 3/4-14 NPT (NSI)	1

} Used for engine oil
pan drain

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----


2.15 UNIT MOUNTING ASSEMBLY

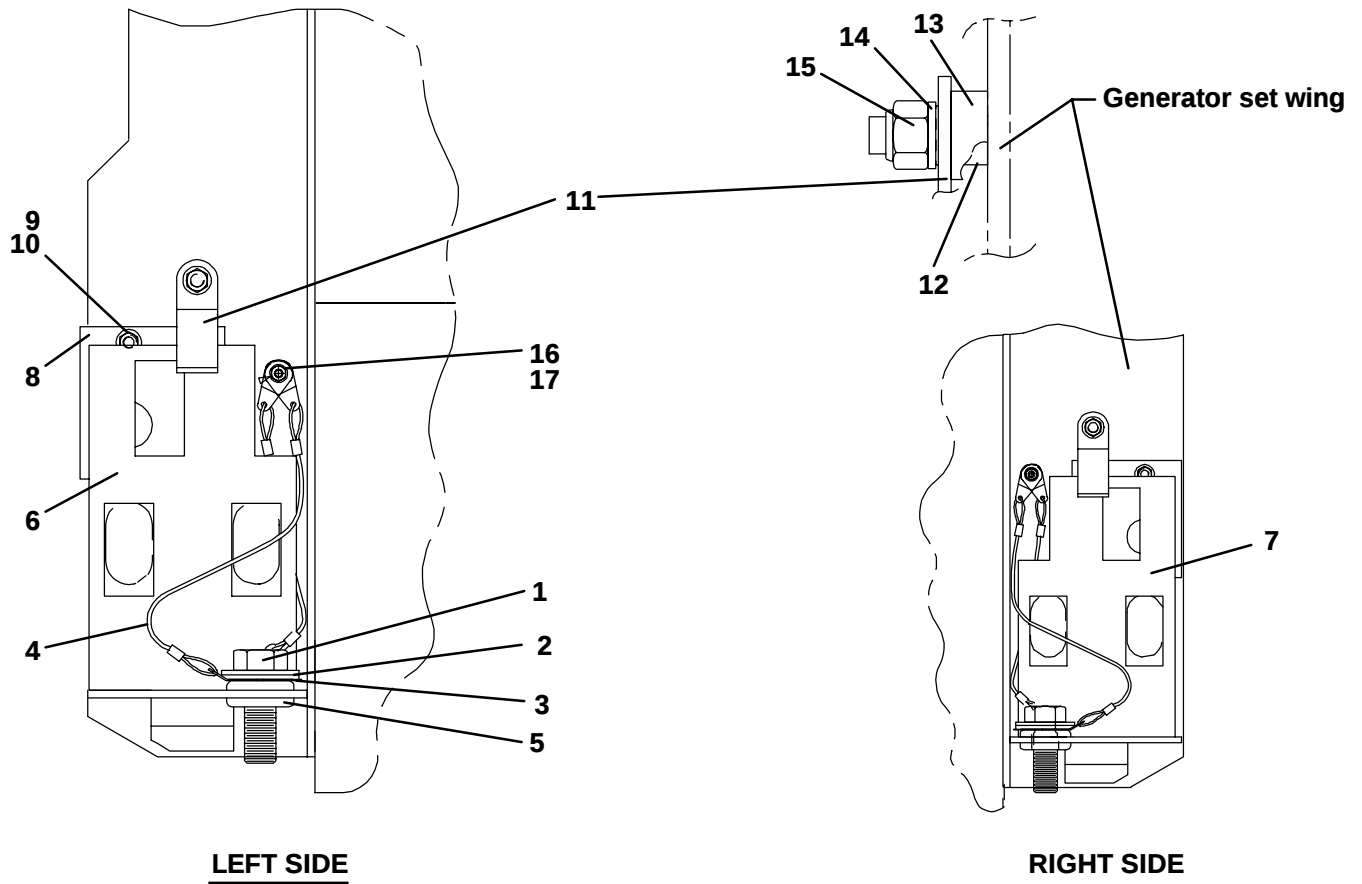

1	69GC15-492	Screw Assembly – Includes:	2
2	34-00662-18	Washer, Flat – SST (NSI)	4
3	69GC15-1252	Washer, Retaining – SST	2
4	44-50005-00	Lanyard Assembly	4
5	66U1-1571-20	Grommet (NSI)	2
6	69GC15-3602	Plate Assembly (Left Hand)	1
7	69GC15-3602-1	Plate Assembly (Right Hand)	1
8	69GC15-1212	Plate, Adjustable Mounting	2
9	66U1-5321-7	Washer, Flat, 1/4 – SST	4
10	34-00667-61	Locknut, 1/4-20 UNC-2B – SST (NSI)	4
11	69GC15-3022	Bracket, Retaining Lever	2
12	34-01219-01	Spacer	2
13	34-01219-02	Spacer	2
14	34-00662-12	Washer, Flat, 5/16 – SST (NSI)	2
15	34-00667-12	Locknut, 5/16-18 – SST (NSI)	2
16	66U1-5321-2	Washer, Flat, #8 – SST (NSI)	4
17	34-00667-08	Locknut, #8-32 – SST (NSI)	2

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----


2.16 BATTERY ASSEMBLY

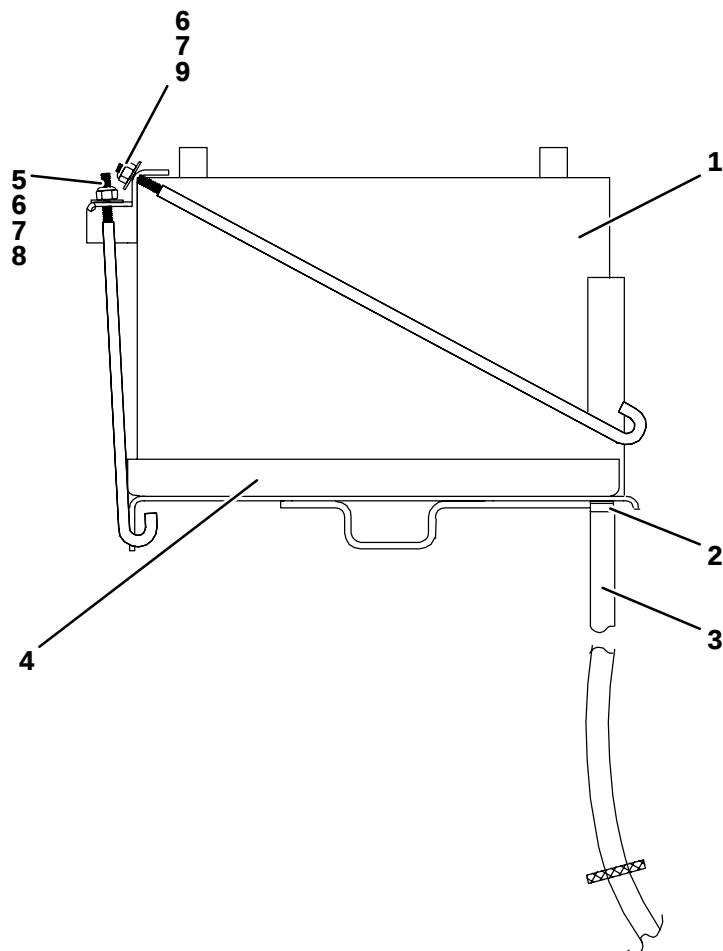


1	PL	Battery, 12 vdc, Reserve capacity in minutes – 25 amps at 80_F (+26.7_C) = 160/170 minutes. Cold crank amps at 0_F (–17.8_C) = 620/625 amps. Cold crank amps at –20_F (–28.9_C) = 470/496 amps.	1
2	44-00045-25	Clamp, Worm, Range – 1/4 to 5/8 OD – SST	1
3	58-00421-00F20	Hose, Drain (Cut to length)	A/R
4	69GC15-1903	Tray, Battery	1
5	34-06058-02	J-Hook, Battery Hold Down	1
6	66U1-5321-4	Washer, Flat, 5/16 (NSI)	3
7	34-00361-12	Nut, Lock, 5/16-18 (NSI)	3
8	69GC15-3092	Angle (Battery Hold Down)	1
9	34-06058-01	J-Hook	2
NS	69GC15-218	Bracket Assembly, Battery/Air Cleaner (NSI)	1
NS	66U1-5361-40	Screw, Hex Head, 1/2-13 x 1.00 lg – SST (NSI)	1
NS	AU02AB301	Washer, Flat, 1/2 – SAE – SST (NSI)	1
NS	66U1-5331-9	Washer, Lock 1/2 – SST (NSI)	1
Used to mount Battery/Air Cleaner Bracket Assembly			1

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----

2.17 MUFFLER ASSEMBLY

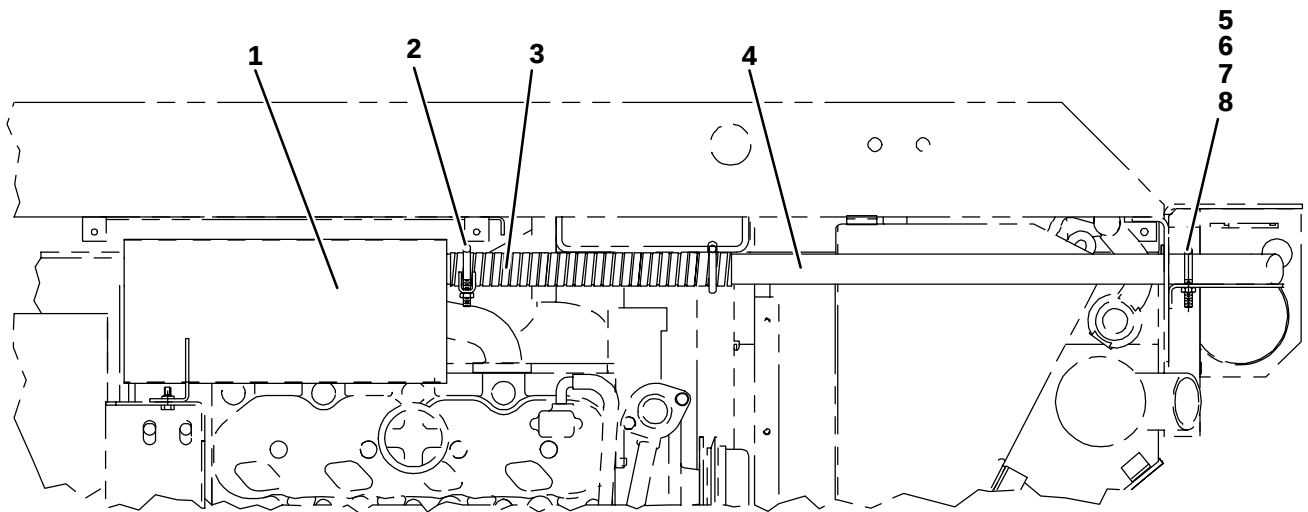

TOP VIEW

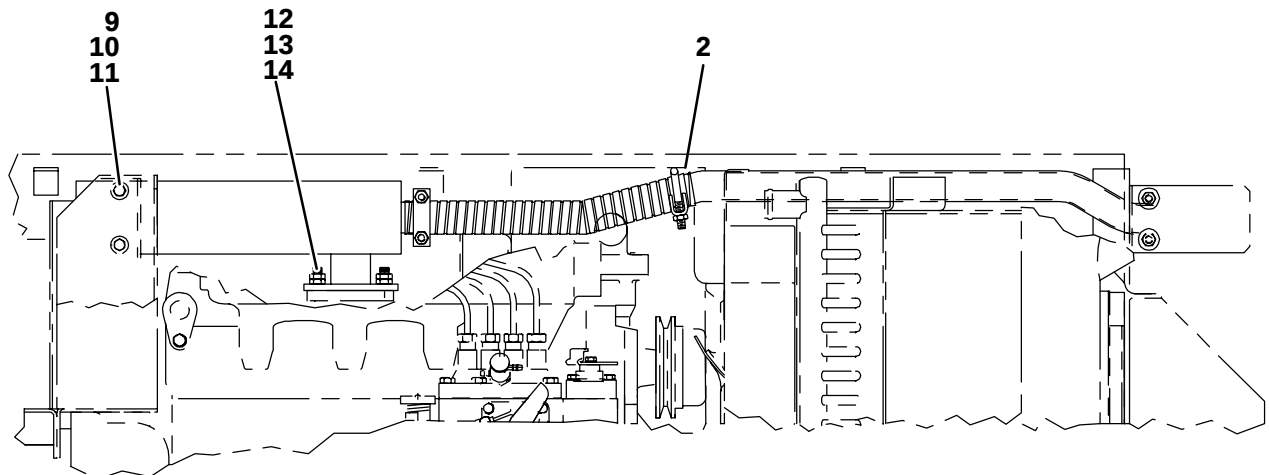


FRONT VIEW

1	30-01075-00	Muffler	1
2	30-01052-03	Clamp, Muffler, 1-1/2 diameter	2
3	30-00371-02	Pipe, Flex	1
4	30-00372-01	Pipe, Exhaust	1
5	PL	U-Bolt, 5/16-18	2
6	PL	Washer, Flat, 5/16	4
7	PL	Washer, Lock, 5/16	4
8	PL	Locknut, 5/16-18	4
9	PL	Screw, Hex, 1/4-20 x 3/4 lg	2
10	PL	Washer, Flat, 1/4	2
11	PL	Washer, Lock, 1/4	2
12	34-01151-10	Washer, Flat, M10	2
13	34-00964	Stud, M10 x 3/8-24 x 1-1/2 lg	2
14	34-00932-13	Nut, Jam, 3/8-24 (Brass)	4

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----

2.18 BATTERY CHARGER -- 69GC15-164-3, -4

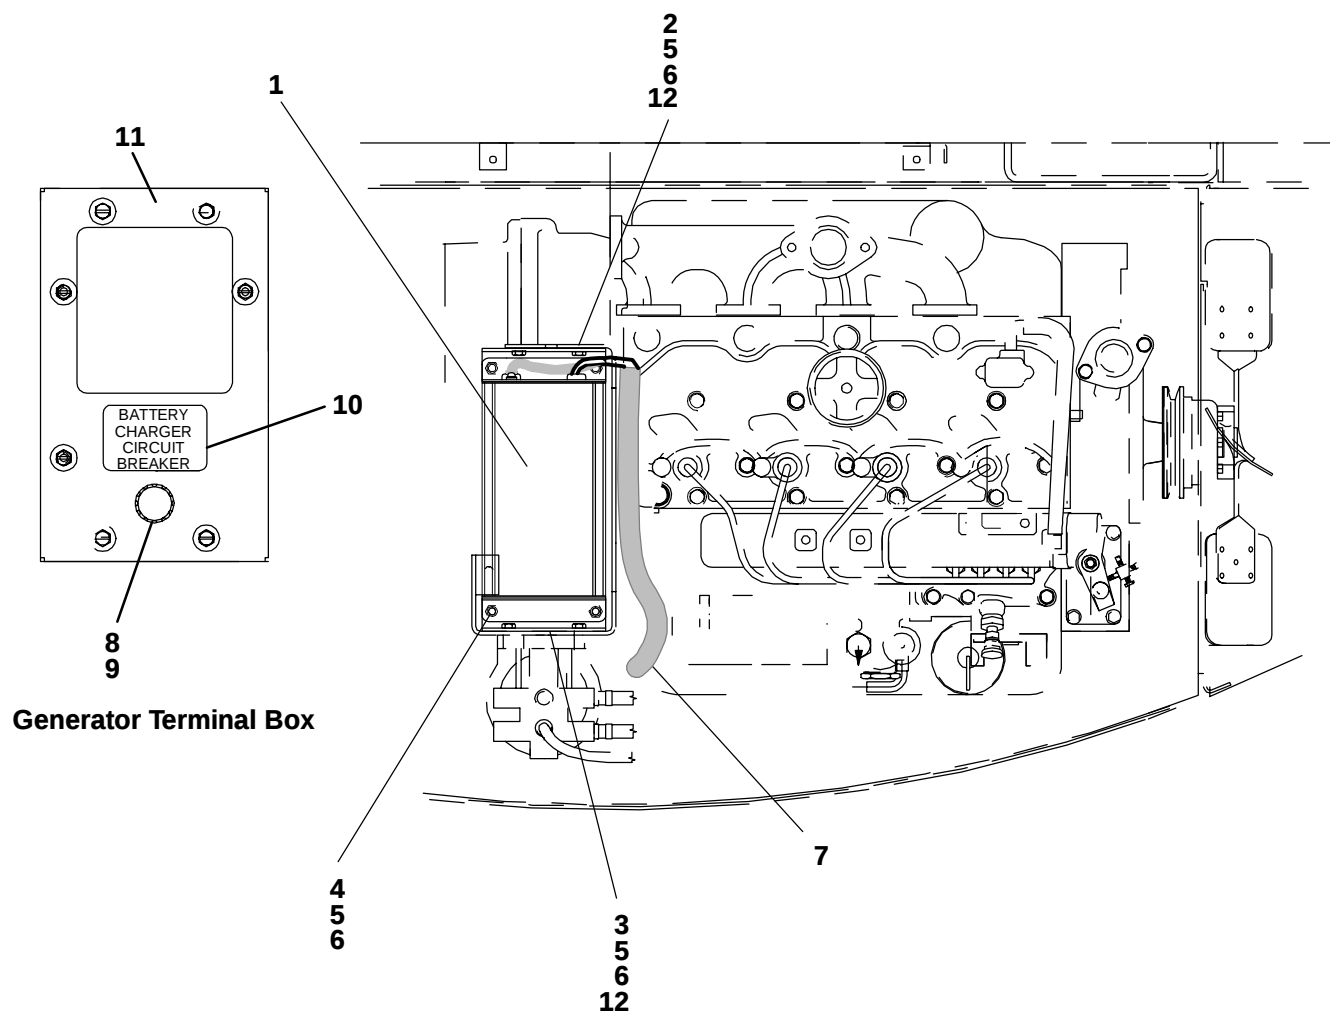

1	30-00416-03	Battery Charger	1
2	69GC15-552-2	Angle Assembly (NSI)	1
3	69GC15-572	Angle Assembly (NSI)	1
4	34-06014-12	Screw, Socket Head, 1/4-20 x .75 lg -- SST (NSI)	4
5	34-00662-11	Washer, Plain, 1/4 -- SST (NSI)	8
6	34-00663-11	Washer, Lock, 1/4 -- SST (NSI)	8
7	58-00906-08	Tube, Slit, 3/4 ID x 47" lg -- Nylon (NSI)	1
8	10-00365-00	Circuit Breaker, 3 amp	1
9	10-00365-10	Boot, Circuit Breaker	1
10	69GC15-3812	Label, Battery Charger Fuse (NSI)	2
11	69GC15-2483	Cover, Generator Terminal Box	1
12	34-00655-05	Screw, Hex Head, 1/4-20 x .62 lg -- SST (NSI)	4

ITEM	PART NO.	DESCRIPTION	QTY
------	----------	-------------	-----

2.19 LABELS AND DECALS

1	69GC15-2303	Label, Fuel Level (NSI) 69GC15-164-1, -2, -3, -4	1
2	69GC15-3642	Label, Fuel Cap (NSI) 69GC15-164-1, -2, -3, -4	1
3	69GC15-3202	Label, Refueling (NSI) 69GC15-164	1
3	69GC15-2373	Label, Refueling (NSI) 69GC15-164-1, -2, -3, -4	1
4	69GC15-3702	Label, Warning (NSI) 69GC15-164-2	2
5	62-03642-02	Decal, Carrier Transicold (6-13/16 inches wide) (NSI)	2
6	69GC15-1834	Label, 64 Inch Radius (NSI)	2
7	69GC15-1844	Label, Weight (NSI)	1
8	69GC15-3632	Label, Fuel Cap (NSI) 69GC15-164-1, -2, -3, -4	1
NS	69GC15-3212	Label, Fuel, Shutoff (NSI)	1
NS	62-02176-00	Label, Dipstick (NSI)	1
NS	69GS4-1702	Label, Anti-Freeze (NSI)	1
NS	62-03647-00	Label, Fan Warning (NSI)	1
NS	69GC15-2043	Label, Installation (NSI)	1
NS	69GC15-1804	Label, Operating Instructions (NSI)	1
NS	69GC15-3024	Label, Operating Instructions (NSI) 69GC15-164-3, -4	1
NS	69GC15-1814	Label, Electrical Wiring Diagram (NSI)	1
NS	69GC15-2084	Label, Electrical Wiring Diagram (NSI) 69GC15-164-2	1
NS	69GC15-3004	Label, Electrical Wiring Diagram (NSI) 69GC15-164-3	1
NS	69GC15-3084	Label, Electrical Wiring Diagram (NSI) 69GC15-164-4	1
NS	69GC15-1824	Label, Electrical Wiring Schematic and Legend (NSI) 69GC15-164	1
NS	69GC15-1954	Label, Electrical Wiring Schematic and Legend (NSI) 69GC15-164-1	1
NS	69GC15-2074	Label, Electrical Wiring Schematic and Legend (NSI) 69GC15-164-2	1
NS	69GC15-3014	Label, Electrical Wiring Schematic and Legend (NSI) 69GC15-164-3	1
NS	69GC15-3074	Label, Electrical Wiring Schematic and Legend (NSI) 69GC15-164-4	1
NS	69GC15-3262	Label, 120 Gallon Capacity (NSI) 69GC15-164	1
NS	69GC15-3332	Label, 120 Gallon Capacity (NSI) 69GC15-164-1, -2, -3, -4	1
NS	69GC15-3752	Label, Warning Bolt Placement & Torque (NSI) 69GC15-164-3, -4	2