



# **SmartCharger MINI**

## **User Guide**

# Table of Contents

**Installation .....3**

    Stand-alone Installation .....3

    Stacking 2 Devices.....3

**Operation and Usage .....4**

**Safety Hints .....5**

**Troubleshooting .....6**

**Proper Disposal.....7**

**Certification & Standards .....8**

    Regulatory certification.....8

# Installation

## Stand-alone Installation

To install the SmartCharger MINI as a stand-alone unit:

1. Place the device on a flat, solid surface indoors.
2. Connect the power cable to a power outlet.

## Stacking 2 Devices

To save space, you can stack two SmartChargers MINI on top of each other:

1. Insert the four S-shaped plastic pins into the corresponding holes on the bottom of the top device.
2. Ensure the top charger is securely positioned to prevent it from sliding off.

## Operation and Usage

The SmartCharger MINI is designed for easy and efficient charging of SmartMonitor devices.

1. No configuration is required for the charger.
2. To charge a SmartMonitor SHIP L or SITE L complete the following steps:
  - a) Slide the SmartMonitor into one of the five slots until it makes solid contact with the USB connector.
  - b) Once properly connected, the charging symbol will appear on the SmartMonitor, and the LED will switch to orange and blink.
  - c) When the SmartMonitor is fully charged and cooled down for operation, the LED will switch to green.

**Attention:** From SmartView release 6.4 onwards, the device can be configured to automatically start monitoring once it is removed from the charger.

## Safety Hints

- Only charge SmartMonitor SHIP L or SITE L devices.
- Do not attempt to charge single-use devices such as the SmartMonitor SHIP M or SHIP S, as they are not equipped with rechargeable batteries.
- Do not use the SmartCharger MINI to charge or supply power to any third-party devices, including phones or computers.

## Troubleshooting


If the SmartMonitor does not start charging when inserted:

1. Ensure the USB connector is fully connected.
2. Verify that the AC supply is connected and has power.
3. Confirm that you are using the correct SmartMonitor type (SHIP L or SITE L).
4. Check that the SmartMonitor is not damaged.

## Proper Disposal

Electronic devices can be recycled and should not be thrown away with household waste. When your device reaches the end of its life, dispose of it following your country's regulations or return it to Sensitech through the Sensitech RMA (Return Merchandise Authorization) process.

If more help is needed, contact Sensitech support at [sensitech.support@carrier.com](mailto:sensitech.support@carrier.com)

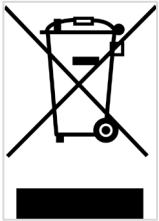

## Certification & Standards

### Regulatory certification



Relevant information can be found in the technical specification.