

**CPLPCONV014C00****Small Packaged Products Accessory Propane Gas Conversion Kit****High Altitude Only 2001-6000 FT (610-1829 m)****40,000-130,000 Btu/hr****Installation Instructions**

**NOTE:** Read the entire instruction manual before starting the installation.

This kit is used on:

Two-Stage (2 - 5 Tons) Models: 48DT, 48DU, 48NG (208/230 VAC models), 48NR, 48VG (208/230 VAC models), 48VR, 48XL, 48XT, 575E (208/230 VAC models), 577B, 577D, 577E (208/230 VAC models), 675E, 677B, 677D and 677E. (Two-Stage conversion starts on page 7.)

Single-Stage (1-1/2 - 5 Tons) Models: 48ES, ("1") series or later (Examples: 48ES-060130311, 48ES-060130511, 48ES-060130611), 48ES-A, 48ESNA, 48EZ "1" series or later (Examples: 48EZ-060130311, 48EZ-060130511, 48EZ-060130611), 48EZ-A, 48EZNA, 48NG (460 VAC models), 48VG (460 VAC models), 48NL, 48NT, 48VL, 48VT, 574D "B" series or later (Examples: 574DNW060130NB, 574DPW060130NB, 574DEW060130NB), 574D\*WA, 575C, 575E, 577C, 577E (460 VAC models), 674D "B" series or later (Examples: 674DNW060130NB, 674DPW060130NB, 674DEW060130NB), 674D\*WA, 675C, 677C, all PY3G except "B" series (Example: PY3GNA060115AB), PY4G and PY5G. (Single-Stage conversion starts on page 2.)

**WARNING****UNIT OPERATING HAZARD**

Failure to follow this warning may result in damage to unit components.

This kit must **not** be used on 48NGU, 48NLU, 48VGU, 48VLU, 575C\*\*\*\*\*U, 577E\*\*\*\*\*U, 577\*\*\*\*\*U, PY4G\*\*\*\*\*U, PY5G\*\*\*\*\*U models. These models are for Natural Gas Only.

**Safety Considerations**

Installation and servicing of this equipment can be hazardous due to mechanical and electrical components. Only trained and qualified personnel should install, repair, or service this equipment.

Untrained personnel can perform basic maintenance functions such as cleaning and replacing air filters. All other operations must be performed by trained service personnel. When working on this equipment, observe precautions in the literature, on tags, and on labels attached to or shipped with the unit and other safety precautions that may apply.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Use quenching cloth for brazing operations. Have fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit.

Consult local building codes, the current editions of the National Electrical Code (NEC) NFPA 70 and NFPA 90B-Installation Warm Air Heating and A/C Systems (Residential). In Canada refer to the current editions of the Canadian Electrical Code CSA C22.1.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to

the potential for personal injury. Understand these signal words: DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies hazards which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

**WARNING****FIRE, EXPLOSION, CARBON MONOXIDE POISONING, PROPERTY DAMAGE HAZARD**

Failure to follow this warning could result in personal injury, death or property damage.

This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted furnace is checked as specified in the manufacturer's instructions supplied in the kit.

**WARNING****FFEU, EXPLOSION, EMPOISONNEMENT PAR CARBON DE MONOXYDE, RISQUE DE DOMMAGE À LA PROPRIÉTÉ**

La négligence de suivre l'avis suivant, peut causer des blessures personnelles, la mort ou du dommage à la propriété.

Cette trousse de conversion doit être installée par un Entrepreneur qualifié, selon les instructions du fabricant et doit se conformer à toutes les exigences et tout les codes pertinents de l'autorité compétente. L'Entrepreneur qualifié

est responsable, et doit s'assurer de bien suivre les instructions dans cet avis. L'installation sera considérée conforme et rencontrant les spécifications et instructions du fabricant qui sont inclus dans la trousse, seulement après vérification de l'opération de la fournaise convertie.

**WARNING****UNIT OPERATION HAZARD**

Failure to follow this warning may result in damage to unit components.

Before converting a unit to propane gas, remove the burner assembly and inspect the heat exchanger tubes. If there are V-shaped NOx baffles installed in the firing tubes, (see Fig. 1). **THEY MUST BE REMOVED PRIOR TO CONVERTING THIS UNIT TO PROPANE GAS.**

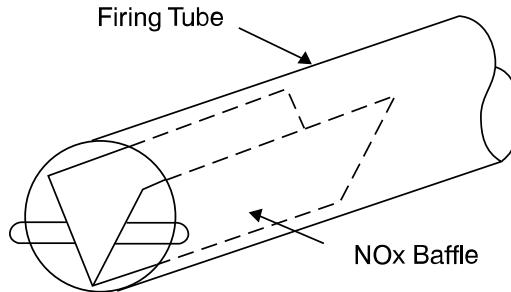


Fig. 1 – Low NOx Baffle Location

A221566

## ! WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death. Before installing or servicing system, always turn off main power to system and install lockout tag. There may be more than one disconnect switch. Lock out and tag switch with suitable warning label.

1. Turn off gas supply first, then power to unit.
2. Remove the control access panel from unit.
3. Disconnect the gas pipe from the gas valve.
4. Remove the screw attaching the gas manifold to the basepan, and partially slide out the entire burner rack assembly from unit. Save screw. The fan partition mounting bracket may be removed for easier access to the burner assembly. The bracket may be removed for easier access to the burner assembly. The bracket may be removed by removing 2 screws (located on the left side of the control compartment on the fan partition panel) and sliding the bracket forward, bottom first. See [Fig. 7](#).)
5. Disconnect the gray and brown wires from the gas valve and remove blue wires from the rollout switch.

**NOTE:** To locate rollout switch, see [Fig. 2](#).

6. Disconnect orange sparker cable from the sparker.
7. Disconnect yellow flame sensor wire from the flame sensor.
8. Remove the screw securing the brown wire from the burner assembly. Ground screw is attached to the fan partition panel. Save screw.
9. Completely slide out the entire burner rack assembly from unit.
10. Inspect the inlet of the heat exchanger tubes for presence of V-shaped NOx baffles (see [Fig. 1](#)). If baffles are present, they must be removed prior to converting unit for propane gas. Using needle-nose pliers, remove NOx baffles, squeeze sides of the baffle, if necessary, to remove from the heat exchanger tubes.

**IMPORTANT:** If it is expected that this unit will be converted back to natural gas at a later time, these baffles should be retained for reuse. Otherwise the baffles may be discarded.

11. Using a 5/16 in. nut driver, remove the four screws securing the manifold/gas valve assembly to the burner assembly. Save these screws.

## ! WARNING

### UNIT OPERATING HAZARD

Failure to follow this warning may result in damage to unit components.

This kit must **not** be used on 48NGU, 48NLU, 48VGU, 48VLU, 575C\*\*\*\*\*U, 577E\*\*\*\*\*U, 577\*\*\*\*\*U, PY4G\*\*\*\*\*U, PY5G\*\*\*\*\*U models. These models are for Natural Gas Only.

## DESCRIPTION AND USAGE

This single-stage kit is applicable to units with heating inputs from 40,000 to 130,000 Btu/hr installed at standard altitudes from 2001 ft to 6000 ft (610 to 1829 m). They cannot be used for high altitude installation. Standard altitude conversion (0 - 2000 ft) (0 - 610 m) must use kit CPLPCONV013C00.

## SINGLE-STAGE KIT INSTALLATION

## ! WARNING

### FIRE, EXPLOSION, ELECTRICAL HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Gas supply **MUST** be shut off before disconnecting electrical power and proceeding with conversion.

Table 1 – Single-Stage Kit Contents

ITEM	PART NO.	QUANTITY
Installation Instructions	IIK-CPLPCONV-28	1
Propane Gas Orifice #50*	LH32RF070	3
Propane Gas Orifice #51*	LH32RF067	3
Propane Gas Orifice #52*	LH32RF065	3
Propane Gas Orifice #53*	LH32RF060	3
Propane Gas Orifice #54*	LH32RF055	3
Propane Gas Orifice #56*	LH32RF047	3
Regulator Spring (92-0659)	EF39ZW023	1
Pressure Switch	HK02LB008	1
90° Elbow, 1/8 in. NPT	CA05RA001	2
Nipple, 1/8 in. NPT x 2 in. (51 mm)	CA01CA010	1
Close Pipe Nipple, 1/8 in. NPT x 3/4 in. (19 mm)	CA01CA001	2
Wire Harness	48DU400080	1
Propane Conversion Label (Rating Plate)	48VL500383	1
Propane Conversion Label (Installer Responsibility)	48VL500384	1
Propane Conversion Warning Label (Gas Valve)	48DU500076	1
Burner Insert	50CY502897	3

\*. Refer to [Table 8](#) to determine the correct orifice to use.

12. For certain 40,000 Btu/hr and all 3 cell 60,000 Btu/hr units only (refer to [Table 5](#)). Remove the burners from the rack, and save the screws. Remove the snap ring from the end of each burner (see [Fig. 12](#)). Refer to [Table 5](#) for correct burner insert for specific model. Install burner insert in the end of each burner with the flat sides of the square vertical and horizontal. Replace the snap ring to retain the burner insert (see [Fig. 12](#) for snap ring orientation) for each burner. Replace the burners in the rack using the saved screws, making sure closed crossovers of burners are at each end.
13. Remove the natural gas orifices from the manifold using a 9/16 in. wrench and install the correct propane gas orifices in the manifold (See [Table 8](#) to select correct orifice size based on rated input. See [Fig. 3](#) and [Fig. 5](#) for orifice installation).
14. Replace the manifold/gas valve assembly into the burner assembly using the four screws saved from [Step 11](#).
15. Remove the plug on the inlet end of the gas valve using a 3/16 in. hex wrench.
16. Install the 1/8 in. NPT x 3/4 in. (19 mm) close pipe nipple where the plug was removed (see [Fig. 6](#)). Use pipe thread dope (field-supplied, must be certified for use with propane gas) for all joints, making sure not to get any excess in the pipe or valve. Next, install a 1/8 in. elbow, a 1/8 in. NPT x 3/4 in. (19 mm) close pipe nipple, 1/8 in. elbow, 1/8 in. x NPT 2 in. (51 mm) nipple, and a low gas pressure switch as shown in [Fig. 6](#).
17. Remove regulator cover screw from the gas regulator (see [Fig. 4](#)). Save regulator cover screw.
18. Using a screwdriver, remove the plastic regulator adjust screw from the gas regulator (see [Fig. 4](#)). Save plastic regulator adjust screw.
19. Remove regulator spring (silver) from the gas regulator (see [Fig. 4](#)). Discard regulator spring.
20. Install propane gas regulator spring (white) shipped with this kit. (See [Fig. 4](#)).
21. Install plastic adjust screw into the gas regulator, turn clockwise 13.5 turns (see [Fig. 4](#)).
22. Verify igniter, flame sensor, orifice/main burner relationship prior to completing conversion. (See [Fig. 3](#).) Partially slide burner rack assembly into unit.

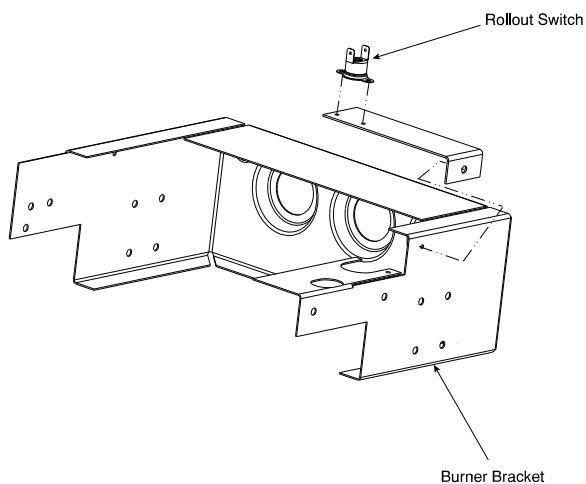


Fig. 2 – Single-Stage Burner Bracket

A07874

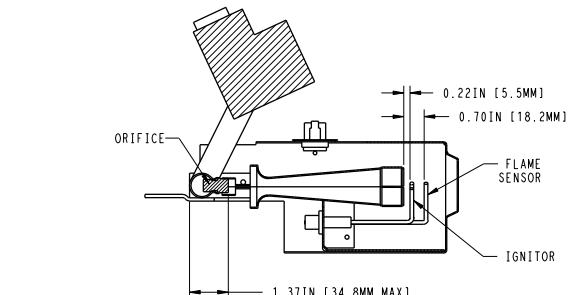
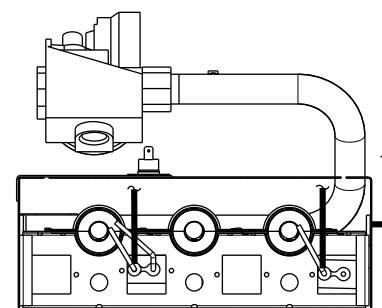


Fig. 3 – Single-Stage Igniter, Flame Sensor; Orifice/Main Burner Relationship

A07890

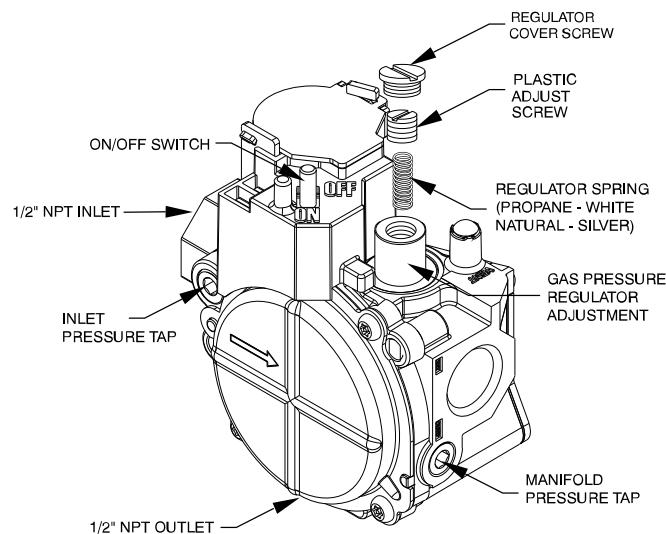
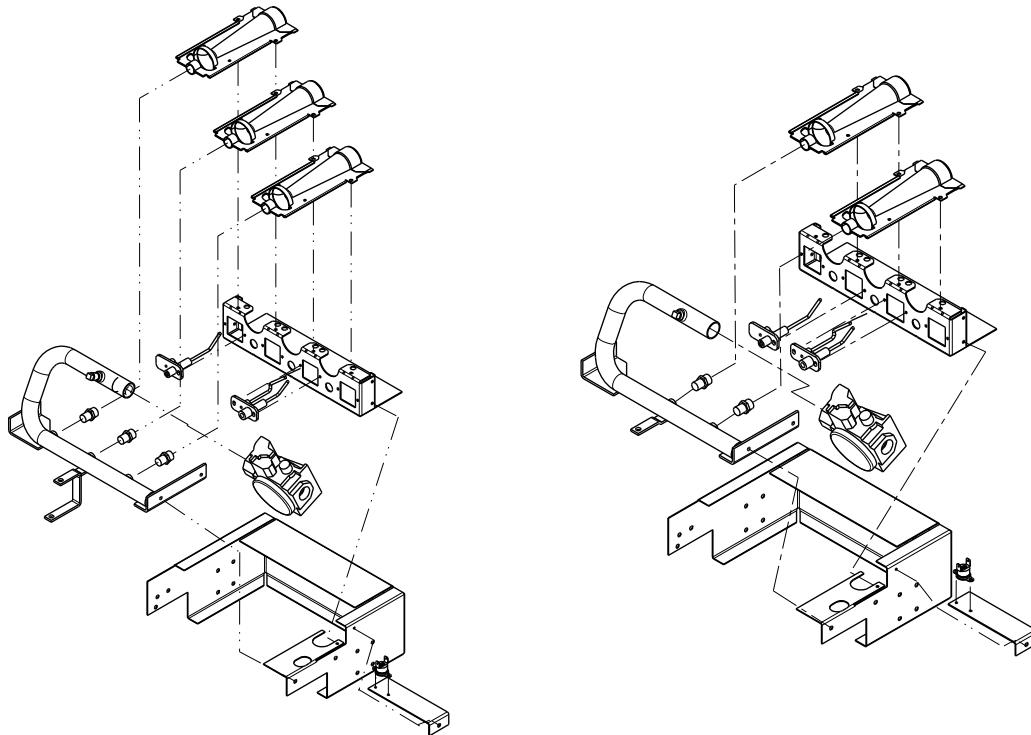


Fig. 4 – Single-Stage Gas Valve

A07808

3 Cell 60,000 BTUH, 90,000 BTUH to  
130,000 BTUH Units40,000 BTUH and 2 Cell  
60,000 BTUH Units

A14635

Fig. 5 – Single-Stage Orifice Installation

23. Disconnect the orange wire from the combustion air pressure switch and connect it to the orange wire on the low gas pressure switch (LGPS) equipped with a 1/4 in. male quick-connect terminal. The low gas pressure switch should have one unconnected orange wire remaining. Connect this wire to the vacant terminal on the combustion air pressure switch (see [Fig. 13](#)).

24. Reconnect the blue wires removed in [Step 5](#) to the rollout switch and reinstall the rollout switch.

25. Reconnect orange sparker cable to sparker and reconnect the yellow flame sensor wire to the flame sensor.

26. Reconnect the gray and brown wires removed in [Step 5](#) to the gas valve.

27. Slide burner rack assembly into base pan. Align burner rack with screws on sheet metal partition and slide assembly back tight to the partition. Replace the screw attaching the burner rack to the base pan removed in [Step 4](#). If the fan partition mounting bracket was removed, slide bracket back into place and fasten with 2 screws (see [Fig. 7](#)).

28. Reconnect the brown wire from the burner assembly to the fan partition panel, using the ground screw saved from [Step 8](#).

29. Remove the 1/8 in. pipe plug on the gas manifold and connect a pressure manometer (see [Fig. 10](#)).
30. Reconnect electrical power and gas supply to the unit. For propane applications, the gas pressure must not be less than 11.0 IN. W.C. or greater than 13 IN. W.C. at the unit connection. A 1/8-in. NPT plugged tapping, accessible for test gauge connection, must be installed immediately upstream of the gas supply connection to the gas valve and downstream of manual equipment shutoff valve.

The newly installed low gas pressure switch is a safety device used to guard against adverse burner operating characteristics that can result from low gas supply pressure. Switch opens at not less than 6.5 IN. W.C. and closes at not greater than 10.2 IN. W.C.

This switch also prevents operation when the propane tank level is low which can result in gas with a high concentration of impurities, additives, and residues that have settled to the bottom of the tank. Operation under these conditions can cause harm to the heat exchanger system.

This normally open switch closes when gas is supplied to gas valve under normal operating pressure. The closed switch completes control circuit. Should an interruption or reduction in gas supply occur, the gas pressure at switch drops below low gas pressure switch setting, and switch opens. Any interruption in control circuit (in which low gas pressure switch is wired) quickly closes gas valve and stops gas flow to burners.

## ! WARNING

### **FIRE AND EXPLOSION HAZARD**

Failure to follow this warning could result in personal injury and/or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

## ! WARNING

### **FIRE AND EXPLOSION HAZARD**

Failure to follow this warning could result in personal injury and/or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

37. After all leaks are eliminated, replace control access panel.

**Table 2 – Single-Stage Sequence of Operations**

### **For Units With a Separate Blower Fan Control Board**

**Trial-for-Ignition Sequence:** The ignition sequence is to immediately energize the inducer motor on a call for heat. Within approximately 5 sec of the call for heat, the gas valve will open and the igniter will spark. Seven sec will be allowed to prove flame sense on the far burner.

**Flame-Proving:** Once flame is proven, the control will wait an additional 45 sec to energize the indoor blower motor. On removal of the call for heat, the gas valve will immediately shut down, the inducer motor will run for an additional 5 sec, and the indoor blower will run for an additional 45 sec (minimum).

### **For Units With an Integrated Ignition/Blower Fan Control**

**Trial-for-Ignition Sequence:** The ignition sequence is to turn on the inducer motor for 5 second pre-purge after a call for heat is established. The gas valve will then open and the igniter will spark. Seven seconds will be allowed to prove flame to sense on the far burner.

**Flame-Proving:** Once flame is proven, the control will wait an additional 30 sec to energize the indoor blower motor. On removal of the call for heat, the gas valve will immediately shut down, the inducer motor will run for an additional 5 sec, and the indoor blower will run for an additional 90 sec (minimum).

**IMPORTANT:** Restart unit and leak check all gas connections including the main service connection, gas valve, gas spuds, and manifold pipe plug. All leaks must be repaired before firing unit.

31. Fire unit and verify proper ignition and proper sequence of operation ([Table 2](#)). See [Table 8](#) for proper manifold pressure setting for your unit. Adjust the gas valve setting by turning the plastic adjustment screws clockwise to increase pressure and counter-clockwise to decrease pressure. Refer to [Table 3](#) for required rated heating input rates. Replace regulator cover screws when finished (see [Fig. 4](#)).
32. With control access panel removed, observe unit heating operation. Watch burner flames to see if they are blue in appearance, and that the flames are approximately the same for each burner (see [Fig. 14](#)).
33. Turn off unit, remove pressure manometer and replace the 1/8 in. pipe fitting on the gas manifold (see [Fig. 10](#)).
34. Attach warning label (P/N 48DU500076) to visible side of gas valve.
35. Attach conversion label (P/N 48VL500383) above unit rating plate on exterior of unit.
36. Attach completed conversion responsibility label (see [Fig. 15](#), P/N 48VL500384) inside control access panel.

**IMPORTANT:** Restart unit and leak check all gas connections including the main service connection, gas valve, gas spuds, and manifold pipe plug.

Table 3 – Single-Stage Rated Heating Input, Propane Gas (2000 ft - 6000 ft (610 - 1829m) Altitude)

## High Altitude Compensation, Propane Gas

NAMEPLATE INPUT (BTU/HR)	RATED HEATING INPUT (BTU/HR), PROPANE GAS AT INSTALLATION ALTITUDE ABOVE SEA LEVEL, U.S.A.*				
	0 to 2000 ft (0-610 m)	2001 to 3000 ft* (611 to 914 m)	3001 to 4000 ft (915 to 1219 m)	4001 to 5000 ft (1220 to 1524 m)	5001 to 6000 ft (1524 to 1829 m)
40,000	38,000	31,700	31,700	31,700	31,200
60,000 (2 Burner)	53,000	45,900	45,900	45,800	45,800
60,000 (3 Burner)	57,000	47,500	47,500	47,500	46,900
90,000	79,000	68,900	68,900	68,600	68,600
115,000	103,000	100,400	98,900	83,000	83,000
127,000 or 130,000	116,000	115,500	111,800	101,300	100,400

\*In the U.S.A., the input rating for altitudes above 2000 ft (610m) must be reduced by 4% for each 1000 ft (305 m) above sea level.

In Canada, the input rating for altitudes from 2001 to 4500 ft (611 to 1372 m) above sea level must be derated by 10% by an authorized gas conversion station or dealer.

For Canadian Installations from 2000 to 4500 ft (610-1372 m), use U.S.A. column 2001 to 3000 ft (611 to 914 m).

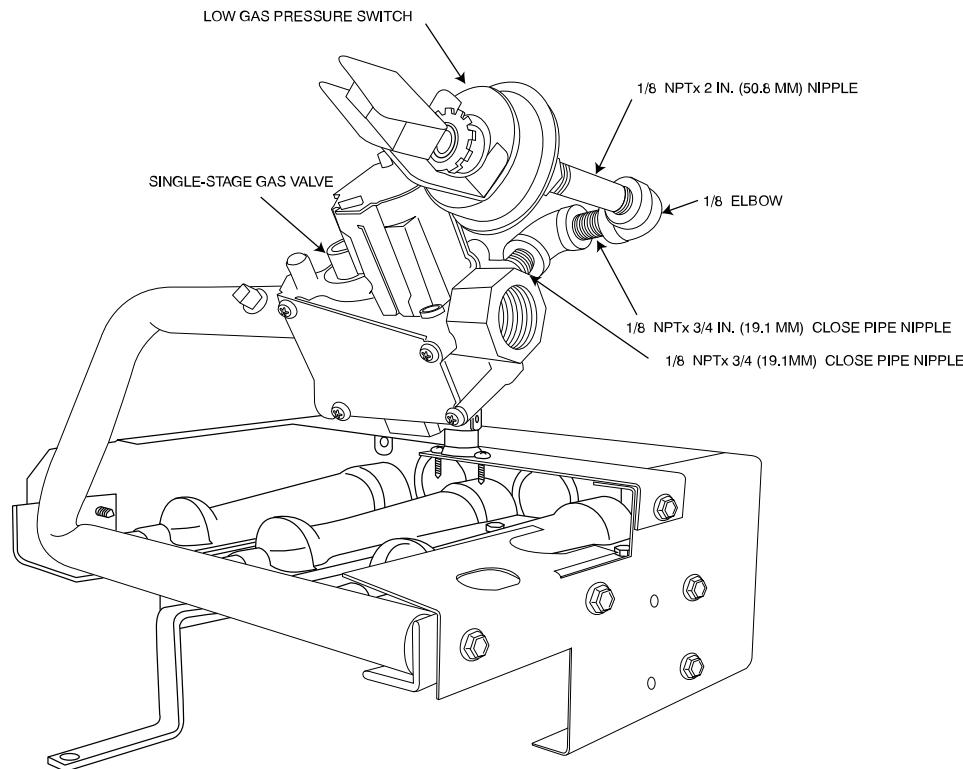


Fig. 6 – Installing Elbows, Nipples, and Pressure Switch on Single-Stage Units

A09017

## TWO-STAGE KIT INTRODUCTION

These instructions cover the installation of a propane gas conversion kit on models 48DT, 48DU, 48NG (208/230 VAC), 48NR, 48VG (208/230 VAC models), 48VR, 48XL, 48XT, 575E (208/230 VAC), 577B, 577D, 577E (208/230 VAC models), 675E, 677B, 677D and 677E that are equipped with a White Rodgers 2-stage combination automatic gas valve regulator.

## ! WARNING

### UNIT OPERATING HAZARD

Failure to follow this warning may result in damage to unit components.

This kit must **not** be used on 48NGU, 48NLU, 48VGU, 48VLU, 575C\*\*\*\*\*U, 575E\*\*\*\*\*U 577\*\*\*\*\*U, PY4G\*\*\*\*\*U, PY5G\*\*\*\*\*U models. These models are for Natural Gas Only.

## DESCRIPTION AND USAGE

This Two-Stage kit is applicable to units with heating inputs from 40,000 to 130,000 Btu/hr installed at standard altitudes from 2001 ft to 6000 ft (610 to 1829 m). It cannot be used for high altitude installation. Standard altitude conversion (0-2000 ft) (0-610 m) must use kit CPLPCONV013C00.

## TWO-STAGE KIT INSTALLATION

## ! WARNING

### FIRE, EXPLOSION, ELECTRICAL HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Gas supply **MUST** be shut off before disconnecting electrical power and proceeding with conversion.

## ! WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death. Before installing or servicing system, always turn off main power to system and install lockout tag. There may be more than one disconnect switch. Lock out and tag switch with suitable warning label.

1. Turn off gas supply first, then power to unit.
2. Remove the control access panel from unit.
3. Disconnect the gas pipe from the gas valve.
4. Remove the screw attaching the gas manifold to the basepan, and partially slide out the entire burner rack assembly from unit. Save screw. The fan partition mounting bracket may be removed for easier access to the burner assembly. The bracket may be removed by removing 2 screws (located on the left side of the control compartment on the fan partition panel) and sliding the bracket forward, bottom first. See [Fig. 7](#).
5. Disconnect the gray, blue, brown and green/yellow wires from the gas valve and remove blue or violet wires from the rollout switch.


**NOTE:** To locate rollout switch, see [Fig. 8](#).

6. Disconnect orange sparkler cable from the sparkler.
7. Disconnect white flame sensor wire from the flame sensor.
8. Remove the ground screw securing the brown wire from the burner assembly. Ground screw is attached to the fan partition. Save screw.
9. Completely slide out the entire burner rack assembly from unit.
10. Inspect the inlet of the heat exchanger tubes for presence of V-shaped NOx baffles (see [Fig. 1](#)). If baffles are present, they must be removed prior to converting unit for propane gas. Using needle-nose pliers, remove NOx baffles, squeeze sides of the baffle, if necessary, to remove from the heat exchanger tubes.
11. Using a 5/16 in. nut driver, remove the four screws securing the manifold/gas valve assembly to the burner assembly. Save these screws.

Table 4 – Two-Stage Kit Contents


ITEM	PART NO.	QUANTITY
Installation Instructions	IIK-CPLPCONV-28	1
Propane Gas Orifice #50*	LH32RF070	3
Propane Gas Orifice #51*	LH32RF067	3
Propane Gas Orifice #52*	LH32RF065	3
Propane Gas Orifice #53*	LH32RF060	3
Propane Gas Orifice #54*	LH32RF055	3
Propane Gas Orifice #56*	LH32RF047	3
Regulator Spring (92-0659)	EF39ZW023	2
Pressure Switch	HK02LB008	1
90° Elbow, 1/8 in. NPT	CA05RA001	2
Nipple, 1/8 in. NPT x 2 in. (51 mm)	CA01CA010	1
Close Pipe Nipple, 1/8 in. NPT x 3/4 in. (19 mm)	CA01CA001	2
Wire Harness	48DU400080	1
Propane Conversion Label (Rating Plate)	48VL500383	1
Propane Conversion Label (Installer Responsibility)	48VL500384	1
Propane Conversion Warning Label (Gas Valve)	48DU500076	1
Burner Insert	48GS500465	3
Burner Insert	50CY502897	3

\* Refer to [Table 8](#) to determine the correct orifice to use.

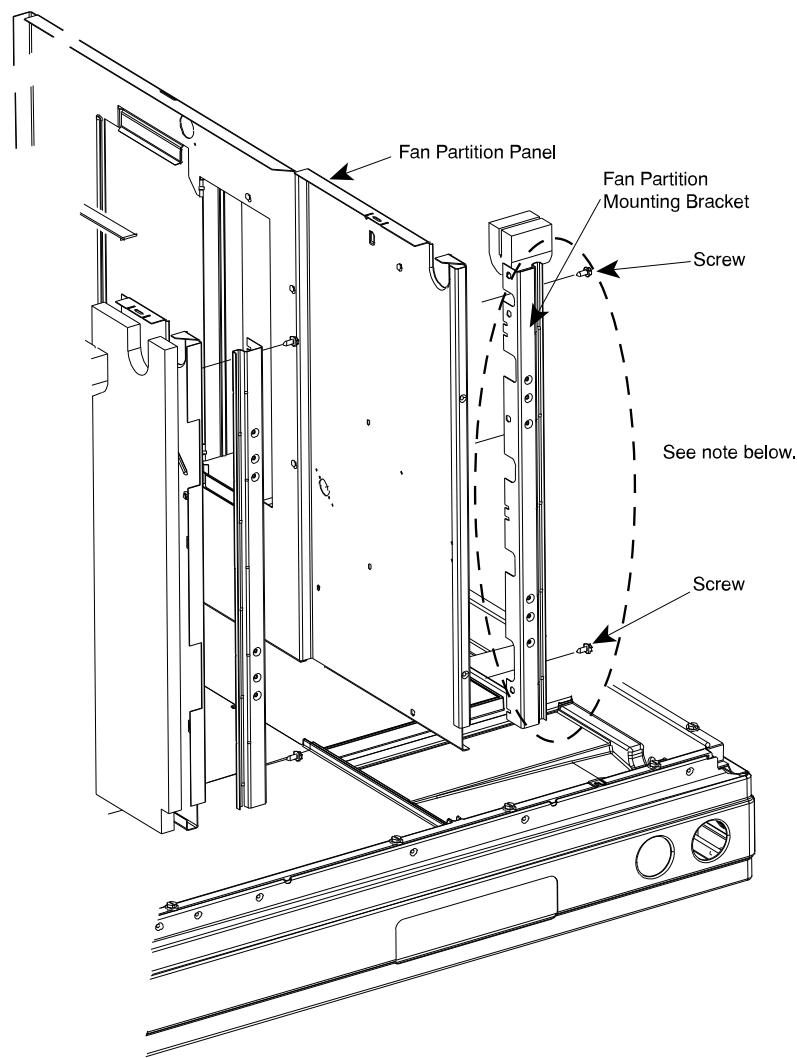

**NOTE:** The fan partition bracket may be removed for easier access to the burner assembly. The bracket may be removed by removing 2 screws on the control side and sliding the bracket forward, bottom first.  
If the fan partition bracket was removed, slide bracket back into place and fasten with 2 screws.

A09320

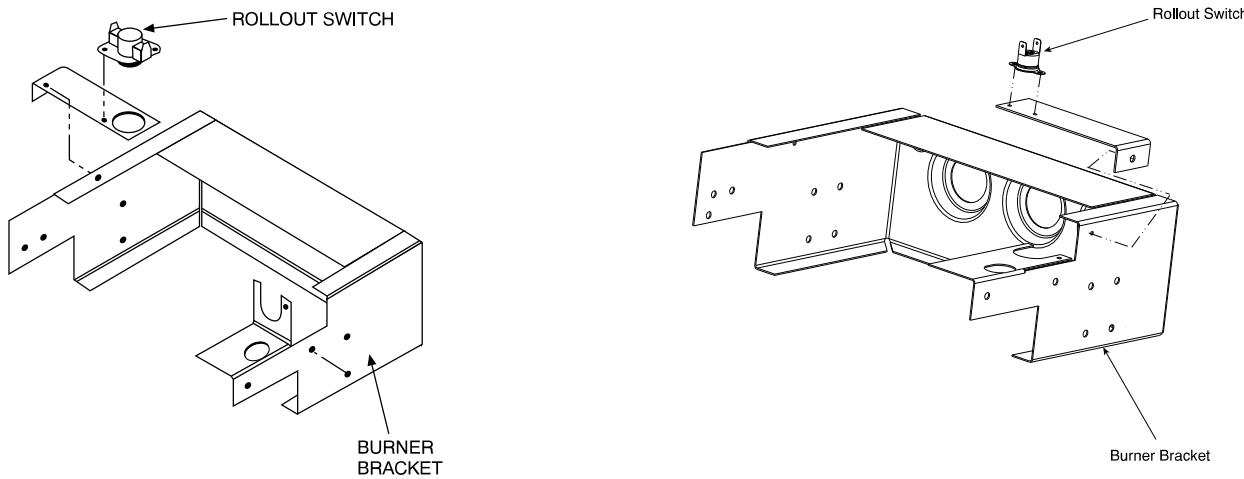**Fig. 7 – Fan Partition Bracket Removal**

(2006 - 2010 Models)



(2010 - Current Models)

C00150

A07874

**Fig. 8 – Two-Stage Burner Bracket**

12. For 2-stage 40,000 Btu/hr and 60,000 Btu/hr only! Remove the burners from the rack, save the screws (see [Fig. 12](#)). Remove the snap ring from the end of each burner. Refer to [Table 5](#) for correct burner insert for specific model. Install burner insert in the end of each burner with the flat sides of the square vertical and horizontal. Replace the snap ring to retain burner insert (see [Fig. 12](#) for correct orientation). Replace the burners in the rack using the saved screws, making sure closed crossovers of burners are at each end.
13. Remove the natural gas orifices from the manifold using a 9/16 in. wrench and install the correct propane gas orifices in the manifold (See [Table 8](#) to select correct orifice size based on rated input. See [Fig. 9](#) and [Fig. 12](#) for orifice installation).
14. Replace the manifold/gas valve assembly into the burner assembly using the four screws saved from [Step 11](#).
15. Remove the plug on the inlet end of the gas valve using a 3/16 in. hex wrench.
16. Install the 1/8 in. NPT x 3/4 in. (19 mm) close pipe nipple where the plug was removed (see [Fig. 16](#)). Use pipe thread dope (field-supplied, must be certified for use with propane gas) for all joints, making sure not to get any excess in the pipe or valve. Next, install a 1/8 in. elbow, a 1/8 in. NPT x 3/4 in. (19 mm) close pipe nipple, 1/8 in. elbow, 1/8 in. x NPT 2 in. (51 mm) nipple, and a low gas pressure switch as shown in [Fig. 16](#).

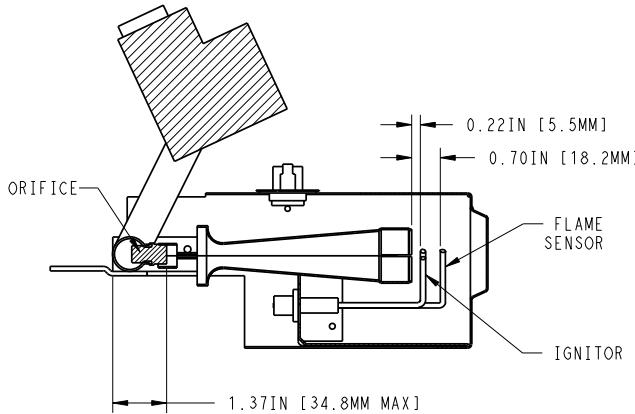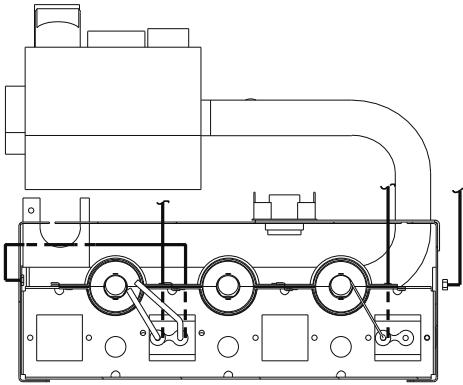

**Fig. 9 – Two-Stage Igniter, Flame Sensor, Orifice/Main Burner Relationship** A07889

**Table 5 – Burner Insert Usage (40 and 60 kBtuh Units Only)**

Model	Applicable Heating Input Sizes (kBtuh)	Burner Insert P/N
48NG(-,N)		
48NL(-,N)		
48NR(-,N)		
48NT(-,N)		
48VG(-,N)(B,E,K)		
48VL(-,N)(B,C,E)*****3		
48VL(-,N)K		
48VR(-,N)(B,C,E,K)		
48VT(-,N)(B,C,E,K)*****3		
575C		
575E	40, 60	50CY502897
577CNW(B,C,D,E,F)		
577C*WK		
577ENW(B,E,K)		
675C		
675E		
677CNW(B,C,E,K)		
677ENW(B,C,E,K)		
PY3G		
PY4G		
PY5G		
48DU		
48DT		
48VG(-,N)A		
48VR(-,N)A		
48XL		
48XT	40, 60	48GS500465
577B		
577D		
577ENWA		
677B		
677D		
677ENWA		

17. Remove regulator cover screws for both high and low stage gas regulators (see [Fig. 11](#)). Save regulator cover screws.
18. Using a screwdriver, remove plastic adjust screws from both high and low stage gas regulators (see [Fig. 11](#)). Save plastic adjust screws.
19. Remove regulator springs (silver) from both high and low stage gas regulators (see [Fig. 11](#)). Discard regulator springs.
20. Install propane gas regulator springs (white) shipped with this kit. One into the low stage gas regulator and one into the high stage gas regulator (see [Fig. 11](#)).
21. Install plastic adjust screw into the high stage gas regulator. turn clockwise 13.5 turns (see [Fig. 11](#)).

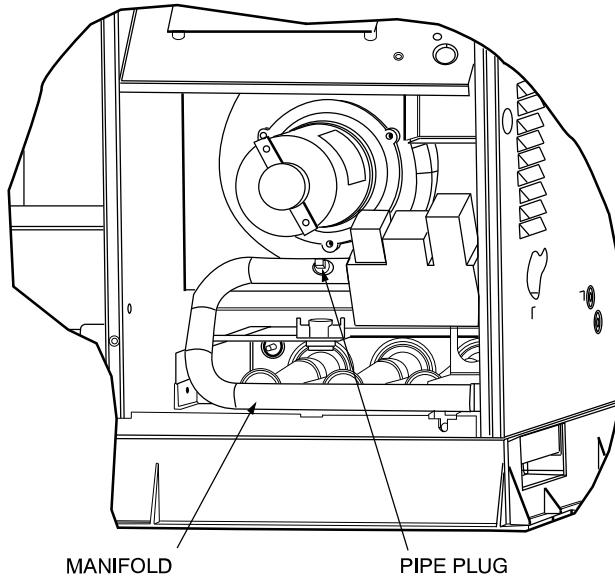


Fig. 10 – Burner Assembly

C99019

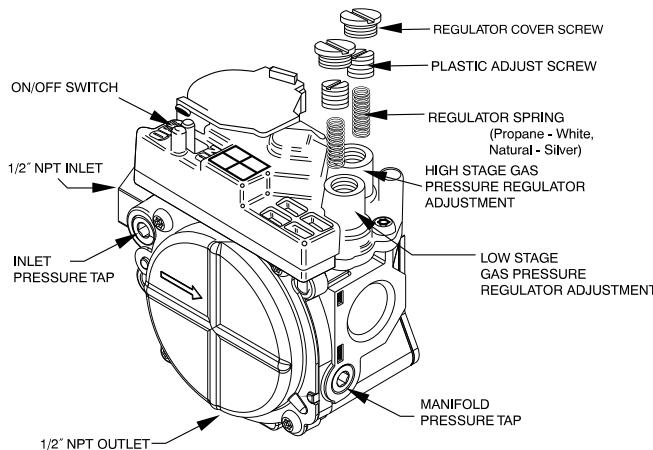


Fig. 11 – Two-Stage Gas Valve

A07804

22. Install plastic adjust screw into the low stage gas regulator. turn clockwise 9.5 turns (see Fig. 11).
23. Verify igniter, flame sensor, orifice/main burner relationship prior to completing conversion. (See Fig. 9.) Partially slide burner rack assembly into unit.
24. Disconnect the orange wire from the combustion air pressure switch and connect it to the orange wire on the low gas pressure switch (LGPS) equipped with a 1/4 in. male quick-connect terminal. The low gas pressure switch should have one unconnected orange wire remaining. Connect this wire to the vacant terminal on the combustion air pressure switch (see Fig. 13).
25. Reconnect the blue or violet wires removed in item 5 to the rollout switch and reinstall the rollout switch.
26. Reconnect orange sparkler cable to sparkler and reconnect the white flame sensor wire to the flame sensor.
27. Reconnect the remaining wires removed in Step 5 to the gas valve. Connect the gray wires to (HI). Connect the blue wires to (M). Connect the brown and green/yellow wires to (C).
28. Slide burner rack assembly into base pan. Align burner rack with screws on sheet metal partition and slide assembly back tight to the partition. Replace the screw attaching the burner rack to the base pan removed in Step 4. If the Fan partition mounting bracket was

removed, slide bracket back into placed and fasten with 2 screws. (See Fig. 7.)

29. Reconnect the brown wire from the burner assembly to the fan partition panel, using the ground screw saved from Step 8.
30. Remove the 1/8 in. pipe plug on the gas manifold and connect a pressure manometer (see Fig. 10).
31. Reconnect electrical power and gas supply to the unit. For propane applications, the gas pressure must not be less than 11.0 IN. W.C. or greater than 13 IN. W.C. at the unit connection. A 1/8-in. NPT plugged tapping, accessible for test gauge connection, must be installed immediately upstream of the gas supply connection to the gas valve and downstream of manual equipment shutoff valve.

The newly installed low gas pressure switch is a safety device used to guard against adverse burner operating characteristics that can result from low gas supply pressure. Switch opens at not less than 6.5 IN. W.C. and closes at not greater than 10.2 IN. W.C.

This switch also prevents operation when the propane tank level is low which can result in gas with a high concentration of impurities, additives, and residues that have settled to the bottom of the tank. Operation under these conditions can cause harm to the heat exchanger system.

This normally open switch closes when gas is supplied to gas valve under normal operating pressure. The closed switch completes control circuit. Should an interruption or reduction in gas supply occur, the gas pressure at switch drops below low gas pressure switch setting, and switch opens. Any interruption in control circuit (in which low gas pressure switch is wired) quickly closes gas valve and stops gas flow to burners.

## ! WARNING


### FIRE AND EXPLOSION HAZARD

Failure to follow this warning could result in personal injury and/or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.


**IMPORTANT:** Restart unit and leak check all gas connections including the main service connection, gas valve, gas spuds, and manifold pipe plug. All leaks must be repaired before firing unit.

32. Fire unit and verify proper ignition and proper sequence of operation (Table 6). See Table 8 for proper low stage and high stage manifold pressure settings for your unit. Adjust the gas valve setting for high and low stages by turning the plastic adjustment screws clockwise to increase pressure and counter-clockwise to decrease pressure for the respective stages. Refer to Table 7 for required rated heating input rates. Replace regulator cover screws when finished (see Fig. 11).
33. With control access panel removed, observe unit heating operation in both low stage operation and high stage operation. Watch burner flames to see if they are blue in appearance, and that the flames are approximately the same for each burner (see Fig. 14).
34. Turn off unit, remove pressure manometer and replace the 1/8 in. pipe fitting on the gas manifold (see Fig. 10).
35. Attach warning label (P/N 48DU500076) to visible side of gas valve.
36. Attach conversion label (P/N 48VL500383) above unit rating plate on exterior of unit.
37. Attach completed conversion responsibility label (see Fig. 15, P/N 48VL500384) inside control access panel.

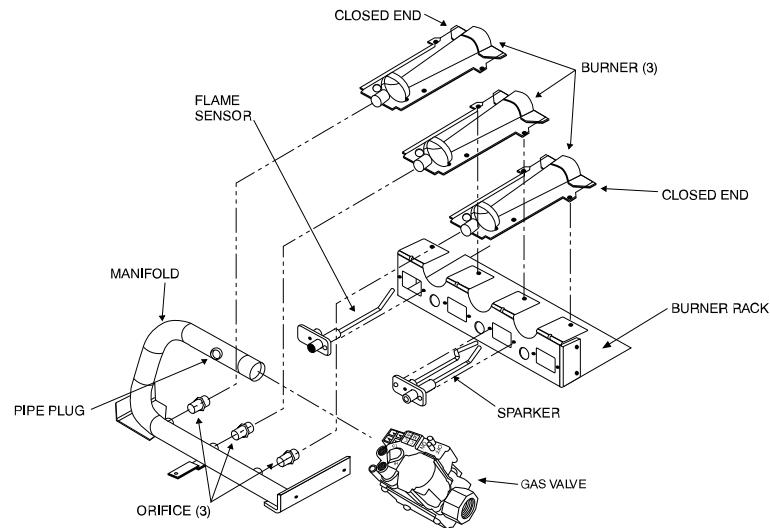


## 90,000 BTUH TO 130,000 BTUH UNITS

A14641

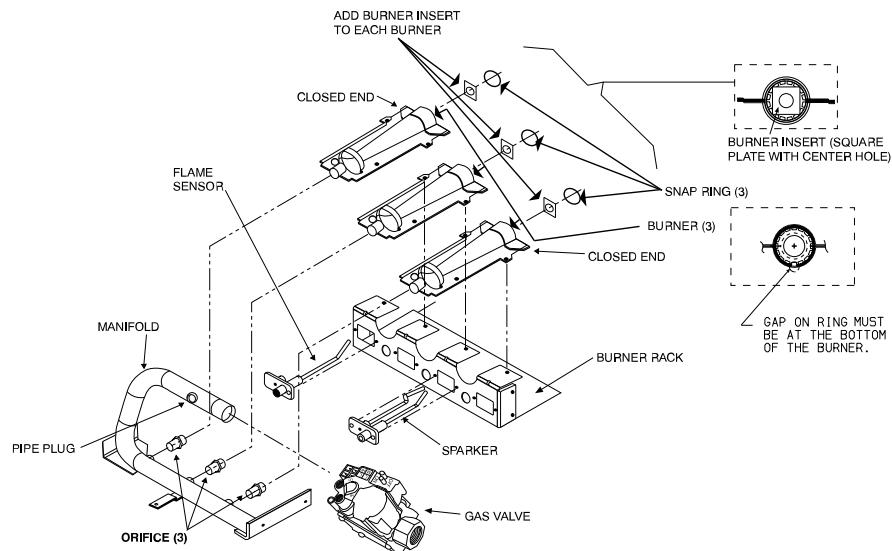


## 3-CELL 60,000 BTUH UNITS

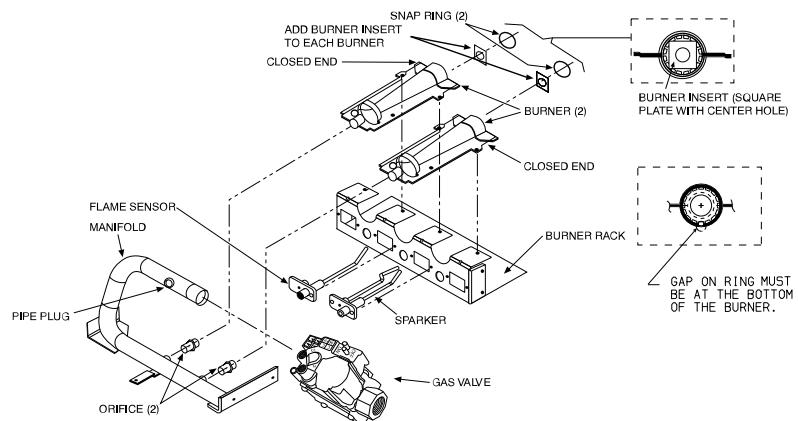

## 40,000 BTUH UNITS

A150780

Fig. 12 – Orifice and Burner Insert Installation

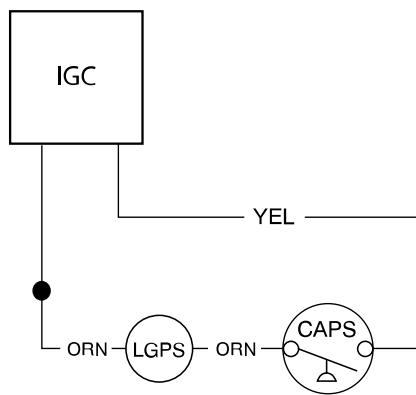

LEGEND  
 ORN = ORANGE  
 YEL = YELLOW  
 LGPS = LOW GAS PRESSURE SWITCH  
 CAPS = COMBUSTION AIR PRESSURE SWITCH  
 IGC = INTEGRATED GAS CONTROL  
 ● = QUICK CONNECTION

Fig. 13 – Pressure Switch Wiring

A14614

Table 6 – Two-Stage Sequence of Operations

Inducer Pre-Purge Period: When the inducer motor comes up on high speed, the pressure switch closes, and the ignition control on the furnace board begins a 15 sec pre-purge period. If the pressure switch fails to remain closed, the inducer will remain running. After the pressure switch recloses, the Infinity ignition control will begin a 15 sec pre-purge period.
Trial-for-Ignition Sequence: The spark igniter will spark for 3 sec, the main gas valve relay contact closes to energize the gas valve on low stage. After 5 sec, the igniter is de-energized and a 2-sec flame-proving period begins.
<b>NOTE:</b> The unit always lights on high speed inducer and low stage gas valve operation.
Flame-Proving: When the burner flame is proved at the flame-proving sensor, the furnace control determines what heating stage to run based on feedback from the thermostat. If the thermostat is asking for low stage gas heat, the ignition control will change the inducer speed to low speed and keep the gas valve energized on low stage. If the thermostat is asking for high stage gas heat, the ignition control will maintain running the inducer on high speed and energize the gas valve's high stage relay to increase gas flow.


Table 7 – Two-Stage Rated Heating Input, Propane Gas (2001-6000 ft (610-1829 m) Altitude)

NAMEPLATE INPUT (BTU/HR)	RATED HEATING INPUT PROPANE (BTU/HR)									
	0 to 2000 ft 0 to 610 m		2001 to 3000 ft 610 to 914 m		3001 to 4000 ft 915 to 1219 m		4001 to 5000 ft 1220 to 1524 m		5001 to 6000 ft 1524 to 1829 m	
	High Stage	Low Stage	High Stage	Low Stage	High Stage	Low Stage	High Stage	Low Stage	High Stage	Low Stage
40,000	38,000	26,000	31,700	23,400	31,700	22,300	31,700	21,300	31,200	20,300
60,000	57,000	39,000	47,500	35,100	47,500	33,500	47,500	32,000	46,800	30,400
90,000	79,000	58,500	68,900	52,700	68,900	50,300	68,600	48,000	68,600	45,600
115,000	103,000	75,000	100,400	67,500	98,900	64,500	83,000	61,500	83,000	58,500
127,000 or 130,000	116,000	84,500	115,500	76,100	111,800	72,700	101,300	69,300	100,400	65,900

In the U.S.A., the input rating for altitudes above 2000 ft (610m) must be reduced by 4% for each 1000 ft (305 m) above sea level.

In Canada, the input rating for altitudes from 2001 to 4500 ft (611 to 1372 m) above sea level must be derated by 10% by an authorized gas conversion station or dealer.

For Canadian Installations from 2000 to 4500 ft (610---1372 m), use U.S.A. column 2001 to 3000 ft (611 to 914 m).

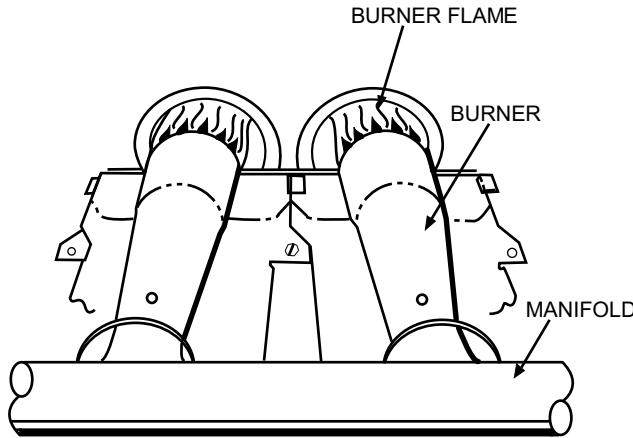**Fig. 14 – Monoport Burner**

C99021

**IMPORTANT:** Restart unit and leak check all gas connections including the main service connection, gas valve, gas spuds, and manifold pipe plug.

## ! WARNING

### FIRE AND EXPLOSION HAZARD

Failure to follow this warning could result in personal injury and/or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

38. After all leaks are eliminated, replace control access panel.

## ! WARNING

### EXPLOSION, PERSONAL INJURY HAZARD

Failure to follow this warning could result in personal injury or death. This unit is designed to operate at a minimum 10.0 IN. W.C. of manifold pressure with propane gas. Refer to [Table 8](#) for proper manifold pressure settings.

THIS FURNACE WAS CONVERTED  
ON    -    -    TO PROPANE GAS  
(DAY - MONTH - YEAR)

KIT NO.: CPLPCONV013C00 (0 ~ 2000 ft. (0~610m) above sea level),  
CPLPCONV014C00 (2001 ~ 6000 ft. (611~1829m) above sea level)

BY: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

(Name and address of organization making this conversion),  
which accepts the responsibility that this conversion has  
been properly made.

CE GÉNÉRATEUR D'AIR CHAUD A ÉTÉ  
CONVERTI LE    -    -    POUR  
(JOUR - MOIS - ANNÉE)

DE L'ENSEMBLE N°:  
CPLPCONV013C00 (0 ~ 2000 ft. (0~610m) above sea level),  
CPLPCONV014C00 (2001 ~ 6000 ft. (611~1829m) above sea level)  
PAR:  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

(nom et adresse de l'organisme qui a effectué la conversion),  
qui accepte l'entièvre responsabilité de la conversion.

48VL500384

**Fig. 15 – Conversion Responsibility Label**

A250164

Table 8 – Propane Gas Orifice Sizes and Manifold Pressures (IN. W.C.)

## PROPANE CONVERSION KIT RATING PLATE - CARRIER CORP.

THIS APPLIANCE HAS BEEN CONVERTED TO USE PROPANE GAS FOR FUEL. REFER TO KIT INSTRUCTIONS FOR CONVERSION PROCEDURES. USE PARTS SUPPLIED WITH KIT AND INSTALLED BY QUALIFIED PERSONNEL. SEE EXISTING RATING PLATE FOR APPLIANCE MODEL NO. AND INPUT RATING.

† NOTE: Gas input rate on rating plate is for installations up to 2000 ft. above sea level. In U.S.A. the input rating for altitudes above 2000 ft. must be reduced by 4% for each 1000 ft. (305 m) above sea level. In Canada the input rating for altitudes from 2001 ft. to 4500 ft. (611 to 1372 m) above sea level must be derated by 10% by an authorized gas conversion station or dealer. For Canadian Installations from 2000 to 4500 ft, use U.S.A. column 2001 to 3000 ft (611m to 1372m).

KIT NO. CPLPCONV013C00 (0 ~ 2000 ft. (0 ~ 610m) above sea level)

KIT NO. CPLPCONV014C00 (2001 ~ 6000 ft. (611 ~ 1829m) above sea level)


FUEL USED: PROPANE GAS

INLET PRESSURE (min - max): 11.0 - 13.0 in. WC

APPLIANCE MODELS	NAMEPLATE INPUT, HIGH STAGE (Btu/hr)	NUMBER OF BURNERS	ALTITUDE OF INSTALLATION ABOVE SEA LEVEL, U.S.A. †				
			0 to 2000 ft. (0 to 610m)	2001 to 3000 ft. (611 to 914m) †	3001 to 4000 ft. (915 to 1219m)	4001 to 5000 ft. (1220 to 1524m)	5001 to 6000 ft. (1525 to 1829m)
48DU, 48DT, 48NG <sup>‡</sup> , 48NR <sup>‡</sup> , 48VG <sup>‡</sup> , 48VR <sup>‡</sup> , 48XL, 48XT, 577B, 577D, 575E <sup>‡</sup> , 577E <sup>‡</sup> , 677B, 677D, 675E <sup>‡</sup> , 677E <sup>‡</sup>	40000	2	Orifice No. (Qty) Manifold Press. High / Low	55 (2) 10.0 / 5.0	56 (2) 11.0 / 6.0	56 (2) 11.0 / 5.5	56 (2) 11.0 / 5.0
	60000	3	Orifice No. (Qty) Manifold Press. High / Low	55 (3) 10.0 / 5.0	56 (3) 11.0 / 6.0	56 (3) 11.0 / 5.5	56 (3) 11.0 / 5.0
	90000	3	Orifice No. (Qty) Manifold Press. High / Low	53 (3) 10.0 / 5.4	54 (3) 11.0 / 6.4	54 (3) 11.0 / 5.9	54 (3) 11.0 / 5.0
	115000	3	Orifice No. (Qty) Manifold Press. High / Low	51 (3) 10.0 / 5.4	52 (3) 11.0 / 5.0	52 (3) 10.6 / 4.8	53 (3) 11.0 / 6.1
	127000 or 130000	3	Orifice No. (Qty) Manifold Press. High / Low	49 (3) 10.0 / 5.4	50 (3) 11.0 / 4.8	51 (3) 11.0 / 4.9	52 (3) 11.0 / 5.2
48ES, 48EZ, 48NG <sup>§</sup> , 48NL, 48NT, 48VG <sup>§</sup> , 48VL, 48VT, 574D, 575C, 577C, 575E <sup>§</sup> , 577E <sup>§</sup> , 674D, 675C, 677C, PY3G, PY4G PY5G	40000	2	Orifice No. (Qty) Manifold Press.	55 (2) 10.0	56 (2) 11.0	56 (2) 11.0	56 (2) 11.0
	60000	2	Orifice No. (Qty) Manifold Press.	53 (2) 10.0	54 (2) 11.0	54 (2) 11.0	54 (2) 11.0
	60000	3	Orifice No. (Qty) Manifold Press.	55 (3) 10.0	56 (3) 11.0	56 (3) 11.0	56 (3) 11.0
	90000	3	Orifice No. (Qty) Manifold Press.	53 (3) 10.0	54 (3) 11.0	54 (3) 11.0	54 (3) 11.0
	115000	3	Orifice No. (Qty) Manifold Press.	51 (3) 10.0	52 (3) 11.0	52 (3) 10.6	53 (3) 11.0
	127000 or 130000	3	Orifice No. (Qty) Manifold Press.	49 (3) 10.0	50 (3) 11.0	51 (3) 11.0	52 (3) 11.0

‡ 208/230 VAC Models only    § 460 VAC Models Only    ULN MODELS CANNOT BE CONVERTED    48VL500383

A250165

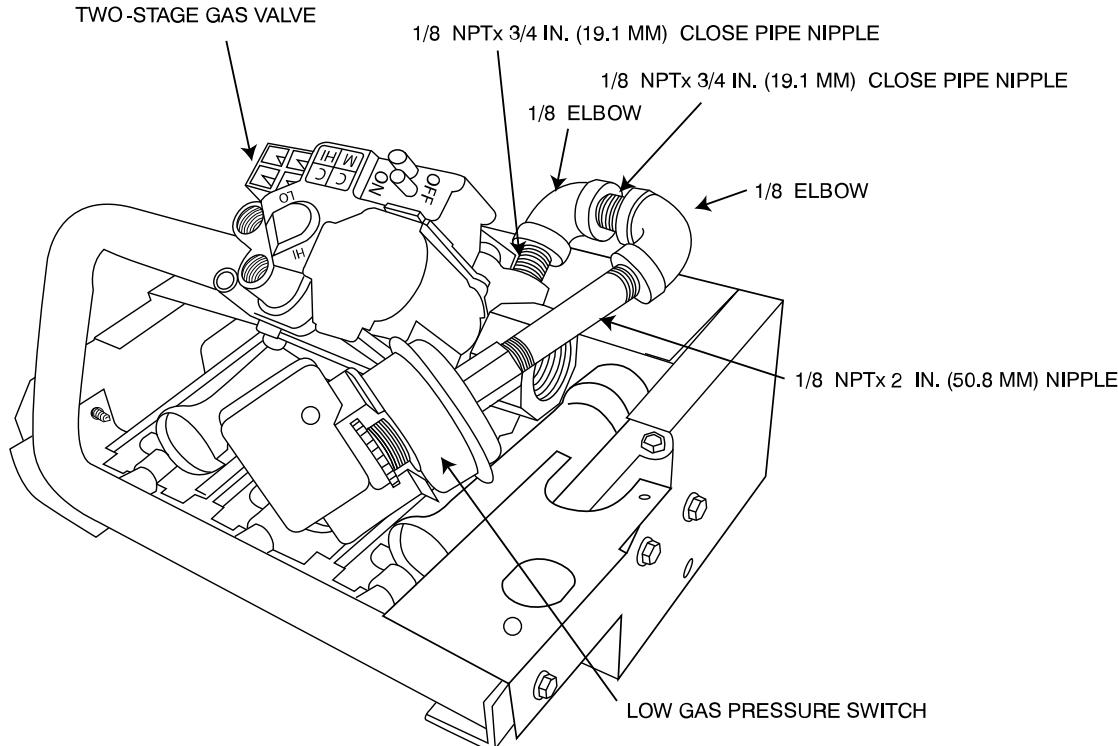

A09016

Fig. 16 – Installing, Elbows, Nipples, and Pressure Switch on Two-Stage Units