

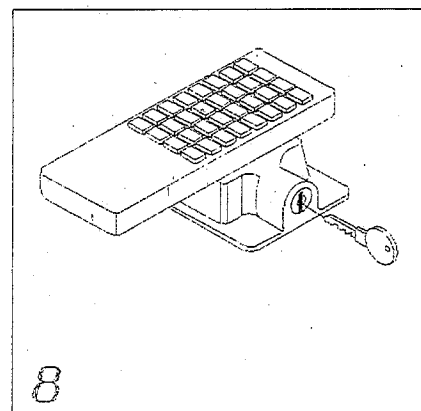
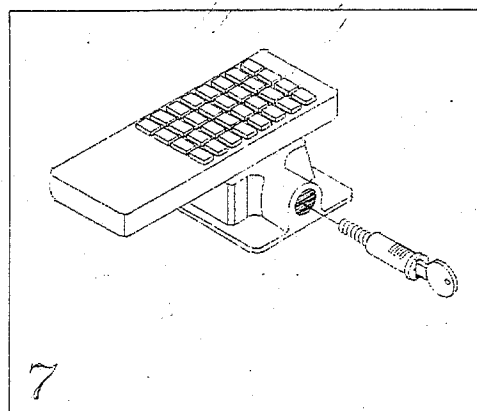
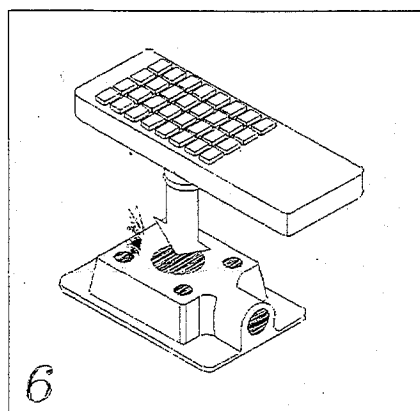
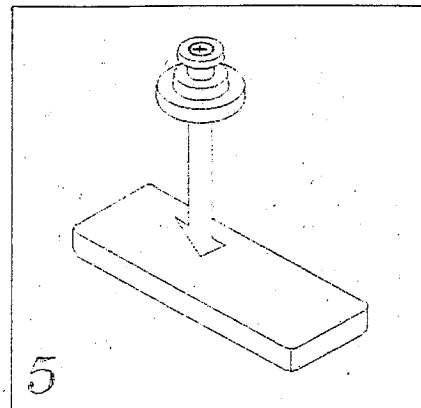
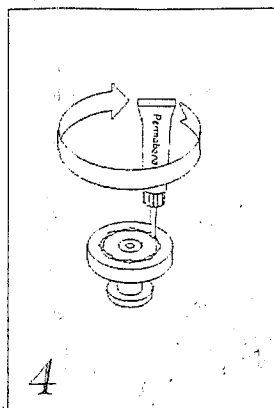


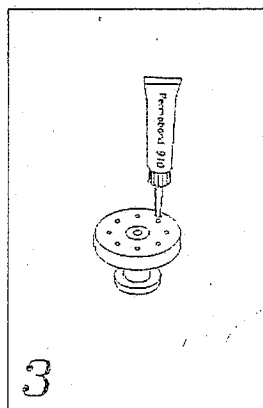

RRRCTA & RRRCTB Series Remote Control Mounts

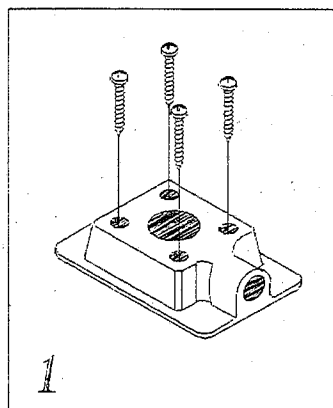

1. **RRRCTA:** Peel protective coating from adhesive pad on bottom of base and press base into position.

RRRCTB: Position base in desired location and use as template to drill holes for screws. Secure base to furniture with provided screws.

2. Abrade contact area with sandpaper disc. Clean area with Isopropyl alcohol pad and allow to dry.
3. Place eight drops of Permabond onto rubber disk. Space drops equally apart.
4. Use tip of Permabond applicator to spread Permabond around rubber disk

in a single circle.

5. Press rubber disk firmly onto back of remote control. Allow a few minutes for Permabond to set. Do not seal the battery compartment.
6. Insert remote control into base.
7. Rotate remote control to provide access to lock retainer. Insert key in lock. Insert lock into lock retainer. Turn key clockwise until lock is screwed into base and holder is secured.
8. Remove key.