

TOSHIBA

Carrier

AIR CONDITIONER (MULTI TYPE)

SERVICE MANUAL

< Super Heat Recovery Multi System SHRM-u >


Outdoor unit

**MMY-MUP0721FT6P-UL
MMY-MUP0961FT6P-UL
MMY-MUP1201FT6P-UL
MMY-MUP1441FT6P-UL
MMY-MUP1681FT6P-UL
MMY-MUP1921FT6P-UL**

**MMY-MUP072H1FT6PUL
MMY-MUP096H1FT6PUL
MMY-MUP120H1FT6PUL**

**MMY-MUP0721FT9P-UL
MMY-MUP0961FT9P-UL
MMY-MUP1201FT9P-UL
MMY-MUP1441FT9P-UL
MMY-MUP1681FT9P-UL**

**MMY-MUP072H1FT9PUL
MMY-MUP096H1FT9PUL
MMY-MUP120H1FT9PUL**

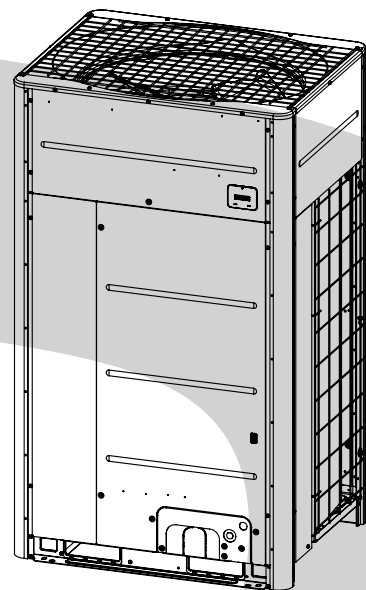

CONTENTS

SAFETY CAUTION	6
REFRIGERANT (R410A)	21
1. WIRING DIAGRAMS	24
2. PARTS RATING	32
2-1. Outdoor Unit (MMY-MUP***1HT6P-UL)	32
2-1-1. Winding resistance of outdoor unit main parts	33
2-2. Inverter Assembly	35
2-3. Flow Selector unit (Multi-port , Single-port)	35
2-4. Parts Layout in Outdoor Unit	36
2-5. Parts Layout in Inverter Assembly	38
2-6. Outdoor (Inverter) Print Circuit Board	45
2-6-1. Interface P.C. board (MCC-1747)	45
2-6-2(1). Noise Filter P.C. board (MCC-1749)	46
2-6-2(2). Noise Filter P.C. board (MCC-1749)	47
2-6-3(1). Inverter P.C. board for compressor (MCC-1729)	48
2-6-3(2). Inverter P.C. board for compressor (MCC-1729)	49
2-6-4. Capacitor P.C.board (MCC-1711)	50
2-6-5. Inverter P.C. board for fan (MCC-1734)	51
2-6-6. USB isolate P.C.board (MCC-1754)	52
2-7. Parts Layout in Flow Selector unit	53
2-7-1. Parts Layout in Flow Selector unit Multi-port type.....	53
2-7-2. Parts Layout in Flow Selector unit Single-port type	53
2-7-3. Parts Layout in Electric Part Assembly (Flow Selector unit)	54
2-8. Parts Layout in Flow Selector unit	55
2-8-1. FS unit multi-port type P.C. board (MCC-1770)	55
2-8-2. FS unit single-port type P.C. board (MCC-1771)	56
3. REFRIGERANT PIPING SCHEMATIC DRAWING	57
4. COMBINED REFRIGERANT PIPING SYSTEM SCHEMATIC DIAGRAMS	62
4-1. Cooling operation (Operation of cooling only)	62
4-2. Single defrost unit	63
4-3. Heating operation (Operation of heating only)	64
4-4. Individual defrost operation.....	65
4-5. Simultaneous cooling operation (Operation of cooling and heating)	66
4-6. Simultaneous heating operation (Operation of cooling and heating)	67
4-7. Emergency cooling operation (Operation of cooling only).....	68
4-8. Manual emergency heating.....	69
5. CONTROL OUTLINE	70
5-1. Outdoor Unit	70
5-2. Indoor Unit	79
6. APPLIED CONTROL AND FUNCTIONS	90
6-1. Method to Set Outdoor Unit Function Code No. (O.DN)	90
6-2. Applied Control of Outdoor Unit	95
6-2-1. Outdoor Fan High Static Pressure Shift	95
6-2-2. Priority Operation Mode Setting	96
6-2-3. Applied Control of Outdoor Unit	98
6-3. Notice Code	110
6-4. System Cooperation Defrosting	112
6-5. Night operation (Sound reduction control)	115

7. TEST OPERATION	117
7-1. Procedure and Summary of Test Operation	117
7-2. Check Items before Test Operation (before powering-on)	118
7-3. Check at Main Power-on	125
7-4. Address Setup	127
7-4-1. Precautions	127
7-4-2. Address Setup and Check Procedure	127
7-4-3. Address Setup Procedure	128
7-4-4. Setting when connecting indoor units to FS (Flow Selector)	148
7-4-5. Check after Address Setup when Central Control System Is Connected.....	149
7-5. Troubleshooting in Test Operation	151
7-5-1. A Check Code is Displayed on the Remote Controller	151
7-5-2. No Remote Controller Response with Check Code	153
7-5-3. No Remote Controller Response without Check Code	153
7-5-4. Connected Indoor/Outdoor Unit Quantity Check	154
7-6. Test Operation (test run) Check	160
7-6-1. Fan Check	160
7-6-2. Inspection mode (safety measures).....	162
7-6-3. Cooling/Heating Test Operation Check	162
7-7. Service Support Function	167
7-7-1. Check Function for Connecting of Refrigerant and Control Lines	167
7-7-2. Function to Start/Stop (ON/OFF) Indoor Unit from Outdoor Unit	169
7-7-3. Check Code Clearing Function	176
7-7-4. Remote Controller Distinction Function	178
7-7-5. Pulse Motor Valve (PMV) Forced Open/Close Function in Indoor Unit	179
7-7-6. Pulse Motor Valve (PMV) Forced Open/Close Function and Solenoid valve Forced ON Function in Outdoor Unit	180
7-7-7. Pulse Motor Valve (PMV) Forced Open/Close Function in FS unit.....	181
7-7-8. Fan Operation Check in Outdoor Unit	183
7-7-9. Abnormal Outdoor Unit Discrimination Method By Fan Operating Function ..	184
7-7-10. Manual Adjustment Function of Outside Temperature (TO) Sensor	185
7-7-11. Confirmation of the check code (L02, L11, L13, L14) occurred during installation.....	186
7-7-12. Confirmation of the number of FS units connected.....	186
7-7-13. Refrigerant leakage detection	187
7-7-14. Monitor Function of Remote Controller Switch	188
7-8. Wave Tool Advance for SMMS-u Series	190
7-8-1. Before the Use of Wave Tool Advance	190
7-8-2. About Wave Tool Advance	190
7-8-3. Valid/Prohibition/Permission setting for Test operation from WTA App.	190
7-8-4. Confirmation for NFC tag Communication	191
8. TROUBLESHOOTING	192
8-1. Overview	192
8-2. Troubleshooting method	193
8-3. Troubleshooting based on information displayed on remote controller	199
8-4. Check Codes list	203
8-5. Diagnosis procedure for each check code	224
8-6. 7-Segment Display Function	266
8-7. Oil Level Judgment Display	273
8-8. SMMS-u Outdoor Interface P.C. Board Function Setting Change Table	274
8-9. Leakage/Clogging of Refrigerating Cycle Circuit	276
8-10. Sensor Characteristics	282
8-11. Pressure Sensor Output Check	285

9. BACKUP OPERATION (EMERGENCY OPERATION)	287
9-1. Note for Backup Operation	287
9-2. Compressor Backup Operation Setting	288
9-3. Outdoor Unit Backup Operation Setting	290
9-3-1. Follower outdoor unit backup operation setting (failure of follower outdoor unit)	290
9-3-2. Header outdoor unit backup operation setting (failure of header outdoor unit)	293
9-4. Cooling-Season Outdoor Unit Backup Operation Setting	295
10. OUTDOOR UNIT REFRIGERANT RECOVERY METHOD	296
10-1. Refrigerant Recovery from Troubled Outdoor Unit (Reclaim)	296
10-1-1. Note for refrigerant recovery operation	296
10-1-2. Refrigerant recovery procedure A (Case that the troubled outdoor unit turn on)	298
10-1-3. Refrigerant recovery procedure B (Case that the troubled outdoor unit does not turn on)	298
10-2. How to Operate System While Troubled Outdoor Unit Being Repaired	299
10-3. Work procedure after Repair	300
11. REPLACING COMPRESSORS	301
11-1. Compressor Replacement Procedure (Outline)	301
11-2. Replacement of Compressors	302
11-3. Check Procedure to Search Cause of Compressor Oil Shortage	306
12. OUTDOOR UNIT PARTS REPLACEMENT METHODS	310
13. P.C. BOARD REPLACEMENT PROCEDURES	328
13-1. Replacement of outdoor P.C. board & Inverter Parts	328
13-1-1. List of service parts (Inverter)	328
13-1-2. Configuration of inverter assembly	330
13-1-3. Interface P.C. Board (MCC-1747) Replacement Procedure	337
13-1-4(1). Compressor P.C. Board (MCC-1729) Replacement Procedure	341
13-1-4(2). Compressor P.C. Board (MCC-1746) Replacement Procedure	343
13-1-5. Capacitor P.C.Board (MCC-1711) Replacement Procedure	345
13-1-6. Fan-Motor P.C.Board (MCC-1734) Replacement Procedure	347
13-1-7(1). Noise Filter P.C. Board (MCC-1749) Replacement Procedure	348
13-1-7(2). Noise Filter P.C. Board (MCC-1749) Replacement Procedure	348
13-1-7(3). Noise Filter P.C. Board (MCC-1749) Replacement Procedure	350
14. FS UNIT PARTS REPLACEMENT METHODS	351
14-1. Flow Selector unit Multi-port type	351
14-2. Flow Selector unit Single-port type	356
15. EXPLODED DIAGRAM/PARTS LIST	361
15-1. Outdoor unit	361
15-2. Flow Selector unit Multi-port type	386
15-3. Flow Selector unit Single-port type	387

**This service manual provides relevant explanations about new outdoor unit (SHRM-u).
Please refer to the following service manuals for each indoor units.**

Model name	SVM File No.
<4-Way Cassette Type> MMU-UP***1HP-UL (Made in Thailand model)	SVM-22074
<Compact 4-Way Cassette Type> MMU-UP***1MH-UL (Made in Japan model)	A10-2209
<1-Way Cassette Type> MMU-UP***1YHP-UL (Made in Thailand model)	SVM-22075 SVM-22076
<Concealed Duct Medium Static Pressure Type> MMD-UP***1BHP-UL (Made in Thailand model)	SVM-22078
<Concealed Duct High Static Pressure Type> MMD-UP***1HP-UL (Made in Thailand model)	SVM-22079 SVM-23027
<Slim Duct Type> MMD-UP***1SPH-UL (Made in Japan model)	A10-2209
<Under Ceiling Type> MMC-UP***1HP-UL (Made in Thailand model)	SVM-22077
<Floor Console Exposed type> MML-UP***1H-UL (Made in Japan model)	A10-2209
<Floor Console Recessed type> MML-UP***1BH-UL (Made in Japan model)	A10-2209
<Outside Air Unit Type> MMD-UP****HFP-UL (Made in Japan model)	A10-1603-3
<High Wall Type> MMK-UP***1HP-UL (Made in Thailand model)	SVM-22081 SVM-22082 SVM-22083

SAFETY CAUTION

Please read carefully through these instructions that contain important information which complies with the "Machinery" Directive (Directive 2006/42/EC), and ensure that you understand them.

Generic Denomination: Air Conditioner

Definition of Qualified Installer or Qualified Service Person

The air conditioner must be installed, maintained, repaired and removed by a qualified installer or qualified service person. When any of these jobs is to be done, ask a qualified installer or qualified service person to do them.

A qualified installer or qualified service person is an agent who has the qualifications and knowledge described in the table below.

Agent	Qualifications and knowledge which the agent must have
Qualified installer (*1)	<ul style="list-style-type: none"> • The qualified installer is a person who installs, maintains, relocates and removes the air conditioners. He or she has been trained to install, maintain, relocate and remove the air conditioners he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations. • The qualified installer who is allowed to do the electrical work involved in installation, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified installer who is allowed to do the refrigerant handling and piping work involved in installation, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified installer who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.
Qualified service person (*1)	<ul style="list-style-type: none"> • The qualified service person is a person who installs, repairs, maintains, relocates and removes the air conditioners. He or she has been trained to install, repair, maintain, relocate and remove the air conditioners he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations. • The qualified service person who is allowed to do the electrical work involved in installation, repair, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified service person who is allowed to do the refrigerant handling and piping work involved in installation, repair, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified service person who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.

Definition of Protective Gear

When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.

In addition to such normal protective gear, wear the protective gear described below when undertaking the special work detailed in the table below.




Failure to wear the proper protective gear is dangerous because you will be more susceptible to injury, burns, electric shocks and other injuries.

Work undertaken	Protective gear worn
All types of work	Protective gloves 'Safety' working clothing
Electrical-related work	Gloves to provide protection for electricians Insulating shoes Clothing to provide protection from electric shock
Work done at heights (50 cm or more)	Helmets for use in industry
Transportation of heavy objects	Shoes with additional protective toecap
Repair of outdoor unit	Gloves to provide protection for electricians

The important contents concerned to the safety are described on the product itself and on this Service Manual.




Please read this Service Manual after understanding the described items thoroughly in the following contents (Indications / Illustrated marks), and keep them.

[Explanation of indications]







Indication	Explanation
 DANGER	Indicates contents assumed that an imminent danger causing a death or serious injury of the repair engineers and the third parties when an incorrect work has been executed.
 WARNING	Indicates possibilities assumed that a danger causing a death or serious injury of the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.
 CAUTION	Indicates contents assumed that an injury or property damage (*) may be caused on the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.

* Property damage: Enlarged damage concerned to property, furniture, and domestic animal / pet

[Explanation of illustrated marks]

Indication	Explanation
	Indicates prohibited items (Forbidden items to do) The sentences near an illustrated mark describe the concrete prohibited contents.
	Indicates mandatory items (Compulsory items to do) The sentences near an illustrated mark describe the concrete mandatory contents.
	Indicates cautions (Including danger / warning) The sentences or illustration near or in an illustrated mark describe the concrete cautious contents.





■ Warning indications on the air conditioner unit

Warning indication	Description				
 <table border="1"> <tr> <th colspan="2">WARNING</th></tr> <tr> <td>ELECTRICAL SHOCK HAZARD</td><td>Disconnect all remote electric power supplies before servicing</td></tr> </table>	WARNING		ELECTRICAL SHOCK HAZARD	Disconnect all remote electric power supplies before servicing	WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.
WARNING					
ELECTRICAL SHOCK HAZARD	Disconnect all remote electric power supplies before servicing				
 <table border="1"> <tr> <th colspan="2">WARNING</th></tr> <tr> <td>Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.</td><td></td></tr> </table>	WARNING		Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.		WARNING Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.
WARNING					
Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.					
 <table border="1"> <tr> <th colspan="2">CAUTION</th></tr> <tr> <td>High temperature parts. You might get burned when removing this panel.</td><td></td></tr> </table>	CAUTION		High temperature parts. You might get burned when removing this panel.		CAUTION High temperature parts. You might get burned when removing this panel.
CAUTION					
High temperature parts. You might get burned when removing this panel.					
 <table border="1"> <tr> <th colspan="2">CAUTION</th></tr> <tr> <td>Do not touch the aluminum fins of the unit. Doing so may result in injury.</td><td></td></tr> </table>	CAUTION		Do not touch the aluminum fins of the unit. Doing so may result in injury.		CAUTION Do not touch the aluminium fins of the unit. Doing so may result in injury.
CAUTION					
Do not touch the aluminum fins of the unit. Doing so may result in injury.					
 <table border="1"> <tr> <th colspan="2">CAUTION</th></tr> <tr> <td>BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.</td><td></td></tr> </table>	CAUTION		BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.		CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.
CAUTION					
BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.					
 <table border="1"> <tr> <th colspan="2">CAUTION</th></tr> <tr> <td>Do not climb onto the fan guard. Doing so may result in injury.</td><td></td></tr> </table>	CAUTION		Do not climb onto the fan guard. Doing so may result in injury.		CAUTION Do not climb onto the fan guard. Doing so may result in injury.
CAUTION					
Do not climb onto the fan guard. Doing so may result in injury.					

PRECAUTIONS FOR SAFETY



The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.

DANGER







 Turn off breaker	Before carrying out the installation, maintenance, repair or removal work, be sure to set the circuit breaker for both the indoor and outdoor units to the OFF position. Otherwise, electric shocks may result.
	Before opening the intake grille of the indoor unit or service panel of the outdoor unit, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in electric shocks through contact with the interior parts. Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the intake grille of the indoor unit or service panel of the outdoor unit and do the work required.
	Before opening the electric box cover set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in injury through contact with the rotation parts. Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the electric box cover and do the work required.
	Before starting to repair the outdoor unit fan or fan guard, be absolutely sure to set the circuit breaker to the OFF position, and place a "Work in progress" sign on the circuit breaker.
	When cleaning the filter or other parts of the indoor unit, set the circuit breaker to OFF without fail, and place a "Work in progress" sign near the circuit breaker before proceeding with the work.
	When you have noticed that some kind of trouble (such as when a check code display has appeared, there is a smell of burning, abnormal sounds are heard, the air conditioner fails to cool or heat or water is leaking) has occurred in the air conditioner, do not touch the air conditioner yourself but set the circuit breaker to the OFF position, and contact a qualified service person. Take steps to ensure that the power will not be turned on (by marking "out of service" near the circuit breaker, for instance) until qualified service person arrives. Continuing to use the air conditioner in the trouble status may cause mechanical problems to escalate or result in electric shocks or other failure.
 Electric shock hazard	When you access inside of the electric cover to repair electric parts, wait for about five minutes after turning off the breaker. Do not start repairing immediately. Otherwise you may get electric shock by touching terminals of high-voltage capacitors. Natural discharge of the capacitor takes about five minutes.
	When checking the electric parts, removing the cover of the electric parts box of indoor unit and/or service panel of outdoor unit inevitably to determine the failure, use gloves to provide protection for electricians, insulating shoes, clothing to provide protection from electric shock and insulating tools. Be careful not to touch the live part. Electric shock may result. Only "Qualified service person" is allowed to do this work.
 Prohibition	Place a "Work in progress" sign near the circuit breaker while the installation, maintenance, repair or removal work is being carried out. There is a danger of electric shocks if the circuit breaker is set to ON by mistake.
	When checking the electric parts, removing the cover of the electric parts box of Indoor Unit and/or front panel of outdoor unit inevitably to determine the failure, put a sign "Do not enter" around the site before the work. Failure to do this may result in third person getting electric shock.
	Before operating the air conditioner after having completed the work, check that the electrical parts box cover of the indoor unit and service panel of the outdoor unit are closed, and set the circuit breaker to the ON position. You may receive an electric shock if the power is turned on without first conducting these checks.
 Stay on protection	If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, wear insulated heat-resistant gloves, insulated boots and insulated work overalls, and take care to avoid touching any live parts. You may receive an electric shock if you fail to heed this warning. Only qualified service person (*1) is allowed to do this kind of work.








(*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"

WARNIG



 General	Before starting to repair the air conditioner, read carefully through the Service Manual, and repair the air conditioner by following its instructions.
	Only qualified service person (*1) is allowed to repair the air conditioner. Repair of the air conditioner by unqualified person may give rise to a fire, electric shocks, injury, water leaks and / or other problems.
	Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
	Only a qualified installer (*1) or qualified service person (*1) is allowed to carry out the electrical work of the air conditioner. Under no circumstances must this work be done by an unqualified individual since failure to carry out the work properly may result in electric shocks and / or electrical leaks.
	When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.
	To connect the electrical wires, repair the electrical parts or undertake other electrical jobs, wear gloves to provide protection for electricians, insulating shoes and clothing to provide protection from electric shocks. Failure to wear this protective gear may result in electric shocks.
	Electrical wiring work shall be conducted according to law and regulation in the community and Installation Manual. Failure to do so may result in electrocution or short circuit.
	Use wiring that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws. Use of wiring which does not meet the specifications may give rise to electric shocks, electrical leakage, smoking and/or a fire.
	Only a qualified installer (*1) or qualified service person (*1) is allowed to undertake work at heights using a stand of 50 cm or more or to remove the intake grille of the indoor unit to undertake work.
	When working at heights, use a ladder which complies with the ISO 14122 standard, and follow the procedure in the ladder's instructions. Also wear a helmet for use in industry as protective gear to undertake the work.
	Before working at heights, put a sign in place so that no-one will approach the work location, before proceeding with the work. Parts and other objects may fall from above, possibly injuring a person below. While carrying out the work, wear a helmet for protection from falling objects.
	When executing address setting, test run, or troubleshooting through the checking window on the electric parts box, put on insulated gloves to provide protection from electric shock. Otherwise you may receive an electric shock.
	Do not touch the aluminum fin of the unit. You may injure yourself if you do so. If the fin must be touched for some reason, first put on protective gloves and safety work clothing, and then proceed.
	Do not climb onto or place objects on top of the outdoor unit. You may fall or the objects may fall off the outdoor unit and result in injury.
	Use forklift truck to carry in the air conditioner units and use winch or hoist at installation of them.
 Check earth wires.	When transporting the air conditioner, wear shoes with protective toecap.
	When transporting the air conditioner, do not take hold of the bands around the packing carton. You may injure yourself if the bands break.
	Be sure that a heavy unit (10 kg or heavier) such as a compressor is carried by four persons.
	Before troubleshooting or repair work, check the earth wire is connected to the earth terminals of the main unit, otherwise an electric shock is caused when a leak occurs. If the earth wire is not correctly connected, contact an electric engineer for rework.
	After completing the repair or relocation work, check that the earth wires are connected properly.
	Connect earth wire. (Grounding work) Incomplete earthing causes an electric shock. Do not connect earth wires to gas pipes, water pipes, and lightning rods or earth wires for telephone wires.

(*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"

 Prohibition of modification.	Do not modify the products. Do not also disassemble or modify the parts. It may cause a fire, electric shock or injury.
 Use specified parts.	<p>When any of the electrical parts are to be replaced, ensure that the replacement parts satisfy the specifications given in the Service Manual (or use the parts contained on the parts list in the Service Manual).</p> <p>Use of any parts which do not satisfy the required specifications may give rise to electric shocks, smoking and / or a fire.</p>
 Do not bring a child close to the equipment.	<p>If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, put a sign in place so that no-one will approach the work location before proceeding with the work. Third-party individuals may enter the work site and receive electric shocks if this warning is not heeded.</p>
 Insulating measures	<p>Connect the cut-off lead wires with crimp contact, etc., put the closed end side upward and then apply a water cut method, otherwise a leak or production of fire is caused at the users' side.</p>
 No fire	<p>When performing repairs using a gas burner, replace the refrigerant with nitrogen gas because the oil that coats the pipes may otherwise burn.</p> <p>When repairing the refrigerating cycle, take the following measures.</p> <ol style="list-style-type: none"> 1) Be attentive to fire around the cycle. When using a gas stove, etc., be sure to put out fire before work; otherwise the oil mixed with refrigerant gas may catch fire. 2) Do not use a brazing in the closed room. When using it without ventilation, carbon monoxide poisoning may be caused. 3) Do not bring inflammables close to the refrigerant cycle, otherwise fire of the brazing may catch the inflammables.
 Refrigerant	<p>The refrigerant used by this air conditioner is the R410A.</p>
	<p>Check the used refrigerant name and use tools and materials of the parts which match with it. For the products which use R410A refrigerant, the refrigerant name is indicated at a position on the outdoor unit where is easy to see. To prevent miss charging, the route of the service port is changed from one of the former R22.</p>
	<p>Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.</p>
	<p>For an air conditioner which uses R410A, never use other refrigerant than R410A. For an air conditioner which uses other refrigerant (R22, etc.), never use R410A.</p> <p>If different types of refrigerant are mixed, abnormal high pressure generates in the refrigerating cycle and an injury due to breakage may be caused.</p>
	<p>When the air conditioner has been installed or relocated, follow the instructions in the Installation Manual and purge the air completely so that no gases other than the refrigerant will be mixed in the refrigerating cycle.</p> <p>Failure to purge the air completely may cause the air conditioner to malfunction.</p>
	<p>Do not charge refrigerant additionally. If charging refrigerant additionally when refrigerant gas leaks, the refrigerant composition in the refrigerating cycle changes resulted in change of air conditioner characteristics or refrigerant over the specified standard amount is charged and an abnormal high pressure is applied to the inside of the refrigerating cycle resulted in cause of breakage or injury. Therefore if the refrigerant gas leaks, recover the refrigerant in the air conditioner, execute vacuuming, and then newly recharge the specified amount of liquid refrigerant.</p> <p>In this time, never charge the refrigerant over the specified amount.</p>
	<p>When recharging the refrigerant in the refrigerating cycle, do not mix the refrigerant or air other than R410A into the specified refrigerant. If air or others is mixed with the refrigerant, abnormal high pressure generates in the refrigerating cycle resulted in cause of injury due to breakage.</p>
	<p>After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous.</p>
	<p>Never recover the refrigerant into the outdoor unit. When the equipment is moved or repaired, be sure to recover the refrigerant with recovering device.</p> <p>The refrigerant cannot be recovered in the outdoor unit; otherwise a serious accident such as breakage or injury is caused.</p>

 Assembly / Wiring	After repair work, surely assemble the disassembled parts, and connect and lead the removed wires as before. Perform the work so that the cabinet or panel does not catch the inner wires. If incorrect assembly or incorrect wire connection was done, a disaster such as a leak or fire is caused at user's side.
 Insulator check	After the work has finished, be sure to use an insulation tester set (500V Ω) to check the resistance is 1 M Ω or more between the charge section and the non-charge metal section (Earth position). If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side.
 Ventilation	When the refrigerant gas leaks during work, execute ventilation. If the refrigerant gas touches to a fire, poisonous gas generates. A case of leakage of the refrigerant and the closed room full with gas is dangerous because a shortage of oxygen occurs. Be sure to execute ventilation.
	If refrigerant gas has leaked during the installation work, ventilate the room immediately. If the leaked refrigerant gas comes in contact with fire, noxious gas may generate.
	After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous.
 Compulsion	When the refrigerant gas leaks, find out the leaked position and repair it surely. If the leaked position cannot be found out and the repair work is interrupted, reclaim and tighten the service valve, otherwise the refrigerant gas may leak into the room. The poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous. When installing equipment which includes a large amount of charged refrigerant in a sub-room, it is necessary that the concentration does not the limit even if the refrigerant leaks. If the refrigerant leaks and exceeds the limit concentration, an accident of shortage of oxygen is caused.
	Tighten the flare nut with a torque wrench in the specified manner. Excessive tighten of the flare nut may cause a crack in the flare nut after a long period, which may result in refrigerant leakage.
	Nitrogen gas must be used for the airtight test.
	The charge hose must be connected in such a way that it is not slack.
	For the installation / moving / reinstallation work, follow to the Installation Manual. If an incorrect installation is done, a trouble of the refrigerating cycle, water leak, electric shock or fire is caused.
 Check after repair	Once the repair work has been completed, check for refrigerant leaks, and check the insulation resistance and water drainage. Then perform a trial run to check that the air conditioner is running properly.
	After repair work has finished, check there is no trouble. If check is not executed, a fire, electric shock or injury may be caused. For a check, turn off the power breaker.
	After repair work (installation of front panel and cabinet) has finished, execute a test run to check there is no generation of smoke or abnormal sound. If check is not executed, a fire or an electric shock is caused. Before test run, install the front panel and cabinet.
	Be sure to fix the screws back which have been removed for installation or other purposes.
 Do not operate the unit with the valve closed.	Check the following matters before a test run after repairing piping. • Connect the pipes surely and there is no leak of refrigerant. • The valve is opened. Running the compressor under condition that the valve closes causes an abnormal high pressure resulted in damage of the parts of the compressor and etc. and moreover if there is leak of refrigerant at connecting section of pipes, the air is sucked and causes further abnormal high pressure resulted in burst or injury.
 Check after reinstallation	Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and / or vibration may result.
	Check the following items after reinstallation. 1) The earth wire is correctly connected. 2) The power cord is not caught in the product. 3) There is no inclination or unsteadiness and the installation is stable. If check is not executed, a fire, an electric shock or an injury is caused.
	When carrying out the reclaim work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in rupture, injury, etc.

(*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"

 Cooling check	<p>When the service panel of the outdoor unit is to be opened in order for the compressor or the area around this part to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the compressor pipes and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.</p>
	<p>Take care not to get burned by compressor pipes or other parts when checking the cooling cycle while running the unit as they get heated while running. Be sure to put on gloves providing protection for heat.</p>
 Installation	<p>When the service panel of the outdoor unit is to be opened in order for the fan motor, inverter or the areas around these parts to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the fan motor, reactor, inverter heat sink and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.</p>
	<p>Only a qualified installer or service person is allowed to do installation work. Inappropriate installation may result in water leakage, electric shock or fire.</p>
	<p>Before starting to install the air conditioner, read carefully through the Installation Manual, and follow its instructions to install the air conditioner.</p>
	<p>Be sure to use the company-specified products for the separately purchased parts. Use of non-specified products may result in fire, electric shock, water leakage or other failure. Have the installation performed by a qualified installer.</p>
	<p>Do not supply power from the power terminal block equipped on the outdoor unit to another outdoor unit. Capacity overflow may occur on the terminal block and may result in fire.</p>
	<p>Do not install the air conditioner in a location that may be subject to a risk of exposure to a combustible gas. If a combustible gas leaks and becomes concentrated around the unit, a fire may occur.</p>
	<p>Install the indoor unit at least 2.5 m above the floor level since otherwise the users may injure themselves or receive electric shocks if they poke their fingers or other objects into the indoor unit while the air conditioner is running.</p>
	<p>Install a circuit breaker that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws.</p>
	<p>Install the circuit breaker where it can be easily accessed by the agent.</p>
	<p>If you install the unit in a small room, take appropriate measures to prevent the refrigerant from exceeding the limit concentration even if it leaks. Consult the dealer from whom you purchased the air conditioner when you implement the measures. Accumulation of highly concentrated refrigerant may cause an oxygen deficiency accident.</p>
	<p>Do not place any combustion appliance in a place where it is directly exposed to the wind of air conditioner, otherwise it may cause imperfect combustion.</p>

Explanations given to user

If you have discovered that the fan grille is damaged, do not approach the outdoor unit but set the circuit breaker to the OFF position, and contact a qualified service person to have the repairs done. Do not set the circuit breaker to the ON position until the repairs are completed.

Relocation

- Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and / or vibration may result.
- When carrying out the reclaim work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in rupture, injury, etc.
- In snowfall areas
In snowfall areas, snow may accumulate on the fin guards and lead to reduced heating capacity. It is recommended to remove the fin guards.

(*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"

Carrying in the outdoor unit


CAUTION

Handle the outdoor unit carefully, observing the following items

- When using a forklift truck or other machinery for loading/unloading in transportation, insert the fork of the forklift truck into the rectangular holes for handling as shown below.
- When lifting up the unit, insert a rope able to bear the unit's weight into the rectangular holes for handling, and tie the unit from 4 sides.

(Apply padding in positions where the rope comes into contact with the outdoor unit so that no damage is caused to the outer surface of the outdoor unit.)


(There are reinforcing plates on the side surfaces, so the rope cannot be passed through.)

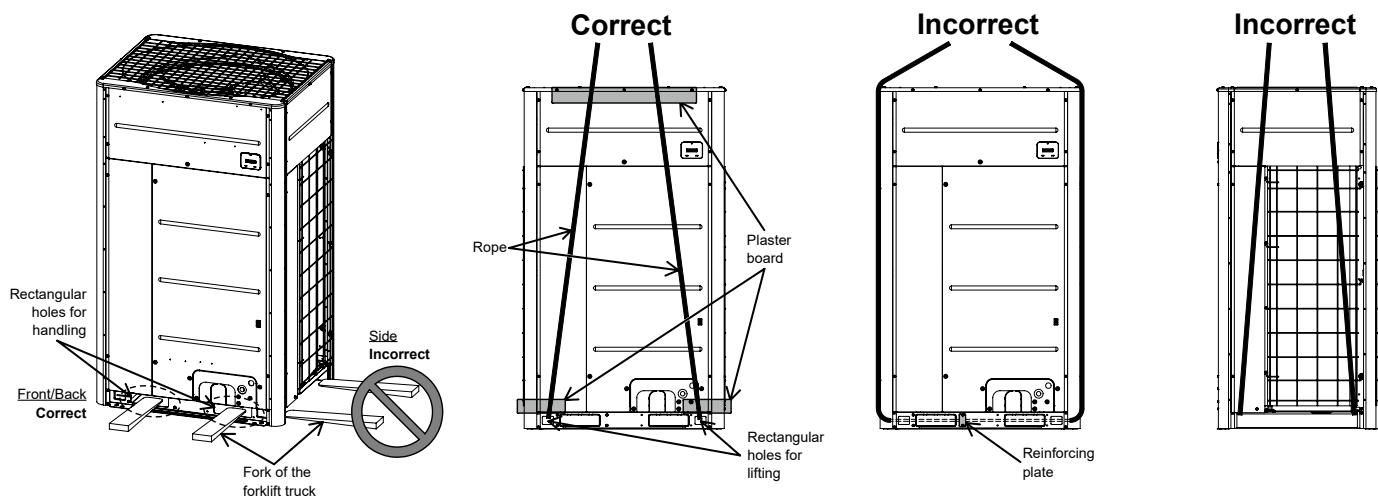




Weight center and weight

◆ Weight center of an outdoor unit

A

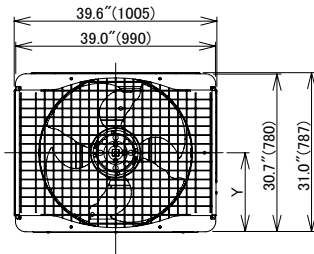

B

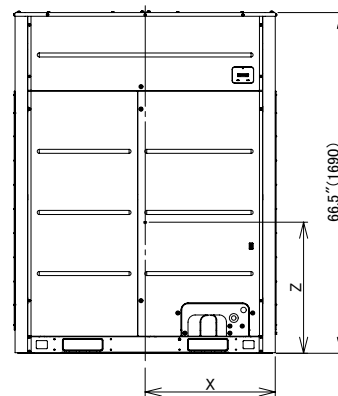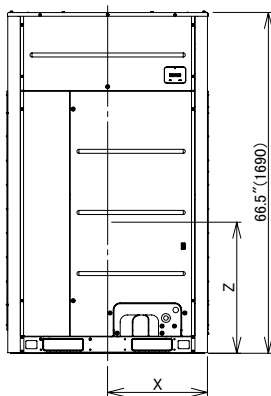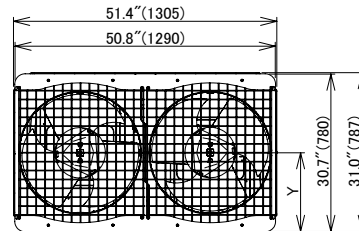


■ Weight centre and weight

Type	Model			X in. (mm)	Y in. (mm)	Z in. (mm)	Weight lbs (kg)
A	Standard	6ton	MMY-MUP0721FT6P-UL	21.3 (540)	16.1 (410)	45.7 (1160)	552 (250)
	Standard	8ton	MMY-MUP0961FT6P-UL				
	High heat	6ton	MMY-MUP072H1FT6PUL				
	Standard	6ton	MMY-MUP0721FT9P-UL	20.5 (520)	12.0 (305)	40.6 (1030)	532 (241)
	Standard	8ton	MMY-MUP0961FT9P-UL				
	High heat	6ton	MMY-MUP072H1FT9PUL				
B	Standard	10ton	MMY-MUP1201FT6P-UL	25.3 (642)	12.6 (320)	50.6 (1284)	686 (311)
	Standard	12ton	MMY-MUP1441FT6P-UL				
	Standard	14ton	MMY-MUP1681FT6P-UL				
	High heat	8ton	MMY-MUP096H1FT6PUL	25.8 (655)	12.4 (315)	30.9 (785)	776 (352)
	High heat	10ton	MMY-MUP120H1FT6PUL				
	Standard	16ton	MMY-MUP1921FT6P-UL	24.6 (625)	15.6 (395)	41.7 (1060)	829 (376)
	Standard	10ton	MMY-MUP1201FT9P-UL	24.8 (630)	15.9 (405)	31.1 (790)	675 (306)
	Standard	12ton	MMY-MUP1441FT9P-UL	24.6 (625)	15.4 (390)	35.2 (895)	783 (355)
	Standard	14ton	MMY-MUP1681FT9P-UL				
	High heat	8ton	MMY-MUP096H1FT9PUL				
	High heat	10ton	MMY-MUP120H1FT9PUL				

Flow Selector unit Multi-port type


(unit: In(mm))

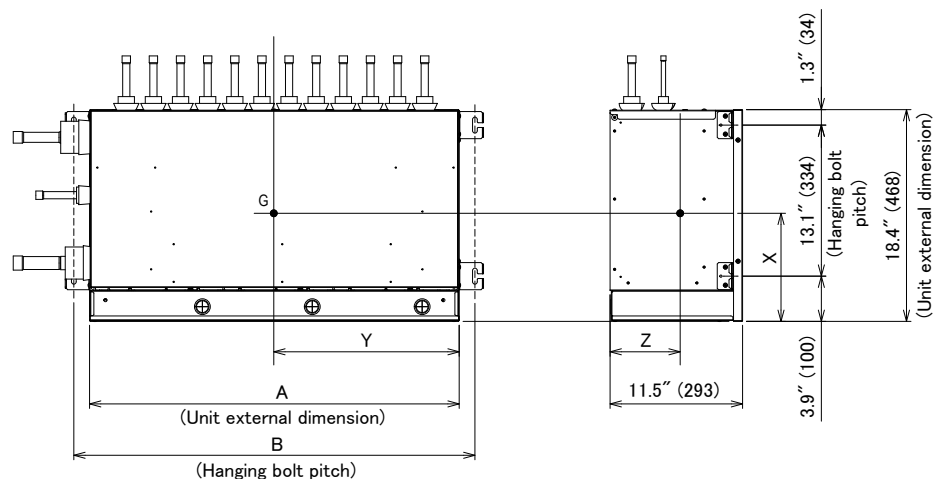

RBM-Y0611***	A [in(mm)]	B [in(mm)]	X [in(mm)]	Y [in(mm)]	Z [in(mm)]	Weight [lbs(kg)]
FU4PUL	13.3" (338)	16.0" (407)	9.4" (239)	7.0" (178)	6.1" (155)	46 (22)
FU8PUL	22.8" (578)	25.5" (647)	9.4" (239)	11.9" (302)	6.1" (155)	77 (35)
FU12PUL	32.2" (818)	34.9" (887)	9.4" (239)	16.1" (410)	6.1" (155)	106 (48)

Flow Selector unit Single-port type



(unit: In(mm))

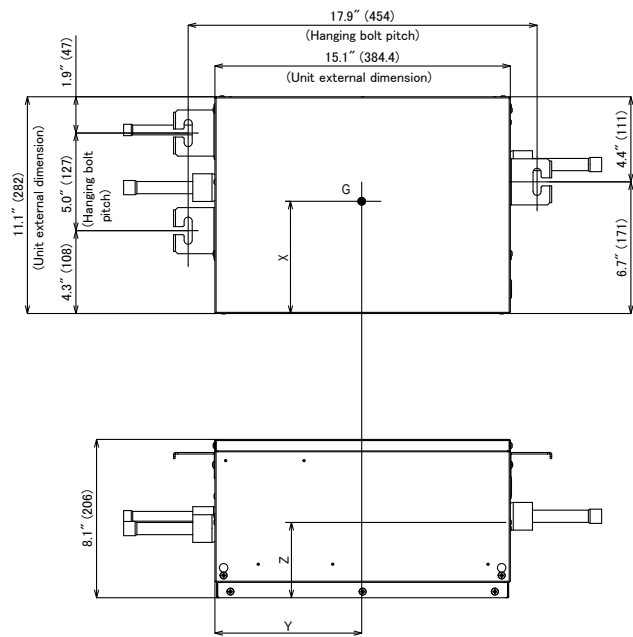

RBM_***	X [in(mm)]	Y [in(mm)]	Z [in(mm)]	Weight [lbs(kg)]
Y0611FUPUL	5.7" (146)	7.5" (191)	3.9" (98)	22 (11)
Y0961FUPUL	5.7" (146)	7.5" (191)	3.9" (98)	22 (11)



FLOW SELECTOR UNIT INSTALLATION SPACE

(unit: In(mm))

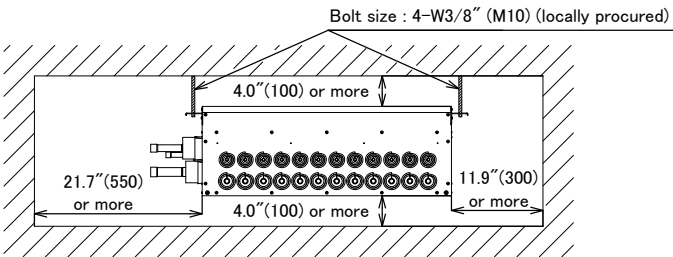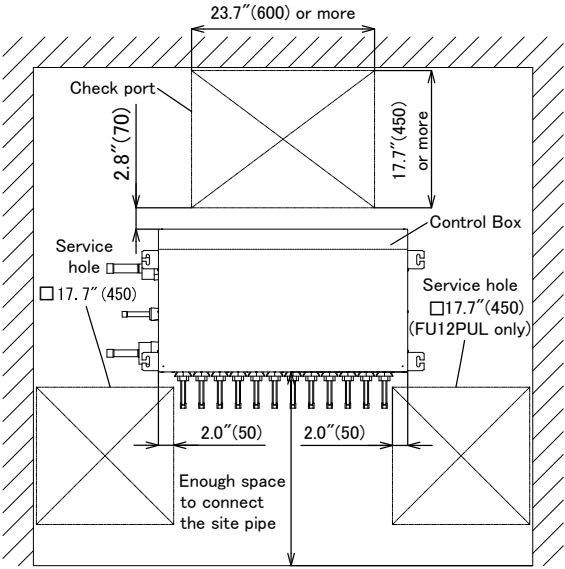

Flow Selector unit Single-port type



(unit: In(mm))

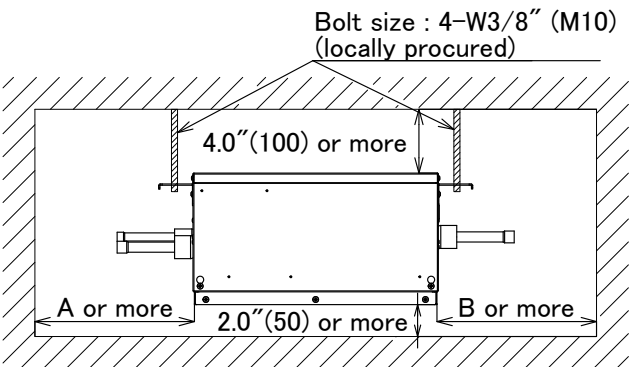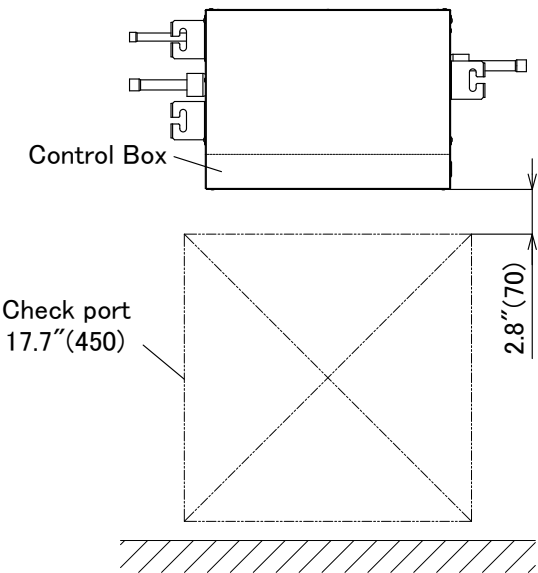

RBM-***	A	B
Y0611FUPUL	9.9" (250)	9.9" (250) (*)
Y0961FUPUL	15.8" (400)	15.8" (400)

(*) In case of using the attached pipe (accessory) 13.8" (350)

Coupling size of brazed pipe

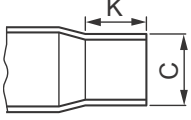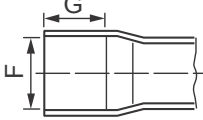Connected section	
External size	Internal size
	

Standard outer dia. of connected copper pipe		Connected section										Min. Thickness of coupling	
		External size		Internal size		Min. depth of insertion				Oval value			
		Standard outer dia. (Allowable difference)											
		C		F		K		G					
in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
1/4	6.35	1/4"(±0.0012)	6.35(±0.03)	0.25" ^(+0.001 -6)	6.45 ^(+0.0 -4)	0.28	7	0.24	6	0.0024" or less	0.06 or less	0.020"	0.50
3/8	9.52	3/8"(±0.0012)	9.52(±0.03)	0.38" ^(+0.001 -6)	9.62 ^(+0.0 -4)	0.31	8	0.28	7	0.0031" or less	0.08 or less	0.024"	0.60
1/2	12.7	1/2"(±0.0012)	12.70(±0.03)	0.5" ^(+0.001 -6)	12.81 ^(+0.0 -4)	0.35	9	0.31	8	0.0039" or less	0.10 or less	0.028"	0.70
5/8	15.88	5/8"(±0.0012)	15.88(±0.03)	0.63" ^(+0.001 -6)	16.00 ^(+0.0 -4)	0.35	9	0.31	8	0.0051" or less	0.13 or less	0.031"	0.80
3/4	19.05	3/4"(±0.0012)	19.05(±0.03)	0.76" ^(+0.001 -2)	19.19 ^(+0.0 -3)	0.43	11	0.39	10	0.0059" or less	0.15 or less	0.031"	0.80
7/8	22.2	7/8"(±0.0012)	22.22(±0.03)	0.88" ^(+0.001 -2)	23.36 ^(+0.0 -3)	0.43	11	0.39	10	0.0063" or less	0.16 or less	0.032"	0.82
1-1/8	28.58	1-1/8"(±0.0012)	28.58(±0.04)	1.13" ^(+0.002 -4)	28.75 ^(+0.0 -6)	0.51	13	0.47	12	0.0079" or less	0.20 or less	0.039"	1.00
1-3/8	34.92	1-3/8"(±0.0012)	34.90(±0.04)	1.38" ^(+0.001 -6)	35.11 ^(+0.0 -4)	0.55	14	0.51	13	0.0098" or less	0.25 or less	0.047"	1.20
1-5/8	41.28	1-5/8"(±0.0012)	41.28(±0.05)	1.63" ^(+0.003 -1)	42.28 ^(+0.0 -8)	0.59	15	0.55	14	0.0110" or less	0.28 or less	0.053"	1.35

Screw size and tightening torque

	Screw size	Tightening torque ft•lbs (N•m)
Power supply terminal	M6	1.84 to 2.2 (2.5 to 3.0)
Earth screw	M8	4.06 to 4.87 (5.5 to 6.6)
Communication wire terminal	M4	0.89 to 1.03 (1.2 to 1.4)

Charging requirement with additional refrigerant

After finishing vacuuming, exchange the vacuum pump with a refrigerant canister and start additional charging of refrigerant.

Calculation of additional refrigerant charge amount

Refrigerant charge amount at shipment from factory does not include the refrigerant for pipes at the local site. For refrigerant to be charged in pipes at the local site, calculate the amount and charge it additionally.

NOTE

If the additional refrigerant amount indicates minus as the result of calculation, use the air conditioner without additional refrigerant.

Standard model

MMY-	MUP***1FT6P-UL MUP***1FT9P-UL	072type	096type	120type	144type	168type	192type
Amount of refrigerant	lbs	13.2		19.8			
charged in factory	kg	6.0		9.0			

High heat model

MMY-	MUP***H1FT6PUL MUP***H1FT9PUL	072type	096type	120type
Amount of refrigerant	lbs	13.2	19.8	
charged in factory	kg	6.0	9.0	

When the outdoor units are charged with refrigerant from the factory, the amount of refrigerant needed for the piping at the site is not included. Therefore, calculate the additional amount of refrigerant and the required amount of refrigerant to the system in the field.

Use the following formula to calculate the amount of additional refrigerant.

Additional amount of refrigerant charge at site = [1] + [2] × [A] + [3] + [4]

[1]. Additional amount of refrigerant based on the outdoor unit capacity type (Table 1-1, 1-2)

[2]. Additional amount of refrigerant based on the liquid pipe diameter and length.

Real length of liquid pipe × Additional amount of refrigerant charge per liquid pipe length 1 ft and 1m. (Table 2)

[A]. Correction factor based on the indoor unit connection capacity. (Table A)

[3]. Additional amount of refrigerant based on the indoor unit capacity type and number. (Table 3-1, 3-2, 3-3, 3-4)

[4]. Refrigerant amount adjustment based on the diversity. (Table 4)

Table1. Additional amount of refrigerant based on the outdoor unit capacity

Table 1-1 Standard model

	Outdoor unit capacity type	Combination outdoor units			Amount of additional refrigerant(lbs)	Amount of additional refrigerant(kg)
		Unit1	Unit2	Unit3		
6ton	072	072	—	—	2.2	1.0
8ton	096	096	—	—	2.2	1.0
10ton	120	120	—	—	0.0	0.0
12ton	144	144	—	—	2.2	1.0
14ton	168	168	—	—	4.4	2.0
16ton	192	192	—	—	5.5	2.5
16ton	192	096	096	—	4.4	2.0
18ton	216	144	072	—	4.4	2.0
20ton	240	144	096	—	4.4	2.0
22ton	264	168	096	—	6.6	3.0
24ton	288	144	144	—	4.4	2.0
26ton	312	168	144	—	6.6	3.0
28ton	336	168	168	—	8.8	4.0
30ton	360	168	096	096	8.8	4.0
32ton	384	144	144	096	6.6	3.0
34ton	408	168	144	096	8.8	4.0
36ton	432	168	168	096	11.0	5.0
38ton	456	168	144	144	8.8	4.0
40ton	480	168	168	144	11.0	5.0
42ton	504	168	168	168	13.2	6.0

Table1-2.High heat model

	Outdoor unit capacity type	Combination outdoor units			Amount of additional refrigerant(lbs)	Amount of additional refrigerant(kg)
		Unit1	Unit2	Unit3		
6ton	072	072	—	—	2.2	1.0
8ton	096	096	—	—	2.2	1.0
10ton	120	120	—	—	6.6	3.0
12ton	144	072	072	—	4.4	2.0
16ton	192	096	096	—	4.4	2.0
20ton	240	120	120	—	13.2	6.0
24ton	288	096	096	096	6.6	3.0
30ton	360	120	120	120	19.8	9.0

Table 2. Additional amount of refrigerant base on the liquid pipe and length.

Liquid pipe diameter		1/4 in.	3/8 in.	1/2 in.	5/8 in.	3/4 in.	7/8 in.
		6.4 mm	9.5 mm	12.7 mm	15.9 mm	19.1 mm	22.2 mm
Additional amount of refrigerant	lbs / ft	0.017	0.037	0.071	0.108	0.168	0.235
	kg / m	0.025	0.055	0.105	0.160	0.250	0.350

Table A. Correction factor on Indoor connection capacity

Diversity	Correction factor
Less than 135 %	1.3
135 % or more	1.2

Table 3. Additional amount of refrigerant based on the indoor unit capacity type and number**Table3-1. Additional amount of refrigerant for standard indoor unit capacity type.**

Indoor unit capacity type		007	009	012	015	018	021	024	027	030	036	042	048	054	072	096
Additional amount of refrigerant	lbs /unit	0.44			0.88						1.32			2.20		
	kg / unit	0.2			0.4						0.6			1.0		

Table3-2. Additional amount of refrigerant for 4-way Cassette type (Model name: MMU-UP*1HP-UL).**

Indoor unit capacity type		007	009	012	015	018	024	027	030	036	042	048	054
Additional amount of refrigerant	lbs /unit	0.44			0.88						1.32		
	kg / unit	0.2			0.4						0.6		

Table3-3. Additional amount of refrigerant for Concealed Duct Standard type (Model name: MMD-UP*1BHP-UL).**

Indoor unit capacity type		007	009	012	015	018	021	024	030	036	042	048	054
Additional amount of refrigerant	lbs /unit	0.88						1.32					
	kg / unit	0.4						0.6					

Table3-4. Additional amount of refrigerant for DX Coil inter face (Model name: TCB-IFDMR01UP-UL / RBM-A*1UPVR-UL).**

Indoor unit capacity type		007	009	012	015	018	024	027	030	036	048	054	060	072	096	120
Additional amount of refrigerant	ton	0.6	0.8	1	1.25	1.5	2	2.25	2.5	3	4	4.5	5	6	8	10
	lbs /unit	0.24	0.32	0.42	0.60	0.72	0.92	1.12	1.20	1.51	1.91	2.11	2.50	3.09	3.97	4.68
	kg / unit	0.11	0.15	0.19	0.27	0.33	0.42	0.51	0.54	0.69	0.87	0.96	1.13	1.40	1.80	2.12

- If the Outside Air Unit (MMD-UP****HFP-UL) is connected, the correction amount refrigerant for Outside Air Unit is 0 kg.

Table 4. Refrigerant amount adjustment based on the diversity.

Diversity D	Refrigerant amount adjustment	
	lbs	kg
50 % ≤ D < 60 %	-9.92	-4.5
60 % ≤ D < 70 %	-7.72	-3.5
70 % ≤ D < 80 %	-5.51	-2.5
80 % ≤ D < 90 %	-3.31	-1.5
90 % ≤ D < 95 %	-1.10	-0.5
95 % ≤ D	0	0

Charging of refrigerant

- Keeping the valve of the outdoor unit closed, be sure to charge the liquid refrigerant into the service port at the liquid side.
- If the specified amount of refrigerant cannot be charged, fully open the valves of the outdoor unit at liquid and gas sides, operate the air conditioner in COOL mode, and then charge refrigerant into service port at the gas side. In this time, choke the refrigerant slightly by operating the valve of the canister to charge liquid refrigerant.
- The liquid refrigerant may be charged suddenly, therefore be sure to charge refrigerant gradually.

Refrigerant (R410A)

This air conditioner adopts a HFC type refrigerant (R410A) which does not deplete the ozone layer.

1. Safety Caution Concerned to refrigerant (R410A)

The pressure of R410A is 1.6 times higher than that of the former refrigerant (R22). Accompanied with change of refrigerant, the refrigerating oil has been also changed. Therefore, be sure that water, dust, the former refrigerant or the former refrigerating oil is not mixed into the refrigerating cycle of the air conditioner with new refrigerant during installation work or service work. If an incorrect work or incorrect service is performed, there is a possibility to cause a serious accident. Use the tools and materials exclusive to R410A to purpose a safe work.

2. Cautions on Installation/Service

- (1) Do not mix the other refrigerant or refrigerating oil.
For the tools exclusive to R410A, shapes of all the joints including the service port differ from those of the former refrigerant in order to prevent mixture of them.
- (2) As the use pressure of the refrigerant (R410A) is high, use material thickness of the pipe and tools which are specified for R410A.
- (3) In the installation time, use clean pipe materials and work with great attention so that water and others do not mix in because pipes are affected by impurities such as water, oxide scales, oil, etc. Use the clean pipes.
Be sure to braze with flowing nitrogen gas. (Never use gas other than nitrogen gas.)
- (4) For the earth protection, use a vacuum pump for air purge.
- (5) R410A refrigerant is a zeotropic mixture type refrigerant. Therefore use liquid type to charge the refrigerant.

3. Pipe Materials

For the refrigerant pipes, copper pipe and joints are mainly used. It is necessary to select the most appropriate pipes to conform to the standard. Use clean material in which impurities adhere inside of pipe or joint to a minimum.

(1) Copper pipe

<Piping>

The pipe thickness, flare-finishing size, flare nut and others differ according to a refrigerant type. When using a long copper pipe for R410A, it is recommended to select "Copper or copper-base pipe without seam" and one with bonded oil amount 40mg/10m or less. Also do not use crushed, deformed, discolored (especially inside) pipes. (Impurities cause clogging of expansion valves and capillary tubes.)

<Flare nut>

Use the flare nuts which are attached to the air conditioner unit.

(2) Joint

The flare joint and socket joint are used for joints of the copper pipe. The joints are rarely used for installation of the air conditioner. However clear impurities when using them.

Tools

(1) Required Tools for R410A

Mixing of different types of oil may cause a trouble such as generation of sludge, clogging of capillary, etc. Accordingly, the tools to be used are classified into the following three types.

- 1) Tools exclusive for R410A (Those which cannot be used for conventional refrigerant (R22))
- 2) Tools exclusive for R410A, but can be also used for conventional refrigerant (R22)
- 3) Tools commonly used for R410A and for conventional refrigerant (R22)

The table below shows the tools exclusive for R410A and their interchangeability.

Tools exclusive for R410A (The following tools for R410A are required.)

Explanation of symbols

△ : Newly prepared (It is necessary to use it exclusively with R410A, separately from those for R22

⊙ or R407C.) : Former tool is available.

Used tools	Usage	Proper use of tools/parts
Gauge manifold	Vacuuming, charging refrigerant and operation check	△ Exclusive to R410A
Charging hose		△ Exclusive to R410A
Charging cylinder	Charging refrigerant	Unusable (Use the Refrigerant charging balance.)
Gas leak detector	Checking gas leak	△ Exclusive to R410A
Vacuum pump	Vacuum drying	Usable if a counter-flow preventive adapter is attached
Vacuum pump with counter flow	Vacuum drying	⊙ R22 (Existing article)
Flare tool	Flare processing of pipes	⊙ Usable by adjusting size
Bender	Bending processing of pipes	⊙ R22 (Existing article)
Refrigerant recovery device	Recovering refrigerant	△ Exclusive to R410A
Torque wrench	Tightening flare nut	△ Exclusive to Ø12.7mm and Ø15.9mm
Pipe cutter	Cutting pipes	⊙ R22 (Existing article)
Refrigerant canister	Charging refrigerant	△ Exclusive to R410A Enter the refrigerate name for identification
Brazing machine/ Nitrogen gas cylinder	Brazing of pipes	⊙ R22 (Existing article)
Refrigerant charging balance	Charging refrigerant	⊙ R22 (Existing article)

(Note 1) When flaring is carried out for R410A using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

(Note 2) Charging cylinder for R410A is being currently developed.

General tools (Conventional tools can be used.)

In addition to the above exclusive tools, the following equipment which serve also for R22 are necessary as the general tools.

- | | |
|---|---|
| (1) Vacuum pump | (7) Screwdriver (+, -) |
| Use vacuum pump by attaching vacuum pump adapter. | (8) Spanner or Adjustable wrench |
| (2) Torque wrench | (9) Hole core drill |
| (3) Pipe cutter | (10) Hexagon wrench (Opposite side 4mm) |
| (4) Reamer | (11) Tape measure |
| (5) Pipe bender | (12) Metal saw |
| (6) Level vial | |

Also prepare the following equipment for other installation method and run check.

- | | |
|-----------------|----------------------------------|
| (1) Clamp meter | (3) Insulation resistance tester |
| (2) Thermometer | (4) Electroscopic |

Communication type, model names and the maximum number of connectable units


- ◆ This air conditioning (U series) has new communication specifications, and TU2C-Link (U series) and TCC-Link (other than U series) differ in a communication type. For the communication type and the model names such as each unit or remote controllers, refer to the following table.

Communication type	TU2C-LINK (SHRM-u , U series, and future models)	TCC-LINK(Other than U series)
Outdoor unit	MMY-M <u>U</u> P *** ↑ This letter indicates U series model.	Other than U series MMY-MAP *** MCY-MAP ***
Indoor unit	MM * - <u>U</u> P *** ↑ This letter indicates U series model.	Other than U series MM*-AP***
Flow selector unit	RBM-Y***F <u>U</u> P* ↑ This letter indicates U series model. RBM-Y***F <u>U</u> *P* ↑ This letter indicates U series model.	Other than U series RBM-Y***F* RBM-Y***F*P*
Wired remote controller	RBC-A ** <u>U</u> *** ↑ This letter indicates U series model.	Other than U series
Wireless remote controller kit & receiver unit	RBC-AX <u>U</u> *** ↑ This letter indicates U series model.	Other than U series

U series outdoor unit : SMMS-u (MMY-MUP***HT)
 SHRM-u outdoor unit : MMY-MUP***FT
 Other than U series outdoor unit : SMMS-i, SMMS-e etc. (MMY-MAP***, MCY-MAP***)


- ◆ There are restrictions on the wiring specifications and the number of units that can be connected.

(1) For wiring specifications, carry out the installation, maintenance, or repair according to the attached Installation Manual.

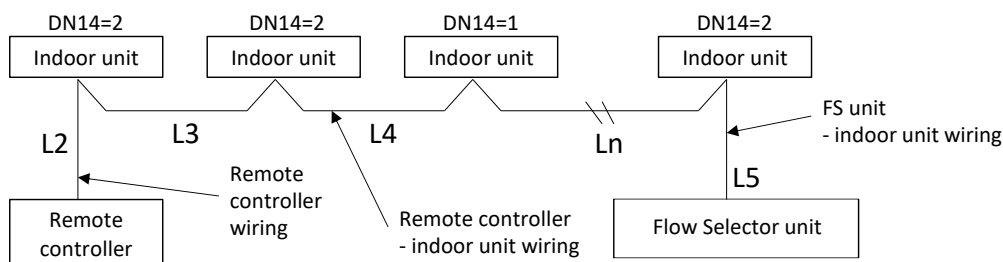


1.WIRING DIAGRAMS

MMY-MUP0721FT6P-UL, MMY-MUP0961FT6P-UL, MMY-MUP072H1FT6PUL

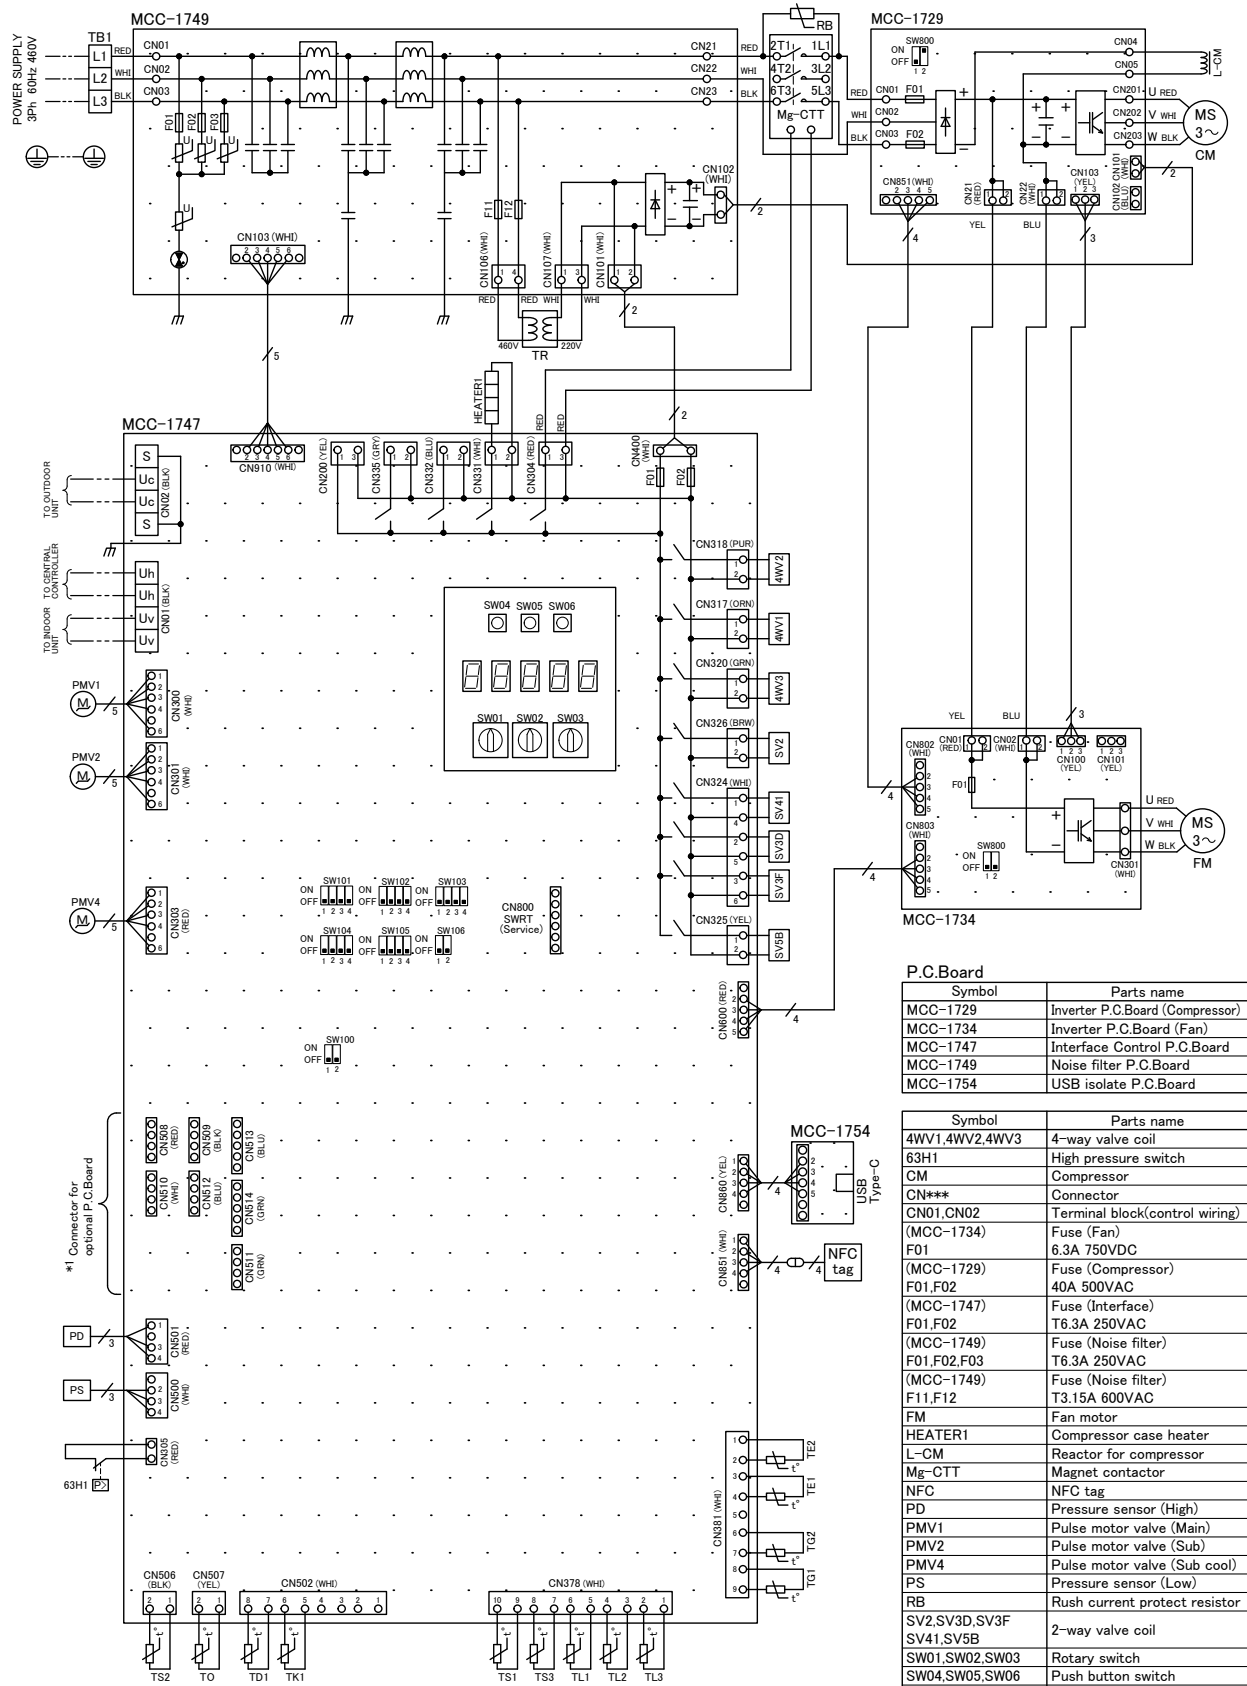


**MMY-MUP1201FT6P-UL, MMY-MUP1441FT6P-UL, MMY-MUP1681FT6P-UL,
MMY-MUP096H1FT6PUL, MMY-MUP120H1FT6PUL**

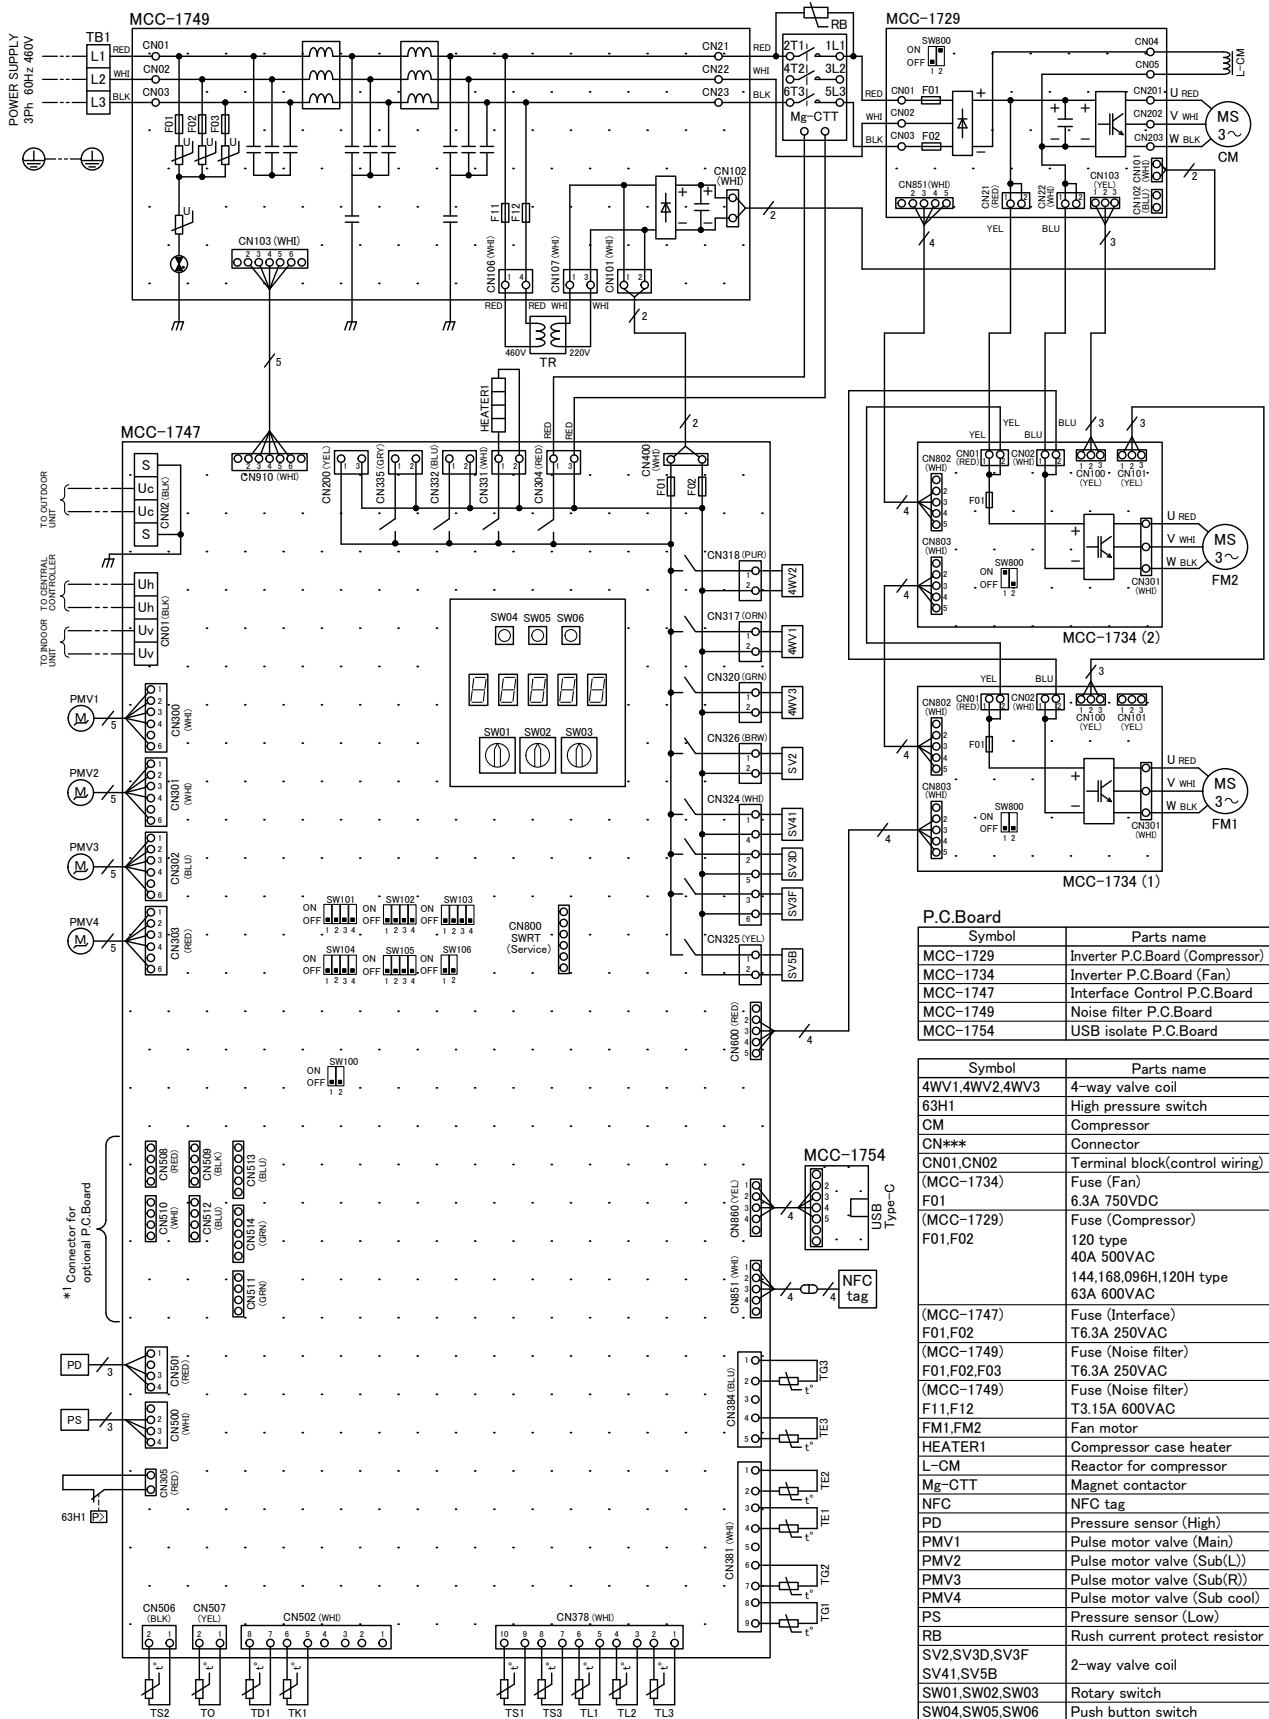

----	Field wiring
⊕	Protective earth
□	Terminal block
○	Terminal
□	Connector
□	P.C.Board

Color indication
RED:RED
WH:WHITE
YEL:YELLOW
BLU:BLUE
BLK:BLACK
GRY:GRAY
ORN:ORANGE
GRN:GREEN
PUR:PURPLE
BRW:BROWN

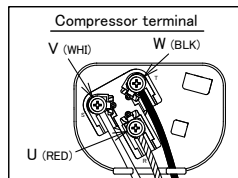


P.C.Board

Symbol	Parts name
MCC-1729	Inverter P.C.Board (Compressor)
MCC-1734	Inverter P.C.Board (Fan)
MCC-1747	Interface Control P.C.Board
MCC-1749	Noise filter P.C.Board
MCC-1754	USB isolate P.C.Board

Symbol	Parts name
4WV1,4WV2,4WV3	4-way valve coil
63H1	High pressure switch
CM	Compressor
CN***	Connector
CN01,CN02	Terminal block(control wiring)
(MCC-1734)	Fuse (Fan)
F01	6.3A 750VDC
(MCC-1729)	Fuse (Compressor)
F01,F02	120 type 40A 500VAC 144,168,096H,120H type 63A 600VAC
(MCC-1747)	Fuse (Interface)
F01,F02	T6.3A 250VAC
(MCC-1749)	Fuse (Noise filter)
F01,F02,F03	T6.3A 250VAC
(MCC-1749)	Fuse (Noise filter)
F11,F12	T3.15A 600VAC
FM1,FM2	Fan motor
HEATER1	Compressor case heater
L-CM	Reactor for compressor
Mg-CTT	Magnet contactor
NFC	NFC tag
PD	Pressure sensor (High)
PMV1	Pulse motor valve (Main)
PMV2	Pulse motor valve (Sub(L))
PMV3	Pulse motor valve (Sub(R))
PMV4	Pulse motor valve (Sub cool)
PS	Pressure sensor (Low)
RB	Rush current protect resistor
SV2,SV3D,SV3F	2-way valve coil
SV41,SV5B	Rotary switch
SW01,SW02,SW03	Rotary switch
SW04,SW05,SW06	Push button switch
SW100,SW101,SW102 SW103,SW104,SW105 SW106,SW800	Dip switch
TB1	Terminal block(Power supply)
TD1	Discharge temp. sensor
TE1,TE2,TE3	Heat exchange temp. sensor
TG1,TG2,TG3	Gas temp. sensor
TK1	Oil temp. sensor
TL1,TL2,TL3	Liquid temp. sensor
TO	Air temp. sensor
TR	Trans
TS1,TS2,TS3	Suction temp. sensor

MMY-MUP1921FT6P-UL

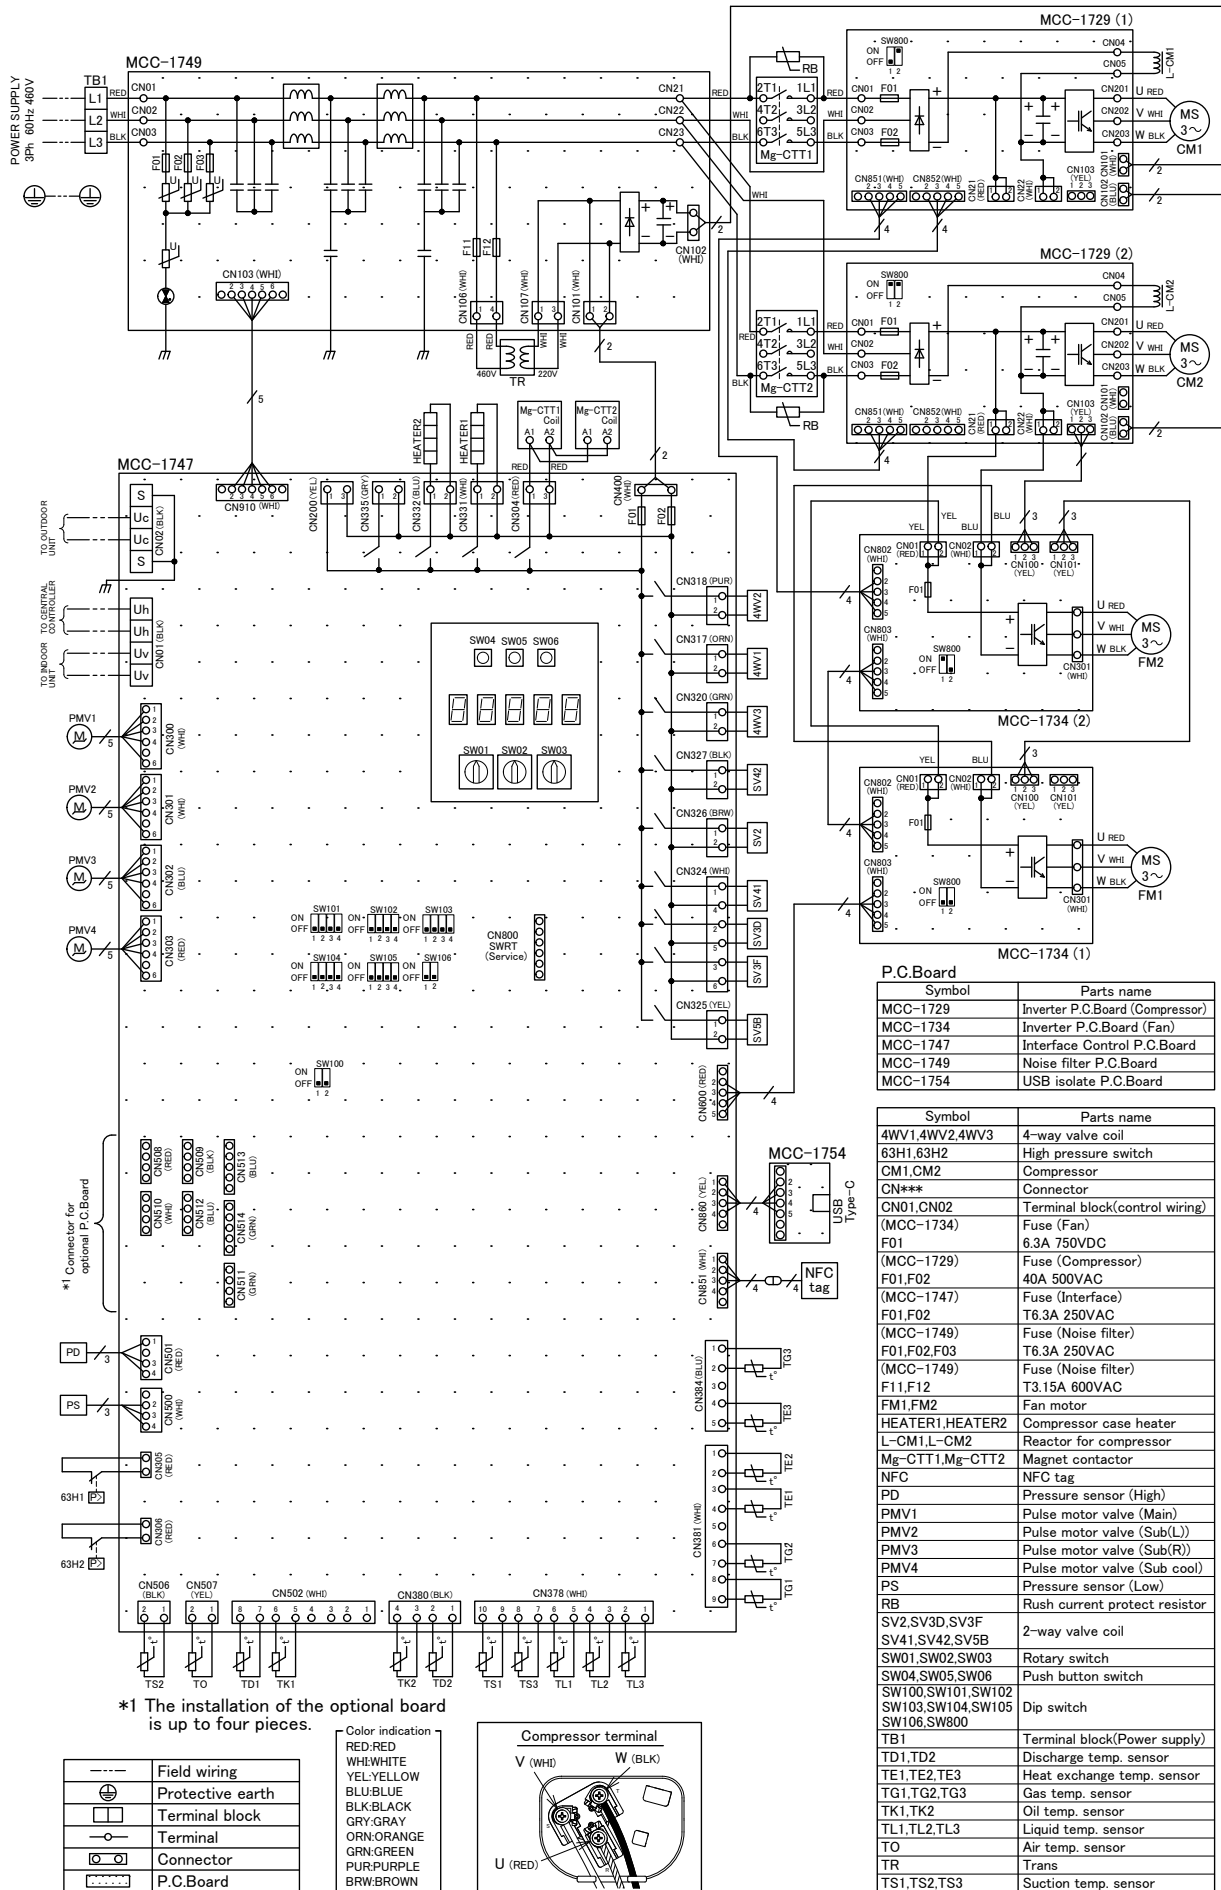

MMY-MUP0721FT9P-UL, MMY-MUP0961FT9P-UL, MMY-MUP072H1FT9PUL

P.C.Board


Symbol	Parts name
MCC-1711	Capacitor P.C.Board
MCC-1734	Inverter P.C.Board (Fan)
MCC-1746	Inverter P.C.Board (Compressor)
MCC-1747	Interface Control P.C.Board
MCC-1749	Noise filter P.C.Board
MCC-1754	USB isolate P.C.Board

Symbol	Parts name
4WV1.4WV2.4WV3	4-way valve coil
63H1	High pressure switch
CM	Compressor
CN**	Connector
CN01,CN02	Terminal block(control wiring)
(MCC-1734)	Fuse (Fan)
F02	12.5A 450VDC
(MCC-1747)	Fuse (Interface)
F01,F02	T6.3A 250VAC
(MCC-1749)	Fuse (Noise filter)
F01,F02,F03	T6.3A 250VAC
(MCC-1749)	Fuse (Noise filter)
F11,F12	70A 250VAC
FM	Fan motor
HEATER1	Compressor case heater
L-CM	Reactor for compressor
Mg-CTT	Magnet contactor
NFC	NFC tag
PD	Pressure sensor (High)
PMV1	Pulse motor valve (Main)
PMV2	Pulse motor valve (Sub)
PMV4	Pulse motor valve (Sub cool)
PS	Pressure sensor (Low)
RB	Rush current protect resistor
SV2,SV3D,SV3F	2-way valve coil
SV41,SV5B	Rotary switch
SW01,SW02,SW03	Push button switch
SW04,SW05,SW06	Dip switch
SW100,SW101,SW102	Terminal block(Power supply)
SW103,SW104,SW105	Discharge temp. sensor
SW106,SW800	Heat exchange temp. sensor
TB1	Gas temp. sensor
TE1,TE2	Oil temp. sensor
TG1,TG2	Liquid temp. sensor
TK1	Air temp. sensor
TL1,TL2,TL3	Suction temp. sensor
TS1,TS2,TS3	

Temperature sensor color I/D


Symbol	Connector		Wire mark (Sensor holder) color (wire color)
	No.	color	
TD1	CN502	WHI	YEL (BLK)
TE1	CN381	WHI	— (BLU)
TE2	CN381	WHI	— (RED)
TG1	CN381	WHI	GRN (BLK)
TG2	CN381	WHI	GRN-YEL (BLK)
TK1	CN502	WHI	— (BLK)
TL1	CN378	WHI	WHI (YEL)
TL2	CN378	WHI	— (GRY)
TL3	CN378	WHI	GRN (RED)
TO	CN507	YEL	— (BLK)
TS1	CN378	WHI	YEL (BLU)
TS2	CN506	BLK	— (GRY)
TS3	CN378	WHI	WHI-YEL (BLK)

Compressor terminal

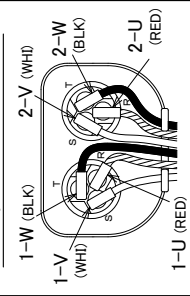


Field wiring
Protective earth
Terminal block
Terminal
Connector
P.C.Board

Color indication
RED:RED
WHI:WHITE
YEL:YELLOW
BLU:BLUE
BLK:BLACK
GRY:GRAY
ORN:ORANGE
GRN:GREEN
PUR:PURPLE
BRW:BROWN

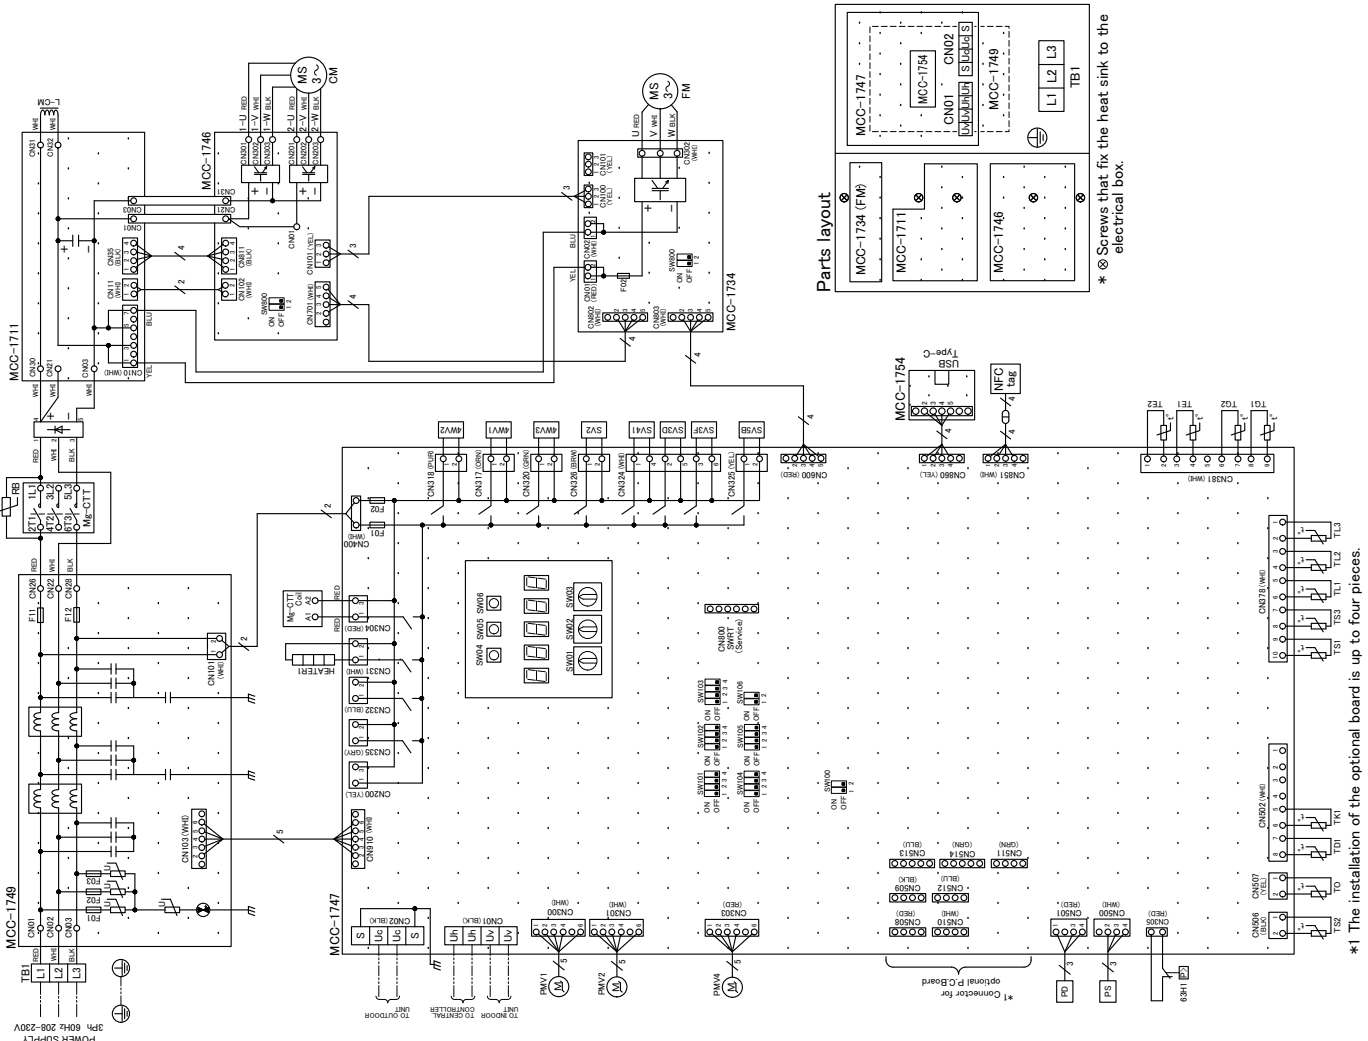

Parts layout

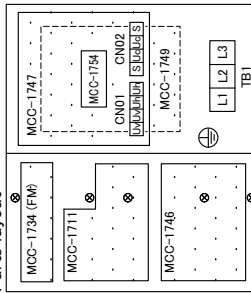

* Ⓢ Screws that fix the heat sink to the electrical box.


*1 The installation of the optional board is up to four pieces.

MMY-MUP1201FT9P-UL

P.C.Board		
Symbol	Parts name	
MCC-1711	Capacitor P.C.Board	
MCC-1734	Inverter P.C.Board (Fan)	
MCC-1746	Inverter P.C.Board (Compressor)	
MCC-1747	Interface Control P.C.Board	
MCC-1749	Noise filter P.C.Board	
MCC-1754	USB isolate P.C.Board	


Parts name		
Symbol	Parts name	
4WV1.4WV2.4WV3	4-way valve coil	
63H1	High pressure switch	
CM	Compressor	
CN**	Connector	
CN01.CN02	Terminal block(control wiring)	
(MCC-1734)	Fuse (Fan)	
F02	12.5A 450VDC	
(MCC-1747)	Fuse (Interface)	
F01.F02	T6.3A 250VAC	
(MCC-1749)	Fuse (Noise filter)	
F01.F02.F03	T6.3A 250VAC	
(MCC-1749)	Fuse (Noise filter)	
F11.F12	150A 250VAC	
FM1.FM2	Fan motor	
HEATER1	Compressor case heater	
L-CM	Reactor for compressor	
Mg-CTT1.Mg-CTT2	Magnet contactor	
NFC	NFC tag	
PD	Pressure sensor (High)	
PMV1	Pulse motor valve (Main)	
PMV2	Pulse motor valve (Sub(L))	
PMV3	Pulse motor valve (Sub(R))	
PMV4	Pulse motor valve (Sub cool)	
PS	Pressure sensor (Low)	
RB	Rush current protect resistor	
SV2.SV3D.SV3F	2-way valve coil	
SV41.SV5B	Rotary switch	
SW01.SW02.SW03	Push button switch	
SW04.SW05.SW06	Dip switch	
SW100.SW101.SW102	Terminal block (Power supply)	
SW103.SW104.SW105	Discharge temp. sensor	
SW106.SW800	Heat exchange temp. sensor	
TB1	Gas temp. sensor	
TD1	Oil temp. sensor	
TE1.TE2.TE3	Liquid temp. sensor	
TG1.TG2.TG3	Air temp. sensor	
TK1	Suction temp. sensor	
TL1.TL2.TL3		
TO		
TS1.TS2.TS3		

Temperature sensor color I/D		
Symbol	Connector	Wire mark (Sensor holder) color (wire color)
TD1	CN502	WHI
TE1	CN381	WHI
TE2	CN381	WHI
TE3	CN381	WHI
TG1	CN384	BLU
TG2	CN381	WHI
TG3	CN384	BLU
TK1	CN502	WHI
TL1	CN378	WHI
TL2	CN378	WHI
TL3	CN378	WHI
TO	CN507	WHI
TS1	CN378	WHI
TS2	CN506	BLK
TS3	CN378	WHI

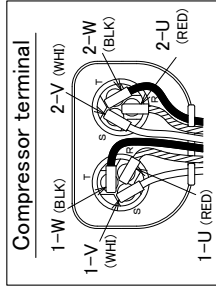

Field wiring
Protective earth
Terminal block
Terminal
Connector
P.C.Board

Color indication
RED-RED
WHI-WHITE
YEL-YELLOW
BLK-BLUE
BLK-BLACK
GRY-GRAY
ORN-ORANGE
GRN-GREEN
PUR-PURPLE
BRW-BROWN

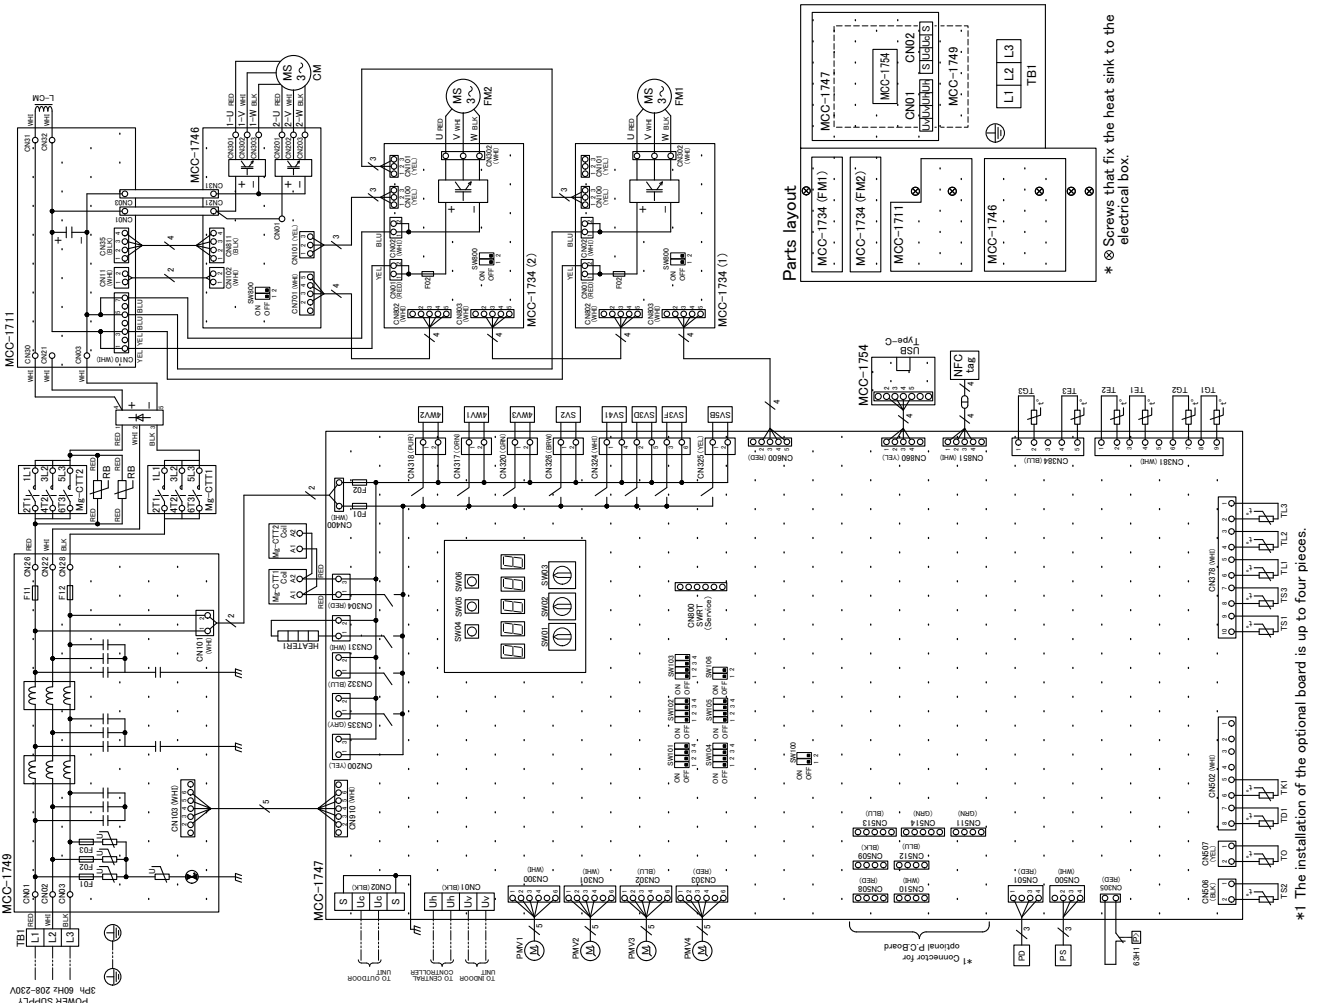







MMY-MUP1441FT9P-UL, MMY-MUP1681FT9P-UL, MMY-MUP096H1FT9PUL, MMY-MUP120H1FT9PUL

Temperature sensor color I/D

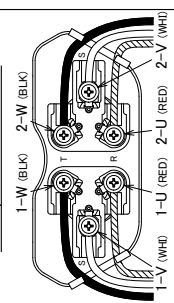Symbol	Connector		Wire mark (sensor holder) color (wire color)
	No.	color	
TD1	CN502	WHI	YEL (BLK)
TE1	CN381	WHI	– (BLU)
TE2	CN381	WHI	– (RED)
TE3	CN384	BLU	– (YEL)
TG1	CN381	WHI	GRN (BLK)
TG2	CN381	WHI	GRN-YEL (BLK)
TG3	CN384	BLU	WHI (BLK)
TK1	CN502	WHI	– (BLK)
TL1	CN378	WHI	WHI (YEL)
TL2	CN378	WHI	– (GRY)
TL3	CN378	WHI	GRN (RED)
TO	CN507	YEL	– (BLK)
TS1	CN378	WHI	YEL (BLU)
TS2	CN506	BLK	– (GRY)
TS3	CN378	WHI	WHI-YEL (BLK)


Compressor terminal



---	Field wiring
	Protective earth
	Terminal block
	Terminal
	Connector
	P.C. Board

- Color indication -

RED: RED
WH: WHITE
YEL: YELLOW
BLU: BLUE
BLK: BLACK
GRY: GRAY
ORN: ORANGE
GRN: GREEN
PUR: PURPLE
BRW: BROWN

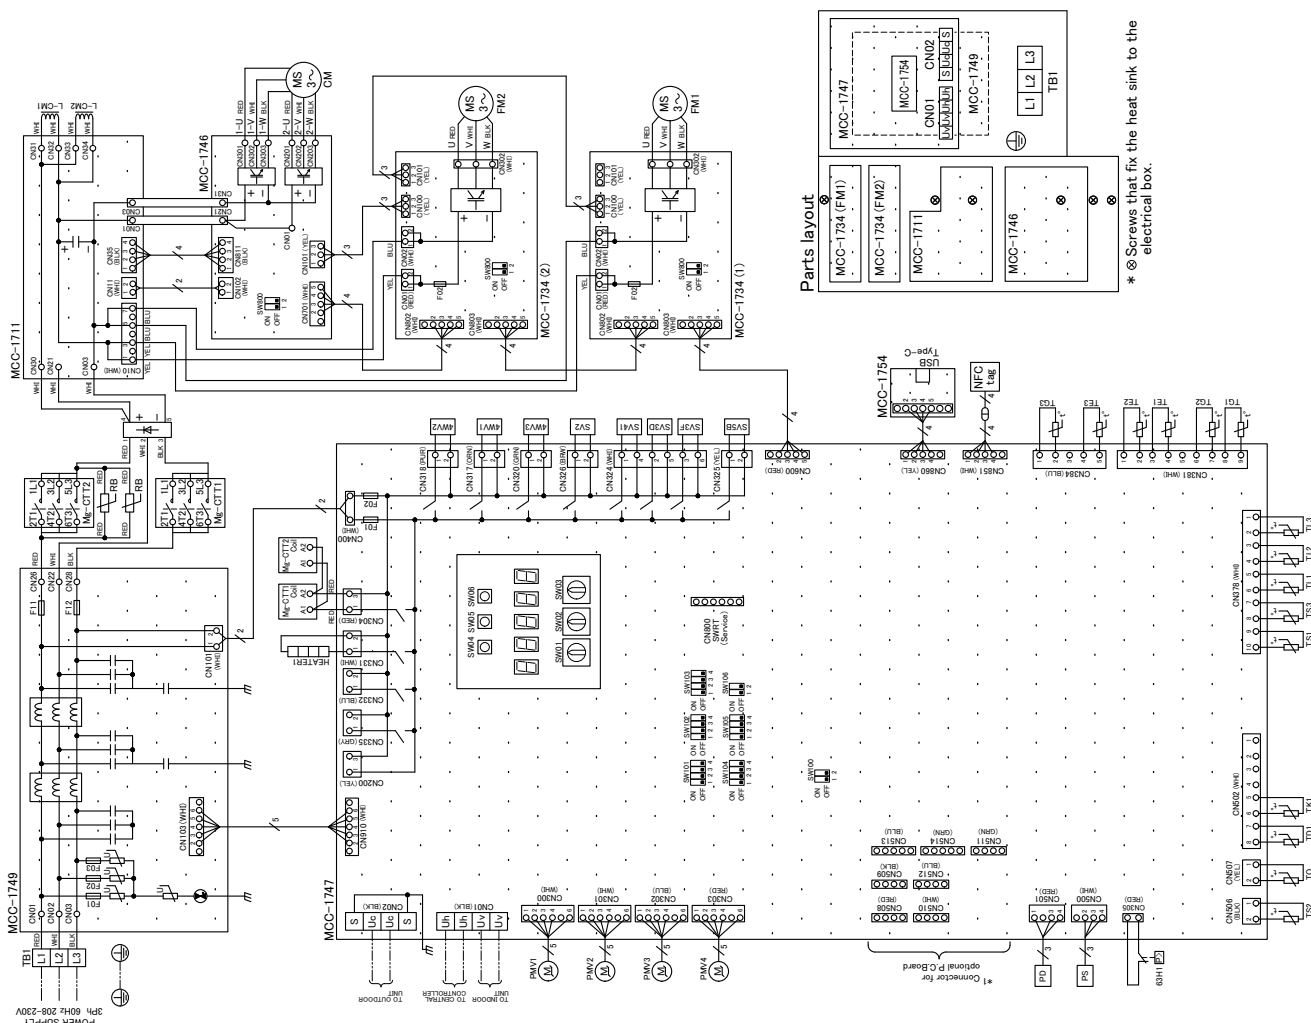


#1 The installation of the optional board is up to four pieces.

FS unit (Multi-port)

Model: RBM-Y0611FU4PUL, RBM-Y0611FU8PUL, RBM-Y0611FU12PUL


WIRING DIAGRAM

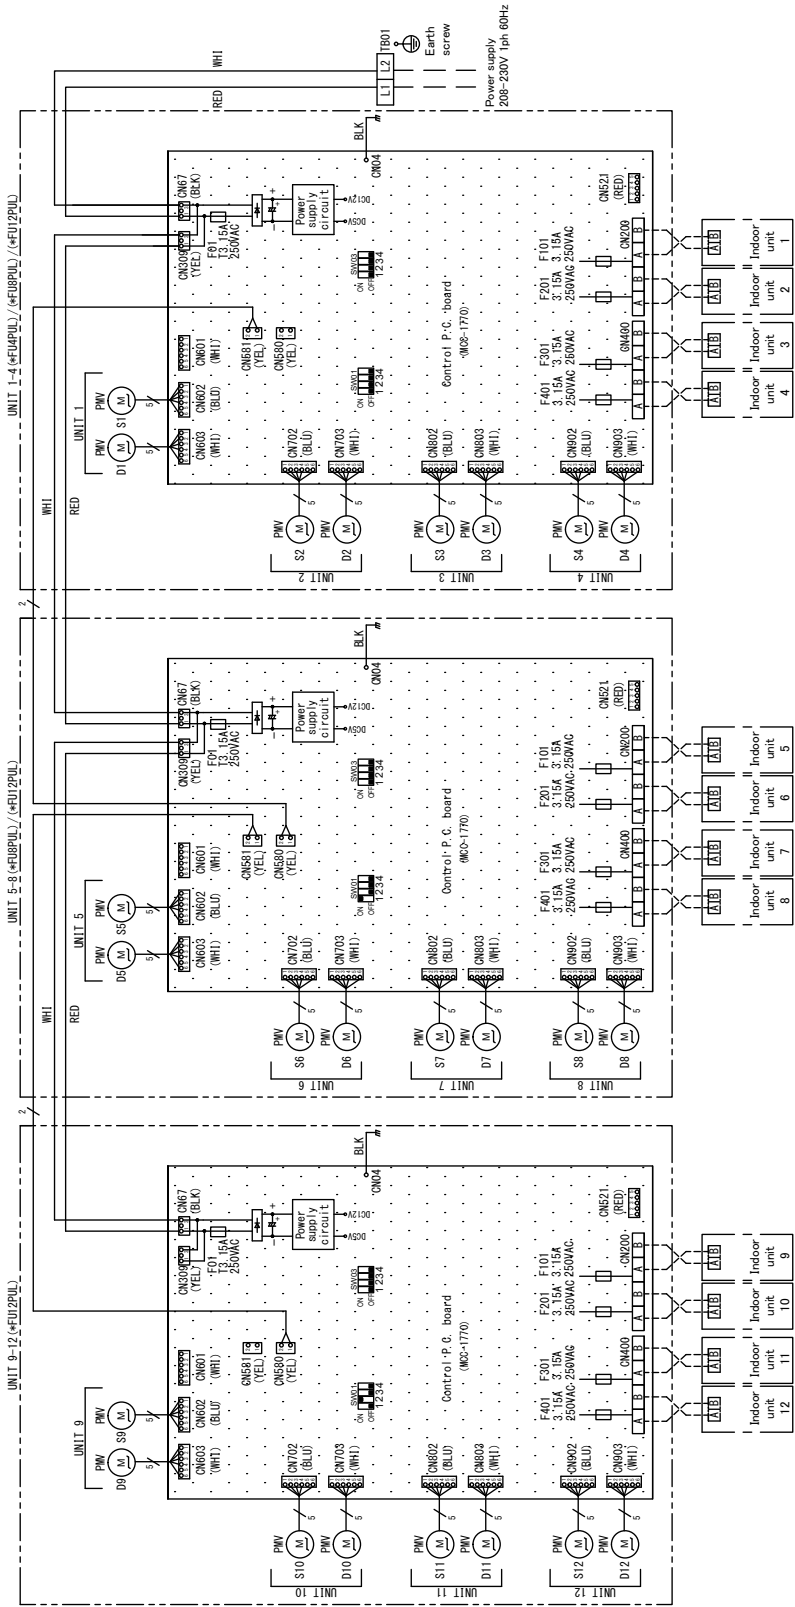

Symbol	Parts Name
CN**	Connector
F**	Fuse
PMV	Pulse Motor Valve
SW**	Dip switch
TS	Temp. sensor

Color indication	Parts Name
RED	RED
WHITE	WHITE
YELLOW	YELLOW
BLUE	BLUE
BLACK	BLACK
BROWN	BROWN


5. Unit No. of each model, as follow layouts.

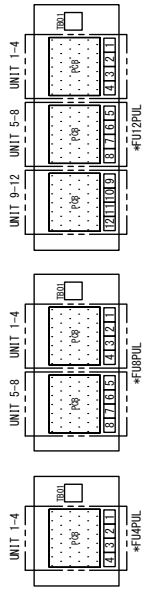

FS unit (Single-port)

Model: RBM-Y0611FUPUL, RBM-Y0961FUPUL

WIRING DIAGRAM

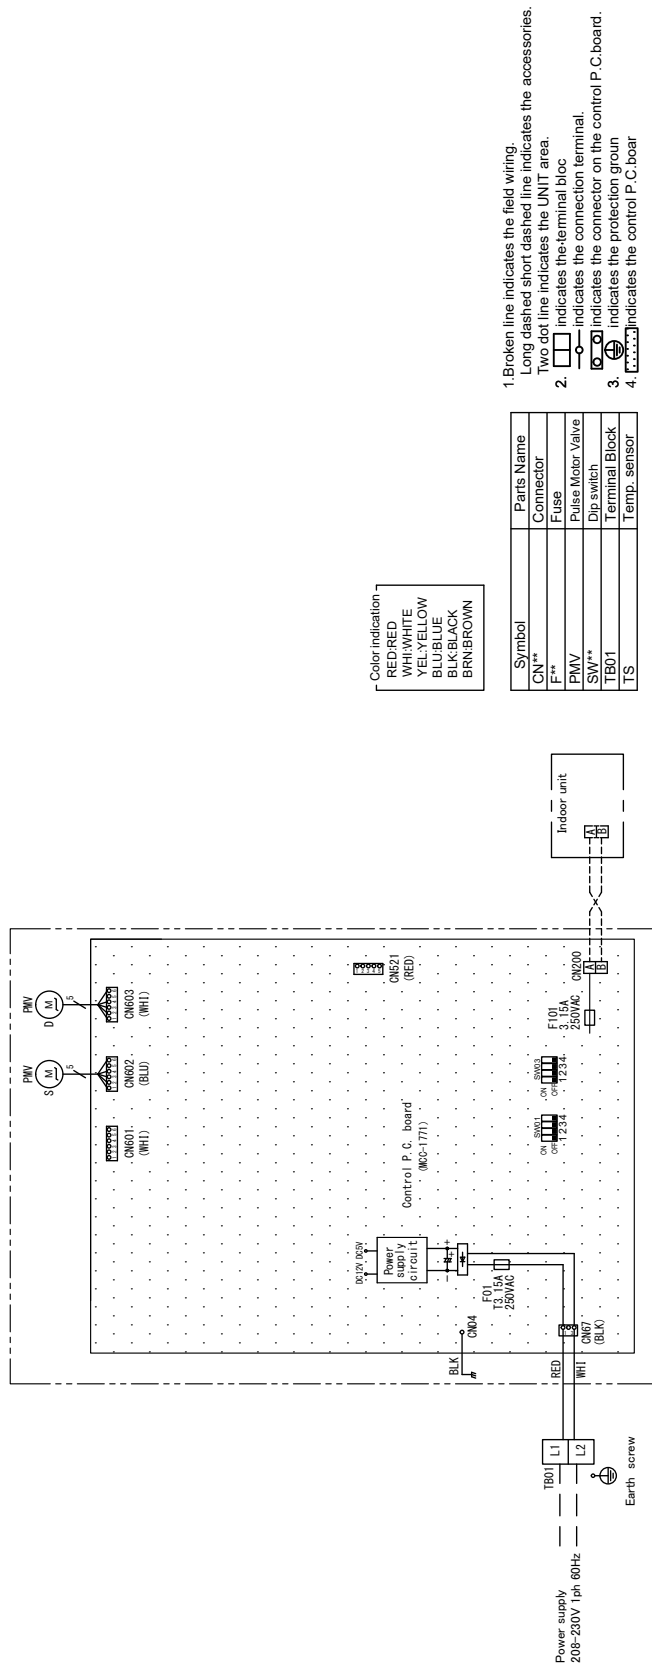

2. PARTS RATING

2-1. Outdoor Unit (MMY-MUP***1FT6/9P-UL)

No.	Part name	Model	Specifications	MMY-MUP0721FT6P-UL	MMY-MUP0961FT6P-UL	MMY-MUP072H1FT6PUL	MMY-MUP1201FT6P-UL	MMY-MUP1441FT6P-UL	MMY-MUP1681FT6P-UL	MMY-MUP096H1FT6PUL	MMY-MUP120H1FT6PUL	MMY-MUP1921FT6P-UL	MMY-MUP0721FT9P-UL	MMY-MUP0961FT9P-UL	MMY-MUP072H1FT9PUL	MMY-MUP1201FT9P-UL	MMY-MUP1441FT9P-UL	MMY-MUP1681FT9P-UL	MMY-MUP096H1FT9PUL	MMY-MUP120H1FT9PUL
1	Compressor	LA771A3TB-20M	Output:4.54kWx1	○																
1	Compressor	LA771A3TB-20M	Output:6.75kWx1		○															
1	Compressor	LA771A3TB-20M	Output:4.54kWx1			○														
1	Compressor	LA771A3TB-20M	Output:8.60kWx1				○													
1	Compressor	LA1201K4FB-10UC	Output:10.4kWx1					○												
1	Compressor	LA1201K4FB-10UC	Output:13.0kWx1						○											
1	Compressor	LA1201K4FB-10UC	Output:5.96kWx1							○										
1	Compressor	LA1201K4FB-10UC	Output:8.27kWx1								○									
1	Compressor	LA771A3TB-20M	Output:7.74kWx2									○								
1	Compressor	NA772A3TB-21M	Output:4.54kWx1										○							
1	Compressor	NA772A3TB-21M	Output:6.75kWx1											○						
1	Compressor	NA772A3TB-21M	Output:4.54kWx1												○					
1	Compressor	NA772A3TB-21M	Output:8.60kWx1													○				
1	Compressor	NA1201K4FB-10UC	Output:10.4kWx1														○			
1	Compressor	NA1201K4FB-10UC	Output:13.0kWx1															○		
1	Compressor	NA1201K4FB-10UC	Output:5.96kWx1																○	
1	Compressor	NA1201K4FB-10UC	Output:8.27kWx1																	○
2	4-way valve coil	SHF	AC208-230V,60Hz (4WV1,4WV2,4WV3)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
3	2-way valve coil	FDF	AC208-230V,60Hz (SV2,SV3D,SV41,SV42)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
3	2-way valve coil	TEV	AC208-230V,60Hz (SV3F,SV5B)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
4	Pulse motor valve coil	PAM	PMV1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
4	Pulse motor valve coil	TS1	PMV2,3	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
4	Pulse motor valve coil	UKV	PMV4	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
5	High-pressure SW	ACB-4UB7009W	OFF:602psi(4.15MPa),ON:464psi(3.2MPa)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
6	Pressure sensor(For high pressure)	NSK-BH038F-U919	0.5~4.3~4.5V/0~568psi(3.92MPa)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
7	Pressure sensor(For low pressure)	NSK-BH020F-U918	0.5~4.5V/0~290psi(2.0MPa)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
8	Fan motor	ICF-620A1000-1	DC530-620/1000W	○	○	○	○	○	○	○	○	○								
8	Fan motor	ICF-340A1000-1	DC280-340/1000W										○	○	○	○	○	○	○	○
9	Case heater(For comp.)	-	AC240V/29W	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
10	Fusible plug	-	163.4°F(73°C)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

2-1-1. Winding resistance of outdoor unit main parts

No.	Part name	Checking procedure							
1-1	Compressor (Model : LA771A3TB-20M)	Measure and compare each winding resistance by digital tester. <table><tr><th>Position</th><th>Resistance value</th></tr><tr><td>Red – White</td><td rowspan="3">0.242Ω ± 0.012</td></tr><tr><td>White – Black</td></tr><tr><td>Black – Red</td></tr></table> (all same resistance is ok.) 68°F(20°C)	Position	Resistance value	Red – White	0.242Ω ± 0.012	White – Black	Black – Red	
Position	Resistance value								
Red – White	0.242Ω ± 0.012								
White – Black									
Black – Red									
2-1	Compressor (Model : LA1201K4FB-10UC)	Measure and compare each winding resistance by digital tester. <table><tr><th>Position</th><th>Resistance value</th></tr><tr><td>Red – White</td><td rowspan="3">0.204Ω ± 0.01</td></tr><tr><td>White – Black</td></tr><tr><td>Black – Red</td></tr></table> (all same resistance is ok.) 68°F(20°C)	Position	Resistance value	Red – White	0.204Ω ± 0.01	White – Black	Black – Red	
Position	Resistance value								
Red – White	0.204Ω ± 0.01								
White – Black									
Black – Red									
3-1	Fan motor (Model : ICF-620A1000-1)	Measure and compare each winding resistance by digital tester. <table><tr><th>Position</th><th>Resistance value</th></tr><tr><td>Red – White</td><td rowspan="3">10.38Ω ± 1.04</td></tr><tr><td>White – Black</td></tr><tr><td>Black – Red</td></tr></table> (all same resistance is ok.) 68°F(20°C)	Position	Resistance value	Red – White	10.38Ω ± 1.04	White – Black	Black – Red	
Position	Resistance value								
Red – White	10.38Ω ± 1.04								
White – Black									
Black – Red									
1-2	Compressor (Model : NA772A3TB-21M)	Measure and compare each winding resistance by digital tester. <table><tr><th>Position</th><th>Resistance value</th></tr><tr><td>Red – Red</td><td rowspan="3">0.121 ± 0.03Ω</td></tr><tr><td>White – White</td></tr><tr><td>Black – Black</td></tr></table> (all same resistance is ok.) 68°F(20°C)	Position	Resistance value	Red – Red	0.121 ± 0.03Ω	White – White	Black – Black	
Position	Resistance value								
Red – Red	0.121 ± 0.03Ω								
White – White									
Black – Black									
2-2	Compressor (Model : NA1201K4FB-10UC)	Measure and compare each winding resistance by digital tester. <table><tr><th>Position</th><th>Resistance value</th></tr><tr><td>Red – Red</td><td rowspan="3">0.102 ± 0.03Ω</td></tr><tr><td>White – White</td></tr><tr><td>Black – Black</td></tr></table> (all same resistance is ok.) 68°F(20°C)	Position	Resistance value	Red – Red	0.102 ± 0.03Ω	White – White	Black – Black	
Position	Resistance value								
Red – Red	0.102 ± 0.03Ω								
White – White									
Black – Black									
3-2	Fan motor (Model : ICF-340A1000-1)	Measure and compare each winding resistance by digital tester. <table><tr><th>Position</th><th>Resistance value</th></tr><tr><td>Red – White</td><td rowspan="3">3.33 ± 0.34Ω</td></tr><tr><td>White – Black</td></tr><tr><td>Black – Red</td></tr></table> (all same resistance is ok.) 68°F(20°C)	Position	Resistance value	Red – White	3.33 ± 0.34Ω	White – Black	Black – Red	
Position	Resistance value								
Red – White	3.33 ± 0.34Ω								
White – Black									
Black – Red									
4	PMV (Pulse Motor Valve) coil (Model : PQ-M10012*) (Model : UKV-A376)	Measure each winding resistance by digital tester. <table><tr><th>Position</th><th>Resistance value</th></tr><tr><td>Black - Gray (COM)</td><td rowspan="4">46Ω ± 4</td></tr><tr><td>Yellow - Gray (COM)</td></tr><tr><td>Red - Gray (COM)</td></tr><tr><td>Orange - Gray (COM)</td></tr></table> 68°F(20°C)	Position	Resistance value	Black - Gray (COM)	46Ω ± 4	Yellow - Gray (COM)	Red - Gray (COM)	Orange - Gray (COM)
Position	Resistance value								
Black - Gray (COM)	46Ω ± 4								
Yellow - Gray (COM)									
Red - Gray (COM)									
Orange - Gray (COM)									

No.	Part name	Checking procedure							
5	PMV (Pulse Motor Valve) coil (Model : PAM-MD12TF*)	Measure each winding resistance by digital tester. <table><tr><th>Position</th><th>Resistance value</th></tr><tr><td>White - Red (COM)</td><td rowspan="4">100Ω ± 10</td></tr><tr><td>Yellow - Red (COM)</td></tr><tr><td>Orange - Red (COM)</td></tr><tr><td>Blue - Red (COM)</td></tr></table> 68°F(20°C)	Position	Resistance value	White - Red (COM)	100Ω ± 10	Yellow - Red (COM)	Orange - Red (COM)	Blue - Red (COM)
Position	Resistance value								
White - Red (COM)	100Ω ± 10								
Yellow - Red (COM)									
Orange - Red (COM)									
Blue - Red (COM)									
6	4-way valve coil (Model : SQ-A2522G*)	Measure each winding resistance by digital tester. <table><tr><th>Resistance value</th></tr><tr><td>1707Ω ± 10%</td></tr></table> 68°F(20°C)	Resistance value	1707Ω ± 10%					
Resistance value									
1707Ω ± 10%									
7	2-way valve coil (Model : FQ-A0520D*)	Measure each winding resistance by digital tester. <table><tr><th>Resistance value</th></tr><tr><td>1830Ω ± 10%</td></tr></table> 68°F(20°C)	Resistance value	1830Ω ± 10%					
Resistance value									
1830Ω ± 10%									
8	2-way valve coil (Model : TEV-SMOAQ2247B1)	Measure each winding resistance by digital tester. <table><tr><th>Resistance value</th></tr><tr><td>1411Ω ± 7%</td></tr></table> 68°F(20°C)	Resistance value	1411Ω ± 7%					
Resistance value									
1411Ω ± 7%									

2-2. Inverter Assembly


No.	Part name	Model	Specifications	MMY-MUP0721FT6P-JL	MMY-MUP0961FT6P-JL	MMY-MUP1201FT6P-JL	MMY-MUP1441FT6P-JL	MMY-MUP1681FT6P-JL	MMY-MUP1921FT6P-JL	MMY-MUP072H1FT6PUL	MMY-MUP096H1FT6PUL	MMY-MUP120H1FT6PUL	MMY-MUP0721FT9P-JL	MMY-MUP0961FT9P-JL	MMY-MUP1201FT9P-JL	MMY-MUP1441FT9P-JL	MMY-MUP1681FT9P-JL	MMY-MUP072H1FT9PUL	MMY-MUP096H1FT9PUL	MMY-MUP120H1FT9PUL
1	Power supply terminal block	HP-T3015-31-3P-L3S	AC600V/100A, 3P	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
2	Noise Filter P.C. board (1)	MCC-1749	—	○	○	○	○	○	○	○	○	○								
3	Noise Filter P.C. board (2)	MCC-1749	—										○	○					○	
3	Noise Filter P.C. board (3)	MCC-1749	—												○	○	○	○	○	○
4	Line filter	—	0.4mH / 50A										○	○					○	
5	Line filter	—	0.9mH / 50A	○	○	○	○	○	○	○	○	○			○	○	○	○	○	○
6	Interface P.C. board	MCC-1747	—	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
7	Inverter P.C. board for Compressor (1)	MCC-1729	50A	○	○	○			○	○										
8	Inverter P.C. board for Compressor (2)	MCC-1729	75A				○	○			○	○								
7	Inverter P.C. board for Compressor (3)	MCC-1746	50A										○	○	○			○		
8	Inverter P.C. board for Compressor (4)	MCC-1746	75A													○	○		○	○
9	Capacitor P.C. board (1)	MCC-1711	—										○	○	○			○		
10	Capacitor P.C. board (2)	MCC-1711	—													○	○		○	○
11	Inverter P.C. board for Fan (1)	MCC-1734	—	○	○	○	○	○	○	○	○	○								
11	Inverter P.C. board for Fan (2)	MCC-1734	—										○	○	○	○	○	○	○	○
12	FUSE	CR2L-150/UL	150A / AC250V												○	○	○		○	○
13	DIODE	DF60LB80	60A / 800V										○	○	○			○		
14	DIODE	DF100LA80	100A / 800V														○	○	○	○
15	Magnet Contactor	FC-1SUL	—	○	○	○	○	○	○	○	○	○			○	○	○		○	○
16	Magnet Contactor	FC-2SUL	—										○	○					○	
17	PTC Thermistor	MZ32-101RMAD01E	13A / AC500V	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

2-3. Flow Selector unit (Multi-port , Single-port)


No.	Parts Name	Model	Specifications	FS unit (Multi-port)			FS unit (Single-port)	
				RBM-Y0611FU4PUL	RBM-Y0611FU8PUL	RBM-Y0611FU12PUL	RBM-Y0611FUPUL	RBM-Y0961FUPUL
1	Pulse motor valve coil	PAM-MD12TF-305 PMV-D	DC12V, Connector : White	○	○	○	○	○
		PAM-MD12TF-306 PMV-S	DC12V, Connector : Blue	○	○	○	○	○
2	P.C. board	MCC-1770	-	○	○	○		
		MCC-1771	-				○	○

2-4. Parts Layout in Outdoor Unit

Standard 6, 8 ton
High heat 6 ton

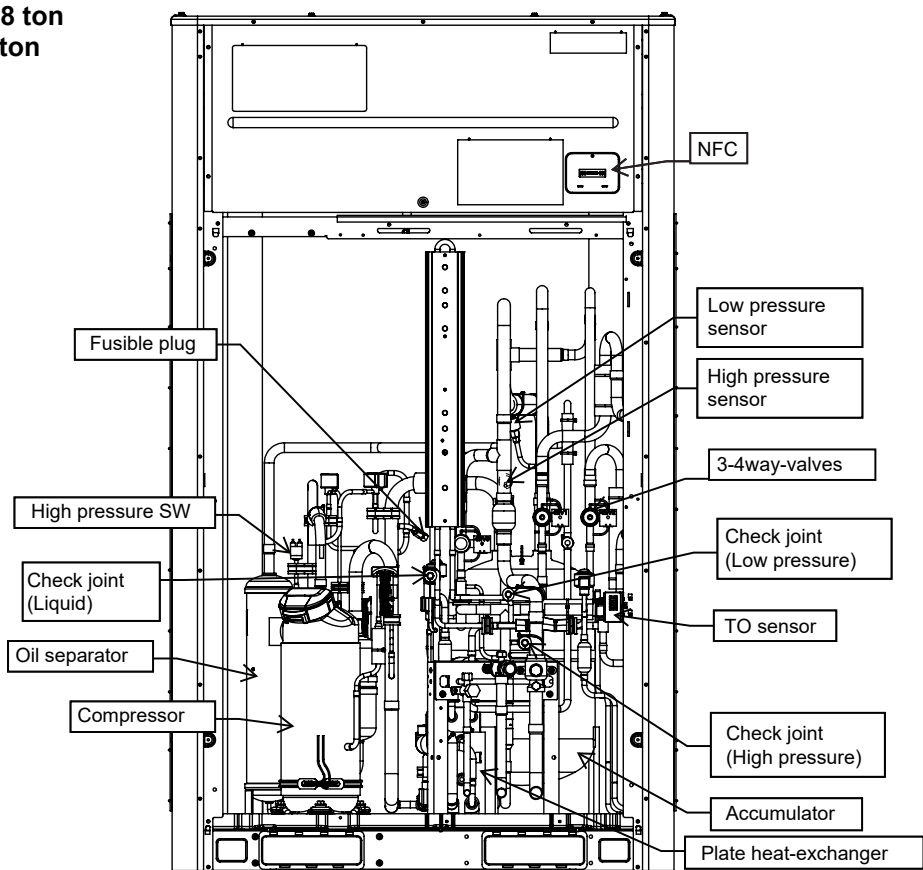


Standard 10 ton

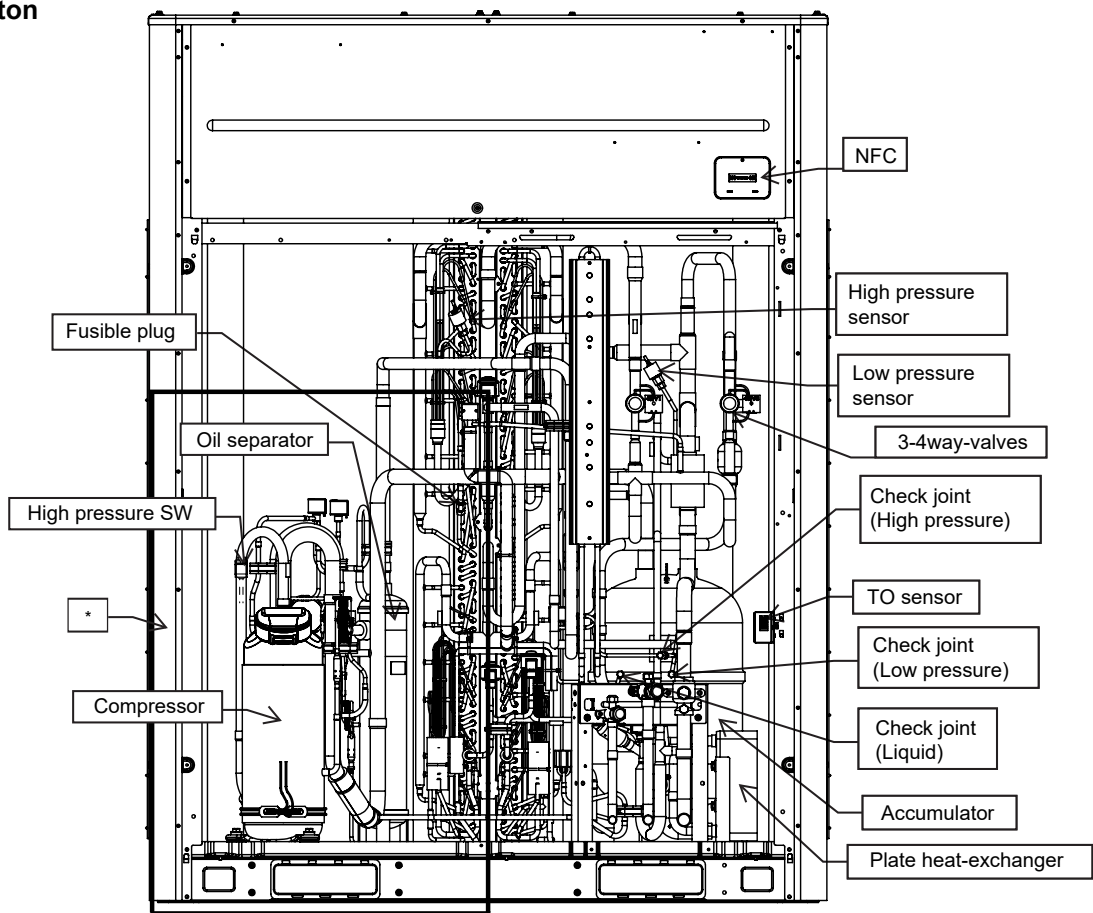


Standard 12, 14 ton
High heat 8, 10 ton

* The parts layout other than* is the same as standard 10ton.

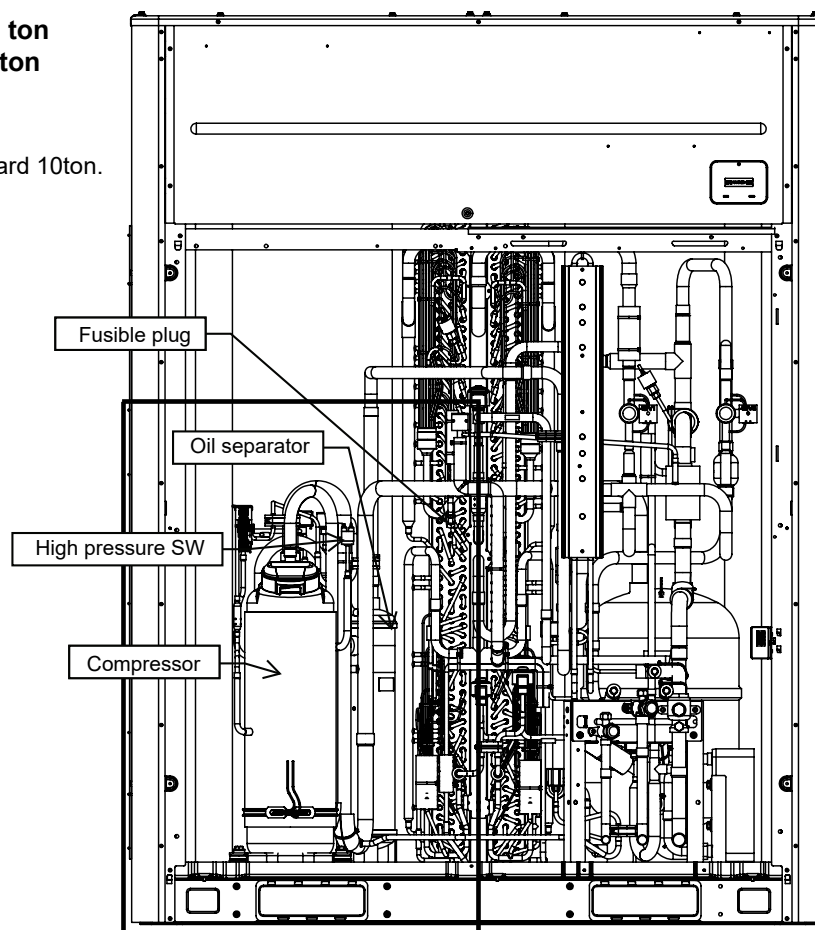

Standard 16 ton

* The parts layout other than* is the same as standard 10ton.

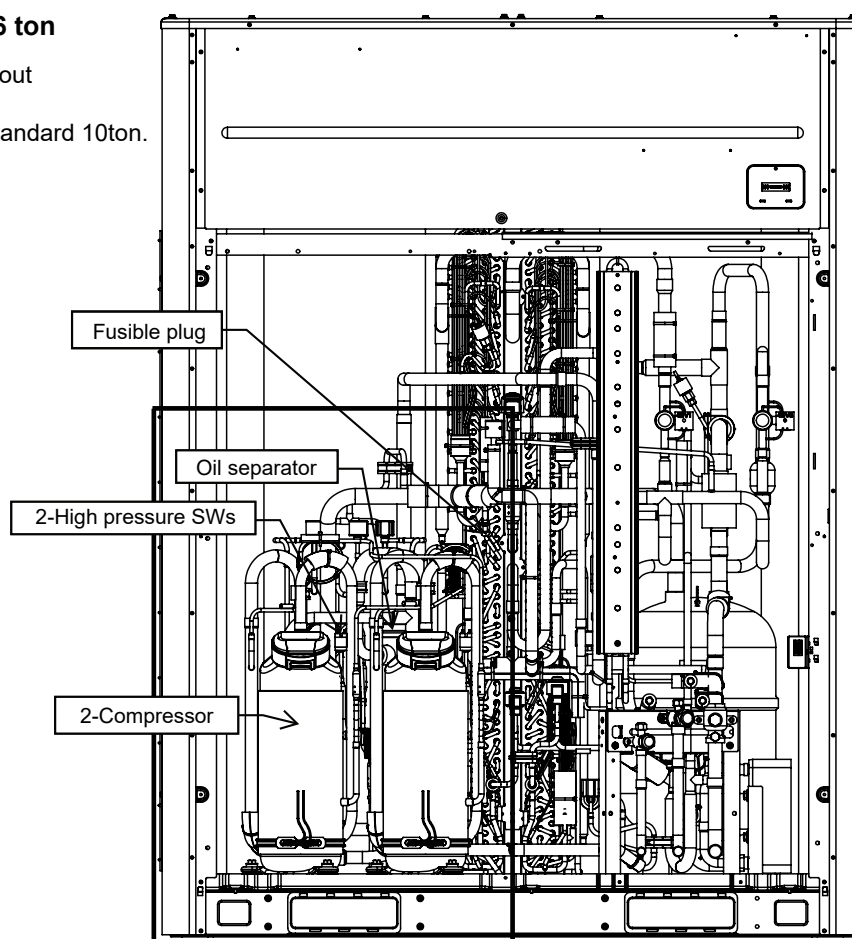


2-5. Parts Layout in Inverter Assembly


Standard 6, 8ton

High heat 6ton

Model: MMY-MUP0721FT6*, MUP0961FT6*, MUP072H1FT6*

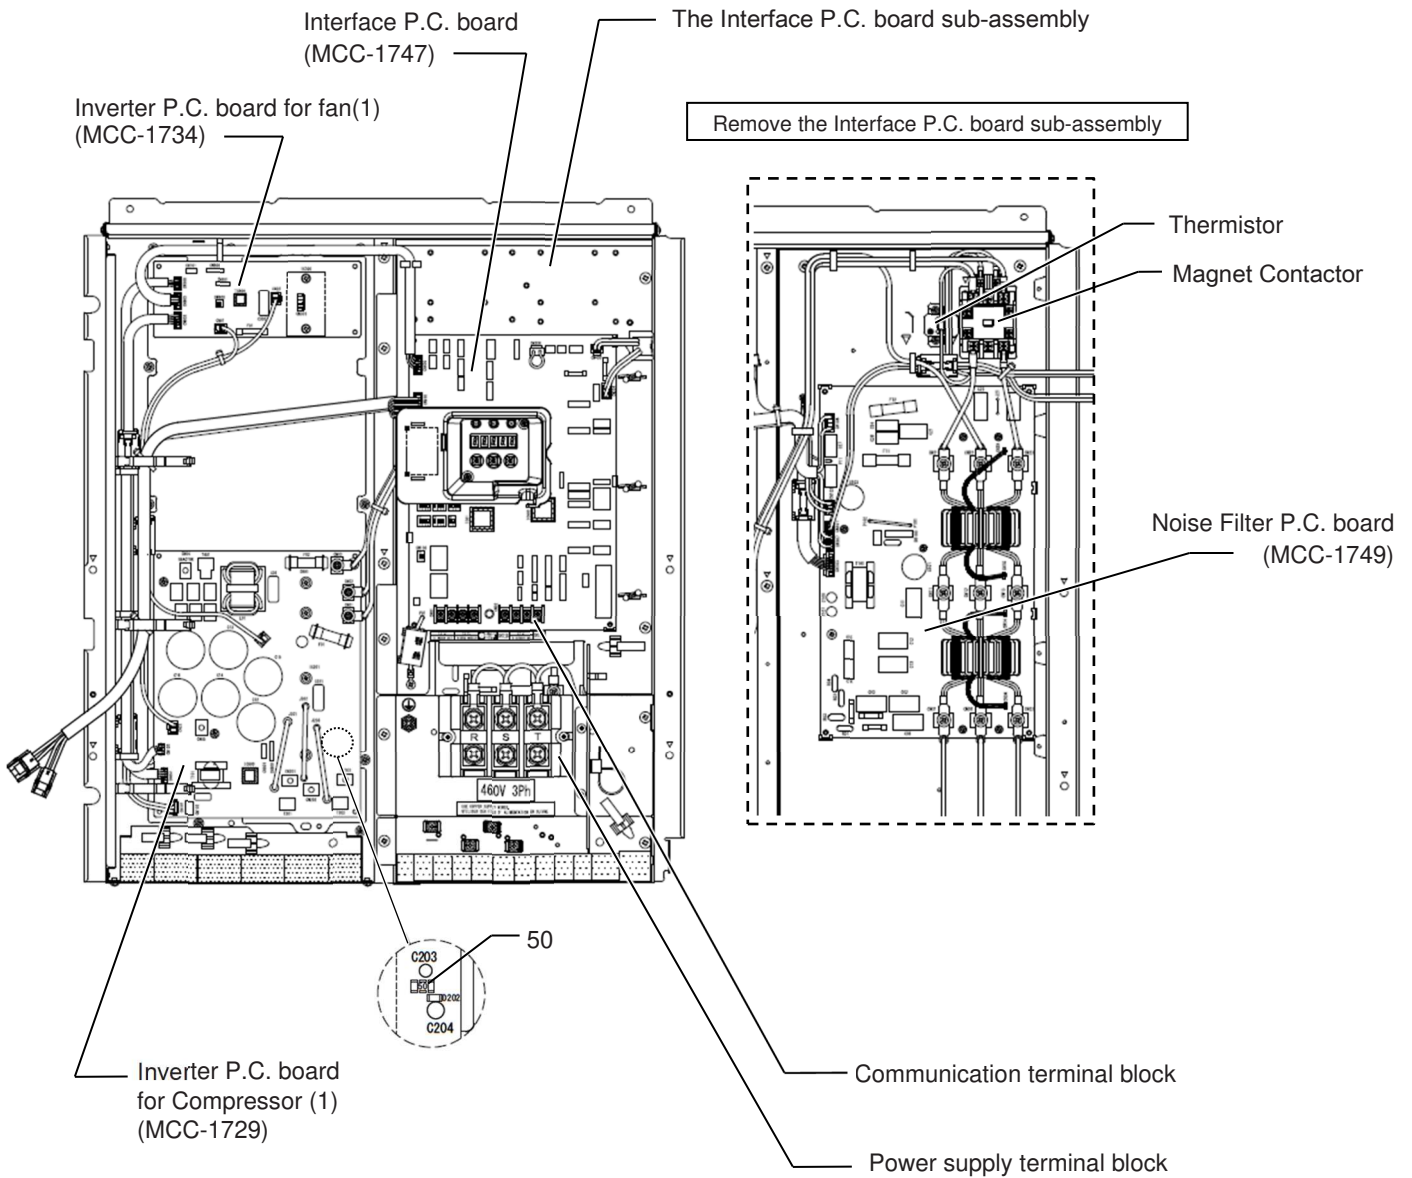


Standard 10 ton
Model: MMY-MUP1201FT6*

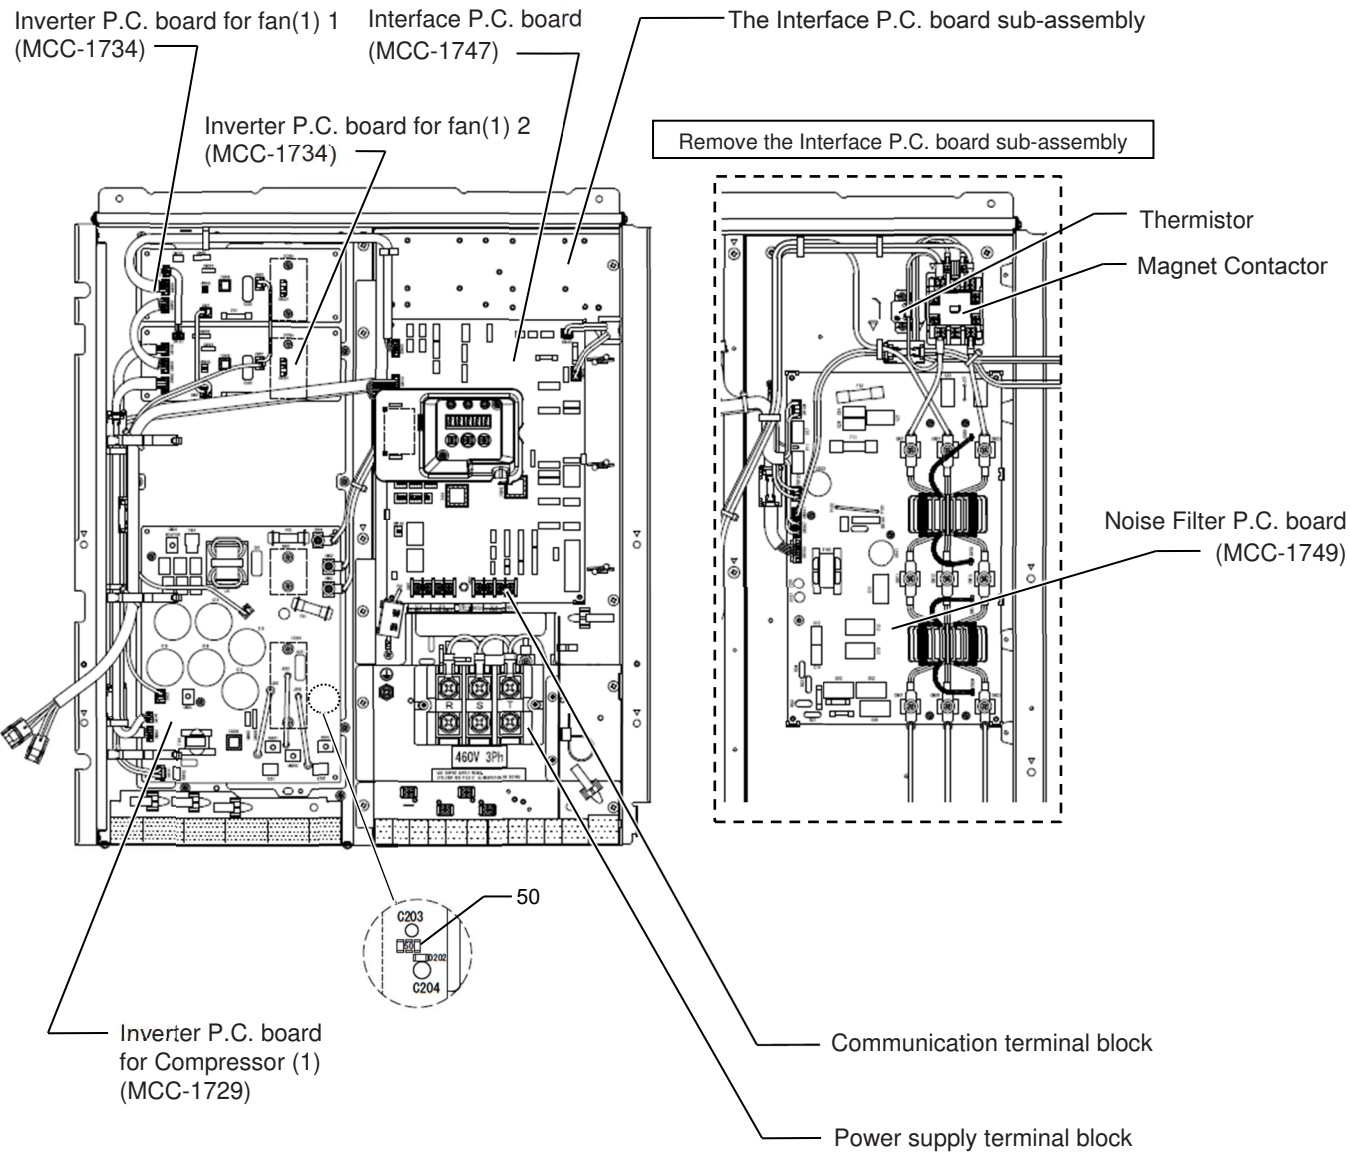


Standard 12, 14 ton

High heat 8, 10 ton

Model: MMY-MUP1441FT6*, MUP1681FT6*, MUP096H1FT6*, MUP120H1FT6*

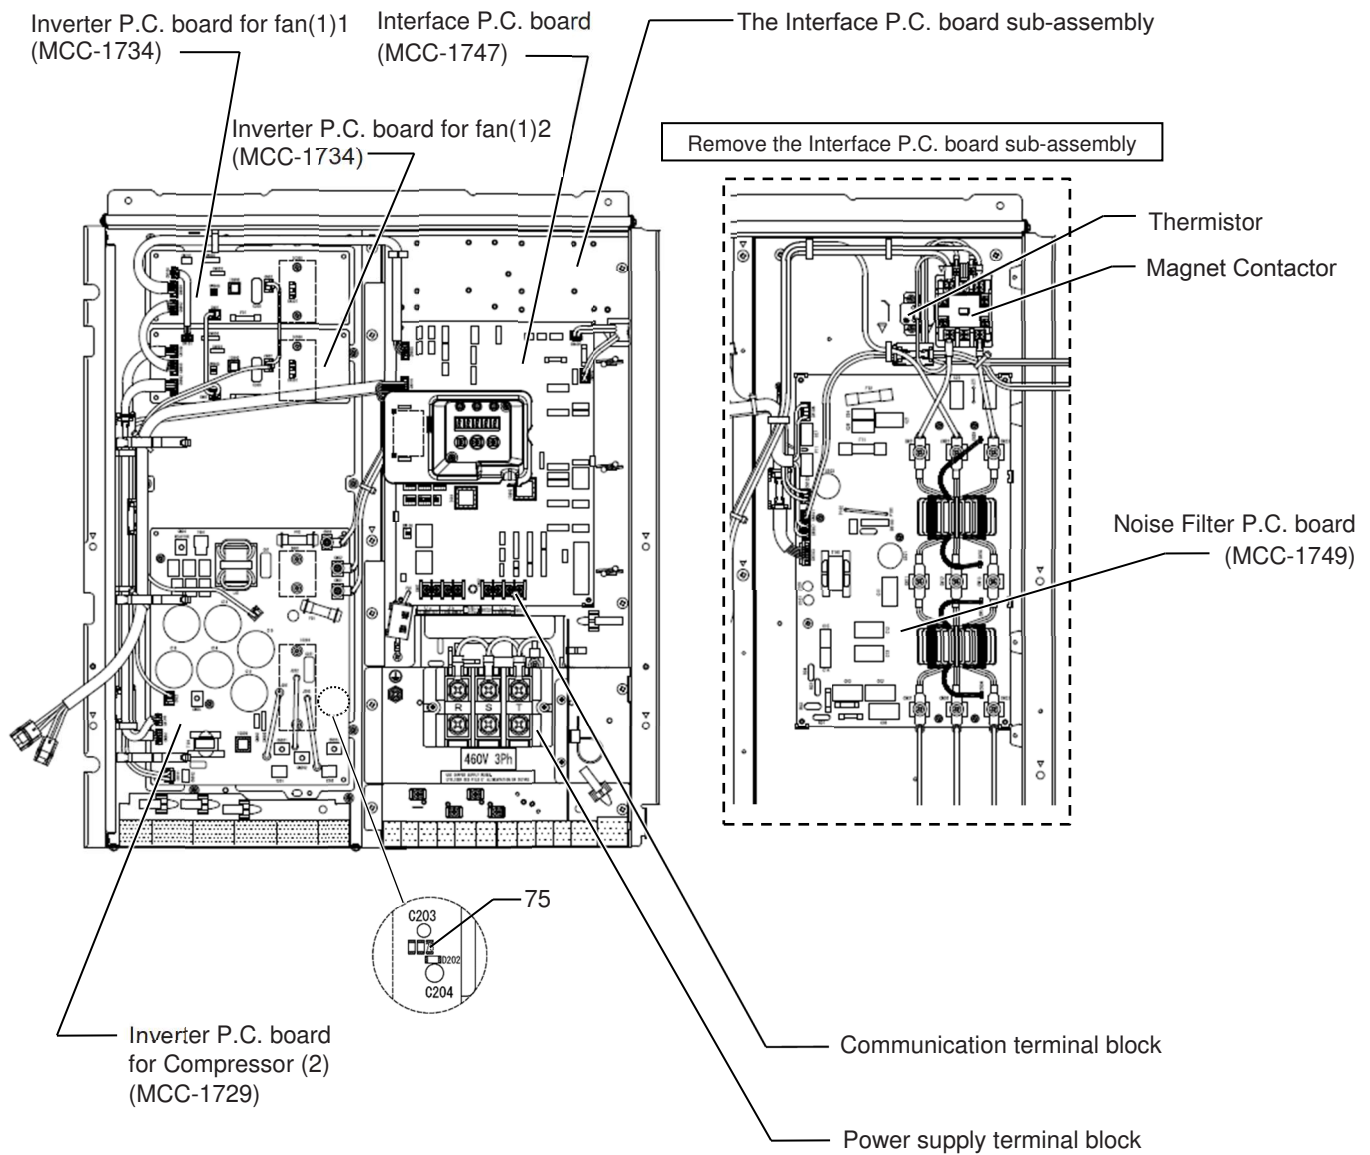


Standard 16 ton
Model: MMY-MUP1921FT6*

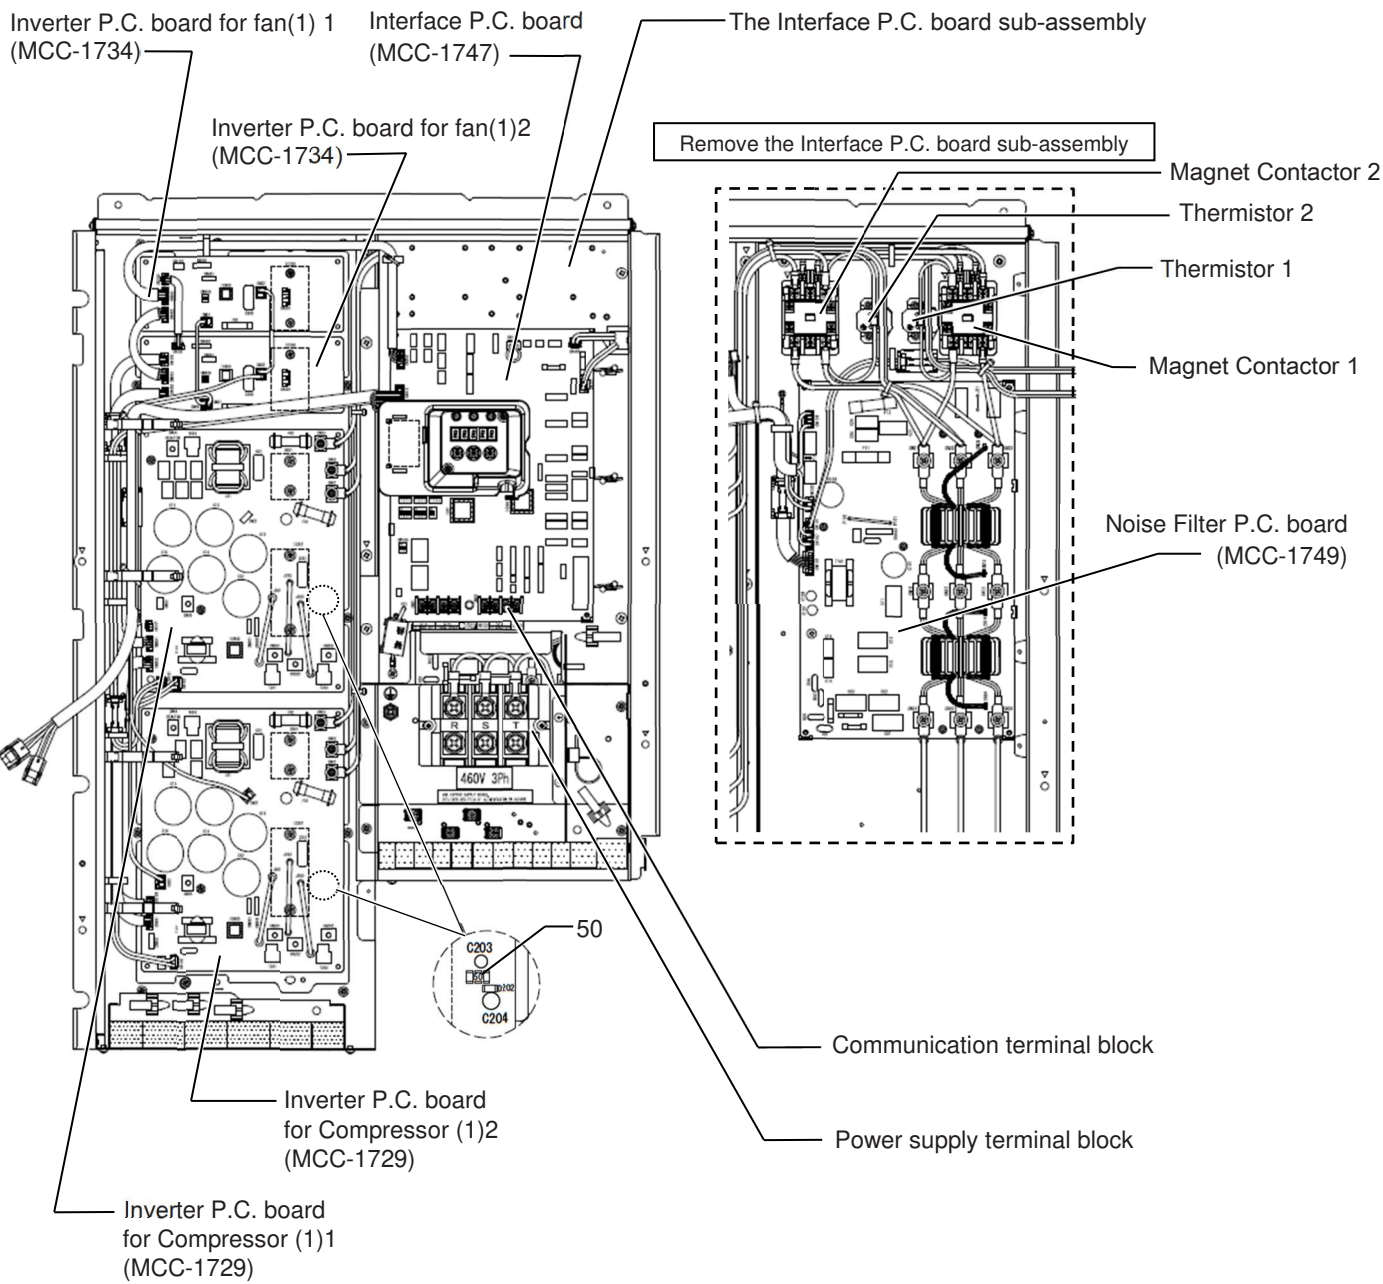


Standard 6, 8 ton

High heat 6 ton

Model: MMY-MUP0721FT9*, MUP0961FT9*, MUP072H1FT9*

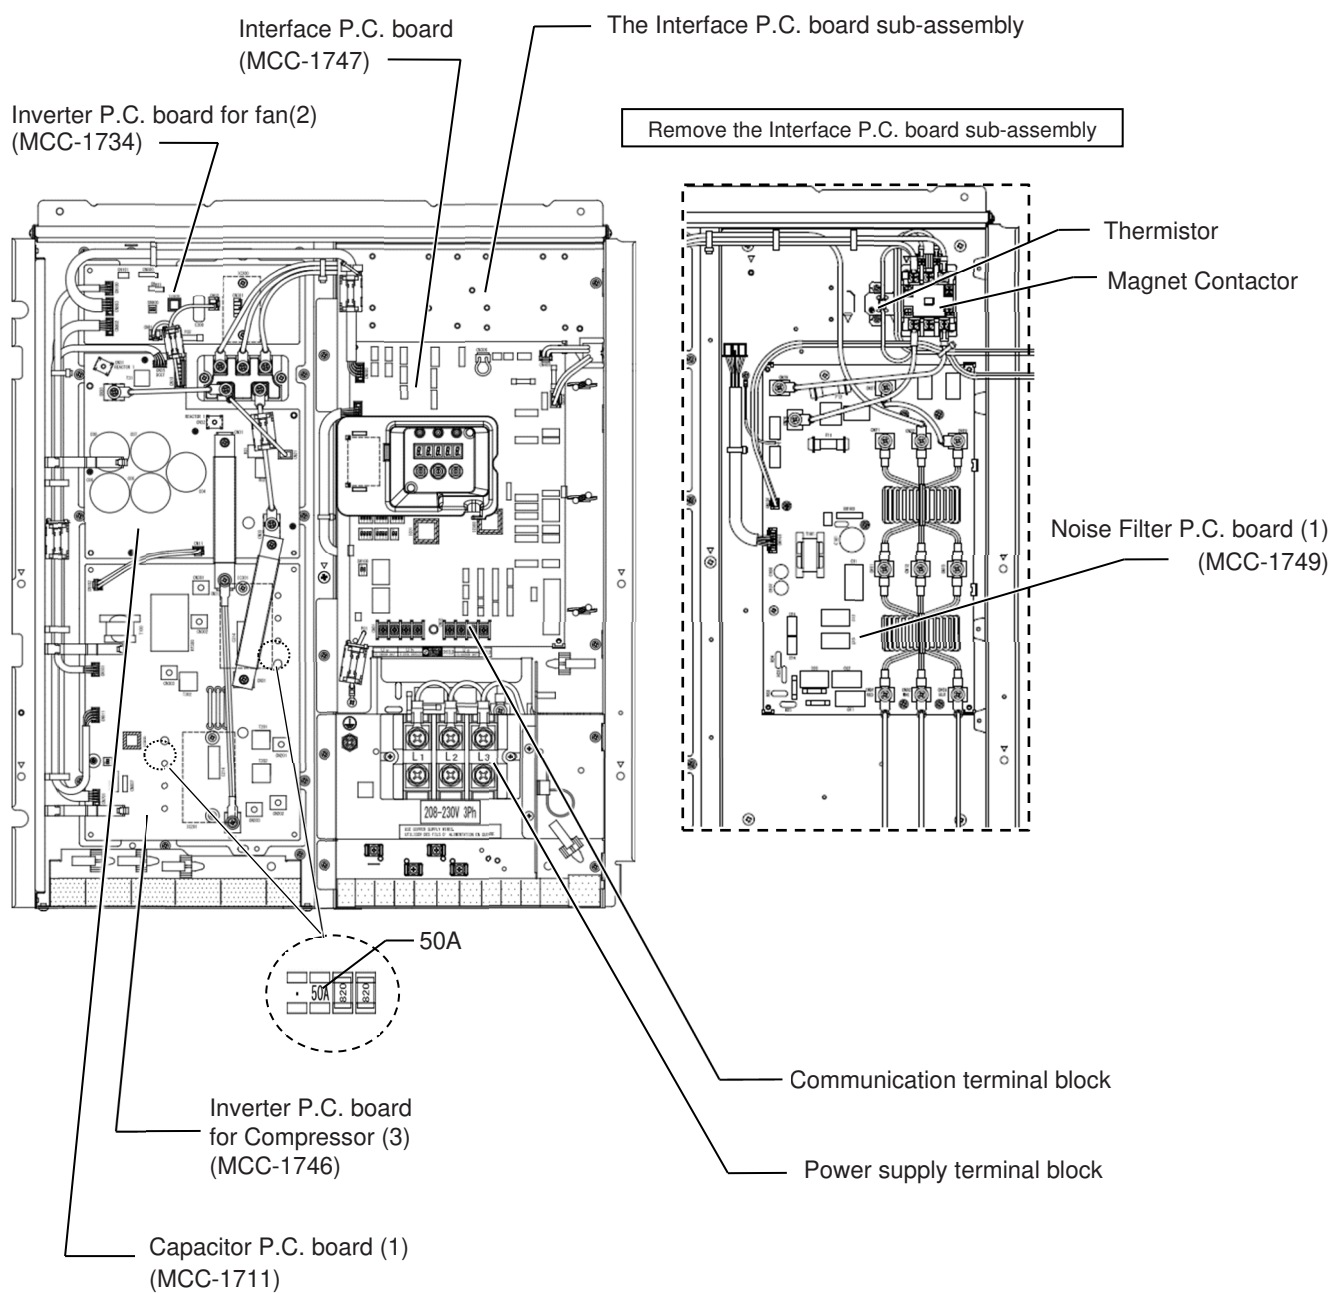


Standard 10 ton
Model: MMY-MUP1201FT9*

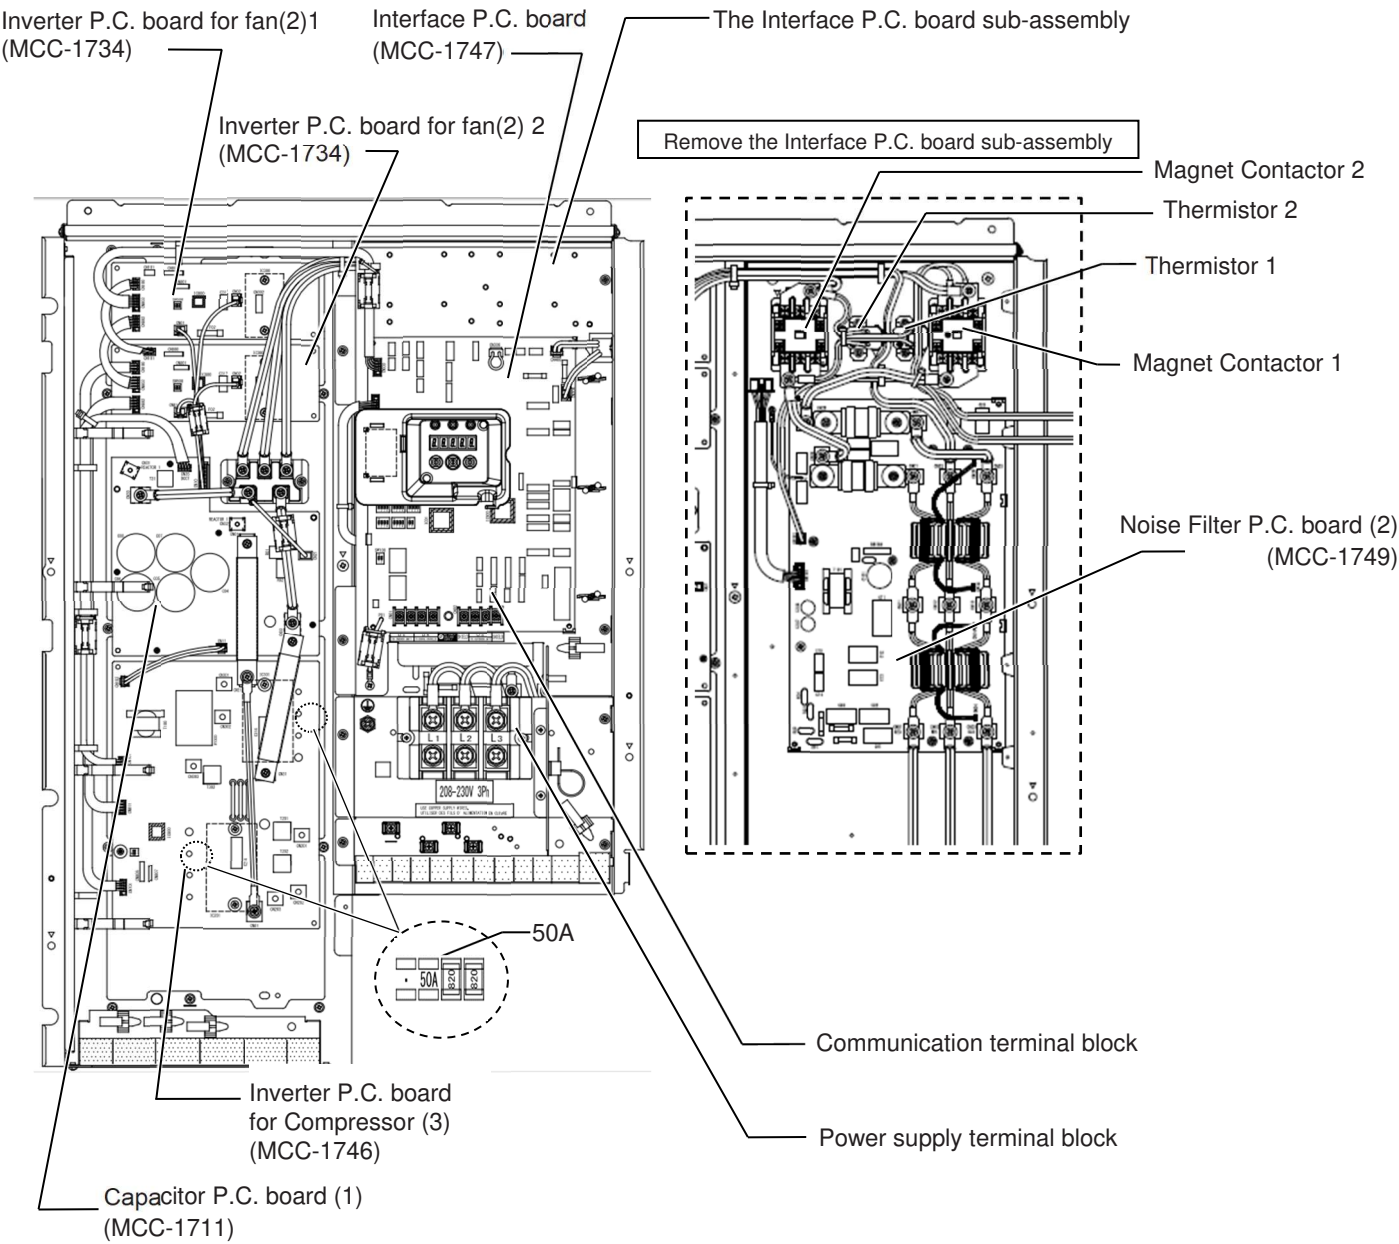

Standard 12, 14 ton

High heat 8, 10 ton


Model: MMY-MUP1441FT9*, MUP1681FT9*, MUP096H1FT9*, MUP120H1FT9*

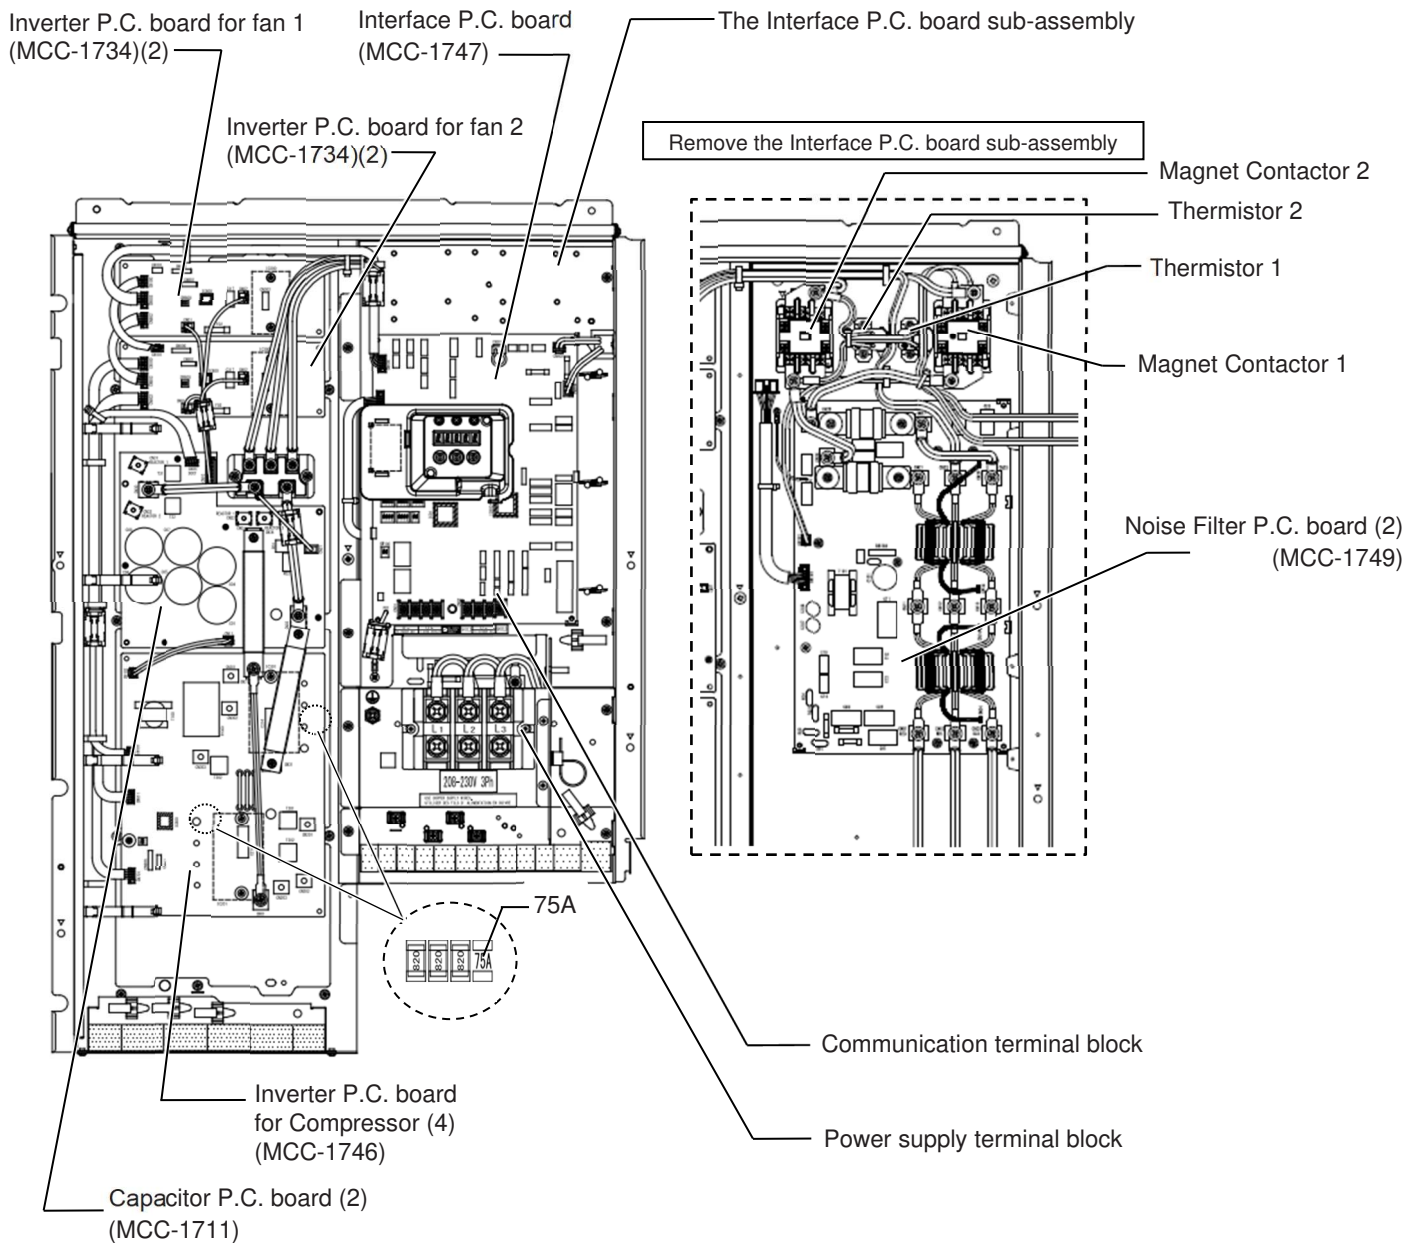

2-6. Outdoor (Inverter) Print Circuit Board


2-6-1. Interface P.C. board (MCC-1747)

<Target model : All model>

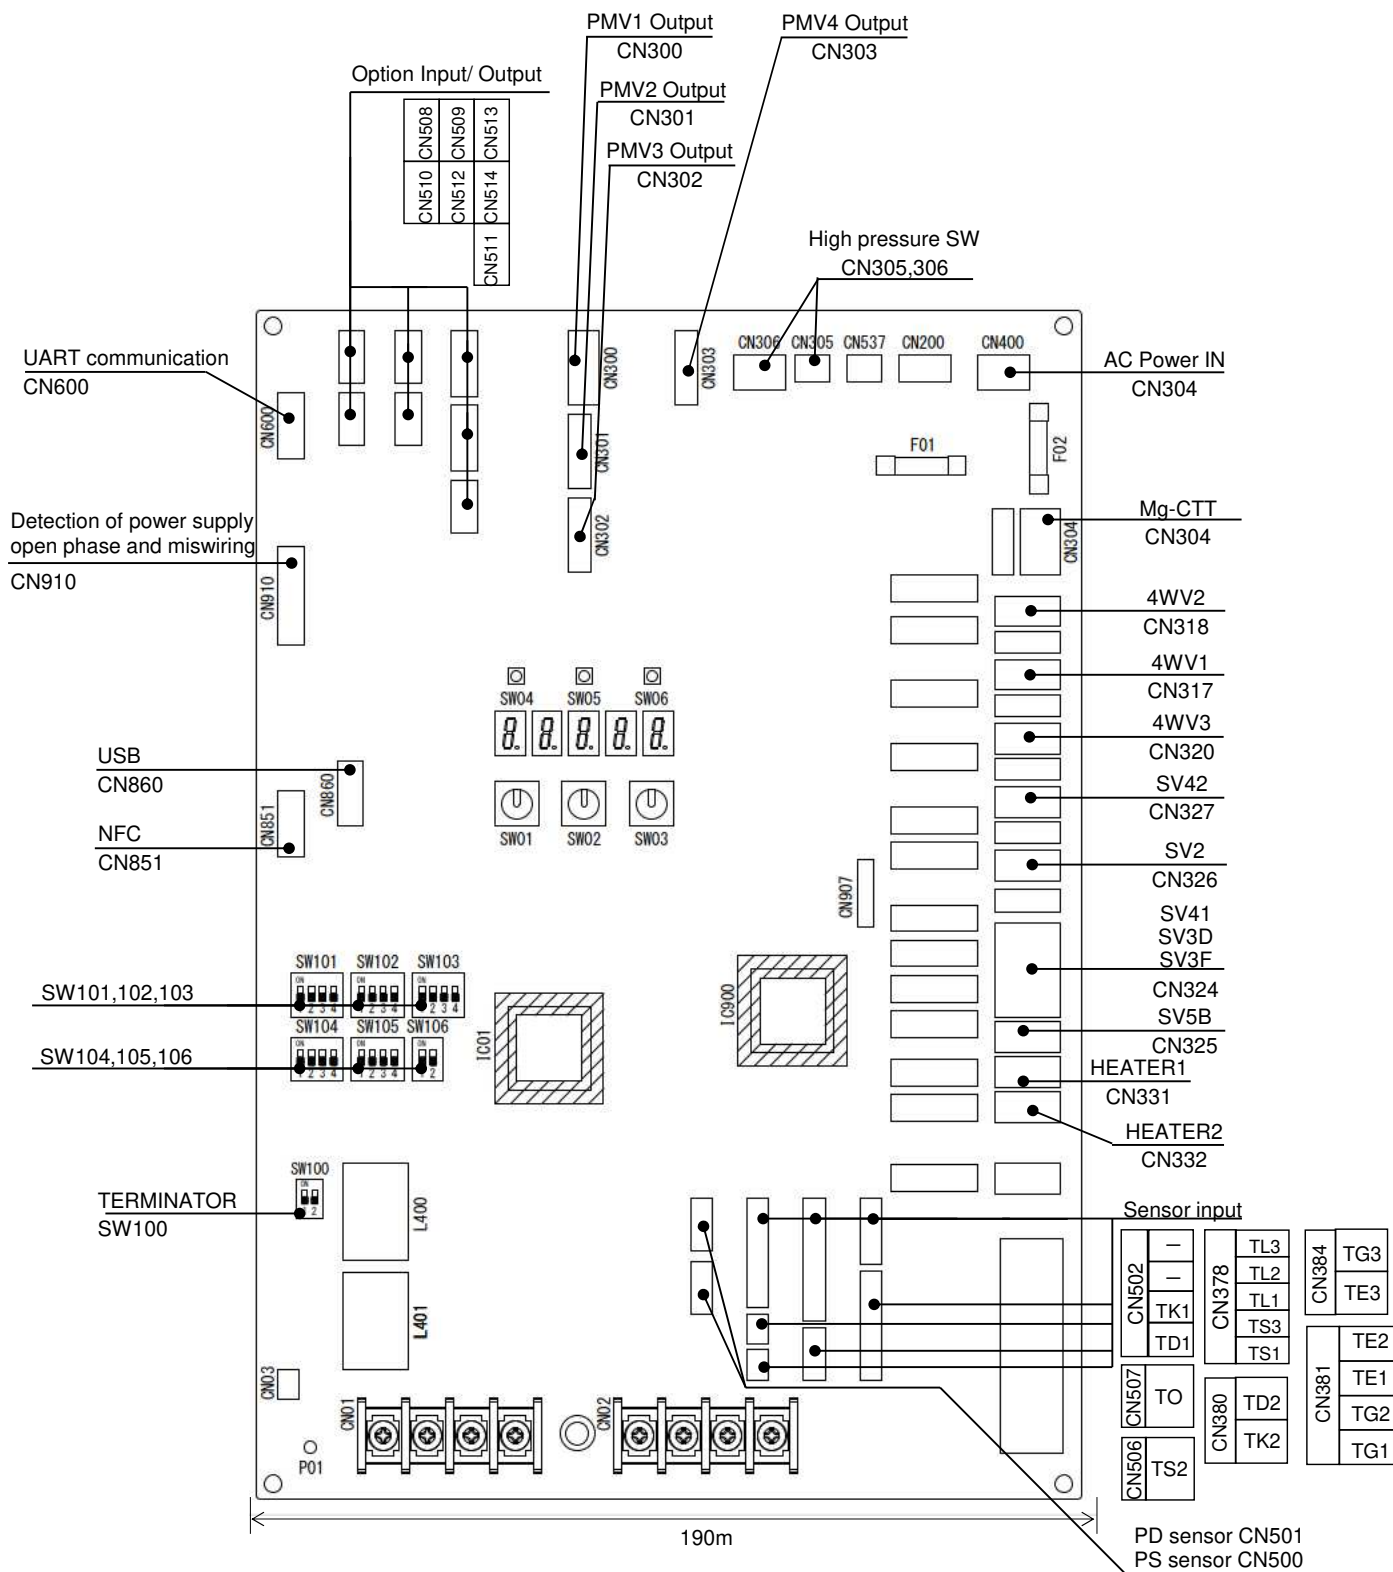

2-6-2(1). Noise Filter P.C. board (MCC-1749)

<Target model : MMY-MUP****FT6*>

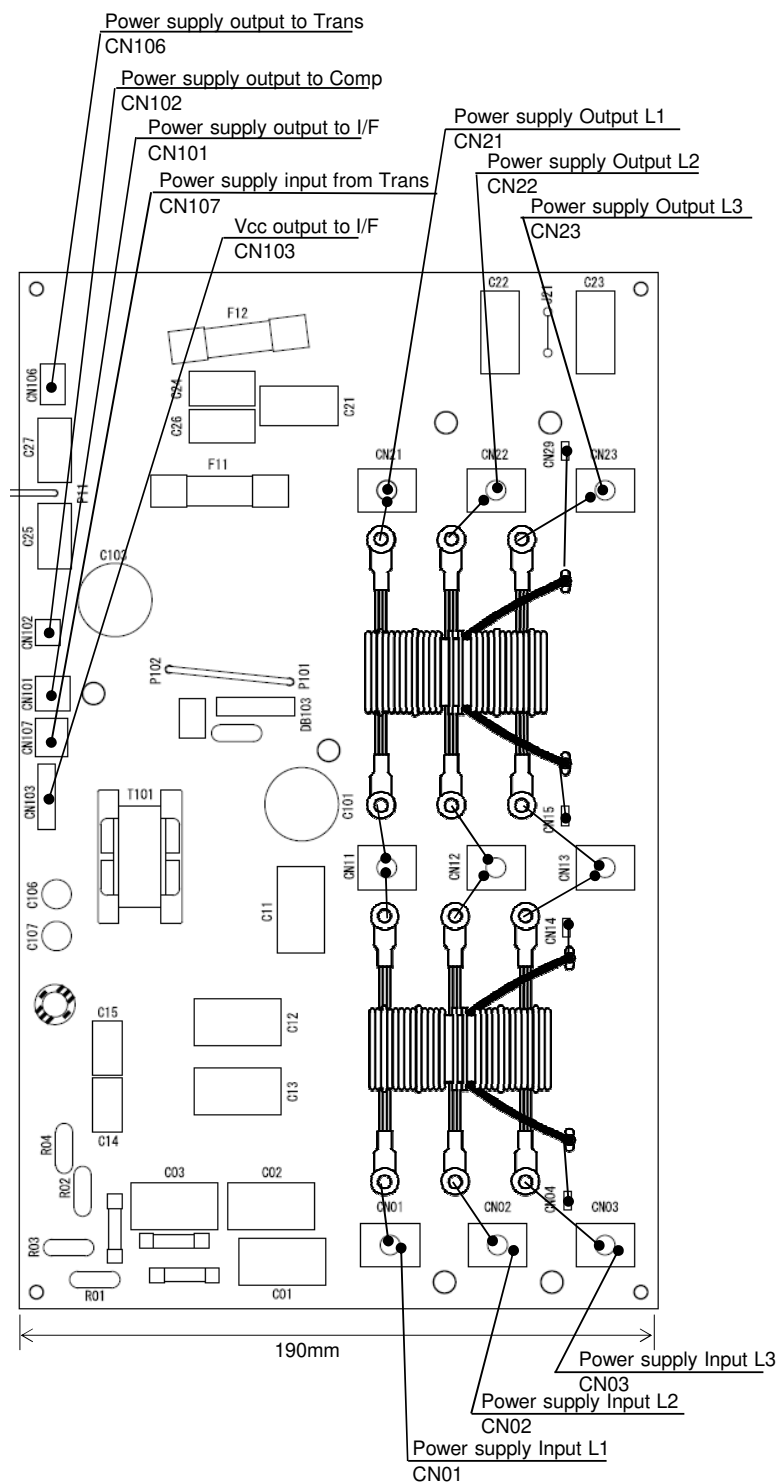


2-6-2(2). Noise Filter P.C. board (MCC-1749)

<Target model : MMY-MUP****FT9*>

990W 1COMP 1FAN model
(6, 8 ton, High heat 6 ton)

1290W 1COMP 2FAN model
(10, 12, 14 ton, High heat 8, 10 ton)

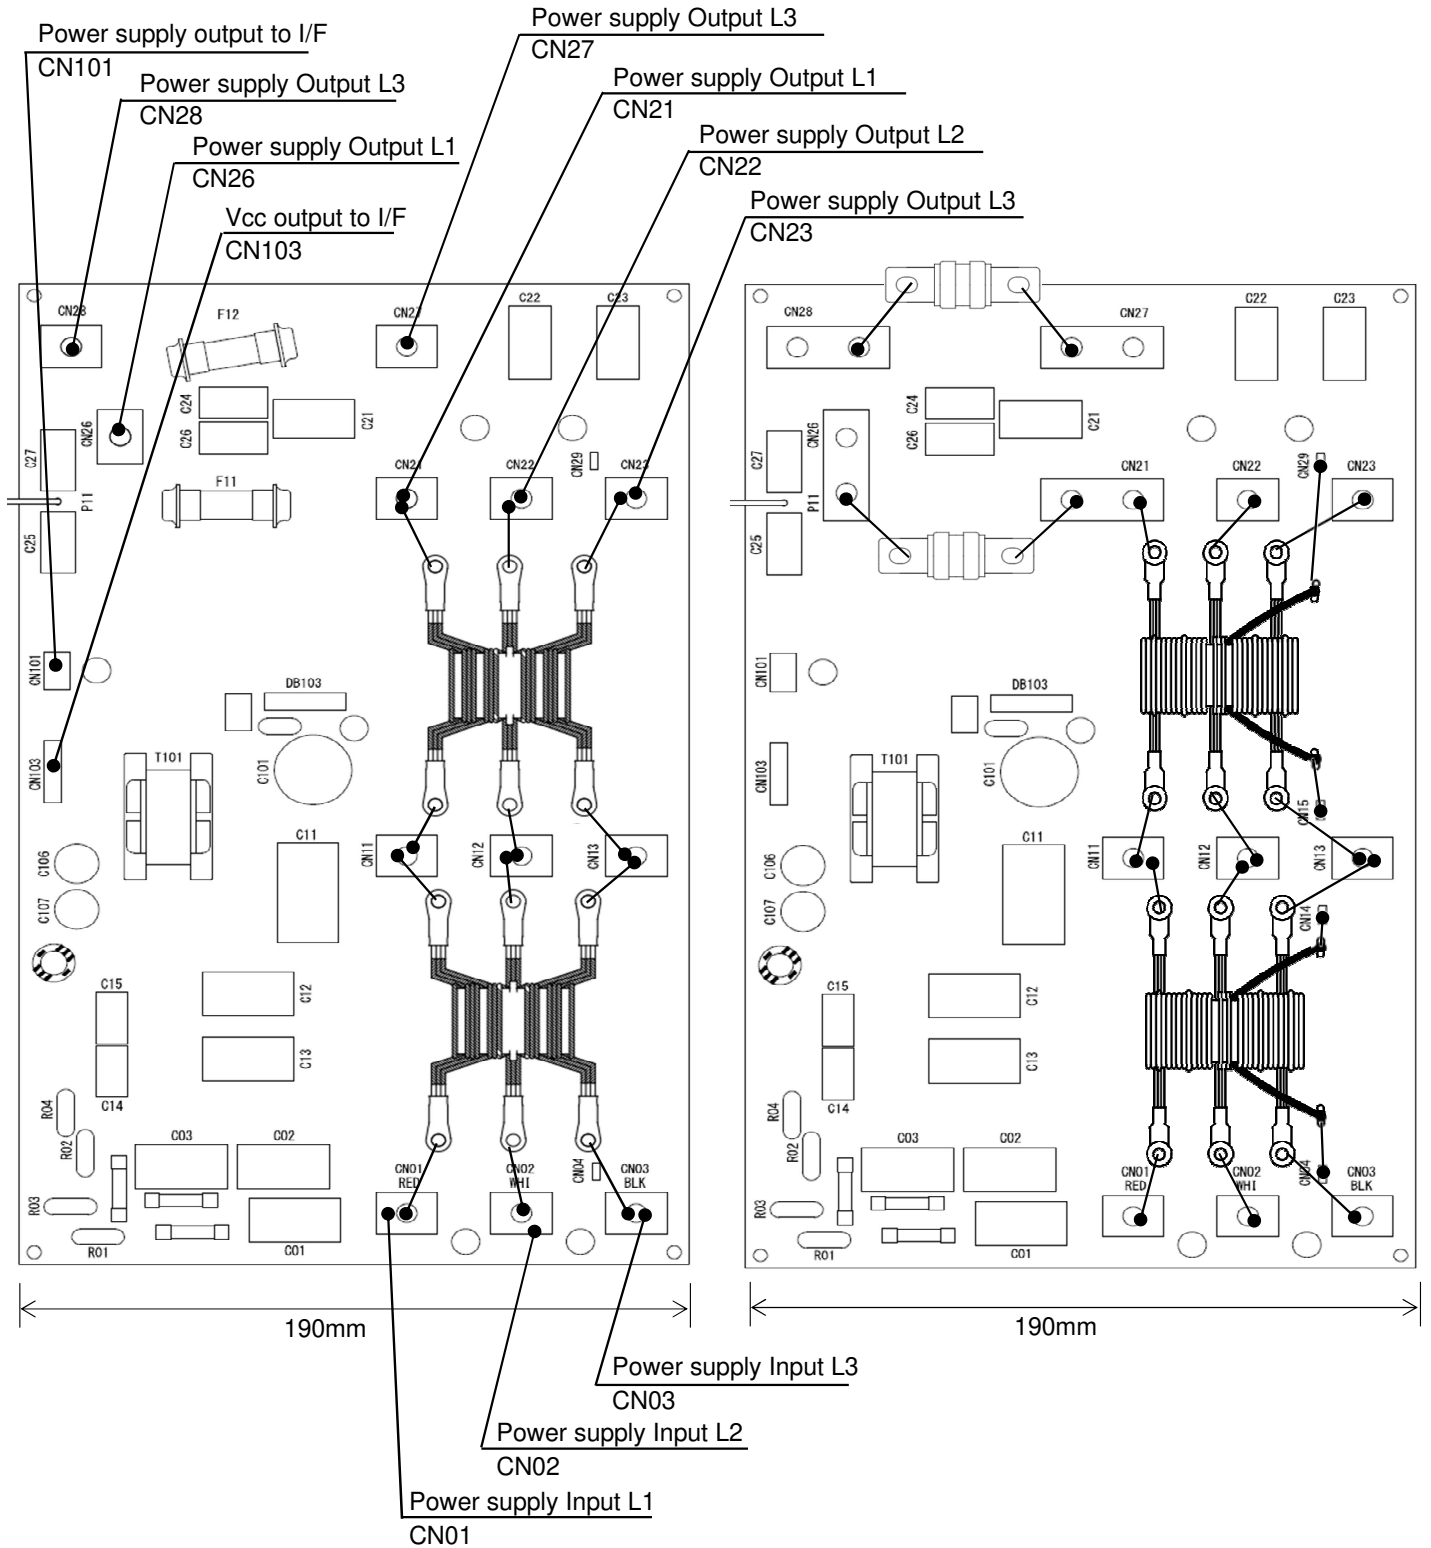


2-6-3(1). Inverter P.C. board for compressor (MCC-1729)

<Target model : MMY-MUP****FT6*>


1290W 2Comp 2Fan model (A3 Compressor)
(16 ton)

990W 1Comp 1Fan model (A3 Compressor)
(6, 8 ton)

1290W 1Comp 2Fan model
(K4 Compressor)(10, 12, 14 ton)

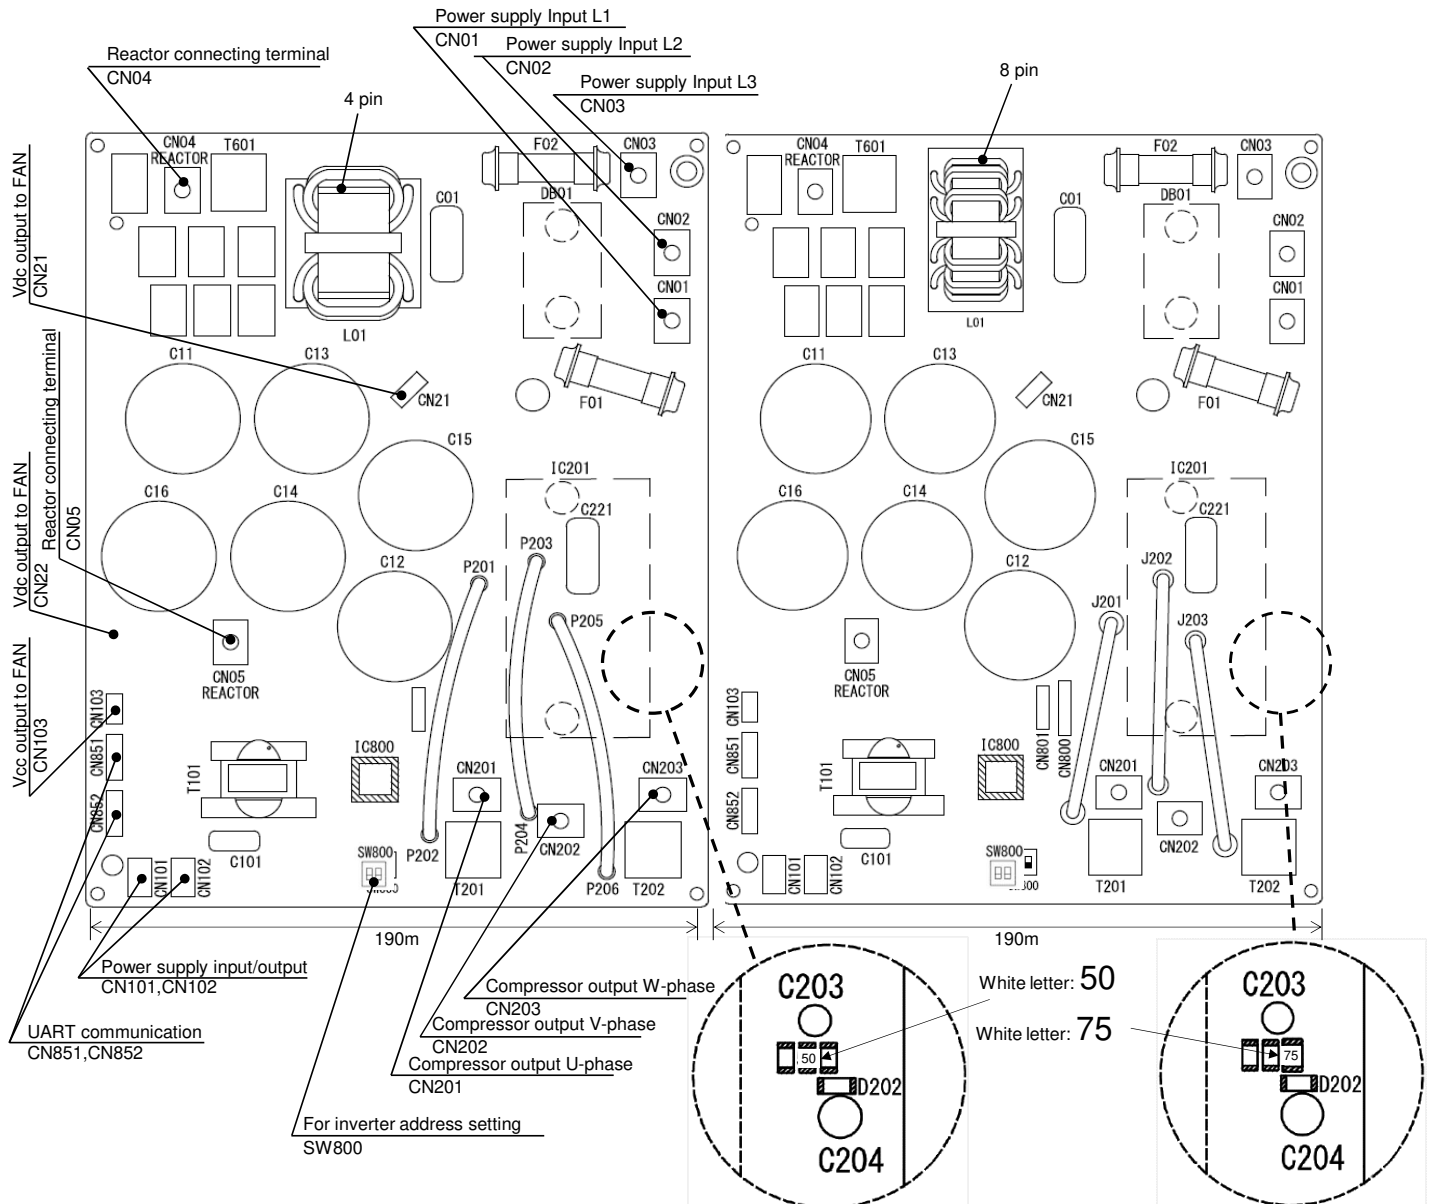


2-6-3(2). Inverter P.C. board for compressor (MCC-1746)
 <Target model : MMY-MUP****FT9*>

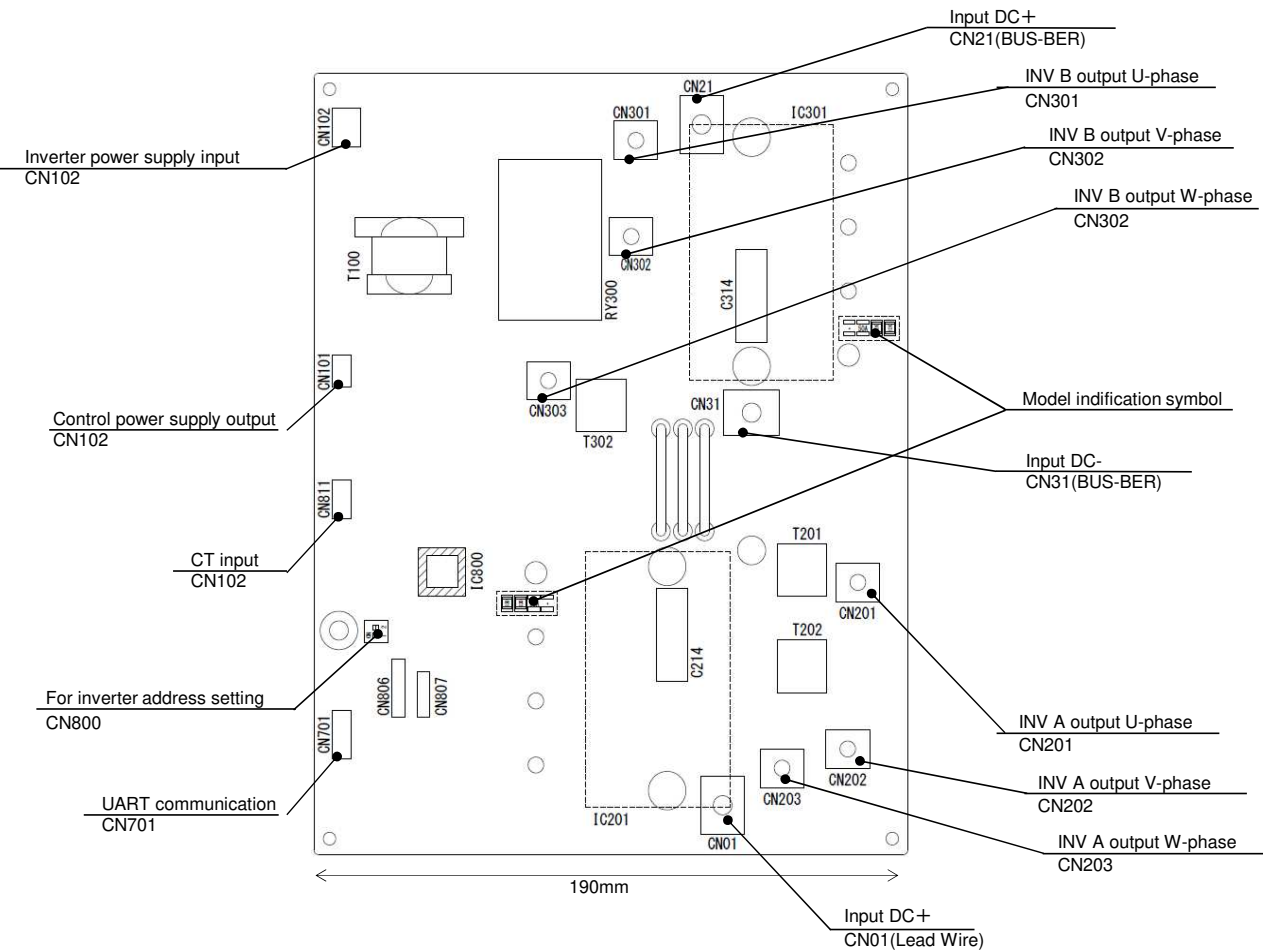

Model	Model indication symbol
990W 1COMP 1FAN model (6, 8 ton, High heat 6 ton)	50A
1290W 1COMP 2FAN model (10, 12, 14 ton, High heat 8, 10 ton)	75A


2-6-4. Capacitor P.C. board (MCC-1711)
 <Target model : MMY-MUP****FT9*>

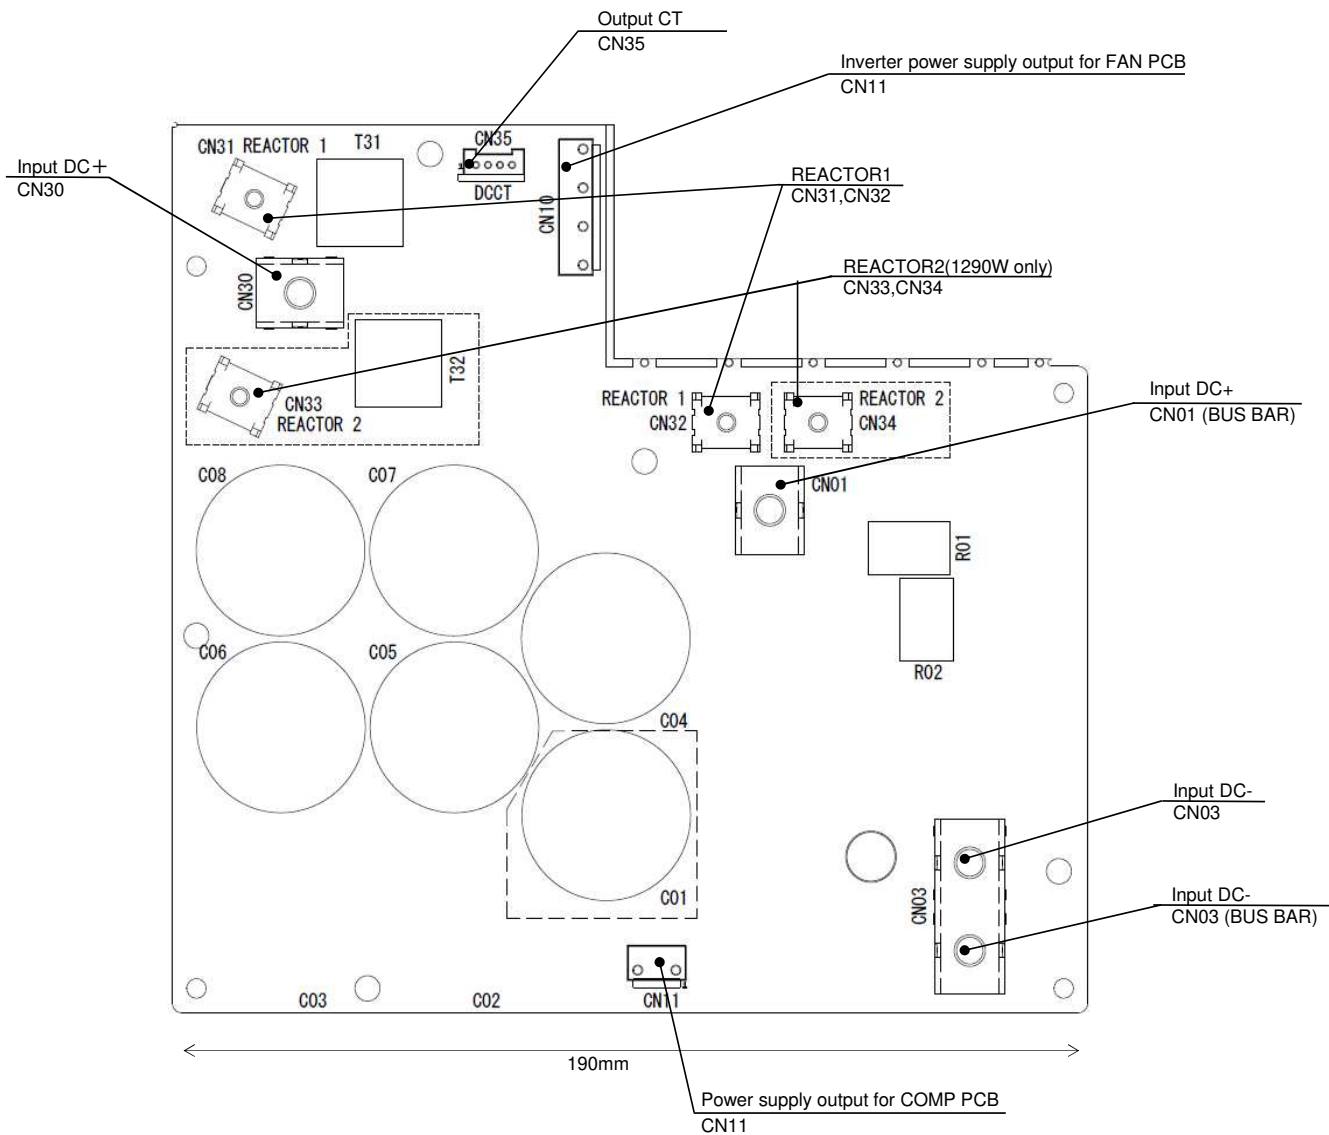


Model	Parts No. list			
	C01	CN32	CN33	T32
990W 1COMP 1FAN model (6, 8 ton, High heat 6 ton)	No	No	No	No
1290W 1COMP 2FAN model (10, 12, 14 ton, High heat 8, 10ton)	Yes	Yes	Yes	Yes

2-6-5. Inverter P.C. board for fan (MCC-1734)


<Target model : MMY-MUP****FT6*>

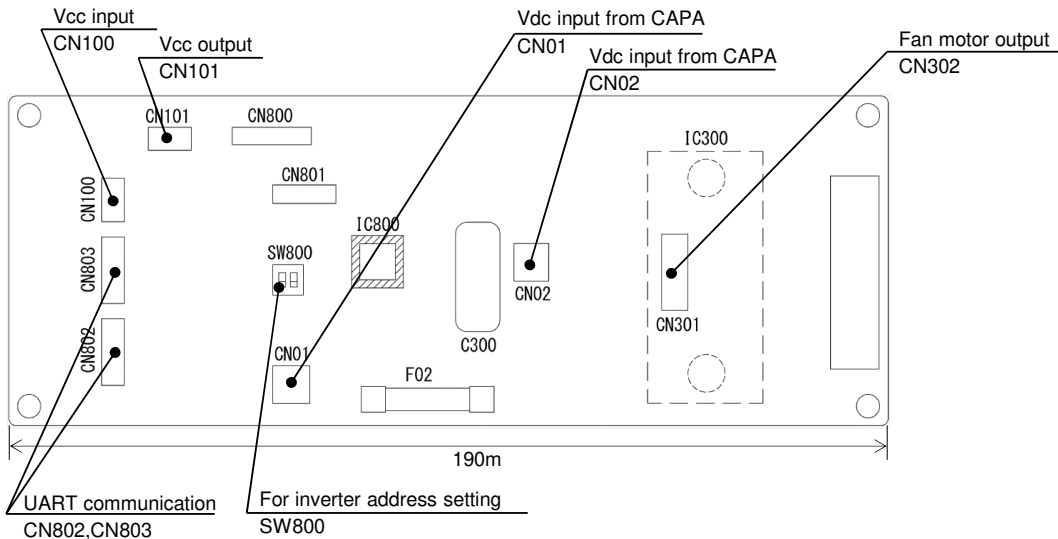

<Target model : MMY-MUP****FT9*>

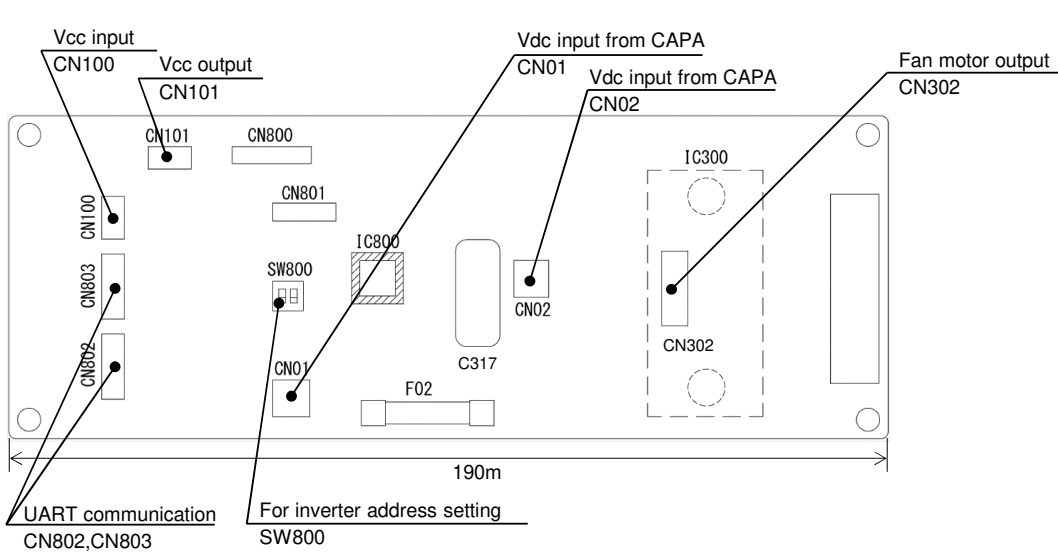


2-6-6. USB isolate P.C. board (MCC-1754)

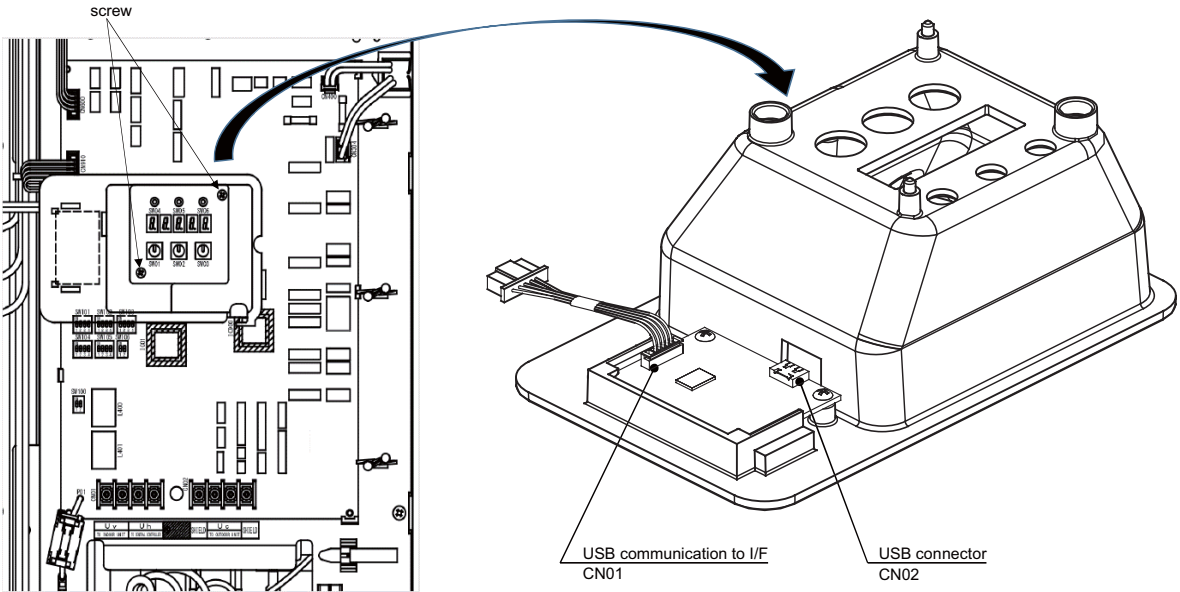


2-7. Parts Layout in Flow Selector unit

2-7-1. Parts Layout in Flow Selector unit Multi-port type


Model: RBM-Y0611FU4PUL

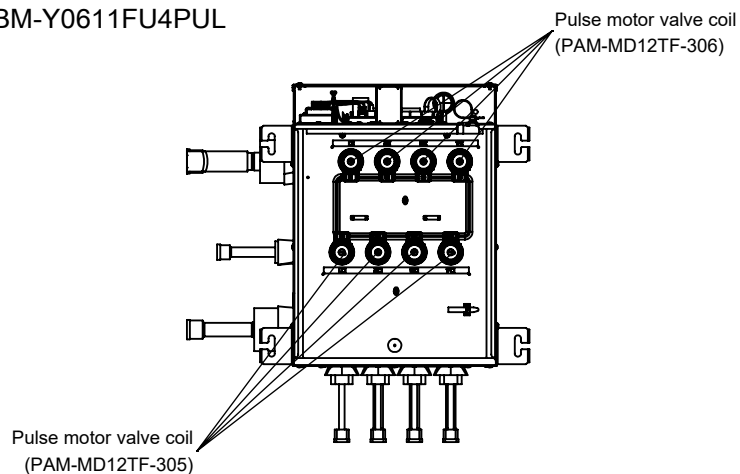

Model: RBM-Y0611FU8PUL

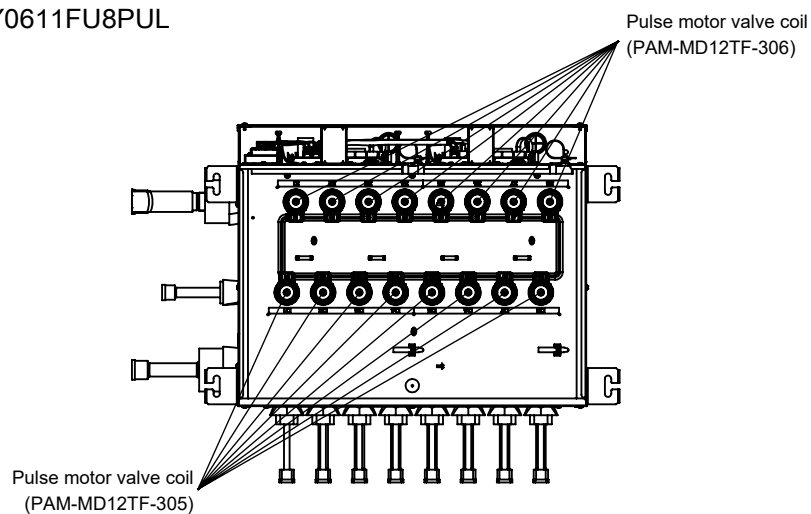


Model: RBM-Y0611FU12PUL

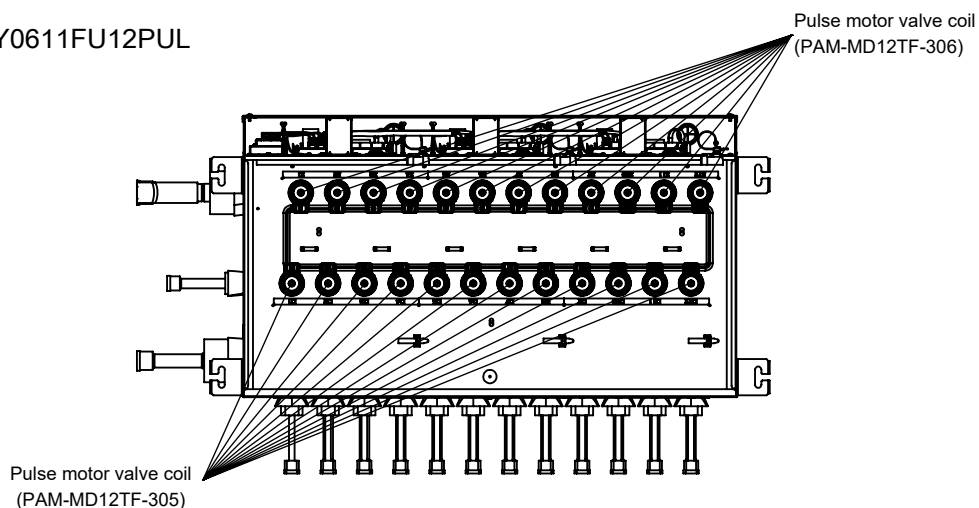


2-7-2. Parts Layout in Flow Selector unit Single-port type

Model: RBM-Y0611FUPUL
RBM-Y0961FUPUL

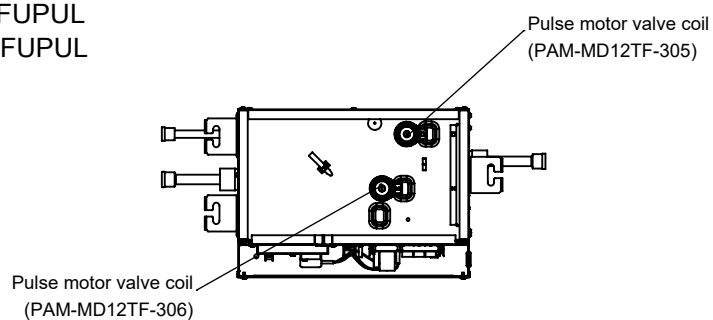


2-7-3. Parts Layout in Electric Part Assembly (Flow Selector unit)


Model: RBM-Y0611FU4PUL

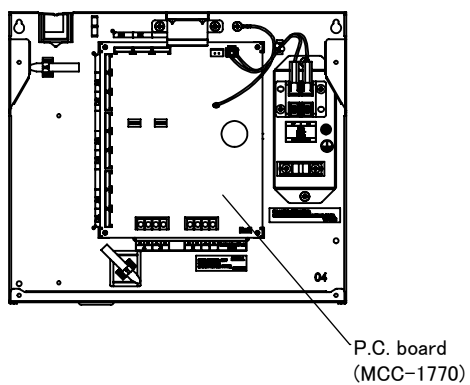


Model: RBM-Y0611FU8PUL

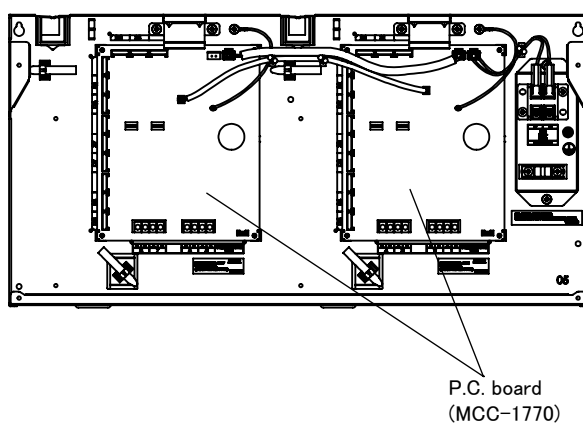

Model: RBM-Y0611FU12PUL

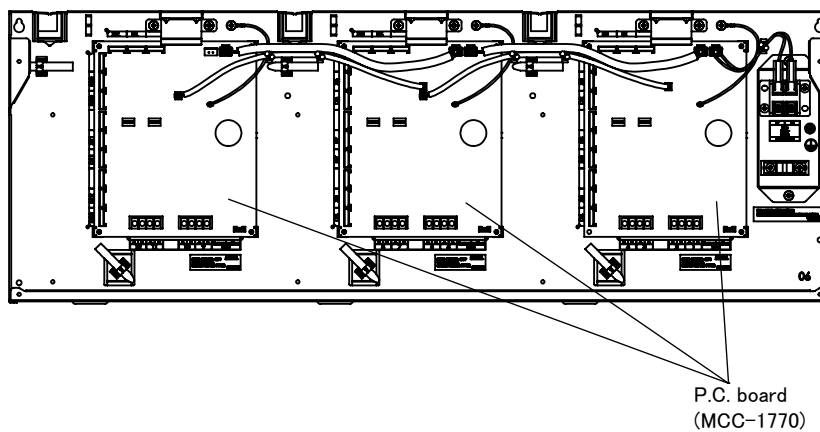


Model: RBM-Y0611FUPUL
RBM-Y0961FUPUL

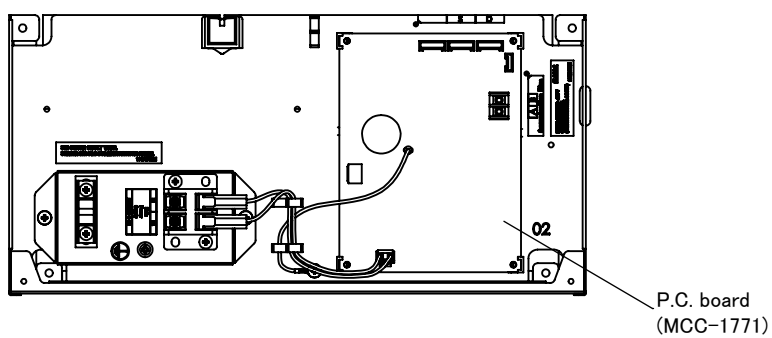

2-8. FS Unit Print Circuit Board

2-8-1. FS unit multi-port type P.C. board (MCC-1770)

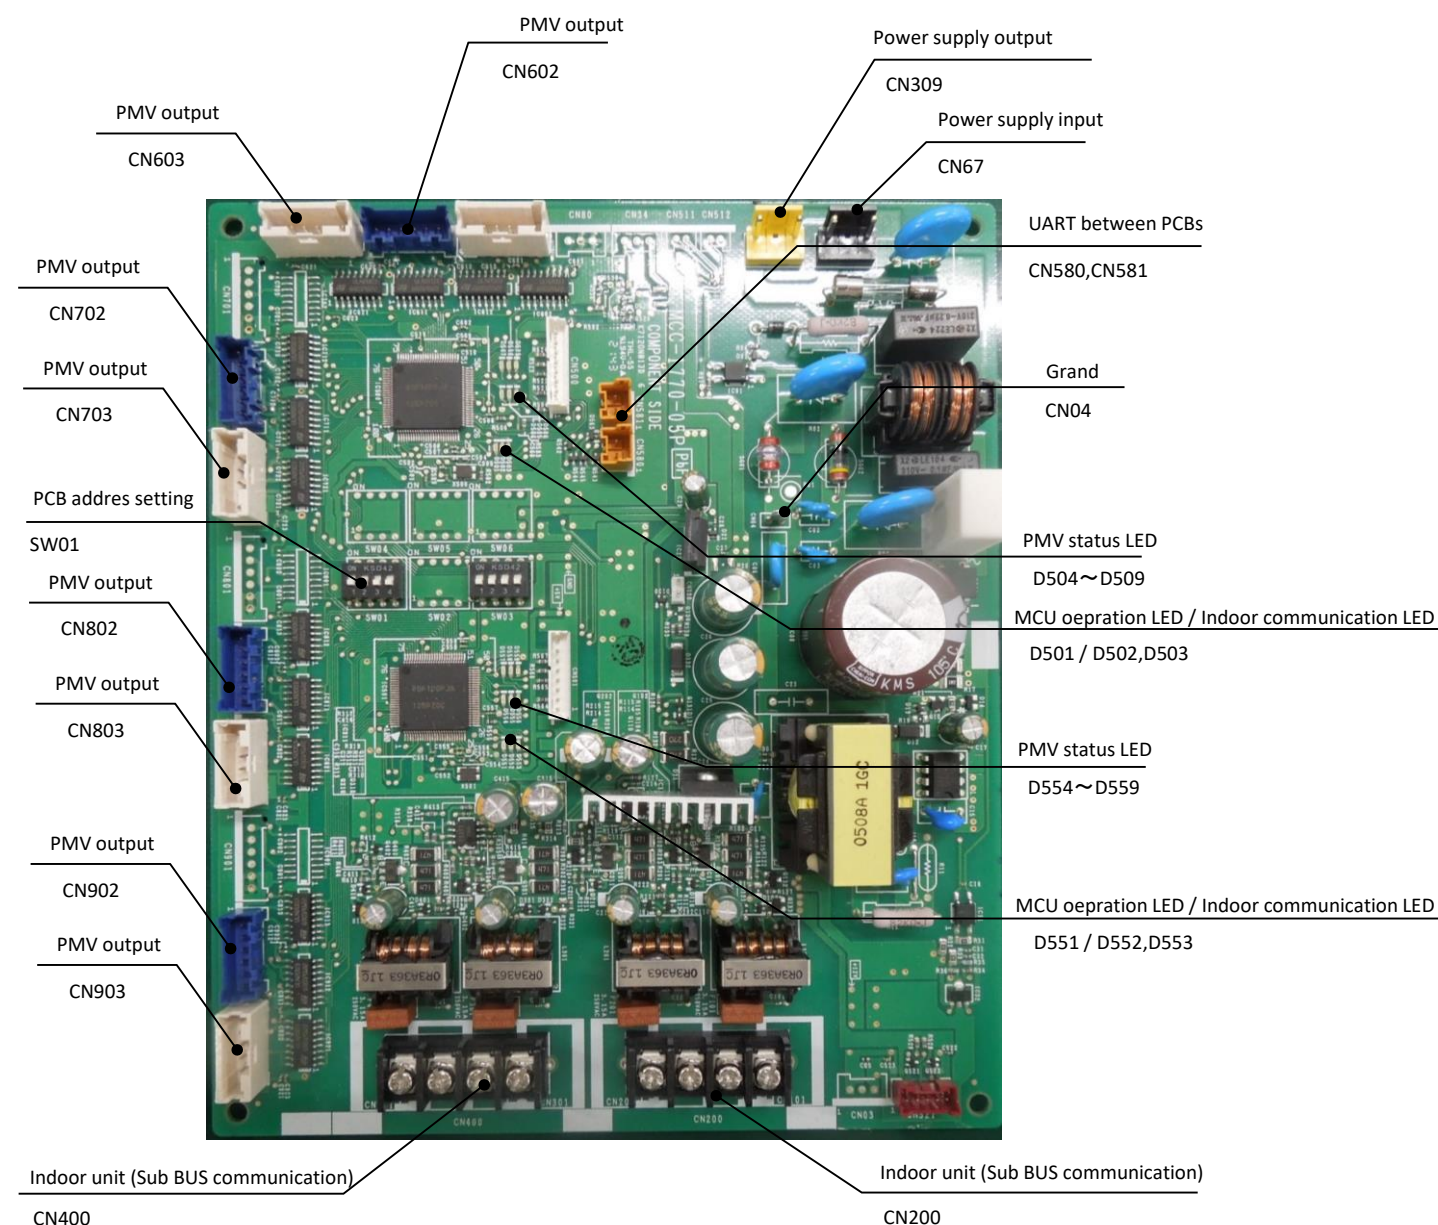


PMV status LED

Part No	LED Color	Applicable PMV	LED and PMV status		
			LED Light	LED Off	LED Flashing
D505	GREEN	PMV-S1	Open	Shut	Valve is working (opening or shutting)
D506	YELLOW	PMV-D1			
D508	GREEN	PMV-S2			
D509	YELLOW	PMV-D2			
D555	GREEN	PMV-S3			
D556	YELLOW	PMV-D3			
D558	GREEN	PMV-S4			
D559	YELLOW	PMV-D4			

MCU operation LED / Indoor communication LED

Part No	LED Color	LED and status
D501	RED	When MCU(IC501) operations, LED light
D502	GREEN	When SUB BUS of unit 1 can communication with indoor unit , LED light
D503	GREEN	When SUB BUS of unit 2 can communication with indoor unit , LED light
D551	RED	When MCU(IC551) operation, LED light
D552	GREEN	When SUB BUS of unit 3 can communication with indoor unit , LED light
D553	GREEN	When SUB BUS of unit 4 can communication with indoor unit , LED light

2-8-2. FS unit single-port type P.C. board (MCC-1771)

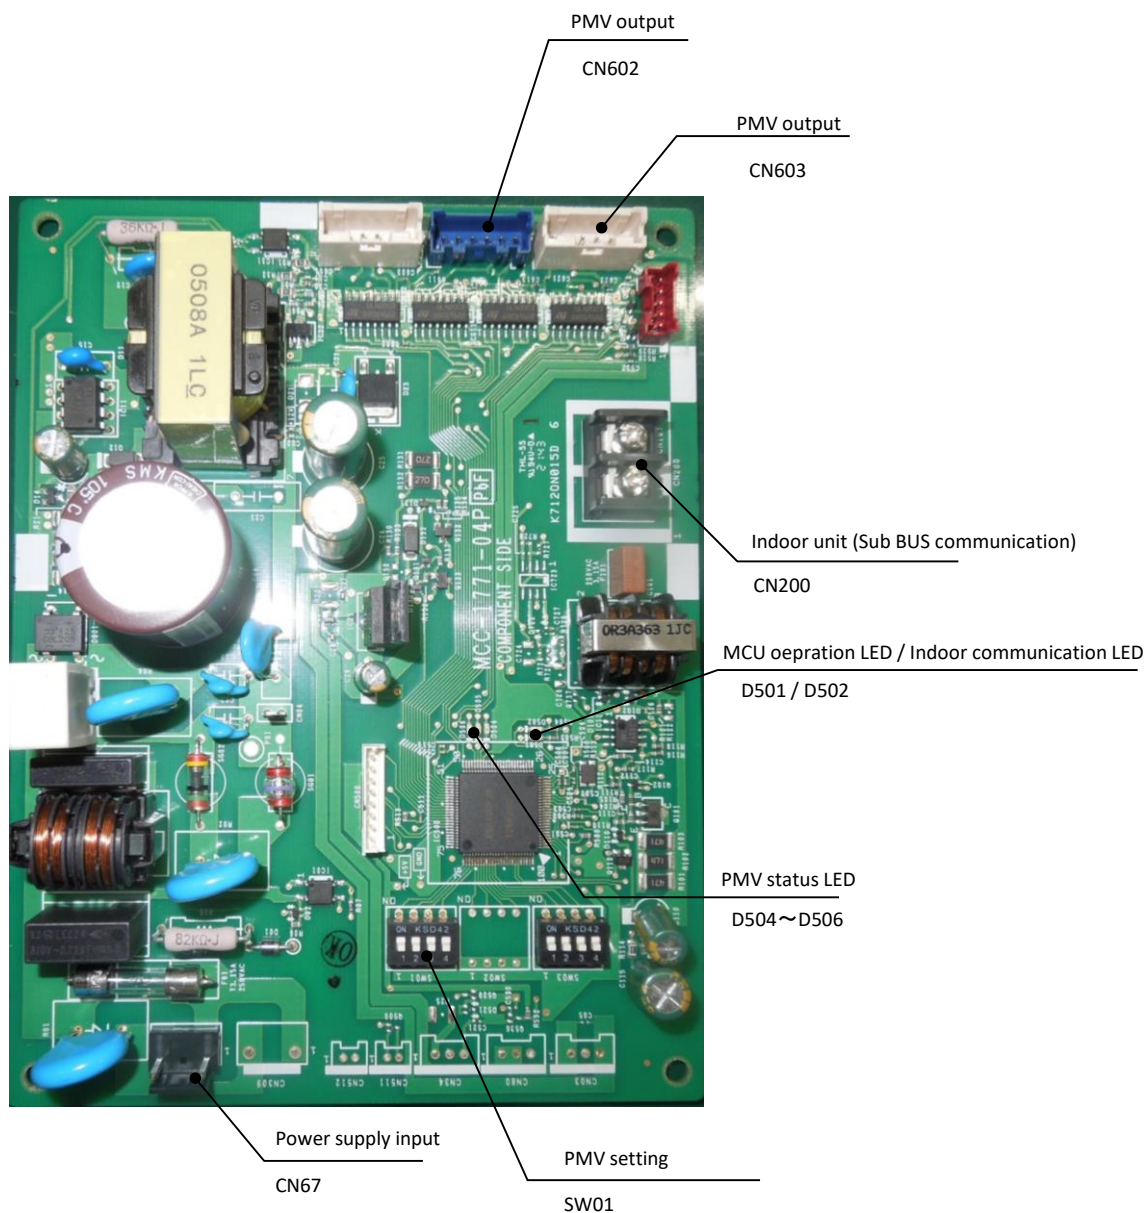

MCU operation LED / Indoor communication LED


Part No	LED Color	Applicable PMV	LED and PMV status		
			LED Light	LED OFF	LED Flashing
D505	GREEN	PMV-S	Open	Shut	Valve is working (opening or shutting)
D506	YELLOW	PMV-D			

3. REFRIGERANT PIPING SCHEMATIC DRAWING

Outdoor unit

Standard 6,8ton/High heat 6ton


Model: MMY-MUP0721*, MUP0961*, MUP072H1*

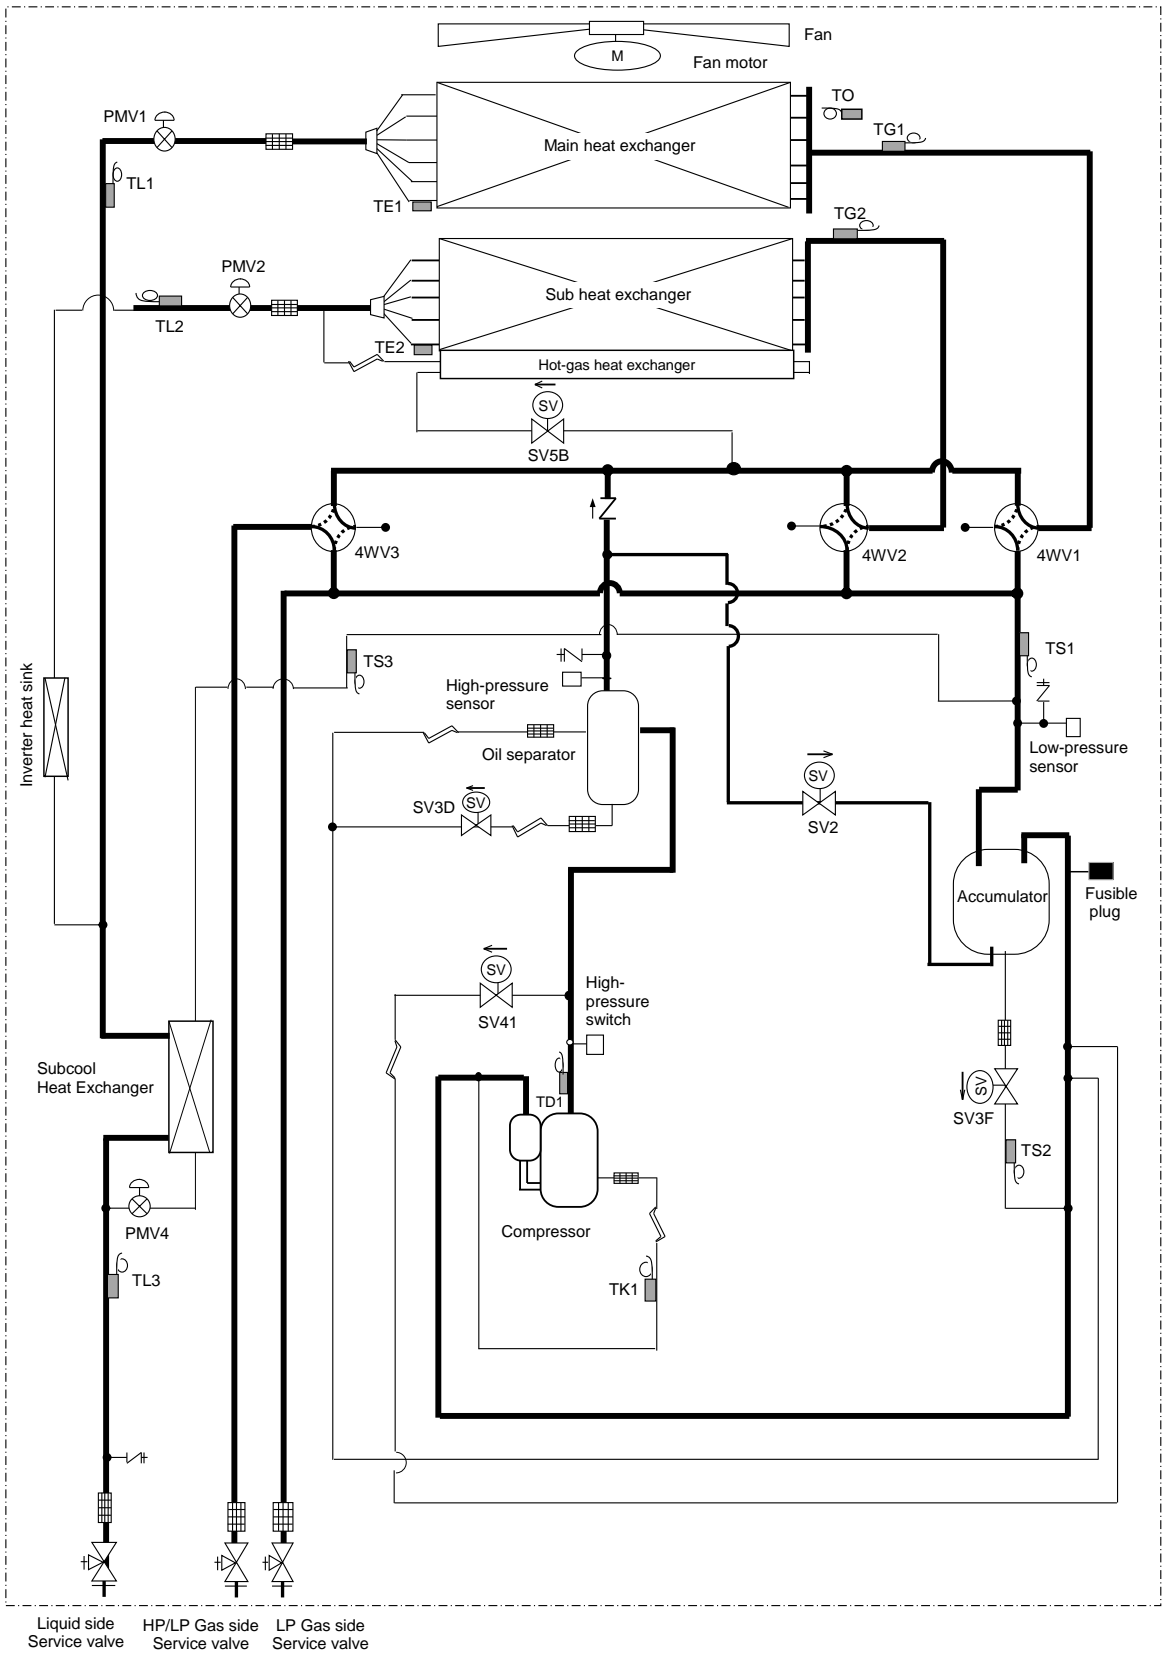

Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor


Standard 10,12,14ton/High heat 8,10ton

Model: MMY-MUP1201*, MUP1441*, MUP1681*, MUP096H1* , MUP120H1*

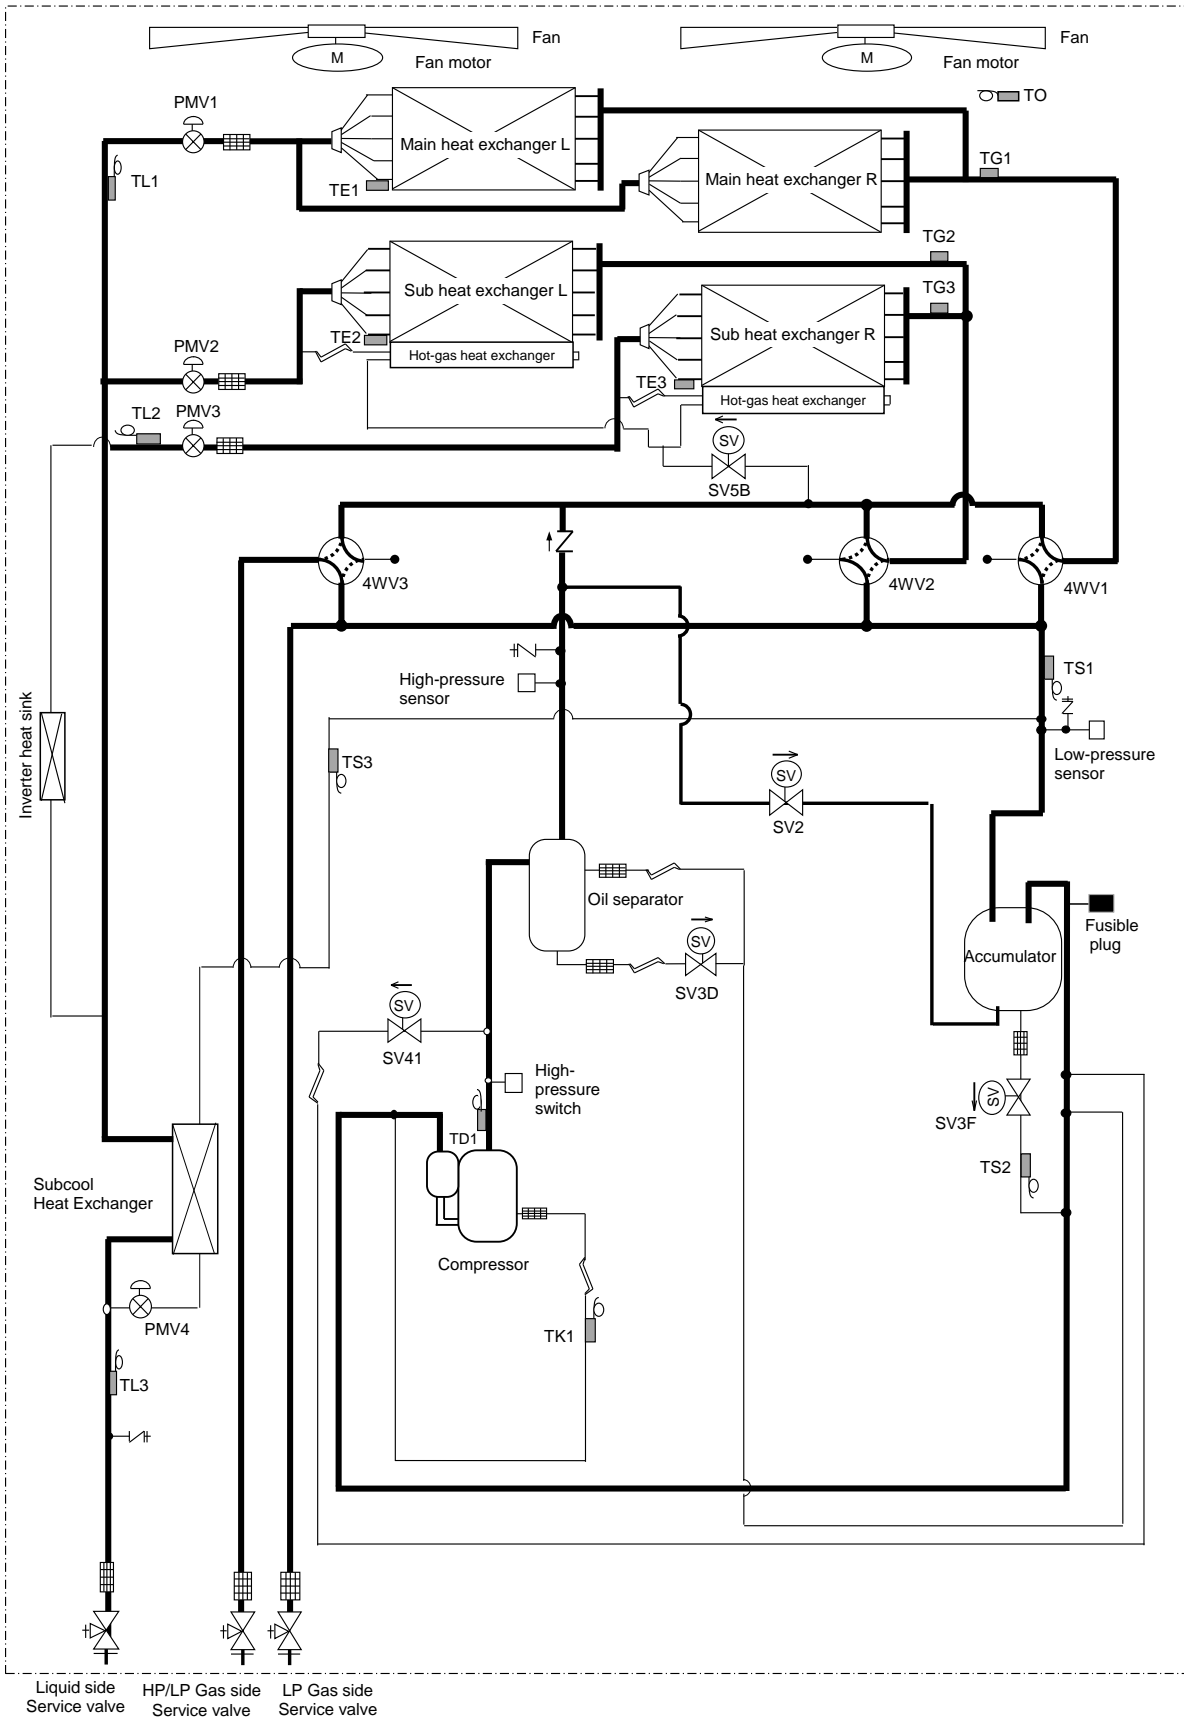

Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

**Standard 16ton
Model: MMY-MUP1921***

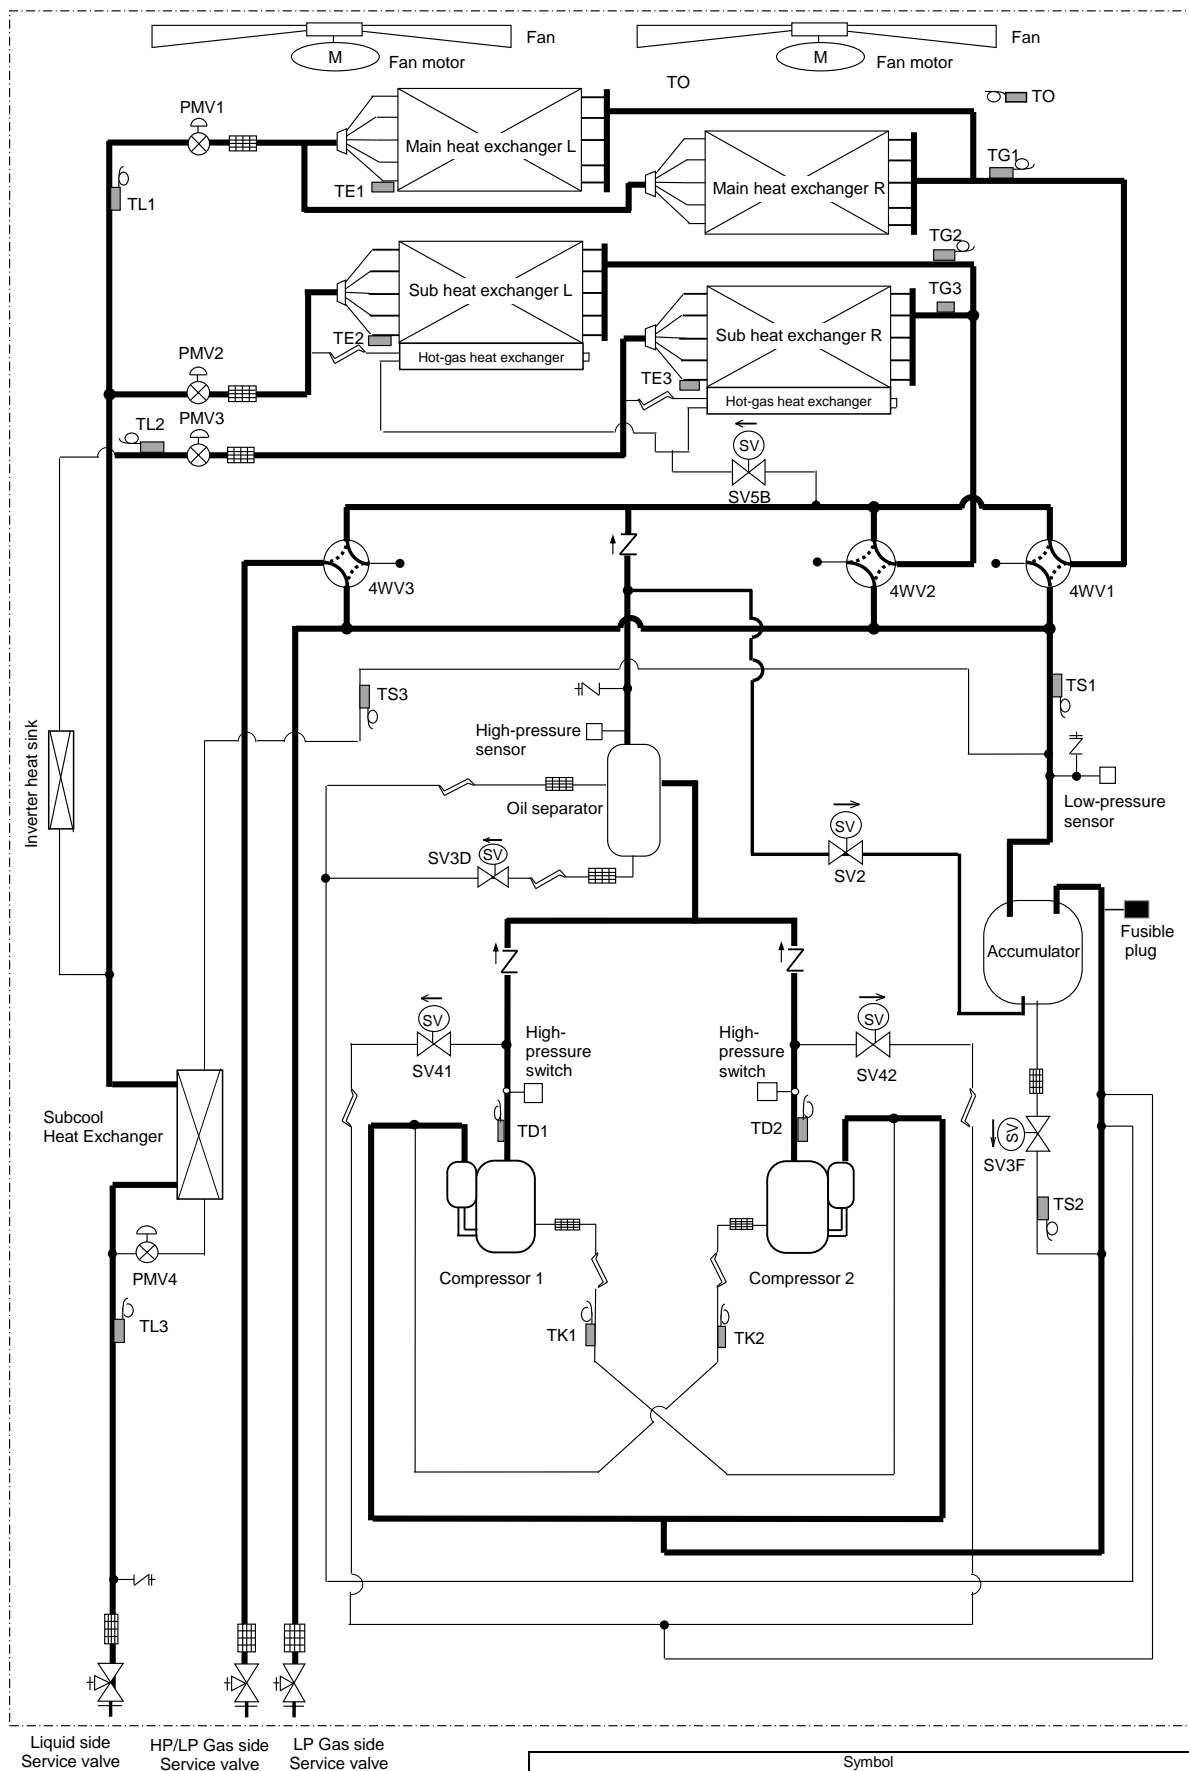


Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

Functional Part Name

2-Way valve	SV3D	(Connector CN324:WHI) 1) Reserves oil in the oil separator during OFF time. 2) Returns oil reserved in the oil separator to the compressor during ON time.
	SV3F	(Connector CN324:WHI) 1) Supplies oil in the accumulator to the compressor 2) Shuts off the liquid refrigerant from the accumulator when the compressor dilution
	SV41 SV42	(SV41 connector CN324:WHI, SV42 connector CN327:BLK) 1) High/Low pressure balance Prevention of subcool oil backflow when compressor stop, start-up compensation when starting up the compressor, reducing refrigerant noise when starting up heating operation. 2) High pressure release function 3) Low pressure release function 4) Keep the compressor reliability when Hot Gas Bypass system (prevent dilution with oil) 5) Release capacity (Refrigerant mass bypass function in minimum cooling operation)
	SV2	(Connector CN326:BRW) 1) Stir the liquid refrigerant in the accumulator
	SV5B	(Connector CN325:YEL) 1) Outdoor unit freeze protection during heating with hot bypass 2) High pressure release function
4-Way valve	4WV1 4WV2	(4WV1 connector CN317:ORN, 4WV2 connector CN318:PUR) 1) Cooling/Heating change 2) Reverse Defrost
	4WV3	(Connector CN320:GRN) 1) Cooling/Heating change 2) Reverse Defrost
Pulse Motor Valve	PMV1	(Connector CN300:WHI) 1) Controls superheat and subcool of the main heat exchanger 2) Stored liquid refrigerant reduction control in low ambient cooling operation (recovers stored liquid refrigerant in the main heat exchanger)
	PMV2 PMV3	(PMV2 connector CN301:WHI, PMV3 connector CN302:BLU) 1) Controls superheat and subcool of the sub heat exchanger 2) Maintains discharge pressure in low ambient cooling operation
	PMV4	(Connector CN303:RED) 1) Controls superheat and subcool of the sub-cooling heat exchanger 2) Liquid bypass function for discharge temperature release (cooling bypass function)
Oil Separator		1) Prevention for rapid decreasing oil (Decreases oil flowing to the cycle) 2) Reserve function of excess oil
Accumulator		1) Accumulate liquid refrigerant and Prevention of liquid refrigerant back to the compressor
Plate Heat exchanger		1) Maintaining subcool of the piping
Temperature sensor	TD1 TD2	(TD1 connector CN502:WHI, TD2 connector CN380:BLK) 1) Protection of compressor discharge temperature 2) Used for discharge temperature release
	TG1 TG2 TG3	(TG1 connector CN381:WHI, TG2 connector CN381:WHI, TG3 connector CN384:BLU) 1) Controls superheat of PMV in heating operation
	TE1	(Connector CN381:WHI) 1) Controls the main heat exchanger defrost in heating operation 2) Controls outdoor fan in heating operation
	TE2 TE3	(TE2 connector CN381:WHI, TE3 connector CN384:BLU) 1) Controls the main heat exchanger defrost in heating operation 2) Controls outdoor fan in heating operation
	TL1	(Connector CN378:WHI) 1) Detects the main heat exchanger subcool in cooling operation. 2) Use as main complement switching during cooling operation
	TL2	(Connector CN378:WHI) 1) Detects subcool of the sub-cooling heat exchanger in cooling operation 2) Use as main complement switching in cooling operation [3 way variable heat exchanger]
	TL3	(Connector CN378:WHI) 1) Controls subcool of the sub-cooling heat exchanger
	TS1	(Connector CN378:WHI) 1) Controls PMV superheat in heating operation
	TS2	(Connector CN506:BLK) 1) Controls SV3F
	TS3	(Connector CN378:WHI) 1) Controls subcool of the sub-cooling heat exchanger
	TO	(Connector CN507:YEL) 1) Detects outside temperature
	TK1 TK2	(TK1 connector CN502:WHI, TK2 connector CN380:BLK) 1) Judges oil level of the compressor
Pressure sensor	High pressure sensor	(Connector CN501:RED) 1) Detects high pressure 2) Controls outdoor fan in low ambient cooling operation 3) Detects subcool of indoor units in heating operation
	Low pressure sensor	(Connector CN500:WHI) 1) Detects low pressure 2) Controls superheat in heating operation
Heater	Compressor case heater	(Comp1 connector CN331:WHI, Comp2 connector CN322:BLU) 1) Prevents liquid refrigerant accumulation in the compressor

Indoor unit

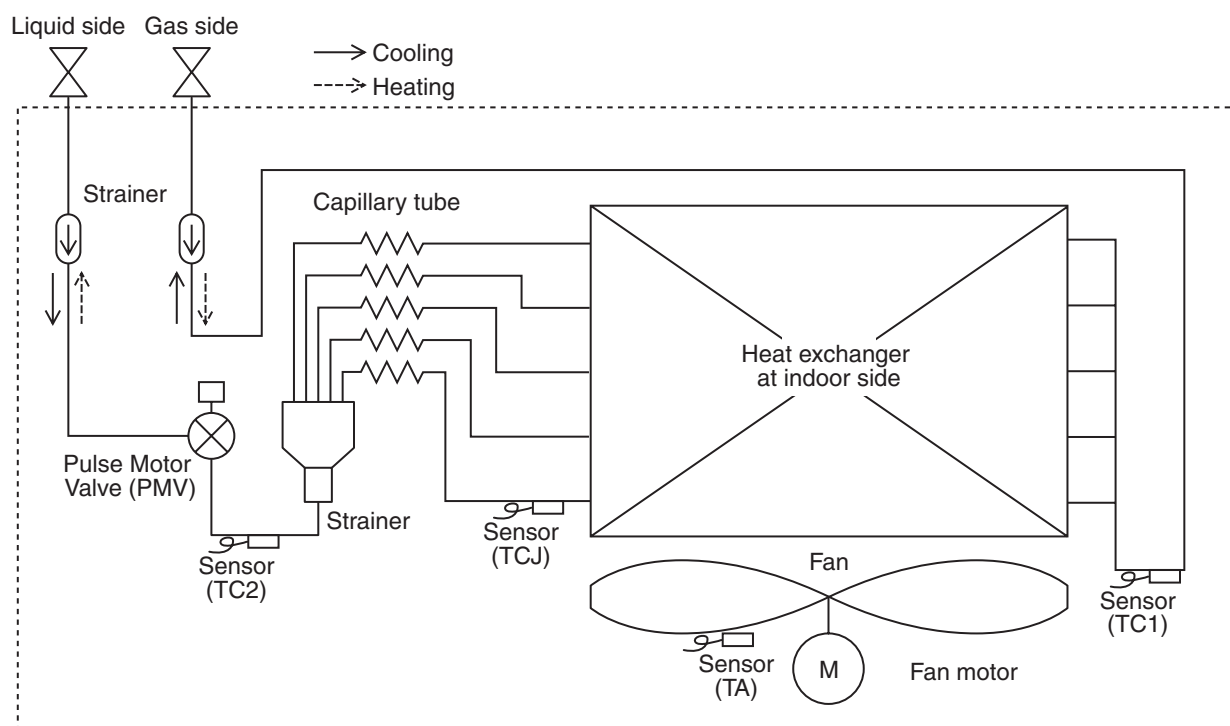

U series Indoor Unit Functional Part Explanation

Functional part name		Functional outline
Pulse Motor Valve	PMV	(Connector CN082 (6P): Blue) 1) Controls superheat in cooling operation 2) Controls subcool in heating operation 3) Recovers refrigerant oil in cooling operation 4) Recovers refrigerant oil in heating operation
Temp. Sensor	1.TA	(Connector CN104 (2P): Yellow) 1) Detects indoor return air temperature
	2.TC1	(Connector CN100 (3P): Brown) 1) Controls PMV superheat in cooling operation
	3.TC2	(Connector CN101 (2P): Black) 1) Controls PMV subcool in heating operation
	4.TCJ	(Connector CN102 (2P): Red) 1) Controls PMV superheat in cooling operation

* Please refer to each indoor unit Service Manual for details of each sensor


4.COMBINED REFRIGERANT PIPING SYSTEM SCHEMATIC DIAGRAMS

4-1.Cooling operation (Operation of cooling only)

Header Unit (MMY-MUP1201FT,MUP1441FT,MUP1681FT,MUP096H1FT,MUP120H1FT*)


Follower Unit (MMY-MUP0721FT*,MUP0961FT*,MUP072H1FT*)

The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

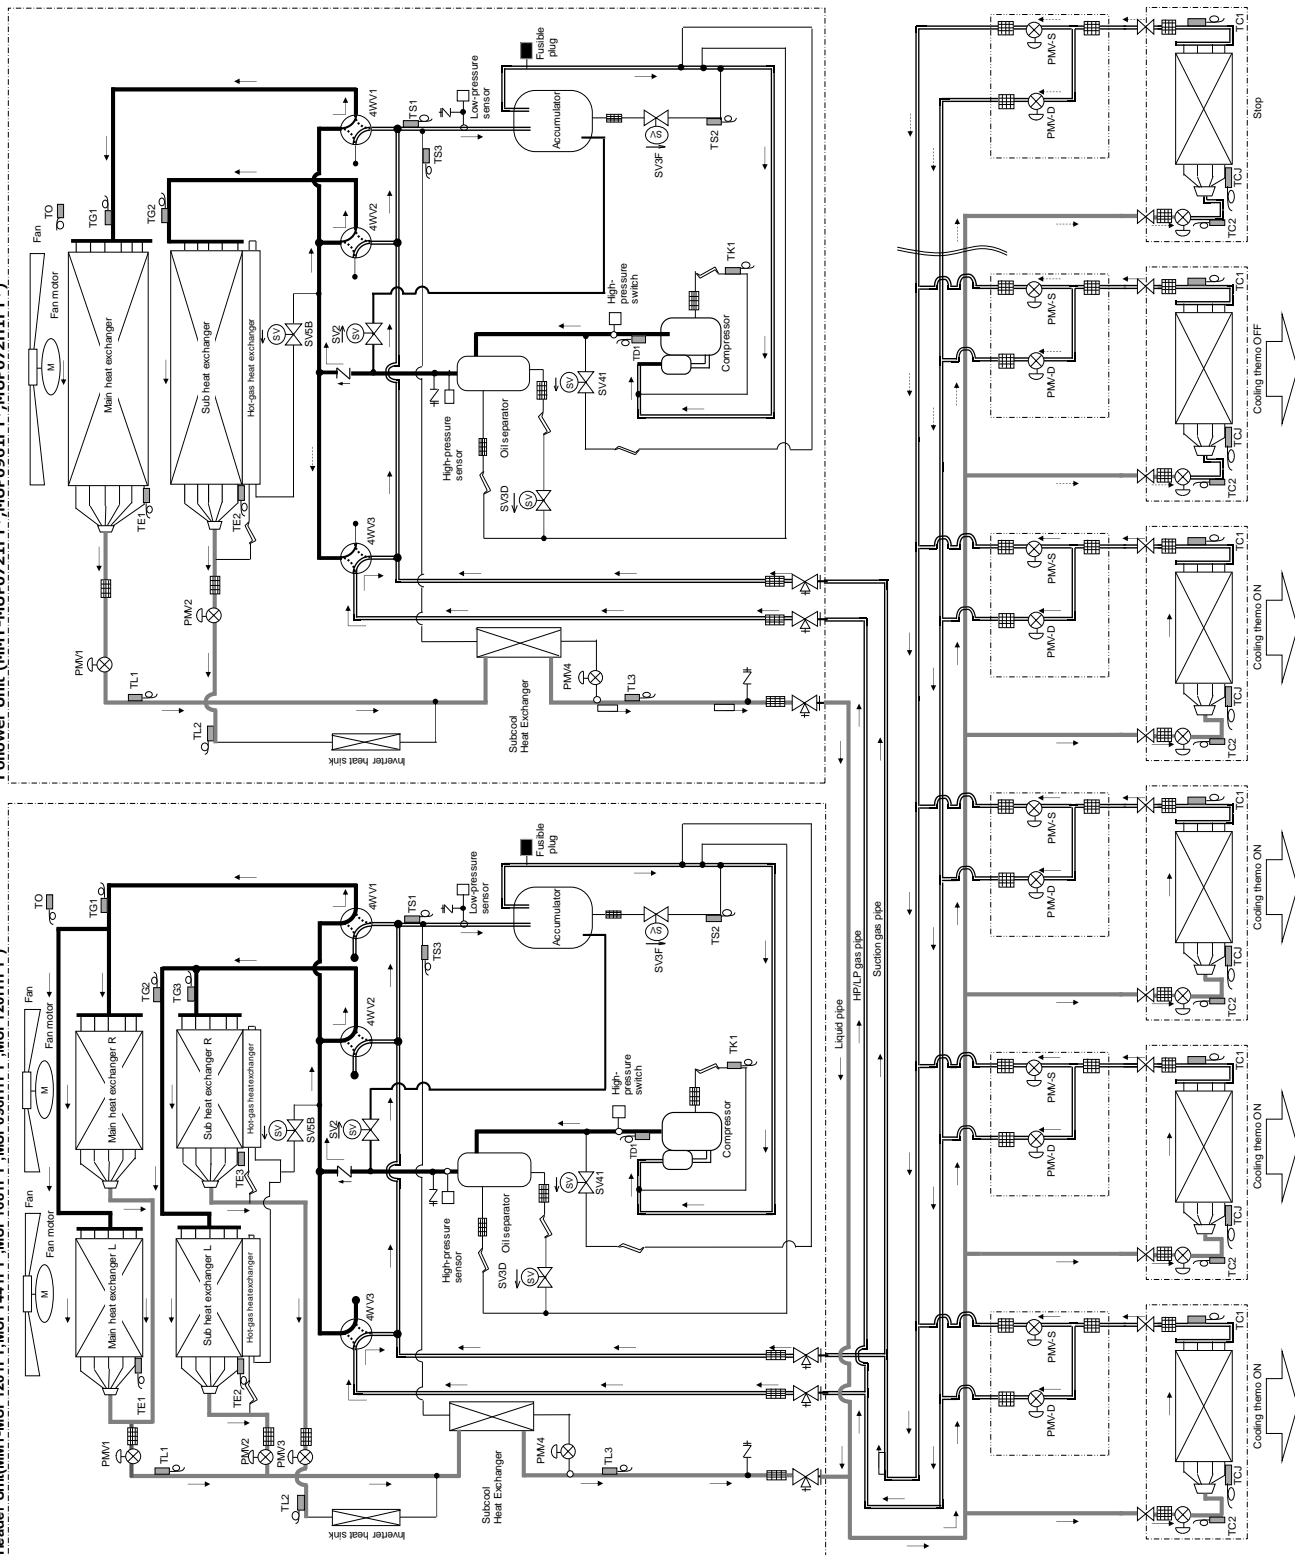

Mode	4-way valve	Actuator
Cooling	4-way valve2	OFF
	4-way valve3	OFF
	PMV1	Control
	PMV2	Control
	PMV3	Control
	PMV4	Control
Stop	SV2F	Control
	SV4D	Control
	SV2	Control
	Outdoor fan	Control

Mode	Indoor PMV	Actuator
Cooling	FS unit PMV-S	Open
	FS unit PMV-D	Open
	Indoor PMV	Open
	FS unit PMV-S	Open
	FS unit PMV-D	Open
	Indoor PMV	Open
Stop	FS unit PMV-S	Open
	FS unit PMV-D	Open

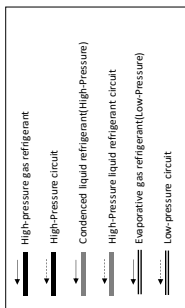

Header Unit (MMY-MUP1201 FT, MUP1441 FT, MUP1681 FT, MUP096H1 FT, MUP120H1 FT)

2 step defrost unit


Single defrost unit

The diagram illustrates the refrigerant circuit for a 2-step defrost unit (MUP168H1FT) and a single defrost unit (MUP120H1FT). The circuit includes a compressor (TK1), a high-pressure separator (SV3D), a high-pressure sensor (SV41), a low-pressure sensor (SV2), and a fusible plug. The refrigerant flows through a series of heat exchangers: Main heat exchanger L, Sub heat exchanger L, Main heat exchanger R, and Sub heat exchanger R. The circuit is controlled by a defrost cycle sequence, which is detailed in the table below.

Step	Valve Position	Compressor	High-Pressure Sensor	Low-Pressure Sensor	Defrost Cycle
1	SV2	ON	ON	ON	Normal Operation
2	SV2	OFF	OFF	OFF	Defrost Cycle
3	SV2	ON	ON	ON	Normal Operation


Mode	Outdoor unit	
Defrosting	4-way valve1	OFF
	4-way valve2	OFF
	4-way valve3	OFF
	PMW1	Control
	PMW2	Control
	PMW3	Control
	PMW4	Control
	SV3D	Control
	SV3F	Control
	SV4(n)	Control
Normal	SV2	Control
	SV5B	Control
	Outdoor fan	Control

Indoor init & FS unit	
Mode	Actuator
Heating forced thermo	Indoor PMV
	FS unit PMV-S
	FS unit PMV-D
	Control
	Open
	Open

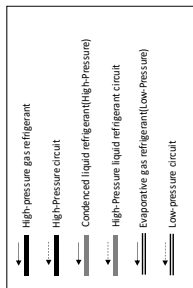


The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

Follower Unit (MMY-MUP0721FT*, MUP0961FT*, MUP072H1FT*)

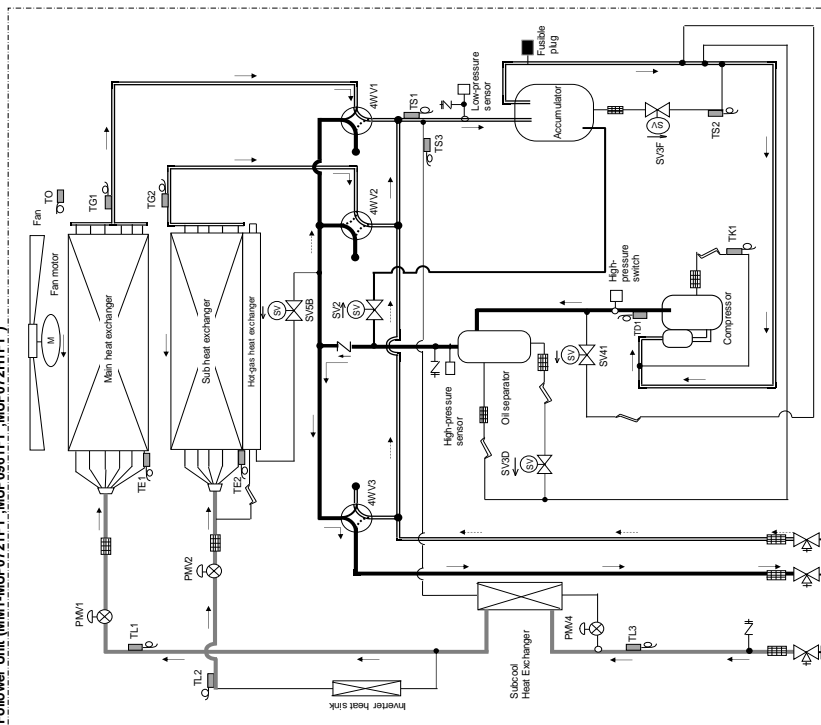


Mode	Indoor init & FS unit	
	Actuator	
Heating thermo ON	Indoor PMW	Control
	FS unit PMW-S	Close
	FS unit PMW-D	Open
Heating thermo OFF	Indoor PMW	Close
	FS unit PMW-S	Close
	FS unit PMW-D	Open
Stop	Indoor PMW	Close
	FS unit PMW-S	Close
	FS unit PMW-D	Close

High-pressure gas refrigerant
High-Pressure circuit
Condensed liquid refrigerant(High-Pressure)
High-Pressure liquid refrigerant circuit
Evaporative gas refrigerant(Low-Pressure)
Low-pressure circuit

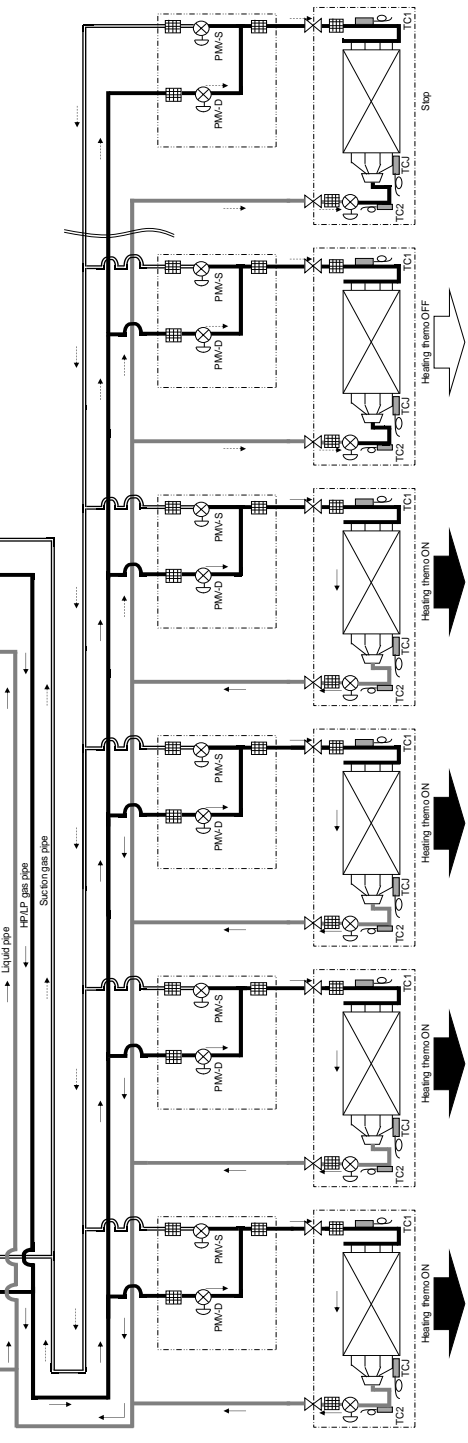


The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

Followler Unit (MMY-MUP0721FT*,MUP0961FT*,MUP072H1FT*)

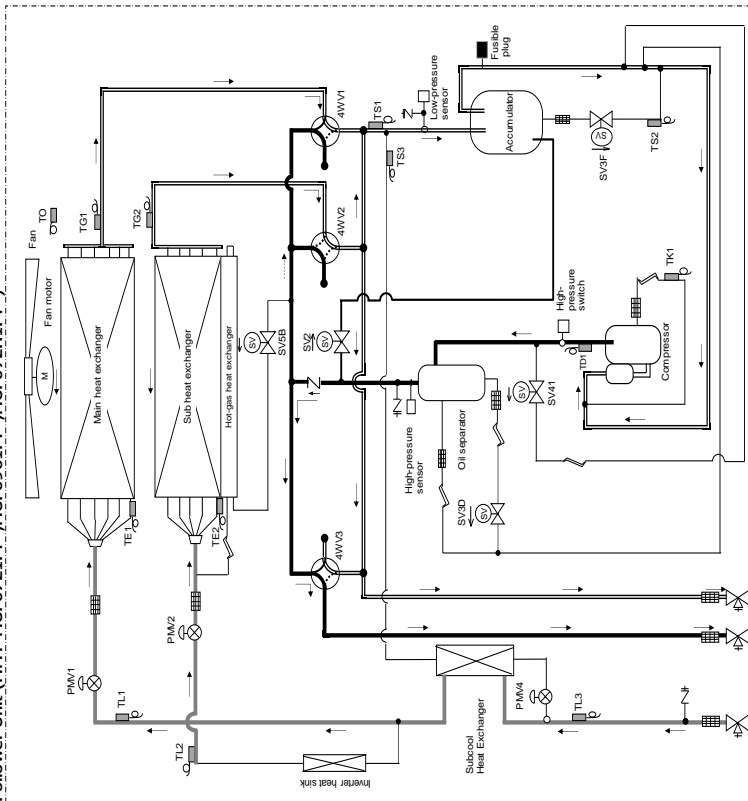

	Indoor init & FS unit	
	Model	Actual
Heating	Heating forced thermo	Indoor PWM-FS unit PWM-S
	Heating forced thermo	Indoor PWM-FS unit PWM-S
	Heating forced thermo	Indoor PWM-FS unit PWM-S
Cooling	Cooling forced thermo	Indoor PWM-FS unit PWM-S
	Cooling forced thermo	Indoor PWM-FS unit PWM-S
	Cooling forced thermo	Indoor PWM-FS unit PWM-S
Stop	Stop	Indoor PWM-FS unit PWM-S
	Stop	Indoor PWM-FS unit PWM-S
	Stop	Indoor PWM-FS unit PWM-S

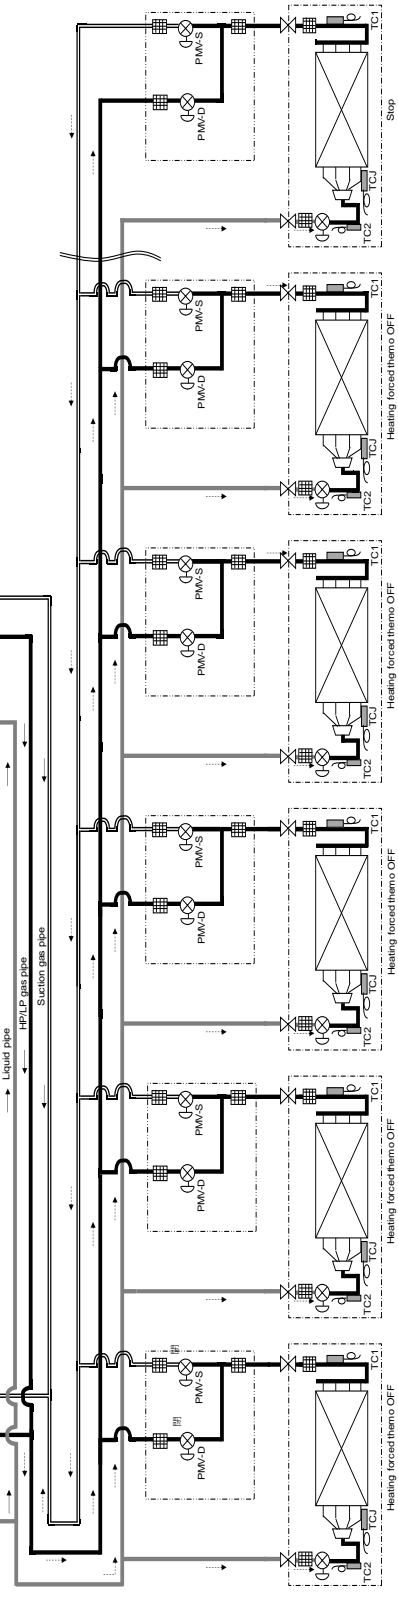



The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

Follower Unit (MMY-MUP0721FT*,MUP0961FT*,MUP072H1FT*)

Follower Unit (MMY-MUP0721FT*,MUP0961FT*,MUP072H1FT*)


Follower Unit (MMY-MUP0721FT*, MUP0961FT*, MUP072H1FT*)

Mode	Outdoor unit
Simultaneous cooling	4-way valve1 ON
	4-way valve2 OFF
	4-way valve3 ON
	PMV1 Control
	PMV2 Control
	PMV3 Control
	PMV4 Control
	SV3D Control
	SV3F Control
	SV4(n) Control
Outdoor fan	SV2 Control
	SV5B Control
	SV6B Control

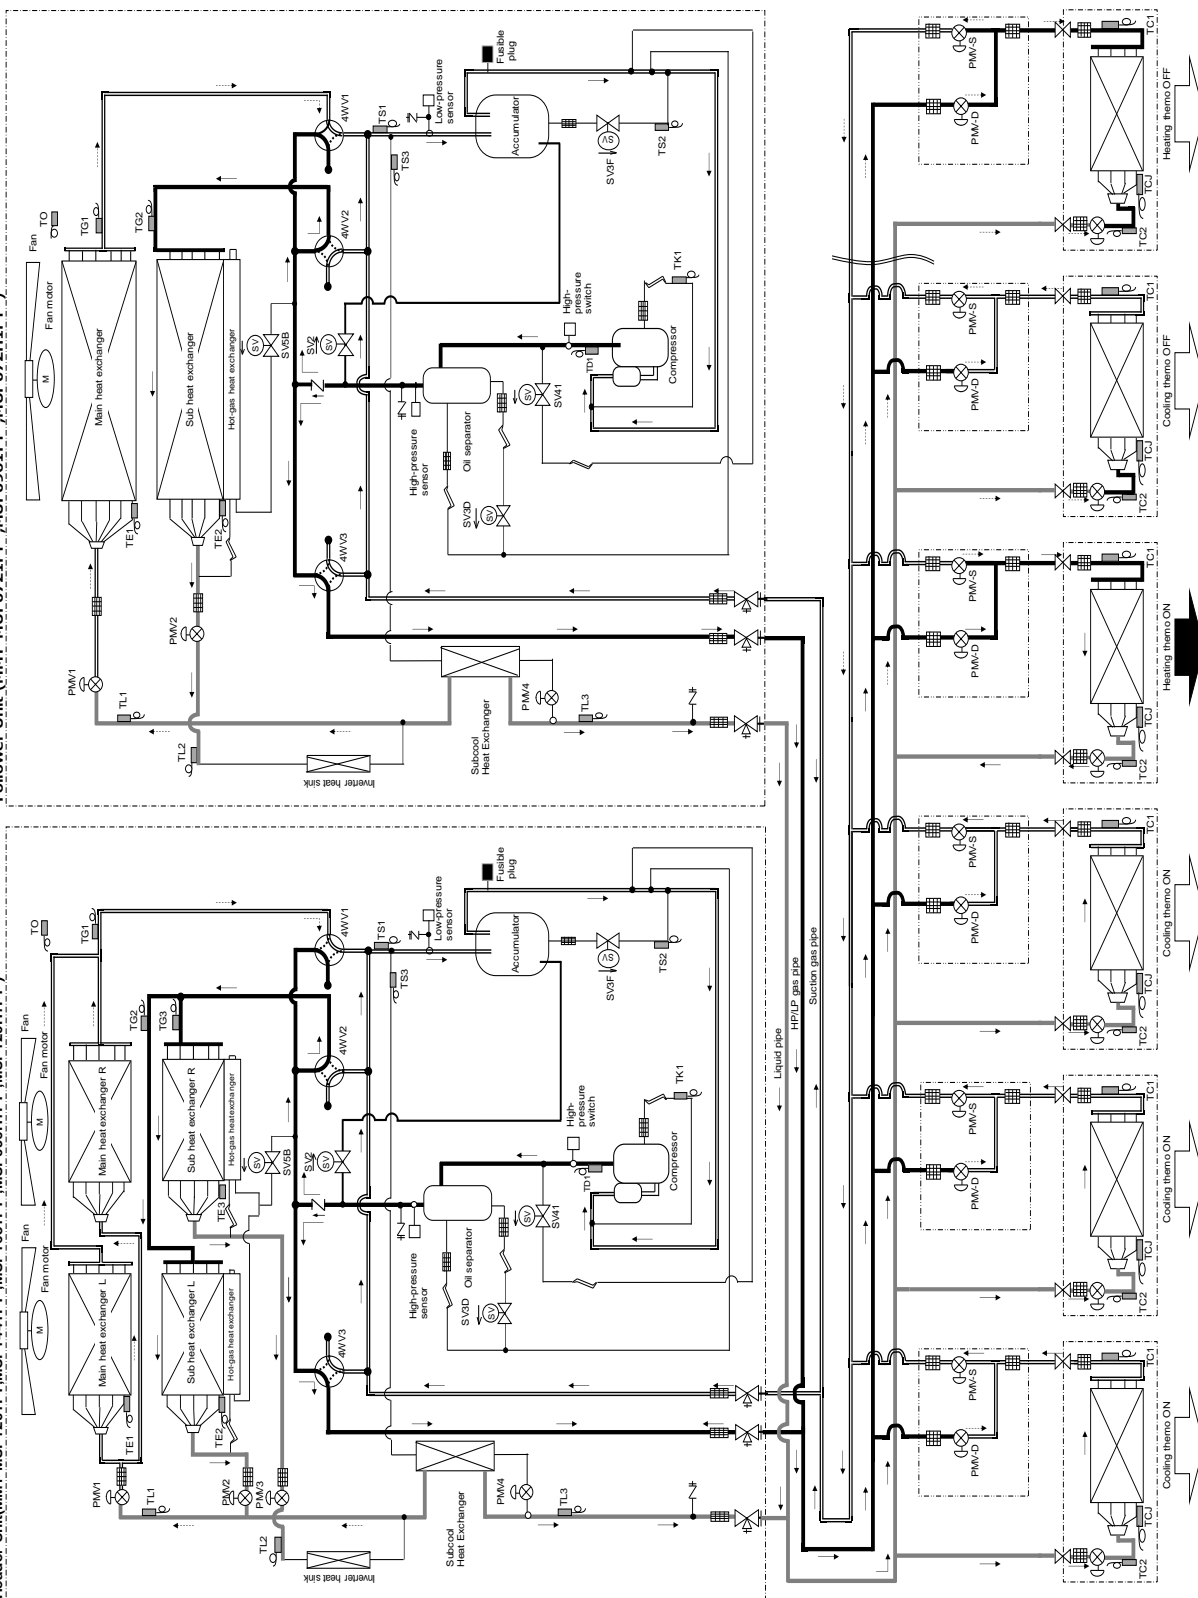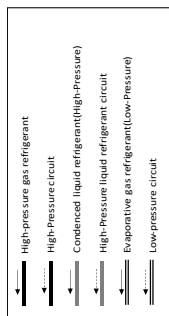
[illegible]

The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

Follower Unit (MMY-MUP0721FT*, MUP0961FT*, MUP072H1FT*)

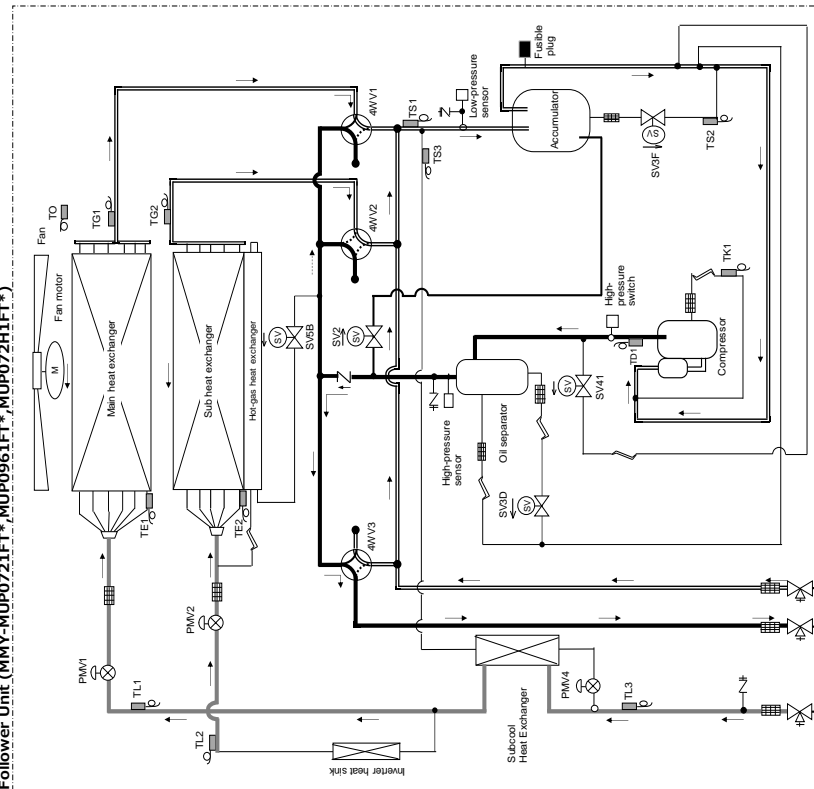


Mode	Indoor unit & FS unit	Actual
Cooling	Indoor PAM-S FS unit PAM-S	Control Open
Heating	Indoor PAM-D FS unit PAM-D	Control Close
Heating	Indoor PAM-S FS unit PAM-S	Control Open
Cooling	Indoor PAM-D FS unit PAM-D	Control Close
Heating	Indoor PAM-S FS unit PAM-S	Control Open
Heating	Indoor PAM-D FS unit PAM-D	Control Close
Off	Indoor PAM-S FS unit PAM-S	Control Close
Stop	Indoor PAM-D FS unit PAM-D	Control Close
Heating	Indoor PAM-S FS unit PAM-S	Control Open
Heating	Indoor PAM-D FS unit PAM-D	Control Close

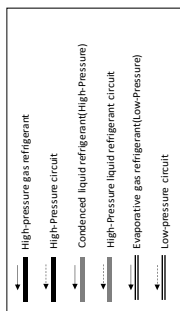



The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

Follower Unit (MMY-MUP0721FT*,MUP0961FT*,MUP072H1FT*)

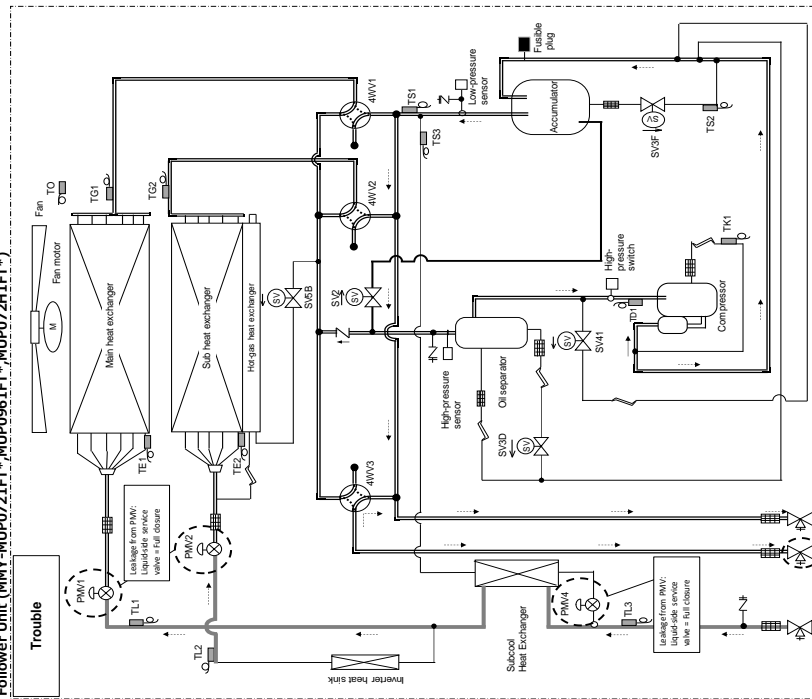



Mode	Indoor Int & FS unit	
		Actuator
Cooling	Indoor PWM	Control
	FS unit PWM-S	Open
	FS unit PWM-D	Open
Cooling	Indoor PWM	Close
	FS unit PWM-S	Open
	FS unit PWM-D	Open
Stop	Indoor PWM	Close
	FS unit PWM-S	Open
	FS unit PWM-D	Open

Mode	Indoor Int & FS unit	
		Actuator
Cooling	Indoor PWM	Control
	FS unit PWM-S	Open
	FS unit PWM-D	Open
Cooling	Indoor PWM	Close
	FS unit PWM-S	Open
	FS unit PWM-D	Open
Stop	Indoor PWM	Close
	FS unit PWM-S	Open
	FS unit PWM-D	Open

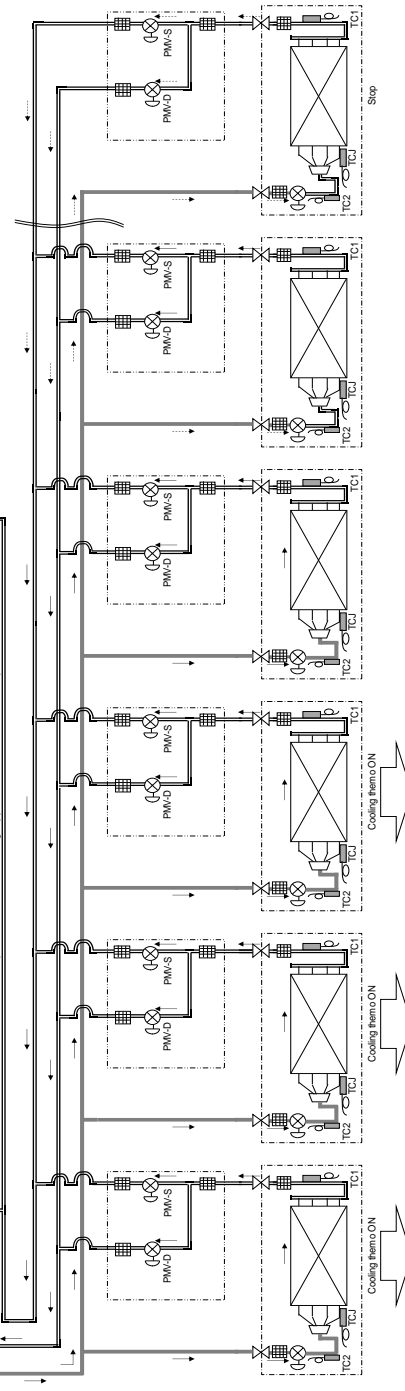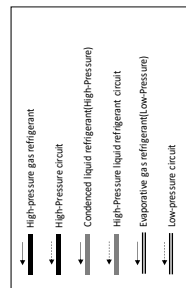

4-8. Manual emergency heating



Header Unit(MMY-MUP1201FT,MUP1441FT*,MUP1681FT*,MUP0961FT*,MUP1201H1FT*)

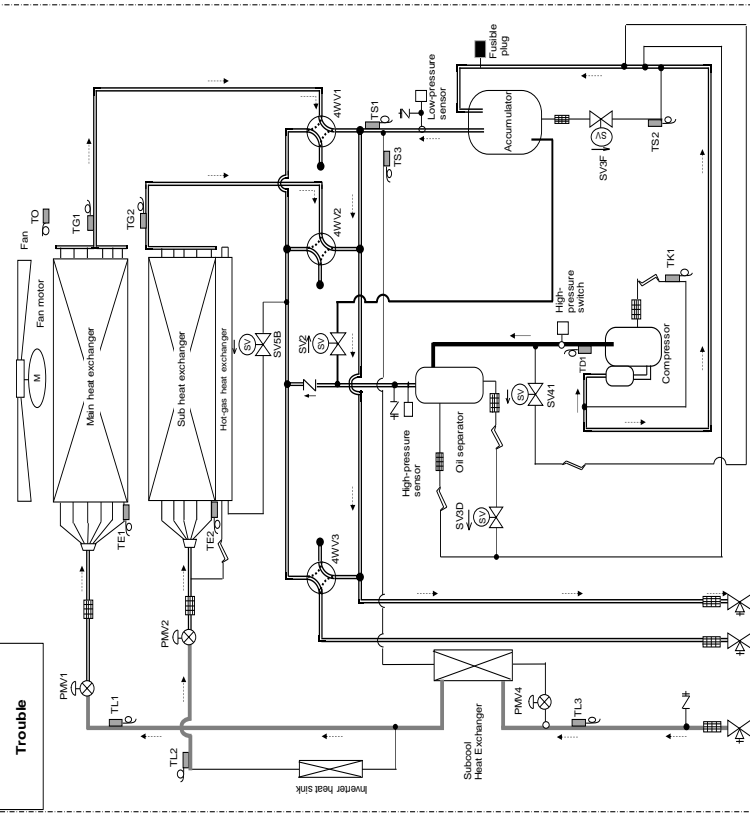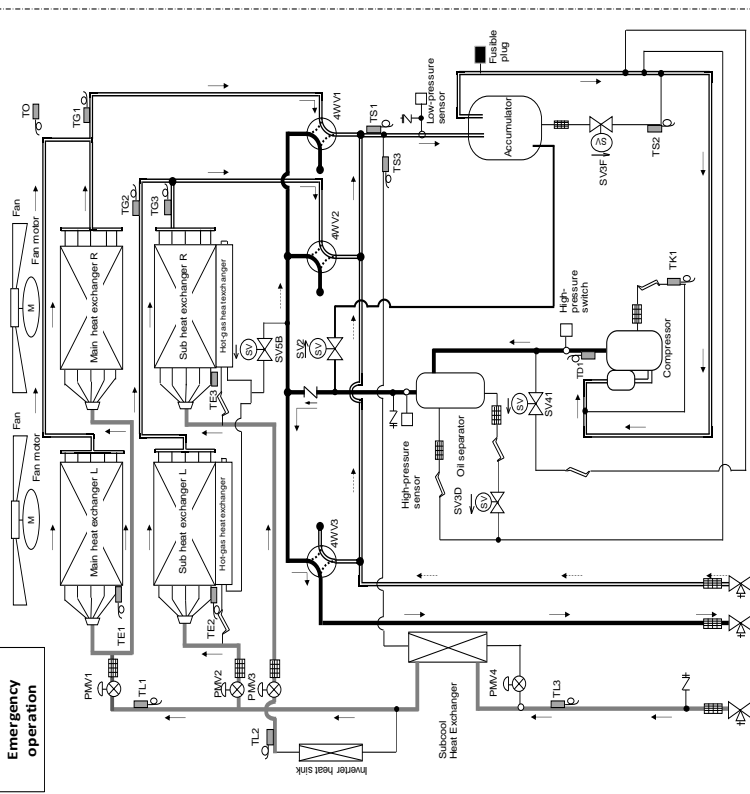

Follower Unit (MMY-MUP0721FT*,MUP0961FT*,MUP0721H1FT*)

Outdoor unit		Actuator
Emergency operation	4-way valve1	ON
	4-way valve2	ON
	4-way valve3	ON
	PMV1	Control
	PMV2	Control
	PMV3	Control
	PMV4	Control
	SV3D	Control
	SV3F	Control
	SV2	Control
Trouble	SV3B	Control
	Outdoor fan	Control
	4-way valve2	ON
	4-way valve3	ON
	PMV1	Control
	PMV2	Control
	PMV3	Control
	PMV4	Control
	SV3F	Control
	SV3D	Control
SV2	Control	
SV3B	Control	
Outdoor fan	Control	

Mode	Indoor int & FS unit	
		Actuator
Heating thermo ON	Indoor PMV	Control
	FS unit PMV-S	Close
	FS unit PMV-D	Open
Heating thermo OFF	Indoor PMV	Close
	FS unit PMV-S	Close
	FS unit PMV-D	Close
Stop	Indoor PMV	Open
	FS unit PMV-S	Open
	FS unit PMV-D	Close

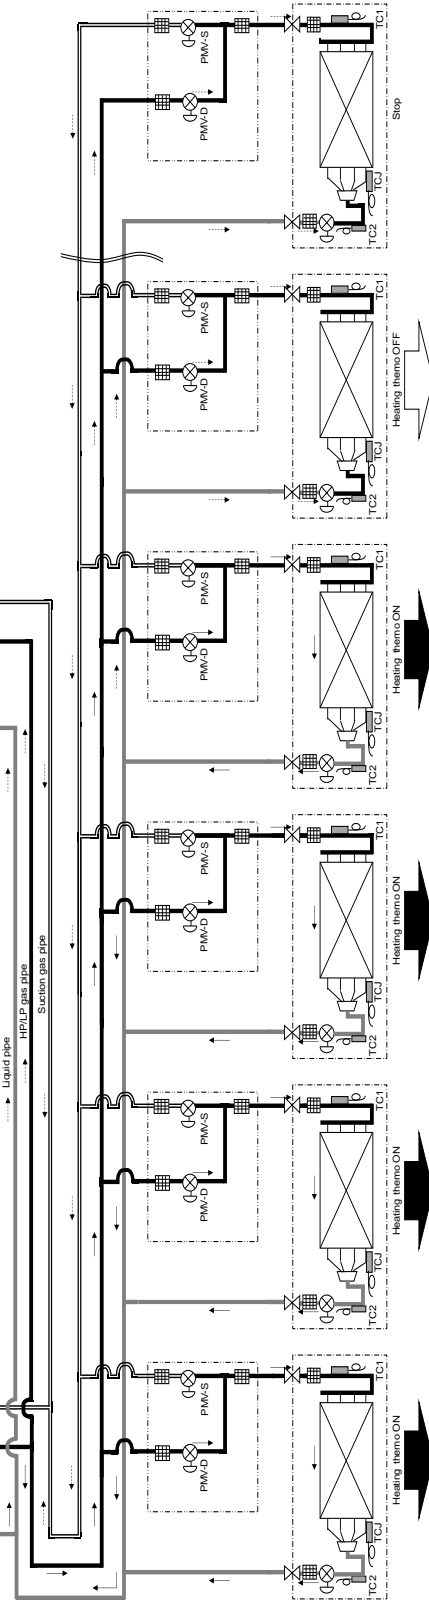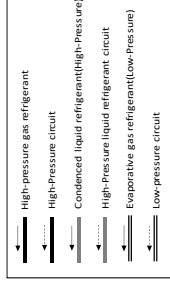


5. CONTROL OUTLINE

5-1. Outdoor Unit

Item	Description of operation, numerical data, and other information	Remarks
1. Pulse motor valve (PMV) control	<p>[1] PMV1, 2, 3 control (PMV 1 and 2, 3)</p> <p>1) During air conditioner operation, the pulse count of a PMV1 (pulse motor valve 1) is controlled between 75 pls and 3000 pls, During air conditioner operation, the pulse count of a PMV2, 3 is controlled between 25 pls and 500 pls.</p> <p>2) During cooling, the PMV opening is controlled on the basis of measurements provided by the TL temperature sensor and the Pd sensor (subcool control).</p> <p>3) During heating, the PMV opening is controlled on the basis of measurements provided by the TS, TD and TG temperature sensor and the Ps sensor (superheat control).</p> <p>4) PMVs are fully closed when the air conditioner is in thermostat OFF state or upon being tuned off normally or shut down due to an abnormality.</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;"> <p>Opening of PMV1 (pls)</p> <p>PMV1</p> </div> <div style="text-align: center;"> <p>Opening of PMV2, 3 (pls)</p> <p>PMV2, 3</p> </div> </div> <p>[2] PMV 4 control</p> <p>1) During cooling, the pulse count of a PMV 4 (pulse motor valve 4) is controlled between 30 pls and 350 pls. The PMV 4 opening is controlled on the basis of measurements provided by the TL3 temperature sensor and Pd sensor (subcool control). or TS3 temperature sensor and Ps sensor (superheat control).</p> <p>2) During heating, the pulse count of a PMV4 is controlled between 7 pls and 80 pls or 0 pls and 350 pls. The PMV 4 operation is controlled by the pulse count of PMV opening of indoor unit and zone judgment. (Indoor refrigerant excess control) or controlled on the basis of measurements provided by the TS3 temperature sensor and Ps sensor. (superheat control).</p> <p>3) PMVs are fully closed when the air conditioner is in thermostat OFF state, upon being turned off normally or shut down due to an abnormality.</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;"> <p>Opening of PMV4 during cooling (pls)</p> <p>PMV4</p> </div> <div style="text-align: center;"> <p>Opening of PMV4 during heating (pls)</p> <p>PMV4</p> </div> </div> <p style="text-align: center; margin-top: 10px;">* values in () are during indoor refrigerant excess control</p>	

Item	Description of operation, numerical data, and other information	Remarks
2. Outdoor fan control	<div><div>[1] Cooling fan control</div><div><div>1) Outdoor fan speed (mode) is controlled on the basis of measurements provided by the Pd sensor.</div><div>2) For a specified period after the start of cooling operation, the header outdoor unit controls outdoor fan speed (mode) on the basis of measurements provided by the Pd sensor. Follower units, on the other hand, control outdoor fan speed (mode) on the basis of measurements provided by the TE1 temperature sensor.</div></div><div><div><div><div><div>Pd psi (MPa)</div><div>426(2.94)</div><div>397(2.74)</div><div>377(2.6)</div><div>348(2.4)</div><div>344(2.3)</div><div>306(2.11)</div><div>284(1.96)</div><div>277(1.91)</div><div>199(1.37)</div></div><div><div><div>[Highest mode]</div><div>[Current mode +1] / 1 second</div><div>[Current mode +1] / 3 seconds</div><div>[Current mode +1] / F seconds (mode 2 ~ Highest)</div><div>[Hold]</div><div>[Current mode +1] / 75 second (mode raised up to 13)</div><div>(mode 1 to highest)</div><div>[Current mode -1] / F seconds (mode being lowered: Highest mode -1 → 1)</div><div>[Current mode -1] / 2 or 16 seconds (down to mode 0)</div><div>(mode lowered as rapidly as every two seconds)</div></div><div><div>Mode being raised: mode 0 → 1</div><div>Interval control [Mode 0]: 180 seconds [Mode 1]: 30 seconds</div></div></div></div></div><div><div>* Available control modes are 0 (at rest) to 63.</div><div>[2] Heating fan control</div><div><div>1) Outdoor fan speed (mode) is controlled on the basis of the measurements provided by the TE temperature sensor.</div><div>2) If TE > 77 °F(25 °C) is continuously detected for 8 minutes, the fan maybe turned off. However, this condition is the same as normal thermostat OFF, so that fan operation will be restarted.</div><div>3) For a specified period after air conditioner start up and during defrosting this control is disabled.</div><div>4) When refrigerant is extremely short supply, this control may cause the air conditioner to be repeatedly turned on and off.</div></div><div><div><div>TE1 temperature °F(°C)</div><div><div>77(25)</div><div>46.4(8)</div><div>42.8(6)</div><div>39.2(4)</div><div>35.6(2)</div></div><div><div>Zone A: Lowest mode, timer count for forced compressor shutdown</div><div>Zone B: -2/15 seconds (down to lowest mode)</div><div>Zone C: -1/15 seconds (down to lowest mode)</div><div>Zone D: Hold (staying at current mode)</div><div>Zone E: +1/15 seconds (up to highest mode)</div><div>Zone F: Highest mode</div></div><div><div>Zone A: Lowest mode, timer count for forced compressor shutdown</div><div>Zone B: -2/15 seconds (down to lowest mode)</div><div>Zone C: -1/15 seconds (down to lowest mode)</div><div>Zone D: Hold (staying at current mode)</div><div>Zone E: +1/15 seconds (up to highest mode)</div><div>Zone F: Highest mode</div><div>TE1 temperature °F(°C)</div></div></div></div><div><div>[3] Upper limit shift correction control in outdoor fan mode while operating in heating mode</div><div><div>... This is a control that lowers the upper limit of the outdoor fan speed during heating operation when the air conditioning load is low and the number of indoor units operating is small.</div><div><div>1) Lowers the current fan mode upper limit by -1 mode</div><div>2) After that, while the conditions are met, the mode will be down every 30 seconds.</div><div>3) The lower limit of the mode down is the fan mode "54".</div><div>4) When the comp is turned off, this control is canceled and it returns to the initial setting upper limit mode.</div><div>5) When the number of indoor driving increases, one mode will be up every 30 seconds.</div></div></div></div></div></div></div>	<div><div><div>• In the simultaneous cooling mode, it is controlled by the target condensation temperature determined by the indoor required capacity.</div><div>• The fan speed corresponding to the highest mode varies with the capacity of the outdoor unit.</div><div>• Pd control point may change depending on conditions and operation mode</div><div>• TE sensor temperature is the lowest temperature by comparing TE 1, 2, 3</div><div>• The fan speed corresponding to the highest mode varies with the capacity of the outdoor unit.</div><div>• Mode down is valid only when TH(x) temperature < 167°F(75°C)</div><div>• Mode up is valid only when TH(x) temperature ≥ 176°F(80°C)</div></div></div>

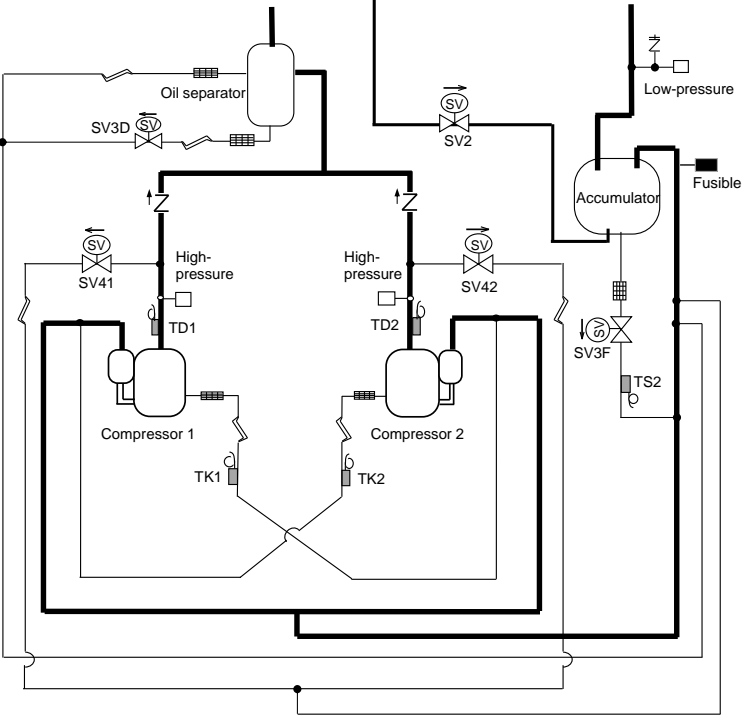Item	Description of operation, numerical data, and other information	Remarks
3. Capacity control	<p>1) The compressors of the header and follower units are controlled on the basis of capacity demand issued by indoor controllers.</p> <p>2) The two compressors featured in an outdoor unit operate on a rotational basis, so that, every time they come to stop, their order of startup changes.</p> <p>3) When one or more follower outdoor units are connected, the system will be started next time between all the outdoor units including the header outdoor unit when the system is stopped (including thermostat-off) or the power is reset while 24 hours or more has passed on the accumulated operating time. Reverse the priority of time.</p>	<ul style="list-style-type: none"> The outdoor rotation control may be performed even when the insufficient refrigerant state is not released even if the indoor refrigerant recovery control is performed.
4. Oil level detection control	<p>1) TK1,2 sensor detection temperature and prediction TK1, 2 sensor temperature is used to judge whether there is an appropriate amount of oil in the compressor case. This control is performed independently by the header outdoor unit and follower outdoor units.</p> <p>2) Based on the relationship between the TK detection temperature of the compressor into and the predicted TK sensor temperature, it is judged whether the oil level in the compressor case is appropriate, and if it is insufficient, the upper limit of the compressor speed and SV3D valve operate.</p> <p>3) If the shortage is not resolves by the operation of 2), shift to the oil recovery operation.</p> <p>4) This control function is performed whenever at least one compressor is in operation.</p> 	<ul style="list-style-type: none"> The predicted TK sensor temperature is the predicted value of the TK sensor temperature when the oil is in proper condition SV3D valve: Solenoid valve for oil return of oil separator Oil level judgment <ul style="list-style-type: none"> ① guide When predicted TK-TK < 50°F(10°C), the oil level is ② appropriate When predicted TK-TK ≥ 50°F(10°C), the oil level is insufficient Predicted TK1, 2 and TK1, and 2 sensor temperature It can check by "8-6. 7-Segment Display Function". The TK sensor detection temperature and the predicted TK sensor temperature can be found in the the 7-Segment Display Function (8.6.7(33)).

Item	Description of operation, numerical data, and other information	Remarks
5. Oil recovery control	<p>This is a control for preventing oil shortage in the compressor between the outdoor units, and oil equalization control is performed as follows during cooling operation and heating operation.</p> <p>[1] During cooling operation When the oil level of any compressor in the outdoor unit is determined to be insufficient due to the stagnation of refrigerating machine oil in the gas pipes and the indoor unit during cooling operation, this control recovers the oil from the indoor unit and evens oil levels between the outdoor units by increasing the compression frequency of the outdoor unit that detected drop of the oil level. This control is managed by the header outdoor unit.</p> <p>1) Control start condition</p> <ul style="list-style-type: none"> • The operating time of the compressor in which an insufficient oil level is detected exceeds 15 minutes • The operating time of the compressor in which an insufficient oil level is detected exceeds 30 minutes • The operating time of the compressor in which an insufficient oil level is detected exceeds 45 minutes • When the operating time of the compressor in which an insufficient oil level is detected exceeds 60 minutes, it causes an abnormal stop of the compressor. <p>2) Control content</p> <ul style="list-style-type: none"> • The operating compressor is operated at the target speed, the stopped compressor is started, and the compressor is operated at the target speed. • Switch control mode in the indoor unit to the cooling oil (refrigerant) recovery control mode, and open the PMV opening of the indoor unit by a certain opening. • After the recovery control is performed for a predetermined time, the recovery control ends and the normal cooling operation is resumed. <p>[2] During heating operation This control can recover the stagnated oil in the piping or indoor heat exchanger and return it to the compressor by defrosting operation when the oil level continues to decrease even if the compressor oil level has been detected and the oil return control from the oil separator has functioned.</p> <ul style="list-style-type: none"> • Reverse defrost control is performed every 30 minutes after an insufficient oil level is confirmed during heating operation. • When the operating time of the compressor in which an insufficient oil level is detected exceeds 60 minutes, it causes an abnormal stop of the compressor. 	<ul style="list-style-type: none"> • The shortage is confirmed when the shortage continues even if the recovery operation (SV3D valve is turned on) is performed for each outdoor unit when the shortage is detected. * Depending on the number of indoor units when an insufficient oil level is confirmed, this control determines whether to recover the oil from only the operating indoor units or all the indoor units. • Oil level confirmation timer operates when an insufficient oil level is detected.
6. Heating refrigerant (oil) recovery control	<p>Since the indoor unit that is stopped during heating operation closes the PMV, liquid refrigerant may accumulate in the heat exchanger, resulting in a refrigerant shortage condition. This control is to recover the liquid refrigerant to return it to the outdoor unit when a refrigerant shortage is detected.</p> <p>The PMV opening of the stopped indoor unit is slightly opened to return the refrigerant to the outdoor unit, but if the insufficient refrigerant state is still not resolved, heating refrigerant recovery control is performed.</p> <p>This control also recovers the refrigerant in Indoor/Outdoor unit after defrosting and the oil in the outdoor heat exchanger during heating overload operation. It is managed by the header outdoor unit.</p> <p>[1] Paused heating indoor unit PMV minute opening control</p> <ul style="list-style-type: none"> • Control start condition When all the following conditions are satisfied • There are units with heating thermostat ON and other than thermostat ON (stop/thermostat OFF). • When the outdoor unit determines the refrigerant shortage condition • When the outdoor PMV opening exceeds the specified opening or the TD sensor temperature exceeds the specified value • Control content When the control starts, the PMV in the indoor unit during stop opens by a minute opening. <p>[2] Heating refrigerant recovery control Control start condition</p> <ul style="list-style-type: none"> • At the start of heating operation (when Comp. is turned on from Comp. OFF) • During heating operation transition after defrosting • 40 minutes have passed since the refrigerant shortage state was judged after starting the PMV minute opening control in the paused heating indoor unit. 	<ul style="list-style-type: none"> • The recovery duration varies depending on the load condition, but it usually takes around 5-10 minutes. • The compressor's speed varies depending on the control conditions, indoor capacity, and outdoor unit.

Item	Description of operation, numerical data, and other information	Remarks
7. Defrosting control (Reverse defrosting method)	<ul style="list-style-type: none"> The reverse defrosting method is used for the outdoor unit in a single system, and the individual reverse defrosting method is used for the outdoor units in a connected system. In the individual reverse defrosting, in order to prevent the cold air from dropping during defrosting, the Gr in which the unit that satisfies the defrosting start condition exists is switched to the cooling position of the four-way valve to perform the defrosting operation while Since PMV-D and PMV-S of the FS unit is fully closed, there is no refrigerant flow to the indoor unit. It will be the operation method to continue the heating operation. Only when the outside air temperature is low and the defrosting capacity of the previous defrosting is lack, both reverse defrosting and individual reverse defrosting preform "2Step defrosting". In the 2Step defrosting, the heat exchanger of the outdoor unit is divided into two, and only the upper heat exchanger is defrosted for, after that, only the lower heat exchanger is defrosted for <p>[1] [Defrosting start condition (single and common system common)]</p> <ul style="list-style-type: none"> During the heating operation, if the TE sensor detected temperature falls below the predicted TE sensor temperature by a specified amount, or if the TE sensor detected temperature falls below the frosting temperature for 300 minutes, the defrosting operation starts. (After start-up or when switching from cooling to heating, frost judgment is performed and the defrosting operation is started according to the judgment result.) <p>* In the case of the coupled system, when any of the outdoor units satisfies the defrosting start condition, all the units in the group to which the unit belongs start defrosting operation, and the other Gr units continue heating operation.</p> <p>① <u>Reverse defrosting method (the outdoor unit is a single system)</u></p> <p>[2] Defrost control content</p> <ol style="list-style-type: none"> Stop the compressor that is running. After a certain period of time, the four-way valve is turned off and the outdoor fan is stopped. Turn on the compressor that is off and operate it at the target speed for defrost control. <p>[3] Defrost termination condition</p> <p>When the TE sensor temperature detection value exceeds a certain value (standard 53.0°F(12°C)) after a certain time has passed since the defrost control was started, the defrost end condition will be set and the defrost end control will be performed.</p> <p>[4] Defrost end control content</p> <ol style="list-style-type: none"> Stop the compressor again. Turns on the four-way valve after a certain period of time. Control the refrigerant recovery in the heating room. For control details, see "6. Heating refrigerant (oil) recovery control". <p>② <u>Individual defrost method (outdoor unit is combined system)</u></p> <p>[1] Outdoor unit grouping method</p> <p>The outdoor unit is divided into Gr1 and Gr2 when the power is turned on.</p> <p>[2] Defrost control content</p> <ol style="list-style-type: none"> If any of the units satisfy the defrosting start conditions, all the stopped outdoor units are started, the operating unit operates the compressor at the minimum speed, and after a certain period of time, only the defrosting unit has a four-way valve. To turn off the outdoor fan. Heating Gr continues heating operation as it is PMV-D and PMV-S of the FS unit is fully closed <p>[4] Defrost termination condition</p> <p>When the TE sensor temperature detection value exceeds a certain value (standard 53.0°F(12°C)) after a certain time has passed since the defrost control was started, the defrost end condition will be set and the defrost end control will be performed.</p> <p>* When the defrosting end conditions are met for all outdoor units, the defrosting end control is performed. If any unit does not meet the defrost termination conditions, the outdoor unit that satisfies the defrost termination conditions continues defrosting operation.</p> <p>[5] Defrost end control content</p> <ul style="list-style-type: none"> Defrosting Gr unit <ol style="list-style-type: none"> Operates the compressor at standby speed. After a certain period of time, the four-way valve turns on. Shift to heating start pattern control. Unit of heating Gr <ol style="list-style-type: none"> When all the outdoor units included in the defrosting Gr turn on the four-way valve, the normal heating operation is restored. The outdoor unit to be stopped stops its operation. 	<ul style="list-style-type: none"> TE sensor detection temperature is the lowest temperature of TE1, TE2, TE3 Frosting temperature is -29.3°F(-1.5°C) After the power is turned on, for the first time, the defrosting operation is continued for 25 minutes below the frosting temperature only when the heat exchanger is frosted. Fan mode may be controlled during defrosting for cycle protection. The compressor speed during defrost control is controlled below 85.0rps. TE sensor detection temperature is the lowest temperature of TE1, TE2, TE3 Frosting temperature is -29.3°F(-1.5°C) Fan mode may be controlled during defrosting for cycle protection. The compressor speed of the defrost unit during individual reverse defrost control is controlled at 90rps or less. The compressor speed during standby operation is 15.0 ~ 30.0rps.

Item	Description of operation, numerical data, and other information	Remarks														
8. Release valve control	<div><div>[1] SV4 gas and SV2 balance control</div><div>This control turns on SV4 and SV2 when the compressor is stopped to balance the gas and reduce the starting load when the compressor is turned on next time. This control is performed independently by the center unit and each terminal unit.</div><div>1) Control condition</div><div><ul style="list-style-type: none">At power onWhen the compressor is switched from ON to OFF during cooling operation or heating operation.</div><div>2) Control content</div><div><ul style="list-style-type: none">SV4 (x) is turned on when the power is turned on, and then turned off when ΔP (= Pd - Ps) becomes 290 or less.SV4 (x) turns on when the compressor turns off. (Turns on when ΔP (Pd - Ps) is 435 or more, and turns off when ΔP (Pd - Ps) is 290 or less.)</div><div>[2] SV4 high pressure release control</div><div>This control is a control to suppress the high pressure rise during cooling operation and heating operation. This control is performed independently by the header unit and each follower unit.</div><div>1) Control condition</div><div><ul style="list-style-type: none">Compressor ON</div><div>2) Control content</div><div><ul style="list-style-type: none">When Pd ≥ P1, SV4 (x) is turned on.When Pd ≤ P2, SV4 (x) is turned off.</div><div>* P1 and P2 of each outdoor unit are as follows</div><div><table><tr><th rowspan="2">Pd control point</th><th rowspan="2">Heating</th><th colspan="2">Cooling</th></tr><tr><th>Compressor start-up priority 1</th><th>Compressor start-up priority 2 or later</th></tr><tr><td>P1</td><td>490psi (3.38MPa)</td><td>537psi (3.70MPa)</td><td>537psi (3.70MPa)</td></tr><tr><td>P2</td><td>483psi (3.33MPa)</td><td>534psi (3.68MPa)</td><td>534psi (3.68MPa)</td></tr></table></div><div>3) Release condition</div><div><ul style="list-style-type: none">When the system is stopped and the thermostat is off</div><div>[3] SV4 low pressure release control</div><div><ul style="list-style-type: none">The purpose of this control is to protect the Ps drop during compression ON.This control is performed independently by the header unit and each follower unit.</div><div>1) Control condition</div><div>The outdoor unit that is turned on will judge each item individually.</div><div>2) Control content</div><div><ul style="list-style-type: none">When Ps ≤ 23.2psi (0.16MPa), turn on SV4 (x).When Ps ≥ 29.0psi (0.20MPa), SV4 (x) is turned off.</div><div>3) Release condition</div><div><ul style="list-style-type: none">When the system is stopped and the thermostat is off</div><div>[4] SV2 Accumulator stirring control</div><div><ul style="list-style-type: none">This control is a hot gas bypass control aimed at eliminating oil pools in the accumulator that occur during transient operation.</div><div>1) Control condition</div><div><ul style="list-style-type: none">Compressor ON</div><div>2) Control condition</div><div><ul style="list-style-type: none">Turn on SV2 when any of the following conditions are met.When the cooling room oil recovery control is started.When defrost control for the purpose of oil recovery is started.SV2 is turned off when any of the following conditions is met.When TS2-TU> 5K is detected for 30 seconds while SV3F is ON.When 2 minutes have passed since the oil recovery control in the cooling room was completed.When 2 minutes have passed after the defrost control for the purpose of oil recovery is completed.When defrost control is started for the purpose of oil recovery.When the comp is turned off.</div><div>* If 2 minutes have not passed since the cooling room oil recovery control or defrost control was completed at the time of restart, turn on SV2 until 2 minutes have passed.</div></div>	Pd control point	Heating	Cooling		Compressor start-up priority 1	Compressor start-up priority 2 or later	P1	490psi (3.38MPa)	537psi (3.70MPa)	537psi (3.70MPa)	P2	483psi (3.33MPa)	534psi (3.68MPa)	534psi (3.68MPa)	
Pd control point	Heating			Cooling												
		Compressor start-up priority 1	Compressor start-up priority 2 or later													
P1	490psi (3.38MPa)	537psi (3.70MPa)	537psi (3.70MPa)													
P2	483psi (3.33MPa)	534psi (3.68MPa)	534psi (3.68MPa)													

Item	Description of operation, numerical data, and other information	Remarks																		
9. Capacity release control	<p>This control is a capacity release control that is performed for the purpose of suppressing the thermostat-OFF due to freezing prevention due to excessive capacity even in Min speed [rps] during cooling small capacity operation.</p> <p>[1] Control condition</p> <p>Perform when all the following conditions are met.</p> <ul style="list-style-type: none">• During All cooling / simultaneous cooling / simultaneous heating operation• It is an outdoor unit with startup priority 1.• When the compressor speed is less than A [rps] during cooling operation <table border="1"><thead><tr><th>Compressor</th><th>A [rps]</th></tr></thead><tbody><tr><td>(77cc A3)</td><td>25.0</td></tr><tr><td>(120cc K4)</td><td>20.5</td></tr></tbody></table> <ul style="list-style-type: none">• When TD(X) ≤ 204.8°F(96°C) <p>[2] Control content</p> <ul style="list-style-type: none">• When any of the indoor units that are thermostat-ON detects TCJ ≤ 37°F(3°C) or TC1 37°F(3°C) while any of the compressors is ON, SV4 (x) is turned ON.• When any of the indoor units that are thermostat-ON detects TCJ > 45°F(7°C) or TC1 > 45°F(7°C) while any compressor is ON, SV4 (x) is turned OFF. <p>[3] Release condition</p> <ul style="list-style-type: none">• When the system is stopped and the thermostat is off• When TD (X) > 216°F(102°C) is detected• When the compressor speed is above A [rps]	Compressor	A [rps]	(77cc A3)	25.0	(120cc K4)	20.5													
Compressor	A [rps]																			
(77cc A3)	25.0																			
(120cc K4)	20.5																			
10. High pressure release compressor shut down	<p>This control function is aimed at automatically shutting down a compressor in an outdoor unit depending on Pd. It is individually performed by the header unit and each follower unit.</p> <p>[1] Control details</p> <ul style="list-style-type: none">• Compressors are shut down when Pd reaches or exceeds P0• The Pd control point P0 is switched according to the start priority of the outdoor unit• The compressor restart prevention timer (2 minutes 30 seconds) is set, and the control terminated. <table border="1"><thead><tr><th colspan="2">Pd control point P0</th><th>Cooling</th><th>Heating</th></tr></thead><tbody><tr><td rowspan="2">Outdoor unit priority1</td><td>compressor1</td><td>547psi(3.77MPa)</td><td>512psi(3.53MPa)</td></tr><tr><td>compressor2</td><td>540psi(3.72MPa)</td><td>506psi(3.49MPa)</td></tr><tr><td rowspan="2">Outdoor unit priority 2-5</td><td>compressor1</td><td>540psi(3.72MPa)</td><td>500psi(3.45MPa)</td></tr><tr><td>compressor2</td><td>540psi(3.72MPa)</td><td>495psi(3.41MPa)</td></tr></tbody></table>	Pd control point P0		Cooling	Heating	Outdoor unit priority1	compressor1	547psi(3.77MPa)	512psi(3.53MPa)	compressor2	540psi(3.72MPa)	506psi(3.49MPa)	Outdoor unit priority 2-5	compressor1	540psi(3.72MPa)	500psi(3.45MPa)	compressor2	540psi(3.72MPa)	495psi(3.41MPa)	
Pd control point P0		Cooling	Heating																	
Outdoor unit priority1	compressor1	547psi(3.77MPa)	512psi(3.53MPa)																	
	compressor2	540psi(3.72MPa)	506psi(3.49MPa)																	
Outdoor unit priority 2-5	compressor1	540psi(3.72MPa)	500psi(3.45MPa)																	
	compressor2	540psi(3.72MPa)	495psi(3.41MPa)																	
11. Case heater control	<p>This control function is aimed at preventing the accumulation of refrigerant in those case, and is performed by all outdoor units.</p> <p>If the power supply has not been turned on for a specified period before a post-installation test run. Compressor failure may occur.</p> <p>Similarly, when starting compressors after a long period of no power supply, it is recommended that the power supply be turned on for a while before operation is resumed, just like a post-installation test run.</p> <p>This control function is sometimes used alongside an electrical changing of the compressor motor windings. In this case, a changing sound may be heard, but this is normal.</p> <p>[1] Control details</p> <ul style="list-style-type: none">• The heaters are turned on while the compressors are turned off.• The heaters are turned off when TO sensor temperature becomes ≥ 82.4°F(28 °C) and are turned back on when TO sensor temperature becomes ≤ 77.0°F(25 °C).• When the compressors are turned on, the heaters are kept on for 10 minutes.																			

Item	Description of operation, numerical data, and other information	Remarks																																																															
12. Inverter P.C.board control for compressor	<p>[1] Current, power release value control The purpose of this control is to prevent high pressure rise and overheating of electric parts by reducing the compressor speed when the maximum current and maximum power value set for each model are exceeded.</p> <p>The maximum current and power value for each capacity of each model are as follows</p> <p>460V</p> <p>• Standard</p> <table border="1"> <thead> <tr> <th>ton</th><th>Maximum current</th><th>Maximum power</th></tr> </thead> <tbody> <tr><td>16</td><td>31.8</td><td>21.68</td></tr> <tr><td>14</td><td>27.4</td><td>18.67</td></tr> <tr><td>12</td><td>24.6</td><td>16.75</td></tr> <tr><td>10</td><td>21.3</td><td>15.61</td></tr> <tr><td>8</td><td>17.5</td><td>11.90</td></tr> <tr><td>6</td><td>17.4</td><td>11.84</td></tr> </tbody> </table> <p>• High heat</p> <table border="1"> <thead> <tr> <th>ton</th><th>Maximum current</th><th>Maximum power</th></tr> </thead> <tbody> <tr><td>10</td><td>25.4</td><td>17.29</td></tr> <tr><td>8</td><td>25.0</td><td>17.00</td></tr> <tr><td>5</td><td>18.5</td><td>12.61</td></tr> </tbody> </table> <p>208-230V</p> <p>• Standard</p> <table border="1"> <thead> <tr> <th>ton</th><th>Maximum current</th><th>Maximum power</th></tr> </thead> <tbody> <tr><td>14</td><td>57.4</td><td>18.67</td></tr> <tr><td>12</td><td>51.5</td><td>16.75</td></tr> <tr><td>10</td><td>36.8</td><td>12.86</td></tr> <tr><td>8</td><td>36.6</td><td>11.90</td></tr> <tr><td>6</td><td>36.4</td><td>11.84</td></tr> </tbody> </table> <p>• High heat</p> <table border="1"> <thead> <tr> <th>ton</th><th>Maximum current</th><th>Maximum power</th></tr> </thead> <tbody> <tr><td>10</td><td>53.1</td><td>17.90</td></tr> <tr><td>8</td><td>52.3</td><td>17.90</td></tr> <tr><td>5</td><td>36.6</td><td>11.90</td></tr> </tbody> </table> <p>*2 For comp models, it is the maximum value per comp.</p> <p>Even when the TH sensor temperature $\geq 176.0^{\circ}\text{F}(80^{\circ}\text{C})$, the compressor speed is reduced, and when the TH sensor temperature $< 163.4^{\circ}\text{F}(73^{\circ}\text{C})$ continues, the rotation speed increase is permitted.</p> <p>[2] Heat sink overheat abnormality</p> <ol style="list-style-type: none"> 1) Stop the compressor operation when the TH sensor temperature exceeds $199.4^{\circ}\text{F}(93^{\circ}\text{C})$. 2) When the above is stopped, the abnormal count is set to 1, and it restarts after 2 minutes and 30 seconds. If you continue the operation for 10 minutes or more after restarting, the trouble count will be cleared 3) A trouble is confirmed with a trouble count of "4". <p>[3] High pressure SW control</p> <ol style="list-style-type: none"> 1) Inverter compressor stops driving the compressor when the high pressure SW is operating. 2) When the above is stopped, the abnormal count is set to 1, and it restarts after 2 minutes and 30 seconds. If you continue the operation for 10 minutes or more after restarting, the trouble count will be cleared. 3) The trouble count becomes "4" and the trouble is confirmed. The above display is "P04". 	ton	Maximum current	Maximum power	16	31.8	21.68	14	27.4	18.67	12	24.6	16.75	10	21.3	15.61	8	17.5	11.90	6	17.4	11.84	ton	Maximum current	Maximum power	10	25.4	17.29	8	25.0	17.00	5	18.5	12.61	ton	Maximum current	Maximum power	14	57.4	18.67	12	51.5	16.75	10	36.8	12.86	8	36.6	11.90	6	36.4	11.84	ton	Maximum current	Maximum power	10	53.1	17.90	8	52.3	17.90	5	36.6	11.90	
ton	Maximum current	Maximum power																																																															
16	31.8	21.68																																																															
14	27.4	18.67																																																															
12	24.6	16.75																																																															
10	21.3	15.61																																																															
8	17.5	11.90																																																															
6	17.4	11.84																																																															
ton	Maximum current	Maximum power																																																															
10	25.4	17.29																																																															
8	25.0	17.00																																																															
5	18.5	12.61																																																															
ton	Maximum current	Maximum power																																																															
14	57.4	18.67																																																															
12	51.5	16.75																																																															
10	36.8	12.86																																																															
8	36.6	11.90																																																															
6	36.4	11.84																																																															
ton	Maximum current	Maximum power																																																															
10	53.1	17.90																																																															
8	52.3	17.90																																																															
5	36.6	11.90																																																															

Item	Description of operation, numerical data, and other information	Remarks
13. Heat sink condensation prevention control	<p>Since the refrigerant cooling heat sink cools the device by the refrigerant temperature of the liquid pipe, if the liquid pipe temperature drops due to a gas shortage cycle, dew condensation on the device may occur. Therefore, the control is for the purpose of preventing dew condensation on the element.</p> <p>[1] Control condition</p> <ul style="list-style-type: none"> • Compressor ON • Do not execute this control during startup control • Do not execute this control during defrosting operation • After 10 minutes have passed since heating indoor unit increase control was completed. <p>[2] Control content</p> <ol style="list-style-type: none"> 1) During cooling operation, when TO-TL2 \geq 5K is continued for 5 minutes 2) During heating operation, at the time point when TO supplement-TL2 \geq 5K is continued for 5 minutes 3) The outdoor unit will be stopped, and the system restart prevention timer will be set. 4) When control content is detected 4 times, the check code is determined. (P07-04) <ul style="list-style-type: none"> • The header outdoor unit will be stopped, and the system restart prevention timer will be set. • For the follower outdoor units, the compressor of the unit that detected the abnormality is turned off to prevent the compressor from restarting. Set the timer and send the [compressor start permission: OFF] signal outside the center room. • Abnormality count is [1]. 	

<Other points to note>

1) Cooling Operation at Low Outdoor Temperature

- ① When suction pressure (Ps) decreases, the indoor unit operation may stop due to anti-frost control based on the temperature of the TC sensor of indoor unit.
- ② When suction pressure (Ps) decreases, the compressor speed [rps] may be decreased due to cooling capacity control.
- ③ When discharge temperature (TD) is lower than 140.0°F(60°C), the compressor speed [rps] may be increased due to indoor unit command.




2) PMV (Pulse motor Valve)

- ① When power is turned on, the PMV will initialize and make a knocking sound. If there is no knocking sound, there is possibility of PMV malfunction. However, if the outdoor unit area has high ambient noise, there is possibility PMV knocking sound may not be heard.
- ② Do not remove PMV Coil (head part) during operation. It will affect the control valve opening.
- ③ When transporting the set, do not ever remove the PMV Coil. Valve will close and sealing the liquid refrigerant which may damage the valve.
- ④ When removing and reattaching the PMV Coil, push in the coil firmly until [Click] sound is heard, turn off the power and turn it on again.

3) Fan mode during heating operation on same system line of indoor unit

In the same system line of indoor unit, if there's one indoor unit is on the heating operation, the other indoor units cannot do Fan Mode. The indoor unit for which Fan Mode is selected will be forcibly stopped, and ["operation standby ⏻"] will be displayed on the remote controller. Refrigerant will accumulate in the indoor unit that is operating in fan mode. This condition is set to prevent repeated refrigerant recovery.

5-2. Indoor Unit

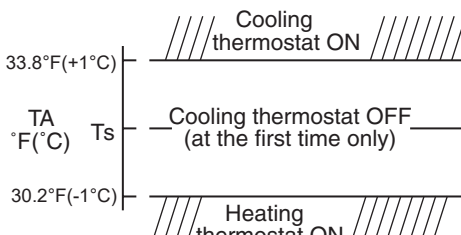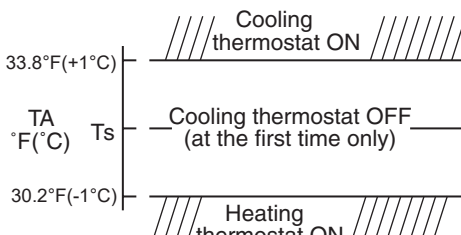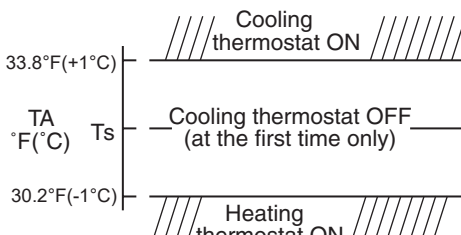No.	Item	Outline of specifications	Remarks														
1	When power supply is reset	<div>1) Distinction of outdoor unit When the power supply is reset, the outdoors are distinguished and the control is selected according to the distinguished result.</div> <div>2) Setting of indoor fan speed and existence of air direction adjustment Based on EEPROM data, select setting of the indoor fan speed and the existence of air direction adjustment.</div> <div>3) If resetting the power supply during occurrence of a trouble, the check code is once cleared. After ON/OFF button of the remote controller was pushed and the operation was resumed, if the abnormal status continues, the check code is again displayed on the remote controller.</div>															
2	Operation mode selection	<div>1) Based on the operation mode selecting command from the remote controller, the operation mode is selected.</div> <table><thead><tr><th>Remote controller command</th><th>Control outline</th></tr></thead><tbody><tr><td>STOP</td><td>Operation stops.</td></tr><tr><td>FAN</td><td>Fan operation</td></tr><tr><td>COOL</td><td>Cooling operation</td></tr><tr><td>DRY</td><td>Dry operation</td></tr><tr><td>HEAT</td><td>Heating operation</td></tr><tr><td>AUTO (Heat recovery system outdoor unit type)</td><td><div>• TA and Ts automatically select COOL/ HEAT operation mode for operation.</div><div>• The operation is performed as shown in the following figure according to TA value at the first time only. (In the range of $T_s - 1 < TA < T_s + 1$, Cooling thermostat OFF (Fan) / Setup air volume operation continues.)</div><div></div><div>* Heat recover system outdoor unit type can select automatic mode. While a wireless remote controller is used, the mode is notified by “Pi Pi” (two times) receiving sound and the alternate flashing of [TIMER ☹] and [READY ☺]. To clear the alternate flashing, change the mode on the wireless remote controller.</div></td></tr></tbody></table> <div>TA: Room temp. Ts: Setup temp.</div>	Remote controller command	Control outline	STOP	Operation stops.	FAN	Fan operation	COOL	Cooling operation	DRY	Dry operation	HEAT	Heating operation	AUTO (Heat recovery system outdoor unit type)	<div>• TA and Ts automatically select COOL/ HEAT operation mode for operation.</div> <div>• The operation is performed as shown in the following figure according to TA value at the first time only. (In the range of $T_s - 1 < TA < T_s + 1$, Cooling thermostat OFF (Fan) / Setup air volume operation continues.)</div> <div></div> <div>* Heat recover system outdoor unit type can select automatic mode. While a wireless remote controller is used, the mode is notified by “Pi Pi” (two times) receiving sound and the alternate flashing of [TIMER ☹] and [READY ☺]. To clear the alternate flashing, change the mode on the wireless remote controller.</div>	
Remote controller command	Control outline																
STOP	Operation stops.																
FAN	Fan operation																
COOL	Cooling operation																
DRY	Dry operation																
HEAT	Heating operation																
AUTO (Heat recovery system outdoor unit type)	<div>• TA and Ts automatically select COOL/ HEAT operation mode for operation.</div> <div>• The operation is performed as shown in the following figure according to TA value at the first time only. (In the range of $T_s - 1 < TA < T_s + 1$, Cooling thermostat OFF (Fan) / Setup air volume operation continues.)</div> <div></div> <div>* Heat recover system outdoor unit type can select automatic mode. While a wireless remote controller is used, the mode is notified by “Pi Pi” (two times) receiving sound and the alternate flashing of [TIMER ☹] and [READY ☺]. To clear the alternate flashing, change the mode on the wireless remote controller.</div>																
3	Room temp. control	<div>1) Adjustment range: Remote controller setup temperature °F(°C)</div> <table><thead><tr><th></th><th>COOL/DRY</th><th>HEAT</th><th>AUTO*</th></tr></thead><tbody><tr><td>Wired type</td><td>64(18) to 84(29)</td><td>64(18) to 84(29)</td><td>64(18) to 84(29)</td></tr><tr><td>Wireless type</td><td>63(17) to 86(30)</td><td>63(17) to 86(30)</td><td>63(17) to 86(30)</td></tr></tbody></table>		COOL/DRY	HEAT	AUTO*	Wired type	64(18) to 84(29)	64(18) to 84(29)	64(18) to 84(29)	Wireless type	63(17) to 86(30)	63(17) to 86(30)	63(17) to 86(30)	<div>• Heat recovery system only</div>		
	COOL/DRY	HEAT	AUTO*														
Wired type	64(18) to 84(29)	64(18) to 84(29)	64(18) to 84(29)														
Wireless type	63(17) to 86(30)	63(17) to 86(30)	63(17) to 86(30)														



No.	Item	Outline of specifications	Remarks																
3	Room temp. control (Continued)	<p>2) By setting the CODE No. 06, the setup temperature in heating operation can be compensated.</p> <table><tr><td>Setup data</td><td>0</td><td>2</td><td>4</td><td>6</td></tr><tr><td>Setup temp. compensation</td><td>32°F(+0C°)</td><td>36°F(+2C°)</td><td>39°F(+4C°)</td><td>43°F(+6C°)</td></tr></table> <p>The initial factory default value</p> <table><tr><td>Model</td><td>Set data</td></tr><tr><td>Floor standing cabinet, Floor standing concealed, Floor standing</td><td>0</td></tr><tr><td>Other models</td><td>2</td></tr></table>	Setup data	0	2	4	6	Setup temp. compensation	32°F(+0C°)	36°F(+2C°)	39°F(+4C°)	43°F(+6C°)	Model	Set data	Floor standing cabinet, Floor standing concealed, Floor standing	0	Other models	2	<p>Return air temperature shift of heating operation</p> <p>Except while sensor of the remote controller is controlled (Code No. [32], “0001”)</p>
Setup data	0	2	4	6															
Setup temp. compensation	32°F(+0C°)	36°F(+2C°)	39°F(+4C°)	43°F(+6C°)															
Model	Set data																		
Floor standing cabinet, Floor standing concealed, Floor standing	0																		
Other models	2																		
4	Automatic capacity control	<p>1) Based on the difference between TA and Ts, the operation capacity is determined by the outdoor unit.</p> <div><div><p>COOL</p></div><div><p>HEAT</p></div></div>	<p>Ts: Setup temp. TA: Room temp.</p>																
5	Automatic cooling/heating control	<p>1) The judgment of selecting COOL/HEAT is carried out as shown below. When TA exceeds Tsh by 1.5 for 10 minutes, the operation is thermostat OFF then, the heating operation (thermostat OFF) is changed to cooling operation.</p> <div></div> <p>Description in the parentheses shows an example of cooling ON/OFF.</p> <p>When TA is less than Tsh by 1.5 for 10 minutes, the operation is thermostat OFF then, the cooling operation (thermostat OFF) is changed to heating operation.</p> <p>2) For the automatic capacity control after judgment of cooling/heating, refer to item No.4.</p> <p>3) For temperature compensation of room temp. control in automatic heating, refer to item No.3.</p>	<p>* Heat recovery system only</p> <p>Tsc: Setup temp. in cooling operation Tsh: Setup temp. in heating operation + temp. compensation of room temp. control</p>																







No.	Item	Outline of specifications	Remarks
6	Air speed selection	<p>1) By the command from remote control, fan speed is changed. ((HH), (H+), (H), (L+), (L) or [AUTO])</p> <p>2) When the air speed mode [AUTO] is selected, the air speed varies by the difference between TA and Ts.</p> <p><COOL></p> <p style="text-align: center;">< > : Indicate automatic cooling.</p> <ul style="list-style-type: none"> • Air speed mode [AUTO] in case when remote controller sensor works is equal to that in case when indoor unit sensor works. • If the air speed has been changed once, it is not changed for 3 minutes. However when the air volume is changed, the air speed changes. • When cooling operation has started, select a downward slope for the air speed, that is, the high position. • If the temperature is just on the difference boundary, the air speed is not changed. <p><HEAT></p> <p style="text-align: center;">< > : Indicate automatic heating.</p> <p style="text-align: center;">Indoor unit sensor works. Remote controller sensor works.</p> <p>() : indicate the value when the remote controller sensor is worked.</p> <ul style="list-style-type: none"> • If the air speed has been changed once, it is not changed for 1 minute. However when the air speed changed, the air speed changes. • When heating operation has started, select an upward slope for the air speed, that is, the high position. • If the temperature is at the difference boundary, the air speed is not changed. • If TC2 $\geq 140^{\circ}\text{F}(60^{\circ}\text{C})$, the air speed increases by 1 step. 	<p>HH > H+ > H > L+ > L > UL</p> <p>Fan speed 4-way cassette Compact 4-way 2-way cassette 1-way cassette (SH) Depends on fan speed mode selection at the remote controller. (H+) and (L+) cannot be selected. For Floor Standing Concealed Type, or Floor Standing Cabinet Type, (HH), (H), (L) or [AUTO] can be selected regardless of remote controller models.</p> <p>Code No. 32 0000: Indoor unit sensor (Main unit) 0001: Remote controller sensor</p> <p>TC2: Temperature of indoor heat exchanger sensor</p>







No.	Item	Outline of specifications	Remarks																																																																																																																																																																																																
6	Air speed selection (Continued):	<p>4-way, compact 4-way (only UP015), 2-way, 1-way (SH) (Air speed selection of UP012 or less and UP018 for Compact 4-way are only Standard.)</p> <table><tr><th>CODE No. [5d]</th><th colspan="2">Factory default 0000</th><th colspan="2">Type 1 0001</th><th colspan="2">Type 3 0003</th><th colspan="2">Type 6 0006</th></tr><tr><th>SW501 (1)/(2)</th><th colspan="2">OFF/OFF</th><th colspan="2">ON/OFF</th><th colspan="2">OFF/ON</th><th colspan="2">ON/ON</th></tr><tr><th>Tap</th><th>COOL</th><th>HEAT</th><th>COOL</th><th>HEAT</th><th>COOL</th><th>HEAT</th><th>COOL</th><th>HEAT</th></tr><tr><td>F1</td><td></td><td></td><td></td><td></td><td>HH</td><td>HH</td><td>HH</td><td>HH</td></tr><tr><td>F2</td><td></td><td></td><td>HH</td><td>HH</td><td></td><td></td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td><td></td><td>H+</td><td>H+, H</td><td>H+, H</td><td>H+, H, L+, L</td><td>H+, H, L+, L</td></tr><tr><td>F4</td><td></td><td></td><td>H+</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>F5</td><td></td><td>HH</td><td></td><td>H</td><td></td><td></td><td></td><td></td></tr><tr><td>F6</td><td>HH</td><td></td><td>H+</td><td></td><td>L+</td><td>L+</td><td></td><td></td></tr><tr><td>F7</td><td>H+</td><td>H+</td><td></td><td></td><td>L</td><td>L</td><td></td><td></td></tr><tr><td>F8</td><td></td><td>H</td><td></td><td>L+</td><td></td><td></td><td></td><td></td></tr><tr><td>F9</td><td>H</td><td></td><td>L+</td><td>L</td><td></td><td></td><td></td><td></td></tr><tr><td>FA</td><td></td><td>L+</td><td>L</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>FB</td><td>L+</td><td>L</td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>FC</td><td>L</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>FD</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td></tr></table> <p>Floor standing</p> <table><tr><th>CODE No. [5d]</th><th colspan="2">Standard 0000</th></tr><tr><th>SW501 (1)/(2)</th><th colspan="2">OFF/OFF</th></tr><tr><th>Tap</th><th>COOL</th><th>HEAT</th></tr><tr><td>F1</td><td></td><td></td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td>F5</td><td></td><td>HH</td></tr><tr><td>F6</td><td>HH</td><td></td></tr><tr><td>F7</td><td>H+</td><td>H+</td></tr><tr><td>F8</td><td></td><td>H</td></tr><tr><td>F9</td><td>H</td><td></td></tr><tr><td>FA</td><td></td><td>L+</td></tr><tr><td>FB</td><td>L+</td><td>L</td></tr><tr><td>FC</td><td>L</td><td></td></tr><tr><td>FD</td><td>LL</td><td>LL</td></tr></table>	CODE No. [5d]	Factory default 0000		Type 1 0001		Type 3 0003		Type 6 0006		SW501 (1)/(2)	OFF/OFF		ON/OFF		OFF/ON		ON/ON		Tap	COOL	HEAT	COOL	HEAT	COOL	HEAT	COOL	HEAT	F1					HH	HH	HH	HH	F2			HH	HH					F3				H+	H+, H	H+, H	H+, H, L+, L	H+, H, L+, L	F4			H+						F5		HH		H					F6	HH		H+		L+	L+			F7	H+	H+			L	L			F8		H		L+					F9	H		L+	L					FA		L+	L						FB	L+	L							FC	L								FD	LL	LL	LL	LL	LL	LL	LL	LL	CODE No. [5d]	Standard 0000		SW501 (1)/(2)	OFF/OFF		Tap	COOL	HEAT	F1			F2			F3			F4			F5		HH	F6	HH		F7	H+	H+	F8		H	F9	H		FA		L+	FB	L+	L	FC	L		FD	LL	LL	Setting of height ceiling mode at CODE No. [5D] or at SW501 on P.C.board.
CODE No. [5d]	Factory default 0000		Type 1 0001		Type 3 0003		Type 6 0006																																																																																																																																																																																												
SW501 (1)/(2)	OFF/OFF		ON/OFF		OFF/ON		ON/ON																																																																																																																																																																																												
Tap	COOL	HEAT	COOL	HEAT	COOL	HEAT	COOL	HEAT																																																																																																																																																																																											
F1					HH	HH	HH	HH																																																																																																																																																																																											
F2			HH	HH																																																																																																																																																																																															
F3				H+	H+, H	H+, H	H+, H, L+, L	H+, H, L+, L																																																																																																																																																																																											
F4			H+																																																																																																																																																																																																
F5		HH		H																																																																																																																																																																																															
F6	HH		H+		L+	L+																																																																																																																																																																																													
F7	H+	H+			L	L																																																																																																																																																																																													
F8		H		L+																																																																																																																																																																																															
F9	H		L+	L																																																																																																																																																																																															
FA		L+	L																																																																																																																																																																																																
FB	L+	L																																																																																																																																																																																																	
FC	L																																																																																																																																																																																																		
FD	LL	LL	LL	LL	LL	LL	LL	LL																																																																																																																																																																																											
CODE No. [5d]	Standard 0000																																																																																																																																																																																																		
SW501 (1)/(2)	OFF/OFF																																																																																																																																																																																																		
Tap	COOL	HEAT																																																																																																																																																																																																	
F1																																																																																																																																																																																																			
F2																																																																																																																																																																																																			
F3																																																																																																																																																																																																			
F4																																																																																																																																																																																																			
F5		HH																																																																																																																																																																																																	
F6	HH																																																																																																																																																																																																		
F7	H+	H+																																																																																																																																																																																																	
F8		H																																																																																																																																																																																																	
F9	H																																																																																																																																																																																																		
FA		L+																																																																																																																																																																																																	
FB	L+	L																																																																																																																																																																																																	
FC	L																																																																																																																																																																																																		
FD	LL	LL																																																																																																																																																																																																	



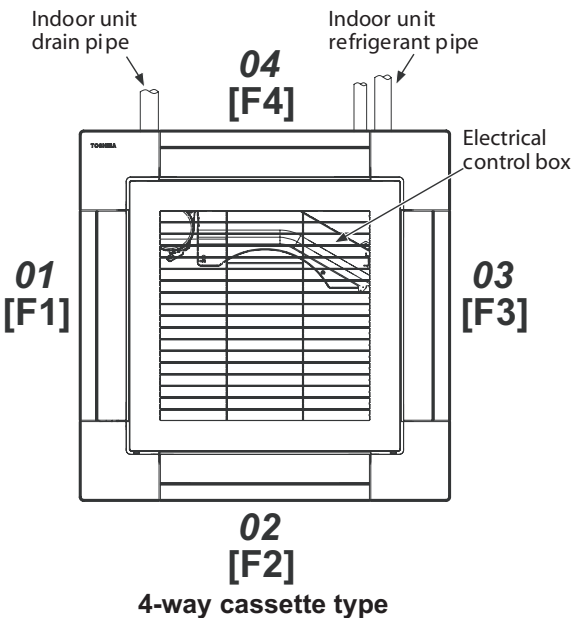
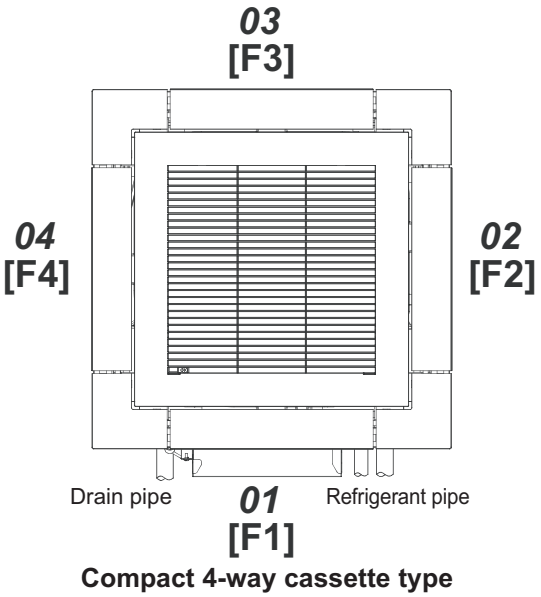

3)In heating operation, the mode changes to [LL] if thermostat is turned off.






No.	Item	Outline of specifications	Remarks
7	Prevention of cold air discharge	<div>1. In heating operation, the lowest temperature between TC1 sensor and the highest temperature between TC2 and TCJ sensor is set as the upper bound of the fan speed mode control.</div> <div><div><div>• When B zone has been continuing for 6 minutes, the operation shifts to C zone.</div><div>• For the defrosting operation, the control point is set to 42.8°F(+6°C).</div></div></div> <div><div><div><div><div>°F(°C)</div><div>89.6(32)</div><div>86.0(30)</div><div>82.4(28)</div><div>78.8(26)</div><div>68.0(20)</div><div>60.8(16)</div></div><div><div><div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div></div></div></div></div></div></div></div>	




No.	Item	Outline of specifications	Remarks
9	Refrigerant (Oil) recovery control in cooling operation	<p>The indoor unit which is under STOP/Thermostat-OFF status or which operates in [FAN] mode performs the following controls when it received the refrigerant oil recovery signal from the outdoor unit at the cooling operation.</p> <ol style="list-style-type: none"> 1) Opens PMV of the indoor unit with a constant opening degree. 2) Operates the drain pump for approx. 1 minute during recovery control and after finish of control. Louvers may open depending on indoor unit types. 	<ul style="list-style-type: none"> • Recovery operation normally takes place when it detect that the refrigerant is less. • A model with a drain pump : 4-way cassette Compact 4-way 2-way cassette 1-way cassette (YH) (SH)
10	Refrigerant (Oil) recovery control in heating operation	<p>The indoor unit which is under STOP/Thermostat-OFF status or which operates in [FAN] mode performs the following controls when it received the refrigerant (Oil) recovery signal from the outdoor unit at the heating operation.</p> <ol style="list-style-type: none"> 1) Opens PMV of the indoor unit with a constant opening degree. 2) Detects temperature of TC2 and then closes PMV. 3) Counts No. of recovery controls and operates the indoor fan and the drain pump for approx. 1 minute after finish of recovery control until the control count reaches the specified count. Louvers may open depending on indoor unit types. 	<ul style="list-style-type: none"> • The indoor unit which is under thermostat-OFF (COOL) status or which operates in [FAN] mode stops the indoor fan and displays [READY ]. • Recovery operation normally takes place when it detect that the refrigerant is less. • A model with a drain pump : 4-way cassette Compact 4-way 2-way cassette 1-way cassette (YH) (SH)
11	Compensation control for short intermittent operation	<ol style="list-style-type: none"> 1) For 3 minutes after start of operation, the operation is forcedly continued even if the unit enters in Thermostat-OFF condition. 2) However the thermostat is OFF giving prior to COOL/HEAT selection, READY  for operation and protective control. 	Usually the priority is given to 5 minutes at outdoor controller side.
12	Drain pump control	<ol style="list-style-type: none"> 1) Drain pump operates while in cooling operation. (including DRY operation) 2) While the drain pump is operating, if the float switch is operated, the outdoor unit will stop operating but the drain pump will keep continuously operating. After that, the check code is issued. 3) When the drain pump stops operating, if the float switch is operated, the outdoor unit will stop and the drain pump will start operating. After the float switch is being operating for roughly 5 minutes, the check code will be issued. 	<p>Check Code [P10]</p> <ul style="list-style-type: none"> • A model with a drain pump : 4-way cassette Compact 4-way 2-way cassette 1-way cassette (YH) (SH)
13	Elimination of retained heat	<ol style="list-style-type: none"> 1) When the unit stopped from [HEAT] operation, the indoor fan operates with [L] for approx. 30 seconds. 	
14	HA control	<ol style="list-style-type: none"> 1) ON/OFF operation is available by input of HA signal from the remote site when connecting to remote controller or the remote ON/OFF interface. 2) The HA terminal is ON/OFF depending on HA control output. 3) The I/O specifications of HA is in accordance with JEMA standard. 	<p>When using HA terminal (CN61) for the remote ON/OFF, a connector sold separately is necessary.</p> <p>In case of group operation, use the connector to connect HA terminal to either master or follower indoor unit.</p>

No.	Item	Outline of specifications	Remarks																																																
15	Display of filter sign [] (Not provided to the wireless type)	<div>1) The filter sign is displayed with LC by sending the filter-reset signal to the remote controller when the specified time (150H/2500H) elapsed as a result of integration of the operation time of the indoor fan.</div> <div>2) The integrated timer is cleared when the filter-reset signal is received from the remote controller. In this time, if the specified time elapsed, the counted time is reset and the liquid crystal display is deleted.</div> <table><tr><th>Filter service life</th><th>2500H</th><th>150H</th></tr><tr><td>Type</td><td>4-way cassette type Compact 4-way cassette type 1-way cassette type (SH, YH) 2-way cassette type</td><td>Floor standing type Floor standing concealed type Floor standing cabinet type</td></tr></table>	Filter service life	2500H	150H	Type	4-way cassette type Compact 4-way cassette type 1-way cassette type (SH, YH) 2-way cassette type	Floor standing type Floor standing concealed type Floor standing cabinet type	[ FILTER] goes on. The filter sign is not displayed in RBC-ASCU11*.																																										
Filter service life	2500H	150H																																																	
Type	4-way cassette type Compact 4-way cassette type 1-way cassette type (SH, YH) 2-way cassette type	Floor standing type Floor standing concealed type Floor standing cabinet type																																																	
16	Display of [ Operation standby] [ Heating standby]	<div><Operation standby> Displayed on the remote controller</div> <div>1) When the following check codes are indicated<ul style="list-style-type: none">• Open phase of power supply wiring [P05] was detected.• There is an indoor unit that detected the indoor overflow [P10].• There is an indoor unit that detected the interlock alarm [L30].</div> <div>2) During forced thermostat OFF<ul style="list-style-type: none">• [COOL/DRY] operation is unavailable because the other indoor unit operates with [HEAT] mode.• [HEAT] operation is unavailable because COOL priority (SW11-bit1 of the Outdoor I/F P. C. board is ON) is set and the other indoor unit operates with [COOL/DRY] mode.</div> <div>3) The above indoor units that cannot operate stay in thermostat OFF status.</div> <div>4) The indoor fan stops because the system performs [Recovery operation for heating refrigerant (Oil)].</div> <div><Heating standby> Displayed on the remote controller The indoor fan stops in order to prevent discharge of cool air when heating operation started or during heating operation. (including the defrost operation during thermostat OFF)</div>	<div>• <  Operation standby> display No display for wireless type remote controller</div> <div>• <  Heating standby> display</div>																																																
17	Selection of central control mode	<div>1) Selection of the contents that can be operated by the remote controller at the indoor unit side is possible according to setting at the central controller side.</div> <div>2) Setting contents</div> <table><tr><th rowspan="2">Operation from TCC-LINK central control</th><th colspan="6">Operation on remote controller</th></tr><tr><th>ON/OFF setting</th><th>Operation selection</th><th>Timer setting</th><th>Temp. setting</th><th>Air speed setting</th><th>Air direction setting</th></tr><tr><td>Individual</td><td>○</td><td>○</td><td>○</td><td>○</td><td>○</td><td>○</td></tr><tr><td>[Central 1]</td><td>×</td><td>○</td><td>×</td><td>○</td><td>○</td><td>○</td></tr><tr><td>[Central 2]</td><td>×</td><td>×</td><td>×</td><td>×</td><td>○</td><td>○</td></tr><tr><td>[Central 3]</td><td>○</td><td>×</td><td>○</td><td>×</td><td>○</td><td>○</td></tr><tr><td>[Central 4]</td><td>○</td><td>×</td><td>○</td><td>○</td><td>○</td><td>○</td></tr></table> <div>(○: Operation possible ×: Operation impossible)</div>	Operation from TCC-LINK central control	Operation on remote controller						ON/OFF setting	Operation selection	Timer setting	Temp. setting	Air speed setting	Air direction setting	Individual	○	○	○	○	○	○	[Central 1]	×	○	×	○	○	○	[Central 2]	×	×	×	×	○	○	[Central 3]	○	×	○	×	○	○	[Central 4]	○	×	○	○	○	○	
Operation from TCC-LINK central control	Operation on remote controller																																																		
	ON/OFF setting	Operation selection	Timer setting	Temp. setting	Air speed setting	Air direction setting																																													
Individual	○	○	○	○	○	○																																													
[Central 1]	×	○	×	○	○	○																																													
[Central 2]	×	×	×	×	○	○																																													
[Central 3]	○	×	○	×	○	○																																													
[Central 4]	○	×	○	○	○	○																																													

No.	Item	Outline of specifications	Remarks
18	Louver control	<p>1) Louver position setup</p> <ul style="list-style-type: none"> When the louver position is changed, the position moves necessarily to downward discharge position once to return to the set position. The louver position can be set up in the following operation range. <p>In cooling/dry operation In heating/fan operation</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <ul style="list-style-type: none"> In group twin/triple operation, the louver positions can be set up collectively or individually. <p>In case that HEAT refrigerant recovery control was performed in STOP status, the louver position becomes horizontal when the operation is resumed.</p> <p>2) Swing setup 4-way cassette, Compact 4-way, 2-way cassette, 1-way cassette (SH), Floor standing :</p> <ul style="list-style-type: none"> [SWING] is displayed and the following display is repeated. <p style="text-align: center;">In all operations</p> <div style="display: flex; align-items: center; justify-content: center;">    </div> <p style="text-align: center;">(Repeats)</p> <ul style="list-style-type: none"> In group operation, the louver positions can be set up collectively or individually. <p>1-way cassette (YH) :</p> <ul style="list-style-type: none"> [SWING] is displayed and the following display is repeated. <p style="text-align: center;">In all operations</p> <div style="text-align: center;">  </div> <ul style="list-style-type: none"> In group operation, the louver positions can be set up collectively or individually. <p>3) When the unit stopped or the warning was output, the louver is automatically set to full closed position.</p> <p>4) When PRE-HEAT (Heating ready) is displayed (Heating operation started or defrost operation is performed), heating thermostat is off or self-cleaning is performed, the louver is automatically set to horizontal discharge position.</p> <p>* The louver which air direction is individually set or the locked louver closes fully when the unit stops and the louver is automatically set to horizontal discharge position when PRE-HEAT (Heating ready) is displayed, heating thermostat is off.</p>	<p>Subject model : 4-way cassette Compact 4-way 2-way cassette 1-way cassette (SH)</p>

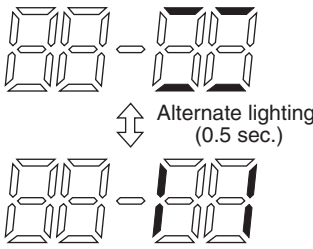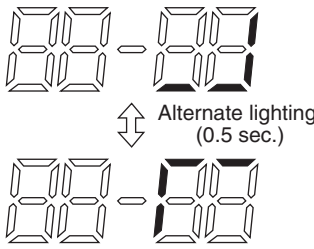No.	Item	Outline of specifications	Remarks
18	Louver control (Continued)	<p><<Individual air direction setup>></p> <ul style="list-style-type: none"> Pushing  Louver select button enables every discharge port to set up the air direction. The louver numbers that are displayed on the display part correspond to those in the following figure. In case of no input (key operation) for approx. 5 seconds during setting of individual air direction (during displaying of louver No. on the remote controller screen), the remote controller screen returns to the normal display screen. For the air direction illustration during normal operation, the air direction of the least No. among the louvers which are block-set is displayed. While individual air direction is being set, the remote controller operation (Illustration of air direction) and operation of the real machine are linked. When selecting a case,  Louver select button is not pushed or louver No. is not displayed, the air directions of all the louvers are collectively set up. <div data-bbox="518 795 1093 1411">  <p style="text-align: center;">02 [F2] 4-way cassette type</p> </div> <div data-bbox="518 1444 1061 2038">  <p style="text-align: center;">01 [F1] Compact 4-way cassette type</p> </div>	<p>Subject model : 4-way cassette Compact 4-way</p> <p>Setup from the remote controller without  button is unavailable.</p>

No.	Item	Outline of specifications	Remarks												
18	Louver control (Continued)	<p><<Selection of Swing mode>></p> <ul style="list-style-type: none">For the Swing mode, the following three types of modes are selectable and settable by keeping Swing/Direction  button pushed for 4 seconds or more on the remote controller. (In the case of RBC-AMT*) Swing mode can be selected by Code No.(DN) setup [F0]. <p>1) Standard (4 pieces: same phase) swing → Data: [0001 (At shipment)]</p> <p>When Swing operation is selected, four louvers align at the horizontal discharge position and then start the Swing operation at the same time.</p> <p>2) Dual swing → Data: [0002]</p> <p>When operation is selected, the louvers of louver No. [1] and [03] move to the horizontal discharge position, the louvers of louver No. [02] and [04] move to the downward discharge position and then start the Swing operation at the same time.</p> <p>3) Cycle swing → Data: [0003]</p> <p>When operation is selected, the louver No. [01] moves to the horizontal discharge position, [03] to the downward discharge position, [02] and [04] to the middle position and then start the Swing operation at the same time.</p> <ul style="list-style-type: none">In case of selecting the Swing mode, “Dual swing” or “Cycle swing”, the following numerals is displayed at the center of the remote controller screen for approx. 3 seconds when  button was pushed to select [SWING]. (No display for the standard swing) (In the case of RBC-AMT*) <div><div><p>Dual swing</p></div><div><p>Cycle swing</p></div></div> <p><<Louver lock (Louver fix)>></p> <ul style="list-style-type: none">For the air direction setup for each discharge port, the louver position can be locked during the normal operation.An arbitrary air direction of an arbitrary louver can be registered and set by keeping  button pushed for 4 seconds or more on the remote controller. (In the case of RBC-AMT*) Louver lock can be selected by Code No.(DN) setup [F1], [F2], [F3] or [F4]. (In the case of RBC-ASCU11*)The louver lock can be set by registering the setup data to Code No.(DN) [F1] to [F4] according to the following table. <table><tr><th>Code No.(DN)</th><th>Objective louver No.</th><th>Setup data</th></tr><tr><td>F1</td><td>01</td><td rowspan="4">0000: Release (At shipment) 0001: Horizontal discharge position ~ 0005: Downward discharge position</td></tr><tr><td>F2</td><td>02</td></tr><tr><td>F3</td><td>03</td></tr><tr><td>F4</td><td>04</td></tr></table>	Code No.(DN)	Objective louver No.	Setup data	F1	01	0000: Release (At shipment) 0001: Horizontal discharge position ~ 0005: Downward discharge position	F2	02	F3	03	F4	04	<p>Subject model : 4-way cassette Compact 4-way</p> <p>Carry out setting operation during stop of the unit; otherwise the unit stops operation.</p> <p>Carry out setting operation during stop of the unit; otherwise the unit stops operation.</p>
Code No.(DN)	Objective louver No.	Setup data													
F1	01	0000: Release (At shipment) 0001: Horizontal discharge position ~ 0005: Downward discharge position													
F2	02														
F3	03														
F4	04														

No.	Item	Outline of specifications	Remarks																		
18	Louver control (Continued)	<div><div><ul style="list-style-type: none">If there is the locked louver in the unit, [] goes on the remote controller screen.While the following controls are performed, the louvers operate even if executing the louver lock.</div><table><thead><tr><th></th><th>Control which ignores lock</th><th>Objective louver No.</th></tr></thead><tbody><tr><td>①</td><td>Operation stop</td><td>Full-close position</td></tr><tr><td>②</td><td>When heating operation started</td><td>Horizontal discharge position</td></tr><tr><td>③</td><td>Heating thermostat OFF</td><td>Horizontal discharge position</td></tr><tr><td>④</td><td>During defrost operation</td><td>Horizontal discharge position</td></tr><tr><td>⑤</td><td>Initialize operation</td><td>Full-close position</td></tr></tbody></table><div><ul style="list-style-type: none">The real louver corresponding to the louver No. displayed on the remote controller screen during setting of louver lock operates swinging.</div></div>		Control which ignores lock	Objective louver No.	①	Operation stop	Full-close position	②	When heating operation started	Horizontal discharge position	③	Heating thermostat OFF	Horizontal discharge position	④	During defrost operation	Horizontal discharge position	⑤	Initialize operation	Full-close position	<div>For the setting operation, refer to [How to set louver lock] of Installation Manual.</div> <div>It is position check operation and it does not link with the real louver and air direction setup (Illustration on the remote controller screen).</div>
	Control which ignores lock	Objective louver No.																			
①	Operation stop	Full-close position																			
②	When heating operation started	Horizontal discharge position																			
③	Heating thermostat OFF	Horizontal discharge position																			
④	During defrost operation	Horizontal discharge position																			
⑤	Initialize operation	Full-close position																			
19	DC motor	<div><div><div>1) When the fan starts, positioning is performed for the starter and the rotor. (Vibrate slightly)</div><div>2) DC motor operates according to the command from the indoor controller.</div><div>(Note) If the fan rotates by entry of outside air, etc while the air conditioner stopped, the indoor unit may operate as the fan motor stops.</div><div>(Note) If the fan lock was detected, the operation of the indoor unit stops and the check code is displayed.</div></div></div>	<div>Check code [P12] Subject model : 4-way cassette Compact 4-way 2-way cassette 1-way cassette (SH)(YH) Floor standing</div>																		
20	Power saving mode	<div><div>(In the case of RBC-AMT*)</div><div><div>1. Push the  button on the remote controller</div><div>2. The “” segment lights up on the wired remote controller display.</div><div>3. The requirement capacity ratio is limited to approximately 75 %.</div><div>4. If the power saving operation is enabled, the settings are retained when the operation is stopped, when the mode is changed, or when the power is reset. The power saving operation will be enabled at the next time the operation starts.</div></div><div><ul style="list-style-type: none">The operation may differ depending on the connected outdoor unit. Refer to the Service Manual of the outdoor unit.</div></div>																			

6. APPLIED CONTROL AND FUNCTIONS

6-1. Method to Set Outdoor Unit Function Code No. (O.DN)

The settings can be changed by operating the switches on the interface board.

In the TU2C-Link communication system, it can also be done by operating the wired remote controller.

◆ Applicable controls setup

(settings at the site)


Basic procedure

Be sure to stop the air conditioner before making settings.

(Change the setup while the air conditioner is networking.)

When switching settings from the interface P.C. board of the outdoor unit

1. Set the rotary switch of the interface P.C. board on the outdoor unit to SW01= [9], SW02= [1] and SW03= [1].
2. The 7-segment display shows “d n.S E t”.
3. When SW04 is pushed, the 7-segment display switches to “d n.0 0 1” and the outdoor unit code NO. [001] is displayed.
4. Change outdoor unit code NO. [***] with SW05 or SW06.
Push SW05 to advance the code. Push and hold SW05 to advance in 5 steps.
Push SW06 to return the code. Push and hold SW06 to return in 5 steps.
5. When SW04 is pushed, the 7-segment display blinks “d.* * * *” and the setting data [****] being set is displayed.
6. Change setting data [****] with SW05 or SW06.
Push SW05 to advance the data. Push SW06 to return the setting data.
7. Push and hold SW04 for more than 2 seconds.
When the flashing stops and remain lit on the display, the setting is complete.
(To return to the item code setting after completing the setting, or to return to the item code setting without setting, push SW04 once.)
8. Set the rotary switch on the interface P.C. board of the outdoor unit back to SW01= [1], SW02= [1], SW03= [1].
9. Reset the power of the outdoor unit (power off for one minute or more) .

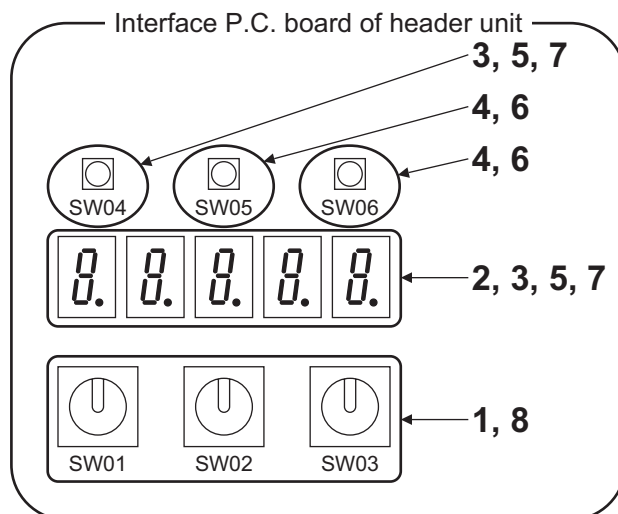

When switching from the wired remote controller (RBC-AWSU**)

Basic procedure


Be sure to stop the air conditioner before making settings.
(Change the setup while the air conditioner is not working.)



1 Push the [Menu] button to display the menu screen

2 Push and hold the [Menu] button and the [] button at the same time to display the "Field setting menu".

→Push and hold the buttons for more than 4 seconds

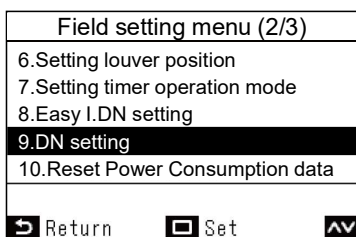



3 Push the [] / [] button to select "9.DN setting" on the "Field setting menu" screen, then push the " Set" [Set/Fix]" button.





→ Push the [] / [] button to select the outdoor unit and push the " Set" [Set / Fix] button.



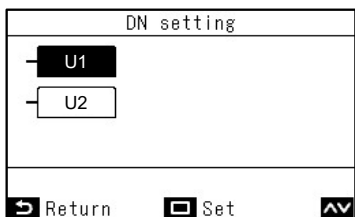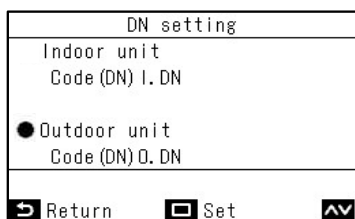

→ For a connected system, select the outdoor unit.
U1: Header outdoor unit, U2~U4 : Forower outdoor unit
(The fan of the selected outdoor unit will operate.)



→ Move the cursor to select "Code(DN)" with the [] button, then set "Code(DN)" with the [] / [] button.











→ Move the cursor to select "Data" with the [] button, then set "Data" with the [] / [] button.



DN setting	
Code (DN) O. DN 0001	Data 0000
<div>  Return  Fix   </div>	

DN setting	
Code (DN) O. DN 0001	Data 0001
<div>  Return  Fix   </div>	

DN setting	
Continue?	
<div>  No  Yes </div>	

- 4 Refer to the Installation Manual supplied with the outdoor unit or service manual for details about Code(DN) and Data.
- 5 Push the [ Menu] button to set the other Code(DN) and Data. After "Continue?" is displayed on the screen, push the "  YES" [ Set / Fix] button.
- 6 Push the "  No " [ Return] button to finish the setting operation. "  Setting" appears on the screen for a while, then the screen returns to the "Field setting menu" screen.
 - Pushing the "  No" [ Return] button displays the unit selection screen when the group control is used. Push the [ Return] button on the unit selection screen to finish the setting operation. "  Setting" appears on the screen for a while, then the screen returns to the "Field setting menu" screen.

DN	Item	Description	At shipment																																																												
003	Type Setting	Code range : 0000 to 0255	According to type																																																												
		<table><tr><td>Model name</td><td>O.DN[003]</td><td>Model name</td><td>O.DN[003]</td></tr><tr><td>Undefined</td><td>0000</td><td>MMY-MUP0721FT9P-UL</td><td>0001</td></tr><tr><td>MMY-MUP0721FT6P-UL</td><td>0006</td><td>MMY-MUP0961FT9P-UL</td><td>0002</td></tr><tr><td>MMY-MUP0961FT6P-UL</td><td>0007</td><td>MMY-MUP1201FT9P-UL</td><td>0003</td></tr><tr><td>MMY-MUP1201FT6P-UL</td><td>0008</td><td>MMY-MUP1441FT9P-UL</td><td>0004</td></tr><tr><td>MMY-MUP1441FT6P-UL</td><td>0009</td><td>MMY-MUP1681FT9P-UL</td><td>0005</td></tr><tr><td>MMY-MUP1681FT6P-UL</td><td>000A</td><td>MMY-MUP072H1FT9PUL</td><td>000C</td></tr><tr><td>MMY-MUP1921FT6P-UL</td><td>000B</td><td>MMY-MUP096H1FT9PUL</td><td>000D</td></tr><tr><td>MMY-MUP072H1FT6PUL</td><td>000F</td><td>MMY-MUP120H1FT9PUL</td><td>000E</td></tr><tr><td>MMY-MUP096H1FT6PUL</td><td>0010</td><td></td><td></td></tr><tr><td>MMY-MUP120H1FT6PUL</td><td>0011</td><td></td><td></td></tr></table>		Model name	O.DN[003]	Model name	O.DN[003]	Undefined	0000	MMY-MUP0721FT9P-UL	0001	MMY-MUP0721FT6P-UL	0006	MMY-MUP0961FT9P-UL	0002	MMY-MUP0961FT6P-UL	0007	MMY-MUP1201FT9P-UL	0003	MMY-MUP1201FT6P-UL	0008	MMY-MUP1441FT9P-UL	0004	MMY-MUP1441FT6P-UL	0009	MMY-MUP1681FT9P-UL	0005	MMY-MUP1681FT6P-UL	000A	MMY-MUP072H1FT9PUL	000C	MMY-MUP1921FT6P-UL	000B	MMY-MUP096H1FT9PUL	000D	MMY-MUP072H1FT6PUL	000F	MMY-MUP120H1FT9PUL	000E	MMY-MUP096H1FT6PUL	0010			MMY-MUP120H1FT6PUL	0011																		
		Model name		O.DN[003]	Model name	O.DN[003]																																																									
		Undefined		0000	MMY-MUP0721FT9P-UL	0001																																																									
		MMY-MUP0721FT6P-UL		0006	MMY-MUP0961FT9P-UL	0002																																																									
		MMY-MUP0961FT6P-UL		0007	MMY-MUP1201FT9P-UL	0003																																																									
		MMY-MUP1201FT6P-UL		0008	MMY-MUP1441FT9P-UL	0004																																																									
		MMY-MUP1441FT6P-UL		0009	MMY-MUP1681FT9P-UL	0005																																																									
		MMY-MUP1681FT6P-UL		000A	MMY-MUP072H1FT9PUL	000C																																																									
		MMY-MUP1921FT6P-UL		000B	MMY-MUP096H1FT9PUL	000D																																																									
		MMY-MUP072H1FT6PUL		000F	MMY-MUP120H1FT9PUL	000E																																																									
		MMY-MUP096H1FT6PUL		0010																																																											
		MMY-MUP120H1FT6PUL		0011																																																											
* DN Code [003] = 0000 : Undefined																																																															
004	7-segment Display Contents Control	0000 : Outdoor unit No. 0001 : Start priority number	0000 : Outdoor unit No.																																																												
005	Prohibition/Permission of the NFC Setting	0000 : Until 48 hours elapsed from the outdoor unit Power ON, WTA App can start a test operation. After 48 hours, it cannot. 0001 : Regardless of the elapsed time, WTA cannot start test operation. 0002 : Regardless of the elapsed time, WTA can start test operation.	0000																																																												
007	Compressor Maintenance Period Time	0000 : 0h 0001 to 0063 (1000 h to 63000 h)	0000 : 0h																																																												
008	Operation Mode Selection Control	0000 : Non-selected Indoor units keep stand-by state (thermostat OFF). 0001 : Changing non-selected indoor units the mode selected	0000 : Non-Priority																																																												
009	Capacity / Power Demand Control	0000 : Capacity demand 0001 : Power demand	0000 : Capacity demand																																																												
00A	Power consumption upper limit standard value setting Heating (For power demand)_High	Code range [0A] [0C] : 0000 to 0255 (1 kW to 255 kW) [0B] [0D] : 0000 to 0099 (0.00 kW to 0.99 kW)	0000 : 0kW																																																												
00b	Power consumption upper limit standard value setting Heating (For power demand)_Low	<table><tr><td rowspan="3">Power consumption upper limit standard value</td><td colspan="3">DN Code</td></tr><tr><td>Heating</td><td>[00A]</td><td>[00B]</td></tr><tr><td>Cooling</td><td>[00C]</td><td>[00D]</td></tr><tr><td colspan="2">No power demand function</td><td>0000</td><td>0000</td></tr><tr><td colspan="2">0.01 kW</td><td>0000</td><td>0001</td></tr><tr><td colspan="2">0.02 kW</td><td>0000</td><td>0002</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">10.00 kW</td><td>0010</td><td>0000</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">30.50 kW</td><td>0030</td><td>0050</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr></table>	Power consumption upper limit standard value	DN Code			Heating	[00A]	[00B]	Cooling	[00C]	[00D]	No power demand function		0000	0000	0.01 kW		0000	0001	0.02 kW		0000	0002	—		—	—	—		—	—	10.00 kW		0010	0000	—		—	—	—		—	—	30.50 kW		0030	0050	—		—	—	—		—	—	0000 : 0kW						
Power consumption upper limit standard value	DN Code																																																														
	Heating	[00A]		[00B]																																																											
	Cooling	[00C]	[00D]																																																												
No power demand function		0000	0000																																																												
0.01 kW		0000	0001																																																												
0.02 kW		0000	0002																																																												
—		—	—																																																												
—		—	—																																																												
10.00 kW		0010	0000																																																												
—		—	—																																																												
—		—	—																																																												
30.50 kW		0030	0050																																																												
—		—	—																																																												
—		—	—																																																												
00C	Power consumption upper limit standard value setting Cooling (For power demand)_High	<table><tr><td colspan="2">No power demand function</td><td>0000</td><td>0000</td></tr><tr><td colspan="2">0.01 kW</td><td>0000</td><td>0001</td></tr><tr><td colspan="2">0.02 kW</td><td>0000</td><td>0002</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">10.00 kW</td><td>0010</td><td>0000</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">30.50 kW</td><td>0030</td><td>0050</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr></table>	No power demand function		0000	0000	0.01 kW		0000	0001	0.02 kW		0000	0002	—		—	—	—		—	—	10.00 kW		0010	0000	—		—	—	—		—	—	30.50 kW		0030	0050	—		—	—	—		—	—	0000 : 0kW																
No power demand function		0000	0000																																																												
0.01 kW		0000	0001																																																												
0.02 kW		0000	0002																																																												
—		—	—																																																												
—		—	—																																																												
10.00 kW		0010	0000																																																												
—		—	—																																																												
—		—	—																																																												
30.50 kW		0030	0050																																																												
—		—	—																																																												
—		—	—																																																												
00d	Power consumption upper limit standard value setting Cooling (For power demand)_Low	<table><tr><td colspan="2">No power demand function</td><td>0000</td><td>0000</td></tr><tr><td colspan="2">0.01 kW</td><td>0000</td><td>0001</td></tr><tr><td colspan="2">0.02 kW</td><td>0000</td><td>0002</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">10.00 kW</td><td>0010</td><td>0000</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">30.50 kW</td><td>0030</td><td>0050</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr><tr><td colspan="2">—</td><td>—</td><td>—</td></tr></table>	No power demand function		0000	0000	0.01 kW		0000	0001	0.02 kW		0000	0002	—		—	—	—		—	—	10.00 kW		0010	0000	—		—	—	—		—	—	30.50 kW		0030	0050	—		—	—	—		—	—	0000 : 0kW																
No power demand function		0000	0000																																																												
0.01 kW		0000	0001																																																												
0.02 kW		0000	0002																																																												
—		—	—																																																												
—		—	—																																																												
10.00 kW		0010	0000																																																												
—		—	—																																																												
—		—	—																																																												
30.50 kW		0030	0050																																																												
—		—	—																																																												
—		—	—																																																												
00E	Setting Value during Demand Control	Setting Value during Demand Control for demand standard specifications can be set with DN code [00E]. Its value for expansion specifications can be set in two steps (DN codes [00F], [010]) during the normal operation and demand control (setting value DN Code [00E]).	0015 : 0% (Forcedly stop)																																																												
00F	Setting value during Demand Control (Expansion 1)	<table><tr><td></td><td colspan="3">DN Code</td></tr><tr><td>Demand control</td><td>[00E]</td><td>[00F]</td><td>[010]</td></tr><tr><td>100%</td><td>0</td><td>0</td><td>0</td></tr><tr><td>95%</td><td>1</td><td>1</td><td>1</td></tr><tr><td>90%</td><td>2</td><td>2</td><td>2</td></tr><tr><td>85%</td><td>3</td><td>3</td><td>3</td></tr><tr><td>80%</td><td>4</td><td>4</td><td>4 (Factory default)</td></tr><tr><td>75%</td><td>5</td><td>5</td><td>5</td></tr><tr><td>70%</td><td>6</td><td>6</td><td>6</td></tr><tr><td>65%</td><td>7</td><td>7</td><td>7</td></tr><tr><td>60%</td><td>8</td><td>8 (Factory default)</td><td>8</td></tr><tr><td>55%</td><td>9</td><td>9</td><td>9</td></tr><tr><td>50%</td><td>10</td><td>10</td><td>10</td></tr><tr><td>—</td><td>11 to 14</td><td>11 to 14</td><td>11 to 14</td></tr><tr><td>0%</td><td>15 (Factory default)</td><td>15</td><td>15</td></tr></table>		DN Code			Demand control	[00E]	[00F]	[010]	100%	0	0	0	95%	1	1	1	90%	2	2	2	85%	3	3	3	80%	4	4	4 (Factory default)	75%	5	5	5	70%	6	6	6	65%	7	7	7	60%	8	8 (Factory default)	8	55%	9	9	9	50%	10	10	10	—	11 to 14	11 to 14	11 to 14	0%	15 (Factory default)	15	15	0008 : 60%
	DN Code																																																														
Demand control	[00E]	[00F]	[010]																																																												
100%	0	0	0																																																												
95%	1	1	1																																																												
90%	2	2	2																																																												
85%	3	3	3																																																												
80%	4	4	4 (Factory default)																																																												
75%	5	5	5																																																												
70%	6	6	6																																																												
65%	7	7	7																																																												
60%	8	8 (Factory default)	8																																																												
55%	9	9	9																																																												
50%	10	10	10																																																												
—	11 to 14	11 to 14	11 to 14																																																												
0%	15 (Factory default)	15	15																																																												
010	Setting Value during Demand Control (Expansion 2)	<table><tr><td></td><td colspan="3">DN Code</td></tr><tr><td>Demand control</td><td>[00E]</td><td>[00F]</td><td>[010]</td></tr><tr><td>100%</td><td>0</td><td>0</td><td>0</td></tr><tr><td>95%</td><td>1</td><td>1</td><td>1</td></tr><tr><td>90%</td><td>2</td><td>2</td><td>2</td></tr><tr><td>85%</td><td>3</td><td>3</td><td>3</td></tr><tr><td>80%</td><td>4</td><td>4</td><td>4 (Factory default)</td></tr><tr><td>75%</td><td>5</td><td>5</td><td>5</td></tr><tr><td>70%</td><td>6</td><td>6</td><td>6</td></tr><tr><td>65%</td><td>7</td><td>7</td><td>7</td></tr><tr><td>60%</td><td>8</td><td>8 (Factory default)</td><td>8</td></tr><tr><td>55%</td><td>9</td><td>9</td><td>9</td></tr><tr><td>50%</td><td>10</td><td>10</td><td>10</td></tr><tr><td>—</td><td>11 to 14</td><td>11 to 14</td><td>11 to 14</td></tr><tr><td>0%</td><td>15 (Factory default)</td><td>15</td><td>15</td></tr></table>		DN Code			Demand control	[00E]	[00F]	[010]	100%	0	0	0	95%	1	1	1	90%	2	2	2	85%	3	3	3	80%	4	4	4 (Factory default)	75%	5	5	5	70%	6	6	6	65%	7	7	7	60%	8	8 (Factory default)	8	55%	9	9	9	50%	10	10	10	—	11 to 14	11 to 14	11 to 14	0%	15 (Factory default)	15	15	0004 : 80%
	DN Code																																																														
Demand control	[00E]	[00F]	[010]																																																												
100%	0	0	0																																																												
95%	1	1	1																																																												
90%	2	2	2																																																												
85%	3	3	3																																																												
80%	4	4	4 (Factory default)																																																												
75%	5	5	5																																																												
70%	6	6	6																																																												
65%	7	7	7																																																												
60%	8	8 (Factory default)	8																																																												
55%	9	9	9																																																												
50%	10	10	10																																																												
—	11 to 14	11 to 14	11 to 14																																																												
0%	15 (Factory default)	15	15																																																												
012	Optional Output Setting Control 1 (CN514)	0000 : Compressor Operation Output 0001 : Operating Rate Output	0000 : Compressor Operation Output																																																												
018	Priority Operation Mode Setting	0000 : Priority heating 0002 : Priority operation unit No. 0001 : Priority cooling 0003 : Priority indoor unit	0000 : Priority heating																																																												
019	Outdoor Fan High Static Pressure Shift	0000 : Usual 0001 : High Static Pressure Operation	0000 : Usual																																																												
01A	Operation standby Heating standby	0000 : None 0001 : Standby	0000 : None																																																												

DN	Item	Description	At shipment
01d	System cooperation defrosting settings 1 (number cooperating)	0000 : None (vassal) 0001 : Prohibition 0002 : 2-system cooperation (master unit) 0003 : 3-system cooperation (master unit) * set [01D] = 0002 or 0003 to outdoor unit set to master unit in outdoor DN code [01F]	0000: None (vassal)
01E	System cooperation defrosting settings 2 (zone address)	0000 : None 0001 to 0128: Addresses 0001 when not using central controller for control for system cooperation defrosting, 0001 to 0128 when using central controller	0000: None
01F	System cooperation defrosting settings 3 (cooperation address)	0000: None 0001: Master unit 0002 or 0003: Vassal units 2 or 3	0000 : None
03d	Existence of Automatic Back Up	0000 : Provided 0001 : Not provided	0000 : Provided
03F	Operation Control during Overflow Detection of Indoor Unit	0000 : System abnormal stop 0001 : System continuous operation (Stop the corresponding indoor unit.)	0000 : System abnormal stop
040	Operation Control during Outside Abnormal Input Switching control in receiving [L30][L02] from indoor)	0000 : System continuous operation (Stop the corresponding indoor unit.) 0001 : System abnormal stop	0000 : System continuous operation (Stop the corresponding indoor unit.)
055	Cooling priority control below 5F	0000:Heating priority(Def) 0001:Cooling priority* *Heating operation requests are ignored below 5F.	0000
058	Heating unit fan mode restriction during individual defrosting	0000:Usual 0002:Heating unit fan mode restriction	0000: Usual
082	Communication setting	0000: TCC-Link 0003 : TU2C-Link	0000: TCC-Link
0C6	High Heating mode setting ※Available only for standard model	0000: Normal mode 0001 : High heating mode	0000:Normal mode

6-2. Applied Control of Outdoor Unit

The outdoor fan high static pressure support and priority operation mode (cooling / heating / number of units / or priority indoor unit) functions, High heating mode function are available by setting the Outdoor DN Code.

6-2-1. Outdoor Fan High Static Pressure Shift

Setup

Change the outdoor DN code. (O.DN [19]) into "Outdoor Fan High Static Pressure operation."

This function must be enabled with every discharge duct connected outdoor unit for both of the header and follower units.

Purpose/characteristics

Outdoor DN Code (O.DN) Setting Operation	Operation
O.DN [19] = 0000	Normal operation
O.DN [19] = 0001	Outdoor Fan High Static Pressure operation

Specifications

Increase the speed of the propeller fan units on the outdoor fan to allow the installation of a duct with a maximum external static pressure not greater than specified in the table below. If a discharge duct with a resistance greater than 0.061 In WG (15 Pa) is to be used, enable this function. The maximum external static pressures of single units are shown below (Table 1). In the case of combined use of multiple outdoor units, set all the units to the same maximum external static pressure as the one with the lowest maximum external static pressure.

Table 1: Maximum External Static Pressures of Single Outdoor Units

Standard model MMY-MUP	0721	0961	1201	1441	1681	1921
Maximum external static pressure	0.32inWG(80Pa)	0.32inWG(80Pa)	0.32inWG(80Pa)	0.32inWG(80Pa)	0.32inWG(80Pa)	0.32inWG(80Pa)
(*)Outdoor unit air flow (CFM)	5721	6357	7416	7981	8476	9712
High heat model MMY-MUP	072H1	096H1	120H1			
Maximum external static pressure	0.32inWG(80Pa)	0.32inWG(80Pa)	0.32inWG(80Pa)			
(*)Outdoor unit air flow (CFM)	5721	7240	7416			

(*) Calculate duct resistance from outdoor unit air flow.

6-2-2. Priority Operation Mode Setting

Purpose/characteristics

This function allows switching between priority cooling and priority heating.

Four patterns of priority operation mode setting are available as shown in the table below. Select a suitable priority mode according to the needs of the customer.

Setup

CAUTION

In the case of the priority indoor unit mode, it is necessary to set up the specific indoor unit chosen for priority operation (a single unit only).

(1) Outdoor unit setup method (header unit)

Outdoor DN Code (O.DN) Setting	Operation
O.DN [18] = 0000	Priority heating (factory default)
O.DN [18] = 0001	Priority cooling
O.DN [18] = 0002	Priority operation based on No. of units in operation (priority given to the operation mode with the largest share of units in operation)
O.DN [18] = 0003	Priority indoor unit (priority given to the operation mode of the specific indoor unit set up for priority operation)

(2) Indoor unit setup method for priority indoor unit mode

The setting can be changed only when the system is at rest. (Be sure to turn off the system prior to this operation.)

6-2-3. High Heating mode

Purpose/characteristics

This function increases heating capacity when heating capacity is insufficient in cold or snowy regions.

This function is the Standard models only.

This function is not High heat models.

Setup

Change the outdoor DN code.(O.DN [C6]) into "High heating mode"

Outdoor DN Code (O.DN) Setting Operation	Operation
O.DN[C6] = 0000	Normal operation
O.DN[C6] = 0001	High heating mode

*If there are multiple outdoor units, set all outdoor units.

Note:

This function is valid only for the standard model.


CODE No.(DN) setting

■ Wired remote controller (RBC-AWSU**)

Perform the advanced settings for the air conditioner.

Carry out the setting operation while the indoor unit is stopped.(Turn off the air conditioning unit before starting the setting operation.)

Display example of AWSU52*

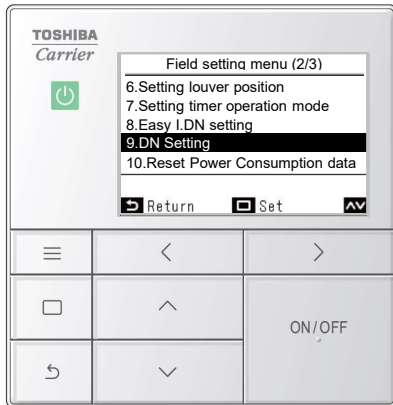

1 Push the [Menu] button to display the menu screen.

2 Push and hold the [Menu] button and the [] button at the same time to display the "Field setting menu".



Push and hold the buttons for more than 4 seconds.

3 Push the [] / [] button to select "9.DN setting" on the "Field setting menu" screen, then push the " Set" [Set / Fix] button.


The fan and louver of the Indoor unit operate. When the group control is used, the fan and louver of the selected Indoor unit operate.

4 Move the cursor to select "DN code" with the " " button, then set "0004" with the [] / [] button.

5 Move the cursor to select "data" with the " " button, then set "0001" with the [] / [] button.

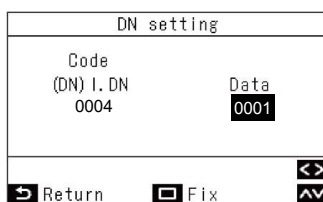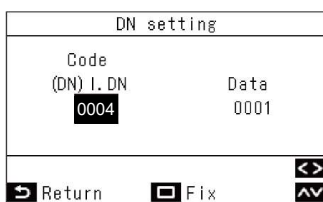

6 Push the [Menu] button to set the other DN codes, then "Continue?" is displayed on the screen.

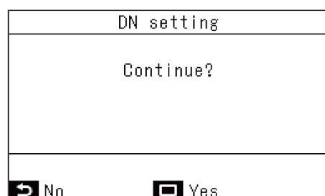

7 Push the " No" [Return] button to finish the setting operation." " appears on the screen for a while, then the screen returns to the "Field setting menu" screen.

Pushing the " No" [Return] button displays the unit selection screen when the group control is used. Push the [Return] button on the unit selection screen to finish the setting operation " " appears on the screen for a

8 Push the [Return] button to return.

6-2-3. Applied Control of Outdoor Unit

Optional control P.C. boards provide access to a range of functions as listed below.

No.	Function	Outdoor unit for control P.C. board Connection	Control P.C. board to be used			Outdoor unit interface P.C. board setting*			
			TCB-PCDM4UL	TCB-PCMO4UL	TCB-PCIN4UL	Connector No.	DIP SW No.	Bit ON	Outdoor unit DN Code (O.DN)
1	Power peak-cut Control (Standard) *Limit a maximum capacity	Header unit	✓	—	—	CN513 (blue)	—	—	[009]=0 (Factory default)
	Power peak-cut Control (Standard) *Limit a maximum power	Header unit	✓	—	—	CN513 (blue)	—	—	[009]=1
	Power peak-cut Control (For one input function) *Limit a maximum capacity	Header unit	✓	—	—	CN513 (blue)	SW105	1	[009]=0 (Factory default)
	Power peak-cut Control (For one input function) *Limit a maximum power	Header unit	✓	—	—	CN513 (blue)	SW105	1	[009]=1
2	Power peak-cut Control (Enhanced Function) *Limit a maximum capacity	Header unit	✓	—	—	CN513 (blue)	SW105	2	[009]=0 (Factory default)
	Power peak-cut Control (Enhanced Function) *Limit a maximum power	Header unit	✓	—	—	CN513 (blue)	SW105	2	[009]=1
3	Snowfall Fan Control	Header unit	—	✓	—	CN509 (black)	—	—	—
4	External master ON/OFF Control	Header unit	—	✓	—	CN512 (blue)	—	—	—
5	Night operation (Sound reduction) Control	Header unit	—	✓	—	CN508 (red)	—	—	—
6	Operation Mode Selection Control	Header unit	—	✓	—	CN510 (white)	—	—	[008]=0 (Factory default)
	Operation Mode Selection Control (forced choice)	Header unit	—	✓	—	CN510 (white)	—	—	[008]=1
7	Trouble/Operation output	Header unit	—	—	✓	CN511 (green)	—	—	—
8	Compressor Operation Output	Individual outdoor unit	—	—	✓	CN514 (green)	—	—	[012]=0 (Factory default)
9	Operating Rate Output	Header unit	—	—	✓	CN514 (green)	—	—	[012]=1

To limit a maximum power, set the outdoor unit O.DN code to [009]=1, and set the criteria value of a maximum power consumption with O.DN code [00A], [00B], [00C] and [00D]. Input the values for both cooling and heating.

Outdoor unit DN Code (O.DN) [00C], [00D]

Criteria value setting for a maximum cooling power

(e.g.) When the maximum standard value of cooling power consumption is set as 19.35 kW = 19.35kW

Outdoor unit DN Code (O.DN)	[00C]	[00D]
Value	19	35

Outdoor unit DN Code (O.DN) [00A], [00B]


Criteria value setting for a maximum heating power

(e.g.) When the maximum standard value of heating power consumption is set as 14.00 kW = 14.00kW

Outdoor unit DN Code (O.DN)	[00A]	[00B]
Value	14	00


Layout of Outdoor Unit Interface P.C. Board

* For Applicable controls, switch the DIP SW on the P.C. board or set the outdoor unit O.DN.

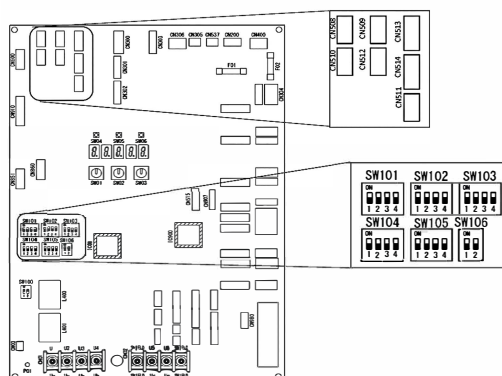

Optional application control board mounting position.


Power peak-cut control PC board(TCB-PCDM4UL)

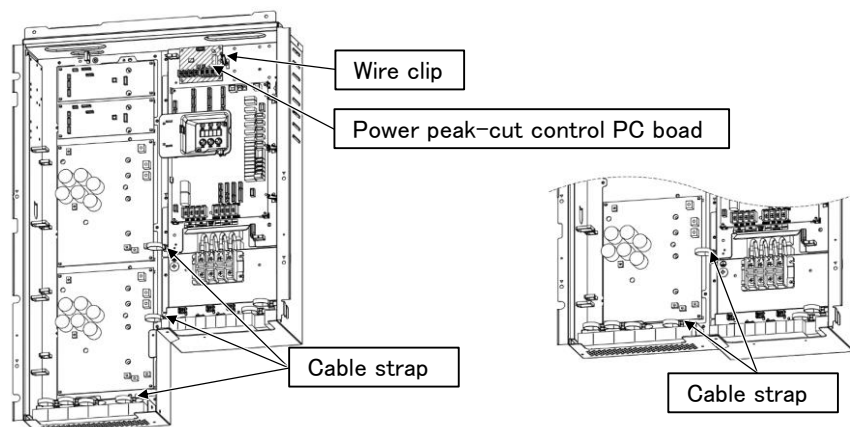

Inverter case type A
(MMY-MUP1921*)
Quantity of cable straps : 3

Inverter case type B
(MMY-MUP0721*, 0961*, 1201*, 1441*, 1681*,
072H1*, 096H1*, 120H1*)
Quantity of cable straps : 2


Operation mode selection PC board(TCB-PCMO4UL)

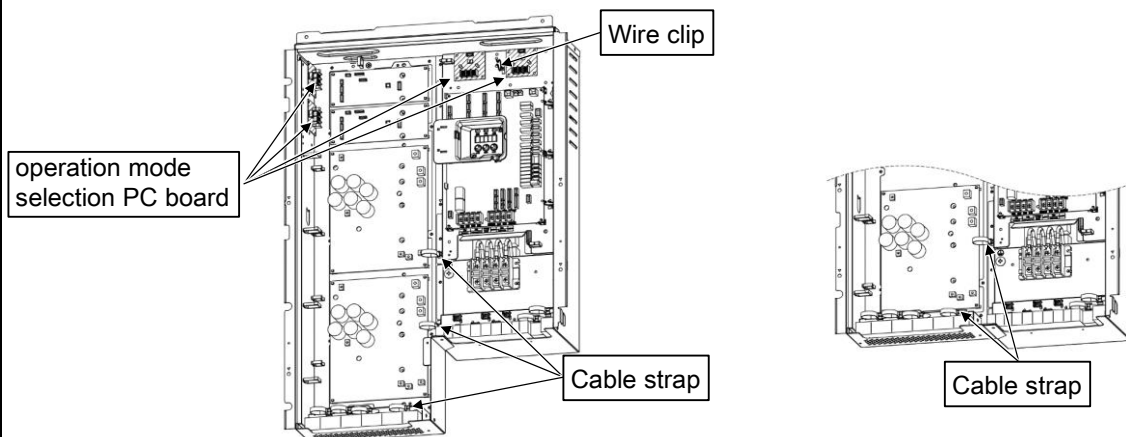

Inverter case type A
(MMY-MUP1921*)
Quantity of cable straps : 3

Inverter case type B
(MMY-MUP0721*, 0961*, 1201*, 1441*, 1681*,
072H1*, 096H1*, 120H1*)
Quantity of cable straps : 2

External output PC board(TCB-PCIN4UL)

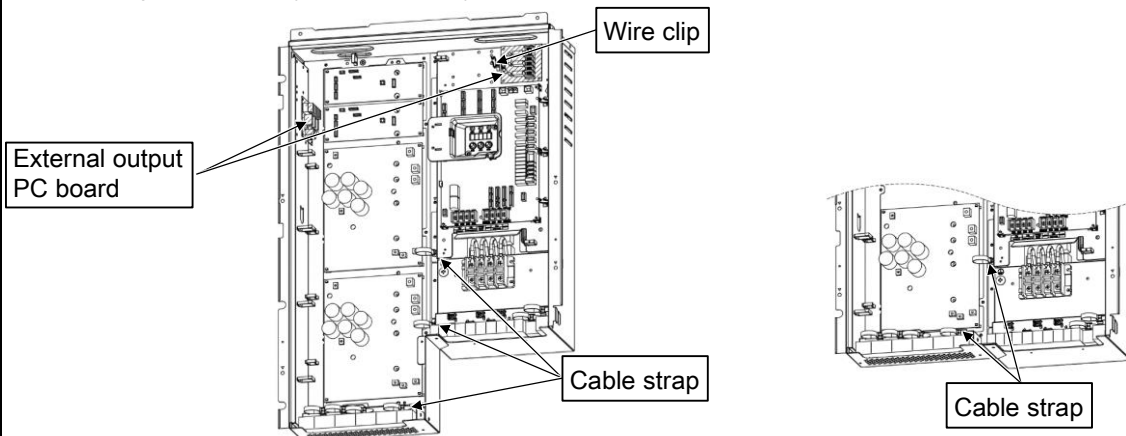


Inverter case type A
(MMY-MUP1921*)
Quantity of cable straps : 3

Inverter case type B
(MMY-MUP0721*, 0961*, 1201*, 1441*, 1681*,
072H1*, 096H1*, 120H1*)
Quantity of cable straps : 2

6-2-3-1. Power peak-cut Control (Standard)

(1) Four-core cable support

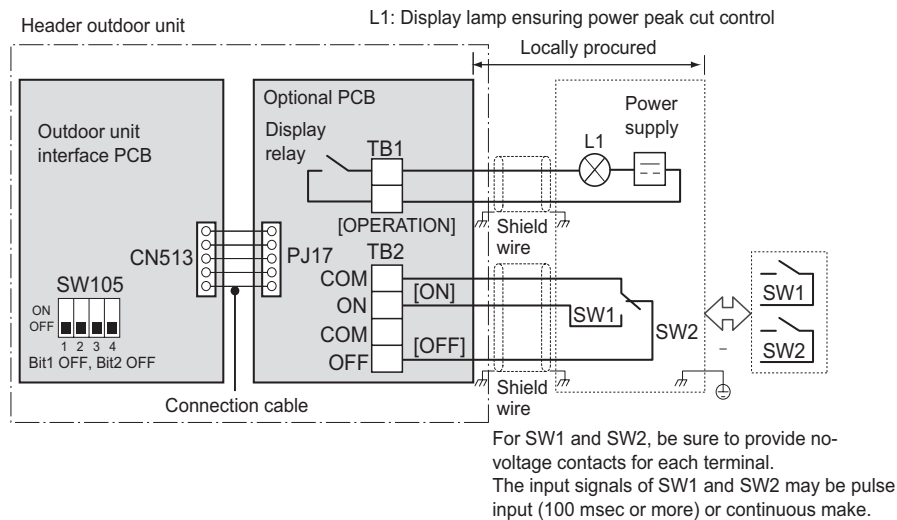

Operation

The demand request signal from the outside restricts the maximum capability (or maximum electric power) of an outdoor unit.

L1: Power peak-cut control indication lamp SW1: Power peak-cut control ON switch (ON as long as target power peak-cut control has been reached or exceeded, normally OFF)*1

SW2: Power peak-cut control OFF switch (OFF as long as target power peak-cut control has not been reached or exceeded, normally ON)*1

*1 The inputs of SW1 and SW2 can be either pulse (100 msec or longer) or step signals.

Do not turn on SW1 and SW2 simultaneously.

* Be sure to provide a contact for each terminal.

Power peak-cut control settings

[2-stage switching] < SW105 bit1 OFF, bit2 OFF >

Demand: power peak-cut control

Control item	Optional P.C.board			Outdoor unit interface P.C.board			
	Input		Display relay	SW105			
	SW1	SW2	(L1)	Bit1	Bit2	Outdoor unit DN Code [00E]	
Input demand OFF signal to release the demand	OFF	ON	OFF	OFF	OFF	100% (normal operation)	100% (normal operation)
Input demand ON signal to control the demand	ON	OFF	ON	OFF	OFF	0% (forced stop)	Approx. X (50% to 100%) (upper limit regulated)

* The upper limit X% can be regulated with the outdoor DN Code (O.DN) [00E].

Outdoor unit DN Code (O.DN) [00E]	X
0	100%
1	95%
2	90%
3	85%
4	80%
5	75%
6	70%
7	65%
8	60%
9	55%
10	50%
15 (factory default)	0% (forced stop)

Note 1: Specifications of display relay contact

- The terminal for display output ([Operation] terminal) must satisfy the following electrical rating.

<Electrical Rating>

208 to 230 VAC, 10 mA or more, 1 A or less
24 VAC, 10 mA or more, 1 A or less (non-conductive load)


When connecting a conductive load (e.g. relay coil) to the display relay load, insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit.

Note 2: COM contact specifications

- COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact.
- DC12 V has a current-limiting resistor of 3.3 kΩ.
- For non-voltage contacts, use a relay with minimum applicable load of DC12V, 3mA or less.

(2) Two-core cable support

Setting SW105 bit1 on I/F P.C.board of the header outdoor unit to ON allows ON/OFF power peak-cut control to be switched using [ON] terminal input (SW1) alone.

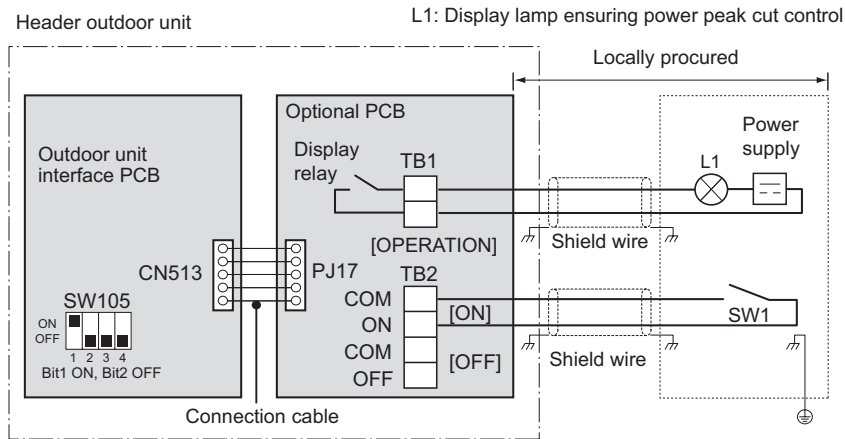

[2-stage switching] < SW105 bit1 ON, bit2 OFF >

Power peak-cut control turns ON when SW 1 in the wiring example is ON (continuous make).

Demand: power peak-cut control

Control item	Optional P.C.board		Outdoor unit interface P.C.board			
	Input	Display relay	SW105			
	SW1	(L1)	Bit1	Bit2	Outdoor unit DN Code [00E]	
Input demand OFF signal to release the demand	OFF	OFF	ON	OFF	Factory default [00E] = 15 100% (normal operation)	[00E] = 0 to 10 100% (normal operation)
Input demand ON signal to control the demand	ON	ON	ON	OFF	0% (forced stop)	Approx. X (50% to 100%) (upper limit regulated)

* The upper limit X% can be regulated with the outdoor DN Code (O.DN) [00E].

Outdoor unit DN Code (O.DN) [00E]	X
0	100%
1	95%
2	90%
3	85%
4	80%
5	75%
6	70%
7	65%
8	60%
9	55%
10	50%
15 (factory default)	0% (forced stop)

Note 1: Specifications of display relay contact

- The terminal for display output ([Operation] terminal) must satisfy the following electrical rating.


<Electrical Rating>
 208 to 230 VAC, 10 mA or more, 1 A or less
 24 VAC, 10 mA or more, 1 A or less (non-conductive load)

When connecting a conductive load (e.g. relay coil) to the display relay load, insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit.

Note 2: COM contact specifications

- COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact.
- DC12 V has a current-limiting resistor of 3.3 kΩ.
- For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

The optional P.C. board should be connected to the header outdoor unit (U1).

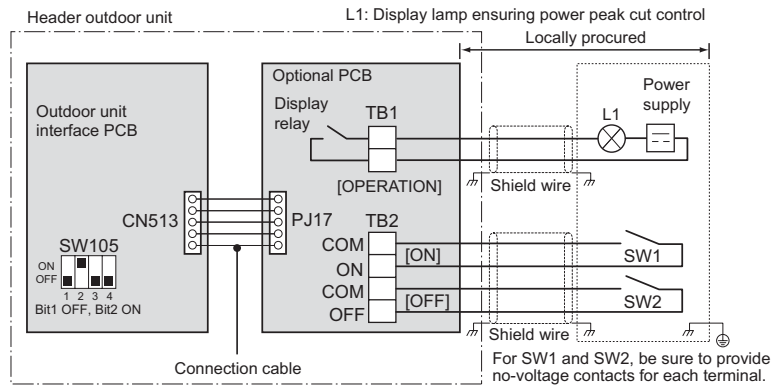

6-2-3-2. Power peak-cut Control (Extended)

Operation

The demand request signal from the outside restricts the maximum capability (or maximum electric power) of an outdoor unit.

L1: Power peak-cut control indication lamp

SW1: Power peak-cut control ON switch*1

SW2: Power peak-cut control OFF switch*1

*1 The inputs of SW1 and SW2 can be either pulse (100 msec or longer) or step signals.

* Be sure to provide a contact for each terminal.

Extended power peak-cut control settings

[4-stage switching] <SW105 Bit1 ON, Bit2 ON>

Demand: power peak-cut control

Control item	Optional P.C.board			Outdoor unit interface P.C.board			
	Input		Display relay	SW105			
	SW1	SW2	(L1)	Bit1	Bit2	Outdoor DN Code [***]	
Input demand OFF signal to release the demand	OFF	OFF	OFF	OFF	ON	Factory default [00E] = 15, [00F] = 8, [010] = 4	[00E] = X, [00F] = Y, [010] = Z
Input demand ON signal to control the demand	ON	OFF	ON			100% (normal operation)	100% (normal operation)
Input demand ON signal to control the demand	OFF	ON	ON			Approx. 80% (upper limit regulated)	Approx. Z% (50% to 100%) (upper limit regulated)
Input demand ON signal to control the demand	ON	ON	ON			Approx. 60% (upper limit regulated)	Approx. Y% (50% to 100%) (upper limit regulated)
Input demand ON signal to control the demand	ON	ON	ON			0% (forced stop)	Approx. X% (50% to 100%) (upper limit regulated)

*The upper limit X%, Y%, Z% can be regulated with the outdoor DN Code (O.DN) [00E] [00F] [010].

Outdoor unit DN Code (O.DN) [00E]	X
0	100%
1	95%
2	90%
3	85%
4	80%
5	75%
6	70%
7	65%
8	60%
9	55%
10	50%
15 (factory default)	0% (forced stop)

Outdoor unit DN Code (O.DN) [00F]	Y
0	100%
1	95%
2	90%
3	85%
4	80%
5	75%
6	70%
7	65%
8 (factory default)	60%
9	55%
10	50%
15	0% (forced stop)

Outdoor unit DN Code (O.DN) [010]	Z
0	100%
1	95%
2	90%
3	85%
4 (factory default)	80%
5	75%
6	70%
7	65%
8	60%
9	55%
10	50%
15	0% (forced stop)

Note 1: Specifications of display relay contact

- The terminal for display output ([Operation] terminal) must satisfy the following electrical rating.

<Electrical Rating>

208 to 230 VAC, 10 mA or more, 1 A or less

24 VAC, 10 mA or more, 1 A or less (non-conductive load)

When connecting a conductive load (e.g. relay coil) to the display relay load, insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit. The optional P.C. board should be connected to the header outdoor unit (U1).

Note 2: COM contact specifications

- COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact.
- DC12 V has a current-limiting resistor of 3.3 kΩ.
- For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

[Power peak-cut control through electric power]

For the Power peak-cut control, the Power peak-cut control through electric power can be set by Outdoor unit DN code (O.DN) [009].

The Power peak-cut control through electric power regulates outdoor unit output so that power consumption does not exceed the upper limit value set.

- To change into the power peak-cut control through power, set the outdoor unit DN code to [009] = 1.

* To return to the power peak-cut control through capacity, set the outdoor unit DN code to [009] = 0.

- Check that the criteria value of a maximum power in cooling or heating is set to [00A] to [00D].

For the connected outdoor units system, set the criteria value of a maximum power consumption (the total of each outdoor unit power) to the header outdoor unit.

Outdoor unit DN Code (O.DN) [00C], [00D]

Criteria value setting for a maximum cooling power

(e.g.) When the maximum standard value of cooling power consumption is set as 19.35 kW = 19.35kW

Outdoor unit DN Code (O.DN)	[00C]	[00D]
Value	19	35

Outdoor unit DN Code (O.DN) [00A], [00B]

Criteria value setting for a maximum heating power

(e.g.) When the maximum standard value of heating power consumption is set as 14.00 kW = 14.00kW

Outdoor unit DN Code (O.DN)	[00A]	[00B]
Value	14	00

- If ON signal is input from the optional P.C. board, the power peak-cut control through electric power operates.

Input method of ON signal for power peak-cut control is the same as that for normal peak-cut control.

Refer to “Standard”, “For one input function”, or “Enhanced Function”.

The power peak-cut control regulates the outdoor unit capacity so that it does not exceed the upper limit value (X%, Y%, Z% of the criteria value for a maximum power set in (2)) set by [00E] [00F] [010] of (O.DN).

e.g.) If the criteria value of maximum heating power during 80% demand control is set to 14.00kW, the upper limit control becomes 11.2kW (14.00kW×80%=11.20kW), the outdoor unit output is controlled so that the power consumption does not exceed 11.20kW.

NOTE 1: To protect a refrigerant cycle, the power peak-cut may not be operated during the defrost operation, oil recovery operation, or refrigerant recovery operation.

NOTE 2: For demand OFF, the outdoor unit may operate beyond the setting criteria value of a maximum power consumption because the power limit control does not function.

NOTE 3: Power consumption is estimated, causing approx. ±5 % difference from the actual power consumption.


To perform accurate power peak-cut control, use a demand controller and electric power meter.

NOTE 4: The power consumption of the indoor units is not included.

NOTE 5: When power consumption does not decrease or expected effects are not obtained, change the upper limit value of X%, Y%, Z% or the criteria value for a maximum power.

NOTE 6: In the case of Upper limit 100% (normal operation), the operation is without peak-cut control. Peak-cut control is not performed with the value set to O.DN [00A] - [00D].

6-2-3-3. Snowfall Fan Control

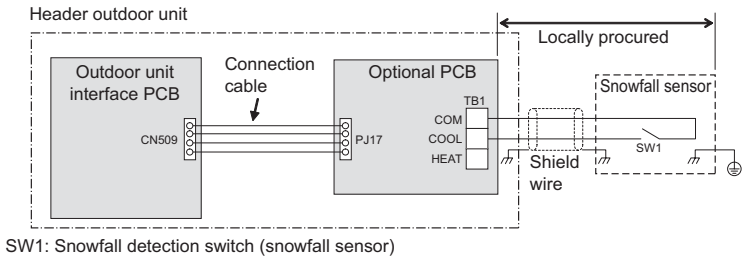


Operation
An external snowfall signal turns on the outdoor unit fan.

Terminal	Input signal	Operation
COOL (SW1)	ON	Snowfall fan control (Turn on outdoor unit fan)
	OFF	
	ON	Normal operation (Cancels control)
	OFF	

The input signal is recognized during its rising/falling phase.
(After reaching the top/bottom of the rising/falling edge, the signal must remain there for at least 100 ms.)
The optional P.C. board should be connected to the header outdoor unit (U1).
COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact. DC12 V has a current-limiting resistor of 3.3 kΩ.
For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

6-2-3-4. External master ON/OFF Control

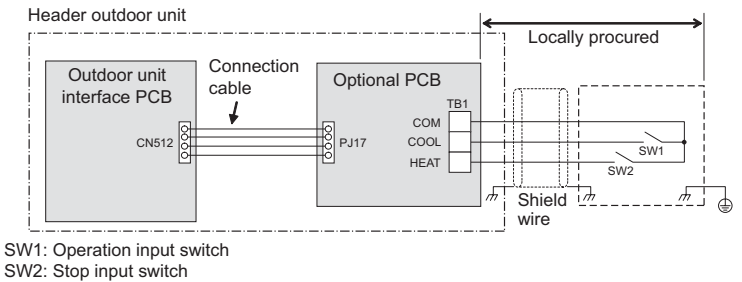

Operation
The system is started/stopped from the outdoor unit.

Terminal	Input signal	Operation
COOL (SW1)		Turns on all indoor units
HEAT (SW2)		Turns off all indoor units


- Input signal is detected in the rising edge between OFF and ON of SW1/SW2 and the control is accepted in 100 msec from the edge.
- When COOL terminals (SW1 and SW2) are simultaneously turned ON, the control turned ON first is valid, and the control turned ON later is invalid.

CAUTION

- (1) Do not turn on the COOL (SW1) and HEAT (SW2) terminals simultaneously.
- (2) COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact. DC12 V has a current-limiting resistor of 3.3 kΩ.
For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.





The optional P.C. board should be connected to the header outdoor unit (U1).

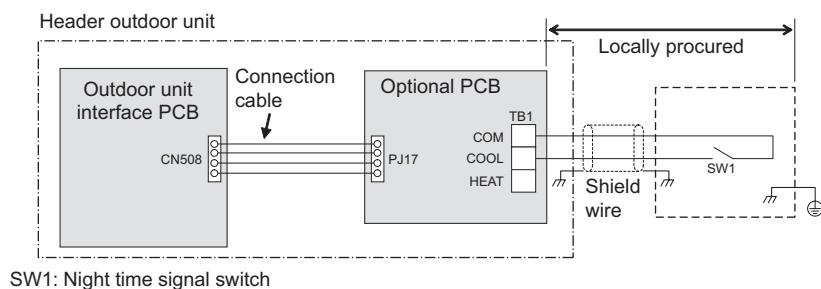6-2-3-5. Night operation (sound reduction) Control



Operation

This function decreases noise at night or other times as necessary.

Terminal	Input signal	Operation
COOL (SW1)	ON 	Night time control
	OFF 	
	ON 	Normal operation
	OFF 	

The input signal is recognized during its rising/falling phase.

(After reaching the top/bottom of the rising/falling edge, the signal must remain there for at least 100 ms.)

The optional P.C. board should be connected to the header outdoor unit (U1).

The system's capacity is reduced during low-noise operation.


The table below provides a rough guide to this capacity reduction.

Model MMY-	Night operation sound reduction dB(A) (COOL/HEAT)	Capacity	
		COOL	HEAT
MUP0721*	50/50	Approx. 85%	Approx. 85%
MUP0961*	50/50	Approx. 70%	Approx. 70%
MUP1201*	54/53	Approx. 85%	Approx. 80%
MUP1441*	54/53	Approx. 85%	Approx. 70%
MUP1681*	54/54	Approx. 80%	Approx. 65%
MUP1921*	52/54	Approx. 60%	Approx. 60%
MUP072H1*	50/50	Approx. 85%	Approx. 85%
MUP096H1*	54/53	Approx. 90%	Approx. 90%
MUP120H1*	54/53	Approx. 85%	Approx. 80%

* Position of noise measuring device: 1 m from the front face of the set and 1.5 m above ground (anechoic sound)

- COM terminals have DC12 V output with a basic insulation.
Use a switch, such as a relay or photo coupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact.
- DC12 V has a current-limiting resistor of 3.3 kΩ.
- For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

6-2-3-6. Operation Mode Selection Control

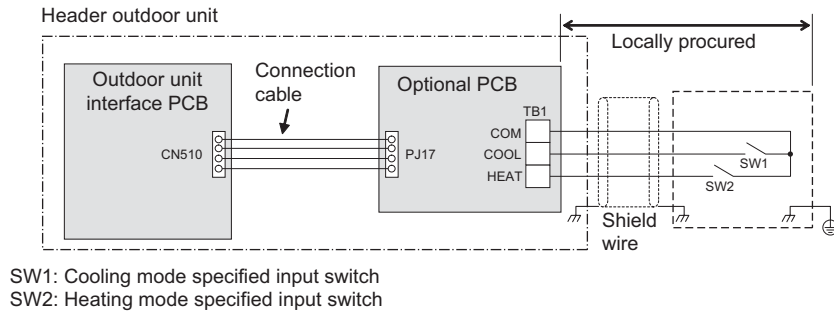

NOTE

SW1: COOL mode selection switch
SW2: HEAT mode selection switch

Input signal		Operation
COOL (SW1)	HEAT (SW2)	
OFF	OFF	Normal operation
ON	OFF	Only cooling operation allowed
OFF	ON	Only heating operation allowed

Indoor unit operation intervention function


The statuses of indoor units operating in a mode other the selected operation mode can be switched by setting the outdoor DN Code of the header outdoor unit.

The optional P.C. board should be connected to the header outdoor unit (U1).

Outdoor DN Code (O.DN)	Details of Processing				
O.DN [008] = 0 (factory default)	Unallowed indoor units in a mode other than the P.C.board selection modes are not treated as priority (thermostat OFF state).				
	P.C. board selection mode	Input Signal		Remote control	Operation State
		COOL (SW1)	HEAT (SW2)		
	Normal	OFF	OFF	* or Δ	Follow the remote controller.
				✱	
				✱	
	Cooling operation only allowed	ON	OFF	* or Δ	Follow the remote controller (Normal cooling operation).
				✱	Thermostat OFF (Air blow operation at super-slow blow rate)
				✱	Follow the remote controller (Normal air blow operation).
O.DN [008]= 1	Heating operation only allowed	OFF	ON	* or Δ	Thermostat OFF (Air blow operation at blow rate set on remote control)
				✱	Follow the remote controller (Normal heating operation).
				✱	Follow the remote controller (Normal air blow operation).
	Normal	OFF	OFF	✱, Δ, ✱ or ✱ can be selected.	
				• Only ✱, Δ or ✱ can be selected. • Indoor units in Heat mode are forcibly switched to the Cool mode.	
	COOL	ON	OFF	• Only ✱ or ✱ can be selected. • Indoor units in Cool or Dry mode are forcibly switched to the Heat mode.	
	HEAT	OFF	ON		

- COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact.
- DC12 V has a current-limiting resistor of 3.3 kΩ.
- For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

6-2-3-7. Trouble/Operation Output

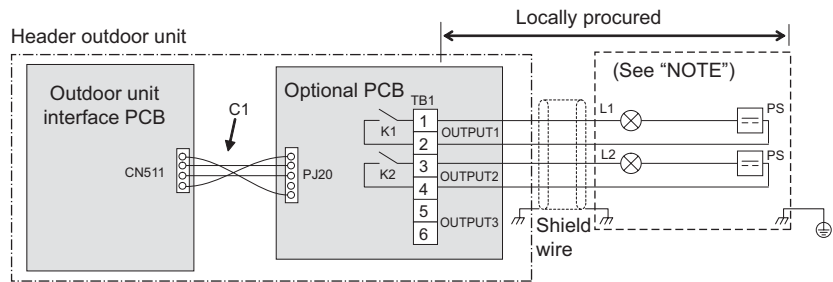

Operation

In-operation output: An in-operation indication signal is output as long as at least one indoor unit is in operation in the line.

Trouble output: Trouble indication signal is output if trouble occurs in at least one indoor/outdoor unit in the line.

Note 1: Output Relay (K1, K2) Contact Specifications


- Output terminals (OUTPUT1, 2) must satisfy the following electrical rating.
- When connecting a conductive load (e.g. relay coil) to loads K1 and K2, insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit.

<Electrical Rating>
208 to 230 VAC, 10 mA or more, 1A or less
24 VAC, 10 mA or more, 1 A or less (non-conductive load)

C1	Attached connection cable 1 (4wires)
CN511	Connector on interface side (green)
K1, K2	Relays
L1	Trouble indication Lamp
L2	Operation indication Lamp
OUTPUT1	Trouble output
OUTPUT2	Operation output
PJ20	Connector on optional P.C.board side
PS	Power supply unit
TB1	Terminal block

The optional P.C. board should be connected to the header outdoor unit (U1).

6-2-3-8. Compressor Operation Output

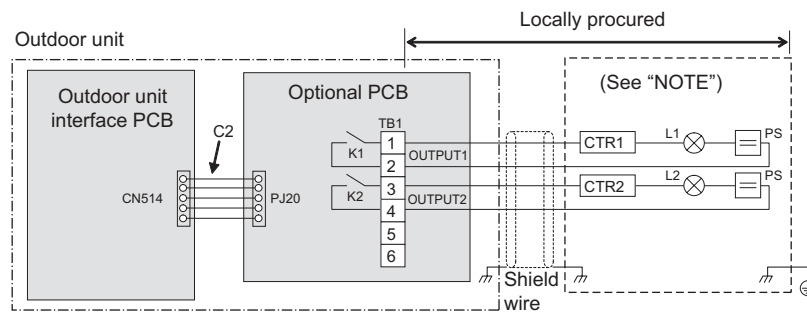


Operation

When a compressor is in operation, a relay connected to the output terminal assigned to it is turned on (closed). When it is at rest, the relay is turned off (open). The output terminals are named OUTPUT1 and OUTPUT2 from left to right when facing the front of the outdoor unit, as shown in the diagram.

Note 1: Output Relay (K1, K2) Contact Specifications


- Output terminals (OUTPUT1, 2) must satisfy the following electrical rating.
- When connecting a conductive load (e.g. relay coil) to loads K1 and K2 insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit.

<Electrical Rating>
 208 to 230 VAC, 10 mA or more, 1A or less
 24 VAC, 10 mA or more, 1 A or less (non-conductive load)

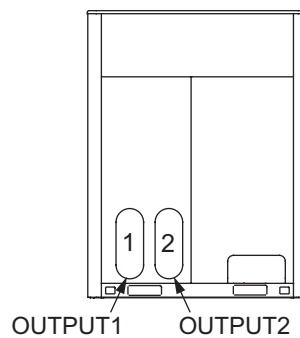

C2	Connector cable 2 ([2])
CN514	Connector on interface side (green)
CTR1	Elapsed operation counter 1
CTR2	Elapsed operation counter 2
K1, K2	Relays
L1, L2	Operation indication LEDs
OUTPUT1	Compressor 1 operation output terminal
OUTPUT2	Compressor 2 operation output terminal
PJ20	Connector on optional P.C.board side
PS	Power supply unit
TB1	Terminal block

6-2-3-9. Operating Rate Output

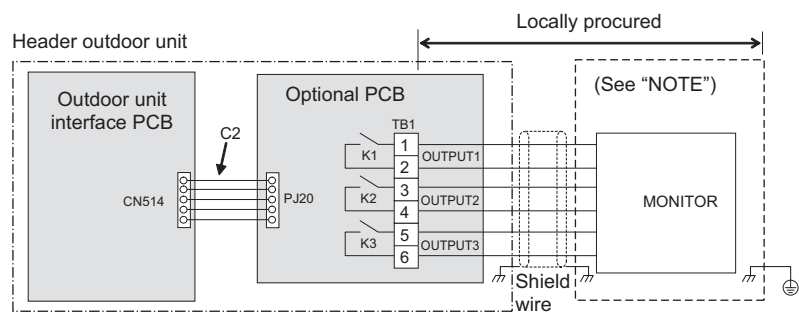

Operation

At the output terminals, a signal is present (relay closed) or absent (relay open) in various combinations according to the system operation factor, as shown in the diagram.
The operation rate (FA) is the percentage ratio of the current output of the system to the maximum output (100%).

Function	Outdoor DN Code [O.DN]	OUTPUT1	OUTPUT2	OUTPUT3	Operation rate (FA)
System operation rate output	O.DN [012] = 1	off	off	off	FA=0%
		on	off	off	0%<FA<20%
		off	on	off	20%≤FA<35%
		on	on	off	35%≤FA<50%
		off	off	on	50%≤FA<65%
		on	off	on	65%≤FA<80%
		off	on	on	80%≤FA<95%
		on	on	on	95%≤FA

off = Relay open
on = Relay closed

C2	Connector cable 2 (2)
CN514	Connector on interface side (green)
K1, K2, K3	Relays
MONITOR	Monitoring device
OUTPUT1	Output terminal for each function
OUTPUT2	Output terminal for each function
OUTPUT3	Output terminal for each function
PJ20	Connector on optional P.C.board side
TB1	Terminal block

* Connect the optional P.C. board to the header outdoor unit.

Note 1: Output Relay (K1, K2, K3) Contact Specifications

- Output terminals (OUTPUT1, 2, 3) must satisfy the following electrical rating.
- When connecting a conductive load (e.g. relay coil) to loads K1, K2 and K3, insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit.

<Electrical Rating>
208 to 230 VAC, 10 mA or more, 1A or less
24 VAC, 10 mA or more, 1 A or less (non-conductive load)

6-3. Notice Code


- Notice Code is a function only in TC2U-Link communication.
- When the outdoor or indoor unit detects its conditions requiring caution or maintenance, this function notices you to check your units with the spanner mark (Notice code mark) on the wired remote controller or central controller display.
- Even while the notice code mark is displayed, the air conditioner can operate normally.
- A maximum of five notice codes can be issued simultaneously in one system (line).

1. Notice Code Mark Display on Wired Remote Controller

Set the notice codes from remote controller so that the notice code mark is displayed on the remote controller display when the outdoor unit issues the notice codes.

Please follow the steps below to set the notice code on the unit.

- (1) Set the notice codes, which will be displayed, on the Indoor unit DN Code (I. DN) "180" to "189" from the remote controller.
Enter one of the notice codes for each DN Code. You can set it on any of "180" to "189".
A maximum 10 types of the notice codes can be set on a single indoor unit.
- (2) A notice code mark will be displayed on the remote controller when any of the 10 notice codes set is received into the remote controller.
If the notice code that is not set is received, a notice code mark is not displayed.
Set the notice code that you want from the remote controller.

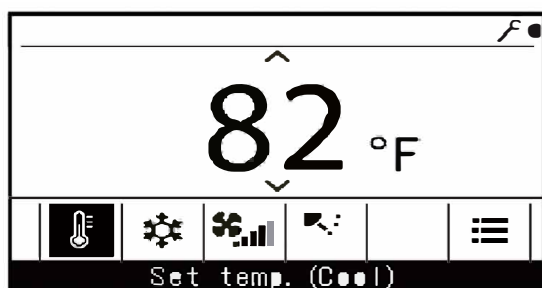

Notice code icon

2. Notice Code Display (7-segment display) on Outdoor Interface P.C. Board

The notice codes detected or issued from the outdoor unit can be confirmed with 7-segment display on the P.C. board.

(The notice codes detected or issued from the other outdoor unit cannot be displayed.)

(1) Displaying the notice code being issued now

Setting the SW01, SW02, SW03 to 1, 1, 14 respectively displays the notice code being issued from the outdoor unit on the 7-segment display 7-segment display [n. 1. . ***] *** : Notice code

Every time SW04 is pushed for 1-second, the display changes and the second notice code or each subsequent code is displayed (up to fifth code).

[n. 1. ***] (First) to [n. 2. ***] (Second) to ••• to [n. 5. ***] (Fifth) to [n. 1. ***] (First)

(2) Displaying the notice code history

Setting the SW01, SW02, SW03 to 1, 2, 14 respectively displays the notice code history being issued from the outdoor unit on the 7-segment display 7-segment display [h. 1. ***] *** : Notice code

Every time SW04 is pushed for 1-second, the display changes and the second notice code or each subsequent code is displayed (up to tenth code history).

[h. 1. ***] (First) to [h. 2. ***] (Second) ••• to [h. A. ***] (Tenth) to [h. 1. ***] (First)

(3) Clearing the notice code history

To clear the notice code history recorded in the outdoor unit, follow the steps below.

Set the SW01, SW02, SW03 to 2, 15, 8 respectively.

7-segment display [n. c]

When SW04 is pushed and held for 5-second, the notice code histories recorded in the outdoor unit are cleared.

7-segment display [n. c C L]

3. Notice Code List

Notice code No.	Item	Content
001	Compressor maintenance timer over	This notice code is detected or issued from the outdoor unit when the actual operation cumulative time of comp.1 or comp.2 exceeds the compressor maintenance time set. The compressor maintenance time is not set at the factory. To use the notice code, set the compressor maintenance time* on O.DN"007".
022	NFC tag wiring trouble	This notice code is detected or issued from the outdoor unit when NFC tag is removed, failed, or cannot communicate with the outdoor interface P.C. board. The notice code stops when NFC tag communication recovers. (Note) A notice code [022] may be issued when connecting equipment to CN800 of the outdoor interface P.C. board, but this is not a faulty connection or a failure. Issuing of the notice code [022] will stop when the equipment is removed from the CN800 and the power of the outdoor unit is turned off. Determination of NFC tag failure should be performed in a state where no equipment is connected to the CN800.

* Setting the compressor maintenance time to detect the time exceeded

Enter the compressor maintenance time to be detected as time over into Outdoor unit DN Code (O.DN) "007".

Input values $\times 1,000$ = Detection time

e.g. When O.DN [007]=20 is set

$20 \times 1,000 = 20,000$ hours ••• The notice code "001" is detected and issued when the actual operation cumulative time of comp.1 or comp.2 will exceed 20,000 hours.


6-4. System Cooperation Defrosting

Overview

This is a function in which two systems or three systems of SHRM-u are communicably connected, and the timing of defrosting at each system is offset.

Installing an indoor device of a different system in the same room and performing system cooperation defrosting suppresses the room temperature from dropping while defrosting.

*When this setup is carried out, central remote controller cannot be connected.

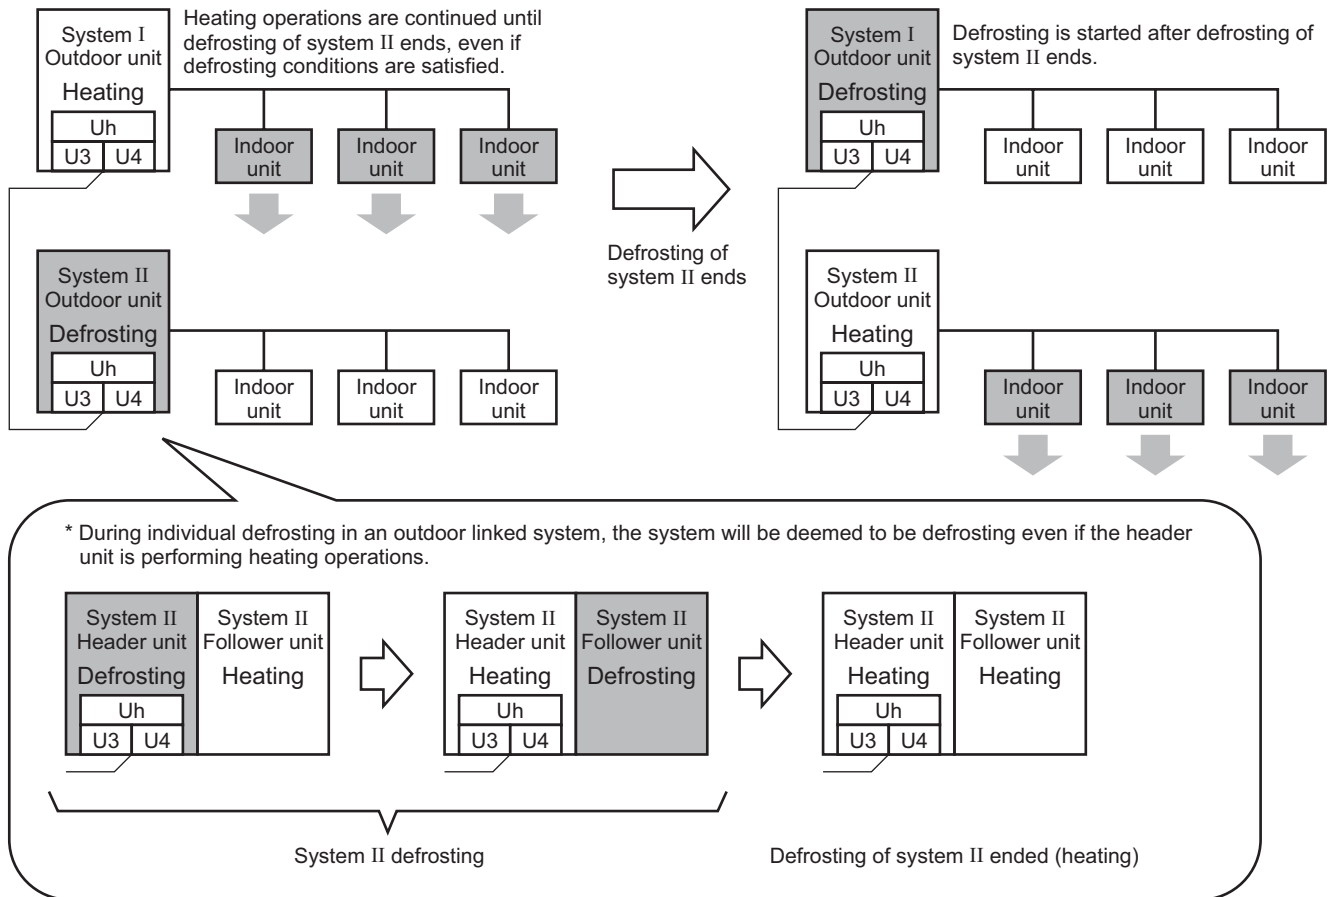

* In this section, system addresses are indicated by Roman numerals (I, II, III...), to differentiate from system cooperation defrosting setup addresses.


■ Setup method

- (1) Connect the header units of systems to perform system cooperation defrosting to each other by Uh (U3, U4) (Central control).
- (2) SW100-bit1 (termination resistance of Uh line) of master outdoor unit is turned on.
- (3) Do not set the same system addresses for each system that link defrosting.
For the system address, please refer to "7-4-3. Address Setup Procedure 2-2.Line (system) address setting", and set with "automatic address setting "or " address setting by remote controller"
- (4) Set the outdoor DN code (O. DN) [01D], [01E], [01F] to the header unit in each system by the following setup method. (Setting the outdoor DN code (O. DN) to follower unit is not necessary.)
 - 1) Decide a master unit and vassal units from header units of each of the systems, and set the master unit to [01F] = 0001, and the vassal units to [01F] = 0002 or 0003.
 - 2) Set the outdoor DN code [01E] of each header unit to 0001.
When using the central controller for system cooperation defrosting control, set to 0001 through 0128 in accordance with the manual for the central controller.
 - 3) Set the number of systems performing defrosting cooperation (0002 or 0003) in the [01D] of the outdoor unit set to be the master unit.

Outdoor DN code	Item	Description	At shipment
01d	System cooperation defrosting settings 1 (number cooperating)	0000 : None (vassal) 0001 : Prohibition 0002 : 2-system cooperation (master unit) 0003 : 3-system cooperation (master unit) * set [01D] = 0002 or 0003 to outdoor unit set to master unit in outdoor DN code [01F]	0000: None (vassal)
01E	System cooperation defrosting settings 2 (zone address)	0000 : None 0001 to 0128: Addresses 0001 when not using central controller for control for system cooperation defrosting, 0001 to 0128 when using central controller	0000: None
01F	System cooperation defrosting settings 3 (cooperation address)	0000: None 0001: Master unit 0002 or 0003: Vassal units 2 or 3	0000: None

- (5) Reset power supply of outdoor unit, and setup is complete.

<Wiring and setup examples>

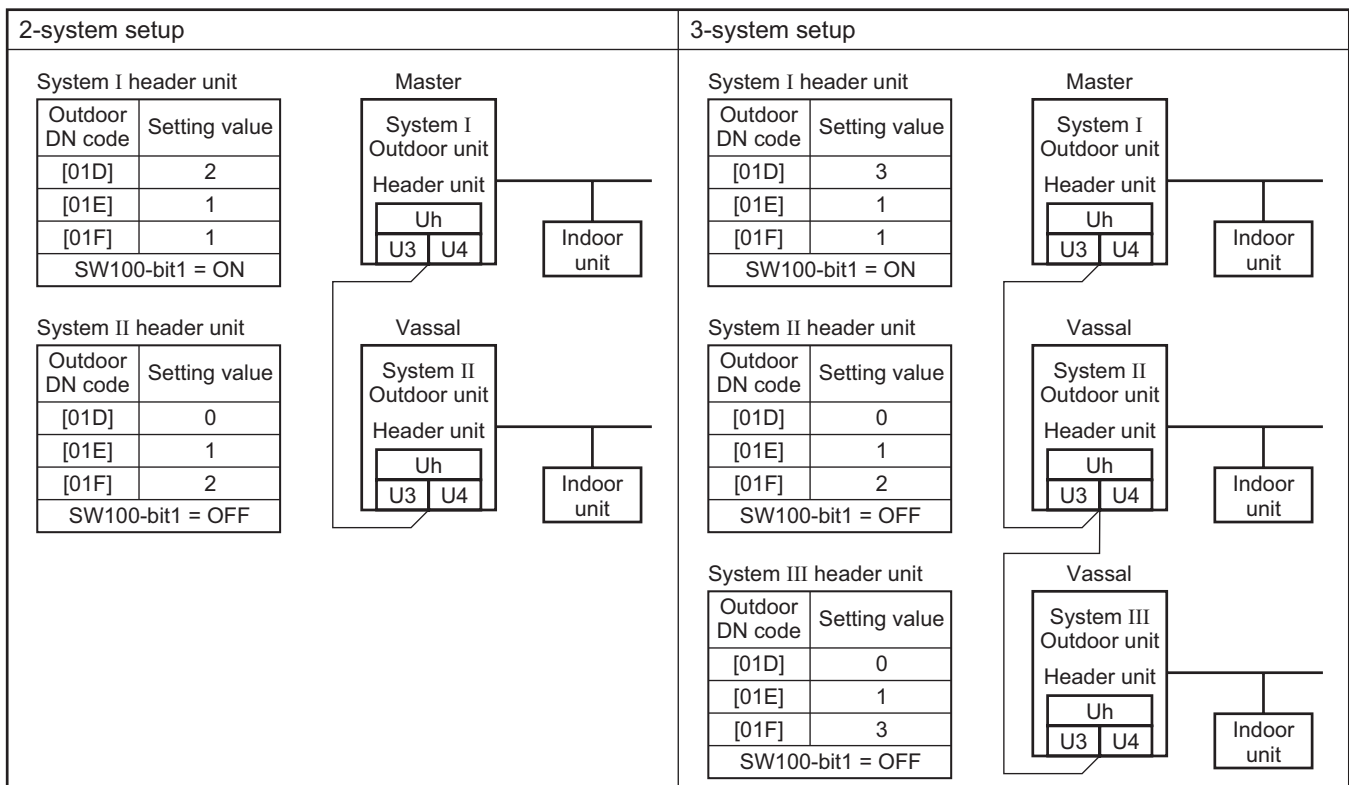

■ Operations (contents of control)

- (1) Defrosting conditions for system cooperation defrosting (hereinafter referred to as “cooperation defrosting conditions”) are measured at each system, separately from normal defrosting conditions.
When multiple systems satisfy the cooperation defrosting conditions at the same time, the system that has satisfied the conditions earlier starts defrosting.
- (2) When a system that has started defrosting earlier is still defrosting, other systems do not perform defrosting but continue heating operations.
- (3) When defrosting of the system that started defrosting earlier ends, the system that has satisfied the cooperation defrosting conditions next starts defrosting.
- (4) When only one system satisfies the cooperation defrosting conditions, that system continues heating operations, and performs defrosting at the point that normal defrosting conditions are satisfied.
- (5) A system that has satisfied normal defrosting conditions starts defrosting to avoid the risk of remaining frost, even if system cooperation defrosting is being performed.

<Operation examples of system cooperation defrosting>

(Example 1) 2-system cooperation defrosting

In a case where cooperation defrosting conditions are satisfied in the order of system II and system I, defrosting is performed in the order of system II and system I.

System I	Heating	→	Heating *1	→	Defrosting *2	→	Heating
System II	Heating	→	Defrosting	→	Heating	→	Heating

*1 Continue heating without starting defrosting control while system II is defrosting

*2 Start defrosting after system II ends defrosting

(Example 2) 3-system cooperation defrosting

In a case where cooperation defrosting conditions are satisfied in the order of system II, system I and system III, defrosting is performed in the order satisfying conditions among the three systems.

System I	Heating	→	Heating *1	→	Defrosting *2	→	Heating	→	Heating
System II	Heating	→	Defrosting	→	Heating	→	Heating	→	Heating
System III	Heating	→	Heating *1	→	Heating *1	→	Defrosting *3	→	Heating

*1 Continue heating without starting defrosting control while system II is defrosting

*2 Start defrosting after system II ends defrosting

*3 Start defrosting after system I ends defrosting.

(Example 3) 2-system cooperation defrosting out of three systems

In a case where cooperation defrosting conditions are satisfied in the order of system II and system III, but system I does not satisfy conditions, system cooperation defrosting is performed by system II and system III alone.

System I	Heating	→	Heating	→	Heating	→	Heating
System II	Heating	→	Defrosting	→	Heating	→	Heating
System III	Heating	→	Heating *1	→	Defrosting *2	→	Heating

*1 During system II defrosting, don't start defrosting control but continue heating.

*2 The system II is a defrosting start after the end of defrosting

<Examples of not performing system cooperation defrosting>

(Example 4) Normal defrosting

In a case in where only system II satisfies defrosting conditions (system cooperation defrosting conditions and normal defrosting conditions), only system II performs defrosting.

System I	Heating	→	Heating	→	Heating
System II	Heating	→	Defrosting	→	Heating
System III	Heating	→	Heating	→	Heating
System I	Stop	→	Stop	→	Stop
System II	Heating	→	Defrosting	→	Heating
System III	Stop	→	Stop	→	Stop

(Example 5) Example of not performing system cooperation defrosting

In a case where normal defrosting conditions are satisfied due to sudden increase in frost or the like, defrosting is started to avoid the risk of remaining frost, even if other systems are performing system cooperation defrosting.

System I	Heating	→	Heating *1	→	Defrosting *2	→	Heating
System II	Heating	→	Defrosting	→	Heating	→	Heating

*1 State where heating operations are continuing while system II is performing cooperation defrosting

*2 If normal defrosting conditions are satisfied, defrosting is started without awaiting system II to end defrosting.

6-5. Night operation (Sound reduction control)

■ Overview

- The 'Night operation' function of RBC-AWSU** remote control can be used with SHRM-u. It reduces the sound of outdoor unit putting priority on quietness during night time operation, etc., and the operation time can be set.

6-5. Night operation (Sound reduction control)

■ Overview

The 'Night operation' function of RBC-AWSU** remote control can be used with SHRM-u. It reduces the sound of outdoor unit putting priority on quietness during night time operation, etc., and the operation time can be set.


■ Setup method



- 1 Push the [Menu] button.
- 2 Push the [Up] / [Down] button to select "6.Night operation" on the menu screen, then push the " Set " [Set / Fix] button.
- 3 Push the [Up] / [Down] button to select "1.Night operation" on the "Night operation" screen.
- 4 Push the [Left] / [Right] button to select to select "ON" or "OFF"
→Select "ON" when the function is used.
- 5 Push the [Menu] button
→Push the [Up] / [Down] button to select "2.Start time" or "3.End time" for setting the Night operation time.

* Adjust the clock before setting the Night operation

To set the Night operation time

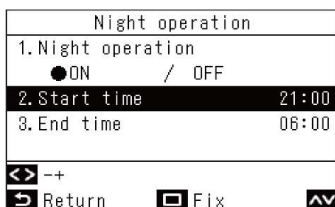


- 1 Push the [Up] / [Down] button to select "2.Starat time" on the "Night operation"
- 2 Push the [Left] / [Right] button to set the time.
- 3 Push the [Up] / [Down] button to select "3.End time".
- 4 Push the [Left] / [Right] button to set the time.
- 5 Push the [Menu] button
→the screen returns to the menu screen.


■ Control outline

- During the 'Outdoor unit sound reduction' control, the outdoor unit operates in the same way as in the 'Night operation Control' with optional control P.C.board. For the operation of outdoor unit during 'Night operation Control', please refer to '6-6-3-5. Night operation (sound reduction) Control'.
- Cooling / heating performance may be reduced a little because the operation priority is put on the quietness for the Night operation.
- " Zzz " appears on the detailed display when the Night operation is activated.
- The Night operation cannot be set on the Follower remote controller in the two remote controller system. " No function " is displayed on the screen.
- The 24-hour operation of Night operation is performed when the end time is the same as the start time.
- After setting, the 'Night operation Control' operates according to the start time and the end time, even when the remote control is off.


- The 'Night operation' can be set by a number of remote controls. It operates according to the start time and the end time set by each remote controls.

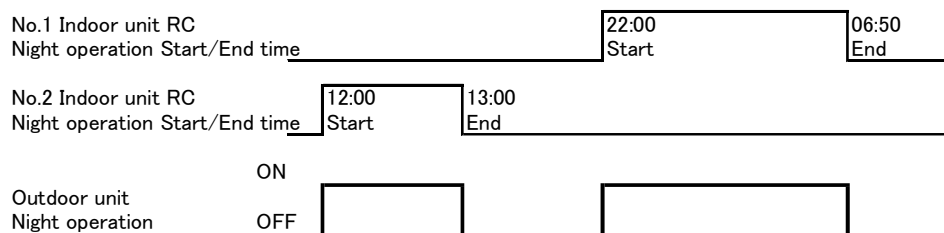

- If the 'Night operation' time set by a number of remote controls overlaps, it starts at the start time set by any one of the remote controls, and ends when all remote controls reach the end time.

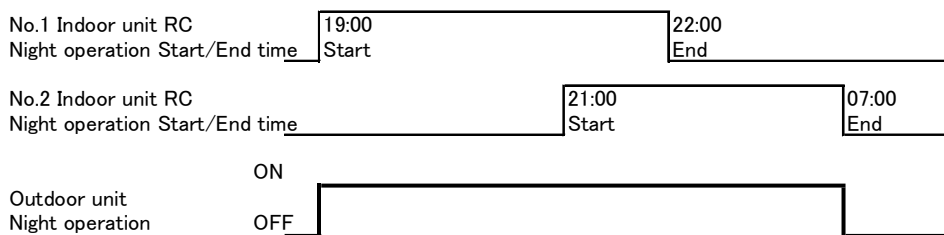


- The 'Night operation' with remote controls, and the 'Night Operation Control' with optional control P.C.board (TCB-PCMO4E) connected to the outdoor unit, can be used together. The outdoor unit operates in 'Night Operation' when either control is effective.

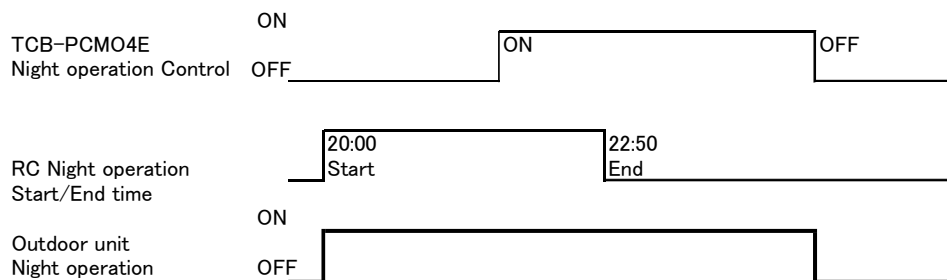

7. TEST OPERATION

7-1. Procedure and Summary of Test Operation

A test operation is carried out with the following procedure. When problems or a trouble occurs at any step, remove the causes of the problem or trouble referring to "8 TROUBLESHOOTING."

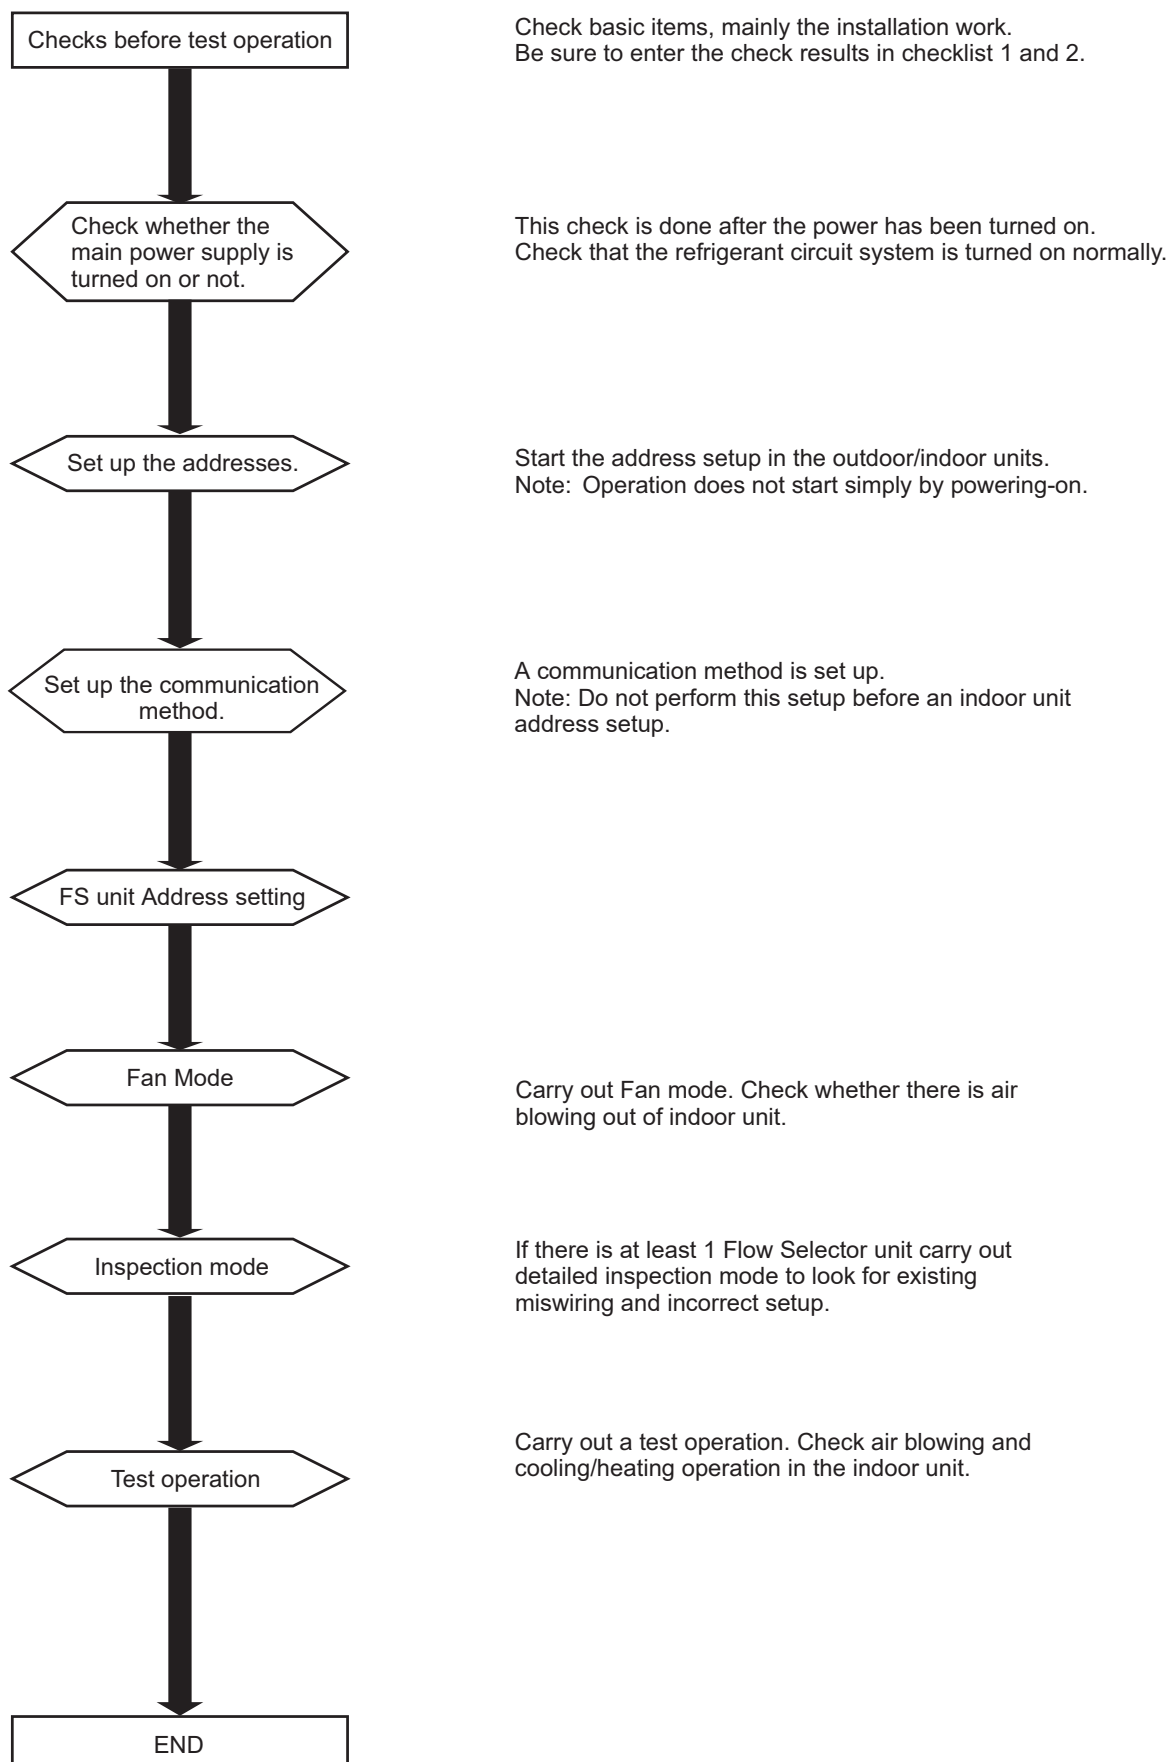

7-2. Check Items before Test Operation (before powering-on)


Prior to the test operation, check the following items to verify there are no problems with the installation work.

Main check items for electric wiring

The communication system differs from previous period model air conditioners.

Check wiring points again carefully.

(1) In the case that a central control system is not connected:

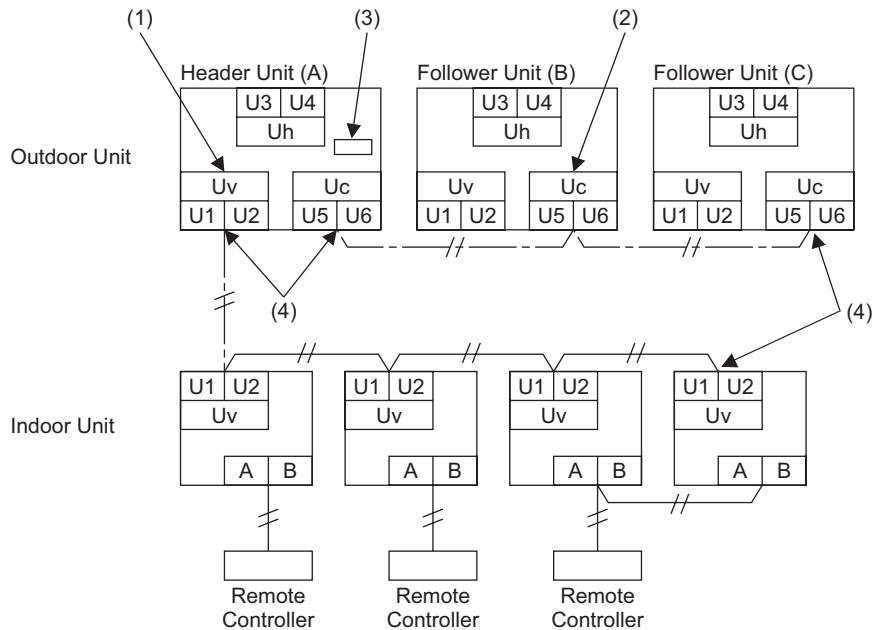


Main check items	Check
(1) Are the indoor and outdoor communication lines of the header unit connected to the U1/U2 (Uv) terminals?	
(2) Is the communication line between outdoor units connected to the U5/U6 (Uc) terminal?	
(3) Is the header unit setting (SW101-bit 1) turned on? Is the terminator resistor (SW100-bit 2) on the interface PC board of the header unit turned on?	
(4) Is the end terminal of the shield wire earthed?	

NOTE

The figure above does not show all the electric wires.

For details, refer to the installation manuals for the outdoor unit, indoor unit, remote controller, or optional devices.

(2) In the case that a central control system is connected (before address setup)

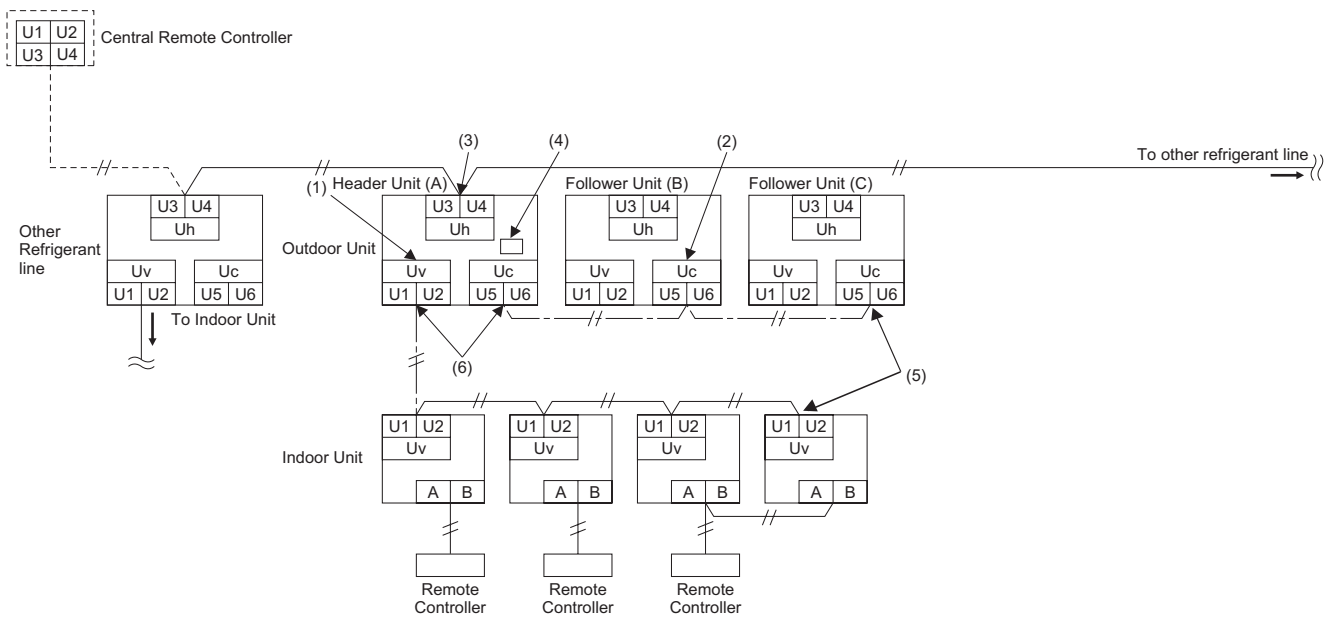

Main check items	Check
(1) Are the indoor and outdoor communication lines of the header unit connected to the U1/U2 (Uv) terminals?	
(2) Is the communication line between outdoor units connected to the U5/U6 (Uc) terminal?	
(3) Is the communication line of the central control system connected to the header unit U3/U4 (Uh) terminals of each refrigerant line? (The communication line of the central control system may be connected to the communication lines of the indoor/outdoor communication lines.)	
(4) Is the header unit setting (SW101-bit 1) turned on? Is the terminator resistor (SW100-bit 2 (termination resistance of Uv line)) on the interface PC board of the header unit turned on? * Does the smallest header unit of a system address turn on SW100-bit 1 (termination resistance of Uh line)? Does the header unit of other refrigerant systems turn off SW100-bit 1? (See "7-4-3. Address Setup Procedure")	
(5) Is the end terminal of the shield wire earthed?	
(6) Is the end terminal of the shield wire earthed at the header unit side?	

NOTE

The figure above does not show all the electric wires.
For details, refer to the installation manuals for the outdoor unit, indoor unit, remote controller, or optional devices.

Check list 1

• Using Checklist 1, check that there are no problems with the installation work.

Is the capacity of the circuit breaker (Earth leakage breaker) appropriate?	Outdoor total capacity <input type="text"/> A	Header unit (A) <input type="text"/> A	Indoor unit <input type="text"/> A
		Follower unit (B) <input type="text"/> A	
		Follower unit (C) <input type="text"/> A	
Is the gauge of the power cable correct?		Header unit (A) <input type="text"/> mm ²	Indoor unit <input type="text"/>
		Follower unit (B) <input type="text"/> mm ²	
		Follower unit (C) <input type="text"/> mm ²	
Is the control communication line correct?	Indoor-outdoor connection terminals (U1, U2) <input type="text"/>	Outdoor-outdoor connection terminals (U5, U6) <input type="text"/>	Central control system connection terminals (U3, U4) <input type="text"/>
Is the power of indoor units supplied collectively?			
Is it grounded to earth?			
Is the resistance sufficient? (10 MΩ or higher)	<input type="text"/> MΩ or higher		
Is the main power voltage sufficient? (within ±10%)	<input type="text"/> V		
Is the diameter of connecting pipe correct?			
Is the branch kit correct?			
Is the water drain of the indoor unit arranged so that it flows without accumulation?			
Is the heat insulation of pipes sufficient? (connecting pipes, branch kit)			
Is there no short circuit of discharge air in the indoor/outdoor units?			
After an airtightness test of the pipes, are vacuuming and adding of refrigerant executed?			
Are the valves of all the outdoor units fully opened?			
		Gas side	Liquid side
	Header unit (A)	<input type="text"/>	<input type="text"/>
	Follower unit (B)	<input type="text"/>	<input type="text"/>
	Follower unit (C)	<input type="text"/>	<input type="text"/>

Checklist 2

- Check the additional amount of refrigerant.

Additional amount of refrigerant charge at site = [1] + [2] x [A] + [3] + [4]

- [1] .Additional amount of refrigerant based on the outdoor unit capacity type (Table 1-1,1-2)
 [2] .Additional amount of refrigerant based on the liquid pipe diameter and length.
 Real length of liquid pipe × Additional amount of refrigerant charge per liquid pip length 1 ft and 1m. (Table 2)
 [A] .Correction factor based on the indoor unit connection capacity. (Table A)
 [3] .Additional amount of refrigerant based on the indoor unit capacity type and number. (Table 3-1,3-2,3-3,3-4)
 [4] .Refrigerant amount adjustment based on the diversity.(Table 4)

Table 1. Additional amount of refrigerant based on the outdoor unit capacity type.

Table 1-1. Standard model

	Outdoor unit capacity type	Combination outdoor units			Amount of additional refrigerant(lbs)	Amount of additional refrigerant(kg)
		Unit1	Unit2	Unit3		
6ton	072	072	—	—	2.2	1.0
8ton	096	096	—	—	2.2	1.0
10ton	120	120	—	—	0.0	0.0
12ton	144	144	—	—	2.2	1.0
14ton	168	168	—	—	4.4	2.0
16ton	192	192	—	—	5.5	2.5
16ton	192	096	096	—	4.4	2.0
18ton	216	144	072	—	4.4	2.0
20ton	240	144	096	—	4.4	2.0
22ton	264	168	096	—	6.6	3.0
24ton	288	144	144	—	4.4	2.0
26ton	312	168	144	—	6.6	3.0
28ton	336	168	168	—	8.8	4.0
30ton	360	168	096	096	8.8	4.0
32ton	384	144	144	096	6.6	3.0
34ton	408	168	144	096	8.8	4.0
36ton	432	168	168	096	11.0	5.0
38ton	456	168	144	144	8.8	4.0
40ton	480	168	168	144	11.0	5.0
42ton	504	168	168	168	13.2	6.0

Table 1-2. High heat model

	Outdoor unit capacity type	Combination outdoor units			Amount of additional refrigerant(lbs)	Amount of additional refrigerant(kg)
		Unit1	Unit2	Unit3		
6ton	072	072	—	—	2.2	1.0
8ton	096	096	—	—	2.2	1.0
10ton	120	120	—	—	6.6	3.0
12ton	144	072	072	—	4.4	2.0
16ton	192	096	096	—	4.4	2.0
20ton	240	120	120	—	13.2	6.0
24ton	288	096	096	096	6.6	3.0
30ton	360	120	120	120	19.8	9.0

Next, enter the total length for each liquid pipe diameter in the following table, and then calculate the additional amount of refrigerant by pipe length.

Table 2. Additional amount of refrigerant based on the liquid pipe and length.

Pipe diameter on the liquid side	Standard amount of refrigerant lbs/ft	Total pipe length on each liquid side ft	Additional amount of refrigerant pipe diameter on each liquid side lbs
1/4"	0.017 x	=	lbs
3/8"	0.037 x	=	lbs
1/2"	0.071 x	=	lbs
5/8"	0.108 x	=	lbs
3/4"	0.168 x	=	lbs
7/8"	0.235 x	=	lbs

Table A. Correction factor on indoor unit capacity type.

Connection rate	Factor
Less than 135 %	1.3
135 % or more	1.2

Then refer to following table below, calculate corrective amount of refrigerant according to indoor unit capacity (C).

Table 3. Correction factor on indoor unit capacity type

Table 3-1. Additional amount of refrigerant for standard indoor unit type

Indoor unit capacity type	Capacity code	Corrective amount of refrigerant lbs	Number of connected indoor units Number	Corrective amount of refrigerant on each indoor unit capacity lbs
007	7.5	0.44		= bs
009	9.5			= bs
012	12			= bs
015	15.4	0.88		= bs
018	18			= bs
021	21			= bs
024	24			= bs
027	27			= bs
030	30			= bs
036	36			= bs
042	42	1.32		= bs
048	48			= bs
054	54			= bs
072	72	2.20		= bs
096	96			= bs

※ If the outside air unit type (MMD-UP***1HFPUL) is connected, The additional amount refrigerant for outside air unit type is 0 lbs.

Table 3-2. Additional amount of refrigerant for 4-way Cassette type.
(Model name : MMU-UP***1HP-UL)

Indoor unit capacity type	Capacity code	Corrective amount of refrigerant lbs	Number of connected indoor units Number	Corrective amount of refrigerant on each indoor unit capacity lbs
007	7.5	0.44		= lbs
009	9.5			= lbs
012	12			= lbs
015	15.4			= lbs
018	18			= lbs
024	24	0.88		= lbs
027	27			= lbs
030	30			= lbs
036	36			= lbs
042	42			= lbs
048	48	1.32		= lbs
054	54			= lbs

Table 3-3. Additional amount of refrigerant for Concealed Duct Standard type.
(Model name : MMU-UP***1BHP-UL)

Indoor unit capacity type	Capacity code	Corrective amount of refrigerant lbs	Number of connected indoor units Number	Corrective amount of refrigerant on each indoor unit capacity lbs
007	7.5	0.88		= lbs
009	9.5			= lbs
012	12			= lbs
015	15.4			= lbs
018	18			= lbs
021	21	1.32		= lbs
024	24			= lbs
030	30			= lbs
036	36			= lbs
042	42			= lbs
048	48			= lbs
054	54			= lbs

Table 3-4. Additional amount of refrigerant for DX Coil interface.
(Model name : TCB-IFDMR01UP-UL / RBM-A***1UPVR-UL)

Indoor unit capacity type	Capacity code	Corrective amount of refrigerant lbs	Number of connected indoor units Number	Corrective amount of refrigerant on each indoor unit capacity lbs
007	7.5	0.24		= lbs
009	9.5	0.32		= lbs
012	12	0.42		= lbs
015	15.4	0.60		= lbs
018	18	0.72		= lbs
024	24	0.92		= lbs
027	27	1.12		= lbs
030	30	1.20		= lbs
036	36	1.51		= lbs
048	48	1.91		= lbs
054	54	2.11		= lbs
060	60	2.50		= lbs
072	72	3.09		= lbs
096	96	3.97		= lbs
120	120	4.68		= lbs

Next, refer to the following table below, calculate the corrective amount of refrigerant according to system diversity

Table 4. Refrigerant amount adjustment based on the diversity.

Diversity D	Refrigerant amount adjustment	
	lbs	kg
50 % ≤ D < 60 %	-9.92	-4.5
60 % ≤ D < 70 %	-7.72	-3.5
70 % ≤ D < 80 %	-5.51	-2.5
80 % ≤ D < 90 %	-3.31	-1.5
90 % ≤ D < 95 %	-1.10	-0.5
95 % ≤ D	0	0

Finally, add up the amount of additional refrigerant from each calculation result.

[1].Additional amount of refrigerant based on the outdoor unit capacity type	lbs
[2].Additional amount of refrigerant based on the liquid pipe diameter and length. ×	lbs
[A].Correction factor based on the indoor unit connection capacity.	
[3].Additional amount of refrigerant based on the indoor unit capacity type and number.	lbs
[4].Refrigerant amount adjustment based on the indoor unit connection capacity.	lbs
Total additional amount of refrigerant = [1] + [2] × [A] + [3] + [4]	lbs


7-3. Check at Main Power-on

After turning on the main power of the indoor units and outdoor unit in the refrigerant line to conduct a test operation, check the following items in each outdoor and indoor unit.

(After turning on the main power, be sure to check in order: indoor unit outdoor unit.)

<Check on the outdoor unit>

- (1) Check that all the rotary switches, SW01, SW02, and SW03, on the interface PC board of the header unit are set to “1.”
- (2) If another check code is displayed on the 7-segment display [B], remove the cause of the problem referring to Section, “8. TROUBLESHOOTING”.
- (3) Check that “L08” is displayed on the 7-segment display [B] on the interface PC board of the header unit.
(L08: Indoor address not set up)
(If the address setup operation has already been completed during servicing, etc., the above check code is not displayed, and only “U1” is displayed on the 7-segment display [A].)

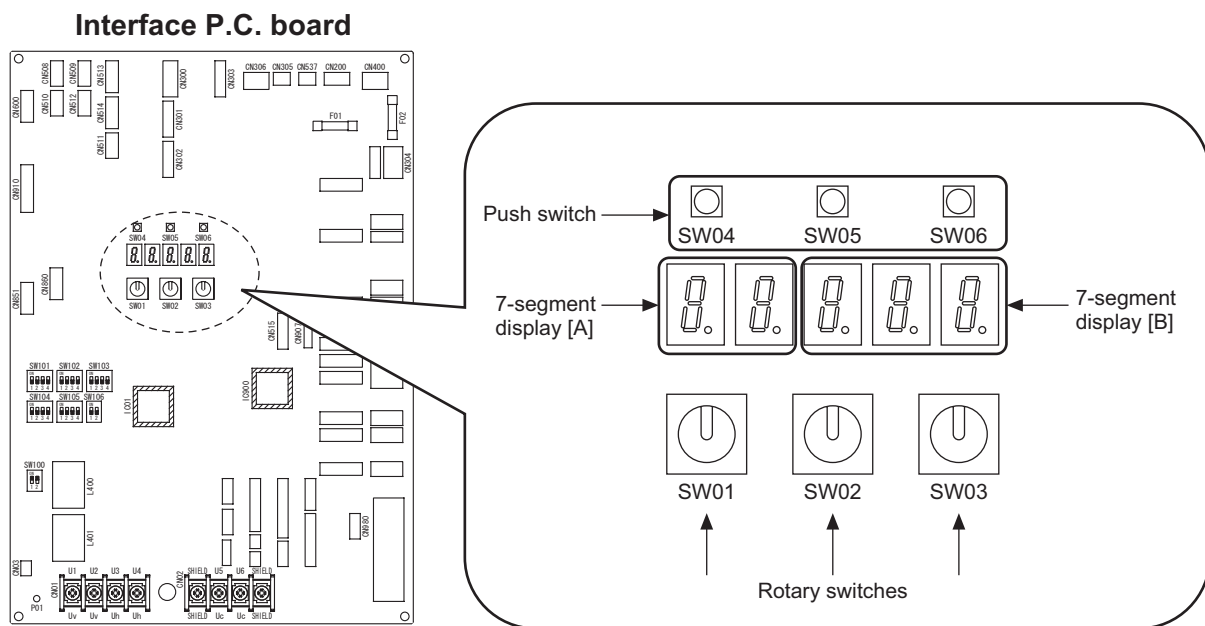


<Check on the indoor unit>

(1) Display check on the remote controller (in the case of a wired remote controller)

Check that a frame, as shown in the following figure at left, is displayed on the LC display section of the remote controller.

<RBC-AWSU**>

✓
Correct

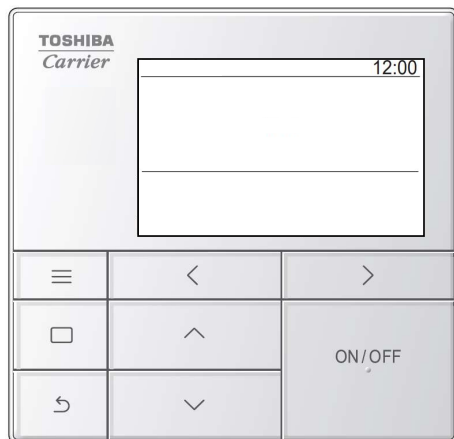

Incorrect



If no frame is displayed, as shown in the above figure at right, the remote controller does not have a normal supply of power; check the following items.

- Check the power supply of the indoor unit.
- Check the cabling between the indoor unit and the remote controller.
- Check whether there is a cutoff of wire around the indoor control PC board or not, and check for connection failures of the connectors.
- Check for failure of the transformer for the indoor electrical control box.
- Check for failure of the indoor control PC board.

7-4. Address Setup


This product requires address setup before operation.
Follow this procedure for address setup.

7-4-1. Precautions

- (1) Address setup is not performed simply by turning on the power supply.
- (2) For indoor units, address setup can be done either by manual address setup or by automatic address setup:
Automatic address setup: Setup from SW06 on the interface P.C. board of the header unit
Manual address setup: Setup from the wired remote controller. (For details, refer to “7-4-3. Address Setup Procedure.”)
- (3) Automatic setup usually takes about 5 minutes per line. In some cases, however, it may take up to 10 minutes.
- (4) It is unnecessary to operate the air conditioner to achieve address setup.

7-4-2. Address Setup and Check Procedure

Procedure	Item	Operation and check contents																																			
1	Header outdoor unit setting	Turn on DIP switch 1 of SW101 on the header outdoor unit interface P.C.boards. And, turn on DIP switch 2 of SW100.																																			
2	Indoor unit power-on	Turn on the power of the indoor unit for the refrigerant line for which the address is to be set up.																																			
3	Outdoor unit power-on	Turn on the power of all the outdoor units for the refrigerant line for which the address is to be set up.																																			
4	7-segment display check	Check that “L08” is displayed on the 7-segment display [B] on the interface PC board of the header unit in the system where the address is to be set up.																																			
5	Address setup start	Confirm the items in “7-4-3. Address Setup Procedure,” and then set up the address according to the operation procedure. (Be careful to note that the setup operation may differ in group control and central control systems.) Note: The address cannot be set up if switches are not operated.																																			
6	Display check after setup	<ul style="list-style-type: none">After address setup, “U1” “ ” is displayed on the 7-segment display.For follower outdoor units, “U2” to “U5” are displayed on the 7-segment display [A].If a check code is displayed on the 7-segment display [B], remove the cause of the problem referring to “8 TROUBLESHOOTING.”																																			
7	Communication setting start	Confirm the items in “7-4-3. Address Setup Procedure,” and then set up the communication according to the operation procedure. Note: The address cannot be set up if switches are not operated.																																			
8	Display check after communication setup	<ul style="list-style-type: none">After communication setup, “c.c.” “Fin” is displayed on the 7-segment display.If a unit that has already been set for communication is connected, it cannot be set correctly. In this case, clear the communication settings and set again.																																			
9	System information check after setup	Using the 7-segment display function, check the system information of the scheduled system. (This check is executed on the interface PC board of the header unit.)																																			
			Rotary switch setup			7-segment display			SW01	SW02	SW03	[A]	[B]	System capacity	1	2	3	[Number of capacity]		Number of connected outdoor units	1	3	3	[Number of units]		Number of connected indoor units	1	4	3	[Number of connected units]		Communication Type	2	16	2	[Type] Type : 0=TCC-Link, 1=TU2C-Link	
			Rotary switch setup			7-segment display																															
			SW01	SW02	SW03	[A]	[B]																														
		System capacity	1	2	3	[Number of capacity]																															
		Number of connected outdoor units	1	3	3	[Number of units]																															
		Number of connected indoor units	1	4	3	[Number of connected units]																															
Communication Type	2	16	2	[Type] Type : 0=TCC-Link, 1=TU2C-Link																																	
After the above checks, return rotary switches SW01, SW02, and SW03 to 1/1/1.																																					

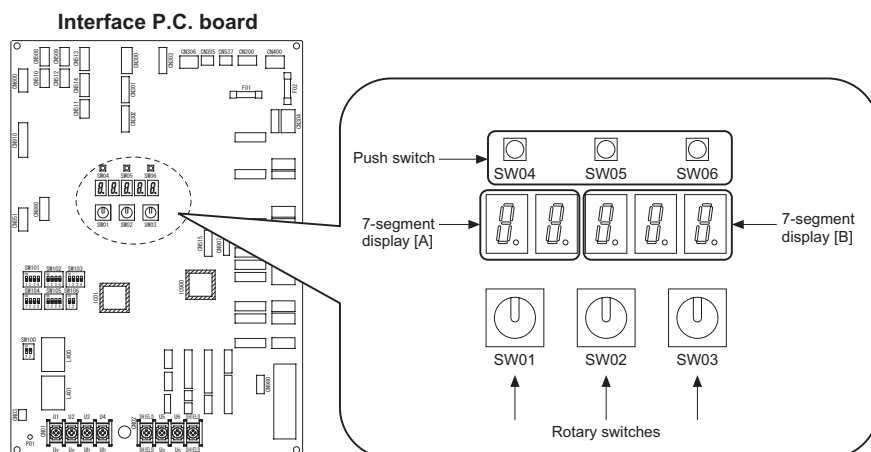


7-4-3. Address Setup Procedure

Before setting the address, it is necessary to set the DIP-SW on the header outdoor unit interface P.C. board.

1. Follow the steps below to open the electrical control box cover

- (1) Loosen the screws on the left and right side of the electrical control box cover.
- (2) Remove the screw A for MMY-MUP192.
(There is no screw A for MMY-MUP072, MUP096, MUP120, MUP144, MUP168, MUP072H1 MUP096H1 and 120H1)
- (3) Hold the lower side of the electrical control box cover to draw it toward you while lifting it up, and remove the electrical control box cover.

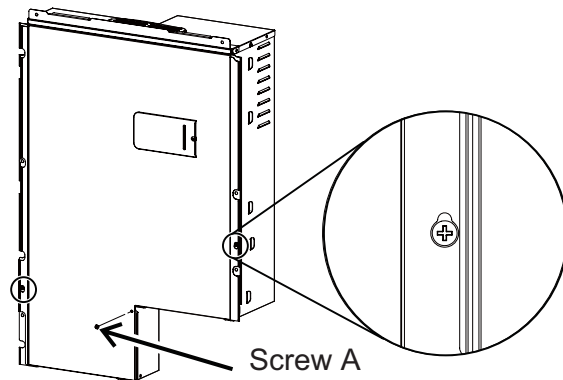

2. Follow the steps below to set the DIP switch on the header outdoor unit interface P.C. board.


2-1. Header outdoor unit setting

Turn on DIP switch 1 of SW101 on the header outdoor unit interface P.C. boards*.

And, turn on DIP switch 2 of SW100. (Termination resistance of Uv line)

* Header outdoor unit setting is required also of an outdoor independent system.

Interface P.C. board on the header outdoor unit

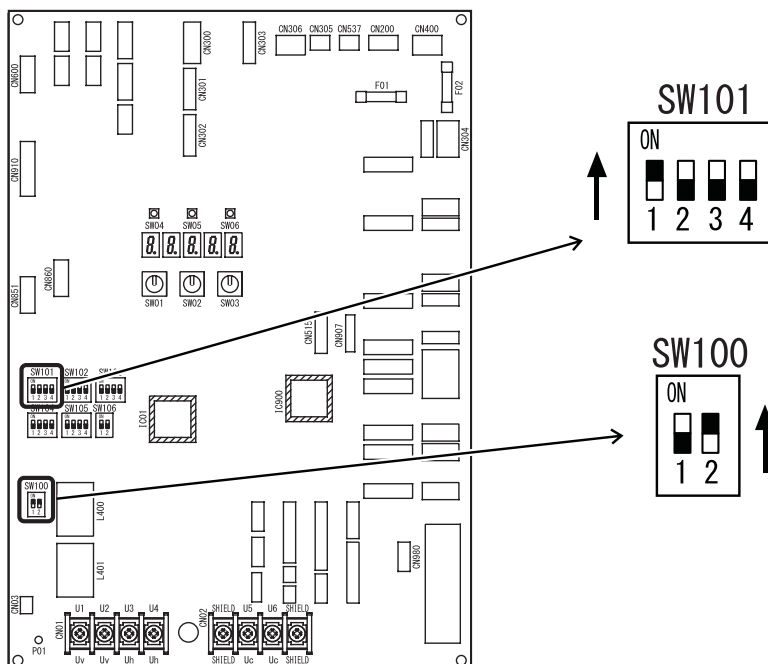

2-2.Line (system) address setting

For the central control among two or more refrigerant lines or group control among two or more refrigerant lines, set the line (system) address.

(Example)	Controlling a single refrigerant line centrally	Controlling 2 or more refrigerant lines centrally
System wiring diagram		
Line (system) address setting	No	Set the address


- (1) Set a line (system) address for each system using SW 101 and 102 on the interface P.C. board on the header outdoor unit of each system.
(Factory default: Address 1)

NOTE

Be sure to set a unique address on each system. Do not use a same address as another system (refrigerant line) or a "Digital Inverter" side.

Interface P.C. board on the header outdoor unit

Line address switches on the outdoor interface PC board (O : switch on, X : switch off)

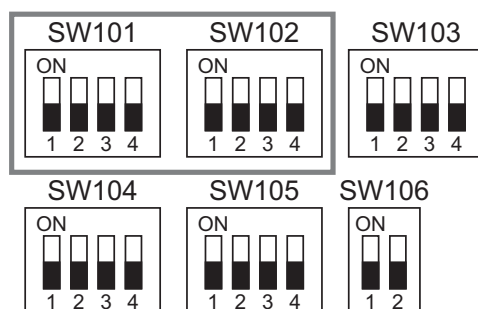

Line (system) address	SW101				SW102			
	1	2	3	4	1	2	3	4
1		x	x	x	x	x	x	x
2		x	x	x	x	x	x	O
3		x	x	x	x	x	O	x
4		x	x	x	x	x	O	O
5		x	x	x	x	O	x	x
6		x	x	x	x	O	x	O
7		x	x	x	x	O	O	x
8		x	x	x	x	O	O	O
9		x	x	x	O	x	x	x
10		x	x	x	O	x	x	O
11		x	x	x	O	x	O	x
12		x	x	x	O	x	O	O
13		x	x	x	O	O	x	x
14		x	x	x	O	O	x	O

Line (system) address	SW101				SW102			
	1	2	3	4	1	2	3	4
15		x	x	x	O	O	O	x
16		x	x	x	O	O	O	O
17		x	x	O	x	x	x	x
18		x	x	O	x	x	x	O
19		x	x	O	x	x	O	x
20		x	x	O	x	x	O	O
21		x	x	O	x	O	x	x
22		x	x	O	x	O	x	O
23		x	x	O	x	O	O	x
24		x	x	O	x	O	O	O
25		x	x	O	O	x	x	x
26		x	x	O	O	x	x	O
27		x	x	O	O	x	O	x
28		x	x	O	O	x	O	O

Note: if you set it to something other than the table, the system address will be 28.

■ : SW101 Bit 1 is for header outdoor unit setting, so it is not used for system address setting.


(2) After completing address setting of all systems, turn ON DIP switch 1 of SW100 on the header outdoor unit interface P.C. board of the lowest system address number.

Switch setting (setting example when controlling 2 or more refrigerant lines centrally)

*The items in bold font must be set manually.

Outdoor units (setting manually)

Outdoor unit's interface P.C. board	Header unit	Follower unit	Header unit	Follower unit	Header unit	Factory default
SW101 Bit1 (Header unit setting)	ON*	(No setting required)	ON*	(No setting required)	ON*	OFF
SW101 Bit2-4, SW102 Bit1-4 (Line (system) address)	(ALL OFF)	(No setting required)	2*	(No setting required)	3*	(ALL OFF)
SW100 Bit1 (Terminator of central control line (Uh))	ON*	(No setting required)	(No setting required)	(No setting required)	(No setting required)	OFF
SW100 Bit2 (Terminator of indoor and outdoor communication line(Uv))	ON*	(No setting required)	ON*	(No setting required)	ON*	OFF

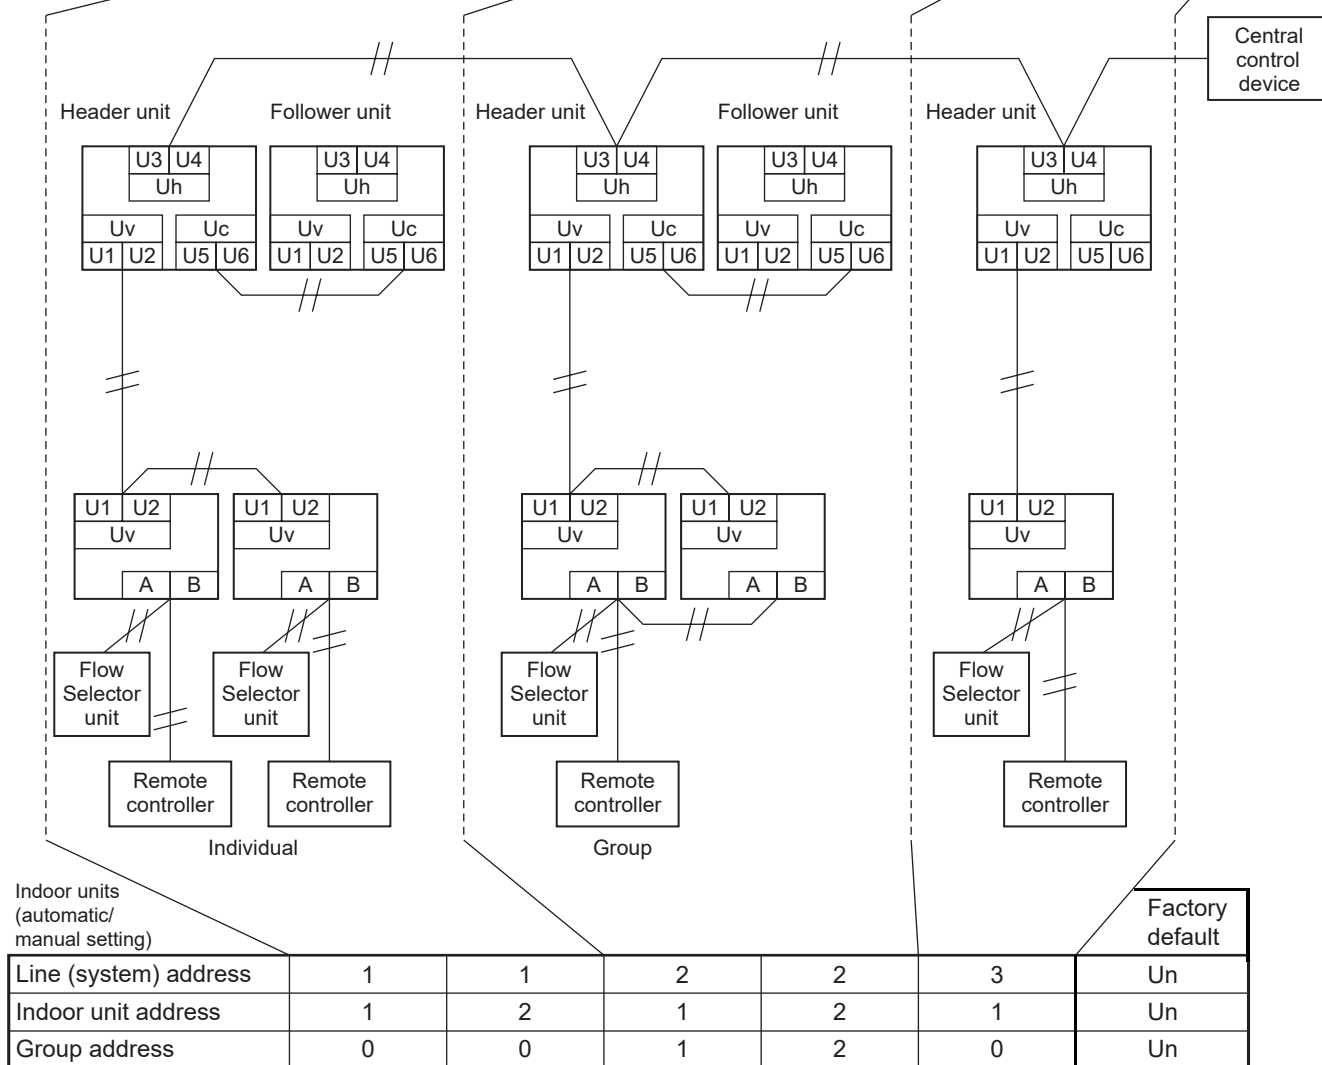

3. Attach the electrical control box cover.

4. Address setup

■ Automatic address setup


Only if the address of all indoor units in the same system is not set, the following address will be set automatically.

- Refrigerant line (system) address (Indoor unit code[12]) ... The line address of the indoor units are automatically set to the same number as the line address set in both SW101 and 102 of the outdoor Header unit I/F board.
- Indoor address (Indoor unit code[13]) Indoor address automatically set in order from one.
- Group address (Indoor unit code[14]) The group addresses (individual = 0, header = 1, follower = 2) are automatically set for the indoor units group connected by remote controller.

Open the access door cover and follow the steps below to set the address.

REQUIREMENT


- High voltage parts exist in the electrical control box.
If you set addresses on an outdoor unit, operate the unit through the access door as shown in the illustration below to avoid electric shock. Do not remove the cover of electrical control box.
- * After finishing operations, close the access door cover and fix it with the screw.

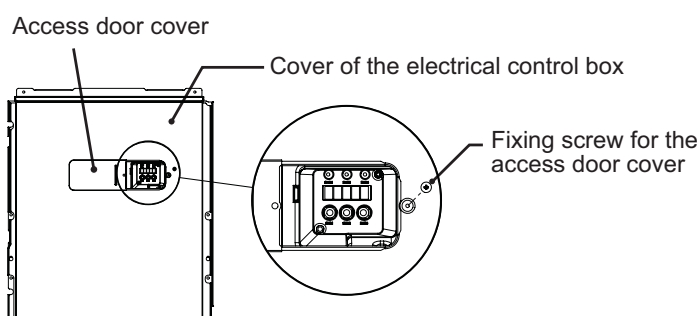

- 1 Turn on indoor units first, and then turn on outdoor units.
- 2 About 1 minute after turning the power on, confirm that the 7-segment display on the interface P.C. board of the header outdoor unit indicates **U. 1. Err (U. 1. flash)** and **L08** alternately at 1 second intervals.
- 3 Push SW06 for more than 1 second to start the automatic address setting.
(It may take up to 10 minutes (normally about 5 minutes) to complete one line's setting.)
- 4 The 7-segment display indicates **Auto 1 → Auto 2 → Auto 3**.
The setting is complete when the display changes to **U. 1. - - - (U. 1. flash)** or **U. 1. - - - (U. 1. light)**.


* When either indoor unit or equipment that is incompatible with TU2C-LINK is connected, "L02" will be displayed.
If "L02" is displayed, check if the connected indoor unit and equipment are compatible with TU2C-LINK.
- 5 Repeat steps 2 to 4 for other refrigerant lines.
- 6 Set the central control address.
(For the setting of the central control address, refer to the installation manuals of the central control devices.)

Interface P.C. board on the header outdoor unit

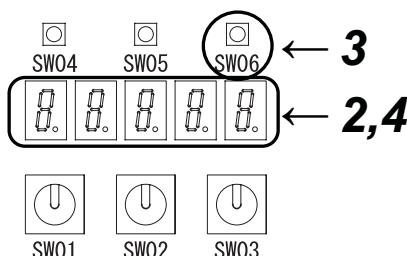


Manual address setup from the remote controller

With indoor wiring work completed and outdoor wiring work not done—in cases where indoor unit addresses are decided in advance from the wired remote controller, or in cases where addresses are change after address setup.




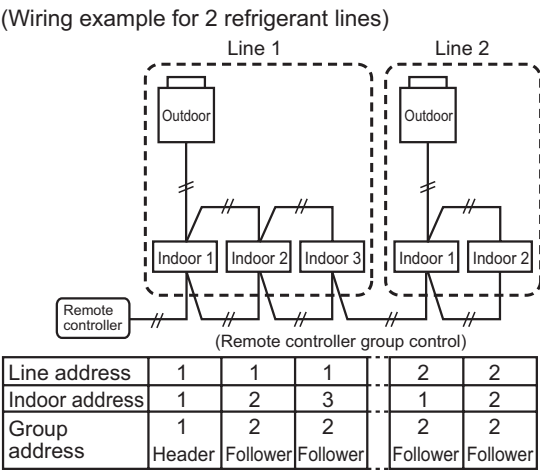


In the above example, where remote controllers are not yet wired, set the address manually after individually connecting the wired remote controller.

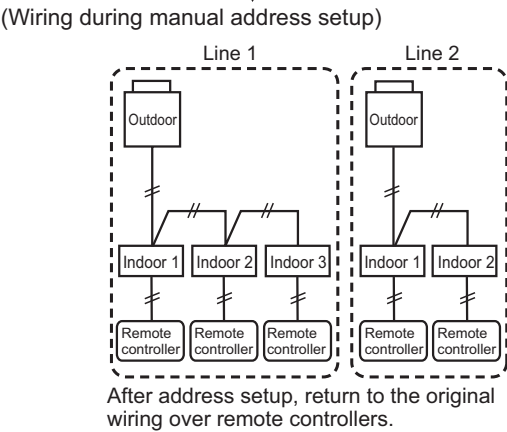

After address setup, return to the original wiring over remote controllers.

- Group address
- Individual: 0000
 - Header unit: 0001
 - Follower unit: 0002
- In cases of remote controller group control

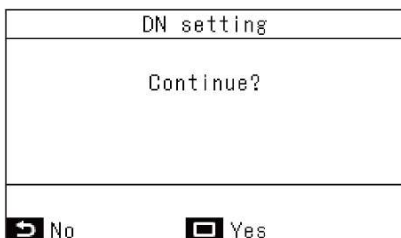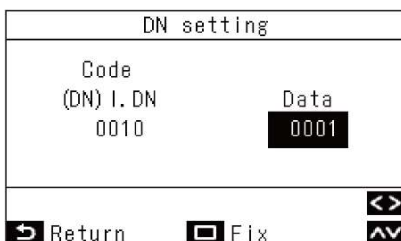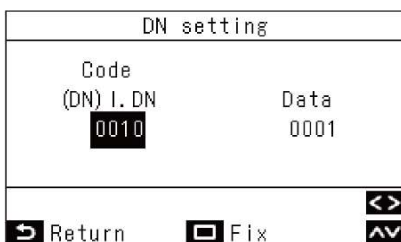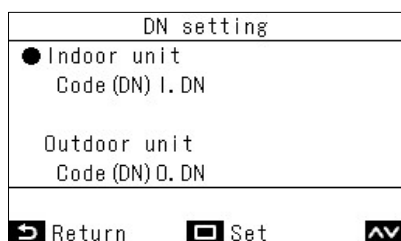

Basic procedure

Be sure to stop the air conditioner before making settings.
(Change the setting while the air conditioner is not working.)

1 Push the [Menu] button to display the menu screen

2 Push and hold the [Menu] button and the [] button at the same time to display the "Field setting menu".

→Push and hold the buttons for more than 4 seconds

3 Push the [] / [] button to select "9.DN setting" on the "Field setting menu" screen, then push the " Set" [Set / Fix] button.

4 Push the [] / [] button to select the indoor unit and push the " Set" [Set / Fix] button.

→The fan and louver of the indoor unit operate.
When the group control is used, the fan and louver of the selected indoor unit operate.

→Move the cursor to select "Code(DN)" with the " " button, then set "Code(DN)" with the [] / [] button.
→Move the cursor to select "Data" with the " " button, then set "Data" with the [] / [] button.

▼ (Refrigerant line address)





5 Push the [] / [] button to select Code No. Change Code No. to 12 with [] / [] setting button.





6 Push the [] / [] button to select the Date. Set the system address with [] / [] setting button.
(Match the address with the address on the interface P.C.board of the header outdoor unit in the same refrigerant line.)

7 Push the " Fix" [Set / Fix] button to set the other Code(DN) and Data. After "Continue?" is displayed on the screen, push the " Yes" [Set / Fix] button.

▼ (Indoor address)





8 Push the [] / [] button to select Code No.
Change Code No. to 13 with [] / [] button.





9 Push the [] / [] button to select Data.
Select the indoor unit address with [] / [] button.
(TU2C-LINK : 0001~0128)

10 Push the "  Fix " [ Set / Fix] button to set the Data.
After "Continue?" is displayed on the screen, push the "  Yes " [ Set / Fix] button.

▼ (Group address)





11 Push the [] / [] button to select Code No.
Change Code No. to 14 with [] / [] button.





12 Push the [] / [] button to select Data.
Select the group address with [] / [] button.


13 Push the "  Fix " [ Set / Fix] button to set the Data.
After "Continue?" is displayed on the screen, push the "  Yes " [ Set / Fix] button.

▼ (Central control address)

14 Push the [] / [] button to select Code No.
Change Code No. to 03 with [] / [] button.

15 Push the [] / [] button to select Data.
Select the indoor unit address with [] / [] button.
(TU2C-LINK : 0001~0128)

16 Push the "  Fix " [ Set / Fix] button to set the Data.
After "Continue?" is displayed on the screen, push the "  No " [ Return] button.

17 The display changes to "DN setting", push the "  Return" button to finish the setting operation.
" ⏸ Setting "appears on the display for a while , then the display returns to the " Field setting menu " display.

NOTE

- (1) The Code No. [E04] (Indoor / outdoor communication trouble) will appear if line (system) addresses are mistakenly set.
- (2) When manual address setup has been done from a remote controller, and central control over refrigerant lines is to be done, setup the header unit of each line as follows:
 - Using SW101 and SW102 on the interface PC board of the header unit of each line, setup the line address for each line.
 - Turn ON DIP switch 1 of SW100 on the header outdoor unit interface P.C.board of the lowest system address number.
 - After that, set up the central control address. (For central control address setup, refer to the installation manual of the central control devices.)

■ Procedure to setup address 65 to 128 from the remote controller

Under TCC-Link settings (factory shipping settings), setting addresses from 65 and above are not available from the remote controller. Setting the indoor address or the zone address to 65 to 128 must be done under TU2C-Link settings, which can be performed by the procedures shown below.

* Be sure that all of the outdoor units, indoor units, and the remote controller in the same system support TU2C-Link.

TU2C-Link communication is not available if any of these do not support TU2C-Link.

Method 1 (Changing the address after automatic address setup)

Follow the procedures below if the power supply and communication line wiring work has been completed.

- 1) Turn the power for every outdoor unit and indoor unit on.
- 2) Perform "Automatic address setup" from the header outdoor unit.
The system address, indoor address, and the group address will be set for every indoor unit in the system automatically.
- 3) Perform "Communication setting" from the header outdoor unit.
TU2C-Link will be set if all the outdoor units, indoor units, and the remote controller support TU2C-Link.
(Outdoor DN code (O.DN) [082]=0003, indoor DN code (I.DN) [FC]=0003)
For the units in the farthest rooms, the indoor termination resistance will automatically be set to on.
(Indoor DN code (I.DN) [1FC]=0001 (ON))
- 4) Change the indoor address (or the group address) to any address within 1 to 128 according to the method to change the indoor address using the remote controller.


* If there are more than 65 indoor units connected:

Addresses above 65 will automatically be set by automatic address setup even if TCC-Link settings are implemented.

While the TCC-Link settings are set, indoor units which are assigned with the addresses 65 to 128 will not work, until setting the TU2C-Link settings by performing communication settings after the automatic address setup, which will render the indoor units 65 through 128 available.

* The check code [E16] or [L08] will show up if operation is attempted while the TCC-Link setting is implemented and the indoor units with the indoor address 65 to 128 are connected.

<Example> When the indoor address of line 5 is set to 126-128

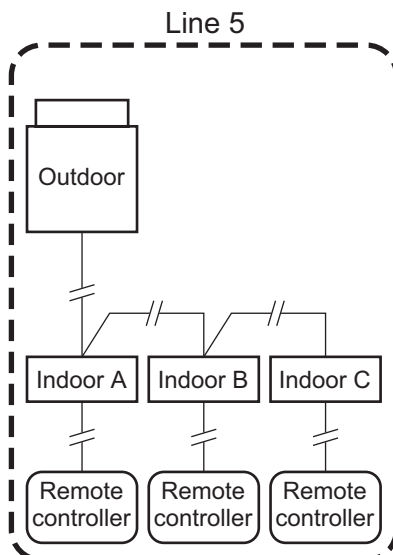

2) After the automatic address setting

		Indoor A	Indoor B	Indoor C
Line (system) address	I.DN [12]	0005	0005	0005
Indoor address	I.DN [13]	0001	0002	0003
Group address	I.DN [14]	0001	0002	0002
Communication setting	I.DN [FC]	0000	0000	0000
Indoor termination	I.DN [1FC]	0000	0000	0000

3) After the automatic communication settings

		Indoor A	Indoor B	Indoor C
Line (system) address	I.DN [12]	0005	0005	0005
Indoor address	I.DN [13]	0001	0002	0003
Group address	I.DN [14]	0001	0002	0002
Communication setting	I.DN [FC]	0003	0003	0003
Indoor termination	I.DN [1FC]	0000	0000	0001

4) After changing the indoor address with the remote control.

		Indoor A	Indoor B	Indoor C
Line (system) address	I.DN [12]	0005	0005	0005
Indoor address	I.DN [13]	0126	0127	0128
Group address	I.DN [14]	0001	0002	0002
Communication setting	I.DN [FC]	0003	0003	0003
Indoor termination	I.DN [1FC]	0000	0000	0001


Method 2 (Setting the address manually from the remote controller)

Follow the procedure below if setting the indoor unit address manually from the remote controller is desired due to the indoor address not being set (factory default) and automatic address setting not being possible for reasons such as the outdoor unit installation not being installed.

<RBC-AWSU52*>

- 1) Arrange one indoor unit and one remote controller set to 1 by 1.
Turn on the power.
- 2) After confirming that "SETTING" is blinking on the remote controller, turn the screen to the "Field setting menu" by pushing the "MENU" and " V " together for 4 seconds or longer.
Select the "9. DN setting" using the " ^ " and " V " button and push the "Set" button.
Select the "Indoor unit" using the " ^ " and " V " button and push the "Set" button.
- 3) Set the Indoor Unit Function Code (I.DN) to [14], and the Data to [0000] (Individual).
 - Set the group address to (individual).
- 4) Set the Indoor Unit Function Code (I.DN) to [FC], and the Data to [0003](Individual).
 - Set the system to TU2C-Link communication.
- 5) Push the "MENU" button and complete the settings for the time being.
- 6) After the remote controller reboots, turn the screen to the "Field setting menu" by pushing the "MENU" and " V " together for 4 seconds or longer.
- 7) Bring up the "DN setting" screen by following the same procedure as in 2) above, and change to the Function Code (DN) I.DN setting screen of "Indoor unit".
- 8) Set the Line address by setting the Indoor Unit Function Code (I.DN) to [12].
- 9) Set the indoor unit address by setting the Indoor Unit Function Code (I.DN) to [13].
- 10) When connecting to the remote controller group control,
Set the DN code to [14], Data [0001] (header) for the header indoor unit, and the DN code to [14], Data [0002] (follower) for the follower indoor unit.
- 11) If necessary, set the zone address to the Indoor Unit Function Code (I.DN) to [03].

Example) When setting the Indoor address to 126 to 128 in Line 5 is desired

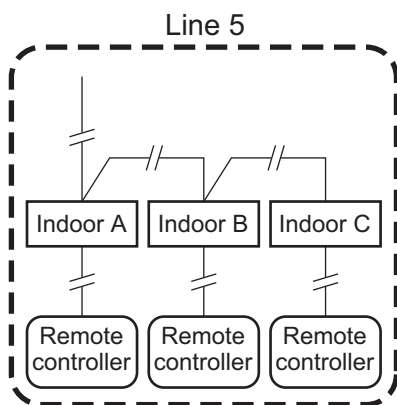

Before making settings (At shipment)		Indoor A	Indoor B	Indoor C
Line (system) address	I.DN [12]	00Un	00Un	00Un
Indoor unit address	I.DN [13]	00Un	00Un	00Un
Group address	I.DN [14]	00Un	00Un	00Un
Communication setting	I.DN [FC]	0000	0000	0000
Indoor termination	I.DN [1FC]	0000	0000	0000

After setting 3) and 4)

Line (system) address	I.DN [12]	00Un	00Un	00Un
Indoor unit address	I.DN [13]	00Un	00Un	00Un
Group address	I.DN [14]	0000	0000	0000
Communication setting	I.DN [FC]	0003	0003	0003
Indoor termination	I.DN [1FC]	0000	0000	0000

After setting 8),9) and 10) (11))

Line (system) address	I.DN [12]	0005	0005	0005
Indoor unit address	I.DN [13]	0126	0127	0128
Group address	I.DN [14]	0001	0002	0002
Communication setting	I.DN [FC]	0003	0003	0003
Indoor termination	I.DN [1FC]	0000	0000	0000

<Setting the indoor terminal resistance manually (if the farthest room is known)>

- 12) Set the Indoor Unit Function Code I.DN [1FC] to "0001" (indoor terminal resistance ON).
- 13) After installing the outdoor unit, set the Outdoor Unit Function Code O.DN [82] to "0003" (TU2C-Link) for the header outdoor unit and the follower outdoor unit.
- 14) Reset the outdoor / indoor unit power supply to complete the setting.

<Setting the indoor terminal resistance automatically (if the farthest room is unknown)>

The indoor terminal resistance settings will be available after installing the outdoor unit and performing the communication method settings from the header outdoor unit, thus the farthest room will be detected automatically, and indoor terminal resistance can be set.

Make sure that this is done after 11), **since the communication method settings has to be performed after changing back to TCC-LINK settings.**

- 15) Clear the communication method from the header outdoor unit after installing the outdoor unit.
All the communication method settings for the indoor and outdoor unit in the same system will be set to TCC-LINK.
(The indoor addresses will not be changed at this time.)
- 16) Perform the communication method settings from the header outdoor unit. If all of the outdoor unit, the indoor units, and the remote controller in the same system supports TU2C-LINK, they will be set to TU2C-LINK settings, and the indoor terminal resistance settings will turn on automatically.
- 17) Reset the outdoor / indoor unit power supply to complete the setting.

<When the farthest indoor unit is known and the indoor terminating resistor is set manually>

- 12) After setting the indoor terminating resistor

Line (system) address	I.DN [12]	0005	0005	0005
Indoor unit address	I.DN [13]	0126	0127	0128
Group address	I.DN [14]	0001	0002	0002
Communication setting	I.DN [FC]	0003	0003	0003
Indoor termination	I.DN [1FC]	0000	0000	0001

<If you do not know the farthest indoor unit and use automatic communication settings>

- 15) After resetting communication settings

Line (system) address	I.DN [12]	0005	0005	0005
Indoor unit address	I.DN [13]	0126	0127	0128
Group address	I.DN [14]	0001	0002	0002
Communication setting	I.DN [FC]	0000	0000	0000
Indoor termination	I.DN [1FC]	0000	0000	0000

- 16) After automatic communication setting

Line (system) address	I.DN [12]	0005	0005	0005
Indoor unit address	I.DN [13]	0126	0127	0128
Group address	I.DN [14]	0001	0002	0002
Communication setting	I.DN [FC]	0003	0003	0003
Indoor termination	I.DN [1FC]	0000	0000	0001

■ Resetting the address (Resetting to the factory default (address undecided))

Method 1

Clearing each address separately using a wired remote controller.

Set the system address, indoor unit address and group address to "00Un" using a wired remote controller. (For the setting procedure, refer to the address setting procedures using the wired remote controller on the previous pages.)

* Address not set will be either "00Un" or "0099", depending on the type of the remote controller.

Central control address (I.DN [03]) • Indoor unit address (I.DN [13])

Remote controller	Communication Type	Unfixed	Display order
U series	TU2C-LINK	00Un	••• ⇔ 0128 ⇔ 00Un ⇔ 0001 ⇔ •••

Line address (I.DN [12])

Remote controller	Communication Type	Unfixed	Display order
U series	TU2C-LINK	00Un	••• ⇔ 0128 ⇔ 00Un ⇔ 0001 ⇔ •••

Group address (I.DN [14])

Remote controller	Communication Type	Unfixed	Display order
U series	TU2C-LINK	00Un	••• ⇔ 0002 ⇔ 00Un ⇔ 0000 ⇔ •••

Method 2

Clearing all the indoor unit addresses on a refrigerant line at once from the outdoor unit.

- 1 Turn off the refrigerant line to reset to the factory default.
- 2 Turn on the indoor and outdoor units of the refrigerant line for which you want to initialize the addresses. About one minute after turning on the power, confirm that the 7-segment display on the header outdoor unit indicates "U.1. - -" and operate the interface P.C. board on the header outdoor unit of the refrigerant line as follows.

SW01	SW02	SW03	SW04	Clearable addresses
2	1	2	Confirm that the 7-segment display indicates "A.d.buS" and turn SW04 ON for more than five seconds.	System/indoor unit/group address
2	2	2	Confirm that the 7-segment display indicates "A.d.nEt" and turn SW04 ON for more than five seconds.	Central control address

- 3 Confirm that the 7-segment display indicates "A.d. c.L." and set SW01, SW02 and SW03 to 1, 1, 1 respectively.
- 4 After finished clearing the address successfully, "U.1.Err" and "L08 " appear alternatively at 1 second intervals on the 7-segment display.
- 5 Set the addresses again after finishing the clearance.

Communication setting

This product need setting TU2C-Link communication after the address setting.

CAUTION

- Be sure to complete the address setting before communication setting.
- It may takes about 1 to 3 minutes to address one refrigerant line.
- Settings on the outdoor unit are required for communication setting.
(Communication setting is not started simply by turning on the power.)
- If a unit that has already been set for communication is connected, it cannot be set correctly.
In this case, clear the communication settings and set again.
- The indoor unit DN code (FC) and outdoor unit DN code (82) are automatically set for the set communication.
In the case of the TU2C-LINK system, the terminating resistance (indoor unit DN code (1FC)) of the indoor unit that maximizes the wiring length from the outdoor unit is automatically set.

■ Communication setting (Auto setting)

1. Turn on indoor units first, and then turn on outdoor units.
2. Set the rotary switches on the interface P.C. board of the header outdoor unit SW01 to [2], SW02 to [16] and SW03 to [2].
3. The 7-segment display switches between “c.c. b P S” and “c.c. 0 “ at 1-second intervals.
4. Push and hold SW04 for more than 5 seconds.
5. The 7-segment display flashes “c.c.i n”.
6. The 7-segment display switches between “c.c. i n” and “c.c. * * * “ at 1-second intervals.
Check the number of connected indoor units [* * *].
If the number of indoor units is right, move on to 7.

(When the number of the connected indoor units differs from the number of indoor units displayed on the 7-segment display, clear the communication type setting to eliminate the cause.
To clear the communication type setting, push and hold the SW05 for 5 seconds or more.
The 7-segment display flashes “c.c.r S t” .
After a while, the 7-segment display switches between “c. c. b p s” and “c.c. 0”
Set the rotary switch back to SW01 to [1], SW02 to [1], SW03 to [1].


7. Push and hold SW06 for more than 5 seconds.
8. The 7-segment display flashes “c.c.b p s” .
After that, the setting is complete when the 7-segment display changes to “c.c F i n” .
(If the 7-segment display changes to “c.c. E r r”, try again.)
9. After a while, the 7-segment display switches between “c.c. b p s” and “c.c. 1 “ (or “ c.c. o “) at 1-second intervals.
10. Set the rotary switch on the interface P.C. board of the header outdoor unit back to SW01=[1], SW02=[1], SW03=[1].

Communication Type	7-segment display		Outdoor unit DN code No. (Q.DN)	Indoor unit DN code No. (I.DN)	
			[082] (Communication setting)	[FC] (Communication setting)	[1FC] (Indoor termination resistance setup)
TU2C-Link (U series and future models)	[A] [c.c.] [c.c.]	[B] [b P S] [1]	0003	0003	The farthest indoor unit (*1) 0001 Indoor units other than the left column 0000
TCC-Link (Other than U series)	[A] [c.c.] [c.c.]	[B] [b P S] [1]	0000	0000	0000

*1 : Only the indoor unit that has the longest wiring length from the outdoor unit.

The indoor address of the indoor unit with the terminator turned on is confirm the items in "7-7-11. Monitor Function of Remote Controller Switch".

Interface P.C. board on the header outdoor unit

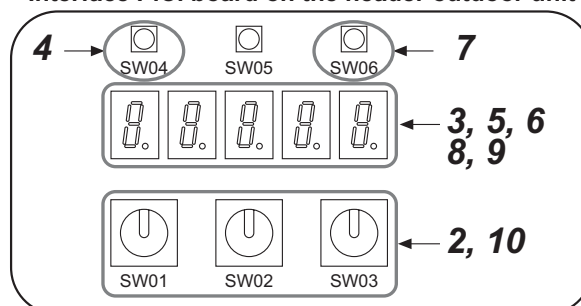


■ Procedure to set up the communication method manually

The communication method and the terminal resistance settings can be changed by setting the outdoor DN code (O.DN) and the Indoor Unit Function Code (I.DN).

(See also 6-4. Method to set Outdoor Unit Function Code No. (O.DN) for operation method.)

<Procedure to set the TU2C-Link communication setting>

- 1) Set the Outdoor Unit Function Code (O.DN) [082] of all outdoor units to "0003".
 - 2) Set the Indoor Unit Function Code (I.DN) [FC] of all indoor units to "0003".
 - 3) Set the Indoor Unit Function Code (I.DN) [1FC] of the farthest indoor unit to "0001" (set the indoor terminating resistor to ON).
- * If which indoor unit is the unit in the farthest room is unknown, perform the communication method automatic setup.

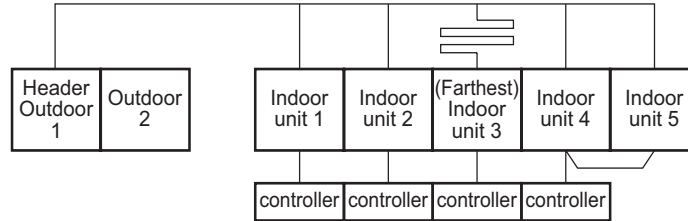

O.DN[82] Communication setting	3	3
--------------------------------	---	---

Line (system) address (DIP SW)	7	–
--------------------------------	---	---


3	3	3	3	3	I.DN[FC] Communication setting
0	0	1	0	0	I.DN[1FC] Indoor termination resistance setup
7	7	7	7	7	I.DN[12] Line (system) address
1	2	3	4	5	I.DN[13] Indoor unit address
0	0	0	1 (Header)	2 (Follower)	I.DN[14] Group address

■ Procedure to clear the communication method (restoring the factory default [TCC-Link communication settings])


- This is a function in which the communication method setting for all the outdoor units and indoor units (every outdoor unit connected to the Uc line and every indoor unit connected to the Uv line) will reset to the TCC-Link communication settings. Also, the indoor terminal resistance settings for every indoor unit will be set back to OFF.
- The addresses for the indoor units (indoor address, line address, group address, and the zone address) will not be cleared.
- This function is also effective with unaddressed indoor units if connected to the Uv line.
- This function will not be available if there are no indoor units that can communicate with the outdoor unit. There must be at least one indoor unit that can communicate with the outdoor unit (in which the communication method is matched with the outdoor unit and its address is already set) to use this function. This function is available even if the communication method settings for the indoor unit and outdoor unit in the same system of TCC-Link and TU2C-Link coexist. The settings for the header outdoor unit to be operated can be either TCC-Link communication settings or TU2C-Link communication settings.

[Operation method]

1. Turn off indoor units first, and then turn off outdoor units.
2. Turn on DIP switch 2 of SW106 on the header outdoor unit interface P.C.boards.
3. Turn on the outdoor unit first, then turn on the indoor unit after about 20 seconds.
(Turn on the header unit, and then 20 seconds or more later, turn on the follower units and indoor units. If the follower units cannot be turned on after the header unit has been turned on, turn on both of them simultaneously.)
4. The 7-segment display indication “ - r S t. - “. Check all the units have turned on more than app 1 minute. Turn off all the indoor and outdoor units.
5. Turn off DIP switch 2 of SW106 on the header outdoor unit interface P.C.board.



<Example> Communication method clear operation in a system with mixed communication settings

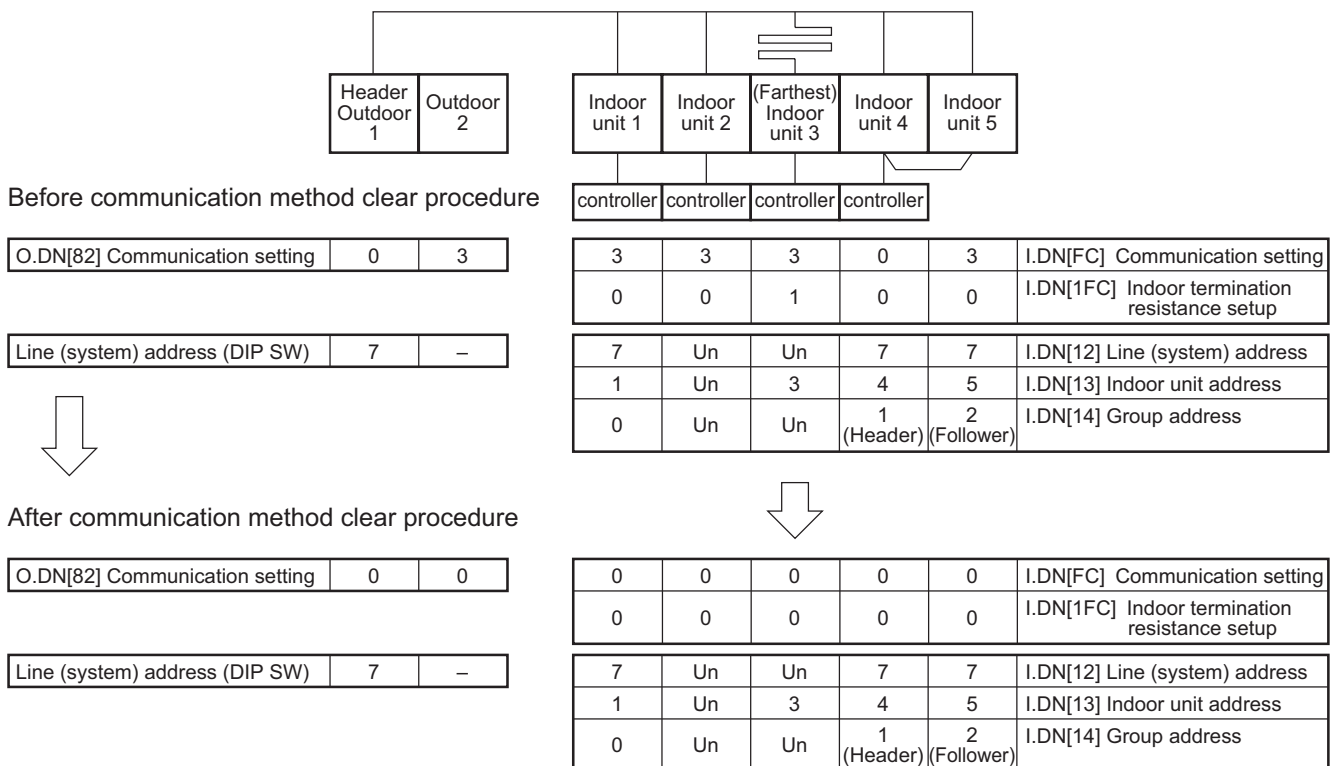

■ In the case of an increase in address-undefined indoor units (extension, etc.)

To set up the indoor address of a unit with an address that is undefined due to the extension of indoor units or replacement of PC board, etc., follow the methods below.

1. Clear the communication setting

Setup procedure

- (1) Turn off indoor unit first, and then turn off outdoor units.
- (2) Turn on DIP switch 2 of SW106 on the header outdoor unit interface P.C. board.
- (3) Turn on the outdoor unit first, then turn on the indoor unit after about 20 second.
(Turn on the header unit, and then 20 seconds or more later, turn on the follower units and indoor units. If the follower units cannot be turned on after the header unit has been turned on, turn on both of them simultaneously.)
- (4) The 7-segment display indication “ - r S t. - ”. Check all the units have turned on more than approx. 1 minute. Turn off all the indoor and outdoor units.
- (5) Turn off DIP switch 2 of SW106 on the header outdoor unit interface P.C. board.

2. Address setting

Method 1

Set up an address individually from a wired remote controller.

(Line address, Indoor address, Group address, Central address)

For the setup method, refer to “Manual address setup from the remote controller.” above.

Method 2

Set up an address from the outdoor unit.

- * Leave the addresses of the units for which addresses have already been set up as they are. Set up an address only for the unit where the address is undefined.
Addresses are allocated from lower numbers.

Setup procedure

- (1) Turn on the indoor/outdoor power for the refrigerant line for which an address is to be set up.
After approximately 1 minute, check that “U.1. - - -” is displayed on the 7-segment display.
- (2) Execute the following operation on the interface PC board of the header unit.

SW01	SW02	SW03	SW04
2	14	2	After checking that “In.At” is displayed on the 7-segment display, push SW04 for 5 seconds or more.

“AUTO1” → “AUTO2” → “AUTO3” → ... → “AUTO9” ... is counted and displayed on the 7-segment display.


- (3) When “U.1. - - -” is displayed on the 7-segment display, the setup operation finished.
Turn off the indoor/outdoor power.

3. Communication setting (Auto setting)

Setup procedure

- (1) Turn on indoor units first, and then turn on outdoor units.
- (2) Set the rotary switch of the interface P.C. board on the header outdoor unit to SW01=[2], SW02=[16] and SW03=[2].
- (3) The 7-segment display switches between “c.c. b p s” and “c.c. 0” at 1-second intervals.
- (4) Push and hold SW04 for more than 5 seconds.
- (5) The 7-segment display flashes “c.c.i n”.
- (6) The 7-segment display switches between “c.c. i n” and “c.c. ***” at 1-second intervals.
Check the number of connected indoor units [***].
(When the number of the connected indoor units differs from the number of indoor units displayed on the 7-segment display, clear the communication type setting to eliminate the cause.
To clear the communication type setting, push and hold the SW05 for 5 seconds or more.
The 7-segment display flashes “c.c.r S t”.
After a while, the 7-segment display switches between “c.c. b p s” and “c.c. 0”.
Set the rotary switch back to SW01 to [1], SW02 to [1], SW03 to [1].)
- (7) Push and hold SW06 for more than 5 seconds.
- (8) The 7-segment display flashes “c.c.b p s”.
After that, the setting is complete when the 7-segment display changes to “c.c F i n”.
(If the 7-segment display changes to “c.c. E r r”, try again.)
- (9) After a while, the 7-segment display switches between “c.c. b p s” and “c.c. 1” (or “c.c. o”) at 1-second intervals.
- (10) Set the rotary switch on the interface P.C. board of the header outdoor unit back to SW01=[1], SW02=[1], SW03=[1].

Interface P.C. board on the header outdoor unit

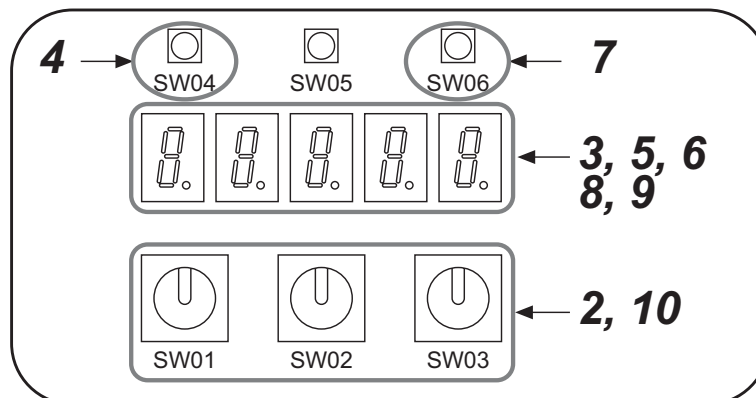

■ Procedures for adding an indoor unit with communication method and address already set

In cases of adding a new indoor unit with the TU2C-Link setup or address setup already completed due to relocation etc., perform the setup 1) to 3) below.

1) Communication method

- Set the communication method of the indoor unit and the already existing system to the same settings.
 - Method 1 The communication method and indoor terminating resistance can be set automatically after performing "Clear communication method", by setting the address to the added indoor unit, and then performing "Automatic setting of communication method".
 - Method 2 Change the indoor DN code (I.DN) [FC] of the additional indoor unit to match the communication method of the existing system.
If the indoor unit to be added is in the farthest room, turn the indoor terminal resistance on, and turn the indoor terminal resistance off for the other (already existing) indoor units.

2) Indoor terminal resistance

- Turn the indoor terminal resistance for one of the indoor units in the farthest room ON.
If which indoor unit is the unit in the farthest room is unknown, check the address for the indoor unit that the indoor termination resistance has been automatically set by performing "communication method automatic setup" after performing "communication method setup".


3) Address setup

- Change the system address to match the already-existing system.
- Make sure not to set duplicate indoor addresses.
 - Method 1 Perform the method "In case of adding an unaddressed indoor unit (due to expansion etc.)" after setting the communication method of the indoor unit to be added to that of the already-existing system, and clearing the address.
 - Method 2 Change the communication method setting and the address for the indoor unit to be added manually from the indoor DN code (I.DN).
- Clear all indoor addresses, system address, and group addresses at once... Set the rotary switch SW01/SW02/SW03 on header outdoor unit to [2/1/2], and push SW04 for five seconds or longer.
- Clear all zone addresses at once ... Set the rotary switch SW01/SW02/SW03 on header outdoor unit to [2/2/2], and push SW04 for five seconds or longer.
- Automatic address setting ... Push SW06 on header outdoor unit when all indoor units have no indoor address set, and a "L08" error is occurring.
- Automatic address setting for unaddressed indoor units ... Set the rotary switch SW01/SW02/SW03 on header outdoor unit to [2/14/2], and push the SW04 five seconds or longer.

■ (Reference) Method to clear when communication method settings, address set / unset are coexisting


- If units with different communication method settings or units with set / unset addresses are coexisting, It can be changed back to the factory default settings by performing "Clear communication method" – "Clear all addresses (line, indoor, and group addresses) at once". Redo the address settings and communication method setting after this.

* Make sure that the communication method clearing is performed in advance.
If the addresses are batch-cleared before clearing the communication method, the communication method cannot be cleared since there will be no indoor units that can communicate with the outdoor unit.

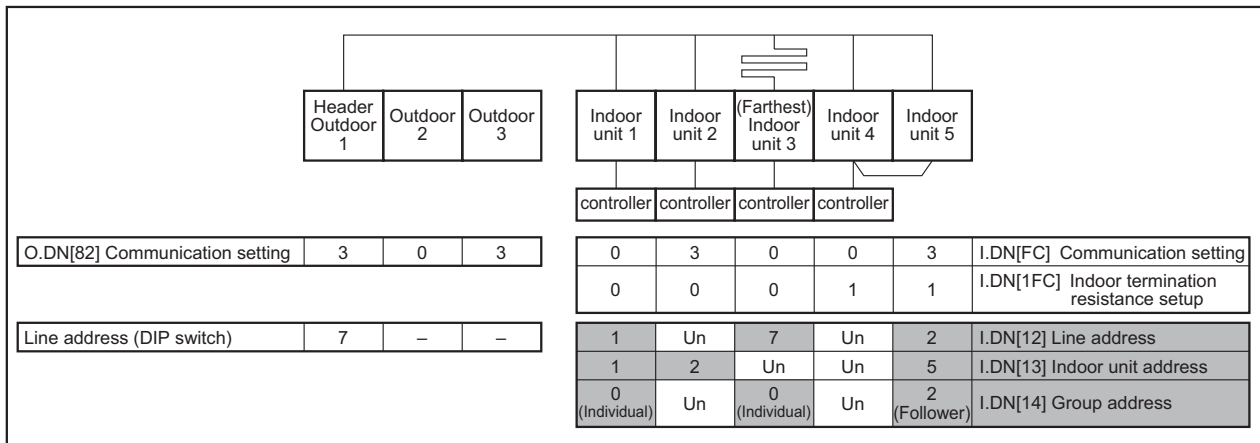


Communication clearing method

- Communication settings for outdoor units and indoor units will automatically change from 3 to 0, and the indoor terminal resistance setting will automatically change from 1 to 0

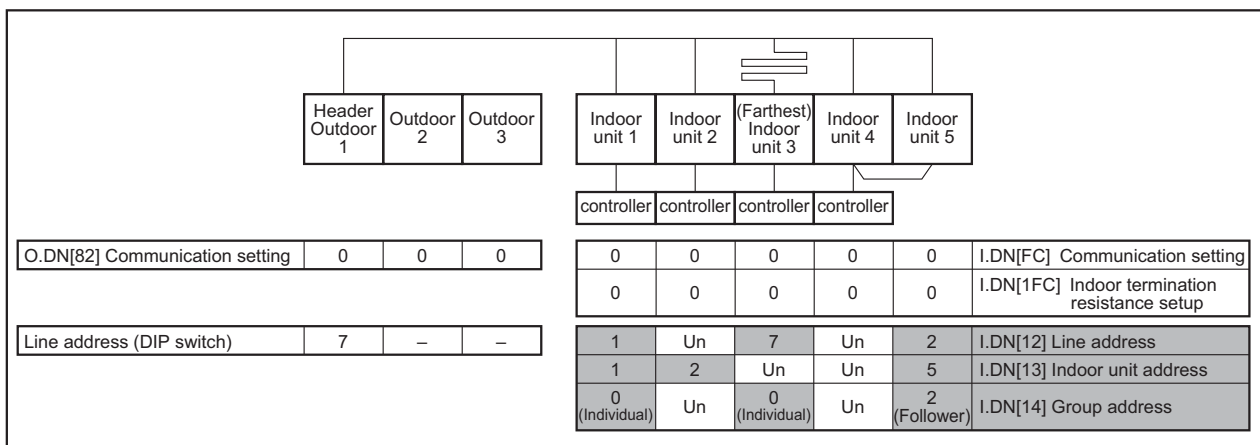

Batch-clearing of addresses (Line, indoor, and group addresses)

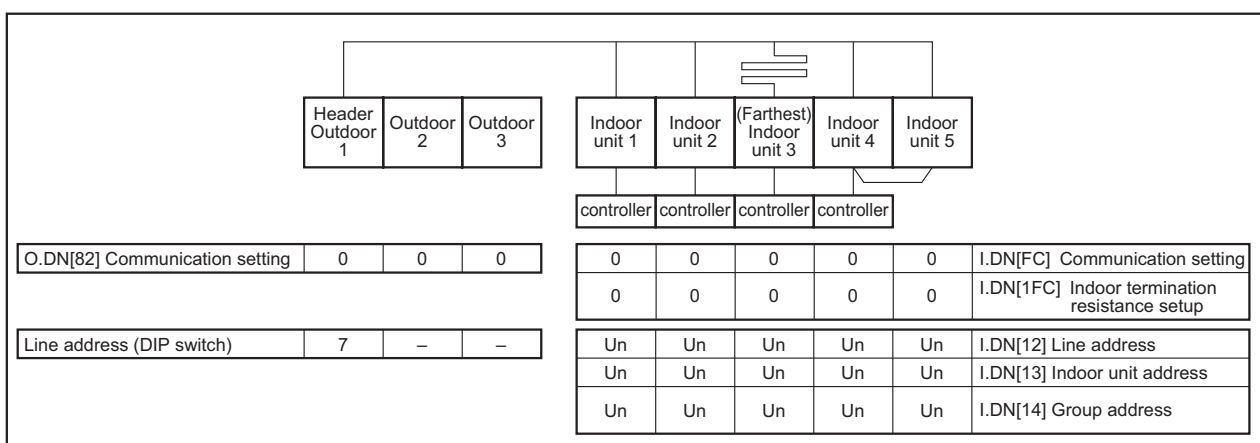

5

[Communication method settings] ... See the section on automatic settings for communication method.

[Clear communication method] ... See the section on how to clear the communication method.

[Automatic address setting] ... Push SW06 on header outdoor unit when all indoor units have no indoor address set, and an "L08" trouble is occurring.

[Batch clear all indoor addresses] line address and group addresses] Set the rotary switch SW01/SW02/SW03 on header outdoor unit to [2/1/2] and push the SW04 for five

seconds or longer



7-4-4. Setting when connecting indoor units to FS (Flow Selector) unit and when connecting safety equipment

Cautions to connection of indoor unit

- When connecting the indoor units to a single port type FS unit, a branch of the multi port type FS unit it is necessary to setup CODE No.[FE]
Be sure to setup CODE No. [FE] after setup of address.
- When connecting the indoor units to a single port type FS unit and a branch of the multi port type FS unit it is possible to connect with multiple groups or connect individually.
- When connecting the indoor units to a branch of the multi port type FS unit,
it is necessary to set up the port address No. (the CODE No. [105]) .
Be sure to set up the port address No..
- When connecting the indoor units to combining branches of the multi port type FS unit,
it is necessary to set up the CODE No. [106].
Be sure to set up the CODE No. [106].
- Even if there is no safety equipment, be sure to set safety measures (the CODE No. [107]).

Connection rules


- It is possible to branch after the port.
- It is possible to set the group of indoor units after the port.
- The multiport type FS unit can be set as group of indoor units across ports.
 - 1) Group settings across ports are allowed only to adjacent (contiguous) ports.
 - 2) Only some indoor units in one port are not allowed to be grouped with the indoor units on other ports.(It is allowed to group all indoor units in one port with the indoor units of other ports.)
- Ports can be combined and used.
 - 1) Port combining is allowed to up to 2 ports. Port combining of 3 or more ports is not allowed.
 - 2) Port combining is allowed only to adjacent ports.
- Group settings across FS units are not allowed.
- The FS unit are allowed in the system.
- Connecting both FS units to the same indoor unit is not allowed.
- It is not possible to setup port combining across the PC board of the multiport type FS unit.
- Be sure to connect the No.1 port of the multiport type FS unit to the indoor unit.
(If the indoor unit is not connected to No.1 port, the air conditioning system will not operate.)
- In the case of the same group, connect only one communication line to the FS unit (one place).
(The connection location should be made at the A/B? terminal of the address
with the smallest port address of the FS unit.)

Setting rules

- The safety measures for indoor units set in the group shall be the same. (Allow mixing in the system.)
- Only one detector is used in a group.

7-4-5. Check after Address Setup when Central Control System Is Connected

When the central control system is connected, check that the following setup has finished after address setup.

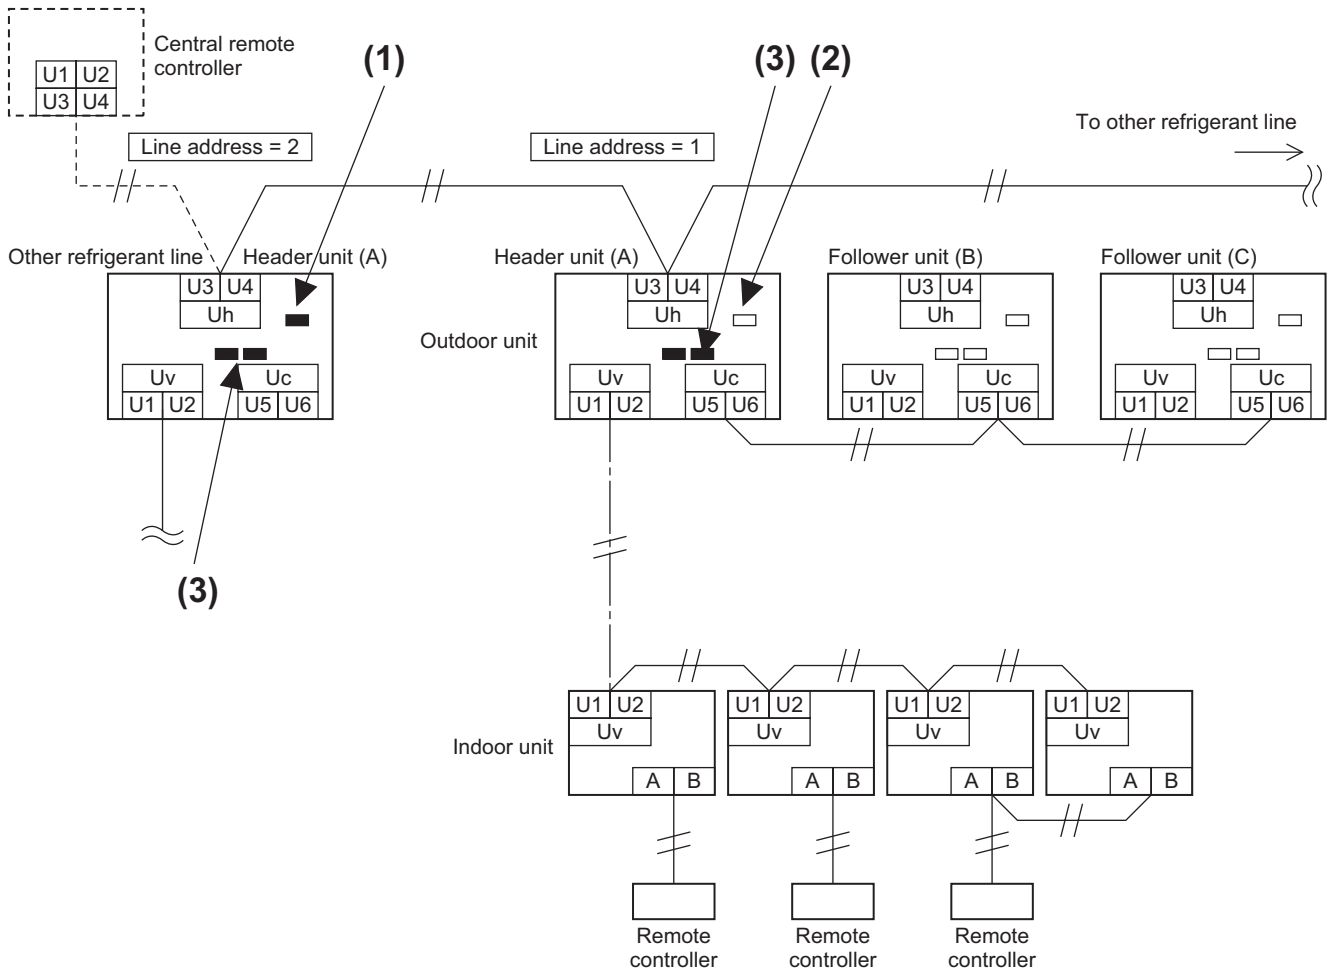




	Main check items	Check
Terminator resistor	(1) Is the terminator resistor (SW100-bit1) of the header unit with the smallest line address number in the central control turned on? (Setup is unnecessary for follower units. (Factory default : OFF))	
	(2) Is the terminator resistor (SW100-bit1) of the header units, except for the line with the smallest central control line address, turned off? (Setup is unnecessary for follower units. (Factory default : OFF))	
Line address	(3) Are addresses in the line address (SW101,SW102) not duplicated in each refrigerant line?	


NOTE

The figure above does not show all the electric wires.




For details, refer to the installation manuals for the outdoor unit, indoor unit, remote controller, or optional devices.

■ How to setup the CODE No. [FE] (Flow Selector unit address)

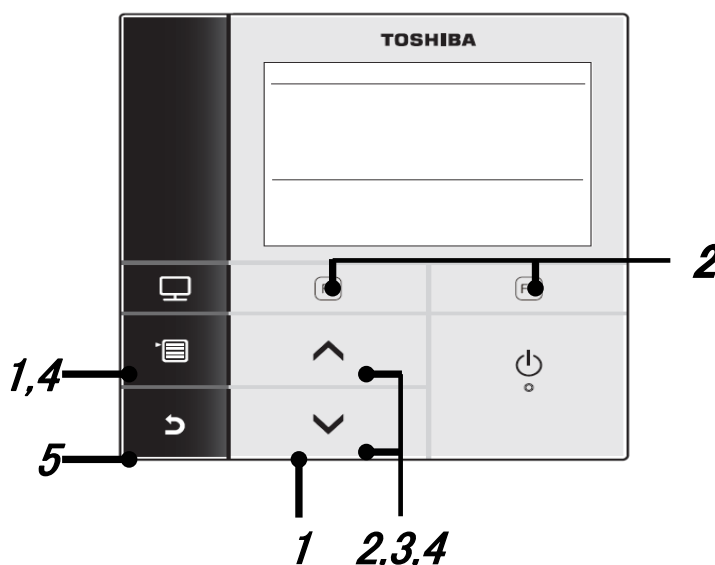


- As for every single port type FS unit, multi port type FS unit setup CODE No. "FE" within the range of 1~128.
This CODE No. cannot be duplicate in one system.
1. Press and hold "  MENU" button and [V] setting button simultaneously for 4 seconds or more.
 2. Select the "DN setting" using the [V] and [Λ] button and press the "F2(Set)" button.
Select the corresponding "Indoor unit" using the "F1(Unit)" button and push the "F2(Set)" button.(The fan and louvers of the selected indoor unit will be activated.)
 3. Set the Indoor Unit Function Code (I.DN) to [FE] and the data using the [V] and [Λ] button
(The fan of the selected indoor unit is turned on.)
 4. When done, press the "  MENU" button.
 5. Press the "  CANCEL" button and complete the setting for the time being.



■ How to set up the CODE No. [105] (Flow Selector unit port address)

- As for multi port type FS unit, set up CODE No. "105" within the range of 1~12.
This CODE No. should not be duplicate in one system.
 - As for both single port type FS unit set up CODE No. "105" to 1.
1. Press and hold "  MENU" button and [V] setting button simultaneously for 4 seconds or more.
 2. Select the "DN setting" using the [V] and [Λ] button and press the "F2(Set)" button. Select the corresponding "Indoor unit" using the "F1(Unit)" button and push the "F2(Set)" button.(The fan and louvers of the selected indoor unit will be activated.)
 3. Set the Indoor Unit Function Code (I.DN) to [105] and the data using the [V] and [Λ] button (The fan of the selected indoor unit is turned on.)
 4. When done, press the "  MENU" button.
 5. Press the "  CANCEL" button and complete the setting for the time being.


■ How to set up the CODE No. [106] (Combining branches mode of Flow Selector unit)

- When connecting the indoor units to combining branches of the multi port type FS unit, set up CODE No. "106" to 1.
 - When connecting the indoor units to NOT combining branches of the multi port type FS unit, set up CODE No. "106" to 0.
1. Press and hold "  MENU" button and [V] setting button simultaneously for 4 seconds or more.
 2. Select the "DN setting" using the [V] and [Λ] button and press the "F2(Set)" button. Select the corresponding "Indoor unit" using the "F1(Unit)" button and push the "F2(Set)" button.(The fan and louvers of the selected indoor unit will be activated.)
 3. Set the Indoor Unit Function Code (I.DN) to [106] and the data using the [V] and [Λ] button (The fan of the selected indoor unit is turned on.)
 4. When done, press the "  MENU" button.
 5. Press the "  CANCEL" button and complete the setting for the time being.

7-5. Troubleshooting in Test Operation

If there are phenomena such as the output of a check code or the remote controller is not accepted when powered on after wiring work or during address setup operation, the following causes are considered.

7-5-1. A Check Code is Displayed on the Remote Controller

Check the code displayed on the indoor remote controller	Header unit 7-segment display	Cause	Countermeasures
E04		When outdoor power is off	Check that the header outdoor unit power is on
	L08	Address setup trouble <ul style="list-style-type: none"> Only line addresses of the connected indoor units are undefined. The outdoor line address and the line addresses of all the indoor units do not match. The indoor addresses are duplicated. (Units except those displaying E04 are duplicated.) A header unit is not set up in group control (except groups displaying E04). 	Set up the address again.
	E08 ⇔ -XXX Alternate blinking	Duplication of indoor addresses (address number in the subcode of the check code are duplicated).	Set up the address again.
	E07	When the terminator resistor (SW100 bit2) in the communication line between indoor and outdoor units (Uv) on the outdoor unit has not been turned on or two or more terminator resistors have been turned on (After address setup, when terminator resistor setup is changed after powering-on) 	Check SW100 bit 1 or bit 2 of the header unit. No connection between multiple refrigerant lines: Turn off SW100 bit 1 and turn on bit 2. Connection between multiple refrigerant lines: Turn on SW100 bit 1 of only the connected header unit for one line. Turn on SW100 bit2 of all the header units. *Factory default : SW100 bit 1 is off, bit 2 is off.
		Transmission circuit trouble at the interface side (P.C. board failure)	Replace the interface PC board.
	E06	After address setup, communication from all the indoor units is interrupted under the condition that a normal operation can be performed.	Check and correct disconnection of the indoor/outdoor communication line (the communication line between the header unit and the leading indoor unit). Check for the influence of communication noise. In TU2C-LINK communication system, if the termination resistance is not set in any of the indoor units.
E16	E16.XX	Exceeded the number or capacity of connected indoor units	Adjust the number or capacity of connected indoor units.
E23	E23	<ul style="list-style-type: none"> The setting of terminator resistor is incorrect. Communication with outdoor unit from another refrigerant line cannot be performed when power is turned on (Uh(U3/U4) communication line). 	<ul style="list-style-type: none"> Check the connection of Uh (U3/U4) communication line. Check whether there is defect or not on outdoor unit interface P.C.board. Check the setting of terminator resistor.
E25	E25	Duplication of outdoor addresses (only when an outdoor address was manually set up)	Do not use manual setup for outdoor addresses.
E26	E26 ⇔ -XX Alternate blinking	Number of connected outdoor units has decreased. <ul style="list-style-type: none"> When installing an outdoor backup The power of a follower unit is not turned on. 	Correction of the cause of trouble occurrence <ul style="list-style-type: none"> If it occurs when installing a backup, clear the trouble after setup finishes. If the power of a follower unit is not turned on, turn on the power.
L04	L04	Duplication of outdoor line addresses <ul style="list-style-type: none"> Line address setup trouble (occurred after connection between U1/U2 and U3/U4 connectors) 	Modify the line address setup of the header unit between lines. (Set up SW13 and SW14 on the interface PC board.)
L05(*)	L06	Duplication of indoor units with priority	Set up priority only for one indoor unit.
L06(*)	None	There are two or more indoor units set up with priority.	Among indoor units indicating "L05," set one unit with priority.
L08	L08	Address setup trouble <ul style="list-style-type: none"> Only indoor addresses of all the connected indoor units are undefined. 	Set up the addresses again. Modify the setup.

* "L05": Displayed on the indoor unit set up with priority

"L06": Displayed on the indoor units except the one set up with priority

Check the code displayed on the indoor remote controller	Header unit 7-segment display	Cause	Countermeasures
L04	L04	Duplication of outdoor line addresses • Line address setup trouble (occurred after connection between U1/U2 and U3/U4 connectors)	Modify the line address setup of the header unit between lines. (Set up SW13 and SW14 on the interface PC board.)
L05(*)	L06	Duplication of indoor units with priority	Set up priority only for one indoor unit.
L06(*)	None	There are two or more indoor units set up with priority.	Among indoor units indicating "L05," set one unit with priority.
L08	L08	Address setup trouble • Only indoor addresses of all the connected indoor units are undefined.	Set up the addresses again. Modify the setup.
L11	L11	• FS unit is not connected to indoor unit and it is not set to "cooling only" • Communication connection trouble between Flow Selector unit and indoor unit. • FS unit P.C.board trouble	• Connect FS unit • Correct the indoor unit setting to "cooling only" setting. • Correct communication line. • Replace FS unit P.C.board or indoor unit P.C.board or outdoor unit I/F P.C.board. • Correct DipSW104 setting.
L13	L13	• No indoor unit is connected to No.1 port of FS unit Multi-port type • Set a number that is one larger than the "FS unit" port address of the indoor unit for which "Combining branches of FS unit" is set. Example; If the "port address" of the indoor unit for which "FS unit branch combination" is set to 3,4 must not be set. • Multiple remote controller groups are set to one port of the FS unit, a different port address is set for one of the groups. • Same address is set for different FS units	• Correct the connection of the indoor unit. • Correct port address settings. • Correct the connection of the indoor unit. • Correct port "combining branches" settings. • Correct port address settings. • Correct safety measures settings. • Correct port address settings. • Correct the address settings of the FS unit. • Correct communication line. • Replace the indoor unit P.C.board.
L14	L14	• "Safety measures" setting is set other than "no safety measures" and Le Detector is not connected. (Detected when power is turned on.) • Safety measures "setting is set to "Pump-down operation" or "Individual shut-off operation" and FS unit or SV unit is not connected. • "Safety measures" setting is set to "Individual shut-off operation" a connected to FS unit Multi-port type.	• Correct safety measures settings. • Connect leak detector. • Correct safety measures settings. • Connect the FS unit. • Correct safety measures settings. • Correct connection of connector. • Replace indoor unit P.C.board.

7-5-2. No Remote Controller Response with Check Code

(Operation from the indoor remote controller is not accepted, and a check code is displayed on the 7-segment display of the interface PC board of the header unit)

Indoor remote controller status	Header unit 7-segment display	Cause	Countermeasures
No response	L08	Line addresses and indoor addresses of all the connected indoor units are not set.	Set up addresses.
		There is no header unit of group control.	Set up a group address.
	E19 ⇔ -00 Alternate blinking	Indoor unit power is not turned on.	Turn on the power again. (In the order: indoor → outdoor)
		Indoor/outdoor communication line is not correctly connected to the U1/U2 terminal of the header unit (Fig. 1). (Indoor/outdoor cannot communicate before address setup.)	Correct wiring
		When the terminator resistor (SW100 bit2) in the communication line between indoor and outdoor units (Uv) on the outdoor unit has not been turned on or two or more terminator resistors have been turned on (After address setup, when terminator resistor setup is changed after powering-on)	Check SW100 bit 1 or bit 2 of the header unit. No connection between multiple refrigerant lines: Turn off SW100 bit 1 and turn on bit 2. Connection between multiple refrigerant lines: Turn on SW100 bit 1 of only the connected header unit for one line. Turn on SW100 bit2 of all the header units. * Factory default : SW100 bit 1 is off, bit 2 is off.
	E19 ⇔ -02 Alternate blinking	When connecting an indoor/outdoor communication line between outdoor units under the condition of a connected communication line between outdoor units (Fig. 2).	Correct wiring
		SW08 setup trouble	Turn all SW08 switches to "off."
	E20 ⇔ -01 Alternate blinking	Address setup is performed with connecting an indoor/outdoor communication line between outdoor units (Fig. 3).	Correct wiring
		Address setup is performed under the condition of connecting multiple refrigerant lines (Fig. 3).	Correct wiring



7-5-3. No Remote Controller Response without Check Code

(There is no display of a check code on the 7-segment display on the interface PC board of the header unit, although there is indoor unit that is not accepting operation from the indoor remote controller)

Indoor remote controller status	Header unit 7-segment display	Cause	Countermeasures
No response	None	The communication line is not connected between indoor and outdoor (the unit that does not respond to the indoor remote controller).	Improve the wiring.
		Line address and indoor address are not set (the unit that does not respond to the indoor remote controller).	Set up the address.
		The power of the header unit of the group is not turned on in indoor group control (the unit that does not respond to the indoor remote controller).	Turn on the power.
		Group address is set to the follower unit for individual control (the unit that does not respond to the indoor remote controller).	Set the group address to "0" in the case of individual control.
No display on the indoor remote controller (no line is output.)	None	The power is not turned on (the unit that is not displayed on the indoor remote controller).	Turn on the power.
		The indoor remote controller is not connected with a wire (the unit that is not displayed on the indoor remote controller).	Improve the wiring.
		Miswiring of the indoor remote controller (the unit that is not displayed on the indoor remote controller)	Improve the wiring.
		Indoor remote controller communication circuit trouble (the unit that is not displayed on the indoor remote controller) If 220 V is incorrectly applied to the indoor remote controller terminal, the remote controller communication circuit fails.	Remove the quick connect terminal connected to indoor remote controller terminals A/B, and check the voltage. If voltage is not applied (normally 15 to 18 V), replace the PC board.

7-5-4. Connected Indoor/Outdoor Unit Quantity Check

(In checking the number of connected outdoor units and connected indoor units after address setup, a lower number of connected units is displayed (There are outdoor/ indoor units that do not operate in a test operation))

Status	Cause	Counter measures
The number of connected outdoor units is few.	Miswiring of communication lines between outdoor units or an unconnected wire (Fig. 4). (Address setup operation finished without recognizing a miswired follower unit.)	After improvement of wiring, set up the addresses again and check the number of connected outdoor units.
The number of connected indoor units is few.	Miswiring of communication lines between indoor units or an unconnected wire (Fig. 5). (Address setup operation finished without recognizing a miswired indoor unit.)	After modification of wiring, set up the addresses again and check the number of connected indoor units.
The number of indoor units connected to a group is few in group operation from an indoor remote controller.	The indoor remote controller is not connected with wire. Miswiring of the indoor remote controller	Using the main indoor remote controller connected to a group, start a test operation, specify the unit that is not operating (the unit not connected to the group), and then check the wiring.
	Indoor remote controller communication circuit trouble If 220 V is incorrectly applied to the remote controller terminal, the remote controller communication circuit fails.	Using the main indoor remote controller connected to a group, start a test operation and then specify the unit that is not operating (the unit not connected to the group). Remove the quick connect terminal connected to remote controller terminals A/B, and check the voltage. If voltage is not applied (normally 15 to 18 V), replace the PC board.

Miswiring example









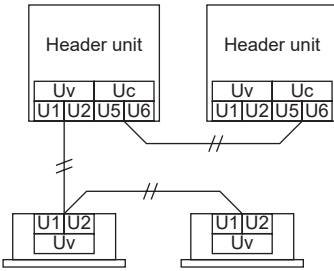
Figure	Remote controller status	Header unit 7-segment display	Miswiring example
Fig 1	No response	E19, 02	 <ul style="list-style-type: none"> • Follower unit is incorrectly set to header unit.  <ul style="list-style-type: none"> • Indoor/outdoor communication line is miswired to header unit of other system.
Fig 2	E04	L08	 <ul style="list-style-type: none"> • Indoor/outdoor communication line is miswired to Uh (U3/U4).  <ul style="list-style-type: none"> • Indoor/outdoor communication line is not connected.

Figure	Status	Miswiring example
Fig 3	The number of connected outdoor units is few.	 <ul style="list-style-type: none"> • Outdoor communication line is miswired to Uh (U3/U4). 
Fig 4	The number of connected indoor units is few.	 <ul style="list-style-type: none"> • Indoor/outdoor communication line is miswired to remote controller terminal (A/B).  <ul style="list-style-type: none"> • There is an indoor unit not connected to the indoor/outdoor communication line.

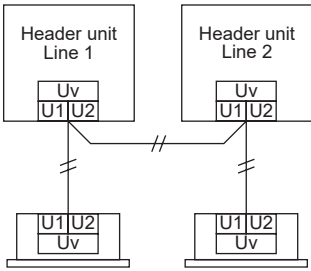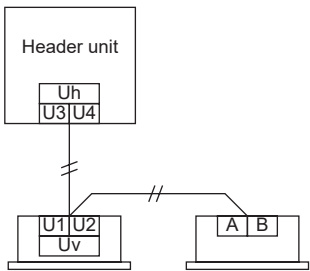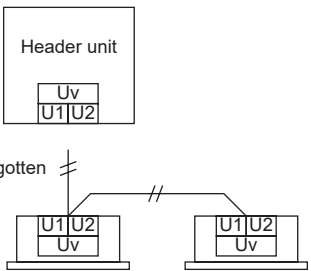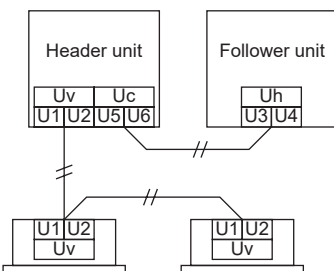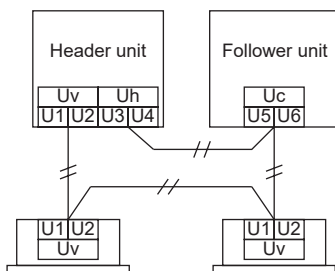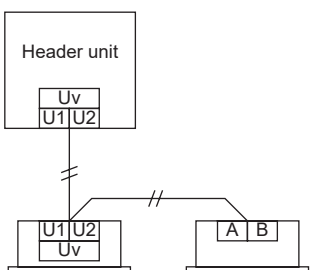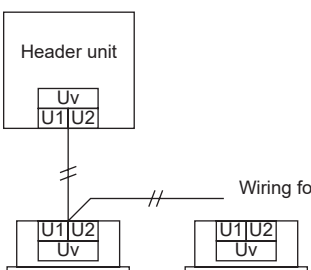

◆ [Indoor Code DN number Setting example]


[0014] : Indoor unit Group address
 0 : Individual (Factory default)
 1 : Header unit
 2 : Follower unit

[00FE] : Flow selector unit address
 -Should not be duplicate in one system.
 -Factory default : Un

[00FD] : Priority operation mode
 0 : Heating prioritized (Factory default)
 1 : Cooling prioritized (The cooling is prioritized even if setting only one unit in one branching)


[0105] : FS unit port address (1~12)
 -As for multi port type FS unit, set up within the range of 1~12.
 -As for both single port type FS unit set up CODE No. "105" to 1.

In case of connecting one indoor unit to single port type FS unit.

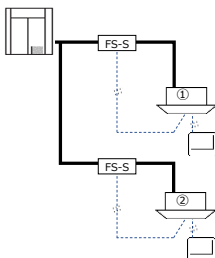


Indoor unit	①	②
[0014]	0	0
[00FE]	1	2
[00FD]	0	0
[0105]	1	1
[0106]	0	0

In case of connecting one group operation of indoor units to single port type FS unit.

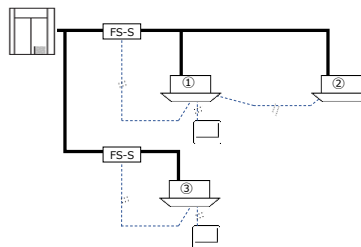

Indoor unit	①	②	③
[0014]	1	2	0
[00FE]	1	1	2
[00FD]	0	0	0
[0105]	1	1	1
[0106]	0	0	0


In case of connecting two indoor units to single port type FS unit.

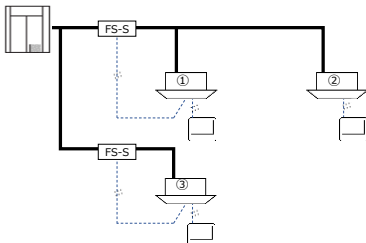

Indoor unit	①	②	③
[0014]	1	2	0
[00FE]	1	1	2
[00FD]	0	0	0
[0105]	1	1	1
[0106]	0	0	0

It is not necessary to set up.
 It is not necessary to set up.


In case of connecting one group operation of indoor unit to single port type FS unit and two remote controller.

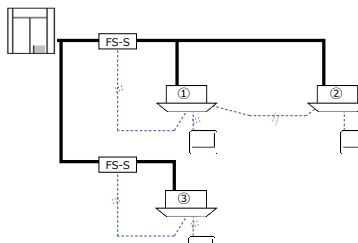


Indoor unit	①	②	③
[0014]	1	2	0
[00FE]	1	1	2
[00FD]	0	0	0
[0105]	1	1	1
[0106]	0	0	0

It is not necessary to set up.
 It is not necessary to set up.

Incorrect connection example

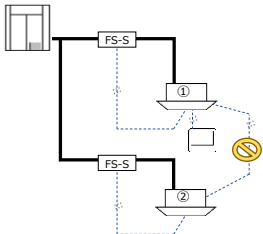


In case of connecting one indoor unit to one port of multi port type FS unit.

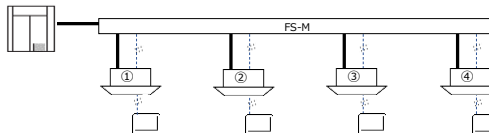


Indoor unit	①	②	③	④
[0014]	0	0	0	0
[00FE]	1	1	1	1
[00FD]	0	0	0	0
[0105]	1	2	3	4
[0106]	0	0	0	0

In case of connecting one indoor unit and not connecting indoor unit to one port of multi port type FS unit.

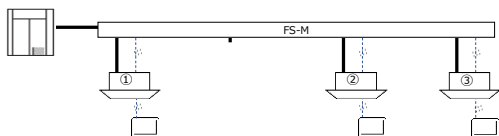


Indoor unit	(1)	(2)	(3)
[0014]	0	0	0
[00FE]	1	1	1
[00FD]	0	0	0
[0105]	1	3	4
[0106]	0	0	0

Incorrect connection

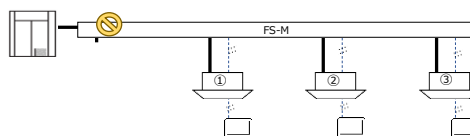


In case of connecting to combining branches of multi port type FS unit.

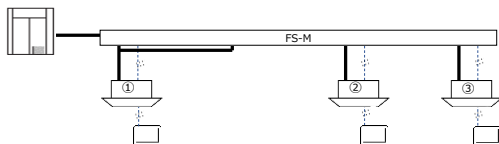


Indoor unit	(1)	(2)	(3)
[0014]	0	0	0
[00FE]	1	1	1
[00FD]	0	0	0
[0105]	1	3	4
[0106]	1	0	0

In case of connecting to combining branches of multi port type FS unit, and there are multiple in the system.

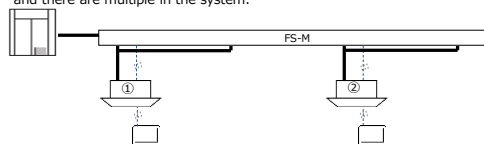


Indoor unit	(1)	(2)
[0014]	0	0
[00FE]	1	1
[00FD]	0	0
[0105]	1	3
[0106]	1	1


Incorrect connection

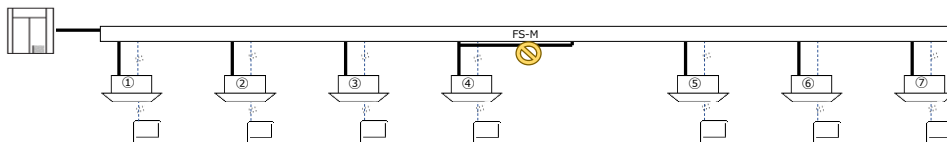


Incorrect connection

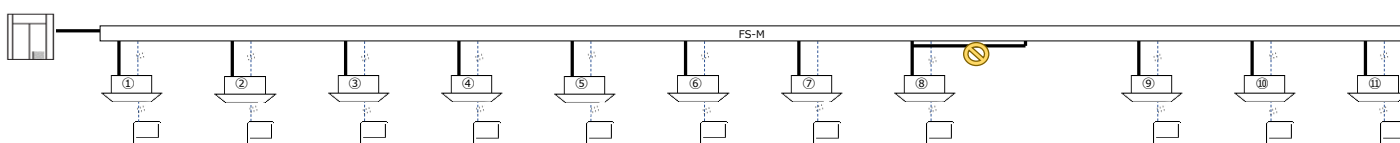


Incorrect connection

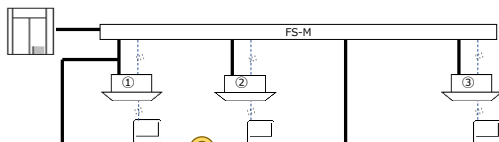

Incorrect connection

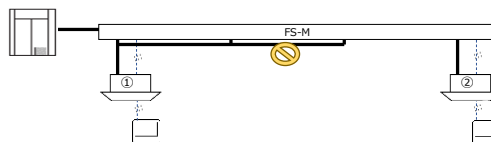


In case of one group operation of indoor units to multiple ports of multi port type FS unit.

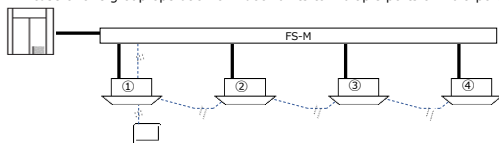


Indoor unit	(1)	(2)	(3)	(4)
[0014]	1	2	2	2
[00FE]	1	1	1	1
[00FD]	0	0	0	0
[0105]	1	2	3	4
[0106]	0	0	0	0

In case of two group operations of indoor units to multiple ports of multi port type FS unit.

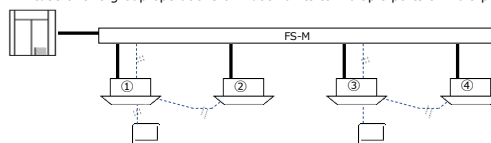


Indoor unit	(1)	(2)	(3)	(4)
[0014]	1	2	1	2
[00FE]	1	1	1	1
[00FD]	0	0	0	0
[0105]	1	2	3	4
[0106]	0	0	0	0

In case of connecting two group operation of indoor units to multiple ports of multi port type FS unit,
and connecting two remote controllers to one group of indoor unit.

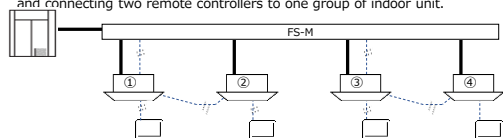


Indoor unit	(1)	(2)	(3)	(4)
[0014]	1	2	1	2
[00FE]	1	1	1	1
[00FD]	0	0	0	0
[0105]	1	2	3	4
[0106]	0	0	0	0

In case of connecting one group operation of indoor unit to multiple port and combining branches of multi port type FS unit.

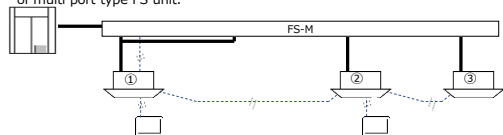


Indoor unit	(1)	(2)	(3)
[0014]	1	2	2
[00FE]	1	1	1
[00FD]	0	0	0
[0105]	1	3	4
[0106]	1	0	0

In case of connecting one group operation of indoor unit to one port of multi port type FS unit.

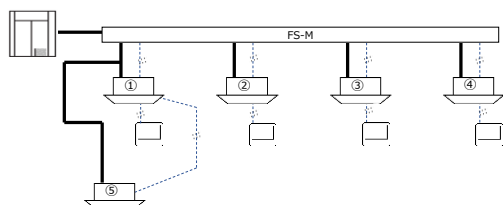


Indoor unit	(1)	(2)	(3)	(4)	(5)
[0014]	1	0	0	0	2
[00FE]	1	1	1	1	1
[00FD]	0	0	0	0	0
[0105]	1	2	3	4	1
[0106]	0	0	0	0	0

In case of connecting two indoor units to one port of multi port type FS unit.

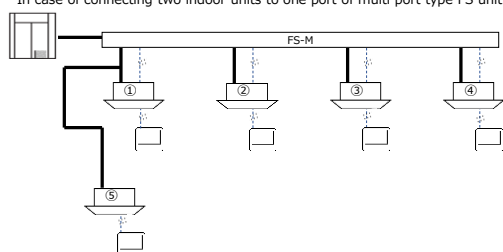


Indoor unit	(1)	(2)	(3)	(4)	(5)
[0014]	1	0	0	0	0
[00FE]	1	1	1	1	1
[00FD]	0	0	0	0	0
[0105]	1	2	3	4	1
[0106]	0	0	0	0	0

Incorrect connection

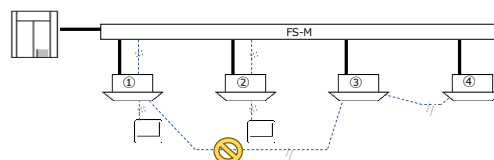


In case of connecting one group operation of indoor units to one port and multiple ports of multi port type FS unit.

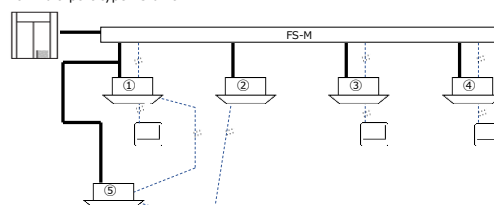


Indoor unit	(1)	(2)	(3)	(4)	(5)
[0014]	1	2	0	0	2
[00FE]	1	1	1	1	1
[00FD]	0	0	0	0	0
[0105]	1	2	3	4	1
[0106]	0	0	0	0	0

Incorrect connection

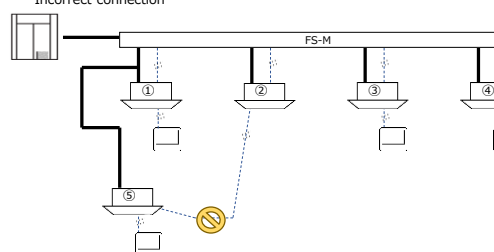


In case of connecting one group operation of indoor unit and one indoor unit to one port of multi port type FS unit.

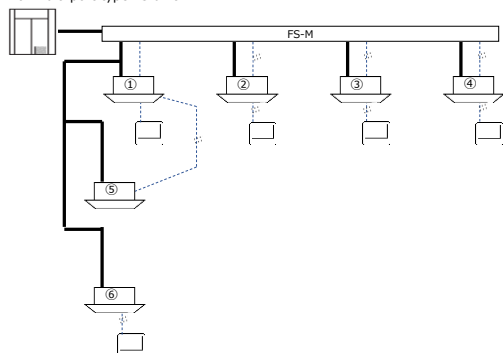


Indoor unit	(1)	(2)	(3)	(4)	(5)	(6)
(0014)	1	0	0	0	2	0
(00FE)	1	1	1	1	1	1
(00FD)	0	0	0	0	0	0
(0105)	1	2	3	4	1	1
(0106)	0	0	0	0	0	0

In case of connecting one group operation of indoor unit to combining branches of multi port type FS unit.

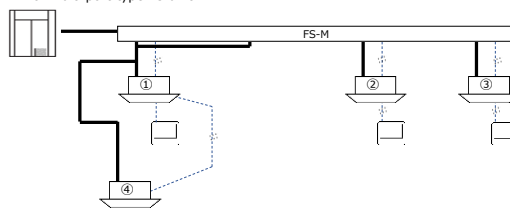


Indoor unit	(1)	(2)	(3)	(4)
(0014)	1	0	0	2
(00FE)	1	1	1	1
(00FD)	0	0	0	0
(0105)	1	3	4	1
(0106)	1	0	0	1

In case of connecting one indoor unit to single port type FS unit, and connecting one indoor unit to one port of multiple port type FS unit.

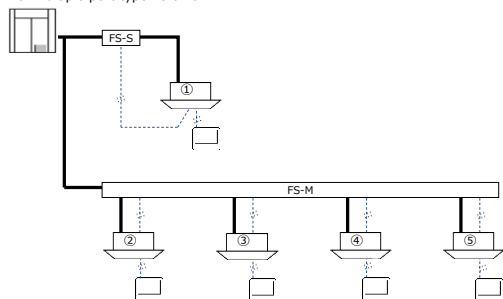


Indoor unit	(1)	(2)	(3)	(4)	(5)
(0014)	0	0	0	0	0
(00FE)	1	2	2	2	2
(00FD)	0	0	0	0	0
(0105)	1	1	2	3	4
(0106)	0	0	0	0	0

In case of connecting one indoor unit to one port of multi port type FS unit, and there are two multi port type FS units.

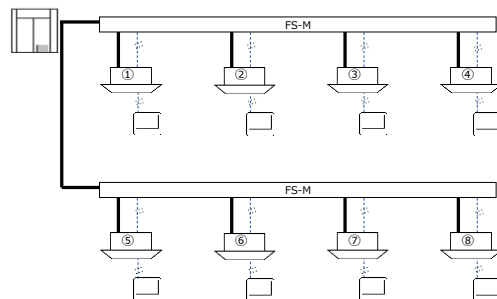


Indoor unit	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)
(0014)	0	0	0	0	0	0	0	0
(00FE)	1	1	1	1	2	2	2	2
(00FD)	0	0	0	0	0	0	0	0
(0105)	1	2	3	4	1	2	3	4
(0106)	0	0	0	0	0	0	0	0

In case of connecting one group operation of indoor units to multiple port of multi port type FS unit, and there are two multi port type FS units.

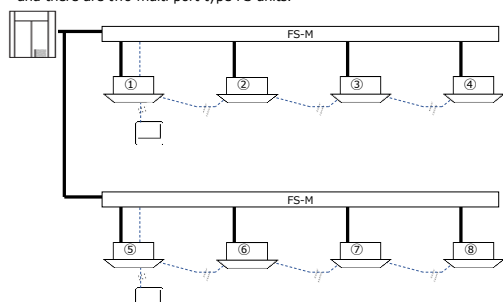


Indoor unit	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)
(0014)	1	2	2	2	1	2	2	2
(00FE)	1	1	1	1	2	2	2	2
(00FD)	0	0	0	0	0	0	0	0
(0105)	1	2	3	4	1	2	3	4
(0106)	0	0	0	0	0	0	0	0

Incorrect connection

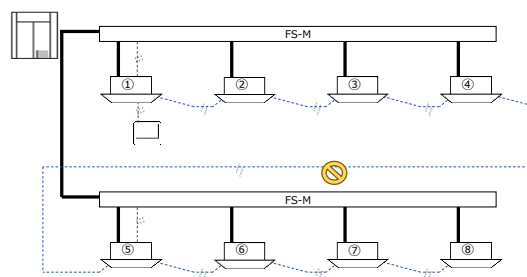

7-6. Test Operation (test run) Check

7-6-1. Fan Check

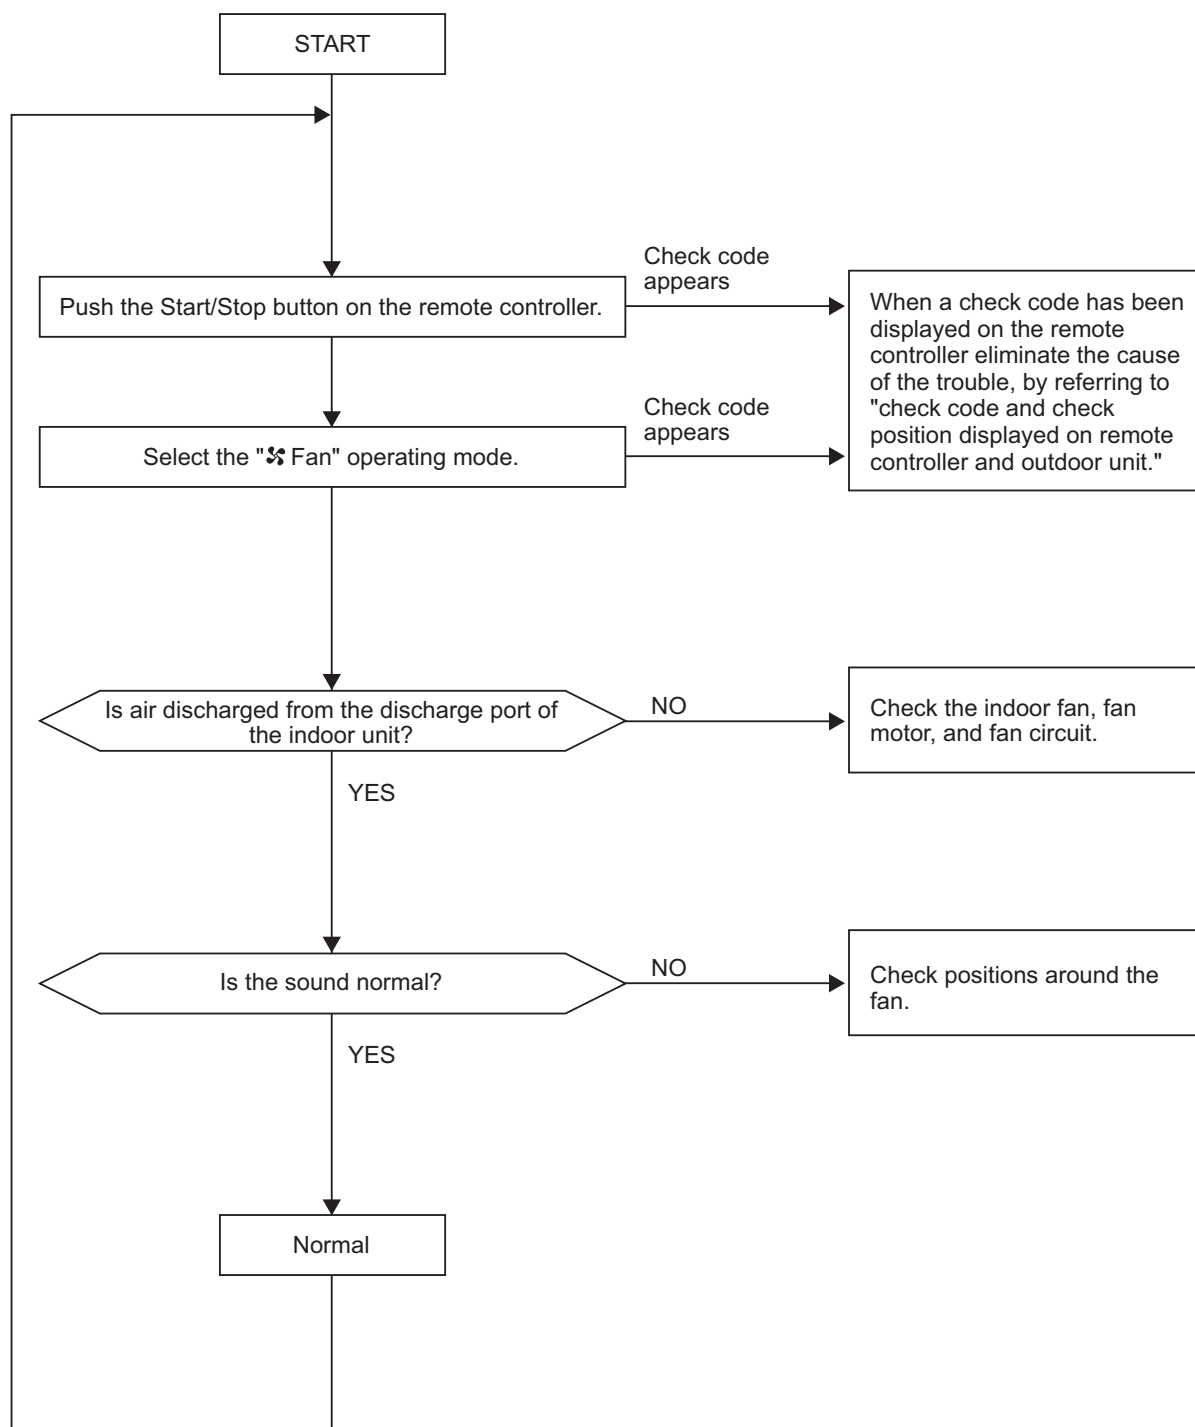

Check every indoor unit in turn.

7-6-2. Inspection mode (safety measures)

◆ When connecting the FS unit perform the following detailed inspection mode. This mode verifies that safety measures are properly connected.

The detailed inspection mode is performed on the interface board of the outdoor unit.

Detailed inspection mode is completed in about 40 minutes in general and about 90 minutes at maximum.


<Detailed inspection mode start operation>

1. Set the rotary switch on the interface board of the outdoor unit to SW01=[2], SW02=[15], SW03=[16].

7-segment display	
[A]	[B]
[]	[]

2. Press SW04 for at least 2 seconds.

7-segment display	
[A]	[B]
[FS]	[CH]

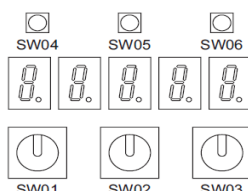

If the detailed inspection mode successfully completes, the following will be displayed.

7-segment display	
[A]	[B]
[FS]	[—]

If there is an incorrect electrical wiring, incorrect piping connection, incorrect indication, etc., the following will be displayed.

If there are multiple indoor units with errors, press SW06 to change the address display of the indoor unit.

(If there is only one indoor unit with an error, the display remains the same.)

7-segment display	
[A]	[B]
[FS]	[Err]
	⬆
	[]
	⬇
	Address of the error indoor unit

The indication changes every 1.0 second.

If [Err] is indicated on 7-segment display, execute a cooling/heating test run for each indoor unit and check cool/hot air is blowing. Also, check the piping connection, wiring connections, and settings again.

If there is no problem after checking again, the system is normal.

When you modify piping connections, wiring connections, or settings, execute detailed inspection mode again.

Please contact a qualified service person if there is any trouble during test run.

* [Err] on the 7-segment display disappears when the system power is reset.

* [Err] may be indicated even if there is no problem.

- When the temperature difference is large between in each indoor unit.
- When the FS unit is connected to the main pipe from the outdoor unit.

* A sound may be heard from the piping, Flow Selector unit during the test run, but this is not a malfunction.

<Detailed inspection mode end operation>

1. Return the rotary switch on the interface board of the outdoor unit to SW01=[1], SW02=[1], and SW03=[1].

7-segment display	
[A]	[B]
[U1]	[]

7-6-3. Cooling/Heating Test Operation Check

The cooling/heating test operation check can be performed on both the indoor remote controller and the outdoor header unit interface PC board.





(1) Test operation start/stop operation

Test operation from the indoor remote controller

- Wired remote controller: Refer to the items below in “Test operation” of the wired remote controller.
- Wireless remote controller: Refer to the items below in “Test operation” of the wireless remote controller.

▼ Wired remote controller

<RBC-AWSU**>

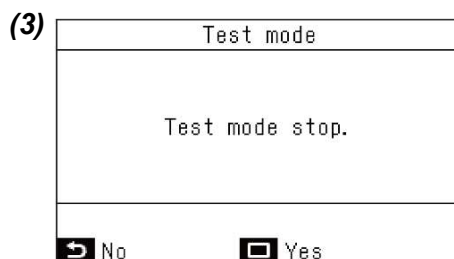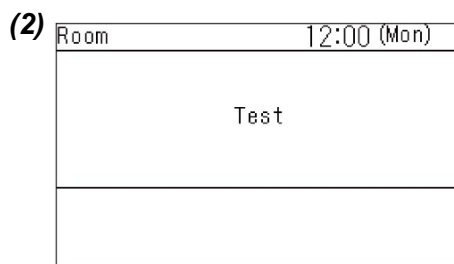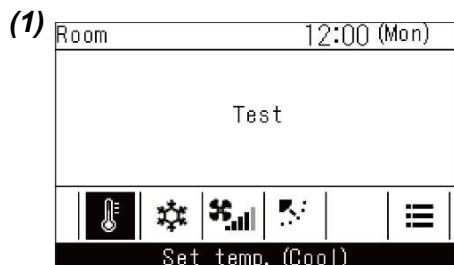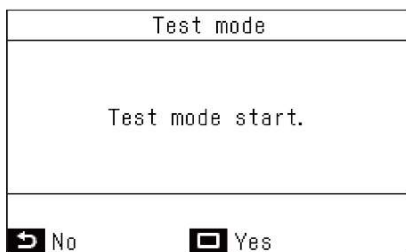

1 Push the [Menu] button to display the menu screen

2 Push and hold the [Menu] button and the [] button at the same time to display the "Field setting menu".

→ Push and hold the buttons for more than 4 seconds

3 Push the [] / [] button to select "1. Test mode" on the "Field setting menu" screen, then push the " Set" [Set / Fix] button.

→ Pushing the " Yes" [Set / Fix] button sets the test mode and the screen returns to the "Field setting menu" screen.

Push [Return] twice, the screen (2) appears.

4 Push the [ON / OFF] button to start the test mode. The screen (1) shown in the left appears.

(The screen (2) appears when the operation is stopped.)

→ Perform the test mode in the "Cool" or "Heat" mode
Temperature setting cannot be adjusted during the test mode.

Check codes are displayed as usual.

5 When the test mode is finished, push the [] / [] button to select "1. Test mode" on the "Field setting menu" screen, then push the " Set" [Set / Fix] button. The screen (3) appears.

→ Pushing the " Yes" [Set / Fix] button stops the test mode screen and continues the normal operation.

NOTE

The test mode stops after 60 minutes and the screen returns to the normal / detailed display.

▼ Wireless remote controller

1 Turn on the power of the air conditioner. When power is turned on for the first time after installation, it takes approx. 5 minutes until the remote controller becomes available. In the case of subsequent power on, it takes approx. 1 minute until the remote controller becomes available. Execute a test run after the predetermined time has passed.

2 Push “ON/OFF” button on the remote controller, select [ Cool] or [ Heat] with “MODE” button, and then select [ HIGH] with “FAN” button.

3

Cooling test run	Heating test run
Set the temperature to 62.6°F(17°C) with the temp. setup buttons.	Set the temperature to 86°F(30°C) with the temp. setup buttons.

4

Cooling test run	Heating test run
After confirming a signal receiving sound “beep” immediately set the temperature to 64.4°F(18°C) with the temp. setup buttons.	After confirming a signal receiving sound “beep” immediately set the temperature to 84.2°F(29°C) with the temp. setup buttons.

5

Cooling test run	Heating test run
After confirming a signal receiving sound “beep” immediately set the temperature to 62.6°F(17°C) with the temp. setup buttons.	After confirming a signal receiving sound “beep” immediately set the temperature to 86°F(30°C) with the temp. setup buttons.

6 Repeat procedures 4 → 5 → 4 → 5. Indicators “Operation” (green), “Timer” (green), and “Ready” (orange) in the wireless receiver section flash in approx. 10 seconds, and the air conditioner starts operation. If any of these indicators does not flash, repeat procedures 2 to 5.

7 Upon completion of the test run, push “ON/OFF” button to stop operation.

<Overview of test run operations using the wireless remote controller>

Cooling test run:

ON/OFF → 62.6°F(17°C) → 64.4°F(18°C) → 62.6°F(17°C)
→ 64.4°F(18°C) → 62.6°F(17°C) → 64.4°F(18°C)
→ 62.6°F(17°C) → (test run) → ON/OFF

Heating test run:

ON/OFF → 86°F(30°C) → 84.2°F(29°C) → 86°F(30°C)
→ 84.2°F(29°C) → 86°F(30°C) → 84.2°F(29°C)
→ 86°F(30°C) → (test run) → ON/OFF


Test operation from the outdoor unit

- Refer to “7-7-2. Function to Start/Stop (ON/OFF) Indoor Unit from Outdoor Unit” in “7-7. Service Support Function.”

CAUTION

- The test run is a forced run that ignores the set temperature. Be sure to stop the test run after work, paying attention to the room temperature.
- After 60 minutes, the test run will be completed to protect the equipment, and the normal operation will be started according to the set temperature.

(2) Test operation

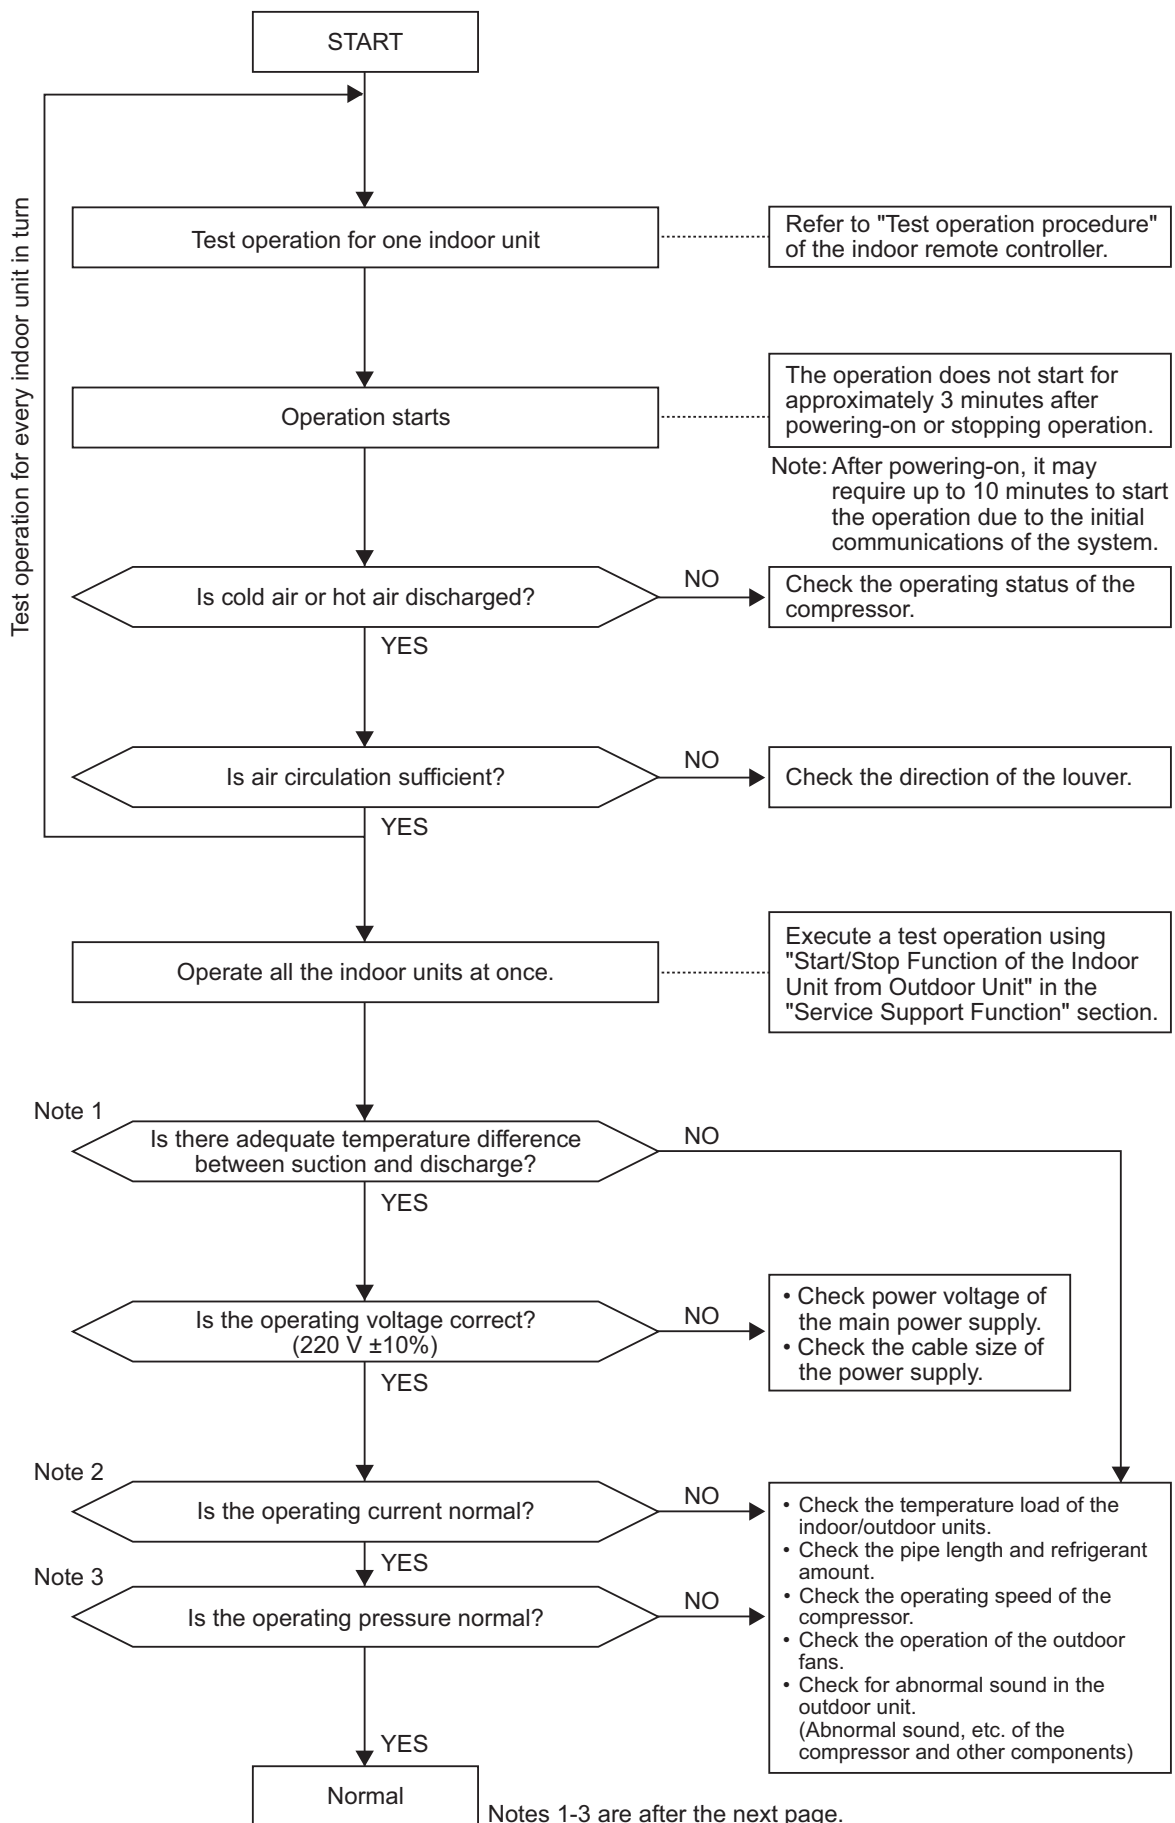

Note 1: Criteria for the difference between suction and discharge temperatures

(1) Cooling operation

After operating for a minimum of 30 minutes in "COOL" mode, if the T dry bulb temperature difference between suction and discharge air of the indoor unit is 46.4°F(8°C) or more, it is normal.

(2) Heating operation

After operating for a minimum of 30 minutes in "HEAT" mode, if the T dry bulb temperature difference between suction and discharge air of the indoor unit is 59°F(15°C) or more, it is normal.

* If demand from the indoor unit on the outdoor unit is low because the difference between the temperature set by the remote controller and the temperature of the room is small, then the T temperature difference is small.

* Consider that T temperature difference may diminish in cases of a system in which the connected indoor unit capacity exceeds the outdoor unit capacity, the pipe length is long, or a large difference exists among outdoor units.

Note 2: Criteria for operating power current

The table below shows the maximum current for each outdoor unit. Under standard conditions, operating current is about 80% of the value shown in the table below.

Model	MMY-MUP	0721*	0961*	1201*	1441*	1681*	1921*
Current value	(A)	16.53	16.61	22.95	23.38	26.07	30.28
Model	MMY-MUP	072H1*	096H1*	120H1*			
Current value	(A)	15.14	17.6	23.74			

Note 3: Criteria for cycle status

(1) These data are based on operating a 4-way Air Discharge Cassette type air conditioner of 100% connection with standard piping length.

Data may vary depending on temperature conditions, installed pipe length, and room shape combinations, or indoor unit connection capacity.

For pressure criteria in different temperature conditions, refer to (2).

Outdoor Unit MMY-MUP	Operating Mode	Pressure (Psi)		Pipe Surface Temperature					Compressor Rotation		Indoor Fan	Air Temperature	
				(°F)					(rps)			(DB/WB)(°F)	
				Discharge	Suction	Indoor Heat Exchanger	Outdoor Heat Exchanger	Liquid Temperature	Compressor 1	Compressor 2		Outdoor	Indoor
		Pd	Ps										
0721*	Cooling	391	145	166	64	55	103	75	44	-	High	95/-	80/67
	Heating	310	102	143	37	80	33	73	50	-	High	47/43	70/-
0961*	Cooling	430	142	178	62	55	104	79	58	-	High	95/-	80/67
	Heating	307	96	146	34	82	32	77	67	-	High	47/43	70/-
1201*	Cooling	419	131	181	63	55	108	85	54	-	High	95/-	80/67
	Heating	321	94	153	34	80	32	64	58	-	High	47/43	70/-
1441*	Cooling	443	142	183	66	57	108	89	60	-	High	95/-	80/67
	Heating	310	91	150	31	81	32	69	69	-	High	47/43	70/-
1681*	Cooling	440	139	186	63	57	108	87	66	-	High	95/-	80/67
	Heating	330	91	160	32	84	33	77	77	-	High	47/43	70/-
1921*	Cooling	445	139	189	63	56	108	90	62	61	High	95/-	80/67
	Heating	330	93	159	28	85	31	77	72	70	High	47/43	70/-
072H1*	Cooling	383	146	166	65	55	101	77	44	-	High	95/-	80/67
	Heating	310	105	143	37	80	34	75	49	-	High	47/43	70/-
096H1*	Cooling	393	140	167	65	56	104	89	43	-	High	95/-	80/67
	Heating	305	101	142	37	82	33	74	45	-	High	47/43	70/-
120H1*	Cooling	402	131	178	61	56	103	84	54	-	High	95/-	80/67
	Heating	319	96	150	34	83	32	76	58	-	High	47/43	70/-

* This compressor is driven with a 6-pole motor. The value of the compressor frequency (rps) measured with a clamp meter at the compressor lead line is three times the rotation count (rps) of the compressor.

* Each compressor may have a different frequency as a measure against resonance.

* The temperature of the indoor heat exchanger (TC) indicates TCJ sensor temperature when cooling, and TC2 sensor temperature when heating, respectively.

(2) Criteria for operating pressure

Operating Mode	Pressure		Temperature	
	psi (MPa)		°F(°C)	
	Pd	PS	Indoor	Outdoor
Cooling	290.1 ~ 478.6 (2.0 ~ 3.3)	72.5 ~ 130.5 (0.5 ~ 0.9)	64.4 ~ 89.6 (18 ~ 32)	77 ~ 95 (25 ~ 35)
Heating	362.6 ~ 478.6 (2.5 ~ 3.3)	72.5 ~ 101.5 (0.5 ~ 0.7)	59 ~ 89.6 (15 ~ 32)	41 ~ 95 (5 ~ 35)

* Criteria after 14 minutes or more has passed since operating started

7-7. Service Support Function


7-7-1. Check Function for Connecting of Refrigerant and Control Lines

This function is provided to check misconnection of the refrigerant pipes and the control transmission line (Wiring over lines) between indoor unit and outdoor unit by using the switch on the interface P.C. board of the header unit.

However, be sure to check the following items prior to executing this check function.


- 1 This check function does not work when a group operation by remote controller is performed and it is used over outdoor units.**
- 2 When using this check system, be sure to check for each 1 line in the unit of outdoor unit. If checking the multiple lines at the same time, misjudgment may be caused.**

(Check procedure)

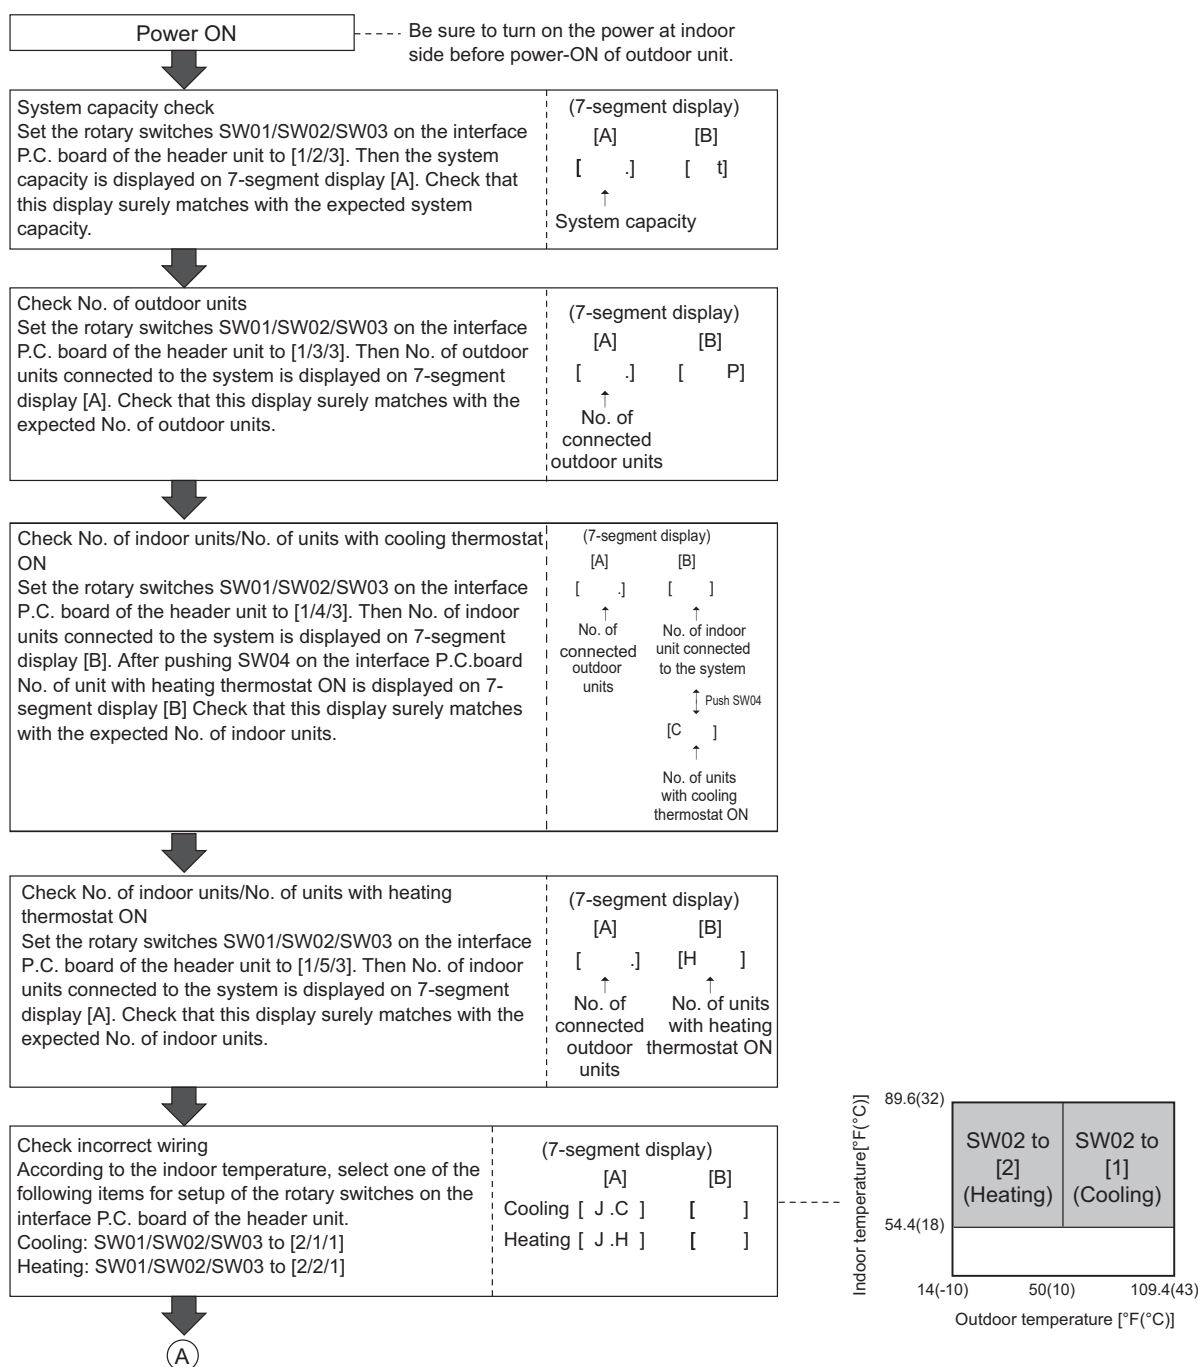


On rotations of outdoor fans

Outdoor fans may rotate slowly to control pressure when cooling with low outer air temperature or heating with excessive load. For control content, also refer to items in Section 5, “Control Outline: Outdoor Unit, Outdoor Fan Control.”

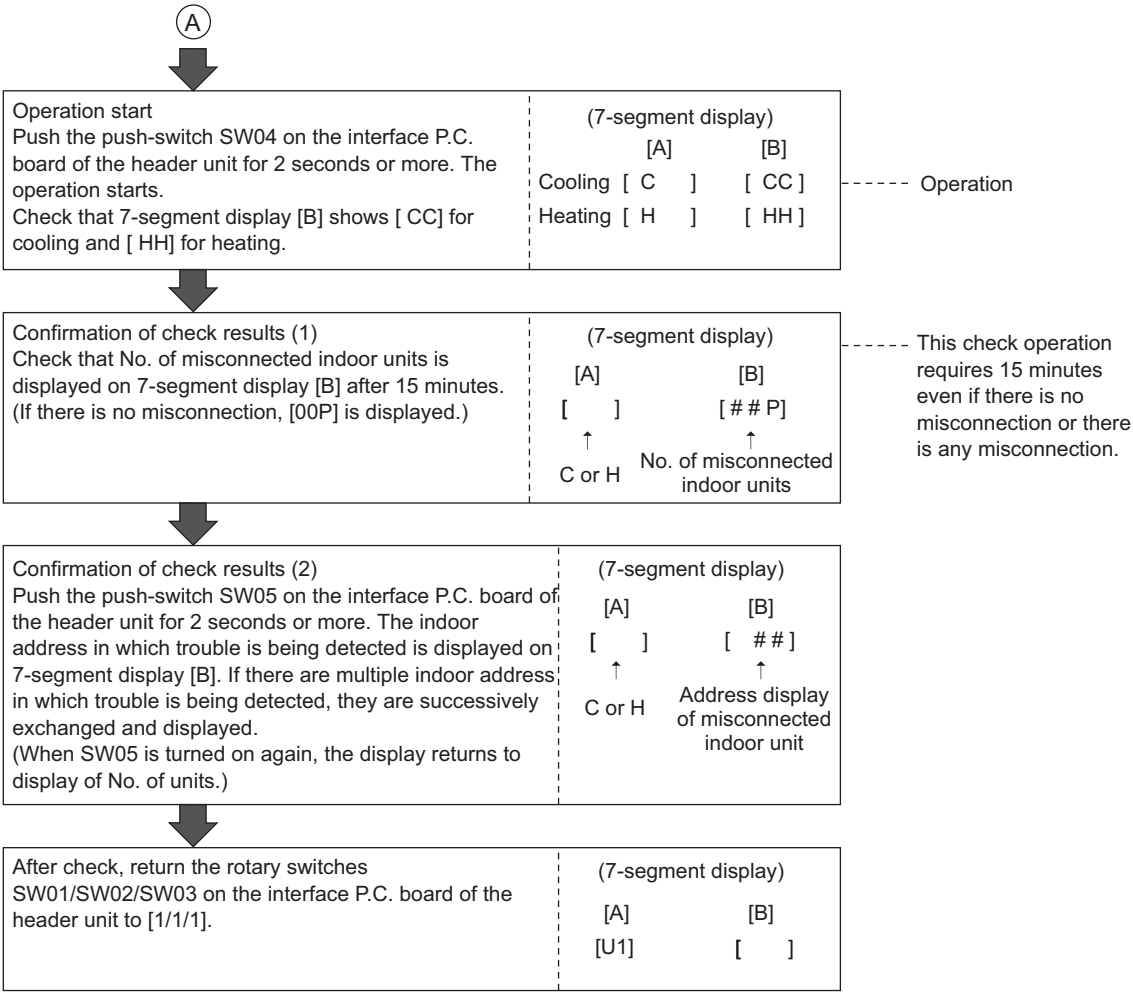

Interface P.C. board

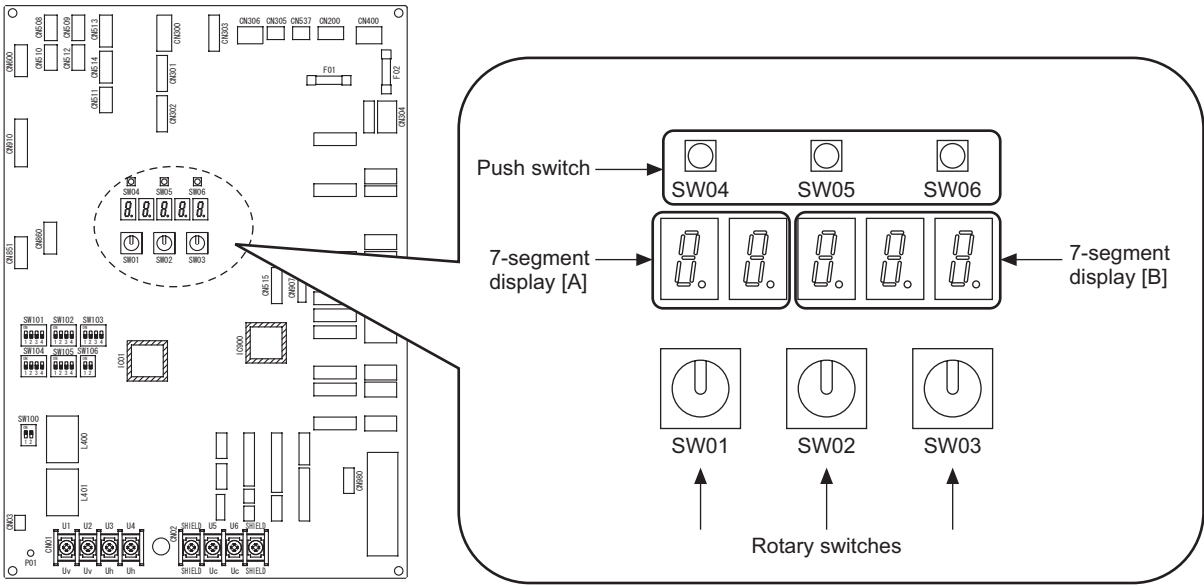

7-7-2. Function to Start/Stop (ON/OFF) Indoor Unit from Outdoor Unit


The following functions of the indoor unit can start or stop by the switches on the interface P.C. board of the header unit.

No	Function	Outline	Setup/Release	7-segment display	
1	Cooling test operation	Changes the mode of all the connected indoor units collectively to cooling test operation. Note) Control operation same as usual test operation from remote control is performed.	[Setup] Set SW01/SW02/SW03 to [2/5/1], and push SW04 for 2 seconds or more.[Release] Return SW01/SW02/SW03 to [1/1/1].	Section A [C.]	Section B [– C]
2	Heating test operation	Changes the mode of all the connected indoor units collectively to heating test operation. Note) Control operation same as usual test operation from remote control is performed.	[Setup] Set SW01/SW02/SW03 to [2/6/1], and push SW04 for 2 seconds or more.[Release] Return SW01/SW02/SW03 to [1/1/1].	Section A [H.]	Section B [– H]
3	Fan test operation	Changes operation mode of all the connected indoor units collectively to test operation mode. Note) Control operation same as usual test operation from remote control is performed.	[Setup] Set SW01/SW02/SW03 to [2/9/1], and push SW04 for 2 seconds or more.[Release] Return SW01/SW02/SW03 to [1/1/1].	Section A [F.]	Section B [– F]
4	Batch start	Starts all the connected indoor units collectively. Note) The contents follow to the setup of remote controller.	[Setup] Set SW01/SW02/SW03 to [2/7/1], and push SW04 for 2 seconds or more.[Release] Return SW01/SW02/SW03 to [1].	Section A [C.H]	Section B [11] [00] is displayed on Section B for 5 seconds.
	Batch stop	Stops all the connected indoor units collectively.	[Setup] Set SW01/SW02/SW03 to [2/7/1], and push SW05 for 2 seconds or more.[Release] Return SW01/SW02/SW03 to [1].	Section A [C.H]	Section B [00] [00] is displayed on Section B for 5 seconds.
5	Individual start	Starts the specified indoor unit. Notes) • The contents follow to the setup of remote controller. • The other indoor units keep the status as they are.	[Setup] Set SW01 to [16], set SW02 and SW03 to address No. (1 to 128) to be started, and push SW04 for 2 seconds or more.[Release] Return SW01/SW02/SW03 to [1/1/1].	Section C []	Section D [] Section C: Displays the corresponding indoor address. Section D: Displays [11] for 5 seconds from operation-ON.
	Individual stop	Stops the specified indoor unit. Note) The other indoor units keep the status as they are.	[Setup] Set SW01 to [16], set SW02 and SW03 to address No. (1 to 128) to be stopped, and push SW05 for 2 seconds or more.[Release] Return SW01/SW02/SW03 to [1/1/1].	Section C []	Section D [] Section C: Displays the corresponding indoor address. Section D: Displays [00] for 5 seconds from operation-OFF.
	Individual test operation	Operates the specified indoor unit. Note) The other indoor units keep the status as they are.	[Setup] Set SW01 to [16], set SW02 and SW03 to address No. to be operated, and push SW04 for 10 seconds or more.[Release] Return SW01/SW02/SW03 to [1/1/1].	Section C []	Section D [] Section C: Displays the corresponding indoor address. Section D: Displays [FF] for 5 seconds from test operation-ON.


(1) Cooling test operation function

This function is provided to change collectively the mode of all the indoor units connected to the same system for the cooling test operation mode, by using switches on the interface board of the header unit.

<Operation procedure>

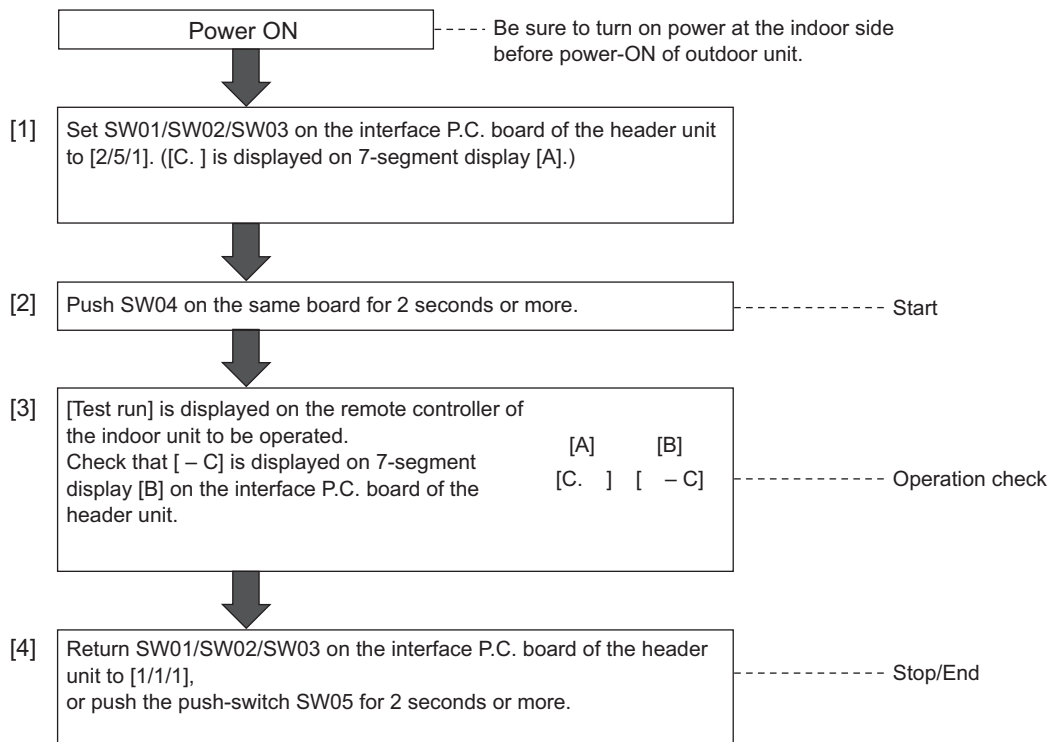

Interface P.C. board

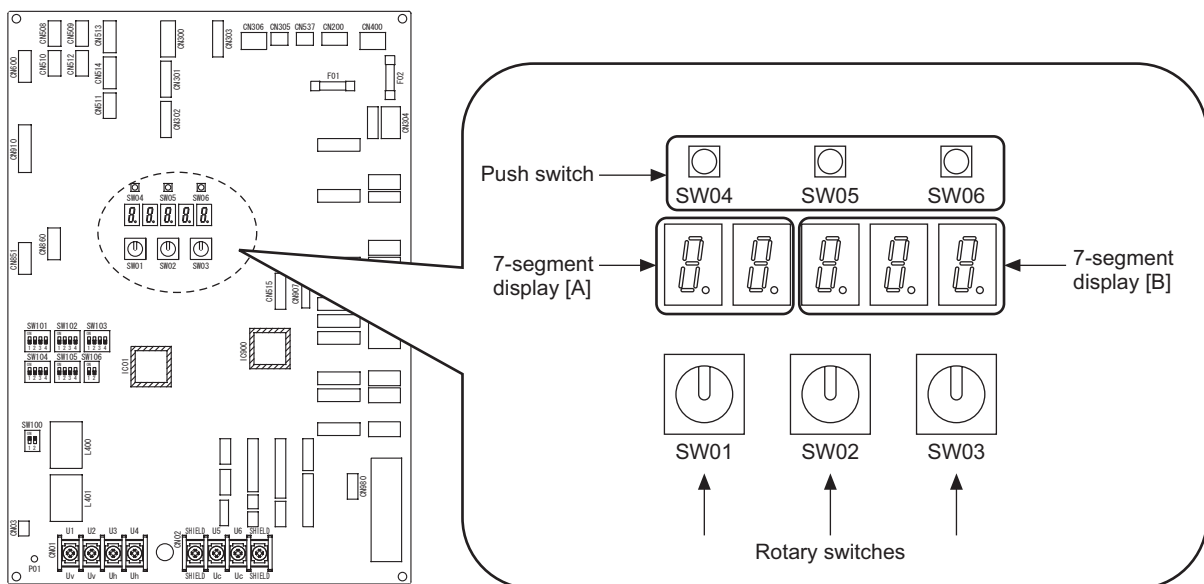



NOTE) The test operation returns to the normal operation after 60 minutes.

- The test run is a forced run that ignores the set temperature. Be sure to stop the test run after work, paying attention to the room temperature.
 - After 60 minutes, the test run will be completed to protect the equipment, and the normal operation will be started according to the set temperature.
- However, if there is no remote controller (using a Central controller), please manually stop the test run after 60 minutes because there are some type of indoor unit that will continue operating test run even after 60 minutes.

(2) Heating test operation function

This function is provided to change collectively the mode of all the indoor units connected to the same system for the heating test operation mode, by using switches on the interface board of the header unit.

<Operation procedure>

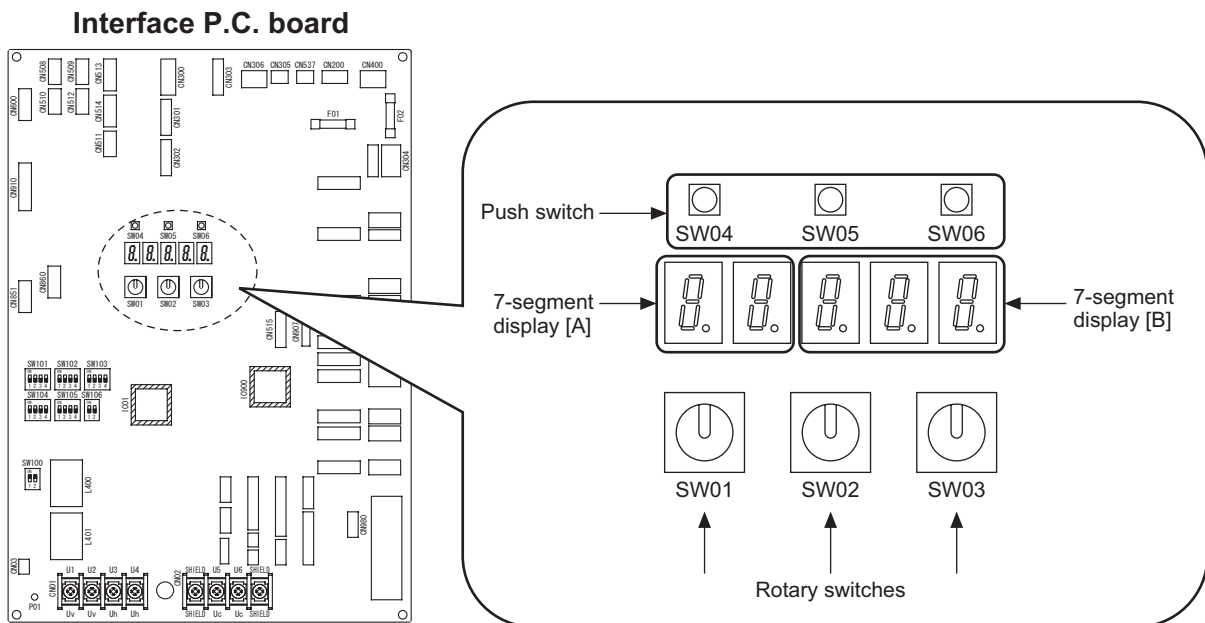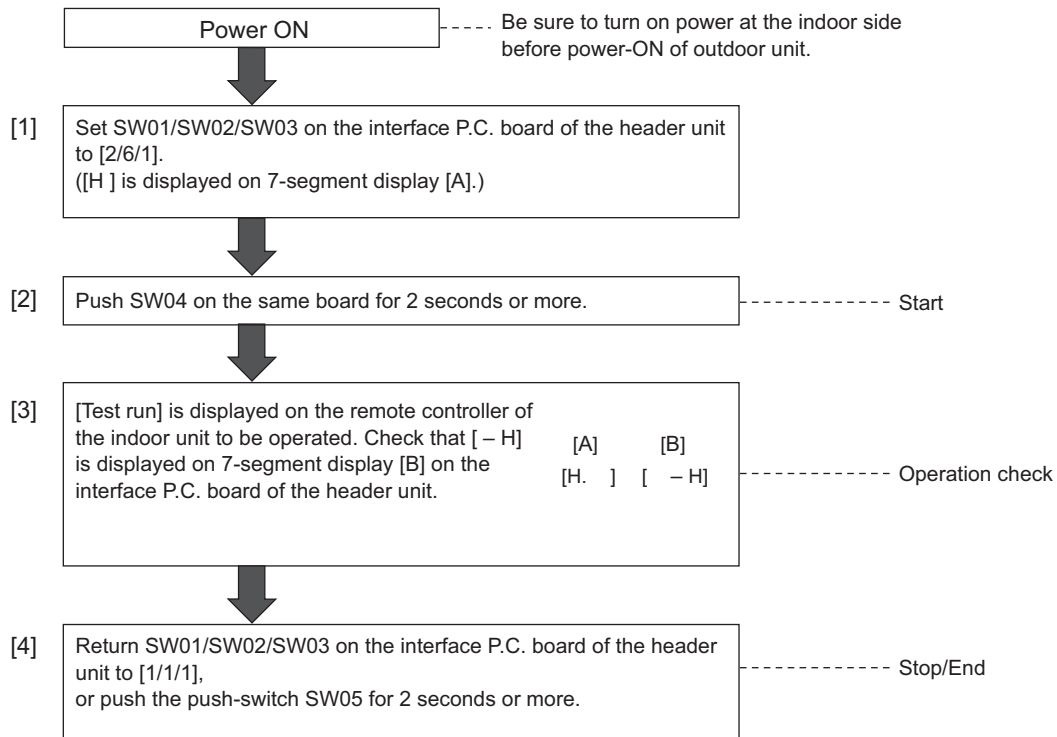


NOTE) The test operation returns to the normal operation after 60 minutes.

- The test run is a forced run that ignores the set temperature. Be sure to stop the test run after work, paying attention to the room temperature.
 - After 60 minutes, the test run will be completed to protect the equipment, and the normal operation will be started according to the set temperature.
- However, if there is no remote controller (using a Central controller), please manually stop the test run after 60 minutes because there are some type of indoor unit that will continue operating test run even after 60 minutes.


(3) Fan test operation function

This function is provided to change collectively the mode of all the indoor units connected to the same system for the fan test operation mode by using switches on the interface P.C. board of the header unit.

<Operation procedure>

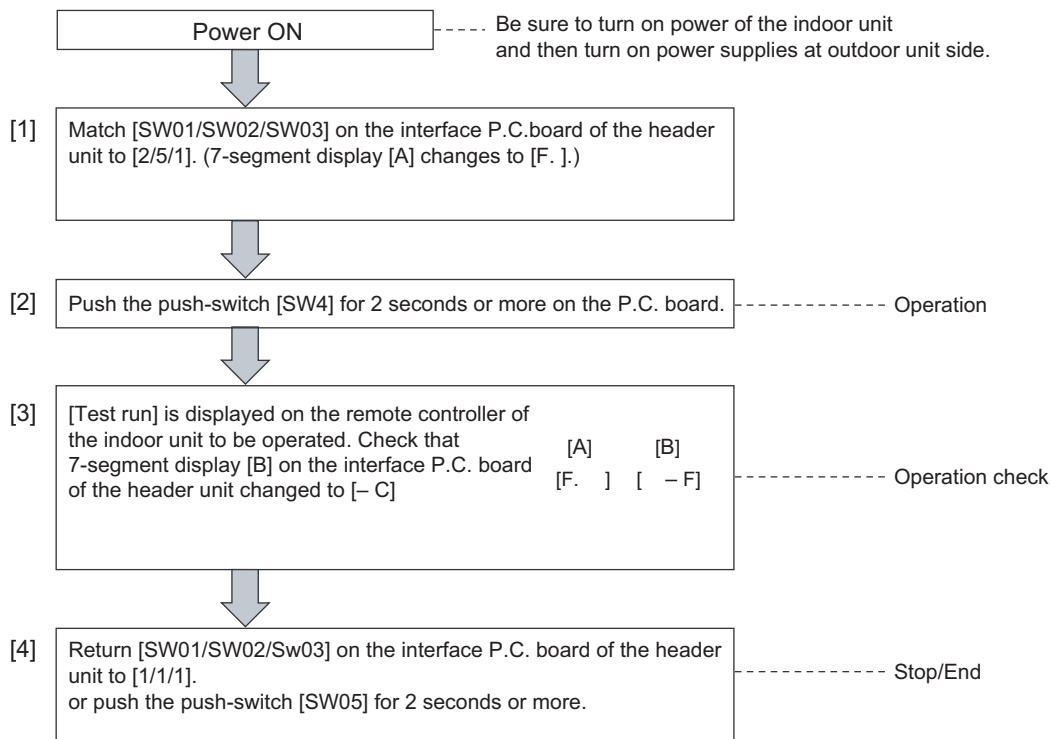

Interface P.C. board

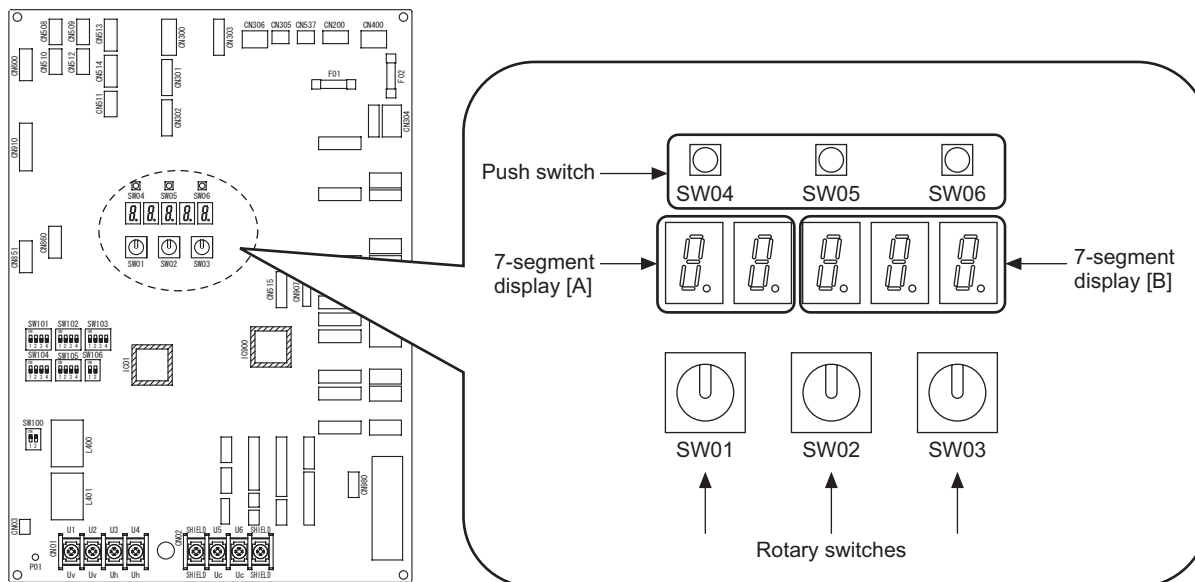


NOTE)

- The test run is a forced run that ignores the set temperature. Be sure to stop the test run after work, paying attention to the room temperature.
- After 60 minutes, the test run will be completed to protect the equipment, and the normal operation will be started according to the set temperature. However, if there is no remote controller (using a Central controller), please manually stop the test run after 60 minutes because there are some type of indoor unit that will continue operating test run even after 60 minutes.


(4) Batch start/stop (ON/OFF) function

This function is provided to start/stop collectively all the indoor units connected to the same system by using switches on the interface board of the header unit.

<Operation procedure>

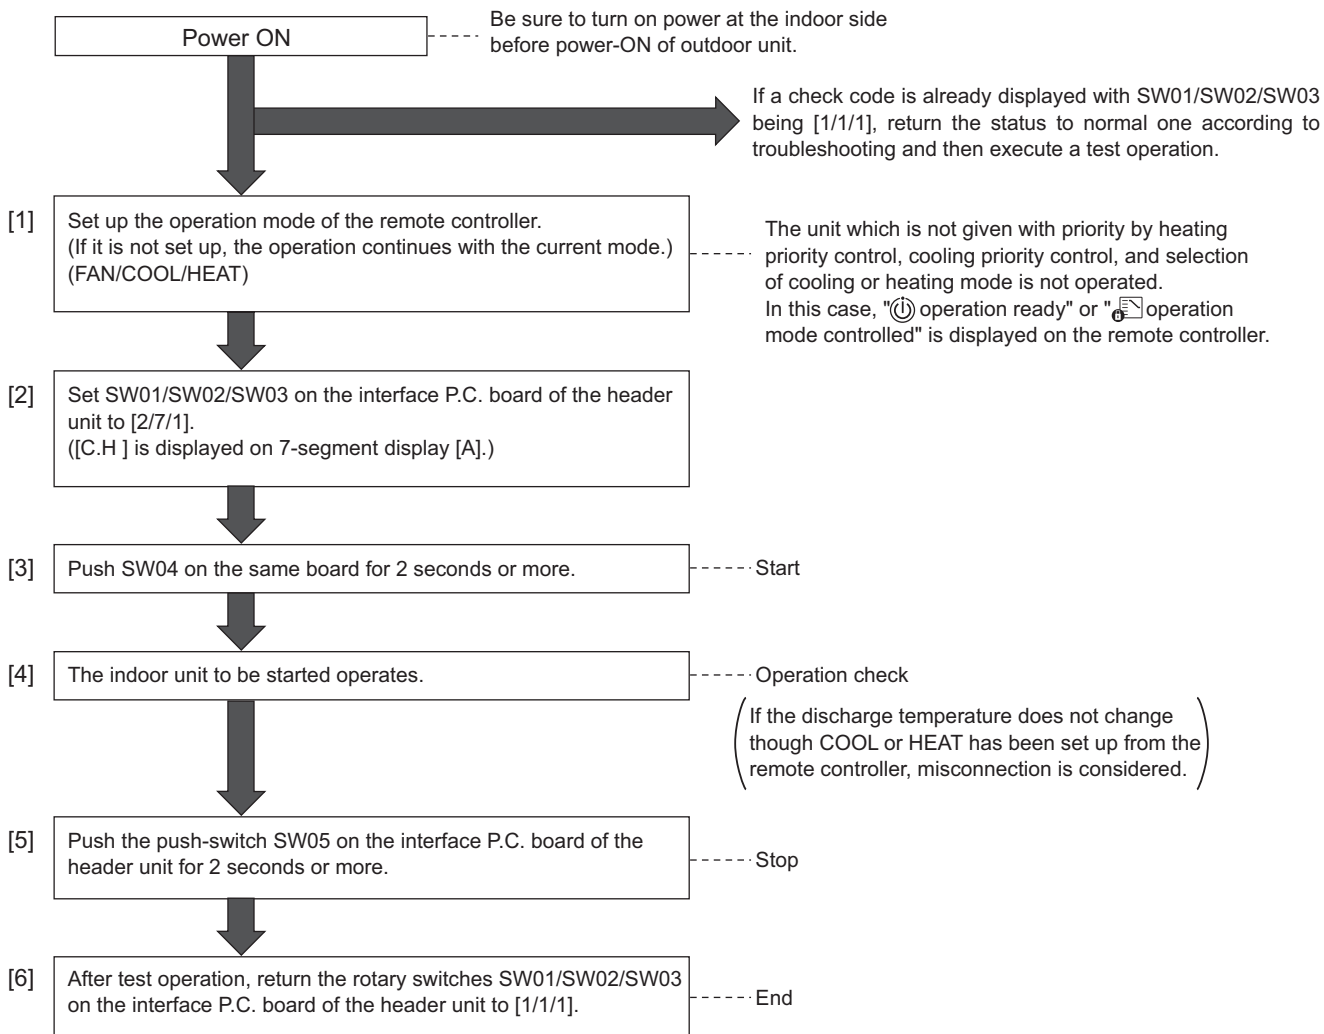

Interface P.C. board

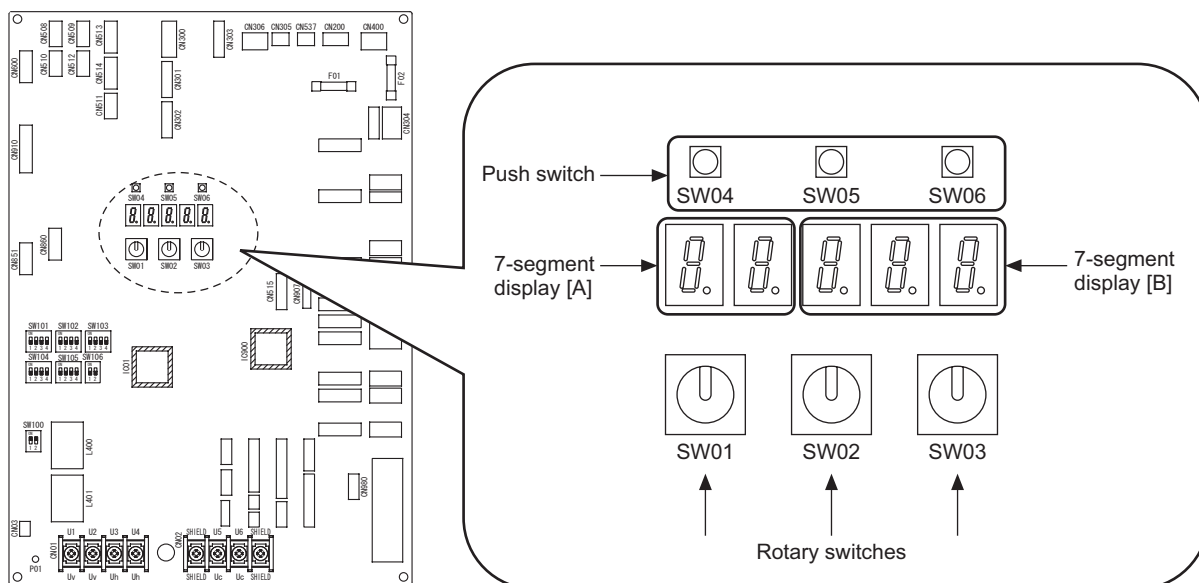


(5) Individual start/stop (ON/OFF) individual test operation function

This function is provided to start/stop (ON/OFF) individually each indoor unit connected to the same system by using switches on the interface board of the header unit.

Set SW01 [16] and set SW02, SW03 to indoor address No. (1 to 128) to be started (Refer to the following table*) - only the setup indoor unit starts operation.

(In the rotary switches of the indoor unit which operates in a group by the remote controller, the follower unit cannot be individually started or stopped. In this case, [- -] is displayed on 7-segment display [D] on the interface P.C. board of the header unit.)

<Operation procedure>

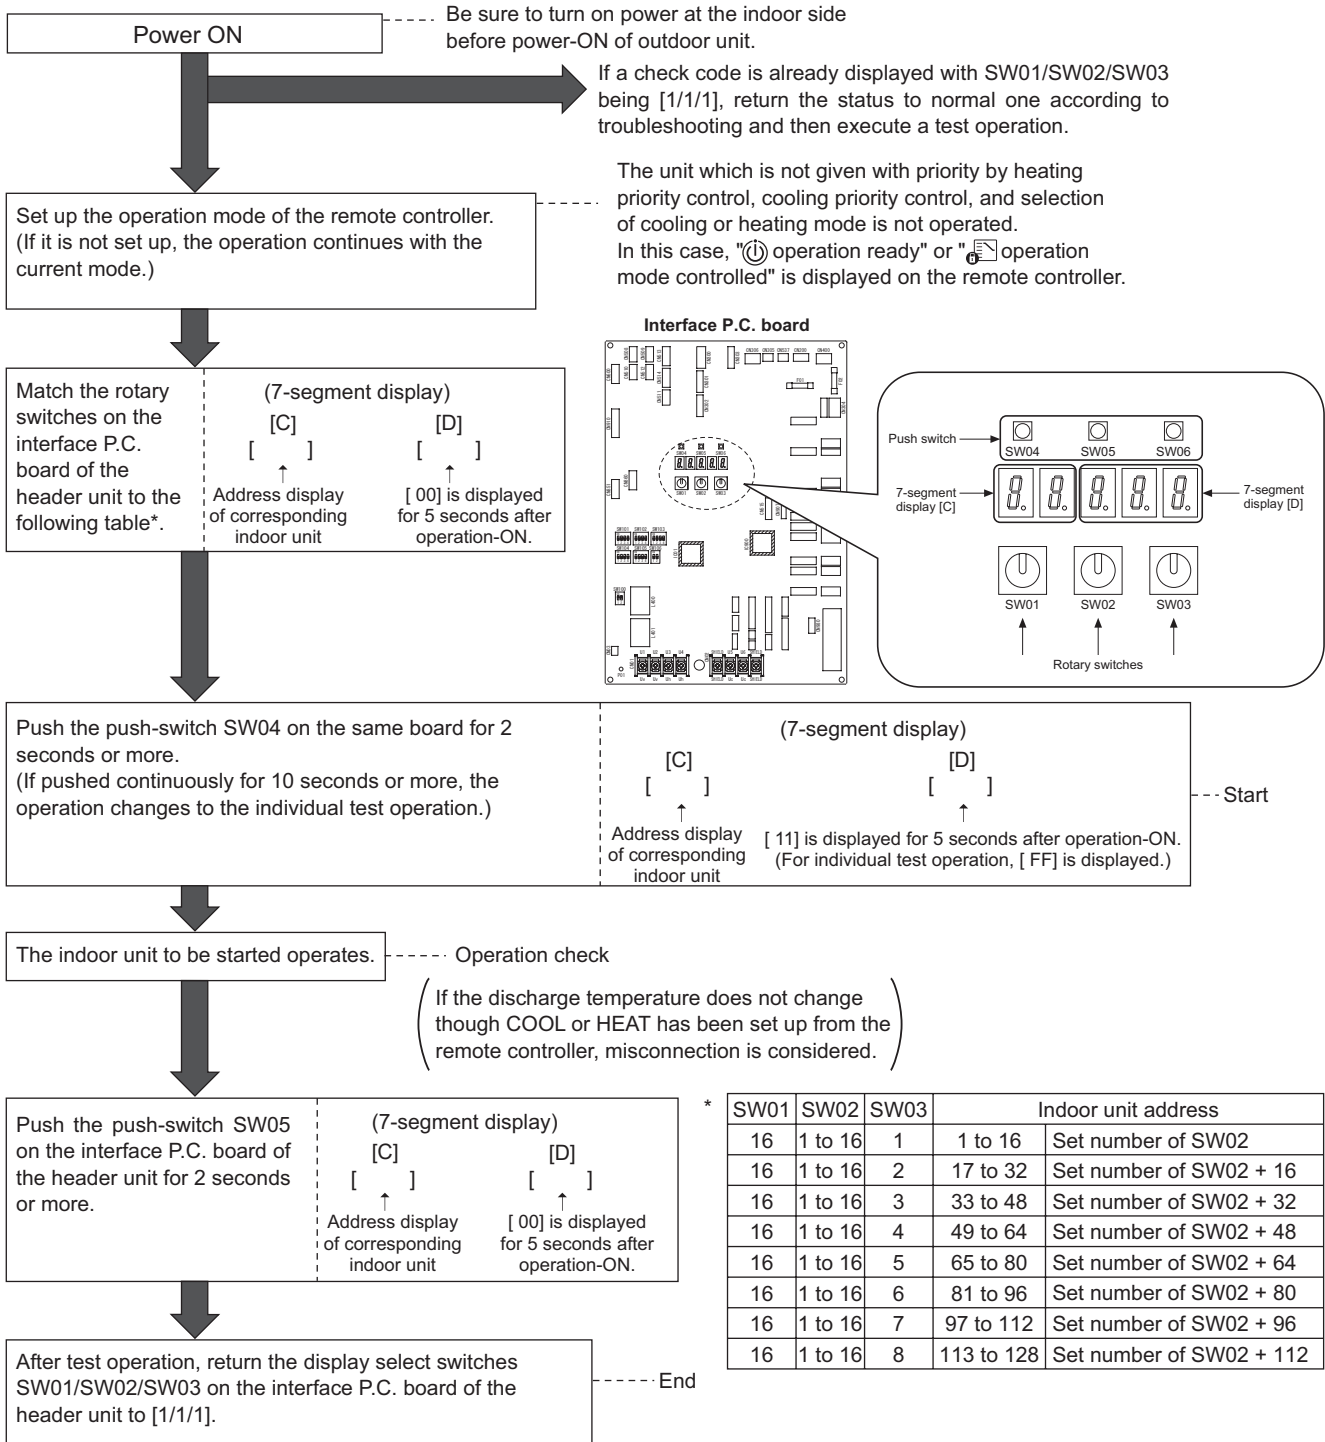

NOTE) The individual test operation returns to the normal operation after 60 minutes.


- The test run is a forced run that ignores the set temperature. Be sure to stop the test run after work, paying attention to the room temperature.
- After 60 minutes, the test run will be completed to protect the equipment, and the normal operation will be started according to the set temperature.
However, if there is no remote controller (using a central controller), please manually stop the test run after 60 minutes because there are some type of indoor unit that will continue operating test run even after 60 minutes.

7-7-3. Check Code Clearing Function

(1) Clearing from the main remote controller

<RBC-AWSU**>

- ▼ Clearing a check code of the outdoor unit
There is no such function in the remote controller.

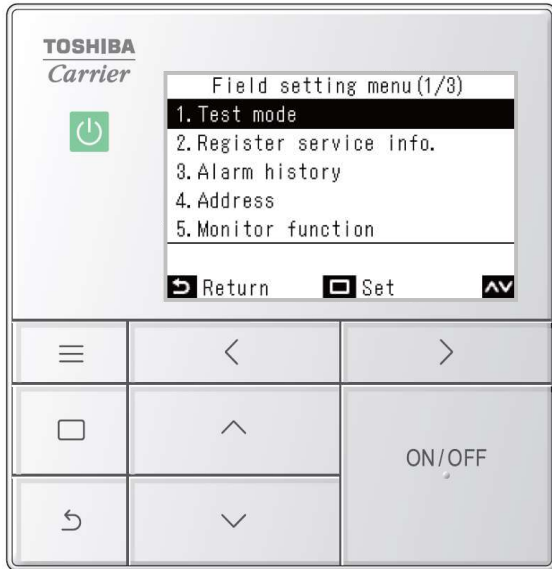

Monitor function	
Code	Data
FF	0005



Return AV


- 1 Push the [Menu] button to display the menu screen
- 2 Push and hold the [Menu] button and the [] button at the same time to display the "Field setting menu".
→Push and hold the buttons for more than 4 seconds
- 3 Push the [] / [] button to select "4. Monitor function" on the "Field setting menu" screen, then push the " Set" [Set / Fix] button.
- 4 Push the [] / [] button set Code No. to "FF"
- 5 The Data is counted with interval of 5 seconds as
"0005" → "0004" → "0003" → "0002" → "0001" → "0000"
When the count arrives "0000" , the outdoor unit check code is cleared.
- 6 Push the " Return" [Return] button to return to the "Field setting menu" screen.

(2) Clearing check code by using switches on the interface board of the header unit

Using the switches on the interface P.C. board of the header unit, this function is to clear the currently detected check code for each refrigerant circuit system without resetting the power supply.

Check codes in both outdoor and indoor units are once cleared, and check code detection is performed again.

- | | |
|--|---|
| <p>[1] Set the rotary switches on the interface P.C. board of the header unit as follows.
Set SW01/SW02/SW03 to [2/16/1]</p> | <p>7-segment display
[A] [B]
[E r][]</p> |
|  | |
| <p>[2] Push the push-switch SW04 on the same board for 5 seconds or more.</p> | |
|  | |
| <p>[3] [C L] is displayed in 7-segment display [B] on the board (for 5 seconds), and check code is completely cleared.</p> | <p>7-segment display
[A] [B]
[E r][C L]</p> |

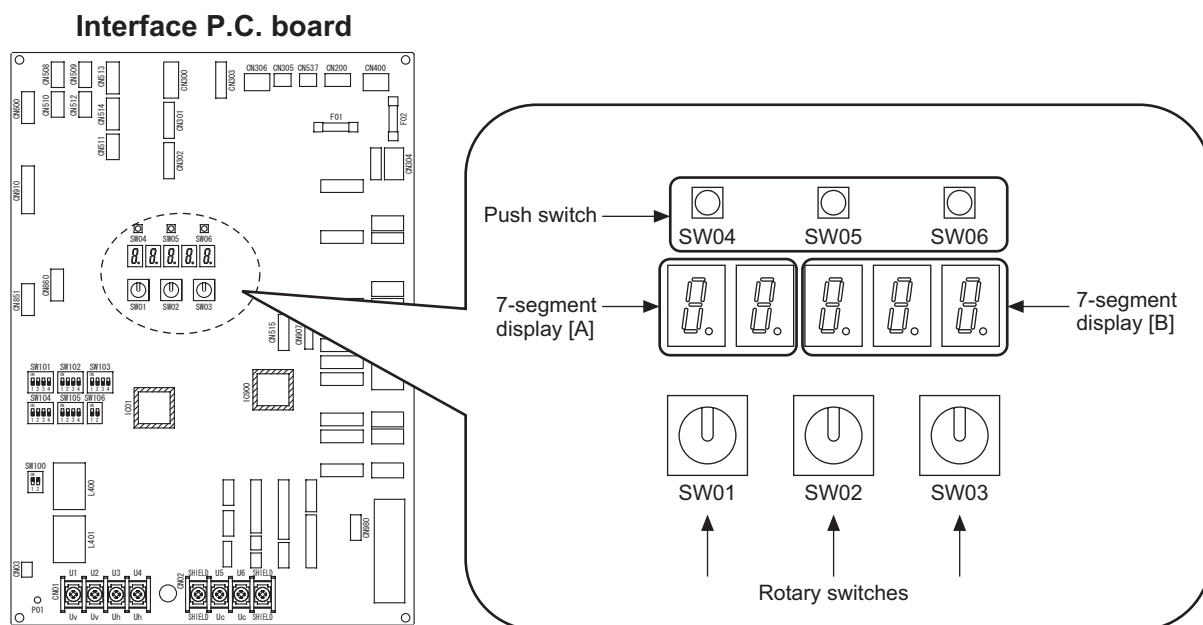

(3) Clearing check code by resetting power

This function is provided to clear check code in a system by resetting the power of all the outdoor and the indoor units. As same as the clearing method by the interface P.C. board, check codes of both the outdoor and the indoor units are once cleared, and check code detection is performed again.



<Method>

- (1) Be sure to reset power of both the outdoor and the indoor units.
- (2) Turn on the power of the indoor unit prior to the power of the outdoor unit.
(If the power is turned on in reverse order, a check code [E19] (No. of header unit trouble) is output.)

NOTE) After power reset, it requires usually 3 minutes to power-on due to the initial communication of the system. In some cases, it requires max. 10 minutes.

7-7-4. Remote Controller Distinction Function

This function is provided to distinguish the remote controller connected to the indoor unit from the outdoor unit for a refrigerant circuit system by using switches on the interface P.C. board of the header unit.
<Distinction procedure>

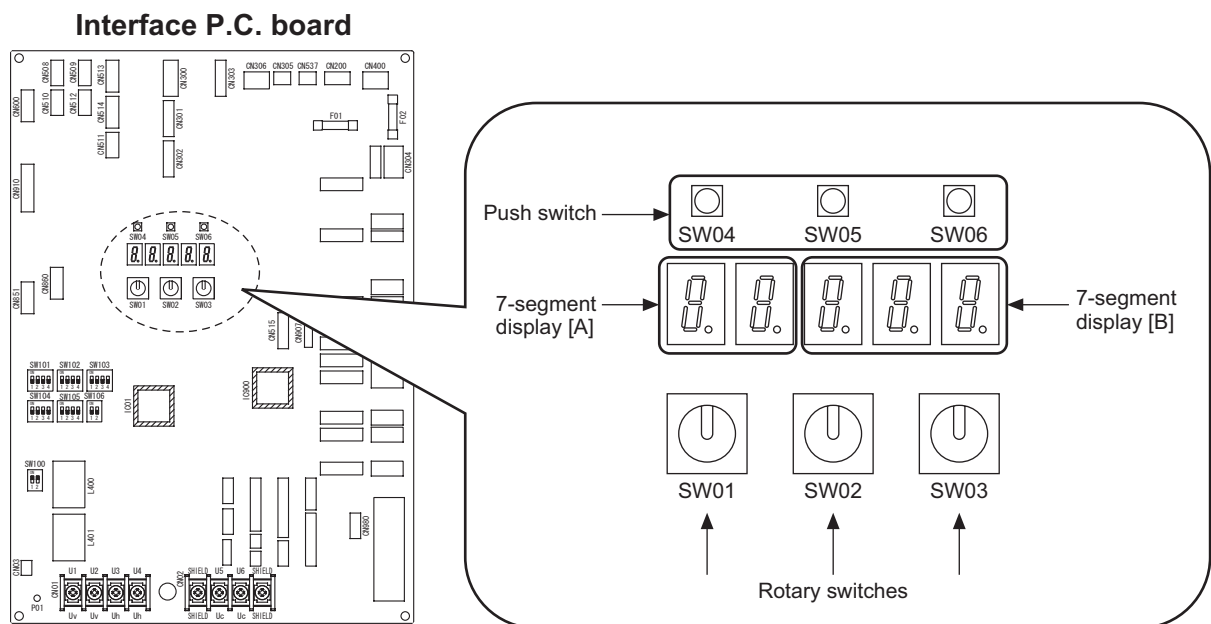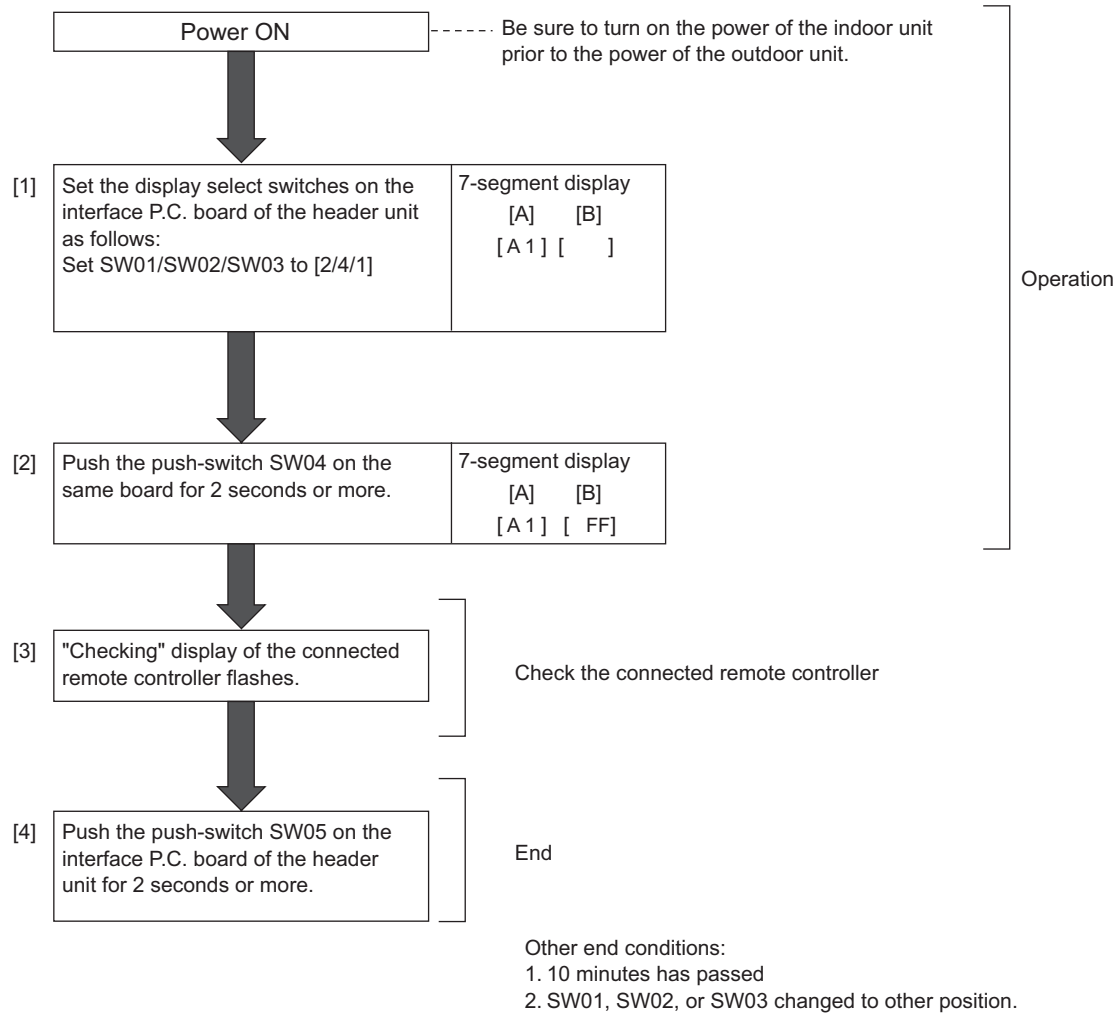

7-7-5. Pulse Motor Valve (PMV) Forced Open/Close Function in Indoor Unit

This function is provided to open or close forcedly PMV for 2 minutes in all the indoor units by the switch operation on the interface P.C. board of the header unit.

This function is also used to open PMV fully when turning off the power and executing an operation.

<Operation>

[Open fully]

Set the switches SW01/SW02/SW03 on the interface P.C. board of the header unit to [2/3/1], and push SW04 for 2 seconds or more.

(Display appears on 7-segment display for 2 minutes as follows.) [P] [FF]

[Close fully]

Set the switches SW01/SW02/SW03 on the interface P.C. board of the header unit to [2/3/1], and push SW05 for 2 seconds or more.

(Display appears on 7-segment display for one minute as follows.) [P] [00]

[Clear]

After 2 minutes (1 minutes for “Close fully”) after setting up, the opening automatically returns to the normal opening.

7-7-6. Pulse Motor Valve (PMV) Forced Open/Close Function and Solenoid valve Forced ON

Function in Outdoor Unit

The solenoid valves provided to outdoor units can be forced ON (open) by switching operations at the interface P.C. board of the outdoor unit.

Also, the pulse motor valves (PMV1, PMV2, PMV3, PMV4) of the outdoor unit can be forced to full-open, half open, and full-closed for two minutes.


Use this function to check for valve or PMV malfunctioning, clogging, and so forth.

[Control start method]


- Set the rotary switches [SW01/SW02/SW03] on the interface P.C. board of the outdoor unit to [2/1/3].
When [H.r] is displayed, push the push-switch [SW04] for one second or longer, which changes the display to [H. r -- --], and this control is started.

[Method to switch solenoid valve/PMV display]

- Solenoid valve display is made immediately after starting control.
The 7-segment display is [H. r -- --].
- Pushing the push-switch [SW06] switches the display to [P. *], which is PMV display.
Each time the push-switch [SW06] is pushed, the display changes between solenoid valve display and pulse motor valve (PMV) display.



- Follow the method below for solenoid valve and PMV operations.
* Take care, as operations of each of the solenoid valve and PMV are enabled, regardless of which is displayed.

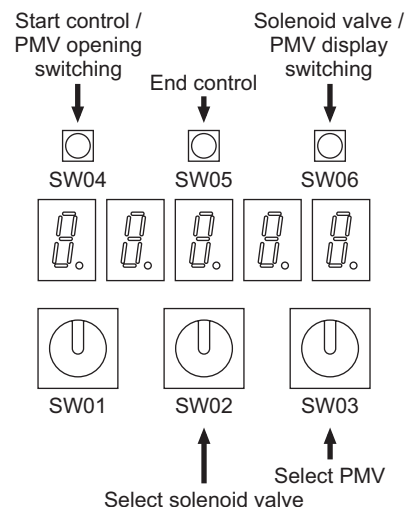

[Method of operating solenoid valve (forced ON)]

- Set the rotary switch [SW02] to 2, and five seconds later SV41 will come ON. [H.r 41] will be displayed in the 7-segment display in the solenoid valve display screen.
- Any desired solenoid valve can be forced ON by changing the setting No. of the rotary switch [SW02].
The following table shows the forced-ON/normal control patterns for each solenoid valve.

Rotary switch			7-segment display (solenoid valve display)	Operation patterns of solenoid valve/heater (✓ Forced ON, - : normal control)						
SW01	SW01	SW01		SV41	SV42	SV3D	SV3F	SV2	SV7	Compressor 1, 2 case heater
2	1	# Used in PMV operations	[H.r -- --]	-	-	-	-	-	-	✓
	2		[H.r 4 1]	✓	-	-	-	-	-	✓
	3		[H.r 4 2]	-	✓	-	-	-	-	✓
	4		[H.r 3 D]	-	-	✓	-	-	-	✓
	5		[H.r 3 F]	-	-	-	✓	-	-	✓
	6		[H.r 3 -]	-	-	✓	✓	-	-	✓
	8		[H.r 2 -]	-	-	-	-	✓	-	✓
	9 ~ 15		[H.r -- --]	-	-	-	-	-	-	✓
	16		[H.r A L L]	✓	✓	✓	✓	✓	✓	✓

7-7-7. Pulse Motor Valve (PMV) Forced Open/Close Function in FS unit.

The pulse motor valves (PMV-D, PMV-S) of the FS unit can be forced to full-open and full-closed for 30 minutes. Use this function to check for PMV malfunctioning, clogging, miss connection, and so forth.

[Control start method]

- (1) Set SW01 [11] and set SW02, SW03 to indoor address No. (1 to 128) to be started (Refer to the following table*)
- only the FS unit connecting to the setup indoor unit starts operation.
[F S. on] is displayed for two seconds.

SW02	SW03	Indoor unit address	
1 to 16	1	1 to 16	Set number of SW02
1 to 16	2	17 to 32	Set number of SW02+16
1 to 16	3	33 to 48	Set number of SW02+32
1 to 16	4	49 to 64	Set number of SW02+48

[Method to switch PMV display]

- (1) PMV-S display is made immediately after starting control.
 - (2) Each time the push switch [SW04] is pressed for one second or more., the display changes PMV-L display, PMV-S display and PMV-D display.
 - PMV-S
The 7-segment display is [P S.***] ⇔ [P S. ...o P] or [P S. ... c L].
 - PMV-D
The 7-segment display is [P d.***] ⇔ [P d. ...o P] or [P d. ... c L].
- (0.5) second period) ※ *** : indoor unit address No.

oP	PMV full-open
cL	PMV full-close

- (3) Follow the method below for PMV operations.


[Method of operating pulse motor valve (PMV) (forced open/close)]

- (1) When [P#.] is displayed on the PMV display, PMV# is operating according to normal control.
(#: selected PMV-S, or PMV-D)
- (2) Pressing the push switch [SW05] for one second sets the selected PMV# to full-open.
The PMV display will be [P #. * P #. ⇔ [P #. ... o P] . (0.5 second period)
- (3) Pressing the push switch [SW06] for one second sets the selected PMV# to full-close.
The PMV display will be [P #. * P #. ⇔ [P #. ... o P] . (0.5 second period)
- (4) The PMV opening returns to normal control after 30 minutes elapses from changing the opening
- (5) To operate a different PMV, select with the rotary switch [SW03], [SW02], and the push switch [SW04], and operate the opening with the push switch [SW05] and the closing with the push switch [SW06].
Even when [SW02], [SW03] and [SW04] is switched, the PMV opening operated immediately before remains effective, PMV openings can be operated in parallel.

[Cancellation method]

To cancel (end) control of this function, perform one of the following methods. The pulse motor valve (PMV) will return to normal control.

- Set the rotary switch [SW01] to other than [11].

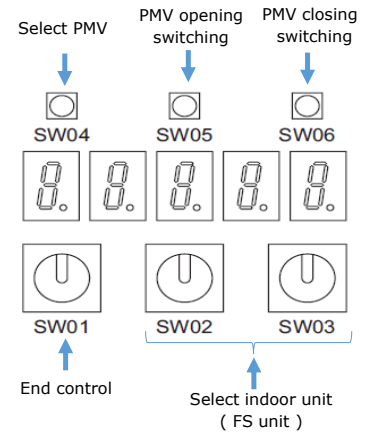

[Method of operating pulse motor valve (PMV) (forced open/close)]

(1) Use the rotary switch [SW03] to select the PMV to operate.

When [P#.] is displayed in the PMV display, PMV# is operating according to normal control.

(#: selected PMV No.)

(2) Pushing the push-switch [SW04] for one second sets the selected PMV# to full-open.

The PMV display will be [P# . F o].

Each time the push-switch [SW04] is pushed again for one second, the opening changes in the order of full open [P# . F o] → half-open [P# . C o] → full-closed [P# . F c] → normal cont [P# .] → full-open [P# . F o] → ... , and so on.

(3) The PMV opening returns to normal control after two minutes elapses from changing the opening.

(Operation method example) Operation of PMV 1

Rotary switch			Push switch	7-segment display (pulse motor valve (PMV) display)	Opening	
SW01	SW02	SW03	SW04 (Change PMV opening)			
2	* Used in solenoid valve selection	3	Long push 1 second	[P1.]	PMV1 Normal control	
			Long push 1 second	[P1.F o]	PMV1 Full-open	
			Long push 1 second	[P1.C o]	PMV1 Half-open	
			Long push 1 second	[P1.F c]	PMV1 Full-closed	

(4) To operate a different PMV, select with the rotary switch [SW03], and operate the opening with the push-switch [SW04].

Even when [SW03] is switched, the PMV opening operated immediately before remains effective, so up to four PMV openings can be operated in parallel.

Rotary switch			Push switch	7-segment display (pulse motor valve (PMV) display)	Opening
SW01	SW02	SW03	SW04		
2	* Used in solenoid valve selection	3	Long push 1 second to change opening	[P1.]	PMV1 Normal control
				[P1.F o]	PMV1 Full-open
				[P1.C o]	PMV1 Half-open
				[P1.F c]	PMV1 Full-closed
		4	Long push 1 second to change opening	[P2.]	PMV2 Normal control
				[P2.F o]	PMV2 Full-open
				[P2.C o]	PMV2 Half-open
				[P2.F c]	PMV2 Full-closed
		5	Long push 1 second to change opening	[P3.]	PMV3 Normal control
				[P3.F o]	PMV3 Full-open
				[P3.C o]	PMV3 Half-open
				[P3.F c]	PMV3 Full-closed
		6	Long push 1 second to change opening	[P4.]	PMV4 Normal control
				[P4.F o]	PMV4 Full-open
				[P4.C o]	PMV4 Half-open
				[P4.F c]	PMV4 Full-closed

[Cancellation method]

To cancel (end) control of this function, perform one of the following methods. The solenoid valve and pulse motor valve (PMV) will return to normal control.

- Push the push-switch [SW05] for one second or longer.
- Set the rotary switch [SW01] to other than [2].

7-7-8. Fan Operation Check in Outdoor Unit

This function is provided to check the fan operation of the outdoor unit by using switches on the interface P.C. board in the outdoor unit. The fan speed can be controlled by setting of the switches. Use this function to check the operation or abnormal sound in the fan system. And, use this function while the system is stopped.

NOTE) Do not use this function during operation of the compressor. It may damage the compressor.
Two fans move synchronously in two fan model .

[Operation]

- (1) Set the switches SW01/SW02/SW03 on the interface P.C. board of the outdoor unit to [2/1/4].
- (2) When [F. d] is displayed in 7-segment display [A], keep pushing the switch SW04 for 2 seconds or more.
- (3) When [63] is displayed in 7-segment display [B], the fan starts operation. (Max. mode operation)
- (4) After that, by changing the setup number of the switches SW02 and SW03, 7-segment display [B] and the fan mode are changed.
(Mode output pattern of the fan is as follows.)

SW02	SW03	7-segment display [B]	Fan mode
1	4	[63]	63
2		[62]	62
3		[61]	61
4		[60]	60
5		[59]	59
6		[58]	58
7		[57]	57
8		[56]	56
9		[55]	55
10		[54]	54
11		[53]	53
12		[52]	52
13		[51]	51
14		[50]	50
15		[49]	49
16		[48]	48
1	5	[47]	47
2		[46]	46
3		[45]	45
4		[44]	44
5		[43]	43
6		[42]	42
7		[41]	41
8		[40]	40
9		[39]	39
10		[38]	38
11		[37]	37
12		[36]	36
13		[35]	35
14		[34]	34
15		[33]	33
16		[32]	32

SW02	SW03	7-segment display [B]	Fan mode
1	6	[31]	31
2		[30]	30
3		[29]	29
4		[28]	28
5		[27]	27
6		[26]	26
7		[25]	25
8		[24]	24
9		[23]	23
10		[22]	22
11		[21]	21
12		[20]	20
13		[19]	19
14		[18]	18
15		[17]	17
16		[16]	16
1	7	[15]	15
2		[14]	14
3		[13]	13
4		[12]	12
5		[11]	11
6		[10]	10
7		[9]	9
8		[8]	8
9		[7]	7
10		[6]	6
11		[5]	5
12		[4]	4
13		[3]	3
14		[2]	2
15		[1]	1
16		[0]	0

[Clear]

This function is cleared by one of the following operations.

- (1) When SW01 setting number was changed to other number.
- (2) Push-switch SW05 was pushed for 2 seconds or more.

7-7-9. Abnormal Outdoor Unit Discrimination Method By Fan Operating Function


This function is provided to forcibly operate the fan of the outdoor unit in which a check code occurred or the fan of the normal outdoor unit by the switch operation on the interface P.C. board in the header unit. To specify which one of the follower units connected to the system had problem, use this function for the system stop due to a follower unit problem (Check code [E28]).

[Operation]

<In case to operate the fan in the failed outdoor unit only>

(1) Check that the switches SW01/SW02/SW03 on the interface P.C. board in the header unit are set to [1/1/1].

7-segment display

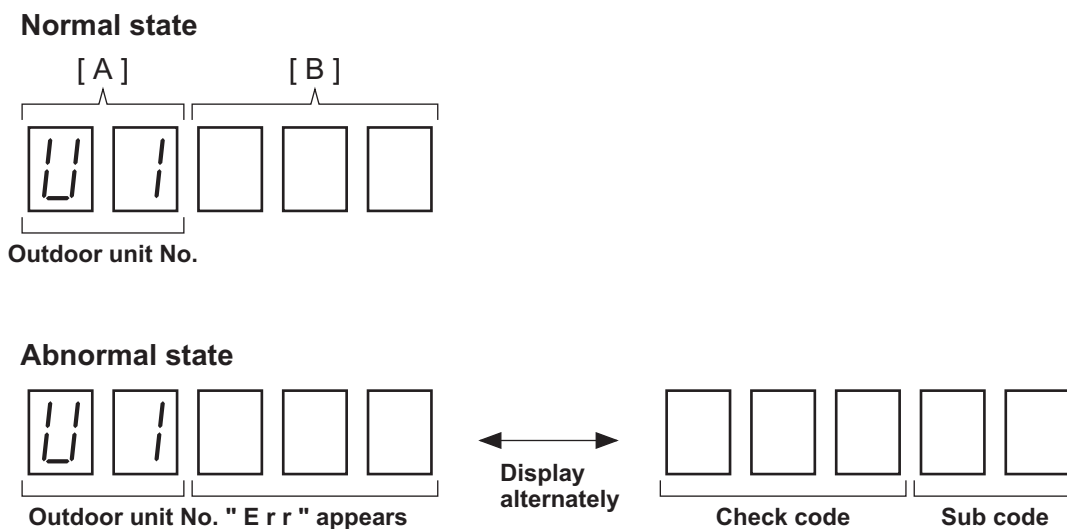

(2) Push the push-switch SW04 for 2 seconds or more.

(3) [E 1] is displayed on 7-segment display [A].

(4) The fan of the outdoor unit in which problem occurred starts operation within approx. 10 seconds after [E 1] was displayed.

<In case to operate the fans in all the normal outdoor units>

(1) Check that the switches SW01/SW02/SW03 on the interface P.C. board in the header unit are set to [1/1/1].

(2) Push the push-switches SW04 and SW05 at the same time for 2 seconds or more.

(3) [E 0] is displayed on 7-segment display [A].

(4) The fans of all the normal outdoor units start operation with the Max. fan speed within approx. 10 seconds after [E 0] was displayed.

[Release]

Push the push-switch SW05 on the interface P.C. board in the header unit for 2 seconds or more.

The outdoor fan which was operated stops.

* Check that [U. 1] is displayed on 7-segment display [A], and then finish the work.

7-7-10. Manual Adjustment Function of Outside Temperature (TO) Sensor

This function is provided to fix TO sensor value manually by the switch operation on the interface P.C. board in the outdoor unit. When the unit stops abnormally due to TO sensor failure, etc, an emergent operation is available by setting up the value manually to position near the current outside temperature.

[Operation]

- (1) Set the rotary switches on the interface P.C. board to numbers as follows:
 - SW01/SW02/SW03 to [2/1/15]
 - 7-segment display: [t o]
- (2) Keep pushing the push-switch SW04 on the interface P.C. board for 1 second or more. The mode changes to the TO sensor value fix manual mode.
- (3) Pushing the push-switch SW04 increases the setting temperature and pushing the SW05 decreases the setting temperature. Set the temperature to any values.

[Clear]

Return SW01/SW02/SW03 on the interface P.C. board in the outdoor unit to [1/1/1].

NOTE) If operated with TO sensor fixed by this function, the system control operation of the air conditioner may not be based on the specification of the product. Therefore an emergent operation should be restricted to a day or so.

When the outside temperature is 113°F(45°C) or more, set to 113°F(45°C) (SW02="9")

<Service support function list>

SW01	SW02	SW03	7-segment display [A]	Function contents
2	1	1	[J . C]	Refrigerant circuit and control communication line check function (Cooling operation)
	2		[J . H]	Refrigerant circuit and control communication line check function (Heating operation)
	3		[P .]	Indoor PMV forced full open function
	4		[A . 1]	Indoor remote controller discriminating function
	5		[C .]	Cooling test operation function
	6		[H .]	Heating test operation function
	7		[C . H]	Indoor collective start/stop (ON/OFF) function
	9		[F .]	Fan test operation function
	11		[r . d]	Outdoor refrigerant recovery operation function (Reclaim function)
	16		[E . r]	Check code clear function

2	1~16	3	[H . r]	Solenoid valve forced open/close function
2	1~16	4~7	[F . d]	Fan forced operation function
2	1~16	15	[t . o]	Outside temperature sensor manual adjustment function

16	1 to 16	1	[01] to [16]	Indoor No. 1 to 16	Set number of SW02
		2	[17] to [32]	Indoor No. 17 to 32	Set number of SW02 + 16
		3	[33] to [48]	Indoor No. 33 to 48	Set number of SW02 + 32
		4	[49] to [64]	Indoor No. 49 to 64	Set number of SW02 + 48
		5	[65] to [80]	Indoor No. 65 to 80	Set number of SW02 + 64
		6	[81] to [96]	Indoor No. 81 to 96	Set number of SW02 + 80
		7	[97] to [112]	Indoor No. 97 to 112	Set number of SW02 + 96
		8	[113] to [128]	Indoor No. 113 to 128	Set number of SW02 + 112

SW01	SW02	SW03	7-segment display [A/B]	Function contents
1	1	1	[U 1] [E28]	Follower unit check code / Corresponding unit fan operation function

7-7-11. Confirmation of the check code (L02, L11, L13, L14) occurred during installation

Use this function to check for the check codes (L02, L11, L13, L14) that may occur during installation.

[Method to switch the check codes L02 display]


- (1) Set the rotary switches [SW01/SW02/SW03] on the interface P.C. board of the outdoor unit to [12/1/1].
The 7-segment display is [**]. ※ ** : indoor unit address No.
- (2) If there is more than one corresponding indoor unit, the display of the indoor unit address ** changes every time the push switch [SW04] is pressed.

[Method to switch the check codes L11 display]

- (1) Set the rotary switches [SW01/SW02/SW03] on the interface P.C. board of the outdoor unit to [12/1/2].
The 7-segment display is [**]. ※ ** : indoor unit address No.
- (2) If there is more than one corresponding indoor unit, the display of the indoor unit address ** changes every time the push switch [SW04] is pressed.

[Method to switch the check codes L13 display]

- (1) Set the rotary switches [SW01/SW02/SW03] on the interface P.C. board of the outdoor unit to [12/1/3].
The 7-segment display is [**]. ※ ** : indoor unit address No.
- (2) If there is more than one corresponding indoor unit, the display of the indoor unit address ** changes every time the push switch [SW04] is pressed.

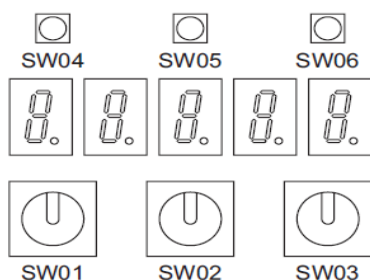

7-7-12. Confirmation of the number of FS units connected

Use this function to check for the number of FS units connected.

[Method to display the number of FS units connected display]

- (1) Set the rotary switches [SW01/SW02/SW03] on the interface P.C. board of the outdoor unit to [1/3/14].
The 7-segment display is [F.S. **]. (** : Number of FS units)
- (2) Each time the push switch [SW04] is pressed, the display changes between the number of FS units display.
The 7-segment display is [F.S. **], when the number of FS units display selected.
(** : Number of FS units)

7-7-13. Refrigerant leakage detection

The refrigerant leakage can be confirmed by using the switches on Interface P.C.board of the outdoor unit. If there is a leak, the location must be found in order to recover the refrigerant.

After that, implement appropriate countermeasure and refill the refrigerant to its standard volume. Refrigerant leaks can be detected by comparing the Actual opening of PMV with the Calculated opening of PMV* during the operation.

8-Calculated opening of PMV: calculated from the initial value(C.i/H.i), the pressure sensor value (C.i/H.i), the compressor's , and the opening of PMV. The initial values are automatically saved when the specified conditions are met.
(A leak can be detected only when C.i/H.i = 1)

[Operation]

(1) Confirming the refrigerant leakage

Set SW01 to 03 as shown in the following table to confirm whether the leaks are being detected.

(It also can be confirmed by remote control monitor function. Refer to 7-7-11. Monitor function of remote controller switch.)

(2) Clearing the initial value

If the system is changed (e.g. indoor units are increased/replaced, outdoor units are moved, or refrigerant is refilled/increased) it is necessary to clear the initial value that had been saved.

Make sure that the compressor has stopped, and then push and hold SW04 for at least 5 seconds.

SW01	SW02	SW03	Display detail	
2	13	14	Refrigerant leakage detection	A [L. d]
				B Normal: [... .. 0] Possibility of leakage: [... .. 1] Clear the data: [...C.L] (Only Display for 5 seconds)

(3) Checking the record of the initial value

Set SW01 to 03 as shown in the following table to confirm the record of the initial value.

SW01	SW02	SW03	Display detail	
2	14	14	Cooling initial value	A [C. i]
				B Incomplete: [... .. 0] Completed: [... .. 1]
2	15	14	Heating initial value	A [H. i]
				B Incomplete: [... .. 0] Completed: [... .. 1]

[Clear]

Return SW01/SW02/SW03 on the Interface P.C.board in the outdoor unit to [1/1/1] .

NOTE)

(a) During the operation, the slow leaks can be detected.

However, if the air-conditioner cannot cooling down / cannot warming up / make an unusual stop, the slow leaks might not be detectable. The fast leaks always cannot be detected.

(b) Poor refrigerant circulation may be detected as a refrigerant leaks.

(e.g. plugged strainers / capillaries, malfunction / clogging of the PMV / 2-way valve / 4-way valve)

(c) Due to the outside temperature, the initial value may not be recorded, or it may be impossible to determine the leakage.

(d) The initial value cannot be saved until the accumulated operating time has reached at least 20 hours.

(e) The initial value cannot be saved if the indoor unit's operating ratio is low.

(f) If the following indoor units are connected, leakage determination is not possible.

- Air to air heat exchanger with DX coil unit

7-7-14. Monitor Function of Remote Controller Switch

Switching to the service monitor mode

<Content>

The sensor temperature or operation status of the remote controller, indoor unit, or the outdoor unit can be known by switching to the service monitor mode from the remote controller.

[Procedure]

<RBC-AWSU**>



Monitor function	
Code	Data
00	0024

Return AV

- 1 Push the [Menu] button to display the menu screen
- 2 Push and hold the [Menu] button and the [] button at the same time to display the "Field setting menu".
→ Push and hold the buttons for more than 4 seconds
- 3 Push the [] / [] button to select "4. Monitor function" on the "Field setting menu" screen, then push the " Set" [Set / Fix] button.
→ Push the [] / [] button to select the code to check data.
- 4 Refer to the installation Manual supplied with the indoor unit or outdoor unit or service manual for details about the check
- 5 Push the " Return" [Return] button to return to the "Field setting menu" screen.

	Code No.	Data name	Display format	Unit	Remote controller display example
Indoor unit data *2	00	Room temperature (Use to control)	X1	°C	[0027]=27°C
	01	Room temperature (Remote controller)	X1	°C	
	02	Indoor suction air temperature (TA)	X1	°F	[0080]=80°F
	03	Indoor coil temperature (TCJ)	X1	°F	
	04	Indoor coil temperature (TC2)	X1	°F	
	05	Indoor coil temperature (TC1)	X1	°F	
	06	Indoor discharge air temperature (TF) *1	X1	°F	
	07	Indoor fan motor number of revolutions	X1	rpm	[1000]=1000rpm
	08	Indoor PMV opening	X1/10	pls	[0150]=1500pls
	F3	Filter sign time	X1	h	[2500]=2500h
	F9	Suction exchanger (TSA) *1 temperature of air to air heat	X1	°F	[0080]=80°F
	FA	Outside air temperature (TOA) *1	X1	°F	
System data	0A	No. of connected indoor units	X1	units	[0048]=48 units
	0B	Total capacity of connected indoor units	X10	ton	[0215]=21.5ton
	0C	No. of connected outdoor units	X1	units	[0003]=3 units
	0D	Total refrigeration tons of outdoor units	X10	ton	[0160]=16ton

	Code No.					Data name	Display format	Unit	Remote controller display example
	U1	U2	U3	U4	U5				
Outdoor unit individual data 1 *3	10	20	30	40	50	High-pressure sensor detection pressure(Pd)	X10	psi	[4350]=435psi
	11	21	31	41	51	Low-pressure sensor detection pressure (Ps)	X10	psi	
	12	22	32	42	52	Compressor 1 discharge temperature (TD1)	X1	°F	[0080]=80°F
	13	23	33	43	53	Compressor 2 discharge temperature (TD2)	X1	°F	
	14	24	34	44	54	Suction temperature (TS1)	X1	°F	
	15	25	35	45	55	Suction temperature (TS3)	X1	°F	
	16	26	36	46	56	Outdoor heat exchanger temperature (TE1)	X1	°F	
	17	27	37	47	57	Outdoor sub-heat exchanger temperature (TE2)	X1	°F	
	18	28	38	48	58	Outdoor sub-heat exchanger temperature (TE3)	X1	°F	
	19	29	39	49	59	Outside ambient temperature (TO)	X1	°F	
	1A	2A	3A	4A	5A	Temperature at liquid side (TL1)	X1	°F	
	1B	2B	3B	4B	5B	Suction temperature (TS2)	X1	°F	
	1C	2C	3C	4C	5C	Suction temperature (TS3)	X1	°F	
	1D	2D	3D	4D	5D	Outdoor coil temperature (TG1)	X1	°F	
	1E	2E	3E	4E	5E	Outdoor coil temperature (TG2)	X1	°F	
	1F	2F	3F	4F	5F	Outdoor coil temperature (TG3)	X1	°F	

	Code No.					Data name	Display format	Unit	Remote controller display example
	U1	U2	U3	U4	U5				
Outdoor unit individual data 2 *4	60	70	80	90	A0	Compressor oil temperature 1 (TK1)	X1	°F	[0080]=80°F
	61	71	81	91	A1	Compressor oil temperature 2 (TK2)	X1	°F	
	62	72	82	92	A2	PMV 1 opening	X1	pls	[0500]=500pls
	63	73	83	93	A3	PMV 2 opening	X1	pls	
	64	74	84	94	A4	PMV 3 opening	X1	pls	
	65	75	85	95	A5	PMV 4 opening	X1	pls	
	66	76	86	96	A6	Compressor 1 current (I1)	X10	A	[0135]=13.5A
	67	77	87	97	A7	Compressor 2 current (I2)	X10	A	
	68	78	88	98	A8	Compressor 1 revolutions	X10	rps	[0642]=64.2rps
	69	79	89	99	A9	Compressor 2 revolutions	X10	rps	
	6A	7A	8A	9A	AA	Outdoor fan mode	X1	mode	[0058]=58 mode
	6B	7B	8B	9B	AB	Inverter of Compressor 1 heat sink temperature (TH1)	X1	°F	[0080]=80°F
	6C	7C	8C	9C	AC	Inverter of Compressor 2 heat sink temperature (TH2)	X1	°F	
	6D	7D	8D	9D	AD	Inverter of outdoor fan 1 heat sink temperature (TH Fan1)	X1	°F	
	6E	7E	8E	9E	AE	Inverter of outdoor fan 2 heat sink temperature (TH Fan2)	X1	°F	
	6F	7F	8F	9F	AF	Outdoor unit refrigeration tons	X10	ton	[0080]=8ton

	Code No.	Data name	Display format	Unit	Remote controller display example
Outdoor unit individual data 3 *5	B0	Heating/cooling recovery control	0 : Normal 1 : Recovery controlled		[0010]=Heating recovery control [0001]=Cooling recovery control
	B5	Instantaneous electric power	X1/10	W	[0090]=900W
	B6	Integrated electric power consumption	X1/100	Wh	[0090]=9000Wh
	B8	Termination resistance setting indoor unit address display	9999 : No setting 1~ : Setting address		[9999]=Case where no terminating resistance is set to any of the indoor units [0048]=Termination resistance setting Indoor unit address 48
	B9	Communications protocol	0 : TCC-LINK 1 : TU2C-LINK		[0000]=TCC-LINK [0001]=TU2C-LINK
	BA	Uv line communication speed	0 : 9600 bps 1 : 19200 bps		[0000]=9600bps [0001]=19200bps
	BB	Demand control	0 : Normally 1 : Demand control		[0000]=Normally [0001]=Demand control

*1 Only a part of indoor unit types is installed with the discharge air temperature sensor. This temperature is not displayed for other types.

*2 When the units are connected to a group, data of the header indoor unit only can be displayed.

*3 The first digit of code No. indicates the outdoor unit number.

*4 The upper digit of code No. -5 indicates the outdoor unit number.

- 1 * , 6 * ... U1 outdoor unit (Header unit)
- 2 * , 7 * ... U2 outdoor unit (Follower unit 1)
- 3 * , 8 * ... U3 outdoor unit (Follower unit 2)
- 4 * , 9 * ... U4 outdoor unit (Follower unit 3)
- 5 * , A * ... U5 outdoor unit (Follower unit 4)

*5 Only the Code No. "B *" of U1 outdoor unit (Header unit) is displayed.

7-8. Wave Tool Advance

7-8-1. Before the Use of Wave Tool Advance

Wave Tool Advance (WTA) is an application for the Android OS or iOS smartphone. You can use this application to check system capacity, to make a test operation, to get a test operation result, and to make a simple report.

Please move to the following URL(or QR Code), and confirm "Objective product list" and "Smartphone model & OS Version".

After confirmation, download/install the Wave Tool Advance Application (WTA App.) and USER GUIDE. Be sure to read the USER GUIDE before the use of this application.

<Wave Tool Advance Support URL>

https://www.toshiba-carrier.co.jp/global/appli/smms_wave_tool_advance/index.htm



※Notice

WTA App. is not supported SMMS-e series. Please use the "SMMS Wave Tool" when using the SMMS-e series. You can download and install "SMMS Wave Tool" from the following URL.


<SMMS Wave Tool Support URL>

https://www.toshiba-carrier.co.jp/global/appli/smms_wave_tool/index.htm

7-8-2. About Wave Tool Advance

- This application is the NFC(Near Field Communication) function of smartphone.
- When it is used, make sure that the NFC antenna on the smartphone is aligned with the "TOUCH" mark on the NFC tag.
- Refer to the USER GUIDE of the Wave Tool Advance for the details.


Wave Tool Advance

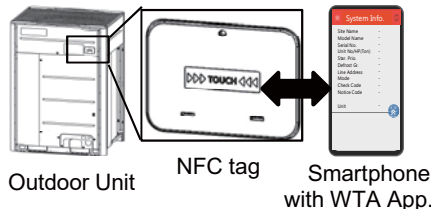

7-8-3. Valid/Prohibition/Permission setting for Test operation from WTA App.



- WTA App Test operation function enables setting within 48 hours elapsed from outdoor unit power ON. If Power ON time is over 48 hours, it can not use WTA App test operation. (Other WTA App function can be used.)
- You should decide whether to make use of this test operation function at its own responsibility and also be sure to confirm notices in the Operating Manual before performing the test operation.
- If you want to prohibit the test operation from WTA App, perform the following steps.
 - * High voltage parts exist in the electrical control box. If you set switch setting, set it from the access door cover of the electrical control box cover to avoid electric shock.
 - After finishing steps, slide the access cover to the position before and fix it with the screw.
- Refer to following table for setting change of the test operation function to be effective after 48hours.

Access cover

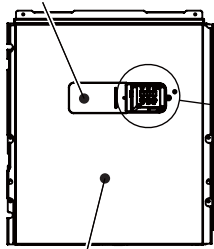

Control box cover

Fixing screw

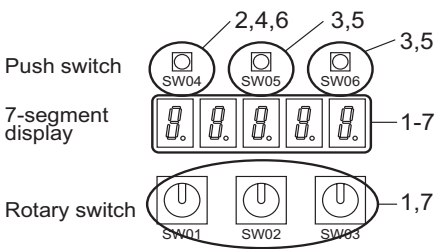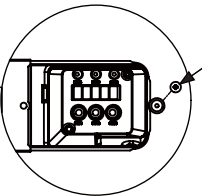

■ Relationship with Power ON time and Test operation function.

	Status	7-segment display at O.DN Code No.05
Validness	Until 48 hours elapsed from the outdoor unit power ON, WTA App can start a test operation. After 48 hours, it cannot.	d.▯▯▯0
Prohibition	Regardless of the elapsed time, WTA App cannot start a test operation.	d.▯▯▯1
Permission	Regardless of the elapsed time, WTA App can start a test operation.	d.▯▯▯2

■ For example; How to prohibit Test operation from WTA (If you need)

Steps	Items	Rotary switch			Push SW			7-segment display
		SW01	SW02	SW03	SW04	SW05	SW06	
1	Change rotary switch position for Outdoor DN code setting	9	1	1	-	-	-	dn.SET
2	Push SW04 for activate DN code	9	1	1	Push	-	-	dn.001
3	Change DN code Number to "dn.005" with SW05 or SW06	9	1	1	-	Push	Push	dn.005
4	Change data value display with SW04 **"d.0000" shows validness of TEST operation by WTA App., (Because PWR ON within 48h).	9	1	1	Push	-	-	d.0000
5	Change value to "d.0001" with SW05 or SW06 **"d.0001" shows prohibition of TEST operation by WTA App.,	9	1	1	-	Push	Push	d.0001
6	Push SW04 more than 2sec. 7-seg display will change from flashing to lighting.	9	1	1	Push more than 2 sec	-	-	Flashing--> d.0001 Lighting
7	Return to default Rotary switch position.	1	1	1	-	-	-	U * ---
8	Turn ON/OFF outdoor unit main power supplies. Keep turn off time 60 seconds or more.							

* Do it again if the 7-segment display is different from the above.

* The functions other than the test operation of this Application can work normally even if the test operation function are prohibited.

7-8-4. Confirmation for NFC tag Communication

When you cannot read out the information of the NFC tag with your smartphone, preform the following step.

Step	Rotary switch			Push switch			7-segment display	Check result
	SW01	SW02	SW03	SW04	SW05	SW06		
1	2	16	14	—	—	—	nFc.	Normal
							nFc.Er	NFC tag wiring trouble Check NFC tag wiring
2	1	1	1				U * ---	(Return to Rotary switch)

If above check is no problem, refer to User Guide of Wave Tool Advance.

Trademark

Android is a trademark or registered trademark of Google LLC.

IOS is trademark or registered trademark of Cisco in the U.S.and other countries and is used under license.

QR Code is a trademark or registered trademark of DENSO WAVE Inc.

8. TROUBLESHOOTING

8-1. Overview

(1) Before engaging in troubleshooting

(a) Applicable models

Super Heat Recovery Multi system (SHRM-u) models.

(Indoor units: MM*-UP***, Outdoor units: MMY-MUP*****FT**)

(b) Tools and measuring devices required

- Screwdrivers (Philips, flat head), spanners, long-nose pliers, nipper, pin to push reset switch, etc.
- Multimeter, thermometer, pressure gauge, etc.

(c) Things to check prior to troubleshooting (behaviors listed below are normal)


NO.	Behavior	Possible cause
1	A compressor would not start	<ul style="list-style-type: none">• The air conditioner is being controlled by the 3-minute protective function.• It is in standby status though the room temperature has reached the setup temperature.• It is being operated in timer mode or fan mode.• It is being in initial communication.
2	An indoor fan would not start	<ul style="list-style-type: none">• The air conditioner is being controlled by the cool air discharge preventive function in "heating"?
3	An outdoor fan would not start or would change speed for no reason	<ul style="list-style-type: none">• The air conditioner is being operated in "cooling" under the low outside air temperature.• It is being operated in defrost operation.
4	An indoor fan would not stop	<ul style="list-style-type: none">• The air conditioner is being controlled by function of residual heat elimination being performed as part of the air conditioner shutdown process after heating operation.
5	The air conditioner would not respond to a start/stop command from a remote controller	<ul style="list-style-type: none">• The air conditioner is being operated under external or remote control.

CAUTION

The cooling performance may be declining considerably when total operating capacity of cooling indoor units is less than 36 in total capacity WHILE AMBIENT TEMPERATURE IS BELOW 32°F(0°C).

(2) Troubleshooting procedure

When a problem occurs, proceed with troubleshooting in accordance with the procedure shown below.

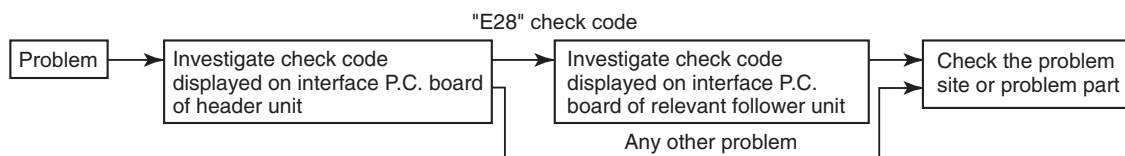

(3) If the indoor unit would not produce cool air during cooling mode / would not produce hot air during heating mode for a long period of time without displaying check code. Do the troubleshooting procedure below.

- Check if there's any problem with 4WV3.
- Check if there's a problem with PMV-D or PMV-S inside FS unit. (disconnection, coil detachment)
- Check if there's a problem with P.C.boards of FS unit Multi-port type. (wiring connection failure, Dip switch setting, missing P.C.board)
- If the problem still persist, check if there's any problem with FS unit (Proceed with FS unit Inspection Mode)

NOTE

Rather than a product trouble (see the List of Check Codes below), the problem could have been caused by a microprocessor malfunction attributable to a poor quality of the power source or an external noise. Check for possible noise sources, and shield the remote controller wiring and signal wires as necessary.

8-2. Troubleshooting method

The remote controllers (main remote controller and central remote controller) and the interface P.C. board of an outdoor unit have an LCD display (remote controller) or a 7-segment display (outdoor interface P.C. board) to display operational status. Using this self-diagnosis feature, the trouble site / trouble part may be identified in the event of a trouble by following the method described below.

The list below summarizes check codes detected by various devices. Analyze the check code according to where it is displayed and work out the nature of the problem in consultation with the list.

- When investigating a problem on the basis of a display provided on the indoor remote controller or central remote controller See the “Remote control or main remote controller display” section of the list.
- When investigating a problem on the basis of a display provided on an outdoor unit - See the “Outdoor 7-segment display” section of the list.
- When investigating a problem on the basis of a wireless remote controller-controlled indoor unit - See the “Light sensor indicator light block” section of the list.

































List of Check Codes (Indoor Unit)

(Check code detected by indoor unit)





○ : Lighting, ◎ : Flashing, ● : Goes off

ALT.: Flashing is alternately when there are two flashing LED





SIM: Simultaneous flashing when there are two flashing LED

Check code			Display of receiving unit				Typical problem site	Description of Check code
Central control or main remote controller display	Outdoor 7-segment display		Indicator light block					
		Sub-code	Operation 	Timer 	Ready 	Flash		
E03	—	—					Indoor-remote controller periodic communication trouble	Communication from remote controller or network adaptor has been lost (so has central control communication).
E04	—	—					Indoor-outdoor periodic communication trouble	Signals are not being received from outdoor unit.
E08	E08	Duplicated indoor address					Duplicated indoor address	Indoor unit detects address identical to its own.
E10	—	—					Indoor inter-MCU communication trouble	MCU communication between main controller and motor microcontroller is failure.
E11	—	—					Communication check code between Application control kit and indoor unit	Communication check code between Application control kit and indoor unit P.C. board.
E17	—	—					Communication trouble between indoor unit(s) and FS unit(s)	There is no communication from FS units(s)
E18	—	—					Trouble in periodic communication between indoor header and follower unit	Periodic communication between indoor header and follower units cannot be maintained.
F01	—	—				ALT	Indoor heat exchanger temperature sensor (TCJ) trouble	Heat exchanger temperature sensor (TCJ) has been open/short-circuited.
F02	—	—				ALT	Indoor heat exchanger temperature sensor (TC2) trouble	Heat exchanger temperature sensor (TC2) has been open/short-circuited.
F03	—	—				ALT	Indoor heat exchanger temperature sensor (TC1) trouble	Heat exchanger temperature sensor (TC1) has been open/short-circuited.
F10	—	—				ALT	Room air temperature sensor (TA/TSA) trouble	Room air temperature sensor (TA) has been open/short-circuited.
F11	—	—				ALT	Discharge air temperature sensor (TF/TFA) trouble	Discharge air temperature sensor (TF) has been open/short-circuited.
F29	—	—				SIM	P.C. board or other indoor trouble	Open/Short-circuit of indoor air suction temperature sensor (TRA) was detected.
F30	—	—					Occupancy sensor trouble	There is no signal from Occupancy sensor
J30	—	—					Duplicated FS units	More than one FS units have been set up in one refrigerant line.
L03	—	—				SIM	Duplicated indoor group header unit	There is more than one header unit in group.
L07	—	—				SIM	Connection of group control cable to stand-alone indoor unit	There is at least one stand-alone indoor unit to which group control cable is connected.
L08	L08	—				SIM	Indoor group address not set	Address setting has not been performed for one or more indoor units (also detected at outdoor unit end).
L09	—	—				SIM	Indoor capacity not set	Capacity setting has not been performed for indoor unit.
L20	—	—				SIM	Duplicated central control address	There is duplication in central control address setting.
L30	L30	Detected indoor unit No.				SIM	Indoor external trouble input (interlock)	Unit shutdown has been caused by external trouble input (CN80).
P01	—	—				ALT	Indoor AC fan trouble	Indoor AC fan trouble is detected (activation of fan motor thermal relay).
P10	P10	Detected indoor unit No.				ALT	Indoor overflow trouble	Float switch has been activated.
P12	—	—				ALT	Indoor DC fan trouble	Indoor DC fan trouble (e.g. overcurrent or lock-up) is detected.
P31	—	—				ALT	Other indoor unit trouble	Follower unit cannot be operated due to header unit alarm (E03/L03/L07/L08).

(Check code detected by remote controller)











Check code			Display of receiving unit				Typical fault site	Description of Check code
Remote control	Outdoor 7-segment display		Indicator light block					
		Sub-code	Operation 	Timer 	Ready 	Flash 		
E01	—	—	⊙	●	●		No master remote control, failure remote control communication (reception)	Signals cannot be received from indoor unit; master remote controller has not been set (including two remote controller control).
E02	—	—	⊙	●	●		Failure remote control communication (transmission)	Signals cannot be transmitted to indoor unit.
E09	—	—	⊙	●	●		Duplicated master remote control	Both remote controllers have been set as master remote controller in two remote controller control (alarm and shutdown for header unit and continued operation for follower unit)

(Check code detected by central control device)

Check code			Display of receiving unit				Typical fault site	Description of Check code
Central control	Outdoor 7-segment display		Indicator light block					
		Sub-code	Operation 	Timer 	Ready 	Flash 		
C05	—	—	No indication (when main remote control also in use)				Failure central control communication (transmission)	Central control device is unable to transmit signal due to duplication of central control device
C06	—	—					Failure central control communication (reception)	Central control device is unable to receive signal.
C12	—	—	—				Bracket alarm for general-purpose device control interface	Device connected to general-purpose device control interface is failure.
P30	—	—	As per alarm unit (see above)				Group control follower unit trouble	Group follower unit is troubled (unit No. and above detail [***] displayed on main remote controller)
S01	—	—	—				Failure central control communication (reception)	Central control device is unable to receive signal.

List of Check Codes (Flow Selector Unit)

(Check code detected by Flow Selector unit)

Check code			Display of receiving unit				Typical fault site	Description of Check code
Central control	Outdoor 7-segment display		Indicator light block					
		Sub-code	Operation 	Timer 	Ready 	Flash 		
J01	—	—				SIM	Communication trouble between indoor unit(s) and FS unit	There is no communication from indoor unit (s)
J02	—	—				SIM	Communication trouble between control boards in FS unit	Communication trouble between PC boards of multiport type FS unit.

Note: The same trouble, e.g. a communication trouble, may result in the display of different check codes depending on the device that detects it.
Moreover, check codes detected by the main remote controller/central control device do not necessarily have a direct impact on air conditioner operation.

List of Check Codes (Outdoor Unit)




(Check code detected by outdoor interface - typical examples)












































































If "HELLO" is displayed on the outdoor 7-segment for 1 minute or more, turn off the power supply once and then turn on the power supply again after passage of 30 seconds or more. When the same symptom appears, it is considered there is a possibility of I/F board trouble.




○ : Lighting, ◎ : Flashing, ● : Goes off

ALT.: Flashing is alternately when there are two flashing LED

SIM: Simultaneous flashing when there are two flashing LED

Check code			Display of receiving unit				Typical problem site	Description of Check code																																																																																								
Outdoor 7-segment display		Central control or main remote controller display	Indicator light block																																																																																													
	Sub-code		Operation 	Timer 	Ready 	Flash																																																																																										
E06	Number of indoor units from which signal is received normally	E06	●	●	◎		Signal lack of indoor unit	<ul style="list-style-type: none">Indoor unit initially communicating normally fails to return signal (reduction in number of indoor units connected).If the termination resistance is not set in any of the indoor unitsThe number of indoor units connected is decreasing. (detected when power is turned on)																																																																																								
E07	—	(E04)	●	●	◎		Indoor-outdoor communication circuit trouble	Signal cannot be transmitted to indoor units (→ indoor units left without communication from outdoor unit).																																																																																								
E08	Duplicated indoor address	(E08)	◎	●	●		Duplicated indoor address	More than one indoor unit are assigned same address (also detected at indoor unit end).																																																																																								
E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	E12	◎	●	●		Automatic address starting trouble	<ul style="list-style-type: none">Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress.Outdoor automatic address setting is started while automatic address setting for indoor units is in progress.																																																																																								
E15	—	E15	●	●	◎		Indoor unit not found during automatic address setting	Indoor unit fails to communicate while automatic address setting for indoor units is in progress.																																																																																								
E16	00: Capacity over 01: Number of units connected	E16	●	●	◎		Too many indoor units connected/capacity over	Combined capacity of indoor units is too large. The maximum combined of indoor units shown in the specification table.																																																																																								
E19	00: No header unit 02: Two or more header units	E19	●	●	◎		Trouble in number of outdoor header units	There is no or more than one outdoor header unit in one refrigerant line.																																																																																								
E20	01: Connection of outdoor unit from other refrigerant line 02: Connection of indoor unit from other refrigerant line	E20	●	●	◎		Connection to other refrigerant line found during automatic address setting	Indoor unit from other refrigerant line is detected while indoor automatic address setting is in progress.																																																																																								
E23	—	E23	●	●	◎		Outdoor-outdoor communication transmission trouble	Signal cannot be transmitted to other outdoor units.																																																																																								
E25	—	E25	●	●	◎		Duplicated follower outdoor address	There is duplication in outdoor addresses set manually.																																																																																								
E26	Address of outdoor unit from which signal is not received normally	E26	●	●	◎		Signal lack of outdoor unit	Follower outdoor unit initially communicating normally fails to do so (reduction in number of follower outdoor units connected).																																																																																								
E28	Detected outdoor unit No.	E28	●	●	◎		Outdoor follower unit trouble	Outdoor header unit detects trouble relating to follower outdoor unit (detail displayed on follower outdoor unit).																																																																																								
E31	<table><tr><th colspan="4">P.C.board</th><th colspan="4">P.C.board</th></tr><tr><th colspan="2">Compressor</th><th colspan="2">Fan Motor</th><th colspan="2">Compressor</th><th colspan="2">Fan Motor</th></tr><tr><th>1</th><th>2</th><th>1</th><th>2</th><th>1</th><th>2</th><th>1</th><th>2</th></tr><tr><td>01</td><td>○</td><td></td><td></td><td>11</td><td>○</td><td></td><td>○</td></tr><tr><td>02</td><td></td><td>○</td><td></td><td>12</td><td></td><td>○</td><td>○</td></tr><tr><td>03</td><td>○</td><td>○</td><td></td><td>13</td><td>○</td><td>○</td><td>○</td></tr><tr><td>08</td><td></td><td></td><td>○</td><td>18</td><td></td><td></td><td>○</td></tr><tr><td>09</td><td>○</td><td></td><td>○</td><td>19</td><td>○</td><td></td><td>○</td></tr><tr><td>0A</td><td></td><td>○</td><td>○</td><td>1A</td><td></td><td>○</td><td>○</td></tr><tr><td>0B</td><td>○</td><td>○</td><td>○</td><td>1B</td><td>○</td><td>○</td><td>○</td></tr><tr><td>10</td><td></td><td></td><td>○</td><td></td><td></td><td></td><td></td></tr></table> <p>80 : Communication trouble between MCU and Sub MCU</p>	P.C.board				P.C.board				Compressor		Fan Motor		Compressor		Fan Motor		1	2	1	2	1	2	1	2	01	○			11	○		○	02		○		12		○	○	03	○	○		13	○	○	○	08			○	18			○	09	○		○	19	○		○	0A		○	○	1A		○	○	0B	○	○	○	1B	○	○	○	10			○					E31	●	●	◎		P.C. board communication trouble Sub MCU communication trouble	There is no communication between P.C. boards in inverter box.
P.C.board				P.C.board																																																																																												
Compressor		Fan Motor		Compressor		Fan Motor																																																																																										
1	2	1	2	1	2	1	2																																																																																									
01	○			11	○		○																																																																																									
02		○		12		○	○																																																																																									
03	○	○		13	○	○	○																																																																																									
08			○	18			○																																																																																									
09	○		○	19	○		○																																																																																									
0A		○	○	1A		○	○																																																																																									
0B	○	○	○	1B	○	○	○																																																																																									
10			○																																																																																													
F04	—	F04	◎	◎	○	ALT	Outdoor discharge temperature sensor (TD1) trouble	Outdoor discharge temperature sensor (TD1) has been open/short-circuited.																																																																																								
F05	—	F05	◎	◎	○	ALT	Outdoor discharge temperature sensor (TD2) trouble	Outdoor discharge temperature sensor (TD2) has been open/short-circuited.																																																																																								
F06	01: TE1 sensor 02: TE2 sensor 03: TE3 sensor	F06	◎	◎	○	ALT	Outdoor heat exchanger liquid side temperature sensor (TE1, TE2, TE3) trouble	Outdoor heat exchanger liquid side temperature sensors (TE1, TE2, TE3) have been open/short-circuited.																																																																																								
F07	01: TL1 sensor 02: TL2 sensor 03: TL3 sensor	F07	◎	◎	○	ALT	Outdoor liquid temperature sensor (TL1, TL2, TL3) trouble	Outdoor liquid temperature sensor (TL1, TL2, TL3) has been open/short-circuited.																																																																																								
F08	—	F08	◎	◎	○	ALT	Outdoor outside air temperature sensor (TO) trouble	Outdoor air temperature sensor (TO) has been open/short-circuited.																																																																																								
F09	01: TG1 sensor 02: TG2 sensor 03: TG3 sensor	F09	◎	◎	○	ALT	Outdoor heat exchanger gas side temperature sensor (TG1, TG2, TG3) trouble	Outdoor heat exchanger gas side temperature sensors (TG1, TG2, TG3) have been open/short-circuited.																																																																																								

Check code		Central control or main remote controller display	Display of receiving unit				Typical problem site	Description of Check code
Outdoor 7-segment display			Indicator light block					
	Sub-code		Operation 	Timer 	Ready 	Flash		
F12	01: TS1 sensor 02: TS2 sensor 03: TS3 sensor	F12				ALT	• Outdoor suction temperature sensor (TS1,TS2,TS3) trouble	• Outdoor suction temperature sensor (TS1,TS2,TS3) has been open/short-circuited.
F15	—	F15				ALT	Outdoor temperature sensor (TE1,TL1) wiring trouble	Wiring trouble in outdoor temperature sensors (TE1,TL1) has been detected.
F16	—	F16				ALT	Outdoor pressure sensor (Pd, Ps) wiring trouble	Wiring trouble in outdoor pressure sensors (Pd, Ps) has been detected.
F23	—	F23				ALT	Low pressure sensor (Ps) trouble	Output voltage of low pressure sensor (Ps) is zero.
F24	—	F24				ALT	High pressure sensor (Pd) trouble	Output voltage of high pressure sensor (Pd) is zero or provides abnormal readings when compressors have been turned off.
F31	—	F31				SIM	Outdoor EEPROM trouble	Outdoor EEPROM is failure (alarm and shutdown for header unit and continued operation for follower unit)
H05	—	H05					Outdoor discharge temperature sensor (TD1) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD1) has been detected.
H06	—	H06					Activation of low-pressure protection	Low pressure (Ps) sensor detects abnormally low operating pressure.
H07	—	H07					Low oil level protection	Temperature sensor for oil level detection (TK1,TK2) detects abnormally low oil level.
H08	01: TK1 sensor trouble 02: TK2 sensor trouble	H08					Trouble in temperature sensor for oil level detection (TK1,TK2)	Temperature sensor for oil level detection (TK1,TK2) has been open/short-circuited.
H15	—	H15					Outdoor discharge temperature sensor (TD2) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD2) has been detected.
H16	01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	H16					Oil level detection circuit trouble	No temperature change is detected by temperature sensor for oil level detection (TK1,TK2) despite compressor having been started.
								Identical refrigerant line address has been assigned to outdoor units belonging to different refrigerant piping systems.
L02	—	L02				SIM	Indoor unit incompatible with TU2C-LINK	Indoor unit incompatible with TU2C-LINK is connected.
L04	—	L04				SIM	Duplicated outdoor refrigerant line address	
L06	Number of priority indoor units (check code L05 or L06 depending on individual unit)	L05				SIM	Duplicated priority indoor unit (as displayed on priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.
		L06				SIM	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.
L08	—	(L08)				SIM	Indoor group address not set	Address setting have not been performed for one or more indoor units (also detected at indoor end).
L10	—	L10				SIM	Outdoor capacity not set	Outdoor unit capacity has not been set (after P.C. board replacement).
L11	Detected indoor unit address	L11				SIM	Flow Selector unit installation trouble	There is no connection to flow Selector unit and indoor unit is not set to "cooling only".
L13	Detected indoor unit address	L13				SIM	Flow Selector unit miswiring and misconfiguration trouble	<ul style="list-style-type: none">• No indoor unit is connected to No.1 port of FS unit Multi-port type.• A number that is one larger than the port address of the indoor unit for which "combining branches" is set. (Example; If the port address of the indoor unit for which "combining branches" is set to 3, 4 must not be set)• Multiple remote controller groups are set to one port of the FS unit, and different port address is set for one of the groups.• Same address is set for different FS units.
L17		L17				SIM	Outdoor model incompatibility trouble	Outdoor unit that cannot be connected is connected.
L23	02: Switch setting trouble of outdoor unit	L23				SIM	SW setting trouble	Switch setting trouble of outdoor units when HWM (Hot water module) is connected.
L24	02: Indoor units operation mode priority setting	L24				SIM	FS unit(S) setting trouble	<ul style="list-style-type: none">• Duplicated priority indoor units operation mode.
L28	—	L28				SIM	Too many outdoor units connected	<ul style="list-style-type: none">• More than six outdoor units have been connected.

Check code			Display of receiving unit																																																																																														
Outdoor 7-segment display			Central control or main remote controller display	Indicator light block				Typical problem site	Description of Check code																																																																																								
	Sub-code			Operation 	Timer 	Ready 	Flash																																																																																										
L29	<table><tr><td colspan="4">P.C.board</td><td colspan="4">P.C.board</td></tr><tr><td colspan="2">Compressor</td><td colspan="2">Fan Motor</td><td colspan="2">Compressor</td><td colspan="2">Fan Motor</td></tr><tr><td>1</td><td>2</td><td>1</td><td>2</td><td>1</td><td>2</td><td>1</td><td>2</td></tr><tr><td>01</td><td>○</td><td></td><td></td><td>11</td><td>○</td><td></td><td>○</td></tr><tr><td>02</td><td></td><td>○</td><td></td><td>12</td><td></td><td>○</td><td>○</td></tr><tr><td>03</td><td>○</td><td>○</td><td></td><td>13</td><td>○</td><td>○</td><td>○</td></tr><tr><td>08</td><td></td><td></td><td>○</td><td>18</td><td></td><td></td><td>○</td></tr><tr><td>09</td><td>○</td><td></td><td>○</td><td>19</td><td>○</td><td></td><td>○</td></tr><tr><td>0A</td><td></td><td>○</td><td>○</td><td>1A</td><td></td><td>○</td><td>○</td></tr><tr><td>0B</td><td>○</td><td>○</td><td>○</td><td>1B</td><td>○</td><td>○</td><td>○</td></tr><tr><td>10</td><td></td><td></td><td></td><td>○</td><td></td><td></td><td></td></tr></table> <div>Circle (○): Trouble P.C. board</div>		P.C.board				P.C.board				Compressor		Fan Motor		Compressor		Fan Motor		1	2	1	2	1	2	1	2	01	○			11	○		○	02		○		12		○	○	03	○	○		13	○	○	○	08			○	18			○	09	○		○	19	○		○	0A		○	○	1A		○	○	0B	○	○	○	1B	○	○	○	10				○				L29	⊙	○	⊙	SIM	Trouble in number of P.C. boards	There are insufficient number of P.C. board in inverter box.
	P.C.board				P.C.board																																																																																												
	Compressor		Fan Motor		Compressor		Fan Motor																																																																																										
	1	2	1	2	1	2	1	2																																																																																									
	01	○			11	○		○																																																																																									
	02		○		12		○	○																																																																																									
	03	○	○		13	○	○	○																																																																																									
	08			○	18			○																																																																																									
	09	○		○	19	○		○																																																																																									
	0A		○	○	1A		○	○																																																																																									
0B	○	○	○	1B	○	○	○																																																																																										
10				○																																																																																													
	00		L29	⊙	○	⊙	SIM	The number of P.C. board trouble	When there is much number of an inverter P.C. board to model setting of an interface P.C. board.																																																																																								
L30	Detected indoor unit No.		(L30)	⊙	○	⊙	SIM	Indoor external trouble input (interlock)	Indoor unit has been shut down for external trouble input in one refrigerant line (detected by indoor unit).																																																																																								
P03	—		P03	⊙	●	⊙	ALT	Outdoor discharge (TD1) temperature trouble	Outdoor discharge temperature sensor (TD1) has detected abnormally high temperature.																																																																																								
P04	01: Compressor 1 02: Compressor 2		P04	⊙	●	⊙	ALT	Activation of high-pressure SW	High-pressure SW is activated.																																																																																								
P05	00: Power detection trouble 01: Open phase		P05	⊙	●	⊙	ALT	Power detection trouble /Open phase detection	Open phase is detected when power is turned on.																																																																																								
P07	00 : Compressor 1 or 2 heat sink trouble 01 : Compressor 1 heat sink trouble 02 : Compressor 2 heat sink trouble		P07	⊙	●	⊙	ALT	Heat sink overheating trouble	Temperature sensor built into IPM (TH) detects overheating.																																																																																								
	04: Heat sink dewing							Heat sink dewing trouble	Outdoor liquid temperature sensor (TL2) has detected abnormally low temperature.																																																																																								
P10	Indoor unit No. detected		(P10)	●	⊙	⊙	ALT	Indoor unit overflow	Indoor unit has been shutdown in one refrigerant line due to detection of overflow (detected by indoor unit).																																																																																								
P11	—		P11	●	⊙	⊙	ALT	Outdoor heat exchanger freeze trouble	Remaining frost on outdoor heat exchanger has been detected repeatedly.																																																																																								
P13	01: PMV1,2,3 side (Follower outdoor unit) 02: PMV4 side (Follower outdoor unit) 03: PMV4 side 04: PMV1,2,3 side		P13	●	⊙	⊙	ALT	Outdoor liquid backflow detection trouble	State of refrigerant cycle circuit indicates liquid backflow operation.																																																																																								
P14	01: Outdoor unit valve is close		P14	●	⊙	⊙	ALT	Another refrigerant cycle protection	Outdoor unit valve is forget to open during test run.																																																																																								
P15	01: TS condition 02: TD condition		P15	⊙	●	⊙	ALT	Gas leak detection	Outdoor suction temperature sensor (TS1) detects sustained and repeated high temperatures that exceed standard value.																																																																																								
P17	—		P17	⊙	●	⊙	ALT	Outdoor discharge (TD2) temperature trouble	Outdoor discharge temperature sensor (TD2) detects abnormally high temperature.																																																																																								
P19	0#: 4-way valves 1#: 4-way valve1 2#: 4-way valve2 *Put in outdoor unit No. in [#] mark.		P19	⊙	●	⊙	ALT	4-way valve reversing trouble	<div>• Abnormality in refrigerating cycle is detected during heating operation.</div> <div>• Either 4WV1 or 4WV2 cannot be switched.</div>																																																																																								
P20	—		P20	⊙	●	⊙	ALT	Activation of high-pressure protection	High pressure (Pd) sensor detects high pressure that exceeds standard value.																																																																																								


(Check code detected by Inverter of Compressor featuring in outdoor unit - typical examples)

Check code		Central control or main remote controller display	Display of receiving unit				Typical problem site	Description of Check code
Outdoor 7-segment display			Indicator light block					
	Sub-code		Operation ⏻	Timer ⌚	Ready ⚙	Flash		
F13	1*: Compressor 1 2*: Compressor 2	F13	⊙	⊙	○	ALT	Trouble in temperature sensor built into indoor IPM (TH)	Temperature sensor built into indoor IPM (TH) has been open/short-circuited.
H01	1*: Compressor 1 2*: Compressor 2	H01	●	⊙	●		Compressor breakdown	Inverter current (Idc) detection circuit detects overcurrent.
H02	1*: Compressor 1 2*: Compressor 2	H02	●	⊙	●		Compressor trouble (lockup)	Compressor lockup is detected
H03	1*: Compressor 1 2*: Compressor 2	H03	●	⊙	●		Current detection circuit trouble	Abnormal current is detected while inverter compressor is turned off.
H17	1*: Compressor 1 2*: Compressor 2	H17	●	⊙	●		Compressor trouble (Step out)	Compressor is in step-out condition.
H28	1*: Compressor 1 2*: Compressor 2	H28	●	⊙	●		Compressor motor winding trouble	Compressor motor winding is layer shorted.
P05	1*: Compressor 1 side 2*: Compressor 2 side	P05	⊙	●	⊙	ALT	Compressor Vdc trouble	Inverter DC voltage is too high (overvoltage) or too low (undervoltage).
P07	1*: Compressor 1 side 2*: Compressor 2 side	P07	⊙	●	⊙	ALT	Heat sink overheat trouble	Temperature sensor built into IPM (TH) detects overheating.
P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	P22	⊙	●	⊙	ALT	Outdoor fan P.C. board trouble	Outdoor fan P.C. board detects trouble.
P25	1*: Compressor 1 2*: Compressor 2	P25	⊙	●	⊙	ALT	Compressor P.C.board trouble	IPM for compressor is broken. (short-circuit etc.)
P26	1*: Compressor 1 2*: Compressor 2	P26	⊙	●	⊙	ALT	Compressor start up trouble	Open phase or IPM overcurrent for compressor is detected.
P29	1*: Compressor 1 2*: Compressor 2	P29	⊙	●	⊙	ALT	Compressor position detection circuit trouble	Compressor motor position detection trouble is detected.

Note: The above check codes are examples only, and different check codes may be displayed depending on the outdoor unit configuration


8-3. Troubleshooting based on information displayed on remote controller


■ Confirm and check

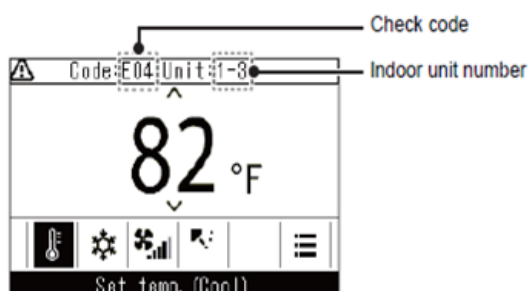


When a trouble occurs in the air conditioner, the check code and the indoor unit number flash on the display of the remote controller.

* The check code is only displayed during the operation.

When the check code and indoor unit number are displayed, pushing [ Return] opens the "Check" screen.

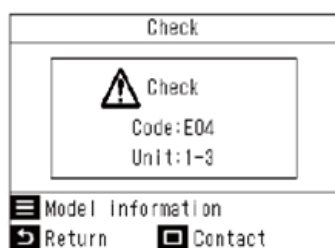




In the "Check" screen, push [ Set/Fix] to show the contacts.

Push [ Menu] to display "Model information".

■ Contact information for repairs

You can look for contact information for repairs.



- 1 In the "Information" screen, push [] and [] to select "Service information", and then push [ Set/Fix]







Using indoor unit indicators (receiving unit light block) (wireless type)


To identify the check code, check the 7-segment display on the header unit. To check for check codes not displayed on the 7-segment display, consult the “List of Check Codes (Indoor Unit)” in “8-2. Troubleshooting method”.

● : Goes off ○ : Lighting ☀ : Blinking (0.5 seconds)



Light block	Check code	Cause of trouble		
<div>Operation</div> <div><div></div></div> <div>Timer</div> <div><div></div></div> <div>Ready</div> <div><div></div></div> <div>All lights out</div>	—	Power turned off or trouble in wiring between receiving and indoor units		
<div>Operation</div> <div><div></div></div> <div>Timer</div> <div><div></div></div> <div>Ready</div> <div><div></div></div> <div>Blinking</div>	E01	Trouble reception	Receiving unit	Trouble or poor contact in wiring between receiving unit and indoor units
	E02	Trouble transmission		
	E03	Loss of communication		
	E08	Duplicated indoor unit No. (address)		
	E09	Duplicated master remote controller		
	E10	Communication trouble between indoor unit MCU		
	E11	Communication trouble between Application control kit and indoor unit P.C. board		
	E12	Automatic address starting trouble		
	E18	Trouble or poor contact in wiring between indoor units, indoor power turned off		
<div>Operation</div> <div><div></div></div> <div>Timer</div> <div><div></div></div> <div>Ready</div> <div><div></div></div> <div>Blinking</div>	E04	Trouble or poor contact in wiring between indoor and outdoor units (loss of indoor-outdoor communication)		
	E06	Trouble reception in indoor-outdoor communication (dropping out of indoor unit)		
	E07	Trouble transmission in indoor-outdoor communication		
	E15	Indoor unit not found during automatic address setting		
	E16	Too many indoor units connected / overloading		
	E17	Communication trouble between indoor unit(s) and FS unit(s)		
	E19	Trouble in number of outdoor header units		
	E20	Detection of refrigerant piping communication trouble during automatic address setting		
	E23	Trouble transmission in outdoor-outdoor communication		
	E25	Duplicated follower outdoor address		
	E26	Trouble reception in outdoor-outdoor communication, dropping out of outdoor unit		
	E28	Outdoor follower unit trouble		
	E31	P.C. board communication trouble		
	<div>Operation</div> <div><div></div></div> <div>Timer</div> <div><div></div></div> <div>Ready</div> <div><div></div></div> <div>Alternate blinking</div>	P01	Indoor AC fan trouble	
P10		Indoor overflow trouble		
P11		Outdoor heat exchanger freezing trouble		
P12		Indoor DC fan trouble		
P13		Outdoor liquid backflow detection trouble		
P14		Outdoor unit valve is closed		
<div>Operation</div> <div><div></div></div> <div>Timer</div> <div><div></div></div> <div>Ready</div> <div><div></div></div> <div>Alternate blinking</div>	P03	Outdoor discharge (TD1) temperature trouble		
	P04	Activation of outdoor high-pressure SW		
	P05	Open phase / power failure Inverter DC voltage (Vdc) trouble MG-CTT trouble		
	P07	Outdoor heat sink overheating trouble - Poor cooling of electrical component (IGBT) of outdoor unit		
	P15	Gas leak detection - insufficient refrigerant charging		
	P17	Outdoor discharge (TD2) temperature trouble		
	P18	Outdoor discharge (TD3) temperature trouble		
	P19	Outdoor 4-way valve reversing trouble		
	P20	Activation of high-pressure protection		
	P22	Outdoor fan P.C. board trouble		
	P25	Compressor P.C. board trouble		
	P26	Compressor trouble / Wire connection trouble Compressor leads trouble Compressor P.C.board trouble		
	P29	Compressor position detection circuit trouble		
	P31	Shutdown of other indoor unit in group due to trouble (group follower unit trouble)		

MG-CTT: Magnet contactor




Light block	Check code	Cause of trouble	
<div>Operation Timer Ready</div> <div></div> <div>Alternate blinking</div>	F01	Heat exchanger temperature sensor (TCJ) trouble	
	F02	Heat exchanger temperature sensor (TC2) trouble	
	F03	Heat exchanger temperature sensor (TC1) trouble	
	F10	Ambient temperature sensor (TA/TSA) trouble	
	F11	Discharge temperature sensor (TF) trouble	
<div>Operation Timer Ready</div> <div></div> <div>Alternate blinking</div>	F04	Discharge temperature sensor (TD1) trouble	
	F05	Discharge temperature sensor (TD2) trouble	
	F06	Heat exchanger temperature sensor (TE1, TE2, TE3) trouble	
	F07	Liquid temperature sensor (TL1, TL2, TL3) trouble	
	F08	Outside air temperature sensor (TO) trouble	
	F09	Heat exchanger gas side temperature sensor (TG1, TG2, TG3) trouble	
	F12	Suction temperature sensor (TS1, TS3) trouble	
	F13	Heat sink sensor (TH) trouble	
	F15	Wiring trouble in heat exchanger sensor (TE1) and liquid temperature sensor (TL) Outdoor unit temperature sensor wiring / installation trouble	
	F16	Wiring trouble in outdoor high pressure sensor (Pd) and low pressure sensor (Ps) Outdoor pressure sensor wiring trouble	
	F23	Low pressure sensor (Ps) trouble	Outdoor unit pressure sensor trouble
	F24	High pressure sensor (Pd) trouble	
<div>Operation Timer Ready</div> <div></div> <div>Synchronized blinking</div>	F29	Trouble in indoor EEPROM	
<div>Operation Timer Ready</div> <div></div> <div>Blinking</div>	H01	Compressor breakdown	Outdoor unit compressor related trouble
	H02	Compressor lockup	
	H03	Current detection circuit trouble	
	H05	Wiring / installation trouble or detachment of outdoor discharge temperature sensor (TD1)	
	H06	Abnormal drop in low-pressure sensor (Ps) reading	Protective shutdown of outdoor unit
	H07	Abnormal drop in oil level	
	H08	Trouble in temperature sensor for oil level detection circuit (TK1, TK2)	
	H15	Wiring / installation trouble or detachment of outdoor discharge temperature sensor (TD2)	
	H16	Oil level detection circuit trouble - Trouble in outdoor unit TK1, TK2 circuit	
	H17	Compressor trouble (Step-out)	
	H28	Compressor motor winding trouble	
<div>Operation Timer Ready</div> <div></div> <div>Synchronized blinking</div>	L02	Outdoor unit model mismatched trouble	
	L03	Duplicated indoor group header unit	
	L05	Duplicated priority indoor unit (as displayed on priority indoor unit)	
	L06	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	
	L07	Connection of group control cable to stand-alone indoor unit	
	L08	Indoor group address not set	
	L09	Indoor capacity not set	
	L04	Duplicated outdoor refrigerant line address	
<div>Operation Timer Ready</div> <div></div> <div>Synchronized blinking</div>	L10	Outdoor capacity not set	
	L11	Flow Selector unit installation trouble	
	L13	Flow Selector unit miswiring and misconfiguration trouble	
	L17	Outdoor model incompatibility trouble	
	L20	Duplicated central control address	
	L23	SW setting trouble	
	L24	FS unit(S) setting trouble	
	L28	Too many outdoor units connected	
	L29	Trouble in number of P.C. boards	
	L30	Indoor external interlock trouble	

Light block	Check code	Cause of trouble
Operation Timer Ready  Synchronized blinking	F30	Occupancy sensor trouble
	F31	Outdoor EEPROM trouble

Other (indications not involving check code)

Light block	Check code	Cause of trouble
Operation Timer Ready  Synchronized blinking	—	Test run in progress
Operation Timer Ready  Alternate blinking	—	Setting incompatibility (automatic cooling / heating setting for model incapable of it and heating setting for cooling-only model)

Flow Selector unit (FS unit) relation

Light block	Check code	Cause of trouble
Operation Timer Ready  Blinking	E17	Communication trouble between indoor unit(s) and FS unit(s)
Operation Timer Ready  Synchronized blinking	L24	FS unit(s) setting trouble
Operation Timer Ready  Blinking Blinking	J01	Communication trouble between indoor unit(s) and FS unit(s)
	J02	Communication trouble between indoor unit(s) and FS unit(s)
	J03	Duplicated FS units

8-4. Check Codes list

For other types of outdoor units, refer to their own service manuals.

Controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
Check code	Sub-code						
C05	—		Central control device	Central control device transmission trouble	Continued operation	Central control device is unable to transmit signal.	<ul style="list-style-type: none"> • Check for failure in central control device. • Check for failure in central control communication line. • Check termination resistance setting.
C06	—		Central control device	Central control device reception trouble	Continued operation	Central control device is unable to receive signal.	<ul style="list-style-type: none"> • Check for failure in central control device. • Check for failure in central control communication line. • Check terminator resistor setting. • Check power supply for devices at other end of central control communication line. • Check failure in P.C. boards of devices at other end of central control communication line.
C12	—		General-purpose device I/F	Batch alarm for general-purpose device control interface	Continued operation	Trouble signal is input to control interface for general-purpose devices.	<ul style="list-style-type: none"> • Check trouble input.
E01	—	—	Remote controller	Indoor-remote controller communication trouble (detected at remote controller end)	Stop of corresponding unit	Communication between indoor P.C. board and remote controller is disrupted.	<ul style="list-style-type: none"> • Check remote controller inter-unit tie cable (A/B). • Check for broken wire or connector bad contact. • Check indoor power supply. • Check for failure in indoor P.C. board. • Check remote controller address settings (when two remote controllers are in use). • Check remote controller P.C. board.
E02	—	—	Remote controller	Remote controller transmission trouble	Stop of corresponding unit	Signal cannot be transmitted from remote controller to indoor unit.	<ul style="list-style-type: none"> • Check internal transmission circuit of remote controller. --- Replace remote controller as necessary.
E03	—	—	Indoor unit	Indoor-remote controller communication trouble (detected at indoor end)	Stop of corresponding unit	There is no communication from remote controller (including wireless) or network adaptor.	<ul style="list-style-type: none"> • Check remote controller and network adaptor wiring.
E04	—	—	Indoor unit	Indoor-outdoor communication circuit trouble (detected at indoor end)	Stop of corresponding unit	Indoor unit is not receiving signal from outdoor unit.	<ul style="list-style-type: none"> • Check order in which power was turned on for indoor and outdoor units. • Check indoor address setting. • Check indoor-outdoor tie cable. • Check outdoor terminator resistor setting (SW100, Bit 2).

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Controller	Outdoor 7-segment display						
	Check code	Sub-code					
E04	E06	No. of indoor units from which signal is received normally	I/F	Dropping out of indoor unit	All stop	Condition 1 All indoor unit initially communicating normally fails to return signal for specified length of time. Condition 2 Outdoor I / F board SW103, Bit4 : OFF (Factory default)	<ul style="list-style-type: none"> • Check power supply to indoor unit. (Is power turned on?) • Check connection of indoor-outdoor communication cable. • Check connection of communication connectors on indoor P.C. board. • Check connection of communication connectors on outdoor P.C. board. • Check for failure in indoor P.C. board. • Check for failure in outdoor P.C. board (I/F).
	—	—	Indoor unit	Indoor-outdoor communication circuit trouble	Only specified indoor units stop	Condition 1 Indoor unit initially communicating normally fails to return signal for specified length of time.	<ul style="list-style-type: none"> • Check power supply to indoor unit. (Is power turned on?) • Check indoor-outdoor power-on sequence. • Check indoor address setting • Check wiring of Indoor-outdoor communication wires • Check outdoor terminator resistor setting (SW100, Bit 2).
E04/E06	E06	No. of indoor units from which signal is received normally	Indoor unit	Indoor-outdoor communication circuit trouble (E04)	All stop	One indoor unit or more initially communicating normally fails to return signal for specified length of time. (detected when power is turned on)	<ul style="list-style-type: none"> • Check power supply to indoor unit. (Is power turned on?) • Check indoor-outdoor power-on sequence. • Check indoor address setting • Check wiring of Indoor-outdoor communication wires • Check outdoor terminator resistor setting (SW100, Bit 2).
			I/F	Dropping out of indoor unit (E06)			
—	E07	—	I/F	Indoor-outdoor communication circuit trouble (detected at outdoor end)	All stop	Signal cannot be transmitted from outdoor to indoor units for 30 seconds continuously.	<ul style="list-style-type: none"> • Check outdoor terminator resistor setting (SW100, Bit 2). • Check connection of indoor-outdoor communication circuit.
E08	E08	Duplicated indoor address	Indoor unit I/F	Duplicated indoor address	All stop	More than one indoor unit are assigned same address.	<ul style="list-style-type: none"> • Check indoor addresses. • Check for any change made to remote controller connection (group/individual) since indoor address setting.

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Controller	Outdoor 7-segment display						
	Check code	Sub-code					
E09	—	—	Remote controller	Duplicated master remote controller	Stop of corresponding unit	In two remote controller configuration (including wireless), both controllers are set up as master. (Header indoor unit is shut down with alarm, while follower indoor units continue operating.)	<ul style="list-style-type: none">• Check remote controller settings.• Check remote controller P.C. boards.
E10	—	—	Indoor unit	Indoor inter-MCU communication trouble	Stop of corresponding unit	Communication cannot be established/maintained upon turning on of power or during communication.	<ul style="list-style-type: none">• Check for failure in indoor P.C. board
E12	E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	I/F	Automatic address starting trouble	All stop	<ul style="list-style-type: none">• Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress.• Outdoor automatic address setting is started while automatic address setting for indoor units is in progress.	<ul style="list-style-type: none">• Check whether the outdoor unit of other systems or the indoor unit is connected to Uv (U1/U2) line or Uc (U5/U6) line.• Perform automatic address setting again after disconnecting communication cable to that refrigerant line.
E15	E15	—	I/F	Indoor unit not found during automatic address setting	All stop	Indoor unit cannot be detected after indoor automatic address setting is started.	<ul style="list-style-type: none">• Check connection of indoor-outdoor communication line.• Check for trouble in indoor power supply system.• Check for noise from other devices.• Check for power failure.• Check for failure in indoor P.C. board.
E16	E16	00: Capacity over 01:- No. of units connected	I/F	Too many indoor units connected	All stop	<ul style="list-style-type: none">• Combined capacity of indoor units is too large. <p>Note: If this code comes up after backup setting for outdoor unit failure is performed, perform "No capacity over detected" setting.</p> <p><"No capacity over detected" setting method> Turn on SW103 / Bit 3 on I/F P.C. board of outdoor header unit. For Cooling Only model, this check code is not displayed even if it exceeds the combined capacity of indoor units.</p> <ul style="list-style-type: none">• More than 128 indoor units are connected.	<ul style="list-style-type: none">• Check capacities of indoor units connected.• Check total capacity of indoor units.• Check capacity settings of outdoor units.• Check No. of indoor units connected.• Check for failure in outdoor P.C. board (I/F).
E17	—	—	Indoor unit	communication trouble between indoor unit(s) and FS unit(s)	Stop of corresponding unit(s)	There is no communication from FS unit(s)	<ul style="list-style-type: none">• Check order in which power was turned on.• Check indoor unit(s)-FS unit(s) cable.• Check FS unit port address setting of indoor unit.
E18	—	—	Indoor unit	Trouble in communication between indoor header and follower units	Stop of corresponding unit	Periodic communication between indoor header and follower units cannot be maintained.	<ul style="list-style-type: none">• Check remote controller wiring.• Check indoor power supply wiring.• Check P.C. boards of indoor units.
E19	E19	00: No header unit 02: Two or more header units	I/F	Trouble in number of outdoor header units	All stop	<ul style="list-style-type: none">• There are more than one outdoor header units in one line.• There is no outdoor header unit in one line.	<p>The outdoor unit which turned on SW101 and the bit 1 of the interface P.C. board is set to Header unit.</p> <ul style="list-style-type: none">• Check SW101 bit 1 of follower outdoor unit.• Check connection of indoor-outdoor communication line.• Check for failure in outdoor P.C. board (I/F).
E20	E20	01: Connection of outdoor unit from other line 02: Connection of indoor unit from other line	I/F	Connection to other line found during automatic address setting	All stop	Equipment from other line is found to have been connected when indoor automatic address setting is in progress.	Check whether the outdoor unit of other systems or the indoor unit is connected to Uv (U1/U2) line or Uc (U5/U6) line.

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)																																																																								
Controller	Outdoor 7-segment display																																																																														
	Check code	Sub-code																																																																													
E23	E23	—	I/F	Outdooroutdoor communication transmission trouble	All stop	Signal cannot be transmitted to other outdoor units for at least 30 seconds continuously.	<ul style="list-style-type: none">• Check power supply to outdoor units. (Is power turned on?)• Check connection of tie cables between outdoor units for bad contact or broken wire.• Check communication connectors on outdoor P.C. boards.• Check for failure in outdoor P.C. board (I/F).• Check termination resistance setting for communication between outdoor units.																																																																								
E25	E25	—	I/F	Duplicated follower outdoor address	All stop	There is duplication in outdoor addresses set manually.	Note: Do not set outdoor addresses manually.																																																																								
E26	E26	Address of outdoor unit from which signal is not received normally	I/F	Signal lack of outdoor unit	All stop	Outdoor unit initially communicating normally fails to return signal for specified length of time.	<ul style="list-style-type: none">• Backup setting is being used for outdoor units.• Check power supply to outdoor unit. (Is power turned on?)• Check connection of tie cables between outdoor units for bad contact or broken wire.• Check communication connectors on outdoor P.C. boards.• Check for failure in outdoor P.C. board (I/F).																																																																								
The check code which occurred follower outdoor unit is displayed	E28	Detected outdoor unit No.	I/F	Outdoor follower unit trouble	All stop	Outdoor header unit receives trouble code from outdoor follower unit.	<ul style="list-style-type: none">• Check check code displayed on outdoor follower unit. <Convenient functions> If SW04 is pushed and held for at least 1 second while [E28] is displayed on the 7-segment display of outdoor header unit, the fan of the outdoor unit that has been shut down due to an trouble comes on. If SW04 and SW05 are pushed simultaneously, the fans of normal outdoor units come on. To stop the fan or fans, push SW05 on its own.																																																																								
E31	E31	<table><tr><th colspan="4">P.C.board</th></tr><tr><th colspan="2">Compressor</th><th colspan="2">Fan Motor</th></tr><tr><th>1</th><th>2</th><th>1</th><th>2</th></tr><tr><td>01</td><td>O</td><td></td><td></td></tr><tr><td>02</td><td></td><td>O</td><td></td></tr><tr><td>03</td><td>O</td><td>O</td><td></td></tr><tr><td>08</td><td></td><td></td><td>O</td></tr><tr><td>09</td><td>O</td><td></td><td>O</td></tr><tr><td>0A</td><td></td><td>O</td><td>O</td></tr><tr><td>0B</td><td>O</td><td>O</td><td>O</td></tr><tr><td>10</td><td></td><td></td><td>O</td></tr><tr><td>11</td><td>O</td><td></td><td>O</td></tr><tr><td>12</td><td></td><td>O</td><td>O</td></tr><tr><td>13</td><td>O</td><td>O</td><td>O</td></tr><tr><td>18</td><td></td><td></td><td>O O</td></tr><tr><td>19</td><td>O</td><td></td><td>O O</td></tr><tr><td>1A</td><td></td><td>O</td><td>O O</td></tr><tr><td>1B</td><td>O</td><td>O</td><td>O O</td></tr></table> <p>Circle (O): Trouble P.C. board</p>	P.C.board				Compressor		Fan Motor		1	2	1	2	01	O			02		O		03	O	O		08			O	09	O		O	0A		O	O	0B	O	O	O	10			O	11	O		O	12		O	O	13	O	O	O	18			O O	19	O		O O	1A		O	O O	1B	O	O	O O	I/F	P.C. board communication trouble	All stop	Communication is disrupted between P.C. board in inverter box.	<ul style="list-style-type: none">• Check wiring and connectors involved in communication between P.C. board I/F P.C. board for bad contact or broken wire.• Check for failure in outdoor P.C. board (I/F, comp. P.C. board or Fan P.C. board).• Check for external noise.
P.C.board																																																																															
Compressor		Fan Motor																																																																													
1	2	1	2																																																																												
01	O																																																																														
02		O																																																																													
03	O	O																																																																													
08			O																																																																												
09	O		O																																																																												
0A		O	O																																																																												
0B	O	O	O																																																																												
10			O																																																																												
11	O		O																																																																												
12		O	O																																																																												
13	O	O	O																																																																												
18			O O																																																																												
19	O		O O																																																																												
1A		O	O O																																																																												
1B	O	O	O O																																																																												
		80		Communication trouble between MCU and Sub MCU	All stop	Communication between MCU and Sub MCU stopped.	<ul style="list-style-type: none">• Operation of power supply reset (OFF for 60 seconds or more)• Outdoor I/F PC board trouble check																																																																								

Controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
F01	—	—	Indoor unit	Indoor TCJ sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TCJ sensor connector and wiring. • Check resistance characteristics of TCJ sensor. • Check for failure in indoor P.C. board.
F02	—	—	Indoor unit	Indoor TC2 sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TC2 sensor connector and wiring. • Check resistance characteristics of TC2 sensor. • Check for failure in indoor P.C. board.
F03	—	—	Indoor unit	Indoor TC1 sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TC1 sensor connector and wiring. • Check resistance characteristics of TC1 sensor. • Check for failure in indoor P.C. board.
F04	F04	—	I/F	TD1 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TD1 sensor connector. • Check resistance characteristics of TD1 sensor. • Check for failure in outdoor P.C. board (I/F).
F05	F05	—	I/F	TD2 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TD2 sensor connector. • Check resistance characteristics of TD2 sensor. • Check for failure in outdoor P.C. board (I/F).
F06	F06	01: TE1 sensor trouble 02: TE2 sensor trouble 03: TE3 sensor trouble	I/F	TE1/TE2/TE3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TE1/TE2/TE3 sensor connectors. • Check resistance characteristics of TE1/TE2/TE3 sensors. • Check for failure in outdoor P.C. board (I/F).
F07	F07	01: TL1 sensor trouble 02: TL2 sensor trouble 03: TL3 sensor trouble	I/F	TL1/TL2/TL3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TL1/TL2/TL3 sensor connector. • Check resistance characteristics of TL1/TL2/TL3 sensor. • Check for failure in outdoor P.C. board (I/F).
F08	F08	—	I/F	TO sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TO sensor connector. • Check resistance characteristics of TO sensor. • Check for failure in outdoor P.C. board (I/F).
F09	F09	01: TG1 sensor trouble 02: TG2 sensor trouble 03: TG3 sensor trouble	I/F	TG1/TG2/TG3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TG1/TG2/TG3 sensor connectors. • Check resistance characteristics of TG1/TG2/TG3 sensors. • Check for failure in outdoor P.C. board (I/F).
F10	—	—	Indoor unit	Indoor TA sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TA sensor connector and wiring. • Check resistance characteristics of TA sensor. • Check for failure in indoor P.C. board.

Controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
F11	—	—	Indoor unit	Indoor TF sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TF sensor connector and wiring. • Check resistance characteristics of TF sensor. • Check for failure in indoor P.C. board.
F12	F12	01: TS1 sensor trouble 02: TS2 sensor trouble 03: TS3 sensor trouble	I/F	TS1/TS2/TS3 sensor trouble	All stop	<ul style="list-style-type: none"> • Sensor resistance is infinity or zero (open/short circuit). 	<ul style="list-style-type: none"> • Check connection of TS1/TS2/TS3 sensor connector • Check resistance characteristics of TS1/TS2/TS3 sensor. • The attachment check of TS3 sensor. • Check for failure in indoor P.C. board.
F13	F13	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	TH sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Failure in IPM built-in temperature sensor → Replace Compressor P.C. board.
F15	F15	—	I/F	Outdoor temperature sensor wiring trouble (TE1, TL1)	All stop	During compressor operation in HEAT mode, TL1 continuously provides temperature reading higher than indicated by TL1 by at least specified margin for 3 minutes or more.	<ul style="list-style-type: none"> • Check installation of TE1 and TL1 sensors. • Check resistance characteristics of TE1 and TL1 sensors. • Check for outdoor P.C. board (I/F) trouble
F16	F16	—	I/F	Outdoor pressure sensor wiring trouble (Pd, Ps)	All stop	Readings of high-pressure Pd sensor and low-pressure Ps sensor are switched. Output voltages of both sensors are zero.	<ul style="list-style-type: none"> • Check connection of high-pressure Pd sensor connector. • Check connection of low-pressure Ps sensor connector. • Check for failure in pressure sensors Pd and Ps. • Check for trouble in outdoor P.C. board (I/F). • Check for compressor poor compression.
F23	F23	—	I/F	Ps sensor trouble	All stop	Output voltage of Ps sensor is zero.	<ul style="list-style-type: none"> • Check for connection trouble involving Ps sensor and Pd sensor connectors. • Check connection of Ps sensor connector. • Check for failure in Ps sensor. • Check for compressor poor compression. • Check for failure in 4-way valve. • Check for failure in outdoor P.C. board (I/F). • Check for failure in SV4 circuit.
F24	F24	—	I/F	Pd sensor trouble	All stop	Output voltage of Pd sensor is zero (sensor open-circuited). Pd > 4.15MPa despite compressor having been turned off.	<ul style="list-style-type: none"> • Check connection of Pd sensor connector. • Check for failure in Pd sensor. • Check for failure in outdoor P.C. board (I/F).
F29	—	—	Indoor unit	Other indoor trouble	Stop of corresponding unit	Indoor P.C. board does not operate normally.	<ul style="list-style-type: none"> • Check for failure in indoor P.C. board (failure EEPROM)
F31	F31	—	I/F	Outdoor EEPROM trouble	All stop *1	Outdoor P.C. board (I/F) does not operate normally.	<ul style="list-style-type: none"> • Check power supply voltage. • Check power supply noise. • Check for failure in outdoor P.C. board (I/F).

*1 Total shutdown in case of header unit
Continued operation in case of follower unit

Controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
H01	H01	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor breakdown	All stop	Inverter current detection circuit detects overcurrent and shuts system down.	<ul style="list-style-type: none"> • Check power supply voltage. • Check for failure in compressor. • Check for possible cause of abnormal overloading. • Check for failure in outdoor P.C. board (Compressor).
H02	H02	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor trouble (lockup)	All stop	Overcurrent is detected several seconds after startup of inverter compressor.	<ul style="list-style-type: none"> • Check for failure in compressor. • Check connection of connectors/terminals on compressor P.C. board. • Check conductivity of case heater. (Check for refrigerant problem inside compressor.)
H03	H03	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Current detection circuit trouble	All stop	Current flow of at least specified magnitude is detected despite inverter compressor having been shut turned off.	<ul style="list-style-type: none"> • Check current detection circuit wiring. • Check failure in outdoor P.C. board (Compressor).
H05	H05	—	I/F	TD1 sensor miswiring (incomplete insertion)	All stop	Discharge temperature of compressor 1 (TD1) does not increase despite compressor being in operation.	<ul style="list-style-type: none"> • Check installation of TD1 sensor. • Check connection of TD1 sensor connector and wiring. • Check resistance characteristics of TD1 sensor. • Check for failure in outdoor P.C. board (I/F).
H06	H06	—	I/F	Activation of low-pressure protection	All stop	Low-pressure Ps sensor detects operating pressure lower than 0.02MPa.	<ul style="list-style-type: none"> • Check service valves to confirm full opening (both gas and liquid sides). • Check outdoor PMVs for clogging (PMV1, 2, 3). • Check for failure in SV4 circuits. • Check for failure in low-pressure Ps sensor. • Check indoor filter for clogging. • Check valve opening status of indoor PMV. • Check refrigerant piping for clogging. • Check operation of outdoor fan (during heating). • Check for insufficiency in refrigerant quantity.
H07	H07	—	I/F	Low oil level protection	All stop	Operating compressor detects continuous state of low oil level for about 2 hours.	<p><All outdoor units in corresponding line to be checked></p> <ul style="list-style-type: none"> • Check connection and installation of TK1 and TK2 sensors. • Check resistance characteristics of TK1 and TK2 sensors. • Check for gas or oil leak in same line. • Check for refrigerant problem inside compressor casing. • Check SV3D, SV3F valves for failure. • Check oil return circuit of oil separator for clogging. • Check oil equalizing circuit for clogging.

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Controller	Outdoor 7-segment display						
	Check code	Sub-code					
H08	H08	01: TK1 sensor trouble 02: TK2 sensor trouble	I/F	Trouble in temperature sensor for oil level detection	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TK1 sensor connector. • Check resistance characteristics of TK1 sensor. • Check for failure in outdoor P.C. board (I/F).
					All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> • Check connection of TK2 sensor connector. • Check resistance characteristics of TK2 sensor. • Check for failure in outdoor P.C. board (I/F).
H15	H15	—	I/F	TD2 sensor miswiring (incomplete insertion)	All stop	Discharge temperature of (TD2) does not increase despite compressor 2 being in operation.	<ul style="list-style-type: none"> • Check installation of TD2 sensor. • Check connection of TD2 sensor connector and wiring. • Check resistance characteristics of TD2 sensor. • Check for failure in outdoor P.C. board (I/F).
H16	H16	01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	I/F	Oil level detection circuit trouble	All stop	No temperature change is detected by TK1 despite compressor 1 having been started.	<ul style="list-style-type: none"> • Check for disconnection of TK1 sensor. • Check resistance characteristics of TK1 sensor. • Check for connection trouble involving TK1 and TK2 sensors • Check for clogging in oil equalizing circuit capillary. • Check for refrigerant entrapment inside compressor.
						No temperature change is detected by TK2 despite compressor 2 having been started.	<ul style="list-style-type: none"> • Check for disconnection of TK2 sensor. • Check resistance characteristics of TK2 sensor. • Check for connection trouble involving TK1 and TK2 sensors • Check SV3F valve malfunction. • Check for clogging in oil equalizing circuit capillary. • Check for refrigerant entrapment inside compressor.
H17	H17	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor trouble (Step-out)	All stop	Compressor is in step-out condition.	<ul style="list-style-type: none"> • Check power supply voltage. • Check for failure in compressor. • Check for possible cause of abnormal overloading. • Check for failure in outdoor P.C. board (compressor).
H28	H28	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor motor winding trouble	All stop	Abnormal compressor current is detected	<ul style="list-style-type: none"> • Check for failure in compressor. • Check connection of connectors/terminals on compressor and compressor P.C. board • Check winding resistance between phases of compressor.

Controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Sub-code					
J01	—	—	FS unit	Communication trouble between indoor unit(s) and FS unit	Stop of corresponding unit(s) (Indoor unit(s) connected to the same FS unit)	FS unit not receiving signal from indoor unit(s)	<ul style="list-style-type: none"> • Check wiring between FS unit and indoor unit(s). • Check FS unit port address setting of indoor unit. • Check FS unit port combining branches setting of indoor unit.
J02	—	—	FS unit	Communication trouble between control boards in Flow Selector unit	Stop of corresponding unit(s) (Indoor unit(s) connected to the same FS unit)	There is no communication from P.C.board after No.2 of FS unit Multi-port type.	<ul style="list-style-type: none"> • Check connector connection of FS unit for PC board communication. • Check for PC board defects in FS unit. • Check FS unit control number setting (SW01, Bit 1 to 4).
J03	—	—	I/F	Duplicated FS units	Stop of corresponding unit(s)	Multiple FS units are installed in one indoor unit.	<ul style="list-style-type: none"> • Check indoor unit(s)-FS unit(s) cable
L02	L02	Detected indoor unit address	Indoor unit	Outdoor units model disagreement trouble	All stop	In case of different outdoor unit (Not corresponded to Air to Air Heat Exchanger type)	<ul style="list-style-type: none"> • Check outdoor unit model.
		—	I/F	Indoor unit incompatible with TU2C-LINK	All stop	<ul style="list-style-type: none"> • Indoor unit incompatible with TU2C-Link is connected. • Remote controller or FS unit incompatible with TU2C-Link is connected. 	<ul style="list-style-type: none"> • Check indoor unit model. • Check if remote controller or Flow Selector unit compatible with TU2C-Link is connected.
L03	—	—	Indoor unit	Duplicated indoor header unit	Stop of corresponding unit	There are more than one header units in group.	<ul style="list-style-type: none"> • Check indoor addresses. • Check for any change made to remote controller connection (group/individual) since indoor address setting.
L04	L04	—	I/F	Duplicated outdoor line address	All stop	There is duplication in line address setting for outdoor units belonging to different refrigerant piping systems.	<ul style="list-style-type: none"> • Check line addresses.

Controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display	Sub-code					
L05	—	—	I/F	Duplicated priority indoor unit (as displayed on priority indoor unit)	All stop	More than one indoor units have been set up as priority indoor unit.	• Check display on priority indoor unit.
L06	L06	No. of priority indoor units	I/F	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	All stop	More than one indoor units have been set up as priority indoor unit.	• Check displays on priority indoor unit and outdoor unit.
L07	—	—	Indoor unit	Connection of group control cable to standalone indoor unit	Stop of corresponding unit	There is at least one standalone indoor unit to which group control cable is connected.	• Check indoor addresses.
L08	L08	—	Indoor unit	Indoor group / addresses not set	Stop of corresponding unit	Address setting has not been performed for indoor units.	• Check indoor addresses. Note: This code is displayed when power is turned on for the first time after installation.
L09	—	—	Indoor unit	Indoor capacity not set	Stop of corresponding unit	Capacity setting has not been performed for indoor unit.	Set indoor capacity. (DN = 11)
L10	L10	—	I/F	Outdoor capacity not set	All stop	Initial setting of I/F P.C. board has not been implemented.	• Check model setting of P.C. board for servicing outdoor I/F P.C. board.
L11	L11	Detected indoor unit address	I/F	Flow Selector unit installation trouble	All stop	There is no connection to Flow Selector unit, and indoor unit is not set to "cooling only".	• Check connection of the communication line between indoor unit and FS unit. • Check cooling-only setting of indoor units. • Check if FS unit is installed correctly.
L13	L13	Detected indoor unit address	I/F	Flow Selector unit miswiring and misconfiguration trouble	All stop	<ul style="list-style-type: none"> • No indoor unit is connected to No.1 port of FS unit Multi-port type. • A number that is one larger than the port address of the indoor unit for which "combining branches" is set. (Example; If the port address of the indoor unit for which "combining branches" is set to 3, 4 must not be set) • Multiple remote controller groups are set to one port of the FS unit, and different port address is set for one of the groups. • Same address is set for different FS units. 	<ul style="list-style-type: none"> • Check FS unit address setting of indoor unit. • Check FS unit port address setting of indoor unit. • Check FS unit port combining branches settings of indoor units. • Check group setting of indoor unit. • Check PC board defects of indoor unit. • Check cooling-only setting of indoor units.
L17	L17	—	I/F	Outdoor model incompatibility trouble	All stop	Outdoor unit that cannot be connected is connected.	• Check the model name of the outdoor unit.
L20	—	—	Network adaptor Indoor unit	Duplicated central control address	All stop	There is duplication in central control address setting.	• Check central control addresses.
L23	—	—	I/F	SW setting trouble	All stop	Outdoor P.C. board (I/F) does not operate normally.	• Check switch setting of outdoor P.C. board (I/F).

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)																																																																																								
Controller	Outdoor 7-segment display																																																																																														
	Check code	Sub-code																																																																																													
L24	L24	02: Indoor units operation mode priority setting	I/F	FS unit(s) setting trouble	All stop	Priority setting has not been performed for indoor units	<ul style="list-style-type: none">• Check indoor units operation mode priority setting.• Check outdoor unit 7 segment monitor.																																																																																								
L28	L28	—	I/F	Too many outdoor units connected	All stop	There are more than 5 outdoor units.	<ul style="list-style-type: none">• Check No. of outdoor units connected (Only up to 5 units per system allowed).• Check communication lines between outdoor units.• Check for failure in outdoor P.C. board (I/F).																																																																																								
L29	L29	<table><tr><th colspan="4">P.C. board</th></tr><tr><th colspan="2">Compressor</th><th colspan="2">Fan Motor</th></tr><tr><th></th><th>1</th><th>2</th><th>1</th><th>2</th></tr><tr><td>01</td><td><input type="radio"/></td><td></td><td></td><td></td></tr><tr><td>02</td><td></td><td><input type="radio"/></td><td></td><td></td></tr><tr><td>03</td><td><input type="radio"/></td><td><input type="radio"/></td><td></td><td></td></tr><tr><td>08</td><td></td><td></td><td><input type="radio"/></td><td></td></tr><tr><td>09</td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td></td></tr><tr><td>0A</td><td></td><td><input type="radio"/></td><td><input type="radio"/></td><td></td></tr><tr><td>0B</td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td></td></tr><tr><td>10</td><td></td><td></td><td></td><td><input type="radio"/></td></tr><tr><td>11</td><td><input type="radio"/></td><td></td><td></td><td><input type="radio"/></td></tr><tr><td>12</td><td></td><td><input type="radio"/></td><td></td><td><input type="radio"/></td></tr><tr><td>13</td><td><input type="radio"/></td><td><input type="radio"/></td><td></td><td><input type="radio"/></td></tr><tr><td>18</td><td></td><td></td><td><input type="radio"/></td><td><input type="radio"/></td></tr><tr><td>19</td><td><input type="radio"/></td><td></td><td><input type="radio"/></td><td><input type="radio"/></td></tr><tr><td>1A</td><td></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td></tr><tr><td>1B</td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td></tr></table> <p>Circle (O): Trouble P.C. board</p>	P.C. board				Compressor		Fan Motor			1	2	1	2	01	<input type="radio"/>				02		<input type="radio"/>			03	<input type="radio"/>	<input type="radio"/>			08			<input type="radio"/>		09	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		0A		<input type="radio"/>	<input type="radio"/>		0B	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		10				<input type="radio"/>	11	<input type="radio"/>			<input type="radio"/>	12		<input type="radio"/>		<input type="radio"/>	13	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	18			<input type="radio"/>	<input type="radio"/>	19	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	1A		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	1B	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	I/F	Trouble in No. of P.C. board	All stop	Insufficient number of P.C. board are detected when power is turned on.	<ul style="list-style-type: none">• Check model setting of P.C. board for servicing outdoor I/F P.C. board.• Check connection of UART communication connector.• Check compressor P.C. board, fan P.C. board, and I/F P.C. board for failure.
		P.C. board																																																																																													
Compressor		Fan Motor																																																																																													
	1	2	1	2																																																																																											
01	<input type="radio"/>																																																																																														
02		<input type="radio"/>																																																																																													
03	<input type="radio"/>	<input type="radio"/>																																																																																													
08			<input type="radio"/>																																																																																												
09	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																																												
0A		<input type="radio"/>	<input type="radio"/>																																																																																												
0B	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																																												
10				<input type="radio"/>																																																																																											
11	<input type="radio"/>			<input type="radio"/>																																																																																											
12		<input type="radio"/>		<input type="radio"/>																																																																																											
13	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>																																																																																											
18			<input type="radio"/>	<input type="radio"/>																																																																																											
19	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>																																																																																											
1A		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																																											
1B	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																																											
		00	I/F	The number of inverter P.C. boards is abnormal.	All stop	When there is much number of an inverter P.C. board to model setting of an interface P.C. board.	<ul style="list-style-type: none">• Check I/F P.C. board exchange has been correctly performed as a procedure.• Check for failure in I/F P.C. board.• Check for inverter P.C. board for compressors and inverter P.C. board for fan																																																																																								

Controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
L30	L30	Detected indoor address	Indoor unit	Indoor external interlock (External abnormal input)	Stop of corresponding unit	<ul style="list-style-type: none"> Indoor unit has been shut down due to external abnormal input signal. 	When external device is connected: 1) Check for trouble in external device. 2) Check for trouble in indoor P.C. board. When external device is not connected: 1) Check for trouble in indoor P.C. board.
—	L31	—	I/F	Extended IC trouble	Continued operation	There is part failure in P.C. board (I/F).	Check outdoor P.C. board (I/F).
P01	—	—	Indoor unit	Indoor fan motor trouble	Stop of corresponding unit		<ul style="list-style-type: none"> Check the lock of fan motor (AC fan). Check wiring.
P03	P03	—	I/F	Discharge temperature TD1 trouble	All stop	Discharge temperature (TD1) exceeds 239°F (115°C).	<ul style="list-style-type: none"> Check outdoor service valves (gas side, liquid side) to confirm full opening. Check outdoor PMVs (PMV1, 2, 3, 4) for clogging. Check resistance characteristics of TD1 sensor. Check for insufficiency in refrigerant quantity. Check for failure in 4-way valve. Check for leakage of SV4 circuit. Check SV4 circuit (wiring or installation trouble in SV41 or SV42).
P04	P04	01: Compressor 1 side 02: Compressor 2 side	I/F	Activation of high-pressure SW	All stop	High-pressure SW is activated.	<ul style="list-style-type: none"> Check connection of high-pressure SW connector. Check for failure in Pd pressure sensor. Check outdoor service valves (gas side, liquid side) to confirm full opening. Check for failure in outdoor fan. Check for failure in outdoor fan motor. Check outdoor PMVs (PMV1, 2, 3) for clogging. Check indoor/outdoor heat exchangers for clogging. Check for short-circuiting of outdoor suction/discharge air flows. Check for failure in indoor P.C. board (I/F). Check for trouble in indoor fan system (possible cause of air flow reduction). Check opening status of indoor PMV. Check indoor-outdoor communication line for wiring trouble. Check for failure operation of check valve in discharge pipe convergent section. Check gas balancing SV4 valve circuit. Check for refrigerant overcharging.
P05	P05	00: Power detection trouble 01: Open phase	I/F	Power detection trouble / Open phase detection	All stop	<ul style="list-style-type: none"> Open phase is detected when power is turned on. 	<ul style="list-style-type: none"> Check for failure in indoor P.C. board (I/F). Check wiring of outdoor power supply. Check power supply voltage.
		1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor Vdc trouble	All stop	<ul style="list-style-type: none"> Inverter DC voltage is too high (over voltage) or too low (under voltage). 	

Controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display	Sub-code					
P07	P07	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Heat sink overheating trouble	All stop	Temperature sensor built into IPM (TH) is overheated.	<ul style="list-style-type: none"> • Check outdoor fan system trouble. • Check IPM and heat sink for thermal performance for failure installation. (e.g. mounting screws and thermal conductivity) • Check for failure in Compressor P.C. board. (failure IPM built-in temperature sensor (TH))
		01: Compressor 1 heat sink trouble 02: Compressor 2 heat sink trouble 04: Heat sink dewing	I/F	Heat sink overheating trouble Heat sink dewing trouble	All stop	Condensation detection on heat sink has occurred four times or more in operation. Temperature sensor built into IPM (TH) is overheated.	<ul style="list-style-type: none"> • Check outdoor fan system trouble. • Check IPM and heat sink for thermal performance for troubled installation. (e.g. mounting screws and thermal conductivity) • Check for failure in compressor P.C. board. (failure IPM built-in temperature sensor (TH)) • Check shortage of refrigerant. • Check outdoor service valves. • Check connection of TL2 sensor. • Check resistance characteristics of TL2 sensor. • Check resistance characteristics of TO sensor. • Check malfunctions of Pd and Ps sensors. • Check outdoor I/F P.C. board malfunction. • Check PMV2 and PMV3. • Check refrigerant stagnation.
P10	P10	Detected indoor address	Indoor unit	Indoor overflow trouble	All stop	<ul style="list-style-type: none"> • Float switch operates. • Float switch circuit is open-circuited or disconnected at connector. 	<ul style="list-style-type: none"> • Check float switch connector. • Check operation of drain pump. • Check drain pump circuit. • Check drain pipe for clogging. • Check for failure in indoor P.C. board.
P11	—	—	I/F	Outdoor heat exchanger freeze trouble	All stop	<ul style="list-style-type: none"> • Outdoor heat exchanger remaining frost detection has occurred eight times or more due to abnormal frost formation in heating operation. 	<ul style="list-style-type: none"> • Check shortage of refrigerant. • Check connection of TE1, TE2 and TE3 sensors. • Check resistance characteristics of TE1, TE2, and TE3 sensors. • Check disconnection of TS1 sensor. • Check resistance characteristics of TS1 sensor. • Check outdoor I/F P.C. board malfunction. • Check operation of 4 way valve. • Check operation of outdoor PMV (1, 2, 3). • Check short circuit from outlet air to inlet air.
P12	—	—	Indoor unit	Indoor fan motor trouble	Stop of corresponding unit	<ul style="list-style-type: none"> • Motor speed measurements continuously deviate from target value. • Overcurrent protection is activated. 	<ul style="list-style-type: none"> • Check connection of fan connector and wiring. • Check for failure in fan motor. • Check for failure in indoor P.C. board. • Check impact of outside air treatment (OA).

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Controller	Check code	Sub-code					
P13	P13	01: PMV1,2,3 side (Follower outdoor unit)	I/F	Outdoor liquid backflow detection trouble	All stop	<During cooling operation> When system is in cooling operation, high pressure is detected in the stopped outdoor unit.	<ul style="list-style-type: none"> • Check full-close operation of outdoor PMV1/2/3. • Check for failure in Pd or Ps sensor. • Check SV4 circuit (wiring or installation trouble in SV41/SV42). • Check capillary of Oil separator Oil-Return circuit for clogging. • Check for leakage of check valve in discharge pipe. • Check failure in outdoor P.C. board (I/F).
		02: PMV4 side (Follower outdoor unit)			All stop	<During cooling operation> When system is in cooling operation, liquid flow from PMV4 is detected in the stopped outdoor unit.	<ul style="list-style-type: none"> • Check full-close operation of outdoor PMV4. • Check for failure in Ps sensor. • Check connection and installation position of TO/TS1/TS3 sensors. • Check failure in outdoor P.C. board (I/F).
		03: PMV4 side			All stop	<During cooling operation> When system is in cooling operation, liquid flow from PMV4 is detected in the operating outdoor unit.	<ul style="list-style-type: none"> • Check full-close operation of outdoor PMV4. • Check for failure in Ps sensor. • Check connection and installation position of TO/TS1/TS3/TL1/TL3 sensors. • Check failure in outdoor P.C. board (I/F).
		04: PMV1,2,3 side			All stop	<During heating operation> When system is in heating operation, liquid flow from PMV1/2/3 is detected in the operating outdoor unit.	<ul style="list-style-type: none"> • Check full-close operation of outdoor PMV1/2/3. • Check for failure in Pd or Ps sensor. • Check connection and installation position of TD1/TD2/TG1/TG2/TG3 sensors. • Check outdoor fan operation. • Check failure in outdoor P.C. board (I/F).
P14	P14	01: Outdoor unit valve is closed	I/F	Another refrigerant cycle protection	All stop	Outdoor unit valve is forgotten to open during test run.	<ul style="list-style-type: none"> • Check service valves to confirm full opening. (both gas and liquid sides) • Check connection indoor-outdoor unit communication cable. • Check indoor unit sensor and PMV. • Check for broken or clogging at refrigerant piping.

Controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Sub-code					
P15	P15	01: TS condition	I/F	Gas leak detection (TS1 condition)	All stop	Protective shutdown due to sustained suction temperature at or above judgment criterion for at least 10 minutes is repeated four times or more. <TS trouble judgment criterion> In cooling operation: 140°F(60°C) In heating operation: 104°F(40°C)	<ul style="list-style-type: none"> • Check for insufficiency in refrigerant quantity. • Check outdoor service valves (gas side, liquid side) to confirm full opening. • Check PMVs (PMV1, 2, 3, 4) for clogging. • Check resistance characteristics of TS1 sensor. • Check for failure in 4-way valve. • Check SV4 circuit for leakage
		02: TD condition	I/F	Gas leak detection (TD condition)	All stop	Protective shutdown due to sustained discharge temperature (TD1 or TD2) at or above 226.4°F(108°C) for at least 10 minutes is repeated four times or more.	<ul style="list-style-type: none"> • Check for insufficiency in refrigerant quantity. • Check PMVs (PMV 1, 2, 3, 4) for clogging. • Check resistance characteristics of TD1 and TD2 sensors. • Check indoor filter for clogging. • Check piping for clogging. • Check SV4 circuit (for leakage or coil installation trouble).
P17	P17	—	I/F	Discharge temperature TD2 trouble	All stop	Discharge temperature (TD2) exceeds 239°F(115°C)	<ul style="list-style-type: none"> • Check outdoor service valves (gas side, liquid side) to confirm full opening. • Check outdoor PMVs (PMV1, 2, 3, 4) for clogging. • Check resistance characteristics of TD2 sensor. • Check for failure in 4-way valve. • Check SV4 circuit for leakage. • Check SV4 circuit (for wiring or installation trouble involving SV41 and SV42).

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Controller	Outdoor 7-segment display						
	Check code	Sub-code					
P19	P19	0#: 4-way valves *Put in outdoor unit No.in [#] mark. *When "0" in [#], 4-way valves reversing trouble for Follower outdoor unit.	I/F	4-way valve reversing trouble	All stop	Abnormal refrigerating cycle data is collected during heating operation.	<ul style="list-style-type: none"> • Check for failure in main body of 4-way valves. • Check for coil failure in 4-way valve and loose connection of its connector. • Check resistance characteristics of TS1 and TE1, TE2, TE3 sensors. • Check output voltage characteristics of Pd and Ps pressure sensors. • Check for wiring trouble involving TE1 and TL1 sensors. • <When "0" in [#]> • Check for failure in main body of 4-way valve 3 of Follower outdoor unit. • Check for coil failure in 4-way valve 3 and loose connection of its connector in Follower outdoor unit. • Check output voltage characteristics of Pd and Ps pressure sensors in Header outdoor unit.
		1#: 4-way valve 1		4-way valve reversing trouble		<ul style="list-style-type: none"> • Temperature difference between the TG1 and TU is 2 °C or less during cooling operation . • TG1 temperature is more than 20 °C higher than TG during heating operation. 	<ul style="list-style-type: none"> • Check for failure in main body of 4-way valve1. • Check for coil failure in 4-way valve1 and loose connection of its connector. • Check resistance characteristics of TG1 sensor. • Check output voltage characteristics of Pd and Ps pressure sensors. • Check the attachment of TG1 sensor.
		2#: 4-way valve 2		4-way valve reversing trouble		<ul style="list-style-type: none"> • Temperature difference between the TG2 or TG3 and TU is 2 °C or less during cooling operation . • TG2 or TG3 temperature is more than 20 °C higher than TG during heating operation. 	<ul style="list-style-type: none"> • Check for failure in main body of 4-way valve2. • Check for coil failure in 4-way valve2 and loose connection of its connector. • Check resistance characteristics of TG2 or TG3 sensors. • Check output voltage characteristics of Pd and Ps pressure sensors. • Check the attachment of TG2 or TG3 sensors.

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Controller	Outdoor 7-segment display						
	Check code	Sub-code					
P20	P20	—	I/F	Activation of high-pressure protection	All stop	<During cooling operation> Pd sensor detects pressure equal to or greater than 3.85 MPa. <During heating operation> Pd sensor detects pressure equal to or greater than 3.6 MPa.	<ul style="list-style-type: none">• Check for failure in Pd pressure sensor.• Check service valves (gas side, liquid side) to confirm full opening.• Check for failure in outdoor fan.• Check for failure in outdoor fan motor.• Check outdoor PMV (PMV1, 2, 3, 4) for clogging.• Check indoor/outdoor heat exchangers for clogging.• Check for short-circuiting of outdoor suction/discharge air flows.• Check for failure in outdoor P.C. board (I/F).• Check for failure in indoor fan system (possible cause of air flow reduction).• Check opening status of indoor PMV.• Check indoor-outdoor communication line for wiring trouble.• Check for trouble operation of check valve in discharge pipe convergent section.• Check gas balancing SV4 valve circuit.• Check for refrigerant overcharging.• Check for failure in main body of 4-way valve3.• Check for coil failure in 4-way valve 3 and loose connection of its connector.

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Controller	Outdoor 7-segment display						
	Check code	Sub-code					
P22	P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	Fan INV. P.C. board	Outdoor fan P.C. board trouble	All stop	Protected operation of Fan inverter P.C. board	<ul style="list-style-type: none"> • Check fan motor. • Check for failure in fan P.C. board. • Check connection of fan motor connector. • Check power voltage of the main power supply.
P25	P25	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor P.C. board trouble	All stop	IPM short-circuit is detected	<ul style="list-style-type: none"> • Check connector connection and wiring on compressor P.C. board. • Check for failure in compressor P.C. board.
P26	P26	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor Start up trouble	All stop	Open phase or IPM overcurrent for compressor is detected.	<ul style="list-style-type: none"> • Check for failure in compressor. • Check connection of connectors/terminals on compressor and compressor P.C. board. • Check winding resistance between phases of compressor. • Check for failure in compressor P.C. board.
P29	P29	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor position detection circuit trouble	All stop	Position detection is not going on normally.	<ul style="list-style-type: none"> • Check wiring and connector connection. • Check for compressor layer short-circuit. • Check for failure in compressor P.C. board.
P30	Differs according to nature of alarm-causing trouble		Central control device	Group control follower unit trouble	Continued operation	Trouble occurs in follower unit under group control. ([P30] is displayed on central control remote controller.)	• Check check code of unit that has generated alarm.
	(L20 displayed.)			Duplicated central control address	Continued operation	There is duplication in central control addresses.	• Check address settings.
P31	—	—	Indoor unit	Other indoor trouble (group follower unit trouble)	Stop of corresponding unit	There is trouble in other indoor unit in group, resulting in detection of E07/L07/L03/L08.	• Check indoor P.C. board.
S01	—	—	Central control device	Central control device reception trouble	Continued operation	Central control device is unable to receive signal.	<ul style="list-style-type: none"> • Check for failure in central control device. • Check for failure in central control communication line. • Check terminator resistor setting. • Check power supply for devices at other end of central control communication line. • Check failure in P.C. boards of devices at other end of central control communication line.

▼Points to Note When Servicing Compressor


(1) When checking the outputs of inverters, remove the wiring from all the compressors.

▼How to Check Inverter Output

- (1) Turn off the power supply.
- (2) Remove compressor leads from the compressor P.C. board.
- (3) Turn on the power supply and start cooling or heating operation.
- (4) Check the output voltage across each pair of inverter-side. If the result is unsatisfactory according to the judgment criteria given in the table below, replace the compressor P.C. board.

<Target model : MMY-MUP****FT6*>


No.	Measured point	Criterion
1	CN201 – CN202	280V – 460V
2	CN202 – CN203	280V – 460V
3	CN203 – CN201	280V – 460V

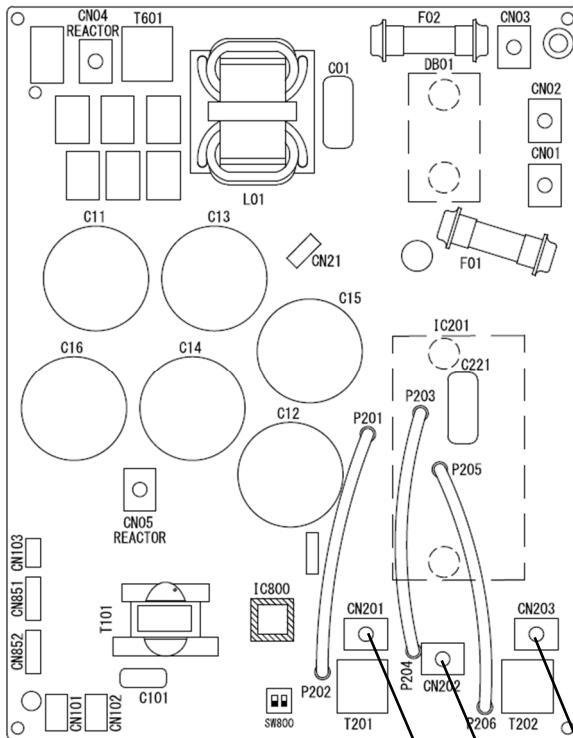

W : BLACK lead wire(CN203)
V : WHITE lead wire(CN202)
U : RED lead wire(CN201)

<Target model : MMY-MUP****FT9*>

No.	Measured point	Criterion
1	CN201 – CN202	150V – 260V
2	CN202 – CN203	150V – 260V
3	CN203 – CN201	150V – 260V
4	CN301 – CN302	150V – 260V
5	CN302 – CN303	150V – 260V
6	CN303 – CN301	150V – 260V

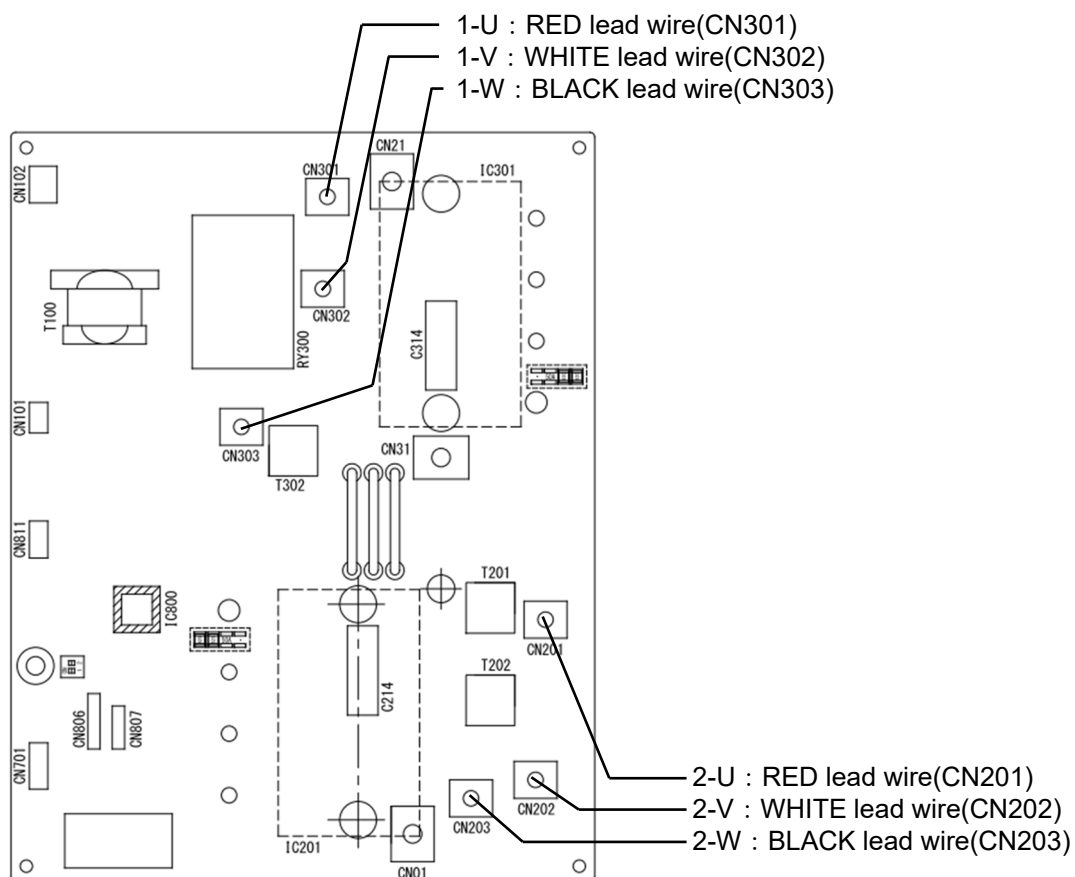


▼How to Check Resistance of Compressor Winding


- (1) Turn off the power supply.
- (2) Remove compressor leads from the compressor P.C. board. (Be sure to remove all the leads.)
- (3) With each compressor, check the phase-to-phase winding resistances and winding-to-outdoor cabinet resistance using a multimeter.
 - Earth trouble?
 - It is normal if the winding-to-outdoor cabinet resistance is 10MΩ or more.
 - Inter-winding short circuit?
 - <Target model : MMY-MUP****FT6*>
 - Normal resistance between phase to phase is below. (Use a mΩ multimeter)
 - LA771A3TB-20M : 0.242 ± 5%
 - LA1201K4FB-10UC : 0.204Ω ± 5%
 - <Target model : MMY-MUP****FT9*>
 - Normal resistance between terminal to terminal (T-T, S-S, R-R) is below. (Use a mΩ multimeter)
 - NA772A3TB-21M : 0.121 ± 5%
 - NA1201K4FB-10UC : 0.102 ± 5%

Compressor side terminal position


460V models (6~16ton)

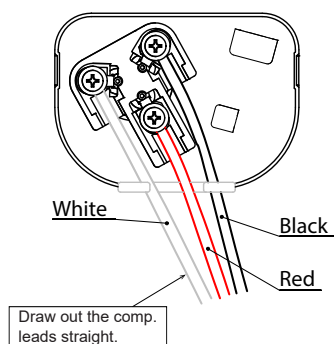

**208-230V
Standard 6~10ton
High heat 6ton**

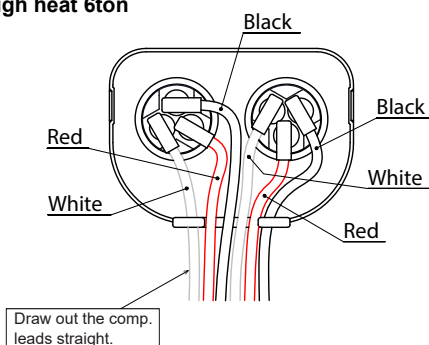



**208-230V
Standard 6~10ton
High heat 6ton**


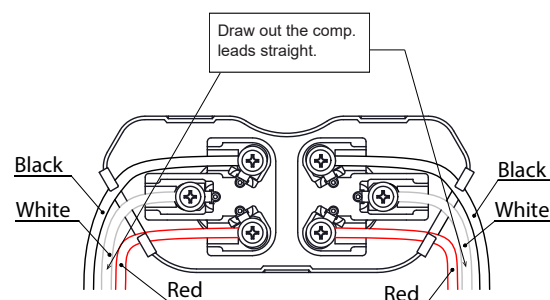




▼How to Check Resistance of Compressor Winding



- (1) Turn off the power supply.
- (2) Remove fan motor leads from the fan P.C. board for the outdoor fan.
- (3) Rotate the fan by hand. If the fan does not turn, the fan motor is troubled (locked up). Replace the fan motor. If the fan turns, measure the phase-to-phase winding resistances using a multimeter. It is normal if the measurements are in range below. (Use a digital multimeter.)
 - MMY-MUP****FT6* : 9.3 – 11.5Ω
 - MMY-MUP****FT9* : 3.0 – 3.7Ω



8-5. Diagnosis procedure for each check code

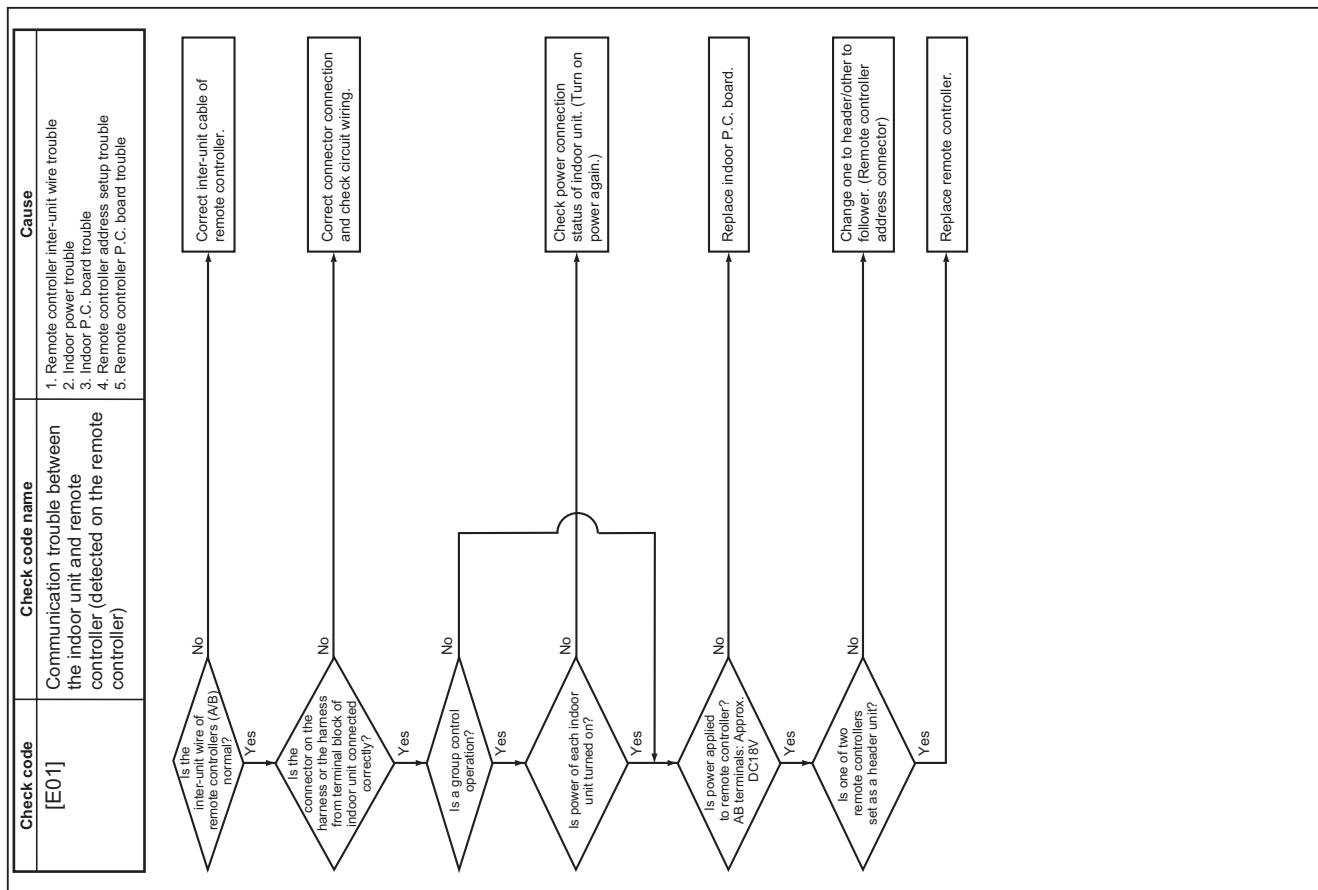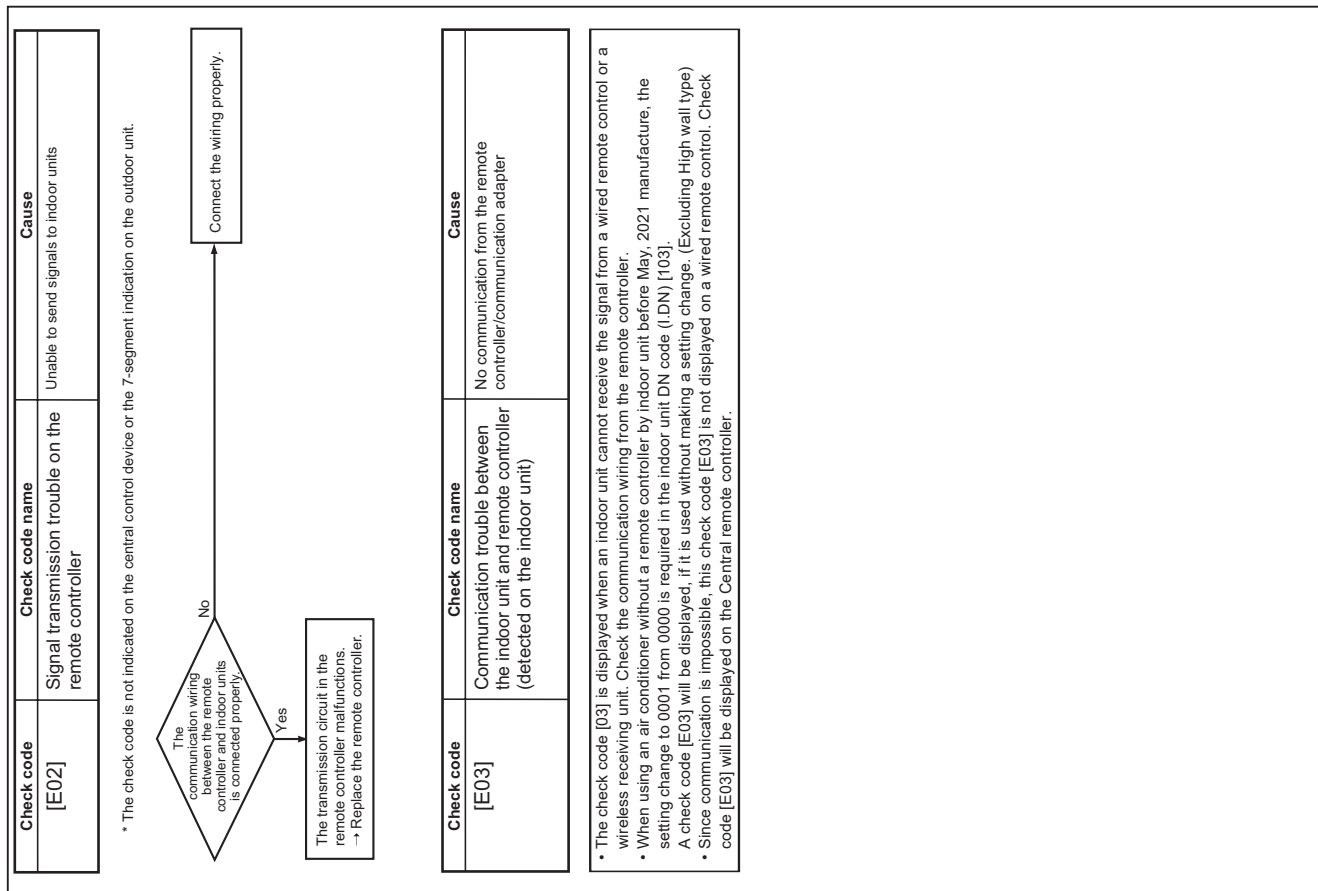


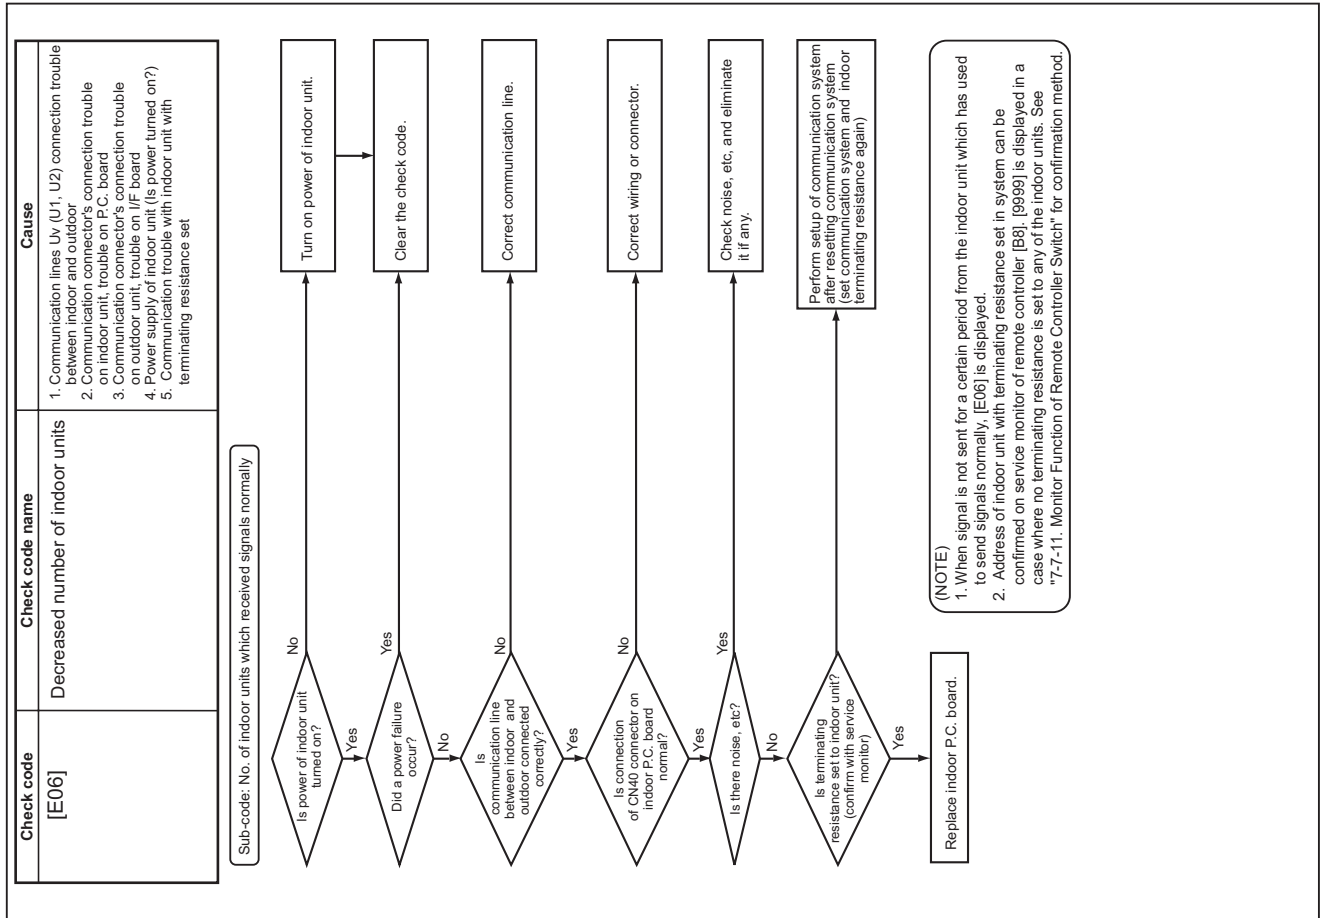
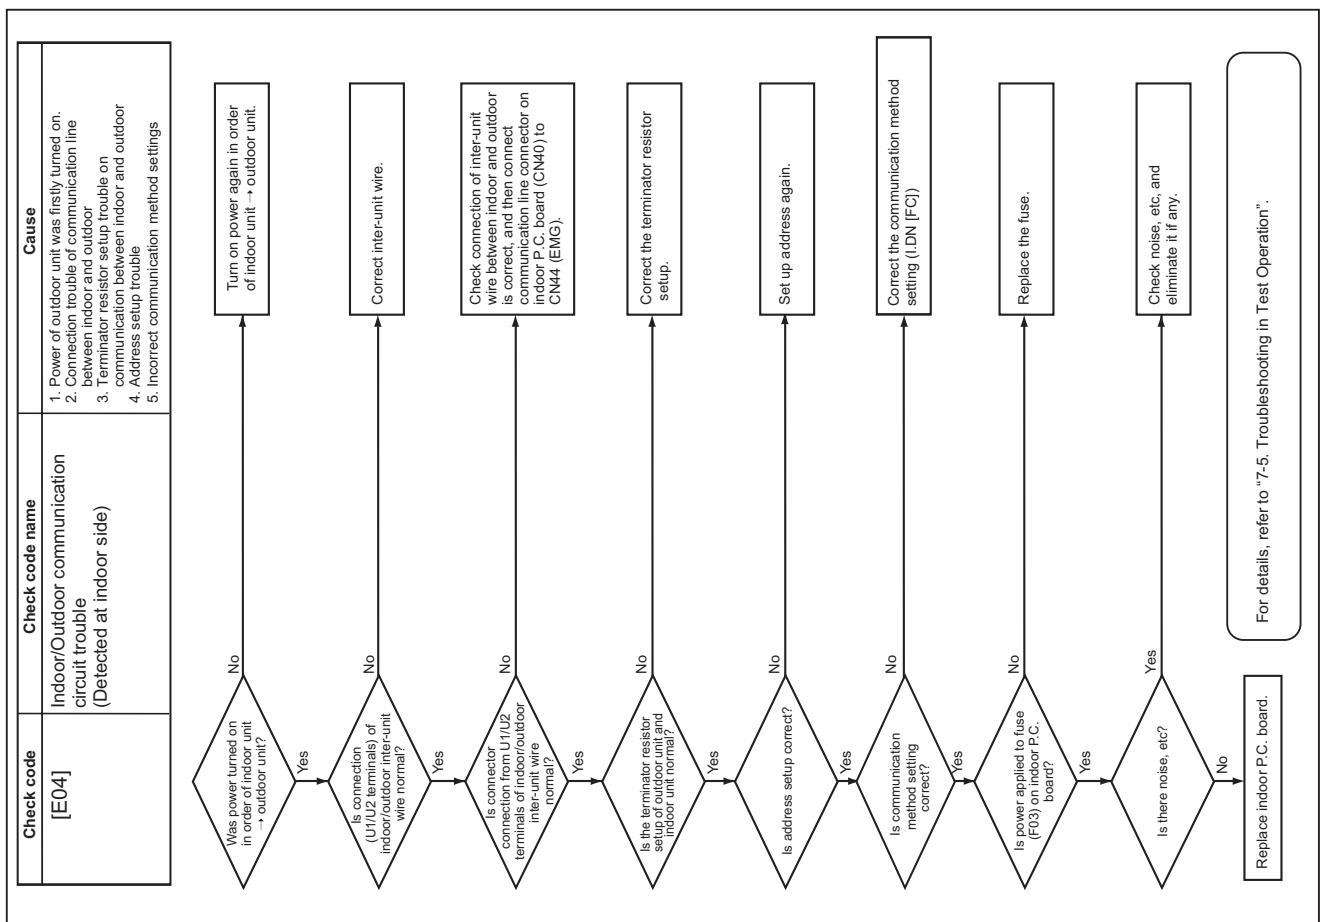


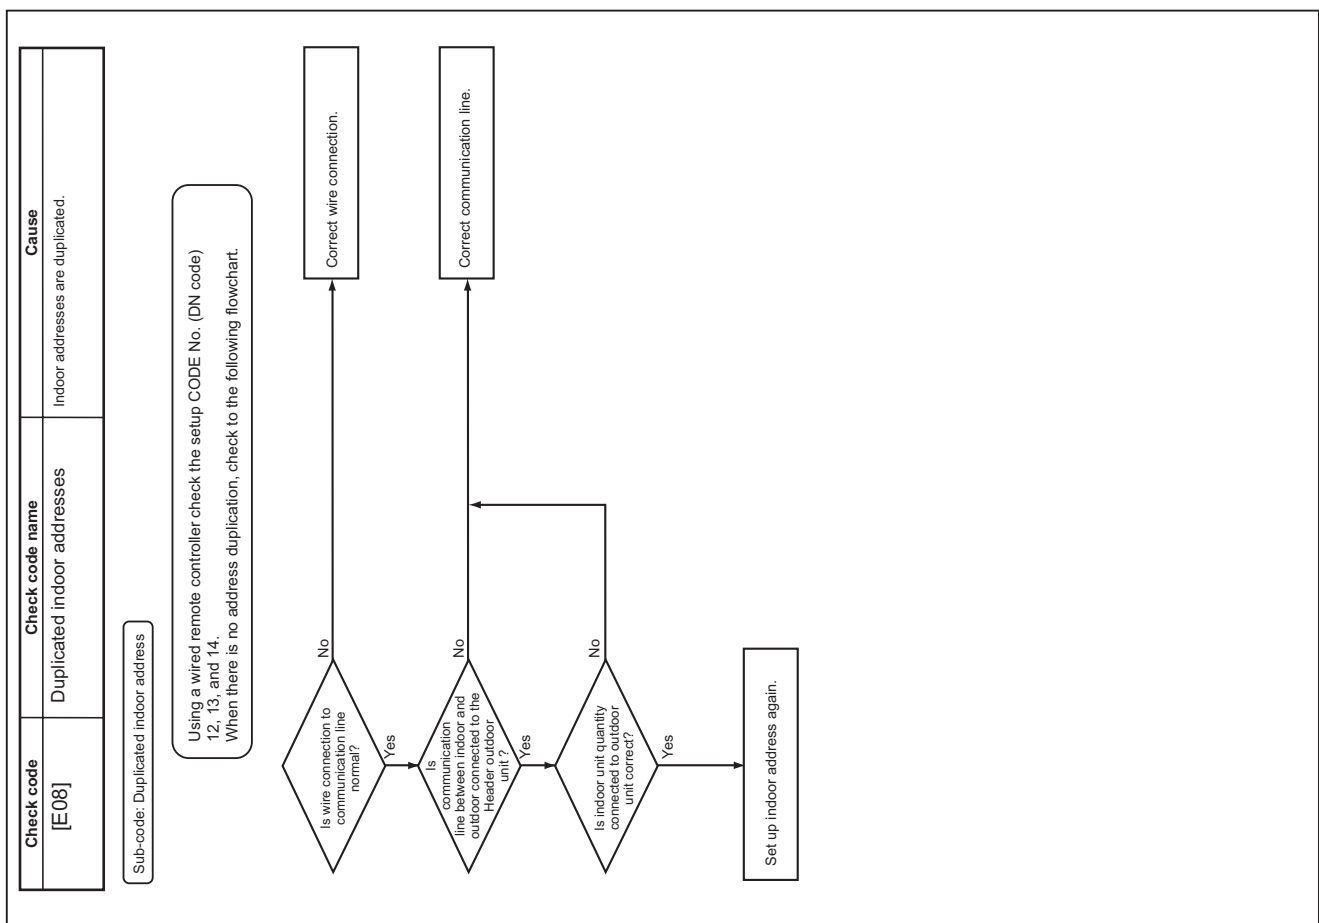
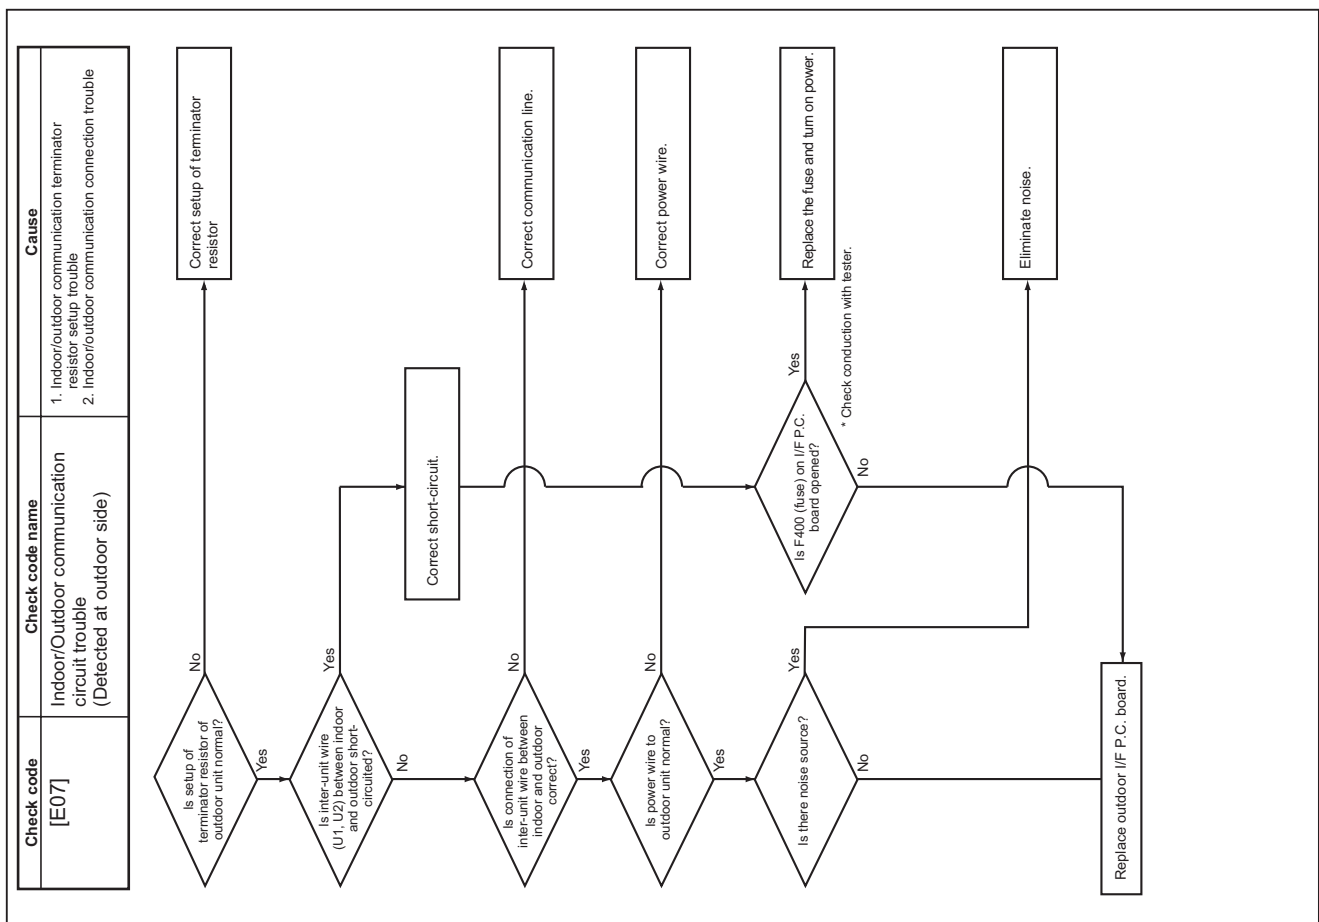


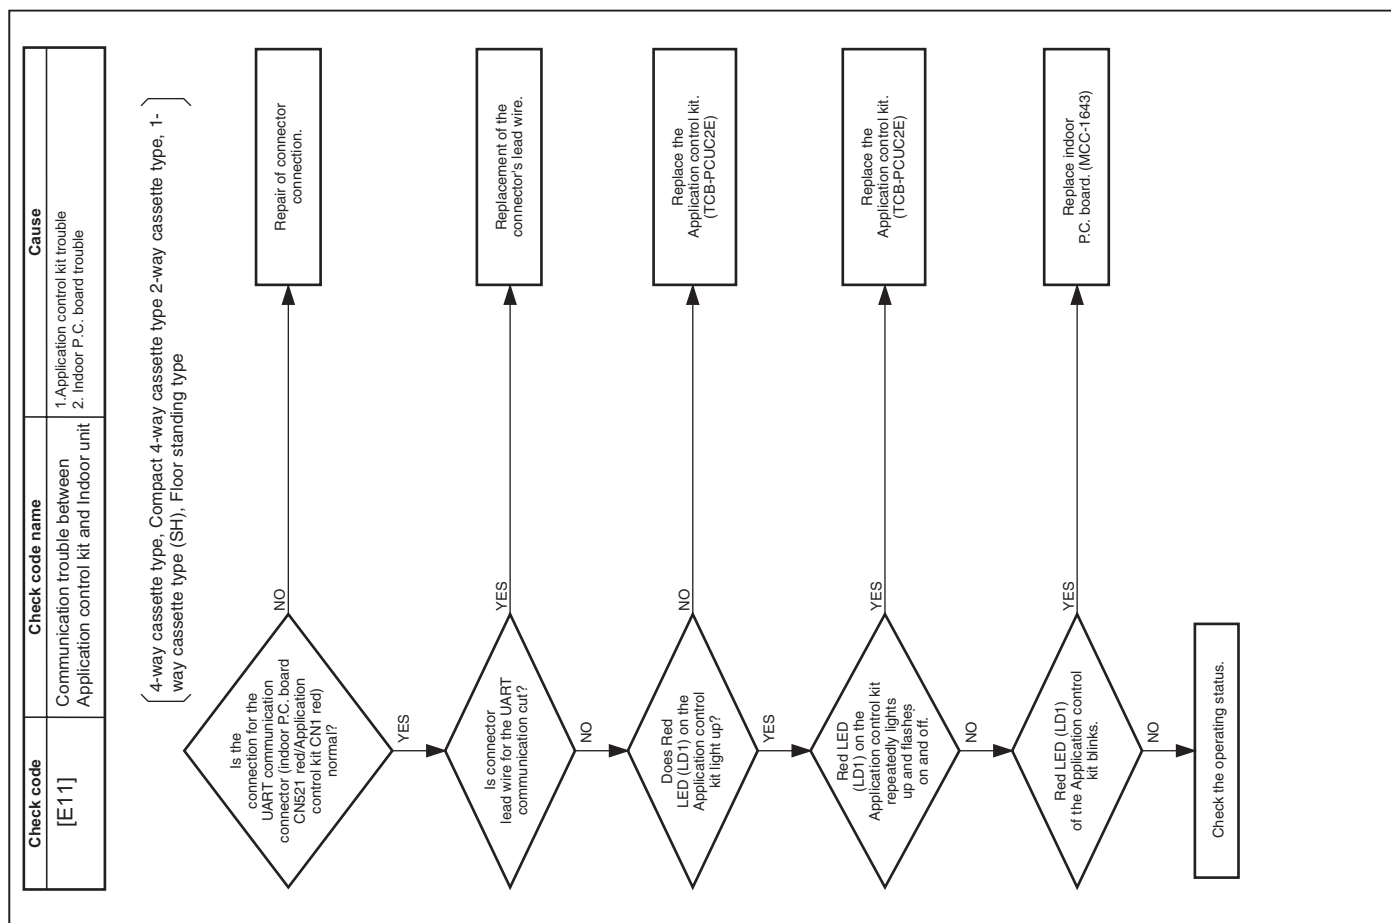
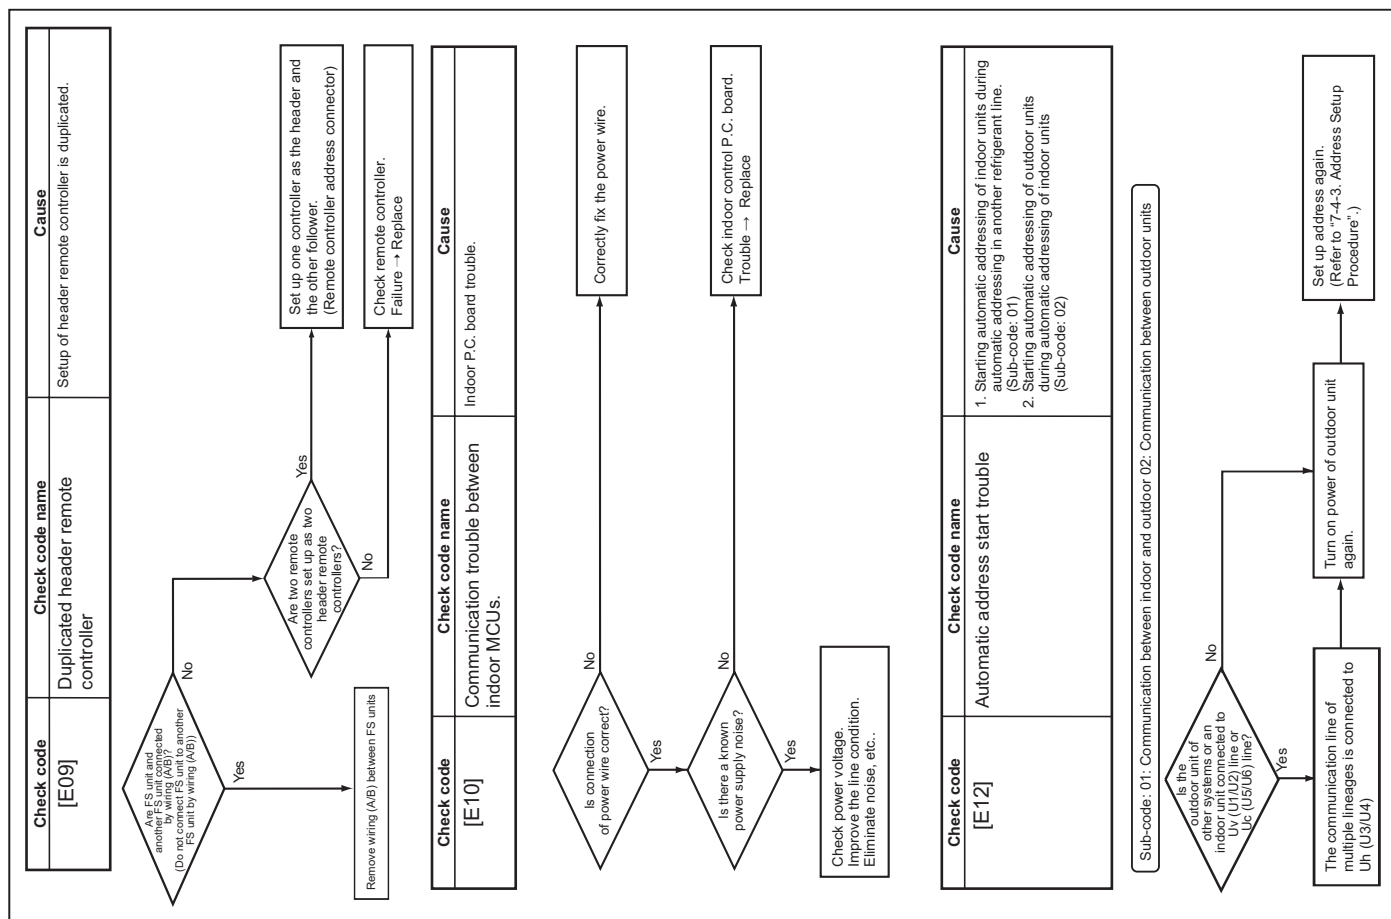


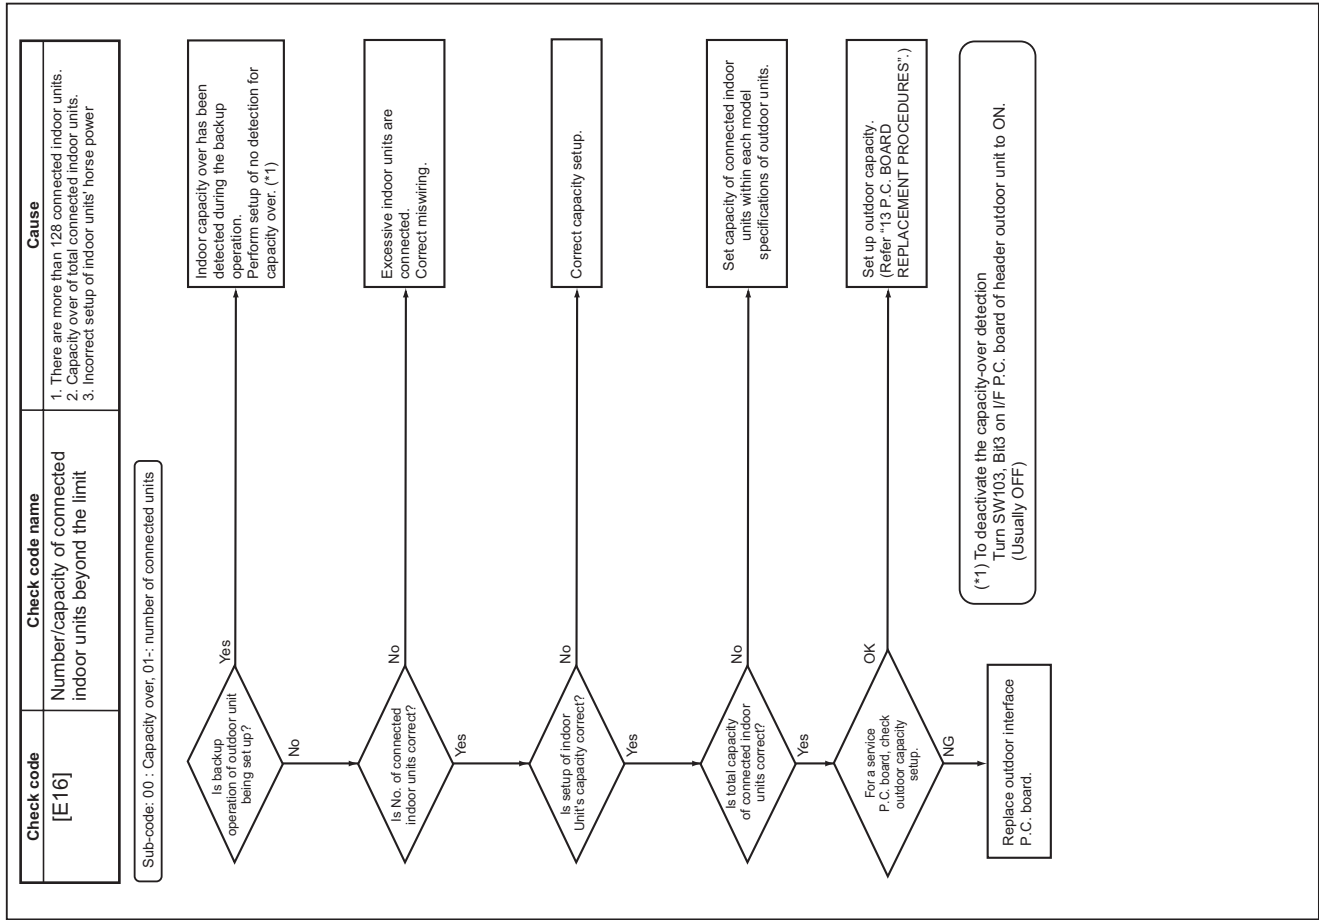
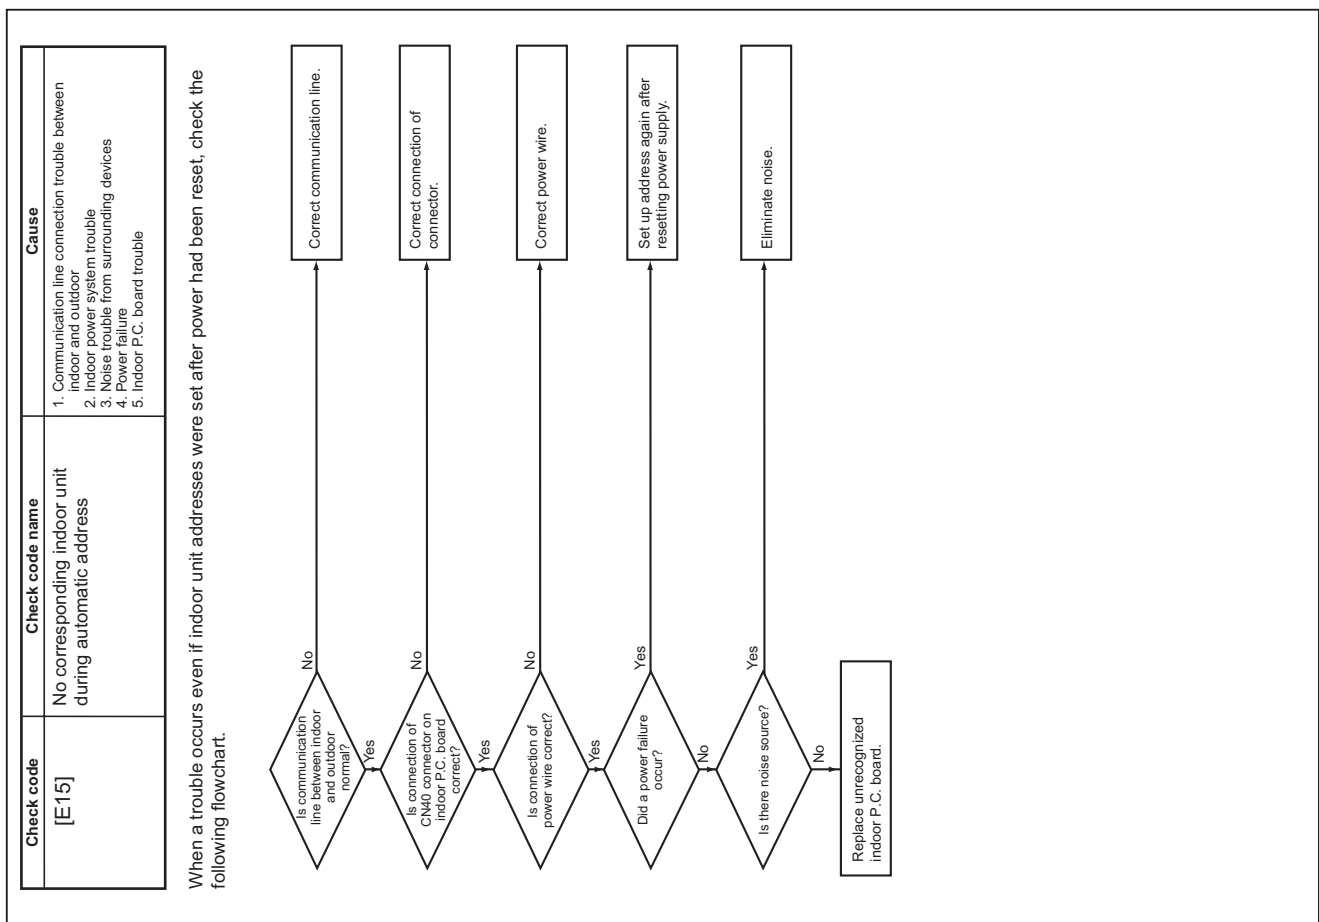



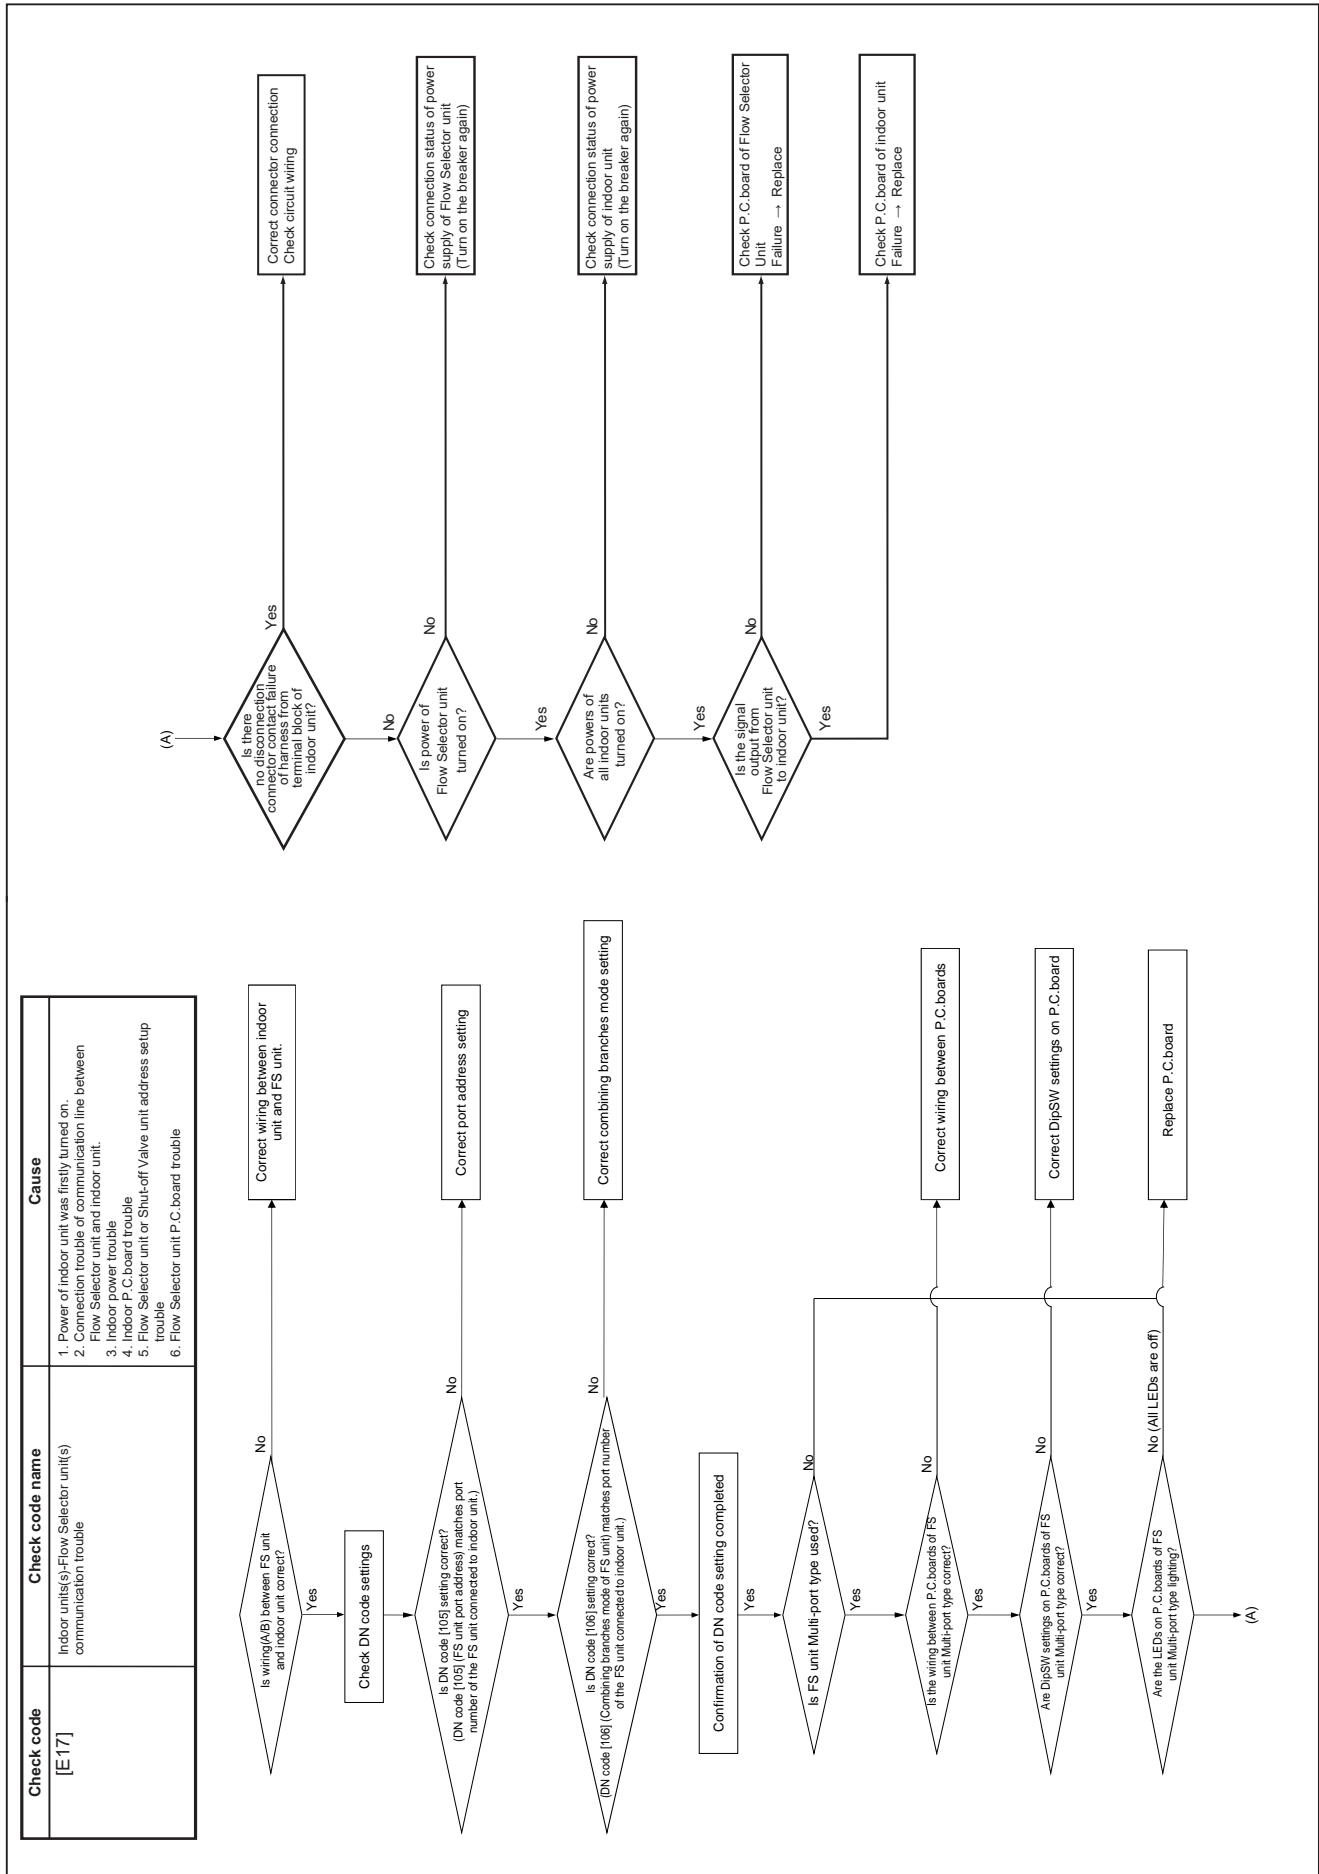


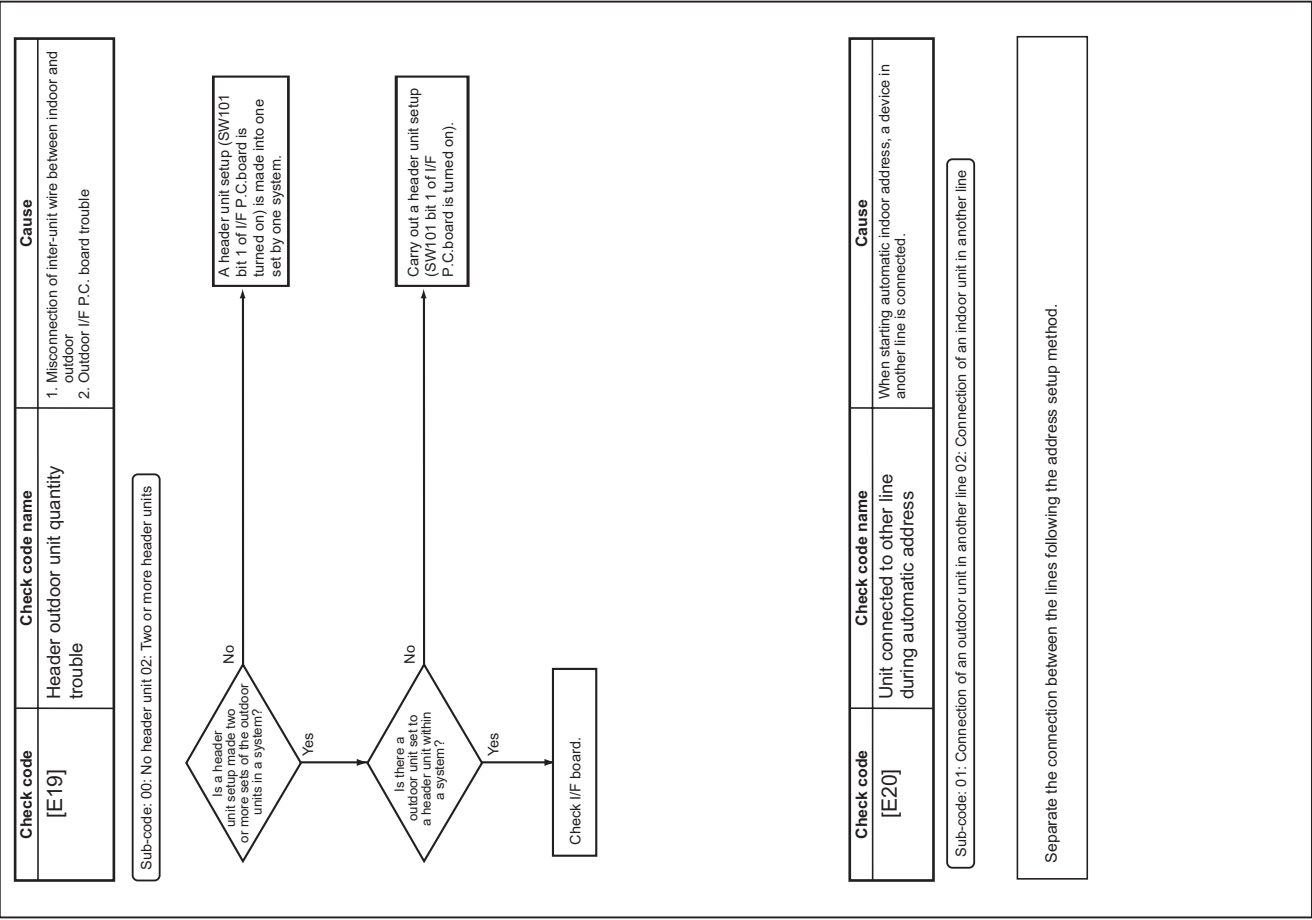
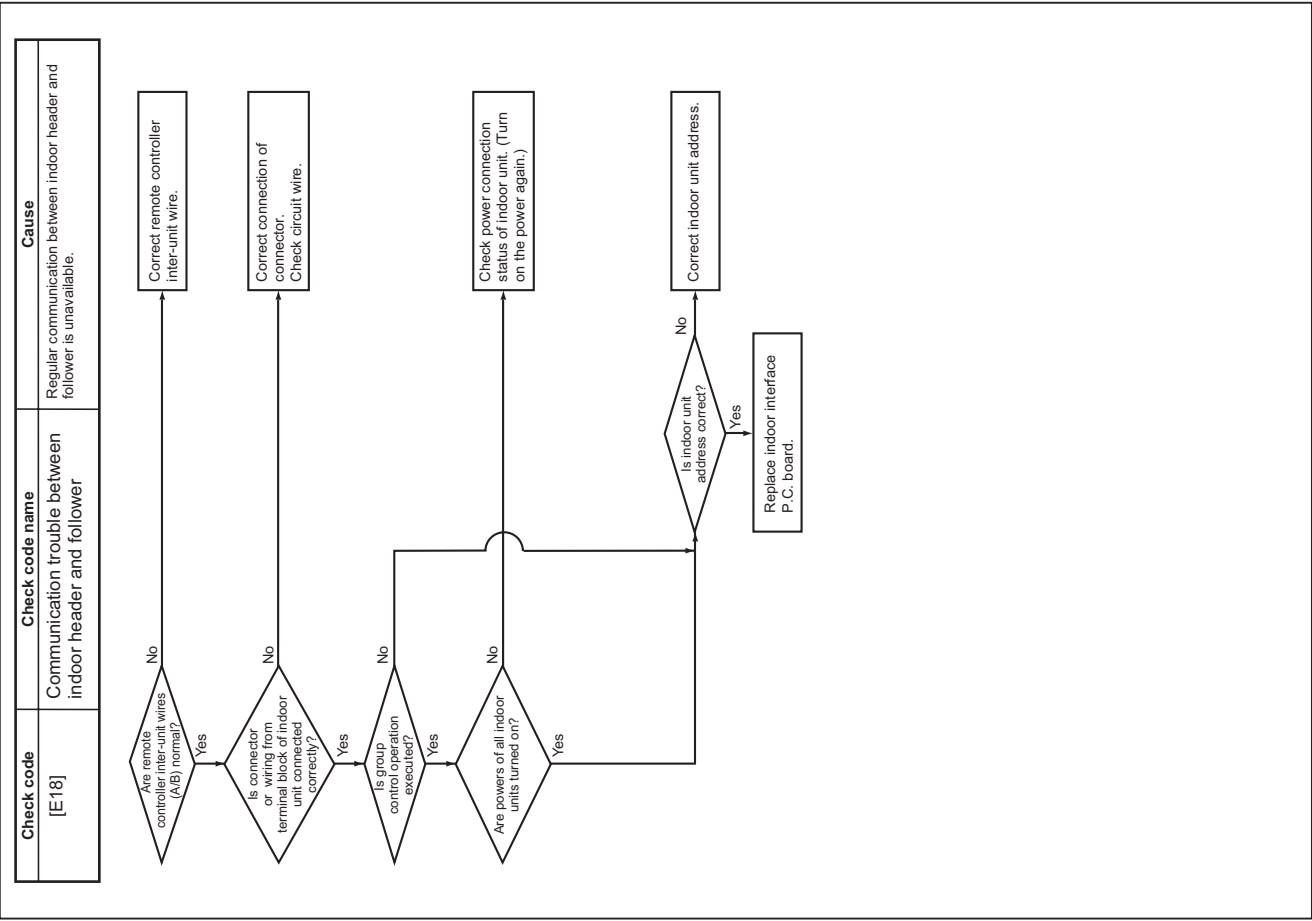


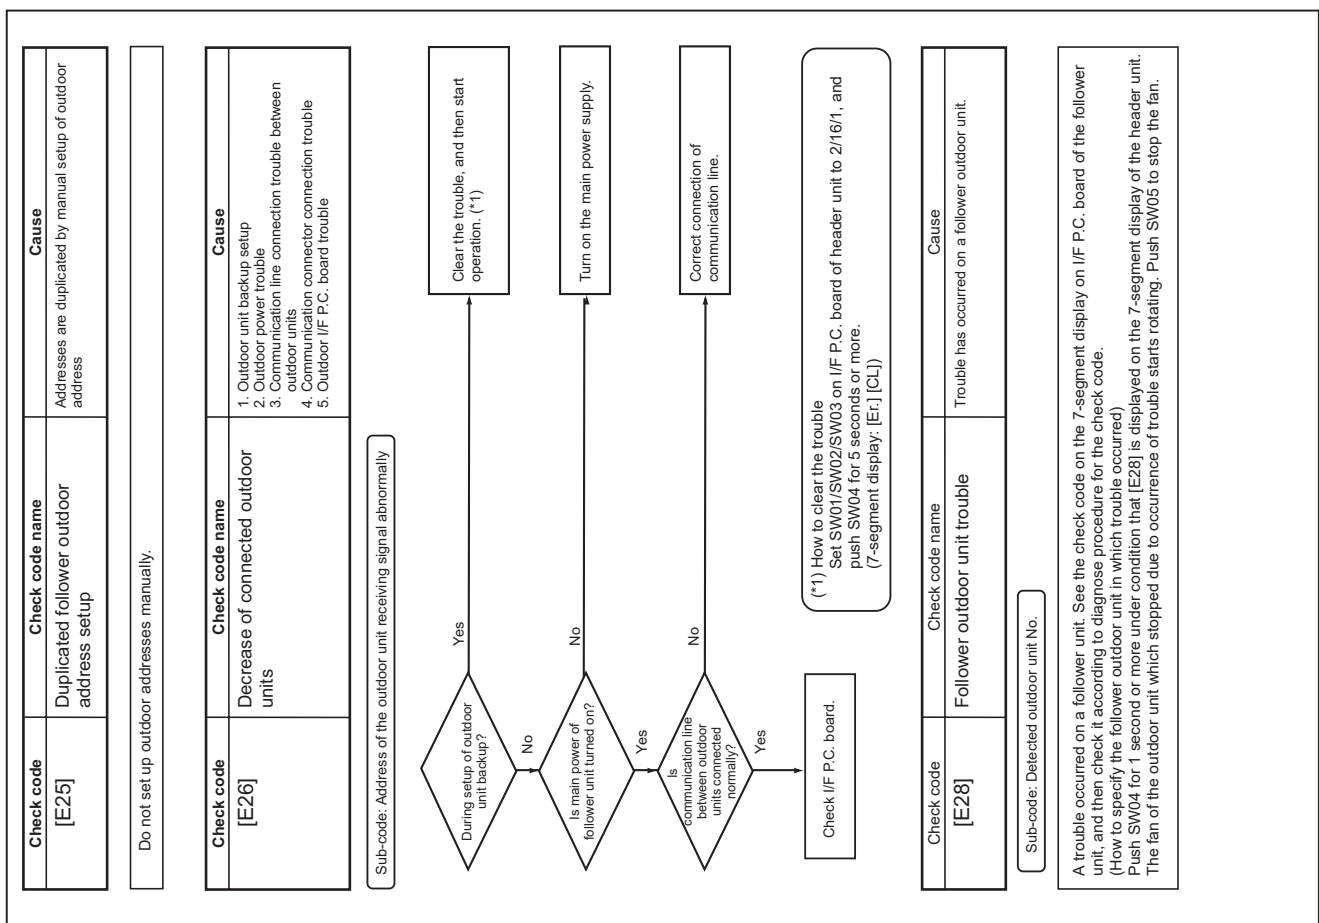
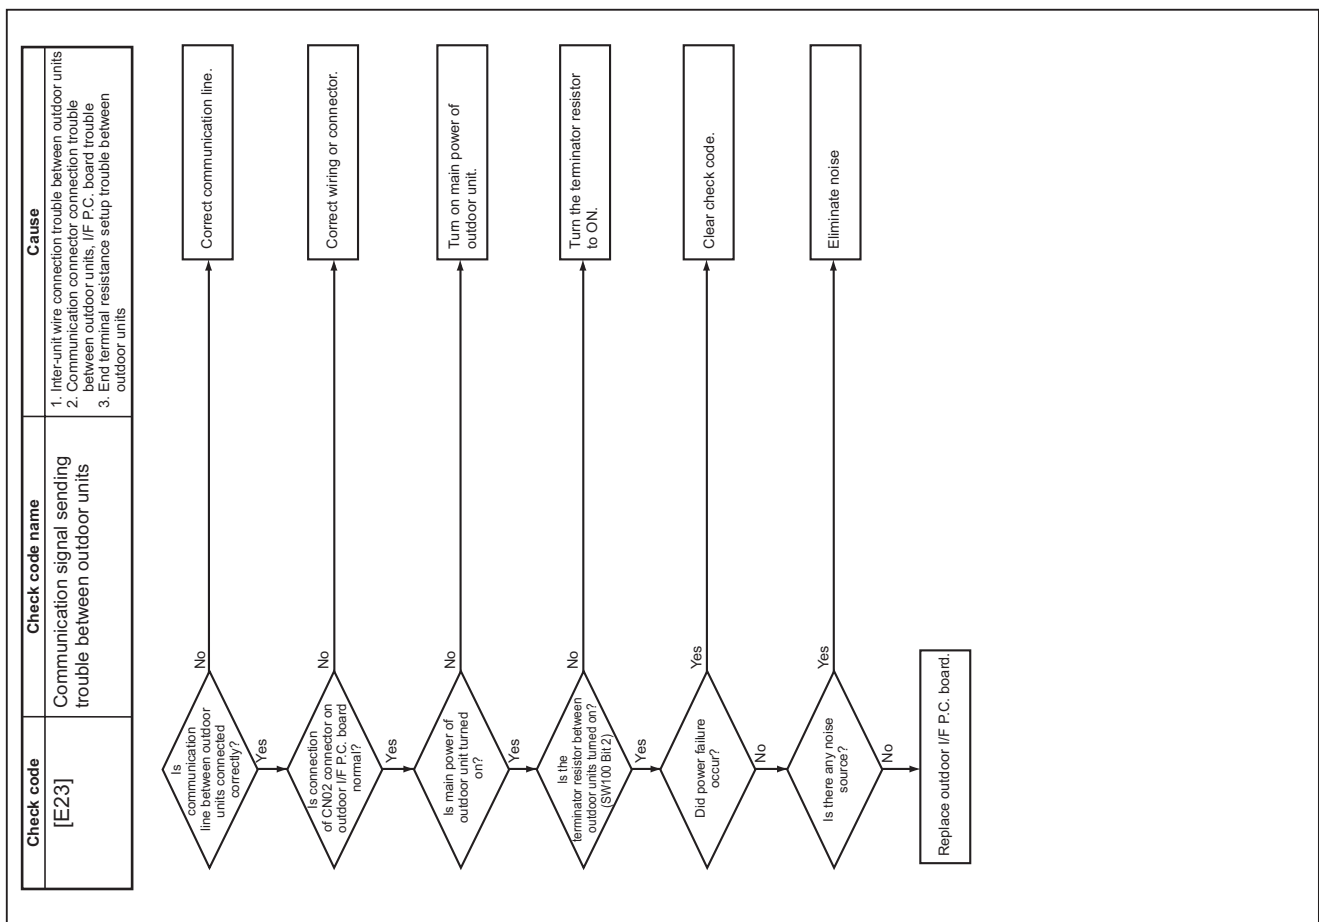


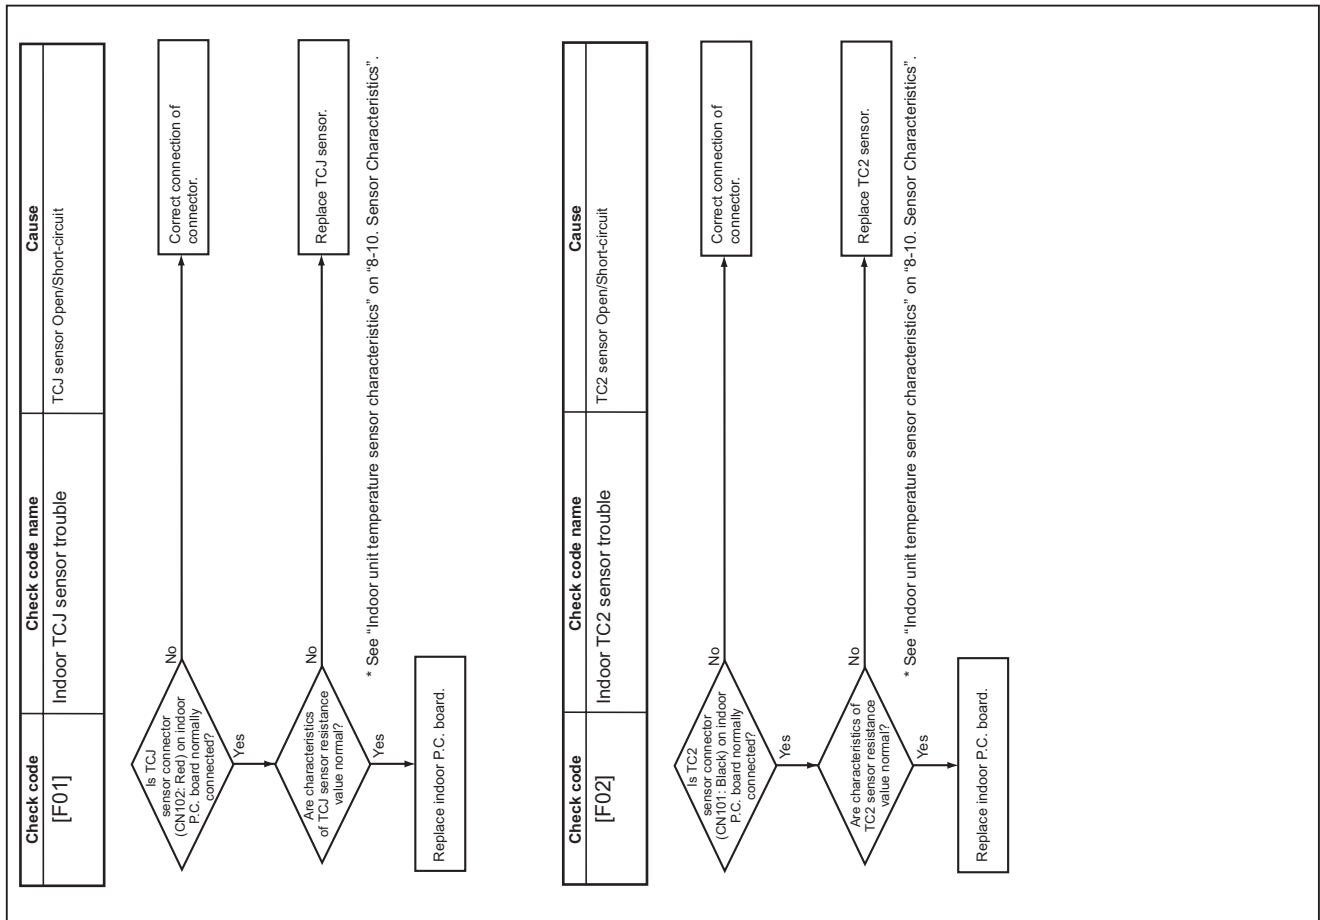
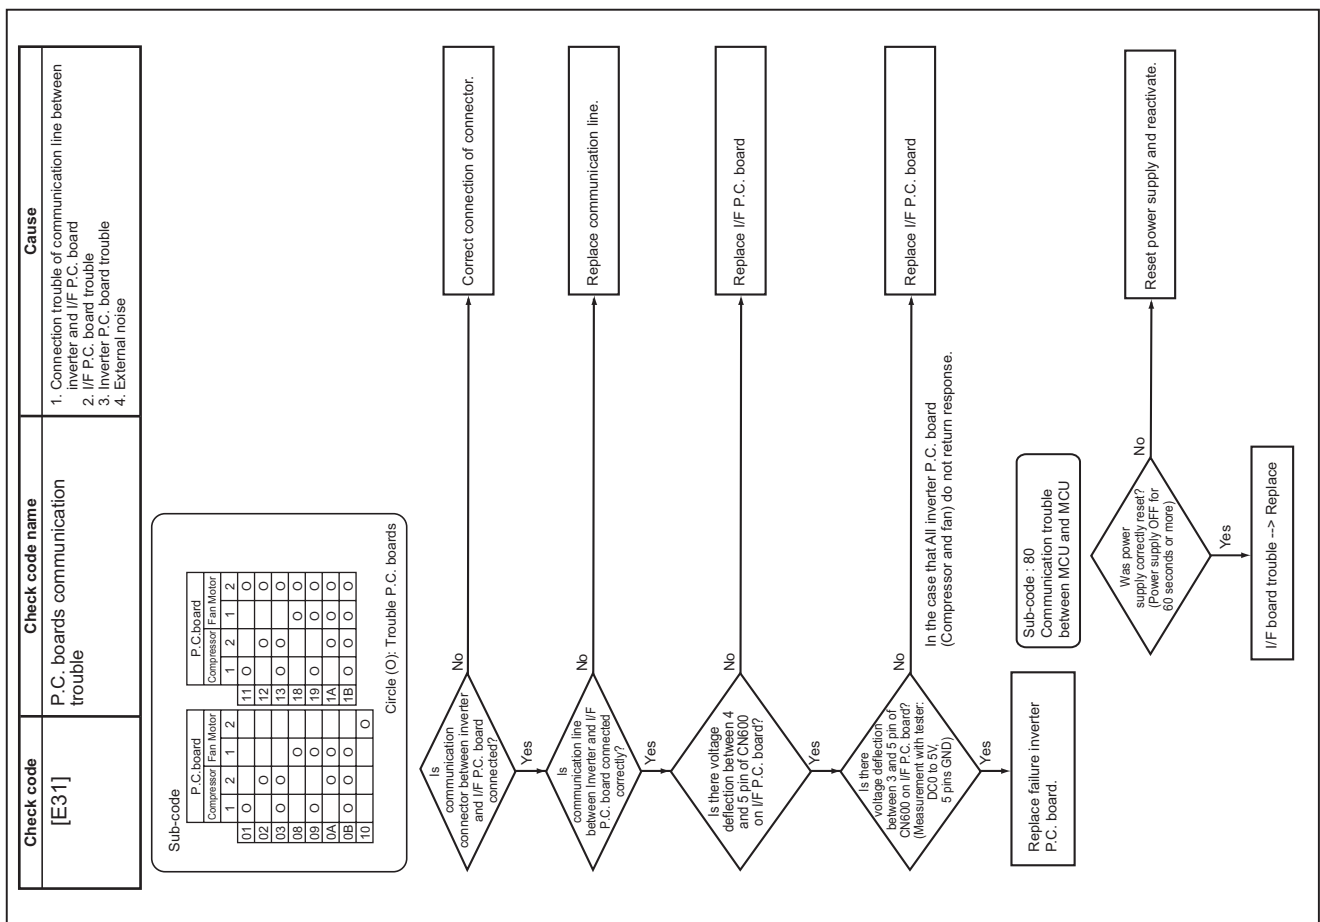


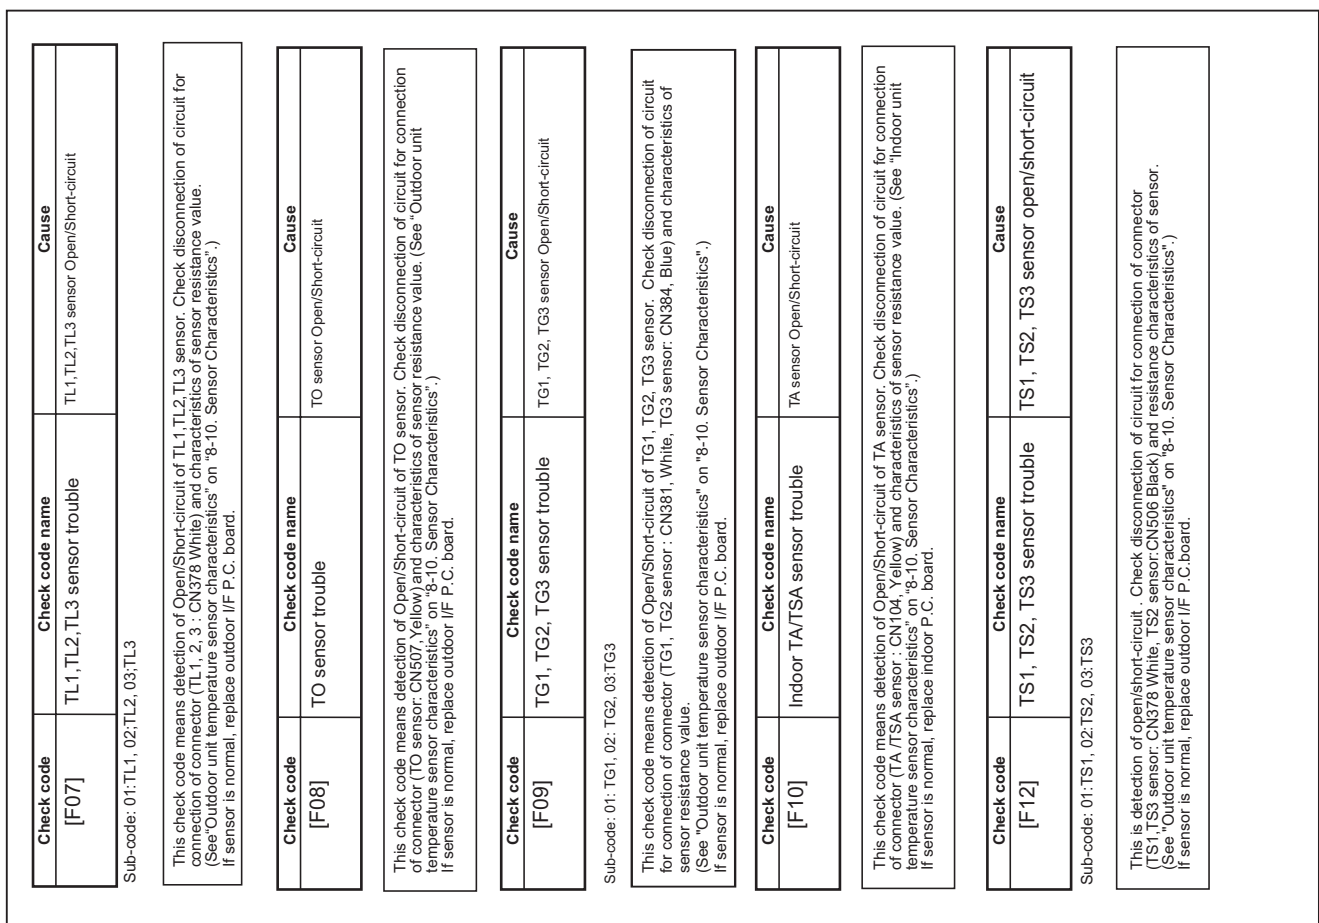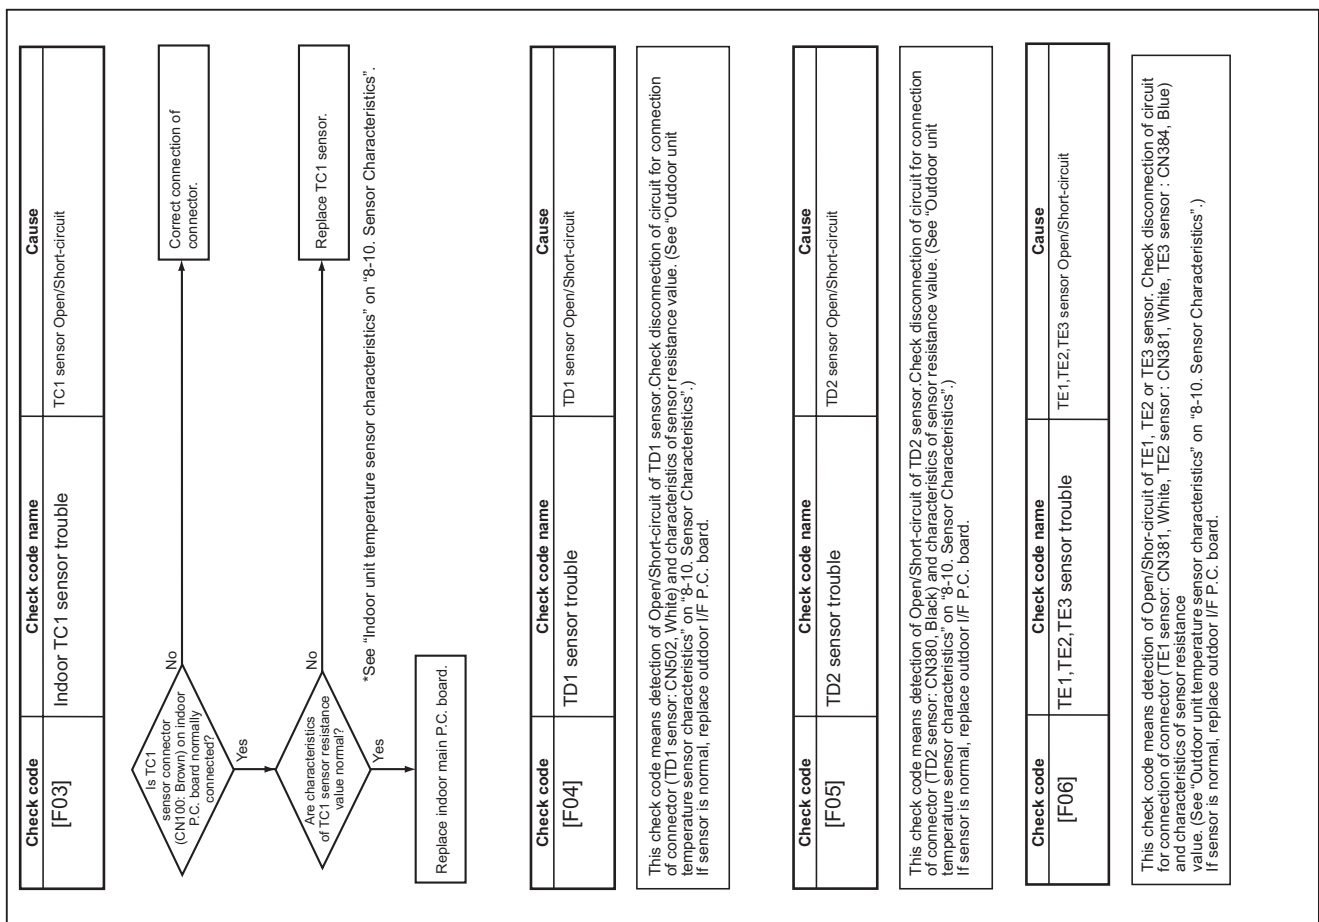


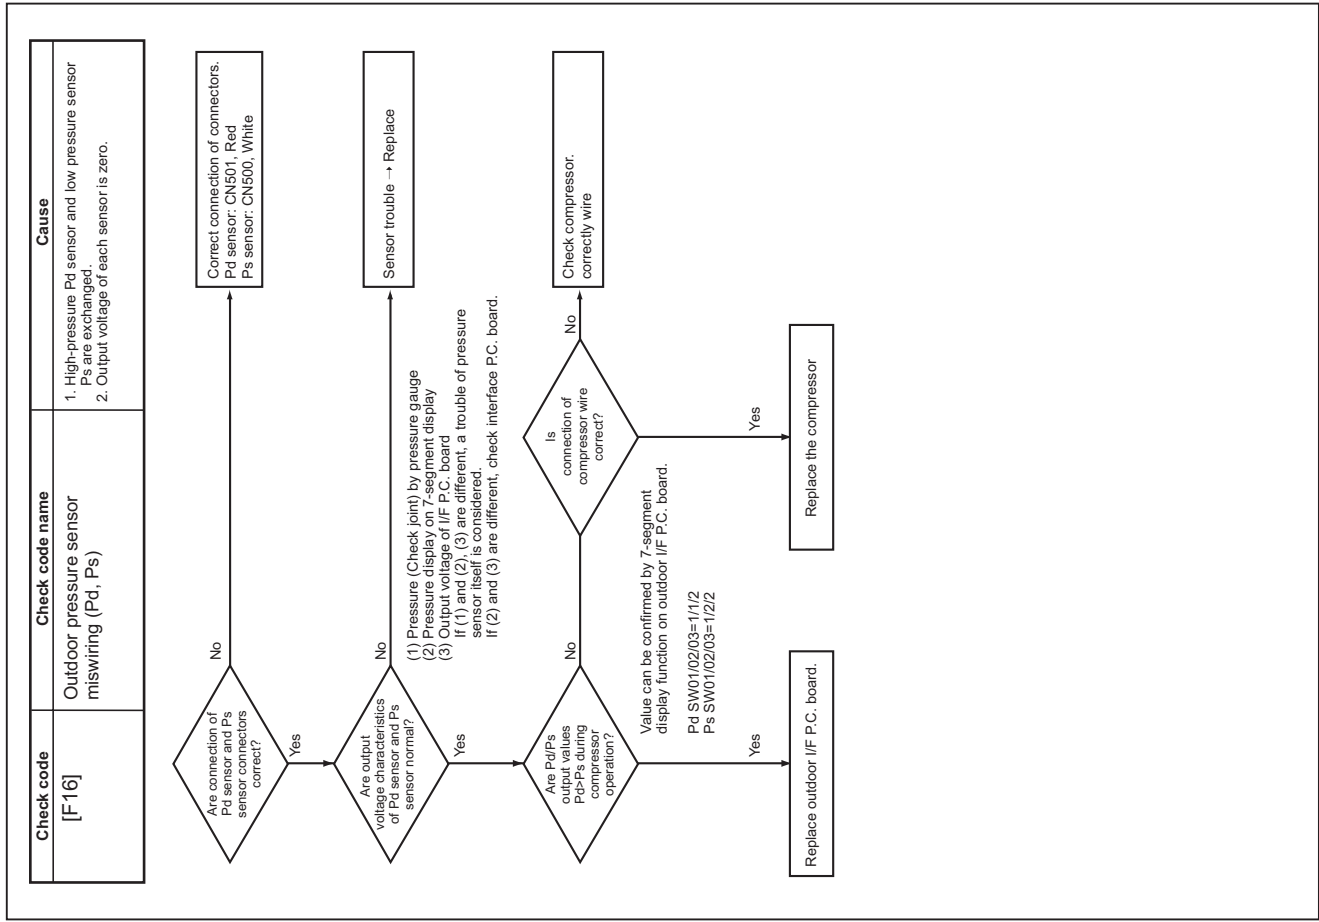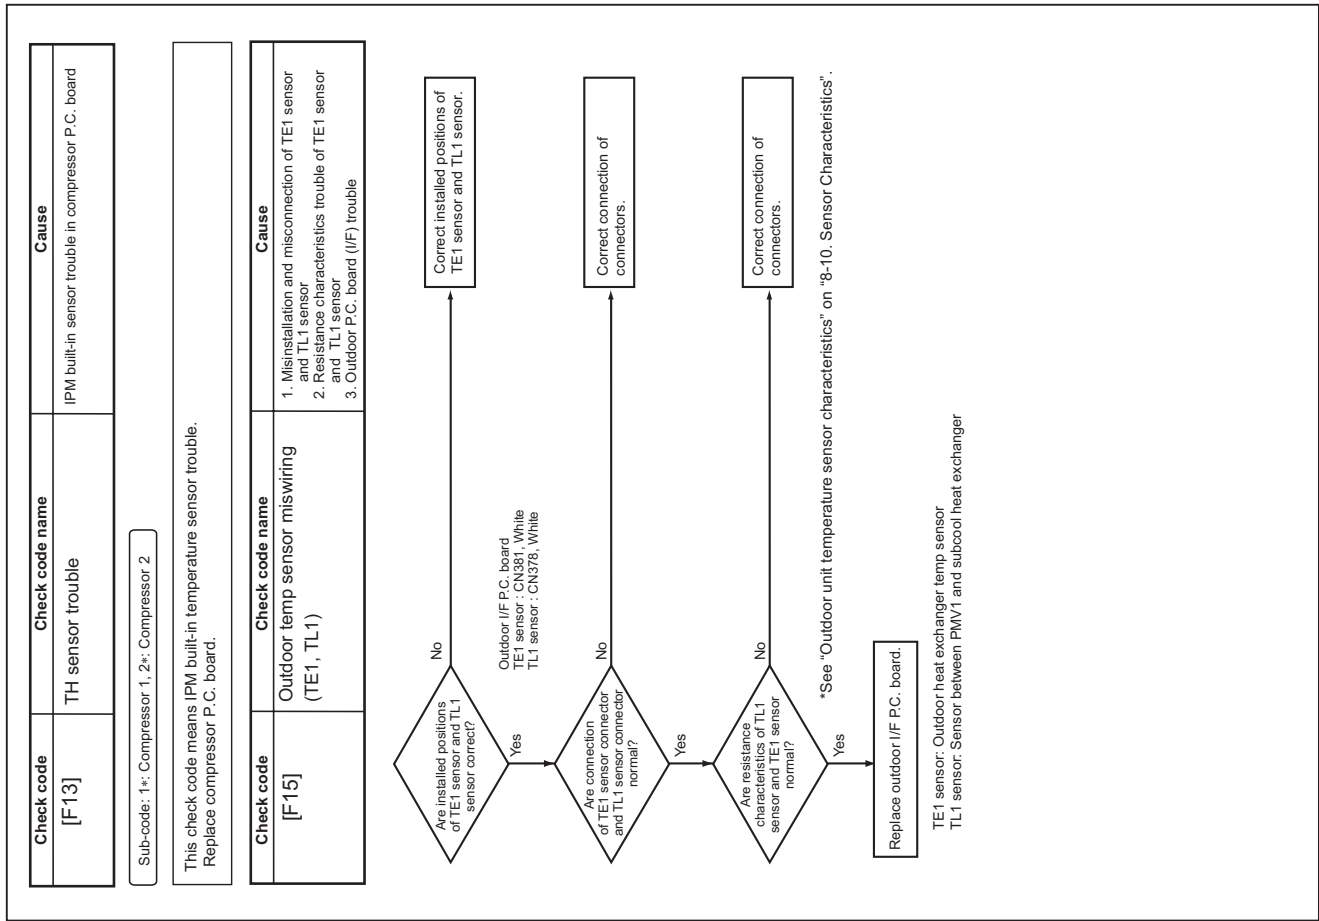

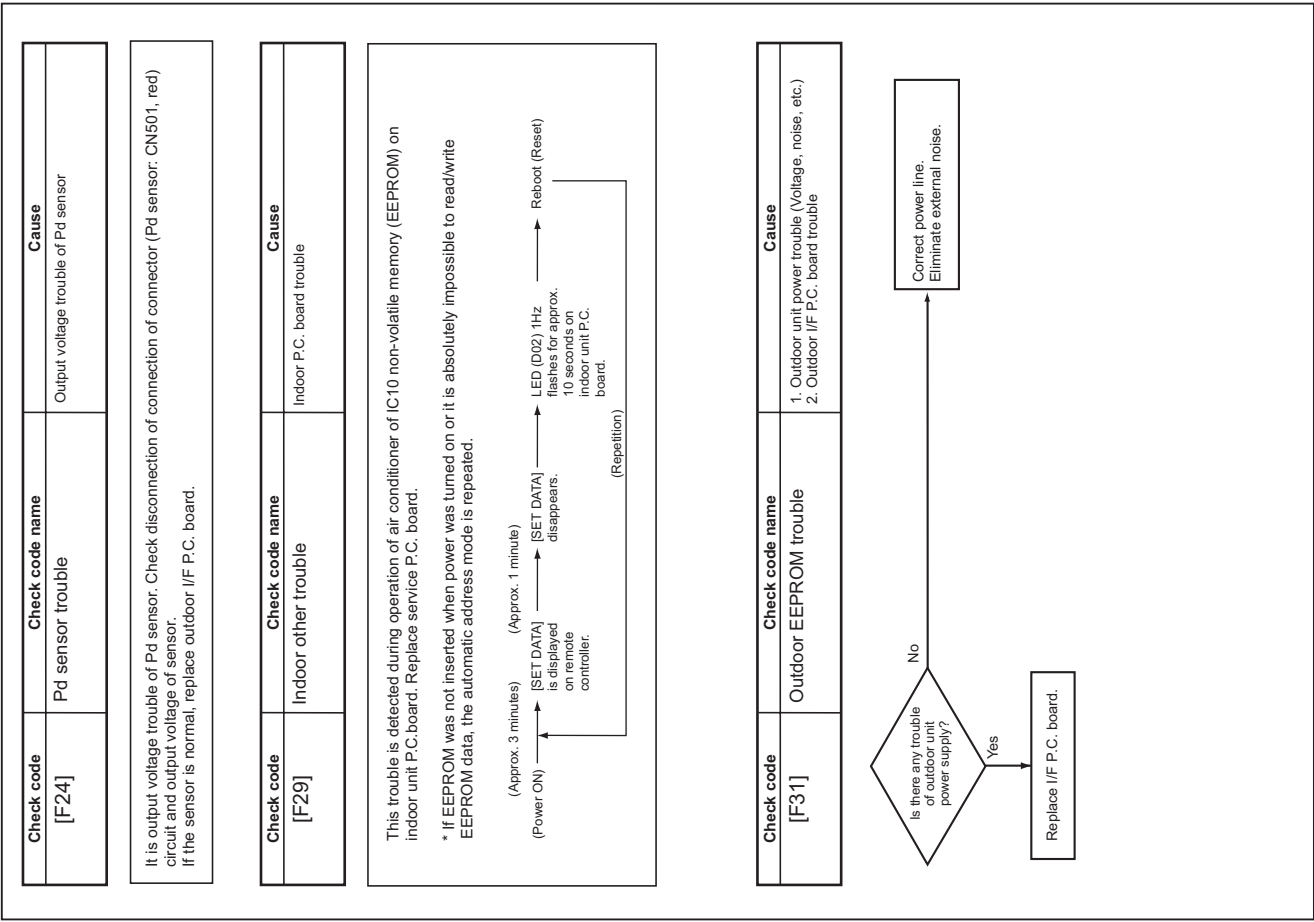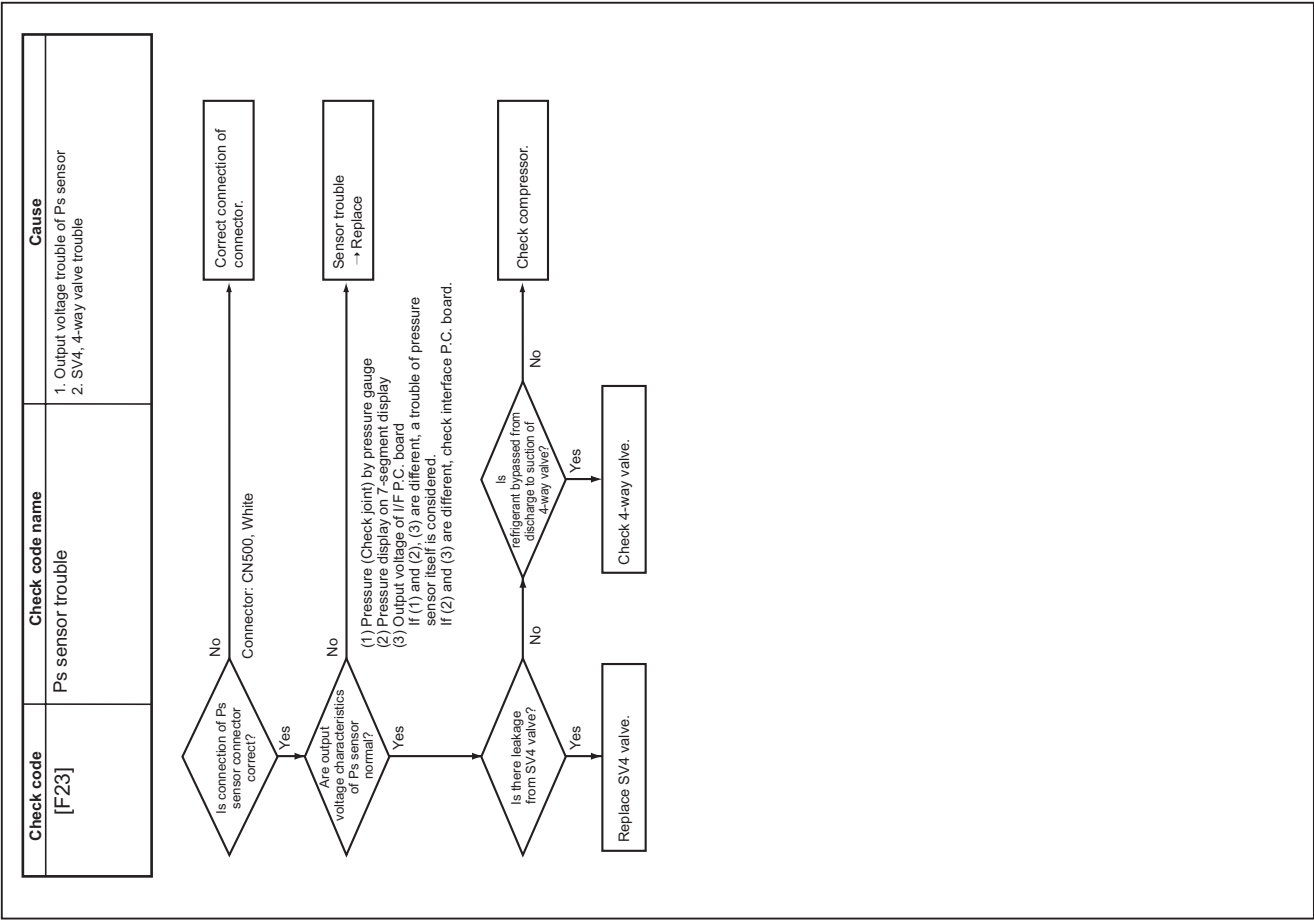

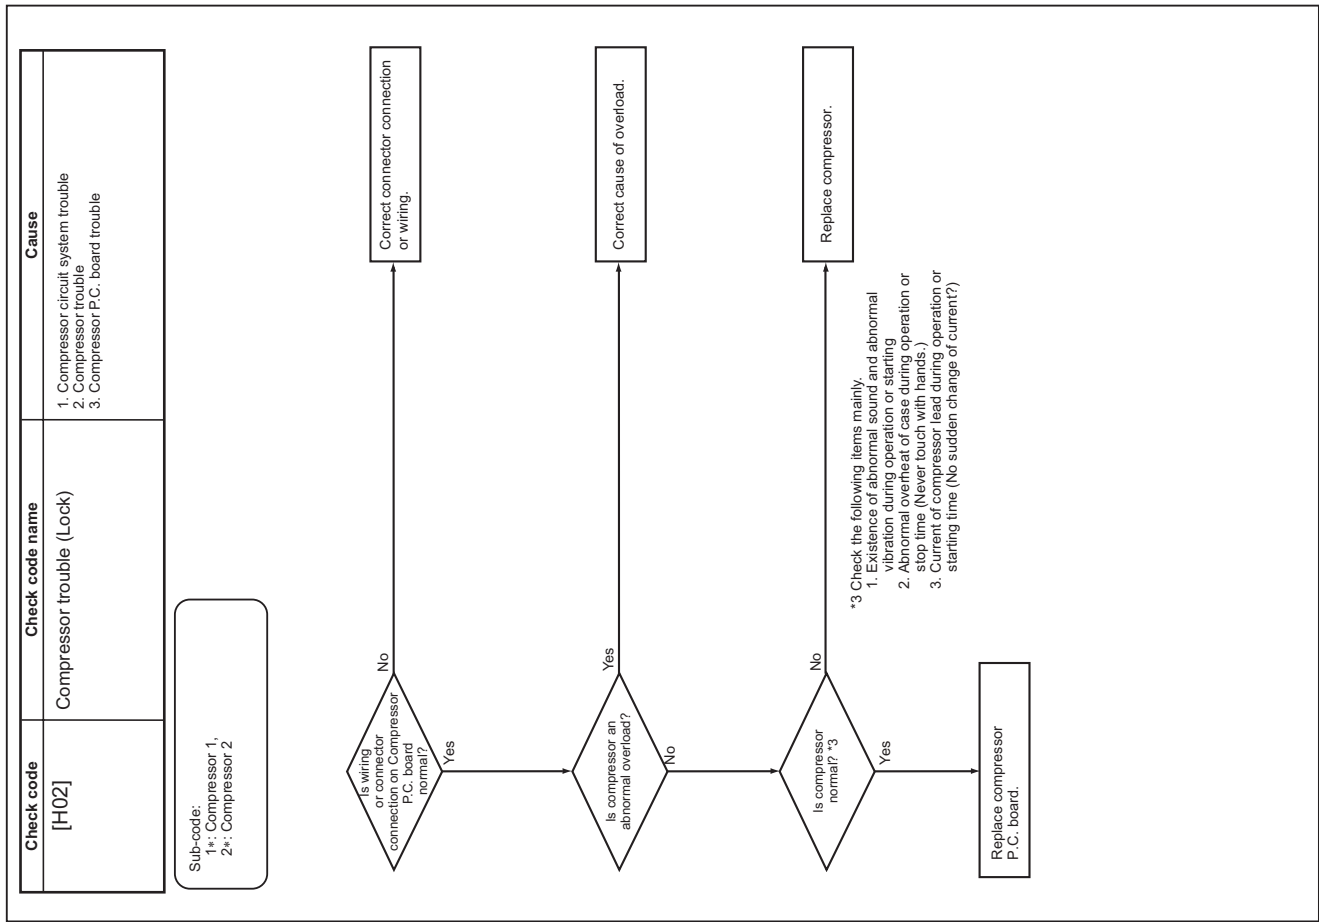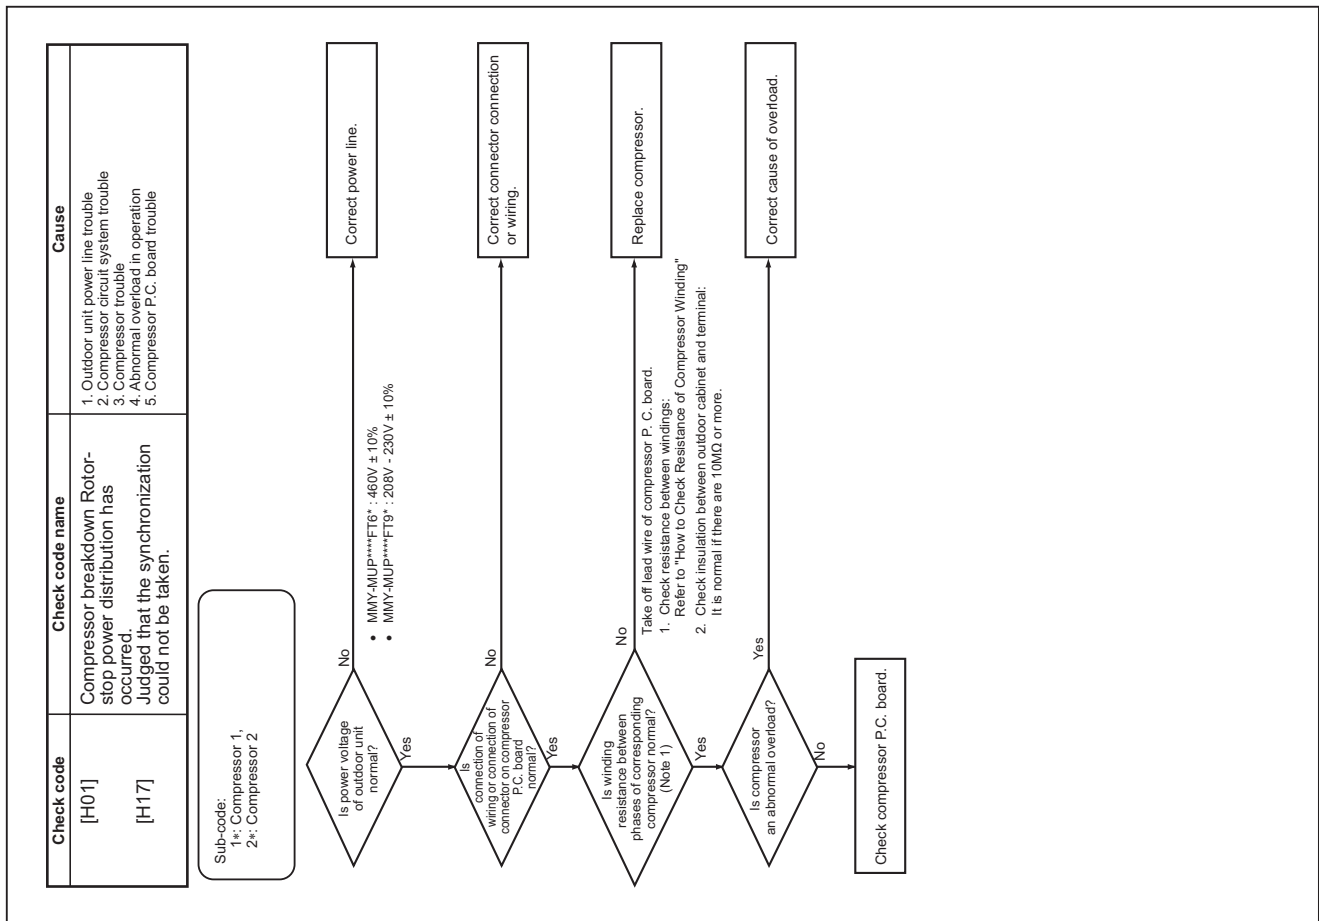

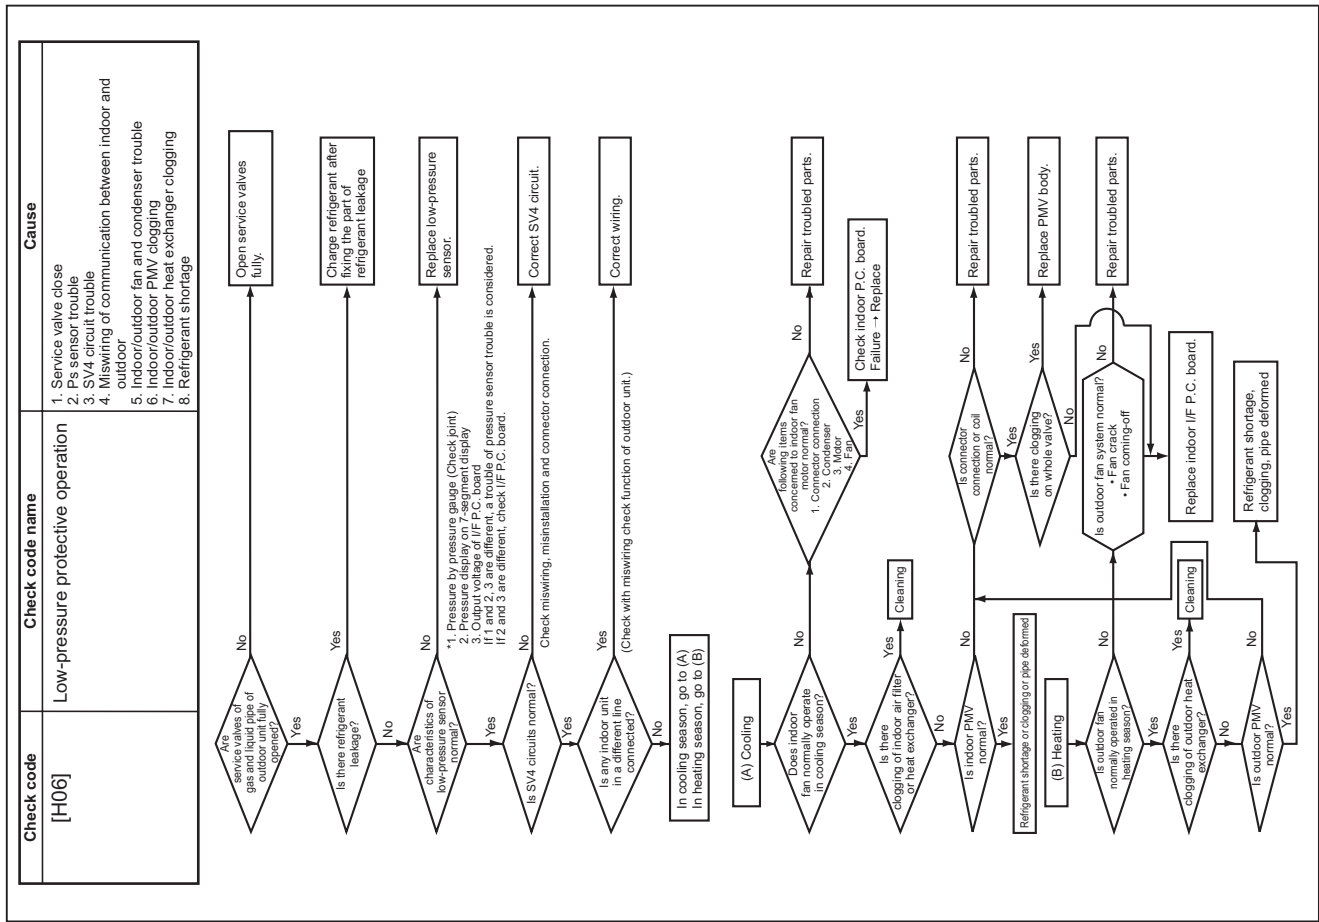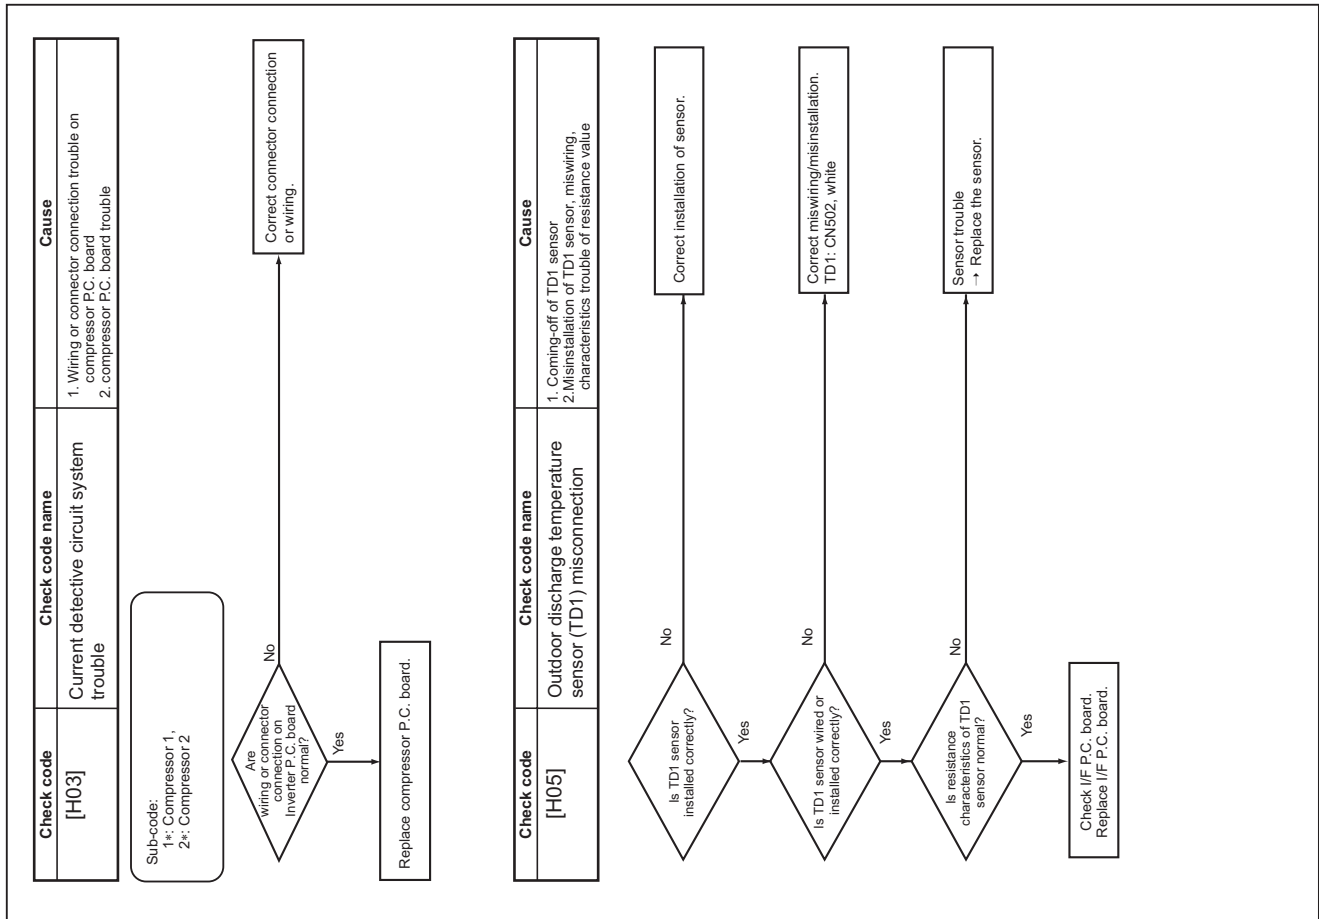

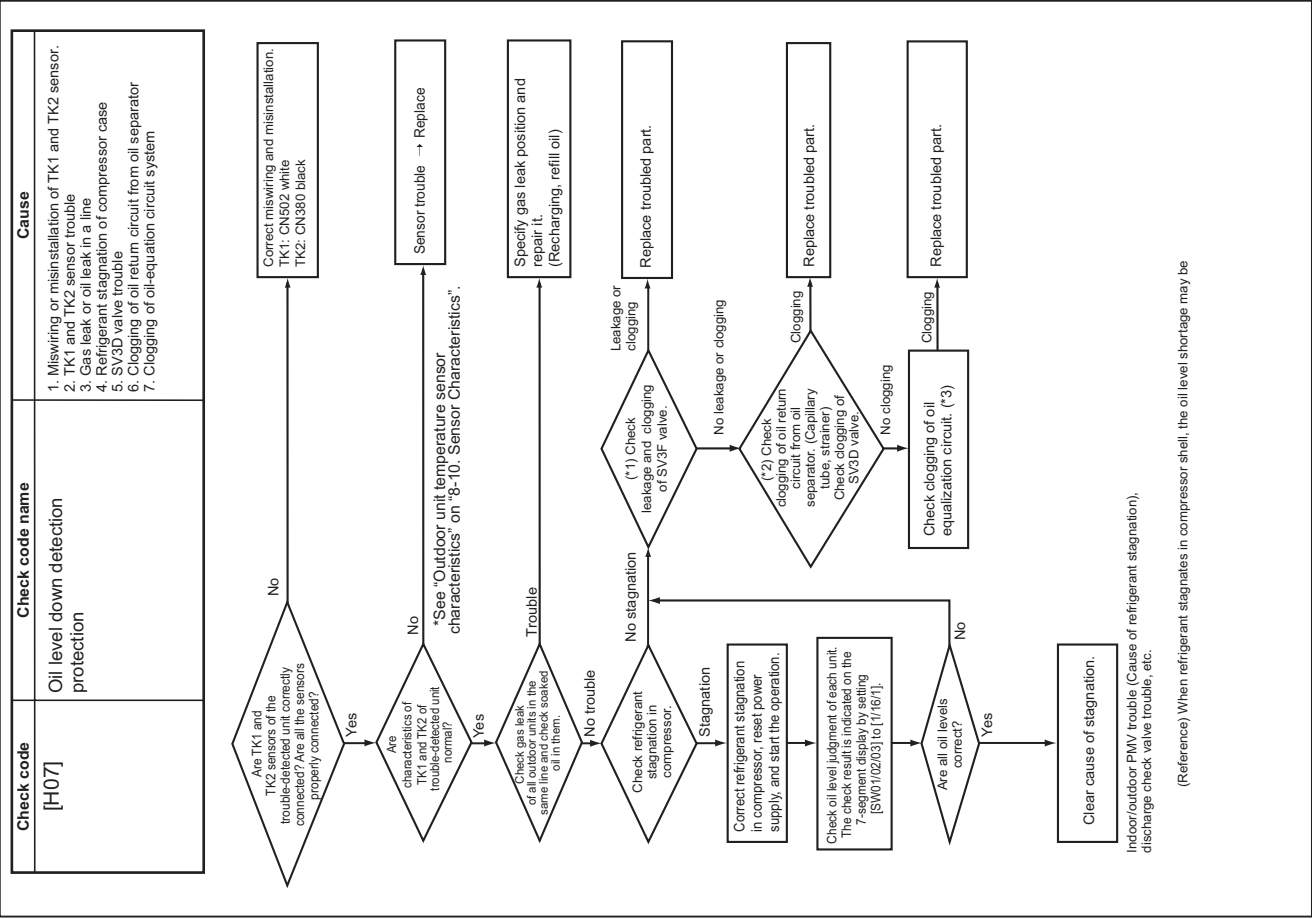

In some cases, it may be difficult to check the leakage of clogging in the following condition of refrigerant stagnation in low ambient temperature condition.
In this case, take a longer operating time prior to check.
(Criterion: Discharge temperature of TD1 and TD2 are 140°F(60°C) or higher)

(*1) Checking leakage and clogging on SV3F valve

a) Leakage check

- Turn off the power supply, take off connector of SV3F valve, and then start a test operation after power ON.
- After operation for several minutes, check temperature at secondary side of SV3F valve. ((1) in the figure) → If temperature is low, leakage occurs in the SV3F valve.
Replace SV3F valve.

b) Clogging check

- While outdoor unit is operating, set up SW01/02/03=[2] [1] [3] (7-segment display [Hr] [... ..]), and push SW04 for 2 seconds or more.
- Set up SW02=[8] and turn on SV3F valve. (7-segment display [Hr] [... 3C])
- While outdoor units are operating, check temperature change at secondary side of SV3F valve. ((1) in the figure.)
→ If temperature does not drop (equivalent to outside air temperature), it is a clogging of SV3F valve.
Replace SV3F valve.

(*2) Checking the oil return circuit from oil separator and clogging in SV3D valve

a) Oil return circuit

- While outdoor unit is operating, check temperature (secondary side of capillary) on oil return circuit. ((2) in the figure.)
→ If temperature is low equivalent to suction temperature), a clogging of strainer of oil return circuit or capillary is considered. Replace the clogged part.


b) Clogging check for SV3D valve

- While outdoor unit is operating, set up SW01/02/03 = [2] [1] [3] (7-segment display [Hr] [... ..]), and push SW04 for 1 seconds or more.
- Set up SW02 = [4], and turn on SV3D valve. (7-segment display [Hr] [... 3 d])
- If temperature is low at secondary side of the valve or it does not change, clogging of valve, capillary, or strainer is considered. ((3) in the figure.) Replace the clogged part.

(*3) Checking the oil equalization circuit

a) Clogging check for oil-equalization circuit

- Drive the outdoor unit. (Drive all compressors in the unit.)
- After driving for 10 minutes or more, check whether temperature of TK1, TK2 sensors and temperature of oil-equalization circuit capillary ((4) in the figure) has increased.
(Criterion)
TK1, TK2=TD1, TD2 temperature - Approx. 10 to 86°F(30°C)
Oil-equalization capillary tubes should be higher sufficiently than outside air temperature and suction temperature.
- If temperature is low, clogging of capillary or strainer is considered. Repair the failure parts.

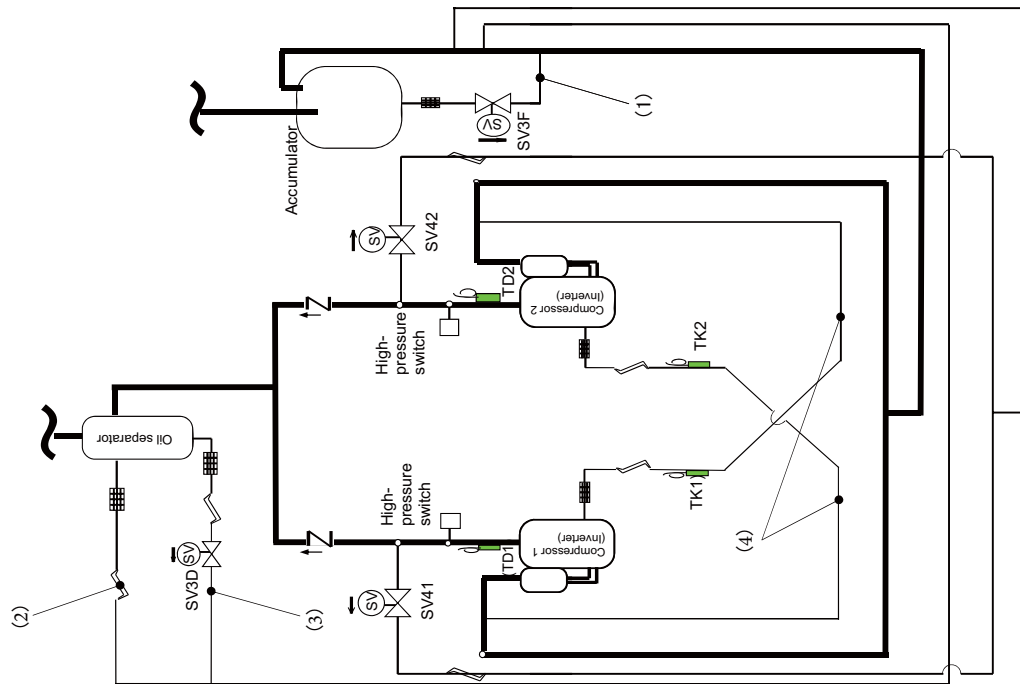


Check code	Check code name	Cause
[H08]	Oil level detective temperature sensor trouble	TK1 and TK2 sensor Open/Short-circuit

Sub-code:
01: TK1 sensor trouble 02: TK2 sensor trouble


The detected trouble is an oil level detective temperature sensor trouble. Check disconnection of the wiring and resistance value of the sensor.
If the sensors are normal, replace the outdoor I/F P.C. board.

Circuit	Connector
TK1	CN502 white
TK2	CN380 black


Check code	Check code name	Cause
[H15]	Outdoor discharge temperature sensor (TD2) misconnection	1. Coming-off of TD2 sensor 2. Misinstallation of TD2 sensor, miswiring, characteristics trouble of resistance value

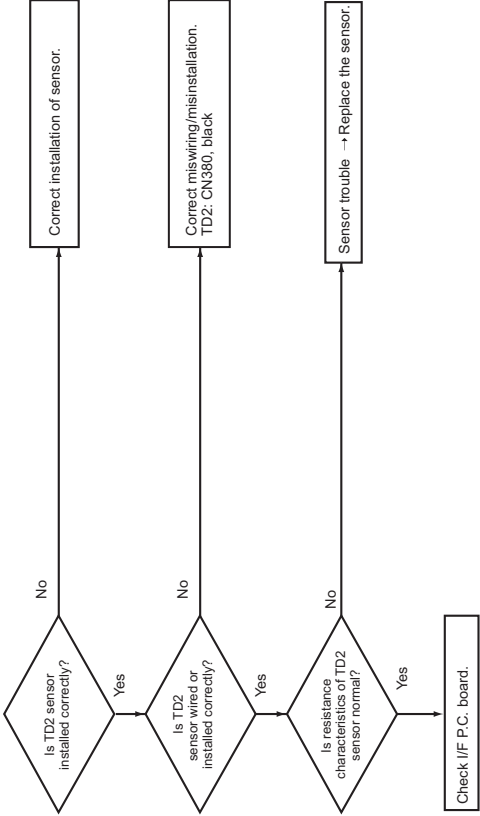

Check code	Check code name	Cause
[H16]	Oil level detection circuit trouble TK1 temperature detective circuit trouble (Sub-code: 01)	1. Coming-off of TK1 sensor, miswiring, characteristics trouble of resistance value 2. Oil-equalization circuit trouble (Check valve, capillary clogging, strainer clogging) 3. Refrigerant stagnation in the compressor shell

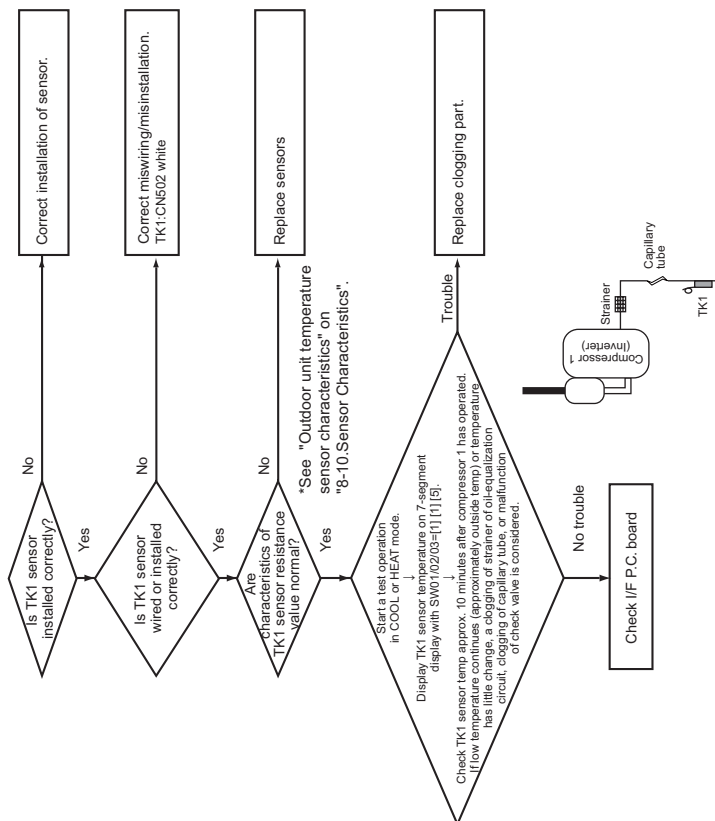

Check code	Check code name	Cause
[H16]	Oil level detection circuit trouble TK2 temperature detective circuit trouble (Sub-code: 02)	1. Coming-off of TK2 sensor, miswiring, characteristics trouble of resistance value 2. Oil-equalization circuit trouble (Check valve, capillary clogging, strainer clogging) 3. Refrigerant stagnation in the compressor shell

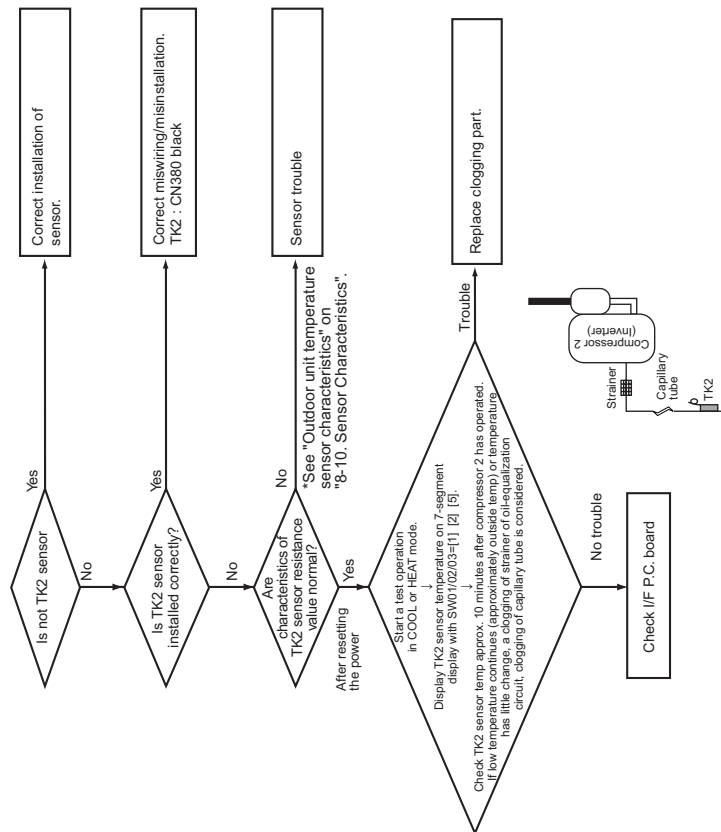




Check code	Check code name	Cause
[H17]	Compressor trouble (step-out etc.)	The clause of [H01] is referred to.

Refer to the cause of [H01] for a diagnostic procedure.

Check code	Check code name	Cause
[H28]	Compressor motor winding trouble.	1. Compressor trouble.



Sub-code:
1* : Compressor 1, 2* : Compressor 2


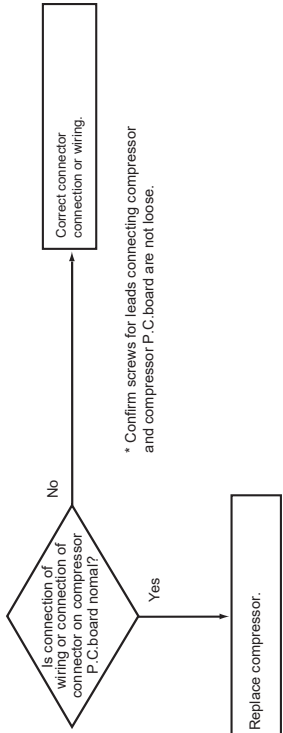


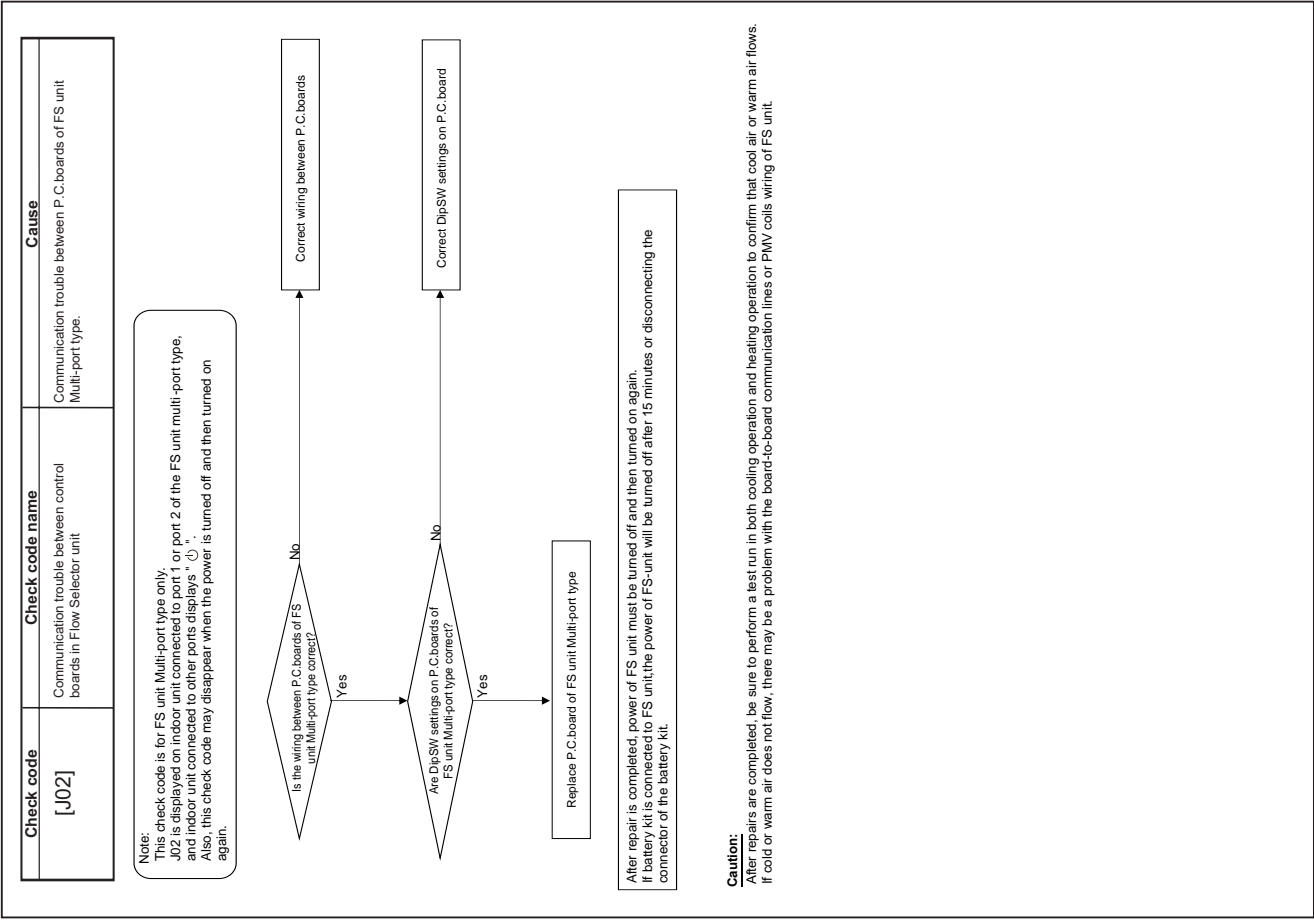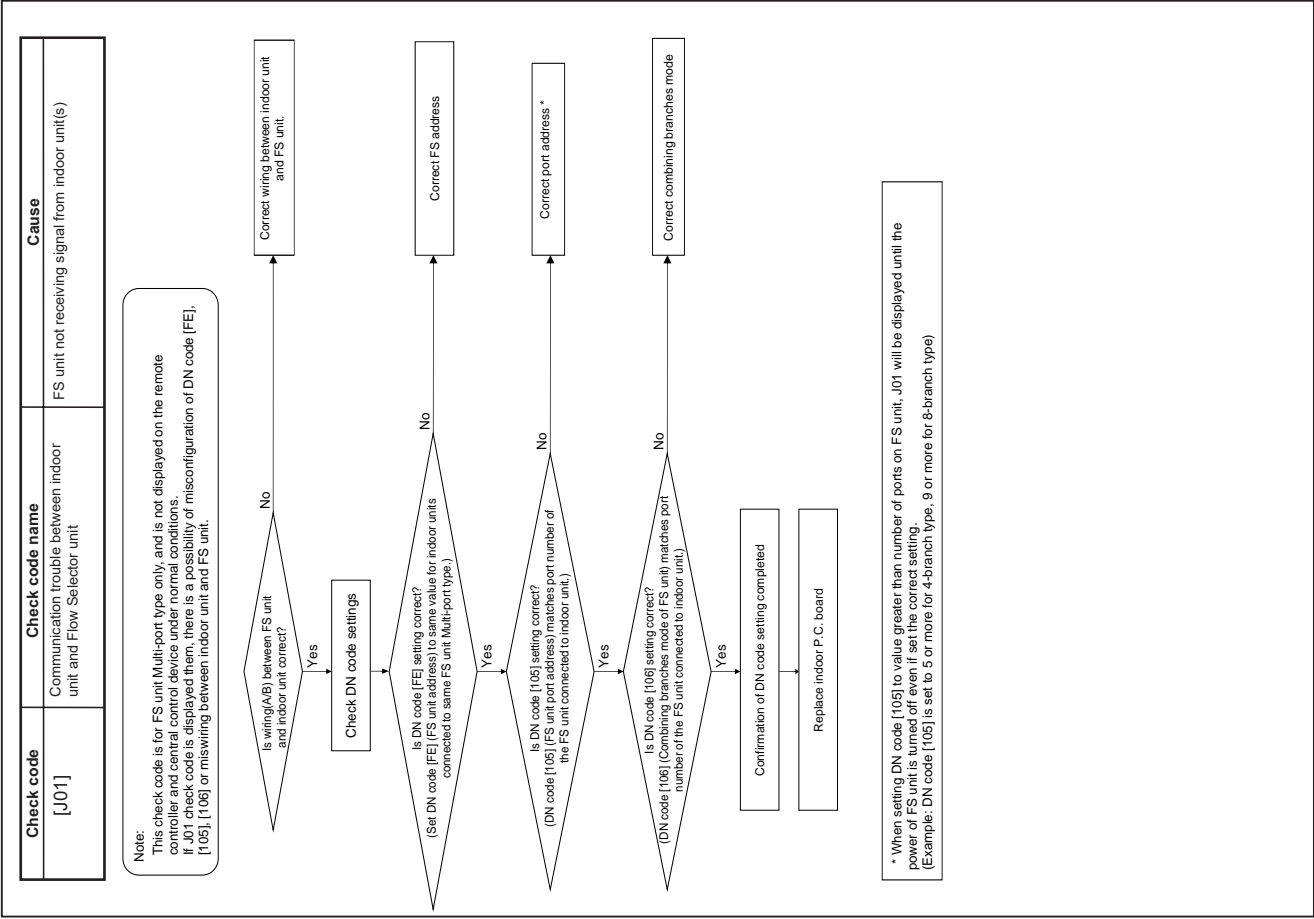




Check code	Check code name	Cause
[J03]	Duplication of Flow Selector units.	Multiple Flow Selector units are installed in one indoor unit.

The check code is detected when there are multiple P.C boards of the Flow Selector unit in one system of the communication line(A/B).

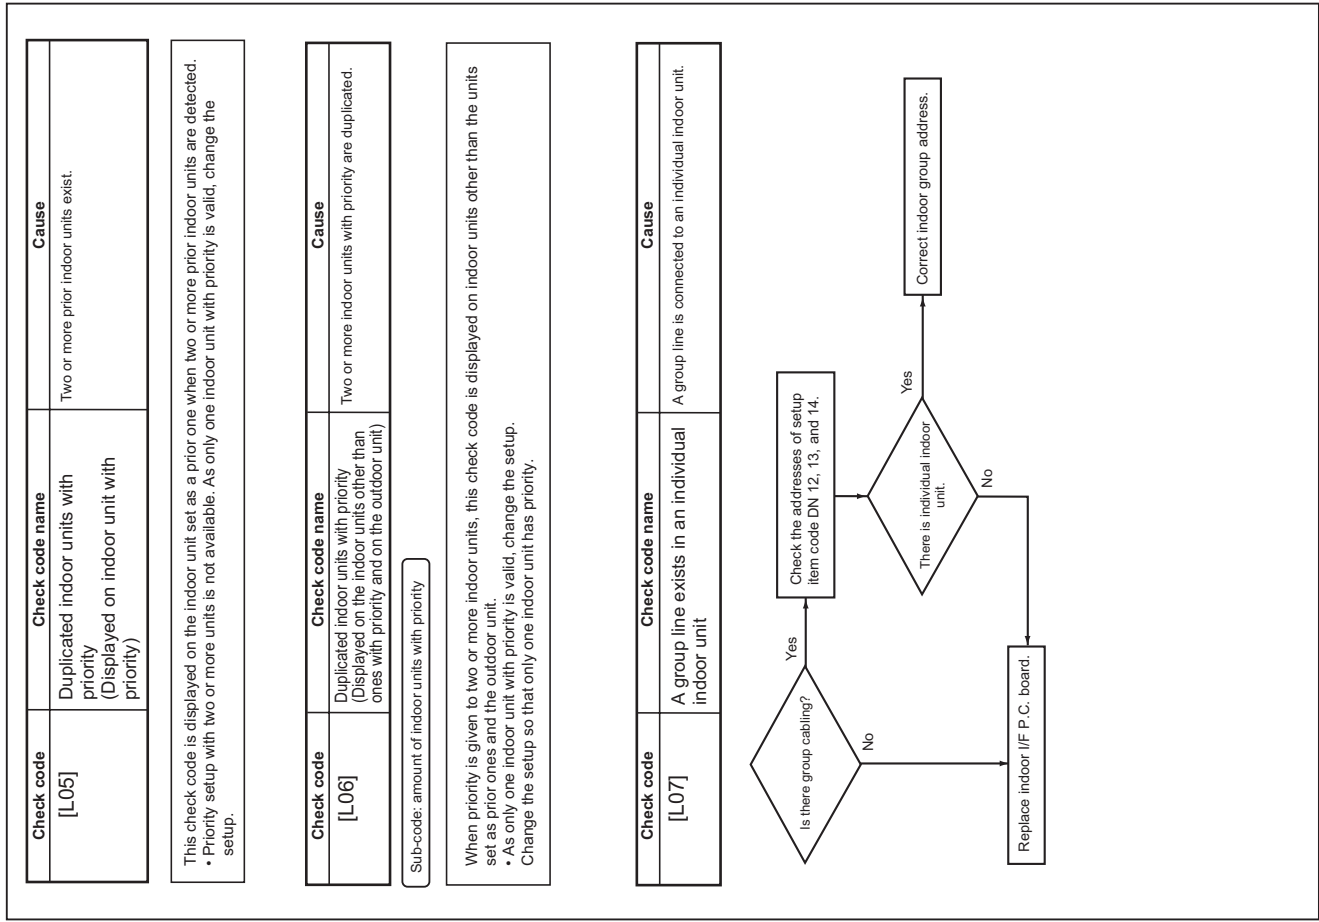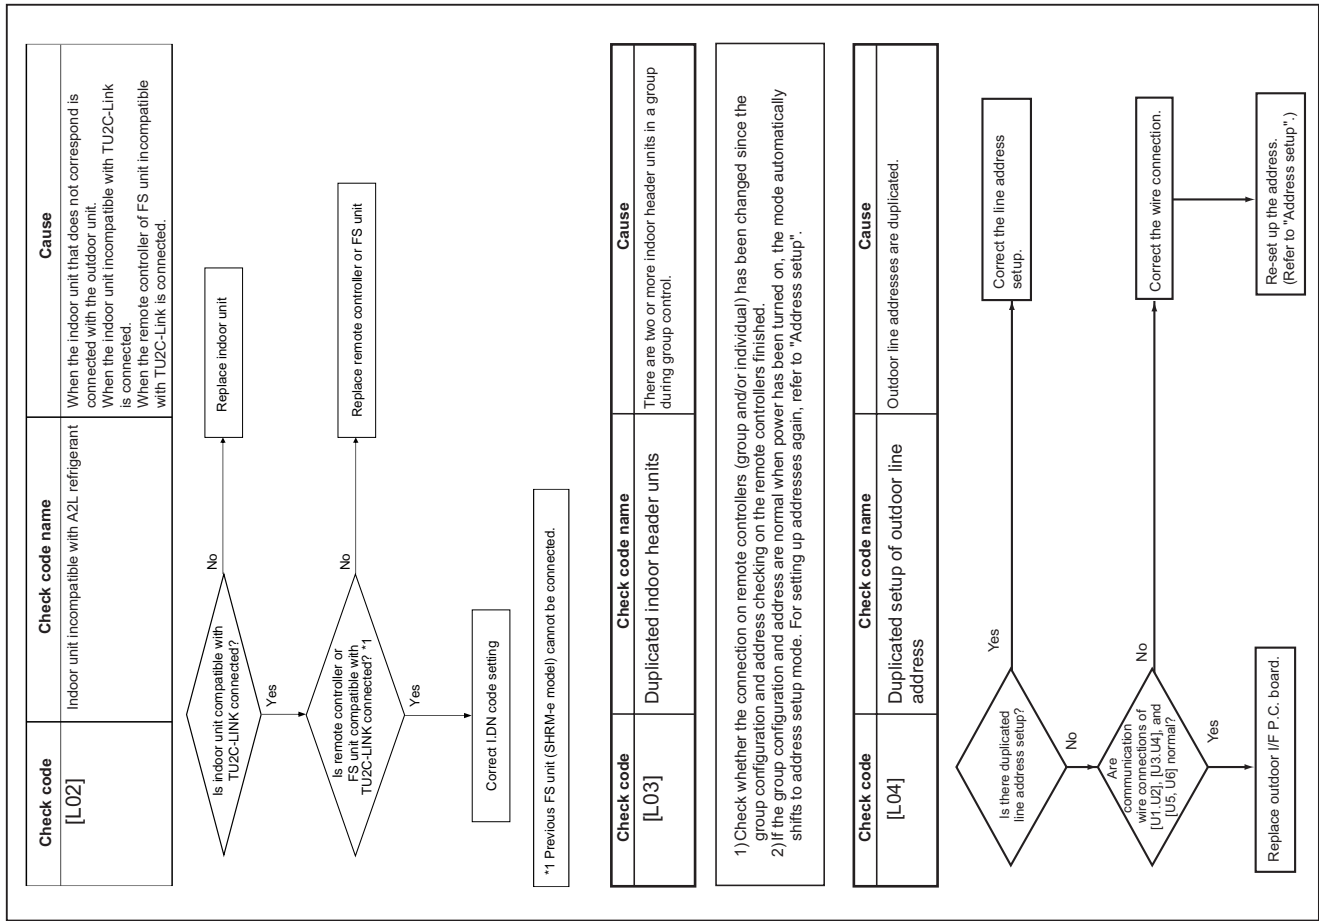

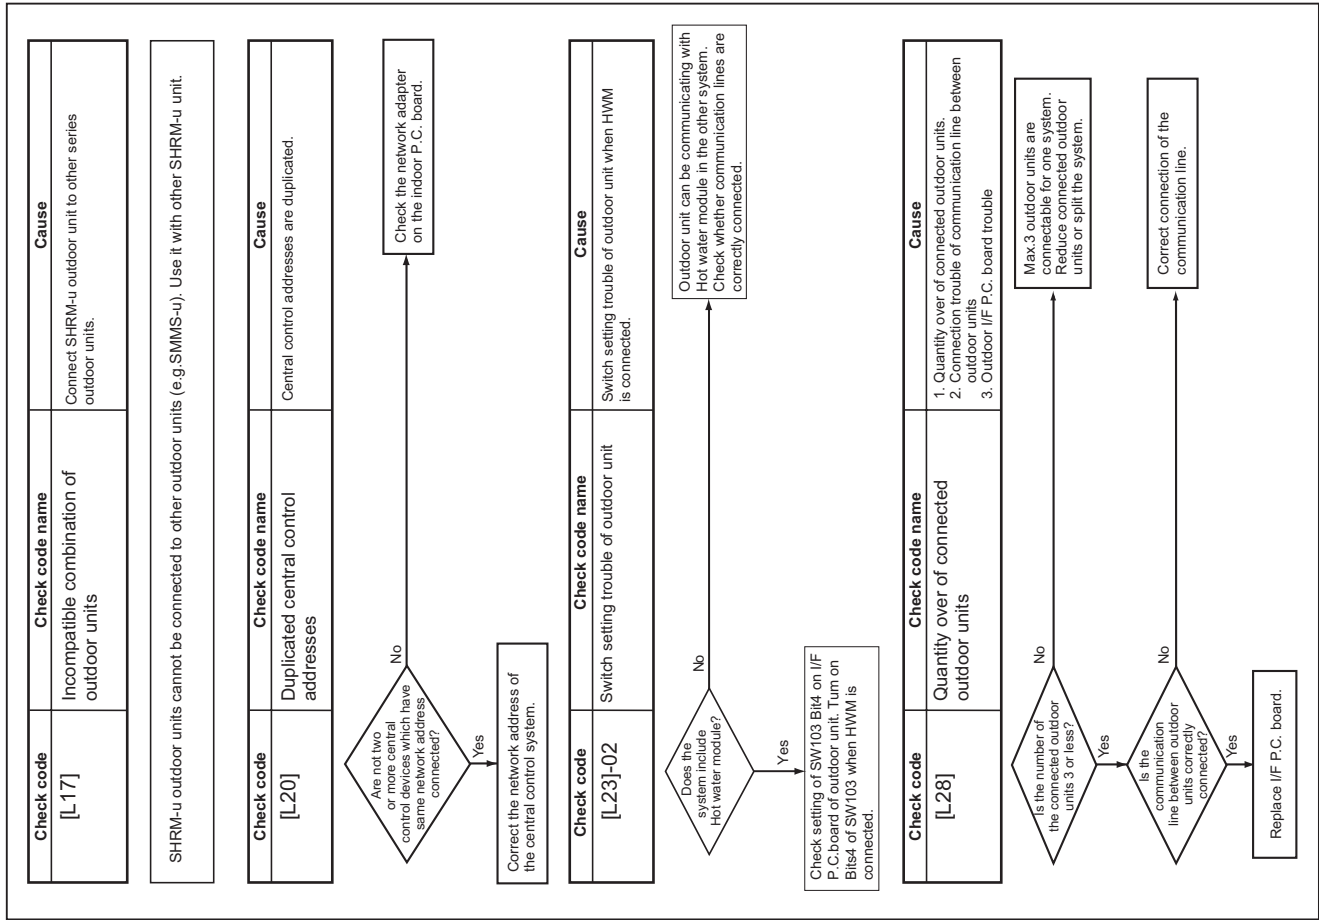
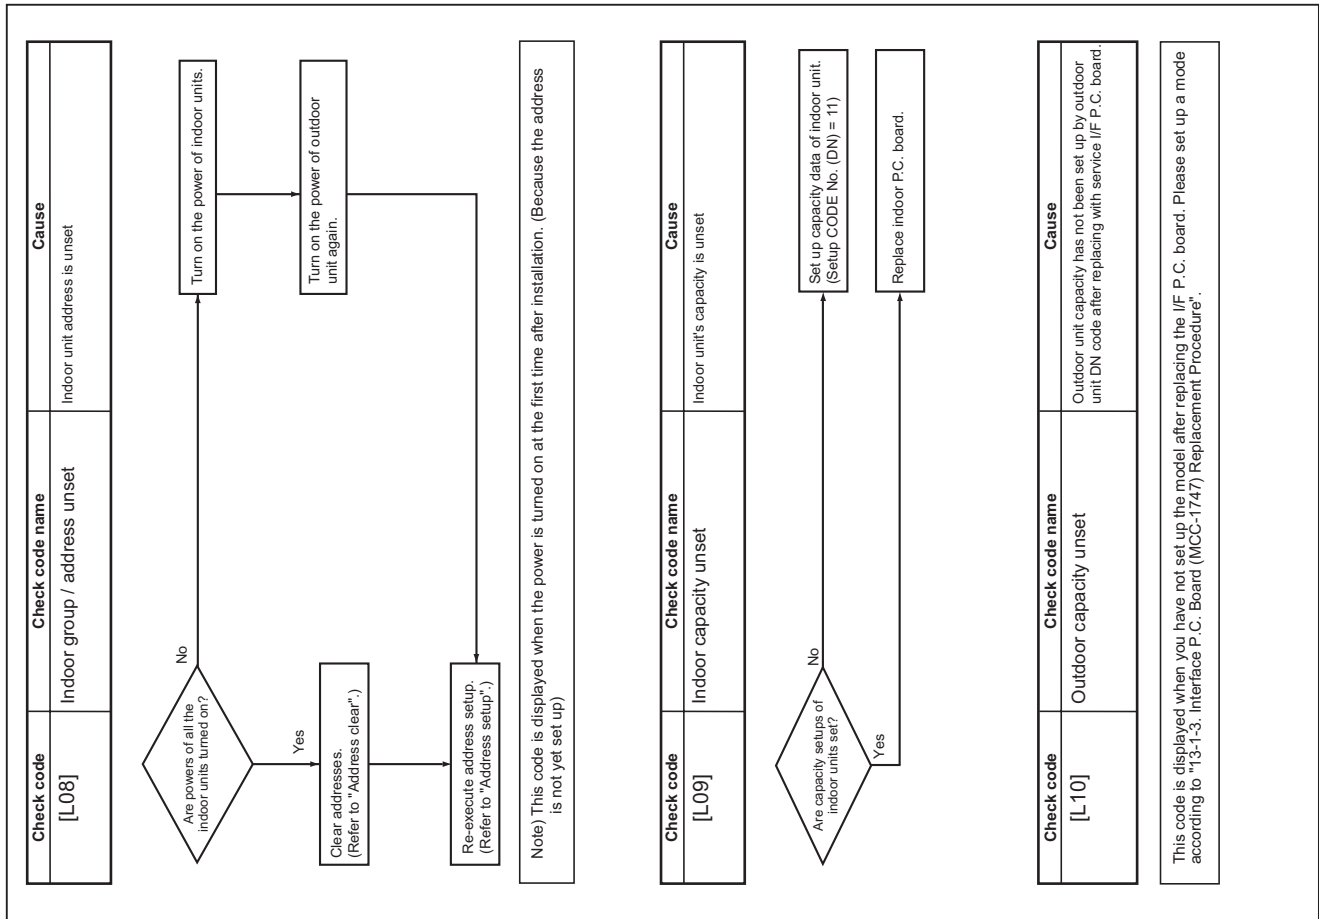



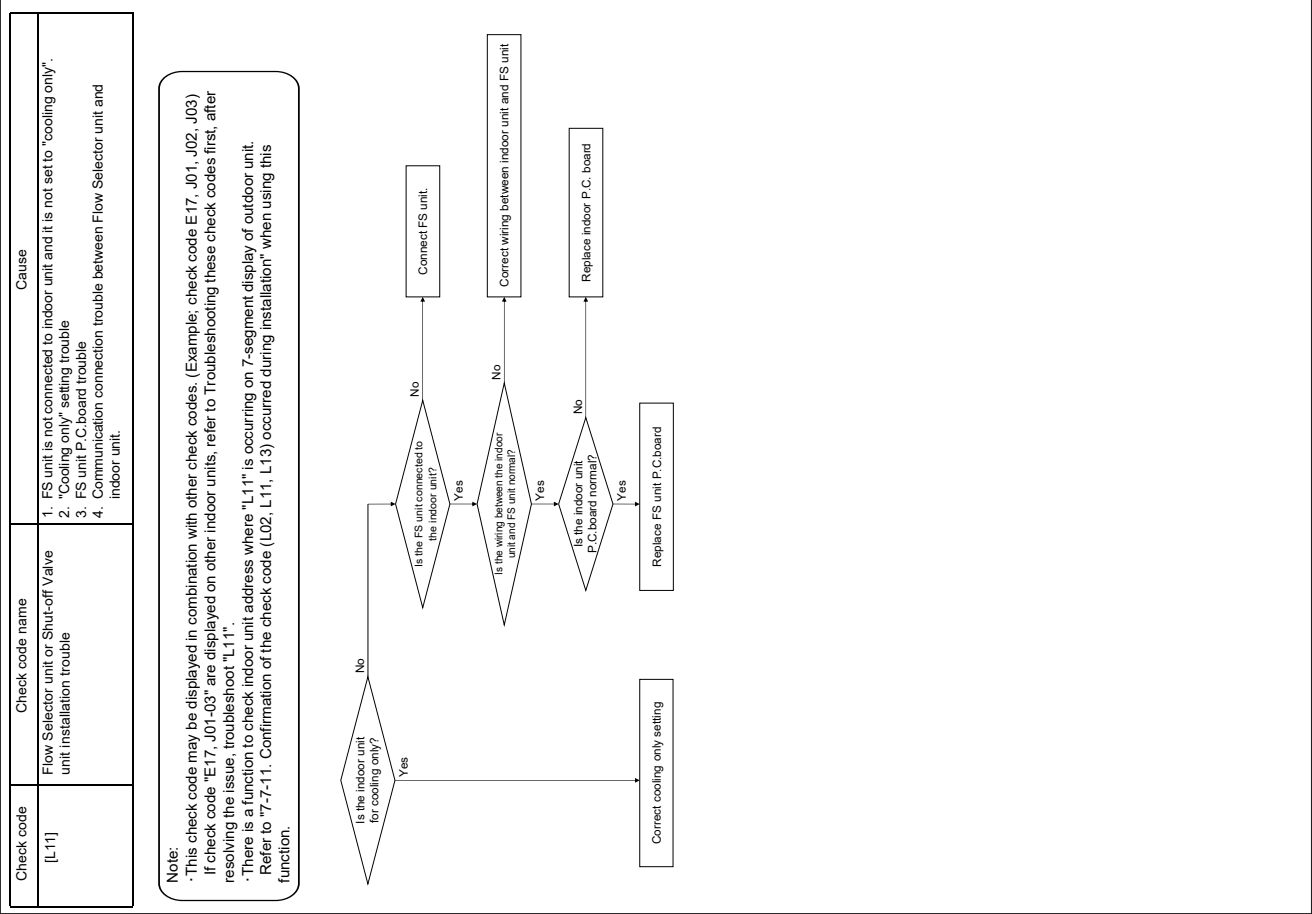


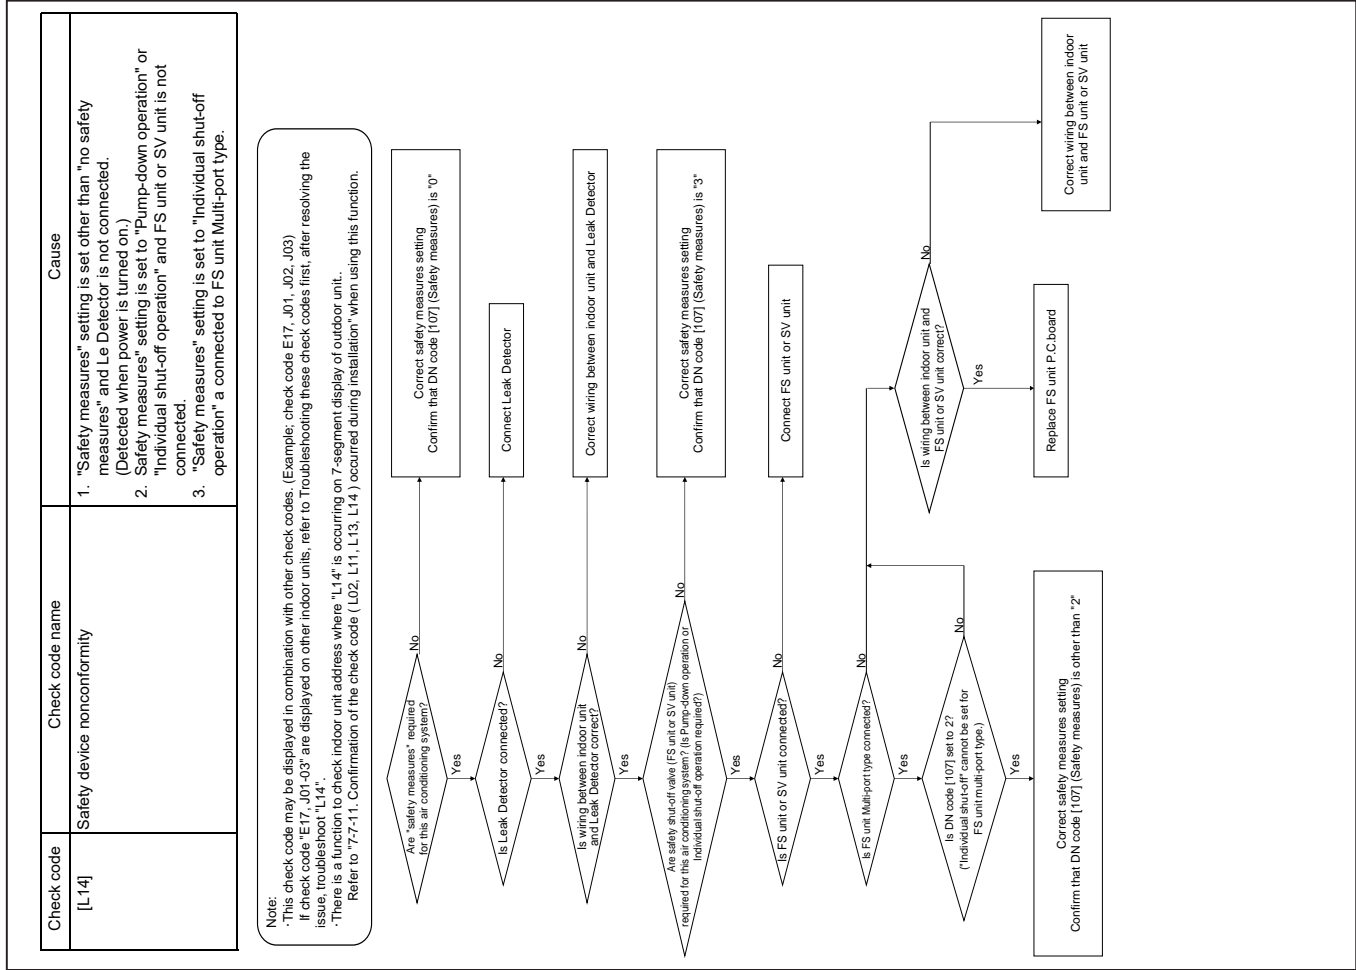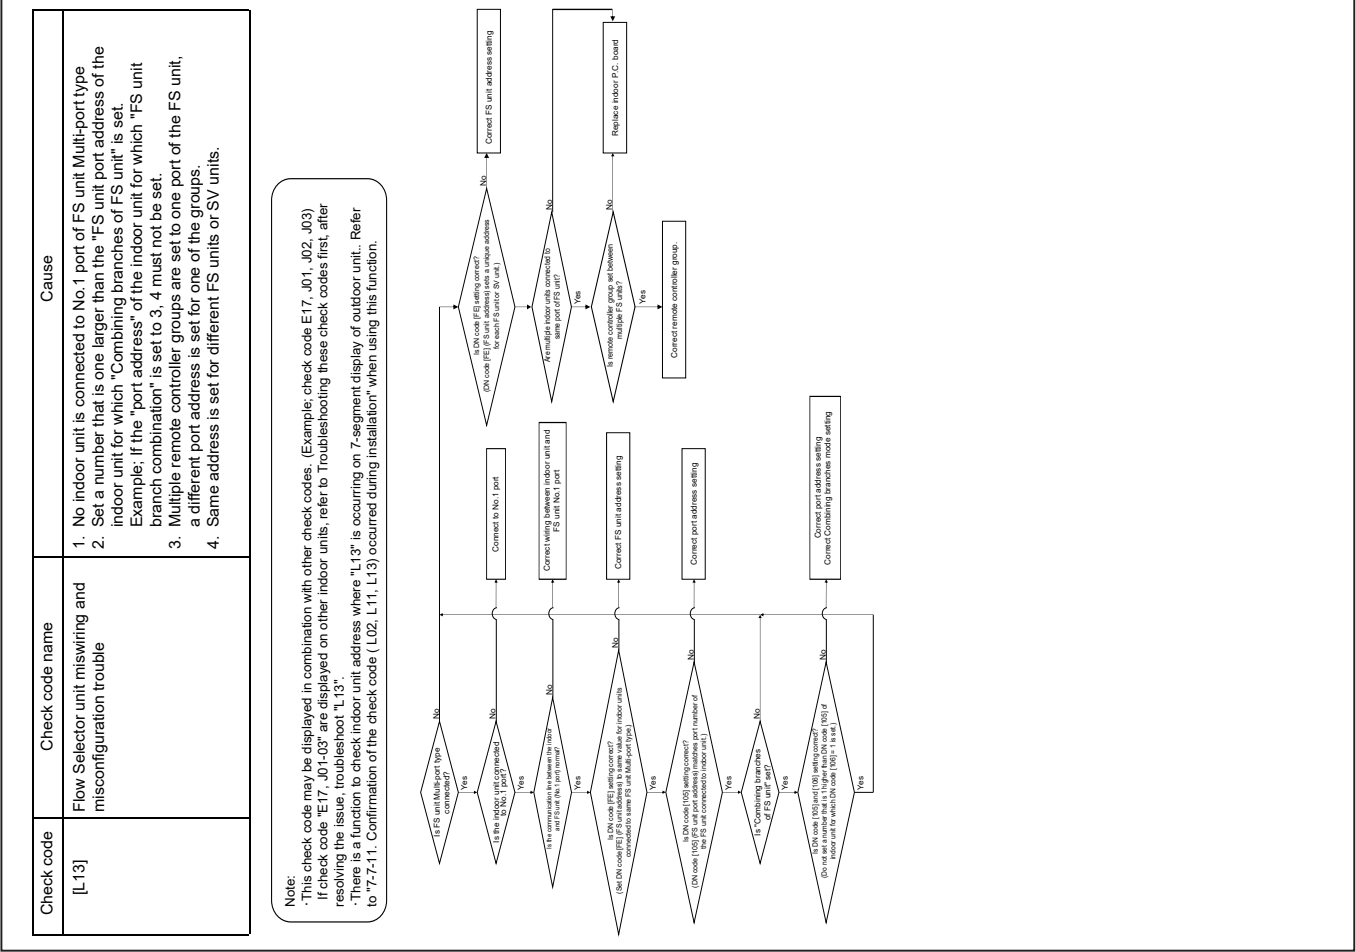




Check code	Check code name	Cause
[L24]	02:indoor units operation mode priority setting	Priority setting has not been performed for indoor units


The check code is displayed on the indoor unit set when the priority-setting of the indoor operation mode is overlapped in the same branch system.
Correct the priority-setting of the indoor operation mode in DN(FD).

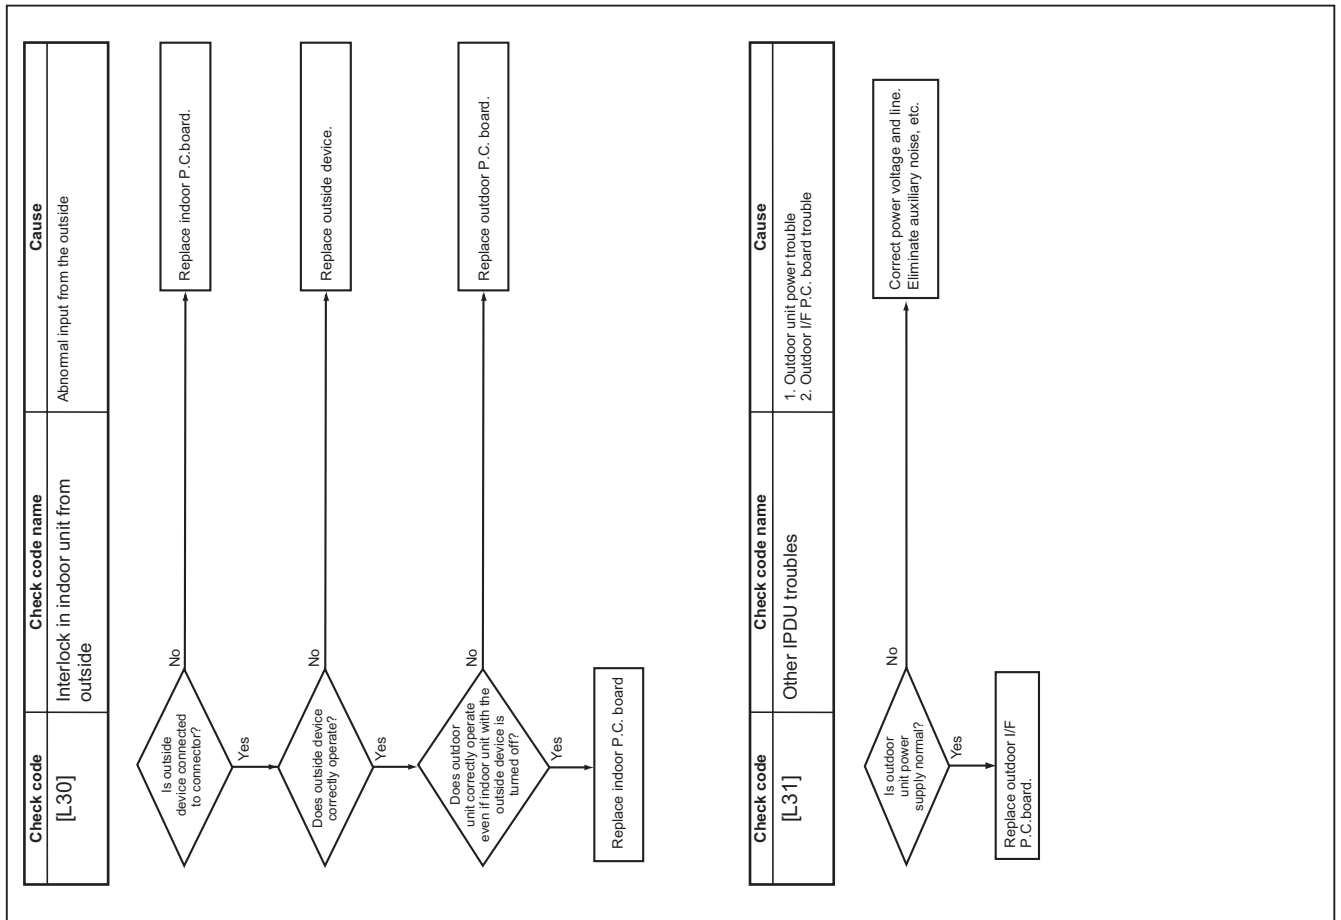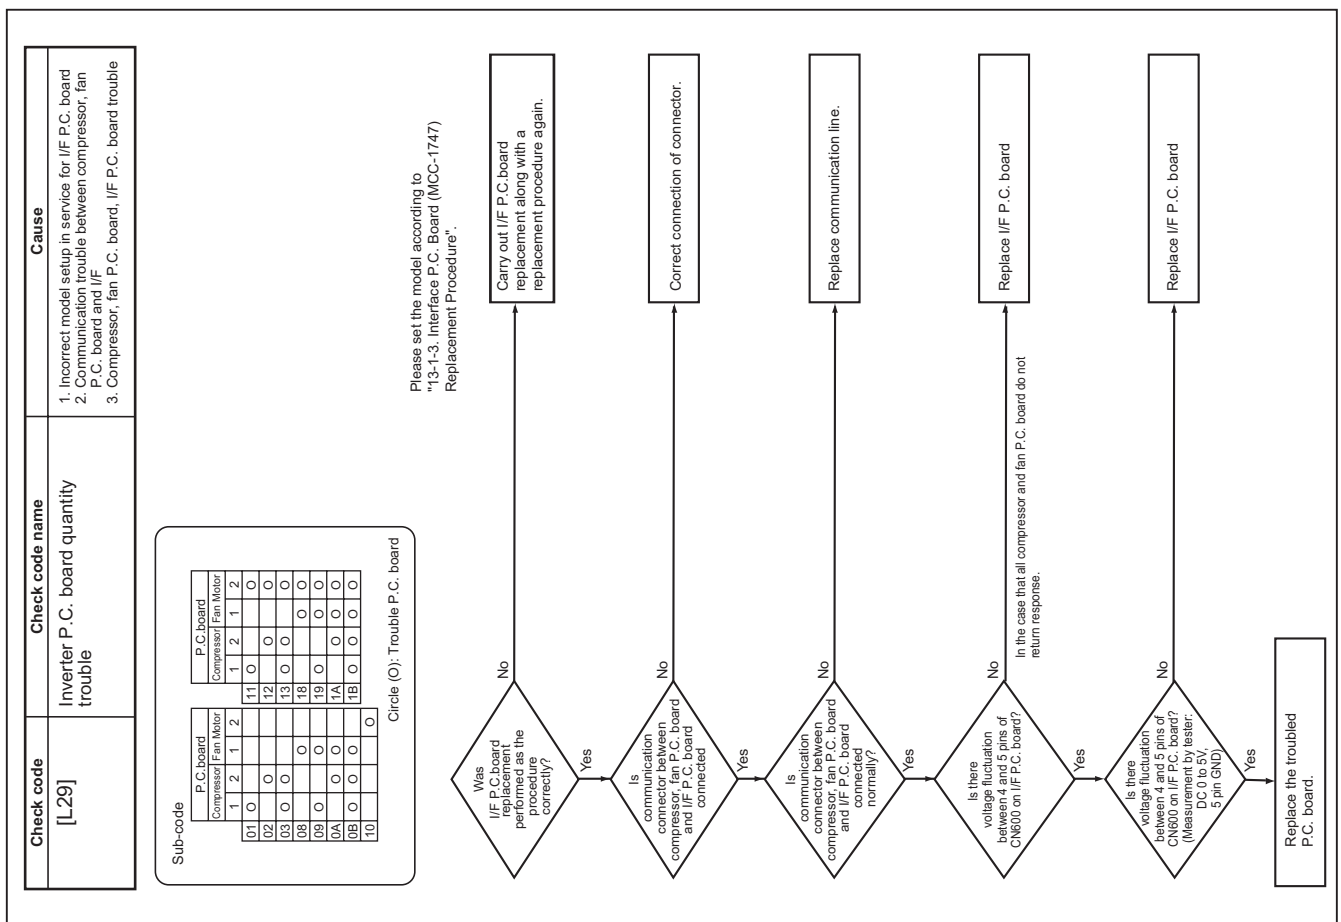


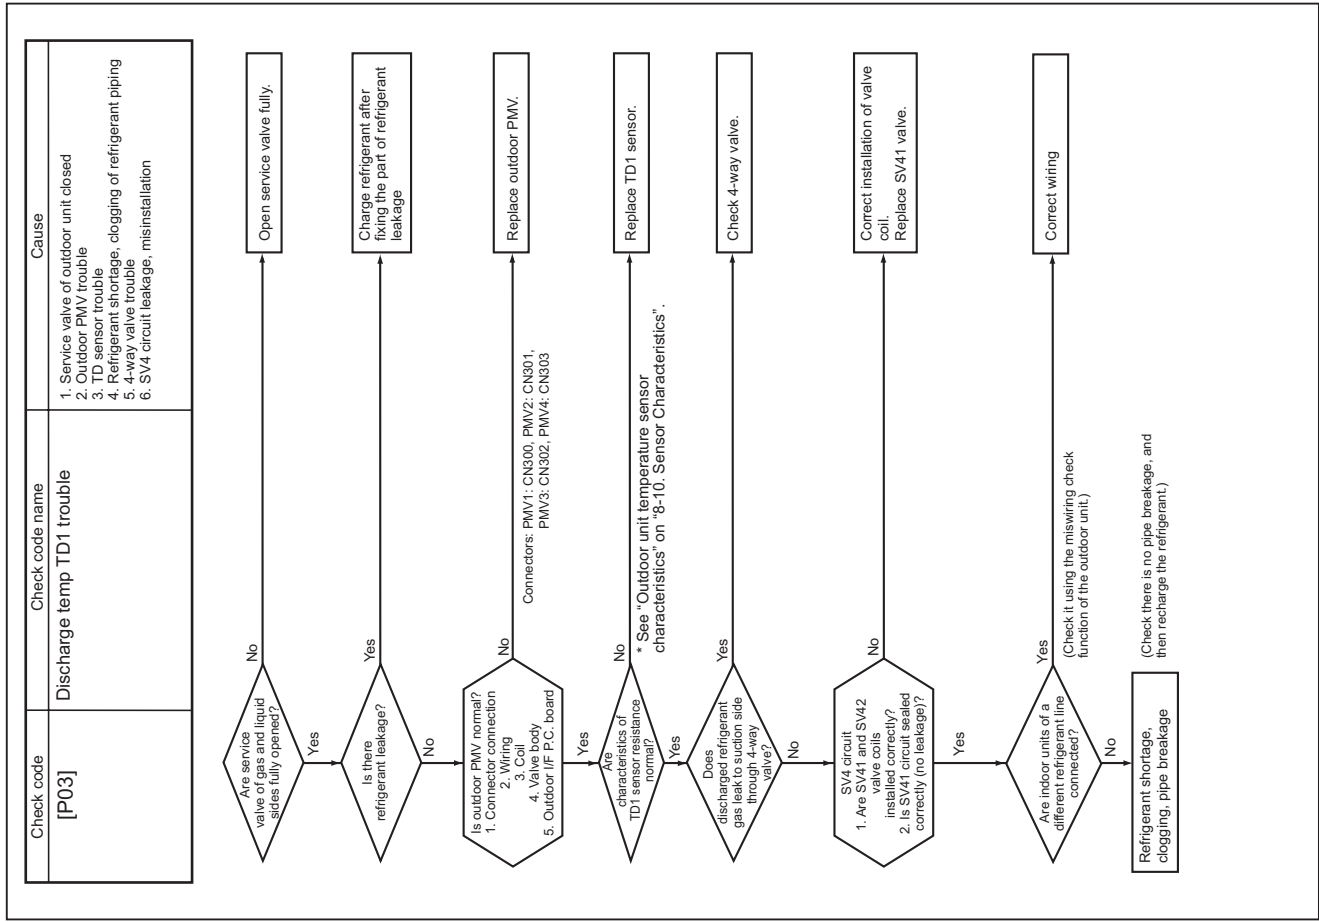
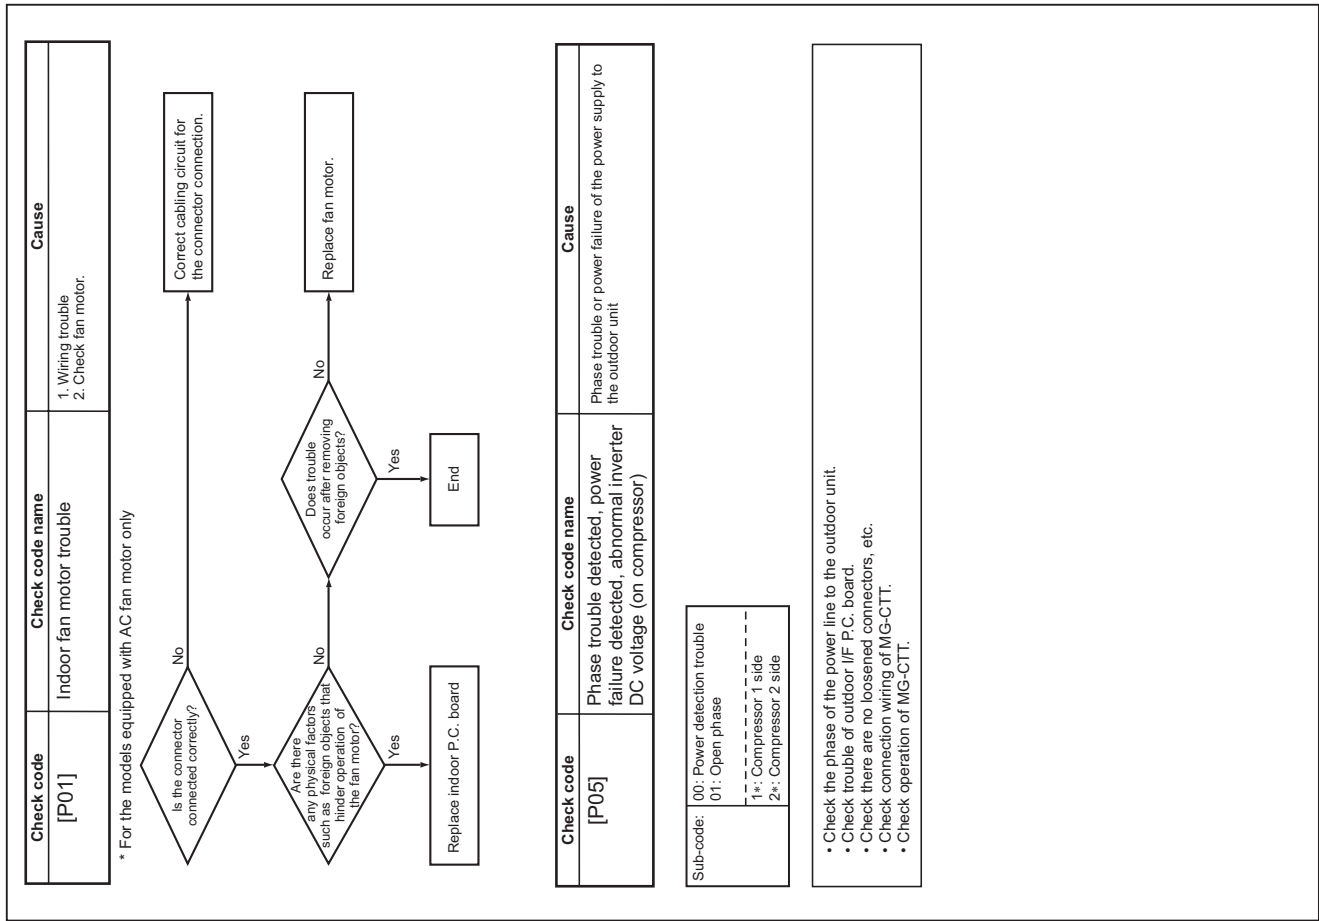


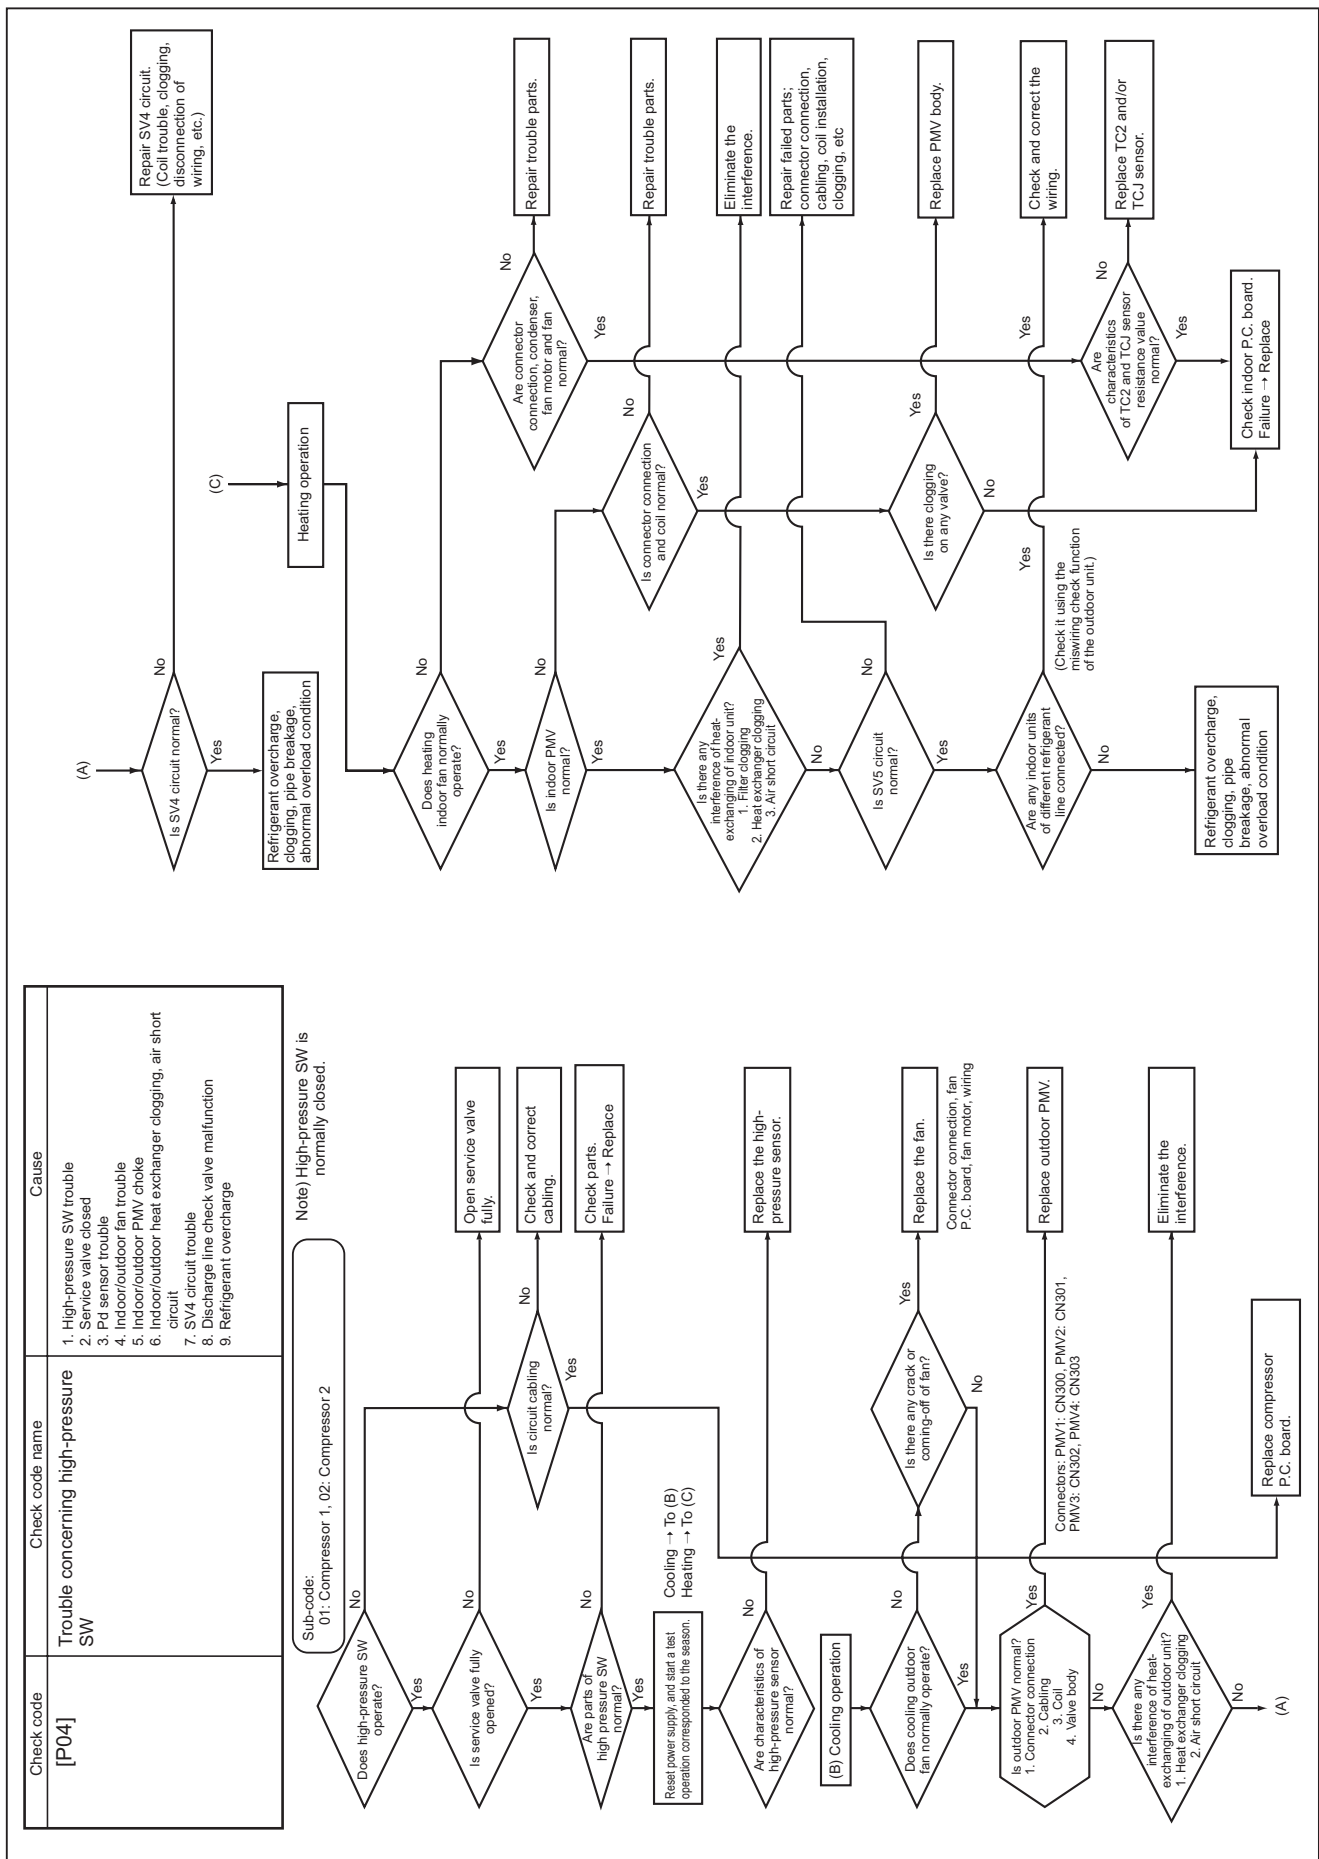


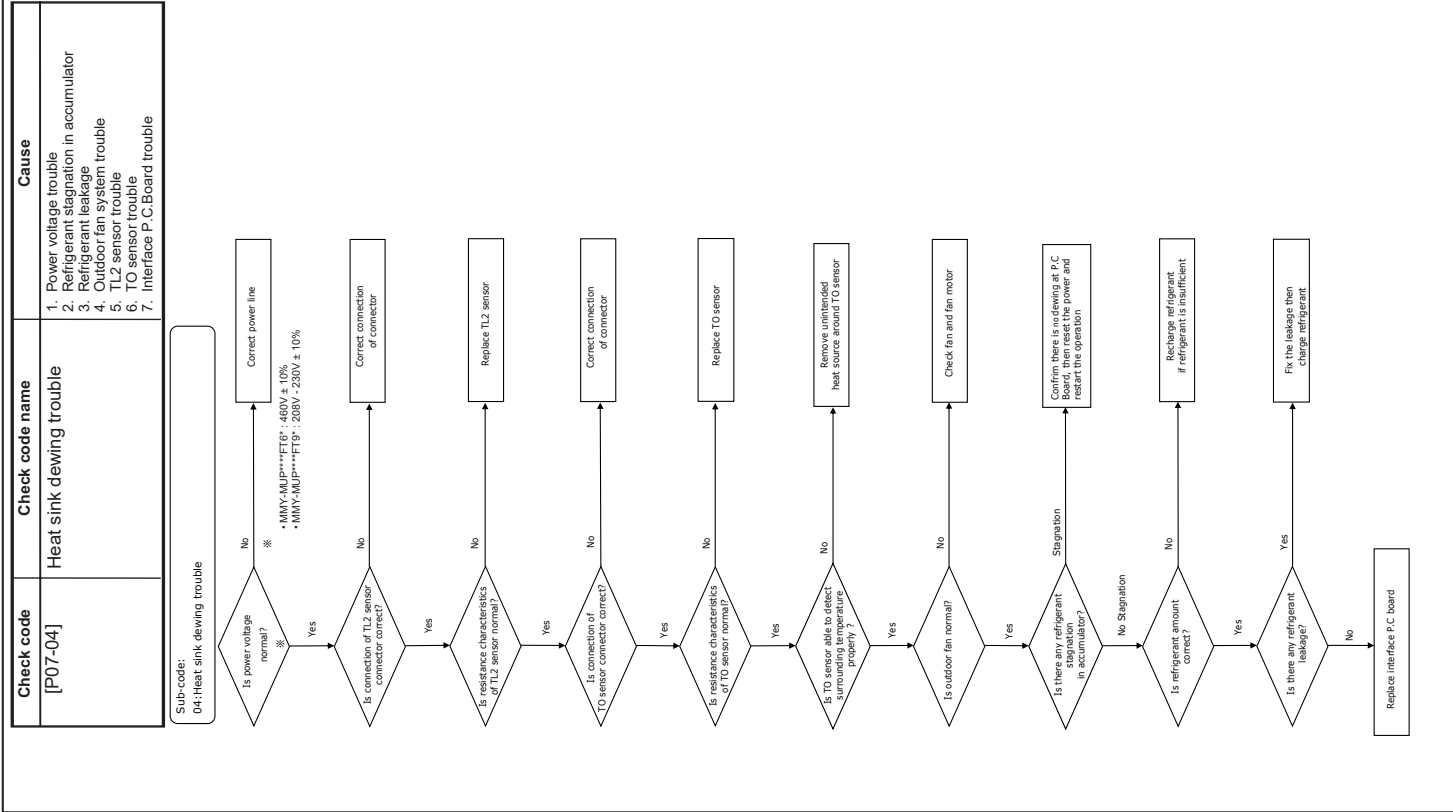
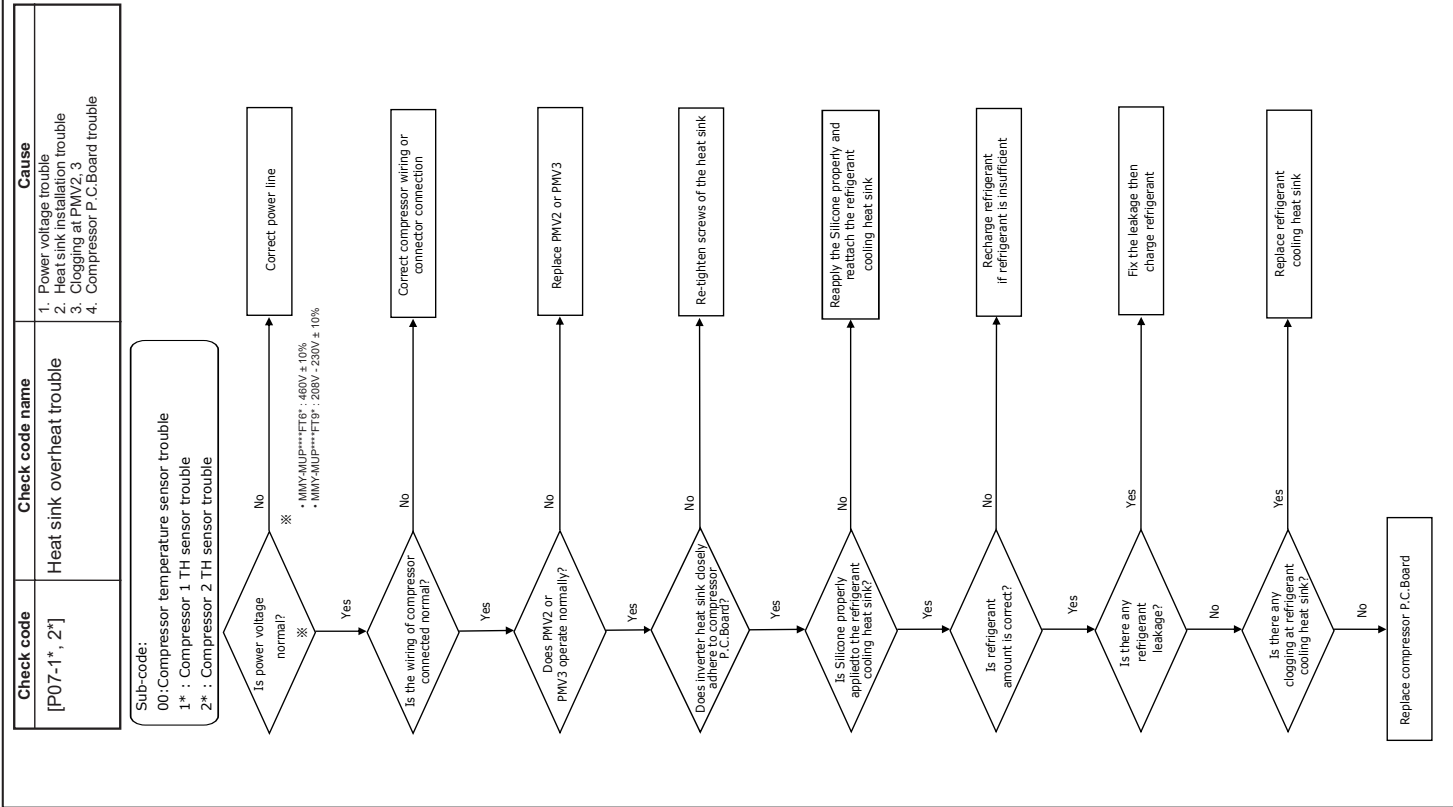



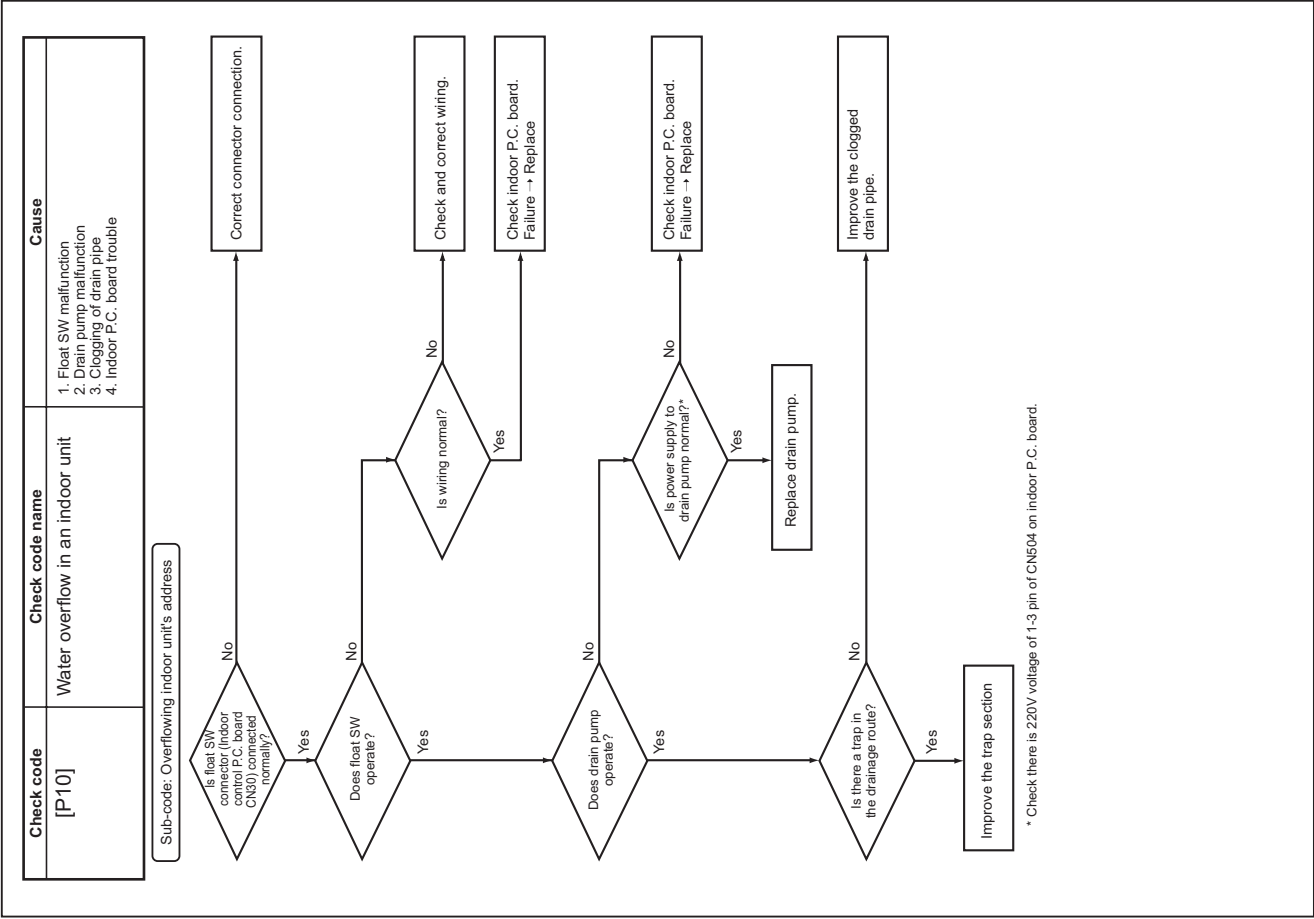



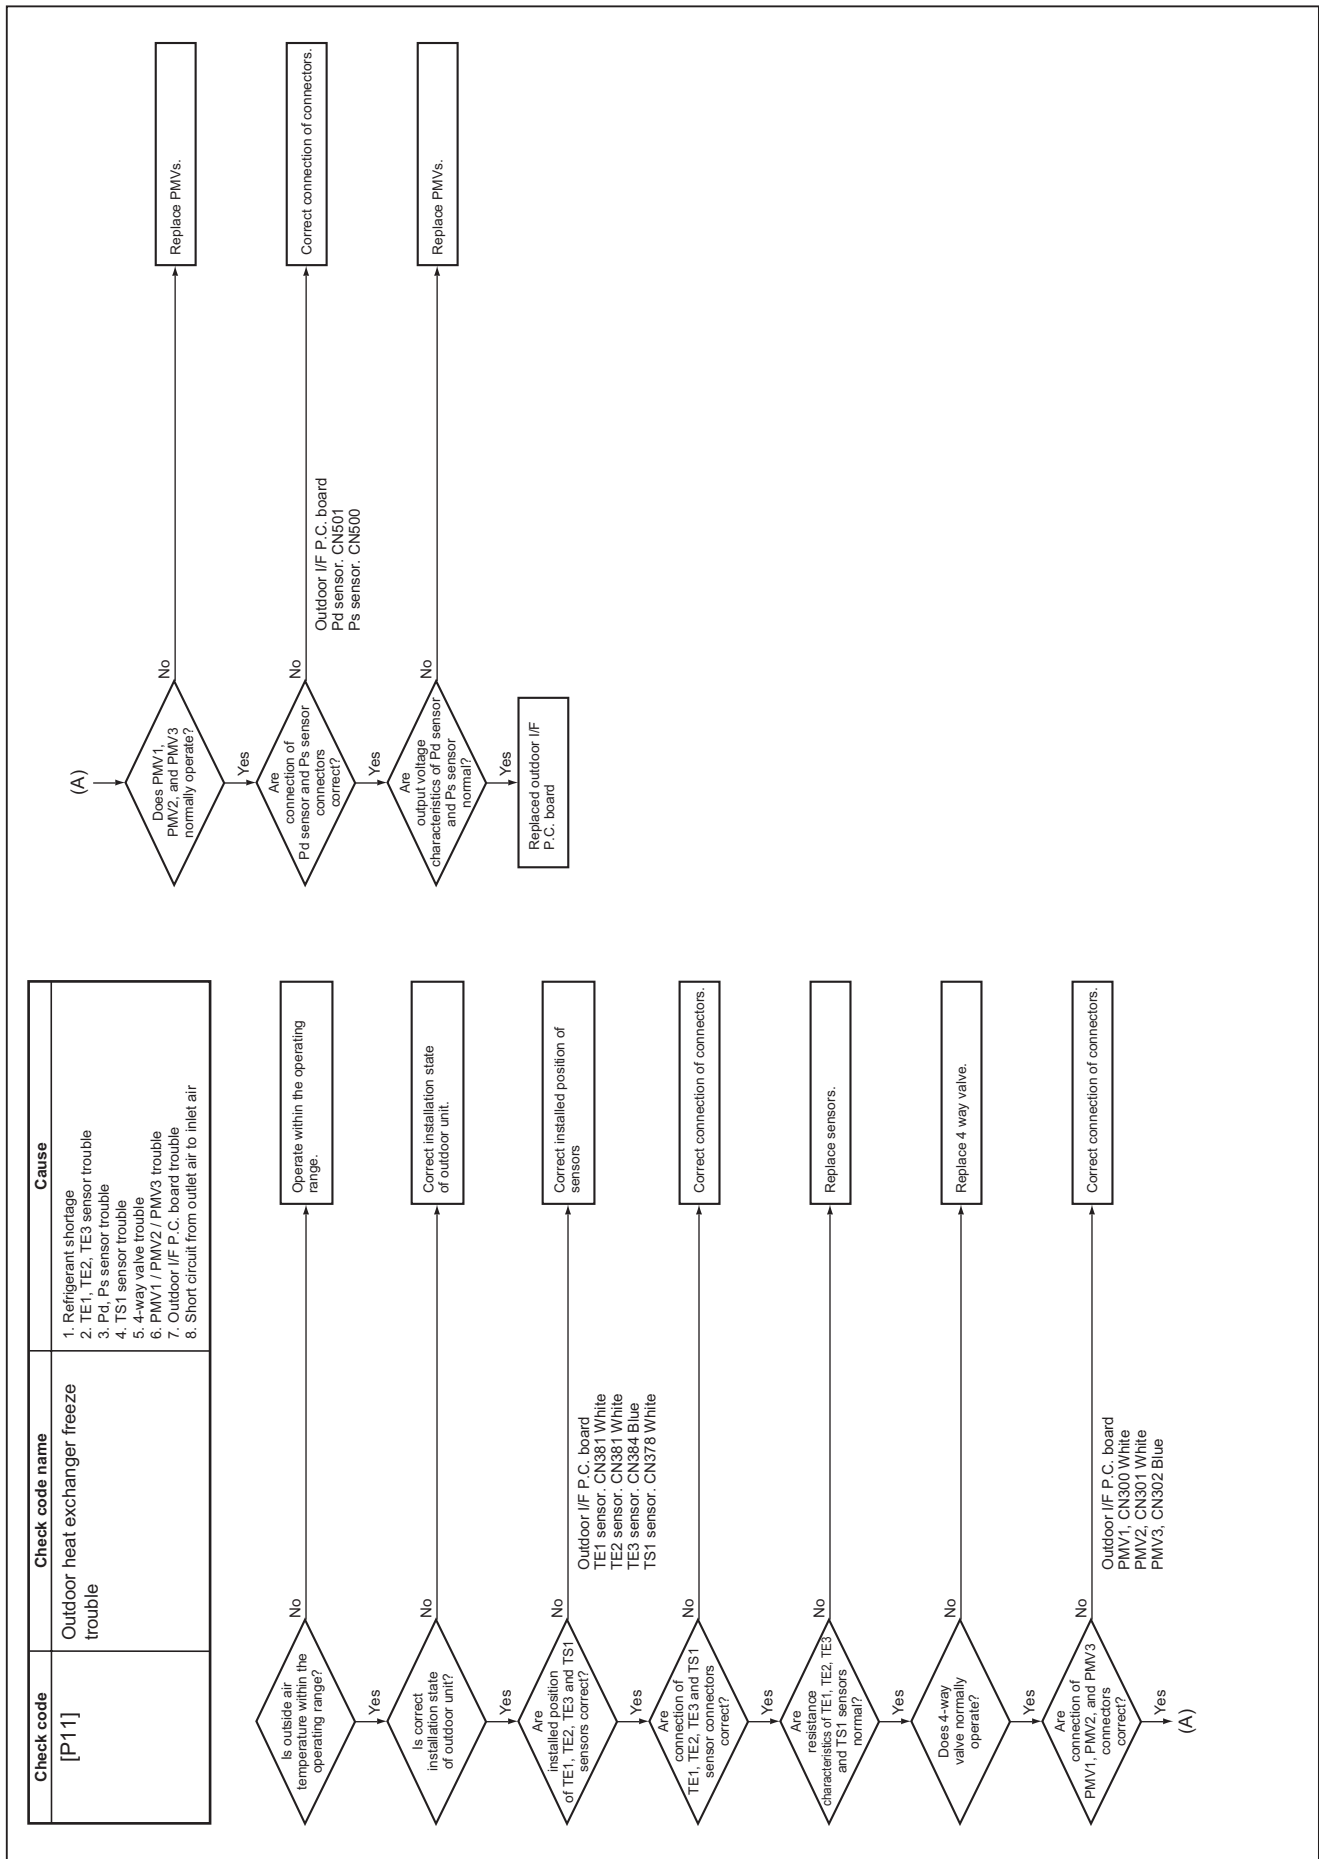


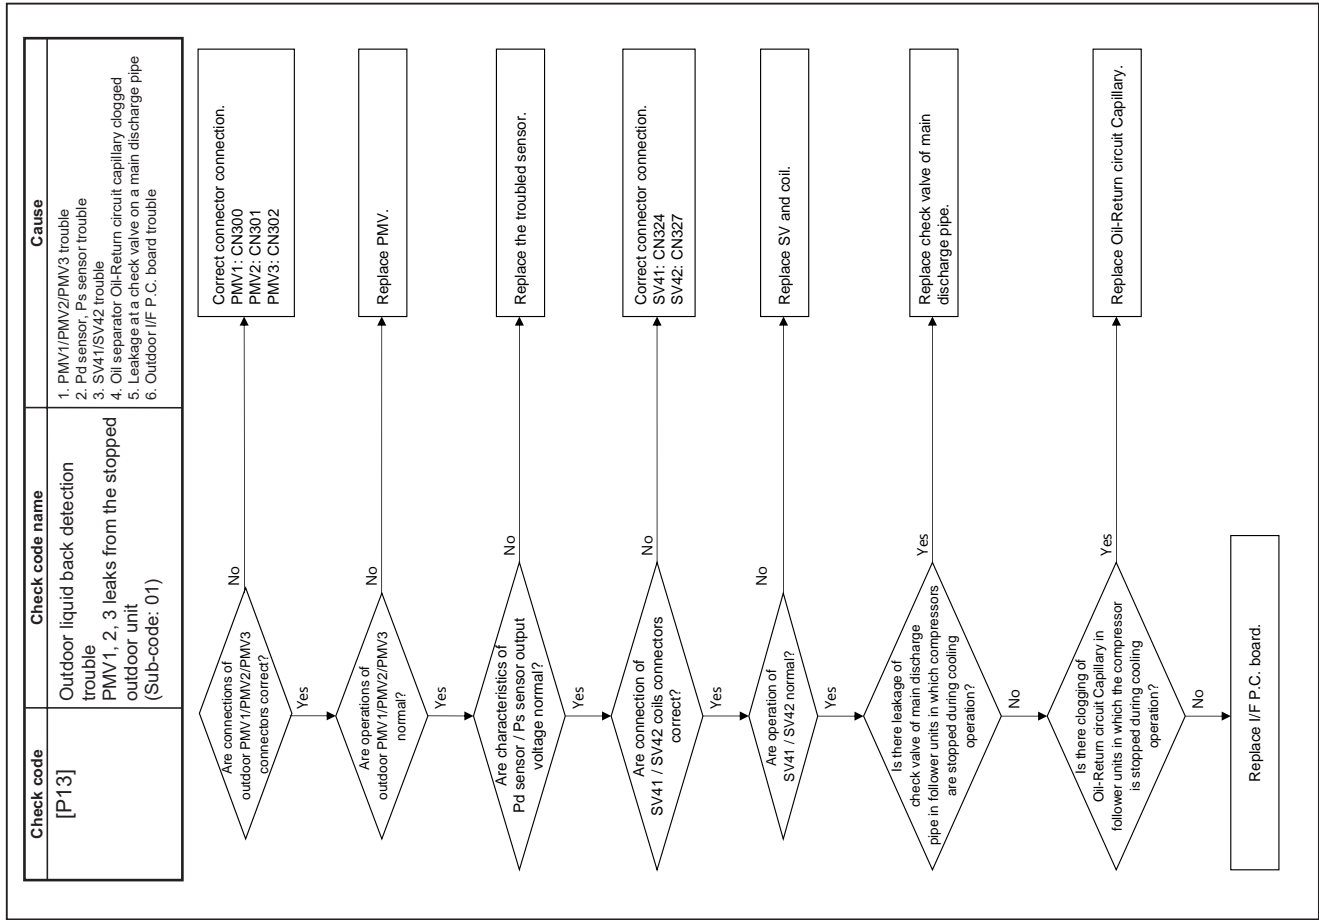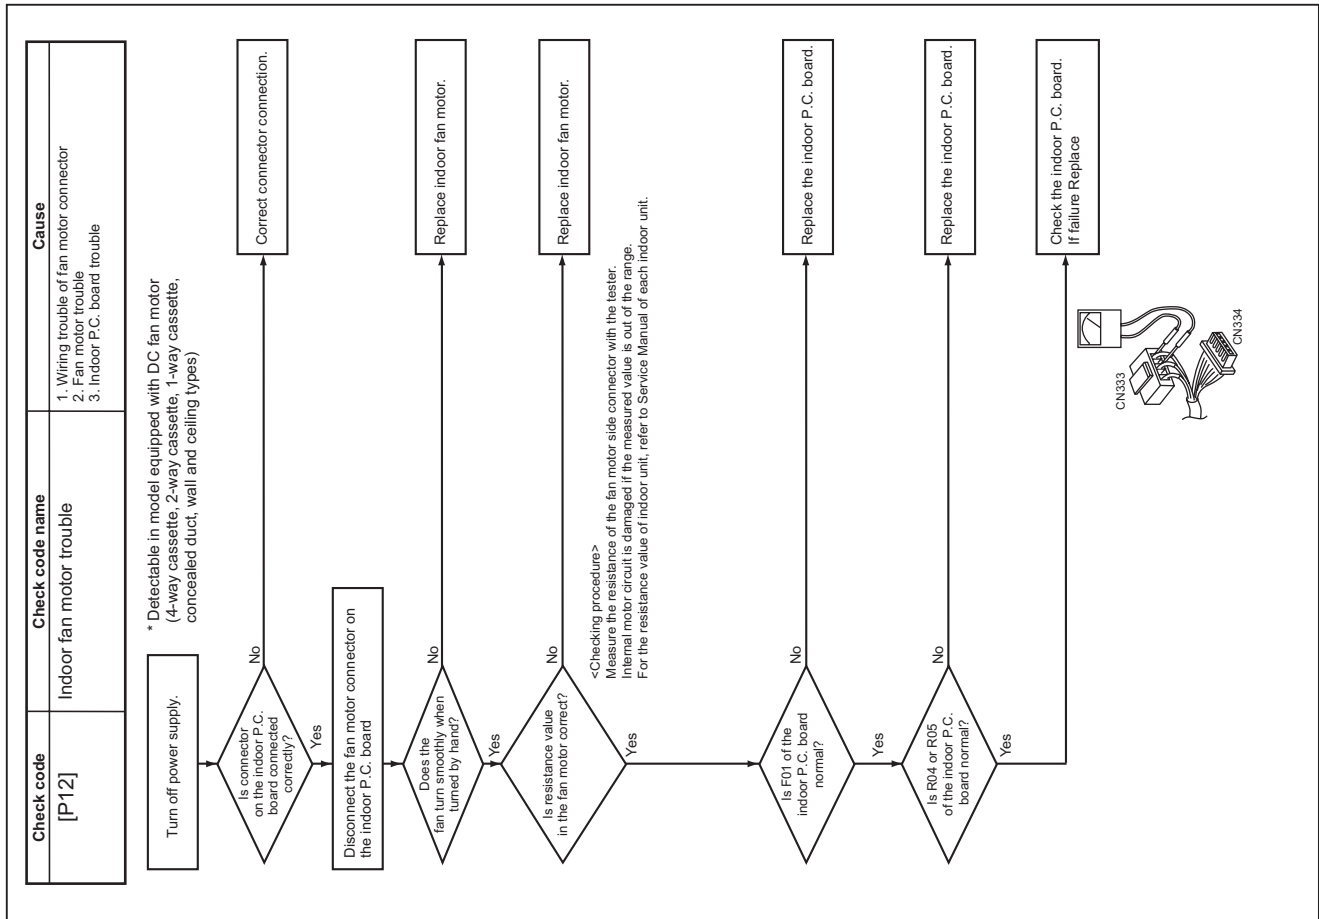

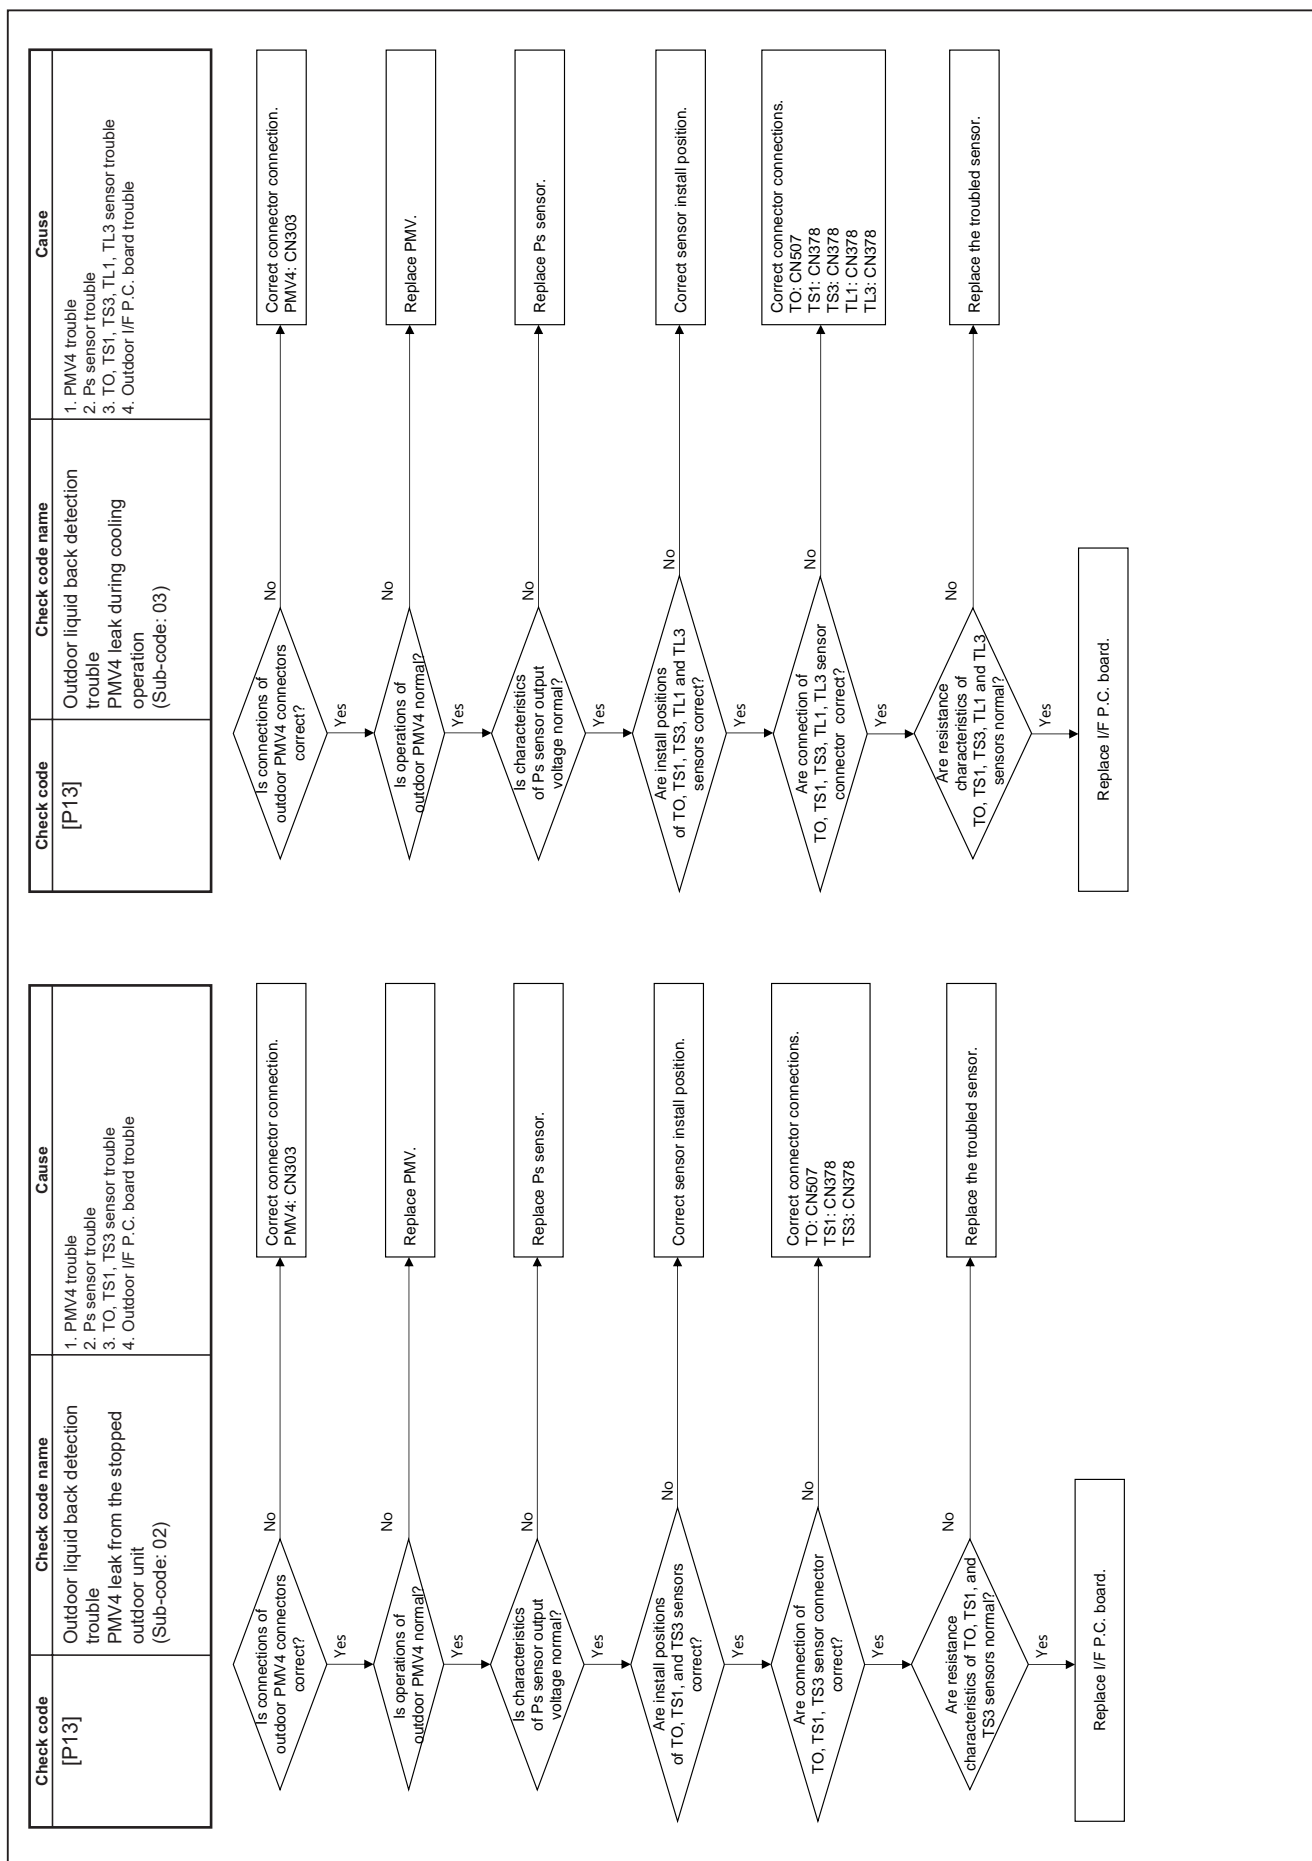


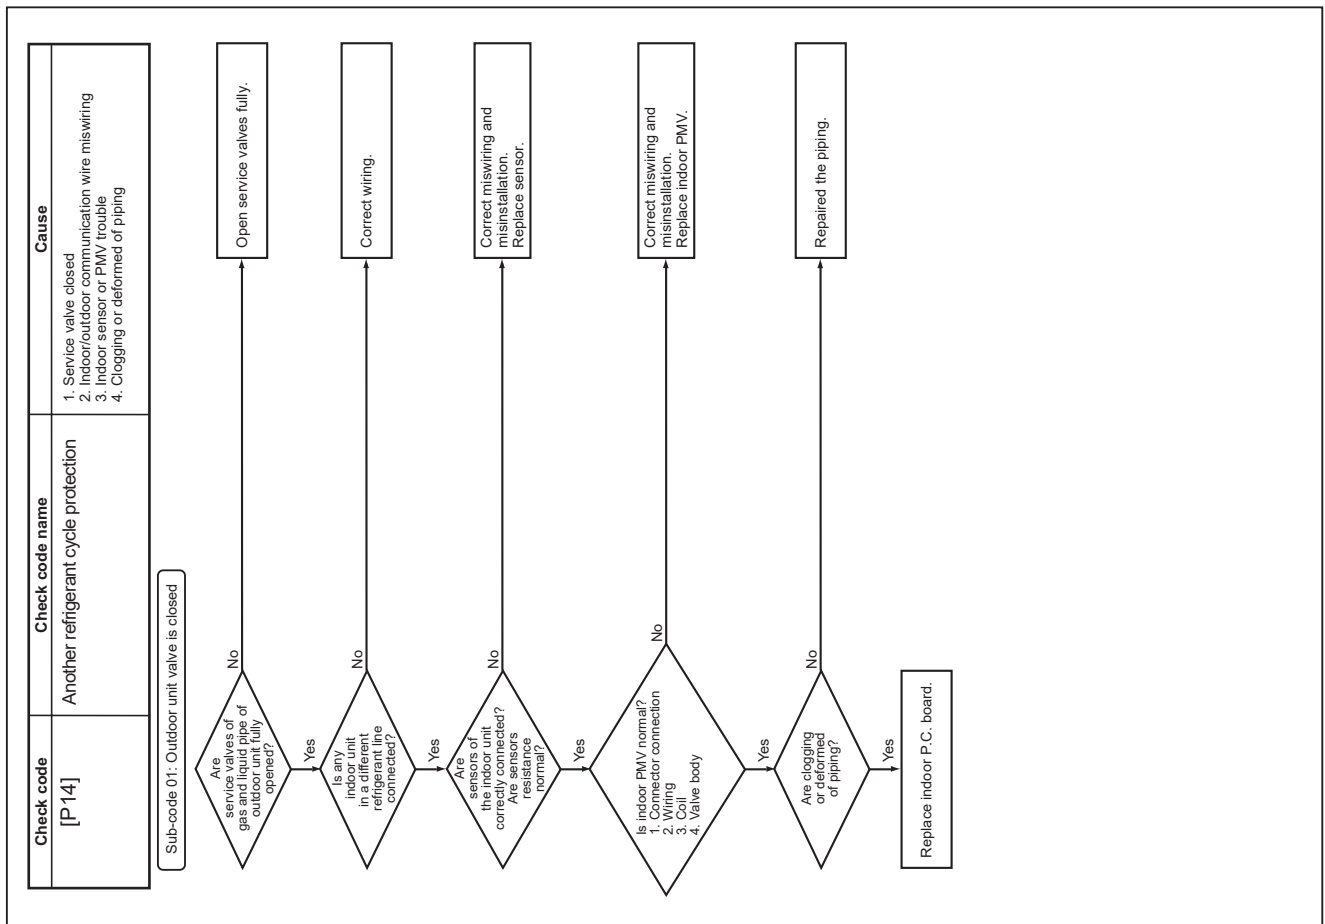
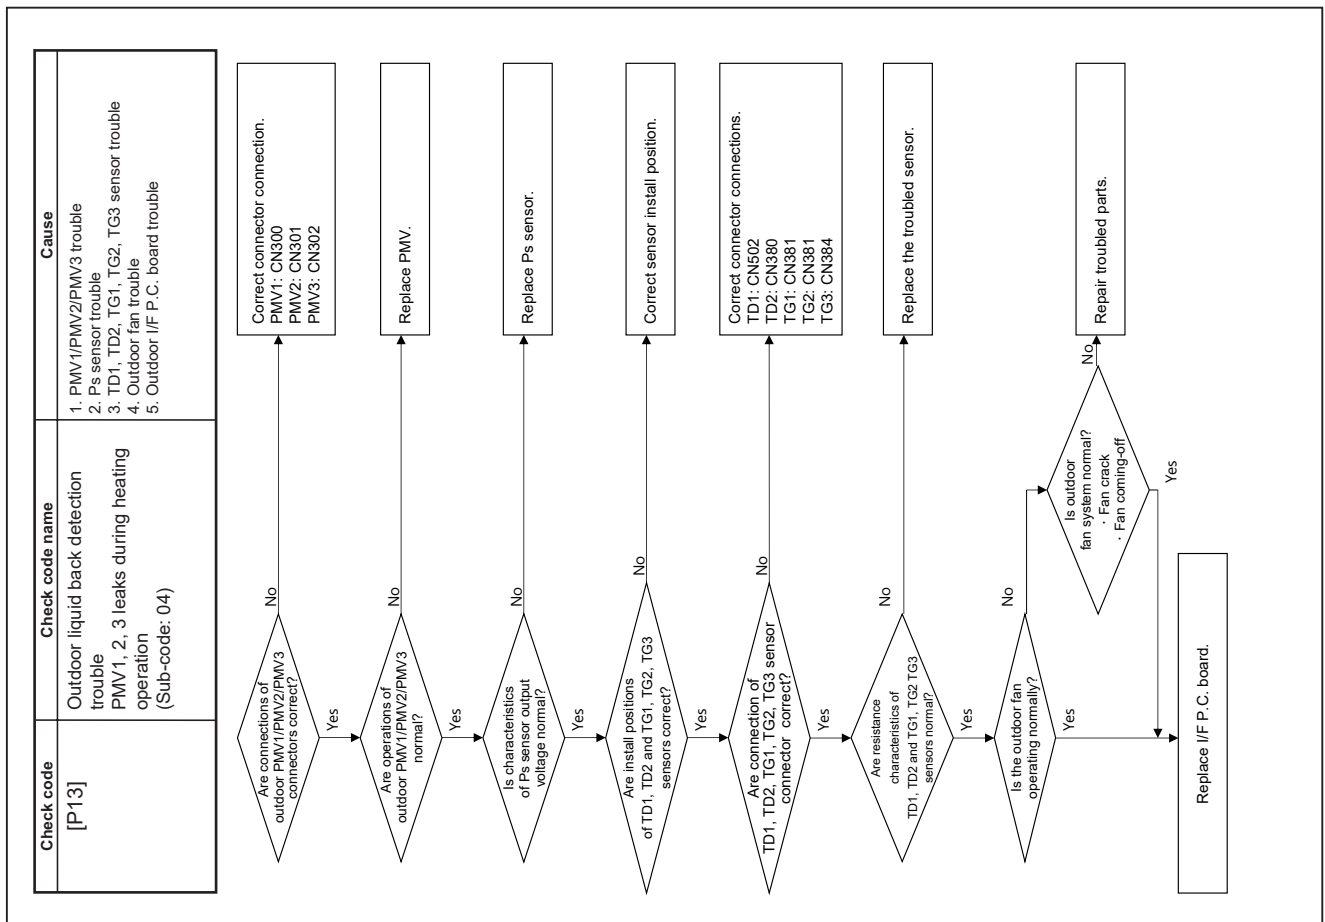


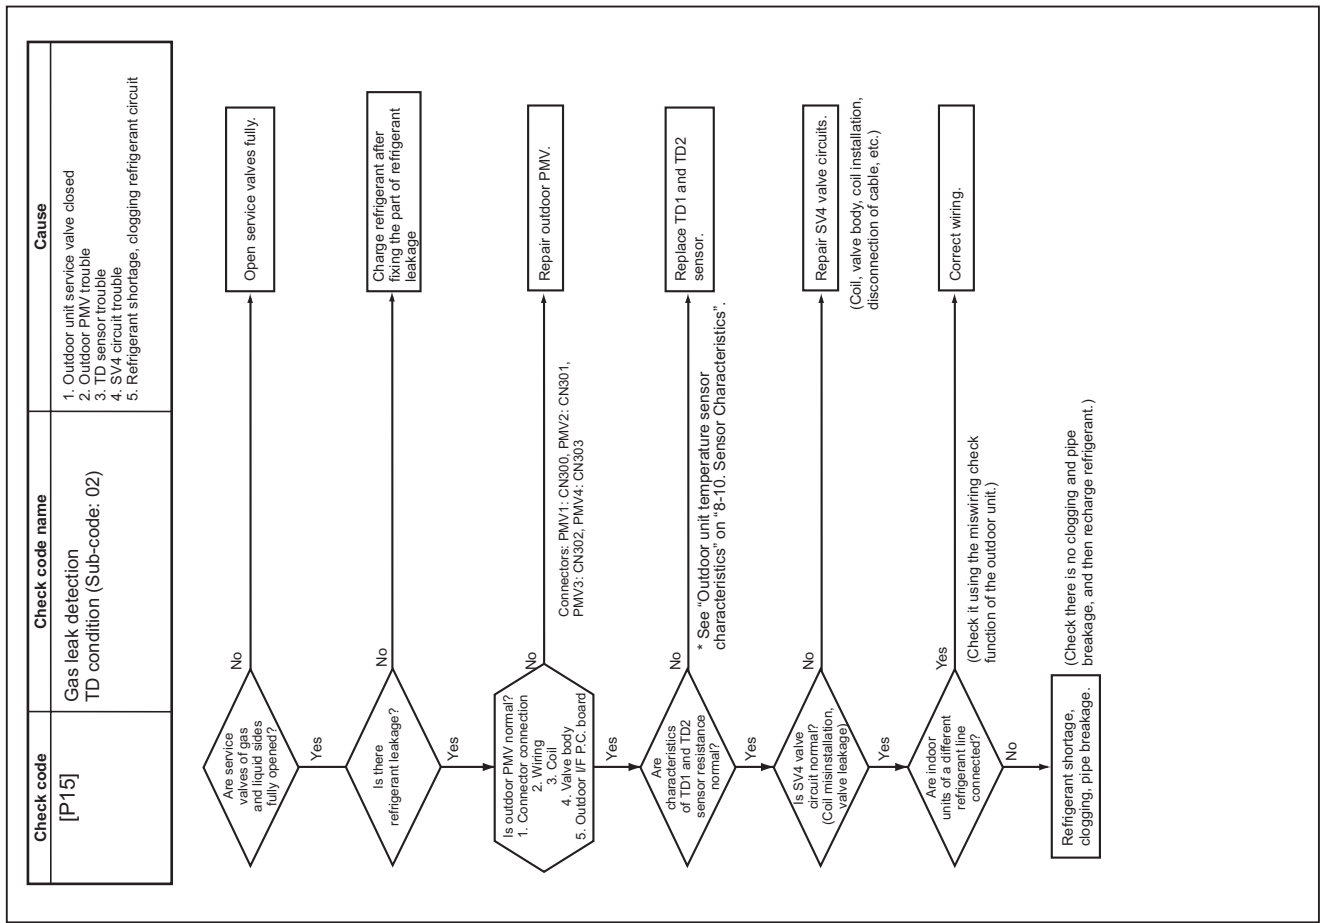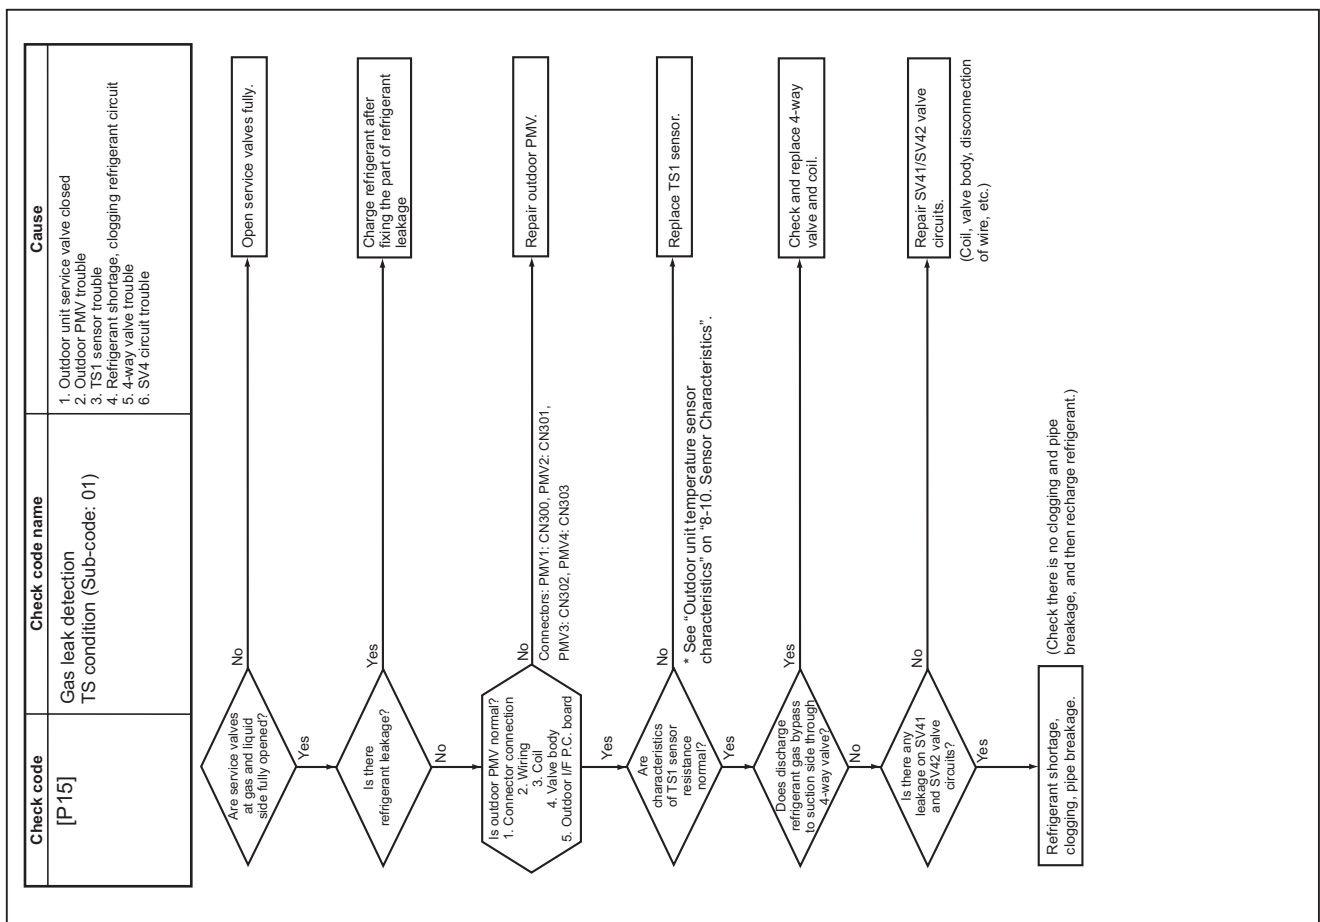

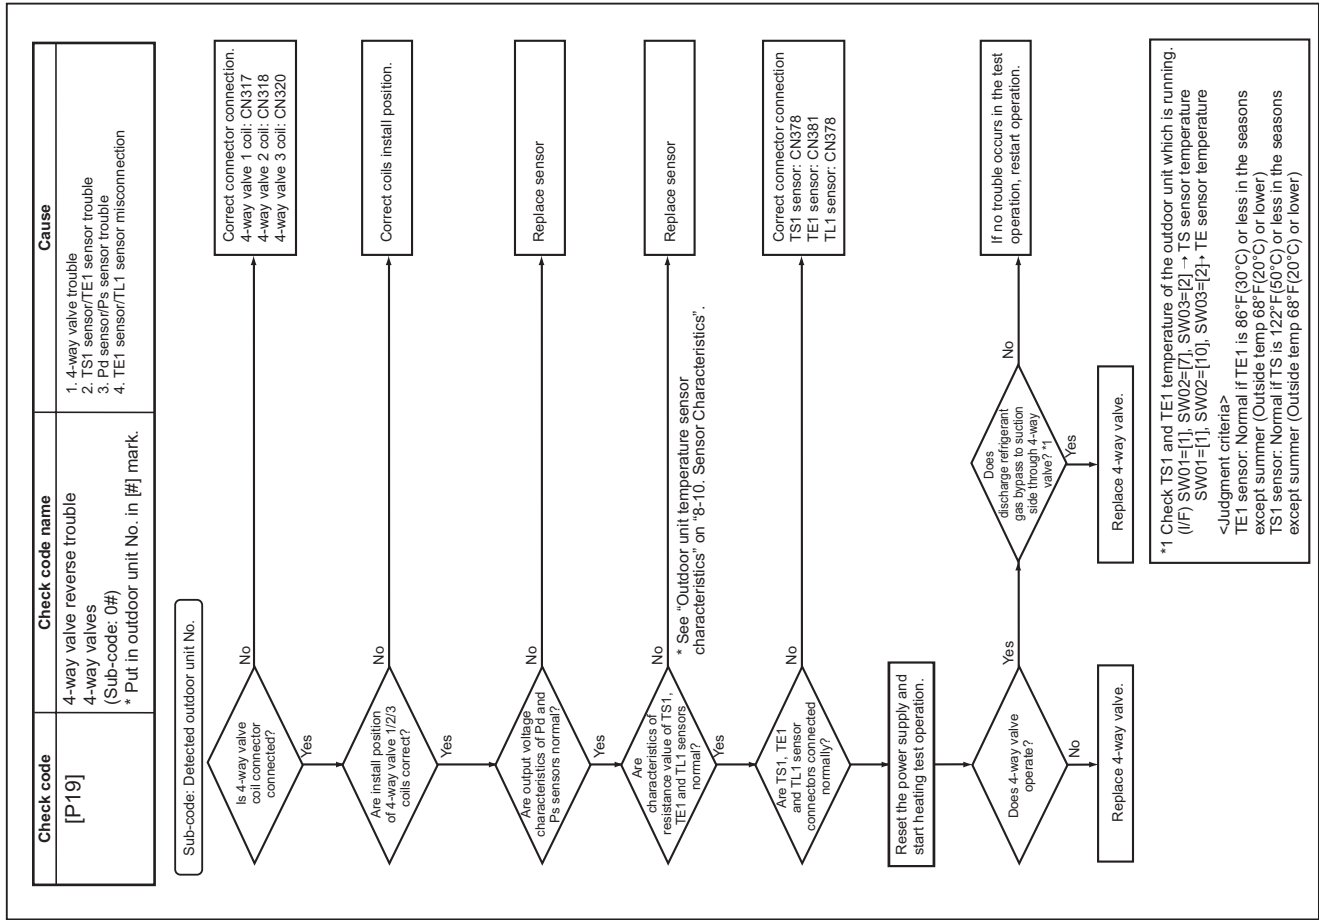
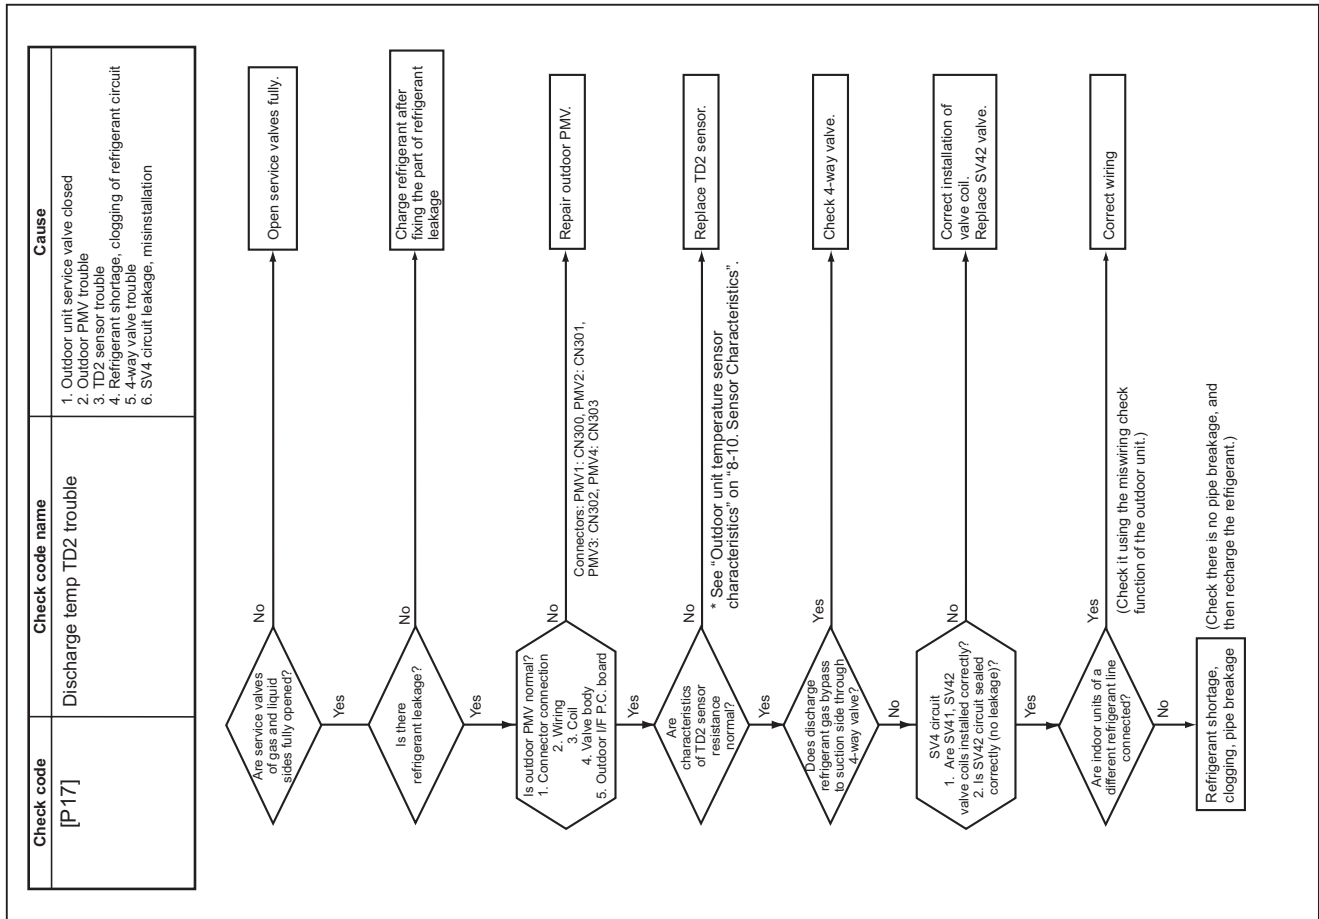




Check code	Check code name	Cause
[P19]	4-way valve reverse trouble Follower outdoor 4-way valve (Sub-code: 00)	1. 4-way valve 3 trouble. (Follower outdoor) 2. Ps sensors trouble.


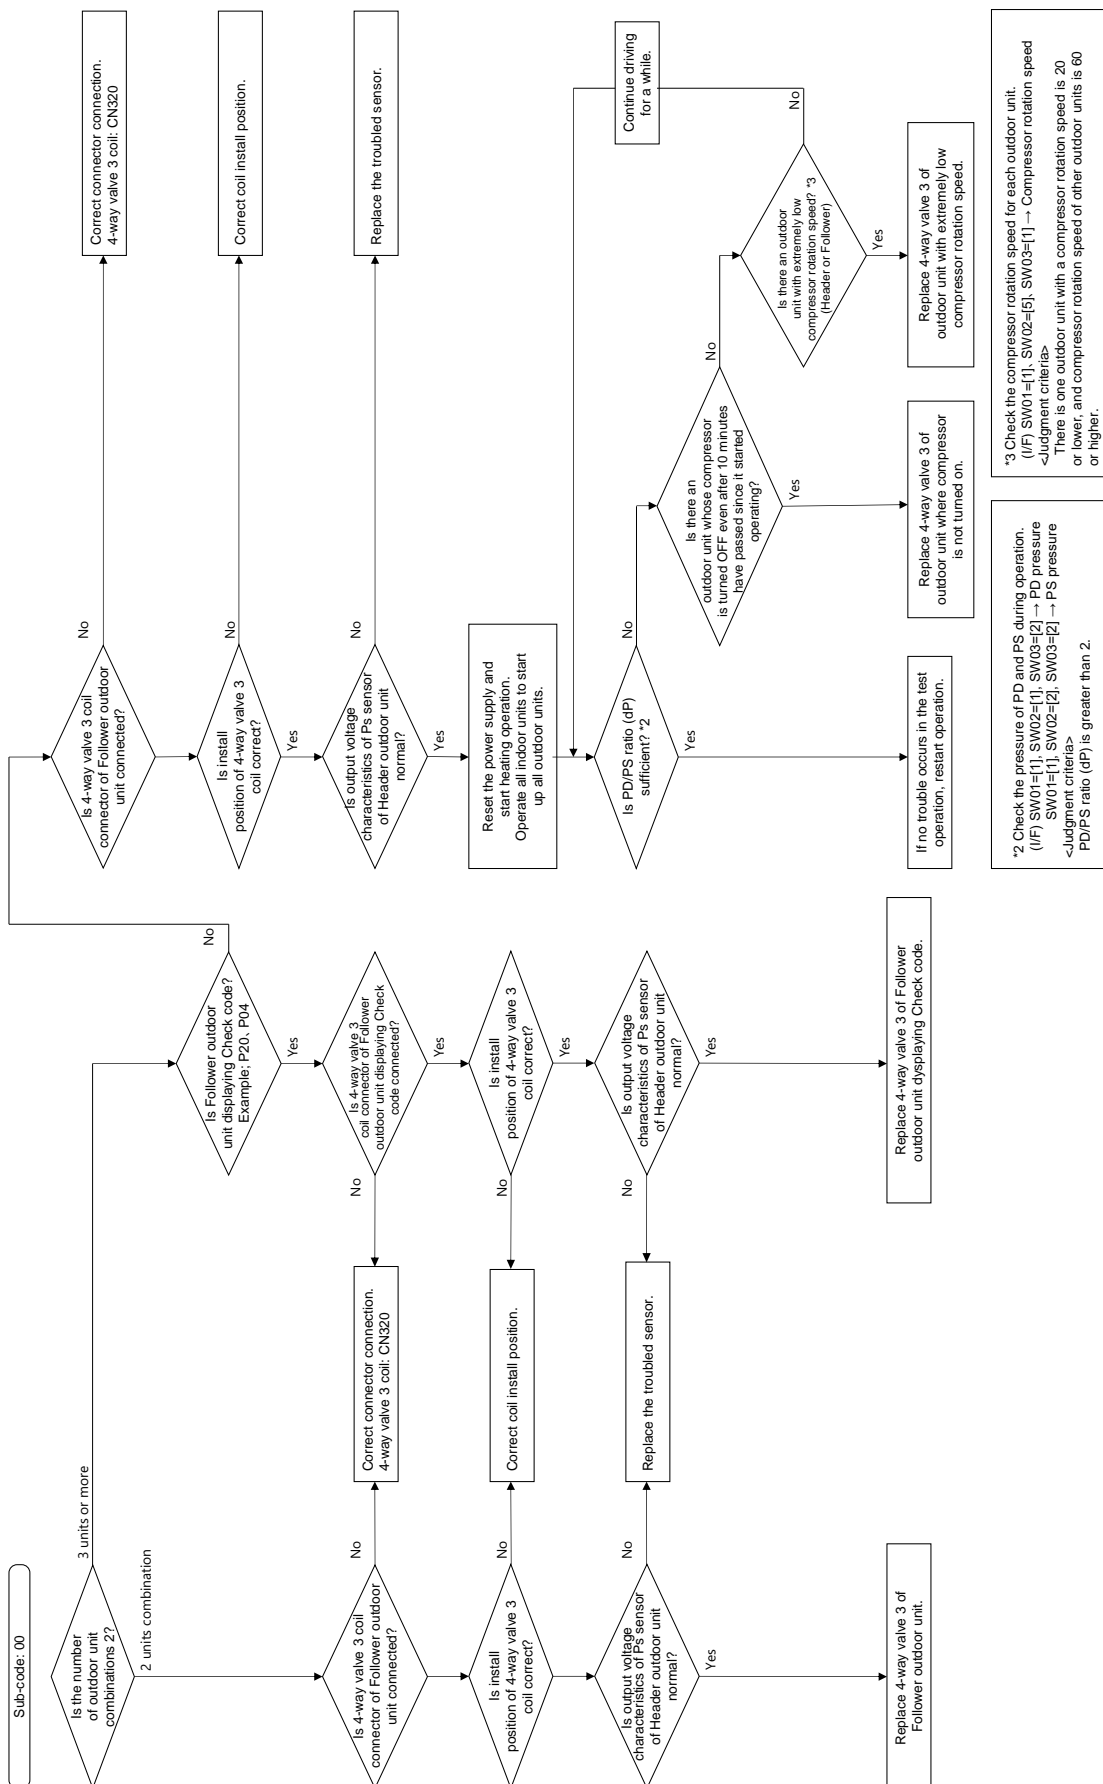


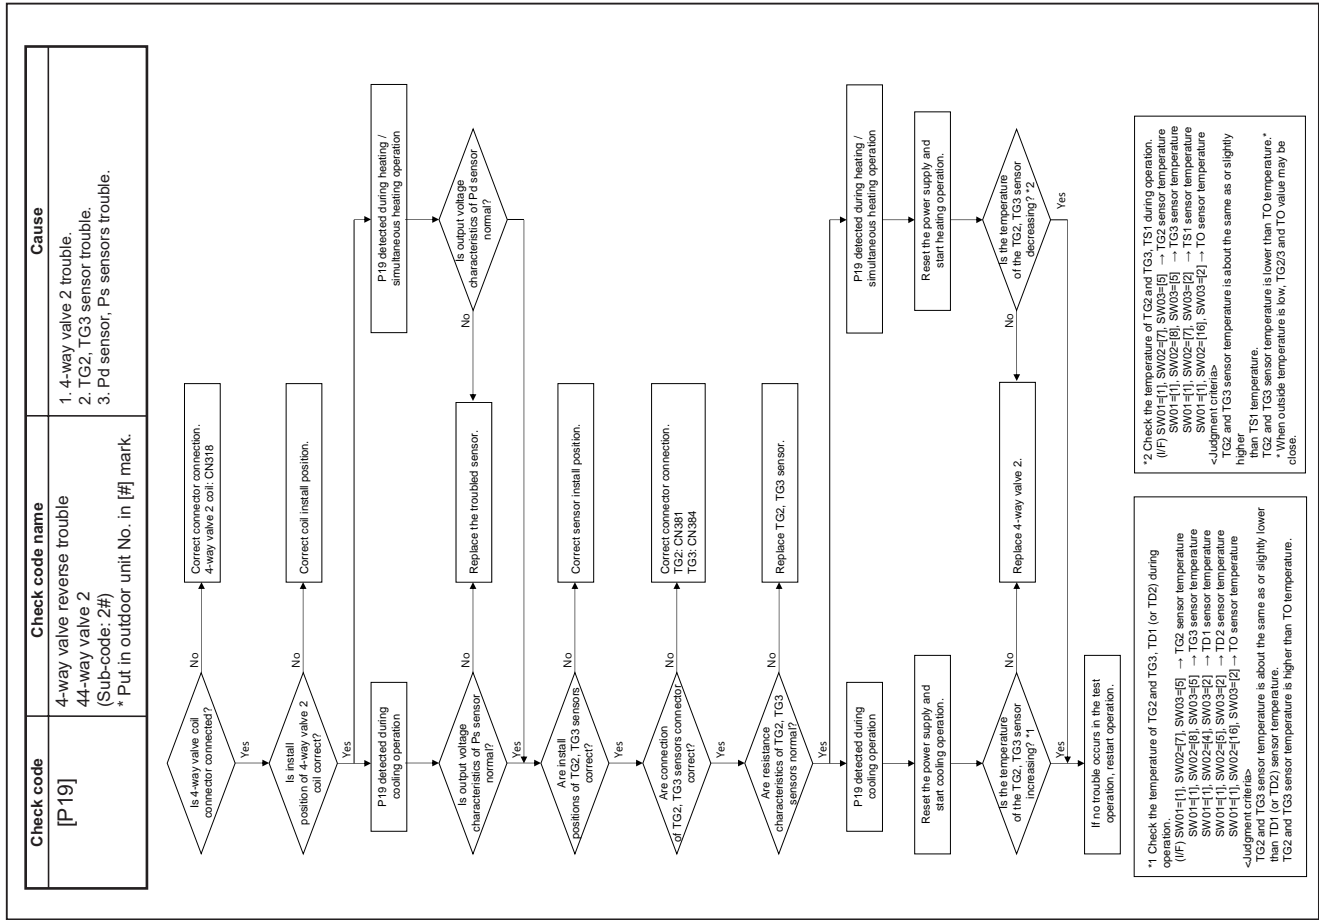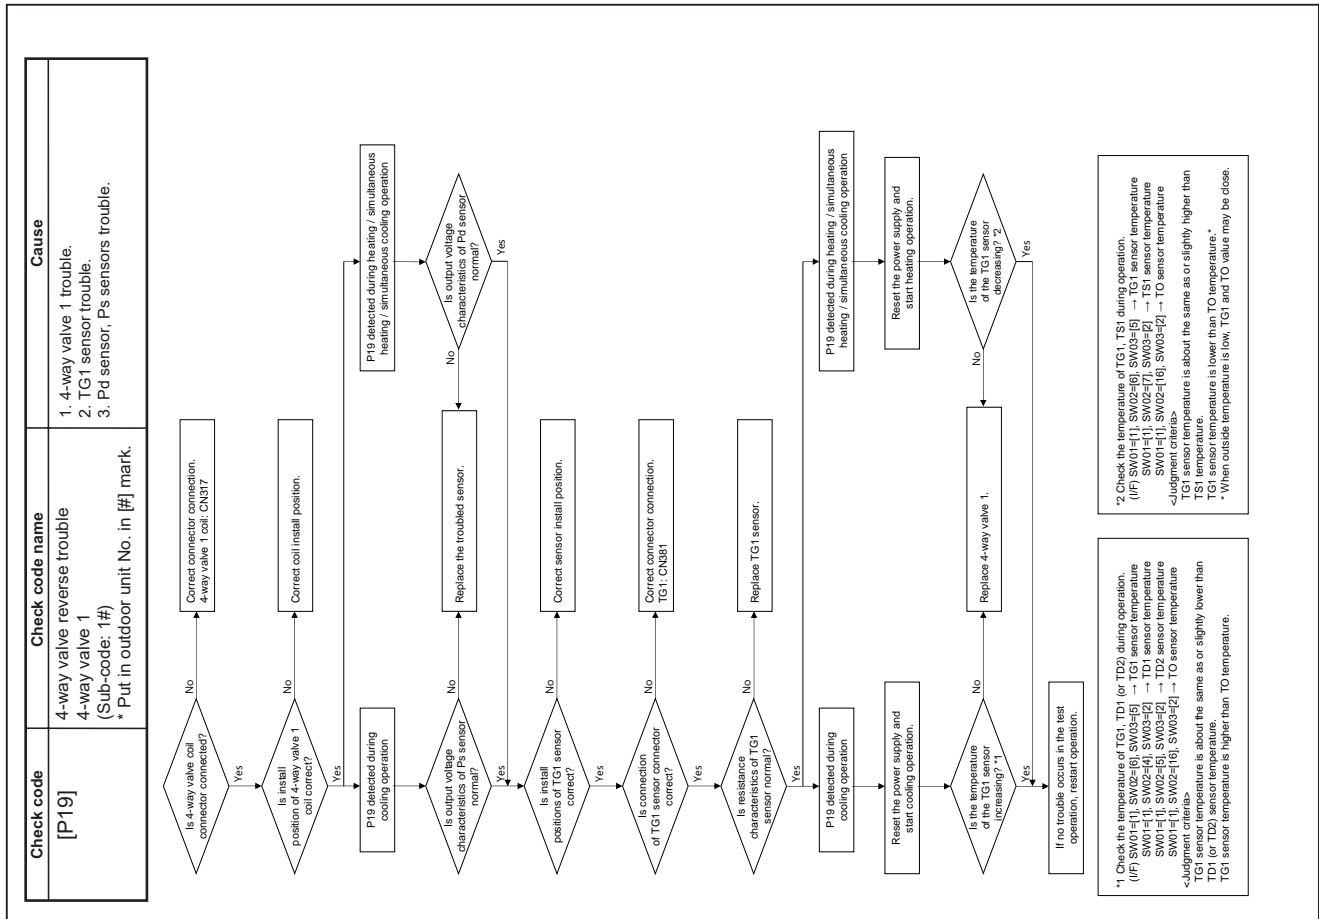

Check code	Check code name	Cause
[P20]	High-pressure protective operation	1. Pd sensor trouble 2. Service valve closed. 3. Indoor/outdoor fan trouble 4. Indoor/outdoor PMV clogging 5. Indoor/outdoor heat exchanger clogging 6. SV4 circuit trouble 7. Outdoor I/F P.C. board trouble 8. Operation trouble of check valve of main discharge pipe 9. Refrigerant overcharge 10. FS-unit PMV-D trouble 11. Outdoor unit 4WV3 trouble

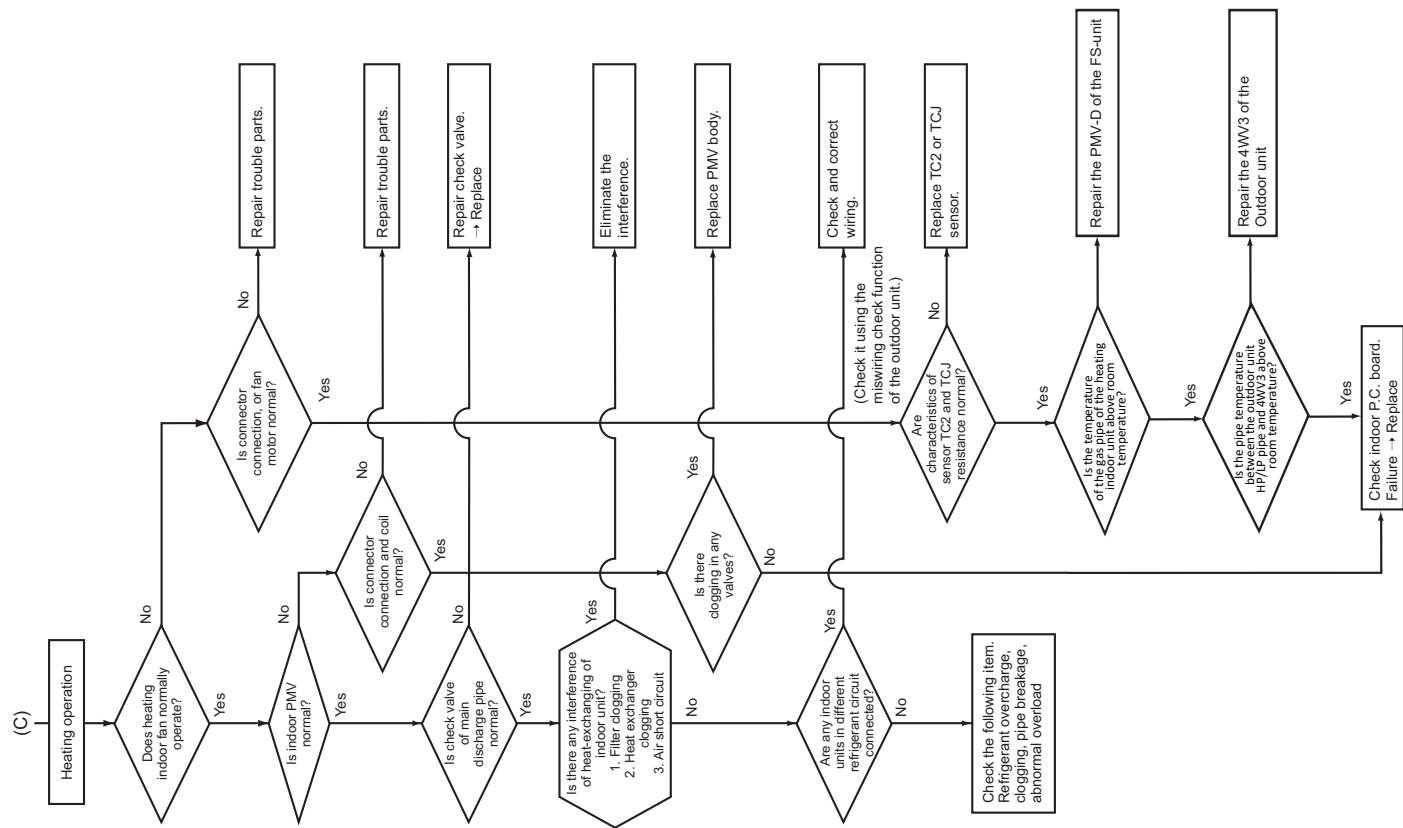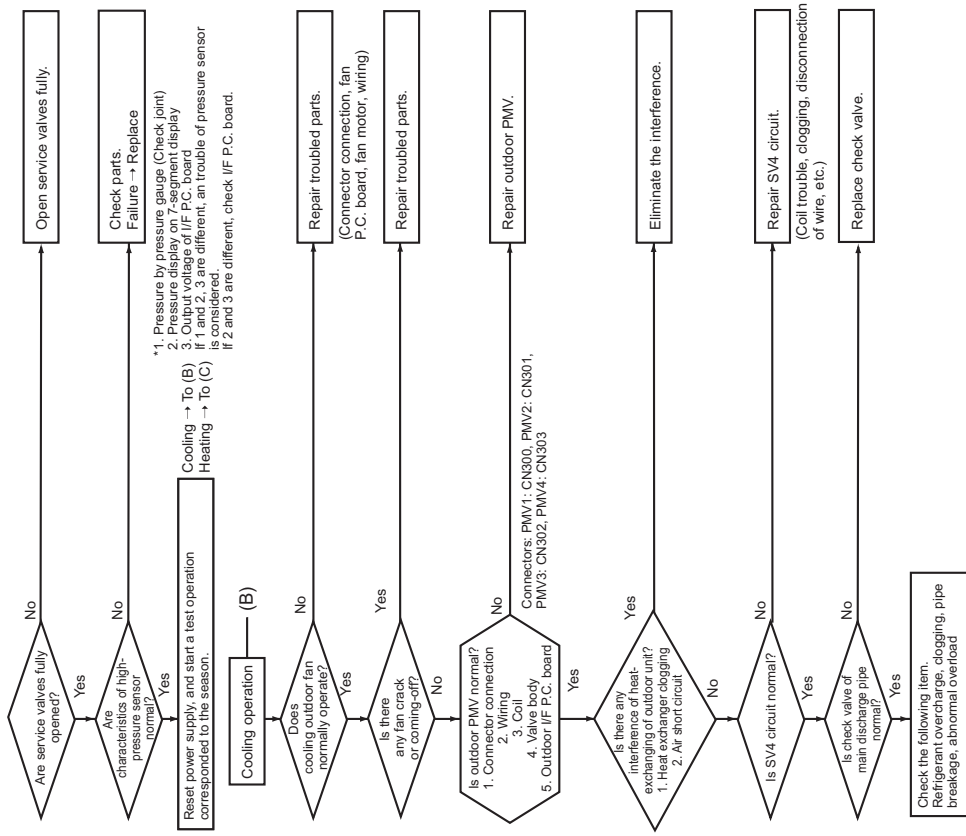

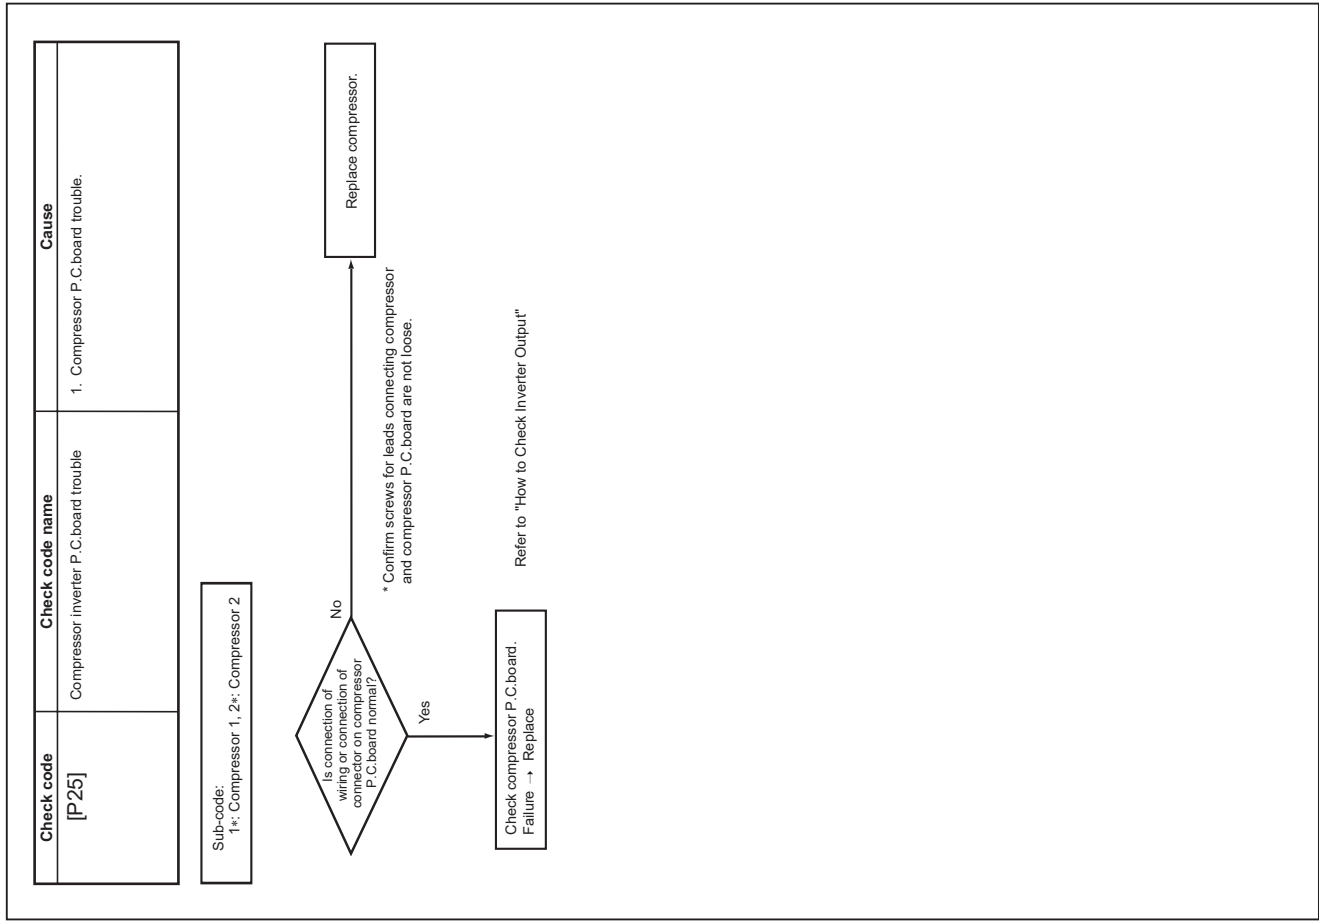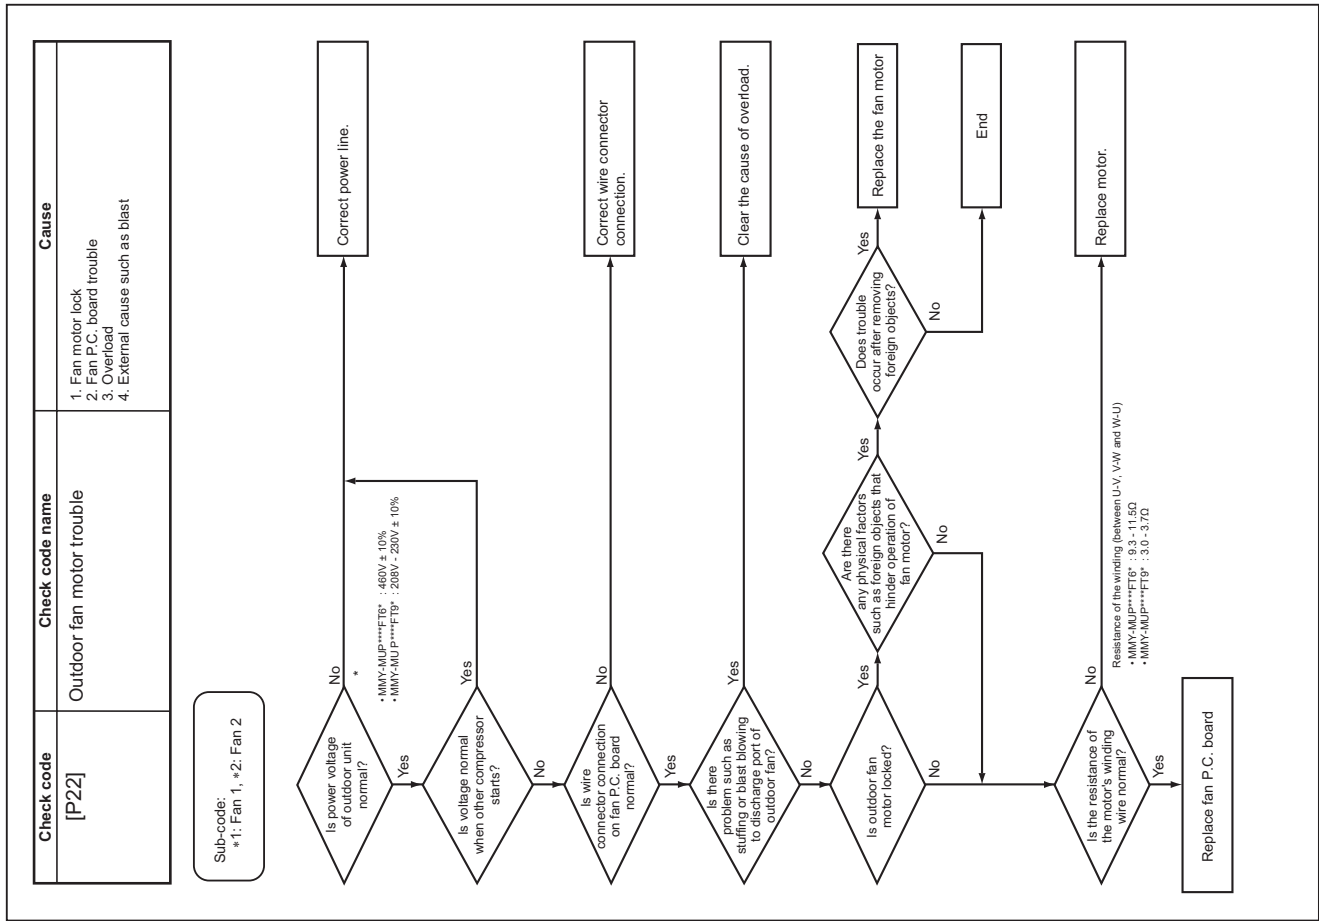


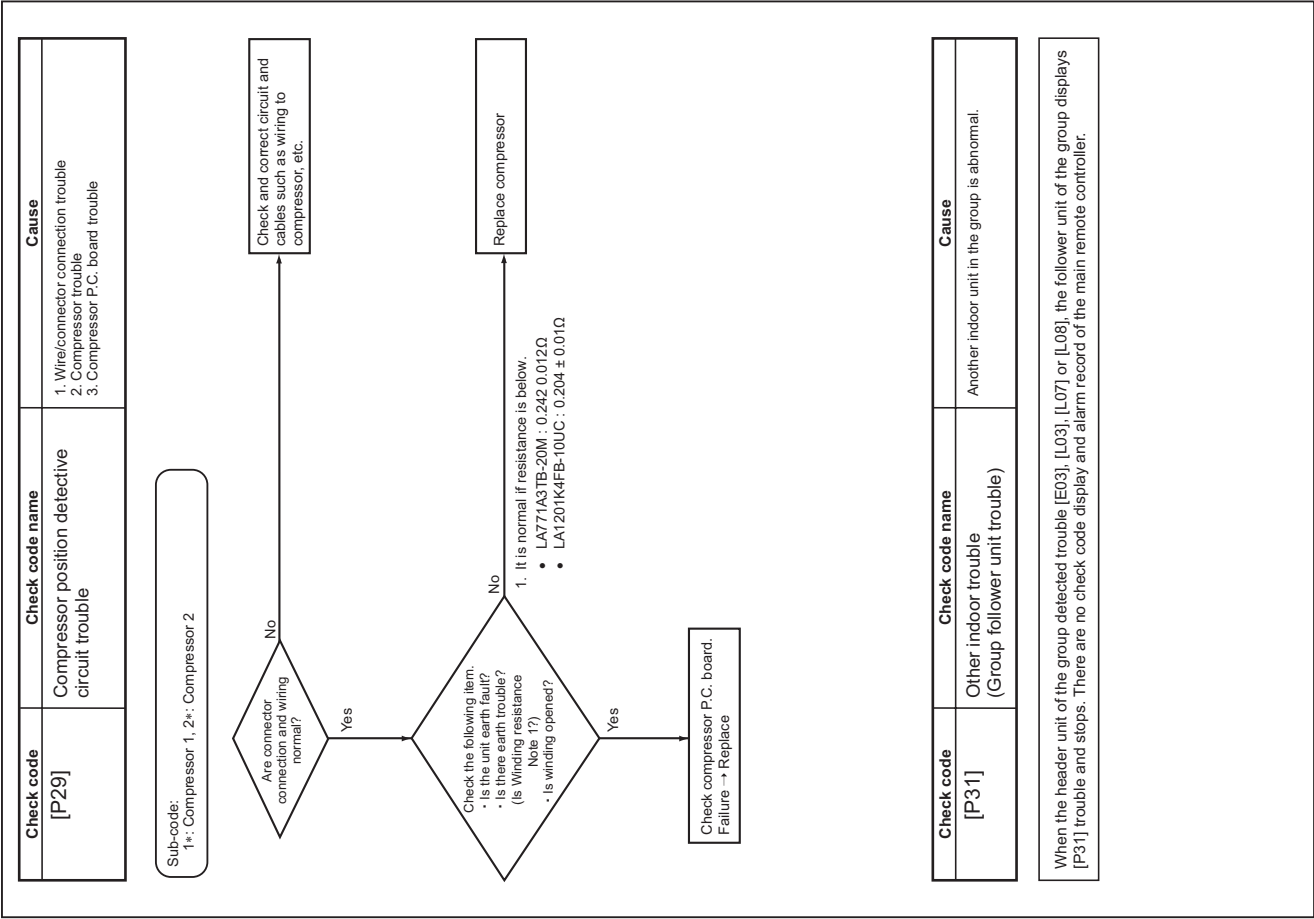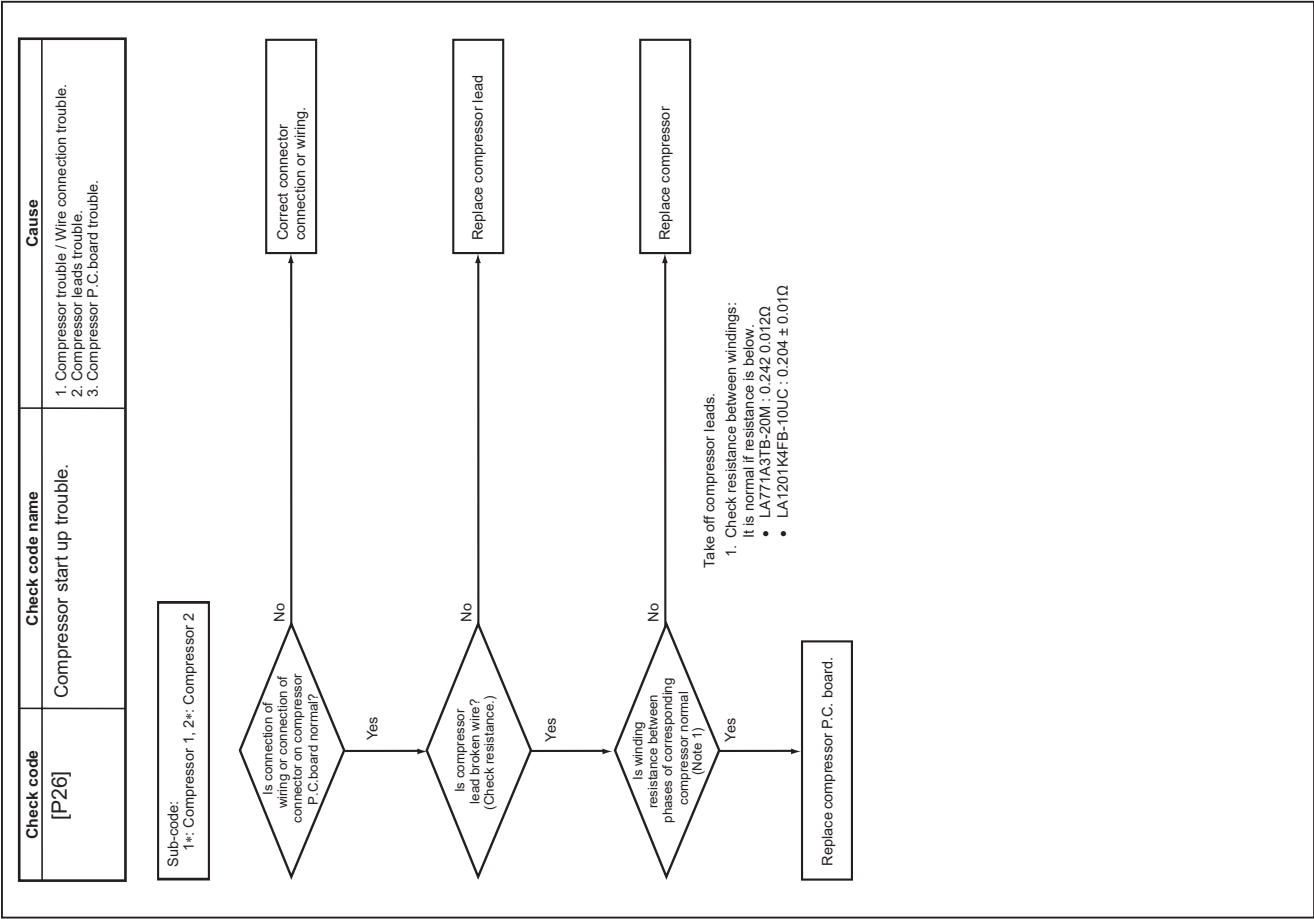

8-6. 7-Segment Display Function

7-segment display on outdoor unit (interface P.C. board)

The interface control P.C. board features a 7-segment LED display designed to check operational status. Display items can be changed by changing the combination of the number settings of rotary switches provided on the P.C. board (SW01, SW02 and SW03).

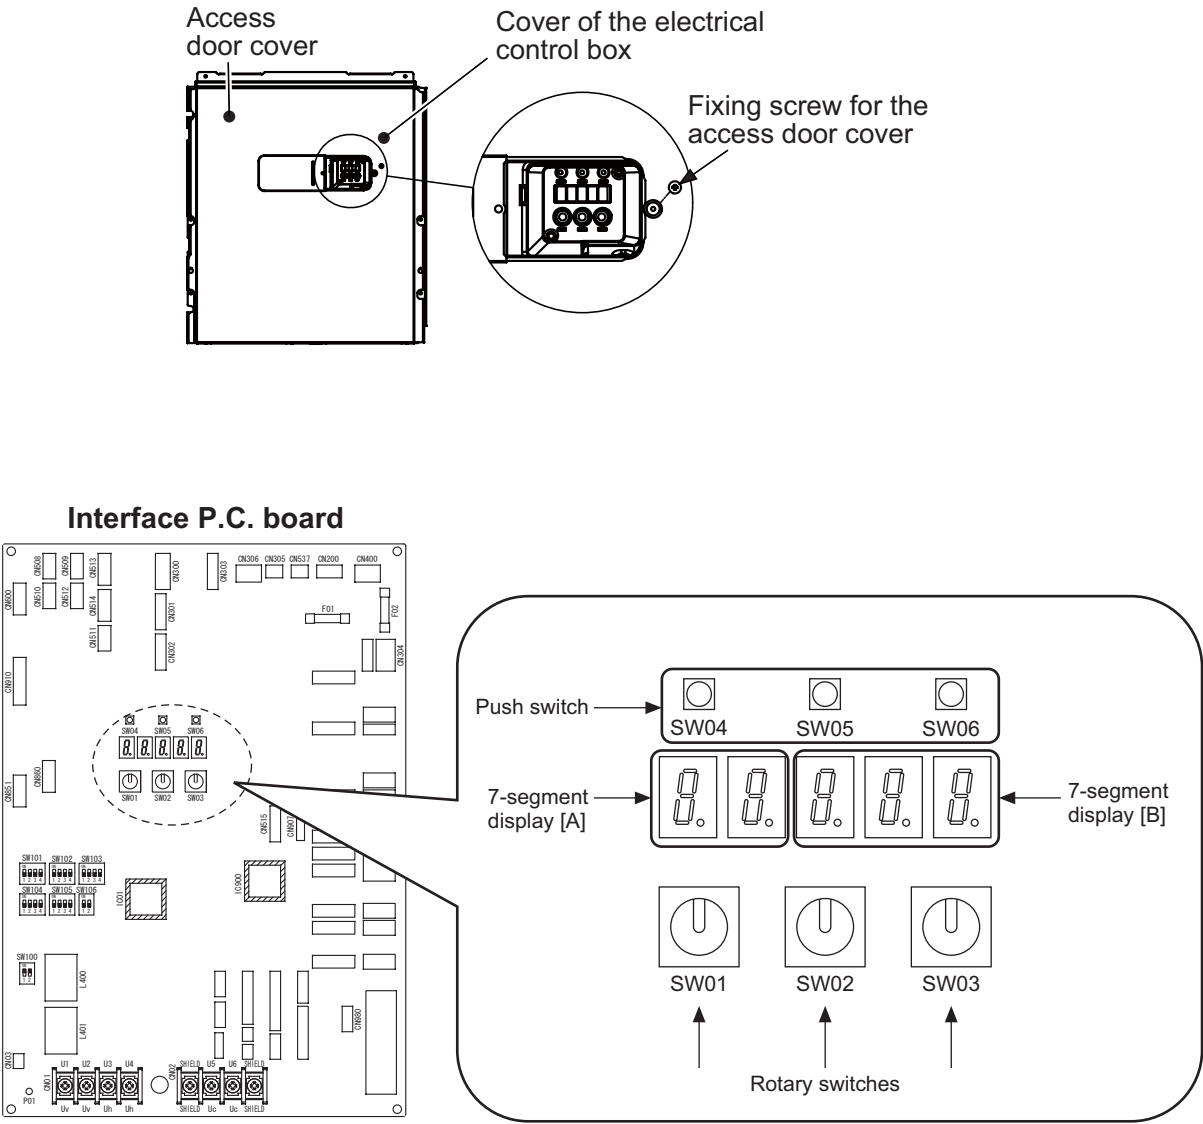

Checking Procedure to Be Followed in Event of Abnormal Shutdown

If the system is shut down due to a trouble in the outdoor unit, perform checks in the following steps:

1 Open the panel of the outdoor unit and inspection window of the electric parts box, and check the 7-segment display.

The check code is displayed in the 7-segment display.

Checking Procedure to be Followed in Event of Abnormal Shutdown


In the event of a system shutdown due to an abnormal state at the outdoor unit, perform checks in the following steps.

1. Open the panel of the outdoor unit and inspection window of the electric parts box, and check the 7-segment display.

The check code is displayed in the 7-segment display.


* Switch settings when confirming check code: set [SW01/ SW02/ SW03] to [1/1/1].

Normal state

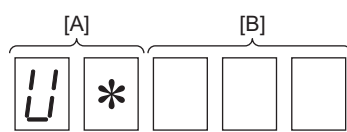

Outdoor unit No.

Abnormal state

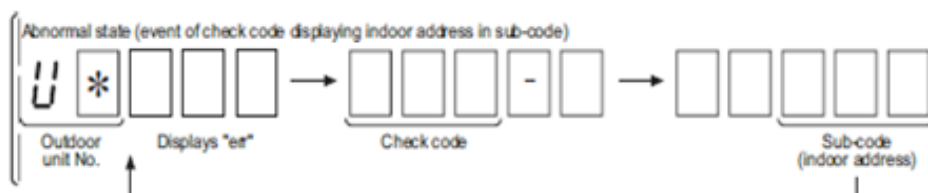

2. Confirm the check code, and perform checking following the diagnostic procedure for that check code.
 3. In the event of the 7-segment display of the header unit being check code [E28. * *], there is an abnormality occurring at a follower unit. Push the push-switch SW04 of the header unit for several seconds. The outdoor fan will run only in the outdoor unit where the trouble has occurred, so open the panel of the unit where the fan is running, and confirm the check code of the 7-segment display.
 4. Perform checking following the diagnostic procedure for that check code.
- * To check the check code, set the rotary switches SW01/SW02/SW03 to [1/1/1].

2 Check the check code and follow the applicable diagnostic procedure.

3 If the 7-segment display shows [E28. _ _], there is a trouble in a follower unit.

Push the push-switch SW04 on the header unit and hold for several seconds.

As the fan of the outdoor unit in which the trouble has occurred comes on, open the panel of the unit, and check the check code shown on the 7-segment display.

4 Perform checks in accordance with the diagnostic procedure applicable to the check code.

(1) Display of System Information (Displayed on Header Outdoor Unit Only)

SW01	SW02	SW03	Display detail				
1	1	3	-		-		
	2		System capacity		A	[...6.0t]~[42.0t]: 6 to 42 ton	
	3		No. of outdoor units	A	[...1]~[...3]: 1 to 3		
				B	[...P]		
	4		No. of indoor units connected / No. of units with cooling thermostat ON		(1) [... ... 0] ~ [... ... 74] : 0 ~ 74 (Number of connected units) (2) [C 0] ~ [C ... 74] : 0 ~ 74 (Number of cooling thermostat ON) *Switch the display of (1) and (2) with SW04		
	5		No. of indoor units connected / No. of units with heating thermostat ON		(1) [... ... 0] ~ [... ... 74] : 0 ~ 74 (Number of connected units) (2) [H 0] ~ [H ... 74] : 0 ~ 74 (Number of heating thermostat ON) *Switch the display of (1) and (2) with SW04		
	6		Amount of compressor command correction	A	Value displayed in hexadecimal format		
				B			
	7		Release control	A	Normal: [r. ...], During release control: [r.1]		
				B	-		
	8		Oil equalization control	Normal: [oiL-0]			
				During oil equalization control: [oiL-1]			
	9		-		-		
	10		Refrigerant/oil recovery operation	A	Oil recovery in cooling: [C1], Normal: [C ...]		
				B	Refrigerant recovery in heating: [H1], Normal: [H ...]		
	11		Automatic addressing	A	[Ad]		
				B	During automatic addressing: [... FF], Normal: [...]		
	12		Power peak-cut	A	[dU]		
				Normal: [...], During 50-90% capacity operation: [_50-_90] While control is based on BUS line input: [E50-E90]			
	13		Optional control (P.C. board input)	Displays optional control status		A	B
				Operation mode selection: During priority heating (normal)		h.*.	***.
Priority cooling		c.*.		***.			
Heating only		H.*.		***.			
Cooling only		C.*		***.			
Priority given to No. of indoor units in operation		n.*.		***.			
Priority given to specific indoor unit		U.*.		***.			
External master ON/OFF: Normal		*....		***.			
Start input		*.1.		***.			
Stop input		*.0.		***.			
Night operation: Normal		*.*.	*.*.			
Start input		*.*.		1*.*.			
Snowfall operation: Normal		*.*.		*....*.			
Start input		*.*.	*.1.*.				
14	Optional control (BUS line input)	Same as above					
15	-	-					
16	-	-					

(2) Display of Outdoor Unit Information (Displayed on Each Outdoor Unit)

SW01	SW02	SW03	Display detail				
1	1	1	Check code data	A	Outdoor unit No.: [U1] to [U3]		
				B	If there is no check code, [U. *. - - -] is displayed. If there is check code, [U. *. err] ⇔ [000]. [△△] ([000] : Check code, [△△] : Sub-code) . . . (The display switches alternately) (*: Outdoor unit No.)		
			<SW04> push SW function: Fan operation at outdoor unit with trouble. 7-segment display section A: [E.1] <SW04 + SW05> push SW function: Fan operation at outdoor unit without trouble. 7-segment display section A: [E.0] <SW05> push SW function: Fan operation function check mode is cancelled.				
			2	-	A	-	
		B			-		
		3	Operation mode	A	Stop [... ...] Normal cooling: [... C], Normal heating: [... H], Normal defrosting: [... J]		
				B	-		
		4	Outdoor unit ton capacity	A	6 ton: [] [] [6.] [0] [t] 8 ton: [] [] [8.] [0] [t] 10 ton: [] [1] [0.] [0] [t] 12 ton: [] [1] [2.] [0] [t] 14 ton: [] [1] [4.] [0] [t] 16 ton: [] [1] [6.] [0] [t]		
				B			
		5	Compressor operation command*Operation data of each compressor is displayed in turn in 2 second intervals.				
			Normal: Compressor speed (rps) is displayed in decimal format. 7-segment display (A/B): [C1.] ⇒ [... ***, *] ⇒ [C2.] ⇒ [... ***, *]				
			<SW04> push SW function: Switches to display of operating current (decimal value). 7-segment display (A/B): [i1] ⇒ [...****] ⇒ [i2.] ⇒ [...****] Pushing of <SW05> restores normal display.				
		6	Outdoor fan mode	A	[FP]		
				B	Mode 0 to 63: [... 0] to [63]		
		7	Compressor backup	A	[C.b.]		
				B	Displays compressor backup setting status Normal: [... ..] Compressor No. 1 backup: [1] Compressor No. 2 backup: [... 1 ...]		
		8	-	A	-		
				B	-		
		9	Control valve output data	Displays control output status of solenoid valve		A	B
				4-way valve: ON 4-way valve : 1 / 2 / 3 : ON / ON / ON		H. 1	1 1 ...
		4-way valve: OFF 4-way valve : 1 / 2 / 3 : OFF / OFF / OFF		H. 0	0 0 ...		
		SV5B: ON / SV2: OFF		5. 2.	1 0 ...		
		SV5B: OFF / SV2: ON		5. 2.	0 1 ...		
		SV3D: ON / SV3F: OFF		3. ...	1 0 ...		
		SV3D: OFF / SV3F: ON		3. ...	0 1 ...		
		SV41: ON / SV42: OFF		4. ...	1 0 ...		
		SV41: OFF / SV42: ON		4. ...	0 1 ...		
		—		—	—		
		14	PMV1//PMV2PMV3 opening	Displays opening data in decimal format. "Switch display of PMV1, PMV2, and PMV3 by pushing <SW04>"		PMV1	** ** .P
						PMV2	... * ** .P
						PMV3	... * ** .P
		15	PMV4 opening	Displays opening data in decimal format.		PMV4	... * ** .P
		16	Oil level judgment status				
			Normal	A	[o L.]		
				B	Initial display: [... ..], Oil level judgment result: [#.*.\$] Displayed letters #, * and \$ represent judgment results for compressor Nos. 1 and 2, respectively ("0" for normal and "1" or "2" for low level).		
			<SW04> push SW function: Displays low level confirmed judgment result of each compressor.				
			*Pushing of <SW05> restores normal display.	A	[L d.]		
				B	Compressor No. 1 low level being confirmed: [L] Compressor No. 2 low level being confirmed: [... L ...]		
			<SW15> push SW function : for 2 seconds, change display to low level judgement timer				
			*Pushing of <SW05> restores normal display	A	[T ...,]		
B	Low level judgment timer : [120] (i.e. : 120 minutes)						

(3) Display of Outdoor Cycle Data (Displayed at Each Outdoor Unit)

SW01	SW02	SW03	Display detail			
1	1	2	Pd pressure data	Pd pressure (psi) is displayed in decimal format. (psi: Approx. 14 times magnitude of kg/cm ² G)	A	B
	2		Ps pressure data	Ps pressure (psi) is displayed in decimal format.	P d.	*. **
	3		PL pressure conversion data	Converted PL pressure (psi) is displayed in decimal format.	P s.	*. **
	4		TD1 sensor data	Temperature sensor reading (°F) is displayed in decimal format. • Letter symbol and data are displayed alternately, for 1 second and display for 3 seconds, respectively. • Data is displayed in [*]. • Data with negative value is displayed as [- *].	Letter symbol	t d 1
	5		TD2 sensor data		Data	* *. **
	7		TS1 sensor data		Letter symbol	t d 2
	8		TS2 sensor data		Data	* *. **
	9		TS3 sensor data		Letter symbol	t S 1
	10		TE1 sensor data		Data	* *. **
	11		TE2 sensor data		Letter symbol	t S 2
	12		TE3 sensor data		Data	* *. **
	13		TL1 sensor data		Letter symbol	t E 1
	14		TL2 sensor data		Data	* *. **
	15		TL3 sensor data		Letter symbol	t E 2
	16		TO sensor data		Data	* *. **
					Letter symbol	t E 3
					Data	* *. **

SW01	SW02	SW03	Display detail			
1	1	5	TK1 sensor data	Temperature sensor reading (°F) is displayed in decimal format.	Letter symbol	F 1
	2		TK2 sensor data		Data	* *. **
	6		TG1 sensor data		Letter symbol	F 2
	7		TG2 sensor data		Data	* *. **
	8		TG3 sensor data		Letter symbol	t G 1
	9		Predicted TK1 (TK1_Pre data)		Data	* *. **
	10		Predicted TK2 (TK2_Pre data)		Letter symbol	t G 2
					Data	* *. **
					Letter symbol	tG 3
					Data	* *. **

(4) Display of Outdoor Cycle Data (Displayed at Header Unit)

* This method is used when displaying follower unit information on the 7-segment display of the header unit.

SW01	SW02	SW03	Display detail				
3	1	1~4	Trouble data	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U3)		
				B	Check code is displayed (latest one only). If there is no check code: [— —].		
	2		—	A	—		
				B	—		
	3		Outdoor unit ton capacity	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U3)		
				B	6 ton : [... 6.0], 8 ton : [... 8.0], 10 ton : [... 10.0], 12 ton : [12.0], 14 ton : [14.0], 16 ton: [16.0]		
	4		Compressor operation command	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U3)		
				B	Indicates which compressor is ON.		
					* Any unconnected compressors is represented by “—”.		B
					When compressor No. 1 is ON		1 0
	5		Fan operation mode	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U3)		
					At rest: [F ... 0], In mode 63: [F 6 3]		
	6		Release signal	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U3)		
				B	Normal: [r], Upon receiving release signal: [r ... 1]		
	7		Oil level judgment	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U3)		
				B	Normal: [...], Low level: [... ... L]		
	8		Compressor 1 operating current	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U3)		
				B	[**.*], **.* is value of operating current in decimal format.		
9	Compressor 2 operating current	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U3)				
		B	[**.*], **.* is value of operating current in decimal format.				

Note: Follower unit is selected by setting SW03.

SW03	7-segment display section A
1	U2
2	U3

(5) Display of Indoor Unit Information (Displayed on Header Unit Only)

SW01	SW02	SW03	Display detail		
4	1~16	1~8	Indoor check code	B No check code : [- - -]	
			Indoor BUS communication signal receiving status	B Upon receiving signal : [... ... 1], Other times : [..... ...]	
Indoor ton capacity			B ... 0.6, ...0.8, ...1.0, ...1.2, ... 1.5, ... 1.7, ... 2.0, ... 2.2, ... 2.5, ...3.0, ...4.0, ...4.5, ... 6.0, ... 8.0, ... 12.0, 14.0, 16.0		
5		1~8	Indoor request command (S code, operation mode)	B [#.... *] # represents mode : COOL : [C. ... *], HEAT : [H ... F] FAN : [F. ... *], OFF : [S ... *] * represents S code : [# 0] to [# F]	
6			Indoor PMV opening data	B Displayed in decimal format	
7			Indoor temperature sensor data1	B Switch temperature display of TA, TCJ, TC1 and TC2 with SW06	
8			Indoor temperature sensor data2	B Switch temperature display of TF, TA2 and TA3 with SW06	
9		1	1	Outdoor DN code setting	Outdoor DN code setting

Note: Indoor address No. is selected by setting SW02 and SW03 and displayed on 7-segment display, section A.

SW02	SW03	Indoor address	7-segment display section A
1 ~ 16	1	SW02 setting number	[01] ~ [16]
1 ~ 16	2	SW02 setting number +16	[17] ~ [32]
1 ~ 16	3	SW02 setting number +32	[33] ~ [48]
1 ~ 16	4	SW02 setting number +48	[49] ~ [64]
1 ~ 16	5	SW02 setting number +64	[65] ~ [80]
1 ~ 16	6	SW02 setting number +80	[81] ~ [96]
1 ~ 16	7	SW02 setting number +96	[97] ~ [112]
1 ~ 16	8	SW02 setting number +112	[113] ~ [128]

(6) Display of Outdoor EEPROM Writing Check Code (Displayed on Header Unit Only)


* The latest check code written in the EEPROM of each outdoor unit is displayed.

(This function is used to check the trouble code after the resetting of the power supply.)

To display the check code, push SW04 and hold for at least 5 seconds after setting SW01 to 03 as shown in the table below.

SW01	SW02	SW03	Indoor address	7-segment display section A	
1	1	16	Latest check code of header unit (U1)	E. 1.	***
	2		Latest check code of follower unit No. 1 (U2)	E. 2.	***
	3		Latest check code of follower unit No. 2 (U3)	E. 3.	***

• 7-Segment Display

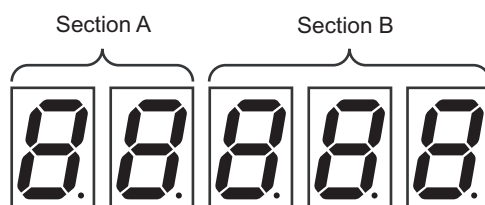

Set SW01/SW02/SW03 to [1/1/16] and push SW04 and hold for at least 5 seconds. The latest check code of the header unit (U1) will be displayed.


If the setting of SW02 is changed, the latest check code of a follow unit (U2-U3) will be displayed.

8-7. Oil Level Judgment Display

The current compressor oil level judgment results can be accessed by setting the switches provided on the interface P.C. board of an outdoor unit.
Perform the checks in accordance with the procedure described below.

1 Operation Procedure

- (1) Start the operation.
- (2) Set the switches provided on the interface P.C. board of the outdoor unit for which oil level judgment results are required as follows: SW01/SW02/SW03 = 1/16/1
- (3) The oil level judgment result will be displayed on the 7-segment display. 7-segment display: [oL] [# * ...]
The letters #, and * are digits that represent judgment results for compressor Nos. 1 and 2, respectively.
(See the table below for the interpretation of the judgment results.)
- (4) When checking is completed, revert the SW01/SW02/SW03 setting to [1/1/1].

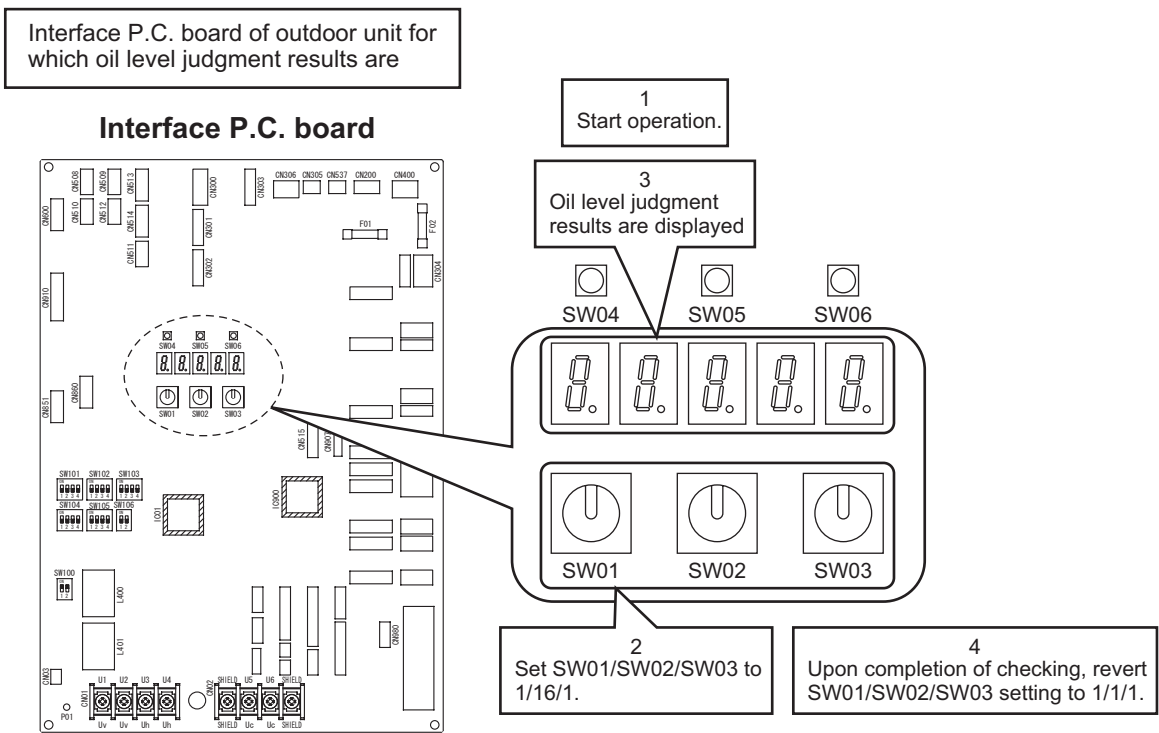

2 Oil Level Judgment Results

Displayed digit	Judgment result	Description
0	Normal	The amount of oil in the compressor is sufficient.
1	Low level	The amount of oil in the compressor is insufficient. (Both “1” and “2” stand for insufficiency.) If this result persists, the system will turn itself off in a protective shutdown.
2		

Display example

7-segment display [oL] [0 0 ...] Oil level is normal for compressors 1 and 2.
[oL] [2 2 ...] Oil level is low for compressors 1 and 2.
[oL] [0 2 ...] Oil level is low for compressor 2 and normal for compressors 1.

Judgment result for compressor 2


Judgment result for compressor 1

8-8. SHRM-u Outdoor Interface P.C. Board Function Setting Change Table

1. Switch/Function Setting Change

SW No.		Change contents	
SW100	DIP SW 2 bit	bit1 Uh communication termination resistance for central control	OFF: No termination resistance ON: With termination resistance
		bit2 Uv communication termination resistance between indoor and outdoor units	OFF: No termination resistance ON: With termination resistance
SW101	DIP SW 4 bit	bit1 Setup of header outdoor unit	OFF: Follower outdoor unit ON: Header outdoor unit
		bit2	* Used by combining with SW102 (4 bit)
		bit3 Line address setup	
		bit4	
SW102	DIP SW 4 bit	bit1	* Used by combining with SW101 (3 bit)
		bit2	
		bit3	
		bit4	
SW103	DIP SW 4 bit	bit1 Compressor 1 backup	OFF: Normal ON: Compressor 1 Backup when compressor 1 was in trouble
		bit2 Compressor 2 backup	OFF: Normal ON: Compressor 2 Backup when compressor 2 was in trouble
	* All bit1 and 2 are ON : Setup of outdoor unit backup		
	DIP SW 4 bit	■ In case of header outdoor unit	
		Bit3 Trouble judgment for over-capacity of indoor unit connection	OFF: Trouble judgement (Normal) ON: None (When outdoor unit backup set)
		bit4 Trouble judgment for No. of connected indoor units	OFF: None ON: Trouble judgement
SW104	DIP SW 4 bit	bit1	
		bit2	
		bit3	
		bit4	
SW105	DIP SW 4 bit	bit1 Corresponds to 2-core wire	OFF: Normal (3-core wire <Successive MAKE signal> or 4-core wire <Pulse signal>) ON: 2-core wire <Successive MAKE signal : Use only ON input terminal>
		bit2 Demand control (Expansion change)	OFF: Normal demand (1 type) ON: Intermediate demand (3 types)
		bit3	
		bit4	
SW106	DIP SW 4 bit	bit1 Change of EEPROM data backup function	OFF: Normal ON: No data backup
		bit2 Communication setup reset	OFF: Normal ON: Reset of communication setup and communication termination resistance between indoor units

Interface Board Switches position to be used in the Function setup switching table

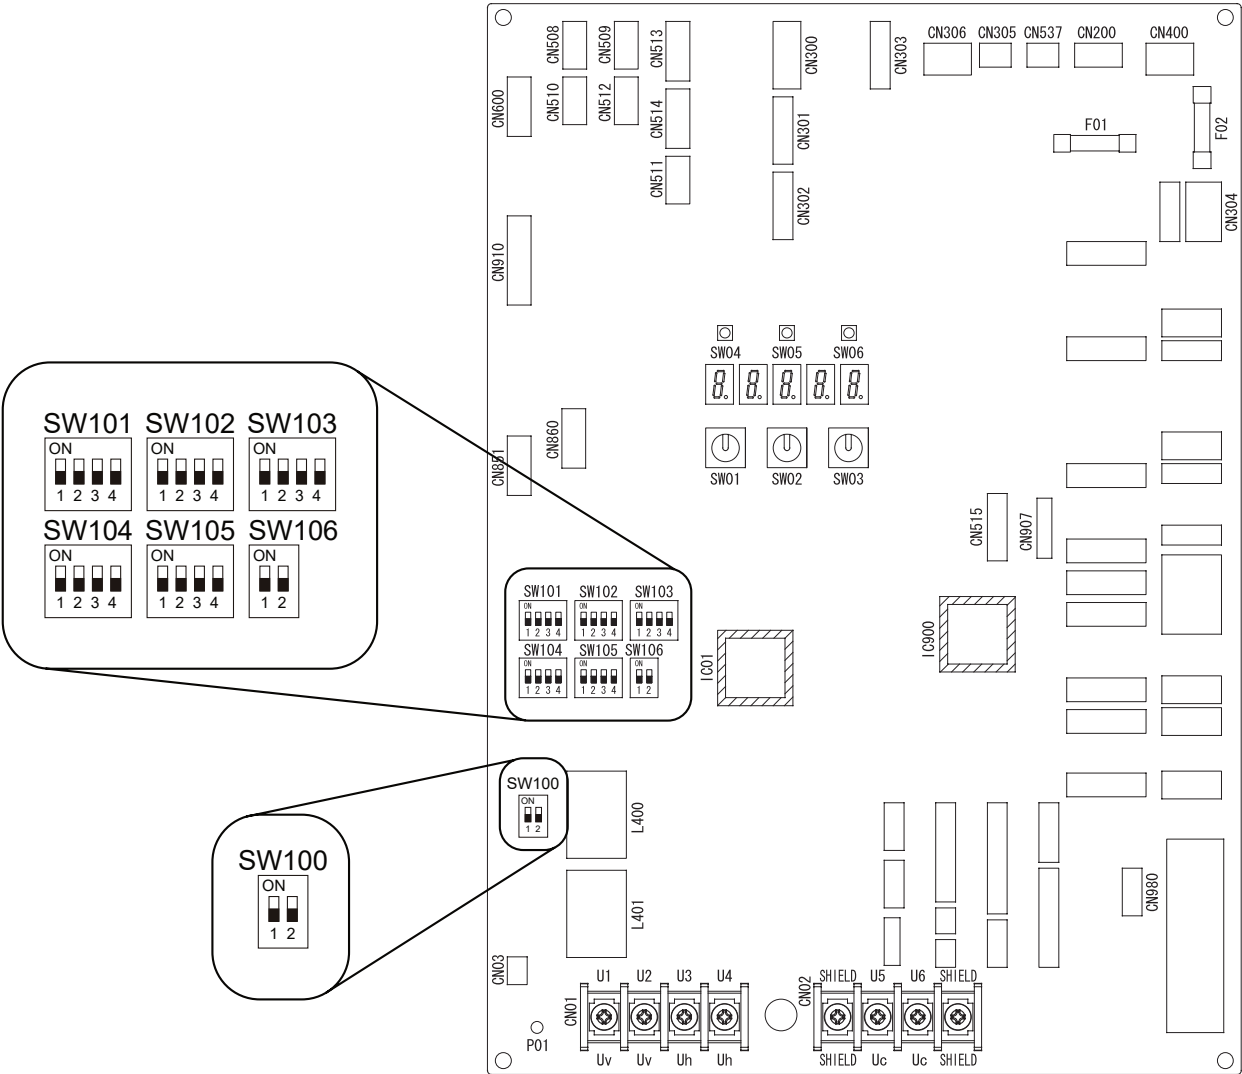

8-9. Leakage/Clogging of Refrigerating Cycle Circuit

List of Check Codes Generated upon Occurrence of Leakage/Clogging in Outdoor Cycle or Oil Circuit Part

(MMY-MUP0721*, MUP0961*, MUP072H1*)


Clogging

Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code		Symptom
Outdoor PMV1, 2	A	Corresponding unit	Activation of high-pressure protection Activation of low-pressure protection Discharge temp. trouble (TD1)	P20 H06 P03	Rise of pressure Fall of pressure Rise of discharge temp. (Compressor 1)
Outdoor PMV4	B	Corresponding unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
Check valve in discharge pipe convergent section	C	Corresponding unit	High-pressure protection trouble High-pressure SW system trouble	P20 P04-01	Abnormal rise of pressure
Oil-equalization circuit Capillary or Strainer	E	Corresponding unit	Oil level detection circuit trouble Oil level low detection and protection	H16-01 H07	Oil circuit trouble or Oil level low
SV3D valve	F	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV3D valve circuit Capillary or Strainer	G	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV3F valve or SV3F valve circuit Strainer	H	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV41 valve	I	Corresponding unit	High-pressure protection trouble	P20	Rise of pressure
SV5B valve	J	Corresponding unit	High-pressure protection trouble Outdoor heat exchanger freeze trouble	P20 P11	Rise of pressure Decreased defrost performance
Inverter heat sink	K	Corresponding unit	Heat sink overheating trouble	P07-01	Rise of IPM (TH) temp. (Compressor 1)

Leakage

Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code		Symptom
Outdoor PMV1, 2	A	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07	Refrigerant entrapment
		Other connected unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
Outdoor PMV4	B	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07	Oil level low
Check valve in discharge pipe convergent section	C	Corresponding unit	Oil level low detection and protection Compressor breakdown Compressor trouble (lockup)	H07 H01-01 H02-01	Refrigerant entrapment
SV41 valve	I	Corresponding unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
4-way valve	L	Corresponding unit	4-way valve reversing trouble Gas leak detection	P19 P15	Incorrect internal position of 4-way valve

Outdoor Unit (Standard 6,8ton / High heat 6ton)
Model: MMY-MUP0721*, MUP0961*, MUP072H1*

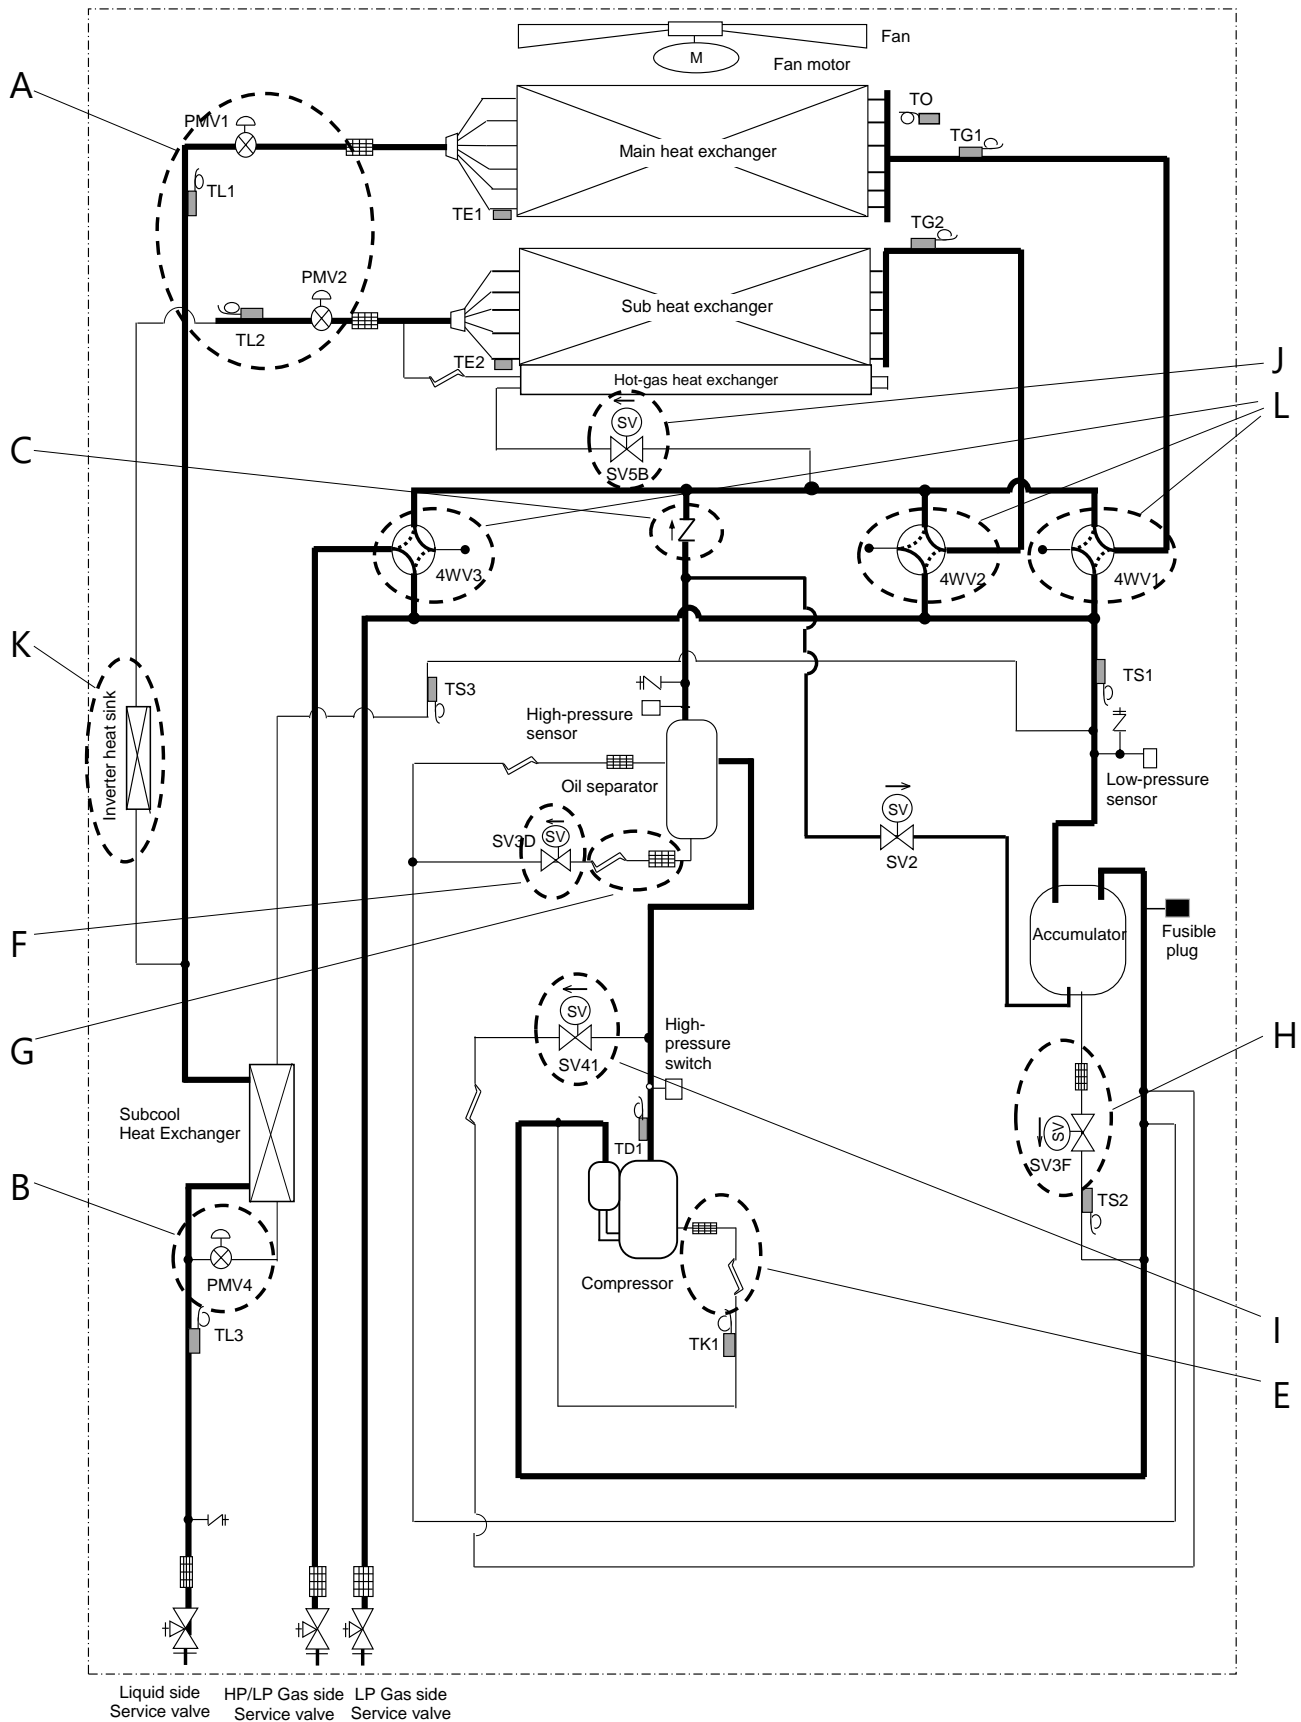

List of Check Codes Generated upon Occurrence of Leakage/Clogging in Outdoor Cycle or Oil Circuit Part
(MMY-MUP1201*, MUP1441*, MUP096H1*, MUP120H1*)

Clogging


Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code		Symptom
Outdoor PMV1, 2, 3	A	Corresponding unit	Activation of high-pressure protection Activation of low-pressure protection Discharge temp. trouble (TD1)	P20 H06 P03	Rise of pressure Fall of pressure Rise of discharge temp. (Compressor 1)
Outdoor PMV4	B	Corresponding unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
Check valve in discharge pipe convergent section	C	Corresponding unit	High-pressure protection trouble High-pressure SW system trouble	P20 P04-01	Abnormal rise of pressure
Oil-equalization circuit Capillary or Strainer	E	Corresponding unit	Oil level detection circuit trouble Oil level low detection and protection	H16-01 H07	Oil circuit trouble or Oil level low
SV3D valve	F	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV3D valve circuit Capillary or Strainer	G	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV3F valve or SV3F valve circuit Strainer	H	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV41 valve	I	Corresponding unit	High-pressure protection trouble	P20	Rise of pressure
SV5B valve	J	Corresponding unit	High-pressure protection trouble Outdoor heat exchanger freeze trouble	P20 P11	Rise of pressure Decreased defrost performance
Inverter heat sink	K	Corresponding unit	Heat sink overheating trouble	P07-01	Rise of IPM (TH) temp. (Compressor 1)

Leakage

Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code		Symptom
Outdoor PMV1, 2	A	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07	Refrigerant entrapment
		Other connected unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
Outdoor PMV4	B	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07	Oil level low
Check valve in discharge pipe convergent section	C	Corresponding unit	Oil level low detection and protection Compressor breakdown Compressor trouble (lockup)	H07 H01-01 H02-01	Refrigerant entrapment
SV41 valve	I	Corresponding unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
4-way valve	L	Corresponding unit	4-way valve reversing trouble Gas leak detection	P19 P15	Incorrect internal position of 4-way valve

Outdoor Unit (Standard 10,12,14ton / High heat 8,10ton)

Model: MMY-MUP1201*, MUP1441*, MUP1681*, MUP096H1*, MUP120H1*

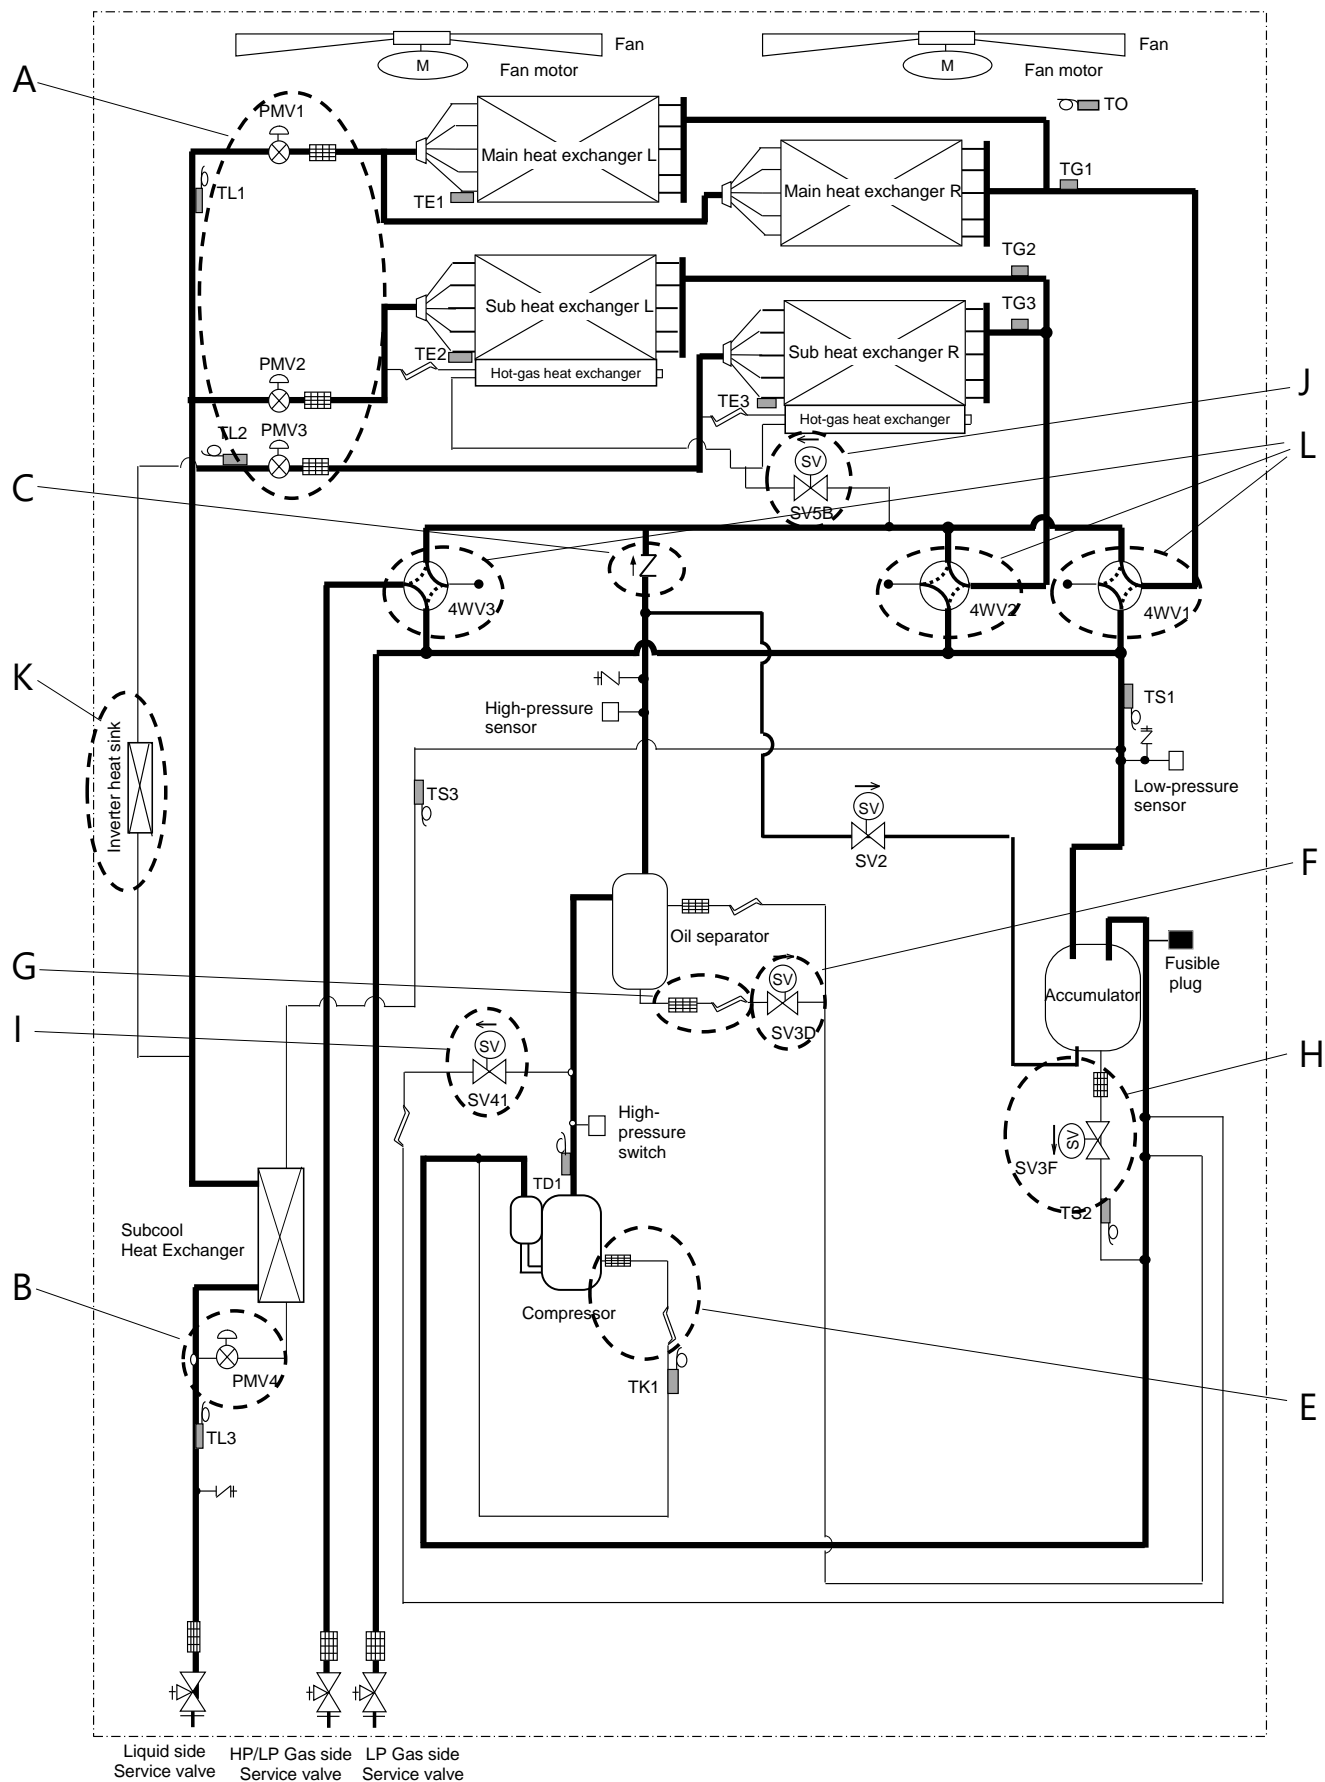

Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

List of Check Codes Generated upon Occurrence of Leakage/Clogging in Outdoor Cycle or Oil Circuit Part (MMY-MUP1921*)


Clogging

Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code		Symptom
Outdoor PMV1, 2, 3	A	Corresponding unit	Activation of high-pressure protection Activation of low-pressure protection Discharge temp. trouble (TD1) Discharge temp. trouble (TD2)	P20 H06 P03 P17	Rise of pressure Fall of pressure Rise of discharge temp. (Compressor 1) Rise of discharge temp. (Compressor 2)
Outdoor PMV4	B	Corresponding unit	Discharge temp. trouble (TD1) Discharge temp. trouble (TD2)	P03 P17	Rise of discharge temp. (Compressor 1) Rise of discharge temp. (Compressor 2)
Check valve in discharge pipe convergent section	C	Corresponding unit	High-pressure protection trouble High-pressure SW system trouble	P20 P04-XX	Abnormal rise of pressure
Check valve in discharge pipe	D	Corresponding unit	High-pressure SW system trouble	P04-XX	Abnormal rise of pressure
Oil-equalization circuit Capillary or Strainer	E	Corresponding unit	Oil level detection circuit trouble Oil level low detection and protection	H16-XX H07	Oil circuit trouble or Oil level low
SV3D valve or SV3F valve circuit Strainer	F	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV3D valve circuit Capillary or Strainer	G	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV3F valve or SV3F valve circuit Strainer	H	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV41, 42 valve	I	Corresponding unit	High-pressure protection trouble	P20	Rise of pressure
SV5B valve	J	Corresponding unit	High-pressure protection trouble Outdoor heat exchanger freeze trouble	P20 P11	Rise of pressure Decreased defrost performance
Inverter heat sink	K	Corresponding unit	Heat sink overheating trouble	P07-XX	Rise of pressure
Oil-Return circuit Capillary or Strainer	M	Other connected unit	Outdoor liquid back flow trouble	P13	Oil level low

Leakage

Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code		Symptom
Outdoor PMV1, 2	A	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07	Refrigerant entrapment
		Other connected unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
			Discharge temp. trouble (TD2)	P17	Rise of discharge temp. (Compressor 2)
Outdoor PMV4	B	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07	Oil level low
Check valve in discharge pipe convergent section	C	Corresponding unit	Oil level low detection and protection Compressor breakdown Compressor trouble (lockup)	H07 H01-XX H02-XX	Refrigerant entrapment
Check valve in discharge pipe	D	Corresponding unit	Oil level low detection and protection Compressor breakdown Compressor trouble (lockup)	H07 H01-XX H02-XX	Refrigerant entrapment
SV41, 42 valve	I	Corresponding unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
			Discharge temp. trouble (TD2)	P17	Rise of discharge temp. (Compressor 2)
4-way valve	L	Corresponding unit	4-way valve reversing trouble Gas leak detection	P19 P15	Incorrect internal position of 4-way valve

Outdoor Unit (Standard 16ton)
Model: MMY-MUP1921*

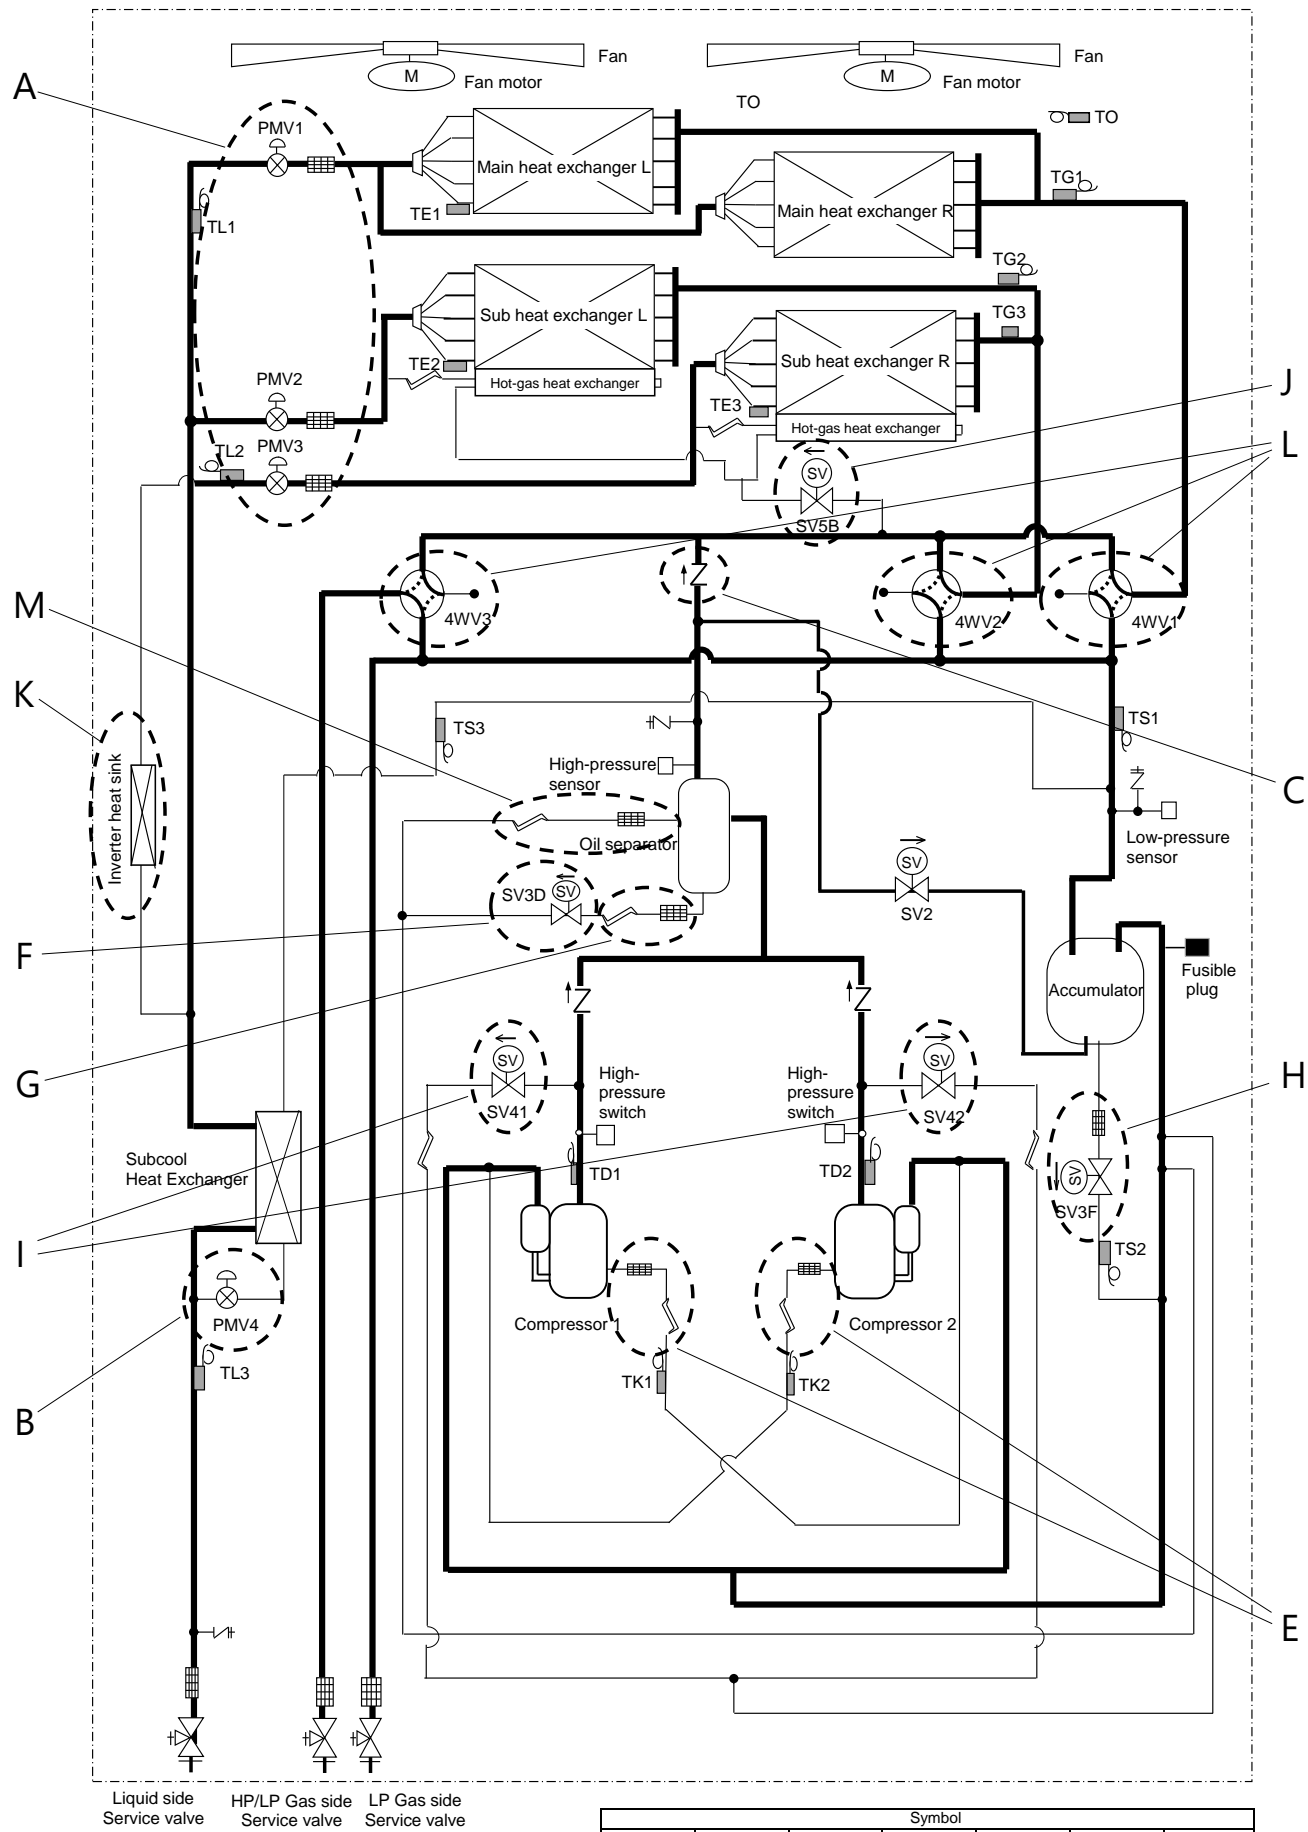


8-10. Sensor Characteristics

Outdoor Unit


▼ Temperature sensor characteristics

Outdoor TS1, TS3, TE1, TE2, TE3, TL1, TL2, TL3 and TO sensors

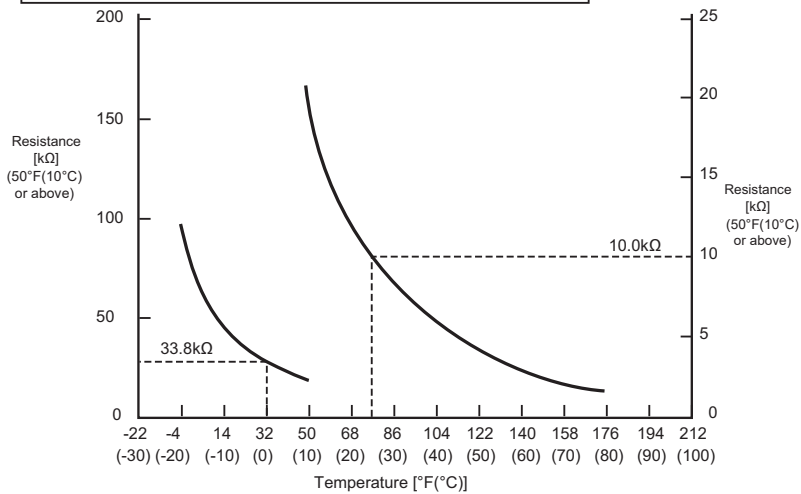


Temperature [°F(°C)]	Resistance [kΩ]
-4(-20)	101.7
5(-15)	76.3
14(-10)	57.7
23(-5)	44.0
32(0)	33.8
41(5)	26.1
50(10)	20.4
59(15)	16.0
68(20)	13.0
77(25)	10.0
86(30)	8.0
95(35)	6.4
104(40)	5.2
113(45)	4.2
122(50)	3.5
131(55)	2.8
140(60)	2.3
149(65)	1.9
158(70)	1.6
167(75)	1.4
176(80)	1.1

Outdoor TD1, TD2, TK1 and TK2 sensors

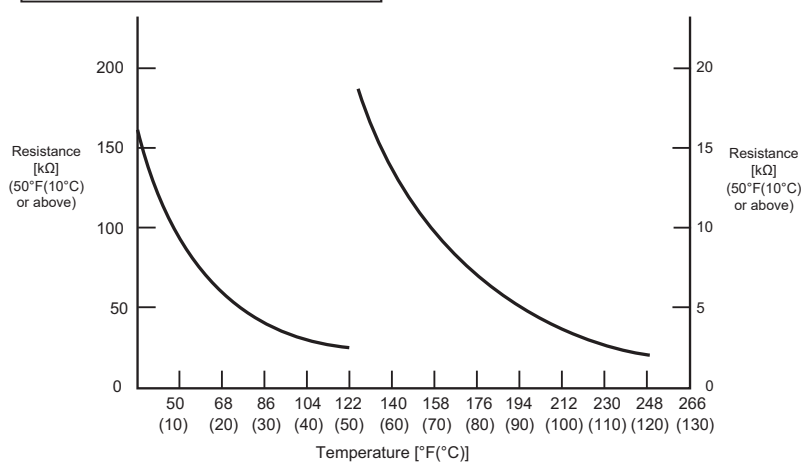

Temperature [°F(°C)]	Resistance [kΩ]
32(0)	162.2
41(5)	125.8
50(10)	98.3
59(15)	77.5
68(20)	61.5
77(25)	49.1
86(30)	39.5
95(35)	32.0
104(40)	26.1
113(45)	21.4
122(50)	17.6
131(55)	14.6
140(60)	12.1
149(65)	10.2
158(70)	8.5
167(75)	7.2
176(80)	6.1
185(85)	5.2
194(90)	4.5
203(95)	3.8
212(100)	3.3
221(105)	2.9
230(110)	2.5
239(115)	2.2
248(120)	1.9

Outdoor TG1, TG2 and TG3 sensors

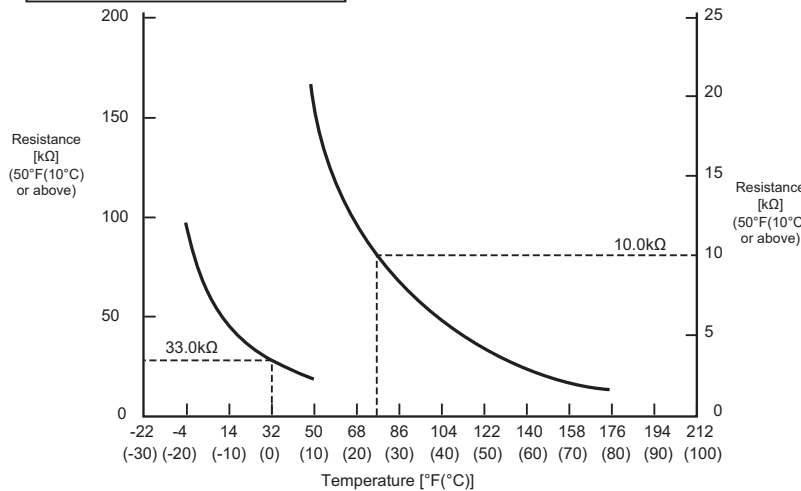

Temperature [°F(°C)]	Resistance [kΩ]
-4(-20)	98.9
5(-15)	74.1
14(-10)	56.1
23(-5)	42.8
32(0)	33.0
41(5)	25.6
50(10)	20.0
59(15)	15.8
68(20)	12.5
77(25)	10.0
86(30)	8.0
95(35)	6.5
104(40)	5.3
113(45)	4.4
122(50)	3.6
131(55)	3.0
140(60)	2.5
149(65)	2.1
158(70)	1.7
167(75)	1.5
176(80)	1.3

Outdoor Unit



▼ Pressure sensor characteristics

- Input/output wiring summary

Pin No.	High pressure side (PD)		Low pressure side (PS)	
	Input/output name	Lead wire color	Input/output name	Lead wire color
1	OUTPUT	White	—	—
2	—	—	OUTPUT	White
3	GND	Black	GND	Black
4	+5V	Red	+5V	Red

- Output voltage vs. pressure


High pressure side (PD)	Low pressure side (PS)
0.5~4.5V 0~569 psi	0.5~4.5V 0~290 psi

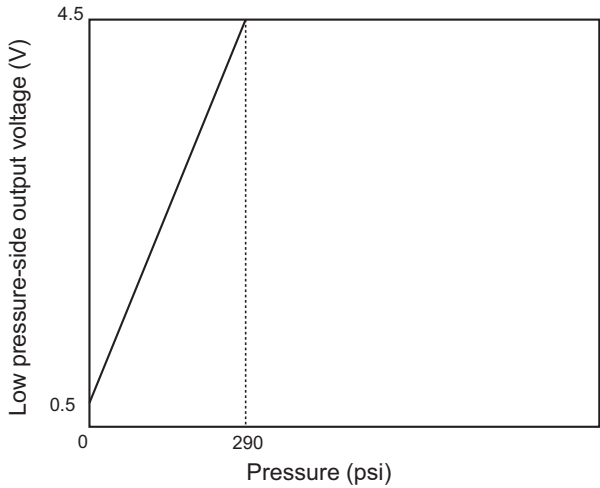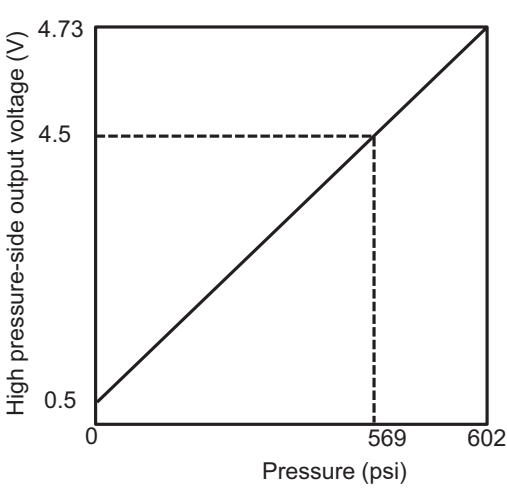

Indoor Unit


▼ Temperature sensor characteristics

Indoor TA(TSA), TRA,TF(TFA) sensor

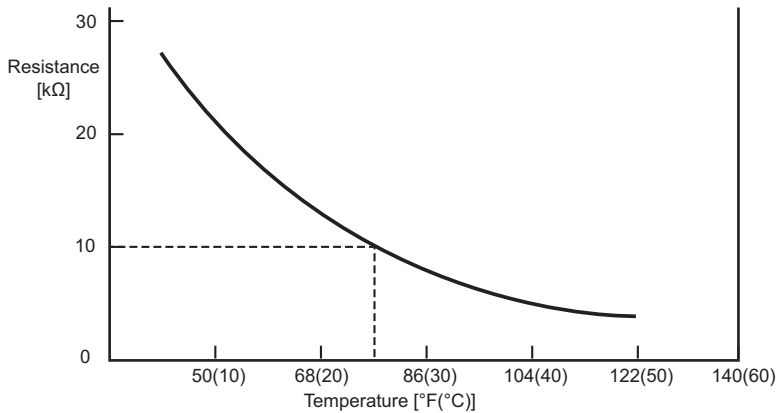


Temperature [°F(°C)]	Resistance [kΩ]
32(0)	33.8
41(5)	26.1
50(10)	20.4
59(15)	16.0
68(20)	12.6
77(25)	10.0
86(30)	8.0
95(35)	6.4
104(40)	5.2
113(45)	4.2
122(50)	3.5
131(55)	2.8
140(60)	2.3

Indoor TC1 sensor

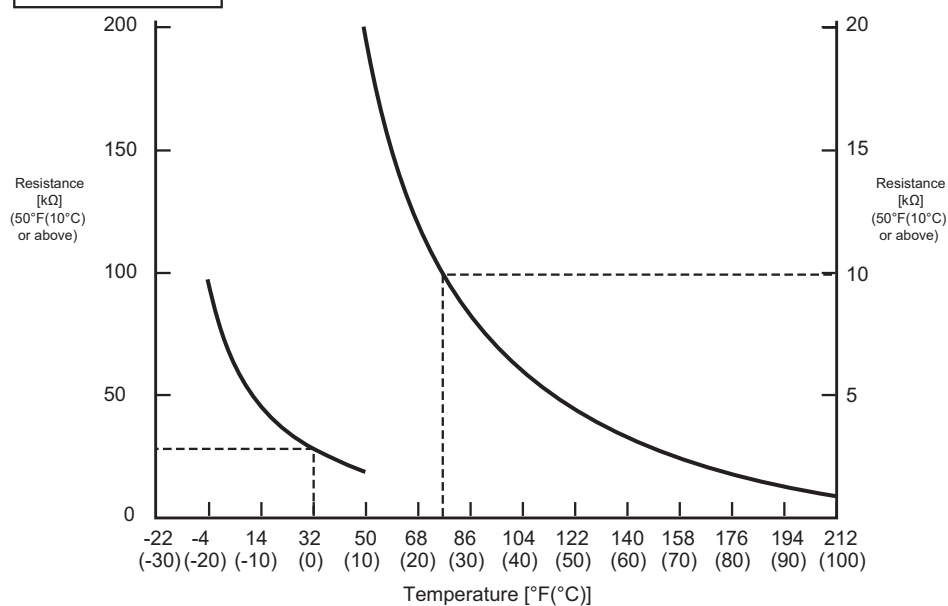

Temperature [°F(°C)]	Resistance [kΩ]
-4(-20)	98.3
5(-15)	73.7
14(-10)	55.8
23(-5)	42.6
32(0)	32.8
41(5)	25.5
50(10)	20.0
59(15)	15.7
68(20)	12.5
77(25)	10.0
86(30)	8.1
95(35)	6.5
104(40)	5.3
113(45)	4.4
122(50)	3.6
131(55)	3.0
140(60)	2.5
149(65)	2.1
158(70)	1.7
167(75)	1.5
176(80)	1.2
185(85)	1.1
194(90)	0.9
203(95)	0.8
212(100)	0.7

Indoor TC2 and TCJ, TOA sensor

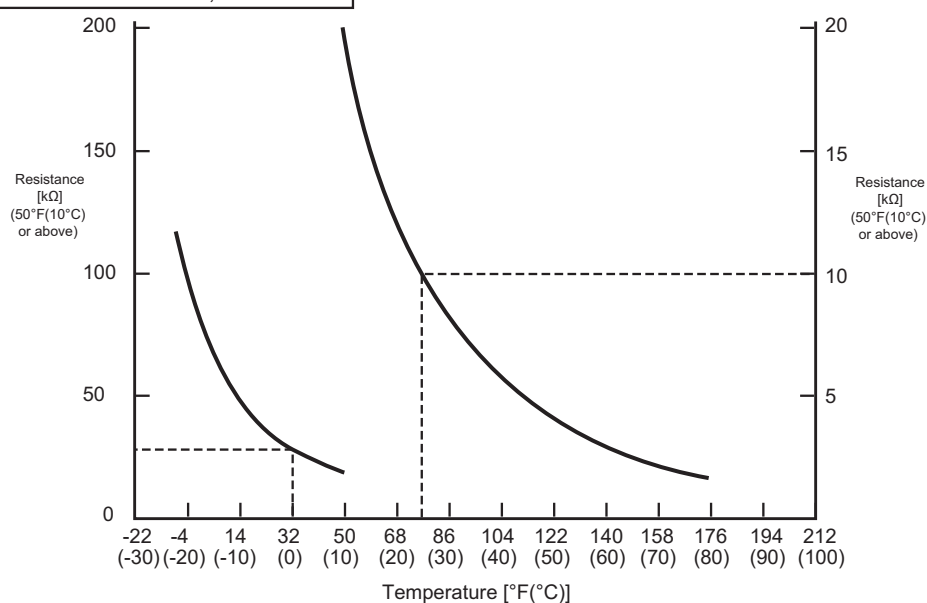

Temperature [°F(°C)]	Resistance [kΩ]
-4(-20)	102.9
5(-15)	76.6
14(-10)	57.7
23(-5)	44.0
32(0)	38.8
41(5)	26.1
50(10)	20.4
59(15)	16.0
68(20)	12.6
77(25)	10.0
86(30)	8.0
95(35)	6.4
104(40)	5.2
113(45)	4.2
122(50)	3.5
131(55)	2.8
140(60)	2.3
149(65)	1.9
158(70)	1.6
167(75)	1.4
176(80)	1.2

8-11. Pressure Sensor Output Check

Outdoor Unit

▼ Pd sensor characteristics

0 to 602 psi (0.5 to 4.73 V output for 0 to 602 psi)

Voltage readings across pins 2 and 3 of CN501 on indoor unit main P.C. board (with negative-side probe of multimeter placed on pin 3)

VOLT			PD			VOLT			PD			VOLT			PD			VOLT			PD		
(V)	(MPa)	(psi)	(V)	(MPa)	(psi)	(V)	(MPa)	(psi)	(V)	(MPa)	(psi)	(V)	(MPa)	(psi)	(V)	(MPa)	(psi)	(V)	(MPa)	(psi)	(V)	(MPa)	(psi)
0.00	0.00	0	1.00	0.49	71	1.99	1.46	212	2.99	2.44	354	3.98	3.42	496									
0.02	0.00	0	1.02	0.51	74	2.01	1.48	215	3.01	2.46	357	4.00	3.44	499									
0.04	0.00	0	1.04	0.53	77	2.03	1.50	218	3.03	2.48	360	4.02	3.45	500									
0.06	0.00	0	1.06	0.54	78	2.05	1.52	220	3.05	2.50	363	4.04	3.48	505									
0.08	0.00	0	1.07	0.56	81	2.07	1.54	223	3.07	2.52	365	4.06	3.49	506									
0.10	0.00	0	1.09	0.58	84	2.09	1.56	226	3.09	2.54	368	4.08	3.51	509									
0.12	0.00	0	1.11	0.60	87	2.11	1.58	229	3.11	2.56	371	4.10	3.53	512									
0.14	0.00	0	1.13	0.62	90	2.13	1.60	232	3.13	2.57	373	4.12	3.55	515									
0.16	0.00	0	1.15	0.64	93	2.15	1.62	235	3.15	2.59	376	4.14	3.57	518									
0.18	0.00	0	1.17	0.66	96	2.17	1.64	238	3.16	2.61	378	4.16	3.59	521									
0.20	0.00	0	1.19	0.68	99	2.19	1.66	241	3.18	2.63	381	4.18	3.61	523									
0.22	0.00	0	1.21	0.70	102	2.21	1.67	242	3.20	2.65	384	4.20	3.63	526									
0.23	0.00	0	1.23	0.72	104	2.23	1.69	245	3.22	2.67	387	4.22	3.65	529									
0.25	0.00	0	1.25	0.74	107	2.25	1.71	248	3.24	2.69	390	4.24	3.67	532									
0.27	0.00	0	1.27	0.76	110	2.27	1.73	251	3.26	2.71	393	4.26	3.69	535									
0.29	0.00	0	1.29	0.77	112	2.29	1.75	254	3.28	2.73	396	4.28	3.70	537									
0.31	0.00	0	1.31	0.79	115	2.31	1.77	257	3.30	2.75	399	4.30	3.72	539									
0.33	0.00	0	1.33	0.81	117	2.32	1.79	260	3.32	2.77	402	4.32	3.74	542									
0.35	0.00	0	1.35	0.83	120	2.34	1.81	262	3.34	2.79	405	4.34	3.76	545									
0.37	0.00	0	1.37	0.85	123	2.36	1.83	265	3.36	2.80	406	4.36	3.78	548									
0.39	0.00	0	1.39	0.87	126	2.38	1.85	268	3.38	2.82	409	4.38	3.80	551									
0.41	0.00	0	1.41	0.89	129	2.40	1.87	271	3.40	2.84	412	4.40	3.82	554									
0.43	0.00	0	1.43	0.91	132	2.42	1.89	274	3.42	2.86	415	4.41	3.84	557									
0.45	0.00	0	1.45	0.93	135	2.44	1.90	276	3.44	2.88	418	4.43	3.86	560									
0.47	0.00	0	1.47	0.95	138	2.46	1.92	278	3.46	2.90	421	4.45	3.88	563									
0.49	0.00	0	1.48	0.97	141	2.48	1.94	281	3.48	2.92	423	4.47	3.90	566									
0.51	0.01	1	1.50	0.99	144	2.50	1.96	284	3.50	2.94	426	4.49	3.92	568									
0.53	0.03	4	1.52	1.00	145	2.52	1.98	287	3.52	2.96	429	4.51	3.93	570									
0.55	0.05	7	1.54	1.02	148	2.54	2.00	290	3.54	2.98	432	4.53	3.95	573									
0.57	0.07	10	1.56	1.04	151	2.56	2.02	293	3.56	3.00	435	4.55	3.97	576									
0.59	0.08	12	1.58	1.06	154	2.58	2.04	296	3.57	3.02	438	4.57	3.99	579									
0.61	0.10	15	1.60	1.08	157	2.60	2.06	299	3.59	3.03	439	4.59	4.01	581									
0.63	0.12	17	1.62	1.10	160	2.62	2.08	302	3.61	3.05	442	4.61	4.03	584									
0.65	0.14	20	1.64	1.12	162	2.64	2.10	305	3.63	3.07	445	4.63	4.05	587									
0.66	0.16	23	1.66	1.14	165	2.66	2.12	307	3.65	3.09	448	4.65	4.07	590									
0.68	0.18	26	1.68	1.16	168	2.68	2.13	309	3.67	3.11	451	4.67	4.09	593									
0.70	0.20	29	1.70	1.18	171	2.70	2.15	312	3.69	3.13	454	4.69	4.11	596									
0.72	0.22	32	1.72	1.20	174	2.72	2.17	315	3.71	3.15	457	4.71	4.13	599									
0.74	0.24	35	1.74	1.21	175	2.73	2.19	318	3.73	3.17	460	4.73	4.15	602									
0.76	0.26	38	1.76	1.23	178	2.75	2.21	320	3.75	3.19	463												
0.78	0.28	41	1.78	1.25	181	2.77	2.23	323	3.77	3.21	465												
0.80	0.30	44	1.80	1.27	184	2.79	2.25	326	3.79	3.23	468												
0.82	0.31	45	1.82	1.29	187	2.81	2.27	329	3.81	3.25	471												
0.84	0.33	48	1.84	1.31	190	2.83	2.29	332	3.83	3.26	473												
0.86	0.35	51	1.86	1.33	193	2.85	2.31	335	3.85	3.28	476												
0.88	0.37	54	1.88	1.35	196	2.87	2.33	338	3.89	3.30	479												
0.90	0.39	57	1.90	1.37	199	2.89	2.35	341	3.89	3.32	481												
0.92	0.41	59	1.91	1.39	202	2.91	2.36	342	3.91	3.34	484												
0.94	0.43	62	1.93	1.41	204	2.93	2.38	345	3.93	3.36	487												
0.96	0.45	65	1.95	1.43	207	2.95	2.40	348	3.95	3.38	490												
0.98	0.47	68	1.97	1.44	209	2.97	2.42	351	3.97	3.40	493												

Outdoor Unit

▼ PS sensor characteristics

0 to 325 psi (0.5 to 5V output for 0 to 325 psi)

Voltage readings across pins 2 and 3 of CN500 on indoor unit main P.C. board (with negative-side probe of multimeter placed on pin 3)

VOLT	PS (MPa)	PS (psi)	VOLT	PS (MPa)	PS (psi)	VOLT	PS (MPa)	PS (psi)	VOLT	PS (MPa)	PS (psi)	VOLT	PS (MPa)	PS (psi)
0.01	0	0	1	0.25	36	2	0.75	109	3	1.25	181	4	1.75	254
0.03	0	0	1.02	0.26	38	2.02	0.76	110	3.02	1.26	183	4.01	1.76	255
0.05	0	0	1.04	0.27	39	2.04	0.77	112	3.04	1.27	184	4.03	1.77	257
0.07	0	0	1.06	0.28	41	2.06	0.78	113	3.05	1.28	186	4.05	1.78	258
0.09	0	0	1.08	0.29	42	2.08	0.79	115	3.07	1.29	187	4.07	1.79	260
0.11	0	0	1.1	0.3	44	2.1	0.8	116	3.09	1.3	189	4.09	1.8	261
0.13	0	0	1.12	0.31	45	2.12	0.81	117	3.11	1.31	190	4.11	1.81	262
0.14	0	0	1.14	0.32	46	2.14	0.82	119	3.13	1.32	191	4.13	1.82	264
0.16	0	0	1.16	0.33	48	2.16	0.83	120	3.15	1.33	193	4.15	1.82	264
0.18	0	0	1.18	0.34	49	2.18	0.84	122	3.17	1.34	194	4.17	1.83	265
0.2	0	0	1.2	0.35	51	2.2	0.85	123	3.19	1.35	196	4.19	1.84	267
0.22	0	0	1.22	0.36	52	2.21	0.86	125	3.21	1.36	197	4.21	1.85	268
0.24	0	0	1.24	0.37	54	2.23	0.87	126	3.23	1.37	199	4.23	1.86	270
0.26	0	0	1.26	0.38	55	2.25	0.88	128	3.25	1.38	200	4.25	1.87	271
0.28	0	0	1.28	0.39	57	2.27	0.89	129	3.27	1.39	202	4.27	1.88	273
0.3	0	0	1.3	0.4	58	2.29	0.9	131	3.29	1.4	203	4.29	1.89	274
0.32	0	0	1.32	0.41	59	2.31	0.91	132	3.31	1.41	204	4.3	1.9	276
0.34	0	0	1.34	0.42	61	2.33	0.92	133	3.33	1.42	206	4.32	1.91	277
0.36	0	0	1.36	0.43	62	2.35	0.93	135	3.35	1.42	206	4.34	1.92	278
0.38	0	0	1.38	0.44	64	2.37	0.94	136	3.37	1.43	207	4.36	1.93	280
0.4	0	0	1.39	0.45	65	2.39	0.95	138	3.39	1.44	209	4.38	1.94	281
0.42	0	0	1.41	0.46	67	2.41	0.96	139	3.41	1.45	210	4.4	1.95	283
0.44	0	0	1.43	0.47	68	2.43	0.97	141	3.43	1.46	212	4.42	1.96	284
0.46	0	0	1.45	0.48	70	2.45	0.98	142	3.45	1.47	213	4.44	1.97	286
0.48	0	0	1.47	0.49	71	2.47	0.99	144	3.46	1.48	215	4.46	1.98	287
0.5	0	0	1.49	0.5	73	2.49	1	145	3.48	1.49	216	4.48	1.99	289
0.52	0.01	1	1.51	0.51	74	2.51	1.01	146	3.5	1.5	218	4.5	2	290
0.54	0.02	3	1.53	0.52	75	2.53	1.02	148	3.52	1.51	219	4.52	2.01	291
0.55	0.03	4	1.55	0.53	77	2.55	1.02	148	3.54	1.52	220	4.54	2.02	293
0.57	0.04	6	1.57	0.54	78	2.57	1.03	149	3.56	1.53	222	4.56	2.03	294
0.59	0.05	7	1.59	0.55	80	2.59	1.04	151	3.58	1.54	223	4.58	2.04	296
0.61	0.06	9	1.61	0.56	81	2.61	1.05	152	3.6	1.55	225	4.6	2.05	297
0.63	0.07	10	1.63	0.57	83	2.63	1.06	154	3.62	1.56	226	4.62	2.06	299
0.65	0.08	12	1.65	0.58	84	2.64	1.07	155	3.64	1.57	228	4.64	2.07	300
0.67	0.09	13	1.67	0.59	86	2.66	1.08	157	3.66	1.58	229	4.66	2.08	302
0.69	0.1	15	1.69	0.6	87	2.68	1.09	158	3.68	1.59	231	4.68	2.09	303
0.71	0.11	16	1.71	0.61	88	2.7	1.1	160	3.7	1.6	232	4.7	2.1	305
0.73	0.12	17	1.73	0.62	90	2.72	1.11	161	3.72	1.61	233	4.71	2.11	306
0.75	0.13	19	1.75	0.62	90	2.74	1.12	162	3.74	1.62	235	4.73	2.12	307
0.77	0.14	20	1.77	0.63	91	2.76	1.13	164	3.76	1.63	236	4.75	2.13	309
0.79	0.15	22	1.79	0.64	93	2.78	1.14	165	3.78	1.64	238	4.77	2.14	310
0.81	0.16	23	1.8	0.65	94	2.8	1.15	167	3.8	1.65	239	4.79	2.15	312
0.83	0.17	25	1.82	0.66	96	2.82	1.16	168	3.82	1.66	241	4.81	2.16	313
0.85	0.18	26	1.84	0.67	97	2.84	1.17	170	3.84	1.67	242	4.83	2.17	315
0.87	0.19	28	1.86	0.68	99	2.86	1.18	171	3.86	1.68	244	4.85	2.18	316
0.89	0.2	29	1.88	0.69	100	2.88	1.19	173	3.88	1.69	245	4.87	2.19	318
0.91	0.21	30	1.9	0.7	102	2.9	1.2	174	3.89	1.7	247	4.89	2.2	319
0.93	0.22	32	1.92	0.71	103	2.92	1.21	175	3.91	1.71	248	4.91	2.21	320
0.95	0.22	32	1.94	0.72	104	2.94	1.22	177	3.93	1.72	249	4.93	2.22	322
0.96	0.23	33	1.96	0.73	106	2.96	1.23	178	3.95	1.73	251	4.95	2.22	322
0.98	0.24	35	1.98	0.74	107	2.98	1.24	180	3.97	1.74	252	4.97	2.23	323
												4.99	2.24	325

9. BACKUP OPERATION (EMERGENCY OPERATION)

This product offers backup modes of operation to tide over certain emergency situations. If a trouble occurs in one of the compressors, it is possible to operate the system on an emergency basis by operating only the remaining compressor, (compressor backup operation).

If one of the outdoor units fails in a combined outdoor unit system, the system can be operated on an emergency basis by keeping only the remaining outdoor unit(s), (outdoor unit backup operation).

Perform backup operation setting in accordance with the procedure described below.

9-1. Note for Backup Operation


The method of backup operation differs according to the contents of trouble as shown in the table below.

Contents of trouble	Method of backup operation	Setting procedure
One of the compressors in the same unit fails (see Note 1)	Compressor backup (see Note 2)	Go to 9-2.
All the compressors in the same unit fail	Outdoor unit backup or cooling-season outdoor unit backup (see Notes 1, 3, 4 and 5)	Go to 9-3. or 9-4.
A trouble occurs in a compressor motor coil (e.g. a layer short-circuit)		
A trouble occurs in a refrigerating cycle part, fan or related part, or electrical part		
A trouble occurs in a temperature sensor or pressure sensor		


Note 1: If the compressor has failed due to a trouble in its motor coil (e.g. a layer short-circuit), do not perform compressor backup operation because of severe oil degradation.

Note 2: Keep the number of backed-up outdoor units under compressor backup operation to one in the system (single refrigerant line).

Note 3 : Keep the number of backed-up outdoor units to one in the system (single refrigerant line.)

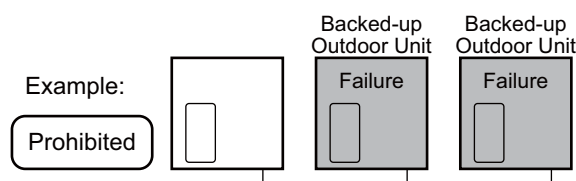

Note 4 : It is possible to do backup operation even the system is connected with different chassis size and different weight of outdoor units.

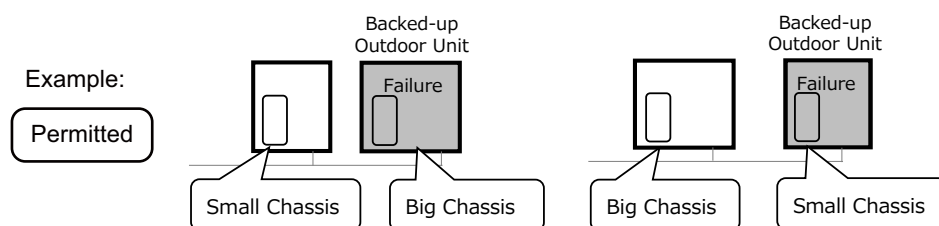

9-2. Compressor Backup Operation Setting


<Outline>

If a failure occurs to one of the compressors installed in outdoor unit, follow the procedure described below to back up the failed compressor by using the remaining, normal compressor.

Note: The backup operation of compressor cannot be done for MMY-MUP0721*, MMY-MUP0961*, MMY-MUP1201*, MMY-MUP1441*, MMY-MUP168* MMY-MUP072H1*, MMY-MUP096H1*, MMY-MUP120H1* because only one compressor is installed in these models.

<Work Procedure>

- (1) Turn off the power supply to all the outdoor units connected to the system.
- (2) Set the DIP switches of SW103, provided on the interface P.C. board of the outdoor unit with the failure compressor, as shown in the table below.

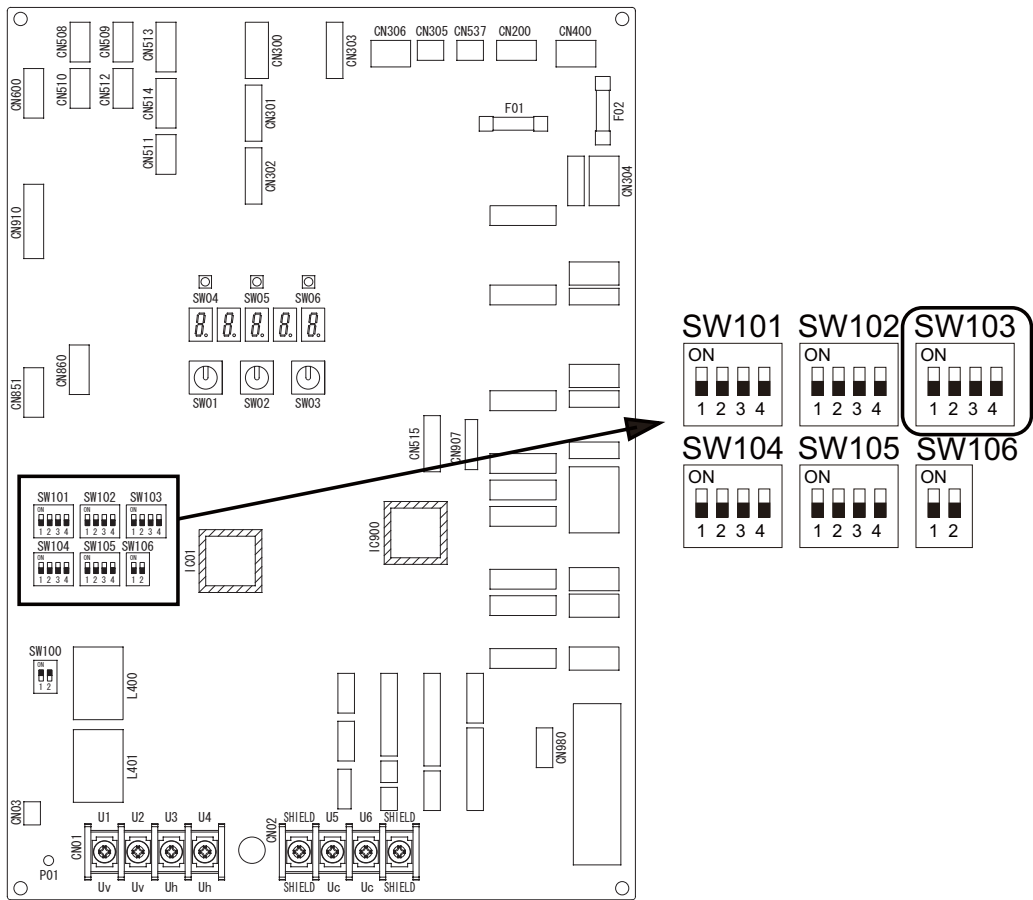


	SW103			
	Bit 1	Bit 2	Bit 3	Bit 4
Factory default setting	OFF	OFF	OFF	OFF
When compressor No.1 (front left) is failed	ON	OFF	OFF	OFF
When compressor No.2 (front right) is failed	OFF	ON	OFF	OFF

(3) Change the connection of wiring as shown in the below.

Outdoor Unit (16 ton)

Model: MMY-MUP1921*

1. When compressor No.1 is failure : No change the connection of wiring
2. When compressor No.2 is failure : Connection of wiring is changed as shown below.

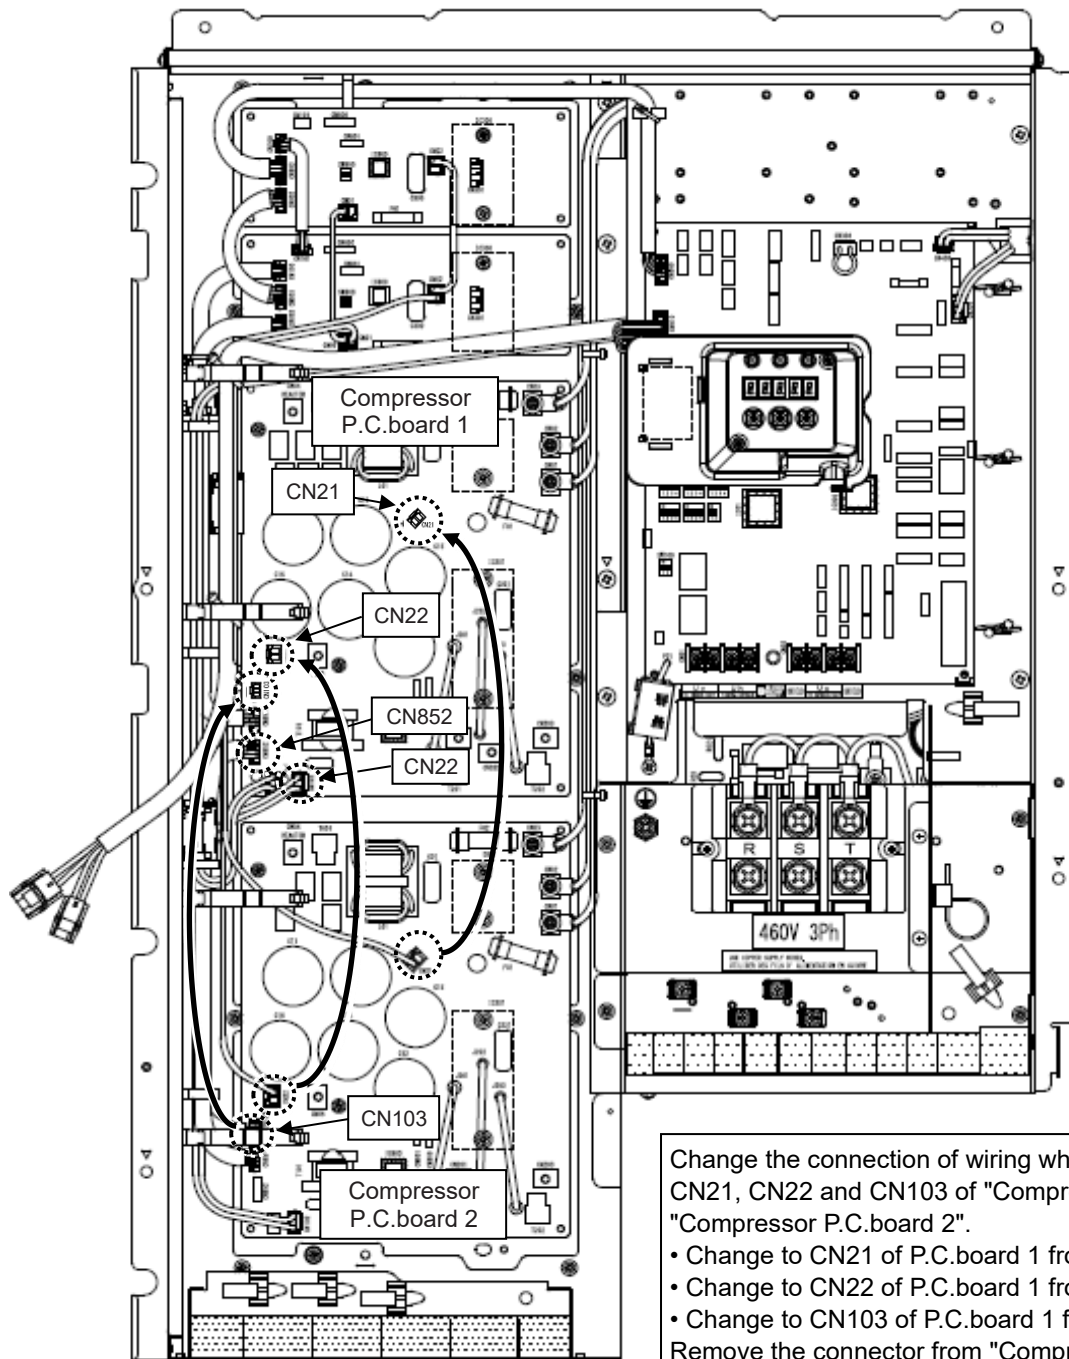

Change the connection of wiring which is connected to the CN21, CN22 and CN103 of "Compressor P.C.board 1" and "Compressor P.C.board 2".

- Change to CN21 of P.C.board 1 from CN21 of P.C.board 2.
 - Change to CN22 of P.C.board 1 from CN22 of P.C.board 2.
 - Change to CN103 of P.C.board 1 from CN103 of P.C.board 2.
- Remove the connector from "Compressor P.C.board 1"
- Remove the connector of CN102
 - Remove the connector of CN852

(4) Turn on the power supply to all the units connected to the system.
This is the end of compressor backup operation setting.

9-3. Outdoor Unit Backup Operation Setting

<Outline>

This product allows outdoor unit backup operation setting to be performed either at the header unit or a follower unit. If any of the failure modes specified below occurs to one of the outdoor units in a multi-outdoor unit system, proceed with outdoor unit backup operation.

- A compressor failure (e.g. a layer short-circuit or a compressor failure in which no compressor is available to back up the failed compressor)
- A failure of a pressure sensor (Pd or Ps) or a temperature sensor (TD1, TD2, TS1, TS3, TE1, TE2, TE3, TG1, TG2, TG3, TK1, TK2, TL1, TL2 or TL3)

Note: Keep the number of backed-up outdoor units to one in the system (single refrigerant line).


9-3-1. Follower outdoor unit backup operation setting (failure of follower outdoor unit)

<Work procedure>


- (1) Turn off the power supply to all the indoor and outdoor units connected to the system.

[Setup of failed follower outdoor unit]


- (2) Fully close the service valves of the HP/LP gas pipe and the LP gas pipe of the failed outdoor unit.
- (3) Leave the service valve of the liquid pipe fully open (to prevent refrigerant stagnation in the unit). However, if there is a leakage from an outdoor PMV (unable to close), fully close the liquid pipe service valve.
- (4) <In case of failure in compressor, electrical part, P.C. board>
From this point on, keep the power supply to the failed unit off.
<Case of refrigerating cycle parts failing (pressure sensor, temperature sensor, refrigerating cycle parts, fan system part)>
 - In a case where the outdoor unit that is a terminal connection fails, disconnect the communication line to the outdoor unit from terminal [Uc(U5/U6)], and cover each of the lines U5 and U6 with insulating tape.

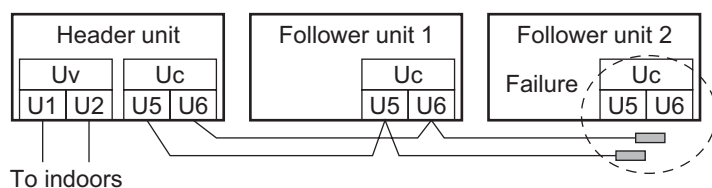


- In a case where an intermediate-connection outdoor unit fails, disconnect the communication line between both adjacent outdoor units from terminal [Uc(U5/U6)], and connect the communication lines.

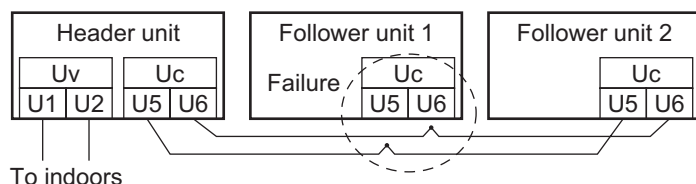


(Reference) Normal wiring

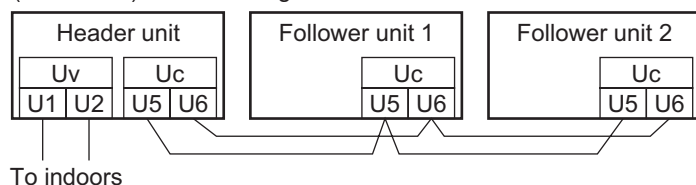

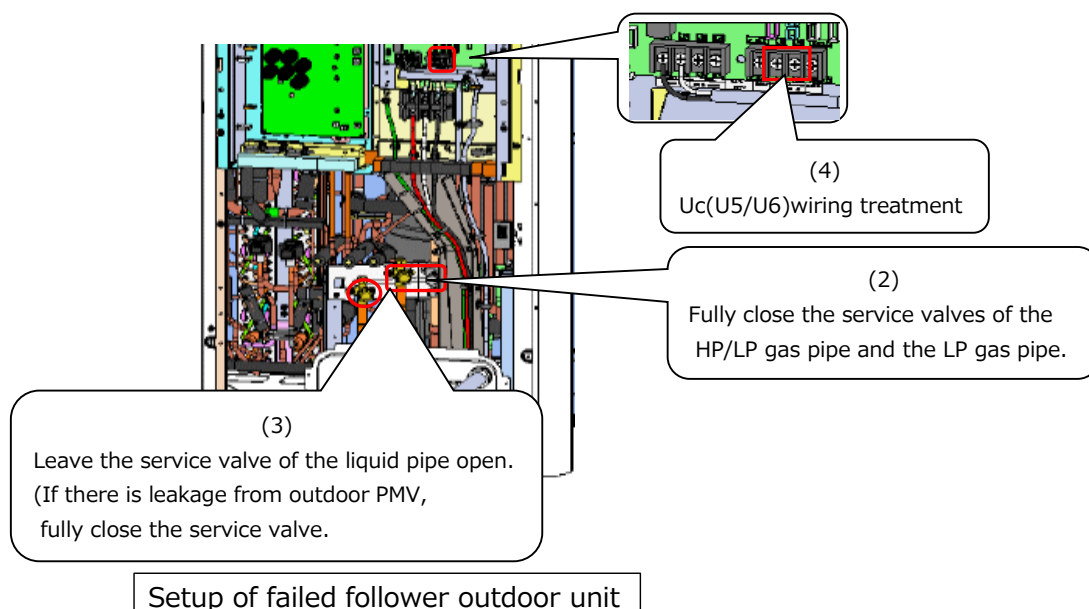


[Setup of header unit]

- (5) Turn on Bit3 of SW103 on the interface P.C. board of the header unit.
(Setting to prevent connected indoor units capacity over failure (E16))

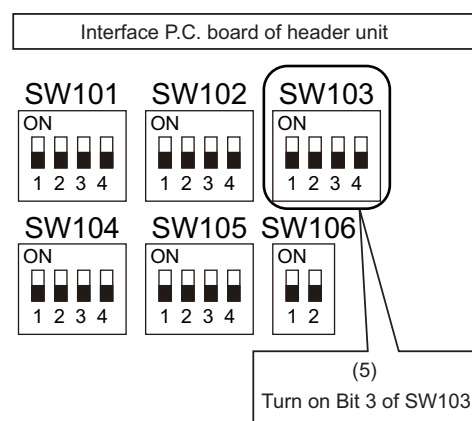

- (6) Turn on the power supply to all the units connected to the system other than the failed follower unit.
Determine what to do with the power supply to the failed follower unit in the following manner.
<In case of failure in compressor, electrical part, P.C. board>
Leave the power supply off.
<In case of failure in refrigerating circuit or related part (pressure sensor, temperature sensor, refrigerating cycle part, or fan system part)>
Turn on the power supply to protect the compressor (by turning on the case heater).
(When the power supply to the unit is turned on, [E19] (failure in the number of outdoor header units) will be displayed on the 7-segment display. However, this will not cause any problems.)
- (7) Perform settings needed to gain permission for backup operation from the header unit (failure clearance).
- 1) Set SW01/02/03 on the interface P.C. board to 1/1/1 and confirm that [U1] [E26] (dropping out of an outdoor unit) is displayed on the 7-segment display.
 - 2) Set SW01/02/03 on the interface P.C. board to 2/16/1. Upon confirming that [Er] [... ..] is displayed on the 7-segment display, push SW04 and hold for 5 seconds or more.
 - 3) [Er] [... CL] (failure clearance completed) will be displayed on the 7-segment display.
 - 4) Set SW01/02/03 back to 1/1/1. (The display should change to [U1] [- - -].)

- (7)
Set SW01/02/03 to 1/1/1
[U1] [E26] will be displayed.
↓
Set SW01/02/03 to [2/16/1].
[Er] [... ..] will be displayed.
↓
Push SW04 and hold for 5 seconds or more
[Er] [... CL] will be displayed.
↓
Set SW01/02/03 back to 1/1/1.
[U1] [- - -] will be displayed.

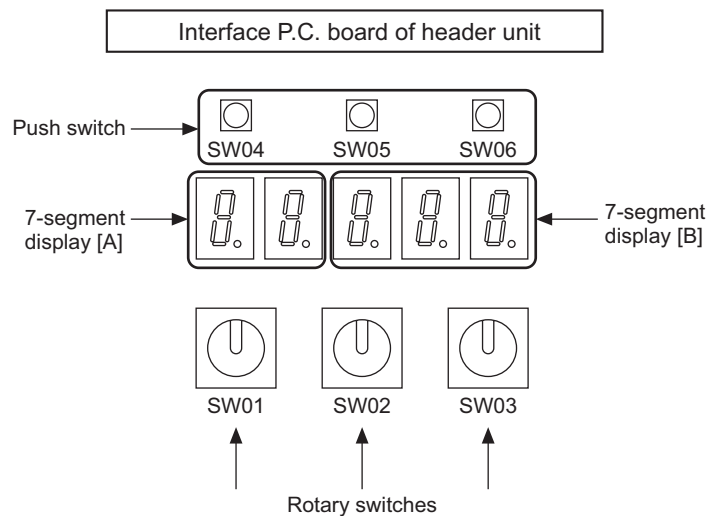

This is the end of follower outdoor unit backup operation setting. Check the operation.

9-3-2. Header outdoor unit backup operation setting (failure of header outdoor unit)

<Work procedure>

(1) Turn off the power supply to all the units connected to the system at the source.

[Setup of failed header outdoor unit]

(2) Fully close the service valves of the HP/LP gas pipe and the LP gas pipe of the failed outdoor.


(3) Leave the service valve of the liquid pipe fully open (to prevent refrigerant stagnation in the failed).

(4) <In case of failure in compressor, electrical part, P.C. board>

From this point on, keep the power supply to the failed unit off.

<In case of failure in refrigerating circuit or related part (pressure sensor, temperature sensor, refrigerating cycle part, or fan system part)>

Disconnect the line for outdoor-outdoor communication [Uc (U5/U6)] and cover the U5 and U6 line with insulating tape separately. (Do not cover the line by mixing the U5 and U6 line altogether).

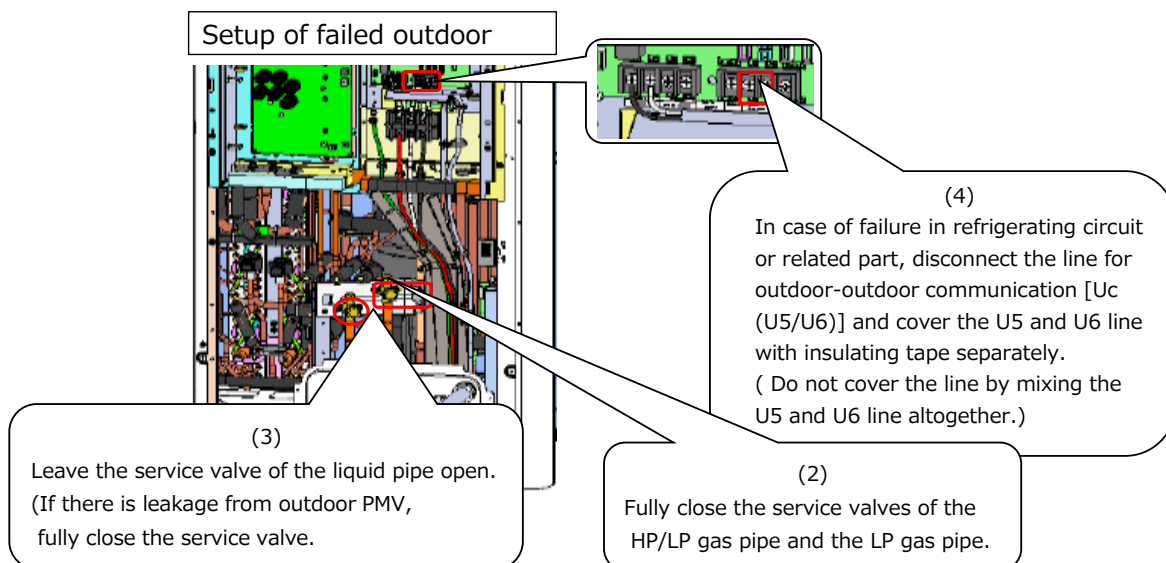

[Selection of new header unit]

(5) Select a new header unit from the follower units on the basis of the following criteria:


- If only one follower unit is connected, select it as the header unit.
- If two follower units are connected, select the follower unit that is nearest to the failed header unit.

[Setup of new header unit]

(6) Set SW101 and SW102 on the interface P.C. board same as the setting of failed header unit (refrigerant line address setting).


(7) Turn on Bit3 of SW103 on the interface P.C. board. (Setting to prevent connected indoor unit capacity over failure. (E16))

- (8) Set Bits 1 and 2 of SW100 on the interface P.C. board same as that of the failed header unit (terminator resistance setting).

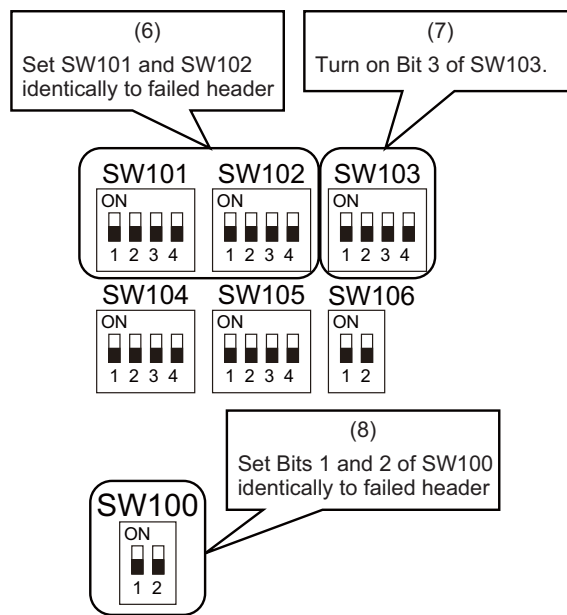

[Wiring changes to communication line]

- (9) Redirect the indoor-outdoor communication line connected to the failed header unit [Uv (U1/U2)] to the unit selected as the header unit [Uv (U1/U2)].
- (10) If a central control device is connected, connect the central control communication line [Uh (U3/U4)] to the communication line terminal of the unit selected as the new header unit [Uh (U3/U4)], and connect up the tie connector between the [Uv (U1/U2)] and [Uh (U3/U4)] terminals.

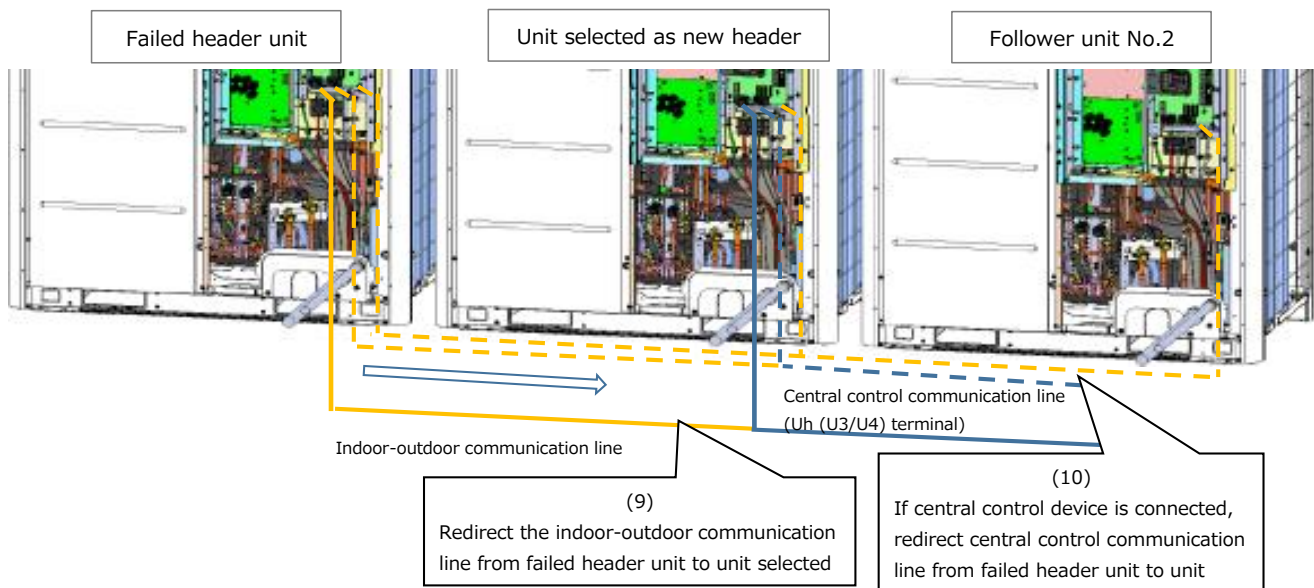

- (11) Turn on the power supply to all the units connected to the system other than the failed unit. Determine what to do with the power supply to the failed unit in the following manner.
- <In case of failure in compressor, electrical part, P.C. board>
Leave the power supply off.
 - <In case of failure in refrigerating circuit or related part (pressure sensor, temperature sensor, refrigerating cycle part, or fan system part)>
Turn on the power supply to protect the compressor (by turning on the case heater).
(When the power supply to the unit is turned on, [E19] (failure in the number of outdoor header units) will be displayed on the 7-segment display. However, this will not cause any problems.)

This is the end of header outdoor unit backup operation setting. Check the operation.

9-4. Cooling-Season Outdoor Unit Backup Operation Setting

<Outline>

Limited to summer and other situations where there is no need for heating operation, this function makes it possible to get backup operation up and running quickly without going through the normal setup procedure, regardless of which type of outdoor unit has failed, the header unit or a follower unit.

In this backup operation, the system behaves in exactly the same way as described in the "Outdoor Unit Backup

Operation Setting" section, except that it cannot perform heating operation.

Note 1: When the system is set up for this function, heating operation is not available.
("HEATING STANDBY" displayed on the remote controller.)

Note 2: If the unit failure has been caused by a failure in the interface P.C. board or electric circuit, this function is not available. In that case, follow the procedure specified in the "Outdoor Unit Backup Operation Setting" section.

<Work procedure>

(1) Turn off the power supply to all the units connected to the system.

[Setup of failed outdoor unit]


Regardless of whether the failed outdoor unit is the header unit or a follower unit, there is no difference in the setup procedure.

(2) Turn on Bits 1 and 2 of SW103 provided on the interface P.C. board.

(3) If there is a leakage from an outdoor PMV (unable to close), fully close the liquid pipe service valve.

(4) Turn on the power supply to all the units connected to the system.

If the failure involves poor insulation of a compressor motor, remove the compressor leads before the power is turned on.

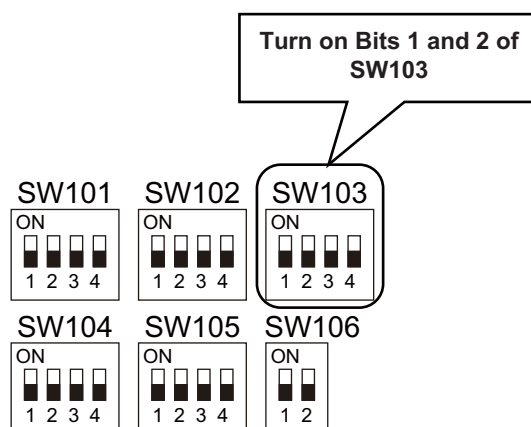


This is the end of cooling-season outdoor unit backup operation setting.

10. OUTDOOR UNIT REFRIGERANT RECOVERY METHOD

10-1. Refrigerant Recovery from Troubled Outdoor Unit (Reclaim)

This product supports refrigerant reclaim, a function which allows refrigerant to be recovered from an outdoor unit in need of repair using a normal outdoor unit in a system featuring multiple outdoor units.

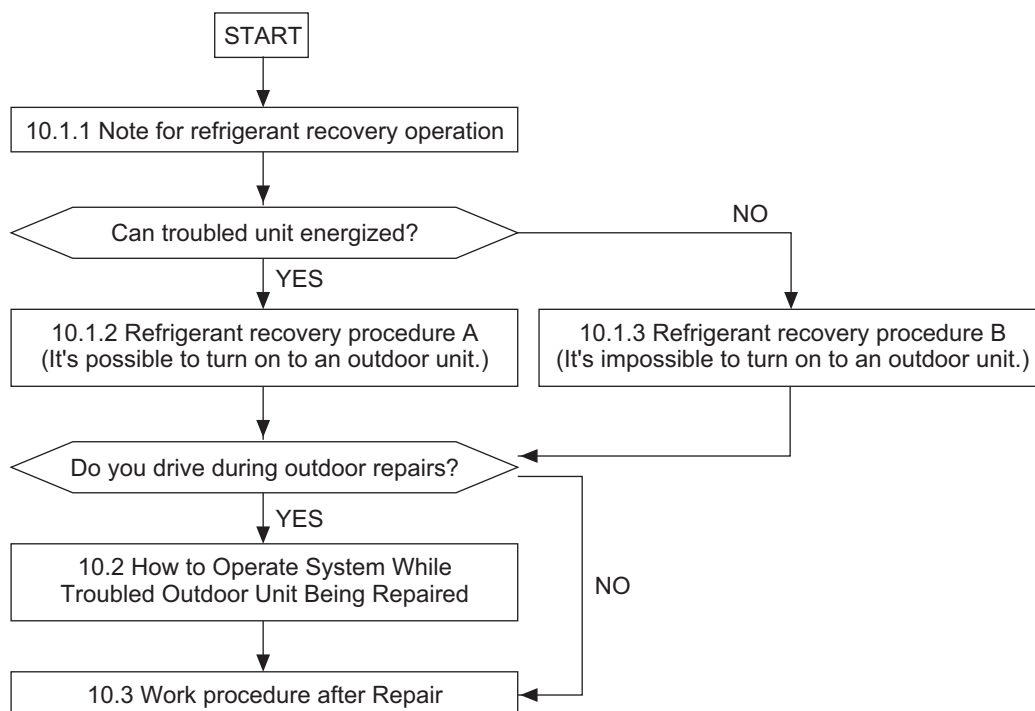

10-1-1. Note for refrigerant recovery operation

When performing reclaim operation, take note of the following matters:

- Note 1:** The reclaim refrigerant recovery rate changes with outside temperature and other factors. After reclaim is completed, recover any residual gas using a refrigerant recovery device, etc., and be sure to measure the amount of recovered refrigerant. (The refrigerant recovery rate can be improved by heating the accumulator of the outdoor unit to be repaired during reclaim operation.)
- Note 2:** If reclaim has been performed, the system cannot be operated until the troubled outdoor unit is repaired.
(Continued operation would be impossible due to a refrigerant overcharge.)
- Note 3:** If outdoor PMV 1 happens to be unable to open or PMVs 2 and 3 happen to be unable to open, the refrigerant in the heat exchangers cannot be recovered. In that case, recover any residual gas in the heat exchangers using a tube piercing valve or some other tool. After a reclaim operation, do not perform any brazing until the residual gas in the heat exchangers is recovered.

10-1-2. Refrigerant recovery procedure A (Case that the troubled outdoor unit turn on)

<Work procedure>




Turn on the power supply to the system at the source, but leave the system switched off.

If the trouble involves poor insulation of a compressor motor, remove the motor leads before the power is turned on.

[Setup of failed outdoor unit]

- (1) Connect the check joint of liquid pipe and the low pressure-side check joint using a charge hose, and purge the hose of air (to recover refrigerant from the liquid tank and heat exchangers).
- (2) Fully close the liquid pipe service valve of the troubled outdoor unit.
(Leave the service valves of the HP/LP gas pipe and the LP gas pipe fully open.)
- (3) Set SW01/02/03 on the interface P.C. board of the failed outdoor unit to 2/11/1. After [rd] [... ..] is displayed on the 7-segment display, push SW04 and hold for 5 seconds or more.

- (4) [rd] [... FF] will be displayed on the 7-segment display, and reclaim operation will start.
- * To put the operation on hold midway, turn off the power supply to all the outdoor units, or push SW05 on the interface P.C. board.
- (5) Approx. 20 minutes after the system starts up , fully close the HP/LP gas pipe and the LP gas pipe service valve of the troubled outdoor unit.
- (6) Push SW05 on the interface board to finish the reclaim operation.
- (7) Turn off the power supply to all the outdoor units , and recover the residual refrigerant in the outdoor unit using a refrigerant recovery device. Be sure to measure the amount of recovered refrigerant. (This is necessary to determine how much additional refrigerant will be needed after the completion of the repair.)

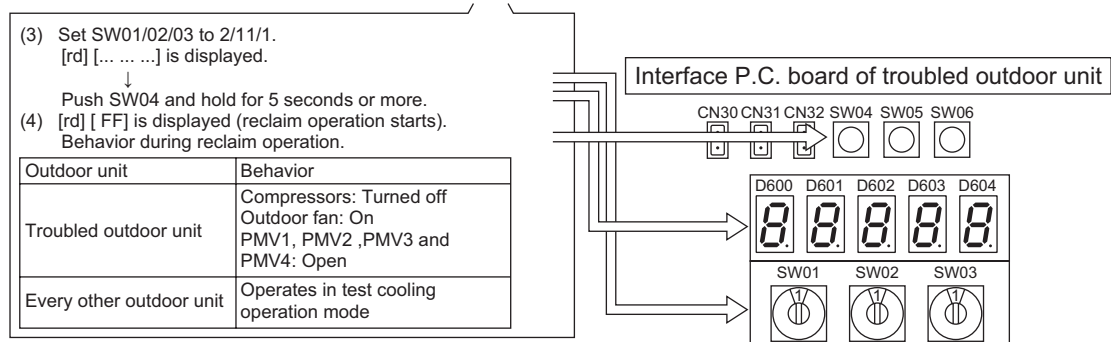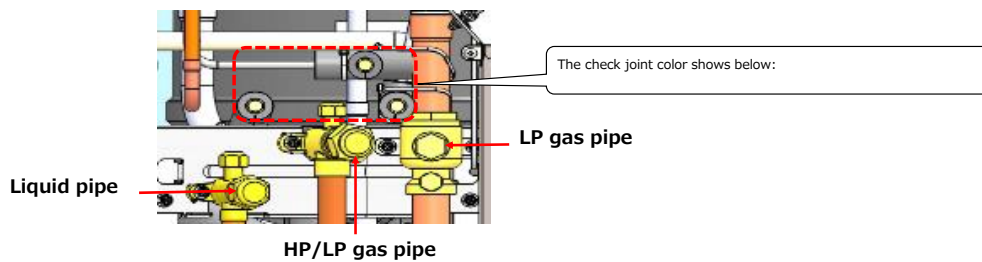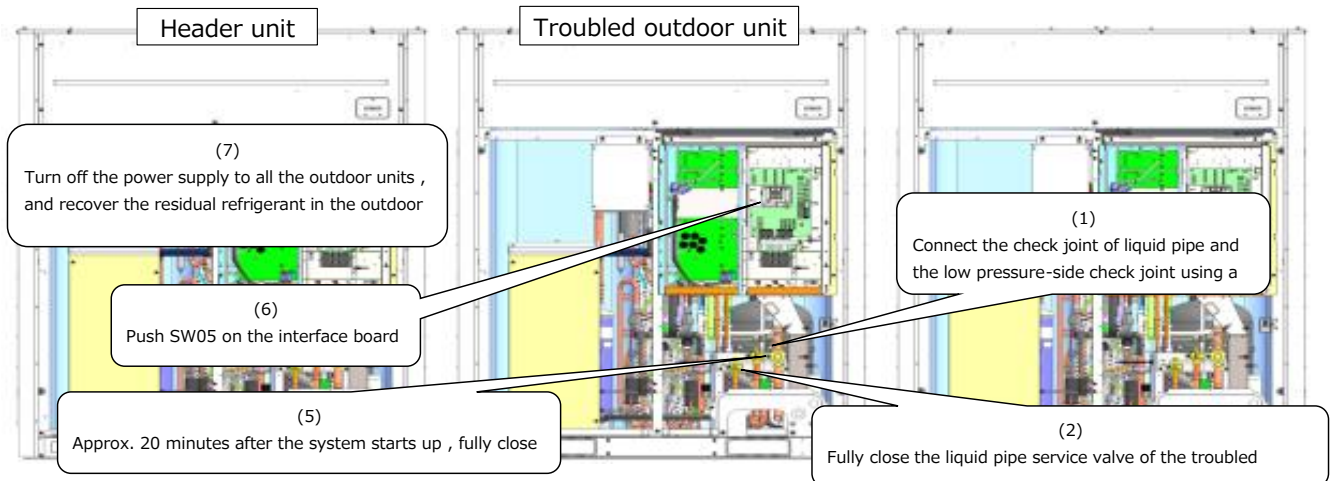

This is the end of the refrigerant recovery operation.
Set SW01/02/03 of the troubled outdoor unit and the outdoor unit for pressure adjustment back to 1/1/1.

10-1-3. Refrigerant recovery procedure B (Case that the troubled outdoor unit does not turn on)

<Outline>

If outdoor unit backup operation setting is performed, use an alternative refrigerant recovery procedure as described below, provided that the power cannot be turned on for the troubled outdoor unit. (Refrigerant will be recovered from the failed outdoor unit using the test cooling operation function.)

Note: If the power cannot be turned on the troubled outdoor unit, the solenoid valves and PMVs of the unit cannot be turned on, so that it reduces the amount of recovered refrigerant compared to a standard reclaim operation. Recover the residual gas in the unit using a refrigerant recovery device, and be sure to measure the amount of recovered refrigerant.


<Work procedure>

[Setup of troubled outdoor unit]

- (1) Connect the liquid pipe check joint and the low pressure-side check joint using a gauge manifold, and purge the manifold of air (to recover refrigerant from the heat exchangers).
- (2) Fully close the liquid pipe packed valve of the troubled outdoor unit.
(Leave the service valve of the HP/LP gas pipe and the LP gas pipe fully open.)

[Setup of unit selected as header unit (hereafter “header outdoor unit”)]

- (3) Set SW01/02/03 on the interface P.C. board of the header outdoor unit to 2/5/1. After [C.] [... ..] is displayed on the 7-segment display, push SW04 and hold for 5 seconds or more.
- (4) After [C. ...] [... – C] is displayed on the 7-segment display, the system starts operating in the test cooling operation mode.
- (5) Set SW01/02/03 on the interface P.C. board of the header outdoor unit to 1/2/2 to have the low-pressure sensor\ output (MPa) displayed on the 7-segment display.
- (6) Approx. 20 minutes after the system starts on , fully close the HP/LP gas pipe and the LP gas pipe service value of the failed outdoor unit.
- (7) Push SW05 on the interface board to finish the reclaim operation.
- (8) Turn off the power supply to all the outdoor units , and recover the residual refrigerant in the outdoor unit using a refrigerant recovery device. Be sure to measure the amount of recovered refrigerant.
(This is necessary to determine how much additional refrigerant will be needed after the completion of the repair.)

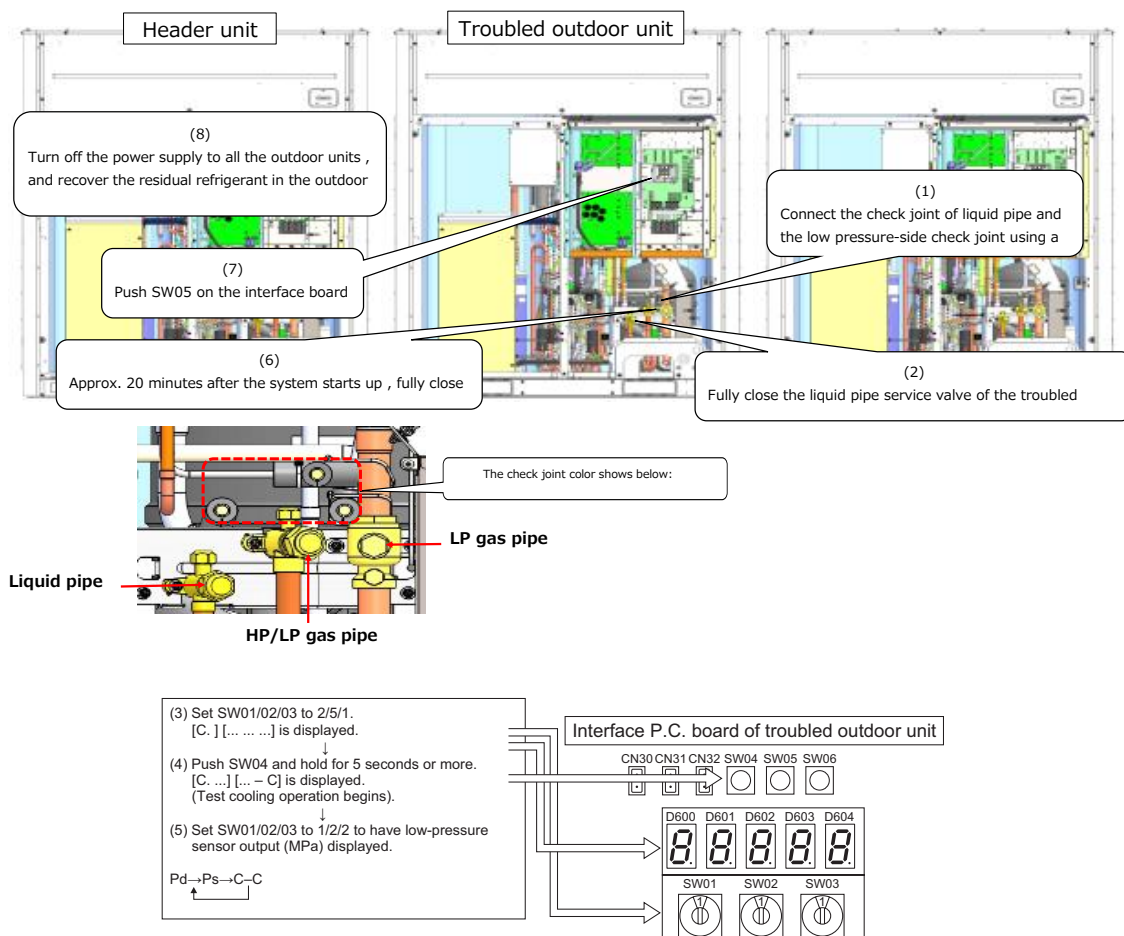

This is the end of the refrigerant recovery operation.

Set SW01/02/03 of the troubled outdoor unit and the outdoor unit for pressure adjustment back to 1/1/1.

10-2. How to Operate System While Troubled Outdoor Unit Being Repaired

<Outline>

After refrigerant is recovered from the troubled outdoor unit through a reclaim operation, the overall amount of refrigerant held by the system becomes excessive, and this makes it impossible to operate the remaining outdoor units even though they are not troubled. However, operation is still possible if the system-wide amount of refrigerant is adjusted in accordance with the procedure described below.

<Work procedure>

- (1) Follow the steps specified in “10-1. Refrigerant Recovery from Troubled Outdoor Unit (Reclaim)”.
- (2) Adjust the amount of refrigerant held by the system by removing some of it using a refrigerant recovery device, etc.
Calculate the amount of refrigerant to be recovered from the amount of refrigerant in the table below.

Example: If you are under repairing of a 14ton (capacity type 168) outdoor unit in 42ton (capacity type 504) system (combination of outdoor unit: 14ton + 14ton + 14ton):
 System capacity refrigerant amount before failure (42ton) = 72.75 lbs
 System capacity refrigerant amount during backup (28ton) = 55.12 lbs
Amount of recovered refrigerant = 17.63 lbs

- (3) Set up the outdoor unit from which refrigerant has been recovered in the manner described in “9-3. Outdoor Unit Backup Operation Setting”.
This completes the procedure.

Standard

System capacity	Outdoor unit capacity type	Combination outdoor units			Refrigerant amount(lbs)	Refrigerant amount(kg)
		Unit1	Unit2	Unit3		
6ton	072	072	-	-	15.43	7
8ton	096	096	-	-	15.43	7
10ton	120	120	-	-	19.84	9
12ton	144	144	-	-	22.05	10
14ton	168	168	-	-	24.25	11
16ton	192	192	-	-	25.35	11.5
16ton	192	072	072	-	30.86	14
18ton	216	144	072	-	37.48	17
20ton	240	144	096	-	37.48	17
22ton	264	168	096	-	46.30	21
24ton	288	144	144	-	44.09	20
26ton	312	168	144	-	46.30	21
28ton	336	168	168	-	55.12	25
30ton	360	168	096	096	61.73	28
32ton	384	144	144	096	59.52	27
34ton	408	168	144	096	61.73	28
36ton	432	168	168	096	63.93	29
38ton	456	168	144	144	68.34	31
40ton	480	168	168	144	70.55	32
42ton	504	168	168	168	72.75	33

High heat

System capacity	Outdoor unit capacity type	Combination outdoor units			Refrigerant amount(lbs)	Refrigerant amount(kg)
		Unit1	Unit2	Unit3		
6ton	072	072	-	-	15.4	7
8ton	096	096	-	-	22.0	10
10ton	120	120	-	-	26.5	12
12ton	144	072	072	-	30.9	14
16ton	192	096	096	-	44.1	20
20ton	240	120	120	-	52.9	24
24ton	288	096	096	096	66.1	30
30ton	360	120	120	120	79.4	36

10-3. Work procedure after Repair

When vacuuming in the repaired outdoor unit, follow the procedure described below.

<Work procedure>

- (1) Follow the procedure below to fully open PMV 1, 2, 3, and 4 and turn off the outdoor unit within 2 minutes after the operation is completed.

Note) The PMV fully open operation by the following operation will return to fully closed after 2 minutes.


1. Set [SW01/SW02/SW03] on the interface board to [2/1/3], and after [H.r] [.....] is displayed on the 7-segment display, push [SW04] and hold for 5 seconds or more.
2. Push [SW06] and hold for 5 seconds or longer, and [P.1] [F o...] is displayed on the 7-segment display. (PMV1 fully open)
3. Set [SW01/SW02/SW03] on the interface board to [2/1/4], and after [P.2] [.....] is displayed on the 7-segment display, push [SW04] and hold for 5 seconds or longer, and [P.2][Fo...] is displayed on the 7-segment display. (PMV2 fully open)
4. 3. Similarly, set [SW01/SW02/SW03] to [2/1/5], set [SW01/SW02/SW03] to [2/1/6], push [SW04] and hold for 5 seconds or more, and each have 7 segments. [P.3][Fo...] (PMV3 fully open), [P.4][Fo...] (PMV4 fully open) are displayed on the display.

Note) 7-segment display and operation method: [P.X] [* * ...]

- The initial state is normal control, and [.....] is displayed in *.
- When push SW4 is pushed for 5 seconds, it fully opens for 2 minutes, and [F o...] is displayed in *.
- Pushing again for 5 seconds displays an intermediate opening for 2 minutes, and [C o...] is displayed in *.
- Pushing it again for 5 seconds closes it completely for 2 minutes and displays [Fc...] in *.
- Push again for 5 seconds to return to normal control.

- (2) Return [SW01/SW02/SW03] on the interface board to [1/1/1].
- (3) Be sure to perform vacuuming in from the three check joints shown in the diagram below (liquid pipe, discharge pipe and suction pipe).


Standard 12,14ton/Elite heat 8,10 ton
Model: MMY-MUP1441FT*, MUP1681FT*, MUP096H1FT*, MUP1201H1FT*

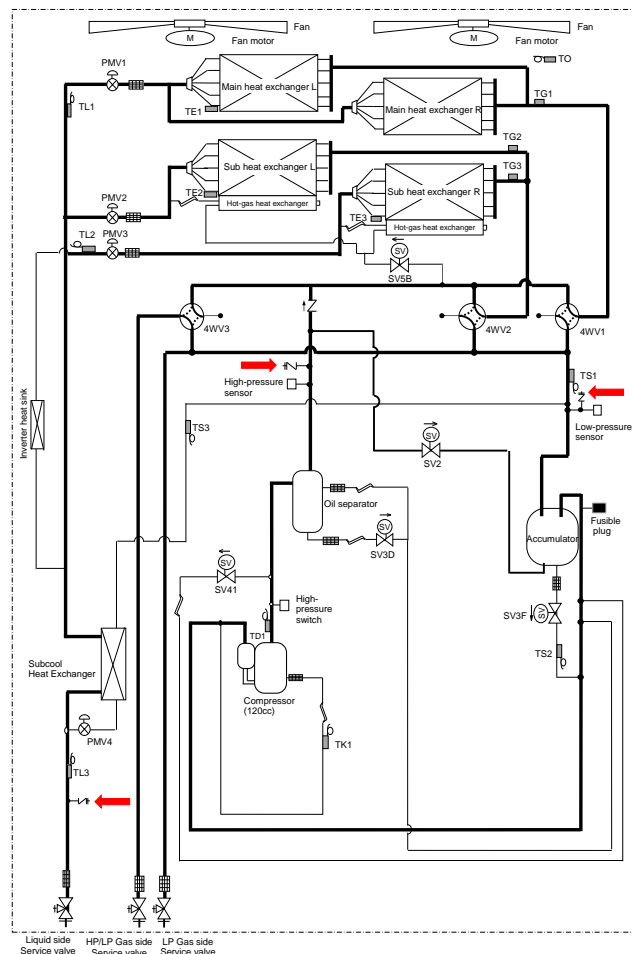

Symbol					
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor

11. REPLACING COMPRESSORS

11-1. Compressor Replacement Procedure (Outline)

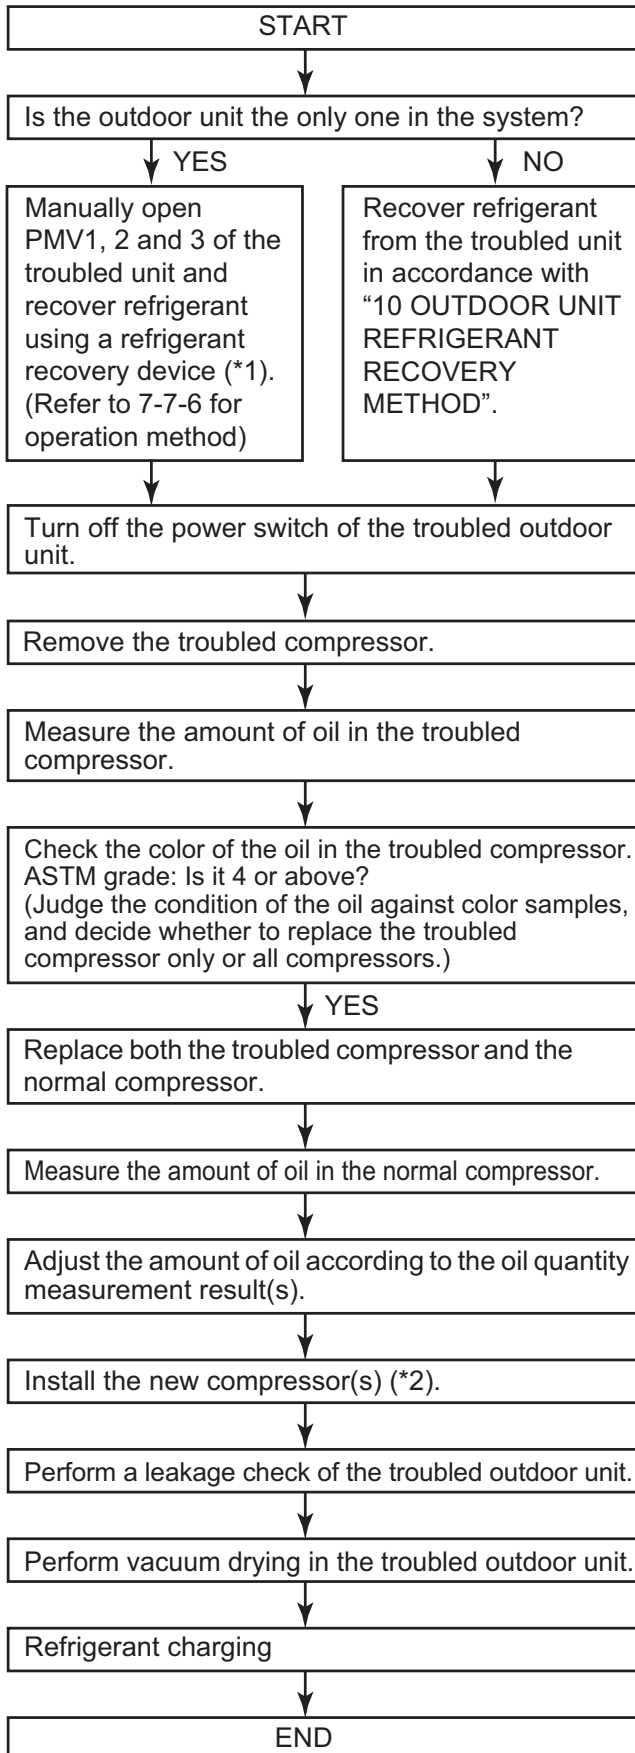

WARNING

In situations such as indoor unit relocation and repairs, it is not possible to recover all the refrigerant held by the system in the outdoor units. It could cause a serious accident, such as blow out or injury. Be sure to perform refrigerant recovery using a refrigerant recovery device.

WARNING

When detaching a pipe by heating with a burner at brazed joint, take care as any oil left in the piping may burn in a momentary flash of fire when the brazed filler metal melts.

- *1 The full-opening of PMV 1, 2, 3 via rotary switch is automatically undone after 2 minutes, causing the valves to fully close. To maintain fully open state, turn off the power switch of the outdoor unit within 2 minutes
- *2 The SMMS-u and the SMMS-i and SMMS-e use different types of compressors. Be sure to check the service part code.

This flowchart only shows the standard compressor replacement procedure. Since the situation can differ site by site, perform the task in accordance with the following judgment criteria:

1. The compressors that are used as service parts are filled with oil as listed below (per 1 compressor):

Standard 6,8,10,16 ton	0.502 gal
High heat 6 ton	
Standard 12,14 ton	0.793 gal
High heat 8,10 ton	

2. The oil volume that was filled in the outdoor unit is listed as below:

Standard 6,8,10 ton	0.898 gal
High heat 6 ton	
Standard 12,14 ton	1.321 gal
High heat 8,10 ton	
Standard 16 ton	1.532 gal

3. The removed compressors normally filled with oil as listed below (per 1 compressor):


Standard 6,8,16,10 ton	0.211 ~ 0.370 gal
High heat 6 ton	
Standard 12,14 ton	0.528 ~ 0.687 gal
High heat 8,10 ton	

Oil separator's oil volume is normally around 0~0.264 gal

11-2. Replacement of Compressors

<Checking color of oil in troubled compressor>

- Lay the troubled compressor down, draw a small amount of oil via the oil equalization pipe, and check its color against color samples.
- Determine the number of compressors to be replaced according to the color checking result.
ASTM grade: Below 4 → Replace the troubled compressor only.
ASTM grade: 4 or above → Replace both the troubled compressor and the normal compressor(s).

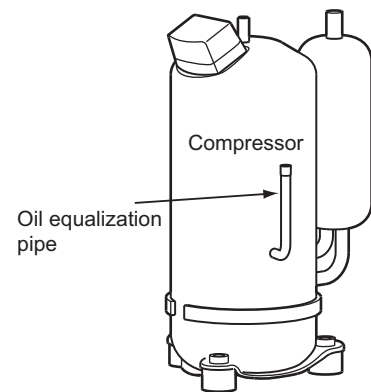

WARNING

When detaching a pipe by heating with a burner at brazed joint, take care as any oil left in the piping may burn in a momentary flash of fire when the brazing filler metal melts.

Model: MMY-MUP0721*,0961*,1201*,072H1*

For Standard 6,8,10 ton, High heat 6 ton

[When replacing troubled compressor only]

<Measuring amount of oil in troubled compressor>

Put the troubled compressor above the scale to measure the amount of oil.

Amount of oil in troubled compressor: $A \text{ [gal]} = (\text{Weight of compressor as it was dismantled (lbs)} - 57.3\text{lbs}) \times 0.1249$
(Specific volume of oil: 0.1249 [gal/lbs])

* The weight of the compressor without oil inside is 57.3lbs

<Adjusting amount of oil in new compressor> (0.502 gal at shipment)

- Perform the adjustment on the basis of how much oil the troubled compressor contained, A [gal], by following the steps below.

1 Amount of oil in troubled compressor A [gal]: $0 \leq A < 0.264$

- (1) Adjust the amount of oil in the new compressor to 0.264 gal.
(Lay the new compressor down and draw 0.211 [gal] of oil via the oil-equalization pipe.)

Notes:


- Do not draw more than 0.211 [gal] of oil as it may cause damage to the compressor.
- If the troubled compressor contained 0.132gal or less, there may have been a problem with the oil equalization circuit, etc. Perform checks in accordance with "11-3. Check Procedure to Search Cause of Compressor Oil Shortage".

2 Amount of oil in troubled compressor A [gal]: $0.264 \leq A < 0.502$

- (1) Adjust the amount of oil in the new compressor to A gal.
(Lay the new compressor down and draw $(0.502 - A)$ [gal] of oil via the oil equalization pipe.)

3 Amount of oil in troubled compressor A [gal]: $0.502 \leq A$

- (1) Adjust the amount of oil in the new compressor to A gal.
(Insert a hose into the discharge pipe or oil equalization pipe of the new compressor and inject $(A - 0.502)$ [gal] of oil using a funnel, etc.)

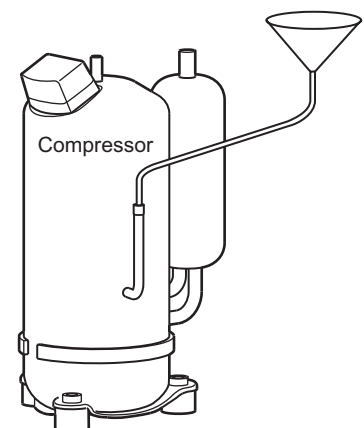

Model: MMY-MUP1441*,1681*,096H1*,120H1*

For Standard 12,14 ton, High heat 8,10 ton

[When replacing troubled compressor only]

<Measuring amount of oil in troubled compressor>

Put the troubled compressor above the scale to measure the amount of oil.

Amount of oil in troubled compressor: $A \text{ [gal]} = (\text{Weight of compressor as it was dismantled (lbs)} - 93.9\text{lbs}) \times 0.1249$
(Specific volume of oil: 0.1249 [gal/lbs])

* The weight of the compressor without oil inside is 93.9lbs.

<Adjusting amount of oil in new compressor> (0.793gal at shipment)

- Perform the adjustment on the basis of how much oil the troubled compressor contained, A [gal], by following the steps below.

1 Amount of oil in troubled compressor A [gal]: $0 \leq A < 0.660$

(1) Adjust the amount of oil in the new compressor to 0.660 gal

(Lay the new compressor down and draw 0.211 [gal] of oil via the oil-equalization pipe.)

Notes:

- Do not draw more than 0.211 gal of oil as it may cause damage to the compressor.
- If the troubled compressor contained 0.211 gal or less, there may have been a problem with the oil equalization circuit, etc. Perform checks in accordance with “11-3. Check Procedure to Search Cause of Compressor Oil Shortage”.

2 Amount of oil in troubled compressor A [gal]: $0.660 \leq A < 0.793$


(1) Adjust the amount of oil in the new compressor to A gal.

(Lay the new compressor down and draw $(0.793 - A)$ [gal] of oil via the oil equalization pipe.)

3 Amount of oil in troubled compressor A [gal]: $0.793 \leq A$

(1) Adjust the amount of oil in the new compressor to A gal.

(Insert a hose into the discharge pipe or oil equalization pipe of the new compressor and inject $(A - 0.793)$ [gal] of oil using a funnel, etc.)

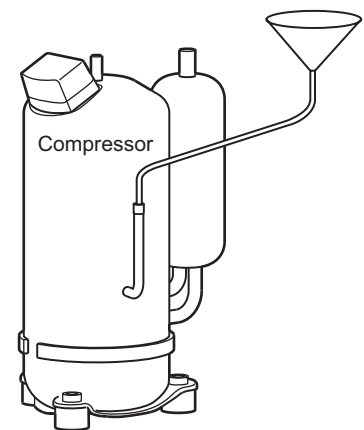

Model: MMY-MUP1921*

For Standard 16 ton

[When replacing normal as well as troubled compressor] - applicable to

<Remove the normal compressor>

- Remove the normal compressor in the same way as the troubled compressor.

Note:

- Be sure to insulate the removed compressor leads using insulation tape, etc.

WARNING

When detaching a pipe by heating with a burner at brazed joint, take care as any oil left in the piping may burn in a momentary flash of fire when the brazing filler metal melts.

<Measuring amount of oil in normal compressor>

- As was the case with the troubled compressor, measure the amount of oil contained by placing the compressor on a scale.
Amount of oil in normal compressor: $A \text{ [gal]} = (\text{Weight of compressor as it was dismantled (lbs)} - 57.3\text{lbs}) \times 0.1249$
(Specific volume of oil: 0.1249 [gal/lbs])
- * The weight of the compressor without oil inside is 57.3lbs.

<Adjusting amount of oil in new compressors>

- Perform the adjustment on the basis of how much oil the failure compressor contained, A [gal], and how much oil the normal compressor contained, B [gal], by following the steps below.

1 Combined amount of oil in troubled and normal compressors $A+B \text{ [gal]}: 0 \leq A+B < 0.581$

(1) Adjust the amount of oil in the two new compressors to 0.264 gal each (total 0.581).

- Lay the compressors down and draw .0211 [gal] of oil from each of them via their oil equalization pipes.

Notes:

- Do not draw more than 0.211 [gal] of oil from a compressor as it may cause damage.
- If the troubled compressor contained 0.132 gal or less, there may have been a problem with the oil equalization circuit, etc. Perform checks in accordance with "11-3. Check Procedure to Search Cause of Compressor Oil Shortage".

2 Combined amount of oil in troubled and normal compressors $A+B \text{ [gal]}: 0.581 \leq A+B < 1.004$


(1) Adjust the amount of oil in the two new compressors to $(A+B)/2$ gal each.

- Lay the compressor down and draw $[1.004-(A+B)]$ [gal] of oil from each of them via their oil equalization pipes.

3 Combined amount of oil in troubled and normal compressors $A+B \text{ [gal]}: 1.004 \leq A+B$

(1) Adjust the amount of oil in the two new compressors to $(A+B)/2$ gal each.

(Insert a hose into the discharge pipe or oil equalization pipe of each compressor and inject $(A+B)/2-0.502$ [gal] of oil using a funnel, etc.)

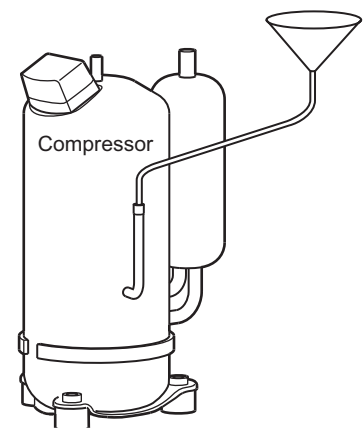

<Installing compressor>

- Install a compressor by following the dismantling procedure in reverse.

Notes:

- The tightening torque of the screws, used to fix the compressor's lead wires, is 1.84 ft*lbs.
- The tightening torque of the hexagonal bolts, used to mount the compressor, is 14.46 ft*lbs.
- If oil has been drawn from the accumulator, repair the cut pipe through pinching and brazing.

<Vacuum-pumping>

(Single outdoor unit system)

- Before performing vacuum-pumping, fully open PMV1, 2 and 3. If they are closed, the heat exchangers of the outdoor unit cannot be vacuum-pumped.
- Connect a vacuum pump consecutively to the check joints placed in the liquid and discharge pipes and on the high-pressure side of the suction pipe, and turn it on.
- Operate the vacuum drying until the vacuum gauge indicates 0.0193317 psi.

<Method to fully open PMV manually>

(1) Turn on the power switch of the outdoor unit.

(2) Fully open the PMV1.

(3) Fully open the PMV2.

(4) Fully open the PMV3

(5) Turn off the power switch of the outdoor unit


* Please refer to chapter 7-7-6 to fully open the PMV1, 2, and 3.

* Step (4) is not needed for Model: MMY-MUP0721*0961* and 072H1*

<Refrigerant charging>

- Inject the same amount of refrigerant as the recovered residual refrigerant via the charging port of the liquid-side service valve.

11-3. Check Procedure to Search Cause of Compressor Oil Shortage

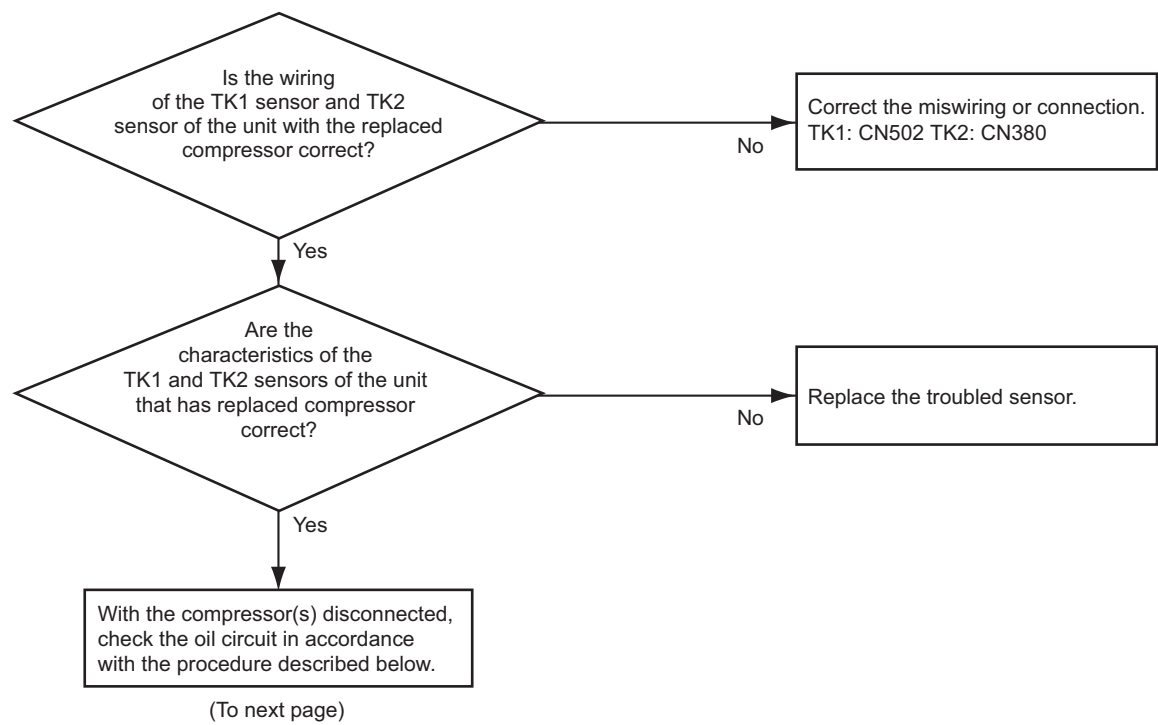

<MMY-MUP0721*,0961* and 072H1*>


Check items and procedures to follow when checking oil circuit with compressor(s) disconnected

Check item	Location	Procedure
Leakage of outdoor PMV Leakage of check valve in discharge pipe convergent section	A, B, D	1) With PMV 1, 2 and 4 fully closed, apply pressure to the check joint of liquid pipe with nitrogen, and check the pressure at the check joint of discharge pipe. If the pressure at the check joint of discharge pipe increases, there is a leak from PMV1 (A) or PMV2 (B) and check valve of discharge pipe (D). Replace the troubled parts. 2) If the pressure does not increase, fully open outdoor PMV 1, 2 and check the pressure at the check joint of discharge pipe again. If the pressure increases, there is a leak from the check valve of discharge pipe (D). Replace the part.
Clogging of SV3D valve Clogging of oil-return capillary Clogging of oil-return distributor	F	3) With pressure applied to the check joint of discharge pipe with nitrogen, manually open the SV3D valve. If gas does not escape from the suction pipe section of the disconnected compressor, the SV3D valve, oil-return capillary or oil-return distributor is clogged. Replace the part.

Outdoor Unit

Standard 6,8 ton / High heat 6 ton

Model: MMY-MUP0721*, MUP0961*, MUP072H1*

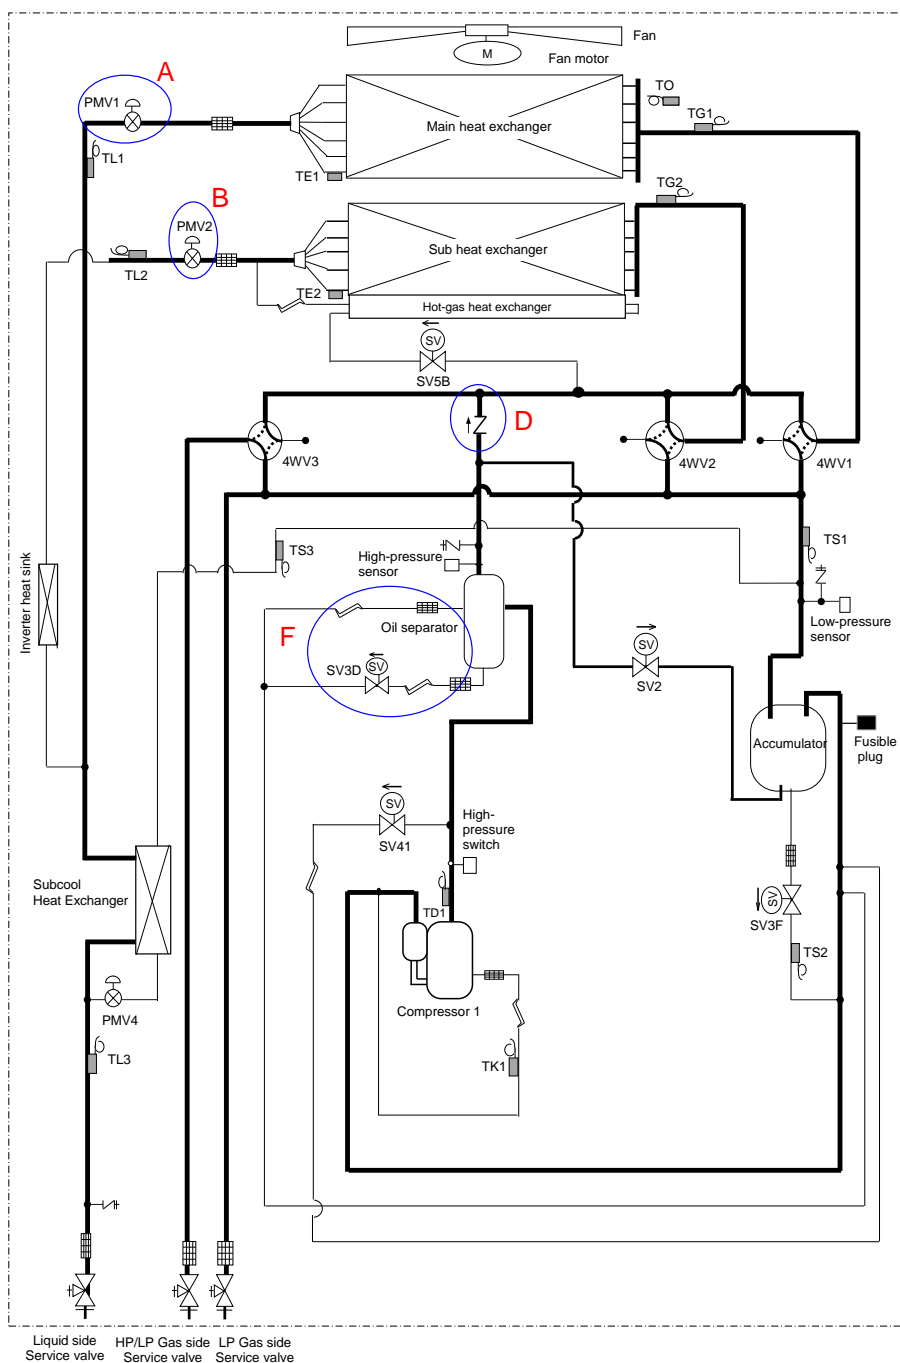

Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor


<MMY-MUP1201*,1441*,1681*,096H1*,120H1*>

Check items and procedures to follow when checking oil circuit with compressor(s) disconnected

Check item	Location	Procedure
Leakage of outdoor PMV Leakage of check valve in discharge pipe convergent section	A,B C,D	1) With PMV 1, 2, 3 and 4 fully closed, apply pressure to the check joint of liquid pipe with nitrogen, and check the pressure at the check joint of discharge pipe. If the pressure at the check joint of discharge pipe increases, there is a leak from PMV1 (A), 2 (B) or 3 (C) and check valve of discharge pipe (D). Replace the troubled parts. 2) If the pressure does not increase, fully open outdoor PMV1 and 2 and check the pressure at the check joint of discharge pipe again. If the pressure increases, there is a leak from the check valve of discharge pipe (D). Replace the part.
Clogging of SV3D valve Clogging of oil-return capillary Clogging of oil-return distributor	F	3) With pressure applied to the check joint of discharge pipe with nitrogen, manually open the SV3D valve. If gas does not escape from the suction pipe section of the disconnected compressor, the SV3D valve, oil-return capillary or oil-return distributor is clogged. Replace the part.

Standard 10,12,14 ton / High heat 8,10 ton

Model: MMY-MUP1201*, MUP1441*, MUP1681*, MUP096H1*, MUP120H1*

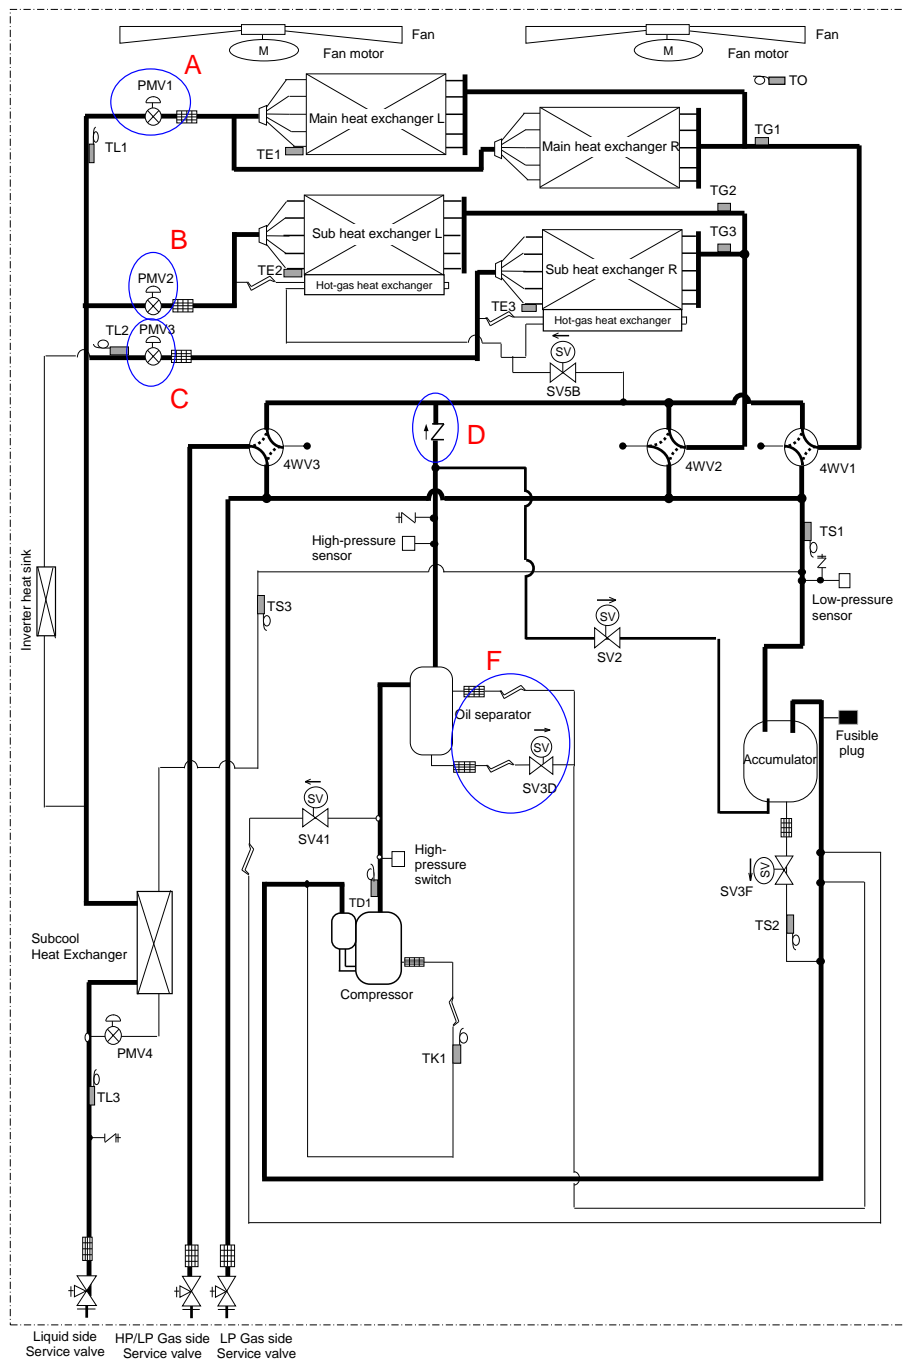


Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

<MMY-MUP1921*>

Check items and procedures to follow when checking oil circuit with compressor(s) disconnected


Check item	Location	Procedure
Leakage of outdoor PMV Leakage of check valve in discharge pipe convergent section	A,B C,D	1) With PMV 1, 2, 3 and 4 fully closed, apply pressure to the check joint of liquid pipe with nitrogen, and check the pressure at the check joint of discharge pipe. If the pressure at the check joint of discharge pipe increases, there is a leak from PMV1 (A), 2 (B) or 3 (C) and check valve of discharge pipe (D). Replace the troubled parts. 2) If the pressure does not increase, fully open outdoor PMV1 and 3 and check the pressure at the check joint of discharge pipe again. If the pressure increases, there is a leak from the check valve of discharge pipe (D). Replace the part.
Leakage of check valve in discharge pipe	E	3) With pressure applied to the check joint of discharge pipe with nitrogen, if gas escapes from the discharge pipe section of the disconnected compressor, there is a leak from the check valve of discharge pipe (E). Replace the part.
Clogging of SV3D valve Clogging of oil-return capillary Clogging of oil-return distributor	F	4) With pressure applied to the check joint of discharge pipe with nitrogen, manually open the SV3D valve. If gas does not escape from the suction pipe section of the disconnected compressor, the SV3D valve, oil-return capillary or oil-return distributor is clogged. Replace the part.






Standard 16 ton Model: MMY-MUP1921*














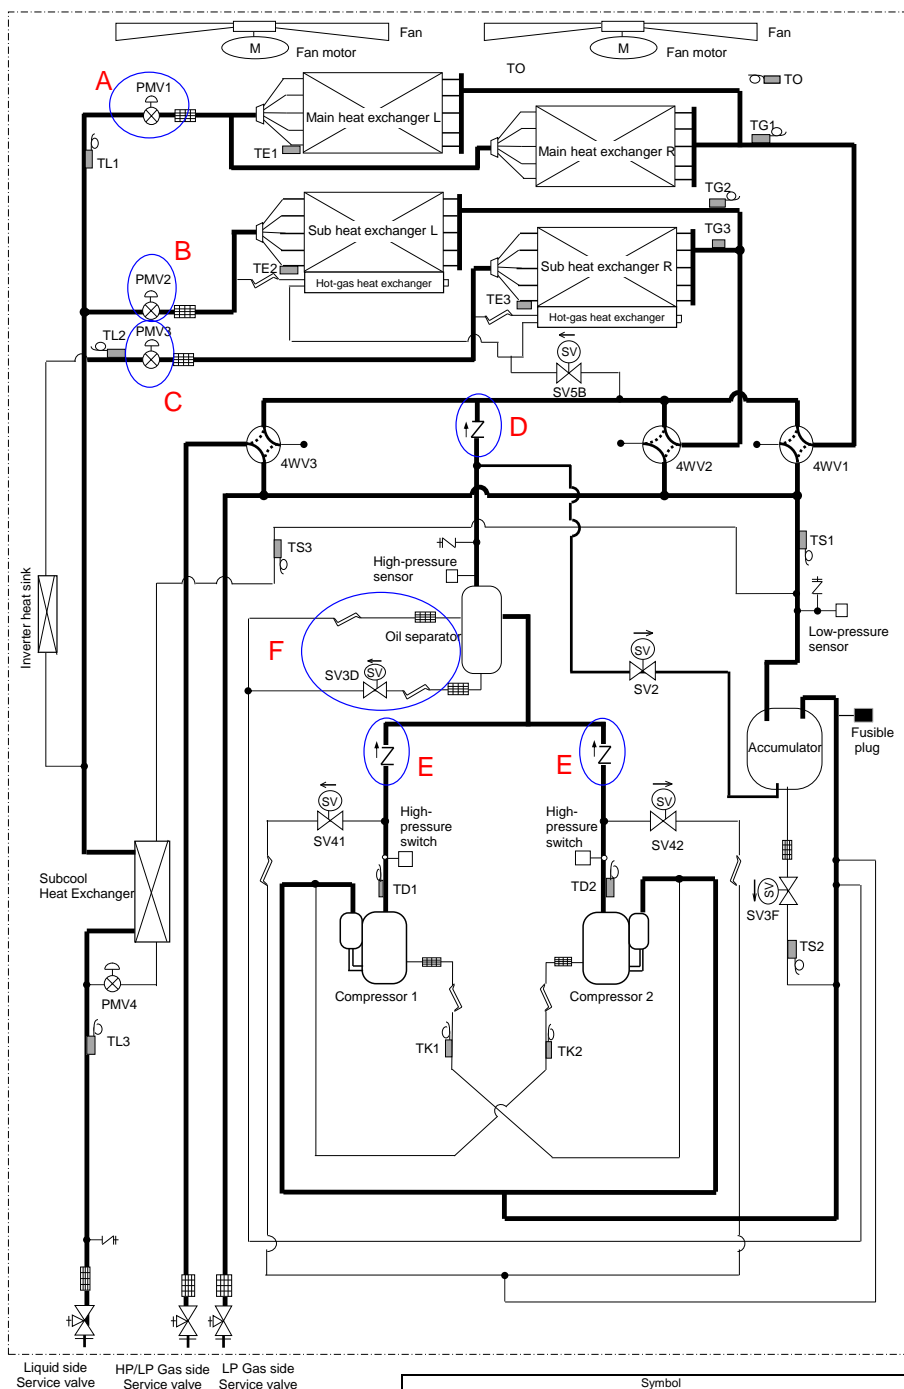




Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor










12. OUTDOOR UNIT PARTS REPLACEMENT METHODS

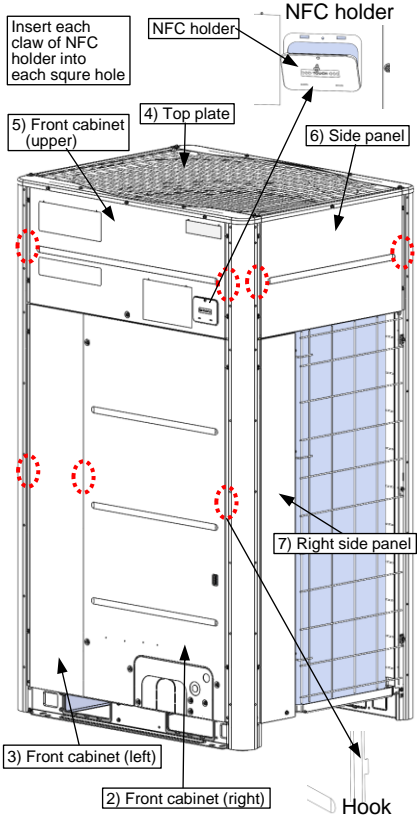
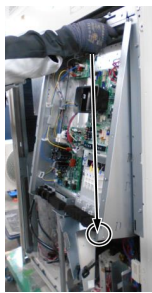

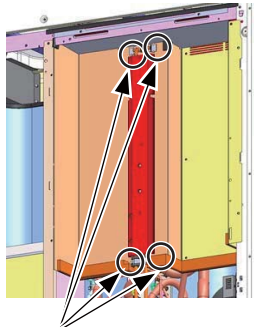
No.	Part	Work procedure	Remarks
1	Cabinet	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Stop the air conditioner operation, and turn off the circuit breaker. 2) Remove the front cabinet (right). (M5 × 0.4" (10mm), 6 pcs) 3) Remove the front cabinet (left). (M5 × 0.4" (10mm), 4 pcs) 4) Remove the top plate. (M5 × 0.4" (10mm), 8 pcs) Front: 3 pcs, Back:3 pcs, Left and Right: 1 pcs each 5) Remove the front cabinet (upper) (M5 × 0.4" (10mm) 5 pcs) * Remove the NFC holder first (M4 x 0.4"(10mm), 1 pcs) <ul style="list-style-type: none"> • Remove the back side cabinet (upper). (M5 × 0.4" (10mm), 5 pcs) 6) Remove the side panel (right and left). Each (M5 × 0.4" (10mm), 4 pcs) 7) Remove the right side panel. (Only 990W cabinet) (M5 × 0.4" (10mm), 5 pcs) * Each cabinet has the hooks. Lift the cabinet to remove the hooks. 	
		<p>2. Attachment</p> <p>Carry out installation by following reverse procedure in the detachment 1) to 7).</p> <p>Hang the hooks into the slit on the metal frame to securely attach each cabinet.</p>	

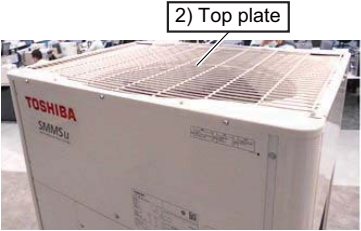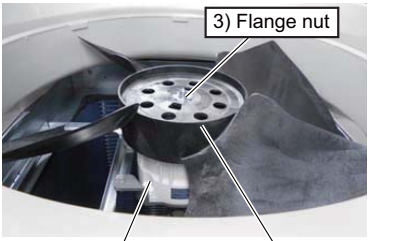
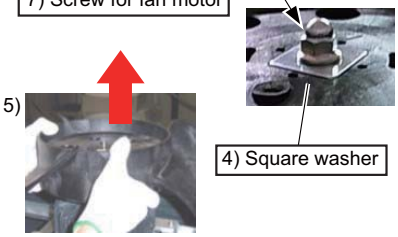
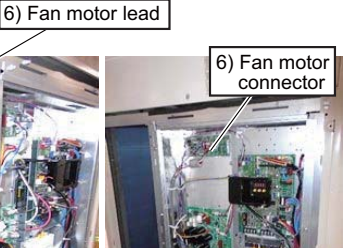
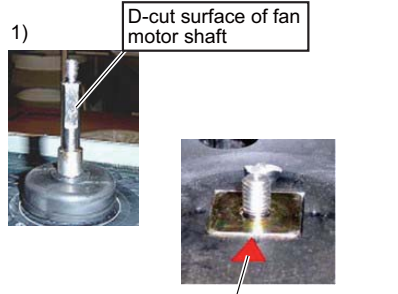

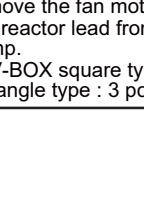
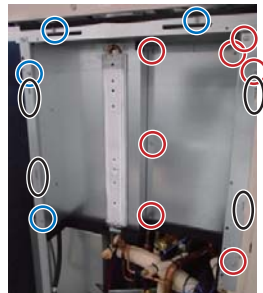

No.	Part	Work procedure	Remarks
2	Propeller fan and Fan motor	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Stop the air conditioner operation, and turn off the circuit breaker. 2) Remove the screws for the top plate. (M5 × 0.4" (10mm) 10, 8 pcs: Front, 3 pcs. Back, 3 pcs. Left and Right, 1 pcs each.) 3) Remove the flange nut securing the fan motor and propeller fan. (To loosen the nut, turn it clockwise.) 4) Remove the square washer. 5) Remove the propeller fan. <p>⚠ CAUTION</p> <p>Lift it straight up. Do not forcibly pull it, or it may get stuck.</p> <ol style="list-style-type: none"> 6) Disconnect the connectors for the fan motor leads from the Fan IPDU, and remove the fan motor leads. (Remove the wire clamp and binding band.) 7) Remove the fan motor. (M6 × 0.8" (20mm), 4 pcs) 	   
		<p>2. CAUTION for replacement or attachment</p> <ol style="list-style-type: none"> 1) Insert the propeller fan while aligning the D-cut surface of the fan motor shaft with the arrow mark (▲) on the fan. (If the propeller fan is tightly mounted on the shaft without securing alignment between the D-cut surface and the arrow mark (▲), it may cause the fan to melt and fall off due to friction heat.) 2) Be sure to put the square washer in place. (Otherwise, unusual noises and vibrations may result.) 3) Tighten the flange nut at a torque of 10.8 ft•lbs (14.7 N•m.) (To tighten the flange nut, turn it counterclockwise.) [When attaching two fan motors for 10-16 ton] Be sure to attach them to the original positions. Fan motor 1: Attach it to the left side. Connect the fan motor connector to the upper fan P.C. board. Fan motor 2: Attach it to the right side. Connect the fan motor connector to the lower fan P.C. board. 	

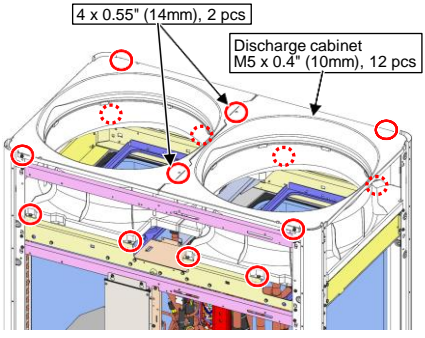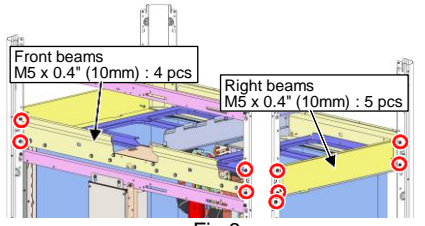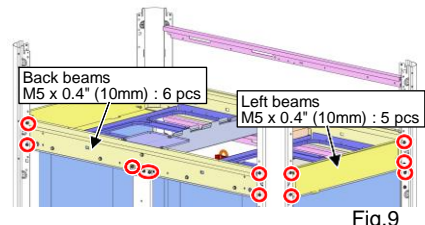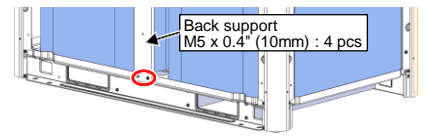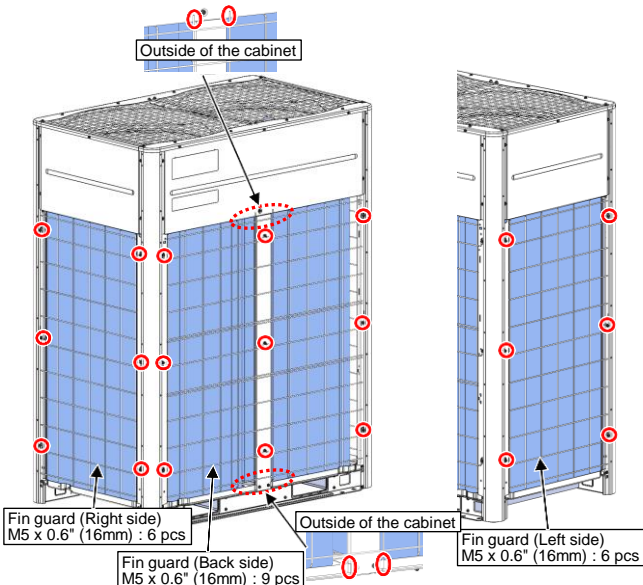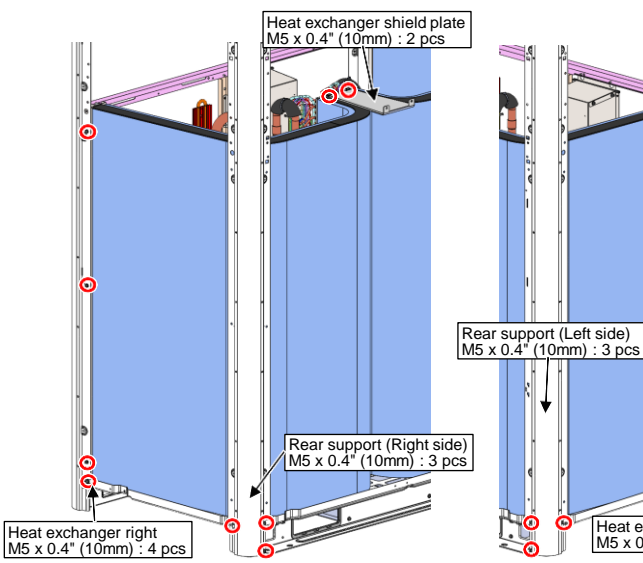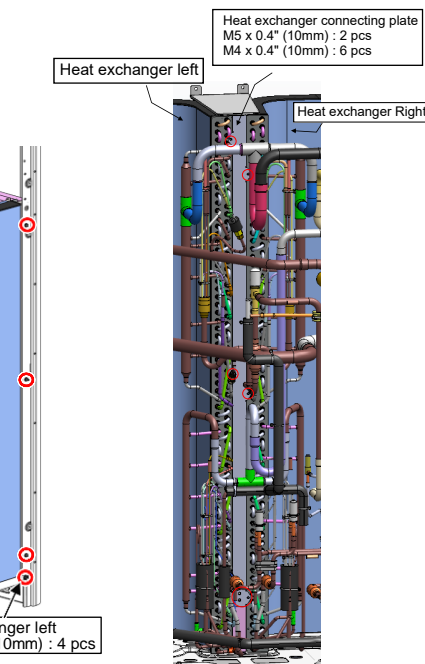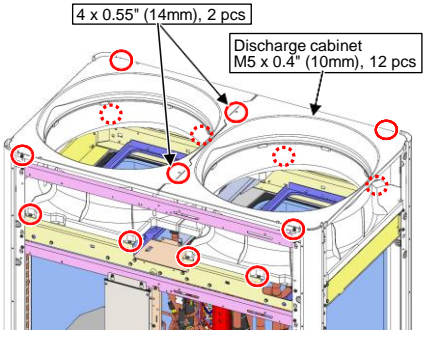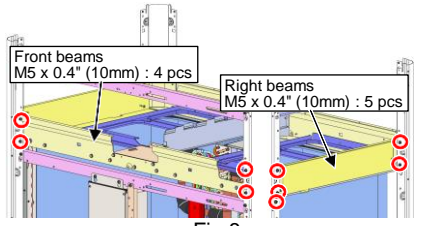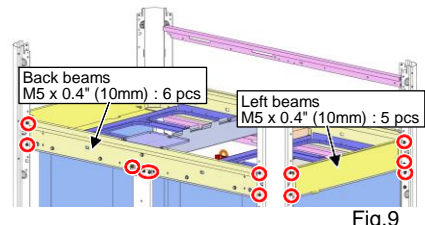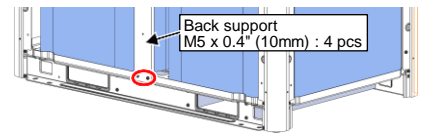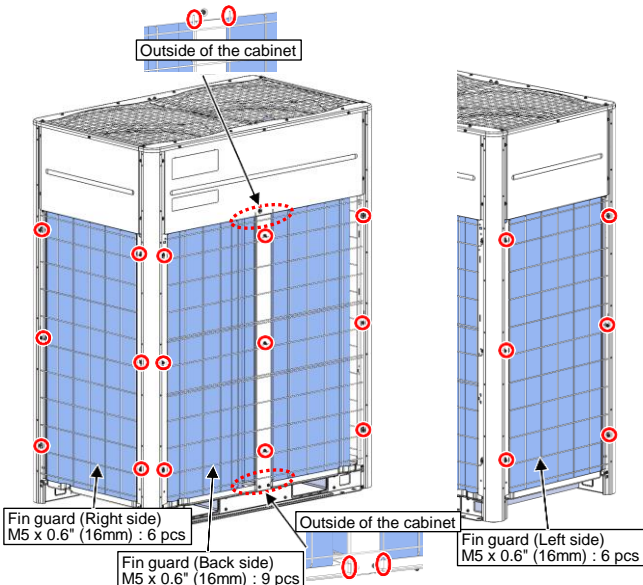
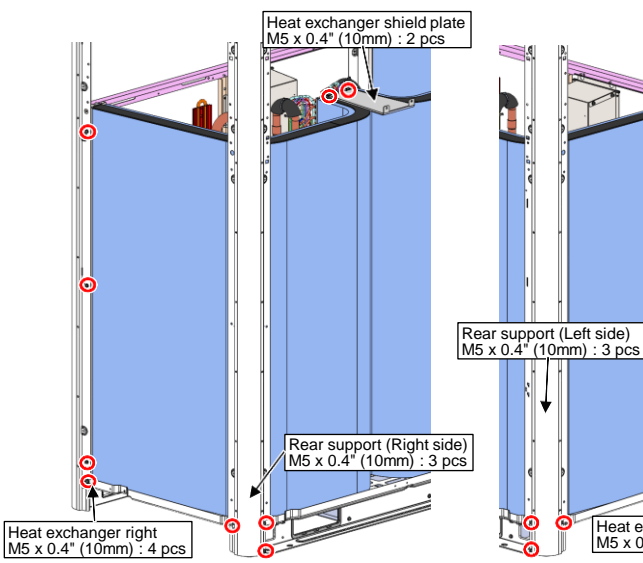
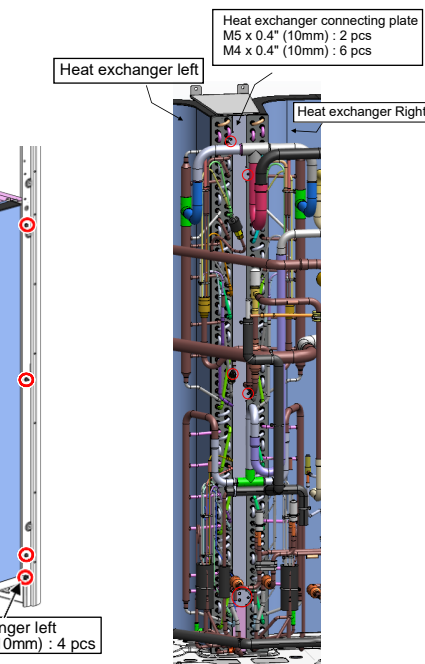
No.	Part	Work procedure	Remarks
3	Heat exchanger	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p>< 10ton, 12ton, 14ton, 16ton > < High heat 8ton, 10ton ></p> <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove No. 1 Cabinet, No.2 propeller fan/fan motor, No. 4 Inverter assembly (Waterproof cover assembly) and No. 5 Reactor . 2) Remove the discharge cabinet, the two rear supports, and the motor base and the four beams together. <p>(Fig.7 to 13)</p> <p>Discharge cabinet : M5 x 0.4"(10mm), 12 pcs 4 x 0.55"(14mm), 2 pcs</p> <p>Motor base and Beams : M5 x 0.4"(10mm), 17 pcs</p> <p>Rear supports : M5 x 0.4"(10mm), 6 pcs</p> <p>Back support : M5 x 0.4"(10mm), 4 pcs</p> <p>Heat exchanger shield plate : M5 x 0.4"(10mm), 2 pcs</p> <p>Heat exchanger connecting plate : M5 x 0.4"(10mm), 2 pcs 4 x 0.4"(10mm), 6 pcs</p> <p>Heat exchanger : M5 x 0.4"(10mm), 4 pcs x 2</p> <p>< Remove Fin guard ></p>  <p>Fig.7</p>  <p>Fig.8</p>  <p>Fig.9</p>  <p>Fig.10</p>  <p>Fig.11</p>  <p>Fig.12</p>  <p>Fig.13</p>	 <p>Fig.7</p>  <p>Fig.8</p>  <p>Fig.9</p>  <p>Fig.10</p>  <p>Fig.11</p>  <p>Fig.12</p>  <p>Fig.13</p>






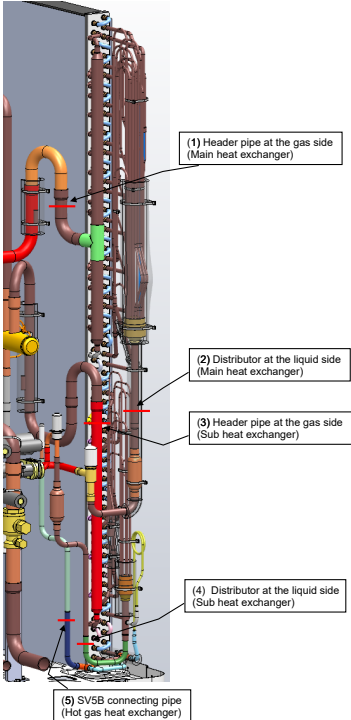
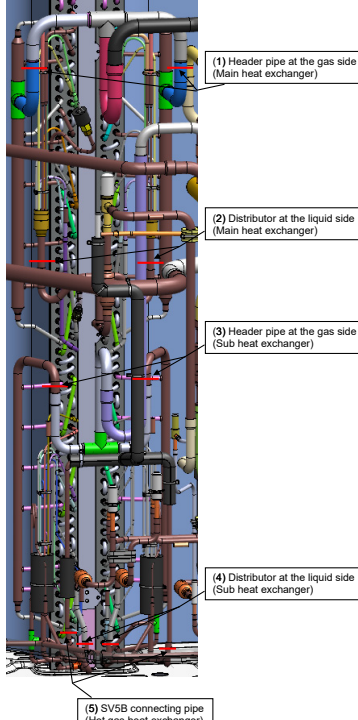
No.	Part	Work procedure	Remarks
3	Heat exchanger	<p>3) Cut the pipes at the heat exchanger (Fig.21, Fig.22).</p> <div style="display: flex; justify-content: space-around;"> <div style="width: 45%;"> <p>< 6ton, 8ton > < High heat 6ton ></p>  <p style="text-align: center;">Fig.21</p> </div> <div style="width: 45%;"> <p>< 10ton, 12ton, 14ton, 16ton > < High heat 8ton, 10ton ></p>  <p style="text-align: center;">Fig.22</p> </div> </div> <p>4) Remove the heat exchanger while draw it upward or atrear side.</p> <p>2. Attachment Carry out installation by following reverse procedure in the detachment 1) to 4). *Mount temperature sensors, pipe covers, coils, etc. in their original positions.</p>	

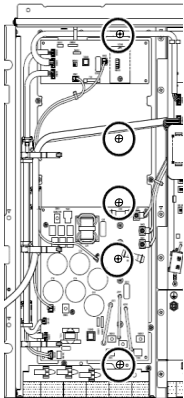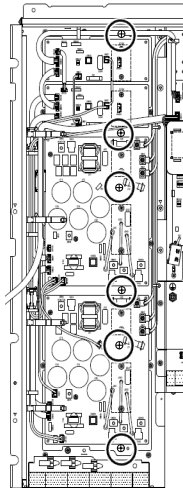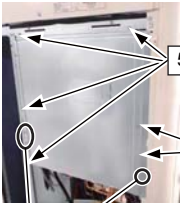
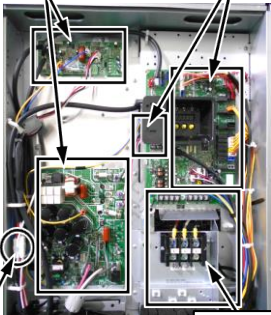


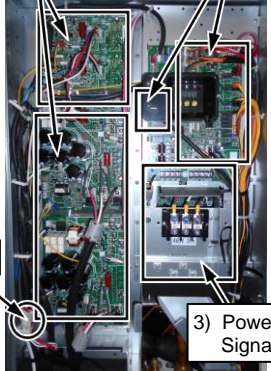

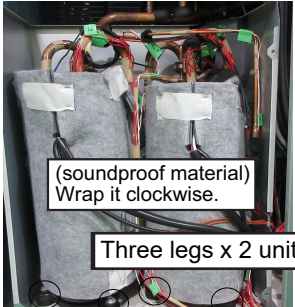
No.	Part	Work procedure	Remarks
4	Inverter assembly	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Stop the air conditioner operation, and turn off the circuit breaker. 2) Remove the inverter cover. (M4 × 0.4" (10mm), 2 pcs.) 3) Remove the connectors and clamp, and remove each wire. 4) Remove the fixing screws for the heat sink. (INV-BOX square type : M4 × 0.6" (16mm), 5 pcs rectangle type : M4 × 0.6" (16mm), 6 pcs) Tighten the screws removed to the hole next to upper and lower slotted hole to remove the heat sink 5) Remove the fixing screws for the box. (M5 × 0.4" (10mm), 4 pcs for right and left, 2 pcs for top) 6) Lift up the box lightly to disengage the fixing hook at the right-lower part. (The lower part of the box comes out toward you.) 7) Hold the top board with both hands to disengage the top hook. <div style="display: flex; justify-content: space-around; align-items: flex-end; margin-top: 20px;"> <div data-bbox="411 965 617 1458" style="text-align: center;">  <p>[INV-BOX square type] 4) Fixing screws for the heat sink (5 pcs)</p> </div> <div data-bbox="703 965 935 1532" style="text-align: center;">  <p>[INV-BOX rectangle type] 4) Fixing screws for the heat sink (6 pcs)</p> </div> </div>	<div style="text-align: center; margin-bottom: 10px;">  <p>5) Screw</p> <p>5) Screw</p> <p>Fixing part : Screw slot hole (Tentative structure) * Loosen the screw without removing it.</p> <p>2) Screw for inverter cover</p> </div> <div style="display: flex; justify-content: space-around; margin-bottom: 10px;"> <div data-bbox="1010 577 1193 640" style="text-align: center;">  <p>3) Comp., FM, OR Reactor lead</p> </div> <div data-bbox="1201 577 1425 640" style="text-align: center;">  <p>3) Coil, sensor, heater, or NFC lead</p> </div> </div> <div style="text-align: center; margin-bottom: 10px;">  <p>3) Trans lead</p> <p>3) Power supply Signal lead</p> <p>[INV-BOX square type] Wiring position</p> </div> <div style="display: flex; justify-content: space-around; margin-bottom: 10px;"> <div data-bbox="1023 1104 1206 1167" style="text-align: center;">  <p>3) Comp., FM, OR Reactor lead</p> </div> <div data-bbox="1214 1104 1437 1167" style="text-align: center;">  <p>3) Coil, sensor, heater, or NFC lead</p> </div> </div> <div style="text-align: center;">  <p>3) Trans lead</p> <p>3) Power supply Signal lead</p> <p>[INV-BOX rectangle type] Wiring position</p> </div>

No.	Part	Work procedure	Remarks
4	Inverter assembly (continued)	<p>2. Attachment</p> <p>1) Carry out installation by following reverse procedure in the detachment 1) to 7).</p> <p>NOTE 1 Apply thickly the heat sink grease to the refrigerant cooling heat sink and install the inverter box. Return the wires to the original state. (Application amount : 3.9 to 7.9 mil (100 to 200 μm)</p> <p>Silicone Thermal Grease use one the same below as PC board. (Part No. : 43167044)</p> <ul style="list-style-type: none"> • Momentive Performance Materials "TIG 1000" • Dow Corning Toray "SC102" • Mizutani Electric Ind "HSC1000" • Shin-Etsu Chemical "G-746" or "G-747" <p>NOTE 2 If the refrigerant cooling heat sink is twisted significantly, adjust it so that it is parallel to the contact surface with the refrigerant cooling heat sink of the box; otherwise, poor contact may cause operation stop.</p> <p style="text-align: center;">Tightening torque of each fixing screws.</p> <div style="border: 1px solid black; border-radius: 15px; padding: 10px; margin: 10px 0;"> <p>Fix the following screws with the specified tightening torque.</p> <p>Power supply terminal block : 1.8 to 2.2 ft•lbs (2.5 to 3.0 N•m) Earth terminal block : 4.0 to 4.9 ft•lbs (5.5 to 6.6 N•m) Signal terminal block : 0.9 to 1.0 ft•lbs (1.2 to 1.4 N•m) INV P.C.board Comp. fixing : 1.4 to 1.5 ft•lbs (1.9 to 2.1 N•m) INV P.C.board Reactor fixing : 1.4 to 1.5 ft•lbs (1.9 to 2.1 N•m) Refrigerant cooling heat sink fixed screw : 1.0 to 1.1 ft•lbs (1.4 to 1.5 N•m)</p> </div>	<div style="text-align: center;"> <p>5) Fixing screws for the box (6 pcs). (Equal to 6-16 ton)</p>  <p>5) Fixing screws for the wire guard (2 pcs) (Equal to 6-16 ton)</p> <p>6) Disengage the fixing at the lower right (Equal to 6-16 ton)</p>  <p>7) Lift the inverter assembly lightly to disengage the upper hook (2 pcs), and remove the inverter assembly. (Equal to 6-16 ton)</p>  </div> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>(NOTE1) Apply the the heat sink grease to the refrigerant cooling heat sink and install the inverter box.</p> </div> <div style="text-align: center;">  </div> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>(NOTE 2) Adjust the refrigerant cooling heat sink so that it is parallel to the heat sink on the box. Follow the size below for the space between the waterproof cover and the refrigerant cooling heat sink Top space : 0.16" (4mm) to 0.24" (6mm), Bottom space : 0.16" (4mm) to 0.24" (6mm)</p> </div>



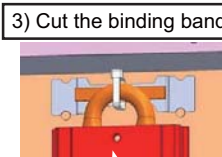
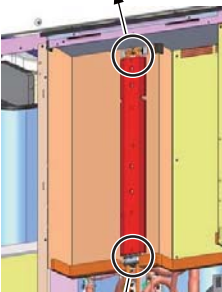
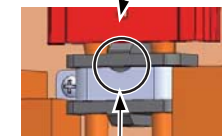
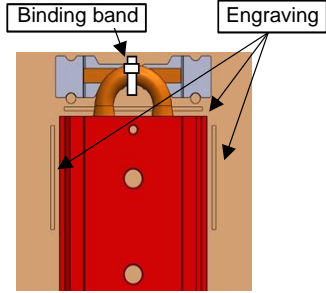
No.	Part	Work procedure	Remarks
4	Waterproof cover assembly	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Stop the air conditioner operation, and turn off the circuit breaker. 2) Remove the inverter assembly. (Refer to the detachment for No.4 inverter assembly.) 3) Remove the binding band at the upper of the refrigerant cooling heat sink and the fixing rubber at the lower. 4) Loosen the clamp at the left side of the waterproof cover (INV-BOX square type : 2 pcs, rectangle type : 3 pcs) to remove the fan motor and reactor. 5) Remove the screws fixing right side of the cover and remove the two hooks hanged on the pillar. (M5 × 0.4" (10mm), 7 pcs) 6) Remove the screws fixing left side of the cover and two hooks hanged on the pillar, and remove the cover from the right side of the heat sink while turning the cover clockwise. (INV-BOX square type : M5 × 0.4" (10mm), 4 pcs rectangle type : M5 × 0.4" (10mm), 5 pcs) <p>NOTE Remove the refrigerant cooling heat sink with care not to bend it.</p> <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Carry out installation by following reverse procedure in the detachment 1) to 5). <p>NOTE If the refrigerant cooling heat sink is twisted significantly, adjust it so that it is parallel to the contact surface with the refrigerant cooling heat sink of the box; otherwise, poor contact may cause operation stop.</p> <ol style="list-style-type: none"> 1) Carry out installation by following reverse procedure in the detachment 1) to 7). <p>NOTE Align the refrigerant cooling heat sink with the rib at the upper-center of the fixing rubber to install the fixing rubber for the heat sink.</p>	<p>3) Cut the binding band</p>    <p>Align the heat sink with the rib at the upper-center of the fixing rubber to install the fixing rubber.</p>  <p>Binding band Engraving</p> <p>Fix the refrigerant cooling heat sink positioned along engraving of waterproof cover.</p> <p>3) Remove the screws (M4) and the clamp, and remove the fixing rubber.</p>  <p>4) Remove the fan motor and reactor lead from the clamp. (INV-BOX square type : 2 pcs rectangle type : 3 pcs)</p>   <p>Fixing the right waterproof cover 5) Fixing screw (Red) (6 to 16 ton : 7 pcs) Hooking claw (Black : right 2 pcs) Fixing the left waterproof cover 5) Fixing screw (Blue) (INV-BOX square type : 4 pcs, rectangle type : 5 pcs) Hooking claw (Black : left 2 pcs)</p>  <p>6) Remove the left waterproof cover from the right side of the heat sink, while turning the cover clockwise.</p>

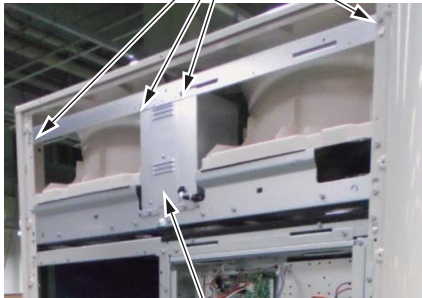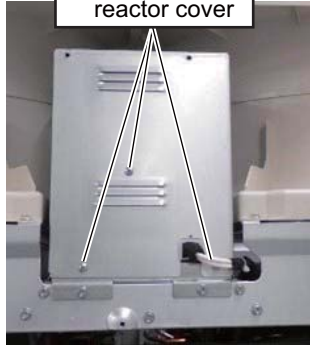
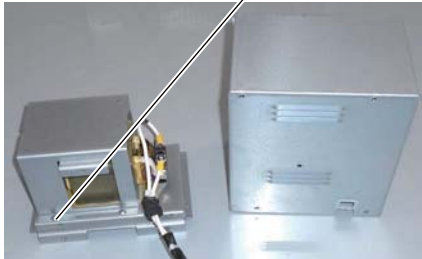
No.	Part	Work procedure	Remarks
5	Reactor assembly Standard 10~16 ton High heat 8,10 ton	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Stop the air conditioner operation, and turn off the circuit breaker. 2) Following to works 1) to 5) in 1 of No.1 Cabinet, remove the cabinets. 3) Remove the screws for the fixed plate of reactor box. (M5 × 0.4" (10mm), 4 pcs) 4) Remove the screws for the reactor box, and draw the reactor box toward you. (M5 × 0.4" (10mm), 2 pcs, Rear side is hooked) 5) Remove the reactor cover. (M4 × 0.3" (8mm), 6 pcs) 6) Remove the reactor. (M4 × 0.3" (8mm), 4 pcs) 	<p>3) Fixed plate of reactor box</p>  <p>4) Screw for reactor box</p> <p>5) Screws for reactor cover</p>  <p>6) Screw for reactor box</p> 
		<p>2. Attachment</p> <p>Carry out installation by following reverse procedure in the detachment 1) to 6).</p> <p>Hook the hooks on each cabinet securely into the square holes in the supports.</p> <p>[For models with two reactors] Be sure to wire the round type terminal leads to the specified reactors.</p> <p>Reactor 1: Wire the round type terminal lead without the black tape to the reactor 1.</p> <p>Reactor 2: Wire the round type terminal lead with the black tape to the reactor 2.</p>	

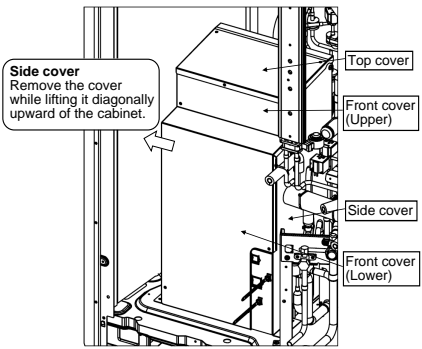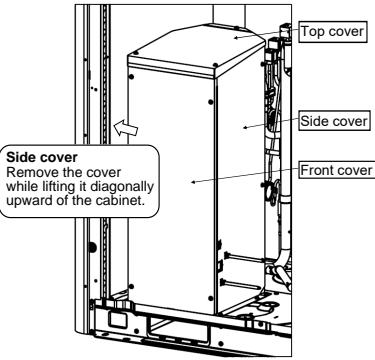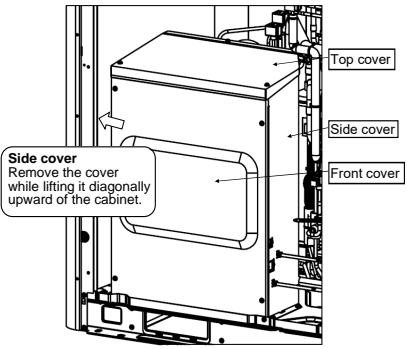
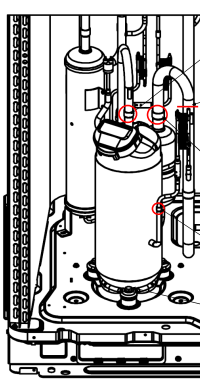
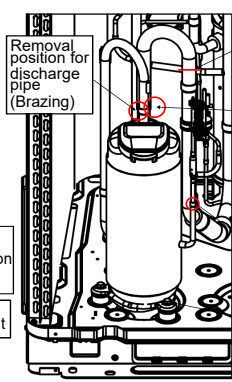
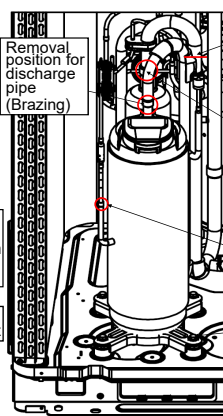
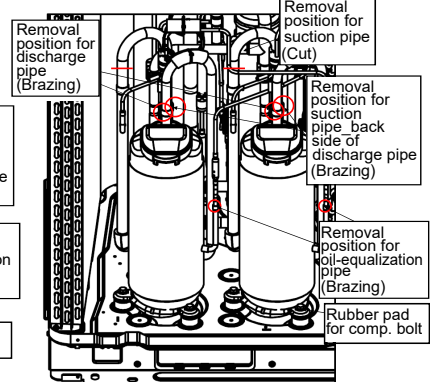
No.	Part	Work procedure	Remarks
6	Compressor	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p>1. Detachment</p> <p>1) Carry out work of No. 1 Cabinet and remove the compressor cover and soundproof materials.</p> <p>⚠ WARNING</p> <p>Be careful of burns. The compressor cover is very hot immediately after outdoor unit stops.</p> <p><Standard 6,8 ton/High heat 6 ton (Fig.23)></p> <ul style="list-style-type: none"> Remove the cover in order of top, front (upper), front (lower), and side. Screws for the compressor covers : M5 × 0.4" (10mm), 8 pcs * Screws for the base plate and the comp. cover : M5 × 0.4" (10mm), 4 pcs <p><Standard 12,14 ton/High heat 8,10 ton (Fig.24)></p> <ul style="list-style-type: none"> Remove the cover in order of top, front (upper), front (lower), and side. Screws for the compressor covers : M5 × 0.4" (10mm), 7 pcs * Screws for the base plate and the comp. cover : M5 × 0.4" (10mm), 5 pcs <p><Standard 10,16 ton (Fig.25)></p> <ul style="list-style-type: none"> Remove the cover in order of top, front (upper), front (lower), and side. Screws for the compressor covers : M5 × 0.4" (10mm), 7 pcs * Screws for the base plate and the comp. cover : M5 × 0.4" (10mm), 4 pcs * Use the ratchet tools with its length adjusted to detach <p>2) Disconnect the compressor lead, case heater, temperature sensor (TD, TK), pipe cover, and pipe fixing rubber, or move them away from parts to be brazed to prevent them from being fired while brazing.</p> <p>3) Remove the pipes connected to the compressor in the order of oil equalizer pipe, discharge pipe, suction pipe*.</p> <p>* If the suction pipe cannot be removed through brazing, cut it at the position shown in the figure, and use the repair parts below to install the pipe.</p> <p>4) Remove the compressor bolts and anti-vibration take the compressor out of the unit.</p>	<p><Standard 6,8 ton> <High heat 6 ton></p>  <p>Fig. 23</p> <p><Standard 12,14 ton> <High heat 8,10 ton></p>  <p>Fig. 24</p> <p><Standard 10,16 ton></p>  <p>Fig. 25</p>
		 <p>Fig. 26</p>  <p>Fig. 27</p>  <p>Fig. 28</p>  <p>Fig. 29</p>	

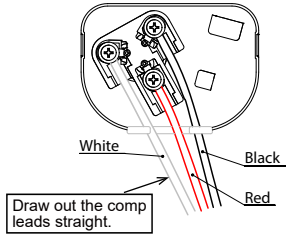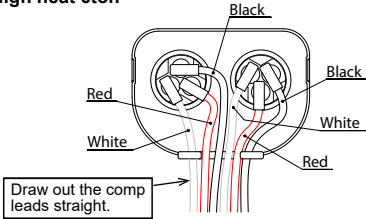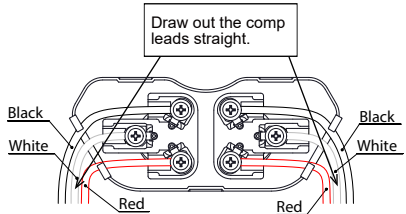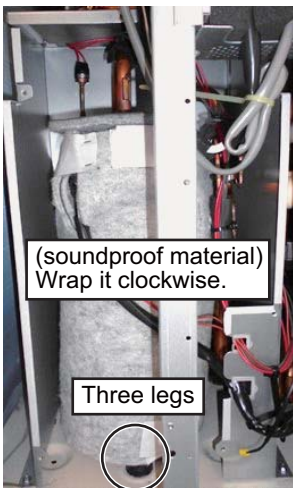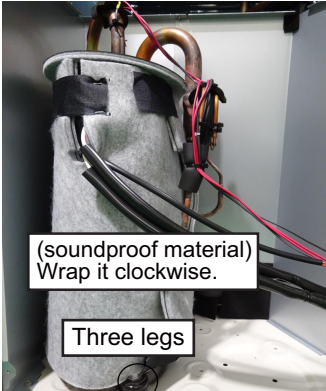No.	Part	Work procedure	Remarks
6	Compressor (continued)	<p>2. Attachment</p> <ol style="list-style-type: none"> 1) Carry out installation by following reverse procedure in the detachment 1) to 4). 2) Install the compressor and braze the pipes, and then install each wire around the compressor. (Comp.lead, Case heater, Temperature sensor (TD, TK)) Exchange a comp. leads together as replacing a compressors. <p>* The right fig. shows caution when the comp. leads are installed (For models with strap terminals screw fixation of comp. lead)).</p> <ul style="list-style-type: none"> • Incorporate the terminal block into the compressor. • Bend each terminal at 90° while holding the terminal block so that it does not tilt. • To prevent the screws from being slanted, place the comp. leads in the specified position as shown in the figure, and then tighten the screw according to the following steps. <ol style="list-style-type: none"> (1) Temporary tightening the screws by your hand. (2) Tighten the screws securely with an electric screwdriver. (3) Tighten them with the specified torque using a torque wrench driver. (1.8 ft•lbs (2.5N•m)) * Do not screw the screws slantingly. Otherwise, the comp. leads may burn. • Insert the comp. leads into the sealing material, and attach the terminal cover so that they do not pinch with the terminal cover, and then draw out the comp. leads straightly. • Do not apply excessive stress to the comp. leads. • Do not put the protective tubes in the terminal cover. • Note that the leads do not touch the comp. shell. <ol style="list-style-type: none"> 3) Wrap the soundproof material*1 around the compressor and install the compressor cover <p>*1 Wrap the soundproof material around the compressor so that its bottom is put on the legs of the compressor.</p> <p>*2 Install the compressor cover so that pipes or wires around the comp. do not deform or are caught with the cover.</p>	<p>460V models (6~16ton)</p>  <p>208-230V Standard 6~10ton High heat 6ton</p>  <p>208-230V Standard 12~14ton High heat 8, 10ton</p>  <p>When removing the comp lead, it is a good idea to mark which comp lead you removed it from.</p>
		<p><Standard 6,8 ton> <High heat 6 ton></p>  <p>Fig. 30</p>	
		<p><Standard 10 ton></p>  <p>Fig. 31</p>	
		<p><Standard 12,14 ton> <High heat 8,10 ton></p>  <p>Fig. 32</p>	
		<p><Standard 10,16 ton></p>  <p>Fig. 33</p>	




No.	Part	Work procedure	Remarks
7-1	4-way valve - detachment/attachment Standard 6,8 ton High heat 6 ton	<div data-bbox="347 176 1005 297"> <p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> </div> <div data-bbox="347 342 1005 768"> <p>1. Detachment</p> <p>1) Carry out work of No. 1 Cabinet and No.4 Inverter assembly.</p> <p>2) Disconnect wires around 4-way valve or move them away from parts to be brazed to prevent them from being fired while brazing.</p> <p>3) Cut the C,S and D pipes of the 4-way valve -1,2, and cut the E,S and D pipes of the 4-way valve -3, and then remove the 4-way valve.</p> <p>4) Remove the 4-way valve piping remaining in the outdoor unit (after cutting) and the Pinch pipe remaining on the 4-way valve by brazing.</p> </div> <div data-bbox="379 913 603 943"> <p>— Cutting position</p> </div> <div data-bbox="395 734 1401 2056"> <p>The diagram illustrates the 4-way valve assembly with various pipes and components. Key labels include:</p> <ul style="list-style-type: none"> 4-way valve -3 E,S,D (Cut): Points to the central valve body. 4-way valve -2 C,S,D (Cut): Points to the upper valve body. 4-way valve -1 C,S,D (Cut): Points to the lower valve body. E1,2,3 (Evaporator): Points to the top left pipe. S1,2,3 (Suction): Points to the top middle pipe. C1,2,3 (Condenser): Points to the top right pipe. D1,2,3 (Discharge): Points to the bottom pipe. E3, S3, C3, D3: Individual pipe labels for the left side. E2, S2, C2, D2: Individual pipe labels for the right side. E1, S1, C1, D1: Individual pipe labels for the top middle section. <p>Blue lines indicate the cutting positions for the pipes.</p> </div>	<div data-bbox="1061 230 1428 701"> <p>A 3D perspective view of the outdoor unit. A pink rectangular box highlights the 4-way valve assembly and its associated piping. A pink arrow points from this box towards the detailed 2D diagram in the Work procedure column.</p> </div>

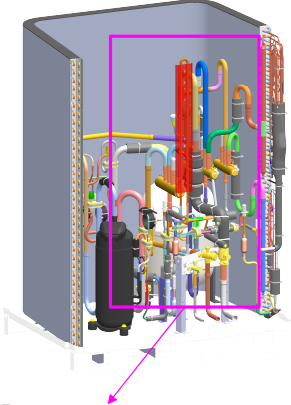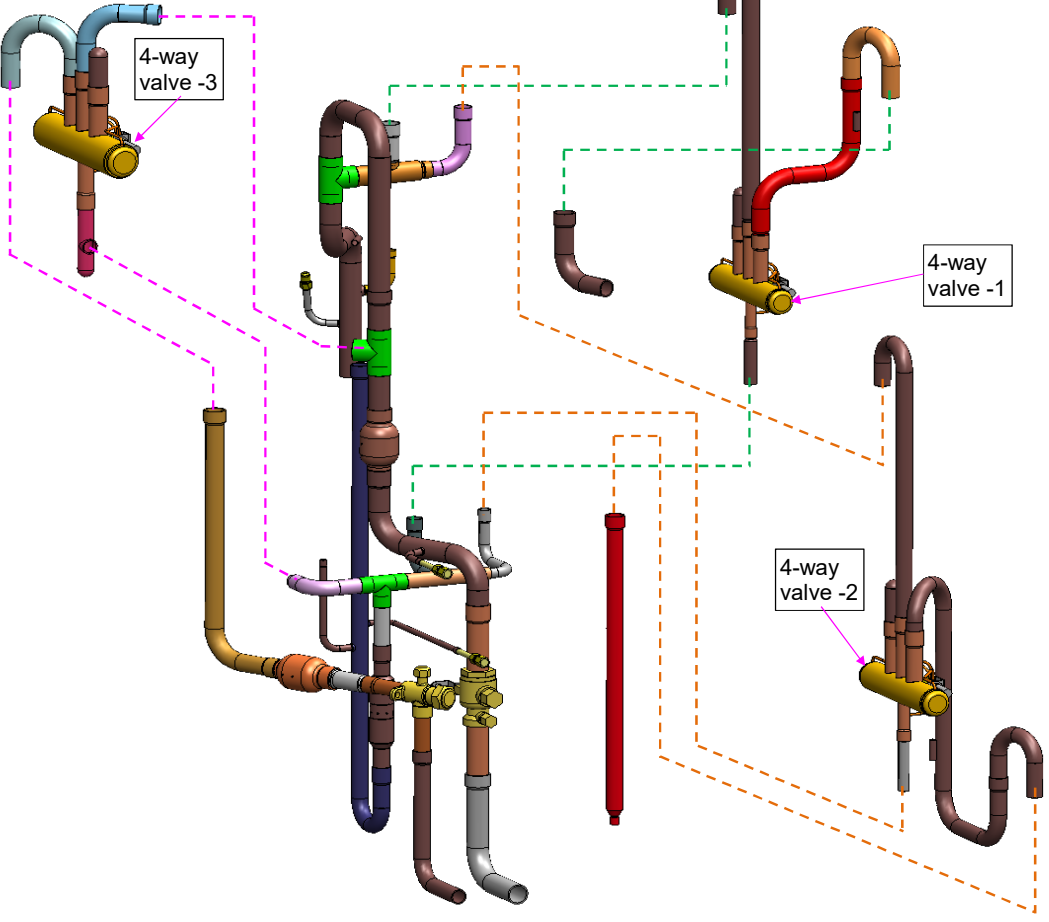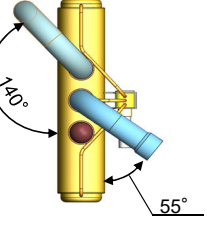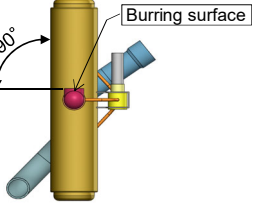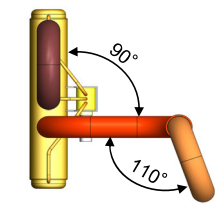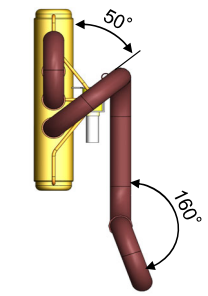No.	Part	Work procedure	Remarks
7-1	4-way valve - detachment/attachment (continued) Standard 6,8 ton High heat 6 ton	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p>	
		<p>2.Attachment</p> <p>1) Brazing the diverted piping connected to the top and bottom of the 4-way valves (service part).</p> <p>2) Attach each 4-way valve assembly in the outdoor unit. Then, connect the 3 places of each 4-way valve assembly with brazing.</p> <div data-bbox="379 712 1433 1630">  </div> <div data-bbox="379 1720 539 1776"> <p>4-way valve -3 (Top view)</p>  </div> <div data-bbox="651 1720 906 1776"> <p>4-way valve -3 (Bottom view)</p>  </div> <div data-bbox="930 1720 1090 1776"> <p>4-way valve -1 (Top view)</p>  </div> <div data-bbox="1233 1720 1393 1776"> <p>4-way valve -2 (Top view)</p>  </div>	

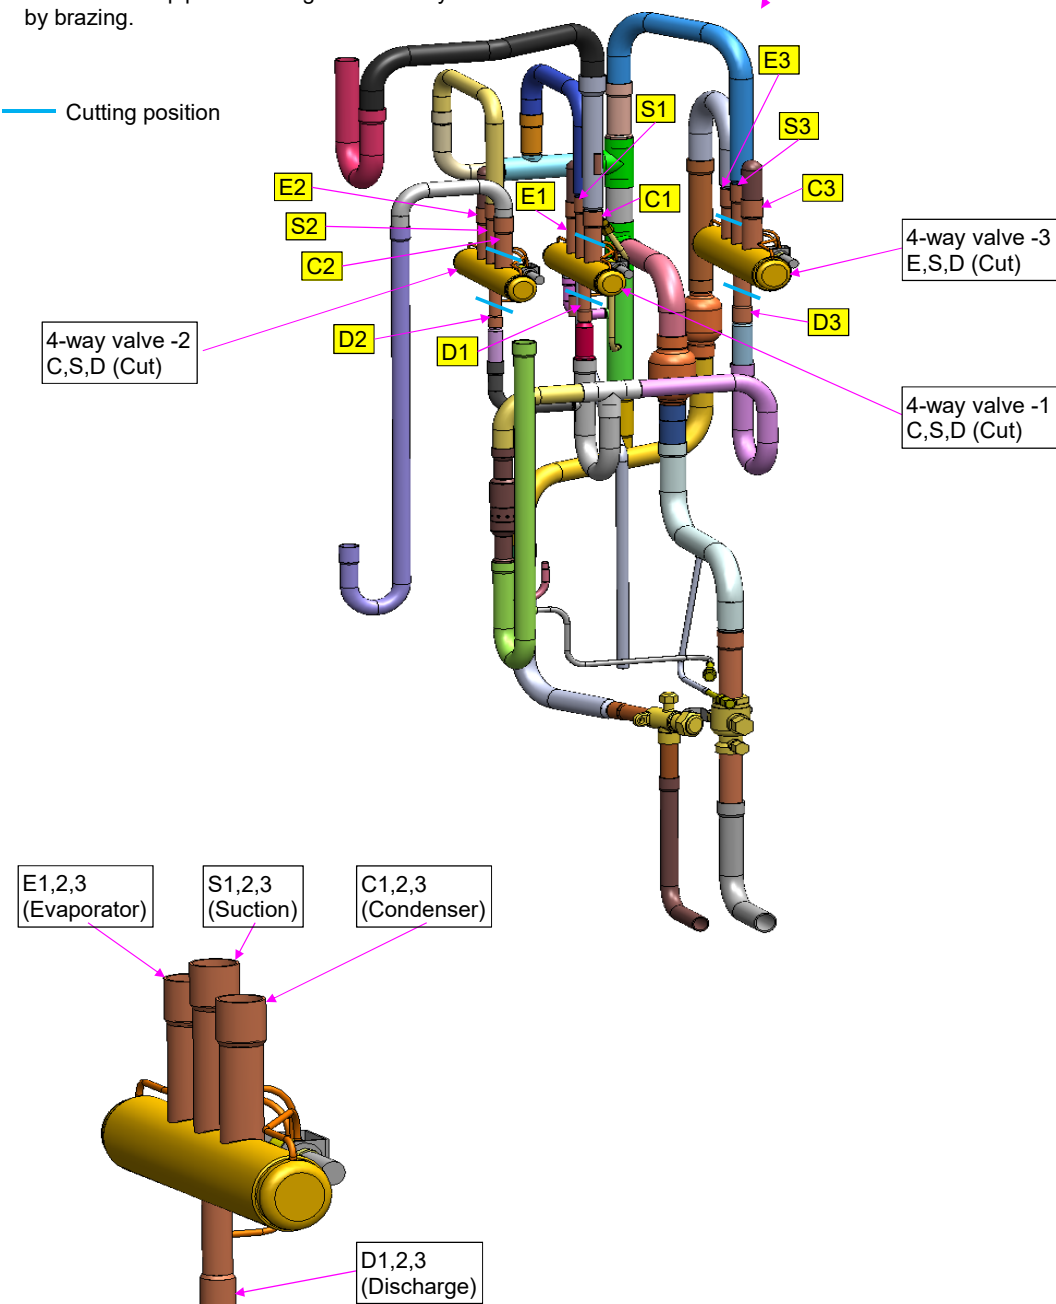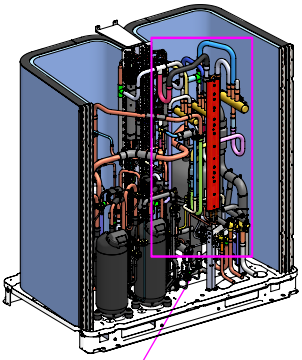No.	Part	Work procedure	Remarks
7-2	4-way valve - detachment/attachment Standard 10~16 ton High heat 8,10 ton	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <hr/> <p>1. Detachment</p> <p>1) Carry out work of No. 1 Cabinet and No.4 Inverter assembly.</p> <p>2) Disconnect wires around 4-way valve or move them away from parts to be brazed to prevent them from being fired while brazing.</p> <p>3) Cut the C,S and D pipes of the 4-way valve -1,2, and cut the E,S and D pipes of the 4-way valve -3, and then remove the 4-way valve.</p> <p>4) Remove the 4-way valve piping remaining in the outdoor unit (after cutting) and the Pinch pipe remaining on the 4-way valve by brazing.</p> <p>— Cutting position</p> 	

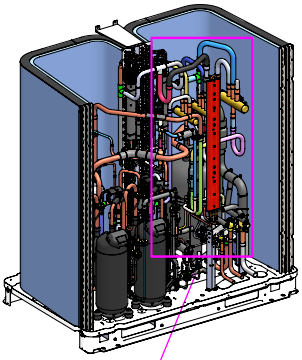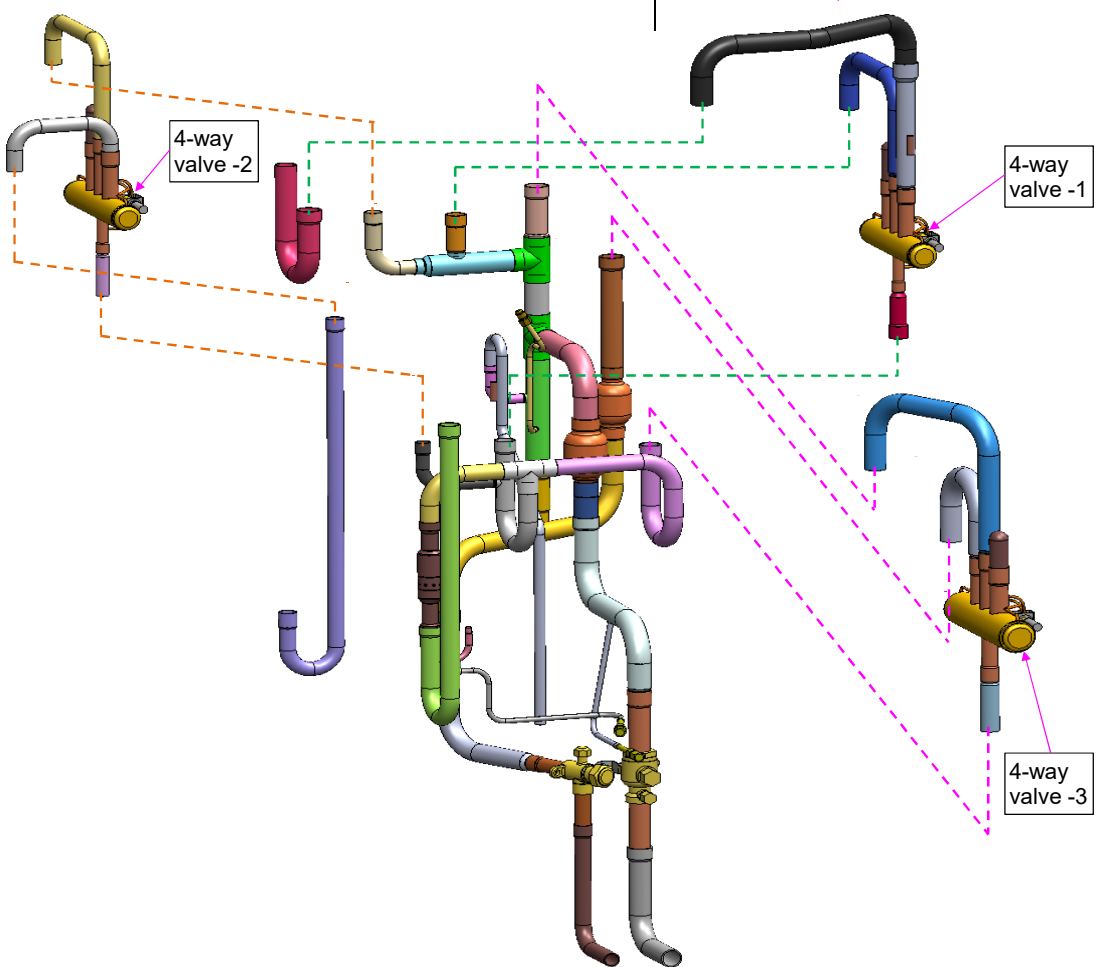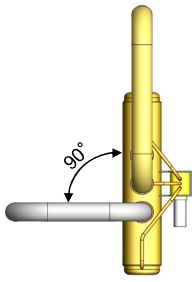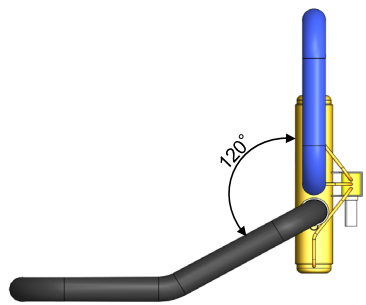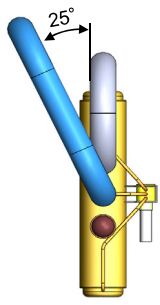No.	Part	Work procedure	Remarks
7-2	4-way valve - detachment/attachment (continued) Standard 10~16 ton High heat 8,10 ton	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p>2.Attachment</p> <p>1) Brazing the diverted piping connected to the top and bottom of the 4-way valves (service part).</p> <p>2) Attach each 4-way valve assembly in the outdoor unit. Then, connect the 3 places of each 4-way valve assembly with brazing.</p>	
		 <div data-bbox="438 1691 606 1758">4-way valve -2 (Top view)</div>  <div data-bbox="837 1691 1005 1758">4-way valve -1 (Top view)</div>  <div data-bbox="1204 1691 1372 1758">4-way valve -3 (Top view)</div> 	

No.	Part	Work procedure	Remarks
8-1	Accumulator-detachment/attachment Standard 6,8 ton High heat 6 ton	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p>1. Detachment</p> <p>1) Carry out work of No. 1 Cabinet and No.4 Inverter assembly.</p> <p>2) Disconnect the wire, pipe fixing rubber, and pipe cover near the pipe to be brazed to prevent burning during brazing.</p> <p>3) Braze and cut the pipes, then disconnect the HEATSINK and 4WV PIPE ASSEMBLY from the outdoor unit in sequence.</p> <p>4) Cut the accumulator Inlet pipe, PIPE-SUC, and braze the pipes of the SV2 inlet side, SV3F outlet side. *At this time, do not disconnect the SV3F inlet side piping! The oil in the tank will overflow!</p> <p>5) Detach the ACCUMULATOR ASSEMBLY from the outdoor unit, and remove the oil in the tank.</p> <p>6) Disconnect the pipes of the SV2 outlet side, SV3F inlet side with brazing.</p> <p>— Cutting position — Brazing position</p> <p>3) Cutting Header pipe 3) Cutting 4WAY-E pipe 3) Cutting Header pipe 3) Brazing HEATSINK 3) Brazing Subcool HE pipe 4) Brazing SV3F pipe (outlet side) 4) Brazing SV2 pipe (inlet side) 3) Cutting V-GAS pipe 3) Brazing 4WAY-D pipe</p> <p>HEATSINK to be removed at 3)</p> <p>4WV PIPE ASSEMBLY to be removed at 3)</p> <p>4) Cutting PIPE-SUC</p> <p>6) Brazing SV2 pipe (outlet side)</p> <p>ACCUMULATOR ASSEMBLY to be removed at 5)</p> <p>4) Cutting Inlet pipe</p> <p>6) Brazing SV3F pipe (inlet side)</p>	
		<p>2. Attachment</p> <p>Attach the SV2 outlet side, SV3F inlet side pipes to the ACCUMULATOR ASSEMBLY(service parts) and braze them.</p> <p>After that, install in the reverse order of 1. Detachment1) to 6).</p>	

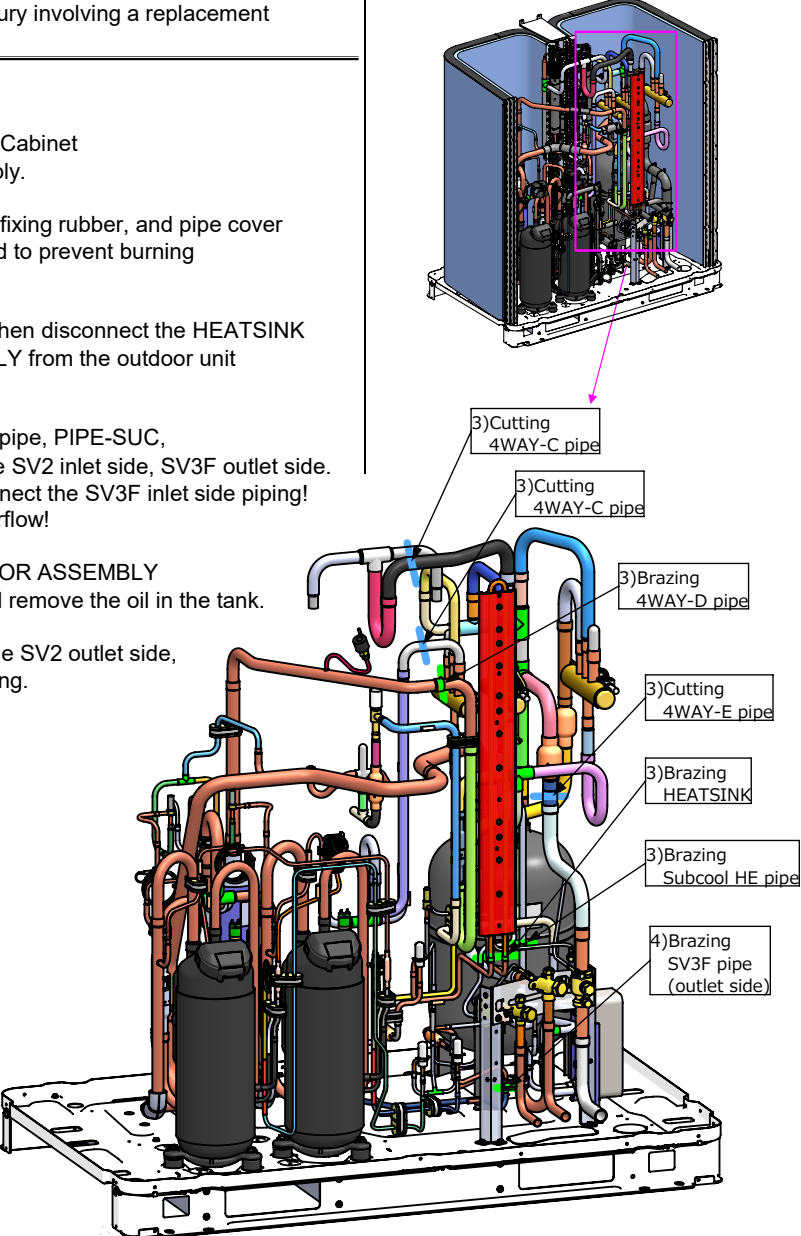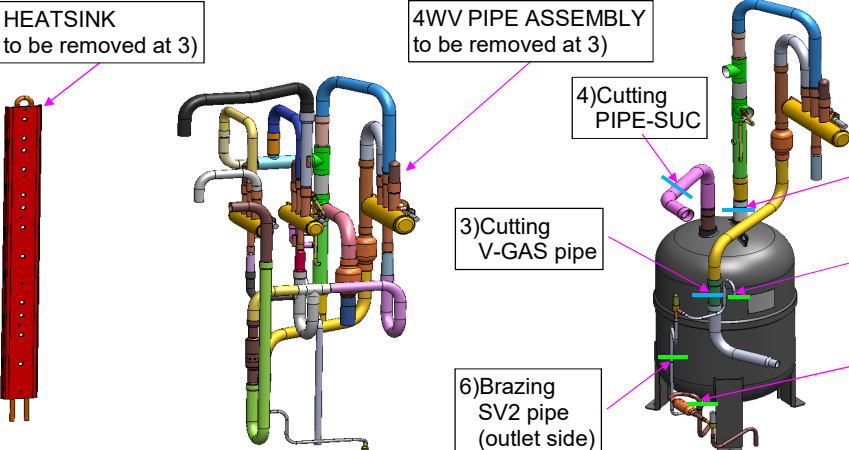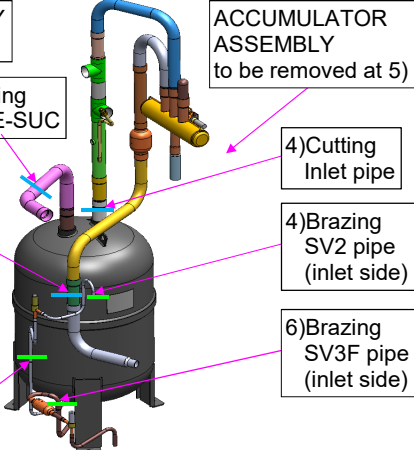No.	Part	Work procedure	Remarks
8-2	Accumulator-detachment/attachment Standard 10~16 ton	<p>⚠ WARNING</p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p>	
	High heat 8,10 ton	<p>1. Detachment</p> <p>1) Carry out work of No. 1 Cabinet and No.4 Inverter assembly.</p> <p>2) Disconnect the wire, pipe fixing rubber, and pipe cover near the pipe to be brazed to prevent burning during brazing.</p> <p>3) Braze and cut the pipes, then disconnect the HEATSINK and 4WV PIPE ASSEMBLY from the outdoor unit in sequence.</p> <p>4) Cut the accumulator Inlet pipe, PIPE-SUC, and braze the pipes of the SV2 inlet side, SV3F outlet side. *At this time, do not disconnect the SV3F inlet side piping! The oil in the tank will overflow!</p> <p>5) Detach the ACCUMULATOR ASSEMBLY from the outdoor unit, and remove the oil in the tank.</p> <p>6) Disconnect the pipes of the SV2 outlet side, SV3F inlet side with brazing.</p>   	
		<p>2. Attachment</p> <p>Attach the SV2 outlet side, SV3F inlet side pipes to the ACCUMULATOR ASSEMBLY(service parts) and braze them. After that, install in the reverse order of 1. Detachment(1) to 6).</p>	

13. P.C. BOARD REPLACEMENT PROCEDURES

13-1. Replacement of outdoor P.C. board & Inverter Parts

13-1-1. List of service parts (Inverter)

Parts code	Description	Applicable model	Parts	Product code	Specifications
43T60440	Power supply terminal block	MMY-MUP0721FT6* MMY-MUP0961FT6* MMY-MUP072H1FT6*	—	TERMINAL (100A)	AC600V/100A, 3P
43TN9878	Noise Filter P.C. board (1)		MCC-1749	S-ASM-PCB (N/F)	—
43T55397	Line filter		—	LINE-FILTER	0.9mH/AC460V/50A
43TNV345	Interface P.C. board		MCC-1747	S-ASM-PCB (I/F)	—
43TN9880	Inverter P.C. board for Compressor (1)		MCC-1729	S-ASM-PCB (COMP)	50A
43T6W894	Inverter P.C. board for Fan (1)		MCC-1734	S-ASM-PCB (FAN)	—
43T52321	Magnet Contactor		FC-1SUL	MAG-CONTACTOR	—
43T50345	PTC Thermistor		MZ32-101R	THERMISTOR (PTC)	13A/AC500V

Parts code	Description	Applicable model	Parts	Product code	Specifications
43T60440	Power supply terminal block	MMY-MUP1201FT6*	—	TERMINAL (100A)	AC600V/100A, 3P
43TN9878	Noise Filter P.C. board (1)		MCC-1749	S-ASM-PCB (N/F)	—
43T55397	Line filter		—	LINE-FILTER	0.9mH/AC460V/50A
43TNV345	Interface P.C. board		MCC-1747	S-ASM-PCB (I/F)	—
43TN9880	Inverter P.C. board for Compressor (1)		MCC-1729	S-ASM-PCB (COMP)	50A
43T6W894	Inverter P.C. board for Fan (1)		MCC-1734	S-ASM-PCB (FAN)	—
43T52321	Magnet Contactor		FC-1SUL	MAG-CONTACTOR	—
43T50345	PTC Thermistor		MZ32-101R	THERMISTOR (PTC)	13A/AC500V

Parts code	Description	Applicable model	Parts	Product code	Specifications
43T60440	Power supply terminal block	MMY-MUP1441FT6* MMY-MUP1681FT6* MMY-MUP096H1FT6* MMY-MUP120H1FT6*	—	TERMINAL (100A)	AC600V/100A, 3P
43TN9878	Noise Filter P.C. board (1)		MCC-1749	S-ASM-PCB (N/F)	—
43T55397	Line filter		—	LINE-FILTER	0.9mH/AC460V/50A
43TNV345	Interface P.C. board		MCC-1747	S-ASM-PCB (I/F)	—
43TN9881	Inverter P.C. board for Compressor (2)		MCC-1729	S-ASM-PCB (COMP)	75A
43T6W894	Inverter P.C. board for Fan (1)		MCC-1734	S-ASM-PCB (FAN)	—
43T52321	Magnet Contactor		FC-1SUL	MAG-CONTACTOR	—
43T50345	PTC Thermistor		MZ32-101R	THERMISTOR (PTC)	13A/AC500V

Parts code	Description	Applicable model	Parts	Product code	Specifications
43T60440	Power supply terminal block	MMY-MUP1921FT6*	—	TERMINAL (100A)	AC600V/100A, 3P
43TN9878	Noise Filter P.C. board (1)		MCC-1749	S-ASM-PCB (N/F)	—
43T55397	Line filter		—	LINE-FILTER	0.9mH/AC460V/50A
43TNV345	Interface P.C. board		MCC-1747	S-ASM-PCB (I/F)	—
43TN9880	Inverter P.C. board for Compressor (1)		MCC-1729	S-ASM-PCB (COMP)	50A
43T6W894	Inverter P.C. board for Fan (1)		MCC-1734	S-ASM-PCB (FAN)	—
43T52321	Magnet Contactor		FC-1SUL	MAG-CONTACTOR	—
43T50345	PTC Thermistor		MZ32-101R	THERMISTOR (PTC)	13A/AC500V


Parts code	Description	Applicable model	Parts	Product code	Specifications
43T60440	Power supply terminal block	MMY-MUP0721FT9* MMY-MUP0961FT9* MMY-MUP072H1FT9*	—	TERMINAL (100A)	AC600V/100A, 3P
43TN9876	Noise Filter P.C. board (2)		MCC-1749	S-ASM-PCB (N/F)	—
43T55396	Line filter		—	LINE-FILTER	0.4mH/AC450V/50A
43TNV345	Interface P.C. board		MCC-1747	S-ASM-PCB (I/F)	—
43TN9883	Inverter P.C. board for Compressor (3)		MCC-1746	S-ASM-PCB (COMP)	50A
43TN9885	Capacitor P.C. board (1)		MCC-1711	S-ASM-PCB (CAPA)	—
43TN9882	Inverter P.C. board for Fan (2)		MCC-1734	S-ASM-PCB (FAN)	—
43T31301	DIODE		DF60LB80	DIODE	60A/800V
43T52322	Magnet Contactor		FC-2SUL	MAG-CONTACTOR	—
43T50345	PTC Thermistor		MZ32-101R	THERMISTOR (PTC)	13A/AC500V


Parts code	Description	Applicable model	Parts	Product code	Specifications
43T60440	Power supply terminal block	MMY-MUP1201FT9*	—	TERMINAL (100A)	AC600V/100A, 3P
43TN9877	Noise Filter P.C. board (3)		MCC-1749	S-ASM-PCB (N/F)	—
43T55397	Line filter		—	LINE-FILTER	0.9mH/AC460V/50A
43TNV345	Interface P.C. board		MCC-1747	S-ASM-PCB (I/F)	—
43TN9883	Inverter P.C. board for Compressor (3)		MCC-1746	S-ASM-PCB (COMP)	50A
43TN9885	Capacitor P.C. board (1)		MCC-1711	S-ASM-PCB (CAPA)	—
43TN9882	Inverter P.C. board for Fan (2)		MCC-1734	S-ASM-PCB (FAN)	—
43T31301	DIODE		DF60LB80	DIODE	60A/800V
43T52321	Magnet Contactor		FC-1SUL	MAG-CONTACTOR	—
43T50345	PTC Thermistor		MZ32-101R	THERMISTOR (PTC)	13A/AC500V

Parts code	Description	Applicable model	Parts	Product code	Specifications
43T60440	Power supply terminal block	MMY-MUP1441FT9* MMY-MUP1681FT9* MMY-MUP096H1FT9* MMY-MUP120H1FT9*	—	TERMINAL (100A)	AC600V/100A, 3P
43TN9877	Noise Filter P.C. board (3)		MCC-1749	S-ASM-PCB (N/F)	—
43T55397	Line filter		—	LINE-FILTER	0.9mH/AC460V/50A
43TNV345	Interface P.C. board		MCC-1747	S-ASM-PCB (I/F)	—
43TN9884	Inverter P.C. board for Compressor (4)		MCC-1746	S-ASM-PCB (COMP)	75A
43TN9886	Capacitor P.C. board (2)		MCC-1711	S-ASM-PCB (CAPA)	—
43TN9882	Inverter P.C. board for Fan (2)		MCC-1734	S-ASM-PCB (FAN)	—
43T31302	DIODE		DF100LA80	DIODE	100A/800V
43T52321	Magnet Contactor		FC-1SUL	MAG-CONTACTOR	—
43T50345	PTC Thermistor		MZ32-101R	THERMISTOR (PTC)	13A/AC500V


13-1-2. Configuration of inverter assembly

MMY-MUP0721FT6*
MMY-MUP0961FT6*
MMY-MUP072H1FT6*

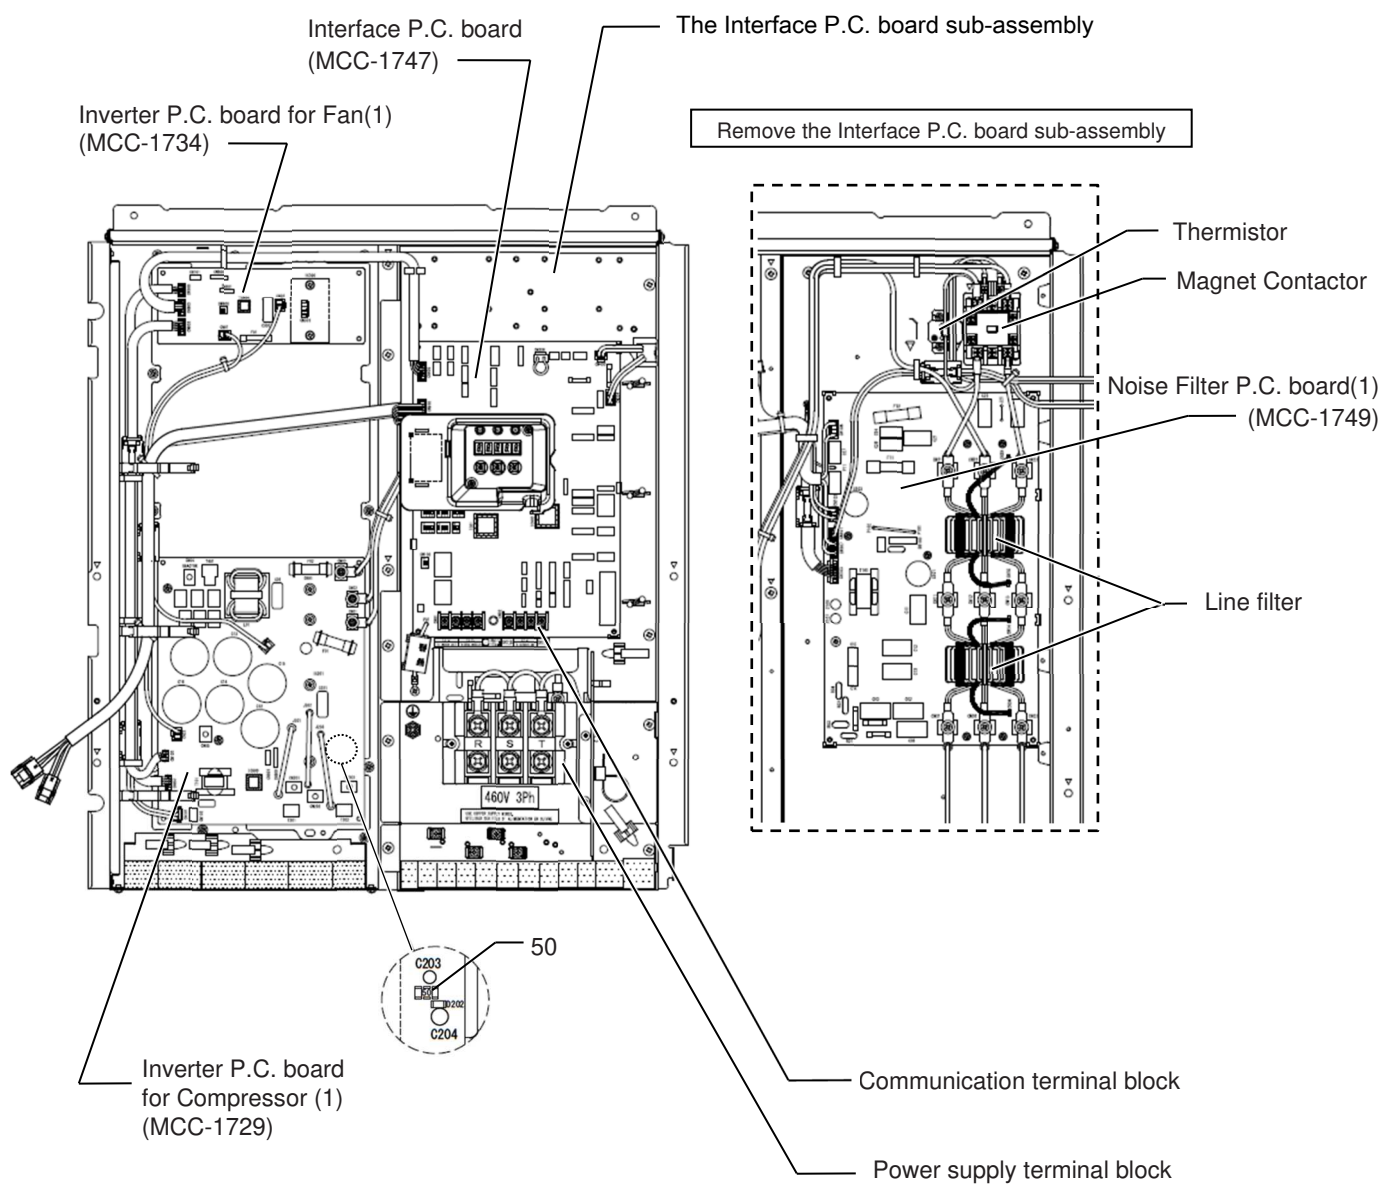


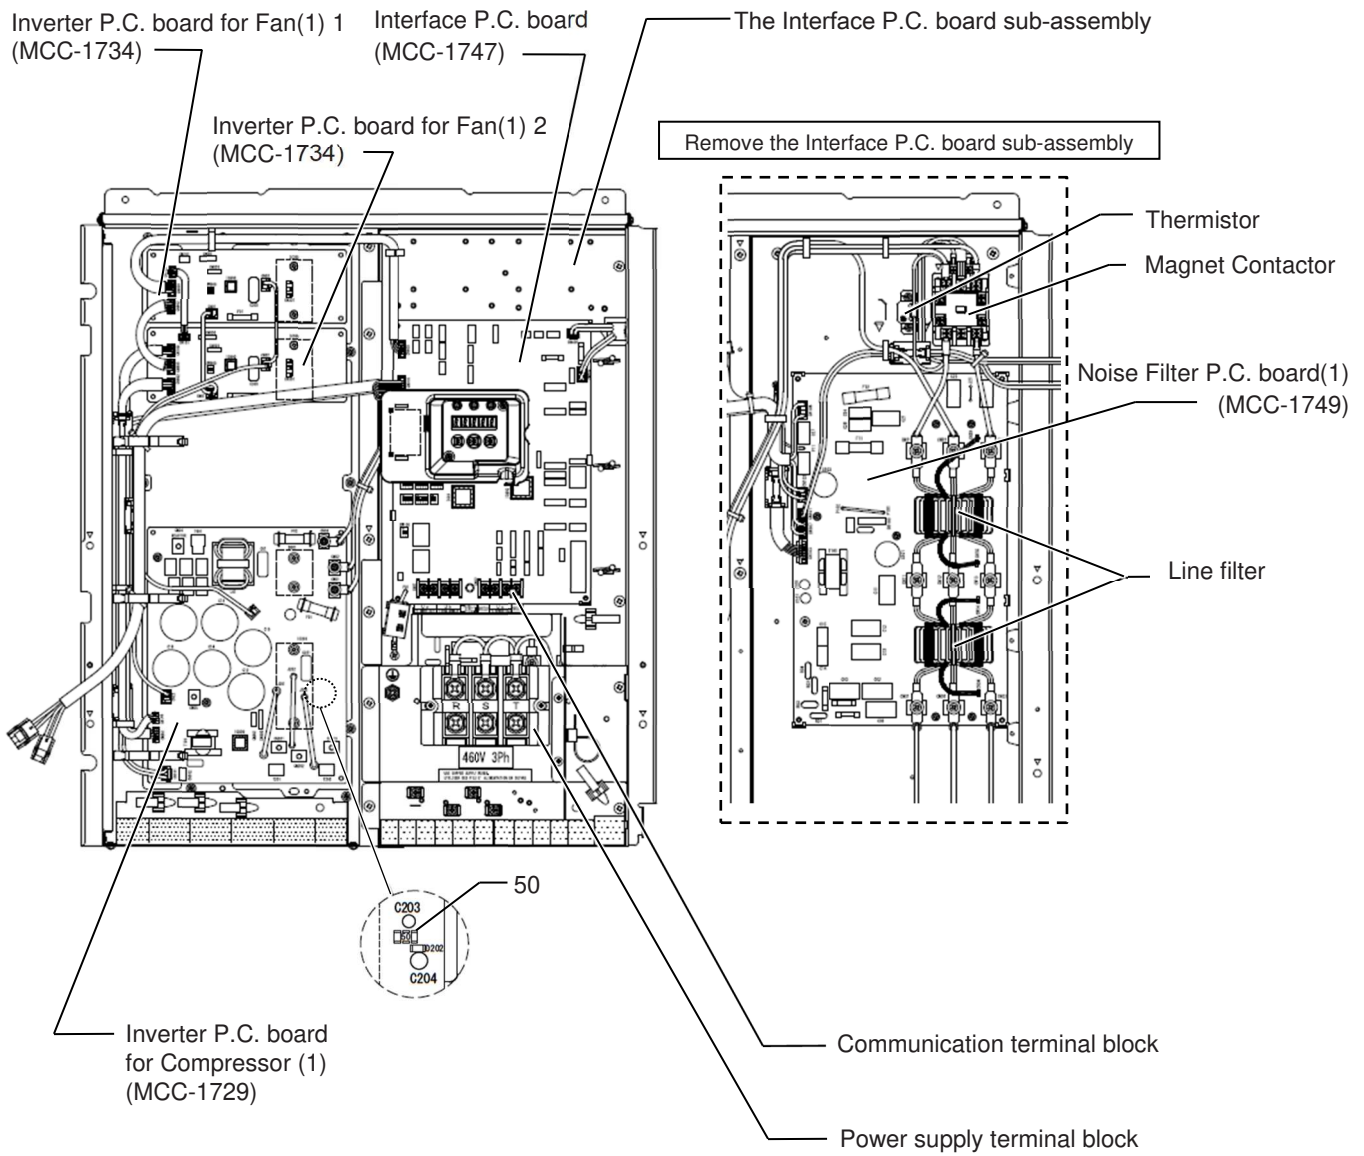


MMY-MUP1441FT6*
 MMY-MUP1681FT6*
 MMY-MUP096H1FT6*
 MMY-MUP120H1FT6*

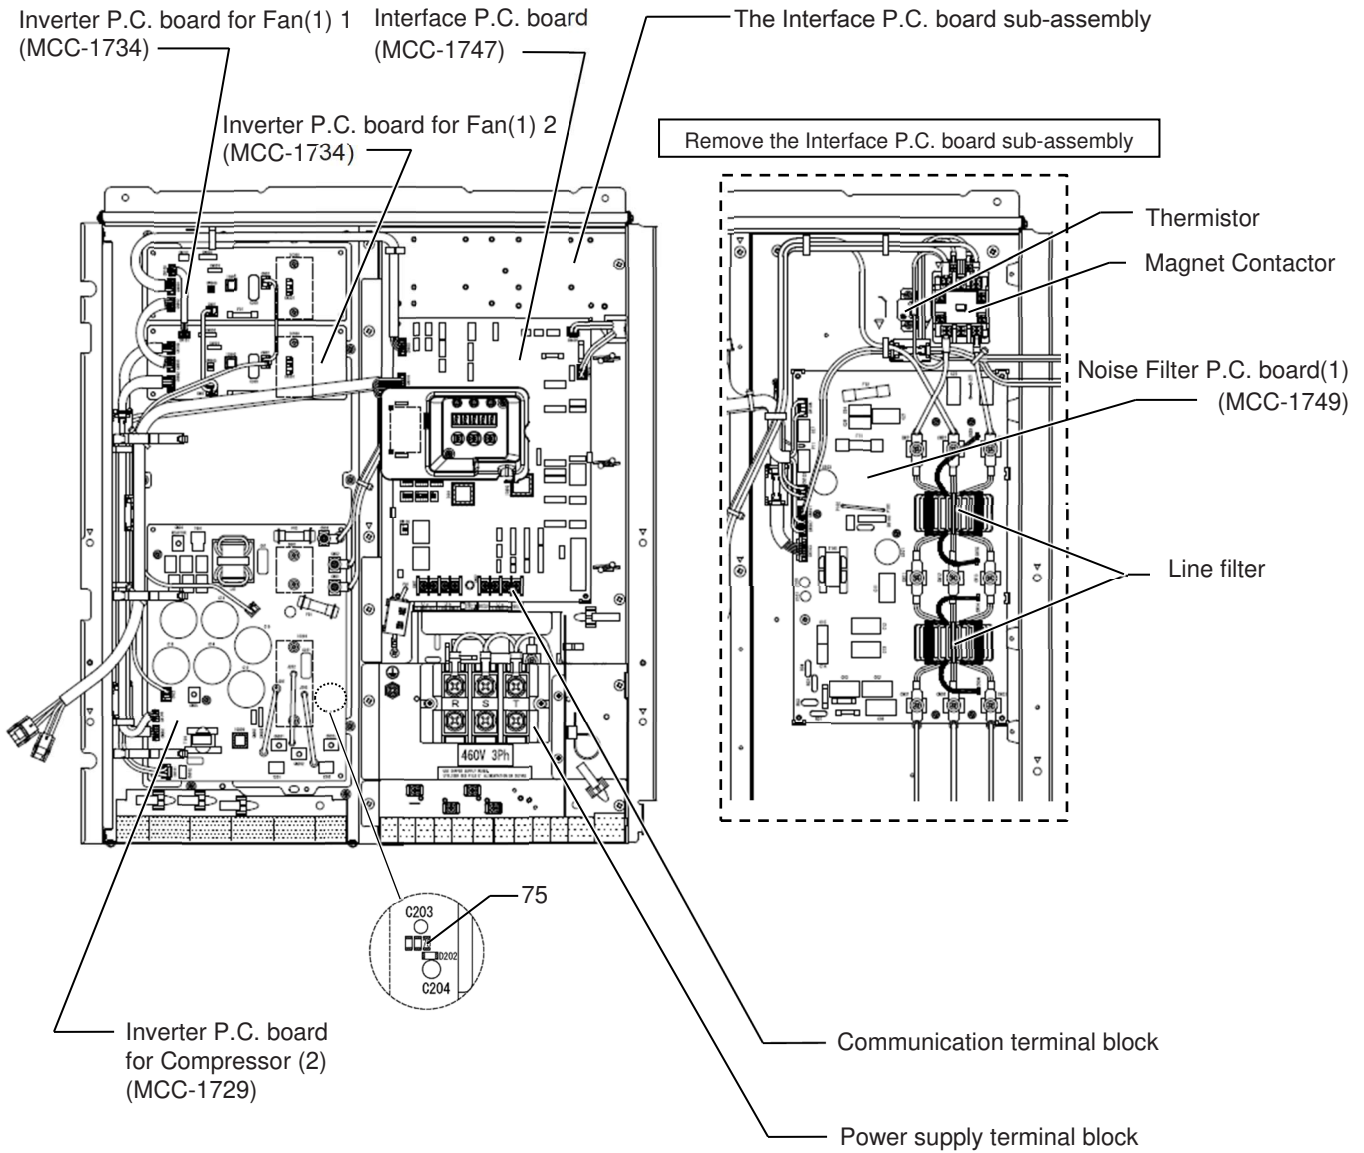


MMY-MUP1921FT6*

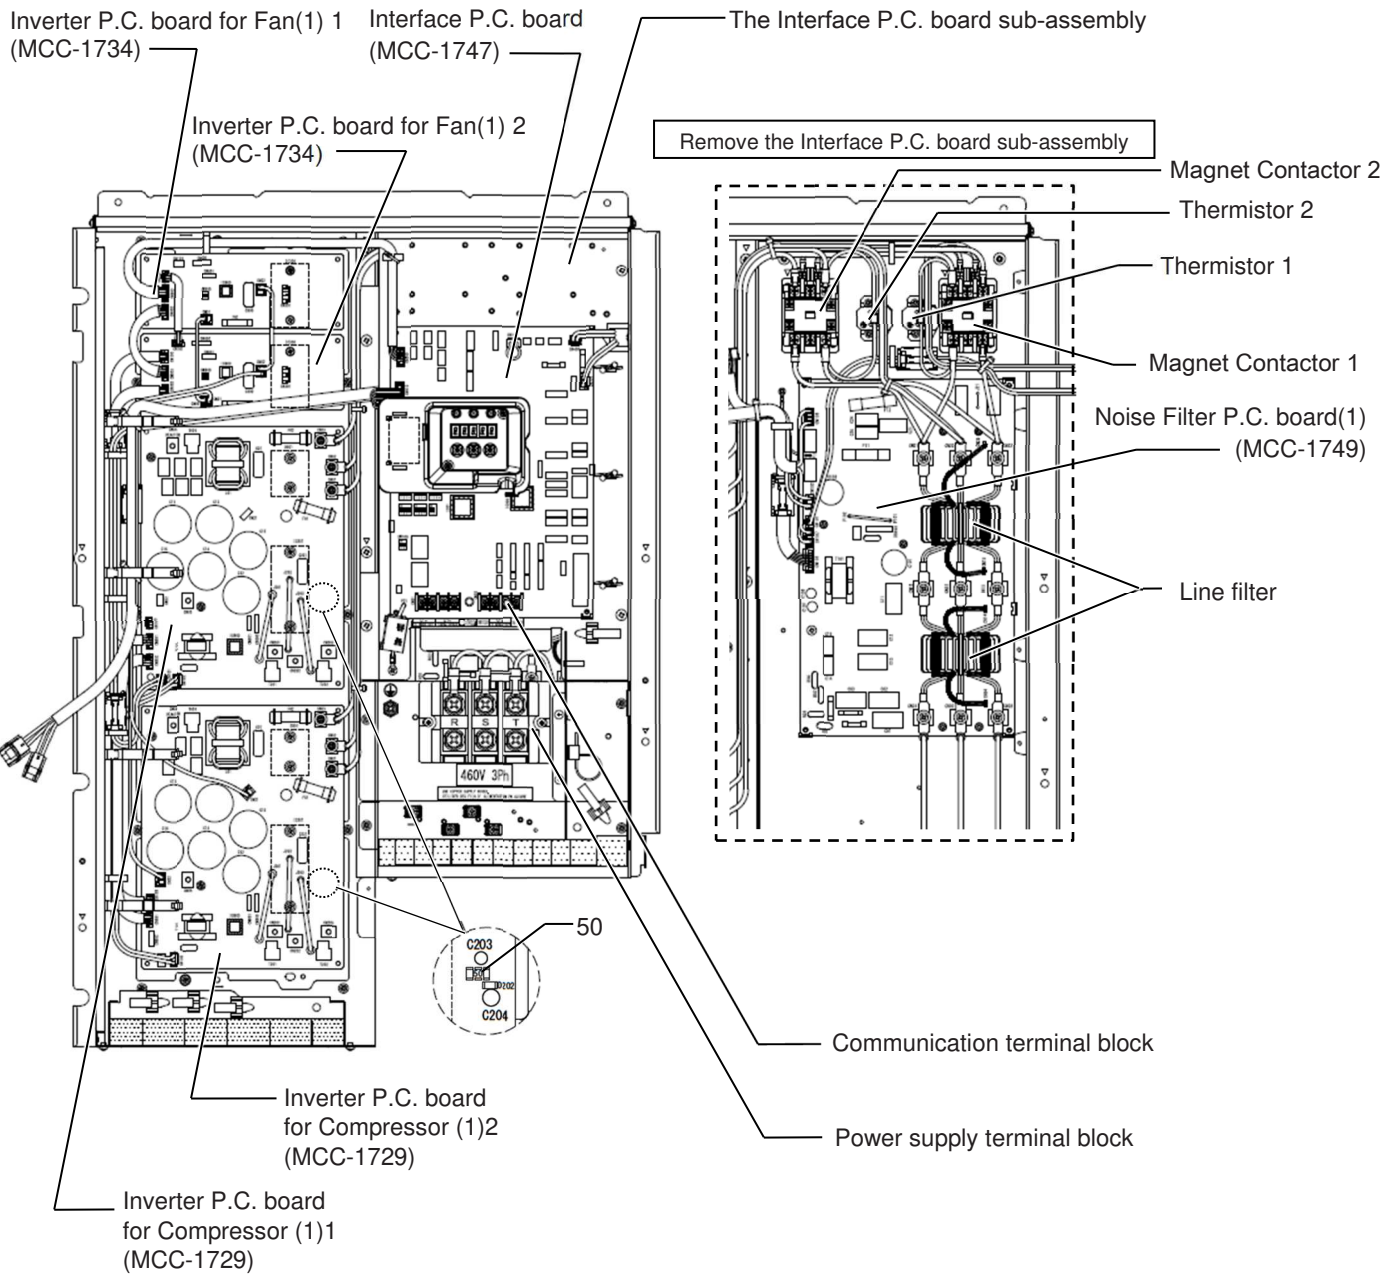


MMY-MUP0721FT9*
MMY-MUP0961FT9*
MMY-MUP072H1FT9*

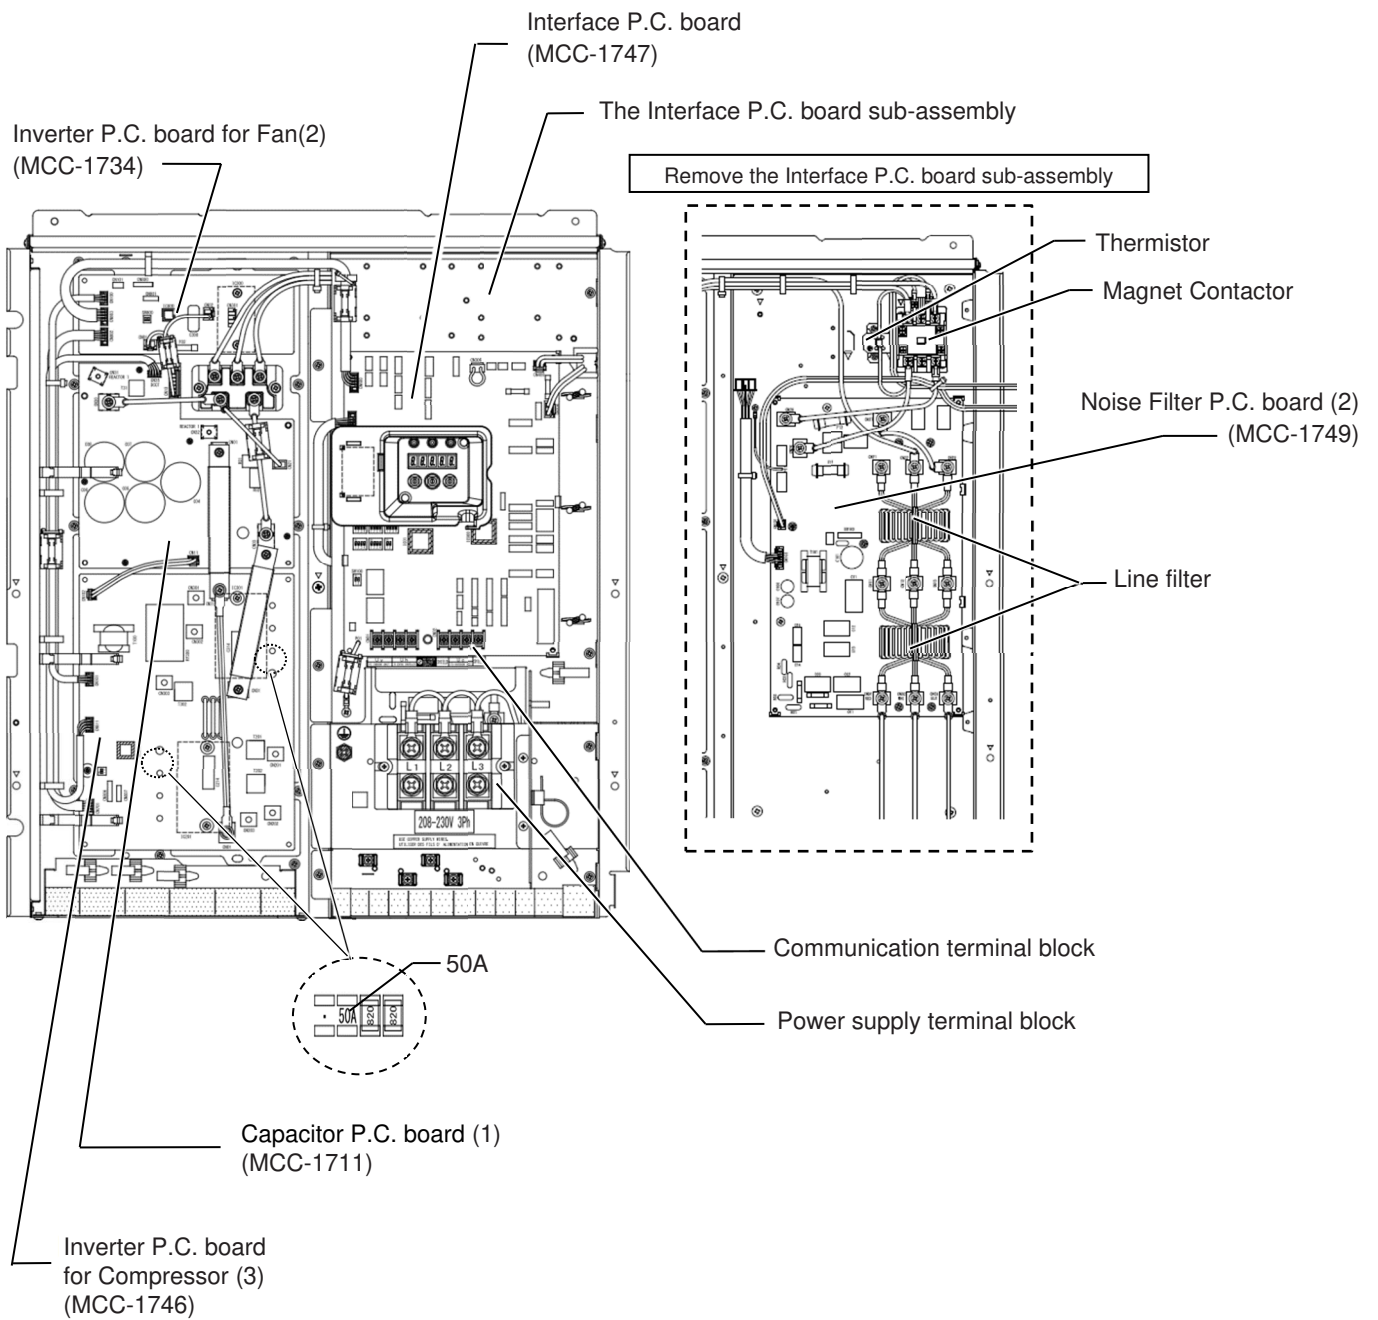

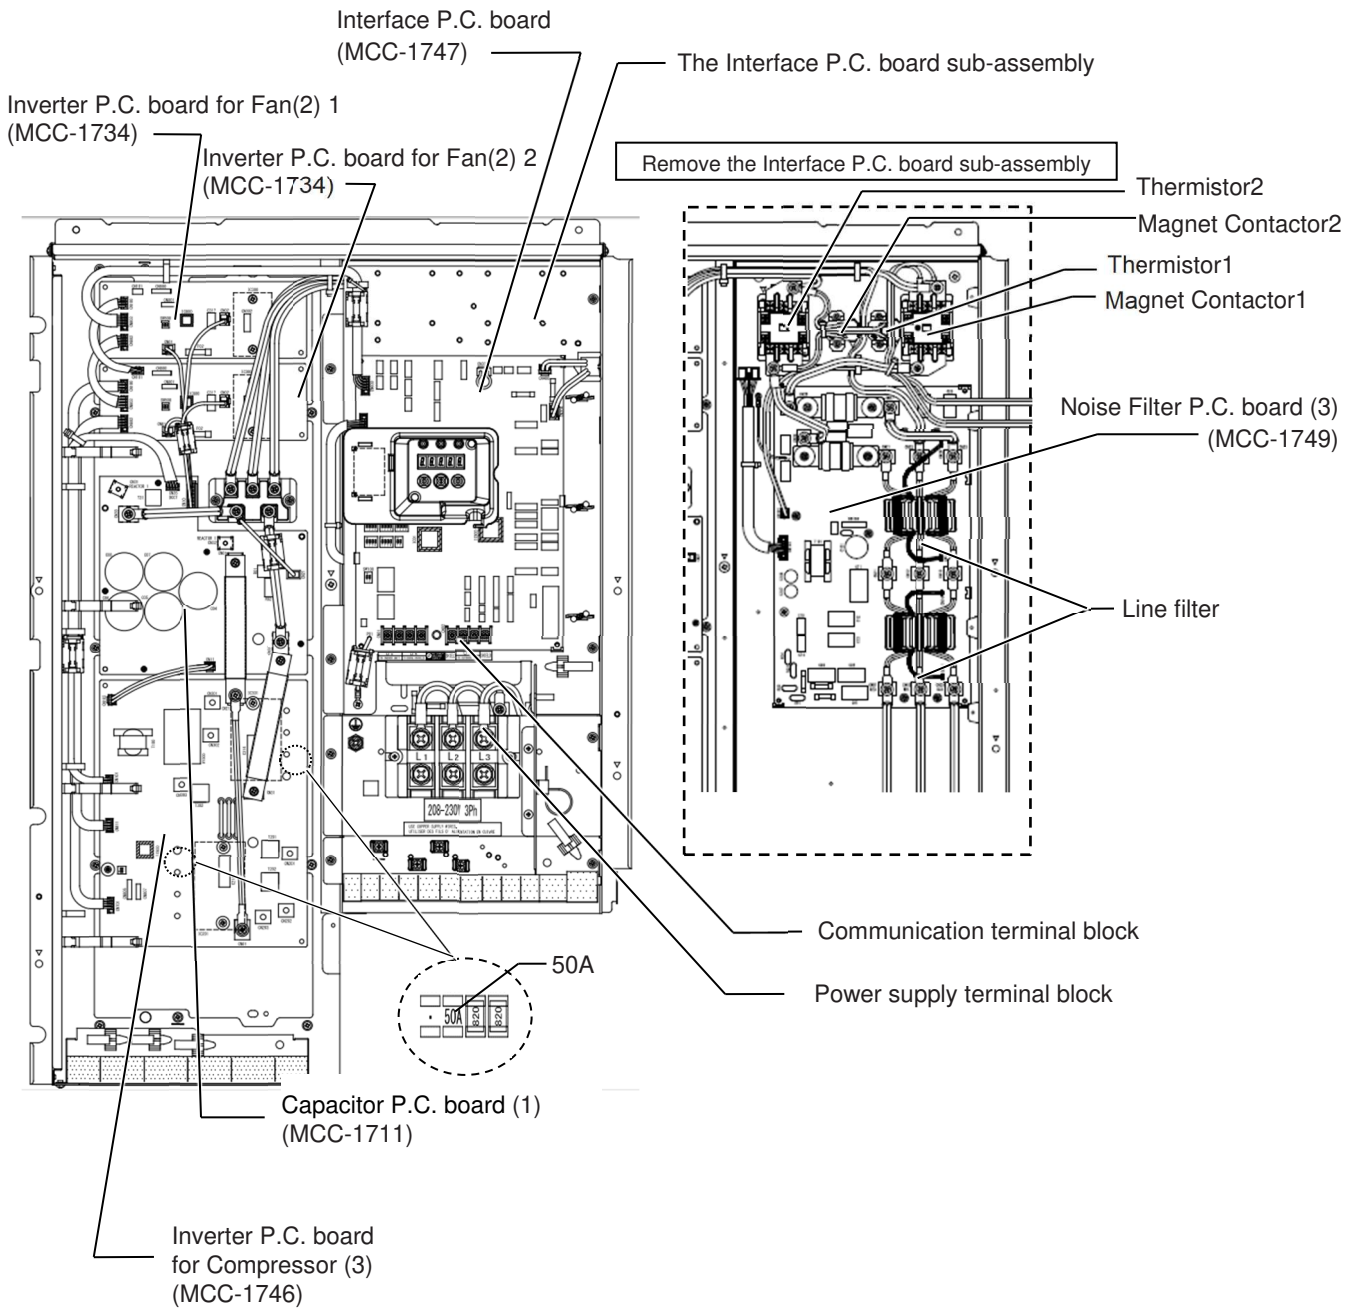

MMY-MUP1441FT9*
 MMY-MUP1681FT9*
 MMY-MUP096H1FT9*
 MMY-MUP120H1FT9*

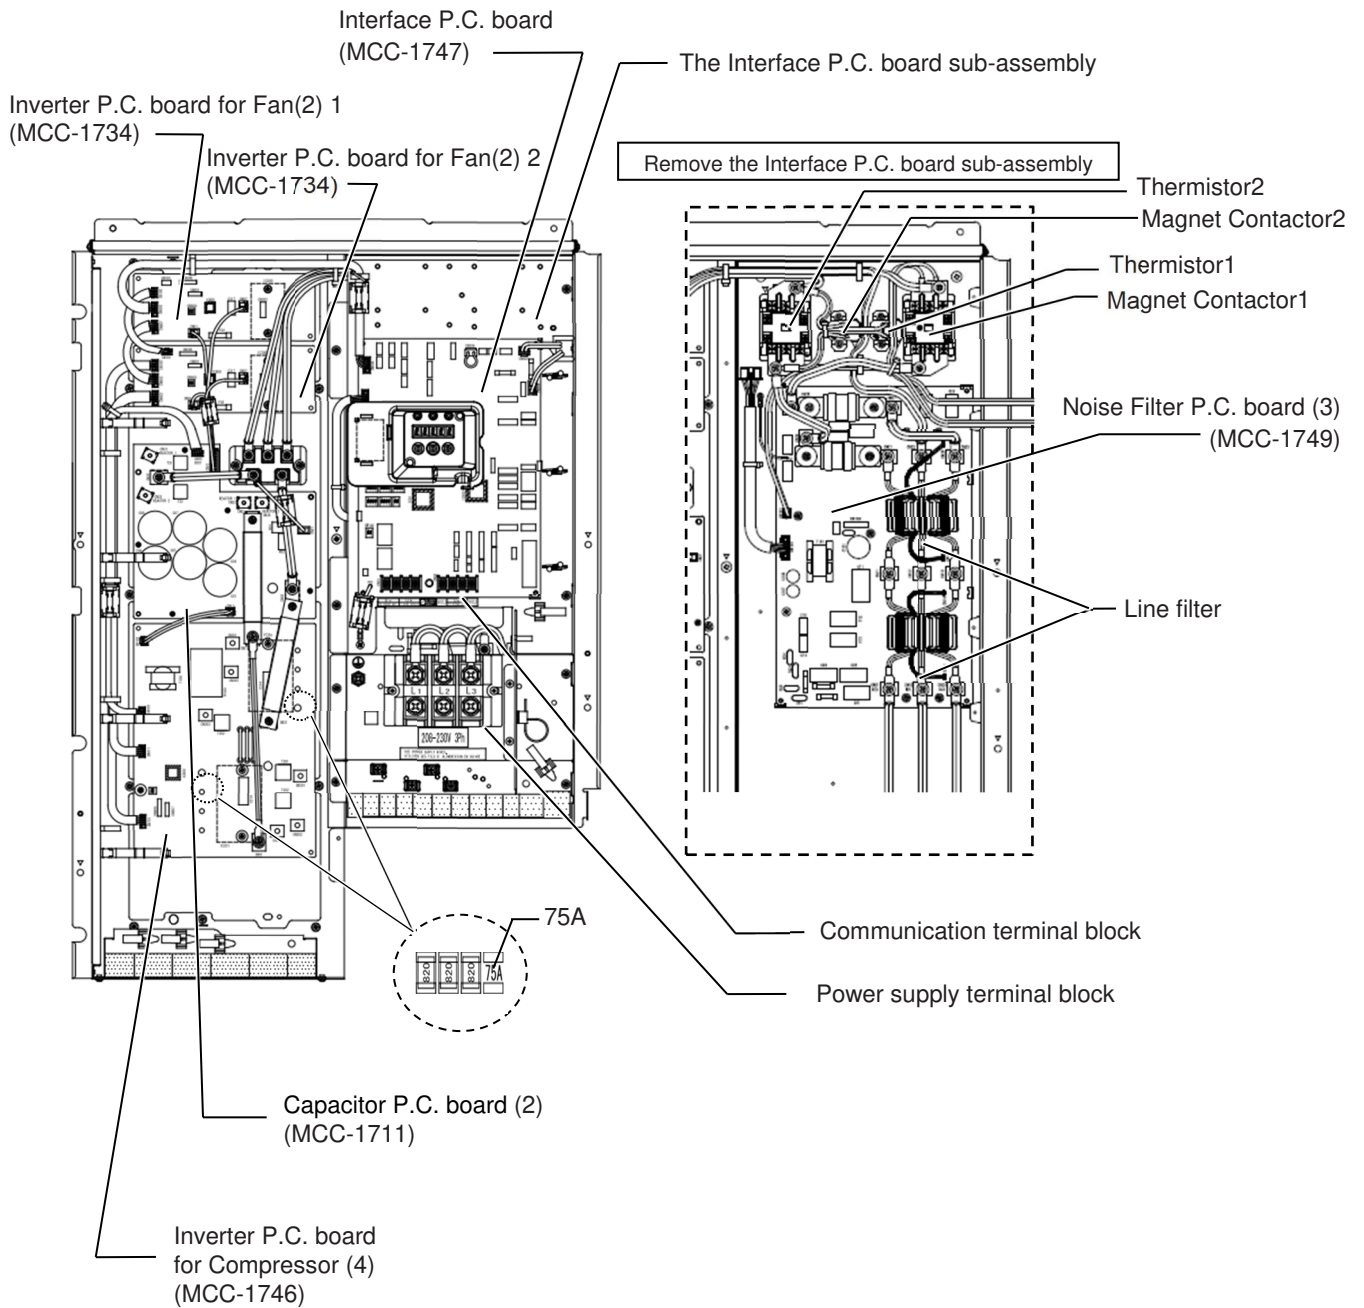

13-1-3. Interface P.C. Board (MCC-1747) Replacement Procedure

Target model 43TNV345: ALL models

This Interface service P.C. board is commonly installed in different models. After replacing the service board, Please change the model.


Included items:

① MCC-1747 : 1pcs

② Spacer : 4pcs

③ Spacer : 2pcs


④ Support : 1pcs

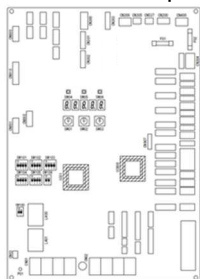


⑤ Bush : 3pcs



⑥ Short Connector : 1pcs




⑦ Clamp filter : 1pcs




Replacement steps:

- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connectors and wiring for screw terminals(⑧) which were connected to the interface P.C. board. (Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove 3 screws(⑨:2pcs, ⑩:1pcs).
(These screws are to be re-used after procedure.)
- (4) Remove the P.C. board from the 6 spacers
(②:4pcs, ③:2pcs)
- (5) Set the DIP switch settings of the service board to match as before replacement.

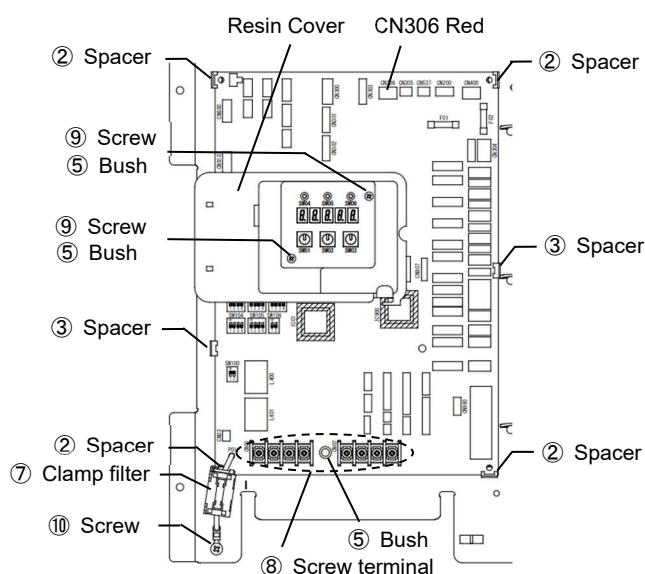

Interface P.C.Board (43TNV345)

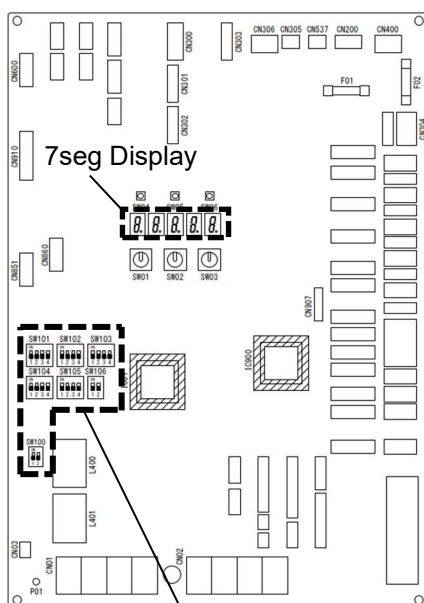

DIP Switch

- (6) Use new spacers(②, ③), a supporter(④) if they are broken.
- (7) Using new bushes(⑤), attach the service board.
- (8) Re-connect the connectors and resin cover, screws(⑨, ⑩), screw terminals(⑧). Be sure that all the connectors and the screw terminals are connected correctly and securely inserted.

The torque of the screws


⑧	Screw terminal	M4 × 10	0.89 ft•lbs (1.2 N•m)
⑨	Screw	M3 × 25	0.44 ft•lbs (0.6 N•m)
⑩	Screw	M4 × 8	0.89 ft•lbs (1.2 N•m)

- (9) Attach a new clamp filter(⑦) to the lead as in the above figure.
And fix it with the lead using a cable tie.
(The cable tie is included in the package of clamp filter(⑦).)
- (10) The product with HP-SW2 should connect HP-SW2 to CN306.
The product without HP-SW2 should connect a short connector(⑥) to CN306.
Caution: Please do not use a short connector(⑥) for a product with HP-SW2. The protection circuit does not operate.
- (11) If a component on the P.C. board is bent during board replacement, adjust it manually ensuring that it is not short or contact other parts.
- (12) Install the cover, then turn on the power supply.


(13) "L10: Outdoor capacity not set" check code is displayed on the 7-segment display.

Perform a model change by the following flow.

By completing this procedure, it is restored to the state before a model setup and a setup of the outdoor DN code (O.DN) exchanging. (The data of the model setup and the outdoor DN code (O.DN) is automatically backed up by the inverter P.C. board.)

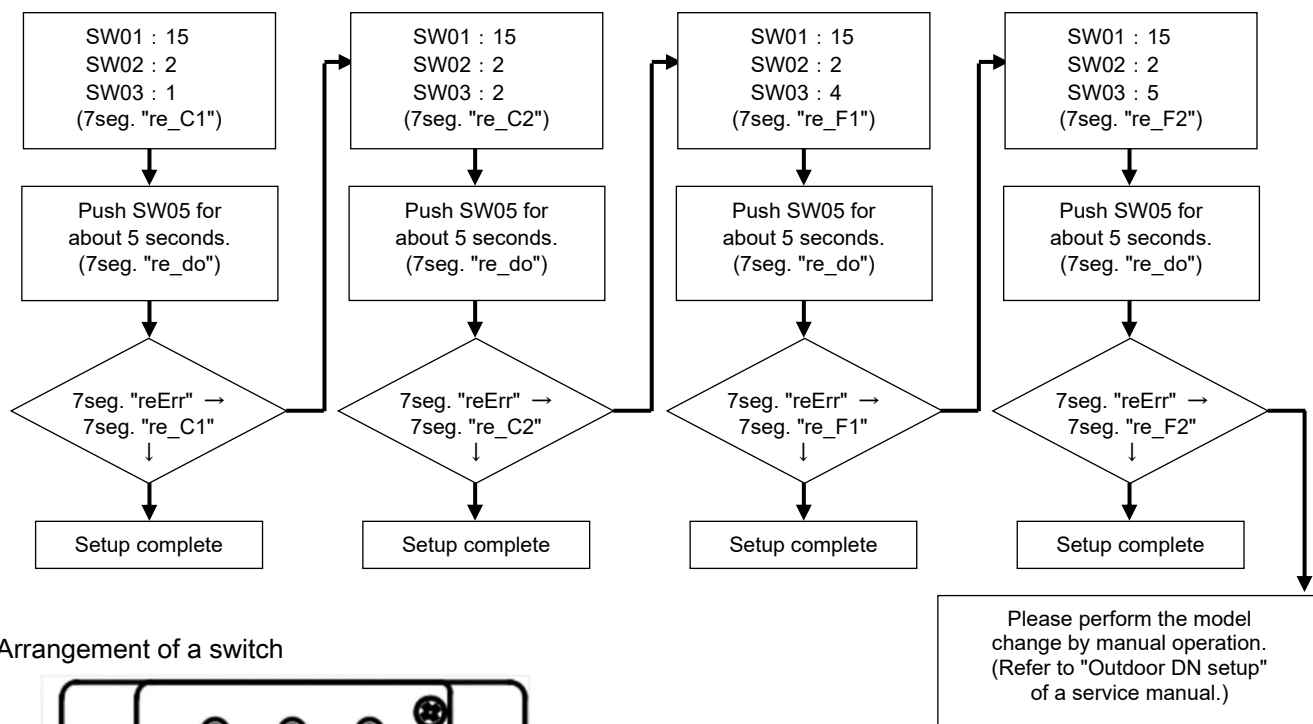

Arrangement of a switch

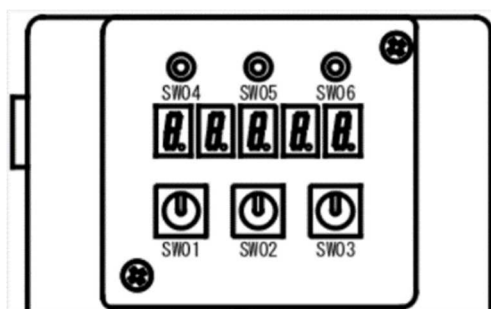


(14) Set SW01 : 1, SW02 : 1, SW03 : 1. Check the operation.

Appendix 1 Data backup

- 1) The Outdoor DN code (O.DN) data that includes the model settings from the interface P.C. board will automatically be backed up to the Inverter P.C. board for Compressor and Inverter P.C. board for fan.

Data backup

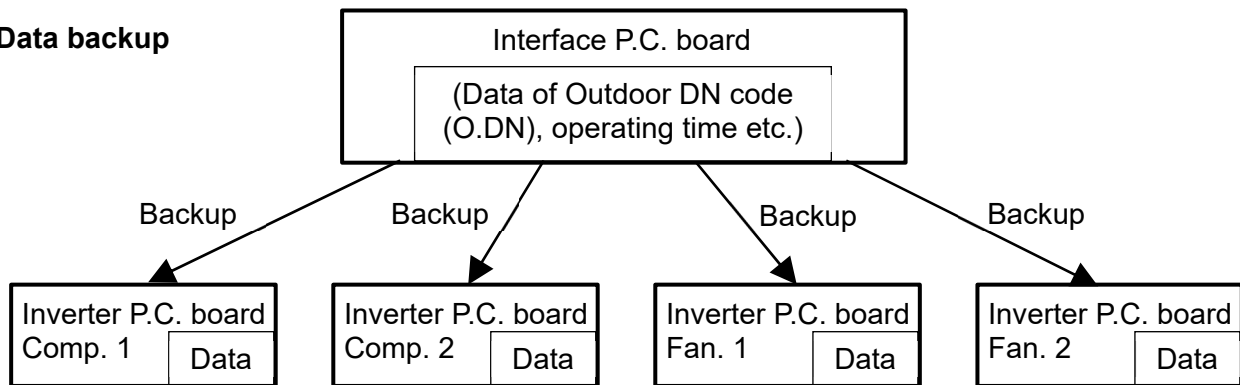


- 2) Data backup will be performed under one of the following conditions.
 - Every hour after power on (when the compressor is stopped)
 - When the outdoor DN code (O.DN) has been changed
 Caution should be taken, since the old data for the Inverter P.C. board will be overwritten.
- 3) The same backup data will be saved on each inverter P.C. board
- 4) Data backup prohibition settings
 Data backup prohibition settings will be activated when bit 1 on SW106 is turned ON.
 Set the data backup prohibition settings if backing up on interface P.C. board is not desired.

SW106	Bit 1	OFF : Normal (Data backup will be performed) ON : Data backup will not be performed on Inverter P.C. board.
-------	-------	--

Appendix 2 Data recovery

- 1) Data recovery will be performed from inverter P.C. board for Compressor 1, and if this fails, recovery will be performed from Compressor 2, Fan 1, and Fan 2, in that order.
 If this fails as well, the same data will be saved on each Inverter P.C. board, so data recovery will be done if recovery is successful from any of these Inverter P.C. boards.
 Skip this procedure if there is an Inverter P.C. board with a failure.

Data backup

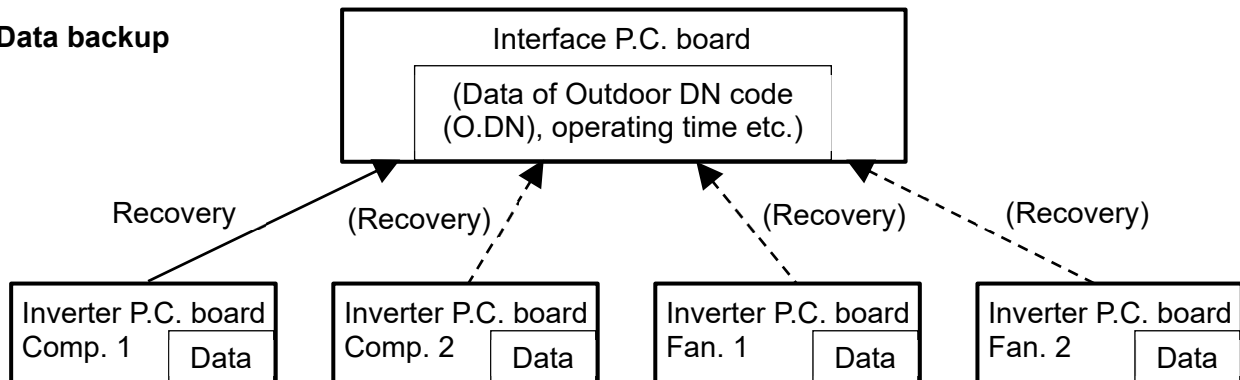

* Recovery is done if recovery is successful from either of the Inverter P.C. board.

- 2) Perform data recovery within one hour after powering if the Interface P.C. board has been replaced with a Service P.C. board. If one hour elapses after powering, data recovery will not be available since the data for the service P.C. board will be written to the Inverter P.C. board.
 If one hour is about to elapse before data recovery, turn the power OFF temporarily for the outdoor unit.
- 3) When performing data recovery, important data such as operating time will be recovered with the outdoor DN code (O.DN), so perform data recovery when replacing the Interface P.C. board, and set the Outdoor DN code (O.DN) manually if this is not possible.

Appendix 3 Model settings for case that data cannot be recovered

The model settings are unset on the service P.C. board, and in an unset state, the check code [L10] will be displayed and operation will not be available.

The model settings will be recovered with the data recovery, but if data recovery cannot be performed, set the Outdoor Unit Function Code (O.DN) [003] manually according to the model name of the outdoor unit.

Normal operations may not be available if the settings are different from those before replacing.

Model name	O.DN [003]
Undefined	0000
MMY-MUP0721FT9*	0001
MMY-MUP0961FT9*	0002
MMY-MUP1201FT9*	0003
MMY-MUP1441FT9*	0004
MMY-MUP1681FT9*	0005
MMY-MUP0721FT6*	0006
MMY-MUP0961FT6*	0007
MMY-MUP1201FT6*	0008
MMY-MUP1441FT6*	0009
MMY-MUP1681FT6*	0010
MMY-MUP1921FT6*	0011
MMY-MUP072H1FT9*	0012
MMY-MUP096H1FT9*	0013
MMY-MUP120H1FT9*	0014
MMY-MUP072H1FT6*	0015
MMY-MUP096H1FT6*	0016
MMY-MUP120H1FT6*	0017

For the communication method setting (TCC-LINK / TU2C-LINK), all outdoor units and all indoor units in the same system must have the same settings. The factory setting of the service P.C. board is TCC-LINK communication. Check the DN code of the connected outdoor unit or indoor unit, and if it is set to TU2C-LINK, set the service P.C. board to TU2C-LINK as well.

	Outdoor unit (O.DN) [082]	Indoor unit (I.DN) [FC]
TCC-LINK	0000	0000
TU2C-LINK	0003	0003


13-1-4(1). Compressor P.C. Board (MCC-1729) Replacement Procedure

Target model 43TN9880: MMY-MUP0721FT6*/0961FT6*/1201FT6*/1921FT6*/072H1FT6*
43TN9881: MMY-MUP1441FT6*/1681FT6*/096H1FT6*/120H1FT6*

This board is commonly installed in different models. Set the DIP switch (SW800) settings of the service board to match as before replacement.


Included items:

- ① MCC-1729 : 1pcs ② Spacer : 4pcs ③ Bush : 2pcs ④ Collar : 2pcs

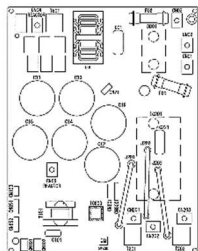


Replacement Steps:

- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connector and screw terminals(⑤ : 8pcs) which were connected to the Compressor P.C. board.
(Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove 6 screws(⑥ : 4pcs, ⑦ : 2pcs).
(These screws are to be re-used after procedure.)
- (4) Remove the P.C. board from the 4 spacers (②) by round-nose pliers.

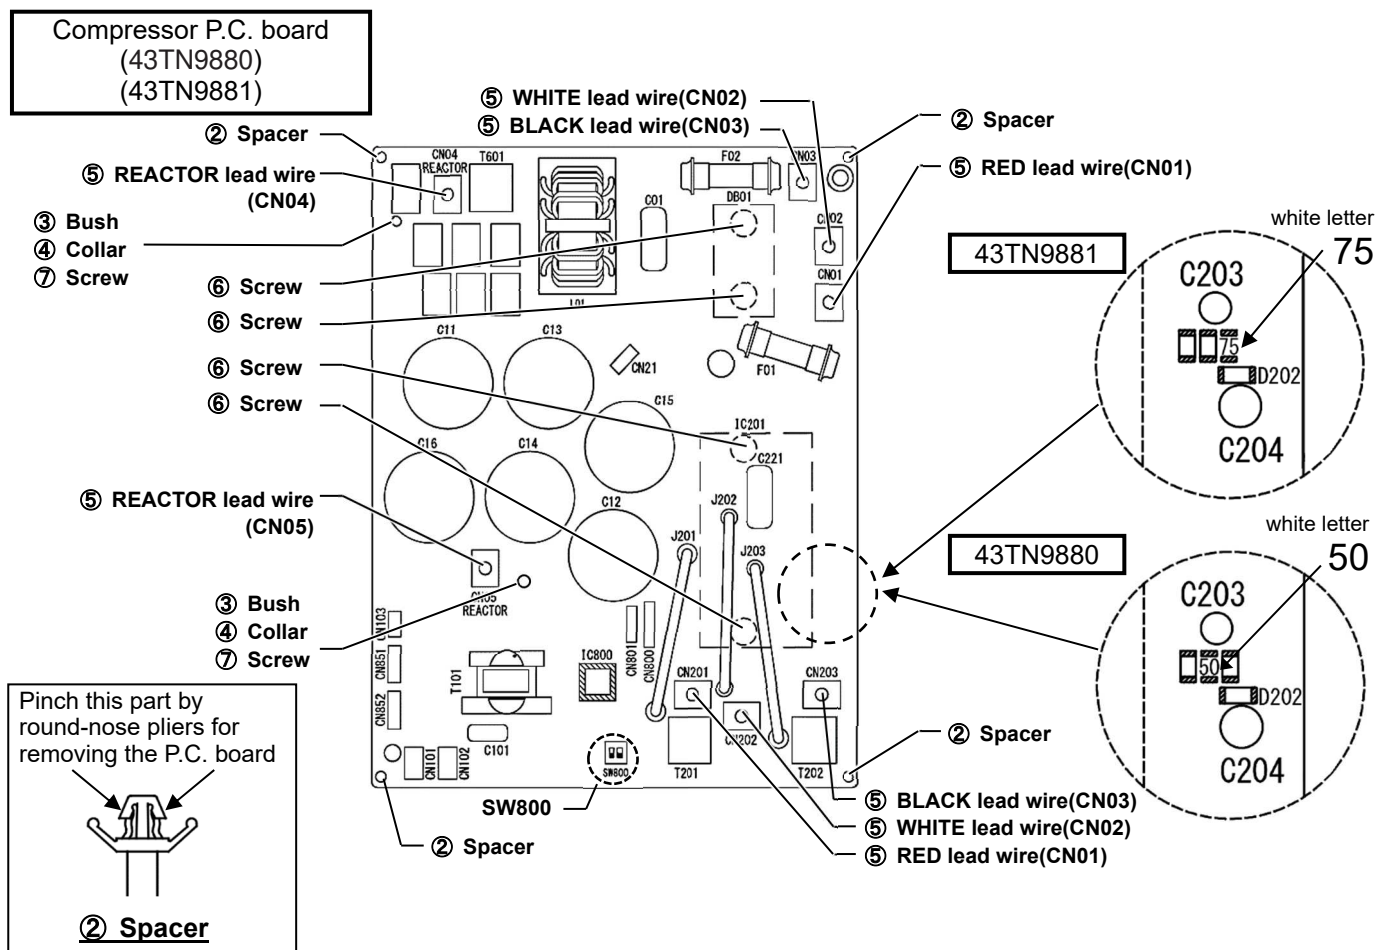


(5) Set the DIP switch (SW800) settings of the service board to match as before replacement.

(6) Exchange spacers (②) and attach collars(④) and bushes(③) to the service P.C. board(①).

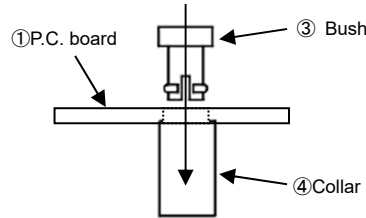

- (7) Apply the Silicone Thermal Grease to the semiconductors (DB01, IC201) on the service P.C. board, and align the positions of the heat sink holes to mount the Compressor P.C. board on the outdoor control unit. And fix the Compressor P.C. board to the outdoor control unit by the spacers (2).

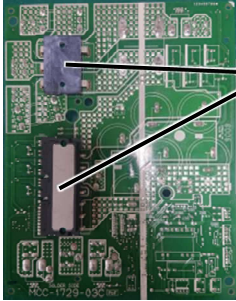

Uniformly apply the Silicone Thermal Grease to the heat dissipating surfaces of the IPM (IC201) and rectifier (DB01).
 Note: Do this work carefully. Please do not soil or scratch the area which attaches the semiconductor of a heat sink.

Silicone Thermal Grease use one of the following

- Momentive Performance Materials "TIG1000"
- Dow Corning Toray "SC102"
- Mizutani Electric Ind "HSC1000"
- Shin-Etsu Chemical "G-746" or "G-747"

- (8) Screw the Compressor P.C. board to the heat sink by the 6 screws (⑥, ⑦) that were removed in step (3).
 If the screws are loose, the semiconductors will generate heat, and cause it to breakdown.
 Do not use an electric driver or an air driver.
 The semiconductor may receive a damage.

The torque of the screws

- (9) Re-connect the connectors and screw terminals (⑤).
 Be sure that all the connectors and the screw terminals are connected correctly and securely inserted.

⑤	Screw terminal	M5×10	1.48 ft•lbs (2.0 N•m)
⑥	DB01, Q201	M4×15	0.89 ft•lbs (1.2 N•m)
⑦	collar and bush	M3×25	0.44 ft•lbs (0.6 N•m)

- (10) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short or contact other parts.
- (11) Install the cover, then turn on the supply. Check the operation.



13-1-4(2). Compressor P.C. Board (MCC-1746) Replacement Procedure

Target model 43TN9883: MMY-MUP0721FT9*/0961FT9*/1201FT9*/072H1FT9*
43TN9884: MMY-MUP1441FT9*/1681FT9*/096H1FT9*/120H1FT9*

This board is commonly installed in different models. Set the DIP switch (SW800) settings of the service board to match as before replacement.

Included items:

- ① MCC-1746 : 1pcs ② Spacer : 4pcs ③ Bush : 1pcs ④ Collar : 1pcs

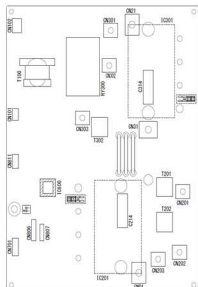


Compressor P.C. board
(43TN9883, 43TN9884)

Replacement Steps:



- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connectors attached to the Compressor P.C. board. (Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove the BUS-BAR and lead wire screws(⑤ : 5pcs (M6)) that connected the Capacitor P.C. board and the Compressor P.C. board.
- (4) Remove all of the connector and screw terminals(⑥ : 6pcs (M5)) which were connected to the Compressor P.C. board.
(Remove the connectors by pulling the connector body. Do not pull the wire.)

Pinch this part by round-nose pliers for removing the P.C. board




② Spacer

- ⑥ RED lead wire(CN301, M5)
⑥ WHITE lead wire(CN302, M5)
⑥ BLACK lead wire(CN303, M5)

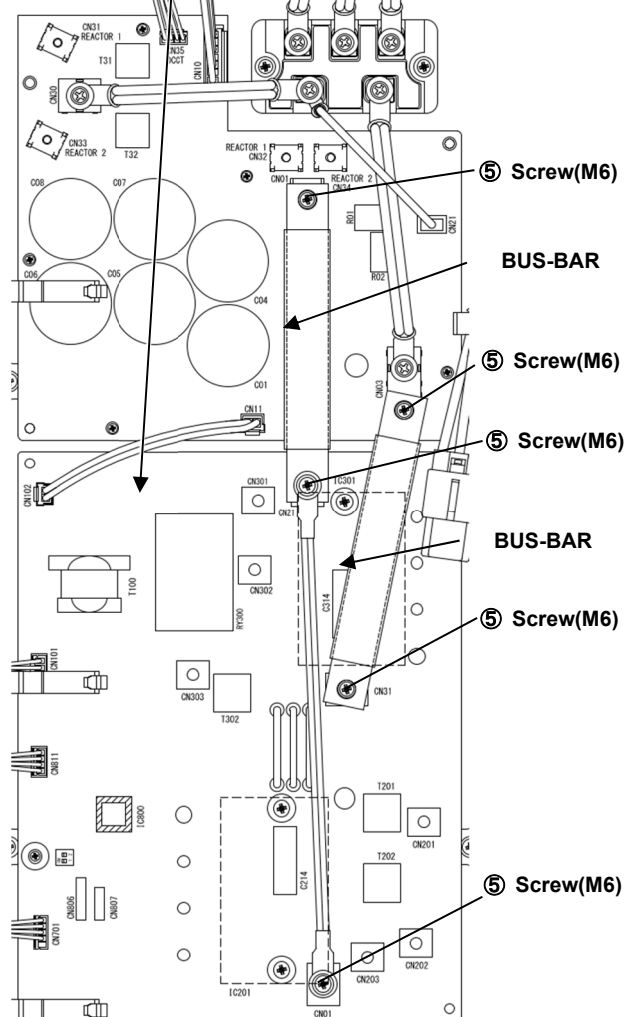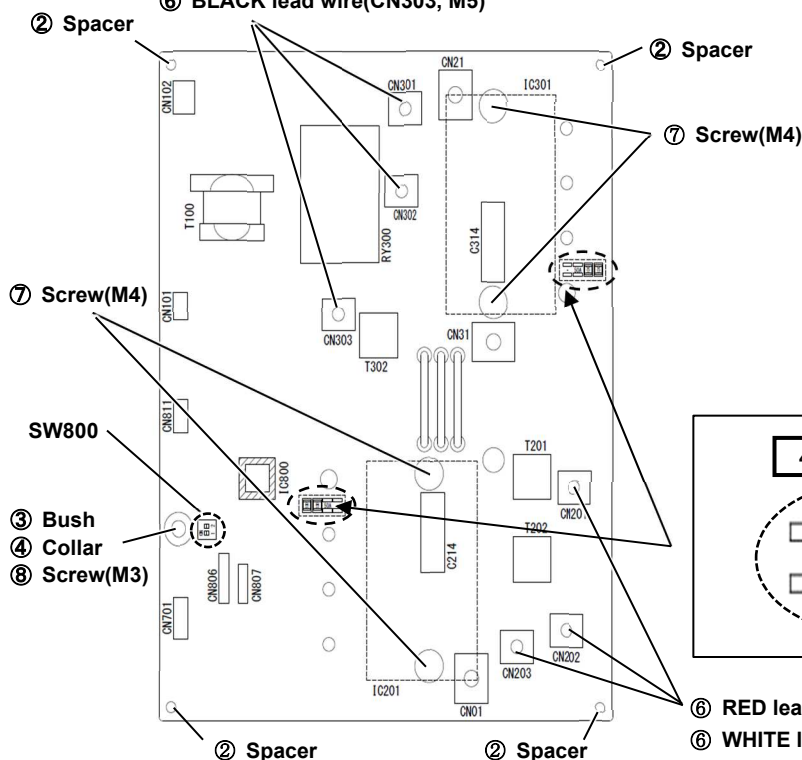

43TN9883

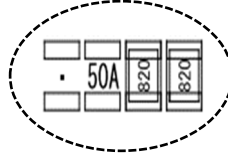


43TN9884




- ⑥ RED lead wire(CN201, M5)
⑥ WHITE lead wire(CN202, M5)
⑥ BLACK lead wire(CN203, M5)

- (5) Remove 5 screws(⑦ : 4pcs(M4), ⑧ : 1pcs(M3)).
- (6) Keep the removed screws as they will be reused.
- (7) Remove the P.C. board from the 4 spacers (②) by round-nose pliers.
- (8) Set the DIP switch (SW800) settings of the service board to match as before replacement.
- (9) If spacers (②) are damaged, replace it and attach collars(④) and bushes(③) to the service P.C. board(①).

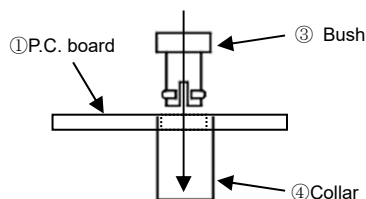

- (10) Apply the Silicone Thermal Grease to the semiconductors (IC201, IC301) on the service P.C. board, align the hole positions of heat sink, and mount the service P.C. board on the outdoor control unit. And fix the service P.C. board to the outdoor control unit by the spacers (②).

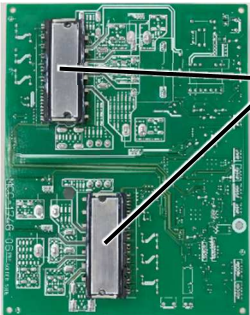

Uniformly apply the Silicone Thermal Grease to the heat dissipating surfaces of the IPM (IC201, IC301).
 Note: Do this work carefully. Please do not soil or scratch the area which attaches the semiconductor of heat sink.

Silicone Thermal Grease use one of the following

- Momenive Performance Materials "TIG1000"
- Dow Cornig Toray "SC102"
- Mizutani Electric Ind "HSC1000"
- Shin-Etsu Chemical "G-746" or "G-747"

- (11) Screw the Compressor P.C. board to the heat sink by the 5 screws (⑦ : 4pcs(M4), ⑧ : 1pcs(M3)) that were removed in step (5). If the screws are loose, the semiconductors will generate heat, and cause it to breakdown. Do not use an electric driver or an air driver. The semiconductor may receive a damage.
- (12) Re-connect the connectors and screw terminals (⑥ : 6pcs (M5)) that were removed in step (4). Be sure that all the connectors and the screw terminals are connected correctly and securely inserted.
- (13) Re-connect the BUS-BAR and lead wire screws (⑤ : 5pcs (M6)) that were removed in step (3) to the Capacitor P.C. board and the Compressor P.C. board. Be sure that all the screw terminals are connected correctly.
- (14) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short or contact other parts.
- (15) Install the cover, then turn on the supply. Check the operation.

The torque of the screws


⑤	Screw terminal	M6 x 0.47" (12mm)	2.21 ft•lbs (3.0 N•m)
⑥	Screw terminal	M5 x 0.4" (10mm)	1.48 ft•lbs (2.0 N•m)
⑦	IC201, IC301	M4 x 0.6" (15mm)	0.89 ft•lbs (1.2 N•m)
⑧	Collar and bush	M3 x 0.98" (25mm)	0.44 ft•lbs (0.6 N•m)

13-1-5. Capacitor P.C. Board (MCC-1711) Replacement Procedure

Target model 43TN9885: MMY-MUP0721FT9*/0961FT9*/1201FT9*/072H1FT9*
43TN9886: MMY-MUP1441FT9*/1681FT9*/096H1FT9*/120H1FT9*


Included items:

- ① MCC-1711 : 1pcs ② Spacer : 2pcs ③ Bush : 5pcs ④ Collar : 5pcs

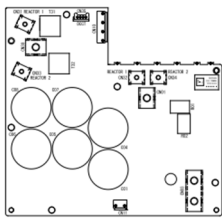


Replacement Steps:

- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connectors attached to the Capacitor P.C. board. (Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove the BUS-BAR and lead wire screws (⑤ : 6pcs (M6)) that connect the Compressor P.C. board and the Capacitor P.C. board.
- (4) Remove the reactor lead wire screws(⑥ : 2 or 4 pcs (M5)). (For the model has REACTOR 2, manage the combination so as not to make a mistake when reconnecting.)
- (5) Remove the screws(⑦ : 5pcs (M3)).
- (6) Keep the removed screws as they will be reused.
- (7) Using pliers to remove the Capacitor P.C. board from the two spacers (②).

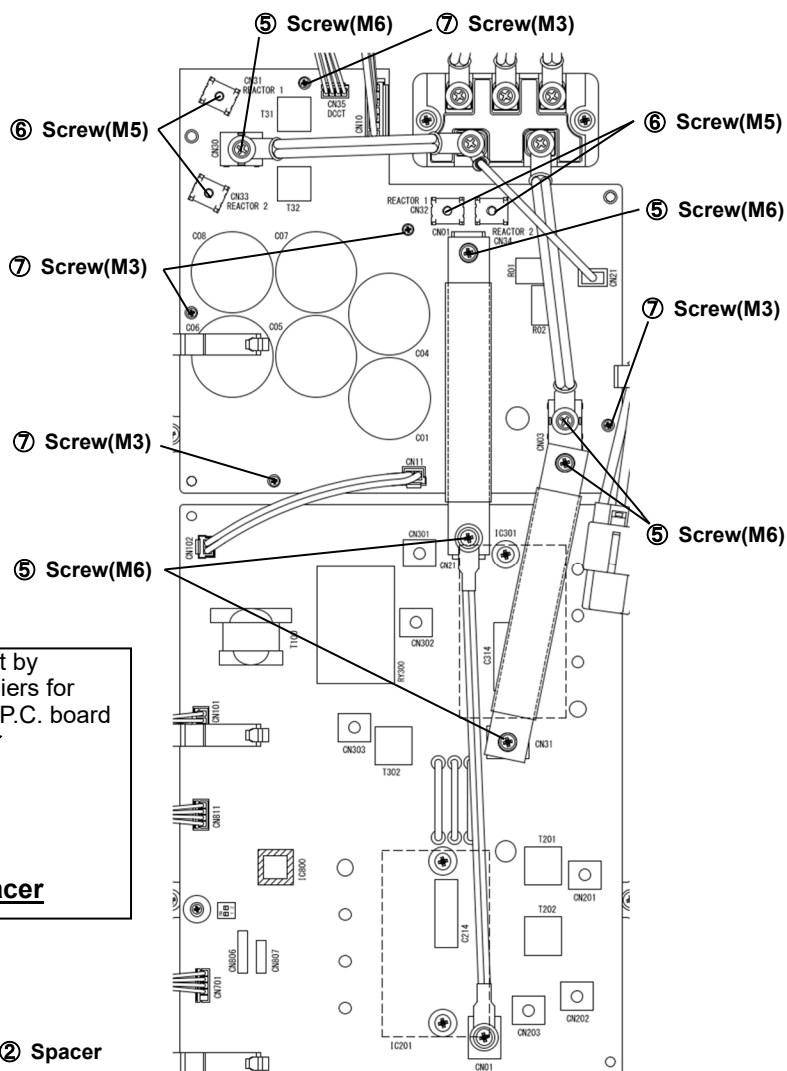


Capacitor P.C. board
(43TN9885, 43TN9886)

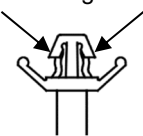

Pinch this part by
round-nose pliers for
removing the P.C. board

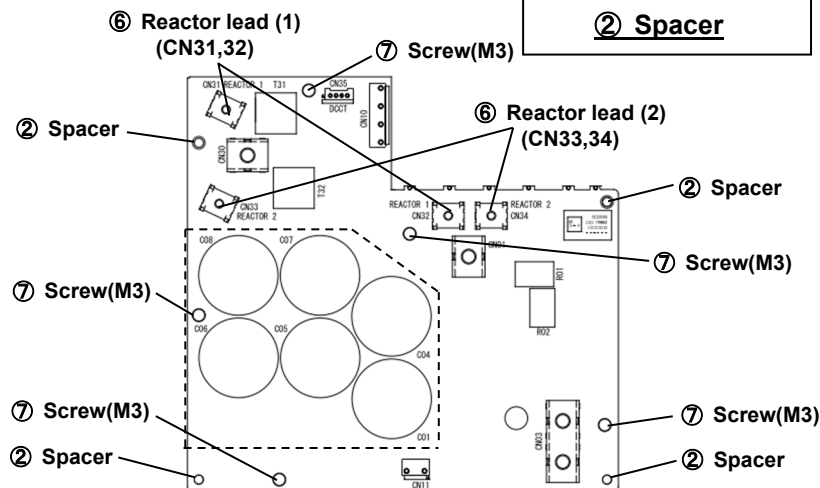


② Spacer



How to identify the service board

Parts code	Number of capacitors
43TN9 885	5 pcs 
43TN9 886	6 pcs 

(8) If spacers (②) are damaged, replace it and attach collars(④) and bushes(③) to the service P.C. board(①).

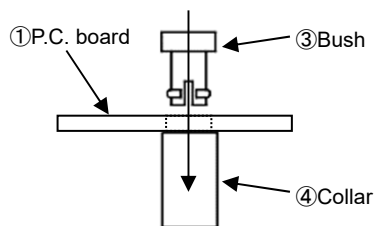

(9) Attach the Capacitor P.C. board with the five screws(⑦ : 5pcs (M3)) removed in step (5).

(10) Attach the reactor lead wire using the 2 or 4 screws removed in step (4) (⑥ : 2 or 4 pcs (M5)).

For the model has REACTOR 2, be careful not to make a mistake in the combination of lead wires.

Notes : The screws are loose, the connection part will heat up and cause a malfunction.

Do not use electric drivers or air drivers.

(11) Attach the BUS-BAR and lead wires removed in step (3) with 6 screws(⑤ : 6pcs (M6)).

Notes : The screws are loose, the connection part will heat up and cause a malfunction.

Do not use electric drivers or air drivers.

(12) Reconnect the connector. Connect correctly and securely.

(13) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short or contact other parts.

(14) Attach the cover, turn on the power, and check the operation.

The torque of the screws

⑤	Screw terminal	M6 x 0.47" (12mm)	2.21 ft•lbs (3.0 N•m)
⑥	Screw terminal	M5 x 0.4" (10mm)	1.48 ft•lbs (2.0 N•m)
⑦	Collar and bush	M3 x 0.98" (25mm)	0.44 ft•lbs (0.6 N•m)

13-1-6. Fan-Motor P.C. Board (MCC-1734) Replacement Procedure

Target model 43T6W894: MMY-MUP****FT6*


43TN9882: MMY-MUP****FT9*

This board is commonly installed in different models. Set the DIP switch (SW800) settings of the service board to match as before replacement.

Included items:

① MCC-1734 : 1pcs


② Spacer : 4pcs




Replacement steps:

- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connector which were connected to the Fan-motor P.C. board. (Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove 2 screws(③).
- (These screws are to be re-used after procedure.)
- (4) Remove the P.C. board from 4 spacers(②) by round-nose pliers.
- (5) Set the SW800 setting of the service P.C. board to match as before replacement.
- (6) Apply the Silicone Thermal Grease to the semiconductors (IC300) on the service P.C. board, and align the positions of the heat sink holes to mount the Fan-motor P.C. board on the outdoor control unit. And fix the Fan-motor P.C. board to the outdoor control unit by the spacers (②).

Fan-motor P.C. board
(43T6W894, 43TN9882)

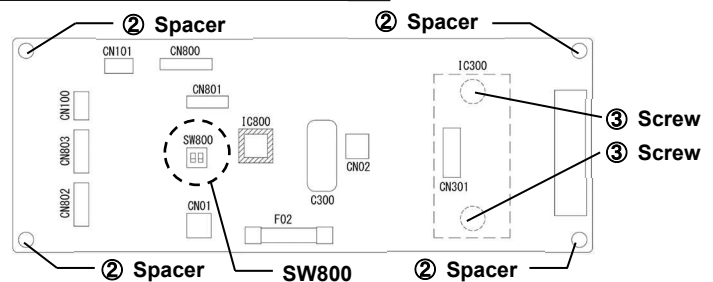

Pinch this part by round-nose pliers for removing the P.C. board

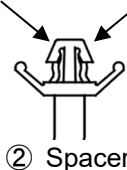

Uniformly apply the Silicone Thermal Grease to the heat dissipating surfaces of the IPM (IC300).
Note: Do this work carefully. Please do not soil or scratch the area which attaches the semiconductor of a heat sink.

Silicone Thermal Grease use one of the following

- Momentive Performance Materials "TIG1000"
- Mizutani Electric Ind "HSC1000"
- Shin-Etsu Chemical "G-746" or "G-747"
- Dow Corning Toray "SC102"

- (7) Screw the Fan-motor P.C. board to the heat sink by the 2 screws (③) that were removed in step (3).

If the screws are loose, the semiconductors will generate heat, and cause it to breakdown.
Do not use an electric driver or an air driver.
The semiconductor may receive a damage.

The torque of the screws

③	Screw	M3 × 14	0.44 ft•lbs (0.6 N•m)
---	-------	---------	------------------------

- (8) Re-connect the connectors. Be sure that all the connectors are connected correctly and securely inserted.
- (9) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short or contact other parts.
- (10) Install the cover, then turn on the supply. Check the operation.

13-1-7(1). Noise Filter P.C. Board (MCC-1749) Replacement Procedure

Target model 43TN9878: MMY-MUP****FT6*

Included items:



- ① MCC-1748 : 1pcs ② Spacer : 4pcs ③ Spacer : 2pcs ④ Bush : 2pcs



Replacement Steps:

- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connectors and solderless terminal tabs (CN04, CN14, CN15, CN29), screw terminals(⑦ : 9pcs), Line-Filter which were connected to the Noise Filter P.C. board. (Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove 8 screws(⑤ : 6pcs, ⑥ : 2pcs). (These screws are to be re-used after procedure.)
- (4) Remove the P.C. board from 6 spacers (②:4pcs, ③:2pcs).
- (5) Using new spacers(②, ③), bushes(④), attach the service board.
- (6) Screw the Noise Filter P.C. board by 8 screws (⑤, ⑥) that were removed in step (3).
- (7) Re-connect the connectors and screw terminals(⑦), Line-Filters, solderless terminal tabs (CN04, CN14, CN15, CN29). Be sure that all the connectors and the screw terminals are connected correctly and securely inserted.
- (8) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short or contact other parts.
- (9) Install the cover, then turn on the supply. Check the operation.


Noise Filter P.C. board (43TN9878)

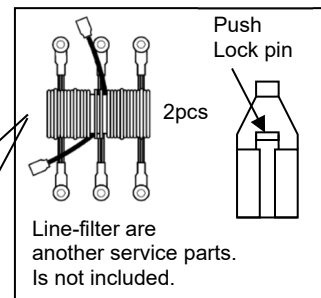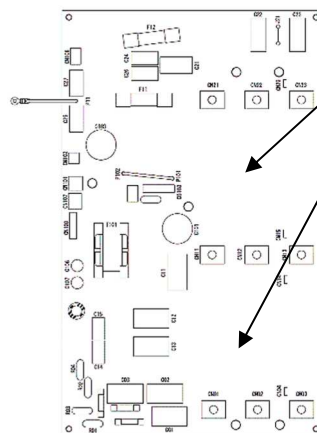

How to remove a Line-filter

- a) Remove the solderless terminal tabs. (CN05, CN14, CN15, CN29)
- b) Remove the screw terminals. (CN01, CN02, CN03)
- c) Remove the screws (CN11, CN12, CN13), holding the lower Line-filter (L01).
- d) Remove the screw (CN21, CN22, CN23), holding the upper Line-filter(L02).

*L01 and L02 are same parts.

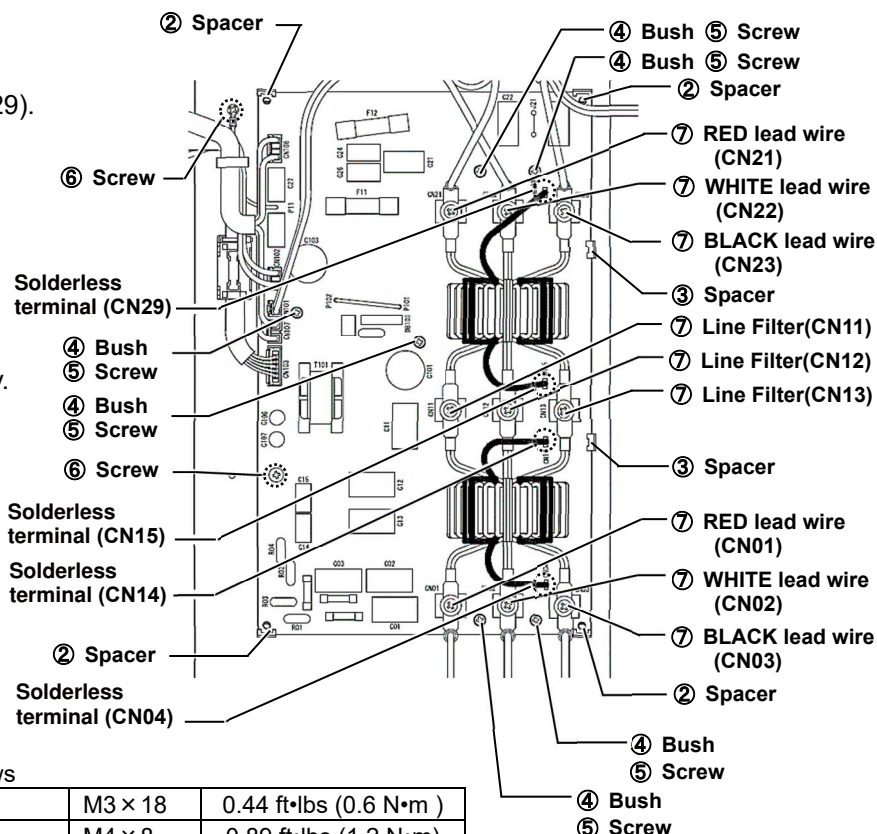

The torque of the screws


⑤	Screw	M3 × 18	0.44 ft•lbs (0.6 N•m)
⑥	Screw	M4 × 8	0.89 ft•lbs (1.2 N•m)
⑦	Screw terminal	M6 × 12	2.21 ft•lbs (3.0 N•m)

13-1-7(2). Noise Filter P.C. Board (MCC-1749) Replacement Procedure

Target model 43TN9876: MMY-MUP0721FT9*/0961FT9*/072H1FT9*


Included items:

- ① MCC-1749 : 1pcs ② Spacer : 4pcs ③ Spacer : 2pcs ④ Bush : 6pcs

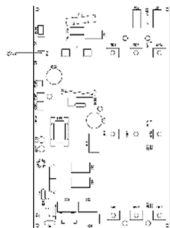

Replacement Steps:

- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connectors attached to the Noise Filter P.C. board. (Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove screws (⑦ : 12pcs (M6)) and Line-Filters which were connected to the Noise Filter P.C. board.
- (4) Remove 8 screws (⑤ : 6pcs (M3), ⑥ : 2pcs (M4)).
- (5) Keep the removed screws as they will be reused.
- (6) Remove the P.C. board from 6 spacers (②:4pcs, ③:2pcs).
- (7) If spacers (②, ③) are damaged, replace it and attach bushes (④) to the service P.C. board (①).
- (8) Screw the Noise Filter P.C. board by 8 screws (⑤, ⑥) that were removed in step (4).
- (9) Re-connect the connectors and screw terminals (⑦), Line-Filters. Be sure that all the connectors and the screw terminals are connected correctly and securely inserted.
- (10) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short or contact other parts.
- (11) Install the cover, then turn on the supply. Check the operation.

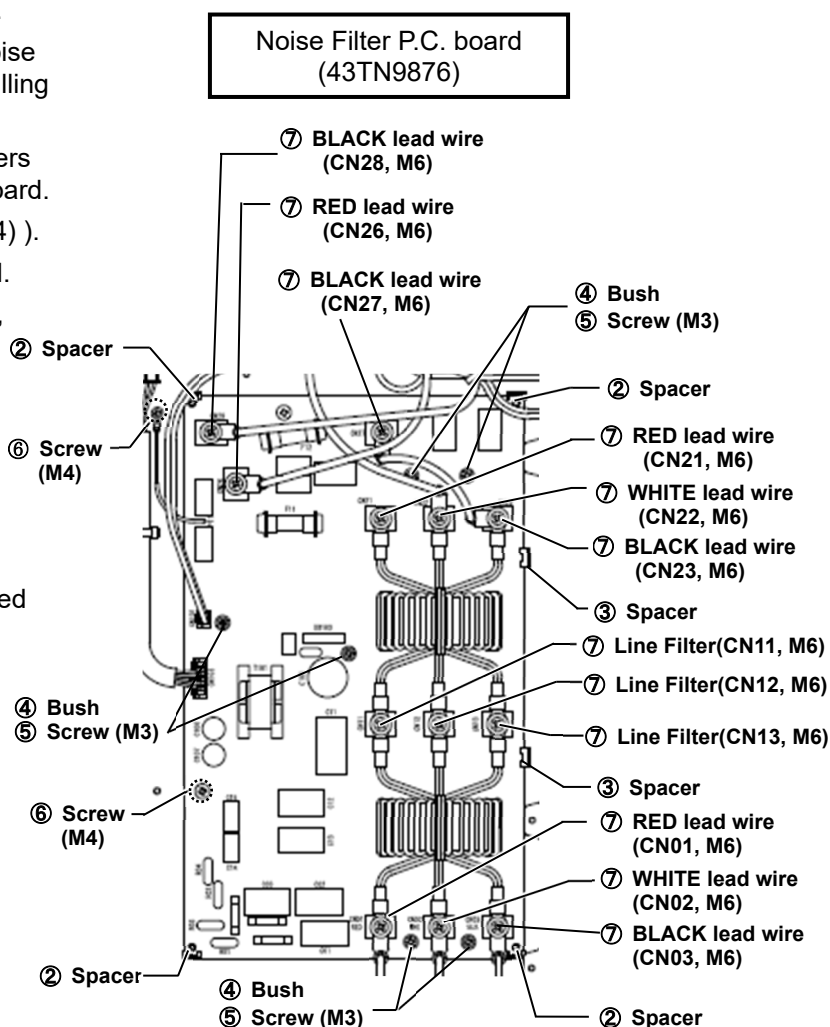

The torque of the screws


⑤	Screw	M3 x 0.7" (18mm)	0.44 ft•lbs (0.6 N•m)
⑥	Screw	M4 x 0.3" (8mm)	0.89 ft•lbs (1.2 N•m)
⑦	Screw terminal	M6 x 0.47" (12mm)	2.21 ft•lbs (3.0 N•m)

13-1-7(3). Noise Filter P.C. Board (MCC-1749) Replacement Procedure

Target model 43TN9877: MMY-MUP1201FT9*/1441FT9*/1681FT9*/096H1FT9*/120H1FT9*

Included items:



- ① MCC-1749 : 1pcs ② Spacer : 4pcs ③ Spacer : 2pcs ④ Bush : 2pcs

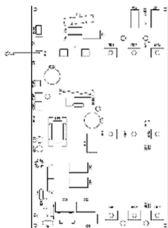

Replacement Steps:


- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connectors and solderless terminal tabs (CN04, CN14, CN15, CN29) attached to the Noise Filter P.C. board. (Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove screws (⑦ : 12pcs (M6)) and Line-Filters which were connected to the Noise Filter P.C. board.
- (4) Remove fuse screws (⑧ : 4pcs (M6)) and 2 fuses which were connected to the Noise Filter P.C. board.
(If the fuse is not broken, reuse it.)
- (5) Remove 8 screws (⑤ : 6pcs (M3), ⑥ : 2pcs (M4)).
- (6) Keep the removed screws as they will be reused.
- (7) Remove the Noise Filter P.C. board from 6 spacers (②:4pcs, ③:2pcs).
- (8) If spacers (②, ③) are damaged, replace it and attach bushes (④) to the service P.C. board (①).
- (9) Screw the Noise Filter P.C. board by 8 screws (⑤, ⑥) that were removed in step (5).
- (10) Re-connect the fuses and screw terminals (⑧).
- (11) Re-connect the connectors and screw terminals (⑦), Line-Filters, solderless terminal tabs (CN04, CN14, CN15, CN29).
Be sure that all the connectors and the screw terminals are connected correctly and securely inserted.
- (12) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short or contact other parts.
- (13) Install the cover, then turn on the supply. Check the operation.

Noise Filter P.C. board (43TN9877)

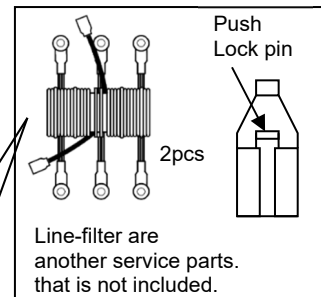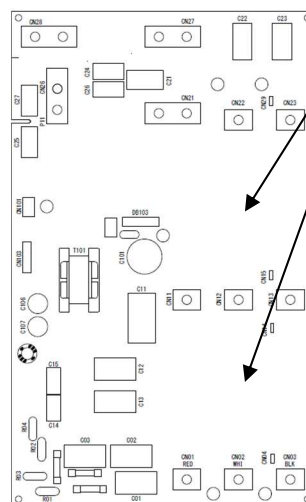

How to remove a Line-filter

- a) Remove the solderless terminal tabs. (CN04, CN14, CN15, CN29)
 - b) Remove the screw terminals. (CN01, CN02, CN03)
 - c) Remove the screws (CN11, CN12, CN13), holding the lower Line-filter (L01).
 - d) Remove the screw (CN21, CN22, CN23), holding the upper Line-filter (L02).
- *L01 and L02 are same parts.


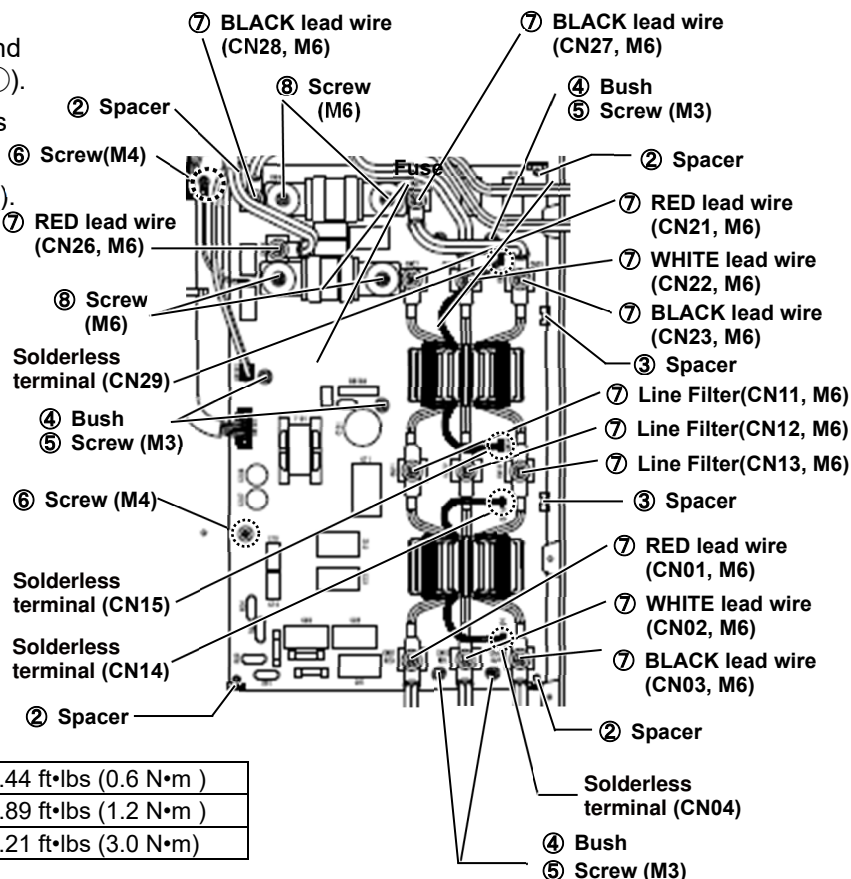



The torque of the screws


⑤	Screw	M3 x 0.7" (18mm)	0.44 ft•lbs (0.6 N•m)
⑥	Screw	M4 x 0.3" (8mm)	0.89 ft•lbs (1.2 N•m)
⑦	Screw terminal	M6 x 0.47" (12mm)	2.21 ft•lbs (3.0 N•m)





14. FS UNIT PARTS REPLACEMENT METHODS







14-1. Flow Selector unit Multi-port type

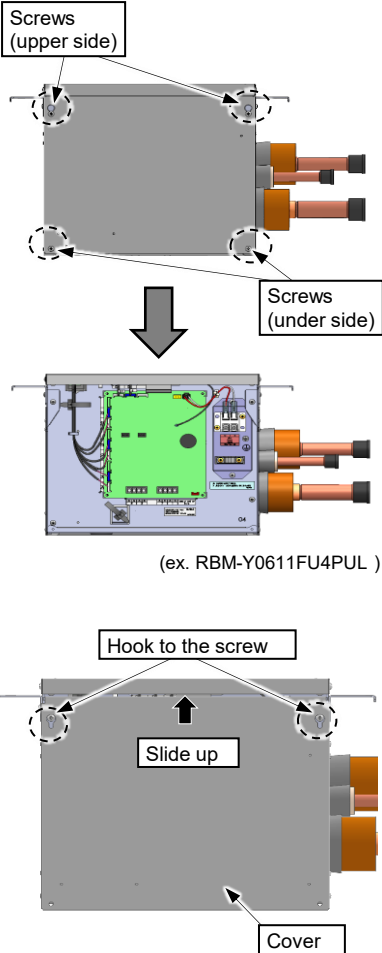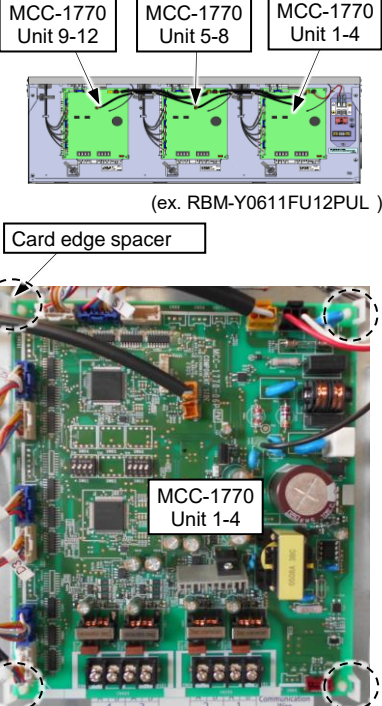No.	Part	Work procedure	Remarks
1	Electrical control box cover	<p>⚠WARNING</p> <ul style="list-style-type: none"> •Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object. •Stop the power supply of the air conditioner and turn off switch of the power supply breaker. <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the screws of under side. (M4 x 0.3" (8 mm), 2 pcs) 2) Loosen fixing screws of upper side. (M4 x 0.3" (8 mm), 2 pcs) 3) Pull the cover downward and then remove the cover. <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Hook the electrical control box cover on the screw on the upper side. (2 places) 2) Slide up the cover and fit it in. <div style="border: 1px solid black; padding: 5px; margin: 5px 0;">Work carefully so as not to pinch the wires inside the box.</div> <ol style="list-style-type: none"> 3) Fix the underside with screws. (M4 x 0.3" (8 mm), 2 pcs) 4) Tighten the screws of upper side. (M4 x 0.3" (8 mm), 2 pcs) 	 <p>(ex. RBM-Y0611FU4PUL)</p>
2	P.C.board (MCC-1770)	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1-1 Detachment. (Electrical control box cover) 2) Remove connectors which are connected from the control P.C.board to the other parts. <p>Unit 1-4 (*FU4PUL) / (*FU8PUL) / (*FU12PUL)</p> <p>CN04: Earth wire (Faston tab) CN67: Power supply wires (Black) CN200: Communication wire (Terminal block) CN309: Power supply wires (Yellow) CN400: Communication wire (Terminal block) CN581: Communication wire (Yellow) CN602: PMV-S1 (Blue) CN603: PMV-D1 (White) CN702: PMV-S2 (Blue) CN703: PMV-D2 (White) CN802: PMV-S3 (Blue) CN803: PMV-D3 (White) CN902: PMV-S4 (Blue) CN903: PMV-D4 (White)</p>	 <p>(ex. RBM-Y0611FU12PUL)</p>


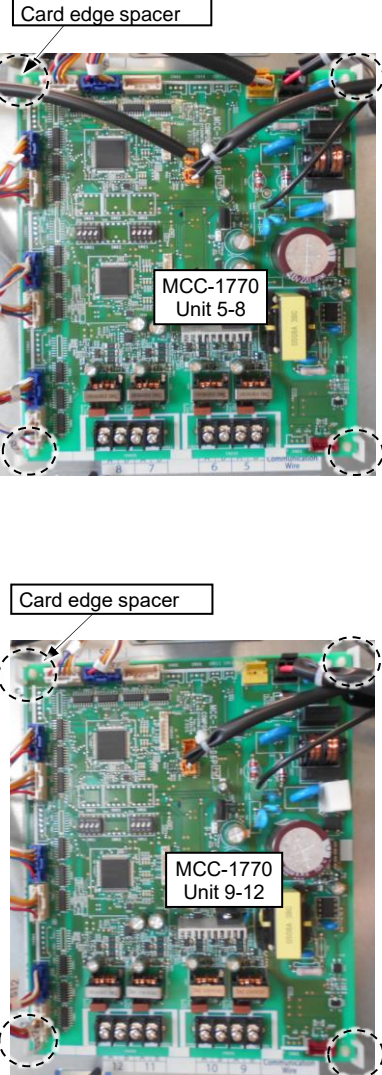
No.	Part	Work procedure	Remarks
		<p>Unit 5-8 (*FU8PUL) / (*FU12PUL)</p> <p>CN04: Earth wire (Faston tab)</p> <p>CN67: Power supply wires (Black)</p> <p>CN200: Communication wire (Terminal block)</p> <p>CN309: Power supply wires (Yellow)</p> <p>CN400: Communication wire (Terminal block)</p> <p>CN580: Communication wire (Yellow)</p> <p>CN581: Communication wire (Yellow)</p> <p>CN602: PMV-S5 (Blue)</p> <p>CN603: PMV-D5 (White)</p> <p>CN702: PMV-S6 (Blue)</p> <p>CN703: PMV-D6 (White)</p> <p>CN802: PMV-S7 (Blue)</p> <p>CN803: PMV-D7 (White)</p> <p>CN902: PMV-S8 (Blue)</p> <p>CN903: PMV-D8 (White)</p> <p>Unit 9-12 (*FU12PUL)</p> <p>CN04: Earth wire (Faston tab)</p> <p>CN67: Power supply wires (Black)</p> <p>CN200: Communication wire (Terminal block)</p> <p>CN400: Communication wire (Terminal block)</p> <p>CN580: Communication wire (Yellow)</p> <p>CN602: PMV-S9 (Blue)</p> <p>CN603: PMV-D9 (White)</p> <p>CN702: PMV-S10 (Blue)</p> <p>CN703: PMV-D10 (White)</p> <p>CN802: PMV-S11 (Blue)</p> <p>CN803: PMV-D11 (White)</p> <p>CN902: PMV-S12 (Blue)</p> <p>CN903: PMV-D12 (White)</p> <p>3) Unlock the locks of the card edge spacer (4 places) and then remove the control P.C.board.</p>	


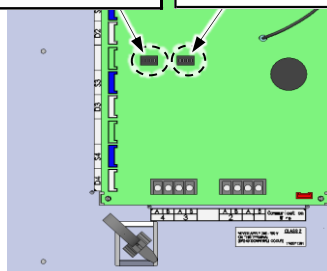
No.	Part	Work procedure	Remarks												
		<div><div>2 Attachment</div><div>1) Fix the control P.C. board to the card edge spacers. (4 places)</div><div>2) Connect the connectors disconnected in item 1-2) as before.</div><div>For connectors, check there is no missing or contact failure.</div><div>3) DIP switch SW01 and SW03 should be set according to the table below.</div></div>	<div><div><div>SW01</div><div>(Factory setting)</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div><div><div>SW03</div><div>(Factory setting)</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div></div> <div></div>												
		<table><tr><th>P.C. board</th><th>Setting of SW01</th><th>Setting of SW03</th></tr><tr><td>Unit 1-4</td><td><div><div>SW01</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div></td><td><div><div>SW03</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div></td></tr><tr><td>Unit 4-8</td><td><div><div>SW01</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div></td><td><div><div>SW03</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div></td></tr><tr><td>Unit 9-12</td><td><div><div>SW01</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div></td><td><div><div>SW03</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div></td></tr></table>	P.C. board	Setting of SW01	Setting of SW03	Unit 1-4	<div><div>SW01</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>	<div><div>SW03</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>	Unit 4-8	<div><div>SW01</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>	<div><div>SW03</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>	Unit 9-12	<div><div>SW01</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>	<div><div>SW03</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>	
P.C. board	Setting of SW01	Setting of SW03													
Unit 1-4	<div><div>SW01</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>	<div><div>SW03</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>													
Unit 4-8	<div><div>SW01</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>	<div><div>SW03</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>													
Unit 9-12	<div><div>SW01</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>	<div><div>SW03</div><div>ON</div><div>OFF</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1 2 3 4</div></div>													
		<div>4) Attach the electrical control box cover. (Refer to 1. of 2 Attachment)</div>													

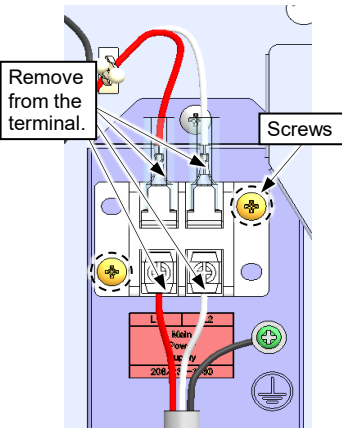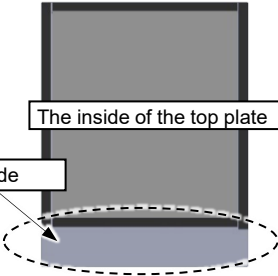
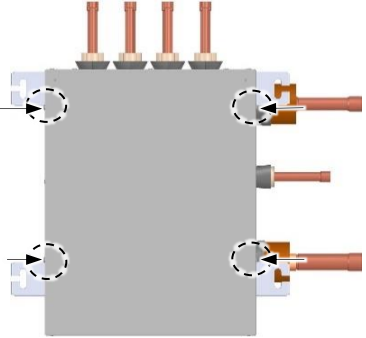
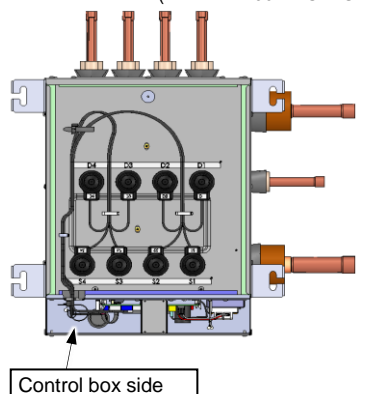
No.	Part	Work procedure	Remarks
3	Terminal	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1-1 Detachment. (Electrical control box cover) 2) Remove the wires from the terminal. 3) Remove the screws fixing the terminal. (M4 x 0.6" (14 mm), 2 pcs) <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Fix the terminal with screws as before. (M4 x 0.6" (14 mm), 2 pcs) 2) Connect the wires disconnected as before. 3) Attach the electrical control box cover. (Refer to 1. of 2 Attachment) 	
4	Top plate	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the fixing screws (M4 x 0.3" (8 mm), 4 pcs) 2) Remove the top plate. <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Fix the Top plate with the screws as before. (M4 x 0.3" (8 mm), 4 pcs) <div data-bbox="496 958 986 1111" style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Fit the non-heat insulation material side to the control box side. Work carefully so as not to pinch the wires inside the unit.</p> </div> <div data-bbox="470 1205 991 1480" style="text-align: center; margin-top: 20px;">  <p>The inside of the top plate</p> <p>Non-heat insulation side</p> </div>	<div style="text-align: center; margin-bottom: 20px;">  </div> <p style="text-align: center;">(ex. RBM-Y0611FU4PUL)</p> <div style="text-align: center;">  <p>Control box side</p> </div>

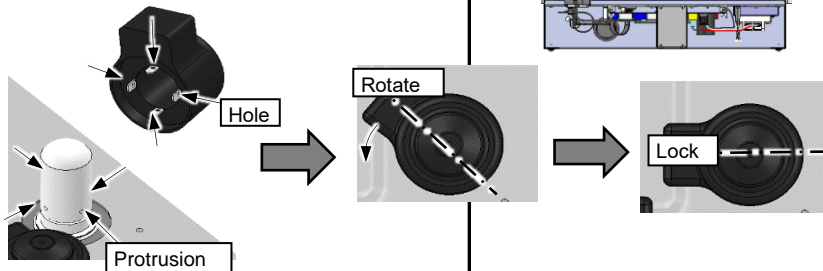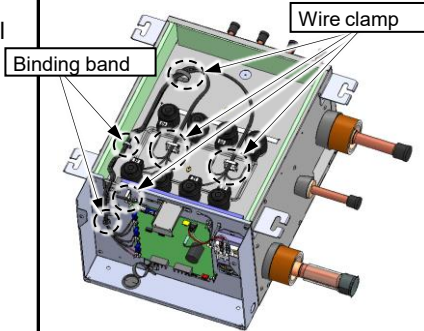
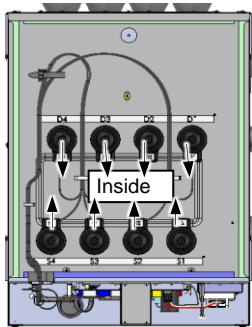
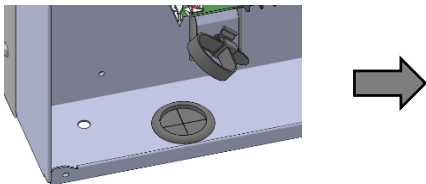
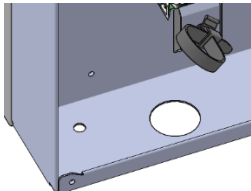

No.	Part	Work procedure	Remarks
5	Coil-PMV	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. -1) (Electrical control box cover) and 4. -1) (Top plate). 2) Cut the binding band as appropriate and remove the PMV wire from the wire clamp. 3) Disconnect the PMV wire connector from the control P.C. board. 4) Remove the Coil-PMV. <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Fix the Coil-PMV assembly as before. <div data-bbox="469 680 976 875" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Rotate the Coil-PMV to lock the Body-PMV by mating the protrusions of the Body-PMV with the holes in the Coil-PMV. When performing this task, the Coil-PMV should have the wires facing inward.</p> </div> <div data-bbox="523 927 1350 1196" style="text-align: center;">  </div> <ol style="list-style-type: none"> 2) Connect the wires disconnected as before. 3) Attach the binding band (locally procured) and wire clamps to the PMV wires as before. 4) Attach the electrical control box cover and the top plate. (Refer to 1. -2) and 4. -2)) 	<div data-bbox="957 210 1382 539" style="text-align: center;">  </div> <p style="text-align: center;">(ex. RBM-Y6011FU4PUL)</p> <p>PMV wire direction</p> <div data-bbox="1062 651 1315 976" style="text-align: center;">  </div>
6	BUSHING	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. of 1 Detachment. (Electrical control box cover) 2) Remove the bushing from the electrical control box. <div data-bbox="512 1559 940 1742" style="text-align: center;">  </div> <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Attach the bushing to the electrical control box. <div data-bbox="485 1890 956 1977" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Push the bushing to set its groove to steel sheet certainly.</p> </div> <ol style="list-style-type: none"> 2) Attach the electrical control box cover. (Refer to 1. of 2 Attachment) 	<div data-bbox="1018 1552 1270 1742" style="text-align: center;">  </div> <div data-bbox="1050 1890 1342 1939" style="text-align: center;">  </div>

14-2. Flow Selector unit Single-port type

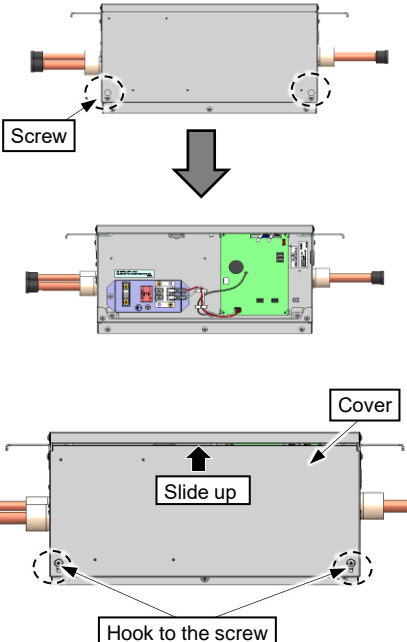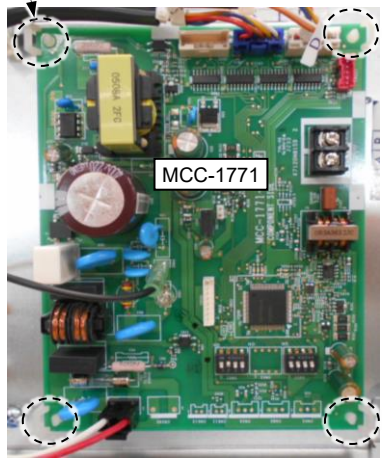No.	Part	Work procedure	Remarks
1	Electrical control box cover	<p>⚠WARNING</p> <hr/> <ul style="list-style-type: none"> •Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object. •Stop the power supply of the air conditioner and turn off switch of the power supply breaker. <hr/> <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Loosen fixing screws. (M4 x 0.3" (8 mm), 2 pcs) 2) Pull the cover downward and then remove the cover. <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Hook the electrical control box cover on the screw on the upper side. (2 places) 2) Slide up the cover and fit it in. <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> Work carefully so as not to pinch the wires inside the box. </div> <ol style="list-style-type: none"> 3) Tighten the screws. (M4 x 0.3" (8 mm), 2 pcs) 	 <p>The diagram illustrates the process of removing and installing the electrical control box cover. It shows the cover being detached by pulling it down and then re-attached by hooking it onto the screws and sliding it up.</p>
2	P.C.board (MCC-1771)	<ol style="list-style-type: none"> 1) Perform work of procedure 1-1 Detachment. (Electrical control box cover) 2) Remove connectors which are connected from the control P.C.board to the other parts. CN04: Earth wire (Faston tab) CN67: Power supply wires (Black) CN200: Communication wire (Terminal block) CN581: Communication wire (Yellow) CN602: PMV-S (Blue) CN603: PMV-D (White) 3) Unlock the locks of the card edge spacer (4 places) and then remove the control P.C.board. 	 <p>The photograph shows the P.C.board (MCC-1771) with the card edge spacer removed. The board is green and populated with various electronic components. The card edge spacer is shown at the top, with four locks being unlocked.</p>

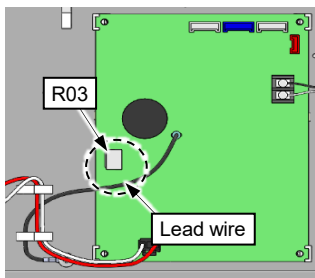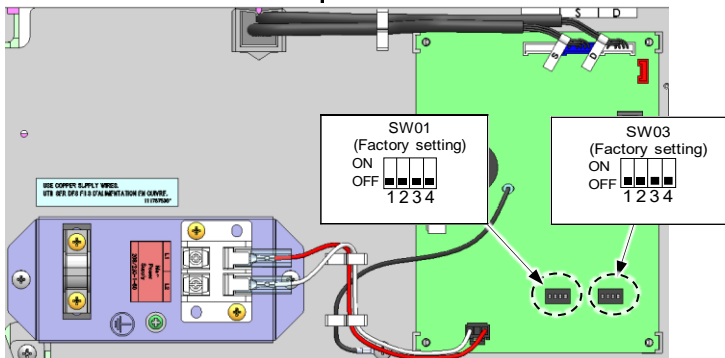No.	Part	Work procedure	Remarks									
		<div><div>2 Attachment</div><div>1) Fix the control P.C. board to the card edge spacers. (4 places)</div><div>2) Connect the connectors disconnected in item 1-2) as before.</div><div><div>For connectors, check there is no missing or contact failure. The lead wire should be wired so as not to touch the cement resistance R03.</div></div><div>3) DIP switch SW01 and SW03 should be set according to the table below.</div></div>	<div></div>									
		<div></div>										
		<table><tr><th>RBM-***</th><th>Setting of SW01</th><th>Setting of SW03</th></tr><tr><td>Y0611FUPUL</td><td><div>SW01 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div></td><td><div>SW03 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div></td></tr><tr><td>Y0961FUPUL</td><td><div>SW01 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div></td><td><div>SW03 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div></td></tr></table>	RBM-***	Setting of SW01	Setting of SW03	Y0611FUPUL	<div>SW01 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div>	<div>SW03 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div>	Y0961FUPUL	<div>SW01 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div>	<div>SW03 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div>	
RBM-***	Setting of SW01	Setting of SW03										
Y0611FUPUL	<div>SW01 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div>	<div>SW03 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div>										
Y0961FUPUL	<div>SW01 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div>	<div>SW03 (Factory setting) ON <input type="checkbox"/> OFF <input checked="" type="checkbox"/> 1 2 3 4</div>										
		<div>4) Attach the electrical control box cover. (Refer to 1. of 2 Attachment)</div>										

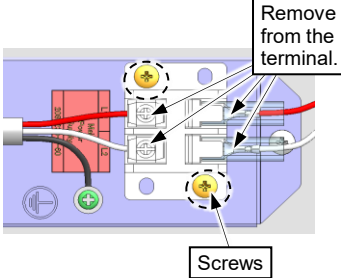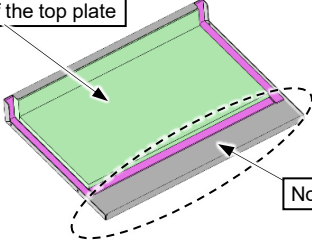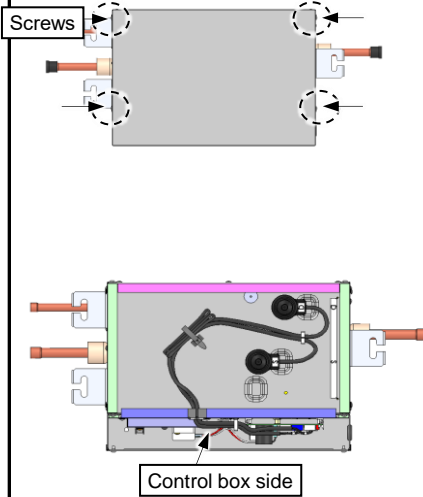No.	Part	Work procedure	Remarks
3	Terminal	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1-1 Detachment. (Electrical control box cover) 2) Remove the wires from the terminal. 3) Remove the screws fixing the terminal. (M4 x 0.6" (14 mm), 2 pcs) <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Fix the terminal with screws as before. (M4 x 0.6" (14 mm), 2 pcs) 2) Connect the wires disconnected as before. 3) Attach the electrical control box cover. (Refer to 1. of 2 Attachment) 	
4	Top plate	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the fixing screws (M4 x 0.3" (8 mm), 4 pcs) 2) Remove the top plate. <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Fix the Top plate with the screws as before. (M4 x 0.3" (8 mm), 4 pcs) <div data-bbox="496 976 970 1122" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Fit the non-heat insulation material side to the control box side. Work carefully so as not to pinch the wires inside the unit.</p> </div> <div data-bbox="475 1160 1114 1406">  </div>	

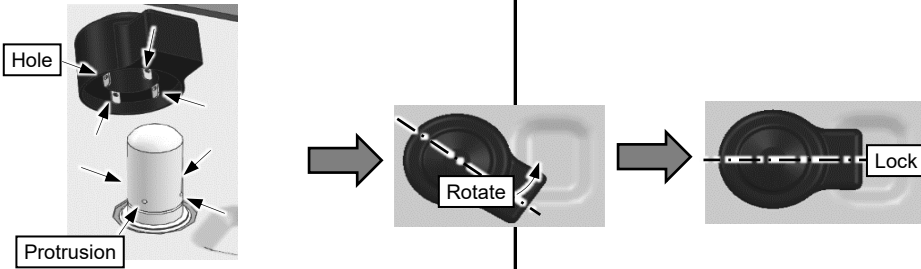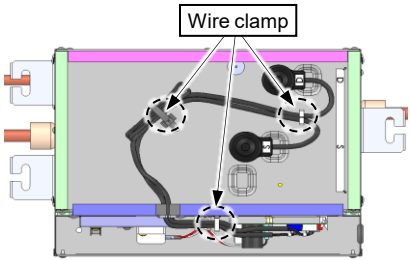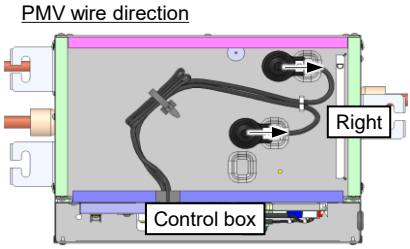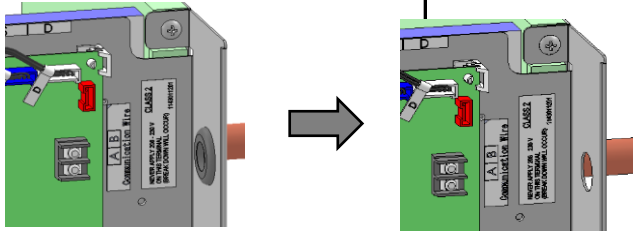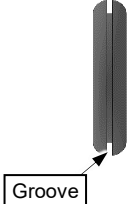
No.	Part	Work procedure	Remarks
5	Coil-PMV	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. -1) (Electrical control box cover) and 4. -1) (Top plate). 2) Remove the PMV wire from the wire clamp as appropriate. 3) Disconnect the PMV wire connector from the control P.C. board. 4) Remove the Coil-PMV. <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Fix the Coil-PMV assembly as before. <div data-bbox="477 562 963 781" style="border: 1px solid black; padding: 5px;"> <p>Rotate the Coil-PMV to lock the Body-PMV by mating the protrusions of the Body-PMV with the holes in the Coil-PMV. When performing this task, the Coil-PMV wires should be oriented to the right as viewed from the control box.</p> </div> <div data-bbox="477 804 1402 1072">  </div> <ol style="list-style-type: none"> 2) Connect the wires disconnected as before. 3) Attach wire clamps to the PMV wires as before. 4) Attach the electrical control box cover and the top plate. (Refer to 1. -2) and 4. -2)) 	 
6	BUSHING	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. of 1 Detachment. (Electrical control box cover) 2) Remove the bushing from the electrical control box. <div data-bbox="568 1442 1203 1671">  </div> <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Attach the bushing to the electrical control box. <div data-bbox="485 1834 959 1901" style="border: 1px solid black; padding: 5px;"> <p>Push the bushing to set its groove to steel sheet certainly.</p> </div> <ol style="list-style-type: none"> 2) Attach the electrical control box cover. (Refer to 1. of 2 Attachment) 	

No.	Part	Work procedure	Remarks
8	BODY-SERVE	<p>Before the work, be sure to recover the refrigerant of outdoor unit into cylinders or another unit connected to the same system. (Refer to the chapter "Refrigerant Recovery")</p> <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove connecting pipes from the Flow Selector unit 2) Remove the Flow Selector unit from three hanging-bolts. 3) Perform work of procedure 5. of 1 Detachment. (Coil-PMV: S, D) 4) Remove screws of the electrical control box. (M4 x 0.3" (8 mm), 4 pcs) 5) Remove screws of the three hanging brackets. (M4 x 0.3" (8 mm), 6 pcs) <p>2 Attachment</p> <ol style="list-style-type: none"> 1) Attach the three hanging brackets with the screws. (M4 x 0.3" (8 mm), 6 pcs) 2) Attach the electrical control box with the screws. (M4 x 0.3" (8 mm), 4 pcs) 3) Perform work of procedure 5. of 2 Attachment. (Coil-PMV: S, D) <div data-bbox="483 1048 965 1227" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Attach Coil-PMV according to the coil nameplate on the Body-serve. Connect the Coil-PMV wire connectors to the control P.C. board according to the coil nameplate on the electrical control box.</p> </div> <p>4) Hang the Flow Selector unit by fixing three hanging brackets with washers.</p> <div data-bbox="472 1570 976 1749" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Put washers at up and down of the three hanging brackets to hang down the Flow Selector unit. Check that four sides are horizontal with a level gauge. (Horizontal degree: Within 5 mm)</p> </div> <p>5) Connect and braze the connecting pipe as before.</p> <div data-bbox="564 1816 1353 2063" style="text-align: center;"> </div>	<p>Screws</p> <p>Electrical control box</p> <p>Screws</p> <p>Hanging bracket</p> <p>Body-serve</p> <p>S</p> <p>D</p> <p>Electrical control box</p> <p>S</p> <p>D</p> <p>Washer</p> <p>Hanging bracket</p> <p>Unit</p> <p>Washer</p>


15. EXPLODED DIAGRAM/PARTS LIST

15-1. Outdoor unit



MMY-MUP0721FT6P-UL
MMY-MUP0961FT6P-UL
MMY-MUP072H1FT6PUL

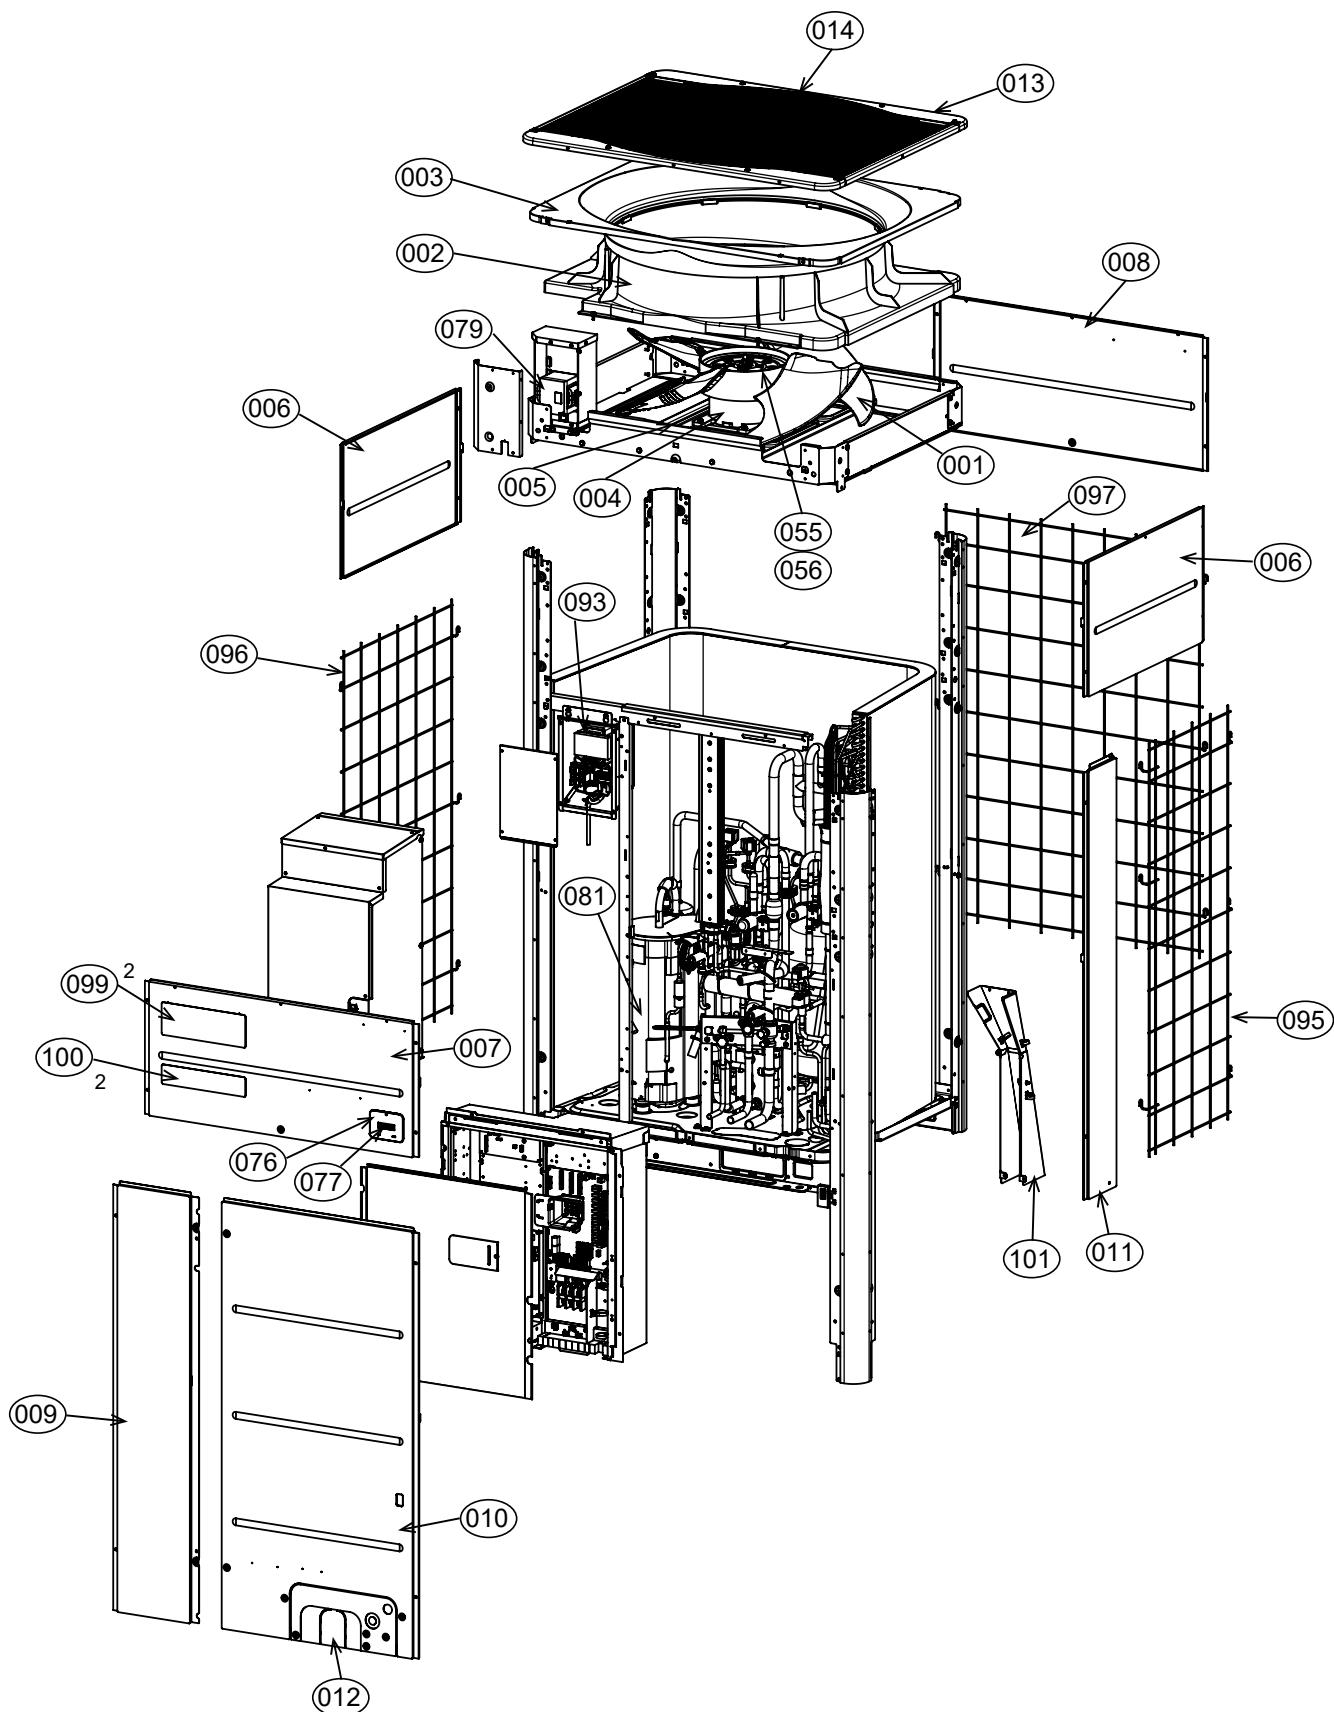


MMY-MUP0721FT9P-UL
 MMY-MUP0961FT9P-UL
 MMY-MUP072H1FT9PUL

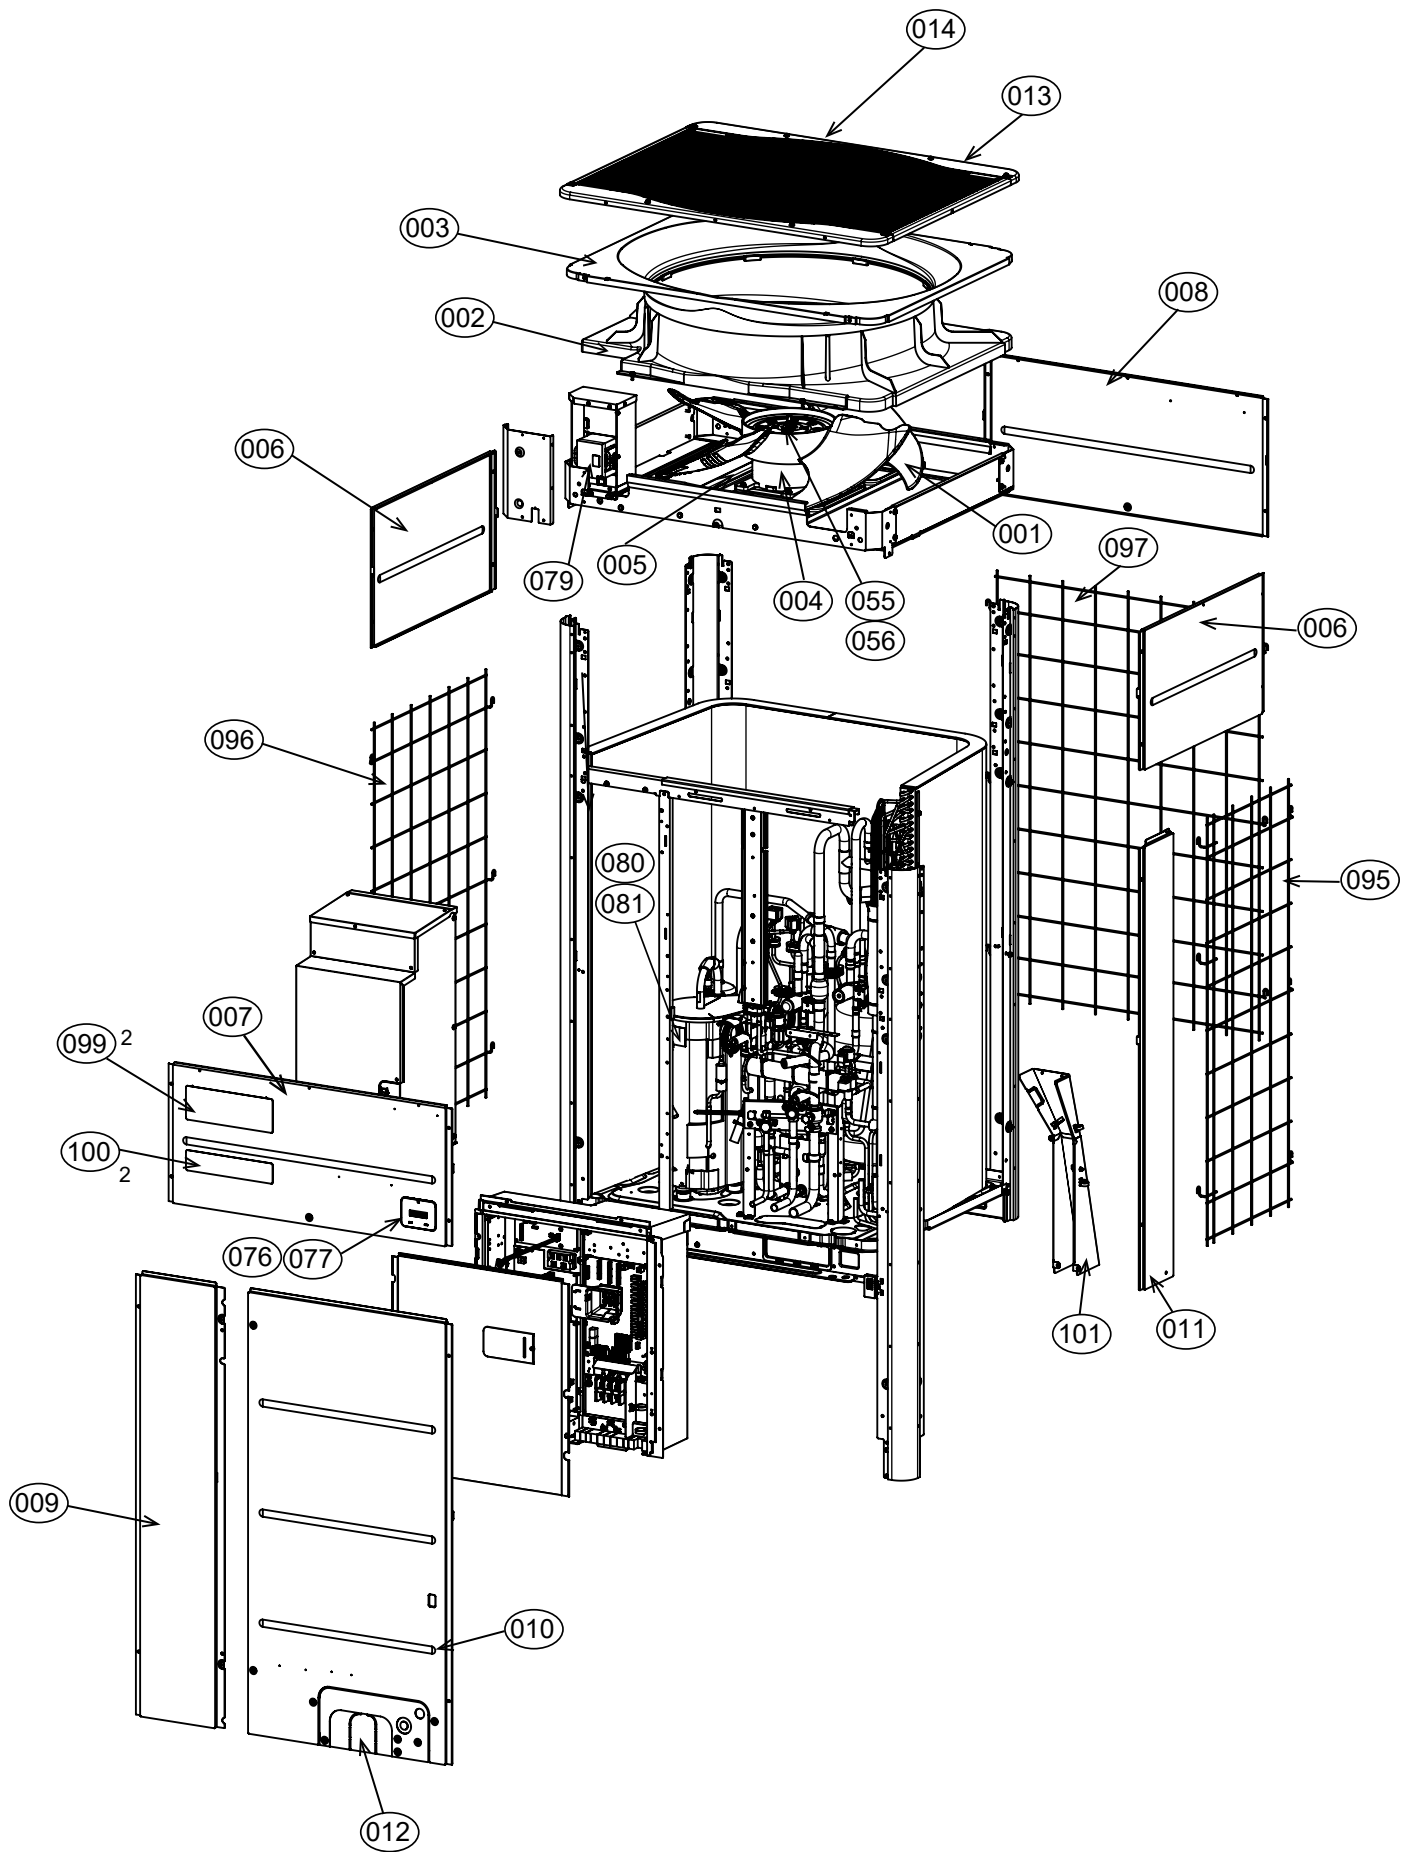




MMY-MUP0721FT6P-UL, MMY-MUP0961FT6P-UL, MMY-MUP072H1FT6PUL,
MMY-MUP0721FT9P-UL, MMY-MUP0961FT9P-UL, MMY-MUP072H1FT9PUL

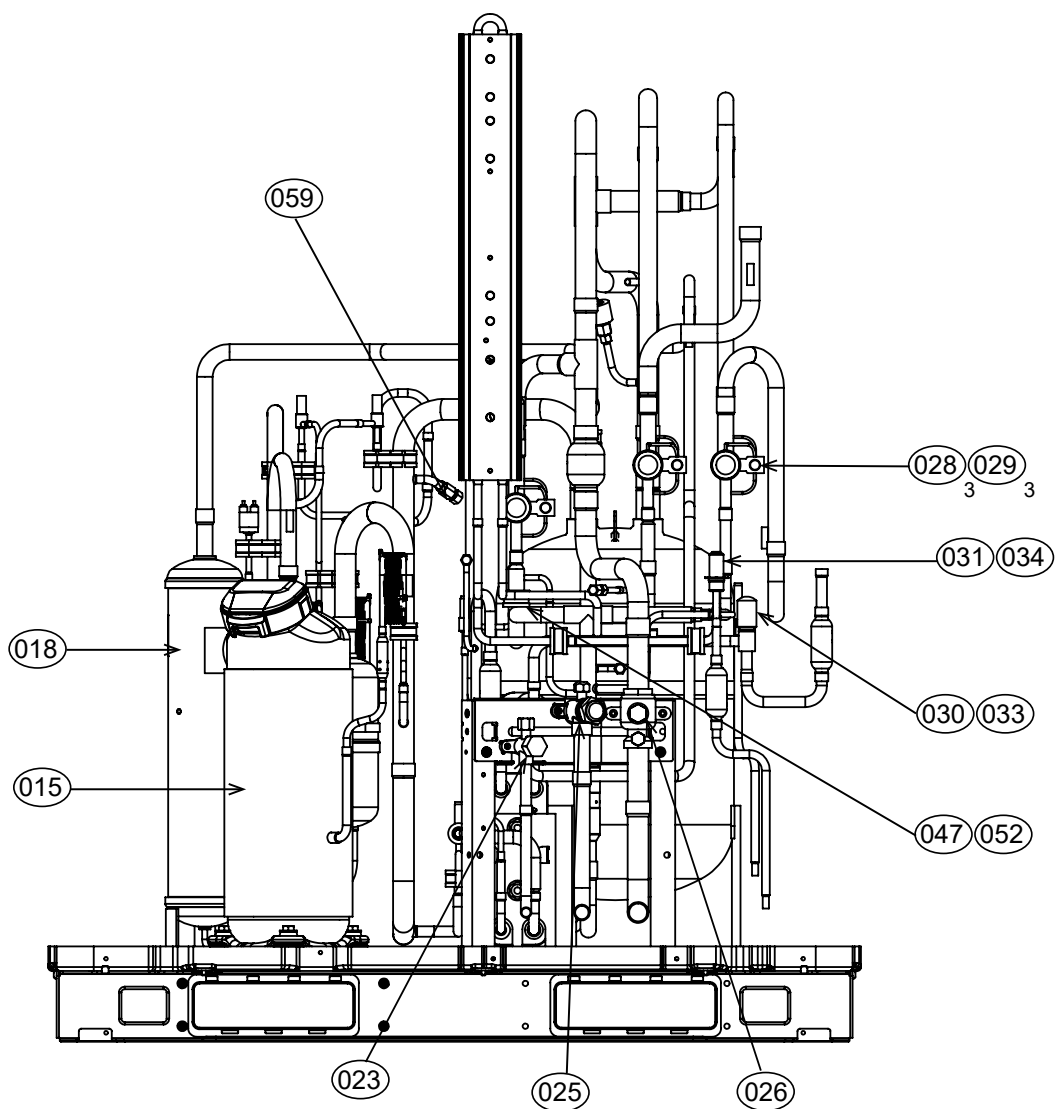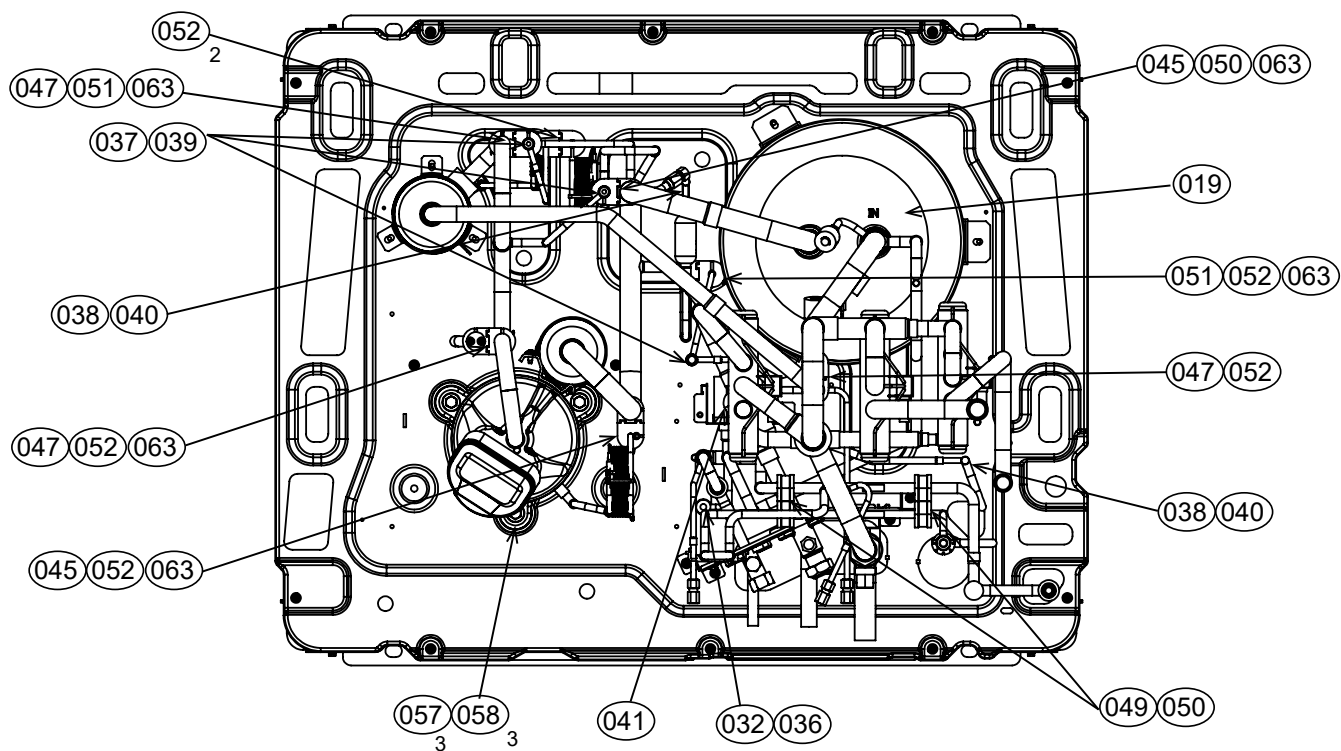


MMY-MUP0721FT6P-UL, MMY-MUP0961FT6P-UL, MMY-MUP072H1FT6PUL,
MMY-MUP0721FT9P-UL, MMY-MUP0961FT9P-UL, MMY-MUP072H1FT9PUL

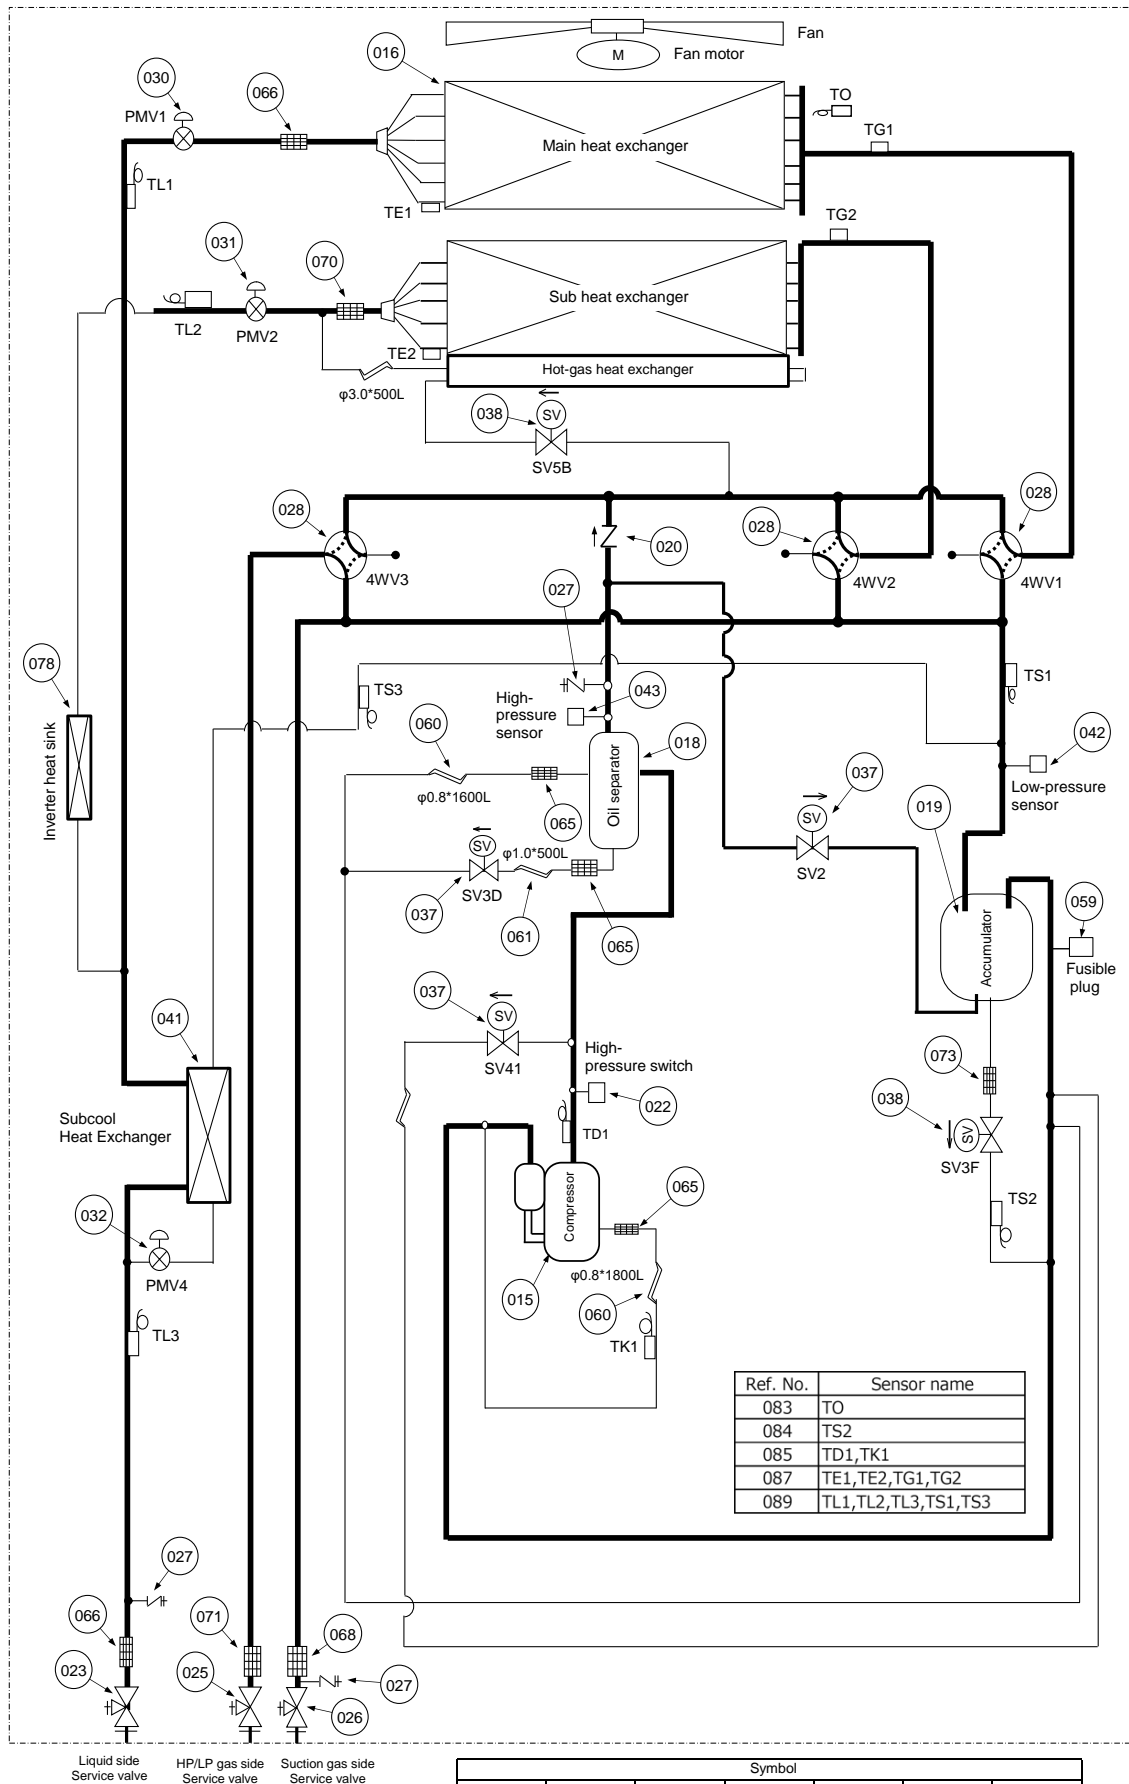

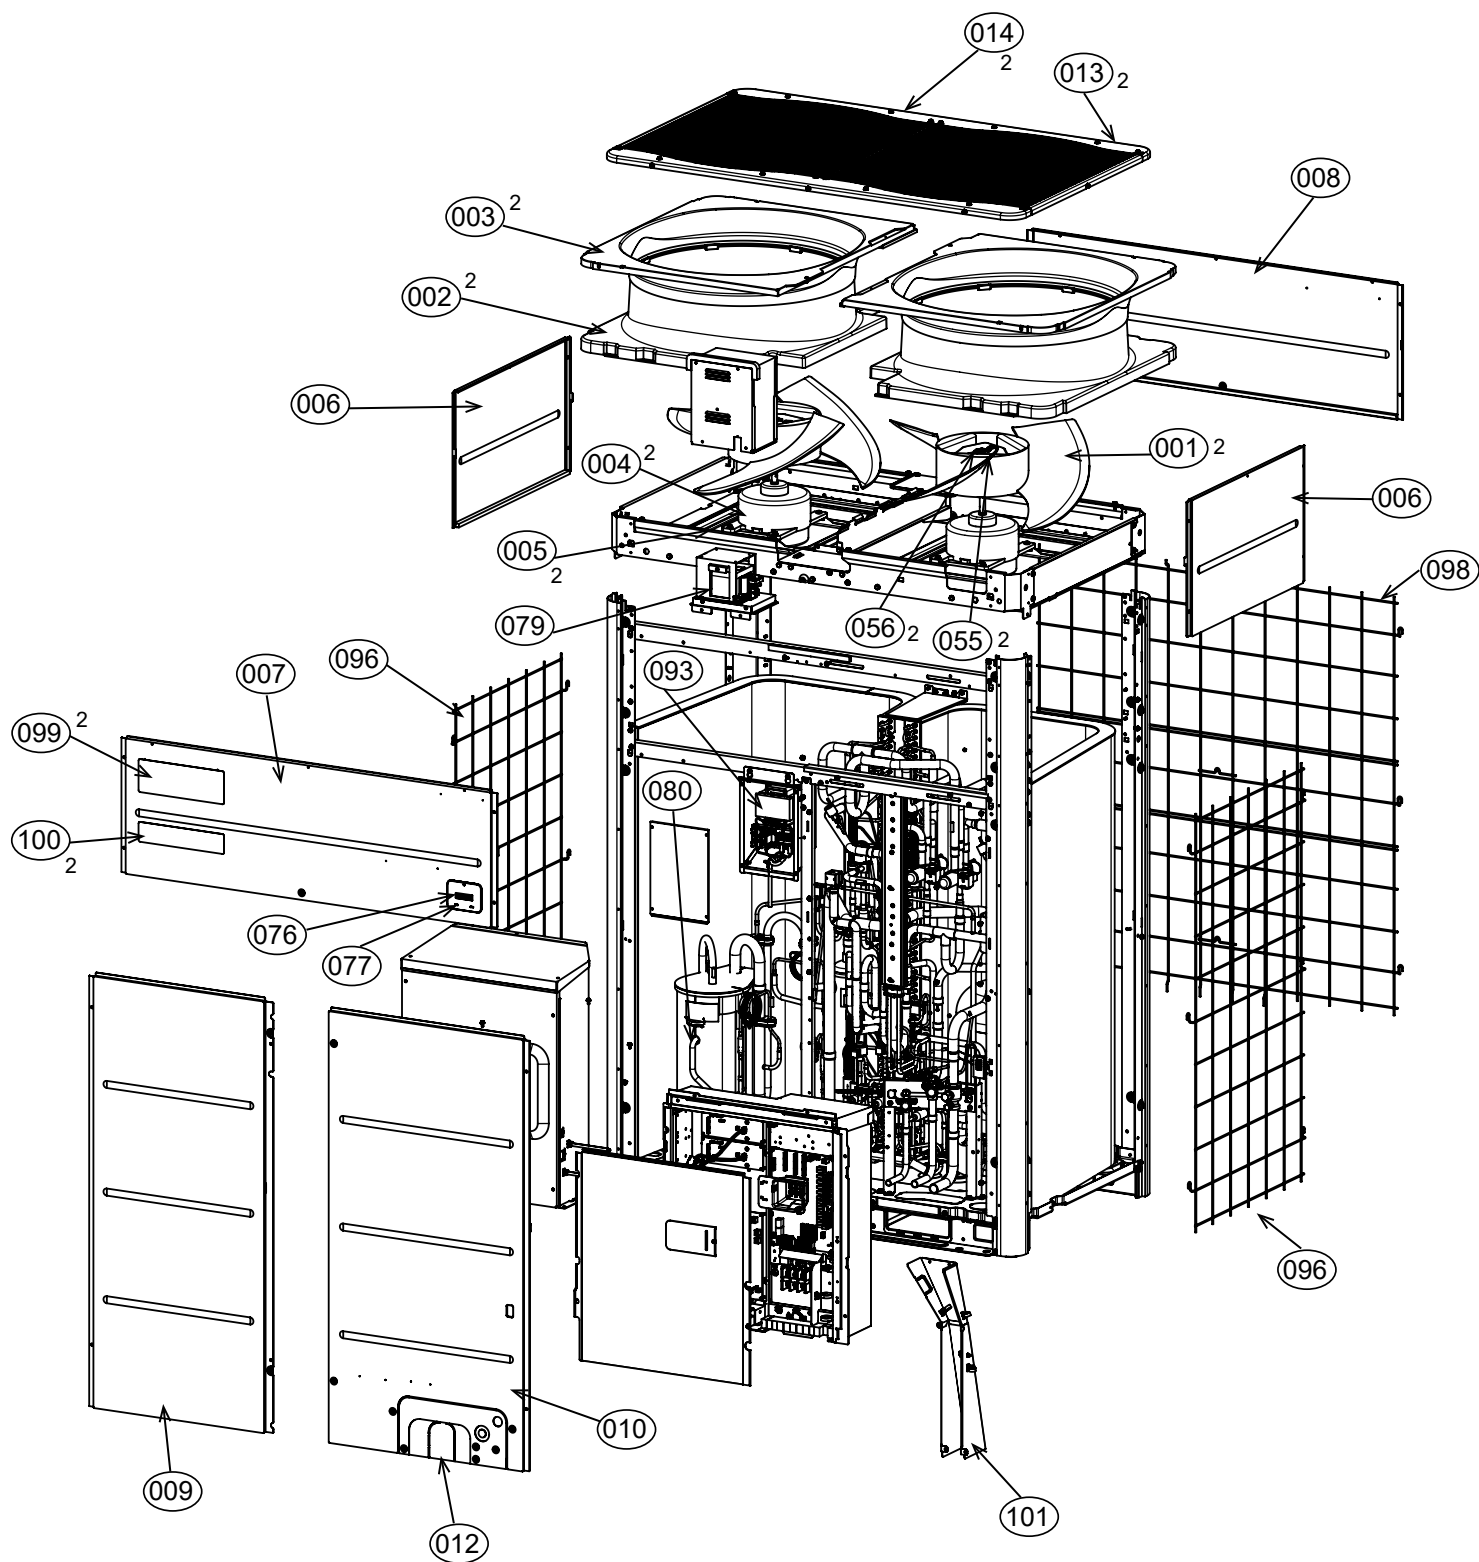


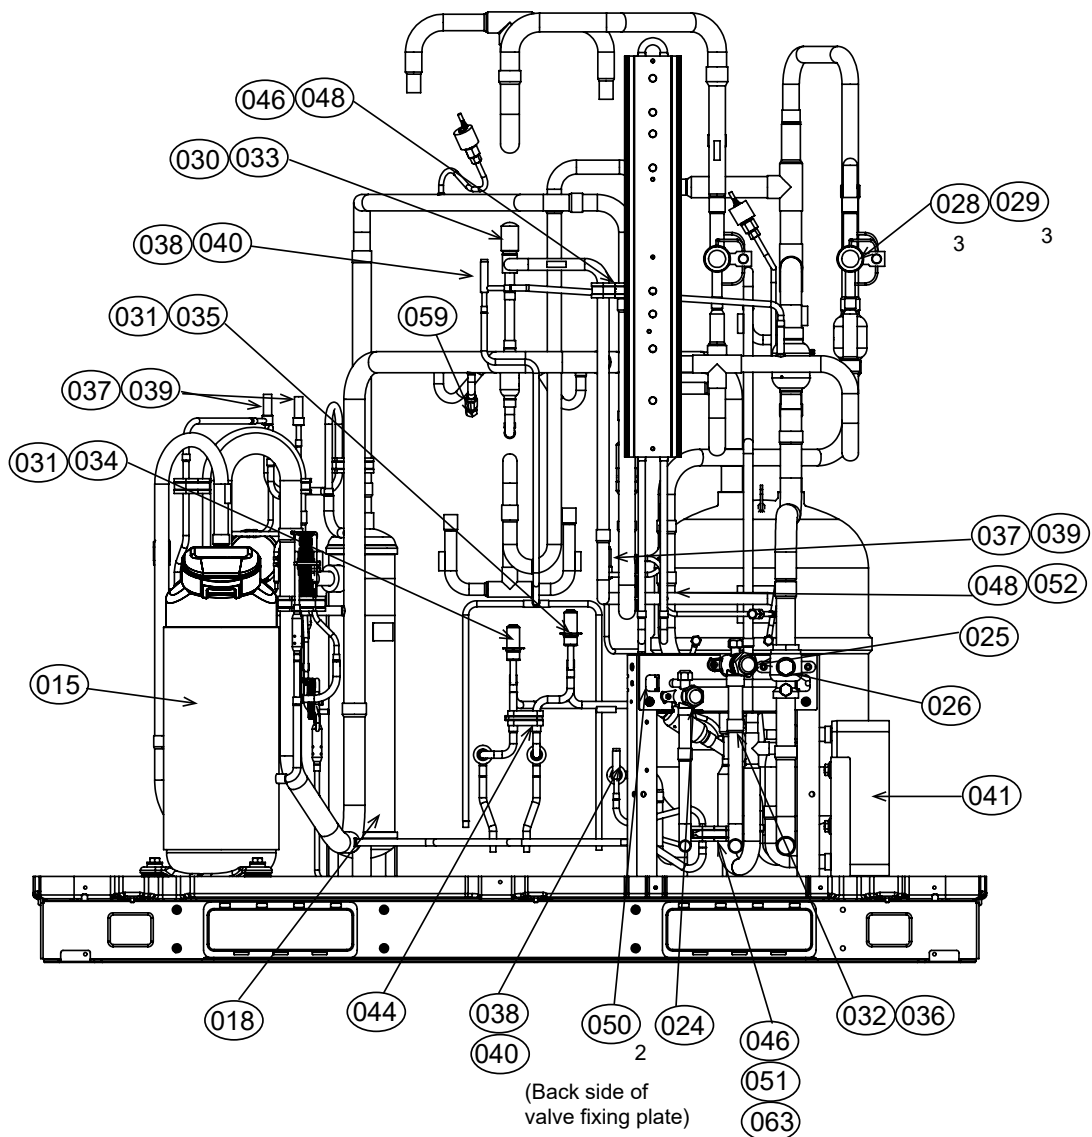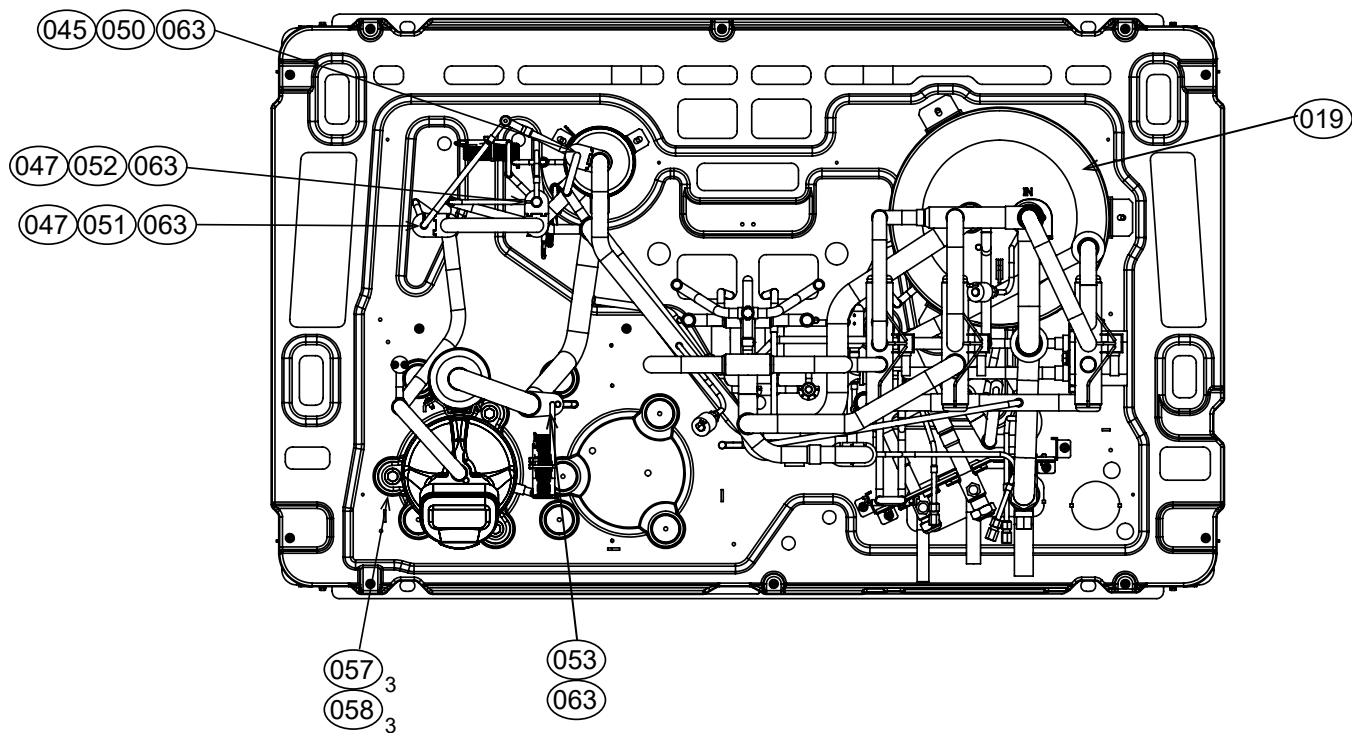


MMY-MUP1441FT6P-UL
MMY-MUP1681FT6P-UL
MMY-MUP096H1FT6PUL
MMY-MUP120H1FT6PUL

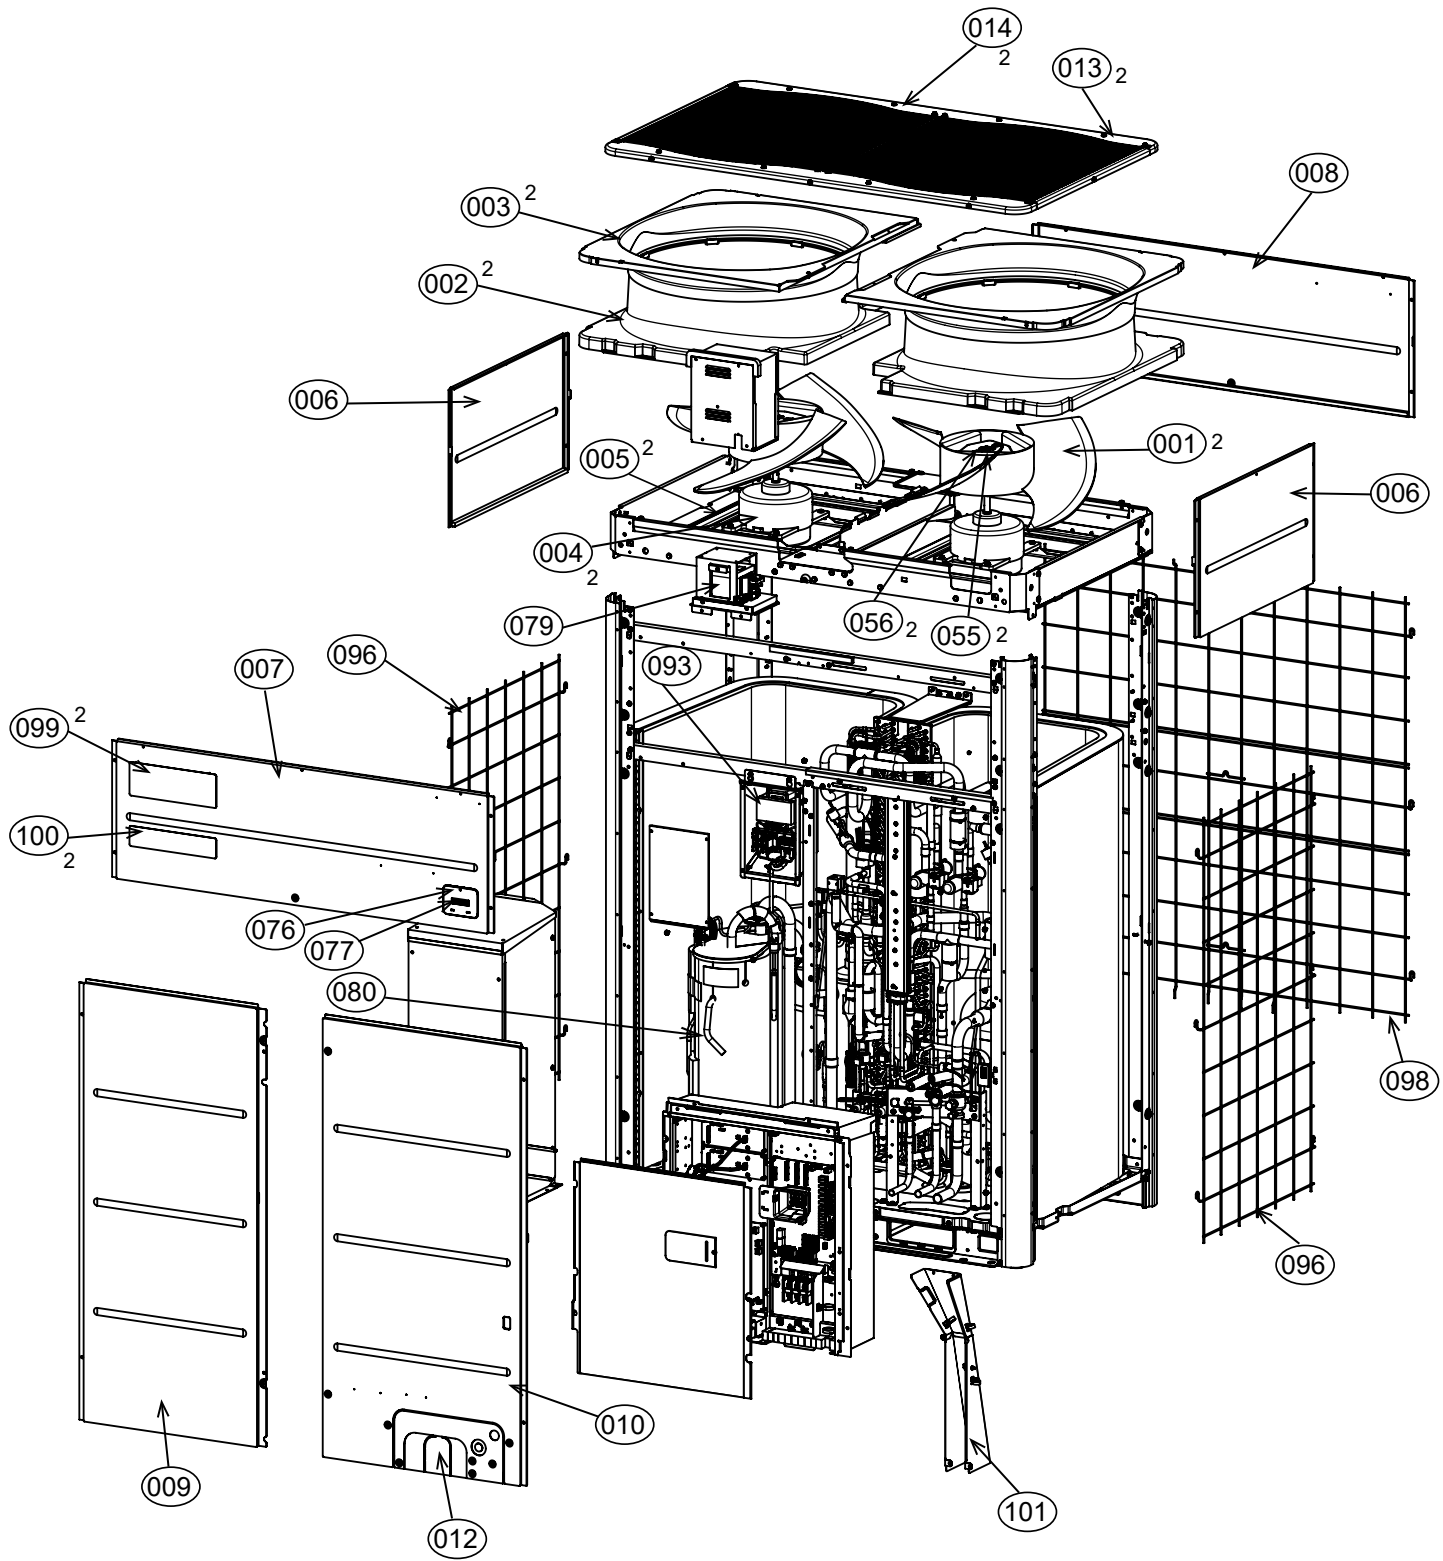


MMY-MUP1441FT9P-UL
MMY-MUP1681FT9P-UL
MMY-MUP096H1FT9PUL
MMY-MUP120H1FT9PUL

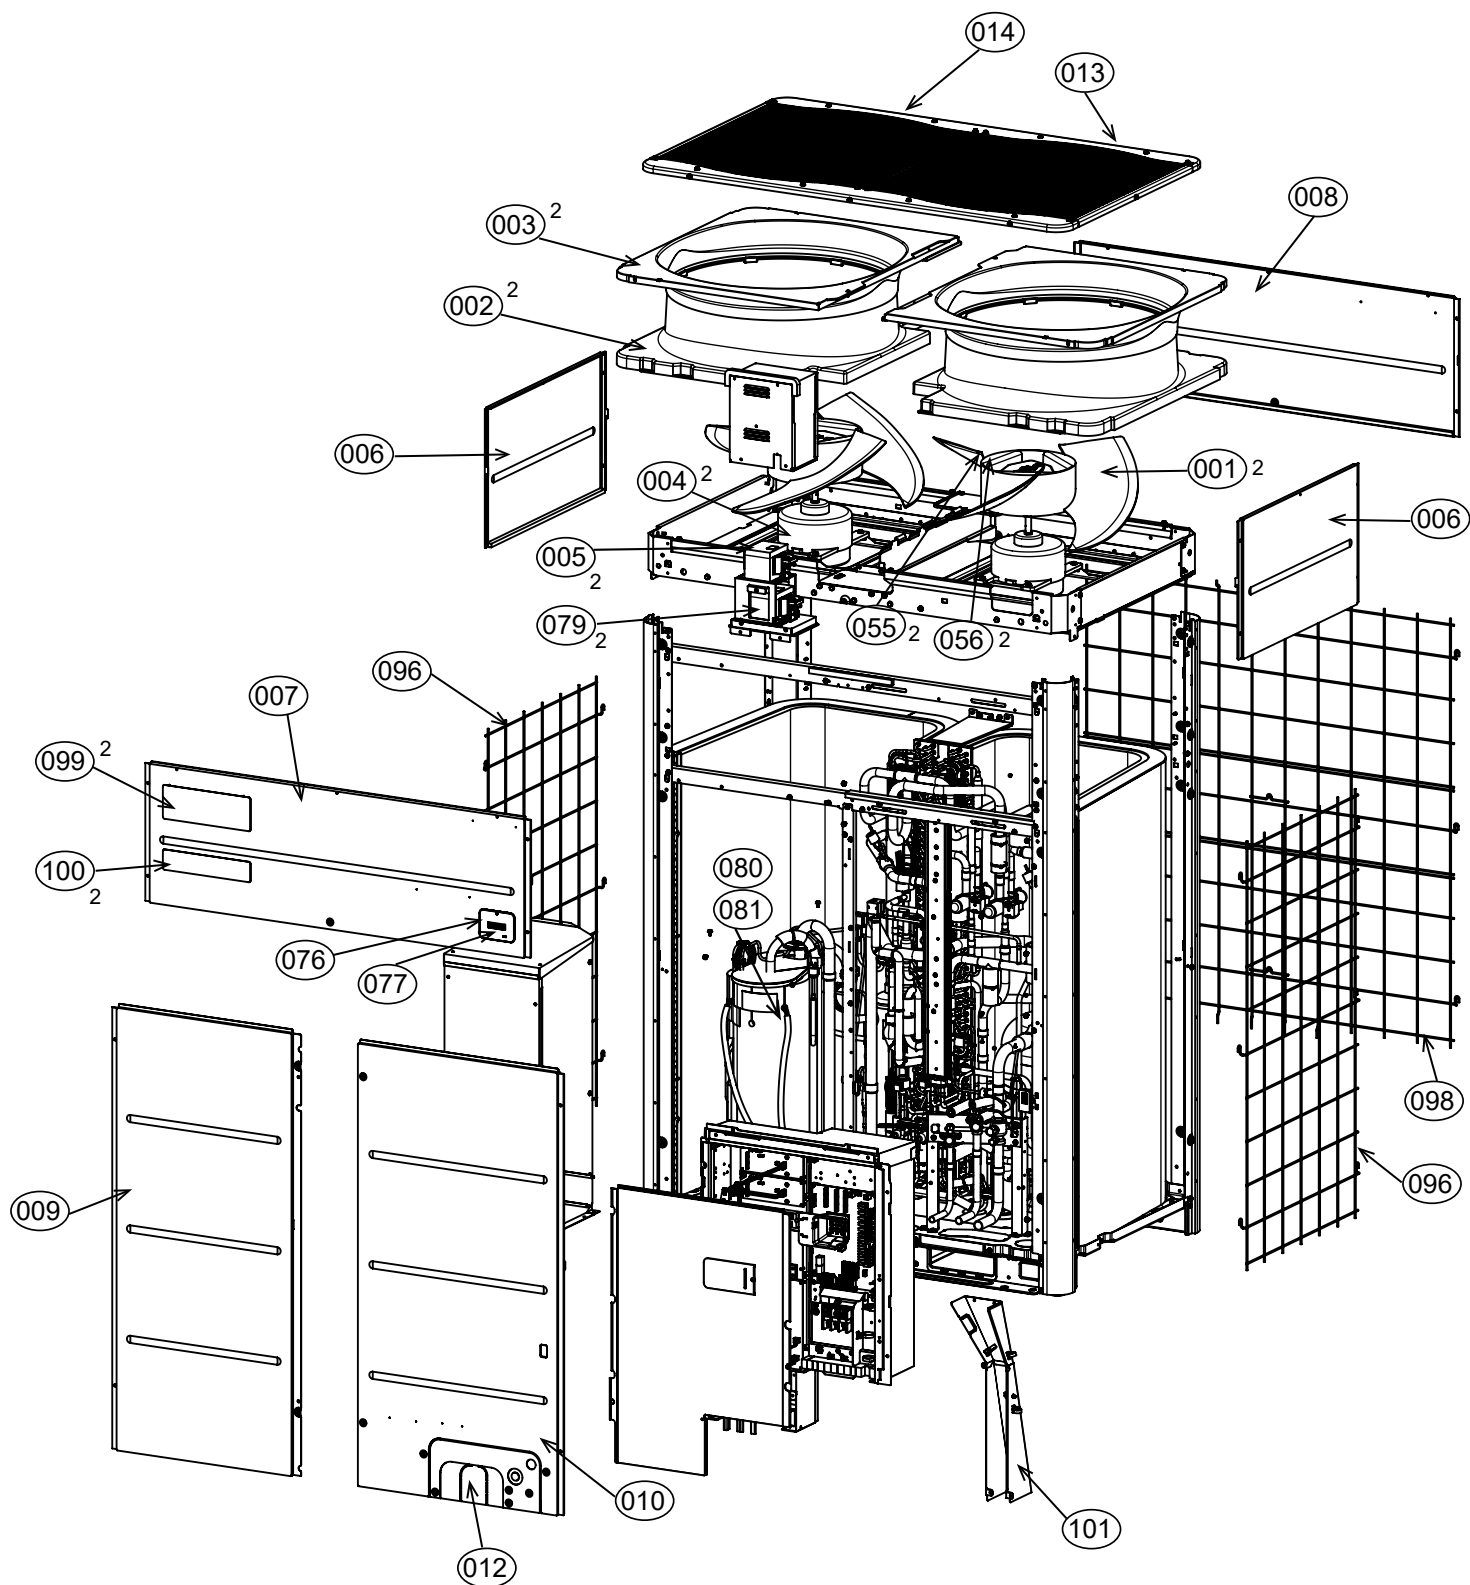




MMY-MUP1441FT6P-UL, MMY-MUP1681FT6P-UL, MMY-MUP096H1FT6PUL, MMY-MUP120H1FT6PUL,
MMY-MUP1441FT9P-UL, MMY-MUP1681FT9P-UL, MMY-MUP096H1FT9PUL, MMY-MUP120H1FT9PUL

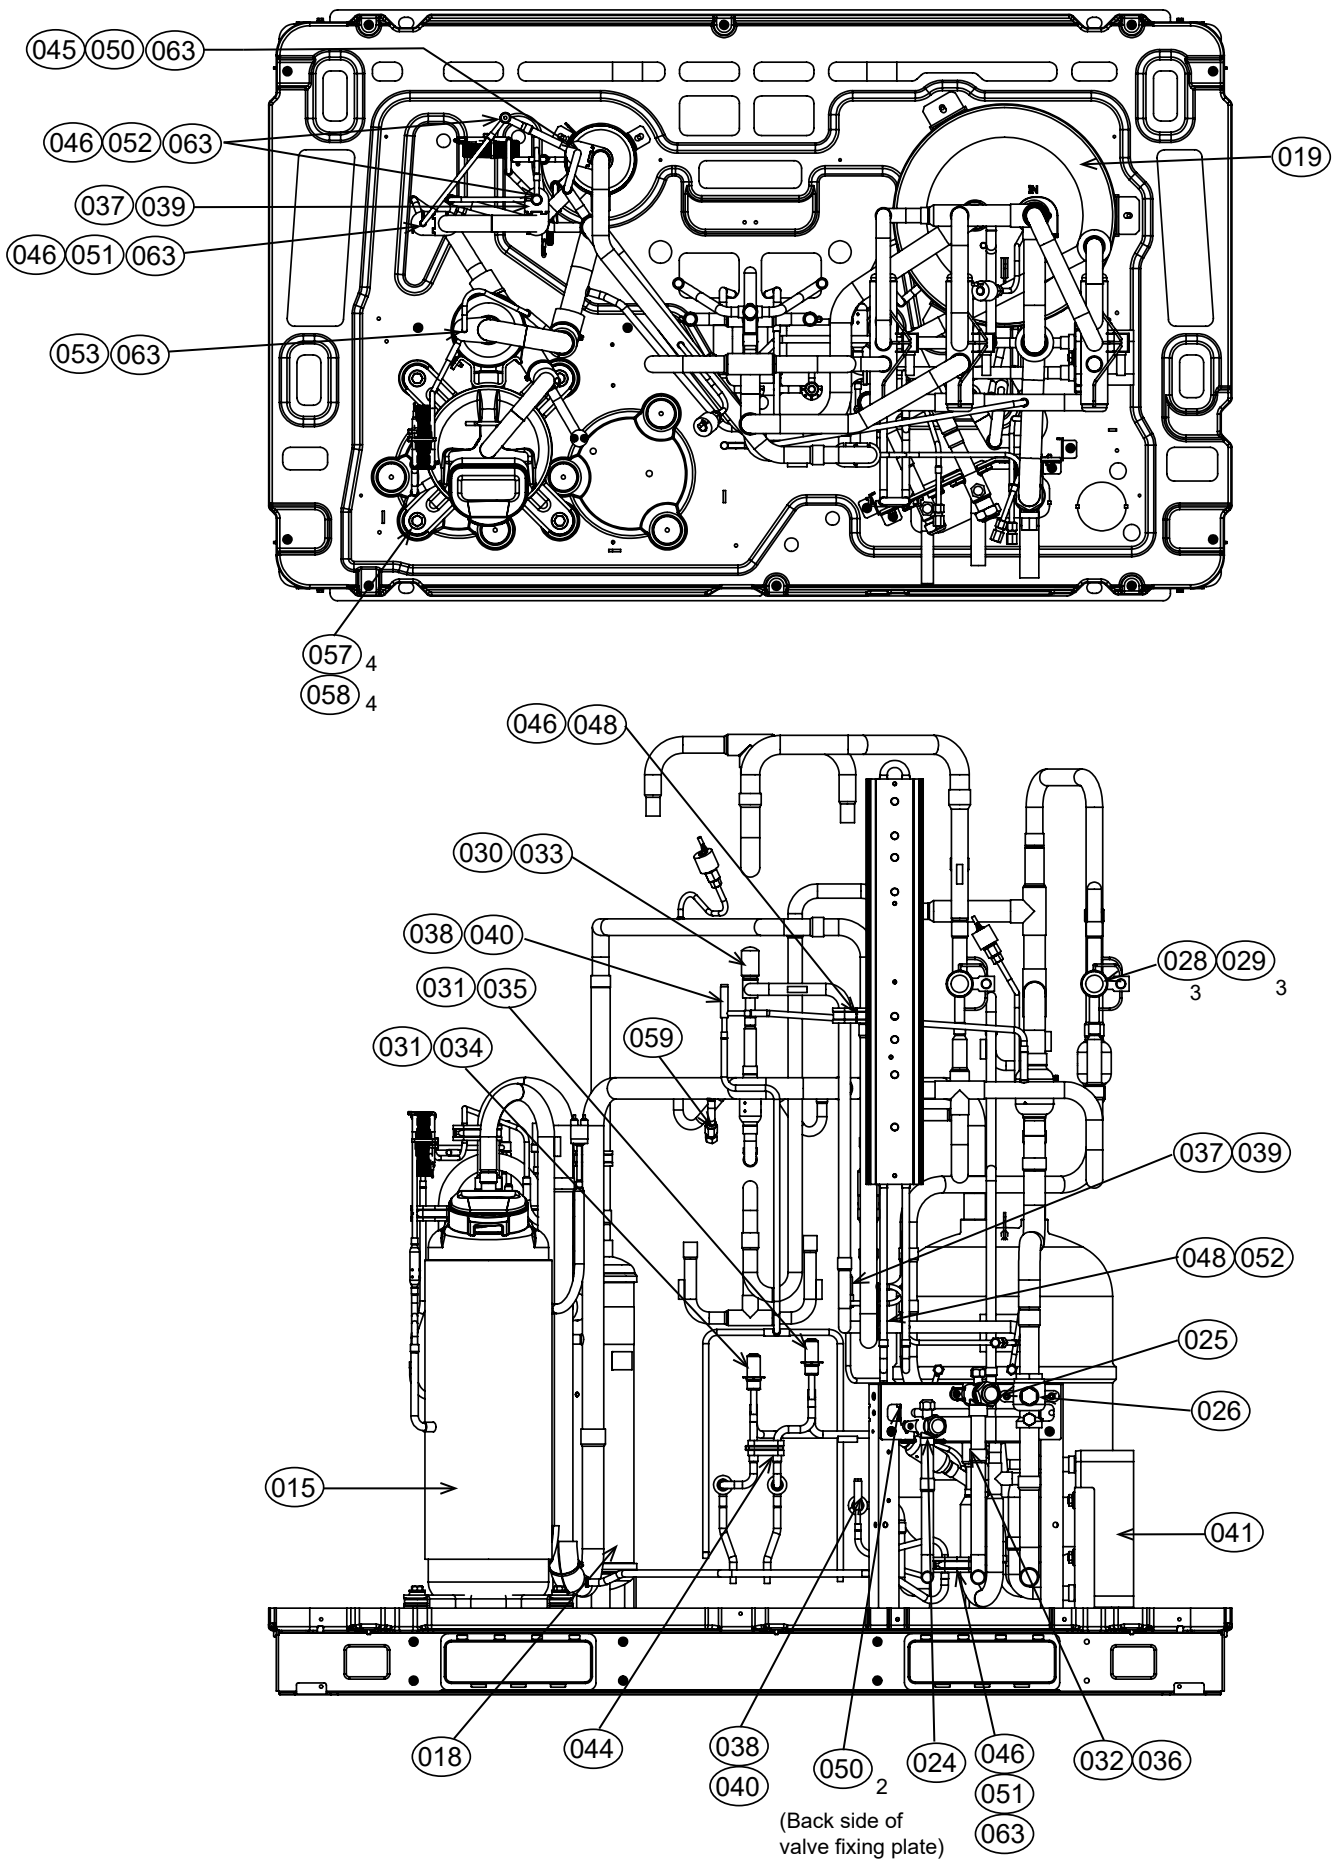


MMY-MUP1201FT6P-UL, MMY-MUP1441FT6P-UL, MMY-MUP1681FT6P-UL,
 MMY-MUP096H1FT6PUL, MMY-MUP120H1FT6PUL,
 MMY-MUP1201FT9P-UL, MMY-MUP1441FT9P-UL, MMY-MUP1681FT9P-UL,
 MMY-MUP096H1FT9PUL, MMY-MUP120H1FT9PUL,

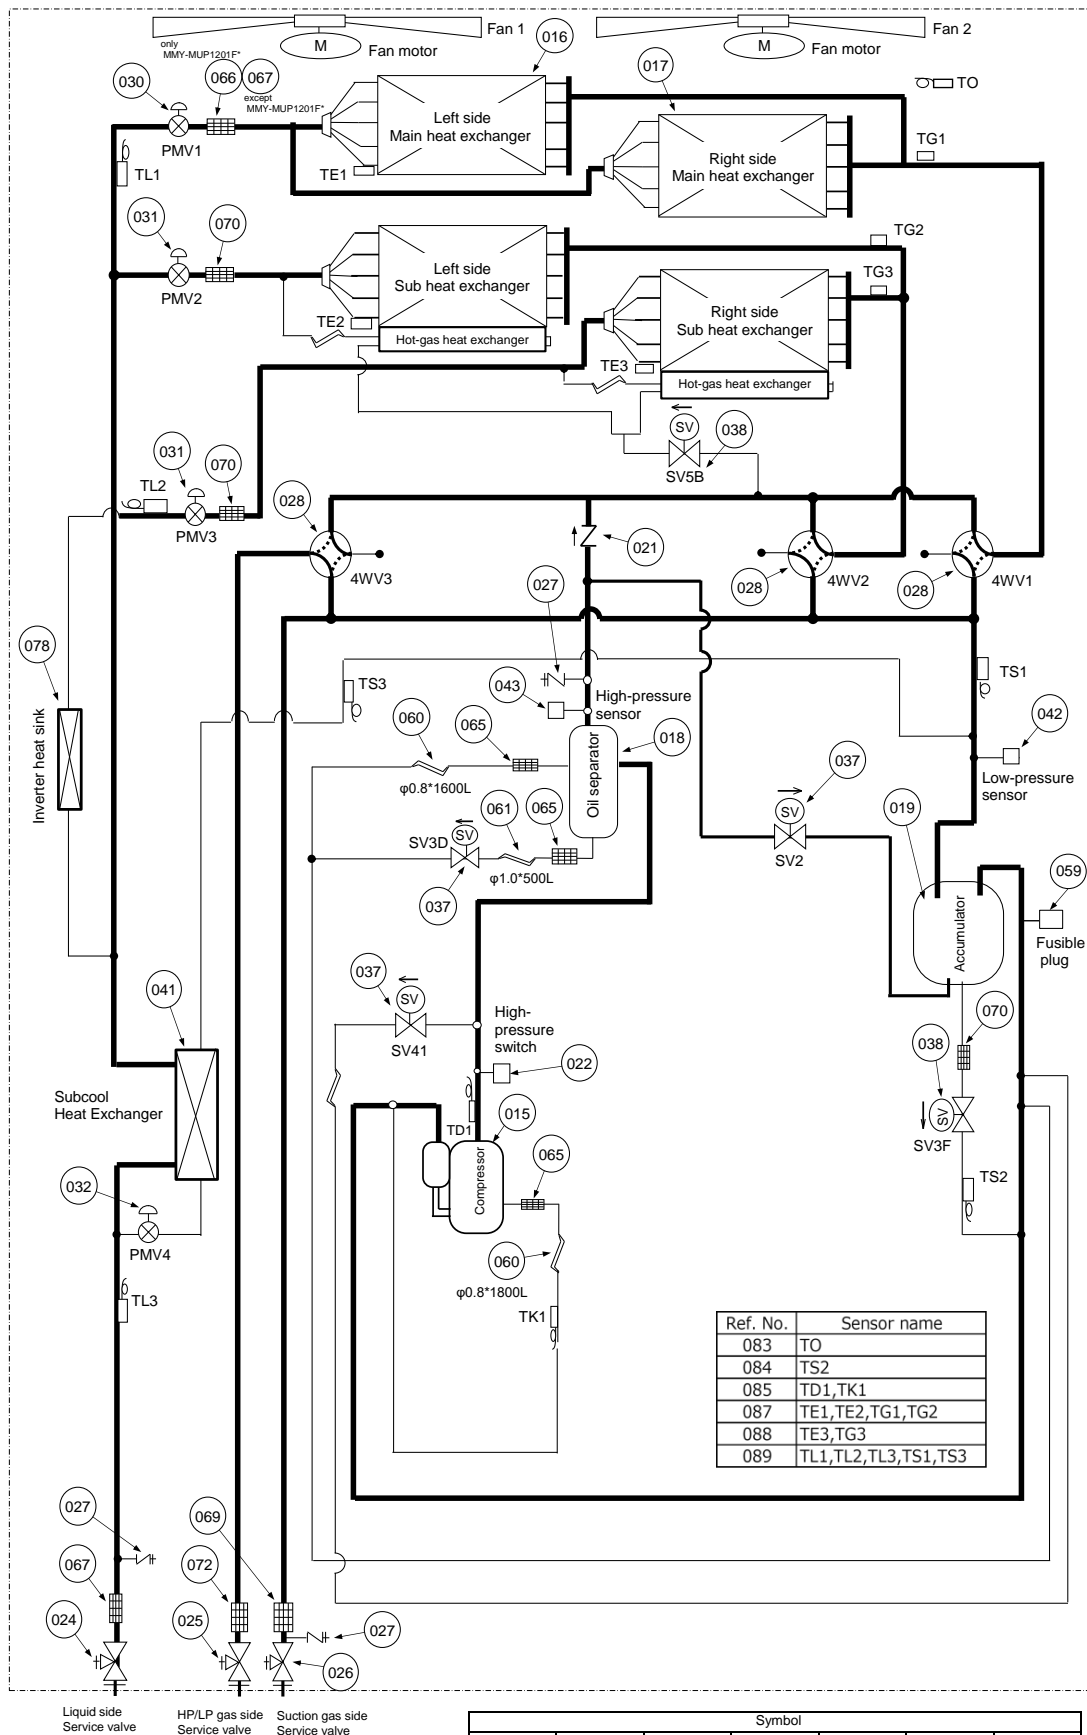

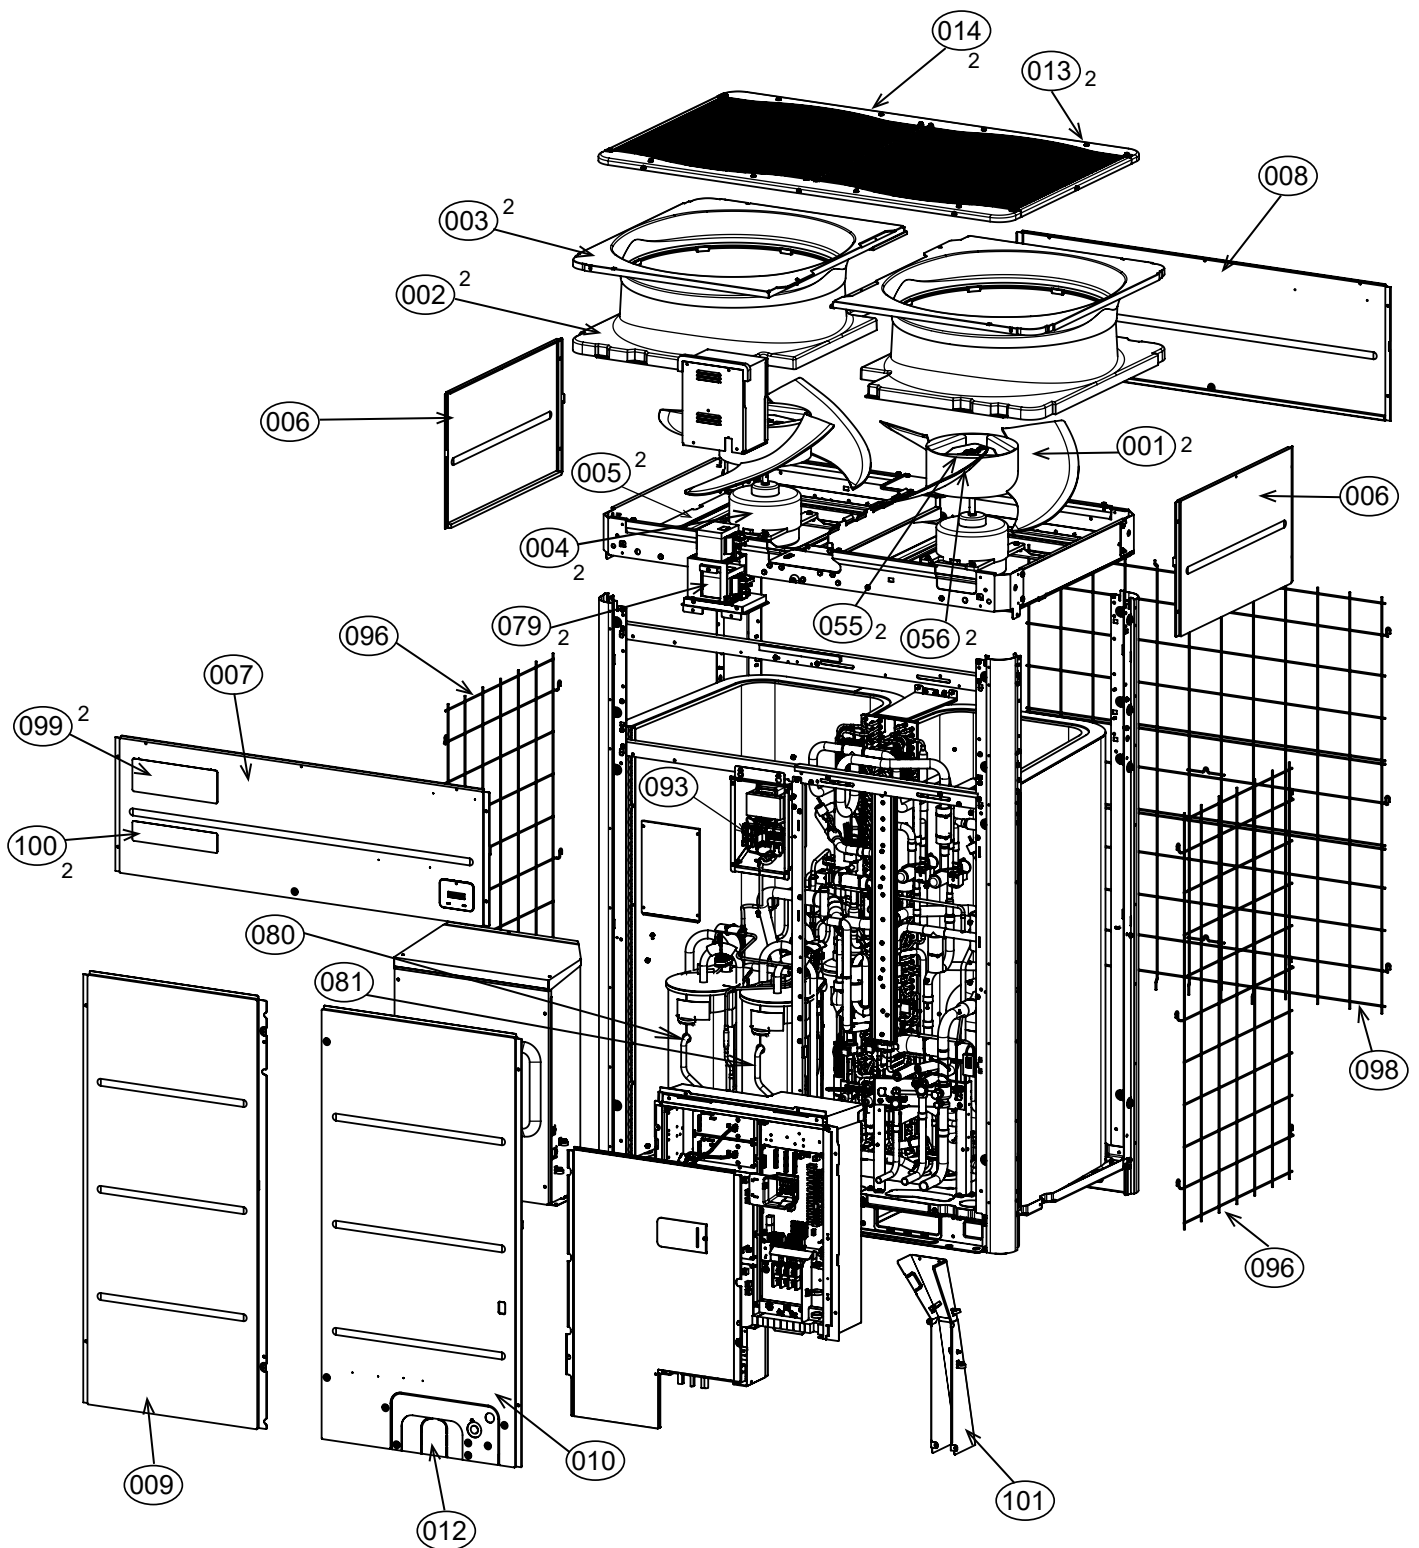

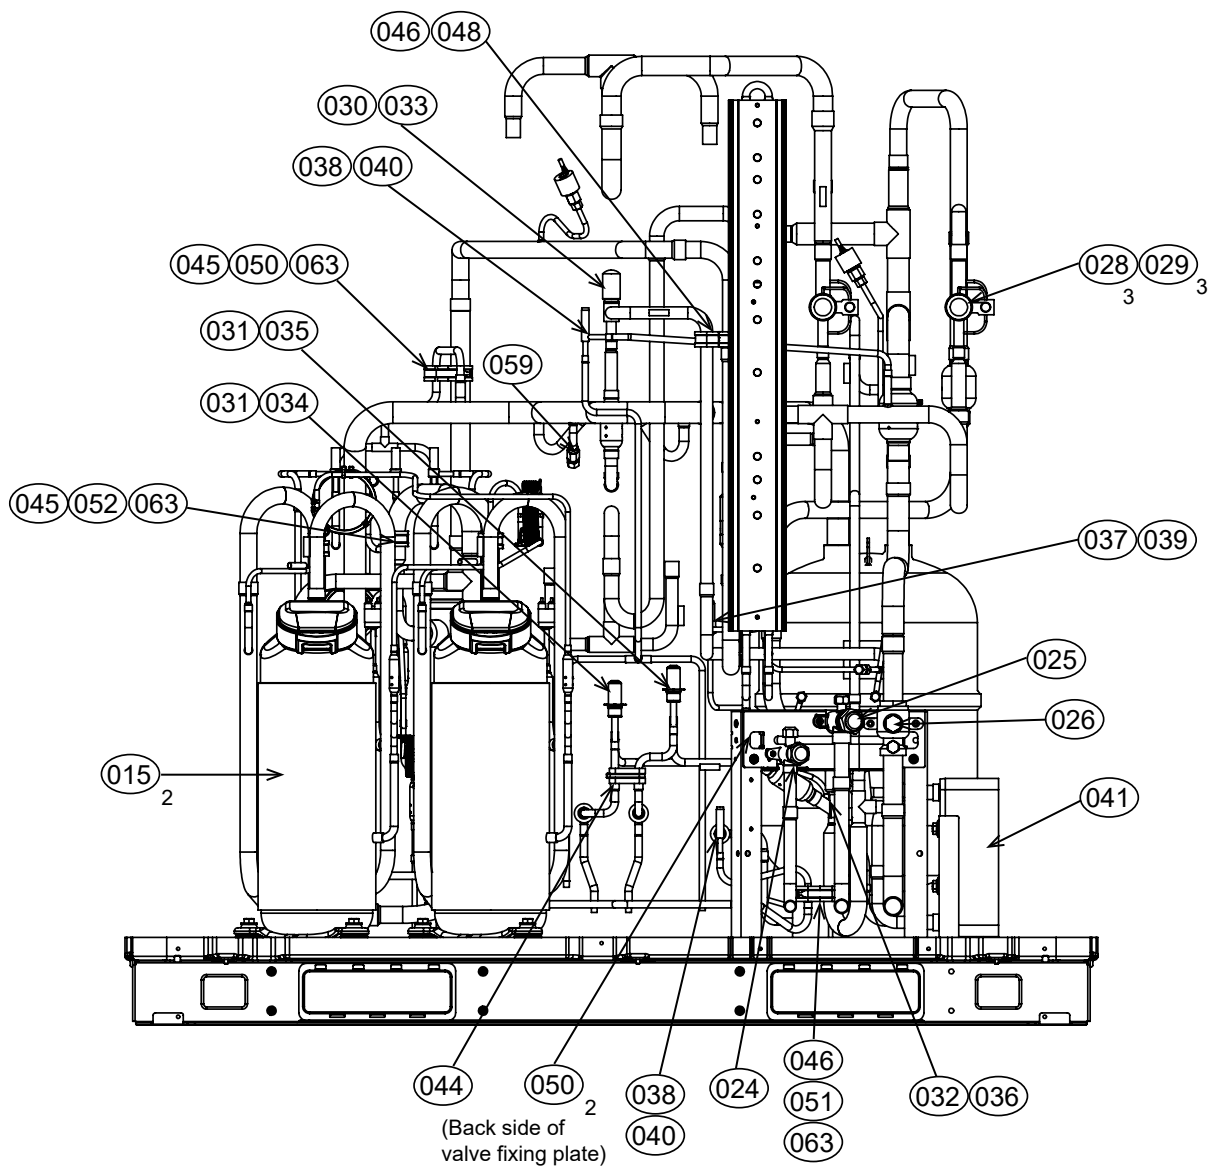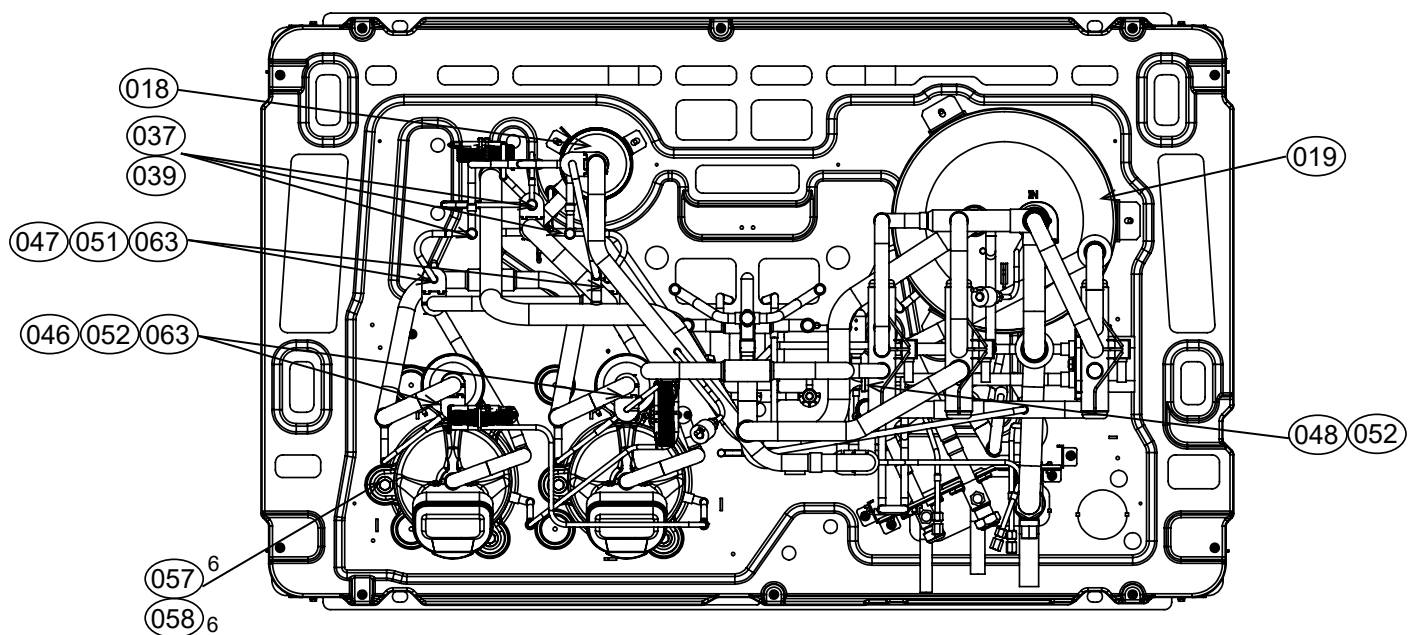

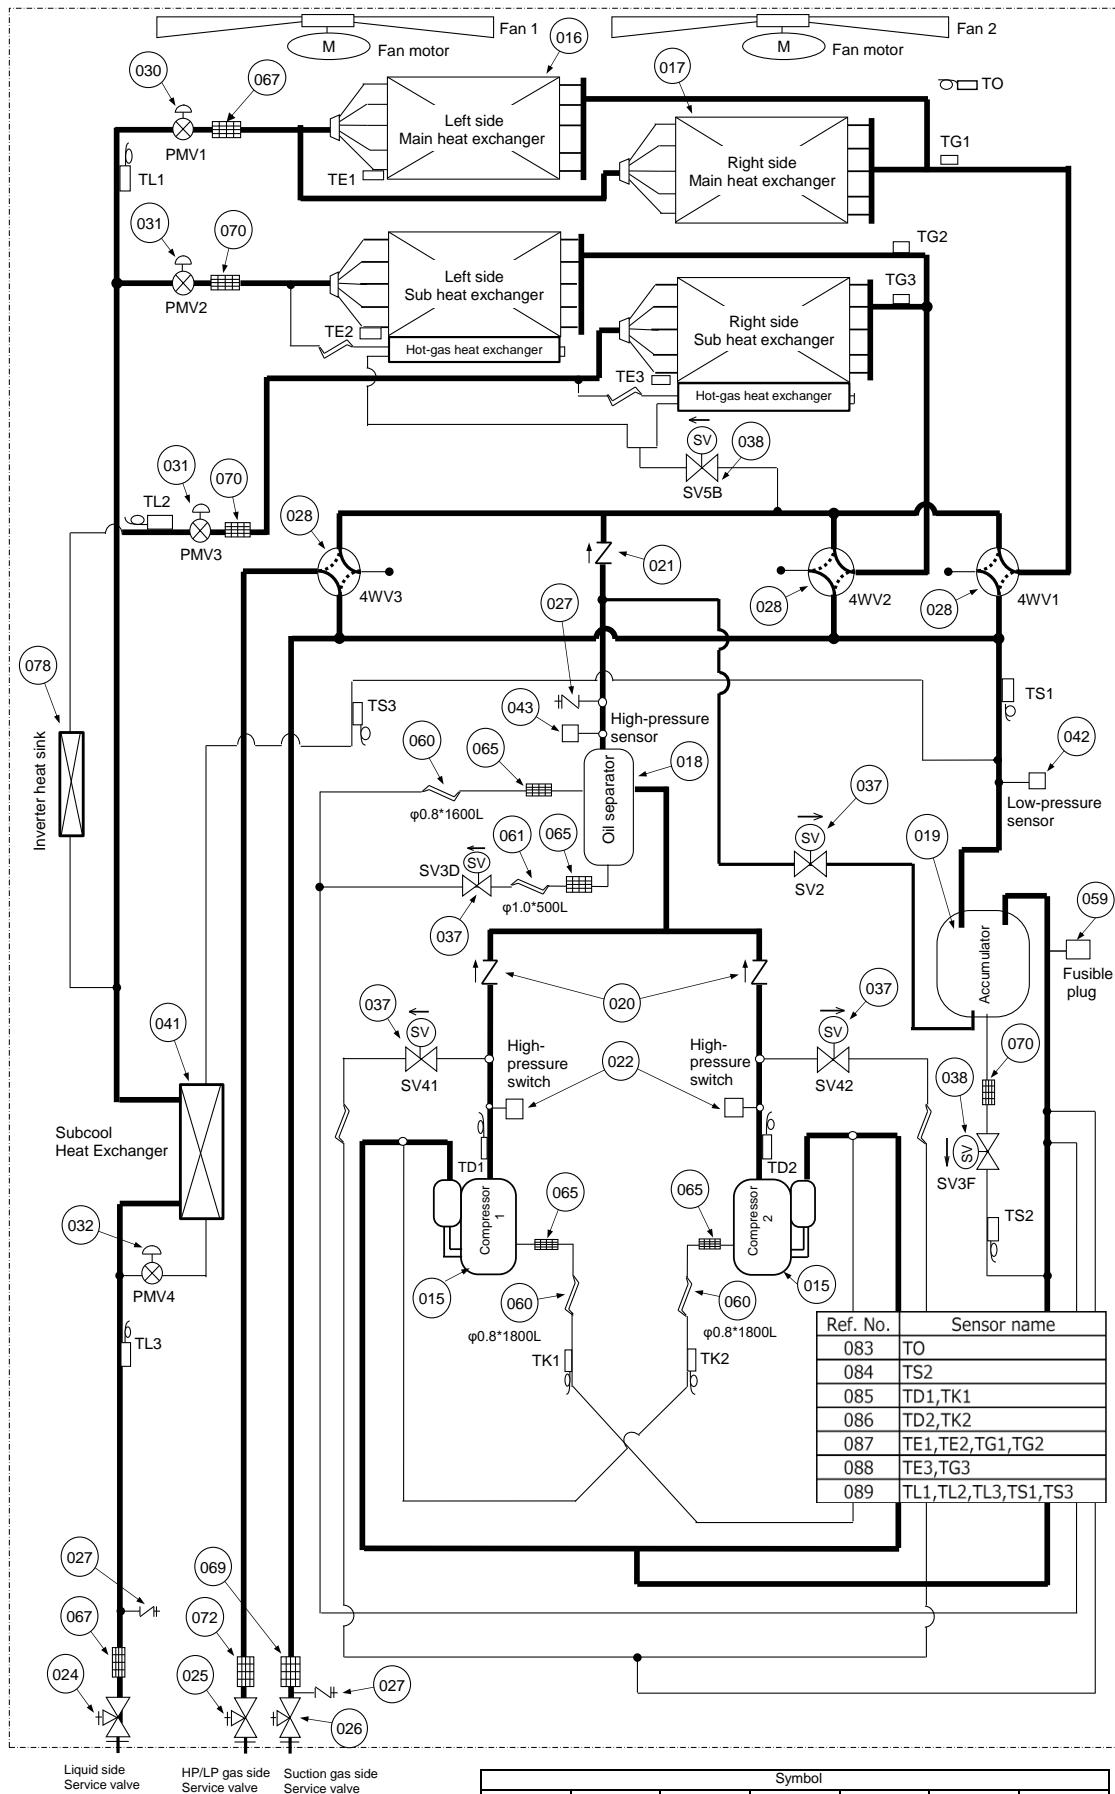

460V
*CDU

Ref. No.	Part No.	Parts Name	Description	Q'ty/Set MMY-MUP								
				0721FT6*	0961FT6*	072H1FT6*	1201FT6*	1441FT6*	1681FT6*	096H1FT6*	120H1FT6*	1921FT6*
001	43T20341	FAN-PR(P5741-T)	FAN,PROPELLER	1	1	1						
001	43T20359	FAN-PR(PF581-T)	FAN,PROPELLER				2	2	2	2	2	2
002	43T19374	BELLMOUTH	BELLMOUTH	1	1	1						
002	43T19375	BELLMOUTH	BELLMOUTH				2	2	2	2	2	2
003	43T19376	COVER-BELLMOUTH	BELLMOUTH,COVER	1	1	1						
003	43T19377	COVER-BELLMOUTH	BELLMOUTH,COVER				2	2	2	2	2	2
004	43T20360	ASM-COAT-FAN-M	MOTOR, FAN, DC530-620V, 2200L	1	1	1	2	2	2	2	2	2
005	43T00817	ASM-C-BASE-MOT	MOTOR,BASE	1	1	1	2	2	2	2	2	2
006	43T00913	ASM-HINS(PLATE	CABINET ASSY, SIDE,UP	2	2	2	2	2	2	2	2	2
007	43T00812	ASM-C-CABI-UP	CABINET,FRONT,UP	1	1	1						
007	43T00819	ASM-C-CABI-UP	CABINET,FRONT,UP				1	1	1	1	1	1
008	43T00914	ASM-HINS(CABI-U	CABINET ASSY, BACK,UP	1	1	1						
008	43T00915	ASM-HINS(CABI-U	CABINET ASSY,BACK,UP				1	1	1	1	1	1
009	43T00814	ASM-C-CABI-L	CABINET,FRONT,LEFT	1	1	1						
009	43T00815	ASM-C-CABI-L	CABINET,FRONT,LEFT				1	1	1	1	1	1
010	43T00818	ASM-HINS-CABI-R	CABINET ASSY,FRONT,RIGHT	1	1	1	1	1	1	1	1	1
011	43T00816	ASM-C-PL-SIDE-R	CABINET,RIGHT	1	1	1						
012	43T00924	ASM-C-P-SERV	PANEL	1	1	1	1	1	1	1	1	1
013	43T00808	ASM-C-PLATE-UP	CABINET,TOP	2	2	2						
013	43T00809	ASM-C-PLATE-UP	CABINET,TOP				2	2	2	2	2	2
014	43T19391	GUARD-FAN	GUARD,FAN	1	1	1						
014	43T19392	GUARD-FAN	GUARD,FAN				2	2	2	2	2	2
015	43T41595	ASM-COMP-S	COMPRESSOR,LX771A3TB-20M	1	1	1						
015	43T41596	ASM-COMP-S	COMPRESSOR,LA771A3TB-20M				1					
015	43T41597	ASM-COMP-S	COMPRESSOR,LA1201K4FB-10UC					1	1	1	1	
015	43T41598	ASM-COMP-S	COMPRESSOR,LX771A3TB-20M									2
016	43T43705	ASM-HE	CONDENSER ASSY,2-ROW	1	1	1						
016	43T43706	ASM-HE-L	CONDENSER ASSY,2-ROW,LEFT				1					
016	43T43707	ASM-HE-L	CONDENSER ASSY,3-ROW,LEFT					1	1	1	1	1
017	43T43708	ASM-HE-R	CONDENSER ASSY,2-ROW,RIGHT				1					
017	43T43709	ASM-HE-R	CONDENSER ASSY,3-ROW,RIGHT					1	1	1	1	1
018	43T48314	ASM-SEPA-OIL	SEPARATOR	1	1	1						
018	43T48325	ASM-SEPA-OIL	SEPARATOR				1	1	1	1	1	1
019	43T48346	ASM-ACCUM-S	ACCUMULATOR	1	1	1						
019	43T48347	ASM-ACCUM-S	ACCUMULATOR				1	1	1	1	1	1
020	43T46445	CHECK-VALVE	VALVE,CHECK,UCV-A1506DRQ5	1	1	1						
020	43T46560	CHECK-VALVE	VALVE,CHECK									2
021	43T46446	CHECK-VALVE	VALVE,CHECK,UCV-A1507DR				1	1	1	1	1	1
022	43T63401	SW-PRESS	SWITCH,PRESSURE	1	1	1	1	1	1	1	1	2
023	43T46542	PACKED-VALVE	VALVE,PACKED,12.7	1	1	1						
024	43T46543	PACKEDVALVE	VALVE,PACKED,15.88				1	1	1	1	1	1
025	43T46544	PACKED-VALVE	VALVE,PACKED,19.05	1	1	1	1	1	1	1	1	1
026	43T46393	VALVE-BALL	VALVE,BALL,25.4	1	1	1	1	1	1	1	1	1
027	43T46409	JOINT-CHECK	JOINT,CHECK	3	3	3	3	3	3	3	3	3
028	43T46571	VALVE-4WAY	VALVE,4WAY,SHF-20D-46-02	3	3	3	3	3	3	3	3	3
029	43T46570	COIL-V-4WAY	COIL,SOLENOID,AC208V-230 60Hz	3	3	3	3	3	3	3	3	3
030	43T46447	BODY-PMV	VALVE,PMV,PAM-BA2YGTF-1(DIA4.8)	1	1	1	1	1	1	1	1	1
031	43T46538	BODY-PMV	VALVE,PMV,DPF(TS1)2.8C-01,(DIA2.8)	1	1	1	2	2	2	2	2	2
032	43T46439	BODY-PMV	VALVE,PMV,UKV-18D64(DIA1.8)	1	1	1	1	1	1	1	1	1
033	43T46525	COIL-PMV	COIL, PMV, PAM-MD12TF-303	1	1	1	1	1	1	1	1	1
034	43T46551	COIL-PMV	COIL, PMV, PQ-M10012*	1	1	1	1	1	1	1	1	1
035	43T46553	COIL-PMV	COIL, PMV, PQ-M10012*				1	1	1	1	1	1
036	43T46478	COIL-PMV	COIL, PMV, UKV-A376U	1	1	1	1	1	1	1	1	1
037	43T46408	VALVE-2WAY	VALVE,2WAY,FDF2A88	3	3	3	3	3	3	3	3	4
038	43T46527	VALVE-2WAY	VALVE,2WAY,TEV-S1920DQ50	2	2	2	2	2	2	2	2	2
039	43T46529	ASM-2WAY-COIL-S	COIL,VALVE,2WAY,ASSY,FQ-A0520D-001989	3	3	3	3	3	3	3	3	4
040	43T46531	COIL-V-2WAY	COIL,VALVE,2WAY,TEV-SMOAQ2247B1	2	2	2	2	2	2	2	2	2
041	43T43714	ASM-S-HE(SC)	SUBCOOL HEATEXCHANGER,HBL16-22D	1	1	1						
041	43T43715	ASM-S-HE(SC)	SUBCOOL HEATEXCHANGER,HBL16-30D				1	1	1	1	1	1
042	43T50453	ASM-P-SENSOR-S	SENSOR ASSY,LOW PRESSURE	1	1	1	1	1	1	1	1	1
043	43T50454	ASM-P-SENSOR-S	SENSOR ASSY,HIGH PRESSURE	1	1	1	1	1	1	1	1	1
044	43T49347	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE				1	1	1	1	1	1
045	43T49348	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	2	2	2	1	1	1	1	1	2
046	43T49349	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE				2	4	4	4	4	4

Ref. No.	Part No.	Parts Name	Description	Q'ty/Set MMY-MUP								
				0721FT6*	0961FT6*	072H1FT6*	1201FT6*	1441FT6*	1681FT6*	096H1FT6*	120H1FT6*	1921FT6*
047	43T49350	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	4	4	4	2					2
048	43T49351	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE				2	2	2		2	2
049	43T49352	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	2	2	2						
050	43T49353	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	3	3	3	3	3	3	3	3	3
051	43T49354	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	2	2	2	2	2	2	2	2	3
052	43T49355	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	7	7	7	2	2	2	2	2	4
053	43T49377	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE				1	1	1	1	1	
054	43T19380	HOLDER-SENSOR	HOLDER,SENSOR	1	1	1	1	1	1	1	1	1
055	43T39351	NUT-FLANGE	NUT,FLANGE	1	1	1	2	2	2	2	2	2
056	43T39350	SQUARE-WASHER	WASHER	1	1	1	2	2	2	2	2	2
057	43T49357	RUB-VINS	RUBBER,CUSHION	3	3	3	3					6
057	43T49387	RUB-VINS	RUBBER,CUSHION					4	4	4	4	
058	43T47385	BOLT-COMP(M6)	BOLT,COMPRESSOR	3	3	3						6
058	43T47415	BOLT-COMP(M6)	BOLT,COMPRESSOR					4	4	4	4	
059	43T49338	PLUG	PLUG, FUSIBLE	1	1	1	1	1	1	1	1	1
060	43T47374	CAPI	TUBE,CAPILLARY,ID 0.8	1	1	1	1	1	1	1	1	1
061	43T47375	CAPI	TUBE,CAPILLARY,ID 1.0	1	1	1	1	1	1	1	1	1
062	43T19333	FIX-P-SENSOR	SENSOR, FIXATIVE, PLATE	12	12	12	14	14	14	14	14	16
063	43T49358	FIX-BAND	BAND, FIX	5	5	5	5	5	5	5	5	7
064	43T85938	COPY-MANUAL	OWNERS MANUAL for FT*P-UL	1	1	1	1	1	1	1	1	1
065	43T47388	STRAINER	STRAINER	3	3	3	3	3	3	3	3	4
066	43T47390	STRAINER	STRAINER	2	2	2	1					
067	43T47392	STRAINER	STRAINER				1	2	2	2	2	2
068	43T47394	STRAINER	STRAINER	1	1	1						
069	43T47395	STRAINER	STRAINER				1	1	1	1	1	1
070	43T47414	STRAINER	STRAINER	1	1	1	3	3	3	3	3	3
071	43T47427	STRAINER	STRAINER	1	1	1						
072	43T47420	STRAINER	STRAINER				1	1	1	1	1	1
073	43T47421	STRAINER	STRAINER	1	1	1						
074	43T48329	ASM-SCREW-S	SCREW,SET	1	1	1	1	1	1	1	1	1
075	43T48330	ASM-SCREW-S	SCREW,SET	1	1	1	1	1	1	1	1	1
076	43TN9923	ASM-NFC	PC BOARD ASSY,NFC	1	1	1	1	1	1	1	1	1
077	43T63389	HOLDER(NFC)	HOLDER,NFC	1	1	1	1	1	1	1	1	1
078	43T67312	ASM-HEATSINK	HEATSINK,ASSY									1
078	43T67313	ASM-HEATSINK	HEATSINK,ASSY				1	1	1	1	1	
078	43T67314	ASM-HEATSINK	HEATSINK,ASSY	1	1	1						
079	43T58346	REACTOR(CH-105)	REACTOR,CH-105					1	1	1	1	
079	43T58347	REACTOR(CH-106)	REACTOR,CH-106	1	1	1	1					2
080	43T60534	ASM-COMP-LEAD	LEAD,ASSY,COMPRESSOR				1	1	1	1	1	1
081	43T60535	ASM-COMP-LEAD	LEAD ASSY,COMPRESSOR	1	1	1						1
082	43T55375	CLAMP-FILTER	FILTER,NOISE	2	2	2	3	3	3	3	3	4
083	43T50424	TC-SENSOR	SENSOR ,SERVICE	1	1	1	1	1	1	1	1	1
084	43T50430	TC-SENSOR	SENSOR ,SERVICE	1	1	1	1	1	1	1	1	1
085	43T50403	ASM-SENSOR	SENSOR ASSY,SERVICE	1	1	1	1	1	1	1	1	1
086	43T50404	ASM-SENSOR	SENSOR ASSY,SERVICE									1
087	43T50405	ASM-SENSOR	SENSOR ASSY,SERVICE	1	1	1	1	1	1	1	1	1
088	43T50406	ASM-SENSOR	SENSOR ASSY,SERVICE				1	1	1	1	1	1
089	43T50407	ASM-SENSOR	SENSOR ASSY,SERVICE	1	1	1	1	1	1	1	1	1
090	43T57316	ASM-HEATER	HEATER,CASE,ASSY,29W/240V, 2200L	1	1	1	1					1
091	43T57317	ASM-HEATER	HEATER,CASE,ASSY,29W/240V, 2600L									1
091	43T57319	ASM-HEATER	HEATER,CASE,ASSY,29W/240V, 2600L					1	1	1	1	
092	43T46567	ASM-S-SUP-(BV)	VALVE, BALL, SUPPORT PARTS	1	1	1	1	1	1	1	1	1
093	43T58333	TRANS(DOWN)	TRANSFORMER	1	1	1	1	1	1	1	1	1
094	43T49548	ASM-OIL-SERV	LUBRICANT OIL, NISSRKI	1	1	1	1	1	1	1	1	1
095	43T19393	GUARD-FIN-SIDE	FIN GUARD, SIDE	1	1	1						
096	43T19394	GUARD-FIN-SIDE	FIN GUARD, SIDE	1	1	1	2	2	2	2	2	2
097	43T19395	GUARD-FIN-BACK	FIN GUARD, BACK	1	1	1						
098	43T19396	GUARD-FIN-BACK	FIN GUARD, BACK				1	1	1	1	1	1
099	43T01345	MARK-TC	MARK, TOSHIBA CARRIER	2	2	2	2	2	2	2	2	2
100	43T01359	MARK(SHRM-U)	MARK, SHRM-u	2	2		2	2	2			2
100	43T01360	MARK(ELITE-HEAT	MARK, ELITE-HEAT			2				2	2	
101	43T00925	ASM-GUARD-WIRE	WIRE GUARD	1	1	1	1	1	1	1	1	1

208-230V


*CDU

Ref. No.	Part No.	Parts Name	Description	Q'ty/Set MMY-MUP							
				0721FT9*	0961FT9*	072H1FT9*	1201FT9*	1441FT9*	1681FT9*	096H1FT9*	120H1FT9*
001	43T20341	FAN-PR(P5741-T)	FAN,PROPELLER	1	1	1					
001	43T20359	FAN-PR(PF581-T)	FAN,PROPELLER				2	2	2	2	2
002	43T19374	BELLMOUTH	BELLMOUTH	1	1	1					
002	43T19375	BELLMOUTH	BELLMOUTH				2	2	2	2	2
003	43T19376	COVER-BELLMOUTH	BELLMOUTH,COVER	1	1	1					
003	43T19377	COVER-BELLMOUTH	BELLMOUTH,COVER				2	2	2	2	2
004	43T21539	ASM-COAT-FAN-M	MOTOR, FAN, DC280-340V, 2200L	1	1	1	2	2	2	2	2
005	43T00817	ASM-C-BASE-MOT	MOTOR,BASE	1	1	1	2	2	2	2	2
006	43T00913	ASM-HINS(PLATE	CABINET ASSY, SIDE,UP	2	2	2	2	2	2	2	2
007	43T00812	ASM-C-CABI-UP	CABIBET,FRONT,UP	1	1	1					
007	43T00819	ASM-C-CABI-UP	CABINET,FRONT,UP				1	1	1	1	1
008	43T00914	ASM-HINS(CABI-U	CABINET ASSY, BACK,UP	1	1	1					
008	43T00915	ASM-HINS(CABI-U	CABINET ASSY,BACK,UP				1	1	1	1	1
009	43T00814	ASM-C-CABI-L	CABINET,FRONT,LEFT	1	1	1					
009	43T00815	ASM-C-CABI-L	CABINET,FRONT,LEFT				1	1	1	1	1
010	43T00818	ASM-HINS-CABI-R	CABINET ASSY,FRONT,RIGHT	1	1	1	1	1	1	1	1
011	43T00816	ASM-C-PL-SIDE-R	CABINET,RIGHT	1	1	1					
012	43T00924	ASM-C-P-SERV	PANEL	1	1	1	1	1	1	1	1
013	43T00808	ASM-C-PLATE-UP	CABINET,TOP	2	2	2					
013	43T00809	ASM-C-PLATE-UP	CABINET,TOP				2	2	2	2	2
014	43T19391	GUARD-FAN	GUARD,FAN	1	1	1					
014	43T19392	GUARD-FAN	GUARD,FAN				2	2	2	2	2
015	43T41599	ASM-COMP-S	COMPRESSOR,NA772A3TB-21M	1	1	1					
015	43T41600	ASM-COMP-S	COMPRESSOR,NA772A3TB-21M				1				
015	43T41601	ASM-COMP-S	COMPRESSOR,NA1201K4FB-10UC					1	1	1	1
016	43T43705	ASM-HE	CONDENSER ASSY,2-ROW	1	1	1					
016	43T43706	ASM-HE-L	CONDENSER ASSY,2-ROW,LEFT				1				
016	43T43707	ASM-HE-L	CONDENSER ASSY,3-ROW,LEFT					1	1	1	1
017	43T43708	ASM-HE-R	CONDENSER ASSY,2-ROW,RIGHT				1				
017	43T43709	ASM-HE-R	CONDENSER ASSY,3-ROW,RIGHT					1	1	1	1
018	43T48314	ASM-SEPA-OIL	SEPARATOR	1	1	1					
018	43T48325	ASM-SEPA-OIL	SEPARATOR				1	1	1	1	1
019	43T48346	ASM-ACCUM-S	ACCUMULATOR	1	1	1					
019	43T48347	ASM-ACCUM-S	ACCUMULATOR				1	1	1	1	1
020	43T46445	CHECK-VALVE	VALVE,CHECK,UCV-A1506DRQ5	1	1	1					
020	43T46560	CHECK-VALVE	VALVE,CHECK								
021	43T46446	CHECK-VALVE	VALVE,CHECK,UCV-A1507DR				1	1	1	1	1
022	43T63401	SW-PRESS	SWITCH,PRESSURE	1	1	1	1	1	1	1	1
023	43T46542	PACKED-VALVE	VALVE,PACKED,12.7	1	1	1					
024	43T46543	PACKED-VALVE	VALVE,PACKED,15.88				1	1	1	1	1
025	43T46544	PACKED-VALVE	VALVE,PACKED,19.05	1	1	1	1	1	1	1	1
026	43T46393	VALVE-BALL	VALVE,BALL,25.4	1	1	1	1	1	1	1	1
027	43T46409	JOINT-CHECK	JOINT,CHECK	3	3	3	3	3	3	3	3
028	43T46571	VALVE-4WAY	VALVE,4WAY,SHF-20D-46-02	3	3	3	3	3	3	3	3
029	43T46570	COIL-V-4WAY	COIL,SOLENOID,AC208V-230 60Hz	3	3	3	3	3	3	3	3
030	43T46447	BODY-PMV	VALVE,PMV,PAM-BA2YGTF-1(DIA4.8)	1	1	1	1	1	1	1	1
031	43T46538	BODY-PMV	VALVE,PMV,DPF(TS1)2.8C-01,(DIA2.8)	1	1	1	2	2	2	2	2
032	43T46439	BODY-PMV	VALVE,PMV,UKV-18D64(DIA1.8)	1	1	1	1	1	1	1	1
033	43T46525	COIL-PMV	COIL, PMV, PAM-MD12TF-303	1	1	1	1	1	1	1	1
034	43T46551	COIL-PMV	COIL, PMV, PQ-M10012*	1	1	1	1	1	1	1	1
035	43T46553	COIL-PMV	COIL, PMV, PQ-M10012*				1	1	1	1	1
036	43T46478	COIL-PMV	COIL, PMV, UKV-A376U	1	1	1	1	1	1	1	1
037	43T46408	VALVE-2WAY	VALVE,2WAY,FDF2A88	3	3	3	3	3	3	3	3
038	43T46527	VALVE-2WAY	VALVE,2WAY,TEV-S1920DQ50	2	2	2	2	2	2	2	2
039	43T46529	ASM-2WAY-COIL-S	COIL,VALVE,2WAY,ASSY,FQ-A0520D-001989	3	3	3	3	3	3	3	3
040	43T46531	COIL-V-2WAY	COIL,VALVE,2WAY,TEV-SMOAQ2247B1	2	2	2	2	2	2	2	2
041	43T43714	ASM-S-HE(SC)	SUBCOOL HEATEXCHANGER,HBL16-22D	1	1	1					
041	43T43715	ASM-S-HE(SC)	SUBCOOL HEATEXCHANGER,HBL16-30D				1	1	1	1	1
042	43T50453	ASM-P-SENSOR-S	SENSOR ASSY,LOW PRESSURE	1	1	1	1	1	1	1	1
043	43T50454	ASM-P-SENSOR-S	SENSOR ASSY,HIGH PRESSURE	1	1	1	1	1	1	1	1
044	43T49347	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE				1	1	1	1	1
045	43T49348	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	2	2	2	1	1	1	1	1
046	43T49349	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE				2	4	4	4	4

Ref. No.	Part No.	Parts Name	Description	Q'ty/Set MMY-MUP							
				0721FT9*	0961FT9*	072H1FT9*	1201FT9*	1441FT9*	1681FT9*	096H1FT9*	120H1FT9*
047	43T49350	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	4	4	4	2				
048	43T49351	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE				2	2	2	2	2
049	43T49352	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	2	2	2					
050	43T49353	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	3	3	3	3	3	3	3	3
051	43T49354	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	2	2	2	2	2	2	2	2
052	43T49355	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE	7	7	7	2	2	2	2	2
053	43T49377	RUB-P-SUPPORTER	RUBBER,SUPPORTER,PIPE				1	1	1	1	1
054	43T19380	HOLDER-SENSOR	HOLDER,SENSOR	1	1	1	1	1	1	1	1
055	43T39351	NUT-FLANGE	NUT,FLANGE	1	1	1	2	2	2	2	2
056	43T39350	SQUARE-WASHER	WASHER	1	1	1	2	2	2	2	2
057	43T49357	RUB-VINS	RUBBER,CUSHION	3	3	3	3				
057	43T49387	RUB-VINS	RUBBER,CUSHION					4	4	4	4
058	43T47385	BOLT-COMP(M6)	BOLT,COMPRESSOR	3	3	3					
058	43T47415	BOLT-COMP(M6)	BOLT,COMPRESSOR					4	4	4	4
059	43T49338	PLUG	PLUG, FUSIBLE	1	1	1	1	1	1	1	1
060	43T47374	CAPI	TUBE,CAPILLARY,ID 0.8	1	1	1	1	1	1	1	1
061	43T47375	CAPI	TUBE,CAPILLARY,ID 1.0	1	1	1	1	1	1	1	1
062	43T19333	FIX-P-SENSOR	SENSOR,FIXATIVE,PLATE	12	12	12	14	14	14	14	14
063	43T49358	FIX-BAND	BAND,FIX	5	5	5	5	5	5	5	5
064	43T85938	COPY-MANUAL	OWNERS MANUAL for FT*P-UL	1	1	1	1	1	1	1	1
065	43T47388	STRAINER	STRAINER	3	3	3	3	3	3	3	3
066	43T47390	STRAINER	STRAINER	2	2	2	1				
067	43T47392	STRAINER	STRAINER				1	2	2	2	2
068	43T47394	STRAINER	STRAINER	1	1	1					
069	43T47395	STRAINER	STRAINER				1	1	1	1	1
070	43T47414	STRAINER	STRAINER	1	1	1	3	3	3	3	3
071	43T47427	STRAINER	STRAINER	1	1	1					
072	43T47420	STRAINER	STRAINER				1	1	1	1	1
073	43T47421	STRAINER	STRAINER	1	1	1					
074	43T48329	ASM-SCREW-S	SCREW,SET	1	1	1	1	1	1	1	1
075	43T48330	ASM-SCREW-S	SCREW,SET	1	1	1	1	1	1	1	1
076	43TN9923	ASM-NFC	PC BOARD ASSY,NFC	1	1	1	1	1	1	1	1
077	43T63389	HOLDER(NFC)	HOLDER,NFC	1	1	1	1	1	1	1	1
078	43T67316	ASM-HEATSINK	HEATSINK,ASSY				1	1	1	1	1
078	43T67317	ASM-HEATSINK	HEATSINK,ASSY	1	1	1					
079	43T58346	REACTOR(CH-105)	REACTOR,CH-105	1	1	1	1	2	2	2	2
080	43T60610	ASM-COMP-LEAD	LEAD,ASSY,COMPRESSOR					1	1	1	1
080	43T60611	ASM-COMP-LEAD	LEAD,ASSY,COMPRESSOR	1	1	1					
080	43T60612	ASM-COMP-LEAD	LEAD,ASSY,COMPRESSOR				1				
081	43T60614	ASM-COMP-LEAD	LEAD ASSY,COMPRESSOR	1	1	1					
081	43T60637	ASM-COMP-LEAD	LEAD ASSY,COMPRESSOR					1	1	1	1
081	43T60615	ASM-COMP-LEAD	LEAD ASSY,COMPRESSOR				1				
082	43T55375	CLAMP-FILTER	FILTER,NOISE	1	1	1	2	2	2	2	2
083	43T50424	TC-SENSOR	SENSOR ,SERVICE	1	1	1	1	1	1	1	1
084	43T50430	TC-SENSOR	SENSOR ,SERVICE	1	1	1	1	1	1	1	1
085	43T50403	ASM-SENSOR	SENSOR ASSY,SERVICE	1	1	1	1	1	1	1	1
086	43T50404	ASM-SENSOR	SENSOR ASSY,SERVICE								
087	43T50405	ASM-SENSOR	SENSOR ASSY,SERVICE	1	1	1	1	1	1	1	1
088	43T50406	ASM-SENSOR	SENSOR ASSY,SERVICE				1	1	1	1	1
089	43T50407	ASM-SENSOR	SENSOR ASSY,SERVICE	1	1	1	1	1	1	1	1
090	43T57316	ASM-HEATER	HEATER,CASE,ASSY,29W/240V, 2200L	1	1	1	1				
091	43T57319	ASM-HEATER	HEATER,CASE,ASSY,29W/240V, 2600L					1	1	1	1
092	43T46567	ASM-S-SUP-(BV)	VALVE, BALL, SUPPORT PARTS	1	1	1	1	1	1	1	1
094	43149548	ASM-OIL-SERV	LUBRICANT OIL, NISSRKI	1	1	1	1	1	1	1	1
095	43T19393	GUARD-FIN-SIDE	FIN GUARD, SIDE	1	1	1					
096	43T19394	GUARD-FIN-SIDE	FIN GUARD, SIDE	1	1	1	2	2	2	2	2
097	43T19395	GUARD-FIN-BACK	FIN GUARD, BACK	1	1	1					
098	43T19396	GUARD-FIN-BACK	FIN GUARD, BACK				1	1	1	1	1
099	43T01345	MARK-TC	MARK, TOSHIBA CARRIER	2	2	2	2	2	2	2	2
100	43T01359	MARK(SHRM-U)	MARK, SHRM-u	2	2		2	2	2		
100	43T01360	MARK(ELITE-HEAT	MARK, ELITE-HEAT			2				2	2
101	43T00925	ASM-GUARD-WIRE	WIRE GUARD	1	1	1	1	1	1	1	1

Inverter Assembly


Model : MMY-MUP0721FT6*, 0961FT6*, 072H1FT6*

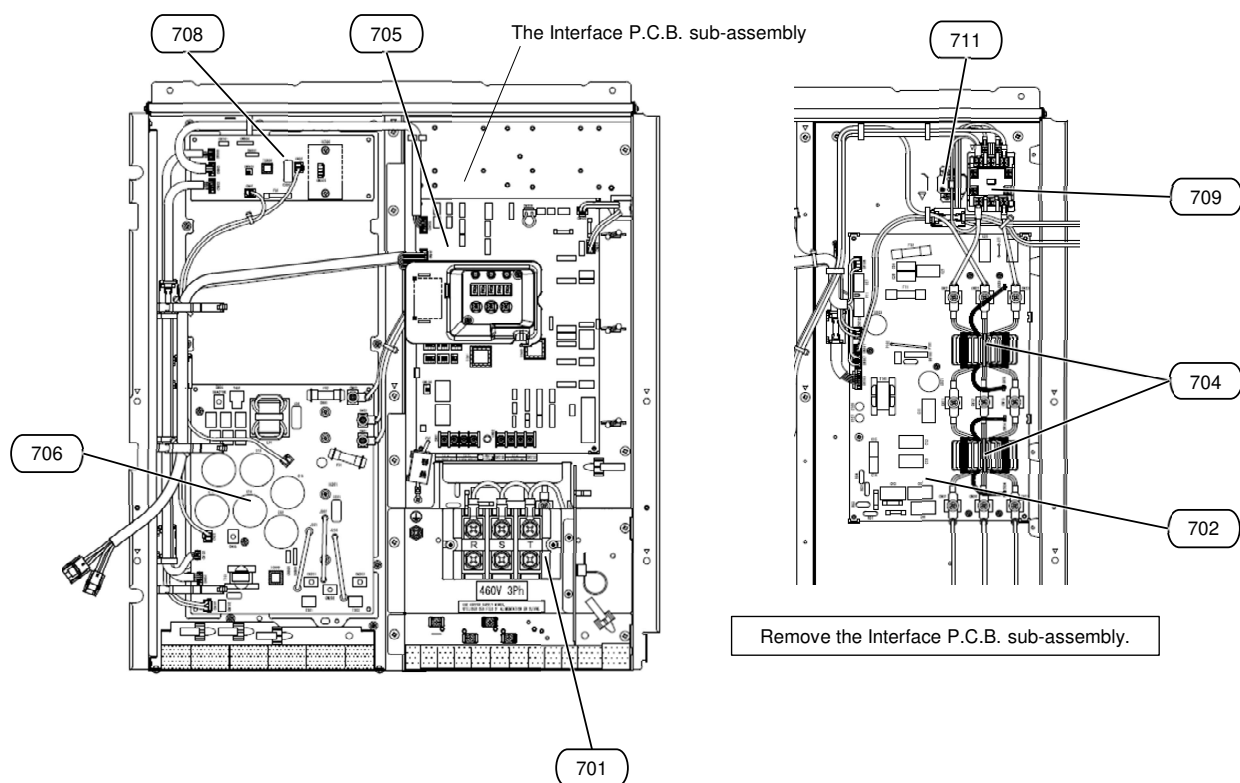

Ref. No.	Part No.	Description	Q'ty/Set	Drawing No.
701	43T60440	TERMINAL, 3P, 100A	1	1001606403
702	43TN9878	PC BOARD ASSY,NOISE FILTER,MCC-1749	1	1142190403
704	43T55397	FILTER, LINE	2	1004141201
705	43TNV345	PC BOARD ASSY,INTERFACE,MCC-1747	1	1142090505
706	43TN9880	PC BOARD ASSY,COMP-IPDU,MCC-1729	1	1142090606
708	43T6W894	PC BOARD ASSY,FAN-IPDU,MCC-1734	1	1142090701
709	43T52321	CONTACTOR,MAGNETIC,FC-1SUL	1	1000401404
711	43T50345	THERMISTOR,PTC	1	1000601801

Inverter Assembly


Model : MMY-MUP1201FT6*

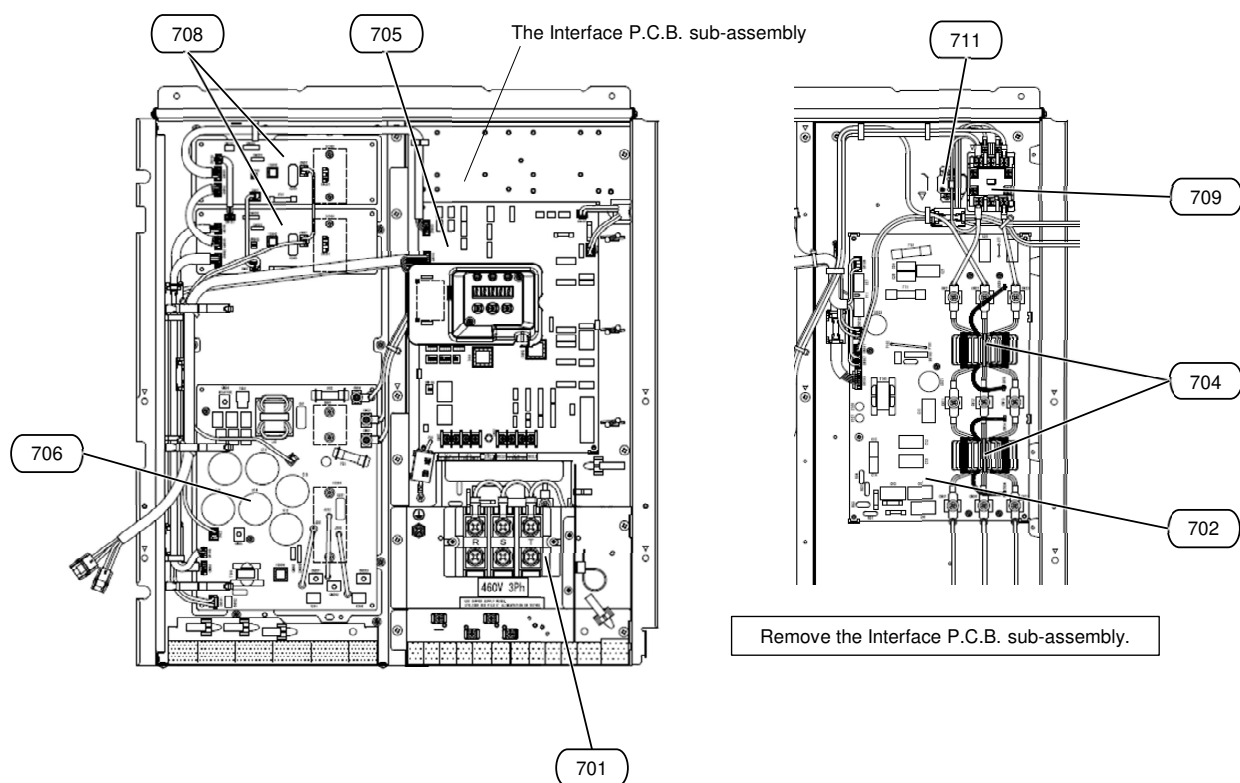

Ref. No.	Part No.	Description	Q'ty/Set	Drawing No.
701	43T60440	TERMINAL, 3P, 100A	1	1001606403
702	43TN9878	PC BOARD ASSY,NOISE FILTER,MCC-1749	1	1142190403
704	43T55397	FILTER, LINE	2	1004141201
705	43TNV345	PC BOARD ASSY,INTERFACE,MCC-1747	1	1142090505
706	43TN9880	PC BOARD ASSY,COMP-IPDU,MCC-1729	1	1142090606
708	43T6W894	PC BOARD ASSY,FAN-IPDU,MCC-1734	2	1142090701
709	43T52321	CONTACTOR,MAGNETIC,FC-1SUL	1	1000401404
711	43T50345	THERMISTOR,PTC	1	1000601801

Inverter Assembly


Model : MMY-MUP1441FT6*, 1681FT6*, 096H1FT6*, 120H1FT6*

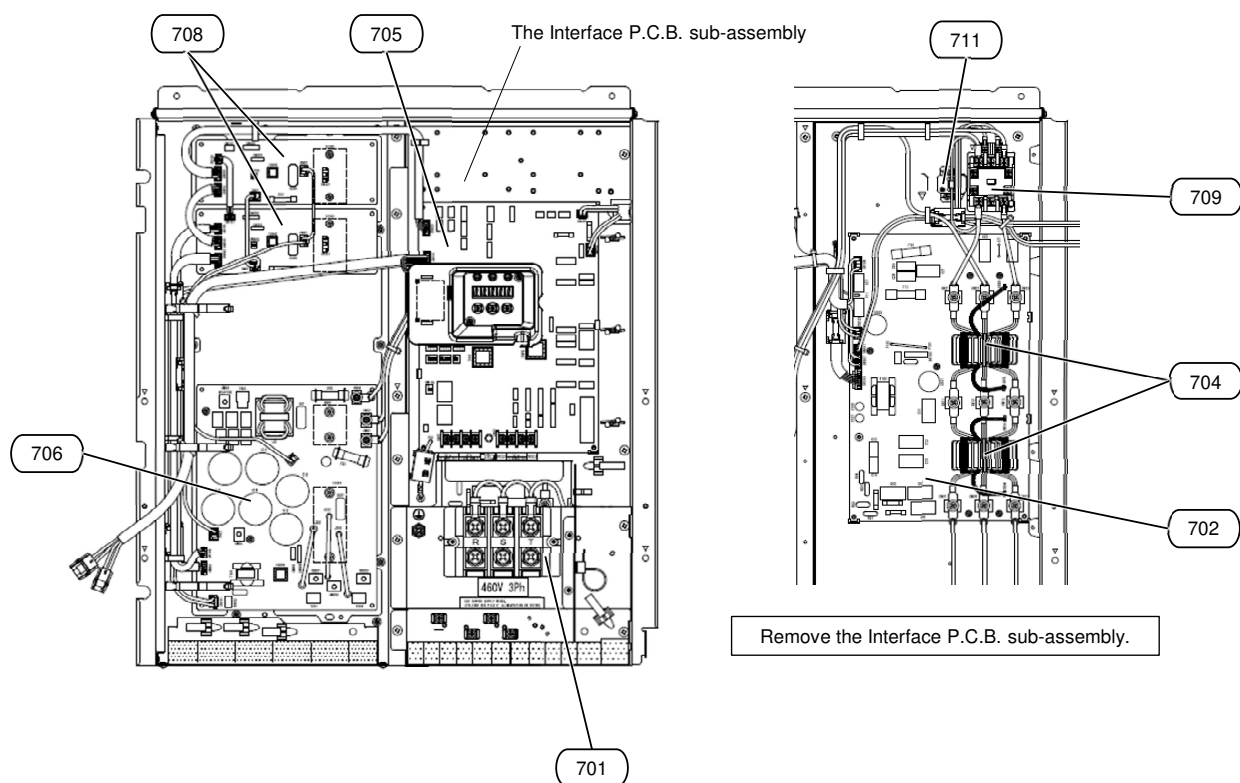

Ref. No.	Part No.	Description	Q'ty/Set	Drawing No.
701	43T60440	TERMINAL, 3P, 100A	1	1001606403
702	43TN9878	PC BOARD ASSY,NOISE FILTER,MCC-1749	1	1142190403
704	43T55397	FILTER, LINE	2	1004141201
705	43TNV345	PC BOARD ASSY,INTERFACE,MCC-1747	1	1142090505
706	43TN9881	PC BOARD ASSY,COMP-IPDU,MCC-1729	1	1142090607
708	43T6W894	PC BOARD ASSY,FAN-IPDU,MCC-1734	2	1142090701
709	43T52321	CONTACTOR,MAGNETIC,FC-1SUL	1	1000401404
711	43T50345	THERMISTOR,PTC	1	1000601801

Inverter Assembly


Model : MMY-MUP1921FT6*

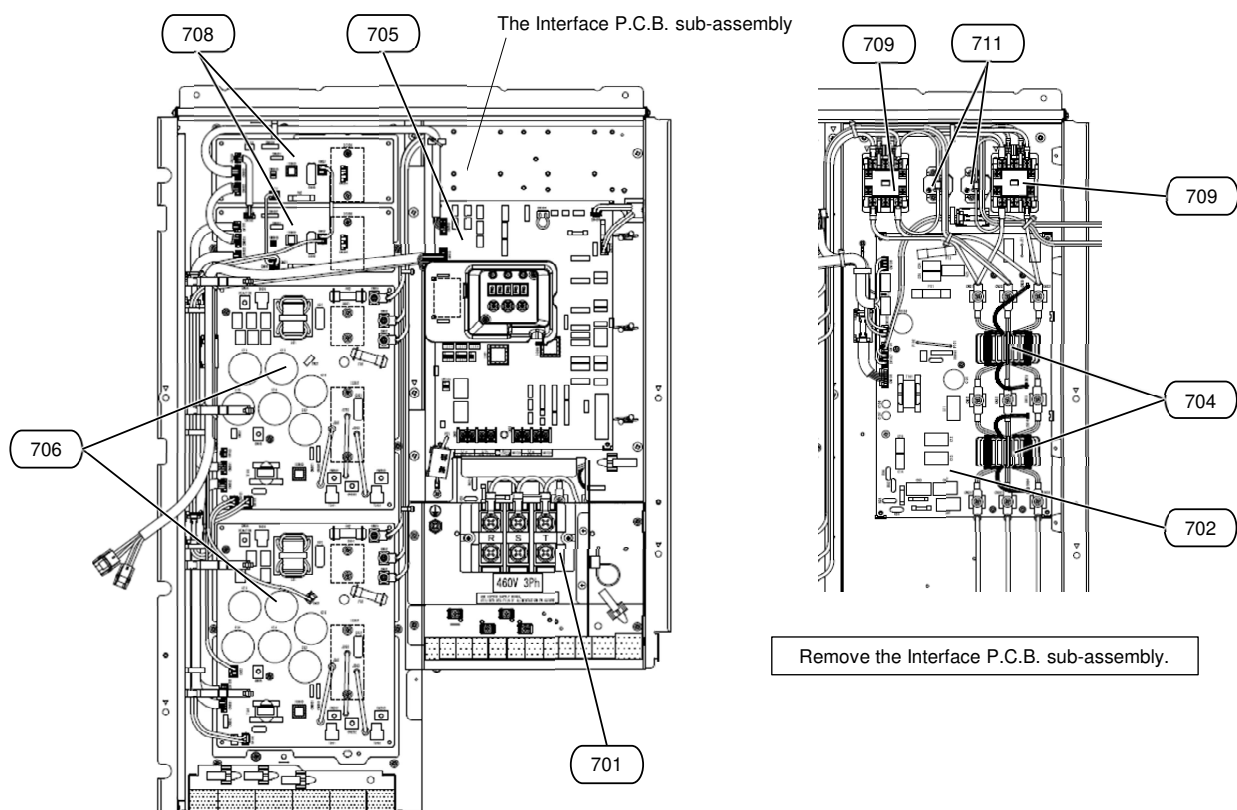

Ref. No.	Part No.	Description	Q'ty/Set	Drawing No.
701	43T60440	TERMINAL, 3P, 100A	1	1001606403
702	43TN9878	PC BOARD ASSY, NOISE FILTER, MCC-1749	1	1142190403
704	43T55397	FILTER, LINE	2	1004141201
705	43TNV345	PC BOARD ASSY, INTERFACE, MCC-1747	1	1142090505
706	43TN9880	PC BOARD ASSY, COMP-IPDU, MCC-1729	1	1142090606
708	43T6W894	PC BOARD ASSY, FAN-IPDU, MCC-1734	2	1142090701
709	43T52321	CONTACTOR, MAGNETIC, FC-1SUL	2	1000401404
711	43T50345	THERMISTOR, PTC	2	1000601801

Inverter Assembly


Model : MMY-MUP0721FT9*, 0961FT9*, 072H1FT9*

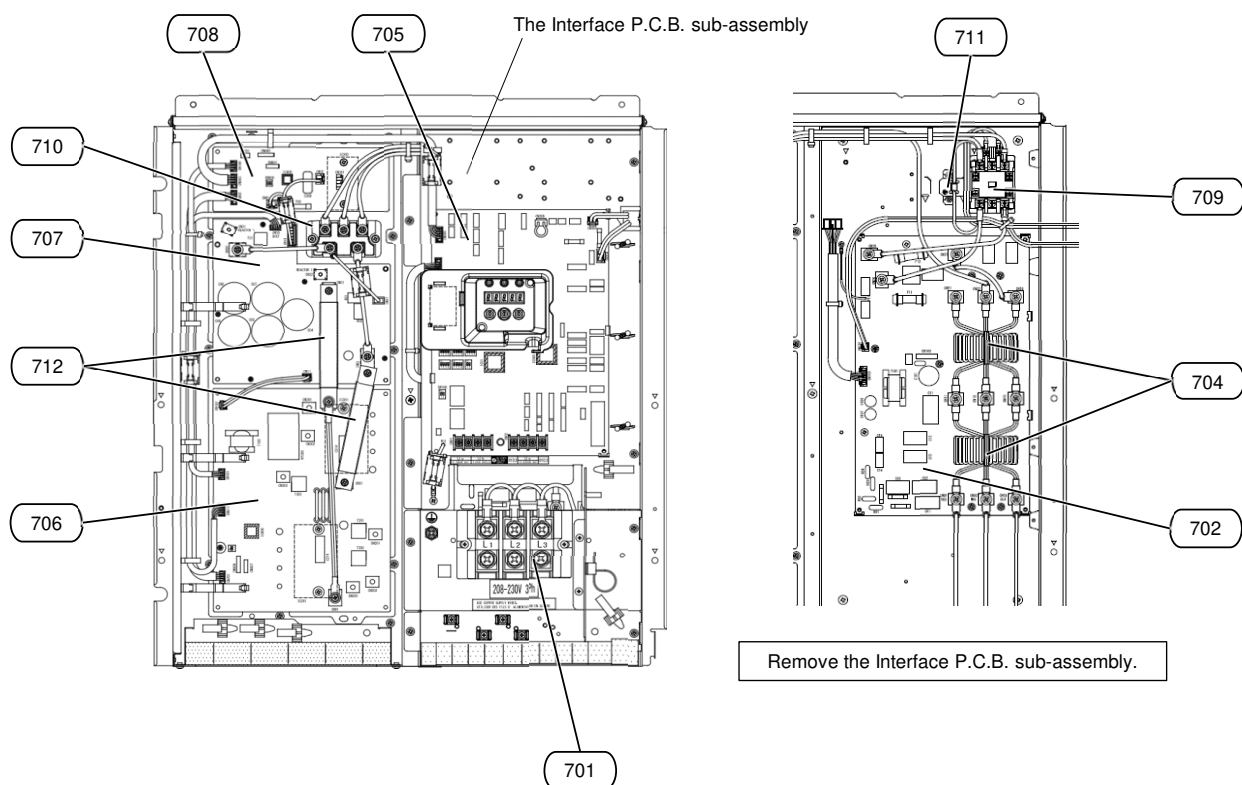

Ref. No.	Part No.	Description	Q'ty/Set	Drawing No.
701	43T60440	TERMINAL, 3P, 100A	1	1001606403
702	43TN9876	PC BOARD ASSY,NOISE FILTER,MCC-1749	1	1142190401
704	43T55396	FILTER, LINE	2	1004135501
705	43TNV345	PC BOARD ASSY,INTERFACE,MCC-1747	1	1142090505
706	43TN9883	PC BOARD ASSY,COMP-IPDU,MCC-1746	1	1142190601
707	43TN9885	PC BOARD ASSY,COMP-IPDU,MCC-1711	1	1142190901
708	43TN9882	PC BOARD ASSY,FAN-IPDU,MCC-1734	1	1142090702
709	43T52322	CONTACTOR,MAGNETIC,FC-2SUL	1	1000401508
710	43T31301	DIODE, 60A	1	1004822104
711	43T50345	THERMISTOR,PTC	2	1000601801
712	43T60609	BAR, METAL	2	1004135601

Inverter Assembly


Model : MMY-MUP1201FT9*

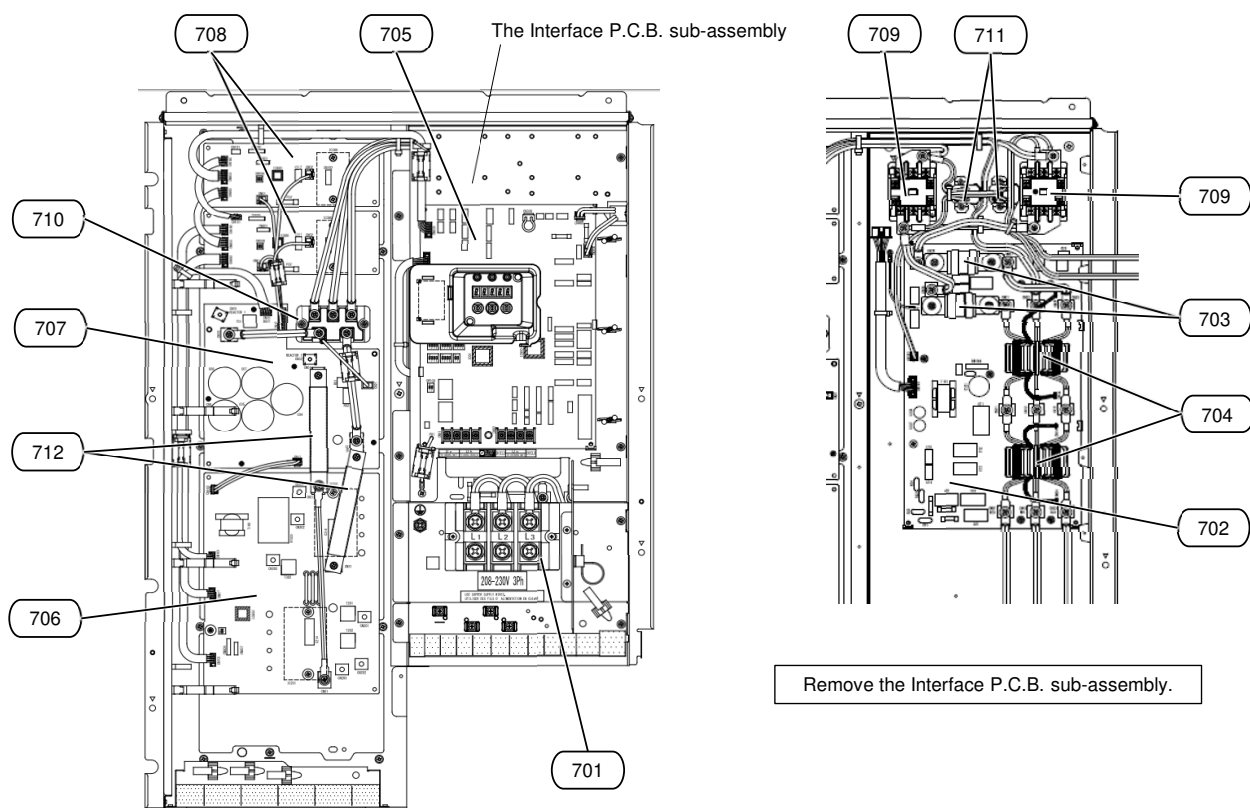

Ref. No.	Part No.	Description	Q'ty/Set	Drawing No.
701	43T60440	TERMINAL, 3P, 100A	1	1001606403
702	43TN9877	PC BOARD ASSY,NOISE FILTER,MCC-1749	1	1142190402
703	43T60608	FUSE, 150A	2	1004135301
704	43T55397	FILTER, LINE	2	1004141201
705	43TNV345	PC BOARD ASSY,INTERFACE,MCC-1747	1	1142090505
706	43TN9884	PC BOARD ASSY,COMP-IPDU,MCC-1746	1	1142190601
707	43TN9886	PC BOARD ASSY,COMP-IPDU,MCC-1711	1	1142190901
708	43TN9882	PC BOARD ASSY,FAN-IPDU,MCC-1734	2	1142090702
709	43T52321	CONTACTOR,MAGNETIC,FC-1SUL	2	1000401404
710	43T31301	DIODE, 60A	1	1004822104
711	43T50345	THERMISTOR,PTC	2	1000601801
712	43T60609	BAR, METAL	2	1004135601

Inverter Assembly


Model : MMY-MUP1441FT9*, 1681FT9*, 096H1FT9*, 120H1FT9*

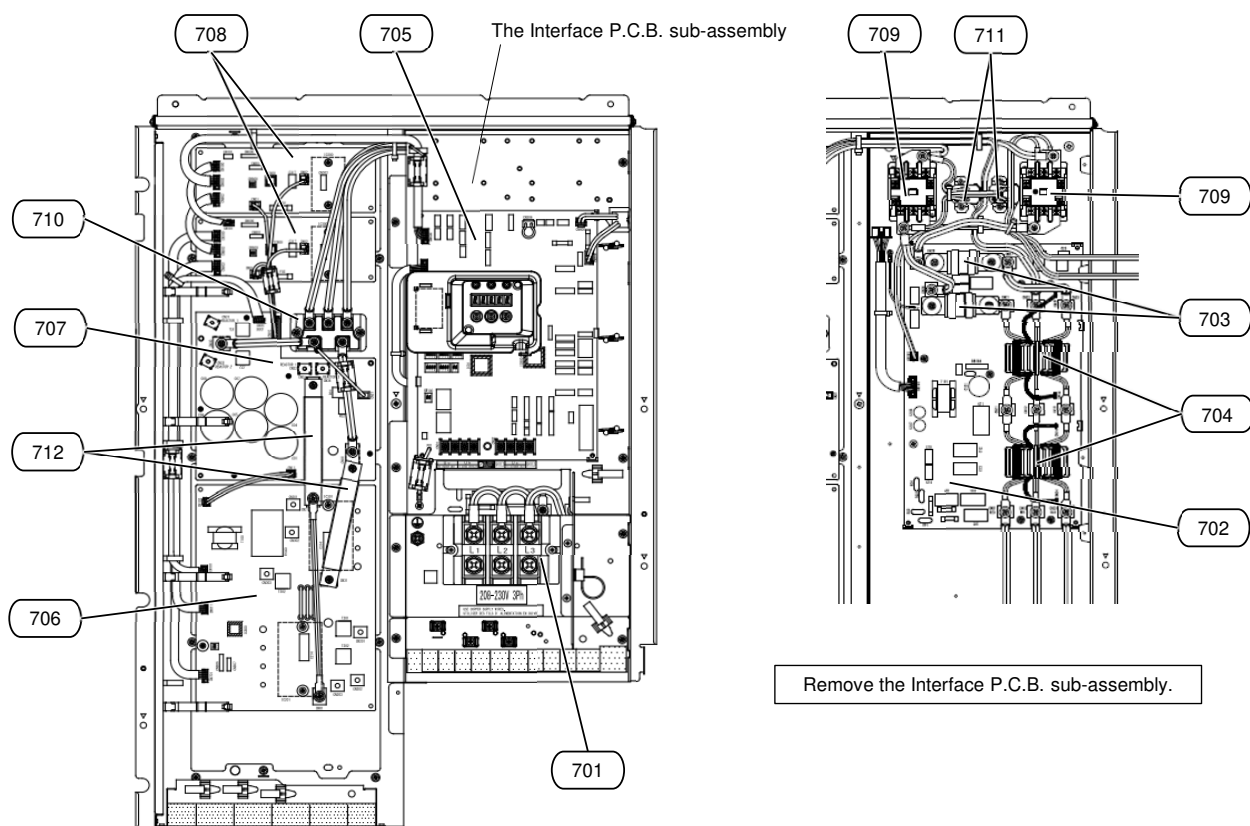

Ref. No.	Part No.	Description	Q'ty/Set	Drawing No.
701	43T60440	TERMINAL, 3P, 100A	1	1001606403
702	43TN9877	PC BOARD ASSY,NOISE FILTER,MCC-1749	1	1142190402
703	43T60608	FUSE, 150A	2	1004135301
704	43T55397	FILTER, LINE	2	1004141201
705	43TNV345	PC BOARD ASSY,INTERFACE,MCC-1747	1	1142090505
706	43TN9884	PC BOARD ASSY,COMP-IPDU,MCC-1746	1	1142190602
707	43TN9886	PC BOARD ASSY,COMP-IPDU,MCC-1711	1	1142190902
708	43TN9882	PC BOARD ASSY,FAN-IPDU,MCC-1734	2	1142090702
709	43T52321	CONTACTOR,MAGNETIC,FC-1SUL	2	1000401404
710	43T31302	DIODE, 100A	1	1004822102
711	43T50345	THERMISTOR,PTC	2	1000601801
712	43T60609	BAR, METAL	2	1004135601

15-2. Flow Selector unit Multi-port type


Model: RBM-Y0611FU4PUL, RBM-Y0611FU8PUL, RBM-Y0611FU12PUL

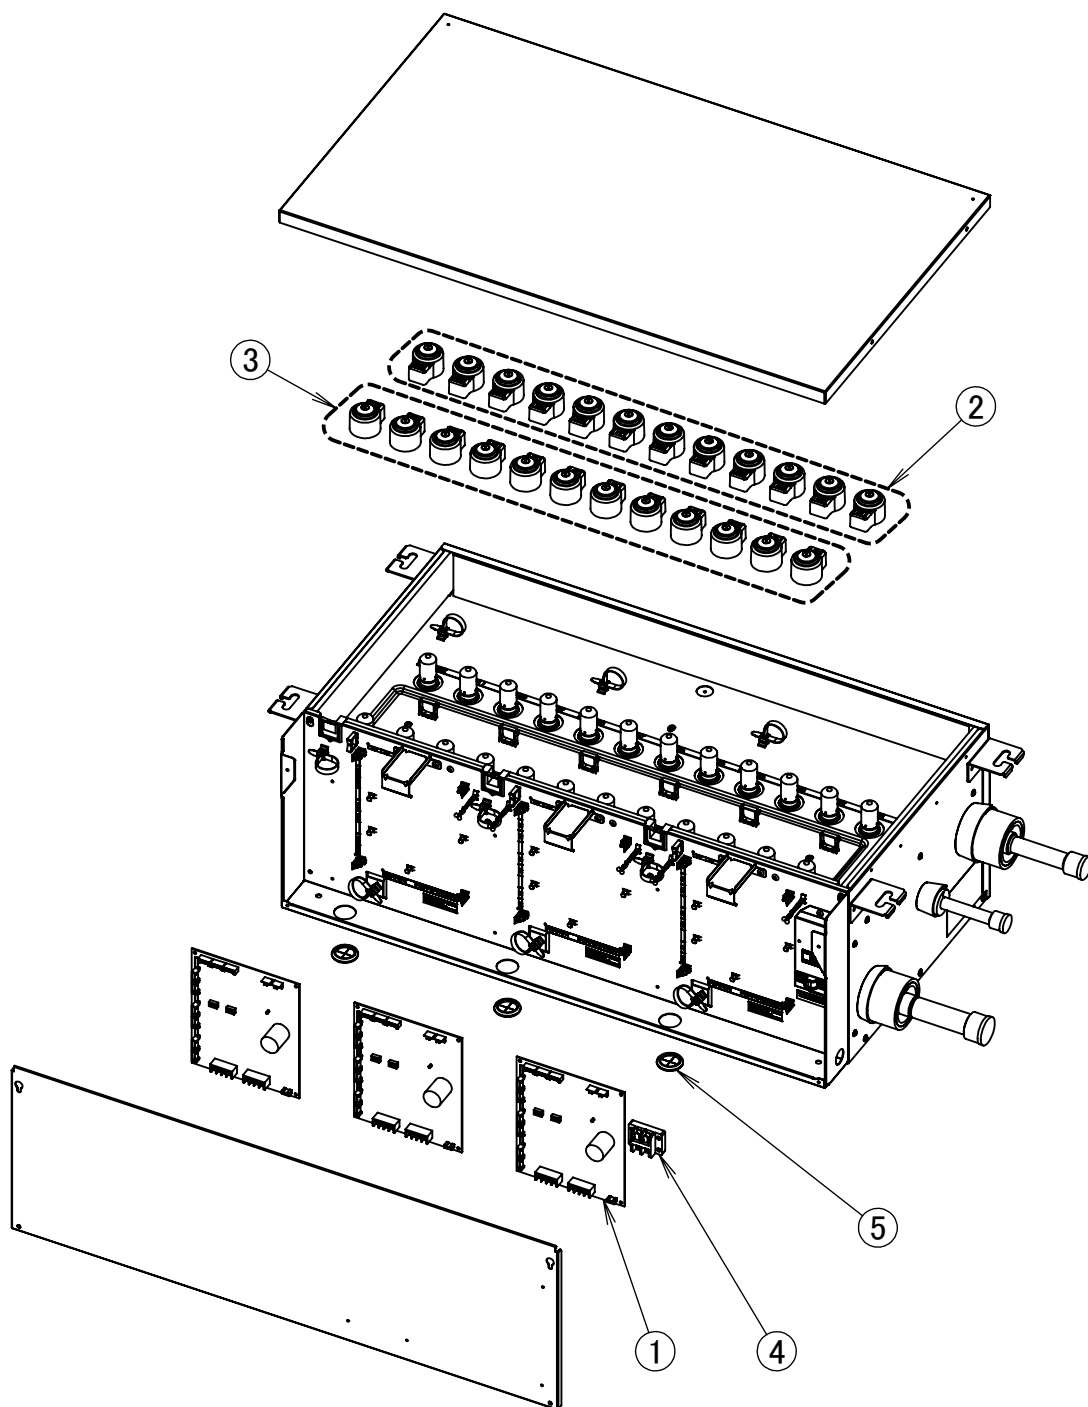

Location No.	Part No.	Description	RBM-Y0611***		
			FU4PUL	FU8PUL	FU12PUL
1	43TN9649	PC BOARD ASSY, MCC-1770	1	2	3
2	43T46546	COIL, PMV, PAM-MD12TF-305	4	8	12
3	43T46547	COIL, PMV, PAM-MD12TF-306	4	8	12
4	43T60569	TERMINAL-2P	1	1	1
5	43T96309	BUSHING	1	2	3

15-3. Flow Selector unit Single-port type

Model: RBM-Y0611FUPUL, RBM-Y0961FUPUL

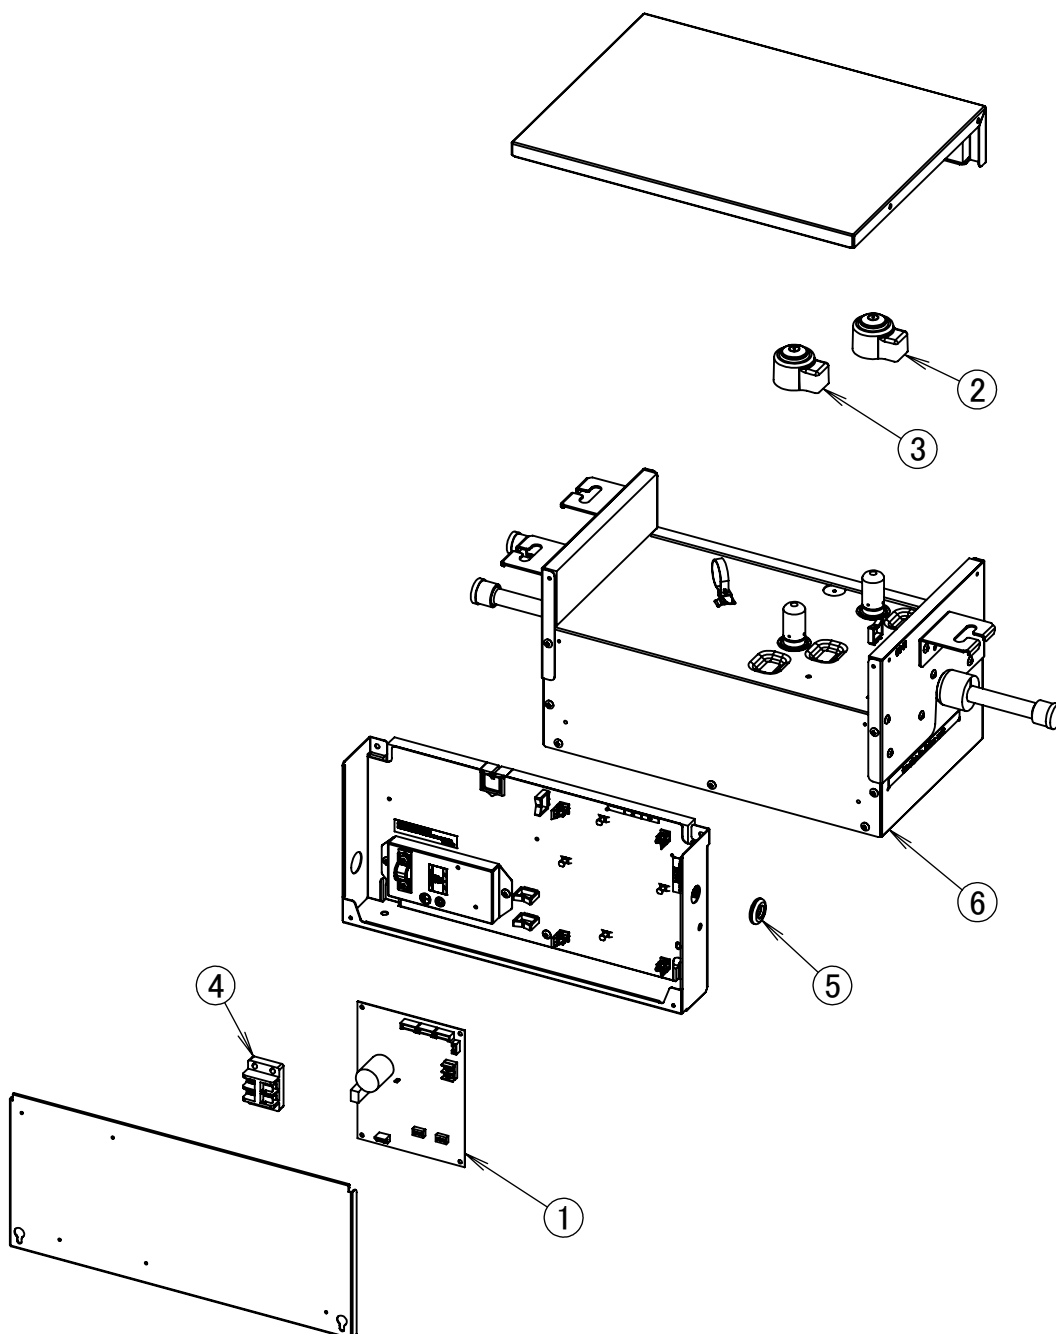

Location No.	Part No.	Description	RBM-Y***FUPUL	
			0611	0961
1	43TN9650	PC BOARD ASSY, MCC-1771	1	1
2	43T46546	COIL, PMV, PAM-MD12TF-305	1	1
3	43T46547	COIL, PMV, PAM-MD12TF-306	1	1
4	43T60569	TERMINAL-2P	1	1
5	43T96309	BUSHING	1	1
6	43T00943	BODY ASSY, SERVICE	1	
6	43T00944	BODY ASSY, SERVICE		1

CARRIER AIR CONDITIONING (THAILAND) CO., LTD.

144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI,
AMPHUR MUANGPATHUMTHANI, PATHUMTHANI 12000, THAILAND