

TOSHIBA
Carrier

SERVICE MANUAL


AIR-CONDITIONER MULTI TYPE

INDOOR UNIT

< Concealed Duct High Static Pressure Type >

MMD-UP0721HP-UL

MMD-UP0961HP-UL

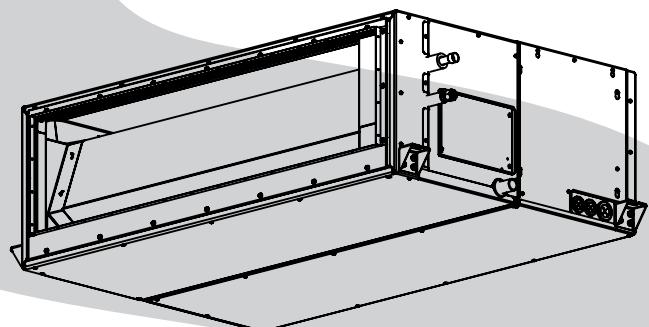

Original instruction

Adoption of R410A Refrigerant

This Air Conditioner is a new type which adopts a refrigerant R410A an environmentally friendly refrigerant.

CONTENTS

SAFETY CAUTION	3
1. SPECIFICATIONS	8
2. AIR DUCTING WORK.....	9
3. DIMENSIONAL DRAWING.....	10
4. WIRING DIAGRAMS	12
5. PARTS RATING	13
6. REFRIGERANT CYCLE DIAGRAM	14
7. CONTROL OUTLINE	15
8. COMMUNICATION TYPE, MODEL NAMES AND THE MAXIMUM NUMBER OF CONNECTABLE UNITS	23
8-1.This air conditioning (U series) has new communication specifications, and TU2C-Link (U series) and TCC-Link (other than U series) differ in a communication type. For the communication type and the model names such as each unit or remote controllers, refer to the following table.	23
8-2.If TU2C-Link (U series) is combined with TCC-Link (other than U series), the wiring specifications and the maximum number of connectable indoor units during group control operation will be changed.	23
9. APPLIED CONTROL AND FUNCTIONS (INCLUDING CIRCUIT CONFIGURATION)	24
9-1. Indoor controller block diagram	24
9-1-1. In Case of Connection of Wired (Simple) Remote Controller	24
9-1-2. In Case of Connection of Wireless Remote Controller	25
9-1-3. Connection of Both Wired (Simple) Remote Controller and Wireless Remote Controller	26
9-2. Indoor Print Circuit Board MCC-1631	27
9-3. Functions at test run	31
9-4. Test operation of indoor unit	33
10. APPLIED CONTROL	34
10-1. Setup of Selecting Function in Indoor Unit	34
10-2. Applied Control in Indoor Unit	40
11. TROUBLESHOOTING	56
11-1. Overview	56
11-2. Troubleshooting method	57
11-3. Troubleshooting based on information displayed on remote controller	63
11-4. Check codes displayed on remote controller and SMMS outdoor unit (7-segment display on I/F board) and locations to be checked	68
11-5. Diagnostic Procedure for Each Check Code (Indoor Unit)	83
11-6. Sensor characteristics	91
12. REPLACEMENT OF SERVICE P.C. BOARD	92
13. DETACHMENTS	101
14. EXPLODED VIEWS AND PARTS LIST	111

SAFETY CAUTION

The important contents concerned to the safety are described on the product itself and on this Service Manual. Please read this Service Manual after understanding the described items thoroughly in the following contents (Indications/Illustrated marks), and keep them. The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.

[Explanation of indications]

Indication	Explanation
 DANGER	Indicates contents assumed that an imminent danger causing a death or serious injury of the repair engineers and the third parties when an incorrect work has been executed.
 WARNING	Indicates possibilities assumed that a danger causing a death or serious injury of the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.
 CAUTION	Indicates contents assumed that an injury or property damage (*) may be caused on the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.

* Property damage : Enlarged damage concerned to property, furniture, and domestic animal/pet

[Explanation of illustrated marks]

Mark	Explanation
	Indicates prohibited items (Forbidden items to do) The sentences near an illustrated mark describe the concrete prohibited contents.
	Indicates mandatory items (Compulsory items to do) The sentences near an illustrated mark describe the concrete mandatory contents.
	Indicates cautions (Including danger/warning) The sentences or illustration near or in an illustrated mark describe the concrete cautious contents.

[Confirmation of warning label on the main unit]

Confirm that labels are indicated on the specified positions
(Refer to the Parts disassembly diagram (Outdoor unit).)
If removing the label during parts replace, stick it as the original.

 DANGER	
	Turn "OFF" the breaker before removing the front panel and cabinet, otherwise an electric shock is caused by high voltage resulted in a death or injury. During operation, a high voltage with 400V or higher of circuit (*) at secondary circuit of the high-voltage transformer is applied. If touching a high voltage with the naked hands or body, an electric shock is caused even if using an electric insulator. * : For details, refer to the electric wiring diagram.
	When removing the front panel or cabinet, execute short-circuit and discharge between high-voltage capacitor terminals. If discharge is not executed, an electric shock is caused by high voltage resulted in a death or injury. After turning off the breaker, high voltage also keeps to apply to the high-voltage capacitor.
	Do not turn on the breaker under condition that the front panel and cabinet are removed. An electric shock is caused by high voltage resulted in a death or injury.

⚠ WARNING

	Before troubleshooting or repair work, check the ground wire is connected to the ground terminals of the main unit, otherwise an electric shock is caused when a leak occurs. If the ground wire is not correctly connected, contact an electric engineer for rework.
	Do not modify the products. Do not also disassemble or modify the parts. It may cause a fire, electric shock or injury.
	For spare parts, use those specified (*). If unspecified parts are used, a fire or electric shock may be caused. * : For details, refer to the parts list.
	Before troubleshooting or repair work, do not bring a third party (a child, etc.) except the repair engineers close to the equipment. It causes an injury with tools or disassembled parts. Please inform the users so that the third party (a child, etc.) does not approach the equipment.
	Connect the cut-off lead wires with crimp contact, etc, put the closed end side upward and then apply a water-cut method, otherwise a leak or production of fire is caused at the users' side.
	<p>When repairing the refrigerating cycle, take the following measures.</p> <ol style="list-style-type: none"> 1) Be attentive to fire around the cycle. When using a gas stove, etc, be sure to put out fire before work; otherwise the oil mixed with refrigerant gas may catch fire. 2) Do not use a welder in the closed room. When using it without ventilation, carbon monoxide poisoning may be caused. 3) Do not bring inflammables close to the refrigerant cycle, otherwise fire of the welder may catch the inflammables.
	<p>Check the used refrigerant name and use tools and materials of the parts which match with it. For the products which use R410A refrigerant, the refrigerant name is indicated at a position on the outdoor unit where is easy to see.</p> <p>Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.</p> <p>For an air conditioner which uses R410A, never use other refrigerant than R410A. For an air conditioner which uses other refrigerant (R22, etc.), never use R410A. If different types of refrigerant are mixed, abnormal high pressure generates in the refrigerating cycle and an injury due to breakage may be caused.</p> <p>Do not charge refrigerant additionally. If charging refrigerant additionally when refrigerant gas leaks, the refrigerant composition in the refrigerating cycle changes resulted in change of air conditioner characteristics or refrigerant over the specified standard amount is charged and an abnormal high pressure is applied to the inside of the refrigerating cycle resulted in cause of breakage or injury. Therefore if the refrigerant gas leaks, recover the refrigerant in the air conditioner, execute vacuuming, and then newly recharge the specified amount of liquid refrigerant. In this time, never charge the refrigerant over the specified amount.</p> <p>When recharging the refrigerant in the refrigerating cycle, do not mix the refrigerant or air other than R410A into the specified refrigerant. If air or others is mixed with the refrigerant, abnormal high pressure generates in the refrigerating cycle resulted in cause of injury due to breakage.</p> <p>After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cocking stove though the refrigerant gas itself is innocuous.</p> <p>Never recover the refrigerant into the outdoor unit. When the equipment is moved or repaired, be sure to recover the refrigerant with recovering device. The refrigerant cannot be recovered in the outdoor unit; otherwise a serious accident such as breakage or injury is caused.</p>
	<p>After repair work, surely assemble the disassembled parts, and connect and lead the removed wires as before. Perform the work so that the cabinet or panel does not catch the inner wires.</p> <p>If incorrect assembly or incorrect wire connection was done, a disaster such as a leak or fire is caused at user's side.</p>

⚠ WARNING

 Insulator check	<p>After the work has finished, be sure to use an insulation tester set (500V Megger) to check the resistance is $2M\Omega$ or more between the charge section and the non-charge metal section (Ground position).</p> <p>If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side.</p>
 Ventilation	<p>When the refrigerant gas leaks during work, execute ventilation.</p> <p>If the refrigerant gas touches to a fire, poisonous gas generates.</p> <p>A case of leakage of the refrigerant and the closed room full with gas is dangerous because a shortage of oxygen occurs. Be sure to execute ventilation.</p>
 Be attentive to electric shock	<p>When checking the circuit inevitably under condition of the power-ON, use rubber gloves and others not to touch to the charging section.</p> <p>If touching to the charging section, an electric shock may be caused.</p> <p>When you access inside of the service panel to repair electric parts, wait for about five minutes after turning off the breaker. Do not start repairing immediately.</p> <p>Otherwise you may get electric shock by touching terminals of high-voltage capacitors. Natural discharge of the capacitor takes about five minutes.</p>
 Compulsion	<p>When the refrigerant gas leaks, find up the leaked position and repair it surely.</p> <p>If the leaked position cannot be found up and the repair work is interrupted, pump-down and tighten the service valve, otherwise the refrigerant gas may leak into the room.</p> <p>The poisonous gas generates when gas touches to fire such as fan heater, stove or cocking stove though the refrigerant gas itself is innocuous.</p> <p>When installing equipment which includes a large amount of charged refrigerant such as a multi air conditioner in a sub-room, it is necessary that the density does not the limit even if the refrigerant leaks.</p> <p>If the refrigerant leaks and exceeds the limit density, an accident of shortage of oxygen is caused.</p> <p>For the installation/moving/reinstallation work, follow to the Installation Manual.</p> <p>If an incorrect installation is done, a trouble of the refrigerating cycle, water leak, electric shock or fire is caused.</p>
 Check after repair	<p>After repair work has finished, check there is no trouble.</p> <p>If check is not executed, a fire, electric shock or injury may be caused.</p> <p>For a check, turn off the power breaker.</p>
 Check after reinstallation	<p>After repair work (installation of front panel and cabinet) has finished, execute a test run to check there is no generation of smoke or abnormal sound.</p> <p>If check is not executed, a fire or an electric shock is caused.</p> <p>Before test run, install the front panel and cabinet.</p> <p>Check the following items after reinstallation.</p> <ol style="list-style-type: none"> 1) The ground wire is correctly connected. 2) The power cord is not caught in the product. 3) There is no inclination or unsteadiness and the installation is stable.

⚠ CAUTION

 Put on gloves	<p>Be sure to put on the gloves (*) and a long sleeved shirt: otherwise an injury may be caused with the parts, etc.</p> <p>(*) Heavy gloves such as work gloves</p>
 Cooling check	<p>When the power was turned on, start to work after the equipment has been sufficiently cooled.</p> <p>As temperature of the compressor pipes and others became high due to cooling/heating operation, a burn may be caused.</p>

• Refrigerant R410A

This air conditioner adopts a type refrigerant R410A which does not deplete the ozone layer.

1. Safety Caution Concerned to Refrigerant (R410A)

Accompanied with change of refrigerant, the refrigerating oil has been also changed.

Therefore, be sure that water, dust, the former refrigerant or the former refrigerating oil is not mixed into the refrigerating cycle of the air conditioner with refrigerant (R410A) installation work or service work.

If an incorrect work or incorrect service is performed, there is a possibility to cause a serious accident. Use the tools and materials exclusive to R410A to purpose a safe work.

2. Cautions on Installation/Service

1) Do not mix the other refrigerant or refrigerating oil.

For the tools exclusive to R410A, shapes of all the joints including the service port differ from those of the former refrigerant in order to prevent mixture of them.

2) As the use pressure of the refrigerant (R410A) is high, use material thickness of the pipe and tools which are specified for R410A.

3) In the installation time, use clean pipe materials and work with great attention so that water and others do not mix in because pipes are affected by impurities such as water, oxide scales, oil, etc.
Use the clean pipes.

Be sure to brazing with flowing nitrogen gas. (Never use gas other than nitrogen gas.)

4) For the ground protection, use a vacuum pump for air purge.

5) R410A refrigerant is azeotropic mixture type refrigerant.

Therefore use liquid type to charge the refrigerant. (If using gas for charging, composition of the refrigerant changes and then characteristics of the air conditioner change.)

3. Pipe Materials

For the refrigerant pipes, copper pipe and joints are mainly used.

It is necessary to select the most appropriate pipes to conform to the standard.

Use clean material in which impurities adhere inside of pipe or joint to a minimum.

1) Copper pipe

<Piping>

The pipe thickness, flare finishing size, flare nut and others differ according to a refrigerant type.
When using a long copper pipe for R410A, it is recommended to select "Copper or copper-base pipe without seam" and one with bonded oil amount 0.0001 lbs / 32' 10" (40mg / 10m) or less.

Also do not use crushed, deformed, discolored (especially inside) pipes.

(Impurities cause clogging of expansion valves and capillary tubes.)

<Flare nut>

Use the flare nuts which are attached to the air conditioner unit.

2) Joint

The flare joint and socket joint are used for joints of the copper pipe.

The joints are rarely used for installation of the air conditioner. However clear impurities when using them.

4. Tools

(1) Required Tools for R410A

Mixing of different types of oil may cause a trouble such as generation of sludge, clogging of capillary, etc. Accordingly, the tools to be used are classified into the following three types.

- 1) Tools exclusive for R410A.
- 2) Tools exclusive for R410A, but can be also used for conventional refrigerant.
- 3) Tools commonly used for R410A and for conventional refrigerant.

The table below shows the tools exclusive for R410A and their interchangeability.

Tools exclusive for R410A (The following tools for R410A are required.)

Tools whose specifications are changed for R410A and their interchangeability

No.	Used tool	Usage	R410A air conditioner installation		Conventional air conditioner installation
			Existence of new equipment for R410A	Whether conventional equipment can be used	Whether new equipment can be used with conventional refrigerant
①	Flare tool	Pipe flaring	Yes	*(Note 1)	Yes
②	Copper pipe gauge for adjusting projection margin	Flaring by conventional flare tool	Yes	*(Note 1)	*(Note 1)
③	Torque wrench	Connection of flare nut	Yes	No	No
④	Gauge manifold	Evacuating, refrigerant charge, run check, etc.	Yes	No	No
⑤	Charge hose				
⑥	Vacuum pump adapter	Vacuum evacuating	Yes	No	Yes
⑦	Electronic balance for refrigerant charging	Refrigerant charge	Yes	Yes	Yes
⑧	Refrigerant cylinder	Refrigerant charge	Yes	No	No
⑨	Leakage detector	Gas leakage check	Yes	No	Yes
⑨	Charging cylinder	Refrigerant charge	(Note 2)	No	No

(Note 1) When flaring is carried out for R410A using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

(Note 2) Charging cylinder for R410A is being currently developed.

General tools (Conventional tools can be used.)

In addition to the above exclusive tools, the following equipments are necessary as the general tools.

1) Vacuum pump Use vacuum pump by attaching vacuum pump adapter.	8) Spanner or Monkey wrench
2) Torque wrench	9) Holecoredrill
3) Pipe cutter	10) Hexagon wrench (Opposite side 0.2"(4mm))
4) Reamer	11) Tape measure
5) Pipe bender	12) Metalsaw
6) Level vial	
7) Screwdriver (+, -)	

Also prepare the following equipments for other installation method and run check.

1) Clamp meter	3) Insulation resistance tester
2) Thermometer	4) Electrooscope

1. SPECIFICATIONS

Concealed Duct High Static Pressure Type

Model name		MMD-	UP0721HP-UL	UP0961HP-UL		
Cooling capacity ...Note 1		(kBtu/h)	72.0	96.0		
Heating capacity ...Note 1		(kBtu/h)	81.0	108.0		
Electrical characteristics (factory setting)	Power supply		1Ph. 208/230V ~ 60Hz			
	Running current (208V / 230V)		3.10 / 2.80	4.15 / 3.75		
	Power consumption (W)		540 / 540	790 / 790		
	Starting current (A)		8.63 / 7.80	8.63 / 7.80		
Appearance		Zinc hot dipping steel plate				
Dimension	Unit	Height (inch)	17.6			
		Width (inch)	55.1			
		Depth (inch)	35.4			
	Packing	Height (inch)	21.2			
		Width (inch)	69.2			
		Depth (inch)	40.8			
Total weight	Unit	(lbs)	218			
	Packed unit	(lbs)	265			
Heat exchanger		Finned tube				
Soundproof / Heat-insulating material		Polyethylene foam				
Fan unit	Fan		Centrifugal fan			
	Standard air flow (Med./Low)		2235 (1885 / 1470)	2825 (2470 / 2060)		
	Motor output (kW)		1kW * 1pc			
	External static pressure (factory setting) (In WG)		0.603			
	External static pressure range (In WG)		0.201-0.334-0.470-<0.603>-0.735-0.872-1.005 (7steps)			
Control		Remote control				
Connecting pipe	Gas side (inch)		7/8"			
	Liquid side (inch)		1/2"			
	Drain port (inch)		VP25(Polyvinyl chloride tube: External Dia. 1-1/4 Internal Dia.1)			
Sound pressure level (High/Med./Low) ...Note 2 (factory setting)		(dB(A))	44 / 40 / 36	46 / 42 / 38		
Sound power level (High/Med./Low)		(dB(A))	79 / 75 / 71	81 / 77 / 73		

Note 1 : The cooling capacities and electrical characteristics are measured under the conditions specified by JIS B 8615 based on the reference piping.

The reference piping consists of 16'5"(5m) of main piping and 8'2"(2.5m) of branch piping connected with 0 meter height.

Note 2 : The sound level are measured in an anechoic chamber in accordance with JIS B 8616



Normally, the values measured in the actual operating environment become larger than the indicated values due to the effects of external sound.

Note : Rated conditions Cooling: Indoor air temperature 80°F DB/67°F WB, Outdoor air temperature 95°F DB
Heating: Indoor air temperature 70°F DB, Outdoor air temperature 47°F DB/43°F WB



2. AIR DUCTING WORK

Static Pressure characteristics

UP0721 type

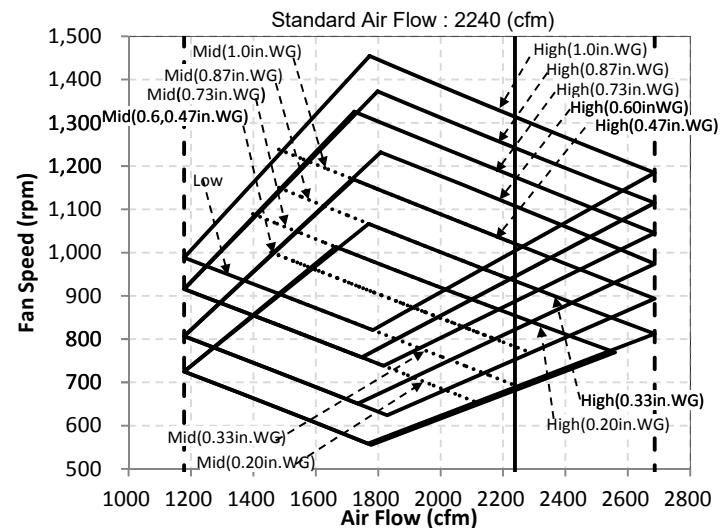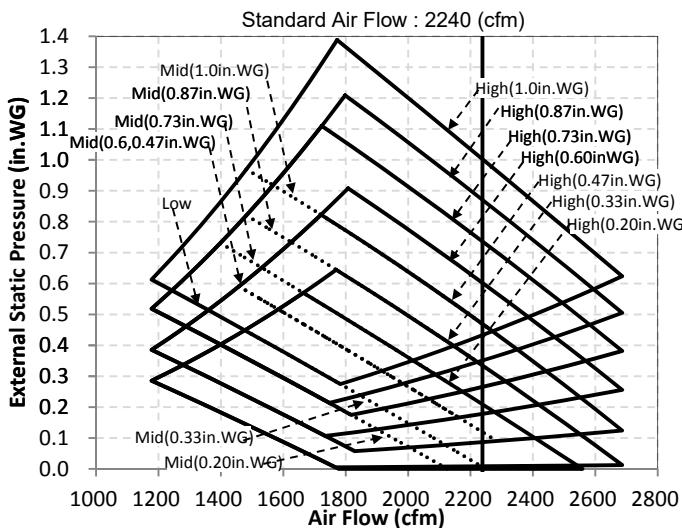


UP0961 type

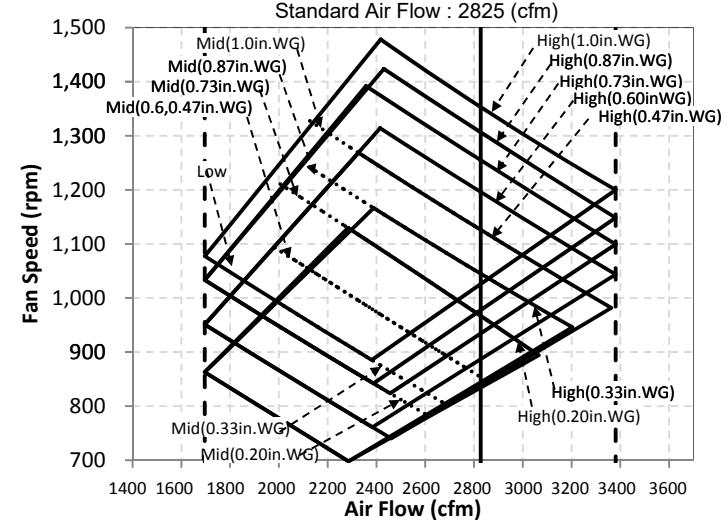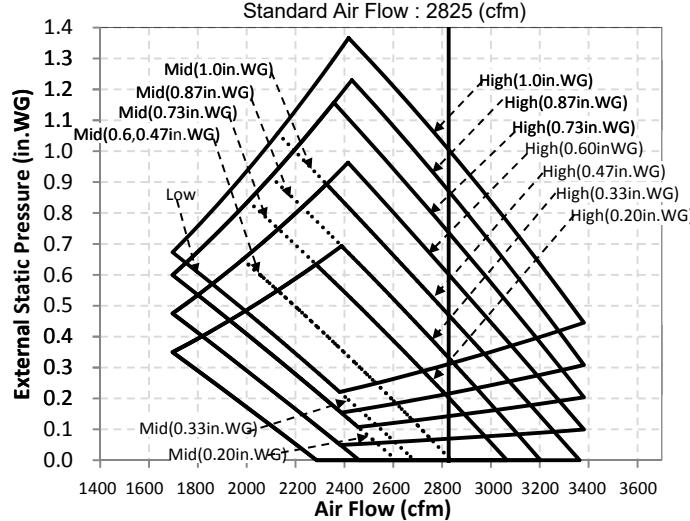

3. DIMENSIONAL DRAWING


Unit : in (mm)

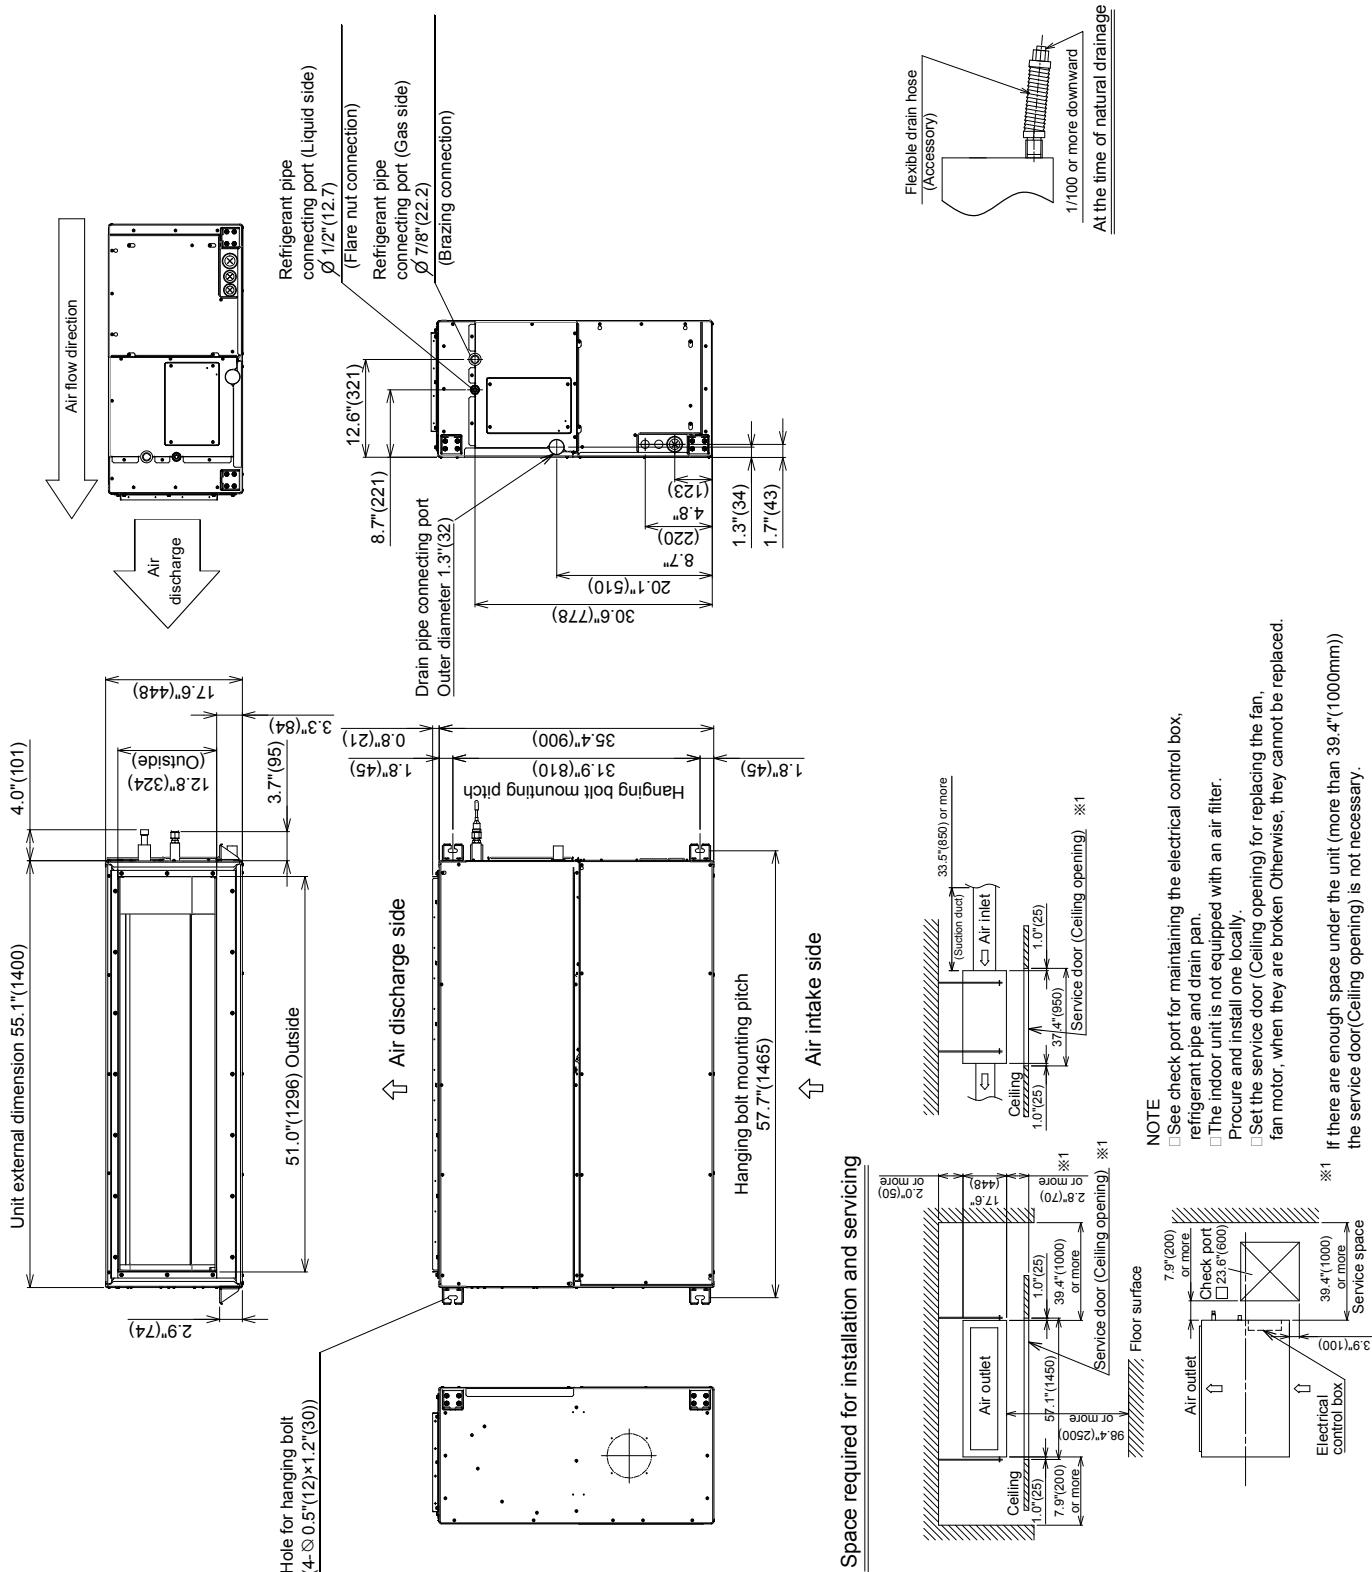


Duct arrangement

Unit : in (mm)

<Air outlet>

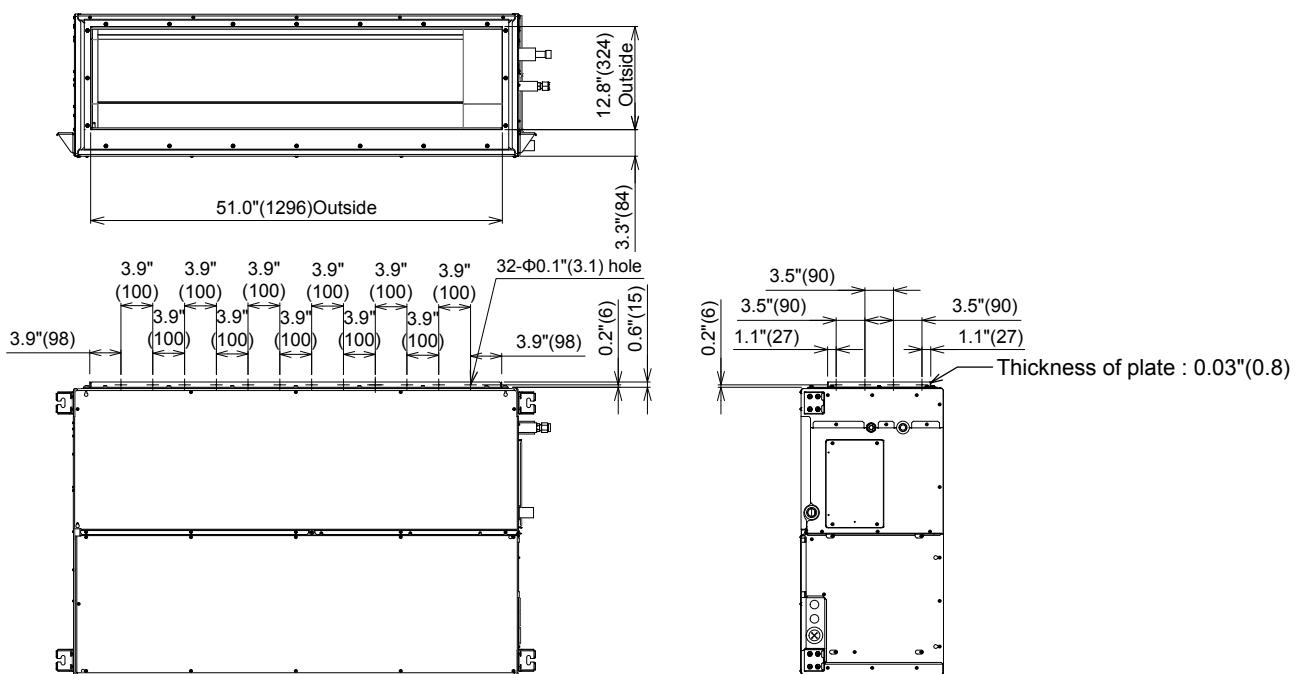


<Air inlet>

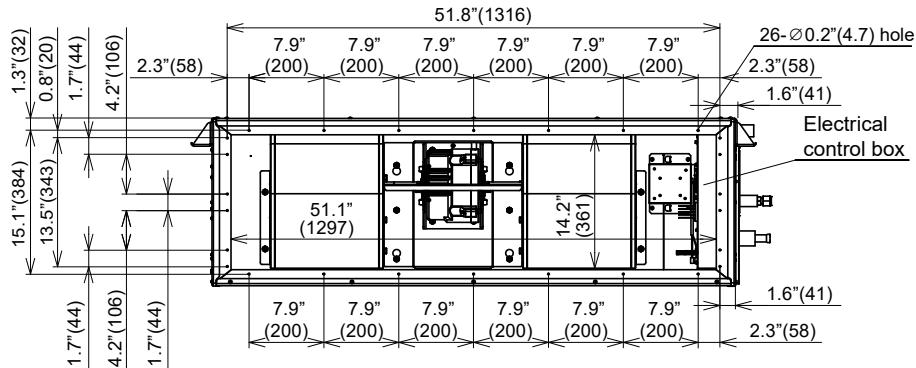

4. WIRING DIAGRAMS

Concealed Duct High Static Pressure Type Wiring Diagram

208/230-1-60

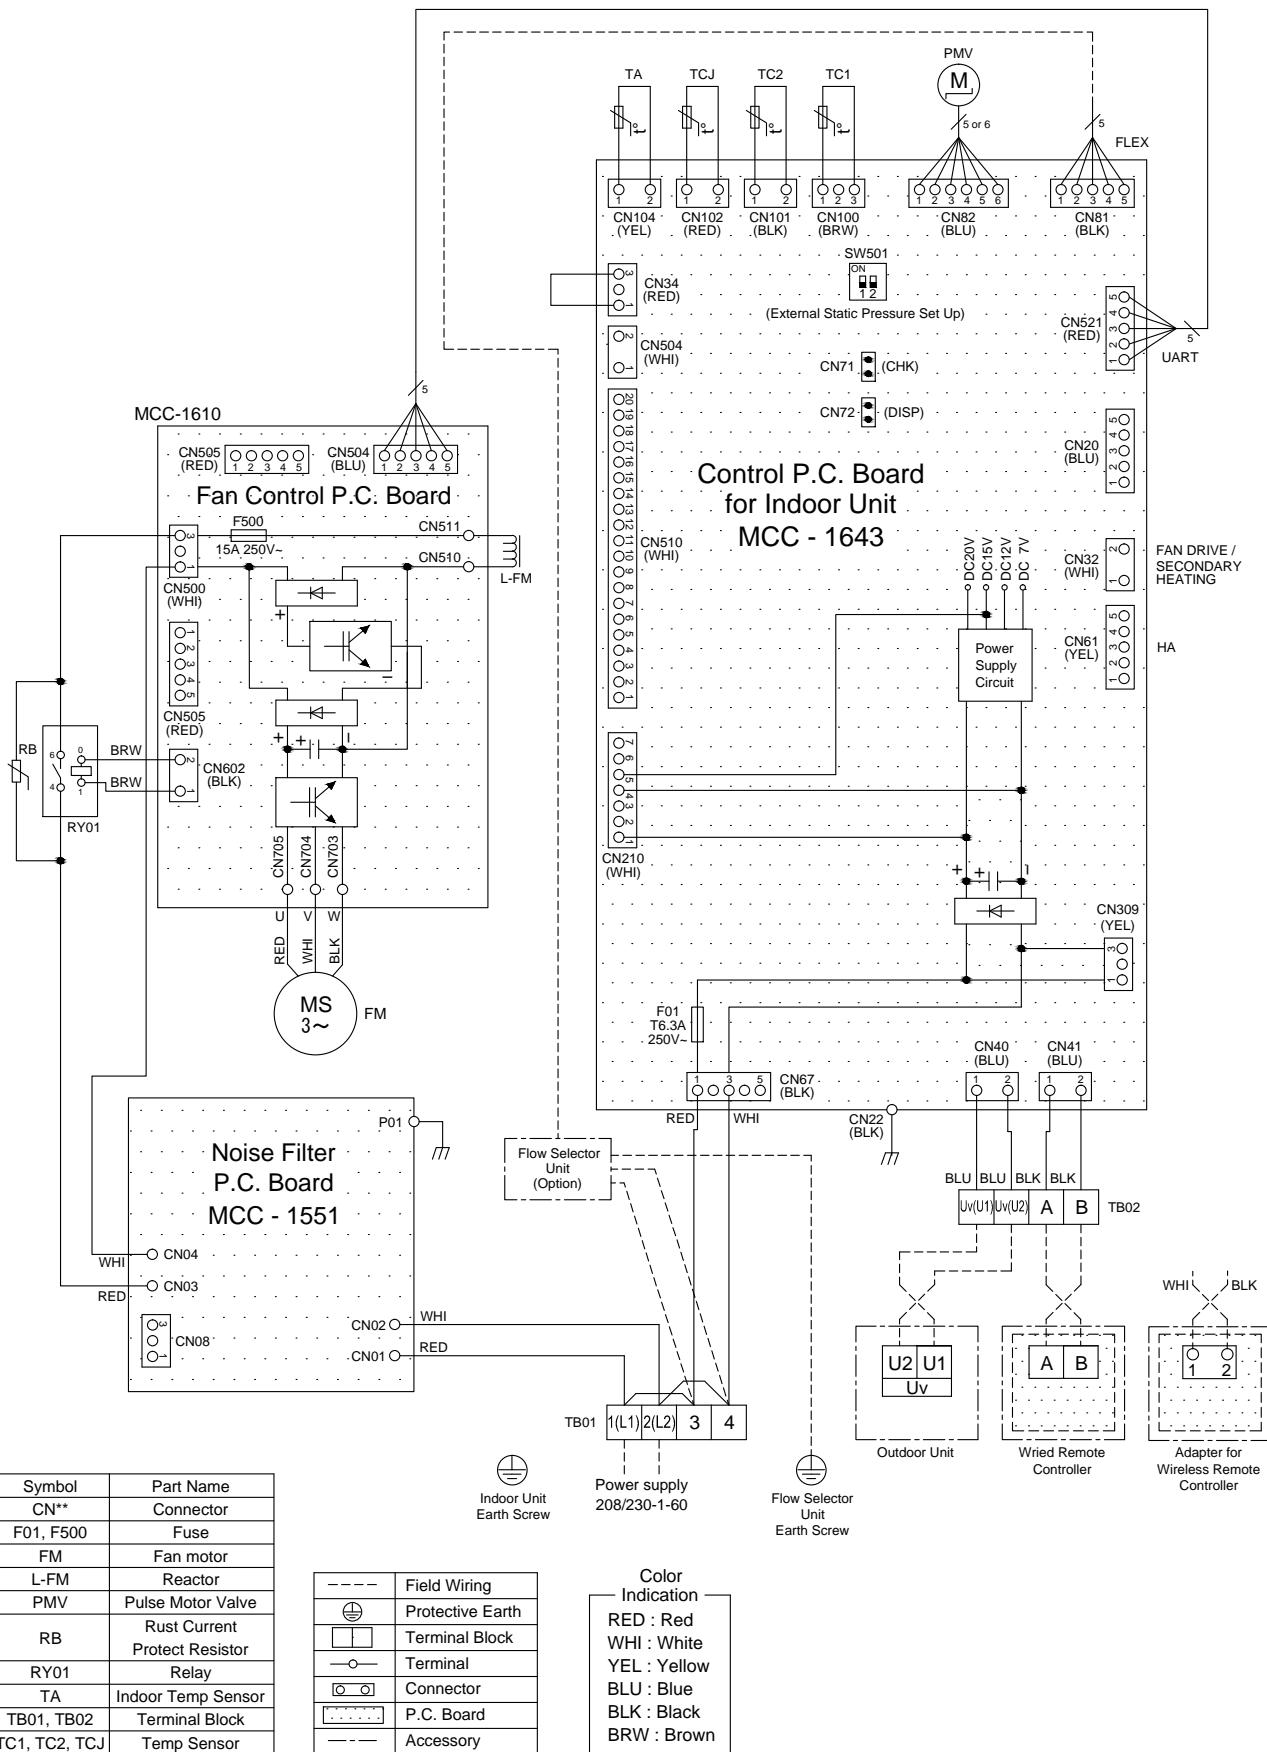


5. PARTS RATING

Model	MMD-	UP0721HP-UL	UP0961HP-UL
Fan motor		ICF-340WD940-1	
Pulse motor (motor only)		EFM-MD12TF-3	
Pulse motor valve (motor&valve)		EFM-A0YGTF-2	
TA sensor		Lead wire length:8.6" (218mm)	
TC1 sensor		Ø0.16"(4mm) size lead wire length:39.4" (1000mm) Vinyl tube (Blue)	
TC2 sensor		Ø0.24"(6mm) size lead wire length:39.4" (1000mm) Vinyl tube (Black)	
TCJ sensor		Ø0.24"(6mm) size lead wire length:39.4" (1000mm) Vinyl tube (Red)	

6. REFRIGERANT CYCLE DIAGRAM

Indoor unit

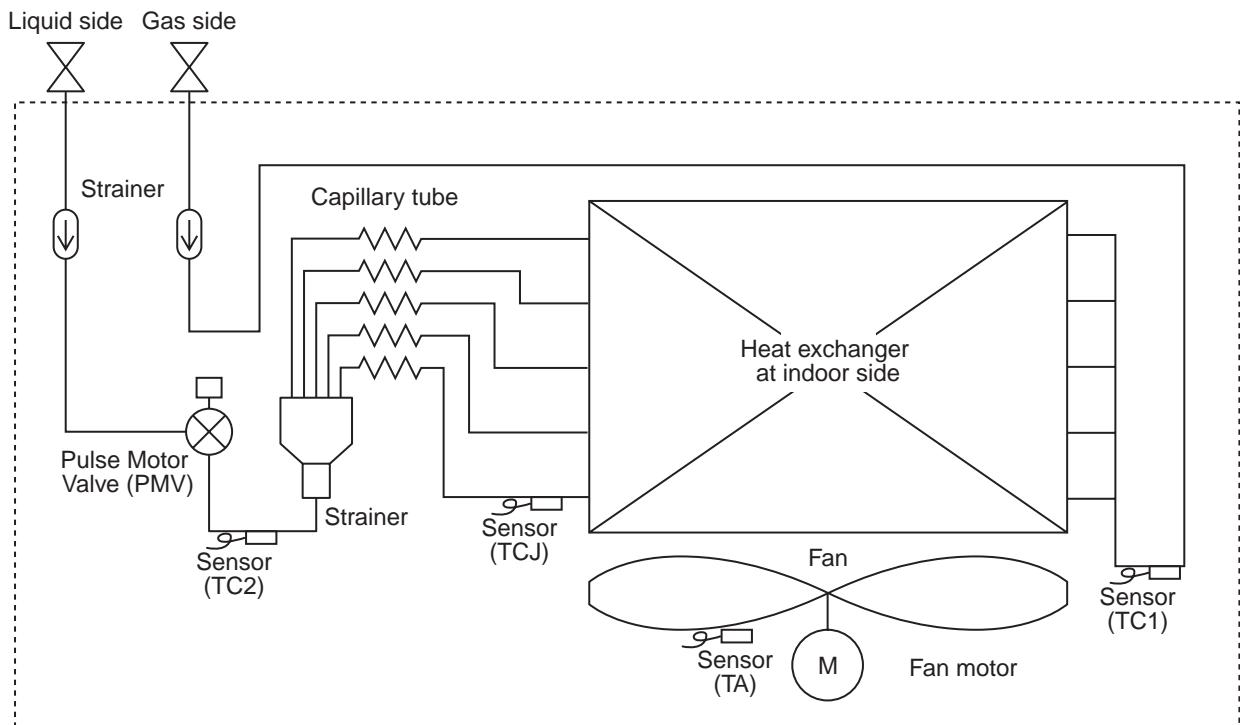

Explanation of functional parts in indoor unit

Functional part name	Functional outline
Pulse Motor Valve PMV	(Connector CN082 (6P): Blue) 1) Controls super heat in cooling operation 2) Controls subcool in heating operation 3) Recovers refrigerant oil in cooling operation 4) Recovers refrigerant oil in heating operation
Temp. Sensor	1.TA (Connector CN104 (2P): Yellow) 1) Detects indoor suction temperature
	2.TC1 (Connector CN100 (3P): Brown) 1) Controls PMV super heat in cooling operation
	3.TC2 (Connector CN101 (2P): Black) 1) Controls PMV subcool in heating operation
	4.TCJ (Connector CN102 (2P): Red) 1) Controls PMV super heat in cooling operation




7. CONTROL OUTLINE

■ Indoor unit

Control specifications


NO.	Item	Specification outline	Remarks																									
1	Upon power supply reset	<ol style="list-style-type: none"> Identification of outdoor unit When the power supply is reset, the outdoor unit is identified, and control is redirected according to the identification result. Indoor fan speed and air flow direction control availability settings Settings such as indoor fan speed and air flow direction control availability are replaced on the basis of EEPROM data. If power supply reset is performed in troubles, the check code is cleared. If the abnormality persists after the Start / Stop button on the remote control is pressed to resume operation, the check code is redisplayed on the remote control. 																										
2	Operation selection	<ol style="list-style-type: none"> The operation mode changes in response to an operation selection command issued via the remote control. <table border="1"> <thead> <tr> <th>Remote control command</th><th>Control outline</th></tr> </thead> <tbody> <tr> <td>STOP</td><td>Air conditioner shutdown</td></tr> <tr> <td>FAN</td><td>Fan operation</td></tr> <tr> <td>COOL</td><td>Cooling operation</td></tr> <tr> <td>HEAT</td><td>Heating operation</td></tr> </tbody> </table>	Remote control command	Control outline	STOP	Air conditioner shutdown	FAN	Fan operation	COOL	Cooling operation	HEAT	Heating operation	TS: Temperature setting TA: Room temperature															
Remote control command	Control outline																											
STOP	Air conditioner shutdown																											
FAN	Fan operation																											
COOL	Cooling operation																											
HEAT	Heating operation																											
3	Room temp. control	<ol style="list-style-type: none"> Adjustment range - remote control temperature setting (°F[°C]) <table border="1"> <thead> <tr> <th></th><th>COOL</th><th>HEAT</th></tr> </thead> <tbody> <tr> <td>Wired type</td><td>64°F[18°C] to 84°F[29°C]</td><td>64°F[18°C] to 84°F[29°C]</td></tr> <tr> <td>Wireless type</td><td>63°F[17°C] to 86°F[30°C]</td><td>63°F[17°C] to 86°F[30°C]</td></tr> </tbody> </table> <ol style="list-style-type: none"> In heating operation, the temperature setting may be fine-tuned via the DN code "06". <table border="1"> <thead> <tr> <th>SET DATA</th><th>0</th><th>2</th><th>4</th><th>6</th></tr> </thead> <tbody> <tr> <td>Temperature setting adjustment</td><td>+0 °F [+0°C]</td><td>+3.6 °F [+2°C]</td><td>+7.2 °F [+4°C]</td><td>+10.8 °F [+6°C]</td></tr> </tbody> </table> <p>Factory default</p> <table border="1"> <thead> <tr> <th>Model type</th><th>SET DATA</th></tr> </thead> <tbody> <tr> <td>Floor standing (standard, concealed, cabinet)</td><td>0</td></tr> <tr> <td>Other model</td><td>2</td></tr> </tbody> </table>		COOL	HEAT	Wired type	64°F[18°C] to 84°F[29°C]	64°F[18°C] to 84°F[29°C]	Wireless type	63°F[17°C] to 86°F[30°C]	63°F[17°C] to 86°F[30°C]	SET DATA	0	2	4	6	Temperature setting adjustment	+0 °F [+0°C]	+3.6 °F [+2°C]	+7.2 °F [+4°C]	+10.8 °F [+6°C]	Model type	SET DATA	Floor standing (standard, concealed, cabinet)	0	Other model	2	Shift in heating suction temperature (not applicable to remote control thermostat operation)
	COOL	HEAT																										
Wired type	64°F[18°C] to 84°F[29°C]	64°F[18°C] to 84°F[29°C]																										
Wireless type	63°F[17°C] to 86°F[30°C]	63°F[17°C] to 86°F[30°C]																										
SET DATA	0	2	4	6																								
Temperature setting adjustment	+0 °F [+0°C]	+3.6 °F [+2°C]	+7.2 °F [+4°C]	+10.8 °F [+6°C]																								
Model type	SET DATA																											
Floor standing (standard, concealed, cabinet)	0																											
Other model	2																											
4	Automatic capacity control	<ol style="list-style-type: none"> The outdoor unit determines the operational capacities of indoor units according to the difference between TA and TS. 	TS: Temperature setting TA: Room temperature																									




NO.	Item	Specification outline	Remarks
5	Fan speed control	<p>1. The fan operates in one of the four speed modes of "HIGH (HH)", "MED (H)", "LOW (L)" and "AUTO" on the basis of a command issued via the remote control. (Concealed duct high static pressure type: HH only)</p> <p>2. In AUTO fan speed mode, the air speed changes according to the difference between TA and TS.</p> <p><Cooling></p> <p><Heating></p> <p>Figures inside [] applies to remote control thermostat operation. Figures outside [] applies to body thermostat operation. Speed modes shown in < > apply to heating operation under AUTO air conditioner operation mode.</p> <ul style="list-style-type: none"> In AUTO fan speed mode, the fan speed remains the same for 1 minute each time a speed change occurs. However, a speed change command issued via the remote control can override this, and the fan speed changes accordingly. At the beginning of heating operation, a higher speed (steeper upward temperature gradient) is chosen. As long as the temperature difference remains on a boundary line, the fan speed stays the same. When $TC2 \geq 140^{\circ}F[60^{\circ}C]$, the fan speed is raised by one step. If the air conditioner goes thermostat OFF during heating operation, the fan speed drops down to LL (breeze). 	<p>HH > H+ > H > L+ > L > UL or LL</p> <p>DN code "32" "0000": Body thermostat "0001": Remote control thermostat</p> <p>TC2: Indoor heat exchanger sensor temperature</p> <p>"HEATING STANDBY" displayed</p>

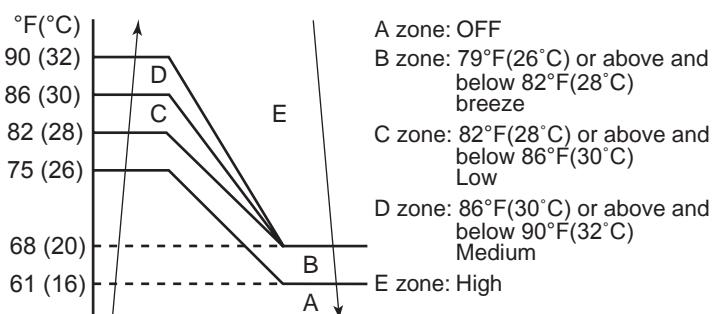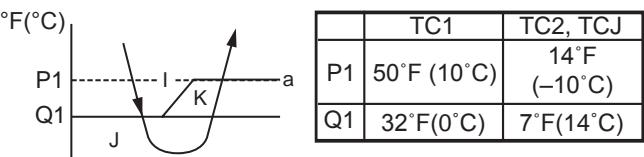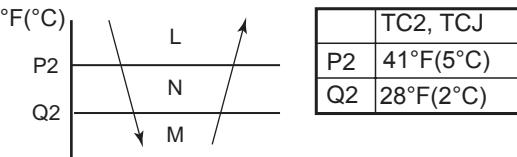
NO.	Item	Specification outline	Remarks															
6	Cold air discharge prevention control	<p>1. In heating operation, the upper limit of the fan tap is set according to the lower of whichever is the higher between TC2 sensor and TCJ sensor temperatures, on the one hand, and TC1 sensor temperature, on the other.</p> <ul style="list-style-type: none"> • If the fan continuously operates in zone B for 6 minutes, it automatically moves into zone C. • During defrosting, the control point is shifted by $+10.8^{\circ}\text{F}[6^{\circ}\text{C}]$.  <p>A zone: OFF B zone: $79^{\circ}\text{F}(26^{\circ}\text{C})$ or above and below $82^{\circ}\text{F}(28^{\circ}\text{C})$ breeze C zone: $82^{\circ}\text{F}(28^{\circ}\text{C})$ or above and below $86^{\circ}\text{F}(30^{\circ}\text{C})$ Low D zone: $86^{\circ}\text{F}(30^{\circ}\text{C})$ or above and below $90^{\circ}\text{F}(32^{\circ}\text{C})$ Medium E zone: High</p>	<p>TCJ: Indoor heat exchanger sensor temperature</p> <ul style="list-style-type: none"> • In zones D and E, priority is given to the remote control fan speed setting. • In zone A, "HEATING STANDBY" is displayed. 															
7	Freeze prevention control (low temp. release)	<p>1. During cooling, the air conditioner is operated in the manner described below according to the temperature readings of the TC1, TC2 and TCJ sensors.</p> <ul style="list-style-type: none"> • If zone J operation is detected for 5 minutes, the air conditioner is forced into thermostat OFF. • In zone K, the timer is put on pause, with the current timer count retained. • If zone I operation is detected, the timer count is cleared, and the air conditioner returns to normal operation. • If continuous zone J operation forces the air conditioner into thermostat OFF, the indoor fan is operated in breeze mode until it moves into zone I. The control is terminated under the following conditions: <p>Termination conditions</p> <p>1) $\text{TC1} \geq 54^{\circ}\text{F}(12^{\circ}\text{C})$, $\text{TC2} \geq 54^{\circ}\text{F}(12^{\circ}\text{C})$, and $\text{TCJ} \geq 54^{\circ}\text{F}(12^{\circ}\text{C})$</p>  <table border="1"> <thead> <tr> <th></th> <th>TC1</th> <th>TC2, TCJ</th> </tr> </thead> <tbody> <tr> <td>P1</td> <td>$50^{\circ}\text{F}(10^{\circ}\text{C})$</td> <td>$14^{\circ}\text{F}(-10^{\circ}\text{C})$</td> </tr> <tr> <td>Q1</td> <td>$32^{\circ}\text{F}(0^{\circ}\text{C})$</td> <td>$7^{\circ}\text{F}(14^{\circ}\text{C})$</td> </tr> </tbody> </table> <p>2) Passage of 20 minutes after stoppage</p> <p>2. During cooling, the air conditioner is operated in the manner described below according to the temperature readings of the TC2 and TCJ sensors.</p> <ul style="list-style-type: none"> • If zone M operation is detected for 45 minutes, the air conditioner is forced into thermo OFF. • In zone N, the timer is put on pause, with the current timer count retained. • When the air conditioner goes back into zone M, timer count is resumed from the retained value.  <table border="1"> <thead> <tr> <th></th> <th>TC2, TCJ</th> </tr> </thead> <tbody> <tr> <td>P2</td> <td>$41^{\circ}\text{F}(5^{\circ}\text{C})$</td> </tr> <tr> <td>Q2</td> <td>$28^{\circ}\text{F}(2^{\circ}\text{C})$</td> </tr> </tbody> </table> <ul style="list-style-type: none"> • If zone L operation is detected, the timer count is cleared, and the air conditioner returns to normal operation. <p>Reset conditions</p> <p>1) $\text{TC1} \geq 54^{\circ}\text{F}(12^{\circ}\text{C})$, $\text{TC2} \geq 54^{\circ}\text{F}(12^{\circ}\text{C})$ and $\text{TCJ} \geq 54^{\circ}\text{F}(12^{\circ}\text{C})$</p> <p>2) After 20 minutes elapsed from the stop.</p>		TC1	TC2, TCJ	P1	$50^{\circ}\text{F}(10^{\circ}\text{C})$	$14^{\circ}\text{F}(-10^{\circ}\text{C})$	Q1	$32^{\circ}\text{F}(0^{\circ}\text{C})$	$7^{\circ}\text{F}(14^{\circ}\text{C})$		TC2, TCJ	P2	$41^{\circ}\text{F}(5^{\circ}\text{C})$	Q2	$28^{\circ}\text{F}(2^{\circ}\text{C})$	<p>TC1: Indoor heat exchanger sensor temperature</p> <p>* With models without TC2, TC2 is not part of the control parameters.</p>
	TC1	TC2, TCJ																
P1	$50^{\circ}\text{F}(10^{\circ}\text{C})$	$14^{\circ}\text{F}(-10^{\circ}\text{C})$																
Q1	$32^{\circ}\text{F}(0^{\circ}\text{C})$	$7^{\circ}\text{F}(14^{\circ}\text{C})$																
	TC2, TCJ																	
P2	$41^{\circ}\text{F}(5^{\circ}\text{C})$																	
Q2	$28^{\circ}\text{F}(2^{\circ}\text{C})$																	

NO.	Item	Specification outline	Remarks
8	Cooling oil (refrigerant) recovery control	<p>While the outdoor unit is recovering cooling oil (refrigerant), the indoor units perform the following control tasks:</p> <p>[common for operational (cooling thermo ON / thermo OFF / FAN), as well as nonoperational indoor units]</p> <ol style="list-style-type: none"> 1) Open the indoor PMV to a certain degree. 2) Engage in recovery control for a specified period of time and return to normal cooling operation at the end of this period upon terminating the control. 3) Operate the drain pump throughout the recovery control period and for about 1 minute after it. 	<ul style="list-style-type: none"> • Recovery operation normally takes place roughly every 2 hours. • The opening position of the indoor PMV depending on the type and capacity of the indoor unit.
9	Heating refrigerant (oil) recovery control	<p>While the outdoor unit is recovering heating refrigerant (oil), the indoor units perform the following control tasks:</p> <ol style="list-style-type: none"> 1) Open the indoor PMV to a certain degree. 2) Control the indoor fan according to the operation mode. <p>[Indoor units operating in heating thermo ON / OFF state]</p> <p>Let the indoor fan continue operating, but turn it off if the temperature of the indoor heat exchanger drops.</p> <p>[Indoor units operating in FAN mode]</p> <p>Turn off the indoor fan and display "HEATING STANDBY  " on the remote controller.</p> <p>[Non-operational indoor units]</p> <p>Keep the indoor fan turned off.</p> <ol style="list-style-type: none"> 3) Terminate the recovery operation depending on the TC2 temperature reading. <p>The timing of termination is determined by each indoor unit.</p> <ol style="list-style-type: none"> 4) Operate the indoor fan and drain pump for about 1 minute after the termination of the recovery operation. (Applicable to compact 4-way cassette type and 1- way cassette type) 	<ul style="list-style-type: none"> • Recovery operation normally takes place roughly every hour. • The opening position of the indoor PMV depending on the type and capacity of the indoor unit.
10	Defrosting control	<p>While the outdoor unit is engaged in defrosting control, the indoor units perform the following control tasks:</p> <ol style="list-style-type: none"> 1) Open the indoor PMV to a certain degree. 2) Control the indoor fan according to the operation mode. <p>[Indoor units operating in heating thermo ON / OFF state]</p> <p>Let the indoor fan continue operating for a while, but turn it off as the temperature of the indoor heat exchanger drops.</p> <p>[Indoor units operating in FAN mode]</p> <p>Let the indoor fan continue operating.</p> <p>[Non-operational indoor units]</p> <p>Keep the indoor fan turned off.</p> <ol style="list-style-type: none"> 3) As defrosting control comes to an end, it gives way to heating refrigerant (oil) recovery control. <p>(For control details, see "9. Heating refrigerant (oil) recovery control" above.)</p>	<ul style="list-style-type: none"> • For defrosting commencement conditions, see 5 Control Outline "10. Defrosting control (reverse defrosting method)" in SMMS-i Outdoor Unit Service Manual A10-005 above. • The opening position of the indoor PMV depending on the type and capacity of the indoor unit.
11	Short intermittent operation compensation control	<ol style="list-style-type: none"> 1. For 5 minutes after startup, the system is forced to continue operating even if it reaches the thermo OFF region. 2. However, priority is given to cooling / heating selection, operation standby, and protective control, so that there is no overriding of thermo OFF in these cases. 	
12	Drain pump control	<ol style="list-style-type: none"> 1. During cooling (including DRY operation), the drain pump is operated at all times. 2. If the float switch is activated while the drain pump is in operation, the drain pump continues operating, with the relevant check code displayed. 3. If the float switch is activated while the drain pump is turned off, thermo OFF is forced on the air conditioner, with the drain pump put into operation. If the float switch continues to be activated for about 5 minutes, the drain pump is turned off, with the relevant check code displayed. 	Check code [P10]
13	Elimination of residual heat	<ol style="list-style-type: none"> 1. When the air conditioner is turned off after engaging in heating operation, the indoor fan is operated for about 30 seconds in "breeze" mode. 	

NO.	Item	Specification outline	Remarks																						
14	Filter sign display (not applicable to wireless type) *Provided in the separately mounted type, TCB-AX32E2	<p>1. The indoor fan's cumulative hours of operation are counted, and when these exceed the prescribed value (2500H), a filter replacement signal is sent to the remote controller to display a filter sign on it.</p> <p>2. When a filter reset signal is received from the remote controller, the timer measuring cumulative hours is cleared. If the prescribed hours have been exceeded, the hours count is reset, with the sign on the remote controller display erased.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>Filter service life</td> <td>2500H</td> </tr> </table>	Filter service life	2500H	“FILTER █” displayed																				
Filter service life	2500H																								
15	Operation standby Heating standby	<p><Operation standby> Displayed on remote controller</p> <p>1. When any of the DN codes listed below is displayed</p> <ul style="list-style-type: none"> • “P05” - Detection of an open phase in the power supply wiring • “P10” - Detection of indoor flooding in at least one indoor unit • “L30” - Detection of an interlock alarm in at least one indoor unit <p>2. Forced thermo OFF</p> <ul style="list-style-type: none"> • “COOL / DRY” operation is unavailable because at least one indoor unit is operating in “HEAT” mode. • “HEAT” operation is unavailable because at least one indoor unit is operating in “COOL / DRY” mode under priority cooling setting (bit 1 of SW11 on outdoor I/ F P.C. board ON). <p>3. All indoor units not able to engage in any of the above operations stand by in thermo OFF state.</p> <p>4. The indoor fan has been turned off because the system is engaged in a heat refrigerant (oil) recovery operation.</p> <p><Heating standby> Displayed on remote controller</p> <p>1. Normal thermo OFF</p> <ul style="list-style-type: none"> • During heating, the indoor unit goes thermo OFF as the heating temperature setting is reached. <p>2. During heating, the fan rotates at a breeze speed (UL or lower) or remains stationary to prevent cold air from being discharged (including defrosting operation).</p> <p>3. Forced thermo OFF</p> <ul style="list-style-type: none"> • “HEAT” operation is unavailable because at least one indoor unit is operating in “COOL / DRY” mode under priority cooling setting (bit 1 of SW11 on outdoor I/ F P.C. board ON). 	<ul style="list-style-type: none"> • “OPERATION STANDBY  <thead> <tr> <th rowspan="2">Operation via TCC-Link central control</th> <th colspan="6">Operation on RBC-AMT32UL</th> <th rowspan="2">RBC-AMT32UL display</th> </tr> <tr> <th>Start / stop selection</th> <th>Operation mode selection</th> <th>Timer setting</th> <th>Temperature setting</th> <th>Fan speed setting</th> <th>Air flow direction setting</th> </tr> </thead> <tbody> <tr> <td>Individual</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td rowspan="5">“CENTRAL CONTROL IN PROGRESS”  <p>- 19 -</p> </td></tr></tbody>	Operation via TCC-Link central control	Operation on RBC-AMT32UL						RBC-AMT32UL display	Start / stop selection	Operation mode selection	Timer setting	Temperature setting	Fan speed setting	Air flow direction setting	Individual	○	○	○	○	○	○	“CENTRAL CONTROL IN PROGRESS”  <p>- 19 -</p>
Operation via TCC-Link central control	Operation on RBC-AMT32UL						RBC-AMT32UL display																		
	Start / stop selection	Operation mode selection	Timer setting	Temperature setting	Fan speed setting	Air flow direction setting																			
Individual	○	○	○	○	○	○	“CENTRAL CONTROL IN PROGRESS”  <p>- 19 -</p>																		

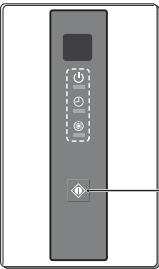NO.	Item	Specification outline	Remarks
17	DC motor	<p>1) When the fan operation has started, positioning of the stator and the rotor are performed. (Moves slightly with tap sound)</p> <p>2) The motor operates according to the command from the indoor controller.</p> <p>Notes)</p> <ul style="list-style-type: none"> • When the fan rotates while the air conditioner stops due to entering of outside air, etc, the air conditioner may operate while the fan motor stops. • When a fan lock is found, the air conditioner stops, and an error is displayed. • If static pressure of the used duct does not match with the setup value of static pressure, which was decided in the static pressure setting code No. [5D], the air conditioner may stop or an error code may be displayed. 	Check code "P12"
18	Power saving mode	<p>(In the case of RBC-AMT***)</p> <ol style="list-style-type: none"> 1. Push the  button on the remote controller 2. The "SAVE" segment lights up on the wired remote controller display. 3. The requirement capacity ratio is limited to approximately 75 %. 4. If the power saving operation is enabled, the settings are retained when the operation is stopped, when the mode is changed, or when the power is reset. The power saving operation will be enabled the next time the operation starts. 	The power saving operation cannot be set by the wireless remote controller or wired remote controller of AMT31E or older.
19	Frequency fixed operation (Test run)	<p><In case of wired remote controller></p> <ol style="list-style-type: none"> 1) When pushing [CHK] button for 4 seconds or more, [TEST] is displayed on the display screen and the mode enters in Test run mode. 2) Push [ON/OFF] button. 3) Using [MODE] button, set the mode to [COOL] or [HEAT]. <ul style="list-style-type: none"> • Do not use other mode than [COOL]/[HEAT] mode. • During test run operation, the temperature cannot be adjusted. • An error is detected as usual. • A frequency fixed operation is performed. 4) After the test run, push [ON/OFF] button to stop the operation. (Display in the display part is same as the procedure in Item 1.) 5) Push [CHK] button to clear the test run mode. ([TEST] display in the display part disappears and the status returns to the normal stop status.) <p><In case of wireless remote controller></p> <ol style="list-style-type: none"> 1) When TEMPORARY button is pushed for 10 seconds or more, "Pil!" sound is heard and the operation changes to test run. After approx. 3 minutes, a cooling operation starts forcedly. Check cool air starts blowing. If the operation does not start, check wiring again. 2) To stop a test operation, push TEMPORARY button once again (Approx. 1 second). Check wiring / piping of the indoor and outdoor units in test run.  <p>TEMPORARY button</p>	Command frequency is approximately [S7]

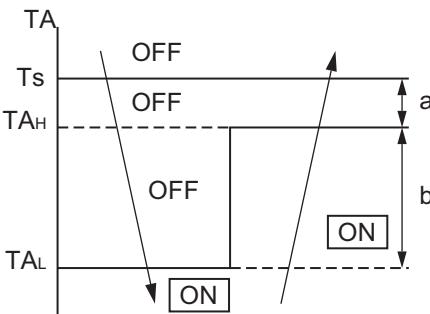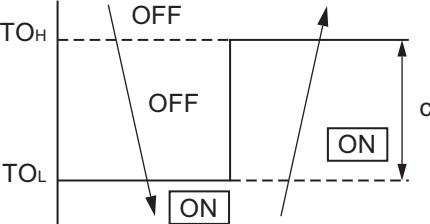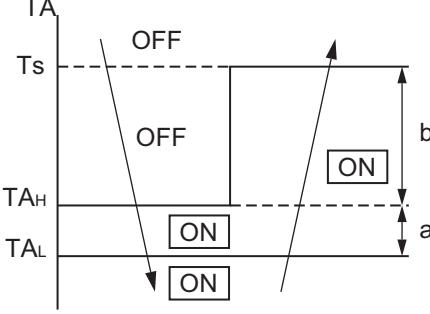No.	Item	Outline of specifications	Remarks
20	Secondary heating	<p>Secondary heating can be used while heating operations are performed.</p> <p><Control Outline (Normal Mode)></p> <ol style="list-style-type: none"> If the difference between the indoor temperature and the outdoor temperature is large while the air conditioner is operating, turn ON the secondary heating. This function is valid when the CODE No. (DN) [DC] is set to "0001" 33.9°F(0.5°C) to "0010" 41°F(5.0°C) using the wired remote controller, and the output to the external heating source will turn ON if the room temperature satisfies the condition. The output will always stay ON while defrosting operations are being performed.  <p>4) The output can be turned on by the outdoor temperature when CODE No. (DN) [C7] is set to "0001" 33.8°F(1°C) to "0010" 50°F(10°C) using the wired remote controller.</p>  <p><Control Outline (Flip Mode)></p> <ol style="list-style-type: none"> If the difference between the room temperature and the set temperature is large while using secondary heating, run the air conditioner. This function is valid when the CODE No. (DN) [C5] is set to "0001" (Flip mode) or the CODE No. (DN) [C7] is set to "0001" 33.8°F(1°C) to "0010" 50°F(10°C) using the wired remote controller, and when the output is switched ON when the room temperature satisfies the conditions. <p>* The outdoor temperature determination is invalid whilst this control is performed.</p> 	<p>TA_H : Temp.set air high (= Ts - a)</p> <p>TA_L : Temp.set air low (= TA_H - b)</p> <p>TO_H : Temp.set out high</p> <p>TO_L : Temp.set out low (= TO_H - c)</p>

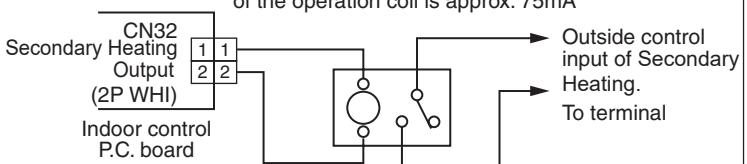No.	Item	Outline of specifications		Remarks																											
20	Secondary heating (Continued)	<p>DN [C5]</p> <table border="1"> <tr><td>Data</td><td>Secondary heating mode</td></tr> <tr><td>0000</td><td>Normal mode (Factory default)</td></tr> <tr><td>0001</td><td>Flip mode</td></tr> </table> <p>DN [C6]</p> <table border="1"> <tr><td>Data</td><td>TO_H: Set temp. out (high) °F[°C]</td></tr> <tr><td>-0015 to 0015</td><td>"-0015": 59°F(-15°C) to "0015": 59°F(15°C) "0000": 32°F(0°C) (Factory default)</td></tr> </table> <p>DN [C7]</p> <table border="1"> <tr><td>Data</td><td>c : TO_H - TO_L °F[°C]</td></tr> <tr><td>0000</td><td>Unavailable (Factory default)</td></tr> <tr><td>0001 to 0010</td><td>0001: 33.8°F(1°C) to "0010": 50°F(10°C)</td></tr> </table> <p>DN [DB]</p> <table border="1"> <tr><td>Data</td><td>b : TA_H - TA_L °F[°C]</td></tr> <tr><td>0001 to 0010</td><td>"0001": 32.9°F(0.5°C) to "0010": 41°F(5.0°C) "0006": 37.4°F(3°C) (Factory default)</td></tr> </table> <p>DN [DC]</p> <table border="1"> <tr><td>Data</td><td>a : Ts - TA_H (Normal mode)°F[°C] TA_L - Ts (Flip mode)°F[°C]</td></tr> <tr><td>0000</td><td>Unavailable (Factory default)</td></tr> <tr><td>0001 to 0010</td><td>0001: 33.8°F(1°C) to "0010": 50°F(10°C)</td></tr> </table> <p><Wiring></p> <p>1) Use ① - ② pin (DC 12 V, Secondary Heating output) of CN32 on indoor P.C. board for output.</p> <p style="text-align: center;"> Relay (DC12V, procured locally) Corresponds to the relay up to one that the rated current of the operation coil is approx. 75mA </p>  <p>Note) Determine the cable length between the indoor control P.C. board and the relay within 2m.</p> <p>* The output state can be checked from "Monitor function" on the wired remote controller. The manual for the remote controller for operation methods of "Monitor function".</p> <table border="1"> <tr><td>Monitor CODE No. E5</td><td>Secondary heating output - - -: Unavailabl 0000: OFF 0001: ON</td></tr> </table>	Data	Secondary heating mode	0000	Normal mode (Factory default)	0001	Flip mode	Data	TO _H : Set temp. out (high) °F[°C]	-0015 to 0015	"-0015": 59°F(-15°C) to "0015": 59°F(15°C) "0000": 32°F(0°C) (Factory default)	Data	c : TO _H - TO _L °F[°C]	0000	Unavailable (Factory default)	0001 to 0010	0001: 33.8°F(1°C) to "0010": 50°F(10°C)	Data	b : TA _H - TA _L °F[°C]	0001 to 0010	"0001": 32.9°F(0.5°C) to "0010": 41°F(5.0°C) "0006": 37.4°F(3°C) (Factory default)	Data	a : Ts - TA _H (Normal mode)°F[°C] TA _L - Ts (Flip mode)°F[°C]	0000	Unavailable (Factory default)	0001 to 0010	0001: 33.8°F(1°C) to "0010": 50°F(10°C)	Monitor CODE No. E5	Secondary heating output - - -: Unavailabl 0000: OFF 0001: ON	
Data	Secondary heating mode																														
0000	Normal mode (Factory default)																														
0001	Flip mode																														
Data	TO _H : Set temp. out (high) °F[°C]																														
-0015 to 0015	"-0015": 59°F(-15°C) to "0015": 59°F(15°C) "0000": 32°F(0°C) (Factory default)																														
Data	c : TO _H - TO _L °F[°C]																														
0000	Unavailable (Factory default)																														
0001 to 0010	0001: 33.8°F(1°C) to "0010": 50°F(10°C)																														
Data	b : TA _H - TA _L °F[°C]																														
0001 to 0010	"0001": 32.9°F(0.5°C) to "0010": 41°F(5.0°C) "0006": 37.4°F(3°C) (Factory default)																														
Data	a : Ts - TA _H (Normal mode)°F[°C] TA _L - Ts (Flip mode)°F[°C]																														
0000	Unavailable (Factory default)																														
0001 to 0010	0001: 33.8°F(1°C) to "0010": 50°F(10°C)																														
Monitor CODE No. E5	Secondary heating output - - -: Unavailabl 0000: OFF 0001: ON																														

8. COMMUNICATION TYPE, MODEL NAMES AND THE MAXIMUM NUMBER OF CONNECTABLE UNITS


8-1. This air conditioning (U series) has new communication specifications, and TU2C-Link (U series) and TCC-Link (other than U series) differ in a communication type. For the communication type and the model names such as each unit or remote controllers, refer to the following table.

Communication type	TU2C-Link (U series and future models)	TCC-Link (Other than U series)
Outdoor unit	MMY-MUP*** ↑ This letter indicates U series model.	Other than U series MMY-MAP*** MCY-MHP***
Indoor unit	MM*-UP*** ↑ This letter indicates U series model.	Other than U series MM*-AP***
Wired remote controller	RBC-A**U*** ↑ This letter indicates U series model.	Other than U series
Wireless remote controller kit & receiver unit	RBC-AXU*** ↑ This letter indicates U series model.	Other than U series
Remote sensor	TCB-TC**U*** ↑ This letter indicates U series model.	Other than U series

U series outdoor unit : SMMS-u (MMY-MUP***)
Other than U series outdoor unit : SMMS-i, SMMS-e etc. (MMY-MAP***)

8-2. If TU2C-Link (U series) is combined with TCC-Link (other than U series), the wiring specifications and the maximum number of connectable indoor units during group control operation will be changed.

- (1) For wiring specifications, carry out the installation, maintenance, or repair according to the attached Installation Manual.
- (2) For a communication type combination and the max. number of connectable indoor units, refer to the following table.
 - Only when all outdoor unit, indoor unit and remote control are a U series, communication method is TU2C-LINK, and the maximum number of connectable units will be 16.

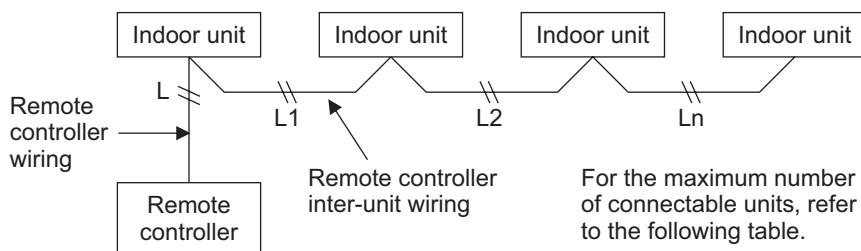

The combination of unit type and the number of the maximum connection of a communication method


Unit type								
Outdoor unit	U series	U series	U series	U series	*	*	*	*
Indoor unit	U series	U series	*	*	U series	U series	*	*
Remote controller Remote sensor	U series	*	U series	*	U series	*	U series	*
Communication type	TU2C-Link	TCC-Link						
Maximum number of connectable units	16	8						

* Other than U series


9. APPLIED CONTROL AND FUNCTIONS (INCLUDING CIRCUIT CONFIGURATION)

9-1. Indoor control block diagram


9-1-1. In Case of Connection of Wired (Simple) Remote Control

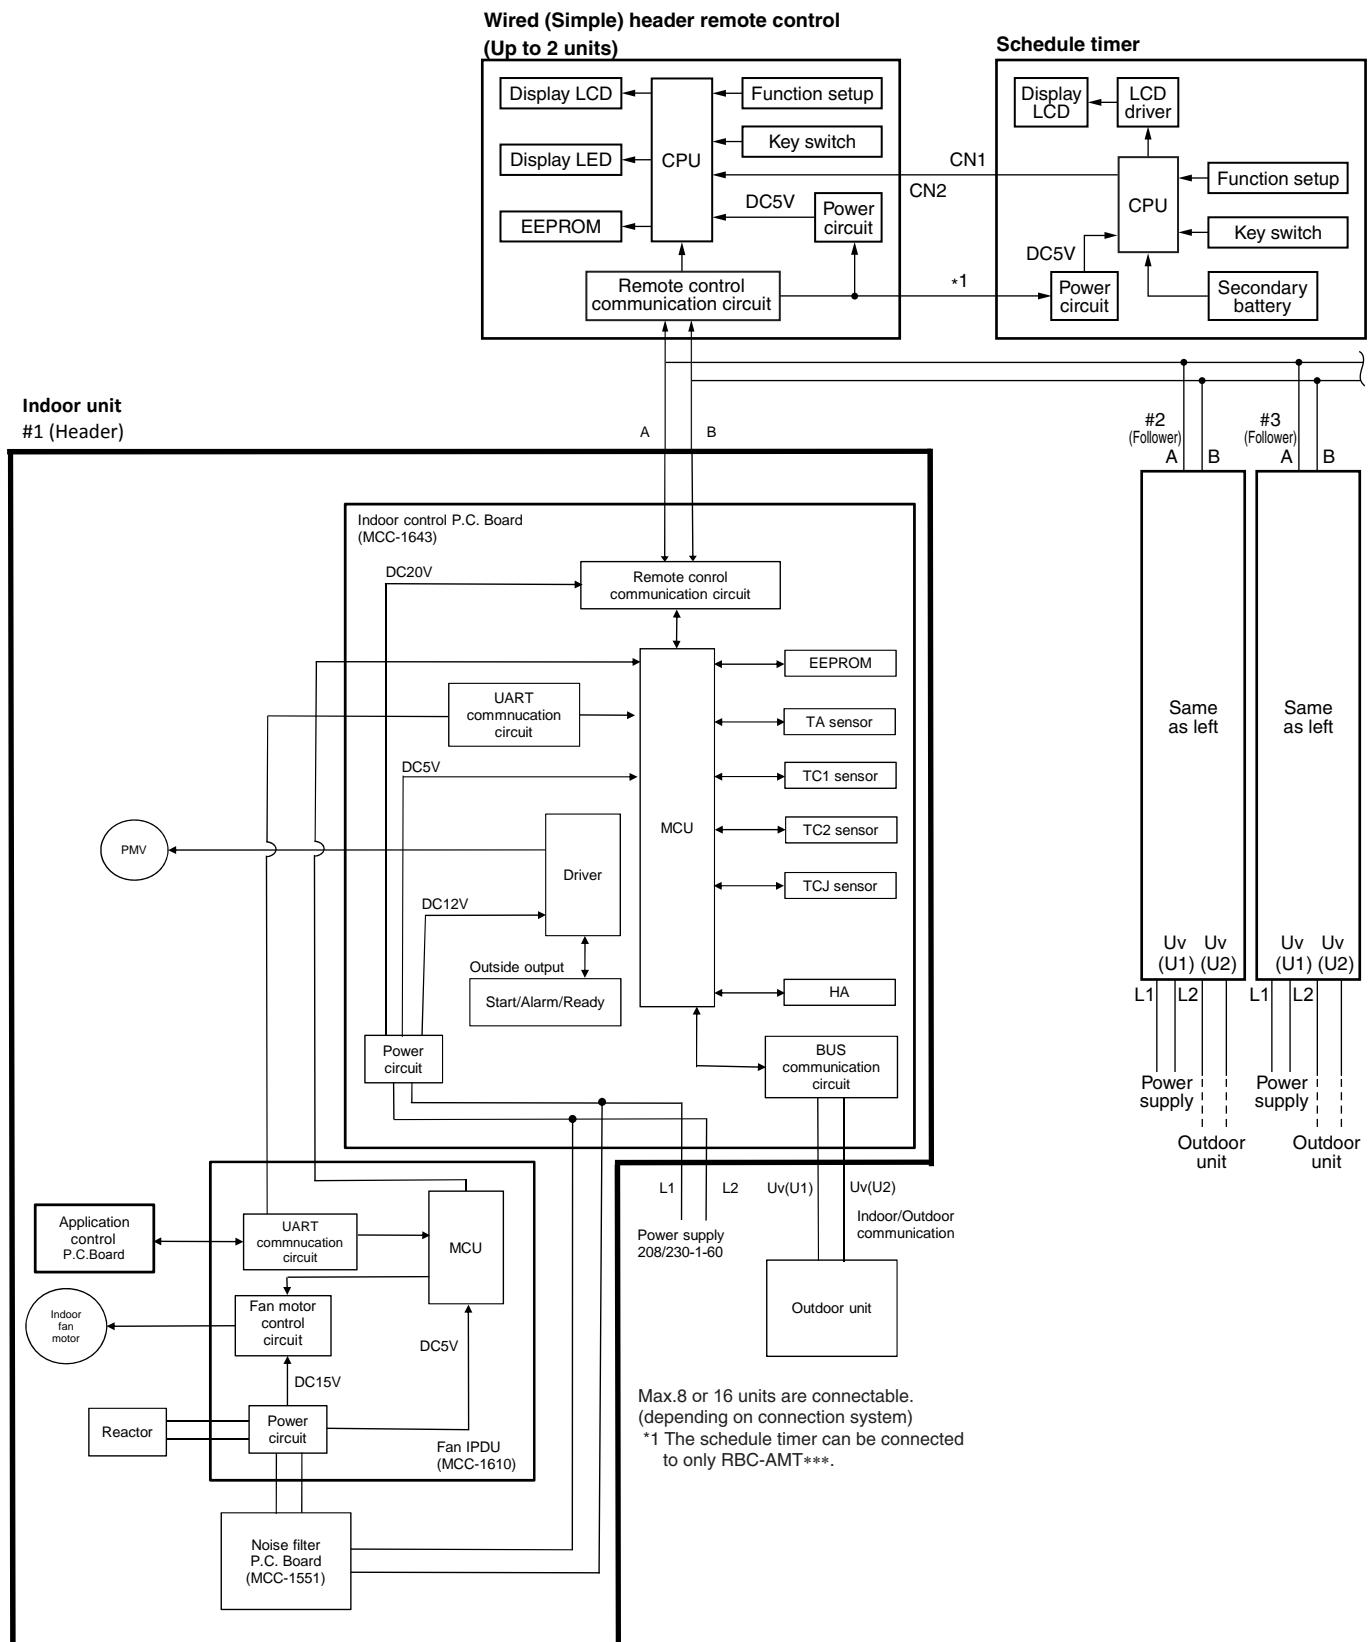

9-1-2. In Case of Connection of Wireless Remote Control

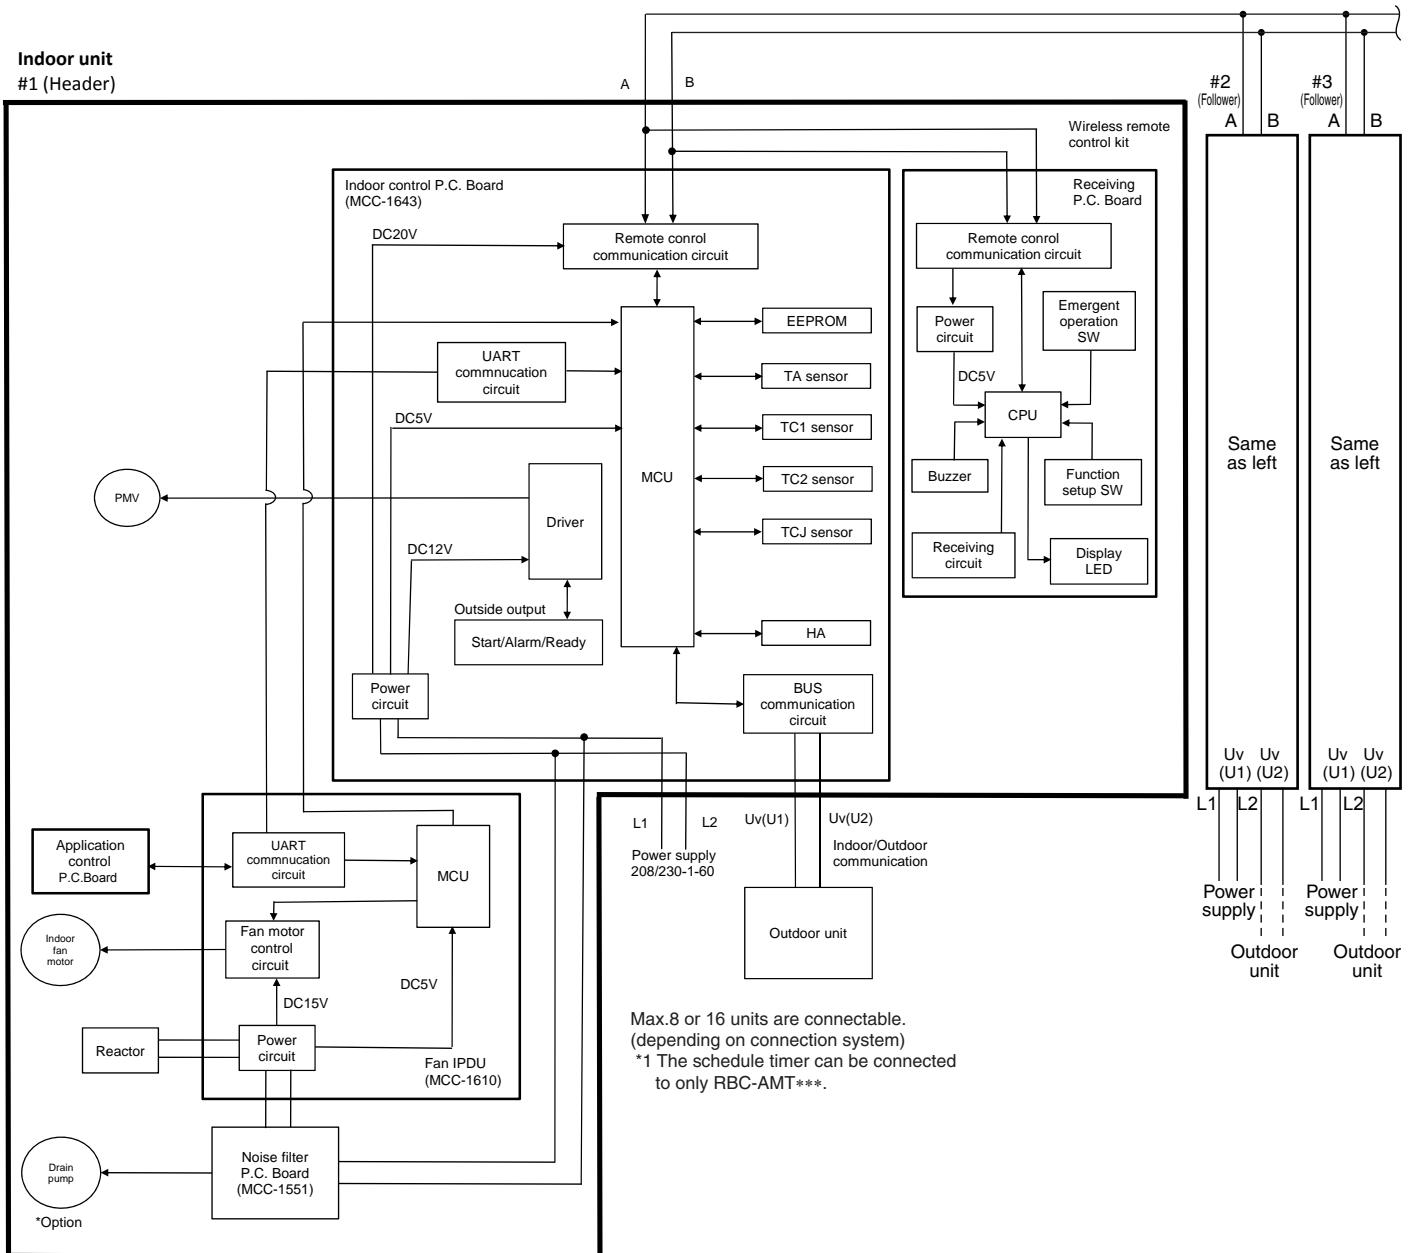


9-1-3. Connection of Both Wired (Simple) Remote Control and Wireless Remote Control

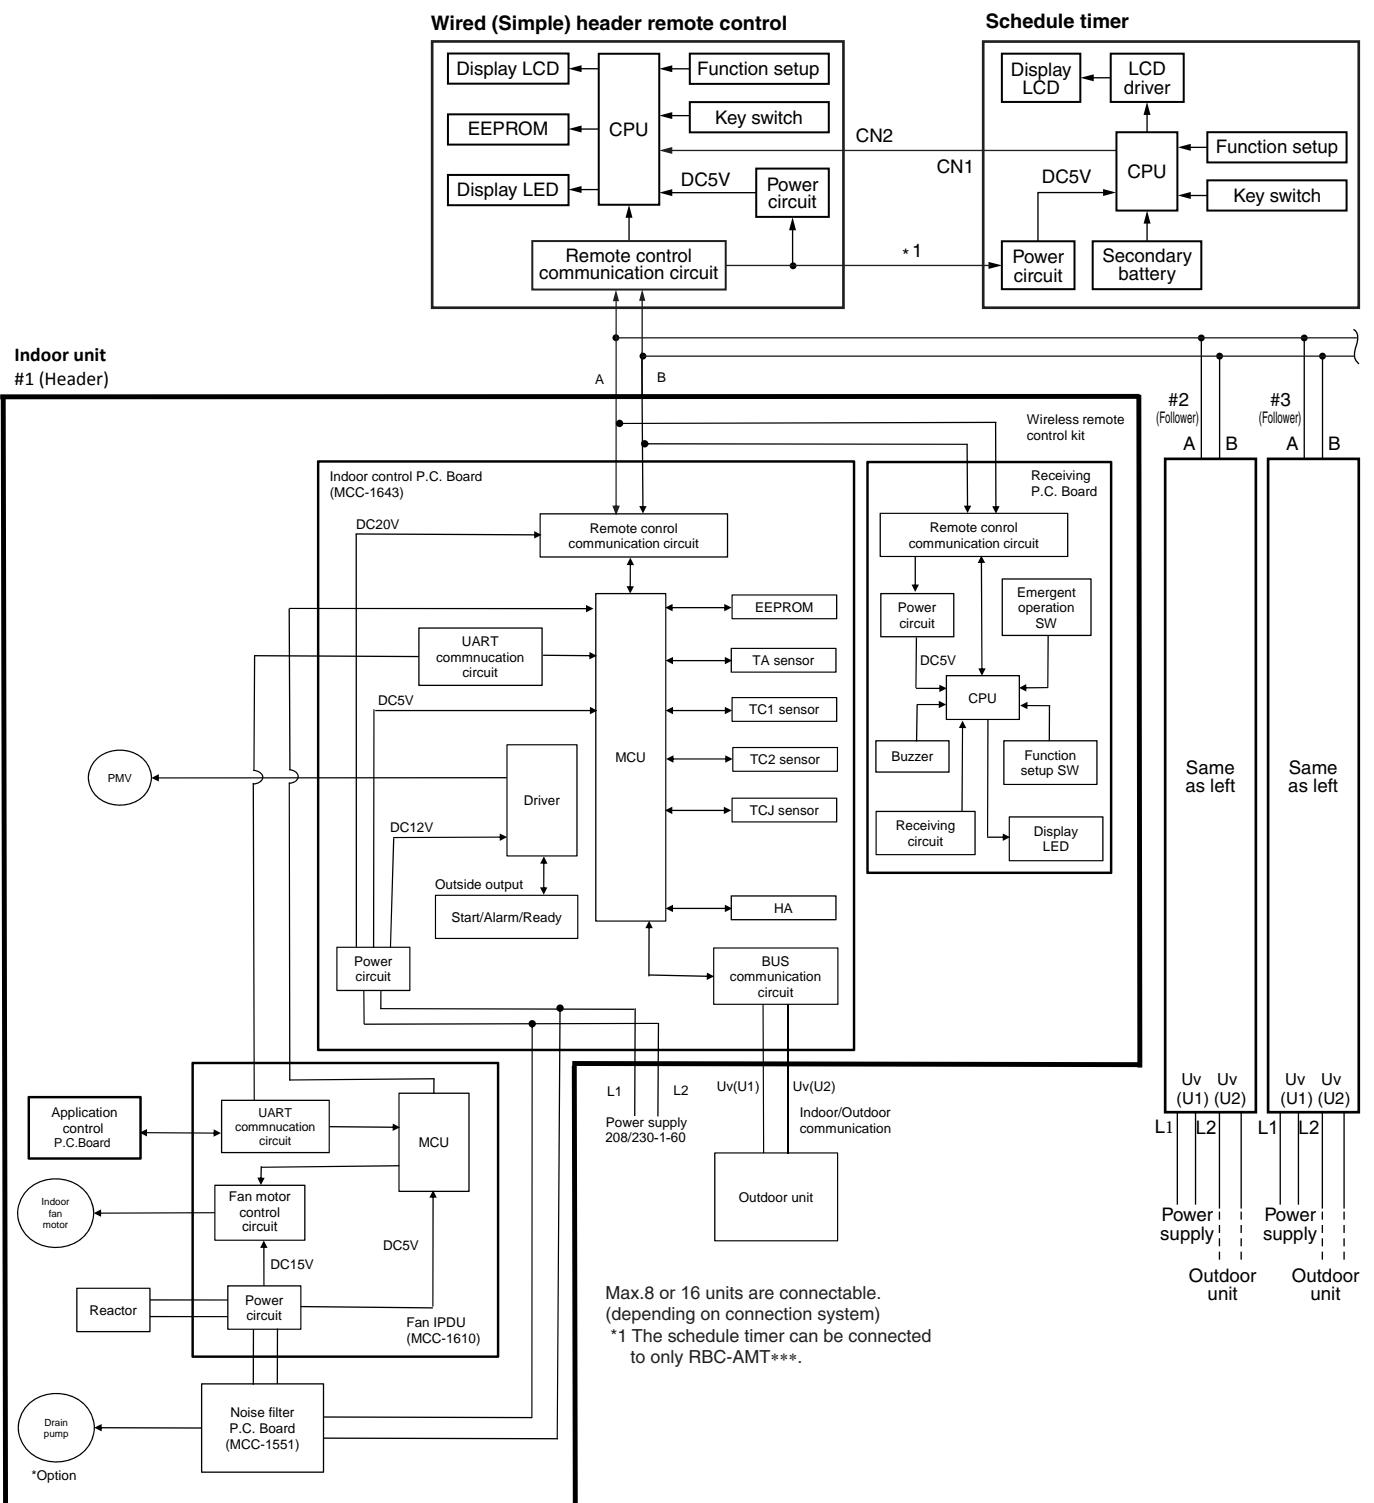

9-2. Indoor Circuit Design Board


MCC-1643

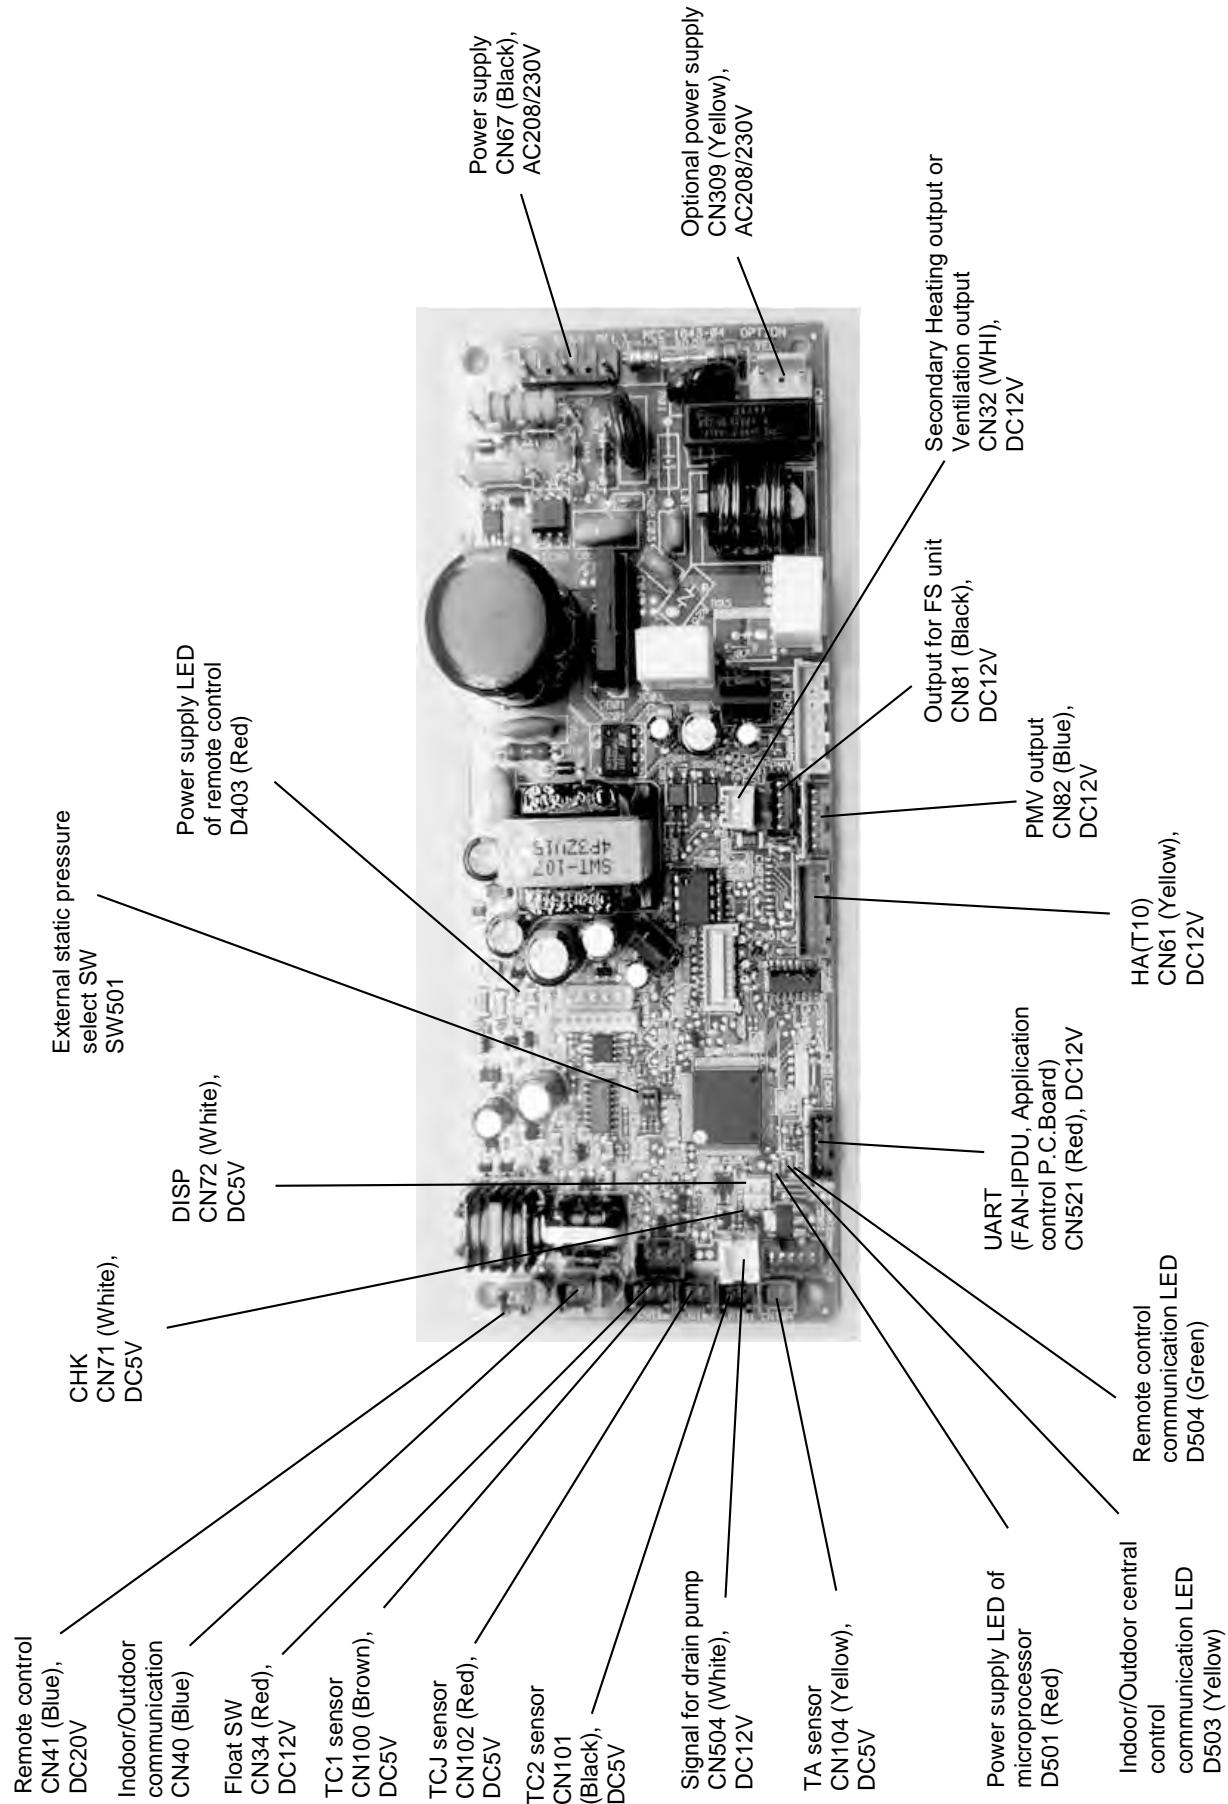


9-2-1. Optional connector specifications of Indoor Circuit Design Board

Function	Connector No.	Pin No.	Specifications	Remarks
Ventilation output	CN32	1 2	DC12V Output (Open collector)	Secondary Heating Output (DN [191] = 01) Secondary heating can be used while heating operation are performed.
				Ventilation Output (DN [191] = 00) Single operation by FAN button on remote controller is set up from remote controller (DN = 31)
HA	CN61	1 2 3 4 5 6	ON/OFF input 0V Remote control prohibited input Operation output (Open collector) DC12V Warning output (Open collector)	HA ON/OFF input (J01: YES/NO=Pulse (At shipment from factory) / Static input selection) Permission/Prohibition of remote control operation stop is performed by input. Operation ON (Answer back of HA) Warning output ON
CHK Operation check	CN71	1 2	0V	This check is used to check indoor operation. (Performs operation of indoor fan "H", Louver horizontal and Drain pump ON without communication with outdoor and remote control)
DISP Exhibition mode	CN72	1 2	0V	Communication is available by indoor unit and remote control only.
UART (FAN-IPDU, Application control P.C.Board)	CN521	1 2 3 4 5	12V 5V Transmission Receive 0V	Connected FAN-IPDU (MCC-1610) Connected Application control P.C.board

9-2-2. Fan IPDU P.C. Board (MCC-1610)

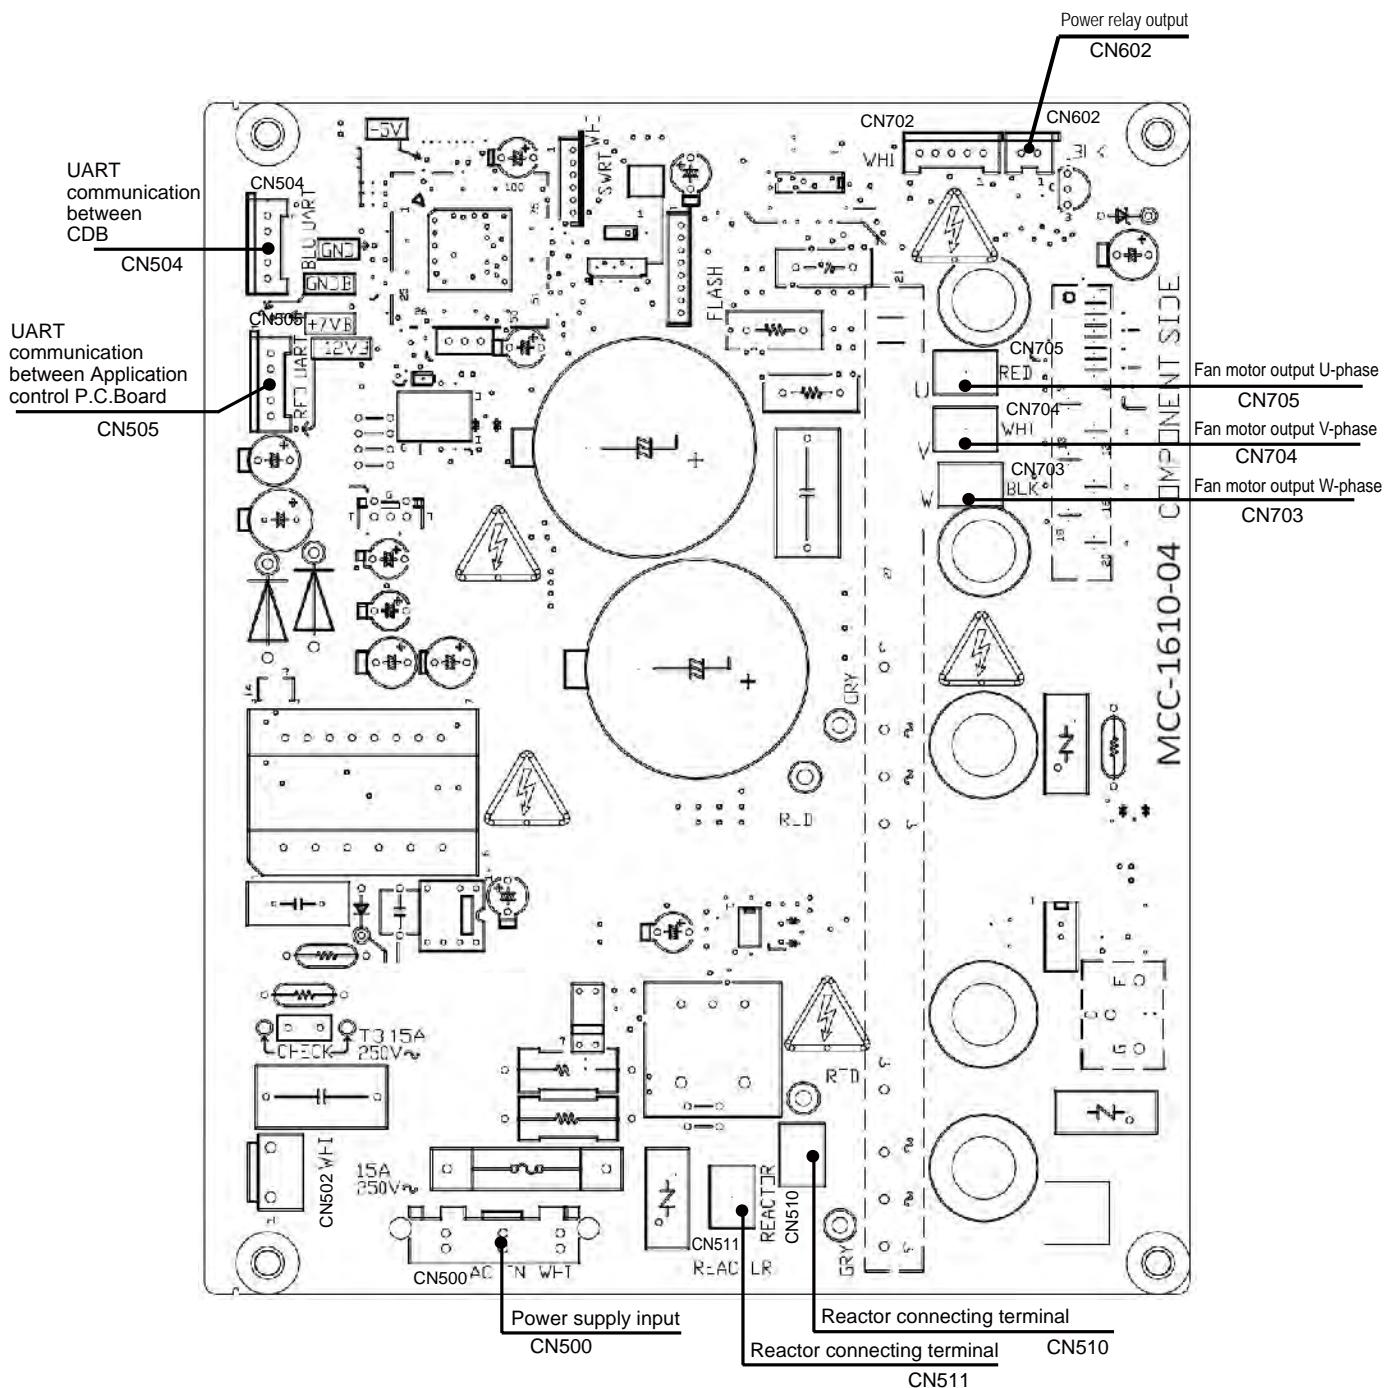

9-2-3. Noise filter (MCC-1551)

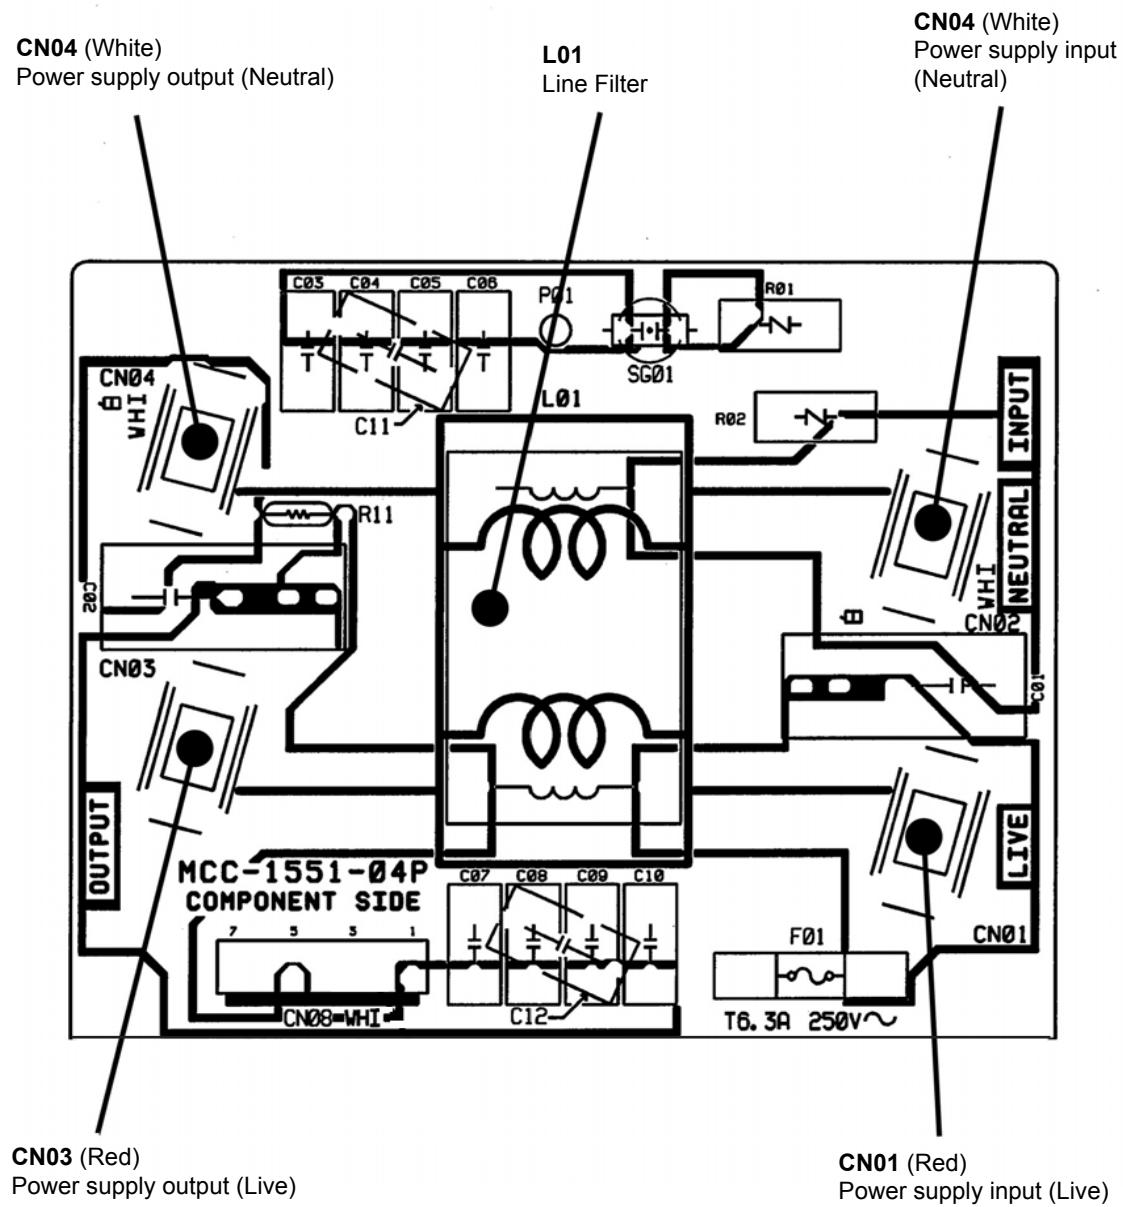

9-3. Functions at test run

■ Cooling/Heating test run check

The test run for cooling/heating can be performed from either indoor remote controller or outdoor interface P.C. board.


1. Start/Finish operation of test run

◎ Test run from indoor remote controller

- Wired remote controller: Refer to the below item of "Test run" of the wired remote controller.
- Wireless remote controller: Refer to the next page item of "Test run" of the wireless remote controller.

◆ In case of wired remote controller





<RBC-AMT***>

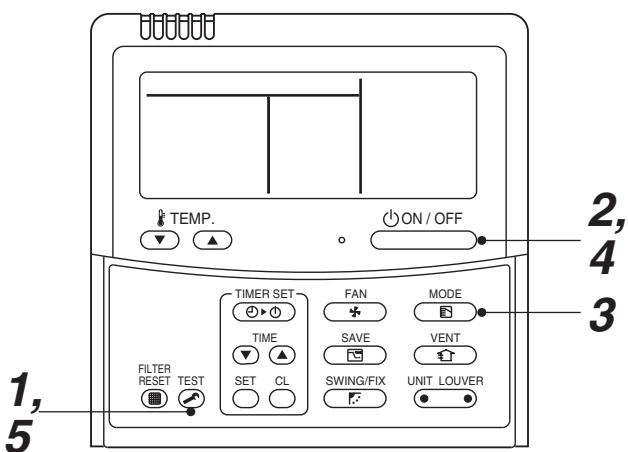

Procedure	Operation contents
1	Push [TEST] button for 4 seconds or more. [TEST] is displayed at the display part and the mode enters in TEST mode.
2	Push [ON/OFF] button.
3	Change the mode from [COOL] to [HEAT] using [MODE] button. <ul style="list-style-type: none"> • Do not use [MODE] button for other mode except [COOL]/[HEAT] modes. • The temperature cannot be adjusted during test run. • The trouble detection is performed as usual.
4	After test run, push [ON/OFF] button to stop the operation. (Display on the display part is same to that in Procedure 1.)
5	Push [TEST] button to clear the TEST mode. ([TEST] display in the display part disappears and status becomes the normal stop status.)

Note) The test run returns to the normal operation after 60 minutes.

<RBC-AWSU52-UL>

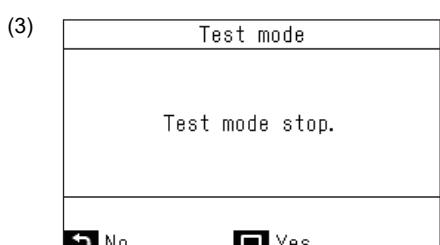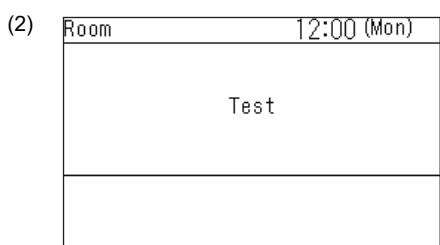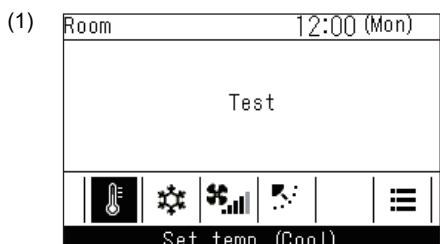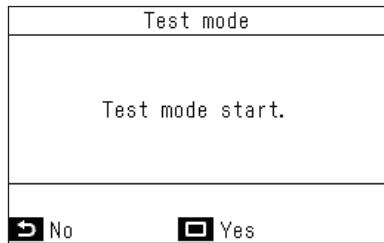

1 In the “Field setting menu” screen, press [] and [] to select “Test mode”, and then press [Set/Fix]

→ Test mode is set, and returns to the “Field setting menu” screen. Press the [Return] button 2 times, to open screen (2).

2 Press [ON/OFF ON/OFF]

→ Operation starts, and in test mode screen (1) opens.
(While stopped, it is screen (2))
→ Test mode is done while the operating mode is set to “Cool” or “Heat”.
→ The temperature cannot be set in test mode.
→ Check codes are displayed in the normal way.

3 After completing test mode, in the “Field setting menu” screen, press [] and [] to select “Test mode”, and then press [Set/Fix]

→ Screen (3) appears.
→ Press [Set/Fix] to end test mode and do normal operation.

Note) The test run returns to the normal operation after 60 minutes.

9-4. Test operation of indoor unit

▼ Check function for operation of indoor unit (Functions at indoor unit side)

This function is provided to check the operation of the indoor unit singly without communication with the remote control or the outdoor unit. This function can be used regardless of operation or stop of the system. However, if using this function for a long time, a trouble of the equipment may be caused. Limit using this function within several minutes.

[How to operate]

- 1) Short-circuit CHK pin (CN71 on the indoor P.C. board) (MCC-1643).

The operation mode differs according to the indoor unit status in that time.

Normal time: Both float SW and fan motor are normal.

Abnormal time: Either one of float SW or fan motor is abnormal.

- 2) Restricted to the normal time, if short-circuiting DISP pin (CN72 on the indoor P.C. board (MCC-1643)) in addition to short-circuit of CHK pin (CN71 on the indoor P.C. board), the minimum opening degree (30 pls) can be set to the indoor PMV only.

When open DISP pin, the maximum opening degree (1500 pls) can be obtained again.

[How to clear]

Open CHK pin. While the system is operating, it stops once but automatically returns to operation after several minutes.

	Short-circuit of CHK pin		
	Normal time		Abnormal time
	DISP pin open	DISP pin short circuit	
Fan motor	(H)	(H)	Stop
Indoor PMV (*)	Max. opening degree (1500 pls)	Min. opening degree (30 pls)	Min. opening degree (30 pls)
Communication	All ignored	All ignored	All ignored
P.C. board LED (MCC-1643)	Lights	Lights	Flashes

- To exchange the indoor PMV coil, set the indoor PMV to Max. opening degree.
- For the detailed positions of CHK pin (CN71 on indoor P.C. board) and DISP pin (CN72 on indoor P.C. board), refer to the indoor P.C. board (MCC-1643).

10. APPLIED CONTROL

10-1. Setup of Selecting Function in Indoor Unit

(Be Sure to Execute Setup by a Wired Remote Controller)


<RBC-AMT***>

- 1 Push the  +  +  buttons simultaneously and hold for at least 4 seconds.


The unit No. displayed first is the address of the header indoor unit in group control.

Then the fan and louver of the selected indoor unit move.

- 2 Each time the  button (left side of the button) is pressed, one of the indoor unit Nos. under group control is displayed in turn. Then the fan and louver of the selected indoor unit move.
- 3 Use the  button to select the CODE No. (DN code) of the desired function.
- 4 Use the  button to select the desired SET DATA associated with the selected function.
- 5 Push the  button. (The display changes from flashing to steady.)
 - To change the selected indoor unit, go back to step 2.
 - To change the selected function, go back to step 3.
- 6 When the  button is pushed, the system returns to normal off state.

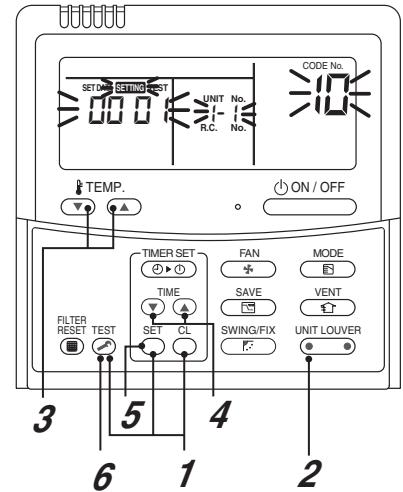

<RBC-AWSU52-UL>

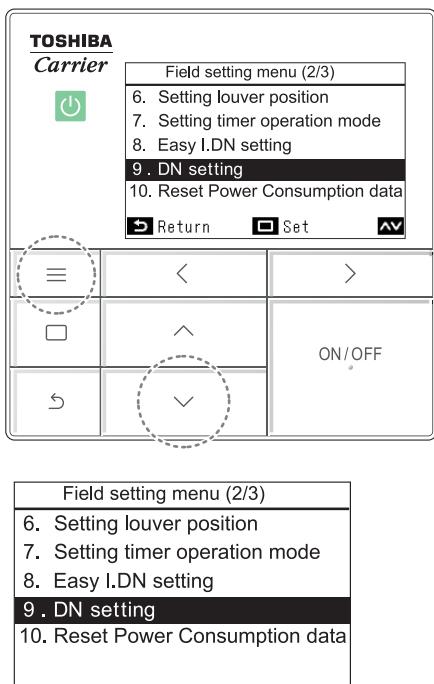

- 1** Press [Menu] to open the “Menu”
- 2** Press and hold [Menu] and [] at the same time to open “Field setting menu”
→ Press and hold 4 seconds.

- 1** In the “Field setting menu” screen, press [] and [] to select “DN setting”, and then press [Set/Fix]
- 2** Press [] and [] to select “Indoor unit” or “Outdoor unit”, and the press [Set/Fix]

→ If “Indoor unit” was selected, the fans and louvres of the indoor units operate.

When doing group connections:
→ The fans and louvres of the selected indoor units operate.

- 3** Press [] to black highlight the item code (DN), and then press [] and [] to set the item code
- 4** Press [] to black highlight the data, and then press [] and [] to set the data
- 5** After finishing setting the data of the item code (DN), press [Set/Fix]
→ “Continue?” is displayed.

- 6** To set the data of other item codes (DN), press [Set/Fix]
To not do other settings, press [Return]
→ The changes are fixed, and the “Field setting menu” screen returns.
→ “” appears while data is changing.

When doing group connections:
→ Press [Return] to open the unit selection screen.
In the unit selection screen, press [Return] to briefly display “”, and then return to the “Field setting menu” screen.

NOTE

For details on item codes and data to be set, refer to the Installation Manual and Service manual of the indoor unit and outdoor unit.

Indoor unit function Code No. (DN Code) table

(includes functions needed to perform applied control on site)

DN	Item	Description		At shipment
01	Filter display delay timer	0000: None 0002: 2500H 0004: 10000H	0001: 150H 0003: 5000H	Depending on model type
02	Dirty state of filter	0000: Standard 0001: High degree of dirt (Half of standard time)		0000: Standard
03	Central control address	0001: No.1 unit to 0064: No.64 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)		00Un/0099: Unfixed *1
04	Specific indoor unit priority	0000: No priority	0001: Priority	0000: No priority
06	Heating temp. shift	0000: 32°F(0°C) 0002: 35.6°F(+2°C) to	0001: 33.8°F(+1°C) 0010: 50°F(+10°C) (Up to +6 recommended)	Depending on model type
0b	Demand control (CN73 / CN4)	0000: Demand input 0002: Card input setup.3 0004: Card input setup.4 0005: Fire alarm input (Normal close) 0007: Card input setup.5 0009: Card input setup.2	0001: O2 sensor input 0003: Fire alarm input (Normal open) 0006: Notice cord (202) 0008: Card input setup.1	0000: Demand input
0d	Existence of [AUTO] mode	0000: Provided 0001: Not provided (Automatic selection from connected outdoor unit)		0001: Not provided
0F	Cooling only	0000: Heat pump 0001: Cooling only (No display of [AUTO] [HEAT])		0000: Heat pump
10	Type	Refer to Type DN code "10" list		Depending on model type
11	Indoor unit capacity	0000: Unfixed Refer to Indoor Unit Capacity DN code "11" list	0001 to 0034	According to capacity type
12	Line address	0001: No.1 unit to 0064: No.30 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)		00Un/0099: Unfixed *1
13	Indoor unit address	0001: No.1 unit to 0064: No.64 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)		00Un/0099: Unfixed *1
14	Group address	0000: Individual 0002: Follower unit of group 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)	0001: Header unit of group	00Un/0099: Unfixed *1
19	Louver type (Air direction adjustment)	0000: No louver 0004: (4-way Air Discharge Cassette type, etc.)	0001: Swing only	Depending on model type
1E	Temp difference of [AUTO] mode selection COOL → HEAT, HEAT → COOL	0000: 32°F(0°C) to Ts:Remote controller setup temp.	0010: 50°F(10°C) (Ts ± 41°F(5°C))	0003: 37.4°F(3°C) (Ts ±34.7°F(1.5°C))
28	Automatic restart of power failure	0000: None	0001: Restart	0001: Restart
2A	Selection of option/Trouble input (TCB-PCUC2E: CN3)	0000: Filter input 0002: None	0001: Alarm input (Air washer, etc.)	0002: None
2E	HA terminal (CN61) select	0000: Usual 0002: Fire alarm input (arbiter contact) 0004: Notice cord (201)	0001: Card input setup.1 (3) 0003: Card input setup.2 (4) 0005: Card input setup.5	0000: Usual (HA terminal)
31	Ventilating fan control	0000: Unavailable	0001: Available	0000: Unavailable
32	TA sensor selection	0000: Body TA sensor	0001: Remote controller sensor	0000: Body TA sensor

DN	Item	Description		At shipment
33	Temperature unit select	0000: °C 0001: °F		0001: °F
5d	External static pressure High-ceiling adjustment (Air flow selection)	Refer to next page.		Depending on model type
60	Timer setting (wired remote controller)	0000: Available (can be performed)	0001: Unavailable (cannot be performed)	0000: Available
77	Dual set point	0000: Unavailable	0002: Available	0000: Unavailable
79	Alarm output setup of the header unit	0000: Not including the state of following unit	0001: Including the state of following unit	0000: Not including the state of following unit
7A	Change unit 0.9°F(0.5°C) or 1.8°F(1°C) on remote	0000: 1.8°F(1°C) 0001: 0.9°F(0.5°C)		0001: 0.9°F(0.5°C)
b3	Soft cooling	0000: Unavailable	0001: Available	0001: Available
b5	Occupancy sensor/ Wireless Remote controller Provided / None	0000: None 0002: Wireless remote controller provided	0001: Occupancy sensor provided	0000: None
b6	Occupancy sensor Enable / Invalid (Absence time judgment time)	0000: Invalid 0002: 60min. 0005: 150min.	0001: 30min. 0004: 120min.	0002: Enable (60 min.)
b7	Occupancy sensor operation at absent time	0000: Stand by	0001: operation stop	0000: Stand by
d0	Whether the power saving mode can be set by the remote controller	0000: Invalid	0001: Valid	0001: Valid
E0	Destination	0000: Domestic	0001: North America	0001: North America
E6	Wireless remote controller A-B selection	0000: A	0001: B	0000: A
F6	Presence of Application control kit (TCB-PCUC2E)	0000: None	0001: Exist	0000: None
FC	Communication protocol *2	0000: TCC-LINK	0003: TU2C-LINK	0000: TCC-LINK
Fd	Priority operation mode (FS unit)	0000: Heating	0001: Cooling	0000: Heating
FE	FS unit address	0001: No.1 unit to 0064: No.64 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)		00Un/0099: Unfixed *1

DN	Item	Description		At shipment
180	Notice code number 01	0000: None 0001 ~ 0255 : Notice code 0129 : Notice code (201) 0130 : Notice code (202) (0001 ~ 0255 : TU2C-LINK only)		0000: None
181	Notice code number 02			0000: None
182	Notice code number 03			0000: None
183	Notice code number 04			0000: None
184	Notice code number 05			0000: None
185	Notice code number 06			0000: None
186	Notice code number 07			0000: None
187	Notice code number 08			0000: None
188	Notice code number 09			0000: None
189	Notice code number 10			0000: None
191	Secondary Heat / Ventilation output port switching	0000: Ventilation output 0001: Secondary heating output		0001 : Secondary heating output
103	Remote controller	0000: Use • Indoor unit production after Jun-2021 does not need this DN setting. The serial number is 12600001 or upper.	0001: Do not use	0000 : Use
1FB	Central device control state	0000: No central device control (Remote controller use is possible) 0001: Central device control (Remote controller use is impossible)		0000: No central device control
1FC	Indoor Unit terminating resistance	0000: OFF 0001: ON		0000: OFF

*1 Display order of "00Un" and "0099" varies depending on remote controller models or communication types.

For Central control address (DN [03]), Indoor unit address (DN [13]), FS unit address (DN [FE])

Remote controller	Communication type	Display order
U series	TU2C-LINK	... ⇔ 0128 ⇔ 00Un ⇔ 0001 ⇔ ...
	TCC-LINK	... ⇔ 0064 ⇔ 00Un ⇔ 0001 ⇔ ...
Other than U series	TCC-LINK	... ⇔ 0064 ⇔ 0099 ⇔ 0001 ⇔ ...

For Line address (DN [12])

Remote controller	Communication type	Display order
U series	TU2C-LINK	... ⇔ 0128 ⇔ 00Un ⇔ 0001 ⇔ ...
	TCC-LINK	... ⇔ 0030 ⇔ 00Un ⇔ 0001 ⇔ ...
Other than U series	TCC-LINK	... ⇔ 0030 ⇔ 0099 ⇔ 0001 ⇔ ...

For Group address (DN [14])

Remote controller	Communication type	Display order
U series	TU2C-LINK	... ⇔ 0002 ⇔ 00Un ⇔ 0000 ⇔ ...
	TCC-LINK	... ⇔ 0002 ⇔ 0099 ⇔ 0000 ⇔ ...
Other than U series	TCC-LINK	... ⇔ 0002 ⇔ 0099 ⇔ 0000 ⇔ ...

*2 Communication protocol can be automatically switched with the setup in the outdoor unit during installation.

Type
DN code "10"

Value	Type	Model
0001* ¹	4 Way Cassette	MMU-UP****HP-UL
0006	Concealed Duct High Static Pressure	MMD-UP****HP-UL

*1 Default value stored in EEPROM mounted on service P.C. board

Indoor Unit Capacity
DN code "11"

Value	Capacity
0000*	Invalid
0021	072 type
0023	096 type

External Static Pressure

DN code "5D"

High Static Pressure Duct type

Value	0000	0001	0002	0003	0004	0005	0006
External static pressure	0.603 in.WG (Factory default)	0.201 in.WG	0.334 in.WG	0.872in.WG	0.470 in.WG	0.735 in.WG	1.005 in.WG

10-2. Applied Control in Indoor Unit

■ Remote location ON/OFF control box (TCB-IFCB-4UL)

[Wiring and setup]

- Use the exclusive connector for connection with the indoor control P.C. board.
- In a group control, the system can operate when connecting with any indoor unit (Control P.C. board) in the group. However when taking out the operation/error signal from the other unit, it is necessary to take out from each unit individually.

1. Control items


- 1) Start/Stop input signal : Operation start/stop in unit
- 2) Operation signal : Output during normal operation
- 3) Error signal : Output during alarm
(Serial communication error or indoor/outdoor protective device) operation

2. Wiring diagram using remote control interface (TCB-IFCB-4UL)

Input IFCB-4UL : No voltage ON/OFF serial signal

Output No voltage contact for operation, error display

Contact capacity: Below Max. AC240V 0.5A

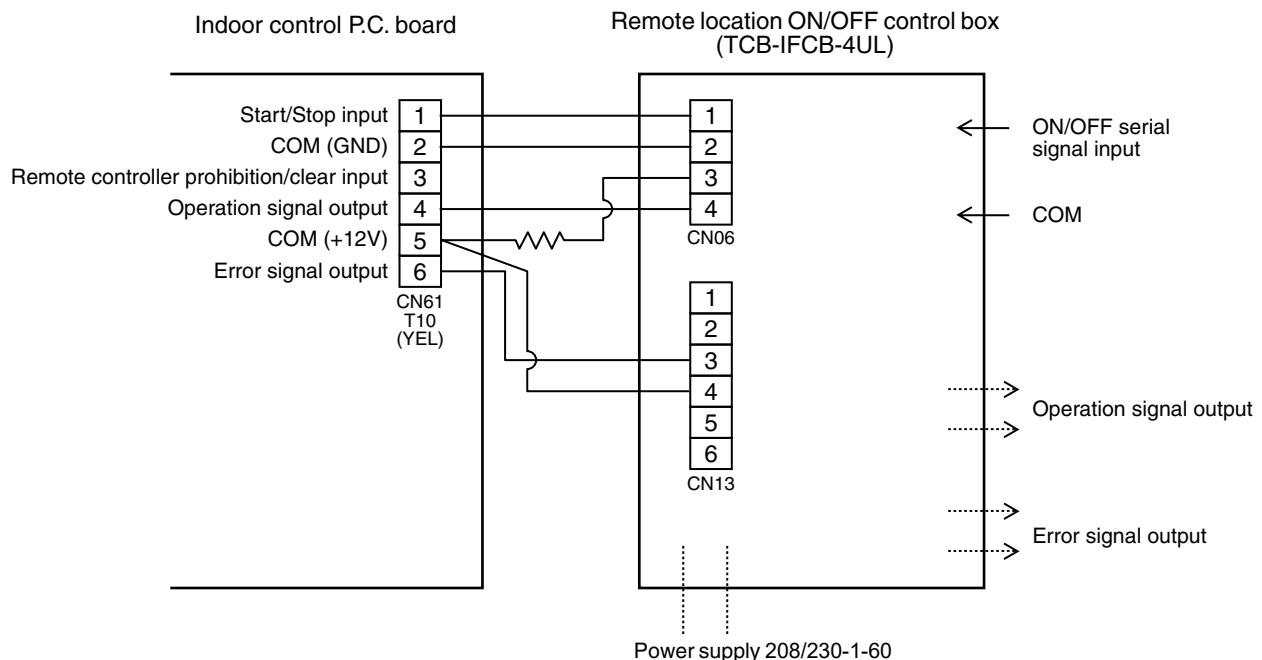

■ Ventilating fan control from remote controller

[Function]

- The start / stop operation can be operated from the wired remote controller when air to air heat exchanger or ventilating fan is installed in the system.
- The fan can be operated even if the indoor unit is not operating.
- Use a fan which can receive the no-voltage normally-open contact as an outside input signal.
- In a group control, the units are collectively operated and they cannot be individually operated.

* Ventilation function the code No.191 must be setting data 0000 (refer indoor unit function code no. table.)

1. Operation

Handle a wired remote controller in the following procedure.

- * Use the wired remote controller during stop of the system.
- * Be sure to set up the wired remote controller to the header unit. (Same in group control)
- * In a group control, if the wired remote controller is set up to the header unit, both header and follower units are simultaneously operable.

<RBC-AMT***>

1 Push concurrently  +  +  buttons for 4 seconds or more.

The unit No. displayed firstly indicates the header indoor unit address in the group control.
In this time, the fan of the selected indoor unit turns on.

2 Every pushing  button (left side of the button), the indoor unit numbers in group control are displayed successively.

In this time, the fan of the selected indoor unit only turns on.

3 Using the setup temp  or  button, specify the CODE No. 31.

4 Using the timer time  or  button, select the SET DATA. (At shipment: 0000)

The setup data are as follows:

SET DATA	Handling of operation of air to air heat exchanger or ventilating fan
0000	Unavailable (At shipment)
0001	Available

5 Push  button. (OK if display goes on.)

- To change the selected indoor unit, go to the procedure 2).
- To change the item to be set up, go to the procedure 3).

6 Pushing  returns the status to the usual stop status.

<RBC-AWSU52-UL>


- 1 Press [ Menu] to open the “Menu”
- 2 Press and hold [ Menu] and [] at the same time to open “Field setting menu”
→Press and hold 4 seconds.
- 3 In the “Field setting menu” screen, press [] and [] to select “DN setting”, and then press [ Set/Fix]
- 4 Press [] and [] to select “Indoor unit” or “Outdoor unit”, and then press [ Set/Fix]
→If “Indoor unit” was selected, the fans and louvres of the indoor units operate.
When doing group connections:
→The fans and louvers of the selected indoor units operate.
- 5 Press [] to black highlight the item code (DN), and then press [] and [] to set the item code No. 31.
- 6 Press [] to black highlight the data, and then press [] and [] to set the data (At shipment : 0000).

SET DATA	Handling of operation of air to air heat exchanger or ventilating fan
0000	Unavailable (At shipment)
0001	Available

- 7 After finishing setting the data of the item code (DN), press [ Set/Fix]
→“Continue?” is displayed.
- 8 To set the data of other item codes (DN), press [ Set/Fix] To not do other settings, press [ Return]
→The changes are fixed, and the “Field setting menu” screen returns.
→“” appears while data is changing.
When doing group connections:
→Press [ Return] to open the unit selection screen.
In the unit selection screen, press [ Return] to
briefly display “”, and then return to the “Field
setting menu” screen.

2. Wiring

Relay (DC12V, procured locally)
Corresponds to the relay up
to one that the rated current
of the operation coil is approx. 75mA

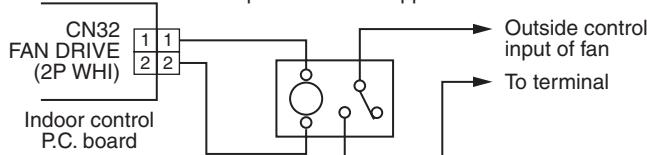

Note Determine the cable length between the indoor control P.C. board and the relay within 2m.

■ Auto-off feature control


[Function]

- This function controls the indoor units individually. It is used when the start operation from outside is unnecessary but the stop operation is necessary.
- A card switch box or card lock helps protect customers from forgetting to turn off the indoor unit. (not including the following Card Input 3)
- It is connected with connector on the indoor control P.C. board, and switched with the Code No. and jumper wire setup for use.

[Setup method]

(1) Wiring

Connecting to the CN61 connector

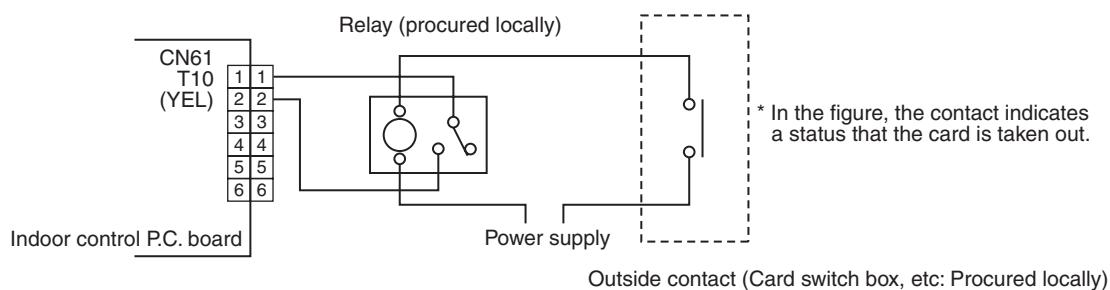

NOTE) Determine the cable length between the indoor control P.C. board and the relay within 3m.

(2) Code (DN) setup

Set Code (DN) according to set indoor unit function DN code.

Connector	Jumper wire (J01)	Code No. (DN)	Set data	Function
CN61	Short-circuit (Factory default)	002E	0000 (Factory default)	"HA normal setup" (pulse)
			0001	"Card Input 1" setup
			0003	"Card Input 2" setup
			0005	"Card Input 5" setup
	Open-circuit (cut)		0000 (Factory default)	"HA normal setup" (Static)
			0001	"Card Input 3" setup
			0003	"Card Input 4" setup

[Control items]

Function	External contact terminal	
	Close (Status that card is inserted)	Open (Status that card is taken out)
Card Input 1	Manual prohibition release (Manual operation)	Manual prohibition (Operation stop)
Card Input 2	Manual prohibition release (Automatic operation)	Manual prohibition (Operation stop)
Card Input 3	Operation status continues (Do nothing)	Operation status continues and setting temperature changes (COOL/DRY: 84.2°F(29°C), HEAT: 64.4°F(18°C))
Card Input 4	Manual prohibition release (The status returns to operating condition before removing the card.)	Manual prohibition (Operation stop)
Card Input 5	1) To change a setting temperature by changing data at DN code No. 172 to 174. 2) The operation mode can be set by changing data (0000, 0001, 0002) at DN code No. 16b. 0000: operation mode is the same at the current mode. (factory setting default) 0001: operation mode returns to the previous mode when card was inserted. (in case of the previous mode is off operation, the operation mode is also off.) 0002: operation mode starts at the same previous mode when the card was inserted. (the operation mode is on operation even the previous mode is off operation.) See contents below for DN settings and detailed operations.	1) To change a setting temperature, fan speed and wind direction by changing data at DN code No. 16C to 171. 2) The operation mode can be set by changing data (0000, 0001) at DN code No. 16A. 0000: operation mode is the same at the current mode. (factory setting default) 0001: operation automatically starts. See contents below for DN settings and detailed operations.

* For the card switch box that does not involve contact operation described above, convert signals with a relay including a normally-closed contact.

[Card input setup.5 Code (DN)]

DN	Item	Description	At shipment
16C	Open mode Set temp. (Cool, Dry)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0027 : 80.6°F(27°C)
16d	Open mode Set temp. (Heat)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0020 : 68°F(20°C)
16E	Open mode Set temp. (Auto)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
16F	Open mode Fan speed (All operation mode)	0000 : No change 0001 : HH 0002 : H 0003 : L	0000 : No change
170	Open mode Wind direction (Cool, Dry, Fan)	0000 : No change 0001 : F1 0002 : F2 0003 : F3	0000 : No change
171	Open mode Wind direction (Heat)	0000 : No change 0001 : F1 0002 : F2 0003 : F3 0004 : F4 0005 : F5	0000 : No change
16A	Open mode Operation	0000 : No change 0001 : Run operation	0000 : No change
172	Close mode Set temp. (Cool, Dry)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
173	Close mode Set temp. (Heat)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
174	Close mode Set temp. (Heat)	-0015 : 5°F(-15°C) to 0060 : 140°F(60°C)	0024 : 75.2°F(24°C)
16b	Close mode Operation	0000 : No change 0001 : Card ON mode operation 0002 : Run operation (Card ON mode setting)	0000 : No change

[The example of Card Input 5 setting]

Case.	Code No. (DN) setting								External contact terminal		
	[16A] data	[16b] data	[16C] data	[16d] data	[16F] data	[170] data	[171] data	[172] data	[173] data	Close (Status that card is inserted)	Open (Status that card is taken n out)
(1)	0000	0000	0027	0020	0000	0000	0000	0024	0024	<ul style="list-style-type: none"> The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 75.2°F(24°C) and 75.2°F(24°C) respectively due to change in code No. 172, 173. 	<ul style="list-style-type: none"> The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 80.6°F(27°C) and 68°F(20°C) respectively due to change in code No. 16C, 16d.
(2)*	0000	0001	0027	0020	0003	0001	0001	0024	0024	<ul style="list-style-type: none"> The operation mode is running at the same mode as the last time when the card was inserted due to change in code no. 16b. * The operation mode will be off if the mode at the last time was in off operation. Also, the fan speed will the same as the last time when the card is inserted. The setting temperature of cooling/dry and heating mode is changed to 75.2°F(24°C) and 75.2°F(24°C) respectively due to change in code No. 172, 173. 	<ul style="list-style-type: none"> The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 80.6°F(27°C) and 68°F(20°C) respectively due to change in code no. 172, 173. The fan speed for all operation modes is changed due to change in code no.16F. The wind direction of Cooling/dry/fan and heating mode are changed due to change in code No. 170, 171 respectively.
(3)*	0000	0002	0027	0020	0003	0001	0001	0024	0024	<ul style="list-style-type: none"> The operation mode is running at the same mode as the last time when the card was inserted. Also, the operation mode will be on even the mode was in off operation at the last time due to change in code no. 16B. * The fan speed will the same as the last time when the card is inserted. The setting temperature of cooling/dry and heating mode is changed to 75.2°F(24°C) and 75.2°F(24°C) respectively due to change in code No. 172, 173. 	Same operation as case (2)
(4)	0001	0000	0027	0020	0003	0001	0001	0024	0024	<ul style="list-style-type: none"> The operation mode continues running at the same as the current mode. The setting temperature of cooling/dry and heating mode is changed to 75.2°F(24°C) and 75.2°F(24°C) respectively due to change in code No. 172, 173. 	<ul style="list-style-type: none"> Due to change in code no. 16A, the operation mode will be as below. When the operation is ON, the operation mode will continue running at the same as the current mode. When the operation is OFF, the air conditioner will turn on automatically. The setting temperature of cooling/dry and heating mode is changed to 80.6°F(27°C) and 68°F(20°C) respectively due to change in code No. 172, 173. The fan speed for all operation modes is changed due to change in code no.16F. The wind direction of Cooling/dry/fan and heating mode are changed due to change in code No. 170, 171 respectively.

* The history operation mode is only recorded when the card is inserted even if the operation mode is changed when the card is taken out, there is no related to the history operation mode.

■ Notice code signal

Notice code is a function dedicated to TU2C-Link communication.

See service manual for u series outdoor unit for details of Notice code.


[Function]

- Notice Code is issued if there is signal input to connector of outdoor unit P.C. board. This can be used in cases such as when confirming state of outdoor unit (filter clogging, etc.) by air conditioner system.
- Used by switching functions with settings of Code No. (DN Code).
- Notice Code is continuously issued while input signal is ON.

[Setup method]

(1) Wiring

Connecting to the CN61 connector

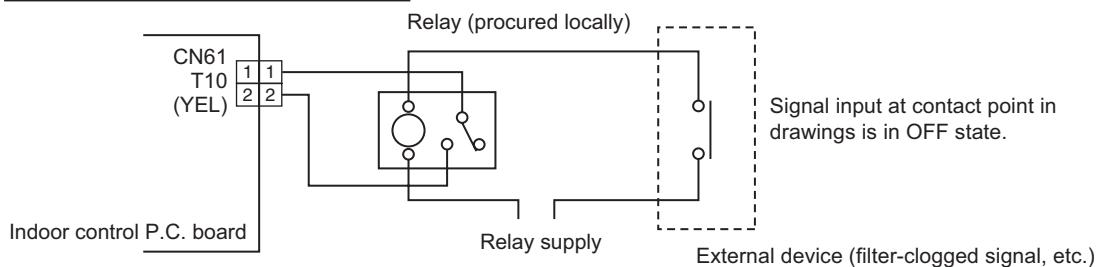

Note) Determine the cable length between the indoor control P.C. board and the relay within 3m.

(2) Code (DN) setup and Notice code

Set Code (DN) according to set indoor unit function DN code.

Connector	Code No. (DN)	Set data	Notice code
CN61	002E	0004	201

* Setting of Code No. (DN Code) is necessary to display Notice code mark at remote controller.

Set data corresponding to Notice code to be used to one of Code No. 180 to 189, in accordance with following table. In case where data other than 0000 is already set, set to other Code No. (DN Code).


Code No. (DN)	Set data	Notice code
0180 to 0189	0000	OFF (Factory default)
	0129	201
	0130	202

* It may take up to ten minutes to be displayed on remote controller after Notice code is issued.

■ Manual address setting using the remote controller

Procedure when setting indoor units' addresses first under the condition that indoor wiring has been completed and outdoor wiring has not been started (manual setting using the remote controller)


▼ Wiring example of 2 refrigerant lines

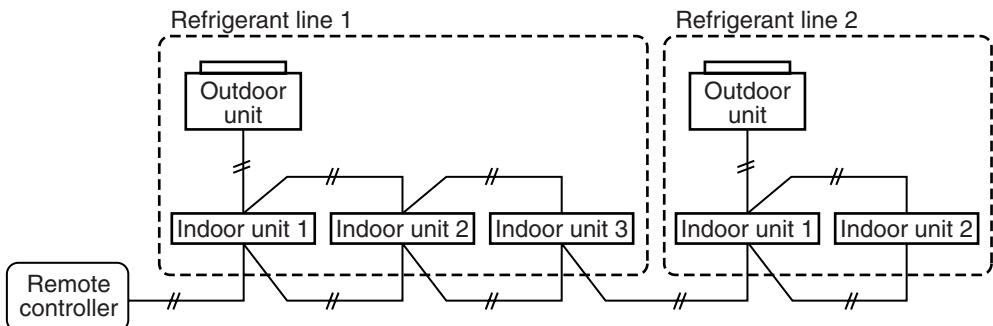

Line (system) address	1	1	1	2	2
Indoor unit address	1	2	3	1	2
Group address	1 Header unit	2 Follower unit	2 Follower unit	2 Follower unit	2 Follower unit

In the example above, disconnect the remote controller connections between the indoor units and connect a wired remote controller to the target unit directly before address setting.

<RBC-AMT***>

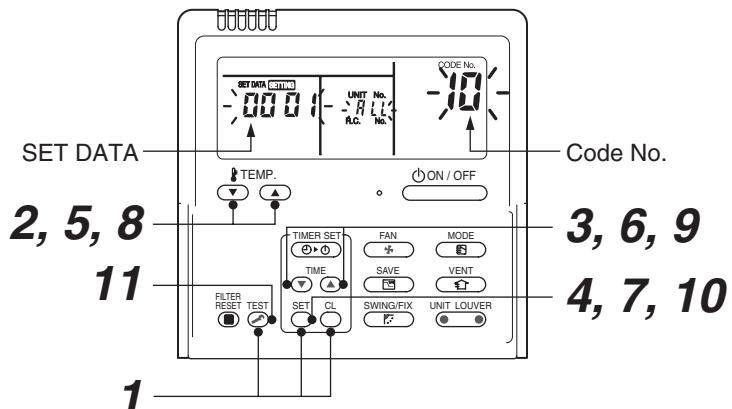

Pair the indoor unit to set and the remote controller one-to-one.

Turn on the power.

1 Push and hold the and buttons at the same time for more than 4 seconds.
LCD starts flashing.

<Line (system) address>

2 Push the TEMP. / buttons repeatedly to set the CODE No. to **12**.

3 Push the TIME / buttons repeatedly to set a system address.

(Match the address with the address on the interface P.C. board of the header outdoor unit in the same refrigerant line.)

4 Push button.

(It is OK if the display turns on.)

<Indoor unit address>

5 Push the TEMP. / buttons repeatedly to set the CODE No. to 13.

6 Push the TIME / buttons repeatedly to set an indoor unit address.

7 Push the button.

(It is OK if the display turns on.)

<Group address>

8 Push the TEMP. / buttons repeatedly to set the CODE No. to 14.

9 Push the TIME / buttons repeatedly to set a group address. If the indoor unit is individual, set the address to 0000 ; header unit, 0001 ; follower unit, 0002 .

Individual : 0000
Header unit : 0001
Follower unit : 0002 } In case of group control

10 Push the button.


(It is OK if the display turns on.)

11 Push the button.

The address setting is complete.

(flashes. You can control the unit after has disappeared.)

<RBC-AWSU52-UL>

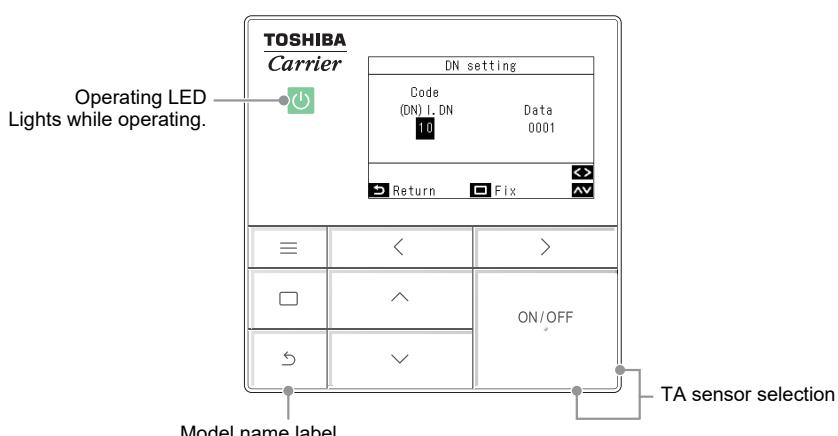

Pair the indoor unit to set and the remote controller one-to-one.

Turn on the power.

1 Press [] to open the “Menu”

2 Press and hold [] and [] at the same time to open “Field setting menu”

→ Press and hold 4 seconds.

3 In the “Field setting menu” screen, press [] and [] to select “DN setting”, and then press []

4 Press [] and [] to select “Indoor unit” or “Outdoor unit”, and then press []

→ If “Indoor unit” was selected, the fans and louvres of the indoor units operate.

When doing group connections:

→ The fans and louvres of the selected indoor units operate.

<Line (system) address>

5 Press [] to black highlight the item code (DN), and then press [] and [] to set the item code No. to 12.

6 Press [] to black highlight the data, and then press [] and [] to set the data system address.

(Match the address with the address on the interface P.C.board of the header outdoor unit in the same refrigerant line.)

7 After finishing setting the data of the item code (DN), press []

→ “Continue?” is displayed.

<Indoor unit address>

- 8 Press [\leftarrow] to black highlight the item code (DN), and then press [\wedge] and [\vee] to set the item code No. to 13.
- 9 Press [\rightarrow] to black highlight the data, and then press [\wedge] and [\vee] to set the data indoor unit address.
- 10 After finishing setting the data of the item code (DN), press [\square Set/Fix]
→“Continue?” is displayed.

<Group address>

- 11 Press [\leftarrow] to black highlight the item code (DN), and then press [\wedge] and [\vee] to set the item code No. to 14.
- 12 Press [\rightarrow] to black highlight the data, and then press [\wedge] and [\vee] to set the data indoor unit address.
a group address. If the indoor unit is individual, set the address to 0000; header unit, 0001; follower unit, 0002.

Individual : 0000
Header unit : 0001
Follower unit : 0002 } In case of group control

- 13 After finishing setting the data of the item code (DN), press [\square Set/Fix]
→“Continue?” is displayed.

- 14 To set the data of other item codes (DN), press [\square Set/Fix] To not do other settings, press [\square Return]

→The changes are fixed, and the “Field setting menu” screen returns.

→“ \times ” appears while data is changing.

When doing group connections:

→Press [\square Return] to open the unit selection screen.
In the unit selection screen, press [\square Return] to
briefly display “ \times ”, and then return to the “Field
setting menu” screen.

NOTE

<In the case of combining with outdoor units of Super Modular Multi System u series (SMMS-u)>

- Turn ON DIP switch 1 of SW100 on the header outdoor unit interface P.C. board the lowest system address number.
- After finishing all the settings above, set the address of the central control devices. (For the setting of the central control address, refer to the installation manual of the central control devices.)

<In the case of combining with outdoor units other than Super Modular Multi System u series (SMMS-u)>


- Set a system address for the header outdoor unit of each line with SW13 and 14 of their interface P.C. boards.
- Turn off dip switch 2 of SW30 on the interface P.C. boards of all the header outdoor units connected to the same central control, except the unit that has the lowest address. (For unifying the termination of the wiring for the central control of indoor and outdoor units)
- Connect the relay connectors between the [U1, U2] and [U3, U4] terminals on the header outdoor unit of each refrigerate line.
- After finishing all the settings above, set the address of the central control devices. (For the setting of the central control address, refer to the installation manuals of the central control devices.)

◆ To find an indoor unit's position from its address

Procedure to know the position of indoor unit body by address while indoor unit No. is known.

- Confirm each indoor unit address while indoor unit is stopped. (Be sure to stop air conditioner.)

<RBC-AMT*>**

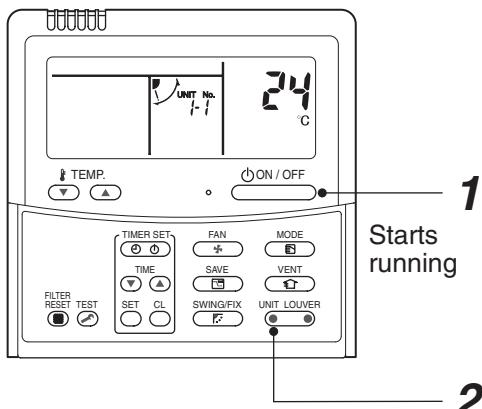

(Execute it while the units are running.)

1 Push the  button if the units stop.

2 Push the  button (left side of the button).

A unit numbers **1-1** is indicated on the LCD (it will disappear after a few seconds). The indicated number shows the system address and indoor unit address of the unit.



When 2 or more indoor units are connected to the remote controller (group-controlled units), a number of other connected units appears each time you push the  button (left side of the button).

[Procedure]


The position of indoor unit body by address

- 1** Push the [ MENU] button to display the menu screen.
- 2** Push and hold the [ MENU] button and the [] button at the same time to display the “Field setting menu”.
→ Push and hold the buttons for more than 4 seconds.
- 3** Push the []/ [] button to select “7. DN setting” on the “Field setting menu” screen, then push the “[] Set”
- 4** Push the unit to confirm the address of indoor unit.
→ The selected unit changes as follows each time the button is pushed:

- 5** Push the [ Set/Fix]
→ The setting display for the selected unit appears.
→ When the group control is used, the fan and louver of the selected indoor unit operate.
- 6** Push the [ MENU] button to set the other Code(DN) and Data. After “Continue?” is displayed on the screen, push the [ Return] to finish the setting operation. “ Setting” appears on the screen for a while, then the screen returns to the “Field setting menu” screen.

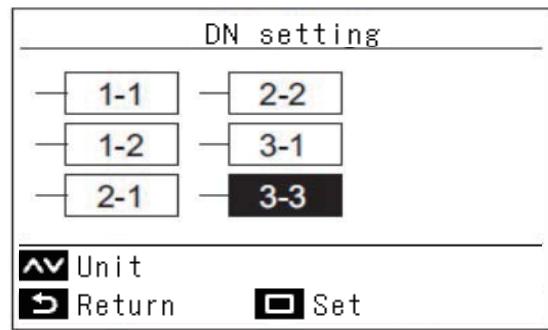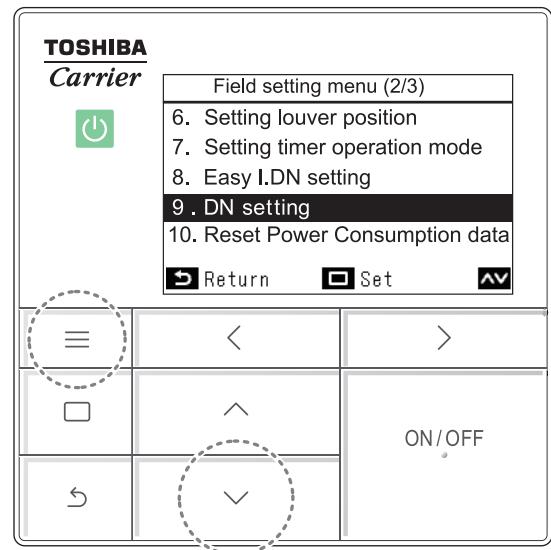

Address is displayed here.

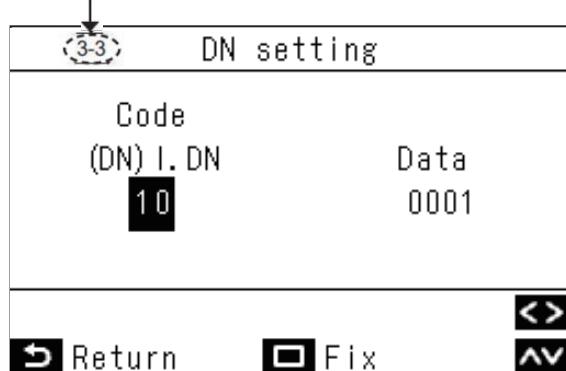

◆ Check code clearing function


How to clear the check code using the wired remote controller

<RBC-AMT***>

▼ Clearing a check code of the outdoor unit

Clear the currently detected outdoor unit for each refrigerant line to which the indoor unit controlled by the remote controller is connected. (The indoor unit check code is not cleared.) Use the service monitoring function of the remote controller.

- 1 Push and hold the  , and  for 4 seconds or longer to enter the service monitoring mode.
- 2 Push the   button to set CODE No. to "FF".
- 3 The display in A of the following figure counts down as follows at 5-second intervals:
"0005" → "0004" → "0003" → "0002" → "0001" → "0000".
The check code is cleared when "0000" appears.
However, the display counts down from "0005" again.
- 4 Push the  to return the display to normal.

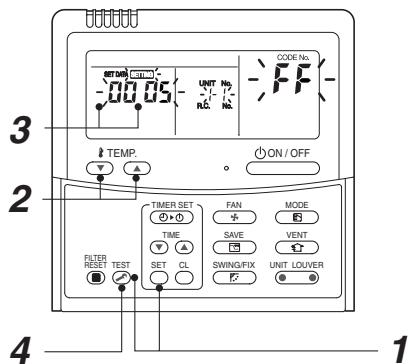

▼ Clearing a check code of the indoor unit

Push the  button on the remote controller.

(Only the check code of the indoor unit controlled by the remote controller will be cleared.)

<RBC-AW5U52-UL>

Displays the last 10 check codes, and at which unit and when they occurred.

Field setting menu (1/3)			
1. Test mode			
2. Register service info.			
3. Alarm history			
4. Address			
5. Monitor function			
<input type="button" value="Return"/>	<input type="button" value="Set"/>		

Alarm history			
Unit	Code	Date	Time
1. 1-3	E04	06/01/2022	01:56
2.	-	-	-
3.	-	-	-
4.	-	-	-
<input type="button" value="Reset"/>			
<input type="button" value="Return"/>			

NOTE

- The check code history data shows a history of 10 occurrences. If the occurrences exceed 10, the oldest data is deleted.
- If the same check code occurs repeatedly, the date of the first occurrence is displayed.

Deleting check code history

Alarm history			
Reset all alarm data.			
<input type="button" value="No"/>	<input type="button" value="Yes"/>		

REQUIREMENT

If you are using 2 remote controllers, delete the history at each remote controller.

- 1 In the “Field setting menu” screen, press [] and [] to select “Alarm history”, and then press [


- 2 Press [] while the “Alarm history” screen is displayed

→ “Reset all alarm data.” is displayed.

- 3 Press [

▼ Monitoring function of wired remote controller

<RBC-AMT***>

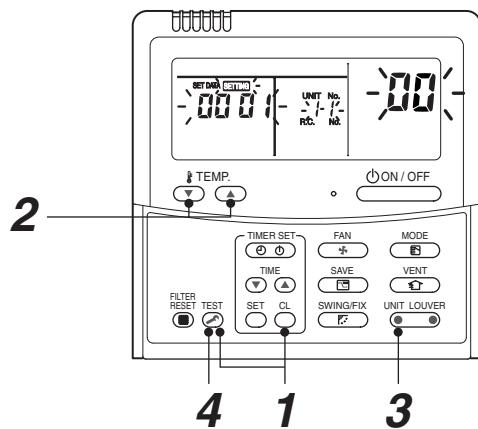

Content

Enter the service monitoring mode using the remote controller to check the sensor temperature or operation status of the remote controller, indoor unit, and outdoor unit.

- 1 Push and hold the and for 4 seconds or longer to enter the service monitoring mode.**
The service monitor lights up. The CODE No. **00** appears at first.
- 2 Push the button to change to CODE No. of the item to monitor. Refer to the next page for CODE No.**
- 3 Push the left part of the button (left side of the button) to change to the item to monitor. Monitor the sensor temperature or operation status of the indoor unit and outdoor unit in the refrigerant line.**
- 4 Push the button to return the display to normal.**

<RBC-AWSU52-UL>

Displays the codes and data indicating the operating condition and temperature of each sensor on the indoor units, outdoor units, and remote controllers.

Monitor function	
Code	Data
00	0024
 Return	

1 In the “Field setting menu” screen, press [] and [] to select “Monitor function”, and then press [ Set/Fix]

→ Press [] and [] to change the item code and then check the data.

→ In a group connection, after a selection in the unit selection screen, move to the “Monitor function” screen.

2 Press [ Return]

→ Return to the “Field setting menu” screen.

◆ Indoor service monitor list

	Code No.	Data name	Display format	Unit	Remote controller display example
Indoor unit data*	00	Room temperature (Use to control)	×1	°F(°C)	
	01	Room temperature (Remote controller)	×1	°F(°C)	
	02	Indoor suction air temperature (TA)	×1	°F(°C)	
	03	Indoor coil temperature (TCJ)	×1	°F(°C)	
	04	Indoor coil temperature (TC2)	×1	°F(°C)	
	05	Indoor coil temperature (TC1)	×1	°F(°C)	
	06	Indoor discharge air temperature (TF) **	×1	°F(°C)	
	07	Indoor fan motor number of revolutions**	×1	rpm	[0600] = 600rpm
	08	Indoor PMV opening	×1/10	pls	[0150]=1500pls
	F3	Filter sign time	×1	h	[2500] = 2500h
	F9	Suction temperature of air to air heat exchanger (TSA) **	×1	°F(°C)	[0024] = 75.2°F(24°C)
	FA	Outside air temperature (TOA) **	×1	°F(°C)	

* When the units are connected to a group, data of the header indoor unit only can be displayed.

** There is also a model which cannot be displayed.

- Refer to the service manual of an outdoor unit for "outdoor service monitor list".

11. TROUBLESHOOTING

11-1. Overview

(1) Before engaging in troubleshooting

(a) Applicable models

All Super Modular Multi System (SMMS-*) models.
(Indoor units: MM*-UP***, Outdoor units: MMY-M*P***)

(b) Tools and measuring devices required

- Screwdrivers (Philips, flat head), spanners, long-nose pliers, nipper, pin to push reset switch, etc.
- Multimeter, thermometer, pressure gauge, etc.

(c) Things to check prior to troubleshooting (behaviors listed below are normal)


NO.	Behavior	Possible cause
1	A compressor would not start	<ul style="list-style-type: none">• The air conditioner is being controlled by the 3-minute protective function.• It is in standby status though the room temperature has reached the setup temperature.• It is being operated in timer mode or fan mode.• It is being in initial communication.
2	An indoor fan would not start	<ul style="list-style-type: none">• The air conditioner is being controlled by the cool air discharge preventive function in "heating"?
3	An outdoor fan would not start or would change speed for no reason	<ul style="list-style-type: none">• The air conditioner is being operated in "cooling" under the low outside air temperature.• It is being operated in defrost operation.
4	An indoor fan would not stop	<ul style="list-style-type: none">• The air conditioner is being controlled by function of residual heat elimination being performed as part of the air conditioner shutdown process after heating operation.
5	The air conditioner would not respond to a start/stop command from a remote controller	<ul style="list-style-type: none">• The air conditioner is being operated under external or remote controller.

⚠ CAUTION

The cooling performance may be declining considerably when total operating capacity of cooling indoor units is less than 4 HP while ambient temperature is below.

(2) Troubleshooting procedure

When a problem occurs, proceed with troubleshooting in accordance with the procedure shown below.

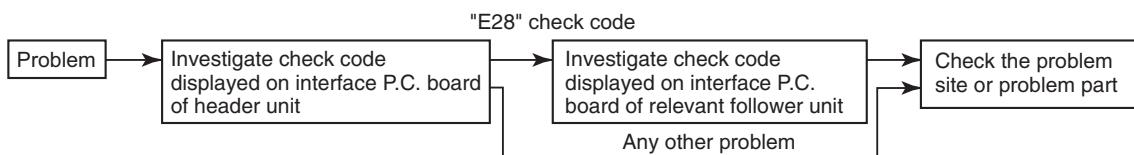

NOTE

Rather than a product trouble (see the List of Check Codes below), the problem could have been caused by a microprocessor malfunction attributable to a poor quality of the power source or an external noise. Check for possible noise sources, and shield the remote controller wiring and signal wires as necessary.

11-2. Troubleshooting method

The remote controllers (main remote controller and central control device) and the interface P.C. board of an outdoor unit are provided with an a 7-segment display (outdoor interface P.C. board) to display operational status. Using this self-diagnosis feature, the trouble site / trouble part may be identified in the event of a trouble by following the method described below.

The list below summarizes check codes detected by various devices. Analyze the check code according to where it is displayed and work out the nature of the trouble in consultation with the list.

- When investigating a trouble on the basis of a display provided on the indoor remote controller or central control device - See the “central control device or main remote controller display” section of the list.
- When investigating a trouble on the basis of a display provided on an outdoor unit - See the “Outdoor 7-segment display” section of the list.
- When investigating a trouble on the basis of a wireless remote controller-controlled indoor unit - See the “Indicator light block” section of the list.

List of check codes (indoor unit)

(Check code detected by indoor unit)

IPDU: Compressor / Fan inverter P.C. board

○: Lighting, ○: Flashing, ●: Goes off

ALT.: Flashing is alternately when there are two flashing LED

SIM: Simultaneous flashing when there are two flashing LED

Check code		Display of receiving unit		Typical trouble on site	Description of check code
Remote controller display	Outdoor 7-segment display		Indicator light block		
		Sub-code	Operation Timer Ready ○ ○ ○	Flash	
E03	—	—	○ ● ●	Indoor-remote controller periodic communication check code	Communication from remote controller or network adaptor has been lost (so has central control communication).
E04	—	—	● ● ○	Indoor-outdoor periodic communication check code	Signals are not being received from outdoor unit.
E08	E08	Duplicated indoor address	○ ● ●	Duplicated indoor address	Indoor unit detects address identical to its own.
E10	—	—	○ ● ●	Communication trouble between indoor unit MCU	Communication trouble between main MCU and the motor microcomputer MCU
E11	—	—	○ ● ●	Communication check code between Application control kit and indoor unit	Communication check code between Application control kit and indoor unit P.C. board
E18	—	—	○ ● ●	Check cod in periodic communication between indoor header and follower unit	Periodic communication between indoor header and follower units cannot be maintained.
F01	—	—	○ ○ ●	ALT Indoor heat exchanger temperature sensor (TCJ) check code	Heat exchanger temperature sensor (TCJ) has been open / short-circuit.
F02	—	—	○ ○ ●	ALT Indoor heat exchanger temperature sensor (TC2) check code	Heat exchanger temperature sensor (TC2) has been open / short-circuit.
F03	—	—	○ ○ ●	ALT Indoor heat exchanger temperature sensor (TC1) check code	Heat exchanger temperature sensor (TC1) has been open / short-circuit.
F10	—	—	○ ○ ●	ALT Ambient temperature sensor (TA) check code	Ambient temperature sensor (TA) has been open / short-circuit.
F11	—	—	○ ○ ●	ALT Discharge temperature sensor (TF) check code	Discharge temperature sensor (TF) has been open / short-circuit.
F29	—	—	○ ○ ●	SIM P.C. board or other indoor check code	Indoor EEPROM is abnormal (some other trouble may be detected).
F30	—	—	○ ○ ○	ALT Occupancy sensor trouble	Occupancy sensor trouble has been detected.
L03	—	—	○ ● ○	SIM Duplicated indoor group header unit	There is more than one header unit in group.
L07	—	—	○ ● ○	SIM Connection of group control cable to a single indoor unit	There is at least one a single indoor unit to which group control cable is connected.
L08	L08	—	○ ● ○	SIM Indoor group address not set	Address setting has not been performed for one or more indoor units (also detected at outdoor unit end).
L09	—	—	○ ● ○	SIM Indoor capacity not set	Capacity setting has not been performed for indoor unit.
L20	—	—	○ ○ ○	SIM Duplicated central control address	There is duplication in central control address setting.
L30	L30	Detected indoor unit No.	○ ○ ○	SIM Indoor external check code input (interlock)	Unit shutdown has been caused by external check code input (CN80).
P01	—	—	● ○ ○	ALT Indoor AC fan check code	Indoor AC fan check code is detected (activation of fan motor thermal relay).
P10	P10	Detected indoor unit No.	● ○ ○	ALT Indoor overflow check code	Float switch has been activated.
P12	—	—	● ○ ○	ALT Indoor DC fan check code	• Indoor DC fan check code (e.g. overcurrent or lock-up) is detected.
P31	—	—	○ ● ○	ALT Other indoor unit check code	Follower unit cannot be operated due to header unit alarm (E03 / L03 / L07 / L08).

(Check code detected by remote controller)

Check code			Display of receiving unit				Typical trouble site	Description of trouble		
Remote control	Outdoor 7-segment display		Indicator light block							
		Sub-code	Operation	Timer	Ready	Flash				
E01	–	–	◎	●	●		No master remote control, failure remote control communication (reception)	Signals cannot be received from indoor unit; master remote control has not been set (including two remote control).		
E02	–	–	◎	●	●		Failure remote control communication (transmission)	Signals cannot be transmitted to indoor unit.		
E09	–	–	◎	●	●		Duplicated master remote control	Both remote controls have been set as master remote control in two remote control (alarm and shutdown for header unit and continued operation for follower unit)		

(Check code detected by central control device)

Check code			Display of receiving unit				Typical trouble site	Description of trouble		
Central control	Outdoor 7-segment display		Indicator light block							
		Sub-code	Operation	Timer	Ready	Flash				
C05	–	–	No indication (when main remote control also in use)				Failure central control communication (transmission)	Central control device is unable to transmit signal due to duplication of central control device		
C06	–	–					Failure central control communication (reception)	Central control device is unable to receive signal.		
C12	–	–	–	–	–	–	Bracket alarm for general-purpose device control interface	Device connected to general-purpose device control interface is trouble.		
P30 (L20)	–	–	(L20 is displayed.)			Communication Link	<ul style="list-style-type: none"> Duplication addresses of indoor units in central control device With the combination of air conditioning system, the indoor unit may detect the check code of L20 			

Note: The same trouble, e.g. a communication trouble, may result in the display of different check codes depending on the device that detects it. Moreover, check codes detected by the main remote controller / central control device do not necessarily have a direct impact on air conditioner operation.

Flow selector unit (FS unit) Relation

(Check code detected by indoor unit)

Check code			Display of receiving unit				Typical trouble site	Description of trouble		
Main remote control	Outdoor 7-segment display		Indicator light block							
		Sub-code	Operation	Timer	Ready	Flash				
E17	–	–	◎	●	●		Communication trouble between indoor unit (s) and FS unit (s)	There is no communication from FS unit(s)		
J03	–	–	●	◎	◎		Duplicated FS units	More than one FS units have been set up in one refrigerant line.		
J10	–	–	●	◎	◎		FS unit overflow trouble	FS unit has been shutdown in one refrigerant line due to detection of overflow		
J11	–	–	●	◎	◎		FS unit temperature sensor (TCS) trouble	FS unit temperature sensor (TCS) has been open/short-circuited.		
L12	L12	–	◎	○	◎		FS unit(s) system trouble	FS unit(s) outside the application setting		

List of Check Codes (Outdoor Unit)

(Check code detected by outdoor interface - typical examples)

If "HELLO" is displayed on the outdoor 7-segment for 1 minute or more, turn off the power supply once and then turn on the power supply again after passage of 30 seconds or more. When the same symptom appears, it is considered there is a possibility of I/F board trouble.

○ : Lighting, ◎ : Flashing, ● : Goes off
ALT.: Flashing is alternately when there are two flashing LED
SIM: Simultaneous flashing when there are two flashing LED

Check code		Central control or main remote controller display	Display of receiving unit				Typical problem site	Description of problem																																																																																
Outdoor 7-segment display			Indicator light block																																																																																					
	Sub-code		Operation	Timer	Ready	Flash																																																																																		
E06	Number of indoor units from which signal is received normally	E06	●	●	◎		Signal lack of indoor unit	Indoor unit initially communicating normally fails to return signal (reduction in number of indoor units connected).																																																																																
E07	–	(E04)	●	●	◎		Indoor-outdoor communication circuit trouble	Signal cannot be transmitted to indoor units (→ indoor units left without communication from outdoor unit).																																																																																
E08	Duplicated indoor address	(E08)	◎	●	●		Duplicated indoor address	More than one indoor unit are assigned same address (also detected at indoor unit end).																																																																																
E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	E12	◎	●	●		Automatic address starting trouble	<ul style="list-style-type: none"> Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress. Outdoor automatic address setting is started while automatic address setting for indoor units is in progress. 																																																																																
E15	–	E15	●	●	◎		Indoor unit not found during automatic address setting	Indoor unit fails to communicate while automatic address setting for indoor units is in progress.																																																																																
E16	00: Capacity over 01: Number of units connected	E16	●	●	◎		Too many indoor units connected/capacity over	Combined capacity of indoor units is too large. The maximum combined of indoor units shown in the specification table.																																																																																
E19	00: No header unit 02: Two or more header units	E19	●	●	◎		Trouble in number of outdoor header units	There is no or more than one outdoor header unit in one refrigerant line.																																																																																
E20	01: Connection of outdoor unit from other refrigerant line 02: Connection of indoor unit from other refrigerant line	E20	●	●	◎		Connection to other refrigerant line found during automatic address setting	Indoor unit from other refrigerant line is detected while indoor automatic address setting is in progress.																																																																																
E23	–	E23	●	●	◎		Outdoor-outdoor communication transmission trouble	Signal cannot be transmitted to other outdoor units.																																																																																
E25	–	E25	●	●	◎		Duplicated follower outdoor address	There is duplication in outdoor addresses set manually.																																																																																
E26	Address of outdoor unit from which signal is not received normally	E26	●	●	◎		Signal lack of outdoor unit	Follower outdoor unit initially communicating normally fails to do so (reduction in number of follower outdoor units connected).																																																																																
E28	Detected outdoor unit No.	E28	●	●	◎		Outdoor follower unit trouble	Outdoor header unit detects trouble relating to follower outdoor unit (detail displayed on follower outdoor unit).																																																																																
E31	<table border="1"> <tr> <th colspan="4">P.C.board</th> <th colspan="4">P.C.board</th> </tr> <tr> <th>Compressor</th> <th>Fan Motor</th> <th>Compressor</th> <th>Fan Motor</th> <th>1</th> <th>2</th> <th>1</th> <th>2</th> </tr> <tr> <td>01</td> <td>O</td> <td>11</td> <td>O</td> <td>O</td> <td></td> <td></td> <td></td> </tr> <tr> <td>02</td> <td>O</td> <td>12</td> <td>O</td> <td>O</td> <td></td> <td></td> <td></td> </tr> <tr> <td>03</td> <td>O</td> <td>13</td> <td>O</td> <td>O</td> <td>O</td> <td></td> <td></td> </tr> <tr> <td>08</td> <td>O</td> <td>18</td> <td></td> <td>O</td> <td></td> <td></td> <td></td> </tr> <tr> <td>09</td> <td>O</td> <td>19</td> <td>O</td> <td></td> <td>O</td> <td></td> <td></td> </tr> <tr> <td>0A</td> <td>O</td> <td>1A</td> <td>O</td> <td>O</td> <td>O</td> <td></td> <td></td> </tr> <tr> <td>0B</td> <td>O</td> <td>1B</td> <td>O</td> <td>O</td> <td>O</td> <td></td> <td></td> </tr> <tr> <td>10</td> <td>O</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </table> <p>80 : Communication trouble between MCu and Sub MCu Circle (O): Trouble P.C. board</p>	P.C.board				P.C.board				Compressor	Fan Motor	Compressor	Fan Motor	1	2	1	2	01	O	11	O	O				02	O	12	O	O				03	O	13	O	O	O			08	O	18		O				09	O	19	O		O			0A	O	1A	O	O	O			0B	O	1B	O	O	O			10	O							E31	●	●	◎		P.C. board communication trouble Sub MCu communication trouble	There is no communication between P.C. boards in inverter box.
P.C.board				P.C.board																																																																																				
Compressor	Fan Motor	Compressor	Fan Motor	1	2	1	2																																																																																	
01	O	11	O	O																																																																																				
02	O	12	O	O																																																																																				
03	O	13	O	O	O																																																																																			
08	O	18		O																																																																																				
09	O	19	O		O																																																																																			
0A	O	1A	O	O	O																																																																																			
0B	O	1B	O	O	O																																																																																			
10	O																																																																																							
F04	–	F04	◎	◎	○	ALT	Outdoor discharge temperature sensor (TD1) trouble	Outdoor discharge temperature sensor (TD1) has been open/short-circuited.																																																																																
F05	–	F05	◎	◎	○	ALT	Outdoor discharge temperature sensor (TD2) trouble	Outdoor discharge temperature sensor (TD2) has been open/short-circuited.																																																																																
F06	01: TE1 sensor 02: TE2 sensor 03: TE3 sensor	F06	◎	◎	○	ALT	Outdoor heat exchanger liquid side temperature sensor (TE1, TE2, TE3) trouble	Outdoor heat exchanger liquid side temperature sensors (TE1, TE2, TE3) have been open/short-circuited.																																																																																
F07	01: TL1 sensor 02: TL2 sensor 03: TL3 sensor	F07	◎	◎	○	ALT	Outdoor liquid temperature sensor (TL1,TL2,TL3) trouble	Outdoor liquid temperature sensor (TL1,TL2,TL3) has been open/short-circuited.																																																																																
F08	–	F08	◎	◎	○	ALT	Outdoor outside air temperature sensor (TO) trouble	Outdoor air temperature sensor (TO) has been open/short-circuited.																																																																																
F09	01: TG1 sensor 02: TG2 sensor 03: TG3 sensor	F09	◎	◎	○	ALT	Outdoor heat exchanger gas side temperature sensor (TG1, TG2, TG3) trouble	Outdoor heat exchanger gas side temperature sensors (TG1, TG2, TG3) have been open/short-circuited.																																																																																

Check code		Display of receiving unit		Typical problem site	Description of problem		
Outdoor 7-segment display		Indicator light block					
	Sub-code	Central control or main remote controller display	Operation Timer Ready Flash				
F12	01: TS1 sensor 03: TS3 sensor	F12	◎ ◎ ○	ALT	Outdoor suction temperature sensor (TS1,TS3) trouble	Outdoor suction temperature sensor (TS1,TS3) has been open/short-circuited.	
F15	–	F15	◎ ◎ ○	ALT	Outdoor temperature sensor (TE1,TL1) wiring trouble	Wiring trouble in outdoor temperature sensors (TE1,TL1) has been detected.	
F16	–	F16	◎ ◎ ○	ALT	Outdoor pressure sensor (Pd, Ps) wiring trouble	Wiring trouble in outdoor pressure sensors (Pd, Ps) has been detected.	
F23	–	F23	◎ ◎ ○	ALT	Low pressure sensor (Ps) trouble	Output voltage of low pressure sensor (Ps) is zero.	
F24	–	F24	◎ ◎ ○	ALT	High pressure sensor (Pd) trouble	Output voltage of high pressure sensor (Pd) is zero or provides abnormal readings when compressors have been turned off.	
F31	–	F31	◎ ◎ ○	SIM	Outdoor EEPROM trouble	Outdoor EEPROM is failure (alarm and shutdown for header unit and continued operation for follower unit)	
H05	–	H05	● ◎ ●		Outdoor discharge temperature sensor (TD1) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD1) has been detected.	
H06	–	H06	● ◎ ●		Activation of low-pressure protection	Low pressure (Ps) sensor detects abnormally low operating pressure.	
H07	–	H07	● ◎ ●		Low oil level protection	Temperature sensor for oil level detection (TK1,TK2) detects abnormally low oil level.	
H08	01: TK1 sensor trouble 02: TK2 sensor trouble	H08	● ◎ ●		Trouble in temperature sensor for oil level detection (TK1,TK2)	Temperature sensor for oil level detection (TK1,TK2) has been open/short-circuited.	
H15	–	H15	● ◎ ●		Outdoor discharge temperature sensor (TD2) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD2) has been detected.	
H16	01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	H16	● ◎ ●		Oil level detection circuit trouble	No temperature change is detected by temperature sensor for oil level detection (TK1,TK2) despite compressor having been started.	
L04	–	L04	◎ ○ ○	SIM	Duplicated outdoor refrigerant line address	Identical refrigerant line address has been assigned to outdoor units belonging to different refrigerant piping systems.	
L06	Number of priority indoor units (check code L05 or L06 depending on individual unit)	L05	◎ ● ○	SIM	Duplicated priority indoor unit (as displayed on priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.	
		L06	◎ ● ○	SIM	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.	
L08	–	(L08)	◎ ● ○	SIM	Indoor group address not set	Address setting have not been performed for one or more indoor units (also detected at indoor end).	
L10	–	L10	◎ ○ ○	SIM	Outdoor capacity not set	Outdoor unit capacity has not been set (after P.C. board replacement).	
L17	–	L17	◎ ○ ○	SIM	Outdoor model incompatibility trouble	Old model outdoor unit has been connected.	
L23	–	L23	◎ ○ ○	SIM	SW setting mistake		
L28	–	L28	◎ ○ ○	SIM	Too many outdoor units connected	More than five outdoor units have been connected.	

Check code				Central control or main remote controller display	Display of receiving unit				Typical problem site	Description of problem																																										
Outdoor 7-segment display					Indicator light block																																															
Sub-code					Operation	Timer	Ready	Flash																																												
L29	<table border="1"> <thead> <tr> <th colspan="2">P.C.board</th> <th colspan="2">P.C.board</th> </tr> <tr> <th>Compressor</th> <th>Fan Motor</th> <th>Compressor</th> <th>Fan Motor</th> </tr> <tr> <th>1</th> <th>2</th> <th>1</th> <th>2</th> </tr> </thead> <tbody> <tr><td>01</td><td>O</td><td></td><td></td></tr> <tr><td>02</td><td></td><td>O</td><td></td></tr> <tr><td>03</td><td>O</td><td>O</td><td></td></tr> <tr><td>08</td><td></td><td></td><td>O</td></tr> <tr><td>09</td><td>O</td><td>O</td><td></td></tr> <tr><td>0A</td><td></td><td>O</td><td>O</td></tr> <tr><td>0B</td><td>O</td><td>O</td><td>O</td></tr> <tr><td>10</td><td></td><td></td><td>O</td></tr> </tbody> </table> <p>Circle (O): Trouble P.C. board</p>	P.C.board		P.C.board		Compressor	Fan Motor	Compressor	Fan Motor	1	2	1	2	01	O			02		O		03	O	O		08			O	09	O	O		0A		O	O	0B	O	O	O	10			O	L29	◎	○	◎	SIM	Trouble in number of P.C. boards	There are insufficient number of P.C. board in inverter box.
P.C.board		P.C.board																																																		
Compressor	Fan Motor	Compressor	Fan Motor																																																	
1	2	1	2																																																	
01	O																																																			
02		O																																																		
03	O	O																																																		
08			O																																																	
09	O	O																																																		
0A		O	O																																																	
0B	O	O	O																																																	
10			O																																																	
L30	Detected indoor unit No.	(L30)	◎	○	◎	SIM	Indoor external trouble input (interlock)	Indoor unit has been shut down for external trouble input in one refrigerant line (detected by indoor unit).																																												
P03	—	P03	◎	●	◎	ALT	Outdoor discharge (TD1) temperature trouble	Outdoor discharge temperature sensor (TD1) has detected abnormally high temperature.																																												
P05	00: Power detection trouble 01: Open phase 02: Power supply miswiring	P05	◎	●	◎	ALT	Power detection trouble /Open phase detection /Power supply miswiring detection	Open phase is detected when power is turned on. Inverter DC voltage is too high (overvoltage) or too low (undervoltage).																																												
P07	1 : Compressor 1 heat sink trouble 2 : Compressor 2 heat sink trouble	P07	◎	●	◎	ALT	Heat sink overheating trouble	Temperature sensor built into IPM (TH) detects overheating.																																												
	04: Heat sink dew condensation						Heat sink dew condensation trouble	Outdoor liquid temperature sensor (TL2) has detected abnormally low temperature.																																												
P10	Indoor unit No. detected	(P10)	●	○	◎	ALT	Indoor unit overflow	Indoor unit has been shutdown in one refrigerant line due to detection of overflow (detected by indoor unit).																																												
P11	—	P11	●	○	◎	ALT	Outdoor heat exchanger freeze trouble	Remaining frost on outdoor heat exchanger has been detected repeatedly.																																												
P13	—	P13	●	○	◎	ALT	Outdoor liquid backflow detection trouble	State of refrigerant cycle circuit indicates liquid backflow operation.																																												
P15	01: TS condition 02: TD condition	P15	◎	●	◎	ALT	Gas leak detection	Outdoor suction temperature sensor (TS1) detects sustained and repeated high temperatures that exceed standard value.																																												
P17	—	P17	◎	●	◎	ALT	Outdoor discharge (TD2) temperature trouble	Outdoor discharge temperature sensor (TD2) detects abnormally high temperature.																																												
P19	Outdoor unit No. detected	P19	◎	●	◎	ALT	4-way valve reversing trouble	Abnormality in refrigerating cycle is detected during heating operation.																																												
P20	—	P20	◎	●	◎	ALT	Activation of high-pressure protection	High pressure (Pd) sensor detects high pressure that exceeds standard value.																																												

MG-CTT: Magnet contactor

(Check code detected by Inverter of Compressor featuring in outdoor unit - typical examples)

Check code		Display of receiving unit				Typical problem site	Description of problem	
Outdoor 7-segment display		Central control or main remote controller display	Indicator light block					
	Sub-code		Operation	Timer	Ready	Flash		
F13	1*: Compressor 1 2*: Compressor 2	F13	◎	◎	○	ALT	Trouble in temperature sensor built into indoor IPM (TH)	
H01	1*: Compressor 1 2*: Compressor 2	H01	●	◎	●		Temperature sensor built into indoor IPM (TH) has been open/short-circuited.	
H02	1*: Compressor 1 2*: Compressor 2	H02	●	◎	●		Compressor breakdown	
H03	1*: Compressor 1 2*: Compressor 2	H03	●	◎	●		Compressor trouble (lockup)	
P04	01: Compressor 1 02: Compressor 2	P04	◎	●	◎	ALT	Current detection circuit trouble	
P05	01: Compressor 1 side 02: Compressor 2 side	P05	◎	●	◎	ALT	Abnormal current is detected while inverter compressor is turned off.	
P07	01: Compressor 1 side 02: Compressor 2 side	P07	◎	●	◎	ALT	Activation of high-pressure SW	
P11	–	P11	●	◎	◎	ALT	High-pressure SW is activated.	
P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	P22	◎	●	◎	ALT	Compressor Vdc trouble	
P26	1*: Compressor 1 2*: Compressor 2	P26	◎	●	◎	ALT	Temperature sensor built into IPM (TH) detects overheating.	
P29	1*: Compressor 1 2*: Compressor 2	P29	◎	●	◎	ALT	Outdoor heat exchanger freeze trouble	
							Remaining frost on outdoor heat exchanger has been detected repeatedly.	
							Outdoor fan P.C. board detects trouble.	
							Activation of IPM, compressor short-circuit protection	
							Short-circuit protection for compressor motor driver circuit components is activated (momentary overcurrent).	
							Compressor position detection circuit trouble	
							Compressor motor position detection trouble is detected.	


Note: The above check codes are examples only, and different check codes may be displayed depending on the outdoor unit configuration

11-3. Troubleshooting by check Display on Remote Controller

<RBC-AMT***>

(1) Checking and testing

When a trouble occurs to an air conditioner, a check code and indoor unit No. are displayed on the display window of the remote controller. Check codes are only displayed while the air conditioner is in operation. If the display has already disappeared, access check code history by following the procedure described below.

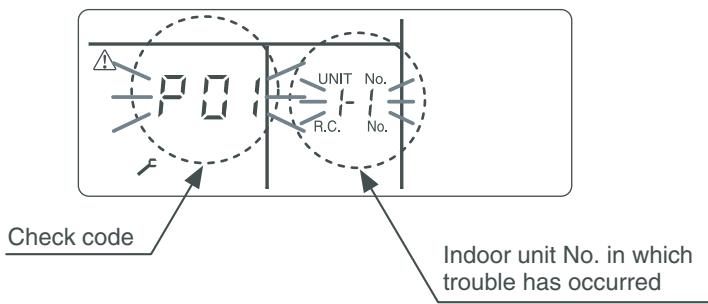

(2) Trouble history

The trouble history access procedure is described below (up to four check codes stored in memory). Check code history can be accessed regardless of whether the air conditioner is in operation or shut down.

<Procedure> To be performed when system at rest


1 Invoke the SERVICE CHECK mode by pressing the + buttons simultaneously and holding for at least 4 seconds.

The letters “ SERVICE CHECK” light up, and the check code “01” is displayed, indicating the trouble history. This is accompanied by the indoor unit No. to which the trouble history is related and a check code.

2 To check other trouble history items, press the button to select another check code.


Check code “01” (latest) → Check code “04” (oldest)
Note: Trouble history contains four items.

3 When the button is pushed, normal display is restored.

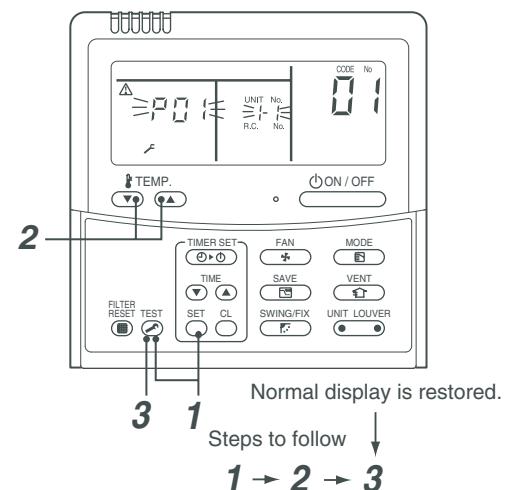

CAUTION


Do not push the button as it would erase the whole trouble history of the indoor unit.

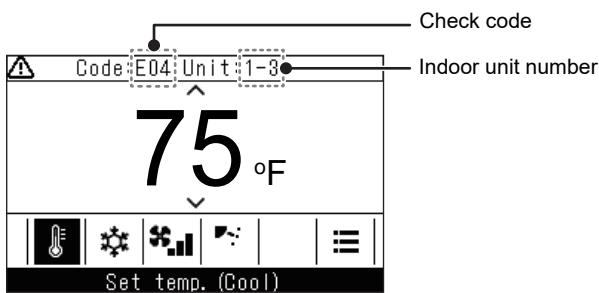

When an error occurs in the air conditioner, the check code and the indoor unit number flash on the display of the remote controller.

* The check code is only displayed during the operation.

When the check code and indoor unit number are displayed, pressing [Return] opens the "Check" screen.

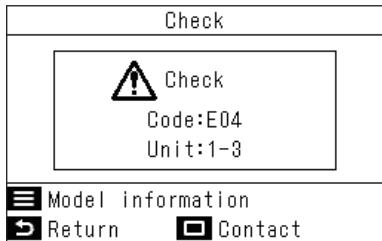


In the "Check" screen, press [Set/Fix] to show the contacts.

Press [Menu] to display "Model information".

■ Contact information for repairs

You can look for contact information for repairs.

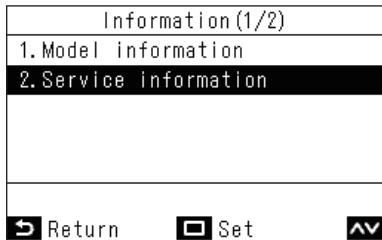

1 In the "Information" screen, press [▲] and [▼] to select "Service information", and then press [Set/Fix]

Using indoor unit indicators (receiving unit light block) (wireless type)

To identify the check code, check the 7-segment display on the header unit. To check for check codes not displayed on the 7-segment display, consult the "List of Check Codes (Indoor Unit)" in "11-2. Troubleshooting method".

● : Goes off ○ : Lighting ☼ : Blinking (0.5 seconds)

Light block	Check code	Cause of trouble	
Operation Timer Ready ● ● ● All lights out	–	Power turned off or trouble in wiring between receiving and indoor units	
Operation Timer Ready ☼ ● ● Blinking	E01	Trouble reception	Receiving unit
	E02	Trouble transmission	
	E03	Loss of communication	
	E08	Duplicated indoor unit No. (address)	Setting trouble
	E09	Duplicated master remote controller	
	E10	Communication trouble between indoor unit MCU	
	E11	Communication trouble between Application control kit and indoor unit P.C. board	
	E12	Automatic address starting trouble	
	E18	Trouble or poor contact in wiring between indoor units, indoor power turned off	
Operation Timer Ready ● ● ☼ Blinking	E04	Trouble or poor contact in wiring between indoor and outdoor units (loss of indoor-outdoor communication)	
	E06	Trouble reception in indoor-outdoor communication (dropping out of indoor unit)	
	E07	Trouble transmission in indoor-outdoor communication	
	E15	Indoor unit not found during automatic address setting	
	E16	Too many indoor units connected / overloading	
	E19	Trouble in number of outdoor header units	
	E20	Detection of refrigerant piping communication trouble during automatic address setting	
	E23	Trouble transmission in outdoor-outdoor communication	
	E25	Duplicated follower outdoor address	
	E26	Trouble reception in outdoor-outdoor communication, dropping out of outdoor unit	
	E28	Outdoor follower unit trouble	
	E31	P.C. board communication trouble	
Operation Timer Ready ● ☼ ☼ Alternate blinking	P01	Indoor AC fan trouble	
	P10	Indoor overflow trouble	
	P11	Outdoor heat exchanger freezing trouble	
	P12	Indoor DC fan trouble	
	P13	Outdoor liquid backflow detection trouble	
Operation Timer Ready ☼ ● ☼ Alternate blinking	P03	Outdoor discharge (TD1) temperature trouble	
	P04	Activation of outdoor high-pressure SW	
	P05	Open phase / power failure Inverter DC voltage (Vdc) trouble MG-CTT trouble	
	P07	Outdoor heat sink overheating trouble - Poor cooling of electrical component (IGBT) of outdoor unit	
	P15	Gas leak detection - insufficient refrigerant charging	
	P17	Outdoor discharge (TD2) temperature trouble	
	P18	Outdoor discharge (TD3) temperature trouble	
	P19	Outdoor 4-way valve reversing trouble	
	P20	Activation of high-pressure protection	
	P22	Outdoor fan P.C. board trouble	
	P26	Outdoor IPM, Compressor short-circuit trouble	
	P29	Compressor position detection circuit trouble	
	P31	Shutdown of other indoor unit in group due to trouble (group follower unit trouble)	

MG-CTT: Magnet contactor

Light block	Check code	Cause of trouble	
Operation  Timer  Ready Alternate blinking	F01 F02 F03 F10 F11	Heat exchanger temperature sensor (TCJ) trouble Heat exchanger temperature sensor (TC2) trouble Heat exchanger temperature sensor (TC1) trouble Ambient temperature sensor (TA) trouble Discharge temperature sensor (TF) trouble	Indoor unit temperature sensor trouble
Operation  Timer  Ready Alternate blinking	F04 F05 F06 F07 F08 F09 F12 F13	Discharge temperature sensor (TD1) trouble Discharge temperature sensor (TD2) trouble Heat exchanger temperature sensor (TE1, TE2) trouble Liquid temperature sensor (TL) trouble Outside air temperature sensor (TO) trouble TG1, TG2 or TG3 sensor trouble Suction temperature sensor (TS1) trouble Heat sink sensor (TH) trouble	
Operation  Timer  Ready Synchronized blinking	F15 F16 F22 F23 F24 F30 F31	Wiring trouble in heat exchanger sensor (TE1) and liquid temperature sensor (TL) Outdoor unit temperature sensor wiring / installation trouble Wiring trouble in outdoor high pressure sensor (Pd) and low pressure sensor (Ps) Outdoor pressure sensor wiring trouble Outdoor discharge temperature sensor (TD3) trouble Low pressure sensor (Ps) trouble High pressure sensor (Pd) trouble Occupancy sensor trouble Indoor unit EEPROM trouble	
Operation  Timer  Ready Synchronized blinking	F29	Failure in indoor EEPROM	
Operation  Timer  Ready Blinking	H01 H02 H03 H04 H05 H06 H07 H08 F14 H15 H16 H25	Compressor breakdown Compressor lockup Current detection circuit trouble Comp. 1 case thermostat operation Wiring / installation trouble or detachment of outdoor discharge temperature sensor (TD1) Abnormal drop in low-pressure sensor (Ps) reading Abnormal drop in oil level Trouble in temperature sensor for oil level detection circuit (TK1, TK2, TK3, TK4 or TK5) Comp. 2 case thermostat operation Wiring / installation trouble or detachment of outdoor discharge temperature sensor (TD2) Oil level detection circuit trouble - Trouble in outdoor unit TK1, TK2, TK3, TK4 or TK5 circuit Wiring / installation trouble or detachment of outdoor discharge temperature sensor (TD3)	Outdoor unit compressor related trouble
Operation  Timer  Ready Synchronized blinking	L02 L03 L05 L06 L07 L08 L09	Model mismatched of indoor and outdoor unit Duplicated indoor group header unit Duplicated priority indoor unit (as displayed on priority indoor unit) Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit) Connection of group control cable to a single indoor unit Indoor group address not set Indoor capacity not set	
Operation  Timer  Ready Synchronized blinking	L04 L10 L17 L18 L20 L28 L29 L30	Duplicated outdoor refrigerant line address Outdoor capacity not set Outdoor model incompatibility trouble Flow selector units trouble Duplicated central control address Too many outdoor units connected Trouble in number of P.C. boards Indoor external interlock trouble (External abnormal input)	

Light block	Check code	Cause of trouble
Operation  Timer  Ready  Synchronized blinking	F30 F31	Occupancy sensor trouble
		Outdoor EEPROM trouble

Other (indications not involving check code)

Light block	Check code	Cause of trouble
Operation  Timer  Ready  Synchronized blinking	–	Test run in progress
Operation  Timer  Ready  Alternate blinking	–	Setting incompatibility (automatic cooling / heating setting for model incapable of it and heating setting for cooling-only model)

Flow selector unit (FS unit) Relation

Light block	Check code	Cause of trouble
Operation  Timer  Ready  Blinking	E17	Communication trouble between indoor unit(s) and FS unit(s)
Operation  Timer  Ready  Synchronized blinking	L12	FS unit(s) system trouble
	L24	FS unit(s) setting trouble
Operation  Timer  Ready  Blinking   Blinking	J03	Duplicated FS units
	J10	FS unit overflow trouble
	J11	FS unit temperature sensor(TCS) trouble

11-4. Check Codes Displayed on Remote Controller and SMMS series Outdoor Unit (7-Segment Display on I/F Board) and Locations to Be Checked

For other types of outdoor units, refer to their own service manuals.

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)					
	Outdoor 7-segment display											
	Check code	Sub-code										
E01	—	—	Remote controller	Indoor-remote controller communication trouble (detected at remote controller end)	Stop of corresponding unit	Communication between indoor P.C. board and remote controller is disrupted.	<ul style="list-style-type: none"> Check remote controller inter-unit tie cable (A/B). Check for broken wire or connector bad contact. Check indoor power supply. Check for failure in indoor P.C. board. Check remote controller address settings (when two remote controllers are in use). Check remote controller P.C. board. 					
E02	—	—	Remote controller	Remote controller transmission trouble	Stop of corresponding unit	Signal cannot be transmitted from remote controller to indoor unit.	<ul style="list-style-type: none"> Check internal transmission circuit of remote controller. Replace remote controller as necessary. 					
E04	—	—	Indoor unit	Indoor-outdoor communication circuit trouble (detected at indoor end)	Stop of corresponding unit	Indoor unit is not receiving signal from outdoor unit.	<ul style="list-style-type: none"> Check order in which power was turned on for indoor and outdoor units. Check indoor address setting. Check indoor-outdoor tie cable. Check outdoor terminator resistor setting (SW100, Bit 2). 					
E04	E06	No. of indoor units from which signal is received normally	I/F	Dropping out of indoor unit	All stop	Condition 1 All indoor unit initially communicating normally fails to return signal for specified length of time. Condition 2 Outdoor I / F board SW103, Bit4 : OFF (Factory default)	<ul style="list-style-type: none"> Check power supply to indoor unit. (Is power turned on?) Check connection of indoor-outdoor communication cable. Check connection of communication connectors on indoor P.C. board. Check connection of communication connectors on outdoor P.C. board. Check for failure in indoor P.C. board. Check for failure in outdoor P.C. board (I/F). 					
		—	Indoor unit	Indoor-outdoor communication circuit trouble	Only specified indoor units stop	Condition 1 Indoor unit initially communicating normally fails to return signal for specified length of time.	<ul style="list-style-type: none"> Check power supply to indoor unit. (Is power turned on?) Check indoor-outdoor power-on sequence. Check indoor address setting Check wiring of Indoor-outdoor communication wires Check outdoor terminator resistor setting (SW100, Bit 2). 					

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Outdoor 7-segment display					
E04/E06	E06	No. of indoor units from which signal is received normally	Indoor unit	Indoor-outdoor communication circuit trouble (E04)	All stop	Condition 1 One indoor unit or more initially communicating normally fails to return signal for specified length of time. Condition 2 Outdoor I / F board SW103, Bit4 : ON (To switch the check code detection condition.)	<ul style="list-style-type: none"> Check power supply to indoor unit. (Is power turned on?) Check indoor-outdoor power-on sequence. Check indoor address setting Check wiring of Indoor-outdoor communication wires Check outdoor terminator resistor setting (SW100, Bit 2).
						SW103  Display on main remote controller. Indoor units unavailable for indoor / outdoor communication. :E04 Indoor units available for indoor / outdoor communication. : E06	
—	E07	—	I/F	Indoor-outdoor communication circuit trouble (detected at outdoor end)	All stop	Signal cannot be transmitted from outdoor to indoor units for 30 seconds continuously.	<ul style="list-style-type: none"> Check outdoor terminator resistor setting (SW100, Bit 2). Check connection of indoor-outdoor communication circuit.
E08	E08	Duplicated indoor address	Indoor unit I/F	Duplicated indoor address	All stop	More than one indoor unit are assigned same address.	<ul style="list-style-type: none"> Check indoor addresses. Check for any change made to remote controller connection (group/individual) since indoor address setting.
E09	—	—	Remote controller	Duplicated master remote controller	Stop of corresponding unit	In two remote controller configuration (including wireless), both controllers are set up as master. (Header indoor unit is shut down with alarm, while follower indoor units continue operating.)	<ul style="list-style-type: none"> Check remote controller settings. Check remote controller P.C. boards.
E10	—	—	Indoor unit	Indoor inter-MCU communication trouble	Stop of corresponding unit	Communication cannot be established/maintained upon turning on of power or during communication.	<ul style="list-style-type: none"> Check for failure in indoor P.C. board
E12	E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	I/F	Automatic address starting trouble	All stop	<ul style="list-style-type: none"> Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress. Outdoor automatic address setting is started while automatic address setting for indoor units is in progress. 	<ul style="list-style-type: none"> Perform automatic address setting again after disconnecting communication cable to that refrigerant line.
E15	E15	—	I/F	Indoor unit not found during automatic address setting	All stop	Indoor unit cannot be detected after indoor automatic address setting is started.	<ul style="list-style-type: none"> Check connection of indoor-outdoor communication line. Check for trouble in indoor power supply system. Check for noise from other devices. Check for power failure. Check for failure in indoor P.C. board.

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Outdoor 7-segment display Sub-code					
E16	E16	00: Capacity over 01:-: No. of units connected	I/F	Too many indoor units connected	All stop	<ul style="list-style-type: none"> Combined capacity of indoor units is too large. <p>Note: If this code comes up after backup setting for outdoor unit failure is performed, perform "No capacity over detected" setting. <"No capacity over detected" setting method> Turn on SW103 / Bit 3 on I/F P.C. board of outdoor header unit. For Cooling Only model, this check code is not displayed even if it exceeds the combined capacity of indoor units.</p> <ul style="list-style-type: none"> More than 128 indoor units are connected. 	<ul style="list-style-type: none"> Check capacities of indoor units connected. Check combined HP capacities of indoor units. Check HP capacity settings of outdoor units. Check No. of indoor units connected. Check for failure in outdoor P.C. board (I/F).
E18	—	—	Indoor unit	Trouble in communication between indoor header and follower units	Stop of corresponding unit	Periodic communication between indoor header and follower units cannot be maintained.	<ul style="list-style-type: none"> Check remote controller wiring. Check indoor power supply wiring. Check P.C. boards of indoor units.
E19	E19	00: No header unit 02: Two or more header units	I/F	Trouble in number of outdoor header units	All stop	<ul style="list-style-type: none"> There are more than one outdoor header units in one line. There is no outdoor header unit in one line. 	<p>Outdoor header unit is outdoor unit to which indoor-outdoor tie cable (U1,U2) is connected.</p> <ul style="list-style-type: none"> Check connection of indoor-outdoor communication line. Check for failure in outdoor P.C. board (I/F).
E20	E20	01: Connection of outdoor unit from other line 02: Connection of indoor unit from other line	I/F	Connection to other line found during automatic address setting	All stop	Equipment from other line is found to have been connected when indoor automatic address setting is in progress.	Disconnect inter-line tie cable in accordance with automatic address setting method explained in "Address setting" section.
E23	E23	—	I/F	Outdoordoor communication transmission trouble	All stop	Signal cannot be transmitted to other outdoor units for at least 30 seconds continuously.	<ul style="list-style-type: none"> Check power supply to outdoor units. (Is power turned on?) Check connection of tie cables between outdoor units for bad contact or broken wire. Check communication connectors on outdoor P.C. boards. Check for failure in outdoor P.C. board (I/F). Check termination resistance setting for communication between outdoor units.
E25	E25	—	I/F	Duplicated follower outdoor address	All stop	There is duplication in outdoor addresses set manually.	<p>Note: Do not set outdoor addresses manually.</p>
E26	E26	Address of outdoor unit from which signal is not received normally	I/F	Signal lack of outdoor unit	All stop	Outdoor unit initially communicating normally fails to return signal for specified length of time.	<ul style="list-style-type: none"> Backup setting is being used for outdoor units. Check power supply to outdoor unit. (Is power turned on?) Check connection of tie cables between outdoor units for bad contact or broken wire. Check communication connectors on outdoor P.C. boards. Check for failure in outdoor P.C. board (I/F).

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)																																																																				
	Outdoor 7-segment display																																																																										
	Check code	Sub-code																																																																									
E28	E28	Detected outdoor unit No.	I/F	Outdoor follower unit trouble	All stop	Outdoor header unit receives trouble code from outdoor follower unit. <Convenient functions> If SW04 is pressed and held for at least 1 second while [E28] is displayed on the 7-segment display of outdoor header unit, the fan of the outdoor unit that has been shut down due to an trouble comes on. If SW04 and SW05 are pressed simultaneously, the fans of normal outdoor units come on. To stop the fan or fans, press SW05 on its own.	<ul style="list-style-type: none"> Check check code displayed on outdoor follower unit. 																																																																				
E31	E31	<table border="1"> <thead> <tr> <th colspan="2">P.C. board</th> <th colspan="2">Fan Motor</th> </tr> <tr> <th>1</th> <th>2</th> <th>1</th> <th>2</th> </tr> </thead> <tbody> <tr><td>01</td><td>O</td><td></td><td></td></tr> <tr><td>02</td><td></td><td>O</td><td></td></tr> <tr><td>03</td><td>O</td><td>O</td><td></td></tr> <tr><td>08</td><td></td><td></td><td>O</td></tr> <tr><td>09</td><td>O</td><td></td><td>O</td></tr> <tr><td>0A</td><td></td><td>O</td><td>O</td></tr> <tr><td>0B</td><td>O</td><td>O</td><td>O</td></tr> <tr><td>10</td><td></td><td></td><td>O</td></tr> <tr><td>11</td><td>O</td><td></td><td>O</td></tr> <tr><td>12</td><td></td><td>O</td><td>O</td></tr> <tr><td>13</td><td>O</td><td>O</td><td>O</td></tr> <tr><td>18</td><td></td><td></td><td>O</td></tr> <tr><td>19</td><td>O</td><td></td><td>O</td></tr> <tr><td>1A</td><td></td><td>O</td><td>O</td></tr> <tr><td>1B</td><td>O</td><td>O</td><td>O</td></tr> </tbody> </table> <p>Circle (O): Trouble P.C. board</p>	P.C. board		Fan Motor		1	2	1	2	01	O			02		O		03	O	O		08			O	09	O		O	0A		O	O	0B	O	O	O	10			O	11	O		O	12		O	O	13	O	O	O	18			O	19	O		O	1A		O	O	1B	O	O	O	I/F	P.C. board communication trouble	All stop	Communication is disrupted between P.C. board in inverter box.	<ul style="list-style-type: none"> Check wiring and connectors involved in communication between P.C. board I/F P.C. board for bad contact or broken wire. Check for failure in outdoor P.C. board (I/F, comp. P.C. board or Fan P.C. board). Check for external noise.
P.C. board		Fan Motor																																																																									
1	2	1	2																																																																								
01	O																																																																										
02		O																																																																									
03	O	O																																																																									
08			O																																																																								
09	O		O																																																																								
0A		O	O																																																																								
0B	O	O	O																																																																								
10			O																																																																								
11	O		O																																																																								
12		O	O																																																																								
13	O	O	O																																																																								
18			O																																																																								
19	O		O																																																																								
1A		O	O																																																																								
1B	O	O	O																																																																								
80		Communication trouble between MCU and Sub MCU	All stop	Communication between MCU and Sub MCU stopped.	<ul style="list-style-type: none"> Operation of power supply reset (OFF for 60 seconds or more) Outdoor I/F PC board trouble check 																																																																						
F01	—	—	Indoor unit	Indoor TCJ sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TCJ sensor connector and wiring. Check resistance characteristics of TCJ sensor. Check for failure in indoor P.C. board. 																																																																				
F02	—	—	Indoor unit	Indoor TC2 sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TC2 sensor connector and wiring. Check resistance characteristics of TC2 sensor. Check for failure in indoor P.C. board. 																																																																				
F03	—	—	Indoor unit	Indoor TC1 sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TC1 sensor connector and wiring. Check resistance characteristics of TC1 sensor. Check for failure in indoor P.C. board. 																																																																				
F04	F04	—	I/F	TD1 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TD1 sensor connector. Check resistance characteristics of TD1 sensor. Check for failure in outdoor P.C. board (I/F). 																																																																				

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Outdoor 7-segment display Sub-code					
F05	F05	—	I/F	TD2 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TD2 sensor connector. Check resistance characteristics of TD2 sensor. Check for failure in outdoor P.C. board (I/F).
F06	F06	01: TE1 sensor trouble 02: TE2 sensor trouble 03: TE3 sensor trouble	I/F	TE1/TE2/TE3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TE1/ TE2/TE3 sensor connectors. Check resistance characteristics of TE1/TE2/ TE3 sensors. Check for failure in outdoor P.C. board (I/F).
F07	F07	01: TL1 sensor trouble 02: TL2 sensor trouble 03: TL3 sensor trouble	I/F	TL1/TL2/TL3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TL1/ TL2/TL3 sensor connector. Check resistance characteristics of TL1/TL2/ TL3 sensor. Check for failure in outdoor P.C. board (I/F).
F08	F08	—	I/F	TO sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TO sensor connector. Check resistance characteristics of TO sensor. Check for failure in outdoor P.C. board (I/F).
F09	F09	01: TG1 sensor trouble 02: TG2 sensor trouble 03: TG3 sensor trouble	I/F	TG1/TG2/TG3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TG1/ TG2/TG3 sensor connectors. Check resistance characteristics of TG1/TG2/ TG3 sensors. Check for failure in outdoor P.C. board (I/F).
F10	—	—	Indoor unit	Indoor TA sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TA sensor connector and wiring. Check resistance characteristics of TA sensor. Check for failure in indoor P.C. board.
F11	—	—	Indoor unit	Indoor TF sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TF sensor connector and wiring. Check resistance characteristics of TF sensor. Check for failure in indoor P.C. board.
F12	F12	01: TS1 sensor trouble 03: TS3 sensor trouble	I/F	TS1/TS3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TS1/ TS3 sensor connector Check resistance characteristics of TS1/TS3 sensor. Check for failure in indoor P.C. board.
F13	F13	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	TH sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Failure in IPM built-in temperature sensor → Replace Compressor P.C. board.
F15	F15	—	I/F	Outdoor temperature sensor wiring trouble (TE1, TL1)	All stop	During compressor operation in HEAT mode, TL1 continuously provides temperature reading higher than indicated by TL1 by at least specified margin for 3 minutes or more.	<ul style="list-style-type: none"> Check installation of TE1 and TL1 sensors. Check resistance characteristics of TE1 and TL1 sensors. Check for outdoor P.C. board (I/F) trouble

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Outdoor 7-segment display Sub-code					
F16	F16	—	I/F	Outdoor pressure sensor wiring trouble (Pd, Ps)	All stop	Readings of high-pressure Pd sensor and low-pressure Ps sensor are switched. Output voltages of both sensors are zero.	<ul style="list-style-type: none"> Check connection of high-pressure Pd sensor connector. Check connection of low-pressure Ps sensor connector. Check for failure in pressure sensors Pd and Ps. Check for trouble in outdoor P.C. board (I/F). Check for compressor poor compression.
F23	F23	—	I/F	Ps sensor trouble	All stop	Output voltage of Ps sensor is zero.	<ul style="list-style-type: none"> Check for connection trouble involving Ps sensor and Pd sensor connectors. Check connection of Ps sensor connector. Check for failure in Ps sensor. Check for compressor poor compression. Check for failure in 4-way valve. Check for failure in outdoor P.C. board (I/F). Check for failure in SV4 circuit.
F24	F24	—	I/F	Pd sensor trouble	All stop	Output voltage of Pd sensor is zero (sensor open-circuited). Pd > 4.15MPa despite compressor having been turned off.	<ul style="list-style-type: none"> Check connection of Pd sensor connector. Check for failure in Pd sensor. Check for failure in outdoor P.C. board (I/F).
F29	—	—	Indoor unit	Other indoor trouble	Stop of corresponding unit	Indoor P.C. board does not operate normally.	<ul style="list-style-type: none"> Check for failure in indoor P.C. board (failure EEPROM)
F31	F31	—	I/F	Outdoor EEPROM trouble	All stop *1	Outdoor P.C. board (I/F) does not operate normally.	<ul style="list-style-type: none"> Check power supply voltage. Check power supply noise. Check for failure in outdoor P.C. board (I/F).
H01	H01	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor breakdown	All stop	Inverter current detection circuit detects overcurrent and shuts system down.	<ul style="list-style-type: none"> Check power supply voltage. (AC380V-415V ± 10%). Check for failure in compressor. Check for possible cause of abnormal overloading. Check for failure in outdoor P.C. board (Compressor).
H02	H02	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor trouble (lockup) MG-CTT trouble	All stop	Overcurrent is detected several seconds after startup of inverter compressor.	<ul style="list-style-type: none"> Check for failure in compressor. Check power supply voltage. (AC380V-415V ± 10%). Check compressor system wiring, particularly for open phase. Check connection of connectors/terminals on compressor P.C. board. Check conductivity of case heater. (Check for refrigerant problem inside compressor.) Check for failure in outdoor P.C. board (Compressor). Check outdoor MG-CTT.
H03	H03	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Current detection circuit trouble	All stop	Current flow of at least specified magnitude is detected despite inverter compressor having been shut turned off.	<ul style="list-style-type: none"> Check current detection circuit wiring. Check failure in outdoor P.C. board (Compressor).

*1 Total shutdown in case of header unit

Continued operation in case of follower unit

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Outdoor 7-segment display					
H05	H05	—	I/F	TD1 sensor miswiring (incomplete insertion)	All stop	Discharge temperature of compressor 1 (TD1) does not increase despite compressor being in operation.	<ul style="list-style-type: none"> Check installation of TD1 sensor. Check connection of TD1 sensor connector and wiring. Check resistance characteristics of TD1 sensor. Check for failure in outdoor P.C. board (I/F).
H06	H06	—	I/F	Activation of low-pressure protection	All stop	Low-pressure Ps sensor detects operating pressure lower than 0.02MPa.	<ul style="list-style-type: none"> Check service valves to confirm full opening (both gas and liquid sides). Check outdoor PMVs for clogging (PMV1, 2, 3). Check for failure in SV4 circuits. Check for failure in low-pressure Ps sensor. Check indoor filter for clogging. Check valve opening status of indoor PMV. Check refrigerant piping for clogging. Check operation of outdoor fan (during heating). Check for insufficiency in refrigerant quantity.
H07	H07	—	I/F	Low oil level protection	All stop	Operating compressor detects continuous state of low oil level for about 2 hours.	<All outdoor units in corresponding line to be checked> <ul style="list-style-type: none"> Check connection and installation of TK1 and TK2 sensors. Check resistance characteristics of TK1 and TK2 sensors. Check for gas or oil leak in same line. Check for refrigerant problem inside compressor casing. Check SV3D, SV3F valves for failure. Check oil return circuit of oil separator for clogging. Check oil equalizing circuit for clogging.
H08	H08	01: TK1 sensor trouble 02: TK2 sensor trouble	I/F	Trouble in temperature sensor for oil level detection	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TK1 sensor connector. Check resistance characteristics of TK1 sensor. Check for failure in outdoor P.C. board (I/F).
					All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> Check connection of TK2 sensor connector. Check resistance characteristics of TK2 sensor. Check for failure in outdoor P.C. board (I/F).
H15	H15	—	I/F	TD2 sensor miswiring (incomplete insertion)	All stop	Discharge temperature of (TD2) does not increase despite compressor 2 being in operation.	<ul style="list-style-type: none"> Check installation of TD2 sensor. Check connection of TD2 sensor connector and wiring. Check resistance characteristics of TD2 sensor. Check for failure in outdoor P.C. board (I/F).

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Outdoor 7-segment display Sub-code					
H16	H16	01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	I/F	Oil level detection circuit trouble	All stop	No temperature change is detected by TK1 despite compressor 1 having been started.	<ul style="list-style-type: none"> Check for disconnection of TK1 sensor. Check resistance characteristics of TK1 sensor. Check for connection trouble involving TK1 and TK2 sensors Check for clogging in oil equalizing circuit capillary. Check for refrigerant entrapment inside compressor.
						No temperature change is detected by TK2 despite compressor 2 having been started.	<ul style="list-style-type: none"> Check for disconnection of TK2 sensor. Check resistance characteristics of TK2 sensor. Check for connection trouble involving TK1 and TK2 sensors Check SV3F valve malfunction. Check for clogging in oil equalizing circuit capillary. Check for refrigerant entrapment inside compressor.
H17	H17	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor trouble (Step-out)	All stop	Judged that the synchronization could not be taken.	<ul style="list-style-type: none"> Check power supply voltage. (AC380V-415V ± 10%). Check for failure in compressor. Check for possible cause of abnormal overloading. Check for failure in outdoor P.C. board (compressor).
L02	L02	—	Indoor unit	Outdoor units model disagreement trouble	Stop of corresponding unit	In case of different outdoor unit (Not corresponded to Air to Air Heat Exchanger type)	<ul style="list-style-type: none"> Check outdoor unit model. (Check whether the outdoor unit corresponds to Air to Air Heat Exchanger type or not.)
L03	—	—	Indoor unit	Duplicated indoor header unit	Stop of corresponding unit	There are more than one header units in group.	<ul style="list-style-type: none"> Check indoor addresses. Check for any change made to remote controller connection (group/individual) since indoor address setting.
L04	L04	—	I/F	Duplicated outdoor line address	All stop	There is duplication in line address setting for outdoor units belonging to different refrigerant piping systems.	<ul style="list-style-type: none"> Check line addresses.
L05	—	—	I/F	Duplicated priority indoor unit (as displayed on priority indoor unit)	All stop	More than one indoor units have been set up as priority indoor unit.	<ul style="list-style-type: none"> Check display on priority indoor unit.
L06	L06	No. of priority indoor units	I/F	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	All stop	More than one indoor units have been set up as priority indoor unit.	<ul style="list-style-type: none"> Check displays on priority indoor unit and outdoor unit.
L07	—	—	Indoor unit	Connection of group control cable to standalone indoor unit	Stop of corresponding unit	There is at least one standalone indoor unit to which group control cable is connected.	<ul style="list-style-type: none"> Check indoor addresses.
L08	L08	—	Indoor unit	Indoor group / addresses not set	Stop of corresponding unit	Address setting has not been performed for indoor units.	<ul style="list-style-type: none"> Check indoor addresses. <p>Note: This code is displayed when power is turned on for the first time after installation.</p>
L09	—	—	Indoor unit	Indoor capacity not set	Stop of corresponding unit	Capacity setting has not been performed for indoor unit.	Set indoor capacity. (DN = 11)

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)																																																																				
Main remote controller	Check code	Outdoor 7-segment display Sub-code																																																																									
L10	L10	—	I/F	Outdoor capacity not set	All stop	Initial setting of I/F P.C. board has not been implemented.	<ul style="list-style-type: none"> Check model setting of P.C. board for servicing outdoor I/F P.C. board. 																																																																				
L20	—	—	Network adaptor Indoor unit	Duplicated central control address	All stop	There is duplication in central control address setting.	<ul style="list-style-type: none"> Check central control addresses. 																																																																				
L23	—	—	I/F	SW setting mistake	All stop	Outdoor P.C. board (I/F) does not operate normally.	<ul style="list-style-type: none"> Check switch setting of outdoor P.C. board (I/F). 																																																																				
L28	L28	—	I/F	Too many outdoor units connected	All stop	There are more than 5 outdoor units.	<ul style="list-style-type: none"> Check No. of outdoor units connected (Only up to 5 units per system allowed). Check communication lines between outdoor units. Check for failure in outdoor P.C. board (I/F). 																																																																				
L29	L29	<table border="1"> <thead> <tr> <th colspan="2">P.C.board</th> <th colspan="2"></th> </tr> <tr> <th>Compressor</th> <th>Fan Motor</th> <th>1</th> <th>2</th> </tr> </thead> <tbody> <tr> <td>01</td> <td>O</td> <td></td> <td></td> </tr> <tr> <td>02</td> <td>O</td> <td></td> <td></td> </tr> <tr> <td>03</td> <td>O</td> <td>O</td> <td></td> </tr> <tr> <td>08</td> <td></td> <td>O</td> <td></td> </tr> <tr> <td>09</td> <td>O</td> <td></td> <td>O</td> </tr> <tr> <td>0A</td> <td></td> <td>O</td> <td>O</td> </tr> <tr> <td>0B</td> <td>O</td> <td>O</td> <td>O</td> </tr> <tr> <td>10</td> <td></td> <td></td> <td>O</td> </tr> <tr> <td>11</td> <td>O</td> <td></td> <td>O</td> </tr> <tr> <td>12</td> <td></td> <td>O</td> <td>O</td> </tr> <tr> <td>13</td> <td>O</td> <td>O</td> <td>O</td> </tr> <tr> <td>18</td> <td></td> <td></td> <td>O</td> </tr> <tr> <td>19</td> <td>O</td> <td></td> <td>O</td> </tr> <tr> <td>1A</td> <td></td> <td>O</td> <td>O</td> </tr> <tr> <td>1B</td> <td>O</td> <td>O</td> <td>O</td> </tr> </tbody> </table> <p>Circle (O): Trouble P.C. board</p>	P.C.board				Compressor	Fan Motor	1	2	01	O			02	O			03	O	O		08		O		09	O		O	0A		O	O	0B	O	O	O	10			O	11	O		O	12		O	O	13	O	O	O	18			O	19	O		O	1A		O	O	1B	O	O	O	I/F	Trouble in No. of P.C. board	All stop	Insufficient number of P.C. board are detected when power is turned on.	<ul style="list-style-type: none"> Check model setting of P.C. board for servicing outdoor I/F P.C. board. Check connection of UART communication connector. Check compressor P.C. board, fan P.C. board, and I/F P.C. board for failure.
P.C.board																																																																											
Compressor	Fan Motor	1	2																																																																								
01	O																																																																										
02	O																																																																										
03	O	O																																																																									
08		O																																																																									
09	O		O																																																																								
0A		O	O																																																																								
0B	O	O	O																																																																								
10			O																																																																								
11	O		O																																																																								
12		O	O																																																																								
13	O	O	O																																																																								
18			O																																																																								
19	O		O																																																																								
1A		O	O																																																																								
1B	O	O	O																																																																								
L30	L30	Detected indoor address	Indoor unit	Indoor external interlock (External abnormal input)	Stop of corresponding unit	<ul style="list-style-type: none"> Indoor unit has been shut down due to external abnormal input signal. 	<p>When external device is connected:</p> <ol style="list-style-type: none"> Check for trouble in external device. Check for trouble in indoor P.C. board. <p>When external device is not connected:</p> <ol style="list-style-type: none"> Check for trouble in indoor P.C. board. 																																																																				
—	L31	—	I/F	Extended IC trouble	Continued operation	There is part failure in P.C. board (I/F).	Check outdoor P.C. board (I/F).																																																																				
P01	—	—	Indoor unit	Indoor fan motor trouble	Stop of corresponding unit		<ul style="list-style-type: none"> Check the lock of fan motor (AC fan). Check wiring. 																																																																				
P03	P03	—	I/F	Discharge temperature TD1 trouble	All stop	Discharge temperature (TD1) exceeds 115 °C.	<ul style="list-style-type: none"> Check outdoor service valves (gas side, liquid side) to confirm full opening. Check outdoor PMVs (PMV1, 2, 3, 4) for clogging. Check resistance characteristics of TD1 sensor. Check for insufficiency in refrigerant quantity. Check for failure in 4-way valve. Check for leakage of SV4 circuit. Check SV4 circuit (wiring or installation trouble in SV41 or SV42). 																																																																				

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Main remote controller	Check code	Outdoor 7-segment display Sub-code					
P04	P04	1*: Compressor 1 side 2*: Compressor 2 side	I/F	Activation of high-pressure SW	All stop	High-pressure SW is activated.	<ul style="list-style-type: none"> Check connection of high-pressure SW connector. Check for failure in Pd pressure sensor. Check outdoor service valves (gas side, liquid side) to confirm full opening. Check for failure in outdoor fan. Check for failure in outdoor fan motor. Check outdoor PMVs (PMV1, 2, 3) for clogging. Check indoor/outdoor heat exchangers for clogging. Check for short-circuiting of outdoor suction/discharge air flows. Check for failure in outdoor P.C. board (I/F). Check for trouble in indoor fan system (possible cause of air flow reduction). Check opening status of indoor PMV. Check indoor-outdoor communication line for wiring trouble. Check for failure operation of check valve in discharge pipe convergent section. Check gas balancing SV4 valve circuit. Check for refrigerant overcharging.
P05	P05	00: Power detection trouble 01: Open phase 02: Power supply miswiring	I/F	Power detection trouble / Open phase detection / Power supply miswiring	All stop	<ul style="list-style-type: none"> Open phase is detected when power is turned on. Inverter DC voltage is too high (overvoltage) or too low (undervoltage). 	<ul style="list-style-type: none"> Check for failure in outdoor P.C. board (I/F). Check wiring of outdoor power supply. Check power supply voltage.
		1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor Vdc trouble			
P07	P07	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Heat sink overheating trouble	All stop	Temperature sensor built into IPM (TH) is overheated.	<ul style="list-style-type: none"> Check outdoor fan system trouble. Check IPM and heat sink for thermal performance for failure installation. (e.g. mounting screws and thermal conductivity) Check for failure in Compressor P.C. board. (failure IPM built-in temperature sensor (TH))
		01: Compressor 1 heat sink trouble 02: Compressor 2 heat sink trouble 04: Heat sink dew condensation	I/F	Heat sink overheating trouble Heat sink dew condensation trouble	All stop	Condensation detection on heat sink has occurred four times or more in operation. Temperature sensor built into IPM (TH) is overheated.	<ul style="list-style-type: none"> Check outdoor fan system trouble. Check IPM and heat sink for thermal performance for troubled installation. (e.g. mounting screws and thermal conductivity) Check for failure in compressor P.C. board. (failure IPM built-in temperature sensor (TH)) Check shortage of refrigerant. Check outdoor service valves. Check connection of TL2 sensor. Check resistance characteristics of TL2 sensor. Check resistance characteristics of TO sensor. Check malfunctions of Pd and Ps sensors. Check outdoor I/F P.C. board malfunction. Check PMV2 and PMV3

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Outdoor 7-segment display Sub-code					
P10	P10	Detected indoor address	Indoor unit	Indoor overflow trouble	All stop	<ul style="list-style-type: none"> • Float switch operates. • Float switch circuit is open-circuited or disconnected at connector. 	<ul style="list-style-type: none"> • Check float switch connector. • Check operation of drain pump. • Check drain pump circuit. • Check drain pipe for clogging. • Check for failure in indoor P.C. board.
P11	—	—	I/F	Outdoor heat exchanger freeze trouble	All stop	<ul style="list-style-type: none"> • Outdoor heat exchanger remaining frost detection has occurred eight times or more due to abnormal frost formation in heating operation. 	<ul style="list-style-type: none"> • Check shortage of refrigerant. • Check connection of TE1, TE2 and TE3 sensors. • Check resistance characteristics of TE1, TE2, and TE3 sensors. • Check disconnection of TS1 sensor. • Check resistance characteristics of TS1 sensor. • Check outdoor I/F P.C. board malfunction. • Check operation of 4 way valve. • Check operation of outdoor PMV (1, 2, 3). • Check short circuit from outlet air to inlet air.
P12	—	—	Indoor unit	Indoor fan motor trouble	Stop of corresponding unit	<ul style="list-style-type: none"> • Motor speed measurements continuously deviate from target value. • Overcurrent protection is activated. 	<ul style="list-style-type: none"> • Check connection of fan connector and wiring. • Check for failure in fan motor. • Check for failure in indoor P.C. board. • Check impact of outside air treatment (OA).
P13	P13	—	I/F	Outdoor liquid backflow detection trouble	All stop	<p><During cooling operation> When system is in cooling operation, high pressure is detected in the unit that has been turned off.</p> <p><During heating operation> When system is in heating operation, low pressure is detected to be high in unit that has been turned off.</p>	<ul style="list-style-type: none"> • Check full-close operation of outdoor PMV (1, 2, 3, 4). • Check for failure in Pd or Ps sensor. • Check failure in outdoor P.C. board (I/F). • Check capillary of oil separator oil return circuit for clogging. • Check for leakage of check valve in discharge pipe
P15	P15	01: TS condition	I/F	Gas leak detection (TS1 condition)	All stop	<p>Protective shutdown due to sustained suction temperature at or above judgment criterion for at least 10 minutes is repeated four times or more.</p> <p><TS trouble judgment criterion> In cooling operation: 60 °C In heating operation: 40 °C</p>	<ul style="list-style-type: none"> • Check for insufficiency in refrigerant quantity. • Check outdoor service valves (gas side, liquid side) to confirm full opening. • Check PMVs (PMV1, 2, 3, 4) for clogging. • Check resistance characteristics of TS1 sensor. • Check for failure in 4-way valve. • Check SV4 circuit for leakage
		02: TD condition	I/F	Gas leak detection (TD condition)	All stop	<p>Protective shutdown due to sustained discharge temperature (TD1 or TD2) at or above 108 °C for at least 10 minutes is repeated four times or more.</p>	<ul style="list-style-type: none"> • Check for insufficiency in refrigerant quantity. • Check PMVs (PMV 1, 2, 3, 4) for clogging. • Check resistance characteristics of TD1 and TD2 sensors. • Check indoor filter for clogging. • Check piping for clogging. • Check SV4 circuit (for leakage or coil installation trouble).

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Outdoor 7-segment display Sub-code					
P17	P17	—	I/F	Discharge temperature TD2 trouble	All stop	Discharge temperature (TD2) exceeds 115 °C.	<ul style="list-style-type: none"> Check outdoor service valves (gas side, liquid side) to confirm full opening. Check outdoor PMVs (PMV1, 2, 3, 4) for clogging. Check resistance characteristics of TD2 sensor. Check for failure in 4-way valve. Check SV4 circuit for leakage. Check SV4 circuit (for wiring or installation trouble involving SV41 and SV42).
P19	P19	Detected outdoor unit No.	I/F	4-way valve reversing trouble	All stop	Abnormal refrigerating cycle data is collected during heating operation.	<ul style="list-style-type: none"> Check for failure in main body of 4-way valve. Check for coil failure in 4-way valve and loose connection of its connector. Check resistance characteristics of TS1 and TE1,TE2 sensors. Check output voltage characteristics of Pd and Ps pressure sensors. Check for wiring trouble involving TE1 and TL1 sensors.
P20	P20	—	I/F	Activation of high-pressure protection	All stop	<p><During cooling operation> Pd sensor detects pressure equal to or greater than 3.85 MPa.</p> <p><During heating operation> Pd sensor detects pressure equal to or greater than 3.6 MPa.</p>	<ul style="list-style-type: none"> Check for failure in Pd pressure sensor. Check service valves (gas side, liquid side) to confirm full opening. Check for failure in outdoor fan. Check for failure in outdoor fan motor. Check outdoor PMV (PMV1, 2, 3, 4) for clogging. Check indoor/outdoor heat exchangers for clogging. Check for short-circuiting of outdoor suction/discharge air flows. Check for failure in outdoor P.C. board (I/F). Check for failure in indoor fan system (possible cause of air flow reduction). Check opening status of indoor PMV. Check indoor-outdoor communication line for wiring trouble. Check for trouble operation of check valve in discharge pipe convergent section. Check gas balancing SV4 valve circuit. Check for refrigerant overcharging.

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Outdoor 7-segment display					
P22	P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	Fan INV. P.C. board	Outdoor fan P.C. board trouble	All stop	Protected operation of Fan inverter P.C. board	<ul style="list-style-type: none"> • Check fan motor. • Check for failure in fan P.C. board. • Check connection of fan motor connector. • Check power voltage of the main power supply.
P26	P26	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	IPM, Compressor shortcircuit protection trouble	All stop	Overcurrent is momentarily detected during startup of compressor.	<ul style="list-style-type: none"> • Check connector connection and wiring on compressor P.C. board. • Check for failure in compressor (layer shortcircuit). • Check for failure in outdoor P.C. board (Compressor).
P29	P29	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor position detection circuit trouble	All stop	Position detection is not going on normally.	<ul style="list-style-type: none"> • Check wiring and connector connection. • Check for compressor layer short-circuit. • Check for failure in compressor P.C. board.
P31	—	—	Indoor unit	Other indoor trouble (group follower unit trouble)	Stop of corresponding unit	There is trouble in other indoor unit in group, resulting in detection of E07/L07/L03/L08.	<ul style="list-style-type: none"> • Check indoor P.C. board.

Check codes Displayed on by Central Control Device

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Check code	Outdoor 7-segment display Sub-code					
E03	—	—	Indoor unit	Indoor-remote controller communication trouble (detected at indoor end)	Stop of corresponding unit	There is no communication from remote controller (including wireless) or network adaptor.	<ul style="list-style-type: none"> Check remote controller and network adaptor wiring.
C05	—		Central control device	Central control device transmission trouble	Continued operation	Central control device is unable to transmit signal.	<ul style="list-style-type: none"> Check for failure in central control device. Check for failure in central control communication line. Check termination resistance setting.
C06	—		Central control device	Central control device reception trouble	Continued operation	Central control device is unable to receive signal.	<ul style="list-style-type: none"> Check for failure in central control device. Check for failure in central control communication line. Check terminator resistor setting. Check power supply for devices at other end of central control communication line. Check failure in P.C. boards of devices at other end of central control communication line.
C12	—		General-purpose device I/F	Batch alarm for general-purpose device control interface	Continued operation	Trouble signal is input to control interface for general-purpose devices.	<ul style="list-style-type: none"> Check trouble input.
P30	Differs according to nature of alarm-causing trouble (L20 displayed.)		Central control device	Group control follower unit trouble	Continued operation	Trouble occurs in follower unit under group control. ([P30] is displayed on central control remote controller.)	<ul style="list-style-type: none"> Check check code of unit that has generated alarm.
				Duplicated central control address	Continued operation	There is duplication in central control addresses.	<ul style="list-style-type: none"> Check address settings.

▼ Points to Note When Servicing Compressor

(1) When checking the outputs of inverters, remove the wiring from all the compressors.

▼ How to Check Inverter Output

- (1) Turn off the power supply.
- (2) Remove compressor leads from the compressor P.C. board.
(The model with two compressor should remove the wiring for two sets (6 leads).)
- (3) Turn on the power supply and start cooling or heating operation.
- (4) Check the output voltage across each pair of inverter-side. If the result is unsatisfactory according to the judgment criteria given in the table below, replace the compressor P.C. board.


No.	Measured leads	Criterion
1	CN201 - CN202	380~580V
2	CN202 - CN203	380~580V
3	CN203 - CN201	380~580V

▼ How to Check Resistance of Compressor Winding



- (1) Turn off the power supply.
- (2) Remove compressor leads from the compressor P.C. board. (Be sure to remove all the leads.)
- (3) With each compressor, check the phase-to-phase winding resistances and winding-to-outdoor cabinet resistance using a multimeter.
 - Earth trouble?
→ It is normal if the winding-to-outdoor cabinet resistance is $10M\Omega$ or more.
 - Inter-winding short circuit?
→ It is normal if the phase-to-phase resistances are in the $0.1\text{--}1.0\Omega$ range. (Use a digital multimeter.)



▼ How to Check Outdoor Fan Motor



- (1) Turn off the power supply.
- (2) Remove fan motor leads from the fan P.C. board for the outdoor fan.
- (3) Rotate the fan by hand. If the fan does not turn, the fan motor is faulty (locked up). Replace the fan motor. If the fan turns, measure the phase-to-phase winding resistances using a multimeter. It is normal if the measurements are in the 8.1-9.9 range. (Use a digital multimeter.)


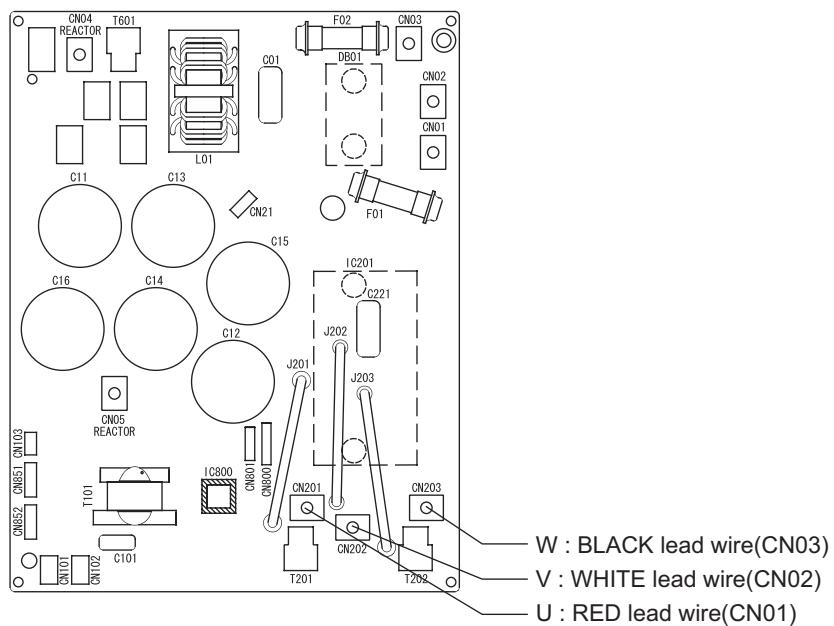




11-5. Diagnostic Procedure for Each Check Code (Indoor Unit)


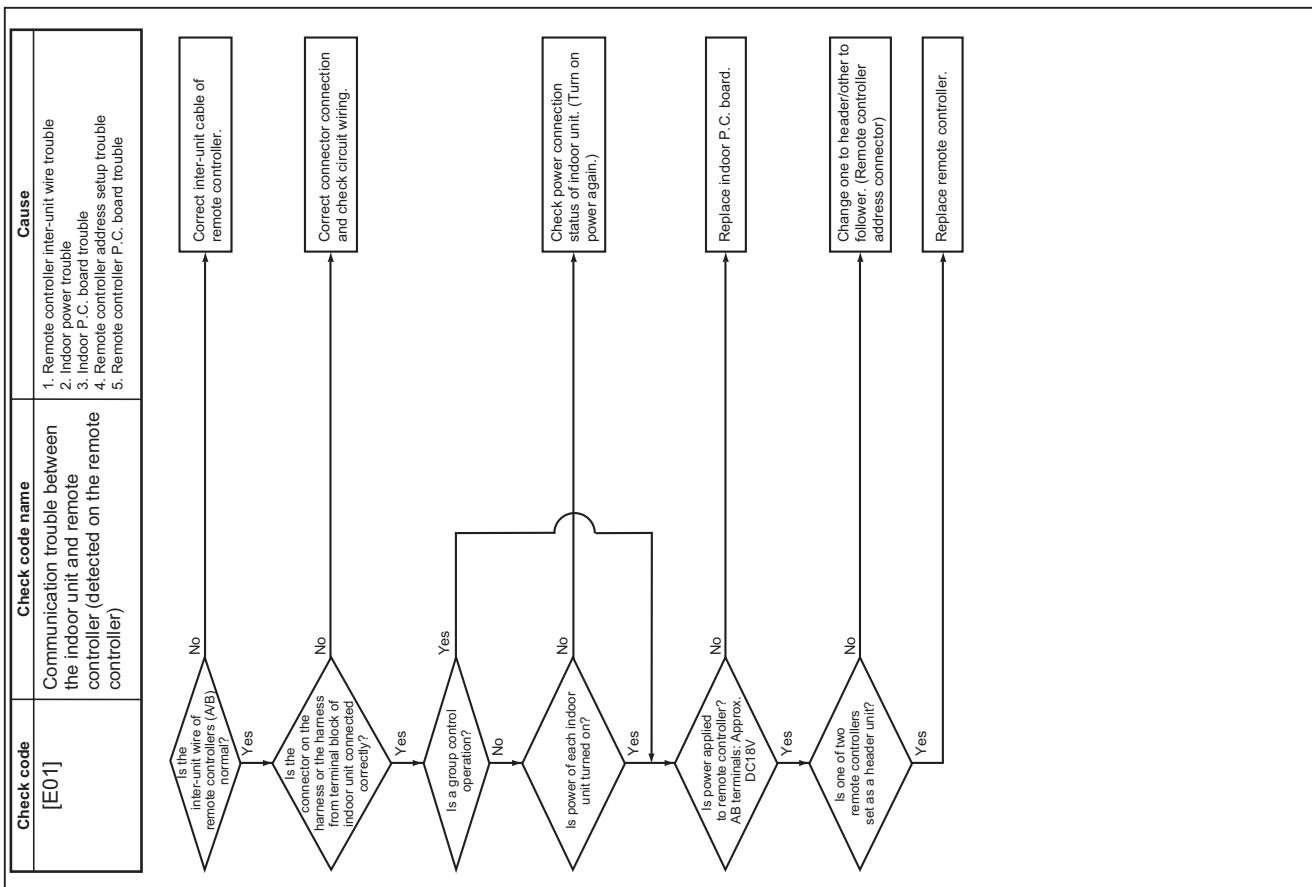
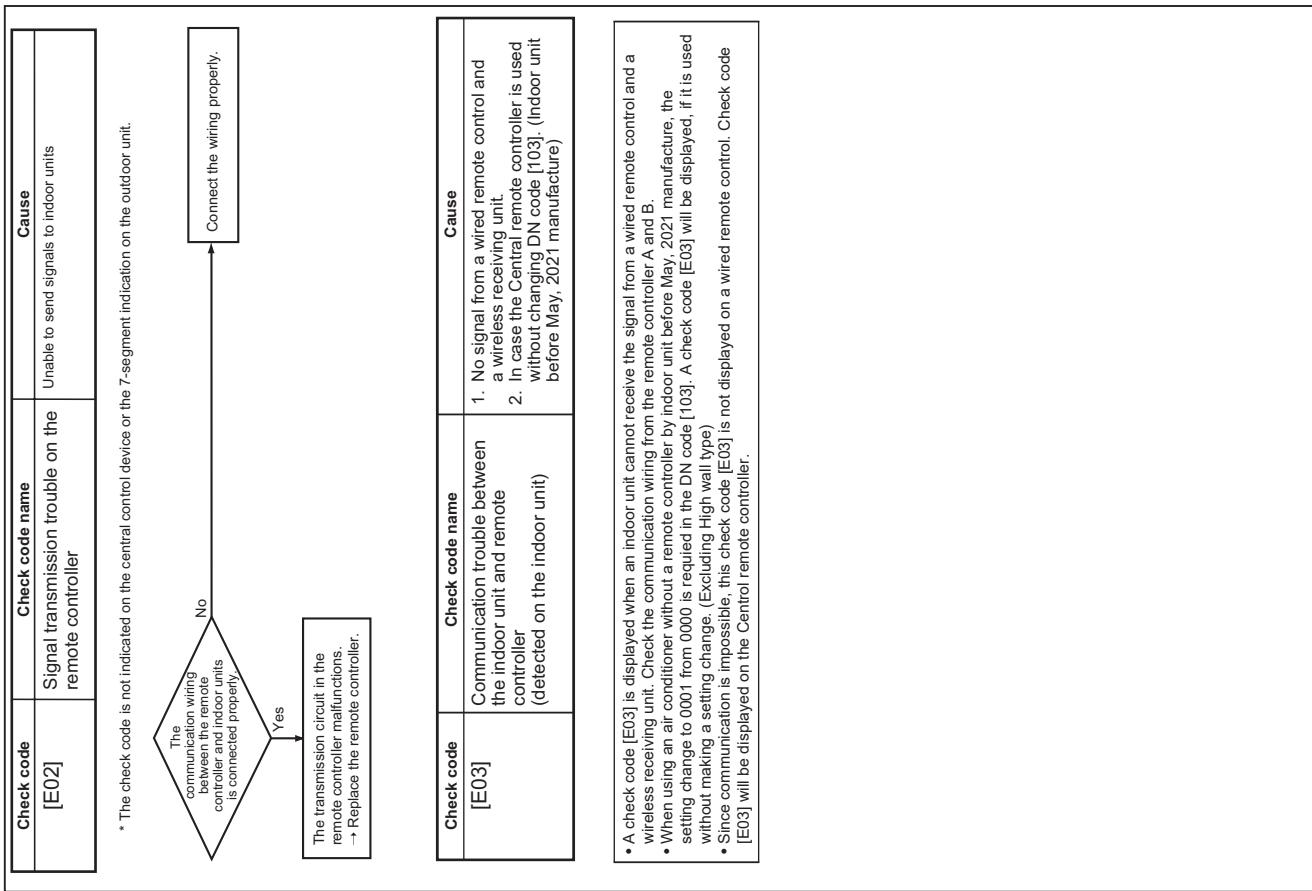


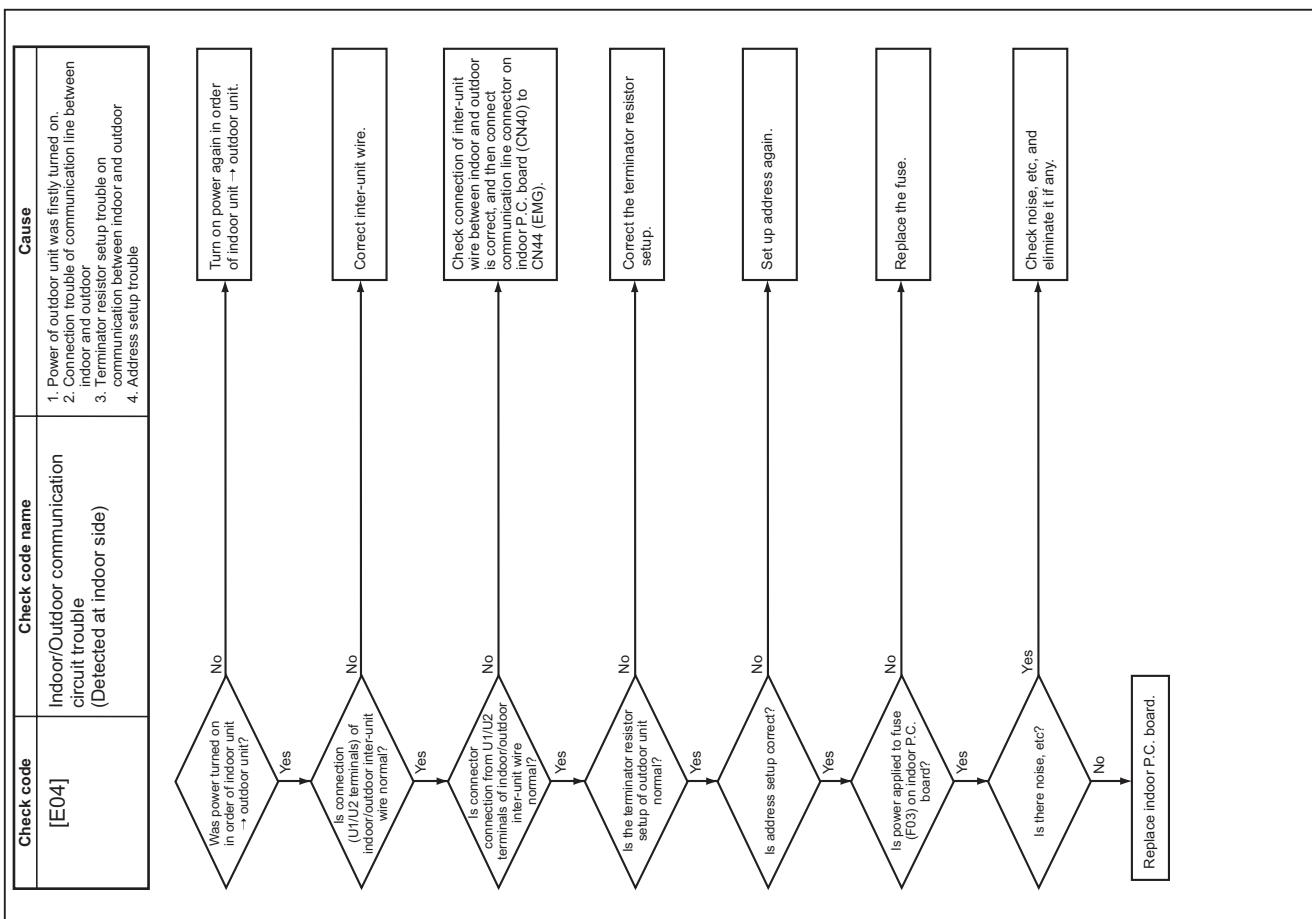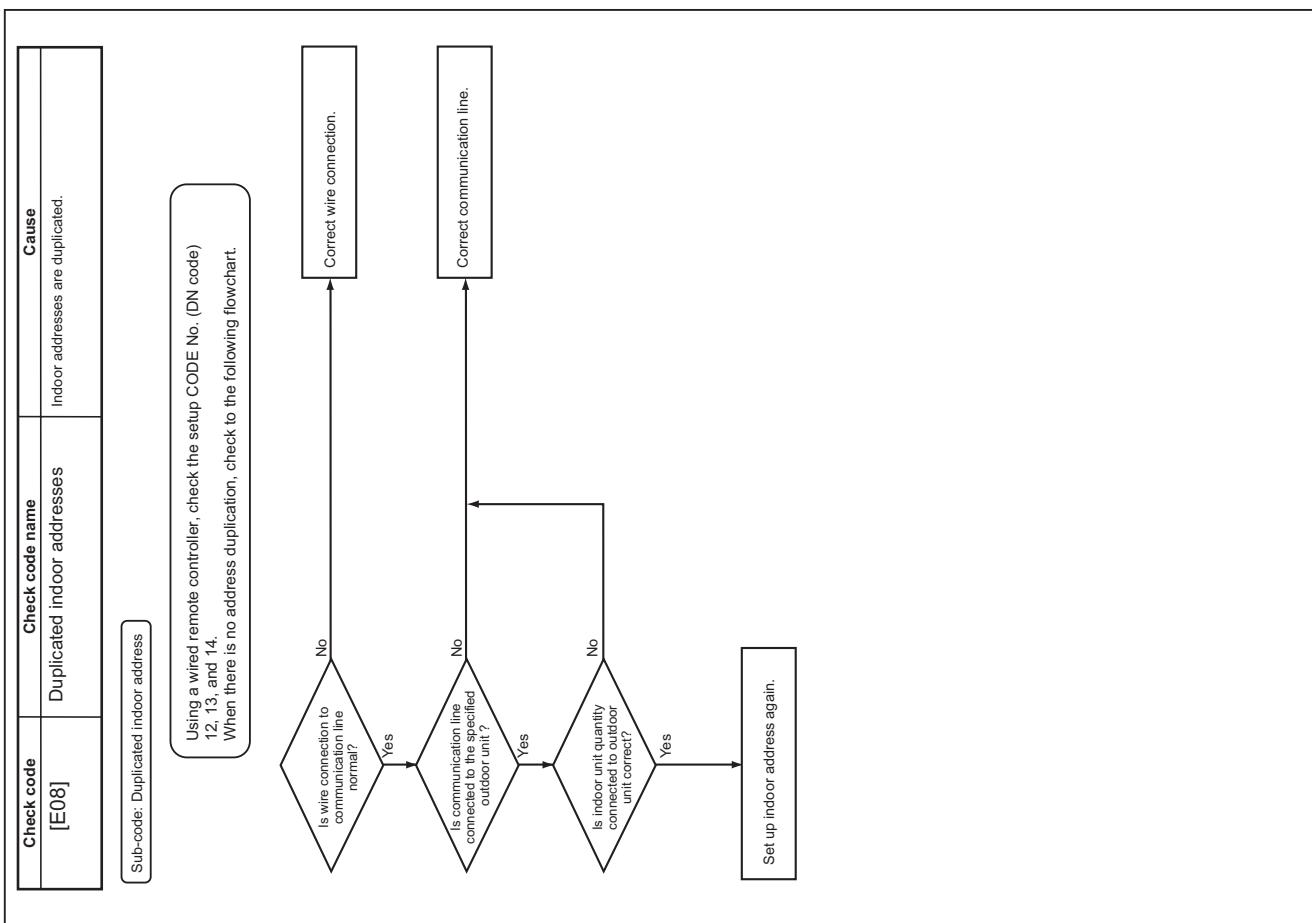


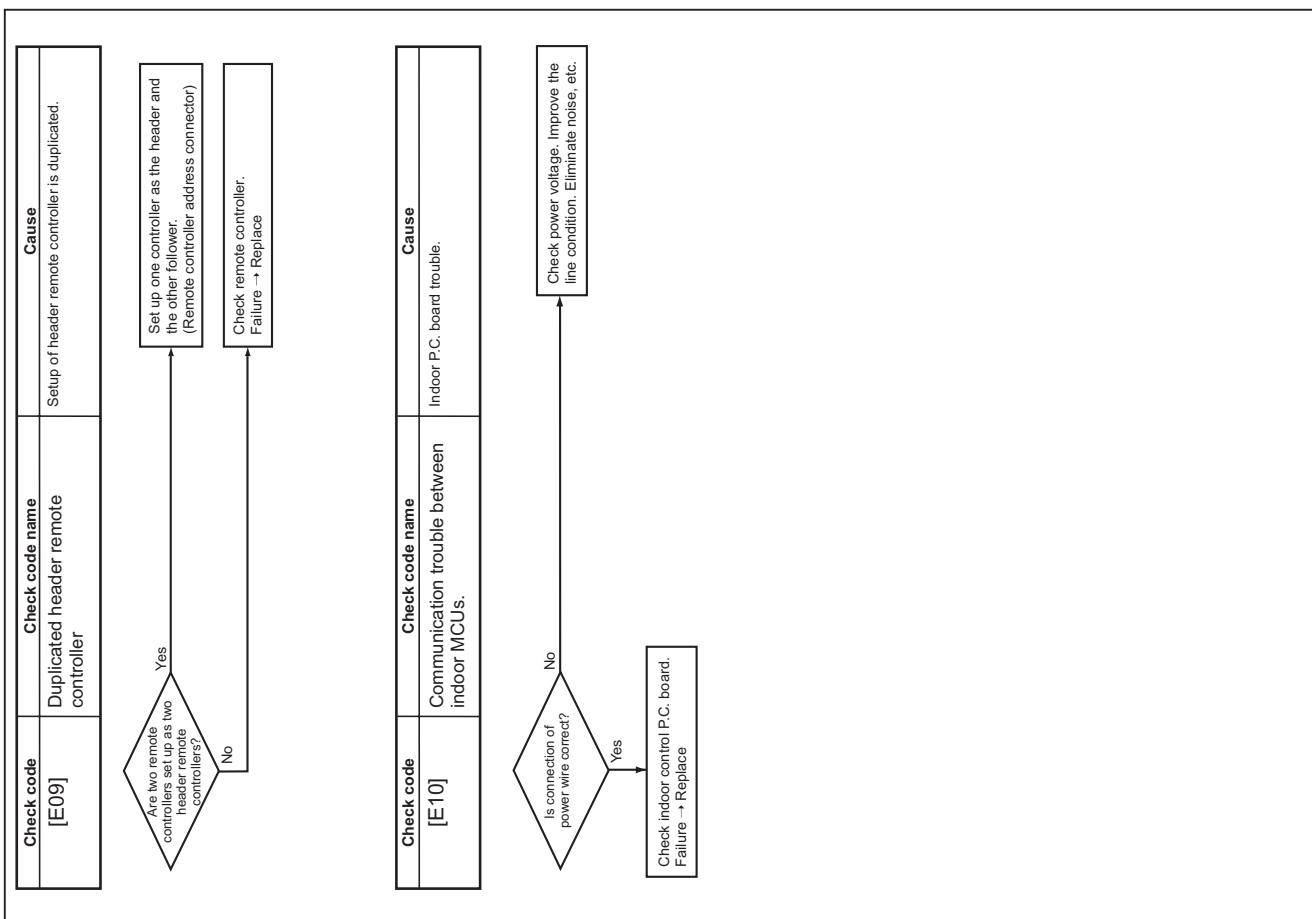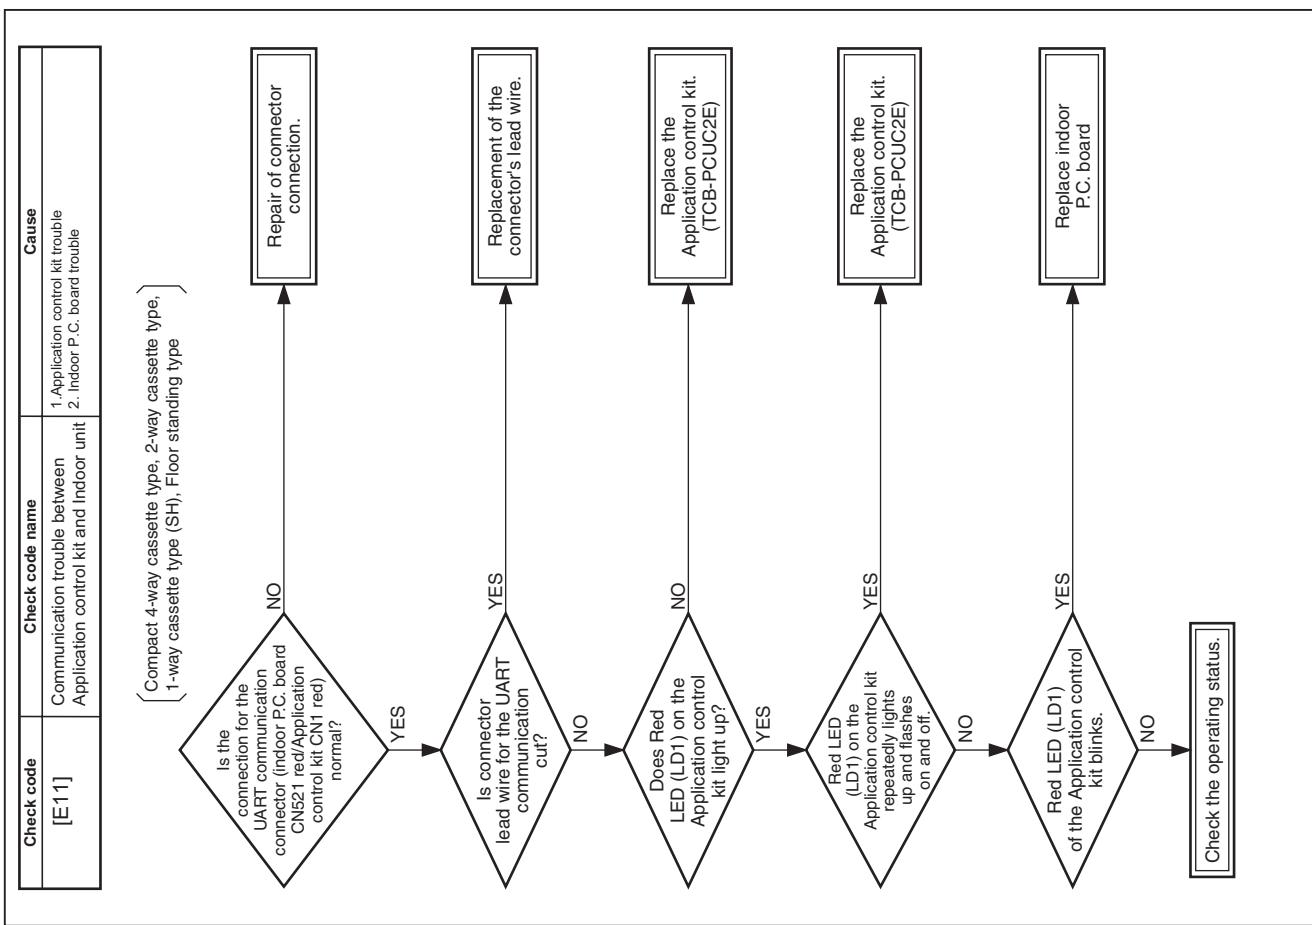

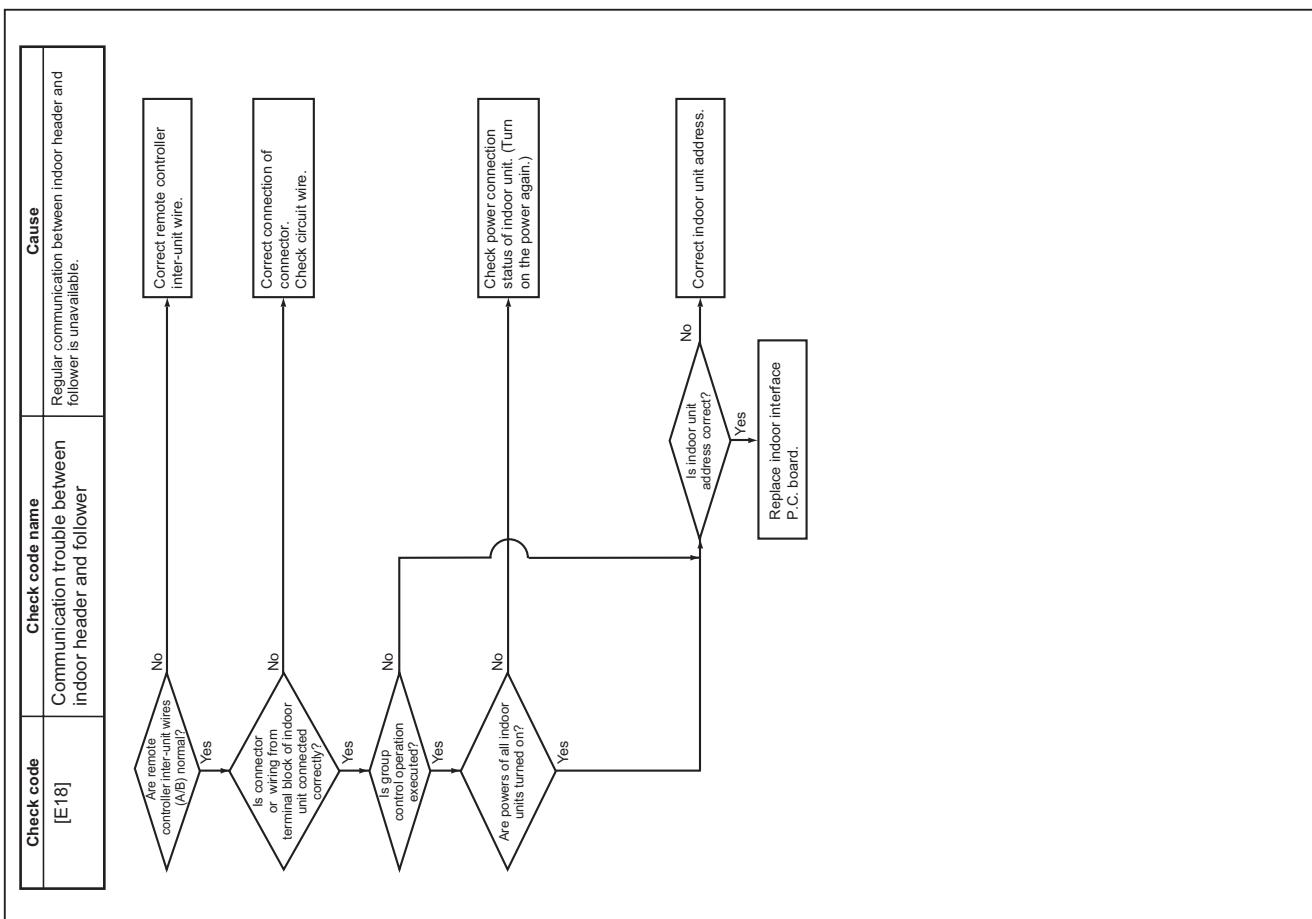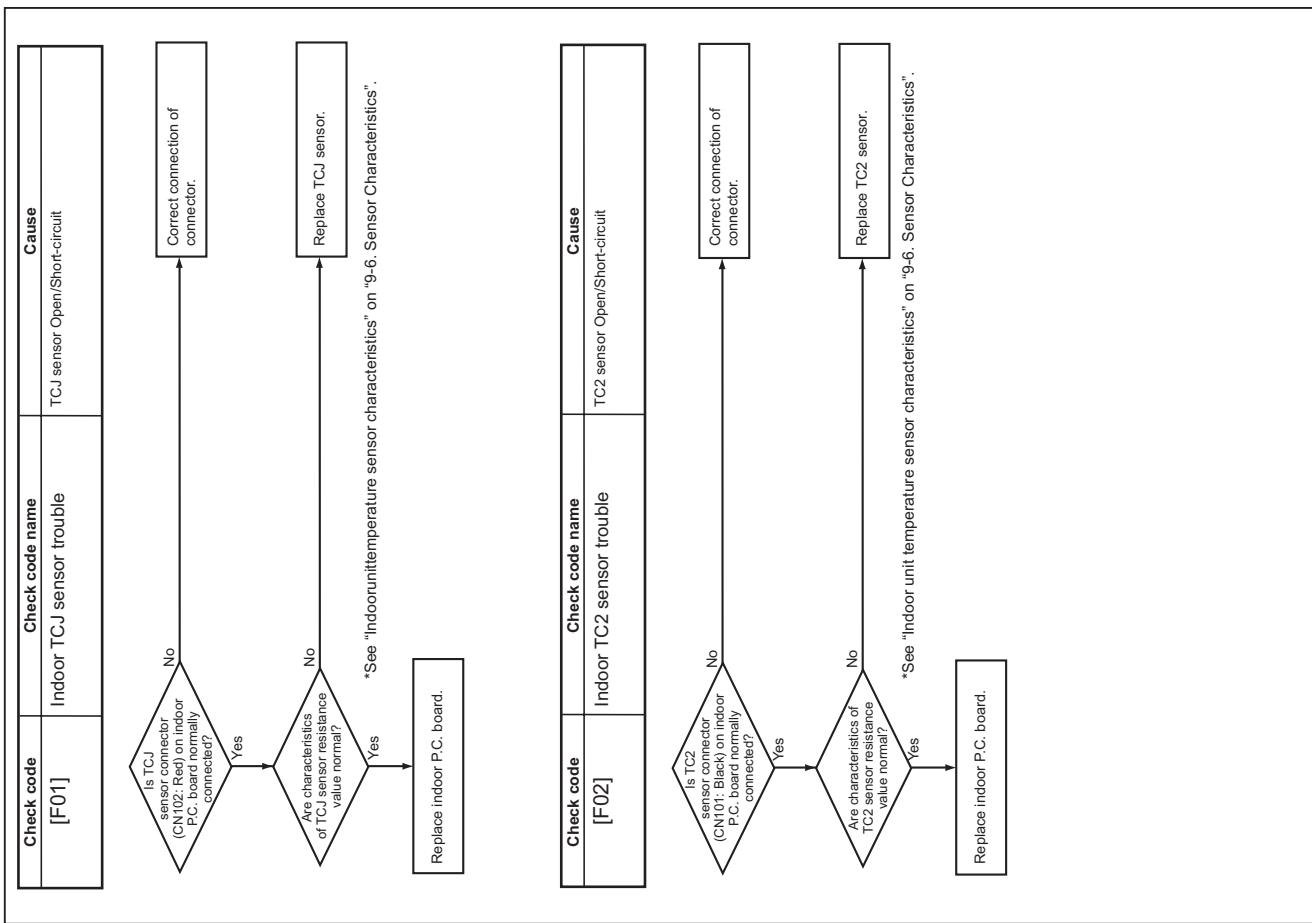


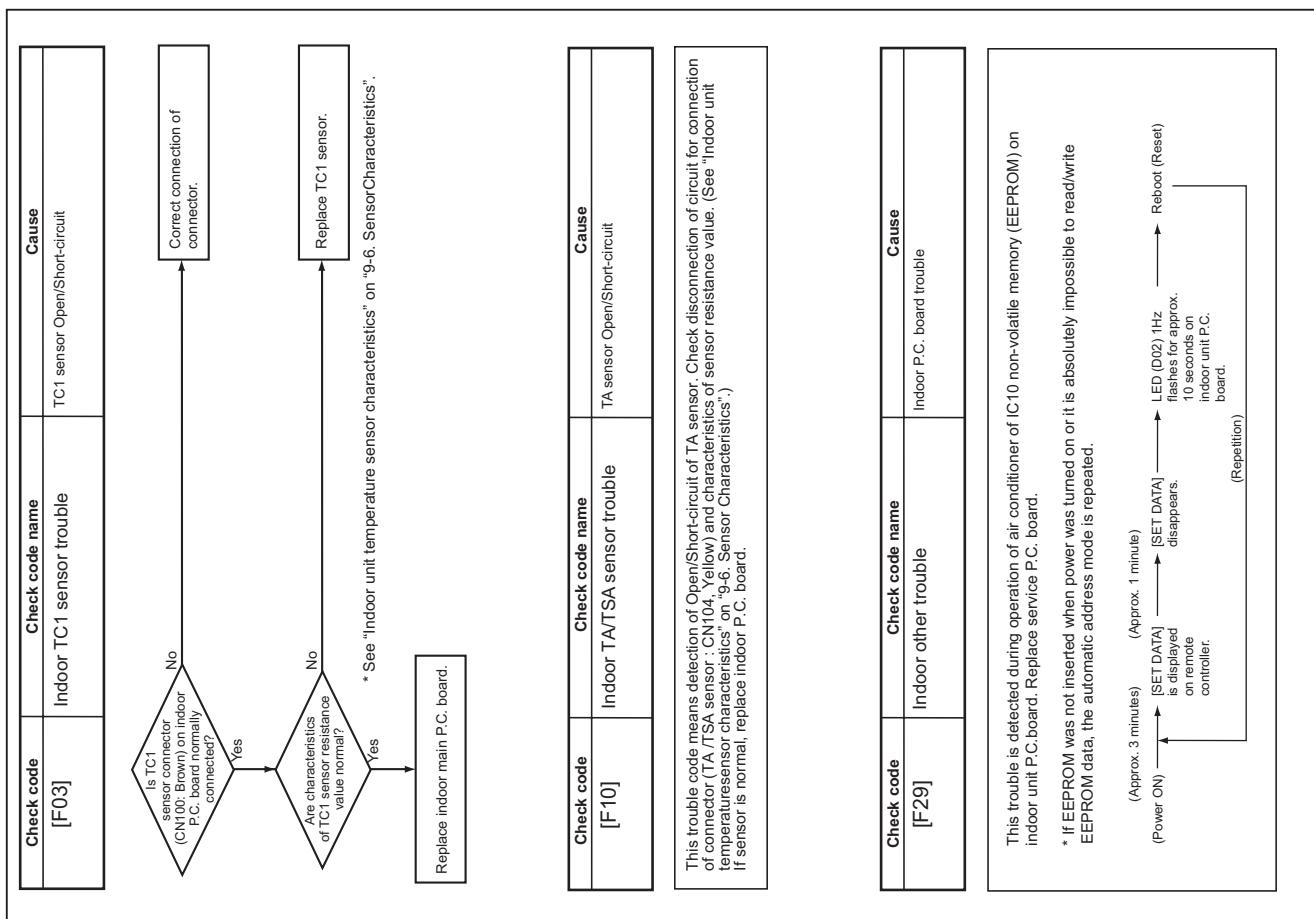
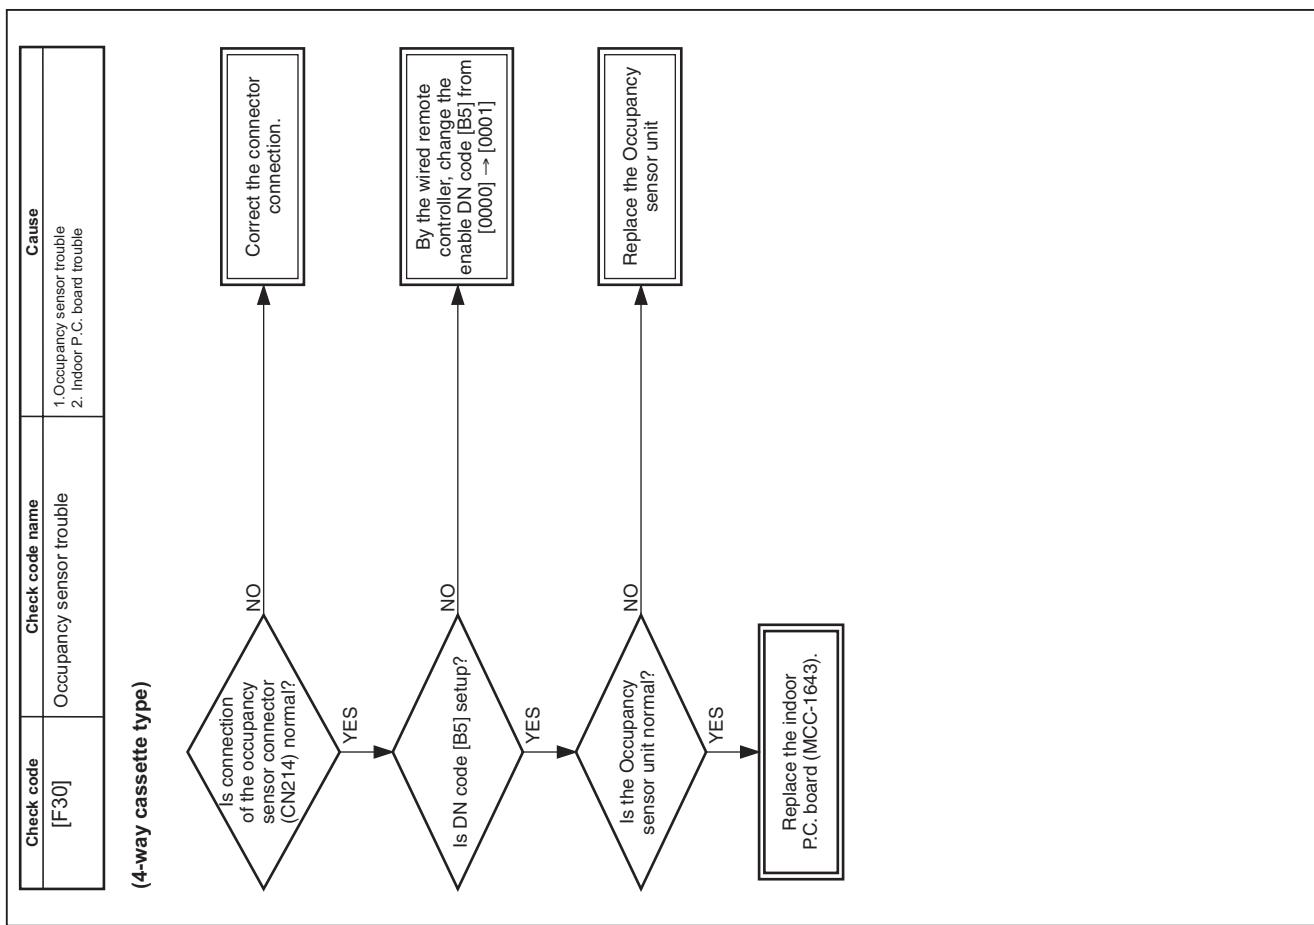


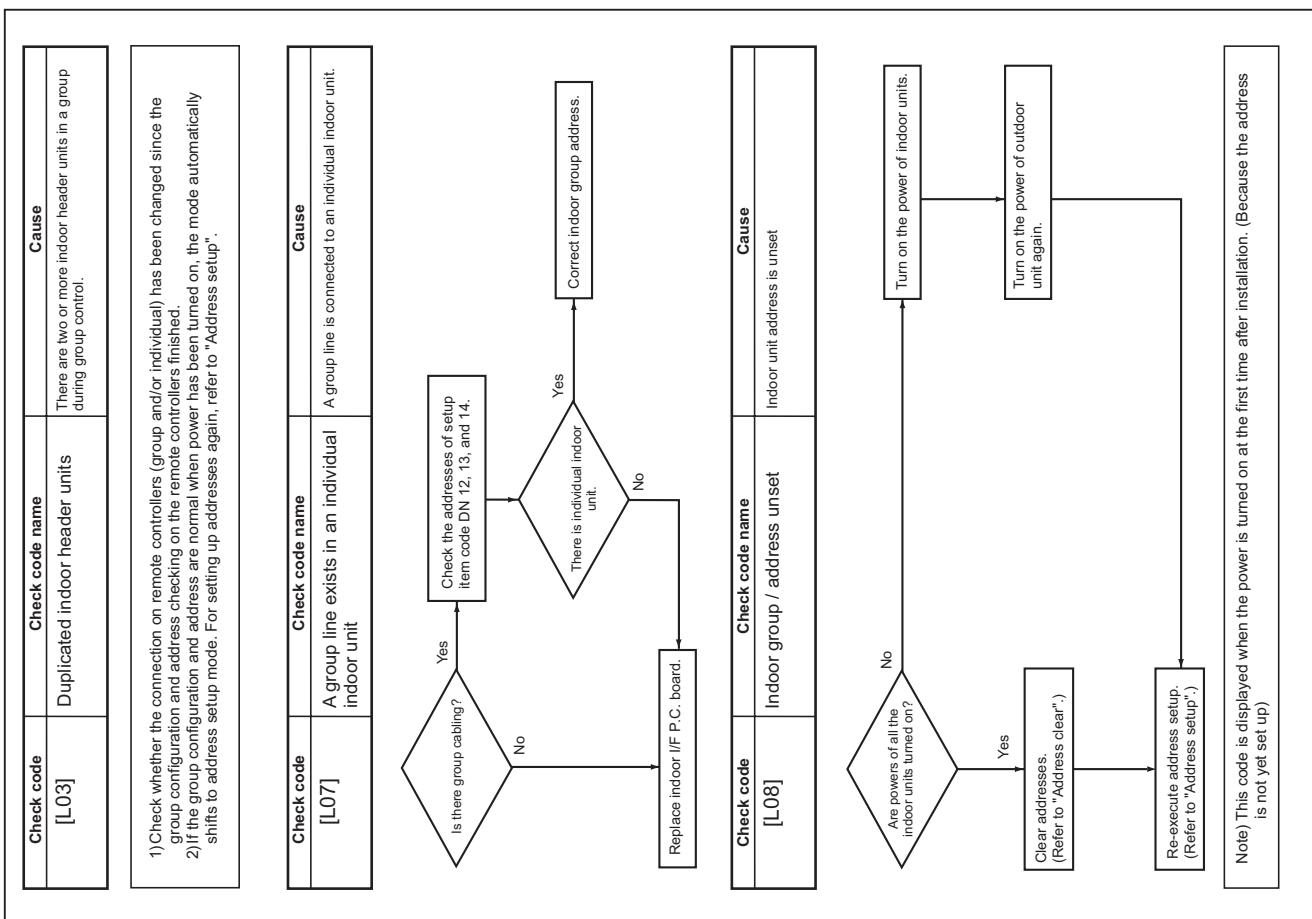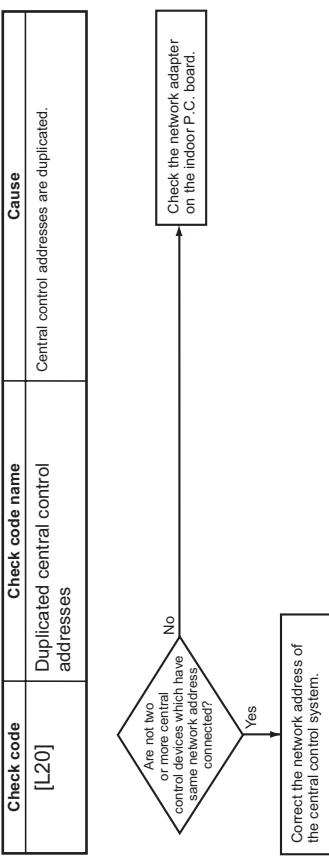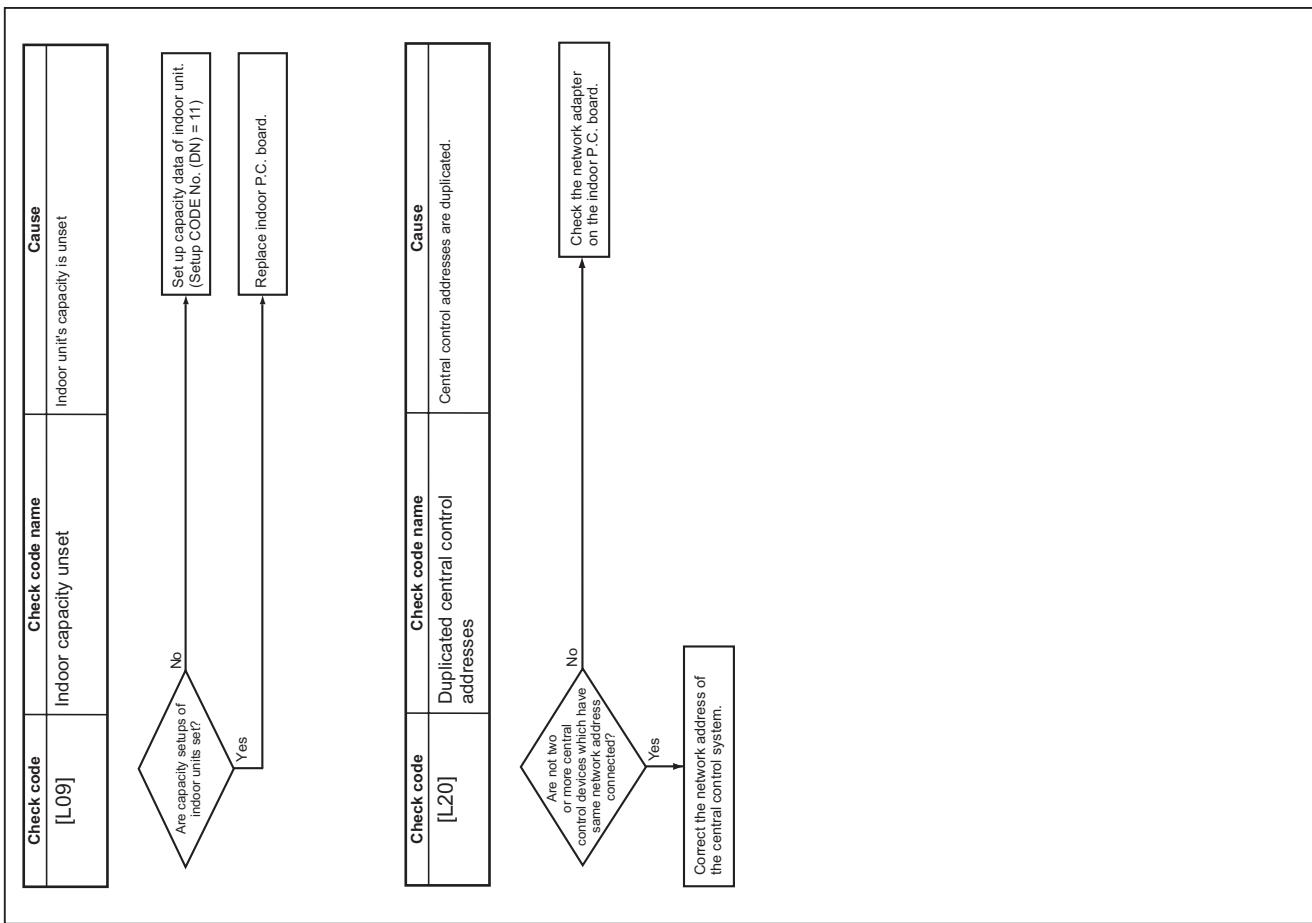

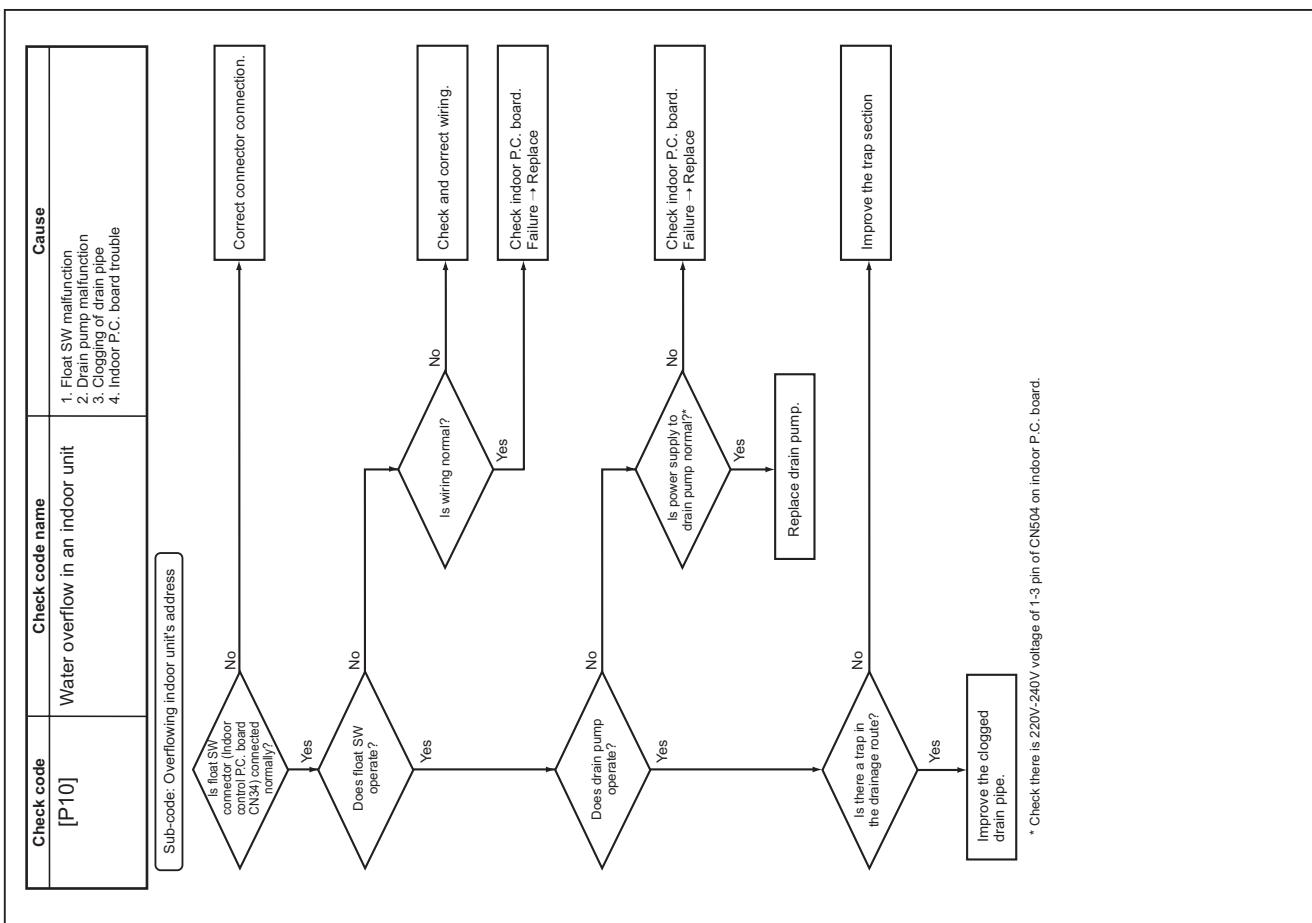

* Check there is 220V/240V voltage of 1-3 pin of CN504 on indoor P.C. board.

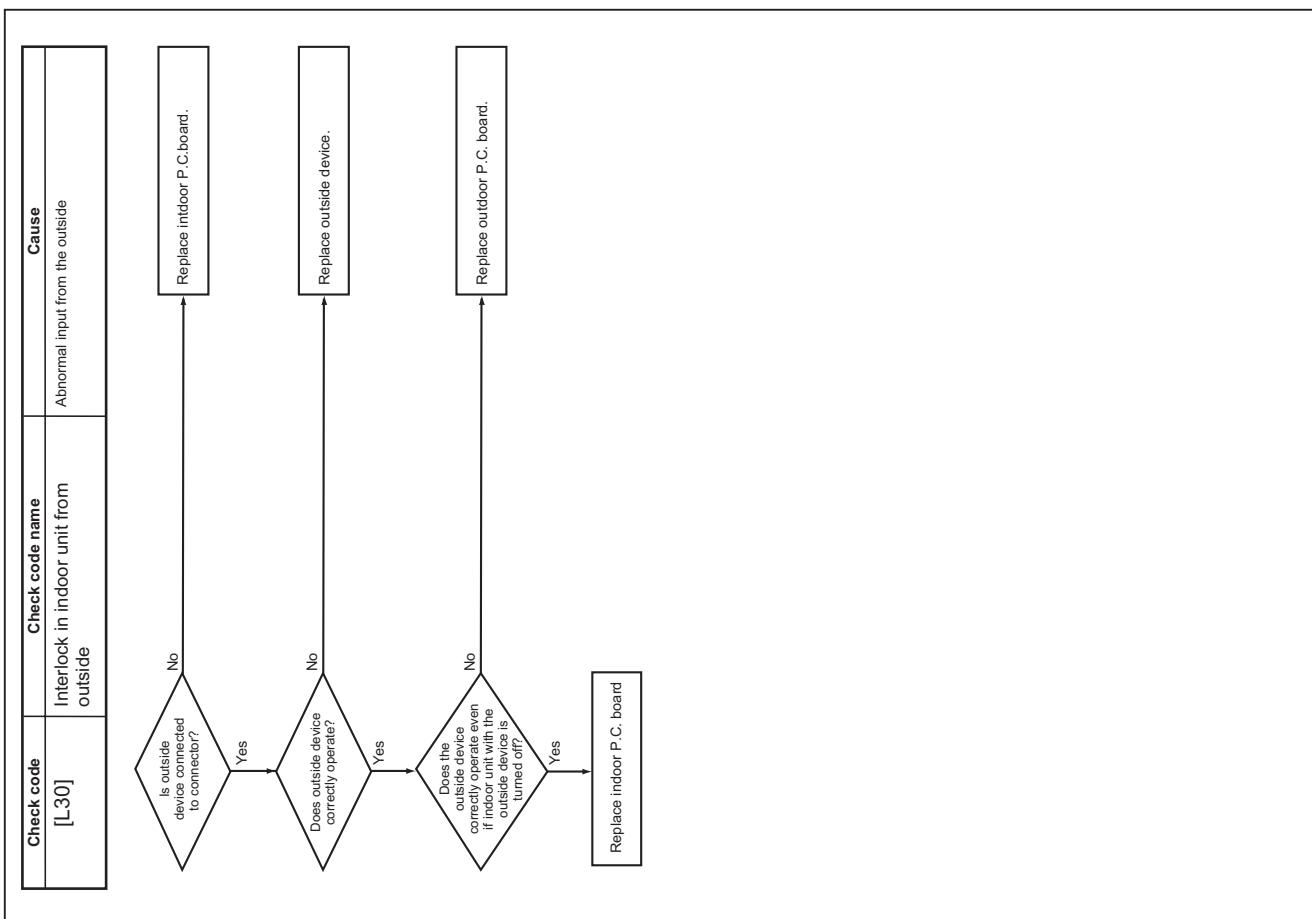

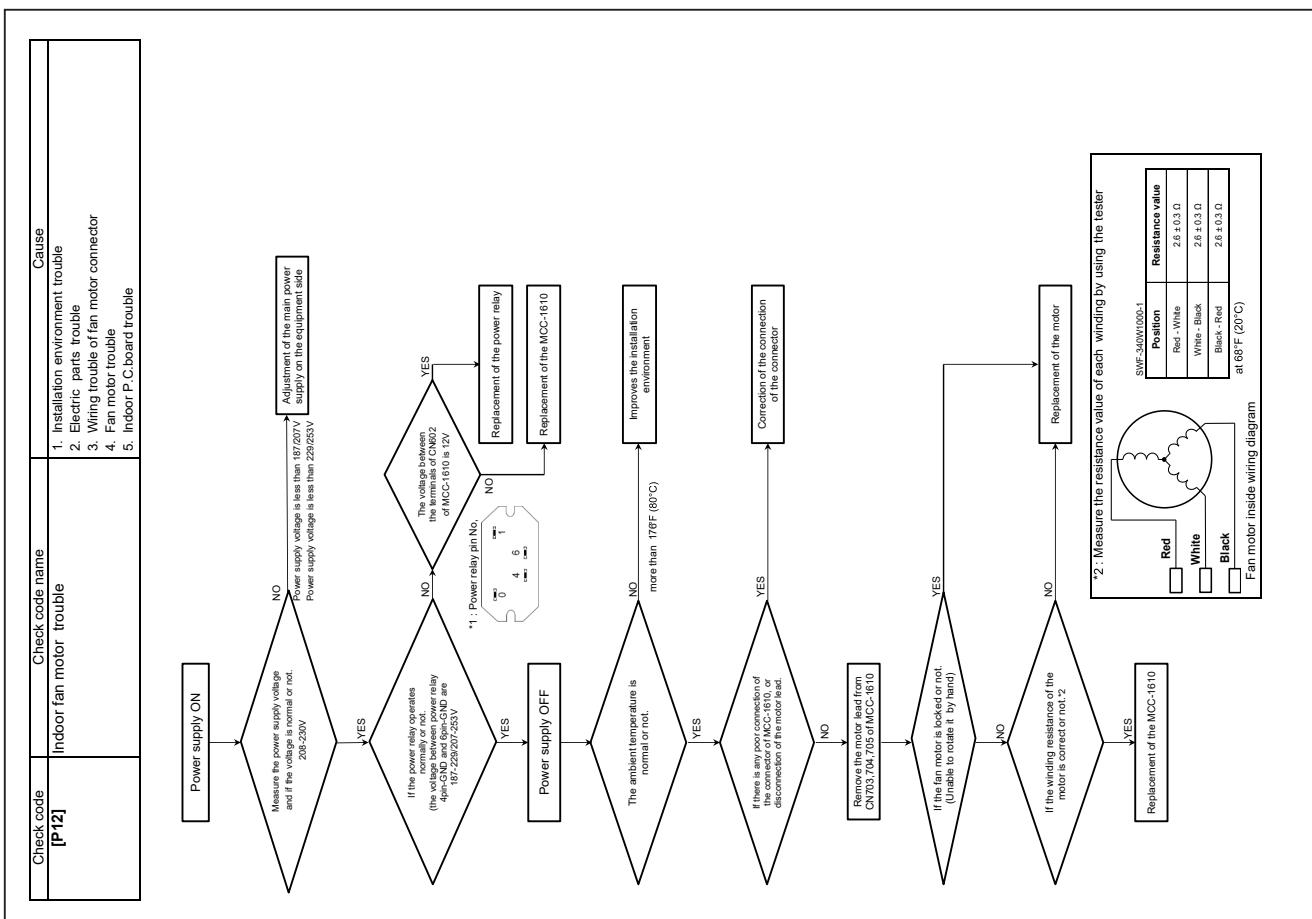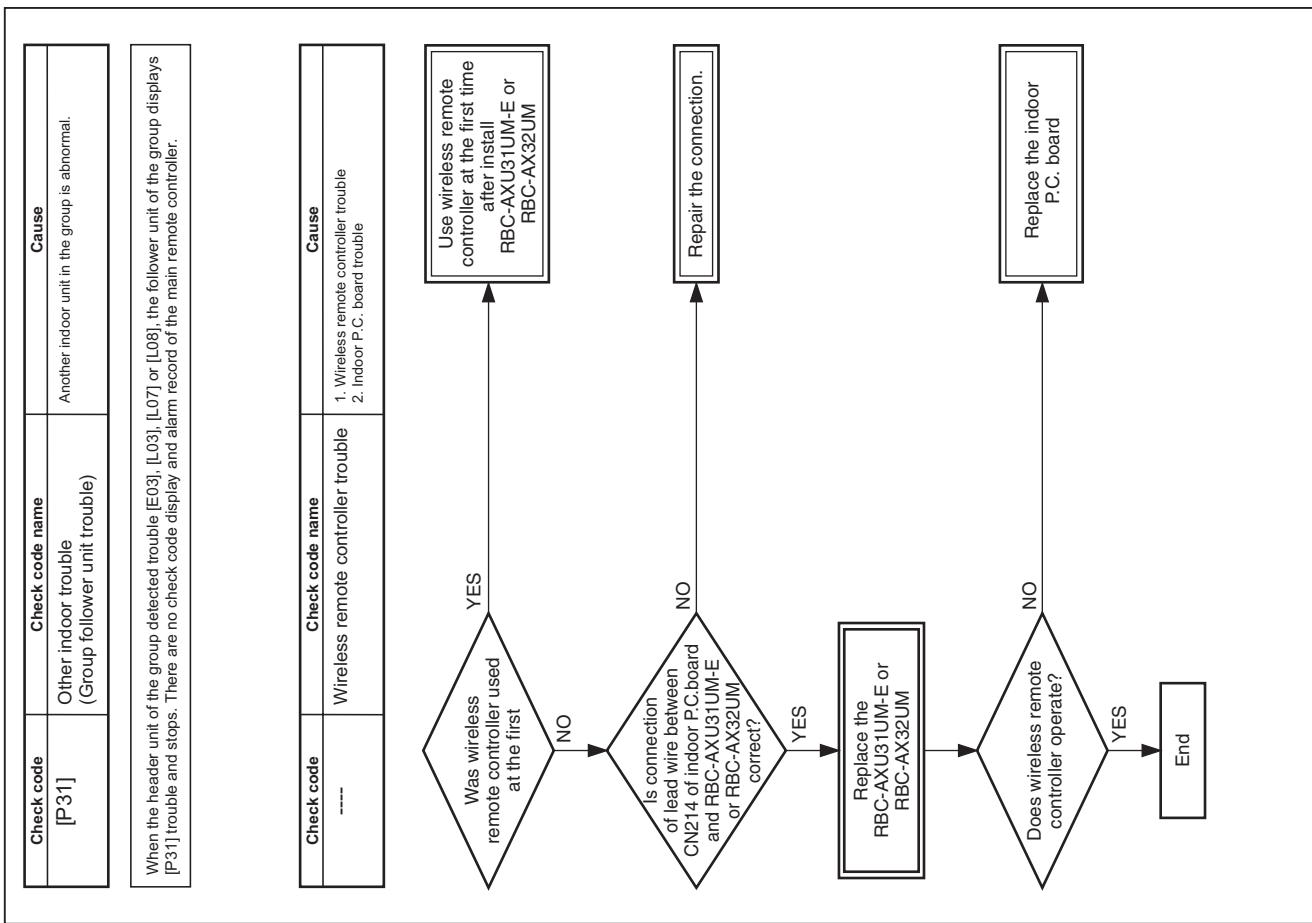


11-6. Sensor characteristics

Indoor unit


▼ Temperature sensor characteristics

Indoor TA sensor

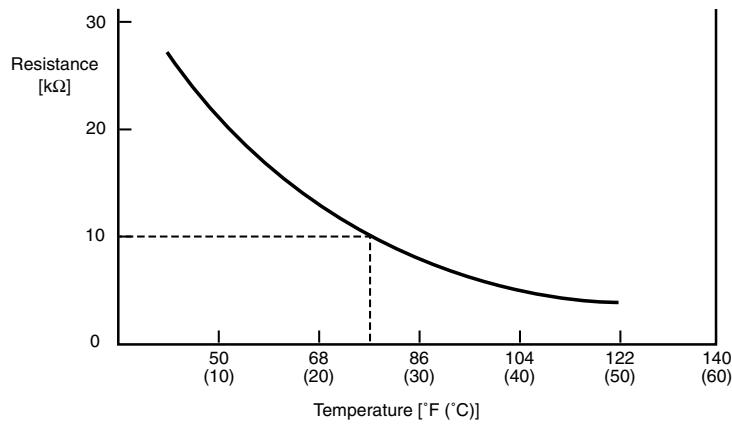


Temperature [°F (°C)]	Resistance [kΩ]
32 (0)	33.9
41 (5)	26.1
50 (10)	20.3
59 (15)	15.9
68 (20)	12.6
77 (25)	10.0
86 (30)	8.0
95 (35)	6.4
104 (40)	5.2
113 (45)	4.2
122 (50)	3.5
131 (55)	2.8
140 (60)	2.4

Indoor TC1 sensor

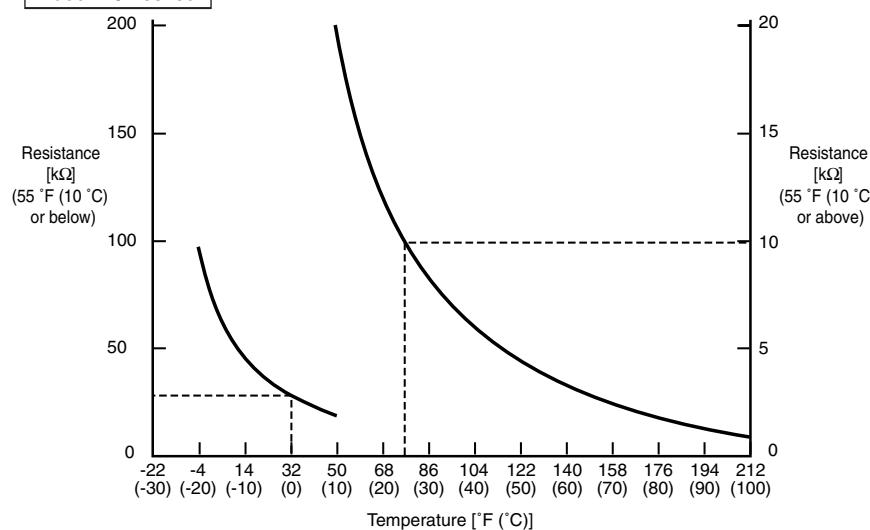

Temperature [°F (°C)]	Resistance [kΩ]
-22 (-20)	99.9
5 (-15)	74.1
14 (-10)	55.6
23 (-5)	42.2
32 (0)	32.8
41 (5)	25.4
50 (10)	19.8
59 (15)	15.6
68 (20)	12.4
77 (25)	10.0
86 (30)	8.1
95 (35)	6.5
104 (40)	5.3
113 (45)	4.4
122 (50)	3.6
131 (55)	3.0
140 (60)	2.5
149 (65)	2.1
158 (70)	1.8
167 (75)	1.5
176 (80)	1.3
185 (85)	1.1
194 (90)	1.0
203 (95)	0.8
212 (100)	0.7

Indoor TC2 and TCJ sensors

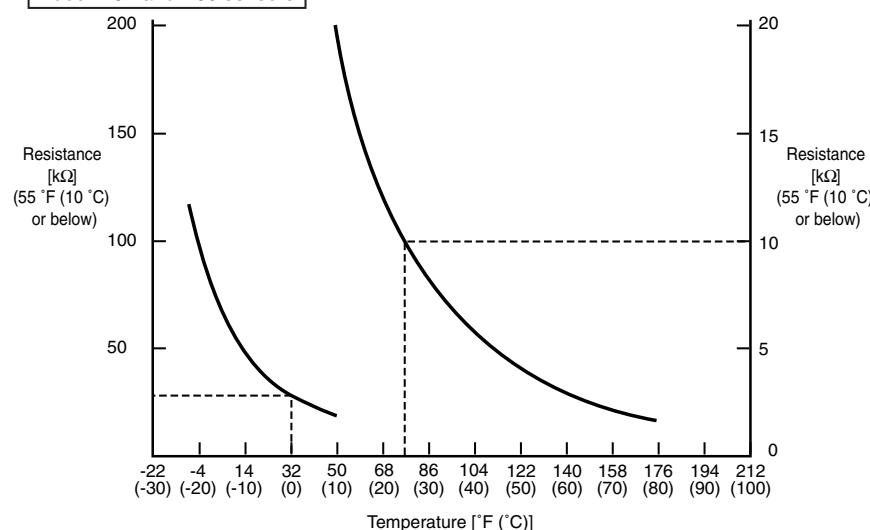

Temperature [°F (°C)]	Resistance [kΩ]
-22 (-20)	115.2
5 (-15)	84.2
14 (-10)	62.3
23 (-5)	46.6
32 (0)	35.2
41 (5)	26.9
50 (10)	20.7
59 (15)	16.1
68 (20)	12.6
77 (25)	10.0
86 (30)	8.0
95 (35)	6.4
104 (40)	5.2
113 (45)	4.2
122 (50)	3.5
131 (55)	2.8
140 (60)	2.4
149 (65)	2.0
158 (70)	1.6
167 (75)	1.4
176 (80)	1.2

12. REPLACEMENT OF SERVICE P.C. BOARD

Indoor Unit

⚠ CAUTION

<Note: when replacing the P.C. board for indoor unit servicing>

The nonvolatile memory (hereafter called EEPROM, IC503) on the indoor unit P.C. board before replacement includes the model specific type information and capacity codes as the factory-set value and the important setting data which have been automatically or manually set when the indoor unit is installed, such as system/ indoor/group addresses, high ceiling select setting, etc.

When replacing the P.C. board for indoor unit servicing, follow the procedures below.

After replacement completes, confirm whether the settings are correct by checking the indoor unit No., Group header unit/follower unit settings and perform the cooling cycle confirmation through the trial operation.

<Replacement procedures>

CASE 1

Before replacement, the indoor unit can be turned on and the setting data can be read out by wired remote control operation.

EEPROM data read out [1]



Replacement of P.C. board for Indoor unit servicing and power on [2]



Writing the read out EEPROM data [3]



Power reset

(for all indoor units connected to the remote control when the group operation control is performed.)

CASE 2

The EEPROM before replacement is trouble and the setting data cannot be read out.

EEPROM data read out [2]



Writing the setting data to EEPROM, such as optional connection setting, etc., based on the customer information. [3]



Power reset

(for all indoor units connected to the remote control when the group operation control is performed.)

[1] Setting data read out from EEPROM

(Stop the operation of the unit.)

<RBC-AMT***>

[1] Setting data read out from EEPROM

The setting data modified on the site, other than factory-set value, stored in the EEPROM shall be read out.

Step 1 Push  ,  and  button on the remote controller simultaneously for more than 4 seconds.

*When the group operation control is performed, the unit No. displayed for the first time is the header unit No.

At this time, the CODE No. (DN) shows “  ”. Also, the fan of the indoor unit selected starts its operation and the swing operation also starts if it has the louvers.

Step 2 Every time when the  (left side button) button is pushed, the indoor unit No. under the group control is displayed in order. Specify the indoor unit No. to be replaced.

1. Change the CODE No. (DN) to  →  by pushing  /  buttons for the temperature setting. (this is the setting for the filter sign lighting time.)


At this time, be sure to write down the setting data displayed.




2. Change the CODE No. (DN) by pushing  /  buttons for the temperature setting. Similarly, be sure to write down the setting data displayed.

3. Repeat the step 2-2 to set the other settings in the same way and write down the setting data as shown in the table 1 (example).

* The CODE No. (DN) are ranged from “  ” to “  FE ”. The CODE No. (DN) may skip.

<RBC-AWSU52-UL>

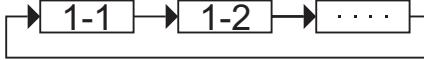- 1 Push the [ MENU] button to display the menu screen.
- 2 Push and hold the [ MENU] button and the [] button at the same time to display the “Field setting menu”.
 - Push and hold the buttons for more than 4 seconds.
- 3 Push the []/[] button to select “7. DN setting” on the “Field setting menu” screen, then push the [ Set/Fix] button.
 - When the group control is used, all the indoor units connected into the system are displayed on the screen.
- 4 Push the to select indoor unit in which you want to read out setting data in the EEPROM.
 - The selected unit changes as follows each time the button is pushed:
- 5 Push the" [ Set/Fix]" button.
 - The setting display for the selected unit is displayed.
 - The fan and louver of the indoor unit operate.
- 6 Push the []/[] to set “DN code” to [0001], then write down the setting data to be displayed.
(Filter sign lighting time)
- 7 Repeat the operation of 1 to 6 , then write down the setting data like **Table 1. Setting data (CODE No. table (example))**.
 - * The Code No.(DN) are ranged in order of No., which may be sometimes skipped.
- 8 After writing down all the setting data, push the “[ Set/Fix]”
 - The setting display for the selected unit is displayed.
 - When the group control is used, the fan and louver of the selected indoor unit operate.
- 9 Push the [ MENU] button to set the other “Code(DN)” and “Data”. After “Continue?” is displayed on the screen, push the [ Return] button to finish the setting operation. “  Setting” appears on the screen for a while, then the screen returns to the “Field setting menu” screen.

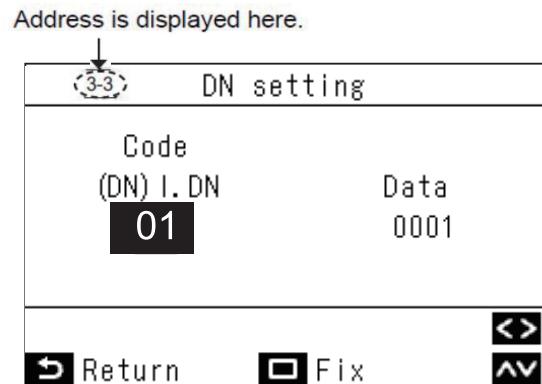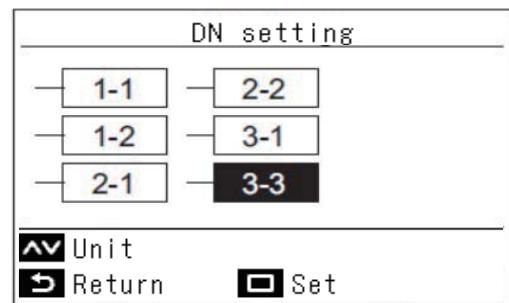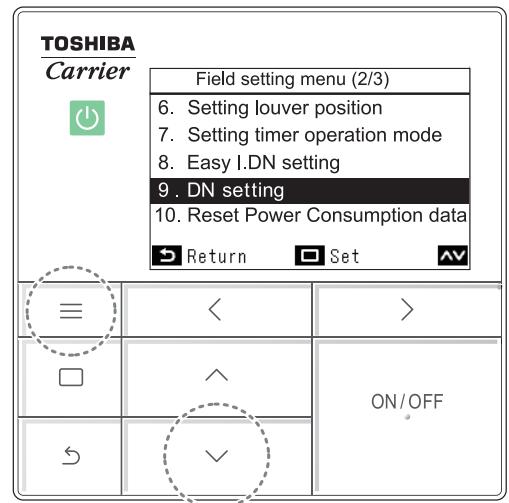

CODE No. required at least


DN	Contents
0010	Type
0011	Indoor unit capacity
0012	System address
0013	Indoor unit address
0014	Group address

1. The CODE No. for the Indoor unit type and Indoor unit capacity are required to set the rotation number setting of the fan.
2. If the system/indoor/group addresses are different from those before replacement, the auto-address setting mode starts and the manual resetting may be required again.
(when the multiple units group operation including twin system.)

[2] P.C. Board for indoor unit servicing replacement procedures

Step 1 Replace the P.C. board to the P.C. board for indoor unit servicing.

At this time, perform the same setting of the jumper wire (J01, J08, J09) setting (cut), switch SW501, (short-circuit) connector CN34 as the setting of the P.C. board before replacement.

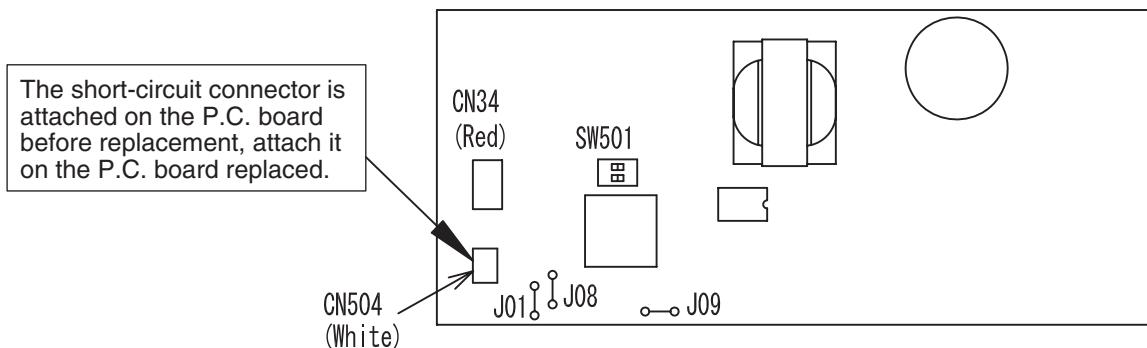

Step 2 According to the system configuration, turn on the indoor unit following to the either methods shown below.

a) Single operation (Indoor unit is used as standalone.)

Turn on the indoor unit.

1. After completion of the auto-address setting mode (required time: approx. 5 min.), proceed to [3].
(System address = 1, Indoor unit address = 1, Group address = 0 (standalone) are automatically set.)

2. Interrupt the auto-address setting mode, and proceed to [3].

b) Group operation (including twin triple and double twin system)

Turn on the indoor unit(s) with its P.C. board replaced to the P.C. board for indoor unit servicing, according to either methods 1 or 2 shown below.

1. Turn on only the indoor unit with its P.C. board replaced. (Be sure to confirm the remote controller is surely connected. If not, the operation [3] cannot be performed.)

Perform either methods 1 or 2 described in item a) above.

2. Turn on the multiple indoor units including the indoor unit with its P.C. board replaced.

- Twin or triple or double twin 1 system only

- All group connections

After completion of the auto-address setting mode (required time: approx. 5 min.), proceed to [3].

* The header unit of the group may be changed by performing the auto-address setting.

Also, the system address/Indoor unit address of the indoor unit with its P.C. board replaced may be assigned to the addresses (not used) other than those of the indoor units without its P.C. board replaced.

It is recommended to keep the information in advance, which refrigerant system the indoor unit belongs to or whether the indoor unit works as the header unit or the follower unit in the group control operation.

[3] Writing the setting data to EEPROM

(Stop the operation of the unit.)

<RBC-AMT***>

Step 1 Push  ,  and  buttons on the remote controller simultaneously for more than 4 seconds.

* In the group control operation, the unit No. displayed for the first time is the header unit No.. At this time, the CODE No. (DN) shows “”. Also, the fan of the indoor unit selected starts its operation and the swing operation starts if it has the louvers.
(The unit No. “” is displayed if the auto-address setting mode is interrupted in [2] step 2 a))

Step 2 Every time when  (left side button) button is pushed, the indoor unit No. in the group control operation are displayed in order.

(The settings stored in the EEPROM of the P.C. board for indoor unit servicing are the factory-set values.)

Specify the indoor unit No. with its P.C. board replaced to the P.C. board for indoor unit servicing.
(You cannot perform this operation if “” is displayed.)

Step 3 Select the CODE No. (DN) can be selected by pushing the  /  button for the temperature setting.

• Set the indoor unit type and capacity.

The factory-set values shall be written to the EEPROM by changing the type and capacity.

1. Set the CODE No. (DN) to  . (without change)

2. Select the type by pushing  /  buttons for the timer setting.

(For example, Concealed Duct High Static Pressure Type is set to “0006”. Refer to table 2)

3. Push  button.

(The operation completes if the setting data is displayed.)


4. Change the CODE No. (DN) to “” by pushing  /  buttons for the temperature setting.

5. Select the capacity by pushing  /  buttons for the timer setting.

(For example, UP096 Type is set to “0023”. Refer to table 3)

6. Push  button.

(The setting completes if the setting data are displayed.)

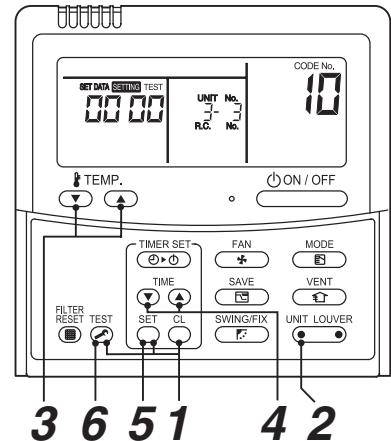

Step 4 Write the on-site setting data to the EEPROM, such as address setting, etc. Perform the steps 1 and 2 above again.

Step 5 Change the CODE No. (DN) to “” by pushing  /  buttons for the temperature setting.
(this is the setting for the filter sign lighting time.)

Step 6 Check the setting data displayed at this time with the setting data put down in [1].

1. If the setting data is different, modify the setting data by pushing  /  buttons for the timer setting to the data put down in [1].

The operation completes if the setting data is displayed.

2. If the data is the same, proceed to next step.

Step 7 Change the CODE No. (DN) by pushing  /  buttons for the temperature setting.
As described above, check the setting data and modify to the data put down in [1].

Step 8 Repeat the steps 6 and 7.

Step 9 After the setting completes, push  button to return to the normal stop status.
(It takes approx. 1 min until the remote controller operation is available again.)

*The CODE No. (DN) are ranged from “” to “”. The CODE No. (DN) is not limited to be serial No.

Even after modifying the data wrongly and pushing  button, it is possible to return to the data before modification by pushing  button if the CODE No. (DN) is not changed.

<RBC-AWSU52-UL>

- 1** Push the [ Menu] button to display the menu screen.
- 2** Push and hold the [ Menu] button and the [] button at the same time to display the “**Field setting menu**”.
 - Push and hold the buttons for more than 4 seconds.
- 3** Push the []/[] button to select “**7. DN setting**” on the “**Field setting menu**” screen, then push the [ Set/Fix].
 - When the group control is used, all the indoor units connected into the system are displayed on the screen.
- 4** Push the  to select indoor unit in which you want to write the setting data to EEPROM, then push the [ Set/Fix].
 - The setting display for the selected unit is displayed.
 - The fan and louver of the indoor unit operate.
- 5** Move the cursor to select “**Code (DN)**” with the [] button, then set “[**0010**]” with the []/[] button.
- 6** Move the cursor to select “**Data**” with the [] button, then push the []/[] button to set the “**Data**” to each Type name of indoor unit.
For Concealed Duct High Static Pressure type, set “**Data**” to [**0006**].
- 7** Push the [ Menu] button to set the other “**Code(DN)**” and “**Data**”. After “**Continue?**” is displayed on the screen, push the [ Set/Fix].
- 8** Move the cursor to select “**Code(DN)**” with the [] button, then set [**0011**] with the []/[] button.
- 9** Move the cursor to select “**Data**” with the [] button then push the []/[] button to set the “**Data**” to each capacity of indoor unit.
For 096 model, set “**Data**” to [**0023**].
- 10** Push the [ Menu] button to set the other “**Code(DN)**” and “**Data**”. After “**Continue?**” is displayed on the screen, push the **No** to finish the setting operation. “**Setting**” is displayed on the screen for a while, then the screen returns to the “**Field setting menu**” screen.
- 11** Pushing the [ Return] button on the unit selection screen displays “ **Setting**” on the screen for a while when the single operation is used, then the screen returns to the “**Field setting menu**” screen.
(It takes approx. 1 min until the remote controller operation is available again.)
- 12** Write the on-site setting data, such as an address setting, after installation to the EEPROM.
Perform the operation of **1** to **4** again.
- 13** Push the [] button to select “**Code(DN)**”, then set it to [**0001**] with the []/[]
(Filter sign lighting time)
- 14** Check the setting data displayed at this time with the setting data written down in **[1] Setting data read out from EEPROM**.
If the setting data is different, set “**Code(DN)**” with the []/[] button, push the [] to select “**Data**” and change it to the setting data written down in **[1] Setting data read out from EEPROM** with the []/[] button, then push the [ Menu] button.
If the setting data is the same, proceed to next operation.


15 Change “Code (DN)” to [0002] with the [] / [] button. (Filter pollution level)

16 Perform the operation of **14**. Check the other “Code (DN)” also, change “Data” into the setting data written down in **[1] Setting data read out from EEPROM** if the setting data is different.

17 After writing down all the data, push the [ Return] button.
At the time, “ Setting” is displayed on the screen for a while when the single operation is used, then the screen returns to the “Field setting menu” screen.
Pushing the [ Return] button on the unit selection screen again displays “ Setting” on the screen for a while when the group control is used, then the screen returns to the “Field setting menu” screen.
(It takes approx. 1 min until the remote controller operation is available again.)
* The **Code No.(DN)** are ranged in order of No., which may be sometimes skipped.
Even after changing the data wrongly and pushing the [ Menu] button, it is possible to return to the data before change by pushing the [ Return] button if the CODE No (DN) is not changed.

<Fig. 2 EEPROM layout diagram>

The EEPROM (IC503) is attached to the IC socket. When detaching the EEPROM, use a tweezers, etc. Be sure to attach the EEPROM by fitting its direction as shown in the figure.
* Do not bend the IC lead when replacing.

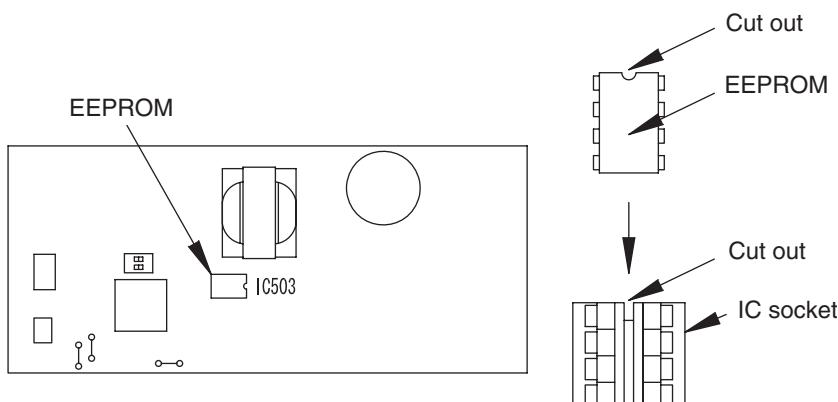

Value	Type	Model
0001*1	4 Way Cassette	MMU-UP****HP-UL
0006	Concealed Duct High Static Pressure	MMD-UP****HP-UL

*1 Default value stored in EEPROM mounted on service P.C. board

Indoor Unit Capacity DN code “11”

Value	Capacity
0000*	Invalid
0021	072 type
0023	096 type

Table 1. Setting data(CODE No. table(example))

DN	Item	Setting data	Factory-set value
01	Filter display delay timer		0002 : 2500H
02	Dirty state of filter		0000 : Standard
03	Central control address		00Un/0099 : Unfixed
04	Specific indoor unit priority		0000 : No priority
06	Heating suction temperature shift		0002 : +3.6°F(+2°C)
0D	Automatic mode		0001 : No automatic
0F	Cooling only		0000 : Heat pump
10	Type		Depending on model type
11	Indoor unit capacity		According to capacity type
12	Line address		00Un/0099 : Unfixed
13	Indoor unit address		00Un/0099 : Unfixed
14	Group address		00Un/0099 : Unfixed
19	Flap type (Wind direction adjustment)		Depending on Type
1E	Temperature range of cooling/heating automatic SW control point		0003 : 3 deg (Ts±1.5)
28	Automatic restart of power failure	0001 : Enable	0000 : None
2A	Selection of option / Trouble input (TCB-PCUC2E: CN3)		0002 : None
2B	Themo output SW		0000 : Thermo ON
2E	HA terminal (CN61) select		0000 : Usual (HA terminal)
31	Ventilating fan control		0000 : Unavailable
32	Sensor SW		0000 : Body sensor
33	Temperature unit select	0001 : Fahrenheit (°F)	0000 : Centigrade (°C)
5D	External static pressure		0000 : Default setting
60	Timer setting (wired remote controller)		0000 : Available
7A	Change unit 0.9°F(0.5°C) or 1.8°F(1°C) on remote	0001 : 0.9°F(0.5°C)	0000 : 1.8°F(1°C)
D0	Remote controller operation save function		0001 : Enable
E0	Region	0001 : North America	0000 : Domestic
F6	Presence of Application control kit (TCB-PCUC2E)		0000 : None
FC	Communication protocol		0000 : TCC-LINK
FE	FS unit address		00Un/0099 : Unfixed
191	Ventilation output / Secondary heating output	0001 : Secondary heating output	0000 : Ventilation output
1Fb	Remote controller operation		0000 : Operation possible
1FC	Indoor Unit terminating resistance		0000 : OFF

Table 2. Type : CODE No.10

Setting data	Type	Type name abb.
0001 *1	4-way Air Discharge Cassette Type	MMU-UP****HP - UL
0006	High Static Duct Pressure	MMD-UP****HP - UL

Table 3. Indoor unit capacity : CODE No.11

Setup data	Model
0000 *1	Invalid
0021	072 type
0023	096 type

*1 EEPROM initial value on the P.C. board for indoor unit servicing.

*2  **CAUTION**

< Model name MMD-UP****HP-UL >

For the above model. Set the CODE no. to

- "E0"** the setting data "0000" (initial) to "0001"
- "28"** the setting data "0000" (initial) to "0001"
- "33"** the setting data "0000" (initial) to "0001"
- "7A"** the setting data "0000" (initial) to "0001"
- "191"** the setting data "0000" (initial) to "0001"

Fan IPDU P.C. Board (MCC-1610)

Replacement steps:

[Remove PCB]

(1) Turn off the power supply of the indoor unit and allow at least one minute for the capacitor to discharge.

Confirm that the light of the LED (D640) fades away.

(2) Remove all the connectors which are connected to the FAN IPDU. (Remove the connectors by pulling the connector body. Do not pull the wire, because there are some rocks in connector).

(3) Remove all the five screws (a) which secures the FAN IPDU to the Heat sink.(These screws are to be re-used after procedure.)

(4) Remove the Fan IPDU from four PCB spacer (b).

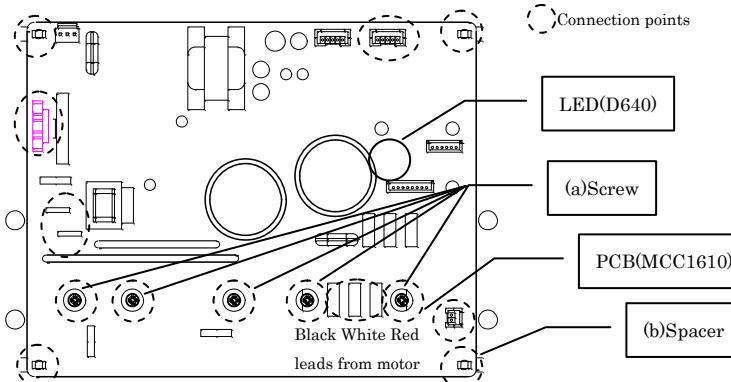


Figure1 PCB outline

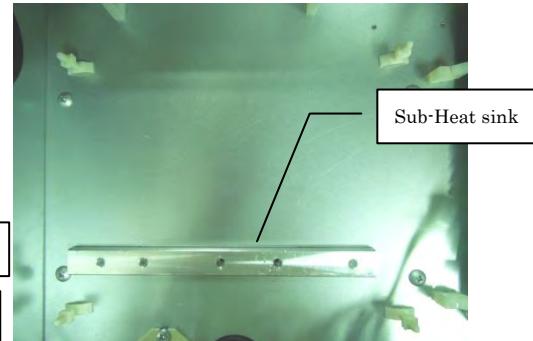


Figure2 After removing PCB

[Set PCB]

(5) Confirm that no dirt or damage is on the sub heat sink. **And don't forget to set sub heat sink.** As it can reduce the heat transfer efficiency, and cause a breakdown.

(6) Screw the FAN IPDU to the heat sink using the five screws that were removed in step (3). If the screws are loose, the effected component will generate heat, and cause in to breakdown. Do not use an electric driver or an air driver, as it can cause component damage. The torque of 5 screws (IC701, DB509, DB510 and Q590) is "0.41 lbs·ft (0.55N·m)".

(7) Re-connect the connectors. Be sure that all the connectors are connected correctly and securely inserted.

(8) Install the cover, then turn on the supply. Check the operation.

10-3. N/F P.C. Board (MCC-1551) Replacement Procedure


(1) Turn off the power supply of the indoor unit

(2) Remove all the connectors and remove ground lead from metals. (Remove the connectors by pulling the connector body. Do not pull the wire, because there are some rocks in connector).

(3) Remove the Fan IPDU from four PCB spacer (a).

(4) After changing PCB, re-connect the connectors. Be sure that all the connectors are connected correctly and securely inserted. And Screw to ground lead.

(5) Install the cover, then turn on the supply. Check the operation.

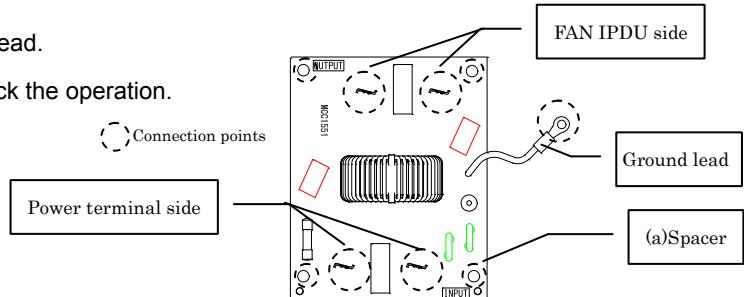



13. DETACHMENTS


⚠ WARNING


Be sure to stop operation of the air conditioner before work and then turn off switch of the breaker.


⚠ CAUTION



Be sure to put on gloves during working time; otherwise an injury will be caused by a part, etc.





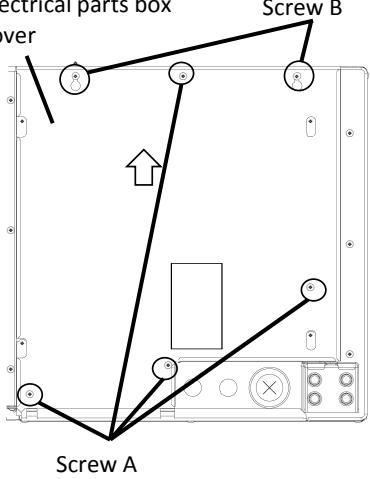
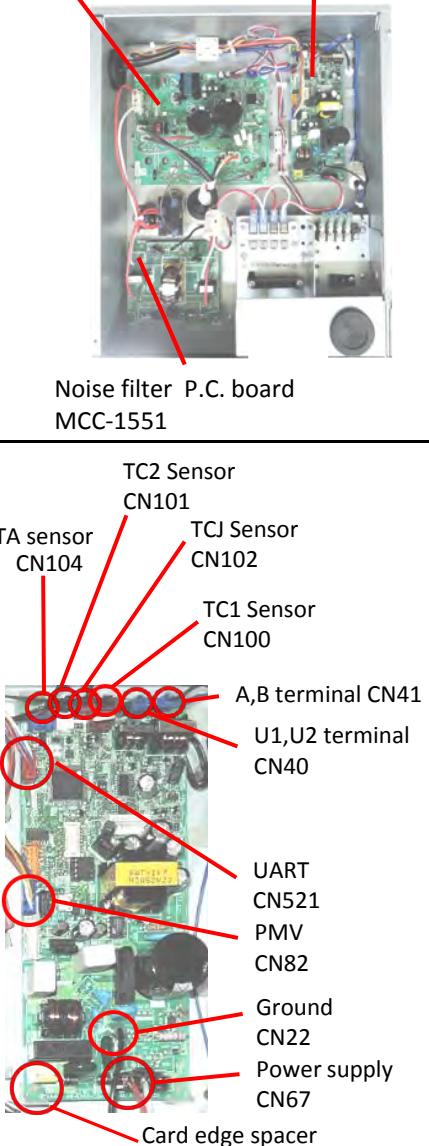
No.	Part name	Procedure	Remarks
①	Electrical parts box cover	<p>1. Detachment</p> <p>1) Remove the fixing screws A fixing the electrical parts box cover. Loosen the fixing screws B. 2) Slide the electrical parts box cover to the arrow direction and remove the electrical parts box cover.</p> <p>2. Attachment</p> <p>1) Hang the electrical parts box cover to the screws B and tighten the screws. 2) Attach the removed screws A to the original positions.</p>	 <p>Electrical parts box cover</p> <p>Screw B</p> <p>Screw A</p>
②	Control P.C. board MCC-1643	<p>1. Detachment</p> <p>1) Perform 1 of ① to remove the electrical parts box. 2) Remove the connector of the below No. from the P.C. board.</p> <p>NOTE</p> <p>First unlock the housing and then remove the connectors.</p> <p>CN41 : A,B terminal block (2P, Blue) CN40 : U1,U2 terminal block (2P, Blue) CN67 : Power supply terminal block (5P: Black) CN100 : TC1 sensor (3P: Brown) CN101 : TC2 sensor (2P: Black) CN102 : TCJ sensor (2P, Red) CN104 : TA sensor (2P, Yellow) CN82 : PMV motor(6P,Blue) CN521 : UART(5P,Red) CN22 : Ground (Faston terminal)</p> <p>3) Unlock the locking card edge spacers (4 position) in the electrical parts box to remove the control P.C. board</p>	 <p>TA sensor CN104</p> <p>TC2 Sensor CN101</p> <p>TCJ Sensor CN102</p> <p>TC1 Sensor CN100</p> <p>A,B terminal CN41</p> <p>U1,U2 terminal CN40</p> <p>UART CN521</p> <p>PMV CN82</p> <p>Ground CN22</p> <p>Power supply CN67</p> <p>Card edge spacer (4 positions)</p>


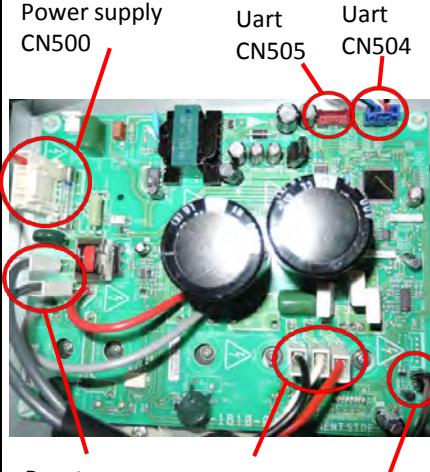
No.	Part name	Procedure	Remarks
②	Control P.C. board MCC-1643	<p>2. Attachment</p> <p>1) Mount the control P.C. board in the electrical parts box as before. 2) Be sure to wire in the electrical parts box as before.</p> <p>NOTE 1 Check if there is no missing or contact failure of the connectors.</p> <p>NOTE 2 Be sure to wire as before.</p> <p>3) Attach the electrical parts box cover as before.</p>	
③	Fan control P.C. board MCC-1610	<p>1. Detachment</p> <p>1) Perform 1 of ① to remove the electrical parts box. 2) Remove the connector of the below No. from the P.C. board.</p> <p>NOTE First unlock the housing and then remove the connectors.</p> <p>CN504 : Uart (5P, Blue) CN505 : Uart (5P, Red) CN500 : Power supply terminal block (5P: Black) CN510 : Reactor (Faston terminal) CN511 : Reactor (Faston terminal) CN602 : Relay (2P, Black) CN703 : Fan motor (Black wire) W CN704 : Fan motor (White wire) V CN705 : Fan motor (Red wire) U</p> <p>3) Remove the screws A. 4) Unlock the card edge spacers (4 position) in the electrical parts box to remove the fan control P.C. board.</p> <p>2. Attachment</p> <p>1) Mount the fan control P.C. board in the electrical parts box as before. 2) Be sure to wire in the electrical parts box as before.</p> <p>NOTE 1 Check if there is no missing or contact failure of the connectors.</p> <p>NOTE 2 Be sure to wire as before.</p> <p>3) Attach the electrical parts box cover as before.</p>	 






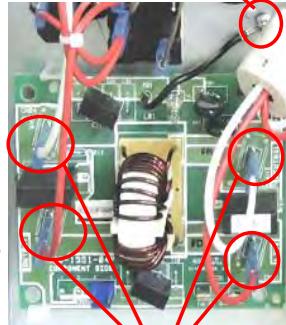
No.	Part name	Procedure	Remarks
④	Noise filter P.C. board MCC-1551	<p>1. Detachment</p> <p>1) Perform 1 of ① to remove the electrical parts box. 2) Remove the connector of the below No. from the P.C. board.</p> <p>NOTE</p> <p>First unlock the housing and then remove the connectors.</p> <p>CN01 : Power supply (Red wire) CN02 : Power supply (White wire) CN03 : Power supply (Red wire) CN04 : Power supply (White wire)</p> <p>3) Remove the screw of the ground wire. 4) Unlock the card edge spacers (4 position) in the electrical parts box to remove the noise filter P.C. board.</p> <p>2. Attachment</p> <p>1) Mount the noise filter P.C. board in the electrical parts box as before. 2) Be sure to wire in the electrical parts box as before.</p> <p>NOTE 1</p> <p>Check if there is no missing or contact failure of the connectors.</p> <p>NOTE 2</p> <p>Be sure to wire as before.</p> <p>3) Attach the electrical parts box cover as before.</p>	 <p>Ground screws</p> <p>CN04</p> <p>CN02</p> <p>CN03</p> <p>CN01</p> <p>Power supply</p>








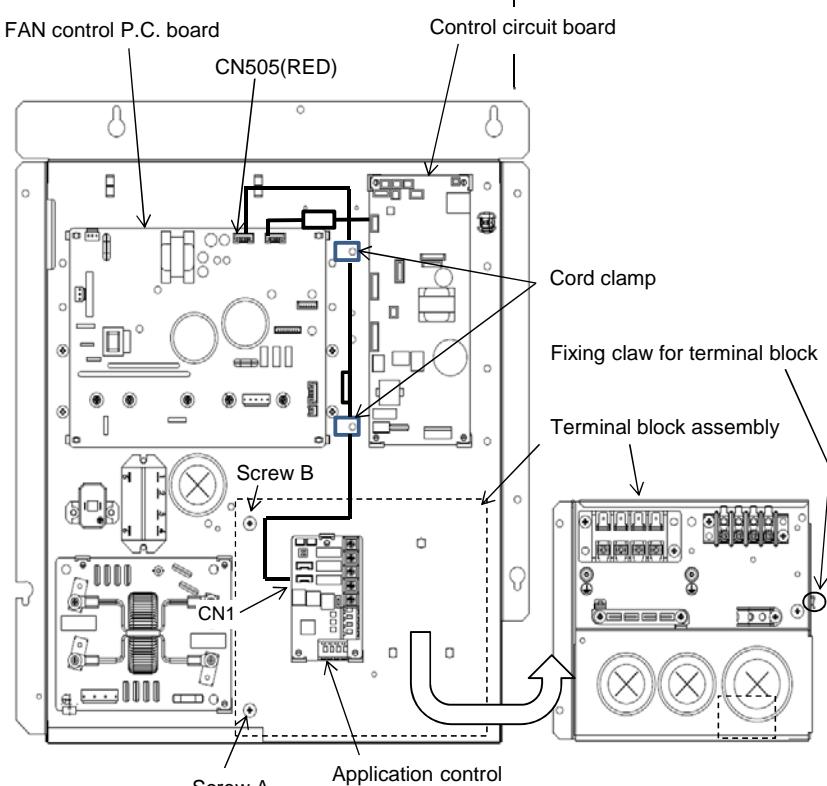
No.	Part name	Procedure	Remarks
⑤	Application control P.C. board	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform 1 of ① to remove the electrical parts box cover. 2) Take off the screws A and B then remove the terminal block assembly. 3) Remove the CN1(RED) connector from the P.C. board. <p>NOTE</p> <p>First unlock the housing and then remove the connectors.</p> <ol style="list-style-type: none"> 4) Unlock the locking card edge spacers (3 positions) in the electrical parts box to remove the P.C. board. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Mount the application control P.C. board in the electrical parts box as before. 2) Be sure to wire in the electrical parts box as before. <p>NOTE 1</p> <p>Check if there is no missing or contact failure of the connectors.</p> <p>NOTE 2</p> <p>Be sure to wire as before.</p> <ol style="list-style-type: none"> 3) Return terminal block assembly to the original position without pinching wires. Confirm to hook the claw of terminal block assembly on the right side. Then fix screw A and B. 4) Attach the electrical parts box cover as before.  	 <p>CN1</p> <p>Card edge spacer (3 positions)</p>



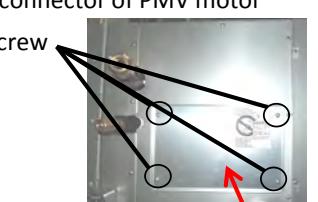
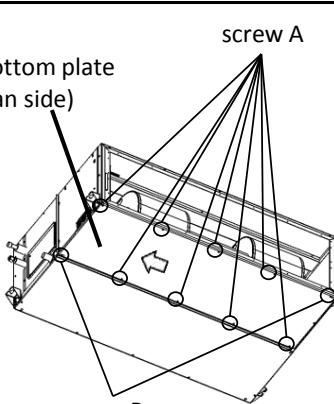
No.	Part name	Procedure	Remarks
⑥	PMV motor	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform 1 of ① to remove the electrical parts box cover. 2) Loosen the fixing screws of the inspection cover and open the inspection cover. 3) Remove the connector of the PMV motor. CN82 : PMV motor (6P,Blue) 4) As shown in the right figure, using the two spanners, and remove the PMV motor. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the PMV motor as before. 2) Connect the connector of the PMV motor as before and close the electrical parts box cover. Be sure to wire in the electrical parts box as before. 3) Fix the inspection cover with the fixing screws (4 positions). 	 <p>connector of PMV motor</p>  <p>Screw</p> <p>Inspection cover</p>  <p>PMV motor</p>
⑦	Bottom plate (fan side)	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the screws A fixing the bottom plate (fan side). 2) Loosen the screws B. 3) Slide the bottom plate (fan side) to the arrow direction and remove the bottom plate (fan side). <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Hang the bottom plate (fan side) to the screws B. 2) Attach the removed screws A to the original positions and fix the screws B. 	 <p>Bottom plate (fan side)</p> <p>screw A</p> <p>screw B</p>

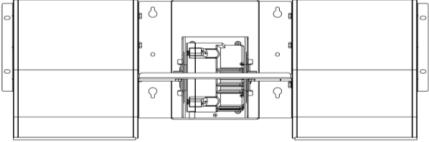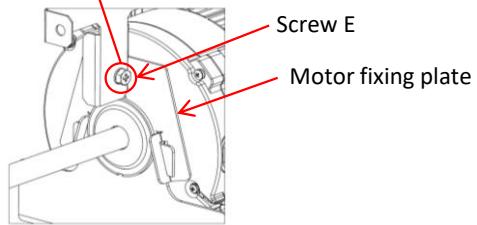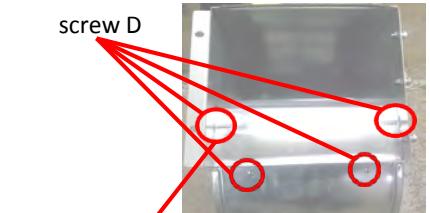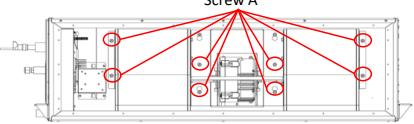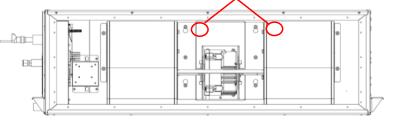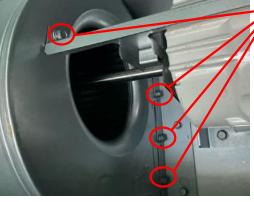No.	Part name	Procedure	Remarks
⑧	Fan motor, Fan	<p>1. Detachment</p> <p>1) Perform 1 of ① to remove the electrical parts box cover. 2) Remove the connectors of the wires of the fan motor from the fan control P.C. board. CN703 : Fan motor (Black wire) CN704 : Fan motor (White wire) CN705 : Fan motor (Red wire) 3) Perform 1 of ⑦ to remove the bottom plate (fan side). 4) Remove the screws A (M8 x 0.8" (20mm), 8 pcs) and loosen the screws B (M8 x 0.8" (20mm), 2 pcs). (The fan motor is in the temporary hanging state by the fixing plate.) 5) Remove the fan assembly.</p>  <p>Fan assembly</p> <p>CAUTION</p> <p>Weight of the fan assembly is about 66 lbs (30kg) Handle it by 2 workers.</p> <p>6) Remove the screws C (M8 x 0.8" (20mm), 8 pcs). 7) Loosen the hexagonal bolt of the fan and pull out the fan from the shaft. 8) Remove the screws D (4 pcs) from the fan case and remove the nose plate and then take out the fan. 9) Remove the ground screw of the fan motor. 10) Remove the screws E(M8 x 0.8" (20mm), 2 pcs) and remove the motor fixing plate and fan motor.</p>  <p>Earth screw</p>  <p>Hexagonal bolt</p>  <p>Screw E</p> <p>Motor fixing plate</p>  <p>screw D</p>  <p>Nose plate</p>	<p>Wires of the fan motor CN703 CN704 CN705</p>   <p>Screw A</p>  <p>Screw B</p>  <p>Screw C</p>

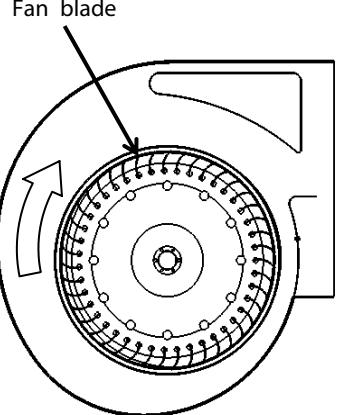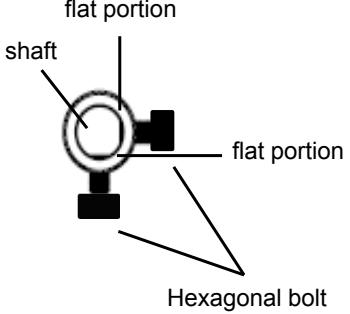No.	Part name	Procedure	Remarks
(8)	Fan motor, Fan	<p>2. Attachment</p> <p>1) Screw the fan motor with the motor fixing plate. (M8 x 0.8" (20mm), 2 pcs).</p> <p>NOTE</p> <p>Fix the wiring of the motor on the electrical parts box side as right figure.</p> <p>2) Attach the ground screw.</p> <p>3) Put the fan in the fan case.</p> <p>Attach the nose plate to the original position on the fan case.</p> <p>NOTE</p> <p>Adjust the direction of the fan blade.</p> <p>4) Insert the fan to the shaft.</p> <p>5) Tighten the Screw C. (M8 x 0.8" (20mm), 8 pcs)</p> <p>6) Insert the fan to where the shaft of the fan motor stops, and adjust the flat portion(2 places), then tighten the hexagon head bolt.</p> <p>NOTE</p> <p>Check that if the fan rotate smoothly without touching the fan case.</p> <p>NOTE</p> <p>Be sure to use a torque wrench for fixing and tighten with 7.4 lbs•ft (10 N•m)</p> <p>7) Hook the fan assembly on the looser screw B.</p> <p>8) Tighten the screw A and B. (M8 x 0.8" (20mm), 10 pcs)</p> <p>9) Connect the wires of the fan motor as before, and close and fix the electrical parts box cover.</p> <p>Be sure to wire in the electrical parts box as before.</p> <p>10) Attach the bottom plate(fan side) to the original position.</p>	 <p>Electrical parts box Wiring of the motor Ground screw</p>  

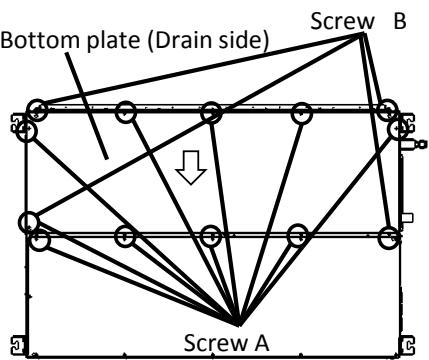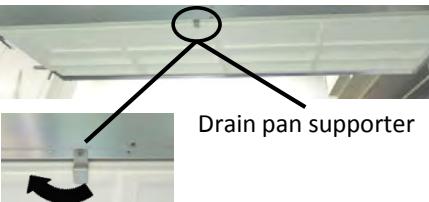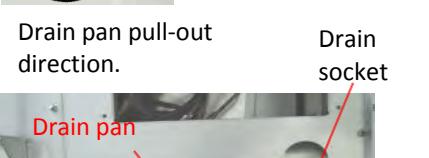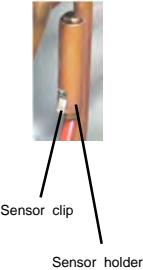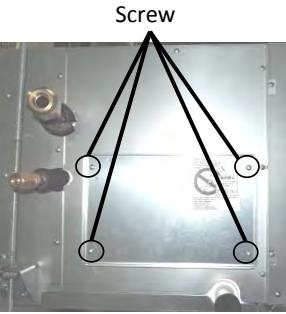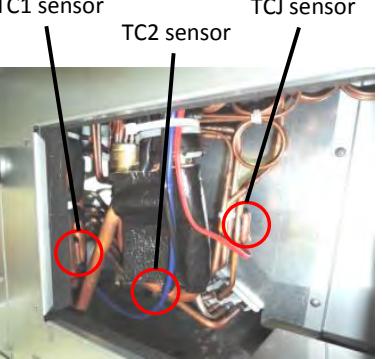No.	Part name	Procedure	Remarks
⑨	Drain pan	<p>1. Detachment</p> <p>1) Remove the drain hose or drain cap and then extract the drain water accumulated in the drain pan.</p> <p>NOTE</p> <p>When removing the drain hose or drain cap, be sure to take the drain water with a bucket, etc.</p> <p>2) Remove the screws A fixing the bottom plate . (9 positions) Loosen the screws B. (4 positions)</p> <p>3) Slide the bottom plate (drain side) to the arrow direction and then remove the panel.</p> <p>4) Loosen the screw of the drain pan supporter, and turn the drain pan supporter.</p> <p>5) Lower the drain pan of the drain socket side, and remove it to the arrow direction slowly.</p> <p>CAUTION</p> <p>When removing the drain pan, do not hold the drain socket. (Water leakage may occur.)</p> <p>2. Attachment</p> <p>1) Put back the drain pan, and turn back the drain pan supporter and fix it with the screws.</p> <p>2) Attach the bottom plate (drain side) to the original position</p>	   
⑩	Sensor TC1,TC2,TCJ	<p>1. Detachment</p> <p>1) Perform 1 of ① to remove the electrical parts box cover.</p> <p>2) Loosen the fixing screws of the inspection cover and remove the inspection cover.</p> <p>3) Remove the connectors of the wires of TC1 sensor , TC2 sensor and TCJ sensor from the control P.C.board.</p> <p>CN100 : TC1 sensor (3P: Brown) CN101 : TC2 sensor (2P: Black) CN102 : TCJ sensor (2P: Red)</p> <p>4) Remove the sensor from the sensor holder</p>  	 

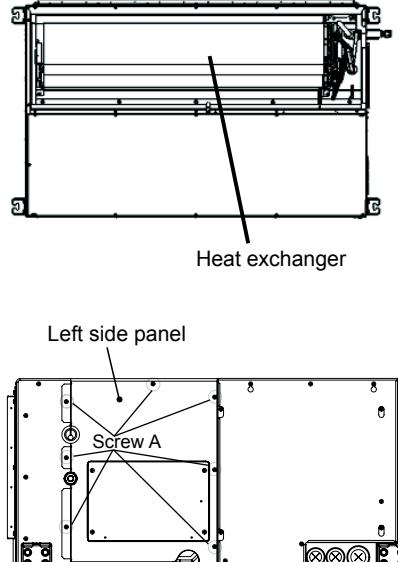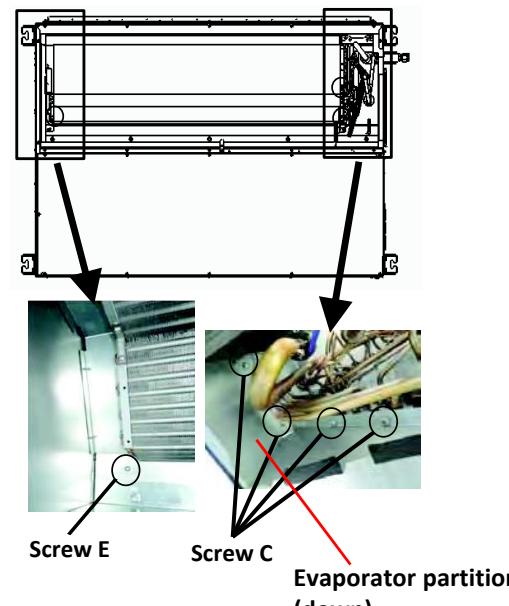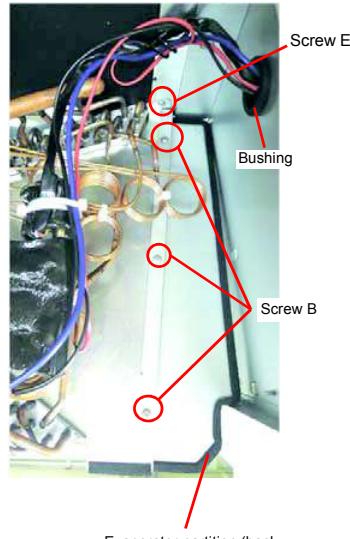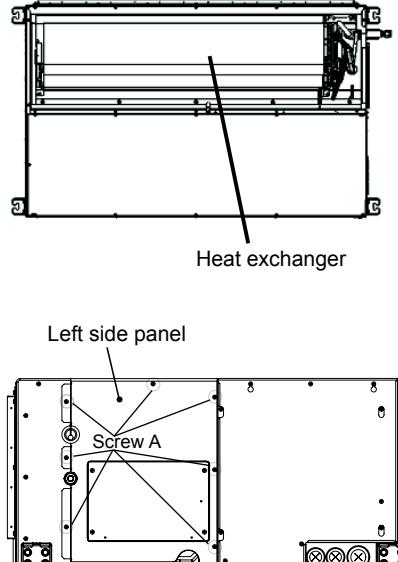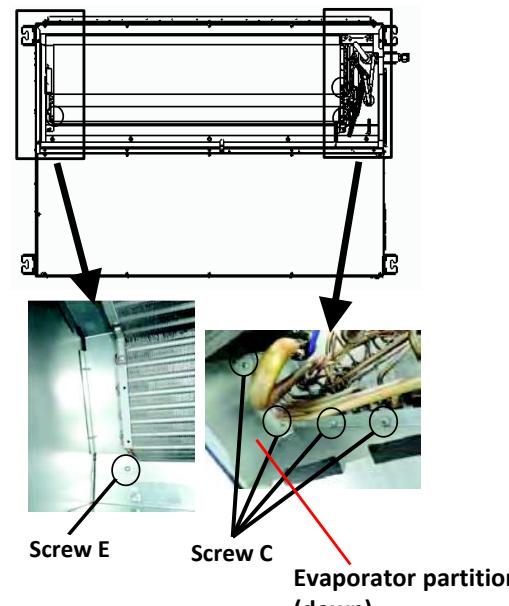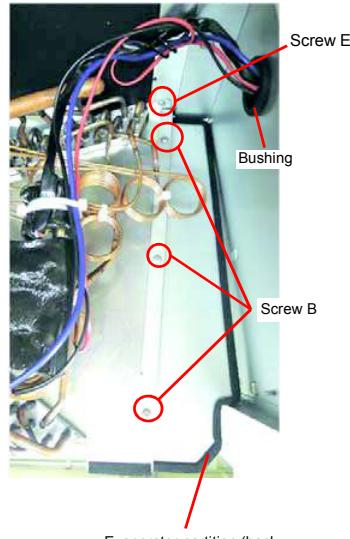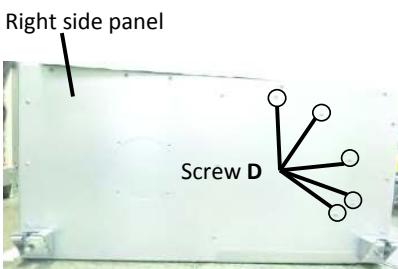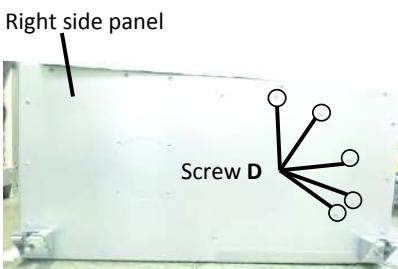No.	Part name	Procedure	Remarks
⑪	Heat exchanger	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Recover the refrigerant gas and then remove the refrigerant pipe of the indoor unit. 2) Perform 1 of ⑨ to remove the drain pan. 3) Remove the screw A (M4 x 0.4" (10mm), 7 pcs) and remove the Left side panel. 4) After performing 1) and 3) of 1 of ⑩, withdraw the wire of the sensor from the bushing to the heat exchanger side. 5) Remove the screw B (M4 x 0.4" (10mm), 3 pcs) and remove the evaporator partition (back). 6) Remove the screw C (M4 x 0.4" (10mm), 4 pcs) and remove the evaporator partition (down). 7) Remove the screw D (M4 x 0.4" (10mm), 5 pcs) of the right side panel. 8) While holding the heat exchanger, remove the screw E (M4 x 0.4" (10mm), 2 pcs) and then take out the heat exchanger slowly.   	  
		<p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the heat exchanger to the original position. Screw E (M4 x 0.4" (10mm), 2 pcs) 2) Fix the screw D on the right side panel as before. Screw D (M4 x 0.4" (10mm), 5 pcs) 3) Attach the evaporator partition (down) as before. Screw C (M4 x 0.4" (10mm), 4 pcs) 4) Attach the evaporator partition (back) as before. Screw B (M4 x 0.4" (10mm), 3 pcs) 5) Perform 1) , 3) and 4) of 2 of ⑩ to attach the sensor connector and electrical parts box cover . 6) Attach the Left side panel as before. Screw A (M4 x 0.4" (10mm), 7 pcs) 7) Perform 2 of ⑨ to attach the drain pan and bottom plate (drain side). 	

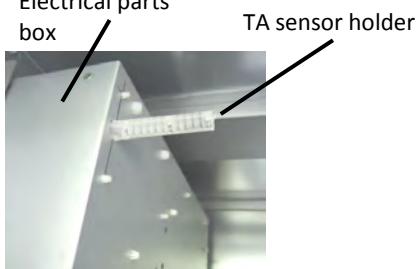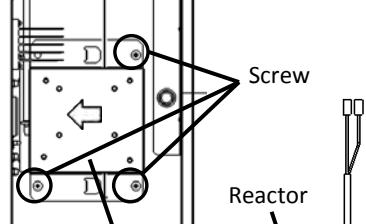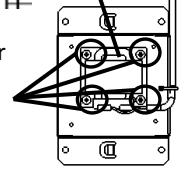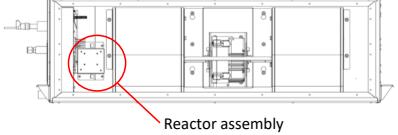No.	Part name	Procedure	Remarks
⑫	Sensor TA	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform 1 of ① and 1 of ⑦. 2) Remove the connector of the wires of TA sensor from the control P.C. board. 3) Pinch the lock of the TA sensor holder from the outside of the electrical parts box and push it into the inside of the electrical parts box. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the TA sensor to the original position. 2) Attach the wires of TA sensor in the holder as before. 3) Attach the electrical parts box as before. 	 <p>TA sensor CN104</p>  <p>Electrical parts box TA sensor holder</p>
⑬	Reactor	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform 1 of ① and 1 of ⑦. 2) Remove the connector of the wires of the reactor from the fan control P.C. board. 3) Remove the screws fixing the reactor cover. Slide the reactor cover to the arrow direction and remove. 4) Remove the screws fixing the reactor. 5) Remove the reactor from the reactor cover. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the reactor to the reactor cover. 2) Attach the reactor cover as before. 3) Attach the wires of the reactor in the holder as before. 	 <p>CN511 CN510</p>  <p>Screw Reactor cover</p>  <p>Reactor screws</p>  <p>Reactor assembly</p>


NOTE

After assembling, check if that there is no abnormal sound, vibration, or puncture.

Check the exchange point when you have a problem.


14. EXPLODED VIEWS AND PARTS LIST

14-1. Indoor Unit

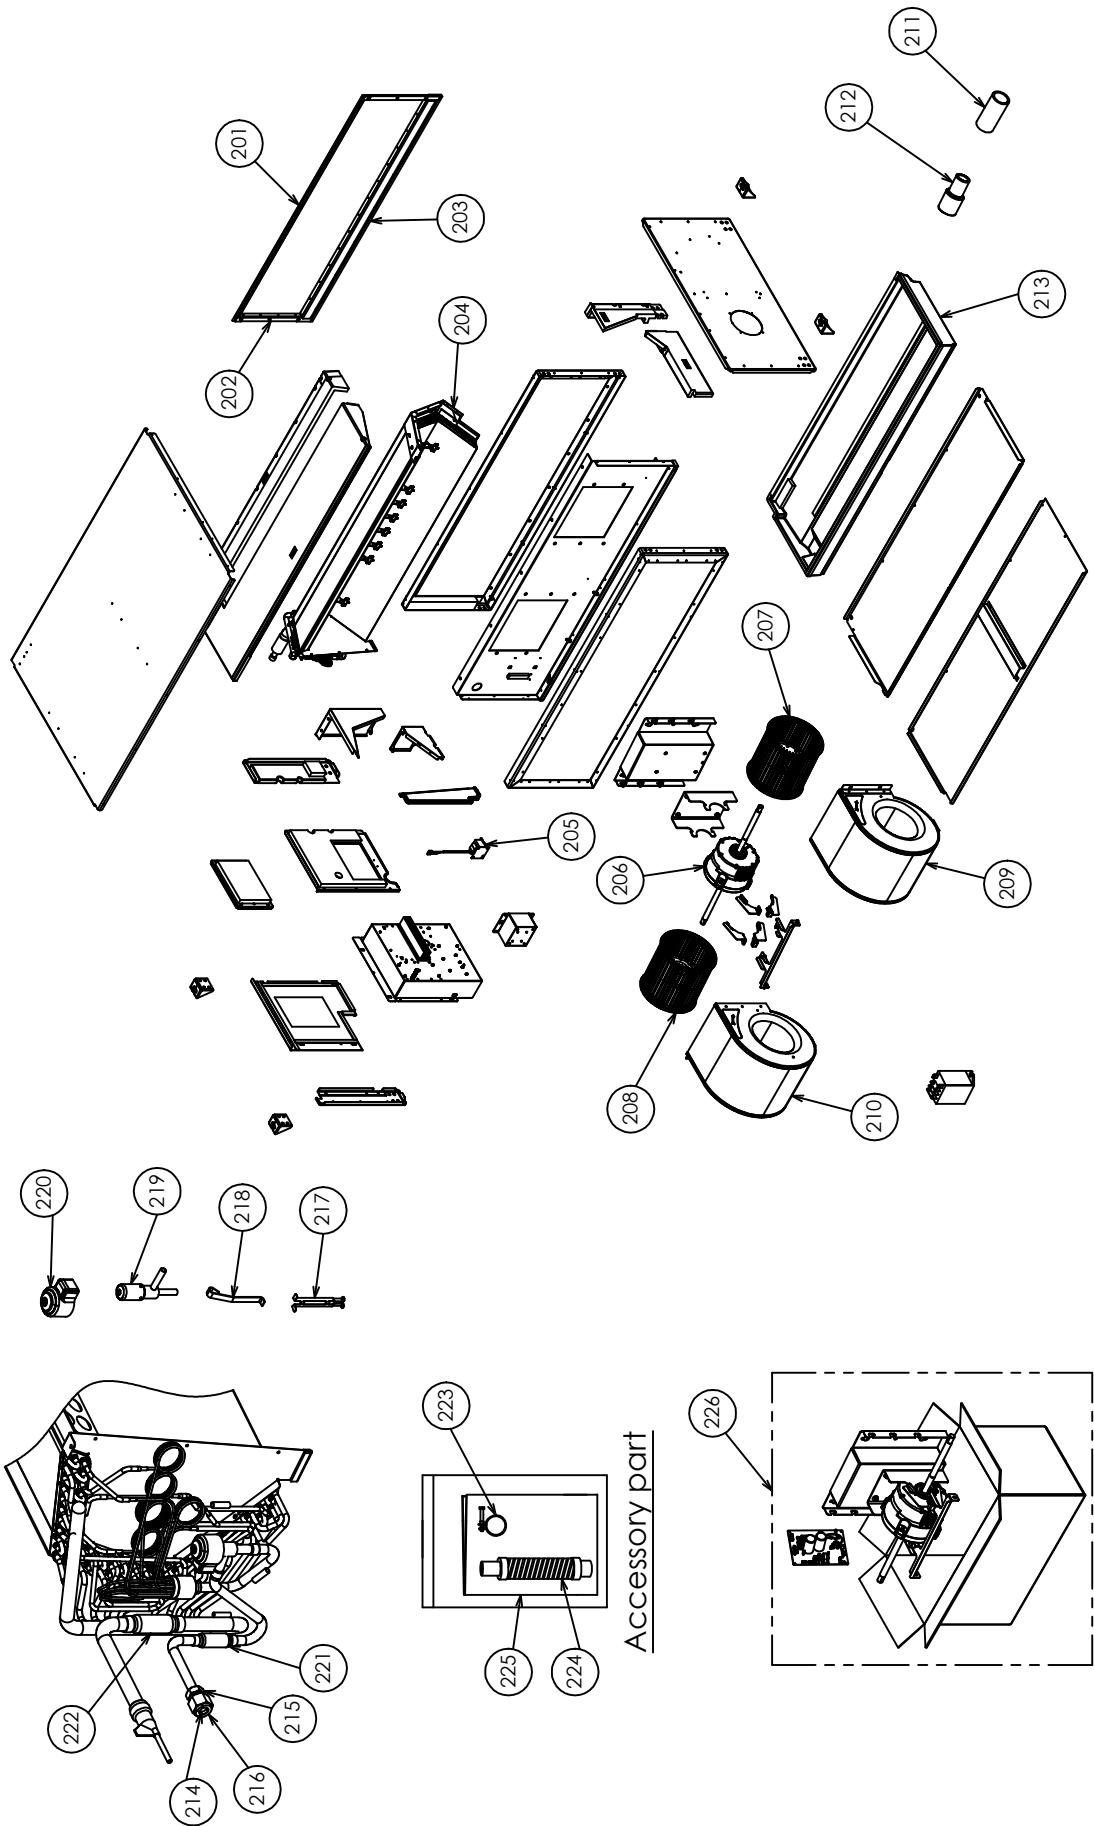

Location No.	Part No.	Description	Model name MMD-UP****HP-UL	
			0721	0961
201	43T39375	FLANGE, UPPER	1	1
202	43T39377	FLANGE, SIDE	2	2
203	43T39376	FLANGE, LOWER	1	1
204	43T44694	REFRIGERATION CYCLE ASSY	1	1
205	43T58332	REACTOR	1	1
206	43T21530	MOTOR, FAN	1	1
207	43T20345	FAN, MULTI BLADE, RIGHT	1	1
208	43T20346	FAN, MULTI BLADE, LEFT	1	1
209	43T22346	CASE, FAN, RIGHT	1	1
210	43T22347	CASE, FAN, LEFT	1	1
211	43T70322	SOCKET-DRAIN(A)	1	1
212	43T70323	SOCKET-DRAIN(B)	1	1
213	43T72331	PAN ASSY, DRAIN	1	1
214	43T47333	BONNET, 12.70 DIA	1	1
215	43T82333	SOCKET	1	1
216	43T97317	NUT, FLARE, 1/2 IN	1	1
217	43T19321	FIX-P-SENSOR	1	1
218	43T19333	HOLDER, SENSOR	2	2
219	43T46514	BODY, PMV	1	1
220	43T46515	COIL, PMV	1	1
221	43T47387	STRAINER	1	1
222	43T47407	STRAINER, GAS	1	1
223	43T83311	BAND, HOSE	1	1
224	43T70315	HOSE, DRAIN	1	1
225	43T85904	INSTR-INST	1	1
226	43T21535	SERVICE MOTOR KIT ASSY	1	1

14-2. Electric Parts

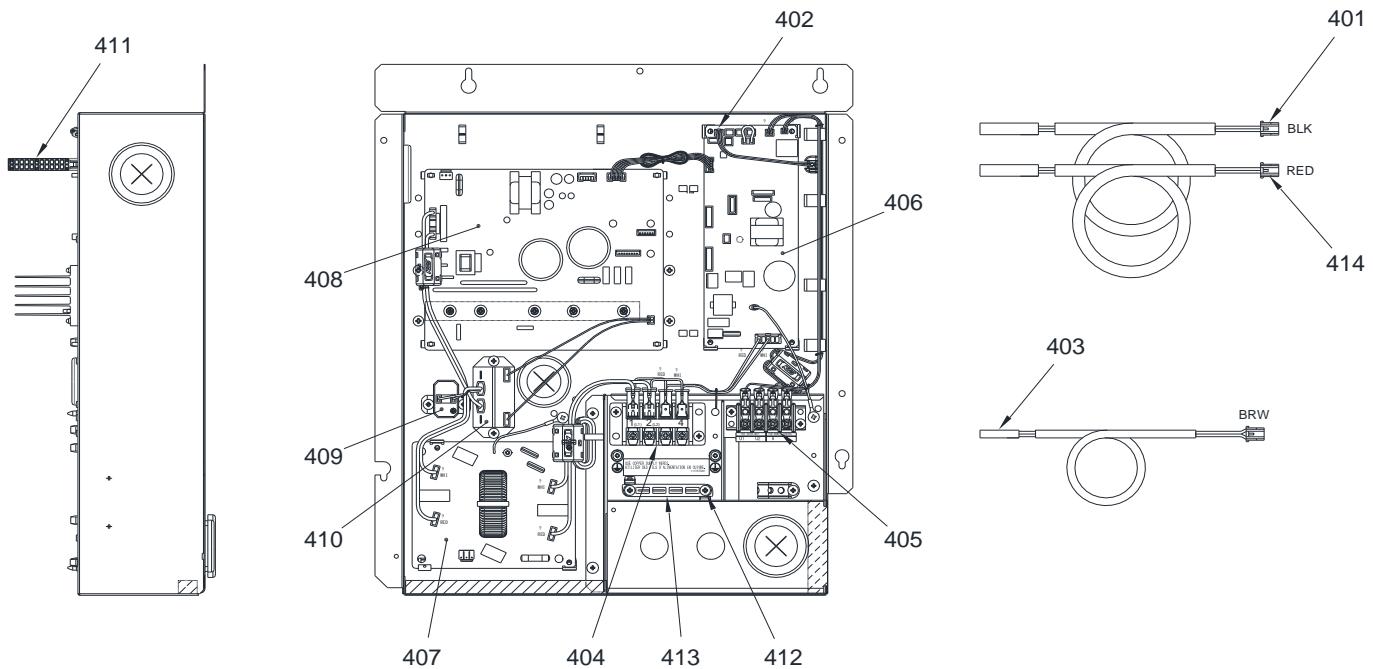

Location No.	Part No.	Description	Model name MMD-UP****HP-UL	
			0721	0961
401	43150440	TC-SENSOR	1	1
402	43T50476	SERVICE-SENSOR	1	1
403	43T50477	TC-SENSOR (TC1)	1	1
404	43T60458	SERV-TERMINAL	1	1
405	43T60362	TERMINAL	1	1
406	43TN9866	PC BOARD ASSY(MCC-1643)	1	1
407	43T6V670	PC BOARD ASSY	1	1
408	43TN9442	PC BOARD ASSY (MCC-1610)	1	1
409	43T50345	THERMISTOR,PTC	1	1
410	43T54324	POWER-RELAY	1	1
411	43T63356	HOLDER-TA	1	1
412	43T63348	CLAMP, DOWN	1	1
413	43T63349	CLAMP, UP	1	1
414	43150439	TC-SENSOR	1	1

WARNINGS ON REFRIGERANT LEAKAGE

Important

Check of Concentration Limit

The room in which the air conditioner is to be installed requires a design that in the event of refrigerant gas leaking out, its concentration will not exceed a set limit.

The refrigerant R410A which is used in the air conditioner is safe, without the toxicity or combustibility of ammonia, and is not restricted by laws to be imposed which protect the ozone layer. However, since it contains more than air, it poses the risk of suffocation if its concentration should rise excessively. Suffocation from leakage of R410A is almost non-existent. With the recent increase in the number of high concentration buildings, however, the installation of multi air conditioner systems is on the increase because of the need for effective use of floor space, individual control, energy conservation by curtailing heat and carrying power etc.

Most importantly, the multi air conditioner system is able to replenish a large amount of refrigerant compared with conventional individual air conditioners. If a single unit of the multi conditioner system is to be installed in a small room, select a suitable model and installation procedure so that if the refrigerant accidentally leaks out, its concentration does not reach the limit (and in the event of an emergency, measures can be made before injury can occur).

In a room where the concentration may exceed the limit, create an opening with adjacent rooms, or install mechanical ventilation combined with a gas leak detection device.


The concentration is as given below.

$$\frac{\text{Total amount of refrigerant (lbs (kg))}}{\text{Min. volume of the indoor unit installed room (ft}^3 (\text{m}^3))} \leq \text{Concentration limit (lbs/ft}^3 (\text{kg/m}^3)}$$

The concentration limit of R410A which is used in multi air conditioners is 0.019 lbs/ft³ (0.3kg/m³).

NOTE 1 :

If there are 2 or more refrigerating systems in a single refrigerating device, the amounts of refrigerant should be as charged in each independent device.

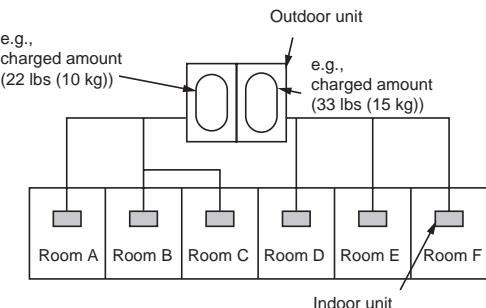

For the amount of charge in this example:


The possible amount of leaked refrigerant gas in rooms A, B and C is 22 lbs (10kg).

The possible amount of leaked refrigerant gas in rooms D, E and F is 33 lbs (15kg).


NOTE 2 :

The standards for minimum room volume are as follows.

- 1) No partition (shaded portion)

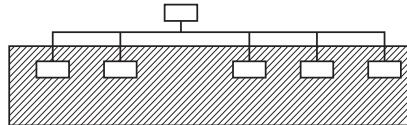


- 2) When there is an effective opening with the adjacent room for ventilation of leaking refrigerant gas (opening without a door, or an opening 0.15% or larger than the respective floor spaces at the top or bottom of the door).

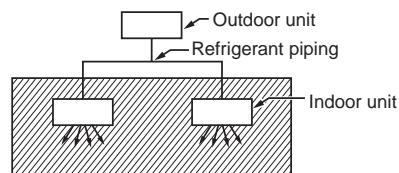


- 3) If an indoor unit is installed in each partitioned room and the refrigerant piping is interconnected, the smallest room of course becomes the object.

But when a mechanical ventilation is installed interlocked with a gas leakage detector in the smallest room where the density limit is exceeded, the volume of the next smallest room becomes the object.

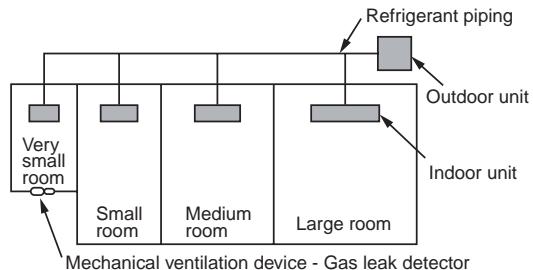

NOTE 3 :

The minimum indoor floor area compared with the amount of refrigerant is roughly as follows:
(When the ceiling is 8.9 ft (2.7m) high)

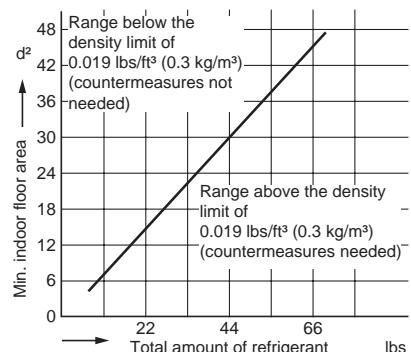

Toshiba Carrier (Thailand) Co., Ltd.

**144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI,
AMPHUR MUANG, PATHUMTHANI 12000, THAILAND.**