



Installation Instructions

CONTENTS

| | Page |
|---|-----------|
| SAFETY CONSIDERATIONS | 1 |
| INTRODUCTION | 1 |
| INSTALLATION | 1 |
| Step 1 — Inspect Shipment | 1 |
| Step 2 — Rig and Place Unit | 2 |
| • COOLER FLUID, VENT, AND DRAIN | |
| • BRINE UNITS | |
| • PREPARATION FOR YEAR-ROUND OPERATION | |
| • FILL FLUID LOOP | |
| • INSULATE COOLER HEADS | |
| • 30HXA PIPING, VALVE, AND FAN CYCLING | |
| PRESSURE SWITCH INSTALLATION | |
| • 30HXC PIPING AND VALVE INSTALLATION | |
| • INSTALL PRESSURE RELIEF REFRIGERANT VENT | |
| PIPING | |
| Step 3 — Make Electrical Connections | 26 |
| • FIELD POWER CONNECTIONS | |
| • FIELD CONTROL POWER CONNECTIONS | |
| • CONDENSER FAN CONTROL FOR CONDENSER | |
| UNITS USED WITH 30HXA UNITS | |
| Step 4 — Install Accessories | 30 |
| • 30HXA LOW-AMBIENT OPERATION | |
| • MINIMUM LOAD ACCESSORY | |
| • MISCELLANEOUS ACCESSORIES | |
| Step 5 — Leak Test Unit | 30 |
| • 30HXC UNITS | |
| • 30HXA UNITS | |
| Electrical Data | 30 |
| Step 6 — Refrigerant Charge | 38 |
| • 30HXC UNITS | |
| • 30HXA UNITS | |
| Step 7 — BACnet® Communication Option Wiring 40 | |
| • MS/TP WIRING RECOMMENDATIONS | |

SAFETY CONSIDERATIONS

Installing, starting up, and servicing this equipment can be hazardous due to system pressures, electrical components, and equipment location. Only trained, qualified installers and service mechanics should install, start up, and service this equipment.

IMPORTANT: This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with these instructions, this equipment may cause radio interference. The equipment has been tested and found to comply with the limits of a Class A computing device as defined by the FCC (Federal Communications Commission, U.S.A.) Regulations, Subpart J of Part 15, which are designed to provide reasonable protection against such interference when operated in a commercial environment.

When working on the equipment, observe precautions in the literature and on tags, stickers, and labels attached to the equipment.

- Follow all safety codes.
- Wear safety glasses and work gloves.
- Use care in handling, rigging, and setting bulky equipment.

WARNING

DO NOT USE TORCH to remove any component. System contains oil and refrigerant under pressure.

To remove a component, wear protective gloves and goggles and proceed as follows:

- Shut off electrical power to unit.
- Recover refrigerant to relieve all pressure from system using both high-pressure and low pressure ports.
- Traces of vapor should be displaced with nitrogen and the work area should be well ventilated. Refrigerant in contact with an open flame produces toxic gases.
- Cut component connection tubing with tubing cutter and remove component from unit. Use a pan to catch any oil that may come out of the lines and as a gauge for how much oil to add to the system.
- Carefully unsweat remaining tubing stubs when necessary. Oil can ignite when exposed to torch flame.

Failure to follow these procedures may result in personal injury or death.

CAUTION

DO NOT re-use compressor oil or any oil that has been exposed to the atmosphere. Dispose of oil per local codes and regulations. **DO NOT** leave refrigerant system open to air any longer than the actual time required to service the equipment. Seal circuits being serviced and charge with dry nitrogen to prevent oil contamination when timely repairs cannot be completed. Failure to follow these procedures may result in damage to equipment.


INTRODUCTION

These instructions cover installation of 30HX liquid chillers with electronic controls and units with factory-installed options.

INSTALLATION

Step 1 — Inspect Shipment

Inspect unit for damage upon arrival. If damage is found, immediately file a claim with the shipping company. Verify proper unit delivery by comparing the model number on the nameplate with the data in Fig. 1. Do not store units in an area exposed to weather because of sensitive control mechanisms and electronic devices.

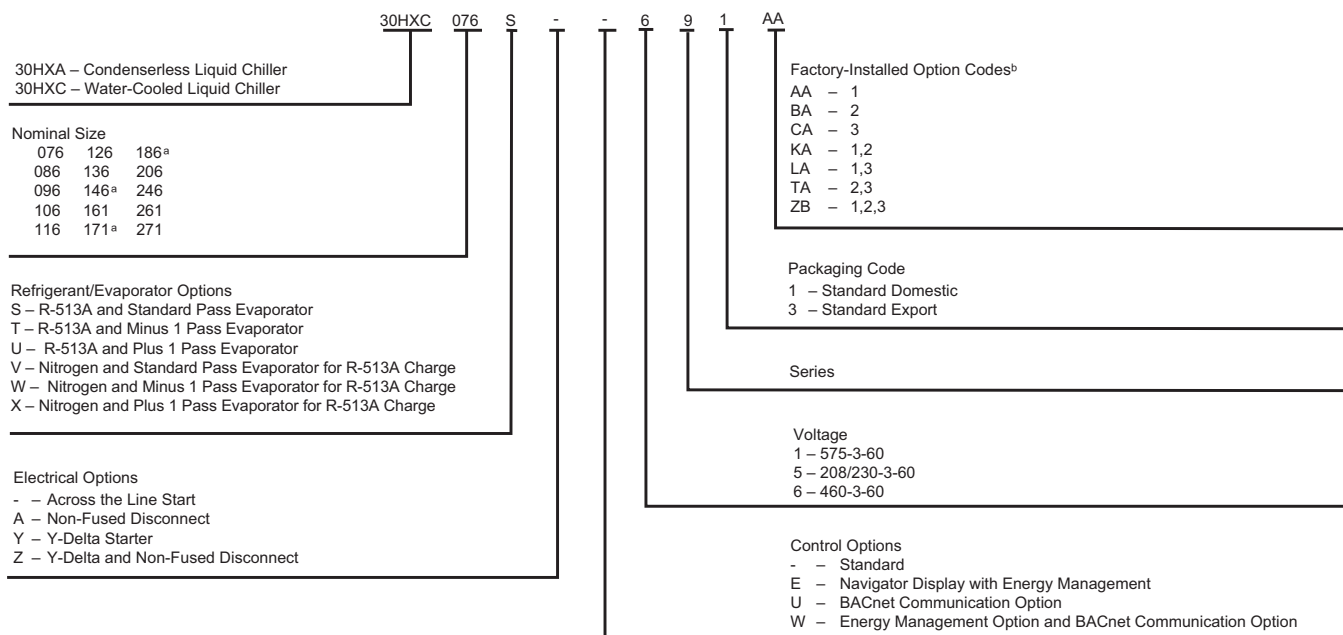

NOTE(S):
a. 146, 171, and 186 ton are for 30HXA ONLY
b. Option Code Descriptions:
1 = Minimum Load Control
2 = Suction Service Valve
3 = Medium Temperature Brine

Fig. 1 – 30HX Identification

Locate unit indoors. When considering unit location, consult National Electrical Code (NEC, U.S.A.) and local code requirements. Allow sufficient space for wiring, piping, and service. Install unit in an area which will not be exposed to ambient temperatures below 50°F (10°C). See Fig. 2-10 for clearance details.

Allow the following clearances for service access:

Front 3 ft (914 mm)
Rear 3 ft (914 mm)
Top 2 ft (610 mm)
Ends tube length at one (either) end; 3 ft (914 mm) at opposite end.

Be sure surface beneath unit is level and is capable of supporting the operating weight of the unit. See Fig. 11 and 12 and Tables 1 and 2 for unit mounting and operating weights. If necessary, add supporting structure (steel beams or reinforced concrete slabs) to floor to transfer weight to nearest beams.

Step 2 – Rig and Place Unit

⚠ CAUTION

Rig unit from the top heat exchanger only. Rigging from the bottom heat exchanger will cause the unit to be lifted unsafely. Personal injury or damage to the unit may occur.

IMPORTANT: Install unit in area which will not be exposed to ambient temperatures below 50°F (10°C).

Do not remove unit from skid until unit is in its final location. Rig from the rigging holes provided in the top heat exchanger. See Fig. 2-9, 11, and 12 for rigging and center of gravity information. Lower the unit carefully onto the floor or roller. Push or pull only on the skid, **not the unit**. If the unit is moved on rollers, use a minimum of 3 evenly spaced rollers.





Areas where unit mounting points will be located must be level to within 1/16 in. per ft (5 mm per m) along the long axis of the unit. Once unit is in place and level, bolt unit to the floor. Use isolation pads under the unit to aid in vibration isolation as required.

| UNIT | OPERATING WEIGHT - lb (kg) | B | C | E | L | WGT DISTRIBUTION AT EACH MTG PLATE - lb (kg) | | | | | |
|----------|----------------------------|-----------------|-----------------|----------------|-----------------|--|---------------|--------------|---------------|---------------|---------------|
| | | | | | | 1 | 2 | 3 | 4 | 5 | 6 |
| 30HXC076 | 5720 (2595) | 45.87 (1165) | 45.87 (1165) | 32.50 (826) | 65.22 (1657) | 741 (336) | 946 (430) | 597 (271) | 1114 (505) | 1423 (645) | 899 (407) |
| 30HXC086 | 5743 (2606) | 45.87 (1165) | 45.87 (1165) | 32.50 (826) | 65.22 (1657) | 741 (336) | 950 (432) | 599 (272) | 1116 (506) | 1432 (649) | 905 (410) |
| 30HXC096 | 5875 (2666) | 54.12 (1375) | 37.63 (956) | 32.50 (826) | 65.22 (1657) | 688 (312) | 971 (440) | 695 (315) | 1031 (468) | 1452 (658) | 1038 (471) |
| 30HXC106 | 6197 (2812) | 54.12 (1375) | 37.63 (956) | 33.50 (851) | 67.22 (1707) | 732 (332) | 1031 (468) | 746 (338) | 1076 (489) | 1515 (687) | 1096 (497) |

NOTES:

- Operating weight includes weight of water and refrigerant.
- ☉ Denotes center of gravity.
- Dimensions are in inches (mm).
- Recommended service clearance around machine is 36 in. (914.4 mm).
- Victaulic nozzles are standard on all models. Flow switch factory installed in evaporator inlet Victaulic nozzle.

WEIGHT DISTRIBUTION

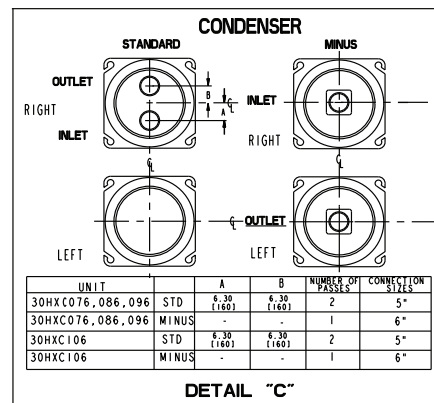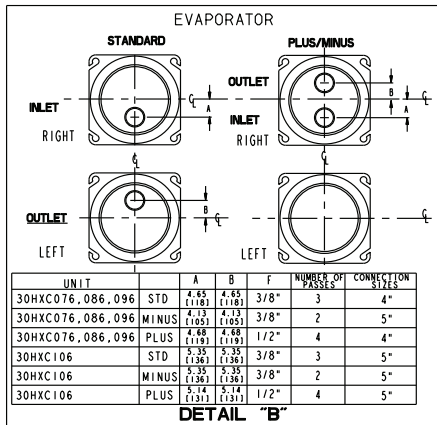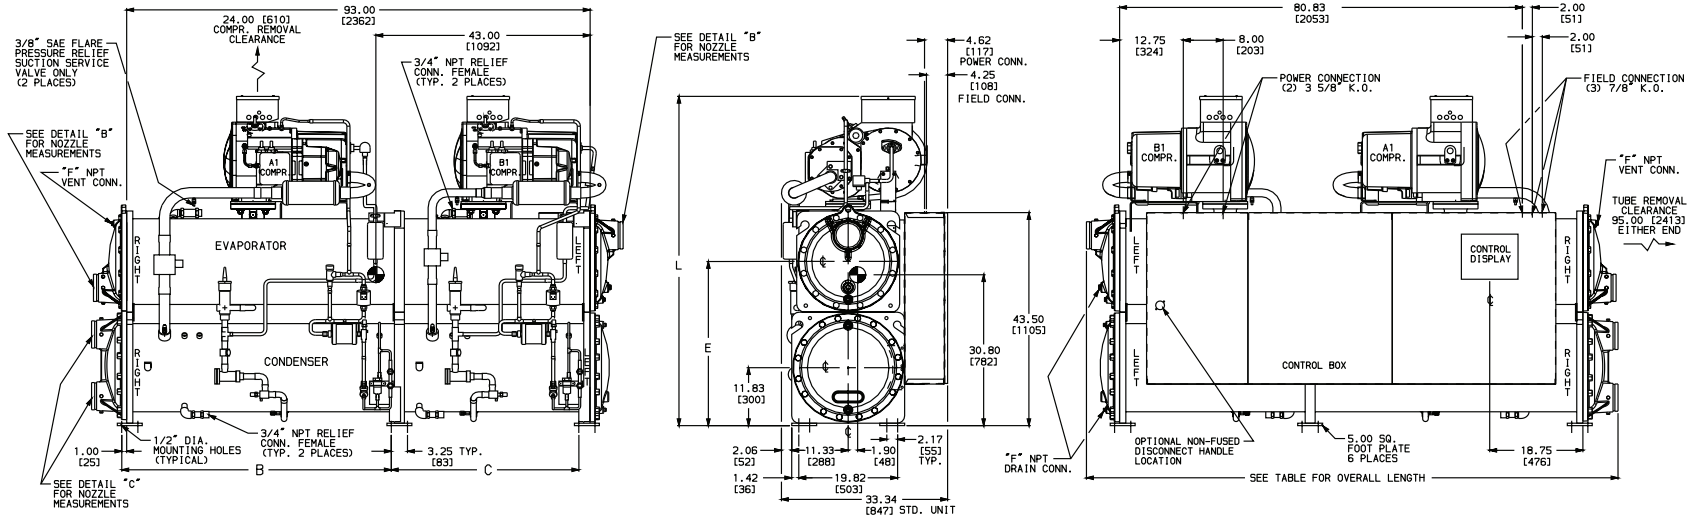

| OVERALL LENGTH TABLE | | | |
|---------------------------|--------------------------|---------------------------------|-----------------------|
| EVAPORATOR | CONDENSER | OVERALL LENGTH 076, 086, 096 | OVERALL LENGTH 106 |
| STANDARD EVAPORATOR | STANDARD CONDENSER | 106.39 (2702) | 106.70 (2710) |
| STANDARD EVAPORATOR | MINUS ONE PASS CONDENSER | 113.00 (2870) | 113.00 (2870) |
| PLUS ONE PASS EVAPORATOR | STANDARD CONDENSER | 104.05 (2643) | 104.05 (2643) |
| PLUS ONE PASS EVAPORATOR | MINUS ONE PASS CONDENSER | 113.00 (2870) | 113.00 (2870) |
| MINUS ONE PASS EVAPORATOR | STANDARD CONDENSER | 103.99 (2641) | 103.99 (2637) |
| MINUS ONE PASS EVAPORATOR | MINUS ONE PASS CONDENSER | 113.00 (2870) | 113.00 (2870) |

DOOR SWING CLEARANCE

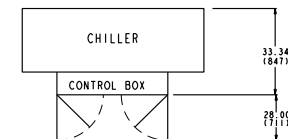








Fig. 2 — Dimensions-30HXC076-106

| UNIT | OPERATING WEIGHT - lb (kg) | WGT DISTRIBUTION AT EACH MTG PLATE - lb (kg) | | | | | |
|----------|----------------------------|--|---------------|--------------|---------------|---------------|---------------|
| | | 1 | 2 | 3 | 4 | 5 | 6 |
| 30HXC116 | 6435 (2920) | 730 (331) | 1117 (507) | 779 (353) | 1056 (479) | 1620 (735) | 1131 (513) |
| 30HXC126 | 6613 (3000) | 755 (342) | 1152 (523) | 797 (362) | 1085 (492) | 1665 (755) | 1156 (525) |
| 30HXC136 | 6708 (3040) | 760 (345) | 1180 (535) | 813 (369) | 1086 (492) | 1694 (768) | 1175 (533) |

NOTES:

- Operating weight includes weight of water and refrigerant.
- Denotes center of gravity.
- Dimensions are in inches (mm).
- Recommended service clearance around machine is 36 in. (914.4 mm).
- Victaulic nozzles are standard on all models. Flow switch factory installed in evaporator inlet Victaulic nozzle.

DOOR SWING CLEARANCE

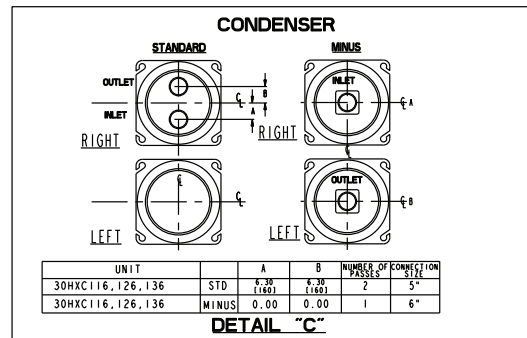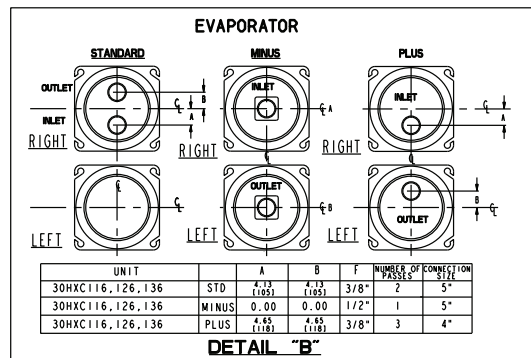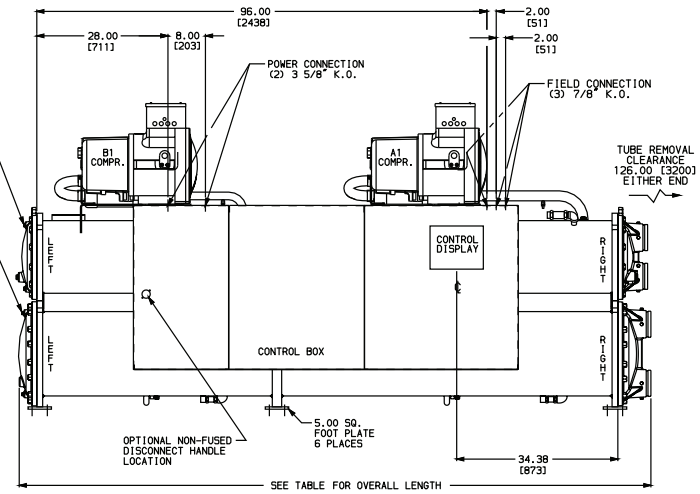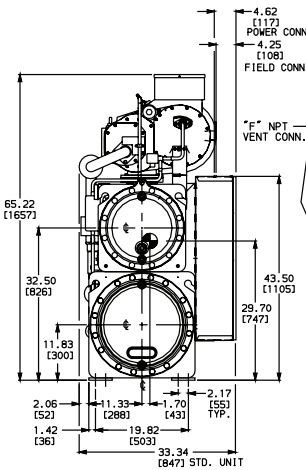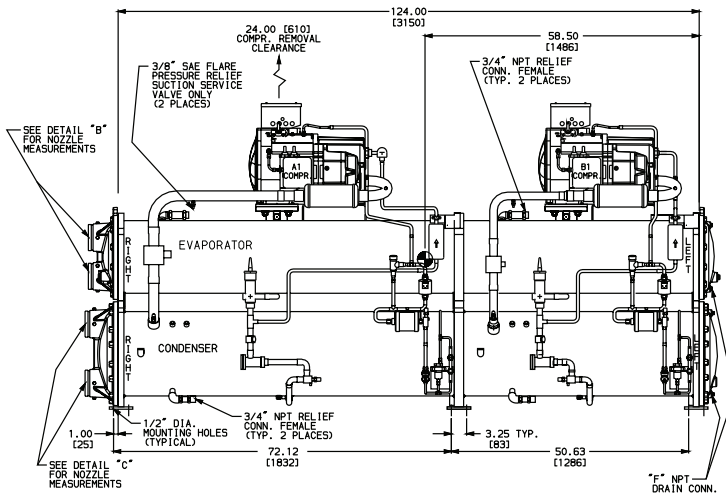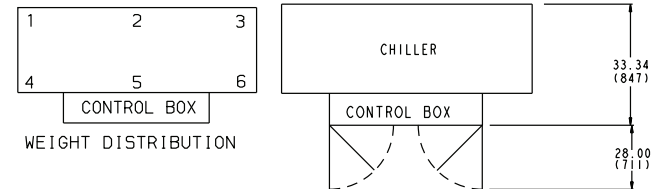

| OVERALL LENGTH TABLE | | |
|---------------------------|--------------------------|----------------|
| EVAPORATOR | CONDENSER | OVERALL LENGTH |
| STANDARD EVAPORATOR | STANDARD CONDENSER | 134.99 [3429] |
| STANDARD EVAPORATOR | MINUS ONE PASS CONDENSER | 137.39 [3490] |
| PLUS ONE PASS EVAPORATOR | STANDARD CONDENSER | 144.00 [3658] |
| PLUS ONE PASS EVAPORATOR | MINUS ONE PASS CONDENSER | 144.00 [3658] |
| MINUS ONE PASS EVAPORATOR | STANDARD CONDENSER | 141.05 [3583] |
| MINUS ONE PASS EVAPORATOR | MINUS ONE PASS CONDENSER | 144.00 [3658] |

Fig. 3 — Dimensions-30HXC116-136

| UNIT | OPERATING WEIGHT - lb (kg) | B - in. (mm) | C - in. (mm) | WGT DISTRIBUTION AT EACH MTG PLATE - lb (kg) | | | | | |
|----------|----------------------------|--------------|--------------|--|------------|-----------|------------|------------|------------|
| | | | | 1 | 2 | 3 | 4 | 5 | 6 |
| 30HXC161 | 7818 (3546) | 72.12 (1832) | 50.63 (1286) | 857 (389) | 1334 (605) | 953 (432) | 1278 (580) | 1983 (899) | 1412 (641) |

NOTES:

- Operating weight includes weight of water and refrigerant.
- ☉ Denotes center of gravity.
- Dimensions are in inches (mm).
- Recommended service clearance around machine is 36 in. (914.4 mm).
- Victaulic nozzles are standard on all models. Flow switch factory installed in evaporator inlet Victaulic nozzle.





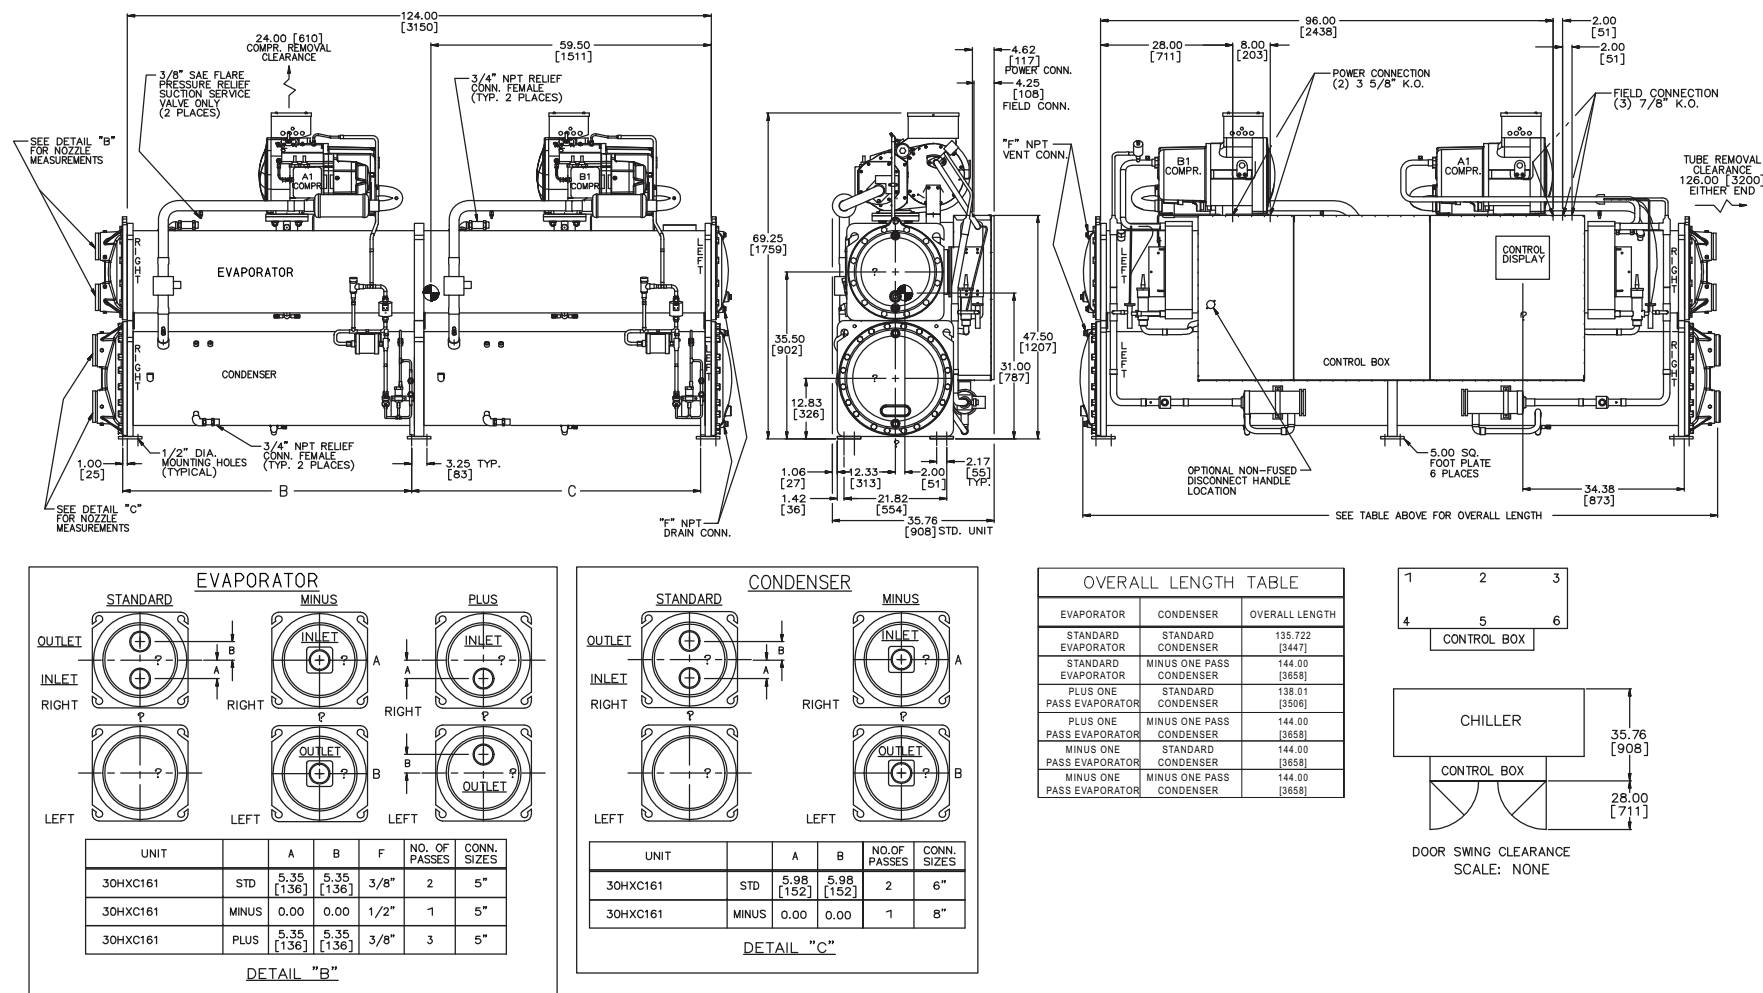


Fig. 4 — Dimensions, 30HXC161

| UNIT | OPERATING WEIGHT - lb (kg) | A | WT. DISTRIBUTION AT EACH MOUNTING PLATE - lb (kg) | | | | | |
|----------|----------------------------|-------------|---|-------------|------------|------------|-------------|------------|
| | | | 1 | 2 | 3 | 4 | 5 | 6 |
| 30HXC206 | 11056 (5015) | 33.88 (860) | 991 (449) | 2514 (1140) | 1299 (589) | 1254 (569) | 3273 (1485) | 1725 (782) |
| 30HXC246 | 11144 (5056) | 34.38 (873) | 1001 (454) | 2555 (1159) | 1327 (601) | 1172 (531) | 3328 (1510) | 1761 (799) |
| 30HXC261 | 11167 (5066) | 34.38 (873) | 1001 (454) | 2560 (1161) | 1332 (604) | 1172 (531) | 3335 (1513) | 1767 (802) |
| 30HXC271 | 11204 (5083) | 34.38 (873) | 1001 (454) | 2569 (1165) | 1339 (608) | 1172 (531) | 3346 (1518) | 1777 (806) |

NOTES:

- Operating weight includes weight of water and refrigerant.
- ☉ Denotes center of gravity.
- Dimensions are in inches (mm).
- Recommended service clearance around machine is 36 in. (914.4 mm).
- Victaulic nozzles are standard on all models. Flow switch factory installed in evaporator inlet Victaulic nozzle.

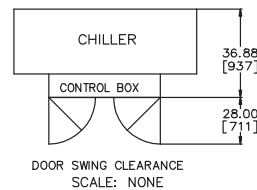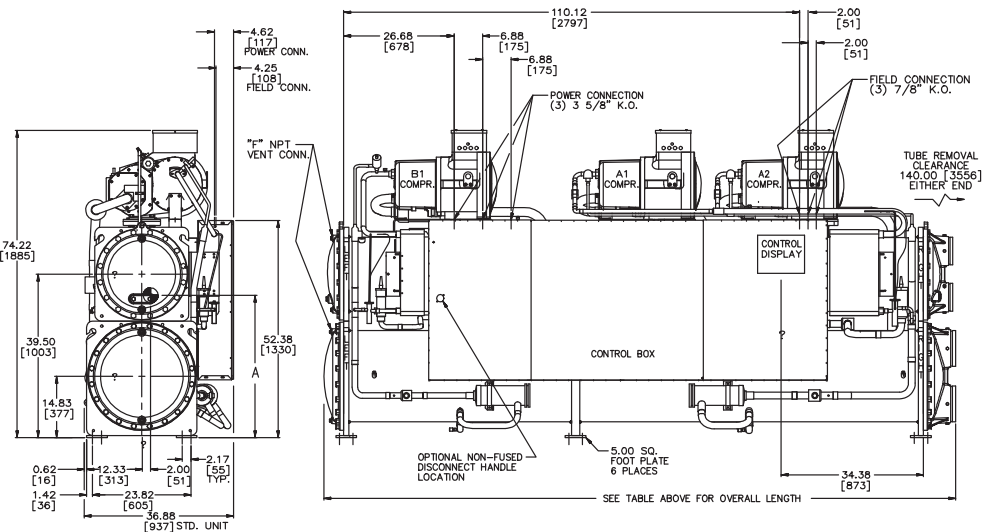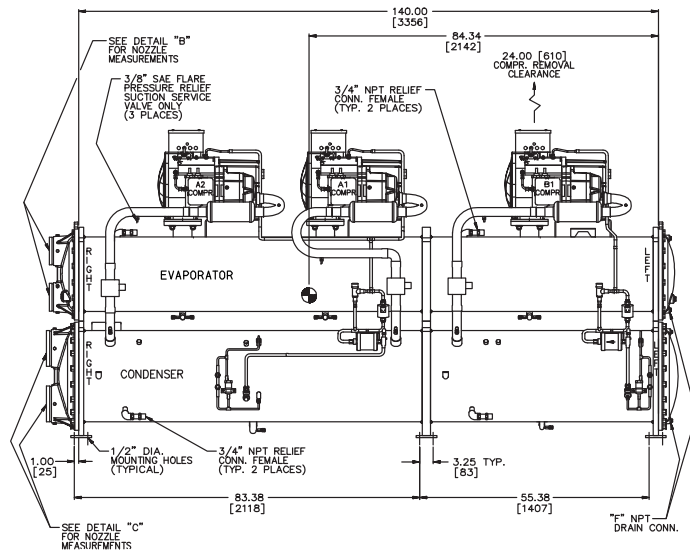

| OVERALL LENGTH TABLE | | |
|---------------------------|--------------------------|----------------|
| EVAPORATOR | CONDENSER | OVERALL LENGTH |
| STANDARD EVAPORATOR | STANDARD CONDENSER | 152.54 [3875] |
| STANDARD EVAPORATOR | MINUS ONE PASS CONDENSER | 160.00 [4064] |
| PLUS ONE PASS EVAPORATOR | STANDARD CONDENSER | 160.00 [4064] |
| PLUS ONE PASS EVAPORATOR | MINUS ONE PASS CONDENSER | 160.00 [4064] |
| MINUS ONE PASS EVAPORATOR | STANDARD CONDENSER | 160.00 [4064] |
| MINUS ONE PASS EVAPORATOR | MINUS ONE PASS CONDENSER | 160.00 [4064] |





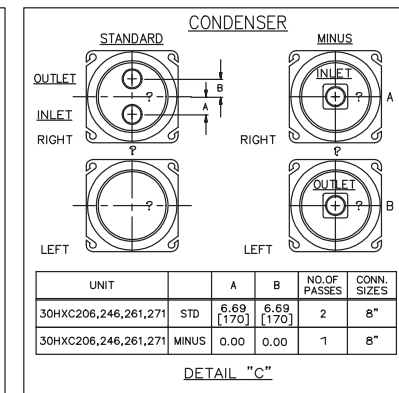


Fig. 5 — Dimensions-30HXC206-271

| UNIT | OPERATING WEIGHT - lb (kg) | B | C | E | L | P | R | S | WGT DISTRIBUTION AT EACH MTG PLATE - lb (kg) | | | | | |
|----------|-------------------------------|-----------------|-----------------|----------------|-----------------|---------------|-----------------|-----------------|---|--------------|--------------|--------------|---------------|--------------|
| | | | | | | | | | 1 | 2 | 3 | 4 | 5 | 6 |
| 30HXA076 | 4717 (2140) | 45.87 (1165) | 45.87 (1165) | 32.50 (826) | 65.22 (1657) | 3.88 (99) | 41.25 (1048) | 46.25 (1175) | 555 (252) | 793 (360) | 418 (190) | 926 (420) | 1326 (601) | 699 (317) |
| 30HXA086 | 4744 (2152) | 45.87 (1165) | 45.87 (1165) | 32.50 (826) | 65.22 (1657) | 3.88 (99) | 41.25 (1048) | 46.25 (1175) | 555 (252) | 798 (362) | 418 (190) | 928 (421) | 1340 (608) | 705 (320) |
| 30HXA096 | 4835 (2194) | 54.12 (1375) | 37.63 (956) | 32.50 (826) | 65.22 (1657) | 6.25 (159) | 49.50 (1257) | 38.00 (965) | 509 (231) | 808 (367) | 493 (224) | 848 (385) | 1350 (612) | 827 (375) |
| 30HXA106 | 5151 (2337) | 54.12 (1375) | 37.63 (956) | 33.50 (851) | 67.22 (1707) | 6.25 (159) | 49.50 (1257) | 38.00 (965) | 555 (252) | 869 (394) | 541 (245) | 896 (406) | 1410 (640) | 880 (399) |

| OVERALL LENGTH TABLE | | |
|----------------------|---------------------------------|-----------------------|
| EVAPORATOR | OVERALL LENGTH 076, 086, 096 | OVERALL LENGTH 106 |
| STANDARD EVAPORATOR | 105.68 (2684) | 106.30 (2700) |
| MINUS ONE | 103.28 (2623) | 103.40 (2626) |
| PASS EVAPORATOR | 107.00 (2718) | 107.00 (2718) |

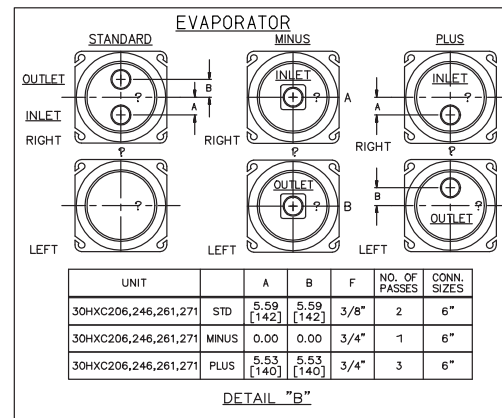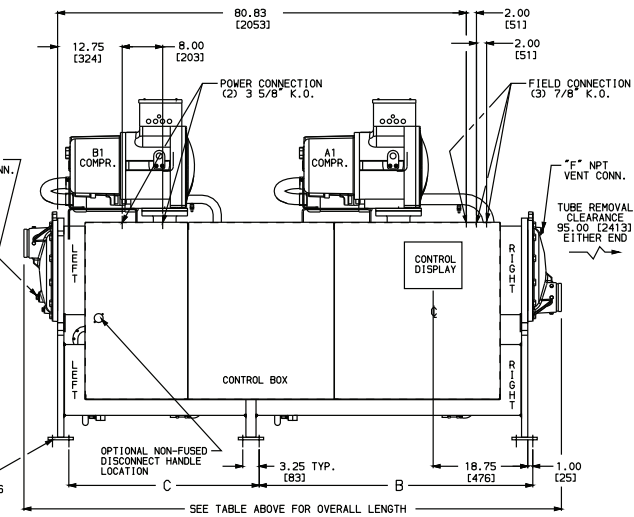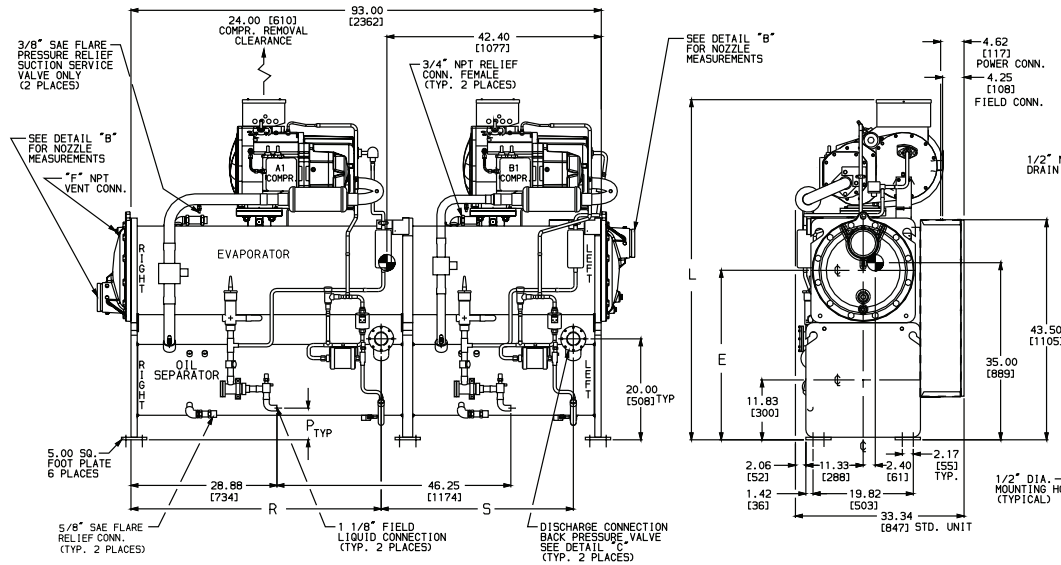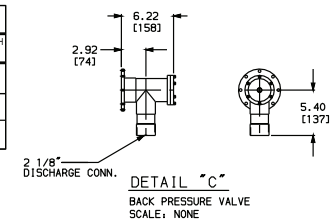

NOTES:

- Operating weight includes weight of water and refrigerant.
- Denotes center of gravity.
- Dimensions are in inches (mm).
- Recommended service clearance around machine is 36 in. (914.4 mm).
- Victaulic nozzles are standard on all models. Flow switch factory installed in evaporator inlet Victaulic nozzle.

DOOR SWING CLEARANCE





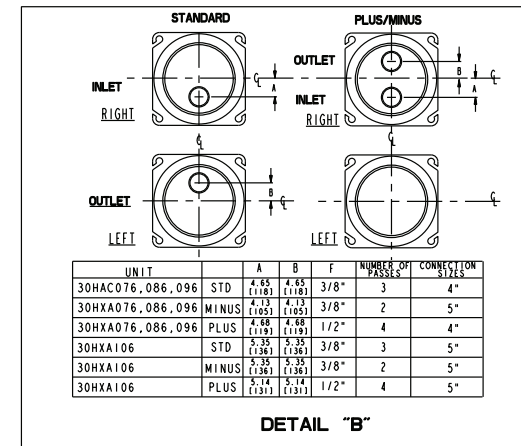


Fig. 6 — Dimensions-30HXA076-106

| UNIT | OPERATING WEIGHT - lb (kg) | WGT DISTRIBUTION AT EACH MTG PLATE - lb (kg) | | | | | |
|----------|-------------------------------|---|--------------|--------------|--------------|---------------|--------------|
| | | 1 | 2 | 3 | 4 | 5 | 6 |
| 30HXA116 | 5163 (2342) | 530 (240) | 895 (406) | 540 (245) | 855 (388) | 1456 (660) | 887 (402) |
| 30HXA126 | 5205 (2362) | 540 (245) | 905 (410) | 541 (245) | 864 (392) | 1468 (666) | 887 (402) |
| 30HXA136 | 5309 (2408) | 548 (249) | 926 (420) | 555 (252) | 874 (396) | 1498 (679) | 908 (412) |
| 30HXA146 | 5333 (2420) | 551 (250) | 930 (422) | 555 (252) | 883 (400) | 1506 (683) | 908 (412) |

| OVERALL LENGTH TABLE | |
|---------------------------|------------------|
| EVAPORATOR | OVERALL LENGTH |
| STANDARD EVAPORATOR | 134.28 (3411) |
| MINUS ONE PASS EVAPORATOR | 144.0 (3658) |
| PLUS ONE PASS EVAPORATOR | 136.88 (3472) |

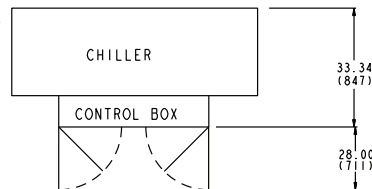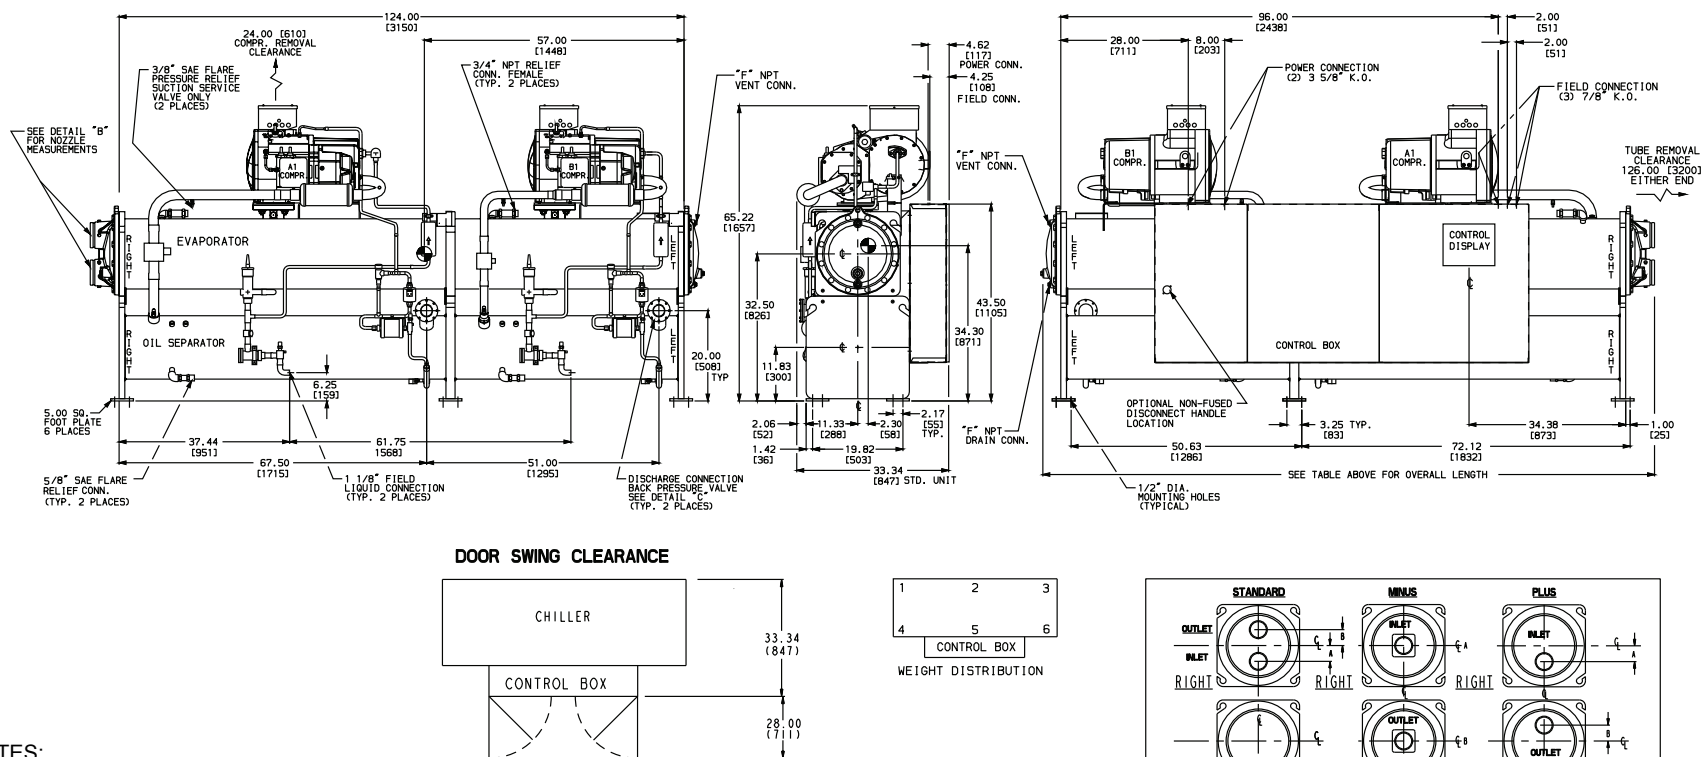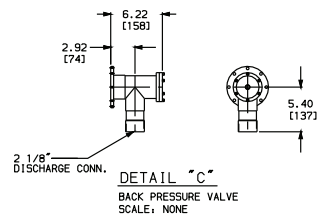

NOTES:

- Operating weight includes weight of water and refrigerant.
- ⊕ Denotes center of gravity.
- Dimensions are in inches (mm).
- Recommended service clearance around machine is 36 in. (914.4 mm).
- Victaulic nozzles are standard on all models. Flow switch factory installed in evaporator inlet Victaulic nozzle.



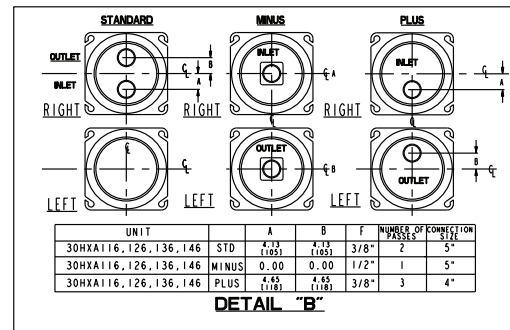


Fig. 7 — Dimensions-30HXA116-146

| UNIT | OPERATING WEIGHT - lb (kg) | B | C | R | S | T | WGT DISTRIBUTION AT EACH MTG PLATE - lb (kg) | | | | | |
|----------|----------------------------|-----------------|-----------------|-----------------|-----------------|-----------------|--|---------------|--------------|---------------|---------------|---------------|
| | | | | | | | 1 | 2 | 3 | 4 | 5 | 6 |
| 30HXA161 | 5752 (2610) | 72.12 (1832) | 50.63 (1286) | 67.50 (1715) | 51.00 (1295) | 48.75 (1238) | 560 (254) | 965 (438) | 598 (271) | 954 (433) | 1650 (748) | 1025 (465) |
| 30HXA171 | 5777 (2621) | 61.37 (1559) | 61.37 (1559) | 56.75 (1441) | 61.75 (1532) | 44.31 (1125) | 627 (284) | 968 (439) | 534 (242) | 1072 (486) | 1658 (752) | 918 (416) |
| 30HXA186 | 5946 (2698) | 61.37 (1559) | 61.37 (1559) | 56.75 (1441) | 61.75 (1532) | 44.31 (1125) | 648 (294) | 1004 (455) | 552 (250) | 1110 (504) | 1703 (772) | 939 (426) |

| OVERALL LENGTH TABLE | |
|----------------------|------------------|
| EVAPORATOR | OVERALL LENGTH |
| STANDARD EVAPORATOR | 134.40 (3414) |
| MINUS ONE | 144.0 (3658) |
| PASS EVAPORATOR | 137.50 (3467) |

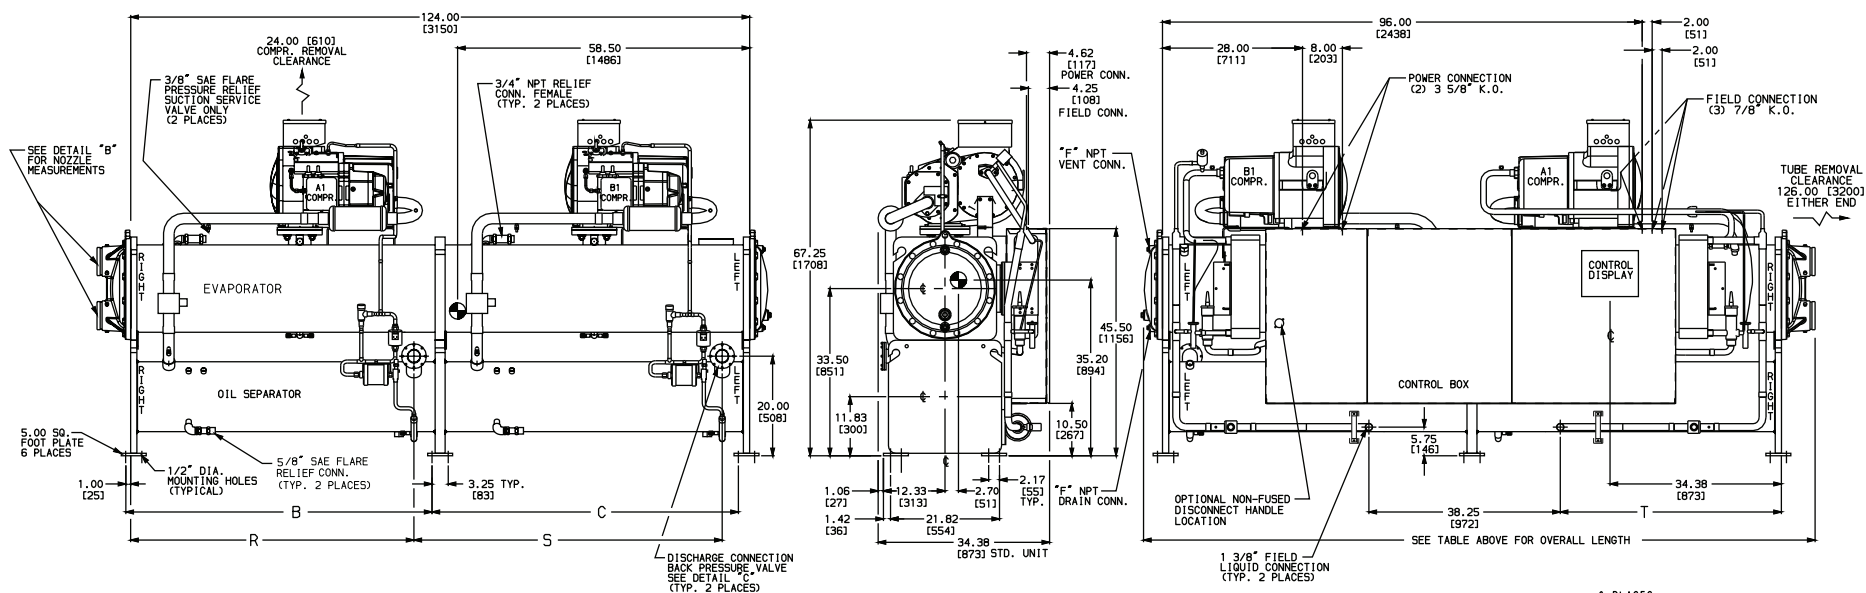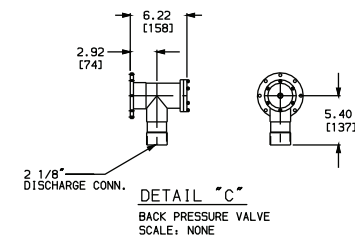

NOTES:

- Operating weight includes weight of water and refrigerant.
- Denotes center of gravity.
- Dimensions are in inches (mm).
- Recommended service clearance around machine is 36 in. (914.4 mm).
- Victaulic nozzles are standard on all models. Flow switch factory installed in evaporator inlet Victaulic nozzle.

DOOR SWING CLEARANCE









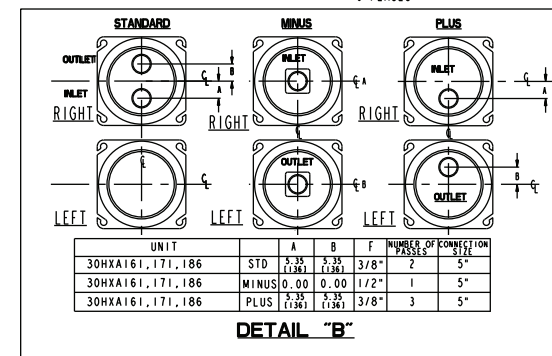



Fig. 8 — Dimensions-30HXA161-186

| UNIT | OPERATING WEIGHT - lb (kg) | WGT DISTRIBUTION AT EACH MTG PLATE - lb (kg) | | | | | |
|----------|-------------------------------|---|---------------|--------------|--------------|----------------|---------------|
| | | 1 | 2 | 3 | 4 | 5 | 6 |
| 30HXA206 | 7485 (3395) | 671 (304) | 1702 (772) | 879 (399) | 850 (385) | 2216 (1005) | 1167 (529) |
| 30HXA246 | 7621 (3457) | 681 (309) | 1748 (793) | 911 (413) | 797 (362) | 2276 (1032) | 1209 (548) |
| 30HXA261 | 7621 (3457) | 681 (309) | 1748 (793) | 911 (413) | 797 (362) | 2276 (1032) | 1209 (548) |
| 30HXA271 | 7621 (3457) | 681 (309) | 1748 (793) | 911 (413) | 797 (362) | 2276 (1032) | 1209 (548) |

| OVERALL LENGTH TABLE | |
|---------------------------|------------------|
| EVAPORATOR | OVERALL LENGTH |
| STANDARD EVAPORATOR | 150.95 [3834] |
| MINUS ONE PASS EVAPORATOR | 160.00 [4064] |
| PLUS ONE PASS EVAPORATOR | 160.00 [4064] |

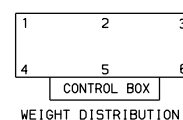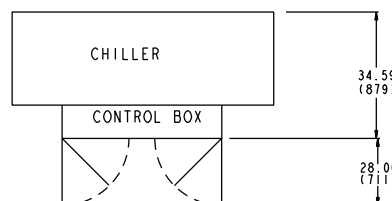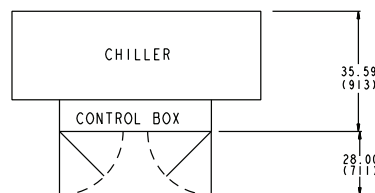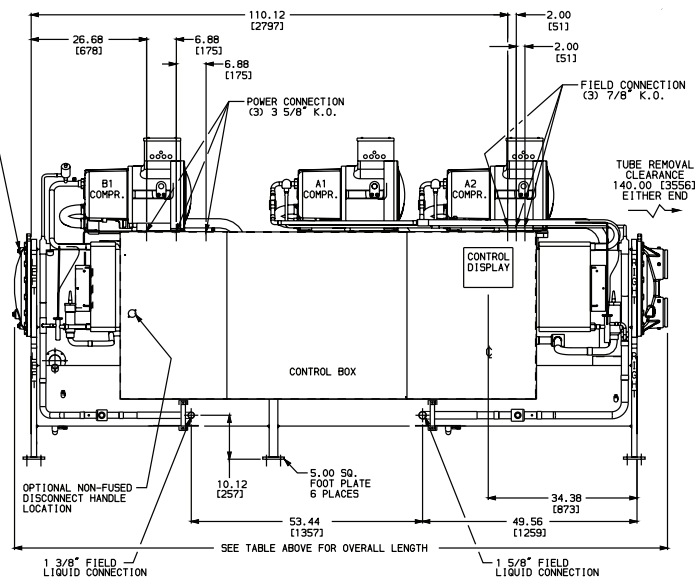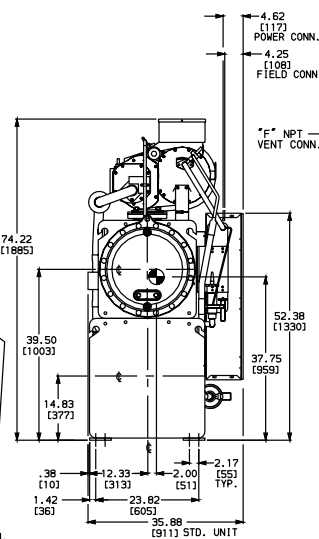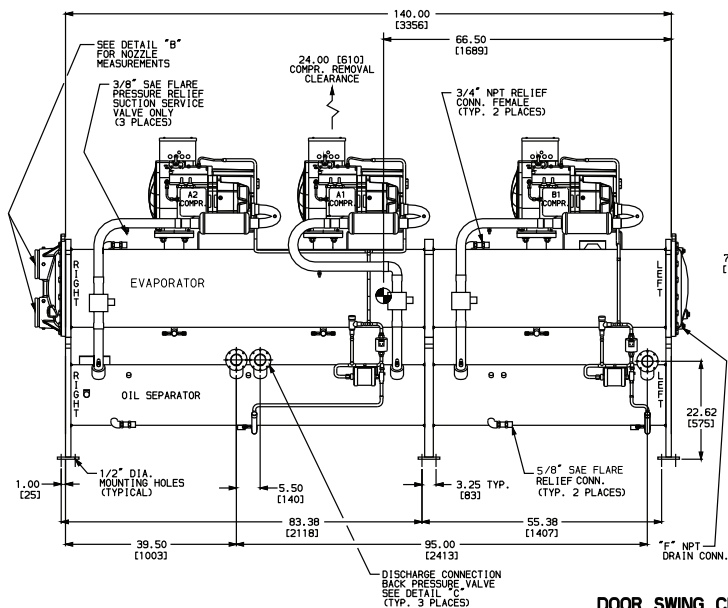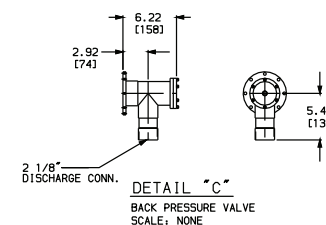

NOTES:

1. Operating weight includes weight of water and refrigerant.
2.  Denotes center of gravity.
3. Dimensions are in inches (mm).
4. Recommended service clearance around machine is 36 in. (914.4 mm).
5. Victaulic nozzles are standard on all models. Flow switch factory installed in evaporator inlet Victaulic nozzle.

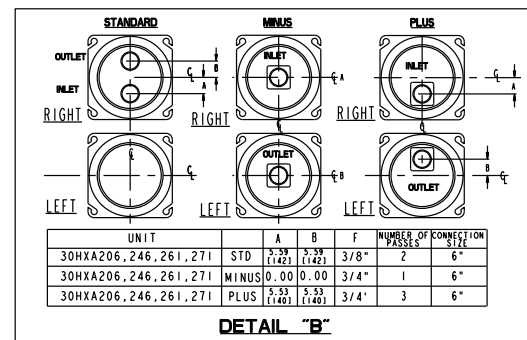


Fig. 9 — Dimensions-30HXA206-271


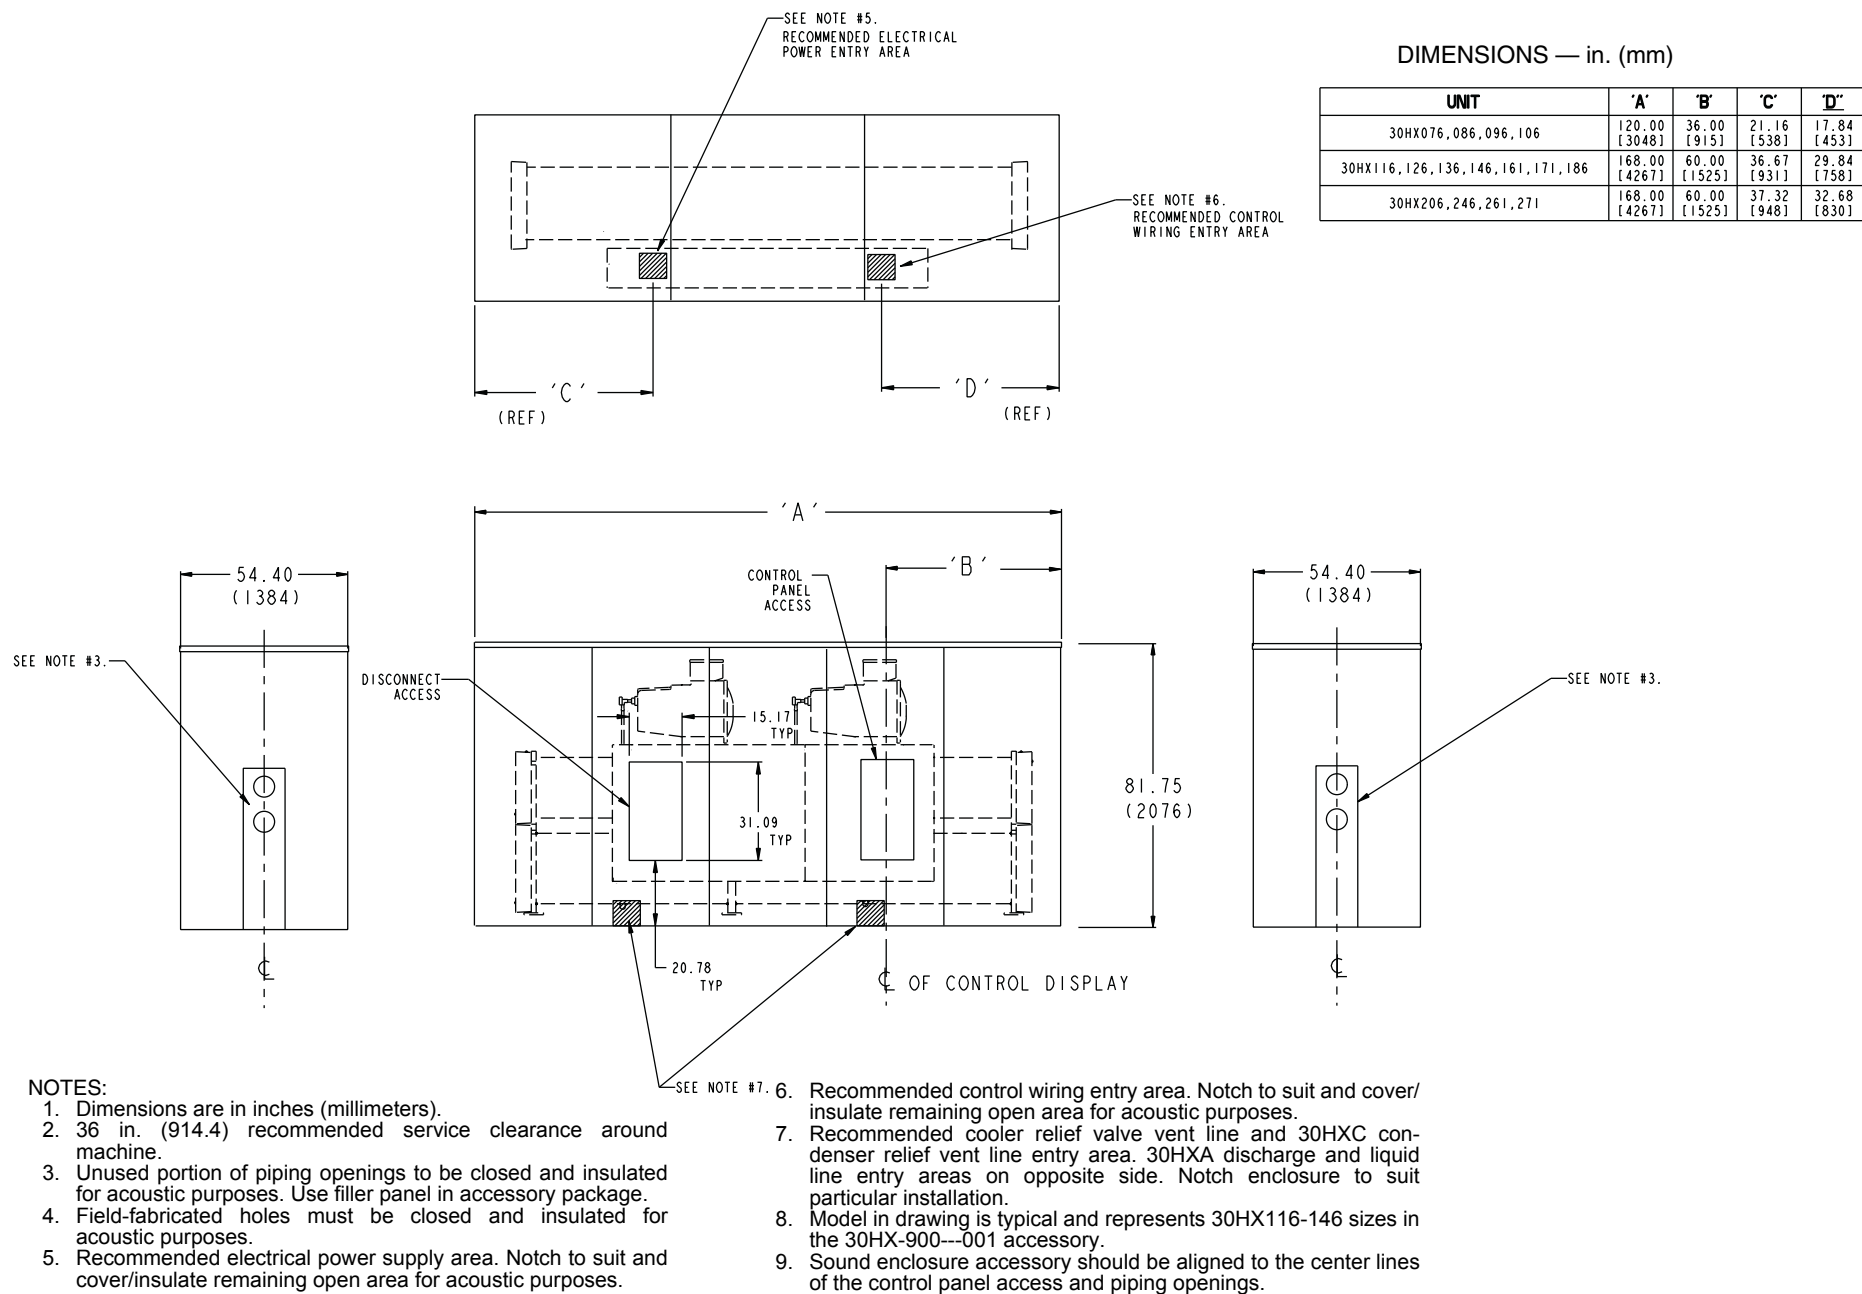


Fig. 10 — Dimensions-Sound Enclosure

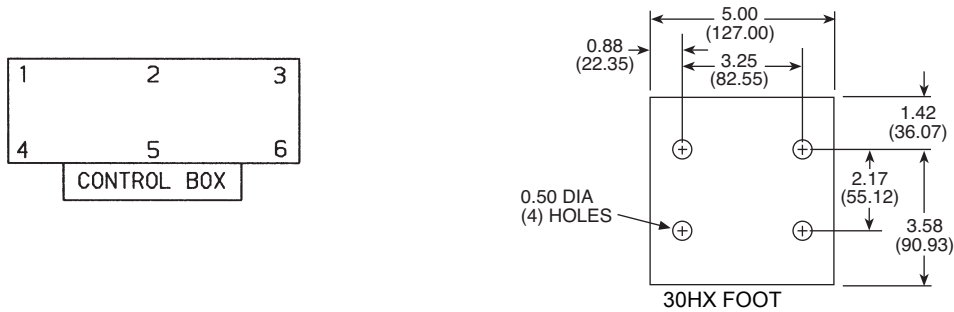

NOTE: Dimensions shown in inches (mm).

WEIGHT DISTRIBUTION AT EACH MOUNTING PLATE

30HXC UNITS — lb (kg)


| UNIT 30HXA | MOUNTING PLATE NO. | | | | | |
|------------|--------------------|------------|-----------|------------|-------------|------------|
| | 1 | 2 | 3 | 4 | 5 | 6 |
| 076 | 555 (252) | 793 (360) | 418 (190) | 926 (420) | 1326 (601) | 699 (317) |
| 086 | 555 (252) | 798 (362) | 418 (190) | 928 (421) | 1340 (608) | 705 (320) |
| 096 | 509 (231) | 808 (367) | 493 (224) | 848 (385) | 1350 (612) | 827 (375) |
| 106 | 555 (252) | 869 (394) | 541 (245) | 896 (406) | 1410 (640) | 880 (399) |
| 116 | 530 (240) | 895 (406) | 540 (245) | 855 (388) | 1456 (660) | 887 (402) |
| 126 | 540 (245) | 905 (410) | 541 (245) | 864 (392) | 1468 (666) | 887 (402) |
| 136 | 548 (249) | 926 (420) | 555 (252) | 873 (396) | 1498 (679) | 908 (412) |
| 146 | 551 (250) | 930 (422) | 555 (252) | 883 (400) | 1506 (683) | 908 (412) |
| 161 | 560 (254) | 965 (438) | 598 (271) | 954 (433) | 1650 (748) | 1025 (465) |
| 171 | 627 (284) | 968 (439) | 534 (242) | 1072 (486) | 1658 (752) | 918 (416) |
| 186 | 648 (294) | 1004 (455) | 552 (250) | 1110 (504) | 1703 (772) | 939 (426) |
| 206 | 671 (304) | 1702 (772) | 879 (399) | 850 (385) | 2216 (1005) | 1167 (529) |
| 246 | 681 (309) | 1748 (793) | 911 (413) | 797 (362) | 2276 (1032) | 1209 (548) |
| 261 | 681 (309) | 1748 (793) | 911 (413) | 797 (362) | 2276 (1032) | 1209 (548) |
| 271 | 681 (309) | 1748 (793) | 911 (413) | 797 (362) | 2276 (1032) | 1209 (548) |

30HXA UNITS — lb (kg)

| UNIT 30HXC | MOUNTING PLATE NO. | | | | | |
|------------|--------------------|-------------|------------|------------|-------------|------------|
| | 1 | 2 | 3 | 4 | 5 | 6 |
| 076 | 738 (335) | 943 (428) | 595 (270) | 1110 (503) | 1418 (643) | 896 (406) |
| 086 | 738 (335) | 947 (430) | 597 (271) | 1112 (504) | 1427 (647) | 902 (409) |
| 096 | 686 (311) | 968 (439) | 693 (314) | 1027 (466) | 1447 (656) | 1034 (469) |
| 106 | 730 (331) | 1028 (466) | 744 (337) | 1073 (487) | 1510 (685) | 1092 (495) |
| 116 | 728 (330) | 1114 (505) | 777 (352) | 1053 (478) | 1615 (733) | 1127 (511) |
| 126 | 755 (342) | 1152 (523) | 797 (362) | 1085 (492) | 1665 (755) | 1156 (525) |
| 136 | 758 (344) | 1176 (533) | 811 (368) | 1083 (491) | 1689 (766) | 1171 (531) |
| 161 | 857 (389) | 1134 (605) | 953 (432) | 1278 (580) | 1983 (899) | 1412 (641) |
| 206 | 991 (449) | 2514 (1140) | 1299 (589) | 1254 (569) | 3273 (1485) | 1725 (782) |
| 246 | 1001 (454) | 2555 (1159) | 1327 (601) | 1172 (531) | 3328 (1510) | 1761 (799) |
| 261 | 1001 (454) | 2560 (1161) | 1332 (604) | 1172 (531) | 3335 (1513) | 1767 (802) |
| 271 | 1001 (454) | 2569 (1165) | 1339 (608) | 1172 (531) | 3346 (1518) | 1777 (806) |
| 271 | 681 (309) | 1748 (793) | 911 (413) | 797 (362) | 2276 (1032) | 1209 (548) |

NOTE: See Fig. 2-9 for center of gravity details.

Fig. 11 — Weight Distribution at Mounting Plates

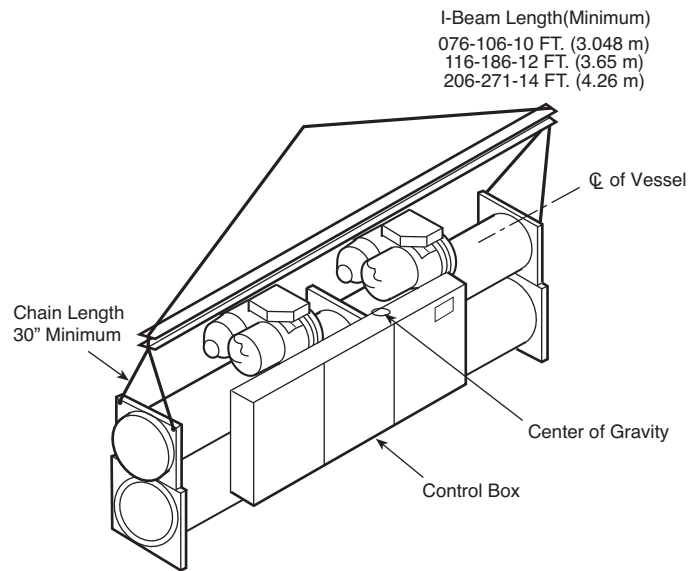

NOTE: Run rigging cables to a central suspension point.

Fig. 12 — Unit Rigging (Size 076-161 Shown-Larger Sizes Similar)

Table 1 — Physical Data — English

| UNIT SIZE 30HX | 076 | 086 | 096 | 106 | 116 | 126 | 136 | 146 |
|--|---|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| UNIT OPERATING WEIGHT (lb) | | | | | | | | |
| Water-Cooled (HXC) ^a | 5720 | 5743 | 5875 | 6197 | 6435 | 6613 | 6708 | — |
| Condenserless (HXA) | 4717 | 4744 | 4835 | 5151 | 5163 | 5205 | 5309 | 5333 |
| COMPRESSORS | | | | | | | | |
| | Semi-Hermetic, Twin Screw | | | | | | | |
| Quantity | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 |
| Nominal Capacity per Compressor (tons) | 39/39 | 46/39 | 56/39 | 66/39 | 66/46 | 66/56 | 80/56 | 80/66 |
| Economizer | No | No | No | No | No | No | No | No |
| No. Capacity Steps | | | | | | | | |
| 30HXC Unit | 6 | 6 | 6 | 6 | 6 | 6 | 6 | — |
| 30HXA Unit (maximum on 30HXC unit with factory-installed option) | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 |
| Minimum Step Capacity (%) | | | | | | | | |
| 30HXC Unit | 20 | 20 | 20 | 20 | 20 | 20 | 20 | — |
| 30HXA Unit (30HXC unit with factory-installed option) | 10 | 10 | 10 | 10 | 10 | 10 | 10 | — |
| REFRIGERANT (HXC) | | | | | | | | |
| | R-513A | | | | | | | |
| Charge ^b (lb) Circuit A/Circuit B ^c | 85/85 | 86/85 | 104/80 | 120/80 | 122/99 | 122/99 | 134/99 | — |
| EVAPORATOR | | | | | | | | |
| | Shell and Tube with Enhanced Copper Tubes | | | | | | | |
| Part No. 10HX400- | 401 | 401 | 402 | 408 | 406 | 405 | 405 | 405 |
| Net Fluid Volume (gal) | 17.0 | 17.0 | 19.0 | 22.6 | 21.4 | 24.0 | 24.0 | 24.0 |
| Maximum Refrigerant Pressure (psig) | 220 | 220 | 220 | 220 | 220 | 220 | 220 | 220 |
| Maximum Water-Side Pressure (psig) | 300 | 300 | 300 | 300 | 300 | 300 | 300 | 300 |
| Water Connections (in.) | | | | | | | | |
| Inlet and Outlet (Std Pass) | 4 | 4 | 4 | 5 | 5 | 5 | 5 | 5 |
| Drain (NPT) (Std Pass) | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 |
| Relief Valve | | | | | | | | |
| Connection (in. NPTF) | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 |
| Flow Capacity (lb air/min)FHX | 31.7 | 31.7 | 31.7 | 31.7 | 31.7 | 31.7 | 31.7 | 31.7 |
| Relief Setting (psig) | 220 | 220 | 220 | 220 | 220 | 220 | 220 | 220 |
| Standard Number of Passes | 3 | 3 | 3 | 3 | 2 | 2 | 2 | 2 |
| OIL SEPARATOR (HXA) | | | | | | | | |
| Part No. 09RX400- | 217 | 217 | 216 | 216 | 215 | 215 | 215 | 215 |
| Maximum Refrigerant Pressure (psig) | 320 | 320 | 320 | 320 | 320 | 320 | 320 | 320 |
| Refrigerant Connections (in.) | | | | | | | | |
| Discharge Circuit A/Circuit B | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 |
| Liquid Circuit A/Circuit B | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 |
| Relief Valve | | | | | | | | |
| Connection (in. SAE Flare) | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 |
| Flow Capacity (lb air/min) | 21.6 | 21.6 | 21.6 | 21.6 | 21.6 | 21.6 | 21.6 | 21.6 |
| Relief Setting (psig) | 320 | 320 | 320 | 320 | 320 | 320 | 320 | 320 |
| CONDENSER (HXC) | | | | | | | | |
| | Shell and Tube with Enhanced Copper Tubes | | | | | | | |
| Part No. 09RX400- | 257 | 257 | 258 | 258 | 259 | 260 | 260 | — |
| Net Fluid Volume (gal) | 16.8 | 16.8 | 18.3 | 18.3 | 23.9 | 27.5 | 27.5 | — |
| Maximum Refrigerant Pressure (psig) | 220 | 220 | 220 | 220 | 220 | 220 | 220 | — |
| Maximum Water-Side Pressure (psig) | 300 | 300 | 300 | 300 | 300 | 300 | 300 | — |
| Water Connections (in.) | | | | | | | | |
| | Victaulic Type Connection | | | | | | | |
| Inlet and Outlet (Std Pass) | 5 | 5 | 5 | 5 | 5 | 5 | 5 | — |
| Drain (NPT) (Std Pass) | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | — |
| Relief Valve | | | | | | | | |
| Connection (in. NPTF) | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | — |
| Flow Capacity (lb air/min) | 31.7 | 31.7 | 31.7 | 31.7 | 31.7 | 31.7 | 31.7 | — |
| Relief Setting (psig) | 220 | 220 | 220 | 220 | 220 | 220 | 220 | — |
| Standard Number of Passes | 2 | 2 | 2 | 2 | 2 | 2 | 2 | — |
| DISCHARGE LINE^d | | | | | | | | |
| Relief Valve | | | | | | | | |
| Connection (in. SAE Flare) | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 |
| Flow Capacity (lb air/min) | 6.3 | 6.3 | 6.3 | 6.3 | 6.3 | 6.3 | 6.3 | 6.3 |
| Setting (psig) | 350 | 350 | 350 | 350 | 350 | 350 | 350 | 350 |

NOTE(S):

- The 30HX water-cooled chiller products for Canada are limited in use to water systems to having a maximum pressure rating of 250 psig (1,724 kPa) and a temperature rating of 150°F (65.6°C).
- Refrigerant charge amounts are for 30HXC units. The 30HXA units are shipped with a nitrogen holding charge only. To determine the refrigerant charge requirements for 30HXA units, see the 30HXA Estimated System Refrigerant Charge table on page 39.
- For 30HXC,HXA units utilizing brine, the unit may require more refrigerant than what is supplied. Additional refrigerant must be field supplied.
- Only on units with factory-installed suction service valves.

LEGEND

- NPTF** — National Pipe Thread Female
SAE — Society of Automotive Engineers

Table 1 — Physical Data — English (cont)

| UNIT SIZE 30HX | 161 | 171 | 186 | 206 | 246 | 261 | 271 |
|--|---|---------------|---------------|-------------------|-------------------|-------------------|-------------------|
| UNIT OPERATING WEIGHT (lb) | | | | | | | |
| Water-Cooled (HXC) ^a | 7818 | — | — | 11,056 | 11,114 | 11,167 | 11,204 |
| Condenserless (HXA) | 5752 | 5777 | 5946 | 7,485 | 7,621 | 7,621 | 7,621 |
| COMPRESSORS | | | | | | | |
| | Semi-Hermetic, Twin Screw | | | | | | |
| Quantity | 2 | 2 | 2 | 3 | 3 | 3 | 3 |
| Nominal Capacity per Compressor (tons) | 80/56 | 66/80 | 80/80 | 66/39/80 | 80/56/80 | 80/66/80 | 80/80/80 |
| Economizer | Yes | Yes | Yes | Yes | Yes | Yes | Yes |
| No. Capacity Steps | | | | | | | |
| 30HXC Unit | 6 | — | — | 8 | 8 | 8 | 8 |
| 30HXA Unit (maximum on 30HXC unit with factory-installed option) | 8 | 8 | 8 | 11 | 11 | 11 | 11 |
| Minimum Step Capacity (%) | | | | | | | |
| 30HXC Unit | 20 | — | — | 13 | 13 | 13 | 13 |
| 30HXA Unit (30HXC unit with factory-installed option) | 10 | 10 | 10 | 7 | 7 | 7 | 7 |
| REFRIGERANT (HXC) | | | | | | | |
| | R-513A | | | | | | |
| Charge ^b (lb) Circuit A/Circuit B ^c | 172/125 | — | — | 215/150 | 235/150 | 235/150 | 235/150 |
| EVAPORATOR TYPE | | | | | | | |
| | Shell and Tube with Enhanced Copper Tubes | | | | | | |
| Part No. 10HX400- | 601 | 621 | 621 | 634 | 634 | 634 | 634 |
| Net Fluid Volume (gal) | 33.4 | 28.5 | 33.4 | 47.2 | 47.2 | 47.2 | 47.2 |
| Maximum Refrigerant Pressure (psig) | 220 | 220 | 220 | 220 | 220 | 220 | 220 |
| Maximum Water-Side Pressure (psig) | 300 | 300 | 300 | 300 | 300 | 300 | 300 |
| Water Connections (in.) | | | | | | | |
| Inlet and Outlet (Std Pass) | 5 | 5 | 5 | 6 | 6 | 6 | 6 |
| Drain (NPT) (Std Pass) | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 |
| Relief Valve | | | | | | | |
| Connection (in. NPTF) | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 |
| Flow Capacity (lb air/min) | 31.7 | 31.7 | 31.7 | 31.7 | 31.7 | 31.7 | 31.7 |
| Relief Setting (psig) | 220 | 220 | 220 | 220 | 220 | 220 | 220 |
| Standard Number of Passes | 2 | 2 | 2 | 2 | 2 | 2 | 2 |
| OIL SEPARATOR (HXA) | | | | | | | |
| Part No. 09RX400- | 215 | 214 | 214 | 213 | 213 | 213 | 213 |
| Maximum Refrigerant Pressure (psig) | 320 | 320 | 320 | 320 | 320 | 320 | 320 |
| Refrigerant Connections (in.) | | | | | | | |
| Discharge Circuit A/Circuit B | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | (2) 2-1/8 / 2-1/8 | (2) 2-1/8 / 2-1/8 | (2) 2-1/8 / 2-1/8 | (2) 2-1/8 / 2-1/8 |
| Liquid Circuit A/Circuit B | 1-3/8 / 1-3/8 | 1-3/8 / 1-3/8 | 1-3/8 / 1-3/8 | 1-5/8 / 1-3/8 | 1-5/8 / 1-3/8 | 1-5/8 / 1-3/8 | 1-5/8 / 1-3/8 |
| Relief Valve | | | | | | | |
| Connection (in. SAE Flare) | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 |
| Flow Capacity (lb air/min) | 21.6 | 21.6 | 21.6 | 21.6 | 21.6 | 21.6 | 21.6 |
| Relief Setting (psig) | 320 | 320 | 320 | 320 | 320 | 320 | 320 |
| CONDENSER (HXC) | | | | | | | |
| | Shell and Tube with Enhanced Copper Tubes | | | | | | |
| Part No. 09RX405- | 261 | — | — | 264 | 264 | 264 | 264 |
| Net Fluid Volume (gal) | 38.4 | — | — | 57.8 | 57.8 | 57.8 | 57.8 |
| Maximum Refrigerant Pressure (psig) | 220 | — | — | 220 | 220 | 220 | 220 |
| Maximum Water-Side Pressure (psig) | 300 | — | — | 300 | 300 | 300 | 300 |
| Water Connections (in.) | | | | | | | |
| | Victaulic Type Connection | | | | | | |
| Inlet and Outlet (Std Pass) | 6 | — | — | 8 | 8 | 8 | 8 |
| Drain (NPT) (Std Pass) | 3/8 | — | — | 3/8 | 3/8 | 3/8 | 3/8 |
| Relief Valve | | | | | | | |
| Connection (in. NPTF) | 3/4 | — | — | 3/4 | 3/4 | 3/4 | 3/4 |
| Flow Capacity (lb air/min) | 31.7 | — | — | 31.7 | 31.7 | 31.7 | 31.7 |
| Relief Setting (psig) | 220 | — | — | 220 | 220 | 220 | 220 |
| Standard Number of Passes | 2 | — | — | 2 | 2 | 2 | 2 |
| DISCHARGE LINE^d | | | | | | | |
| Relief Valve | | | | | | | |
| Connection (in. SAE Flare) | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 |
| Flow Capacity (lb air/min) | 6.3 | 6.3 | 6.3 | 6.3 | 6.3 | 6.3 | 6.3 |
| Setting (psig) | 350 | 350 | 350 | 350 | 350 | 350 | 350 |

NOTE(S):

- The 30HX water-cooled chiller products for Canada are limited in use to water systems to having a maximum pressure rating of 250 psig (1,724 kPa) and a temperature rating of 150°F (65.6°C).
- Refrigerant charge amounts are for 30HXC units. The 30HXA units are shipped with a nitrogen holding charge only. To determine the refrigerant charge requirements for 30HXA units, see the 30HXA Estimated System Refrigerant Charge table on page 39.
- For 30HXC, HXA units utilizing brine, the unit may require more refrigerant than what is supplied. Additional refrigerant must be field supplied.
- Only on units with factory-installed suction service valves.

LEGEND

NPTF — National Pipe Thread Female
SAE — Society of Automotive Engineers

Table 2 — Physical Data — SI

| UNIT SIZE 30HX | 076 | 086 | 096 | 106 | 116 | 126 | 136 | 146 |
|--|---|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| UNIT OPERATING WEIGHT (kg) | | | | | | | | |
| Water-Cooled (HXC) ^a | 2595 | 2606 | 2666 | 2812 | 2920 | 3000 | 3043 | — |
| Condenserless (HXA) | 2140 | 2152 | 2194 | 2337 | 2342 | 2362 | 2408 | 2420 |
| COMPRESSORS | | | | | | | | |
| | Semi-Hermetic, Twin Screw | | | | | | | |
| Quantity | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 |
| Nominal Capacity per Compressor (kW) | 137/137 | 162/137 | 197/137 | 232/137 | 232/137 | 232/197 | 281/197 | 281/232 |
| Economizer | No | No | No | No | No | No | No | No |
| No. Capacity Steps | | | | | | | | |
| 30HXC Unit | 6 | 6 | 6 | 6 | 6 | 6 | 6 | — |
| 30HXA Unit (maximum on 30HXC unit with factory-installed option) | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 |
| Minimum Step Capacity (%) | | | | | | | | |
| 30HXC Unit | 20 | 20 | 20 | 20 | 20 | 20 | 20 | — |
| 30HXA Unit (30HXC unit with factory-installed option) | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 |
| REFRIGERANT (HXC) | | | | | | | | |
| | R-513A | | | | | | | |
| Charge ^b (lb) Circuit A/Circuit B ^c | 38.6/38.6 | 39.1/38.6 | 47.3/36.4 | 54.5/36.4 | 55.5/45.0 | 55.5/45.0 | 60.9/45.0 | — |
| EVAPORATOR | | | | | | | | |
| | Shell and Tube with Enhanced Copper Tubes | | | | | | | |
| Part No. 10HX400- | 401 | 401 | 402 | 408 | 406 | 405 | 405 | 405 |
| Net Fluid Volume (L) | 64.3 | 64.3 | 71.9 | 85.5 | 81.0 | 90.8 | 90.8 | 90.8 |
| Maximum Refrigerant Pressure (kPa) | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 |
| Maximum Water-Side Pressure (kPa) | 2068 | 2068 | 2068 | 2068 | 2068 | 2068 | 2068 | 2068 |
| Water Connections (in.) | | | | | | | | |
| Inlet and Outlet (Std Pass) | 4 | 4 | 4 | 5 | 5 | 5 | 5 | 5 |
| Drain (NPT) (Std Pass) | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 |
| Relief Valve | | | | | | | | |
| Connection (in. NPTF) | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 |
| Flow Capacity (kg air/min) | 14.38 | 14.38 | 14.38 | 14.38 | 14.38 | 14.38 | 14.38 | 14.38 |
| Relief Setting (kPa) | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 |
| Standard Number of Passes | 3 | 3 | 3 | 3 | 2 | 2 | 2 | 2 |
| OIL SEPARATOR (HXA) | | | | | | | | |
| Part No. 09RX400- | 217 | 217 | 216 | 216 | 215 | 215 | 215 | 215 |
| Maximum Refrigerant Pressure (kPa) | 2205 | 2205 | 2205 | 2205 | 2205 | 2205 | 2205 | 2205 |
| Refrigerant Connections (in.) | | | | | | | | |
| Discharge Circuit A/Circuit B | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 |
| Liquid Circuit A/Circuit B | 1-1/8 / 2-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 | 1-1/8 / 1-1/8 |
| Relief Valve | | | | | | | | |
| Connection (in. SAE Flare) | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 |
| Flow Capacity (kg air/min) | 9.80 | 9.80 | 9.80 | 9.80 | 9.80 | 9.80 | 9.80 | 9.80 |
| Relief Setting (kPa) | 2206 | 2206 | 2206 | 2206 | 2206 | 2206 | 2206 | 2206 |
| CONDENSER (HXC) | | | | | | | | |
| | Shell and Tube with Enhanced Copper Tubes | | | | | | | |
| Part No. 09RX400- | 257 | 257 | 258 | 258 | 259 | 260 | 260 | — |
| Net Fluid Volume (L) | 63.6 | 63.6 | 69.3 | 69.3 | 90.5 | 104.1 | 104.1 | — |
| Maximum Refrigerant Pressure (kPa) | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 | — |
| Maximum Water-Side Pressure (kPa) | 2068 | 2068 | 2068 | 2068 | 2068 | 2068 | 2068 | — |
| Water Connections (in.) | | | | | | | | |
| | Victaulic Type Connection | | | | | | | |
| Inlet and Outlet (Std Pass) | 5 | 5 | 5 | 5 | 5 | 5 | 5 | — |
| Drain (NPT) (Std Pass) | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | — |
| Relief Valve | | | | | | | | |
| Connection (in. NPTF) | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | — |
| Flow Capacity (kg air/min) | 14.38 | 14.38 | 14.38 | 14.38 | 14.38 | 14.38 | 14.38 | — |
| Relief Setting (kPa) | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 | — |
| Standard Number of Passes | 2 | 2 | 2 | 2 | 2 | 2 | 2 | — |
| DISCHARGE LINE^d | | | | | | | | |
| Relief Valve | | | | | | | | |
| Connection (in. SAE Flare) | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 |
| Flow Capacity (kg air/min) | 2.9 | 2.9 | 2.9 | 2.9 | 2.9 | 2.9 | 2.9 | 2.9 |
| Relief Pressure (kPa) | 2413 | 2413 | 2413 | 2413 | 2413 | 2413 | 2413 | 2413 |

NOTE(S):

- The 30HX water-cooled chiller products for Canada are limited in use to water systems to having a maximum pressure rating of 250 psig (1,724 kPa) and a temperature rating of 150°F (65.6°C).
- Refrigerant charge amounts are for 30HXC units. The 30HXA units are shipped with a nitrogen holding charge only. To determine the refrigerant charge requirements for 30HXA units, see the 30HXA Estimated System Refrigerant Charge table on page 39.
- For 30HXC, HXA units utilizing brine, the unit may require more refrigerant than what is supplied. Additional refrigerant must be field supplied.
- Only on units with factory-installed suction service valves.

LEGEND

NPTF — National Pipe Thread Female
SAE — Society of Automotive Engineers

Table 2 — Physical Data — SI (cont)

| UNIT SIZE 30HX | 161 | 171 | 186 | 206 | 246 | 261 | 271 |
|--|---|---------------|---------------|-------------------|-------------------|-------------------|-------------------|
| UNIT OPERATING WEIGHT (kg) | | | | | | | |
| Water-Cooled (HXC) ^a | 3546 | — | — | 5015 | 5056 | 5066 | 5083 |
| Condenserless (HXA) | 2610 | 2621 | 2698 | 3395 | 3457 | 3457 | 3457 |
| COMPRESSORS | | | | | | | |
| | Semi-Hermetic, Twin Screw | | | | | | |
| Quantity | 2 | 2 | 2 | 3 | 3 | 3 | 3 |
| Nominal Capacity per Compressor (kW) | 281/197 | 232/281 | 281/281 | 232/137/281 | 281/197/281 | 281/232/281 | 281/281/281 |
| Economizer | Yes | Yes | Yes | Yes | Yes | Yes | Yes |
| No. Capacity Steps | | | | | | | |
| 30HXC Unit | 6 | — | — | 8 | 8 | 8 | 8 |
| 30HXA Unit (maximum on 30HXC unit with factory-installed option) | 8 | 8 | 8 | 11 | 11 | 11 | 11 |
| Minimum Step Capacity (%) | | | | | | | |
| 30HXC Unit | 20 | — | — | 13 | 13 | 13 | 13 |
| 30HXA Unit (30HXC unit with factory-installed option) | 10 | 10 | 10 | 7 | 7 | 7 | 7 |
| REFRIGERANT (HXC) | | | | | | | |
| | R-513A | | | | | | |
| Charge ^b (lb) Circuit A/Circuit B ^c | 78.2/56.8 | — | — | 97.7/68.2 | 107/68.2 | 107/68.2 | 107/68.2 |
| EVAPORATOR | | | | | | | |
| | Shell and Tube with Enhanced Copper Tubes | | | | | | |
| Part No. 10HX400- | 601 | 621 | 621 | 634 | 634 | 634 | 634 |
| Net Fluid Volume (L) | 107.9 | 126.4 | 126.4 | 178.7 | 178.7 | 178.8 | 178.7 |
| Maximum Refrigerant Pressure (kPa) | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 |
| Maximum Water-Side Pressure (kPa) | 2068 | 2068 | 2068 | 2068 | 2068 | 2068 | 2068 |
| Water Connections (in.) | | | | | | | |
| Inlet and Outlet (Std Pass) | 5 | 5 | 5 | 6 | 6 | 6 | 6 |
| Drain (NPT) (Std Pass) | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 |
| Relief Valve | | | | | | | |
| Connection (in. NPTF) | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 |
| Flow Capacity (kg air/min) | 14.28 | 14.38 | 14.38 | 14.38 | 14.38 | 14.38 | 14.38 |
| Relief Setting (kPa) | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 | 1517 |
| Standard Number of Passes | 2 | 2 | 2 | 2 | 2 | 2 | 2 |
| OIL SEPARATOR (HXA) | | | | | | | |
| Part No. 09RX400- | 215 | 214 | 214 | 213 | 213 | 213 | 213 |
| Maximum Refrigerant Pressure (kPa) | 2205 | 2205 | 2205 | 2205 | 2205 | 2205 | 2205 |
| Refrigerant Connections (in.) | | | | | | | |
| Discharge Circuit A/Circuit B | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | 2-1/8 / 2-1/8 | (2) 2-1/8 / 2-1/8 | (2) 2-1/8 / 2-1/8 | (2) 2-1/8 / 2-1/8 | (2) 2-1/8 / 2-1/8 |
| Liquid Circuit A/Circuit B | 1-3/8 / 1-3/8 | 1-3/8 / 1-3/8 | 1-3/8 / 1-3/8 | 1-5/8 / 1-3/8 | 1-5/8 / 1-3/8 | 1-5/8 / 1-3/8 | 1-5/8 / 1-3/8 |
| Relief Valve | | | | | | | |
| Connection (in. SAE Flare) | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 | 5/8 |
| Flow Capacity (kg air/min) | 9.80 | 9.80 | 9.80 | 9.80 | 9.80 | 9.80 | 9.80 |
| Relief Setting (kPa) | 2206 | 2206 | 2206 | 2206 | 2206 | 2206 | 2206 |
| CONDENSER (HXC) | | | | | | | |
| | Shell and Tube with Enhanced Copper Tubes | | | | | | |
| Part No. 09RX405- | 261 | — | — | 264 | 264 | 264 | 264 |
| Net Fluid Volume (L) | 145.3 | — | — | 218.8 | 218.8 | 218.8 | 218.8 |
| Maximum Refrigerant Pressure (kPa) | 1517 | — | — | 1517 | 1517 | 1517 | 1517 |
| Maximum Water-Side Pressure (kPa) | 2068 | — | — | 2068 | 2068 | 2068 | 2068 |
| Water Connections (in.) | | | | | | | |
| | Victaulic Type Connection | | | | | | |
| Inlet and Outlet (Std Pass) | 6 | — | — | 8 | 8 | 8 | 8 |
| Drain (NPT) (Std Pass) | 3/8 | — | — | 3/8 | 3/8 | 3/8 | 3/8 |
| Relief Valve | | | | | | | |
| Connection (in. NPTF) | 3/4 | — | — | 3/4 | 3/4 | 3/4 | 3/4 |
| Flow Capacity (kg air/min) | 14.38 | — | — | 14.38 | 14.38 | 14.38 | 14.38 |
| Relief Setting (kPa) | 1517 | — | — | 1517 | 1517 | 1517 | 1517 |
| Standard Number of Passes | 2 | — | — | 2 | 2 | 2 | 2 |
| DISCHARGE LINE^d | | | | | | | |
| Relief Valve | | | | | | | |
| Connection (in. SAE Flare) | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 | 3/8 |
| Flow Capacity (kg air/min) | 2.9 | 2.9 | 2.9 | 2.9 | 2.9 | 2.9 | 2.9 |
| Relief Pressure (kPa) | 2413 | 2413 | 2413 | 2413 | 2413 | 2413 | 2413 |

NOTE(S):

- The 30HX water-cooled chiller products for Canada are limited in use to water systems to having a maximum pressure rating of 250 psig (1,724 kPa) and a temperature rating of 150°F (65.6°C).
- Refrigerant charge amounts are for 30HXC units. The 30HXA units are shipped with a nitrogen holding charge only. To determine the refrigerant charge requirements for 30HXA units, see the 30HXA Estimated System Refrigerant Charge table on page 39.
- For 30HXC, HXA units utilizing brine, the unit may require more refrigerant than what is supplied. Additional refrigerant must be field supplied.
- Only on units with factory-installed suction service valves.

LEGEND

NPTF — National Pipe Thread Female
SAE — Society of Automotive Engineers

Step 8 — Connections

See Fig. 13-15 for typical piping applications.

COOLER FLUID, VENT, AND DRAIN

The inlet (return) fluid connection is always the lower of the 2 cooler connections. See Fig. 13 for locations. A screen strainer with a minimum of 20 mesh must be installed ahead of the cooler inlet (within 10 ft [3.05 m]) to prevent debris from damaging internal tubes of the cooler. Outlet (supply) fluid connection is the upper connection of the 2 cooler connections.

The cooler has Victaulic nozzles to connect to the field-supplied piping. Plan the piping arrangement in accordance with good piping practices and so that the piping does not cross in front of the cooler head. Use flexible connections on cooler piping to reduce vibration transmission. Offset the piping to permit removal of the cooler head for maintenance. Install pipe hangers where needed. Make sure no weight or stress is placed on the water nozzle.

CAUTION

Cooler and condenser heads are cast iron. Welding is not recommended. In the event that welding must be performed, remove the chilled water flow switch and entering and leaving fluid thermistors before welding. Reinstall flow switch and thermistors after welding is complete. Failure to remove these devices may cause component damage.

1. The cooler flow switch (CWFS) is factory installed in the inlet nozzle and wired. If a cooler pump interlock is used, the contacts must be wired to TB5. Refer to unit wire diagrams.

IMPORTANT: Loss of flow protection is required for all 30HX chillers.

2. Provide openings in fluid piping for pressure gauges and thermometers (if used). These openings should be 5 to 10 pipe diameters from the unit water nozzles. For thorough mixing and temperature stabilization, wells in the leaving fluid pipe should extend at least 2 in. (50 mm) into the pipe.

Although cooler has an air vent, it is recommended that a field-supplied air vent be installed in the system to facilitate servicing. Field-supplied shut-off and balancing valves should also be installed to facilitate servicing and flow balancing.

Locate valves in return and supply fluid lines as close to the chiller as possible. Locate air vent at highest point of the cooler fluid system. See Fig. 13.

Provide drain connections at all low points to permit complete drainage of the system.

BRINE UNITS

Special factory modifications to the units are required to allow them to operate at fluid temperatures less than 34°F (1.1°C). Be sure that the fluid has sufficient inhibited glycol or other suitable corrosion-resistant antifreeze solution to prevent cooler freeze up. Condenser water flow must be maintained to prevent freeze-up on unit applications where condenser water does not contain anti-freeze.

IMPORTANT: On brine applications where leaving cooler water is less than 34°F (1.1°C), a minimum water flow of 0.75 gpm/ton (0.14 L/s per kW) should be maintained through the condenser at all times. In addition to the factory-installed chilled water flow switch, a factory-supplied condenser water flow switch must be installed per the switch manufacturer's instructions. The chiller must control both the chilled water pump and the condenser pump and utilize cooler and condenser pump interlocks. The cooler pump must operate for a minimum of 10 minutes after the chiller has shut down and the condenser pump must operate for 30 minutes after the chiller has shut down. In the event of loss of condenser water flow, the flow of chilled fluid to the evaporator must be stopped or an isolation valve must be closed. Condenser head pressure control valve must be coordinated with condenser flow switch to ensure the minimum valve position does not prevent flow detection. This is necessary to reduce the possibility of condenser freeze-up.

PREPARATION FOR YEAR-ROUND OPERATION

In areas where the piping or unit is exposed to 32°F (0°C) or lower ambient temperatures, freeze-up protection is recommended using inhibited glycol or other suitable corrosion-resistant antifreeze solution and electric heater tapes. Heater tapes should have a rating for area ambient temperatures and be covered with a suitable thickness of closed-cell insulation. Route power for the heater tapes from a separately fused disconnect. Mount the disconnect within sight from the unit per local or NEC codes. Identify disconnect as heater tape power source with warning that power must not be turned off except when servicing unit.

IMPORTANT: Use of electric heat will not prevent freeze up in the event of a power failure.

FILL FLUID LOOP

Fill the fluid loop with water (or antifreeze solution) and a corrosion-resistant inhibitor suitable for the water of the area. Consult the local water authority for characteristics of area water and a recommended inhibitor for the cooler fluid loop. Also see 30HXA Low-Ambient Considerations section on page 24.

A drain connection is located at the bottom of the cooler head. See Fig. 2-9 for connection location. Install shutoff valves to the drain line before filling the system with fluid.

INSULATE COOLER HEADS

Once the cooler water lines and drain and vent lines have been installed and checked for leaks, insulate the cooler heads with a suitable thickness of closed-cell insulation. This will minimize the amount of condensation that forms on the cooler heads. When insulating the cooler heads, allow for service access and removal of heads.

IMPORTANT: Before starting the unit, be sure all of the air has been purged from the system.

IMPORTANT: Carrier suggests that a structural engineer be consulted if transmission of vibrations from mechanical equipment is of concern.

NOTES:

1. Wiring and piping shown are for general point-of-connection only and are not intended to show details for a specific installation. Certified field wiring and dimensional diagrams are available upon request. The 30HXA and 30HXC units should be installed using certified drawings.
2. All wiring must comply with applicable codes.
3. Refer to the System Design Manual for details regarding piping techniques.
4. Piping, wiring, switches, valves, vent gauges, strainers, drain, and vibration isolation are all field supplied.
5. Water connections are shown on left side of control box in this figure. Actual connections are on right side of control box.

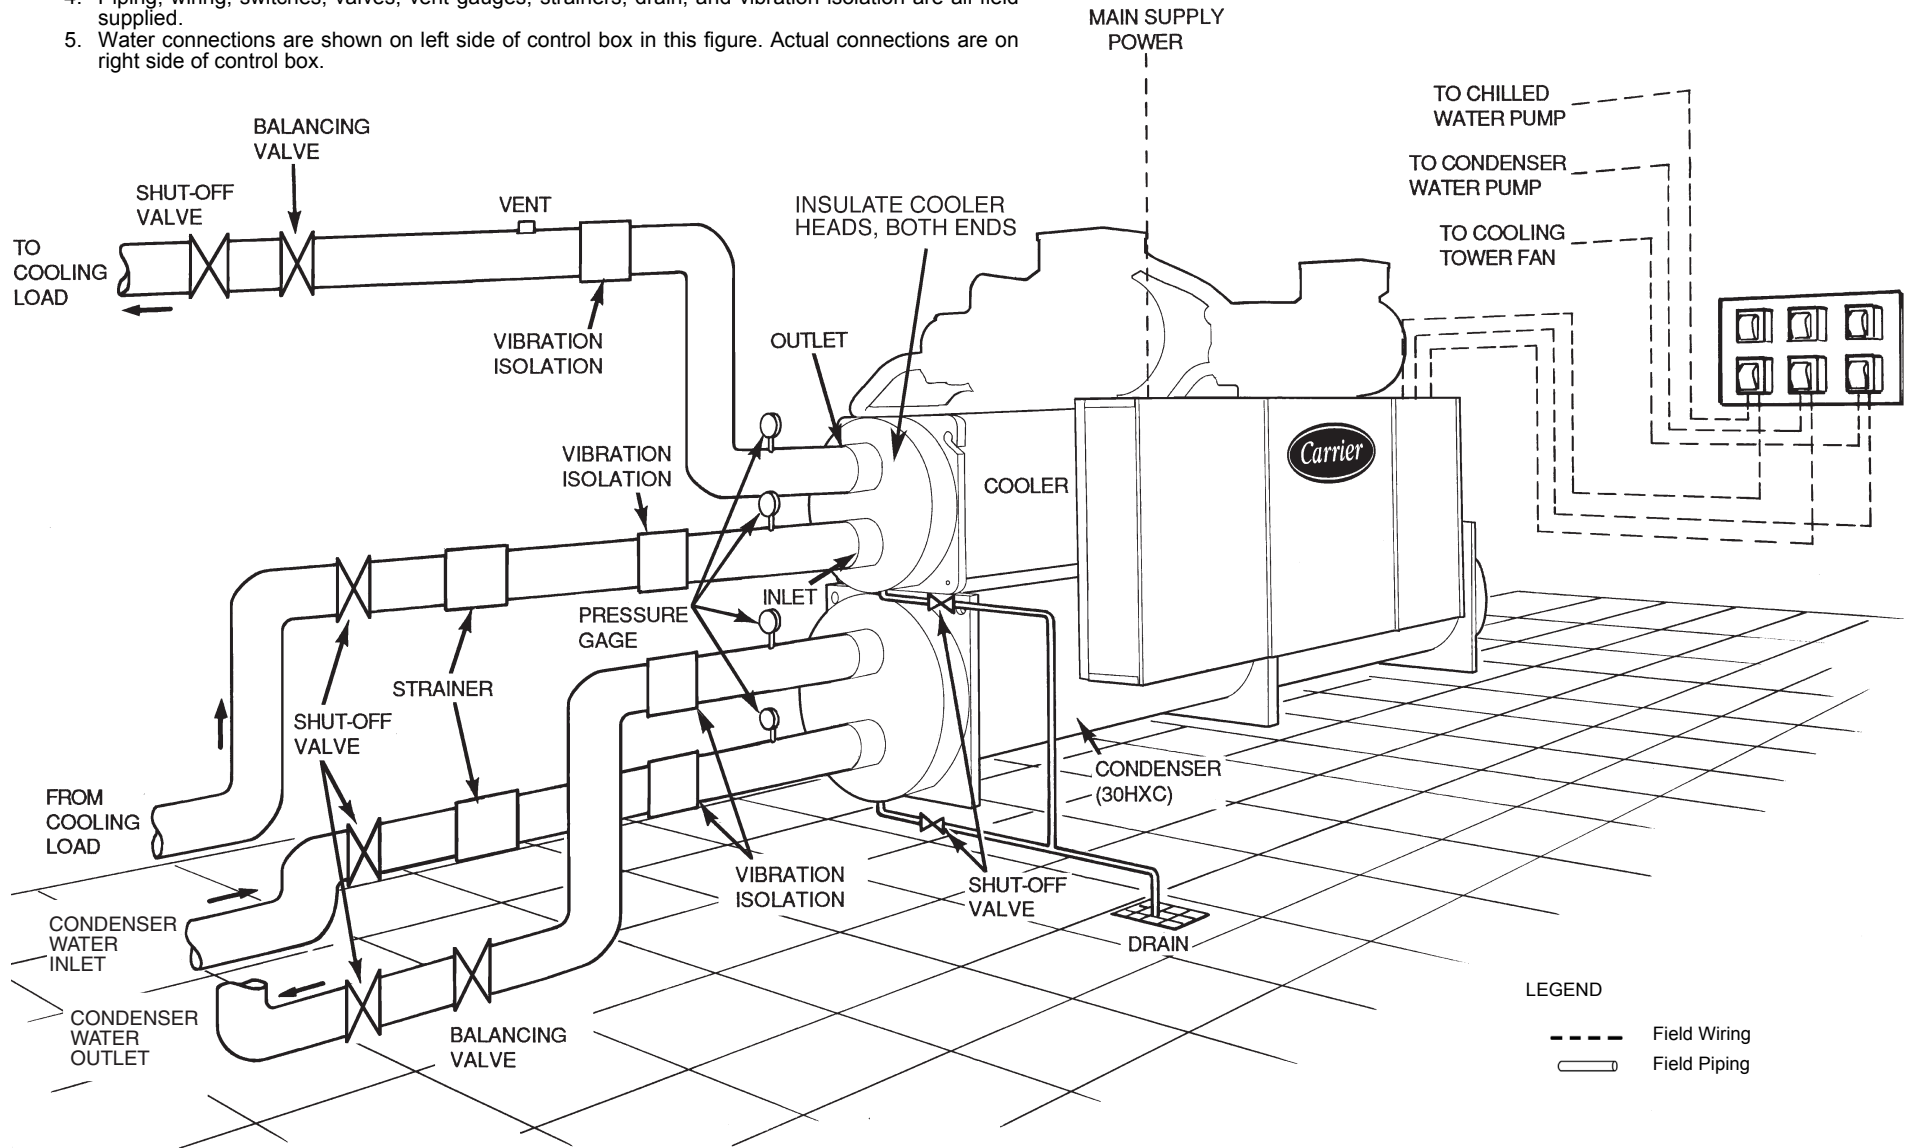


Fig. 13 — Typical Cooler (30HXA,HXC) and Condenser (30HXC Only) Piping and Wiring

30HXA PIPING, VALVE, AND FAN CYCLING PRESSURE SWITCH INSTALLATION

Relieve Pressure

The 30HXA units are shipped from the factory with a nitrogen holding charge. Before opening the refrigerant system, relieve system pressure.

30HXA Refrigerant Piping (See Fig. 14 and 15)

When running the refrigerant piping from the 30HXA unit to the remote condenser(s), avoid excessive pressure drops. *Minimizing*

line pressure drop is critical to the proper operation of the unit expansion device. Refer to Tables 3 and 4 for refrigerant line sizing guidance. Discharge and liquid lines should be sized for a maximum 2°F (1.1°C) pressure drop. See Tables 5 and 6 for an example of a 2°F (1.1°C) pressure drop in saturated temperature in the discharge (hot gas) line and liquid line, respectively. See Fig. 16 for double discharge riser details. See Table 7 for recommendations for liquid line filter drier shells and cores.

Table 3 — Refrigerant Line Sizes for 30HXA Chiller/09DP, 09AZ Condenser Combinations — Recommended Refrigerant Pipe Sizes (in. OD)^{a,b,c,d}

| 30HXA UNIT SIZE | AIR-COOLED CONDENSER TYPE, SIZE (Qty) | CKT | TOTAL LENGTH OF INTERCONNECTING PIPING — FT (M) | | | | | |
|--------------------|--|-----|---|--------------------------------|-----------------------------|--------------------------------|-----------------------------|--------------------------------|
| | | | 0-50 (0-15) | | 50-100 (15-30) | | 100-200 (30-60) | |
| | | | Liquid Line ^e | Discharge Line ^f | Liquid Line ^e | Discharge Line ^f | Liquid Line ^e | Discharge Line ^f |
| 076 | 09DP 095 (1) | A | 1-1/8 | 2-1/8 | 1-1/8 | 2-1/8 | 1-3/8 | 2-1/8 |
| | | B | 1-1/8 | 2-1/8 | 1-1/8 | 2-1/8 | 1-3/8 | 2-1/8 |
| 086 | 09DP 095 (1) | A | 1-1/8 | 2-1/8 | 1-3/8 | 2-1/8 | 1-3/8 | 2-1/8 |
| | | B | 1-1/8 | 2-1/8 | 1-1/8 | 2-1/8 | 1-3/8 | 2-1/8 |
| 096 | 09DP 115 (1) | A | 1-1/8 | 2-1/8 | 1-3/8 | 2-1/8 | 1-5/8 | 2-5/8 |
| | | B | 1-1/8 | 2-1/8 | 1-1/8 | 2-1/8 | 1-3/8 | 2-1/8 |
| 106 | 09DP 085 (1) and 09DP 060 (1) | A | 1-3/8 | 2-1/8 | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 |
| | | B | 1-1/8 | 2-1/8 | 1-1/8 | 2-1/8 | 1-3/8 | 2-1/8 |
| 116 | 09DP 085 (1) and 09DP 065 (1) | A | 1-3/8 | 2-1/8 | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 |
| | | B | 1-3/8 | 2-1/8 | 1-3/8 | 2-1/8 | 1-3/8 | 2-1/8 |
| 126 | 09DP 085 (2) | A | 1-3/8 | 2-1/8 | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 |
| | | B | 1-3/8 | 2-1/8 | 1-3/8 | 2-1/8 | 1-5/8 | 2-5/8 |
| 136 | 09DP 085 (2) | A | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 1-5/8 | 3-1/8 |
| | | B | 1-3/8 | 2-1/8 | 1-3/8 | 2-1/8 | 1-5/8 | 2-5/8 |
| 146 | 09DP 095 (2) | A | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 1-5/8 | 3-1/8 |
| | | B | 1-3/8 | 2-1/8 | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 |
| 161 | 09DP 095 (2) | A | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 2-1/8 | 3-1/8 |
| | | B | 1-3/8 | 2-1/8 | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 |
| 171 | 09DP 095 (2) | A | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 1-5/8 | 3-1/8 |
| | | B | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 2-1/8 | 3-1/8 |
| 186 | 09DP 095 (2) | A | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 2-1/8 | 3-1/8 |
| | | B | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 2-1/8 | 3-1/8 |
| 206 | 09DP 095 (2) and 09DP 115 (1) | A | 1-5/8 | 2-5/8 | 1-5/8 | 3-1/8 | 2-5/8 | 3-1/8 |
| | | B | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 2-1/8 | 3-1/8 |
| 246 | 09DP 115 (3) | A | 2-1/8 | 3-1/8 | 2-5/8 | 3-1/8 | 2-5/8 | 3-1/8 |
| | | B | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 2-5/8 | 3-1/8 |
| 261 | 09DP 115 (3) | A | 2-1/8 | 3-1/8 | 2-5/8 | 3-1/8 | 2-5/8 | 3-1/8 |
| | | B | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 2-1/8 | 3-1/8 |
| 271 | 09DP 115 (3) | A | 2-1/8 | 3-1/8 | 2-5/8 | 3-1/8 | 2-5/8 | 3-1/8 |
| | | B | 1-3/8 | 2-5/8 | 1-5/8 | 2-5/8 | 2-1/8 | 3-1/8 |

NOTE(S):

- Refrigerant and Double Discharge Riser Pipe Sizes tables are based on chiller and condenser combinations listed in the above table.
- Refrigerant and Double Discharge Riser Pipe Sizes tables are based on cooler leaving water temperatures of 40°F (4.4°C) or above. When cooler temperature is below 40°F (4.4°C), contact a Carrier representative for guidance.
- Pipe diameter calculation is based on actual line length plus a 50% allowance for fittings.
- For proper electronic expansion valve (EXV) operation, discharge line losses should not exceed 4°F (2.2°C) at full load. A calculation of line loss should be performed prior to installation.
- Field-supplied liquid line solenoid valve is required.
- Double discharge riser is required on **ALL** units which have minimum load control installed. (Please note that all 30HXA units come standard with minimum load control.) For discharge line sizes for the 30HXA please reference the installation manual.

LEGEND

OD — Outside Diameter

**Table 4 — Refrigerant Line Sizes for 30HXA Chiller/09DP Condenser Combinations -
Double Discharge Riser Pipe Sizes (in. OD)^{a,b,c,d,e}**

| 30HXA UNIT SIZE | AIR-COOLED CONDENSER TYPE, SIZE (Qty) ^f | CKT | RISER A ^f | RISER B ^f | | | |
|-----------------|---|-----|---|----------------------|-------------------|--------------------|--|
| | | | Total Length of Interconnecting Piping — FT (M) ^g | | | | |
| | | | 0-200 (0-60) | 0-50 (0-15) | 50-100 (15-30) | 100-200 (30-60) | |
| 076 | 09DP 095 (1) | A | 1-1/8 | 1-5/8 | 1-5/8 | 1-5/8 | |
| | | B | 1-1/8 | 1-5/8 | 1-5/8 | 1-5/8 | |
| 086 | 09DP 095 (1) | A | 1-1/8 | 1-5/8 | 1-5/8 | 1-5/8 | |
| | | B | 1-1/8 | 1-5/8 | 1-5/8 | 1-5/8 | |
| 096 | 09DP 115 (1) | A | 1-1/8 | 1-5/8 | 1-5/8 | 2-1/8 | |
| | | B | 1-1/8 | 1-5/8 | 1-5/8 | 1-5/8 | |
| 106 | 09DP 085 (1) and 09DP 060 (1) | A | 1-5/8 | 1-5/8 | 2-1/8 | 2-1/8 | |
| | | B | 1-3/8 | 1-3/8 | 1-3/8 | 1-3/8 | |
| 116 | 09DP 085 (1) and 09DP 065 (1) | A | 1-5/8 | 1-5/8 | 2-1/8 | 2-1/8 | |
| | | B | 1-3/8 | 1-5/8 | 1-5/8 | 1-5/8 | |
| 126 | 09DP 085 (2) or 09AZV122FE (1) | A | 1-5/8 | 2-1/8 | 2-1/8 | 2-1/8 | |
| | | B | 1-3/8 | 1-5/8 | 1-5/8 | 2-1/8 | |
| 136 | 09DP 085 (2) | A | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| | | B | 1-3/8 | 1-5/8 | 1-5/8 | 2-1/8 | |
| 146 | 09DP 095 (2) | A | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| | | B | 1-5/8 | 1-5/8 | 2-1/8 | 2-1/8 | |
| 161 | 09DP 095 (2) | A | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| | | B | 1-5/8 | 1-5/8 | 2-1/8 | 2-1/8 | |
| 171 | 09DP 095 (2) | A | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| | | B | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| 186 | 09DP 095 (2) | A | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| | | B | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| 206 | 09DP 095 (2) and 09DP 115 (1) | A | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| | | B | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| 246 | 09DP 115 (3) | A | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| | | B | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| 261 | 09DP 115 (3) | A | 1-5/8 | 2-1/8 | 2-1/8 | 3-1/8 | |
| | | B | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |
| 271 | 09DP 115 (3) | A | 1-5/8 | 2-1/8 | 3-1/8 | 3-1/8 | |
| | | B | 1-5/8 | 2-1/8 | 2-1/8 | 2-5/8 | |

NOTE(S):

- Refrigerant and Double Discharge Riser Pipe Sizes tables are based on chiller and condenser combinations listed in the above table.
- Refrigerant and Double Discharge Riser Pipe Sizes tables are based on cooler leaving water temperatures of 40°F (4.4°C) or above. When cooler temperature is below 40°F (4.4°C), contact a Carrier representative for guidance.
- Pipe diameter calculation is based on actual line length plus a 50% allowance for fittings.
- For proper electronic expansion valve (EXV) operation, discharge line losses should not exceed 4°F (2.2°C) at full load. A calculation of line loss should be performed prior to installation.
- Horizontal line sections should be sized according to the Total Length of Interconnecting Piping columns in Table 3.
- Refer to Fig. 16.
- Total Length of Interconnecting Piping refers to actual length, not total equivalent length.

LEGEND

- A** — Riser Without Trap
B — Riser With Trap
OD — Outside Diameter

**Table 5 — Discharge Line 2°F (1.1°C) Drop in
Saturated Temperature Example**


| SATURATED DISCHARGE TEMP | | PRESSURE | | | |
|--------------------------------|----------|----------|------|--------|------|
| | | R-134a | | R-513A | |
| | | Psig | kPa | Psig | kPa |
| F | C | | | | |
| 126 | 52.2 | 187.5 | 1293 | 196.0 | 1351 |
| 124 | 51.1 | 182.0 | 1255 | 190.5 | 1313 |
| Δ PRESSURE | | 5.5 | 38 | 5.5 | 38 |

**Table 6 — Liquid Line 2°F (1.1°C) Drop in Saturated
Temperature Example**

| SATURATED LIQUID TEMP | | PRESSURE | | | |
|-----------------------------|----------|----------|-----|--------|-----|
| | | R-134a | | R-513A | |
| | | Psig | kPa | Psig | kPa |
| F | C | | | | |
| 100 | 37.8 | 124.3 | 857 | 132.1 | 911 |
| 98 | 36.7 | 120.1 | 828 | 127.9 | 812 |
| Δ PRESSURE | | 4.2 | 29 | 4.2 | 99 |

Table 7 — Liquid Line Filter Drier Shell and Core Recommendations

| UNIT | | CIRCUIT A | | | CIRCUIT B | | |
|-------|--|--------------------------|-----------------------------|-------------------------|--------------------------|-----------------------------|-------------------------|
| 30HXA | Liquid Line Connection Circuit A,B (In.) | (Qty) Filter Drier Shell | Shell Connection Size (In.) | (Qty) Filter Drier Core | (Qty) Filter Drier Shell | Shell Connection Size (In.) | (Qty) Filter Drier Core |
| 076 | 1-1/8 1-1/8 | (1) P505-8969 | 1-1/8 | (2) RCW-48 | (1) P505-8969 | 1-1/8 | (2) RCW-48 |
| | | (1) P505-89611 | 1-3/8 | | (1) P505-89611 | 1-3/8 | |
| 086 | 1-1/8 1-1/8 | (1) P505-81449 | 1-1/8 | (3) RCW-48 | (1) P505-8969 | 1-1/8 | (2) RCW-48 |
| | | (1) P505-814411 | 1-3/8 | | (1) P505-89611 | 1-3/8 | |
| 096 | 1-1/8 1-1/8 | (1) P505-81449 | 1-1/8 | (3) RCW-48 | (1) P505-8969 | 1-1/8 | (2) RCW-48 |
| | | (1) P505-814411 | 1-3/8 | | (1) P505-89611 | 1-3/8 | |
| | | (1) P505-814413 | 1-5/8 | | | | |
| 106 | 1-1/8 1-1/8 | (1) P505-814411 | 1-3/8 | (3) RCW-48 | (1) P505-8969 | 1-1/8 | (2) RCW-48 |
| | | (1) P505-814413 | 1-5/8 | | (1) P505-89611 | 1-3/8 | |
| 116 | 1-1/8 1-1/8 | (1) P505-814411 | 1-3/8 | (3) RCW-48 | (1) P505-814411 | 1-3/8 | (3) RCW-48 |
| | | (1) P505-814413 | 1-5/8 | | (1) P505-814413 | 1-5/8 | |
| 126 | 1-1/8 1-1/8 | (1) P505-814411 | 1-3/8 | (3) RCW-48 | (1) P505-814411 | 1-3/8 | (3) RCW-48 |
| | | (1) P505-814413 | 1-5/8 | | (1) P505-814413 | 1-5/8 | |
| 136 | 1-1/8 1-1/8 | (1) P505-819211 | 1-3/8 | (4) RCW-48 | (1) P505-814411 | 1-3/8 | (3) RCW-48 |
| | | (1) P505-819213 | 1-5/8 | | (1) P505-814413 | 1-5/8 | |
| 146 | 1-1/8 1-1/8 | (1) P505-819211 | 1-3/8 | (4) RCW-48 | (1) P505-814411 | 1-3/8 | (3) RCW-48 |
| | | (1) P505-819213 | 1-5/8 | | (1) P505-814413 | 1-5/8 | |
| 161 | 1-3/8 1-3/8 | (1) P505-819211 | 1-3/8 | (4) RCW-48 | (1) P505-814411 | 1-3/8 | (3) RCW-48 |
| | | (1) P505-819213 | 1-5/8 | | (1) P505-814413 | 1-5/8 | |
| | | (1) P505-819217 | 2-1/8 | | | | |
| 171 | 1-3/8 1-3/8 | (1) P505-819211 | 1-3/8 | (4) RCW-48 | (1) P505-819211 | 1-3/8 | (4) RCW-48 |
| | | (1) P505-819213 | 1-5/8 | | (1) P505-819213 | 1-5/8 | |
| | | | | | (1) P505-819217 | 2-1/8 | |
| 186 | 1-3/8 1-3/8 | (1) P505-819211 | 1-3/8 | (4) RCW-48 | (1) P505-819211 | 1-3/8 | (4) RCW-48 |
| | | (1) P505-819213 | 1-5/8 | | (1) P505-819213 | 1-5/8 | |
| | | (1) P505-819217 | 2-1/8 | | (1) P505-819217 | 2-1/8 | |
| 206 | 1-5/8 1-3/8 | (1) P505-830013 | 1-5/8 | (3) RCW-100 | (1) P505-830013 | 1-5/8 | (3) RCW-100 |
| | | (1) P505-830017 | 2-1/8 | | (1) P505-830017 | 2-1/8 | |
| 246 | 1-5/8 1-3/8 | (2) P505-830013* | 1-5/8 | (6) RCW-100 | (1) P505-830013 | 1-5/8 | (3) RCW-100 |
| | | | | | (1) P505-830017 | 2-1/8 | |
| 261 | 1-5/8 1-3/8 | (2) P505-830013* | 1-5/8 | (6) RCW-100 | (1) P505-830013 | 1-5/8 | (3) RCW-100 |
| | | | | | (1) P505-830017 | 2-1/8 | |
| 271 | 1-5/8 1-3/8 | (2) P505-830013* | 1-5/8 | (6) RCW-100 | (1) P505-830013 | 1-5/8 | (3) RCW-100 |
| | | | | | (1) P505-830017 | 2-1/8 | |

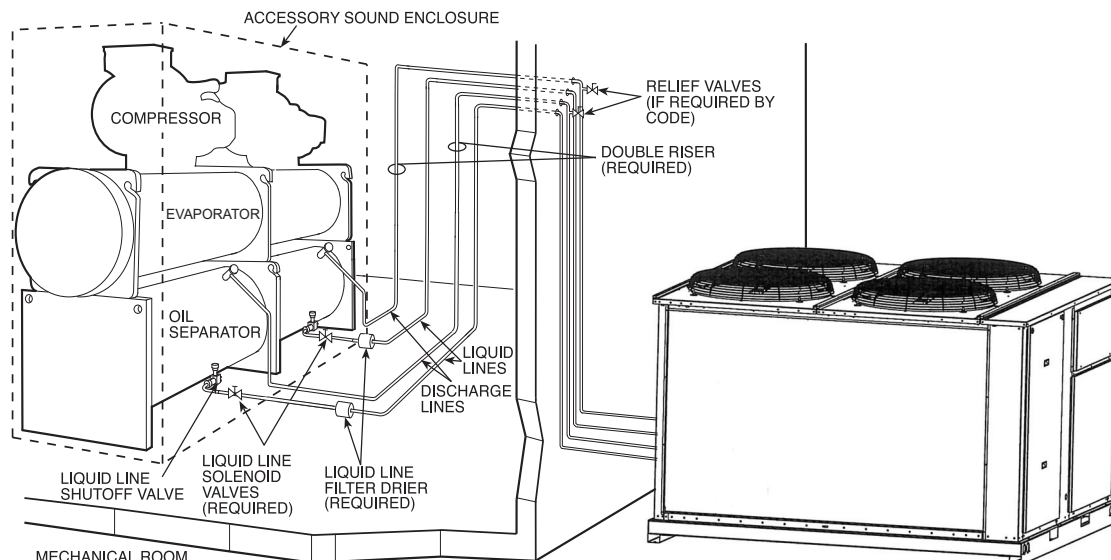


NOTES:

1. Piping shown is for general point-of-connection only and is not intended to show details for a specific installation. Certified field wiring and dimensional drawings are available upon request. The 30HXA units should be installed using certified drawings.
2. Refer to Tables 3 and 4 for 30HXA chiller/09DP condenser combination refrigerant line sizes.
3. Refer to the System Design Manual for details regarding piping techniques.
4. Refrigerant piping including liquid line solenoid valves, liquid line filter driers, and relief valves are field supplied.
5. Relief valve vent piping per local codes.
6. If unit is equipped with accessory sound enclosure, run lines down to floor and notch bottom of enclosure to clear lines.
7. When the remote condenser is equipped with Motormaster® head pressure control, the 30HXA chiller may be started with outdoor-air temperature as low as 35°F (1.7°C) and may operate at loads equal to or greater than its second stage of capacity with outdoor-air temperatures as low as 0°F (-17.8°C).
8. Operating Environment: Chiller should be installed in an indoor environment where the ambient temperature is between 40 to 104°F (4 to 40°C) with a relative humidity (non-condensing) of 95% or less. To ensure that electrical components operate properly, do not locate the chiller in an area exposed to dust, dirt, corrosive fumes, or excessive heat and humidity.
9. Liquid line solenoids, relief valves, and liquid line filter drier are field installed.

IMPORTANT: Carrier suggests that a structural engineer be consulted if transmission of vibrations from mechanical equipment is of concern.

Fig. 14 — Typical 30HXA Refrigerant Piping to Remote Condenser (076-096 Sizes Shown)

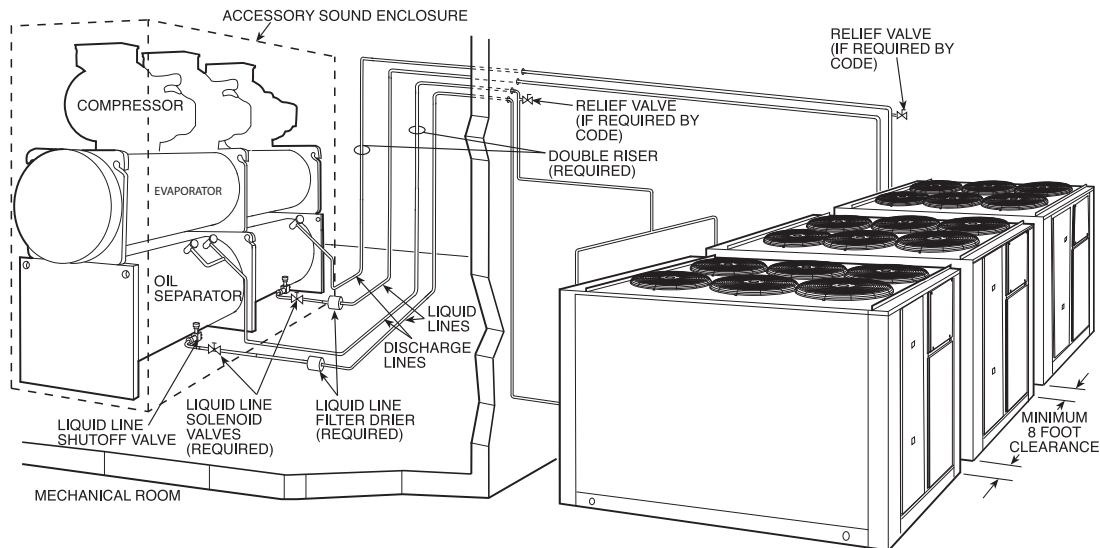

NOTES:

1. Piping shown is for general point-of-connection only and is not intended to show details for a specific installation. Certified field wiring and dimensional drawings are available upon request. The 30HXA units should be installed using certified drawings.
2. Refer to Tables 3 and 4 for 30HXA chiller/09DP condenser combination refrigerant line sizes.
3. Refer to the System Design Manual for details regarding piping techniques.
4. Refrigerant piping including liquid line solenoid valves, liquid line filter driers, and relief valves are field supplied.
5. Relief valve vent piping per local codes.
6. If unit is equipped with accessory sound enclosure, run lines down to floor and notch bottom of enclosure to clear lines.
7. When the remote condenser is equipped with Motormaster head pressure control, the 30HXA chiller may be started with outdoor-air temperature as low as 35°F (1.7°C) and may operate at loads equal to or greater than its second stage of capacity with outdoor-air temperatures as low as 0°F (-17.8°C).
8. Operating Environment: Chiller should be installed in an indoor environment where the ambient temperature is between 40 to 104°F (4 to 40°C) with a relative humidity (non-condensing) of 95% or less. To ensure that electrical components operate properly, do not locate the chiller in an area exposed to dust, dirt, corrosive fumes, or excessive heat and humidity.
9. Liquid line solenoids, relief valves, and liquid line filter drier are field installed.

IMPORTANT: Carrier suggests that a structural engineer be consulted if transmission of vibrations from mechanical equipment is of concern.

Fig. 15 — Typical 30HXA Refrigerant Piping to Remote Condenser(s) (206-271 Sizes Shown)

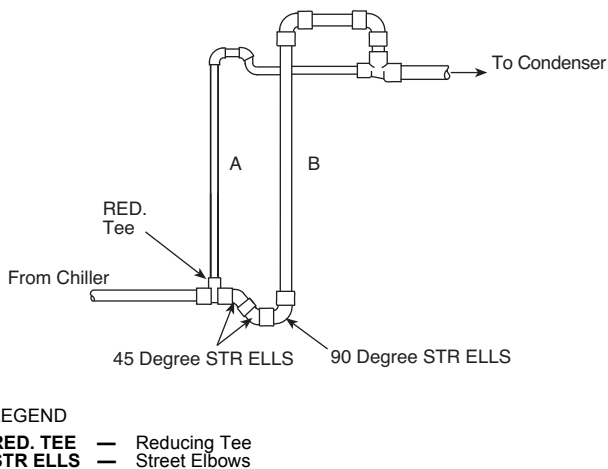


Fig. 16 — Double Discharge Riser Construction Detail

An inverted trap should be installed in the discharge line at the condenser to prevent refrigerant from flowing back to the oil separator and compressor during unit shutdown. The inverted trap must extend to the height of the condenser. The discharge line must be brazed to the back-pressure valve located on the top of the oil separator. Be sure to wrap back-pressure valve when brazing discharge line to avoid damaging the valve. Liquid line solenoid

valves with manual lift stems should be installed between the field-supplied liquid line filter driers and the unit. For proper electrical connections see Fig. 17.

If valves are installed in the liquid lines, it is recommended that field-supplied pressure relief valves be installed in each liquid line and the pressure setting should be 320 psig (2205 kPa). Most local codes require that the relief valves be vented directly outdoors. The vent must not be smaller than the relief valve outlet.

30HXA Low-Ambient Considerations

In installations where outdoor ambient temperatures may be below 34°F (1.1°C), it is recommended that inhibited glycol or other suitable corrosion-resistant antifreeze solution be used in the cooler loop to prevent cooler freeze-up.

If a suitable antifreeze solution is not used in the cooler loop, chilled water pump control is required. The chiller will automatically start the chilled water pump if the saturated suction temperature is less than the brine freeze point minus 6°F (3.3°C) or if the entering or leaving water temperature is less than the brine freeze point plus 2°F (1.1°C). Maintaining flow through the cooler is required for freeze protection.

Fan-Cycling Pressure Switches (09DP Condensers)

In order to provide proper head-pressure control in 30HXA units, install fan-cycling pressure switches in each circuit in the liquid line between the separate condenser unit and expansion device. Two switches are shipped from the factory with the 30HXA units. Refer to the 09DP condenser installation literature for details on the location and installation of the switches. Since the 30HXA is

an R-513A unit, switch selection is based on R-513A refrigerant pressures.

NOTE: Use the switches shipped with the 30HXA chiller (Part No. HK02YB097). Switches open at 97 psig (± 10 psi), and close at 185 psig (± 10 psi).

Back-Pressure Valve, 30HXA Units (See Fig. 18 and 19)

The 30HXA back-pressure valves are supplied with an integral mounting flange. The valves mount on the 30HXA oil separator. This reduces brazing when installing the discharge piping, and allows the installer to orient the valve in any desired position.

IMPORTANT: The back-pressure valves are *not* mounted to the 30HXA chiller at the factory. They are packaged and supplied attached to the unit shipping skid. These valves *must* be installed at the time of chiller installation. Failure to install the back-pressure valves will result in improper unit operation.

Complete the steps below to install the flanged back-pressure valves on the 30HXA chiller before running discharge piping. Follow these steps for both refrigerant circuits.

1. Be sure to remove nitrogen charge or properly recover refrigerant charge before removing the blank-off plate. Remove the blank-off plate from the mating flange on top of the oil separator by removing the screws from the flange. See Fig. 18 for location.
2. Using the screws that were removed in Step 1, bolt the flanged back-pressure valve to the mating flange on top of the oil separator. An O-ring is included in the box with the back-pressure valve for sealing the flange.
3. The valve may be oriented in any desired position in order to make discharge piping easier. Install pipe hangers where needed. Make sure no weight or stress is placed on the back-pressure valve.
4. Once the back-pressure valve has been mounted to the mating flange, and the piping is properly supported, a field-supplied 1/4-in. (6.4 mm) copper line *must* be run from the 1/4-in. NPT port on the back-pressure valve cap to the 1/4-in. SAE flare fitting on the motor cooling line. The equalizer line must be installed in order for the unit to function properly.
5. NOTE: A ball valve can be installed in the equalizer line to facilitate servicing.
6. After mounting the back-pressure valve to the unit, properly supporting it, and running the 1/4-in. equalizer line, the discharge piping may be installed.
7. Repeat Steps 1-4 for the other refrigerant circuit

IMPORTANT: Be sure that any Schrader core installed in the fittings is removed prior to equalizer line installation. Failure to remove core will result in the unit not functioning properly.

The 30HXA206-271 machines have 2 back pressure valves on circuit A. The equalizer line should connect to the 1/4-in. NPT ports on each valve then tee together and run to the 1/4-in. SAE flare tee provided in the circuit A economizer transducer connection. The discharge piping from each valve should tee together as close to the machine as possible. See Fig. 19.

Evacuation and Dehydration

Because the 30HXA systems use polyolester oil, which can absorb moisture, it is important to minimize the amount of time that the system interior is left exposed to the atmosphere. Minimizing the exposure time of the oil to the atmosphere will minimize the amount of moisture that needs to be removed during evacuation.

Once all of the piping connections are complete, leak test the unit and then pull a deep dehydration vacuum. Connect the vacuum pump to the charging valve at the bottom of the cooler *and* to the liquid line service valve. For best results, it is recommended that a

vacuum of at least 500 microns (0.5 mm Hg) be obtained. Afterwards, to ensure that no moisture is present in the system, perform a standing vacuum-rise test.

With the unit in deep vacuum (500 microns or less), isolate the vacuum pump from the system. Observe the rate-of-rise of the vacuum in the system. If the vacuum rises by more than 50 microns in a 30-minute time period, then continue the dehydration process. Maintain a vacuum on the system until the standing vacuum requirement is met. This will ensure a dry system.

By following these evacuation and dehydration procedures, the amount of moisture present in the system will be minimized. It is required that replaceable core liquid line filter driers be installed between the condenser(s) and the expansion devices to capture any foreign debris and provide additional moisture removal capacity. Be sure to consider the pressure drop of the filter drier when determining piping requirements. The factory-supplied strainer may be removed to reduce pressure drop provided the filter drier is located as close to the unit as possible.

For further 30HXA piping instructions, proceed to the section titled Install Pressure Relief Refrigerant Vent Piping.

30HXC PIPING AND VALVE INSTALLATION

30HXC Condenser Connections

The inlet fluid connection is always the lower of the 2 condenser connections. A screen strainer with a minimum of 20 mesh must be installed ahead of the condenser inlet (within 10 ft [3.05 m]) to prevent debris from damaging the internal condenser tubes.

The outlet water connection is the upper connection of the 2 connections. The condenser has Victaulic nozzles to connect field-supplied piping. Plan the piping arrangement in accordance with good piping practices and so that the piping does not cross in front of the condenser head. Use flexible connections on the condenser piping to reduce vibration transmission. Offset the piping to permit condenser head removal for maintenance purposes. Install pipe hangers where needed. Make sure no weight or stress is placed on the water nozzle.

CAUTION

Remove any sensors on the condenser nozzles before welding connecting piping. Reinstall after welding is complete. Failure to remove these devices may cause unit damage. Heads are cast iron, welding is **not** recommended.

Provide openings in water piping for pressure gauges and thermometers (if used). These openings should be 5 to 10 pipe diameters from the unit water nozzles. For thorough mixing and temperature stabilization, wells in the leaving water pipe should extend at least 2 in. (50 mm) into the pipe.

Although condenser has an air vent, it is recommended that a field-supplied air vent be installed in the system to facilitate servicing. Field-supplied shut-off and balancing valves should also be installed to facilitate servicing and flow balancing. Locate valves in inlet and outlet lines as close to the chiller as possible. Locate air vents at the highest point of the system loop. See Fig. 13.

Provide drain connections at all low points in the loop to permit complete system drainage.

IMPORTANT: Before starting the unit, be sure all of the air has been purged from the system.

30HXC Condenser Temperature Regulating Valve

For installations where entering condensing water temperature could be below 70°F (21.1°C), a field-supplied leaving water temperature regulating valve is required. Operation below 70°F (21.1°C) without this valve may cause the unit to shut down on low oil pressure alarms.

NOTE: This valve should be a temperature-controlled valve (DO NOT USE a pressure-controlled valve) which controls to 80°F (26.7°C) leaving water temperature. A valve that can be controlled by a 2 to 10 vdc, 0 to 10 vdc, or 10 to 0 vdc signal is also supported by the *ComfortLink* control system. Figure 20 shows the installation details for the regulating valve. Valve actuator must open in 60 seconds or less. A 4 to 20 mA modulating control valve requires signal converter.

IMPORTANT: A separate, field-supplied power supply must be used with the modulating control valve. Failure to use a separate power supply may result in damage to the electronic chiller components.

IMPORTANT: On brine applications where leaving cooler water is less than 34°F (1.1°C), a minimum water flow of 0.75 gpm/ton (0.14 L/s per kW) should be maintained through the condenser at all times.

INSTALL PRESSURE RELIEF REFRIGERANT VENT PIPING

The low side relief valves on all units are provided with 3/4-in. female NPT connections, and are located on top of the cooler shell. See Fig. 2-9. There are 2 relief valves for the cooler; one on each circuit. Make the vent connection to the low side relief valve by installing a male NPT to copper OD braze adapter. Braze a 90-degree short-radius elbow to the adapter. This will allow enough space to make vent connections to the elbow.

The 30HXA high side relief valves are provided with a 5/8-in. SAE (Society of Automotive Engineers, U.S.A.) flare connection. The 30HXC high side relief valves are provided with a 3/4-in. female NPT flare connection, and are located on the bottom of the condenser shell.

There are 2 relief valves for the oil separator (30HXA) or condenser (30HXC); one for each circuit. Most local codes require that these devices be piped to the outside. If vent piping is required by local codes, these connections have been provided to aid in the connection of vent piping in accordance with ASHRAE 15

(American Society of Heating, Refrigeration, and Air-Conditioning Engineers), Safety Code for Mechanical Refrigeration. If vent piping is required, do not restrict the vent flow in any way.

NOTE: When accessory suction service valve kit is installed, there is one additional high-side pressure relief valve per compressor. These are located on the discharge line between the muffler and the discharge shut-off valve. Pipe these valves per local codes.

Step 3 — Make Electrical Connections

The electrical characteristics of the available power supply must agree with the unit nameplate rating. Supply voltage must be within the limits shown.

FIELD POWER CONNECTIONS


All power wiring must comply with applicable local and national codes. Install field-supplied, branch circuit fused disconnect(s) of a type that can be locked off or open. See Fig. 17 for wiring details. Disconnect(s) must be located within sight and readily accessible from the unit in compliance with NEC Article 440-14. See Tables 8 and 9 for unit electrical data. See Tables 10 and 10 for compressor electrical data.

IMPORTANT: The 30HX units have a factory-installed option available for a non-fused disconnect for unit power supply. If the unit is equipped with this option, all field power wiring should be made to the non-fused disconnect since no terminal blocks are supplied.


All units have a single location for power entry to simplify the field power wiring. The maximum wire size that the unit terminal block or non-fused disconnect will accept is 500 kcmil (except units equipped with 250 amp non-fused disconnects which will accept a maximum wire size of 300 kcmil).

All units require at least one field-supplied power supply. Refer to Fig. 17 for a list of units that require 2 field-supplied power supplies. Units that require 2 power supplies are listed under TB1B in the Standard Power and Non-Fused Disconnect Option sections of Fig. 17.

STANDARD POWER

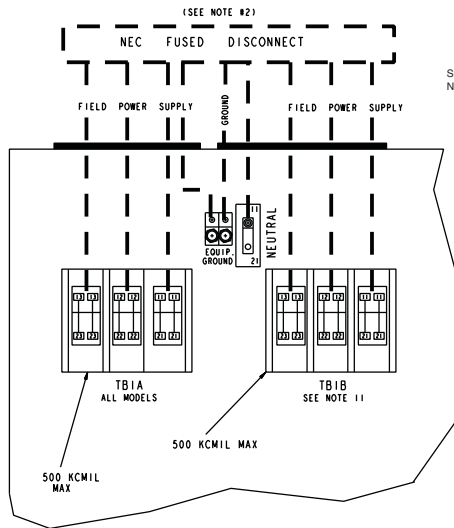

NON-FUSED DISCONNECT OPTION

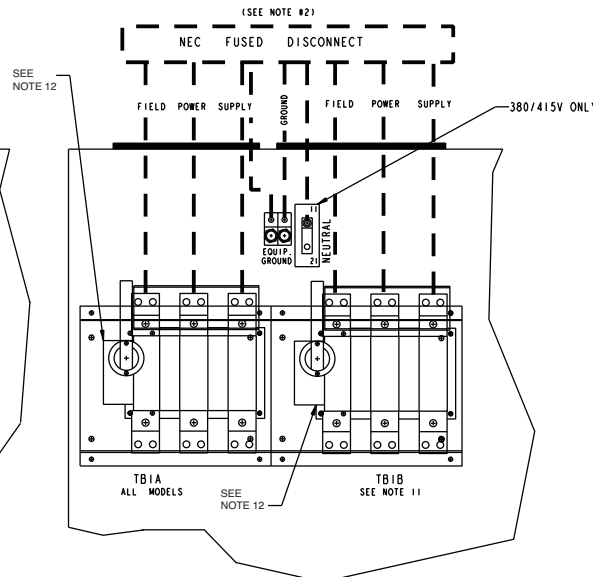


LEGEND

| | | |
|---|--|--------------------------------------|
| A — Alarm | CWPI — Chilled Water Pump Interlock | OAT — Outdoor Air Temperature |
| CFR — Condenser Fan Relay | EMM — Energy Management Module | SPT — Space Temperature |
| CNFS — Condenser Flow Switch | EWT — Entering Water Temperature | TB — Terminal Block |
| CNPI — Condenser Pump Interlock | FIOP — Factory-Installed Option | — Factory Installed Wiring |
| CNPR — Condenser Water Pump | LLSV — Liquid Line Solenoid Valve | — Field Control Wiring |
| CWFS — Chilled Water Flow Switch | LWT — Leaving Water Temperature | — Field Power Wiring |
| CWP — Chilled Water Pump | NEC — National Electrical Code | |

NOTES:

1. Factory wiring is in accordance with National Electrical Code (NEC). Field modifications or additions must be in compliance with all applicable codes.
2. Wiring for main field supply must be rated 75 C minimum. Use copper for all units. Maximum incoming wire size for each terminal block is 500 kcmil.
3. Power for control circuit should be supplied from a separate source (except 380/415-v units) through a field-supplied disconnect with 15 A maximum protection for 115-v control circuits and 15 A maximum protection for 230-v control circuit. Connect control circuit power to terminals 1 and 2 of TB4. Control circuit conductors for all units must be copper only. Control circuit power is factory wired for 380/415-v units.
4. Terminals 13 and 14 TB5 are for field external connection for remote on-off. The contacts must be rated for dry circuit application capable of handling a 24 vac load up to 50 mA.
5. Terminals 1 and 2 of TB5 are for chilled water pump interlock (CWPI) functions. If added, chilled water pump interlock contacts must be wired in series with flow contacts. The contacts must be rated for dry circuit application capable of handling a 24-vac load up to 50 mA. Chilled water flow switch (CWFS) is factory installed.
6. Terminals 10 and 12 of TB5 are for control of the chilled water pump starter. The maximum load allowed for the chilled water pump relay is 75 va sealed, 360 va inrush at 115-v or 230-v. Separate field power supply is not required.
7. Terminals 11 and 12 of TB5 are for alarm relay. The maximum load allowed for the alarm relay is 75 va sealed, 360 va inrush at 115-v or 230-v. Separate field power supply is not required.
8. Terminals 7 and 9 of TB2 are for condenser water pump (HXC) or circuit A condenser fan contactor (HXA only). Terminals 8 and 9 of TB2 are for circuit B contactor (HXA only) or liquid line solenoid valves (factory-wired 30HXC brine). The maximum load allowed is 75 va sealed, 360 va inrush at 115-v or 230-v. Separate field power supply is not required. Liquid line solenoid valves (30HXA only) must be connected in parallel fan contactors as shown.
9. Terminals 5 and 6 of TB2 are for condenser flow switch (CNFS) and/or condenser pump interlock (CNPI). The contacts must be rated for dry circuit application capable of handling a 24-vac load up to 50 mA.
10. Make appropriate connections to TB6 as shown for energy management board options. The contacts for demand limit and ice done options must be rated for dry circuit application capable of handling a 24vac load up to 50 mA.
11. TB1B supplied on 30HXA186, 208/230-v units with Y-Delta starter; 30HXA206-271, 208/230-v units with Y-Delta starter; and by special order.
12. 500 kcmil if minimum circuit amps (MCA) > 200 A, 300 kcmil if MCA ≥ 200 A.

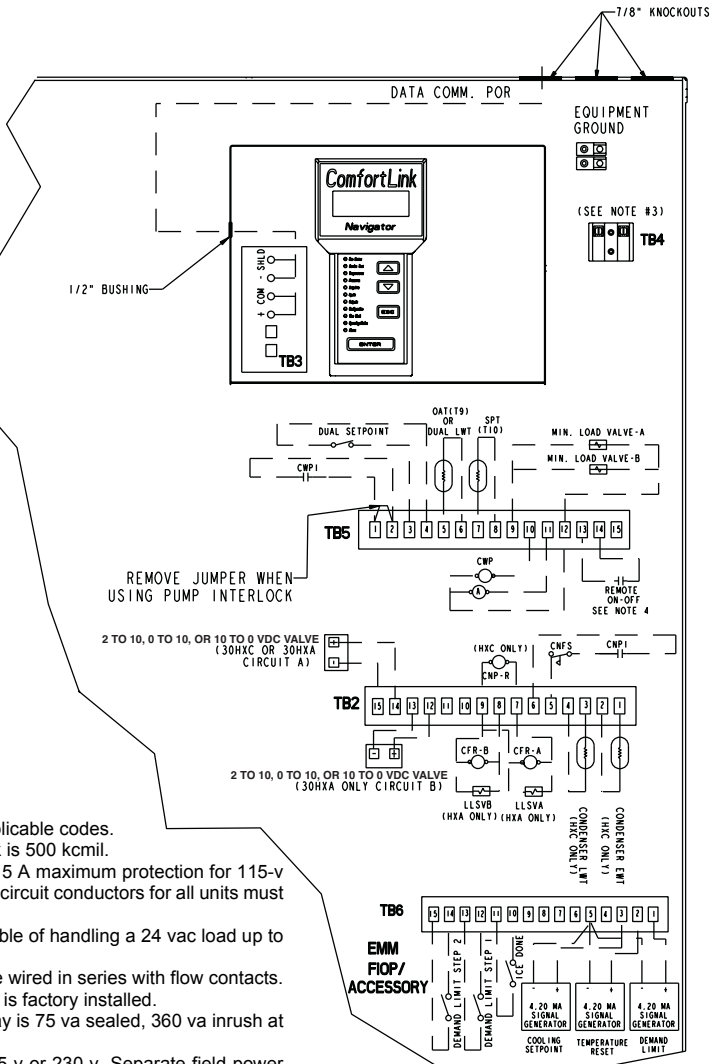

FIELD CONTROL POWER CONNECTIONS

Units with a power supply of 208/230, 460, 575-3-60, require a separate 115-1-60 control circuit power supply. A separate power supply is NOT required for these units. All other units require a separate 230-v control circuit power supply. Field control power connections are made at terminals 1 and 2 of TB4.

Terminals TB5-1 and TB5-2 are provided for field installation of a chilled water (fluid) pump interlock (CWPI). Contacts must be capable of handling a 24-vac load up to 50 mA.

An accessory remote on-off switch can be wired into TB5-13 and TB5-14. See Fig. 17 for remote on-off and CWPI wiring. Contacts must be capable of handling a 24-vac to 50 mA.

⚠ CAUTION

Do not use interlocks or other safety device contacts connected between TB5 terminals 13 and 14 as remote on-off. Connection of safeties or other interlocks between these 2 terminals will result in an electrical bypass if the enable-off-remote contact switch is in the Enable position. If remote on-off unit control is required, a field-supplied relay must be installed in the unit control box and wired as shown in Fig. 17. Failure to wire the remote on-off as recommended will result in tube freeze damage.

Terminals 11 and 12 of TB5 have been provided for a field-supplied remote alarm (ALM). If an audible alarm is installed, an alarm shutoff is also recommended. Power for a field-supplied

relay coil is factory-supplied but is limited to 75-va sealed, 360-va inrush. See Fig. 17.

Terminals 10 and 12 of TB5 have been provided for a field-supplied chilled water (fluid) pump relay (CWP). Power for the field-supplied relay coil is factory supplied, but is limited to 75-va sealed and 360-va inrush. See Fig. 17.

Terminals 7 and 9 of TB2 has been provided for a field-supplied circuit A fan control relay for the remote condenser (30HXA) or a condenser pump relay (30HXC). Use relays with a maximum coil rating of 75-va. Terminals 8 and 9 of TB2 have been provided for a field-supplied circuit B fan control relay for a remote condenser (30HXA only). Use relays with a coil rating of 75-va. A separate field power supply is NOT required. Maximum load allowed for the fan/condenser pump relays is 75-va sealed, 360-va inrush at 115-v or 230-v. See Fig. 17.

CONDENSER FAN CONTROL FOR CONDENSER UNITS USED WITH 30HXA UNITS

The main base board provides 2 control outputs for energizing and deenergizing remote fan contactors. If desired, wire the circuit A main fan contactor between terminals 7 and 9 of TB2. The circuit B main fan contactor may be wired between terminals 8 and 9 of TB2. This will cause the main fans to be on when the compressors are on. Refer to Fig. 17 for wiring details.

NOTE: The fan contactor relays are pre-wired to unit control power. A separate power supply is NOT required. The maximum load allowed for these relays is 75-va sealed, 360-va inrush at 115-v or 230-v.

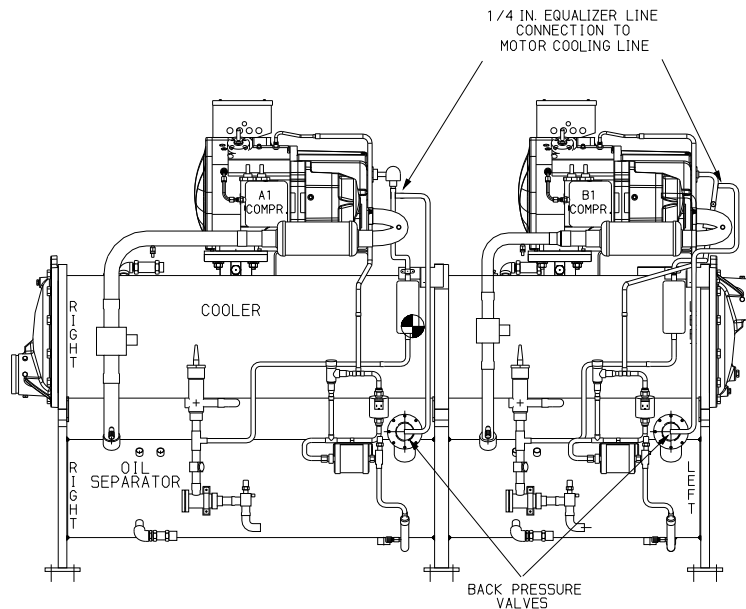


Fig. 18 — 30HXA Units Back Pressure Valve Equalizer Line Connection (076-146 Sizes Shown)

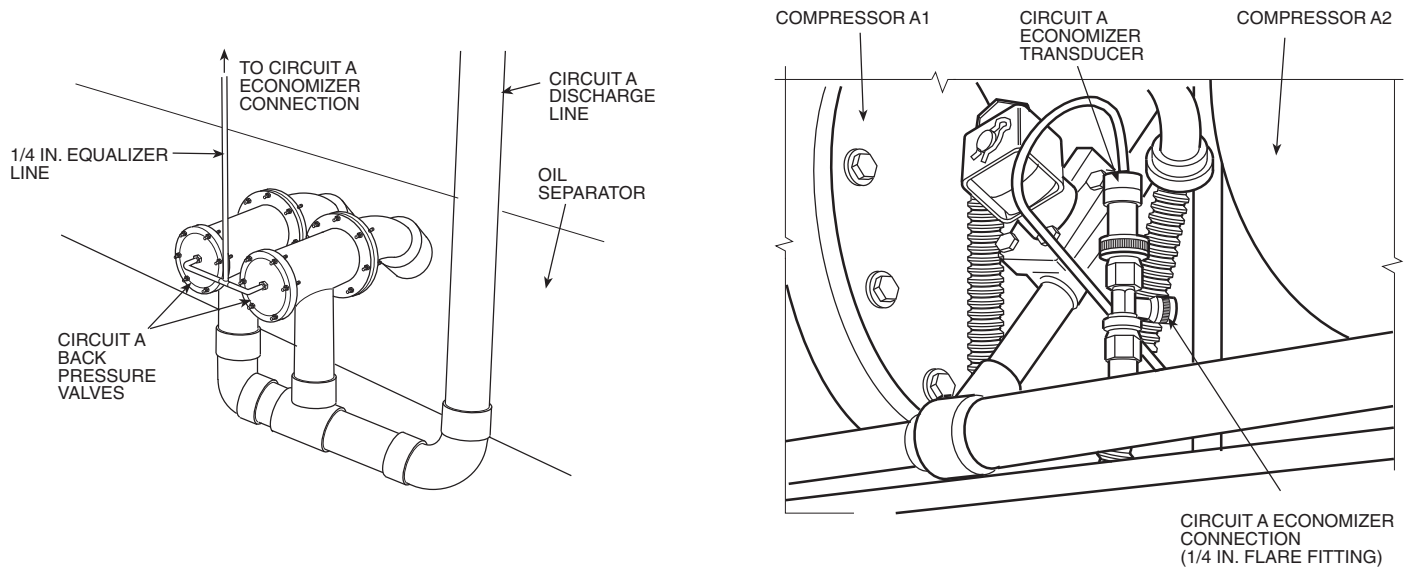


Fig. 19 — 30HXA206-271 Back Pressure Valve Equalizer Line Connection (Circuit A)

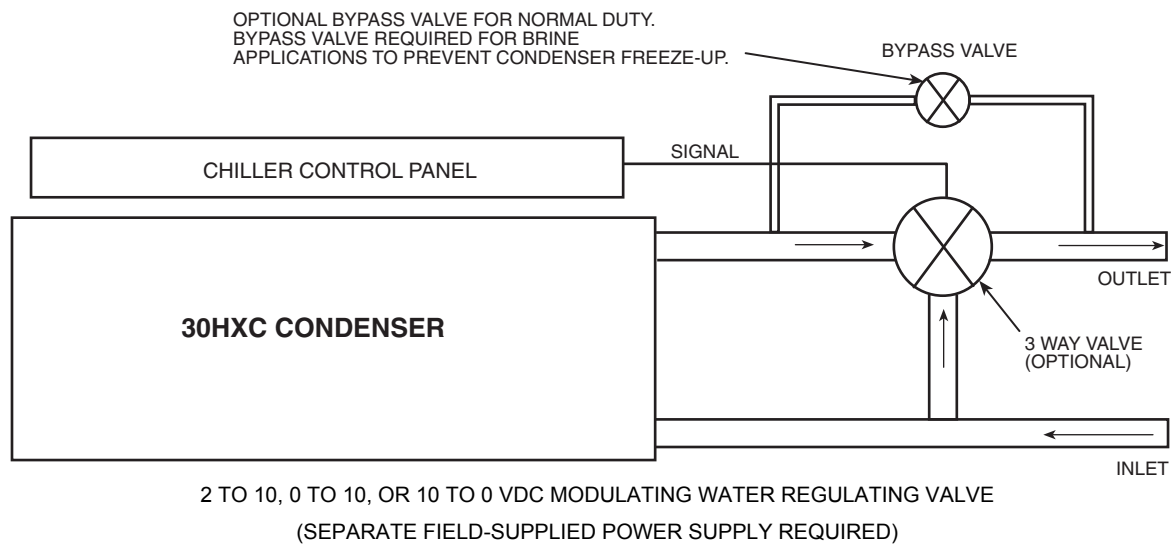
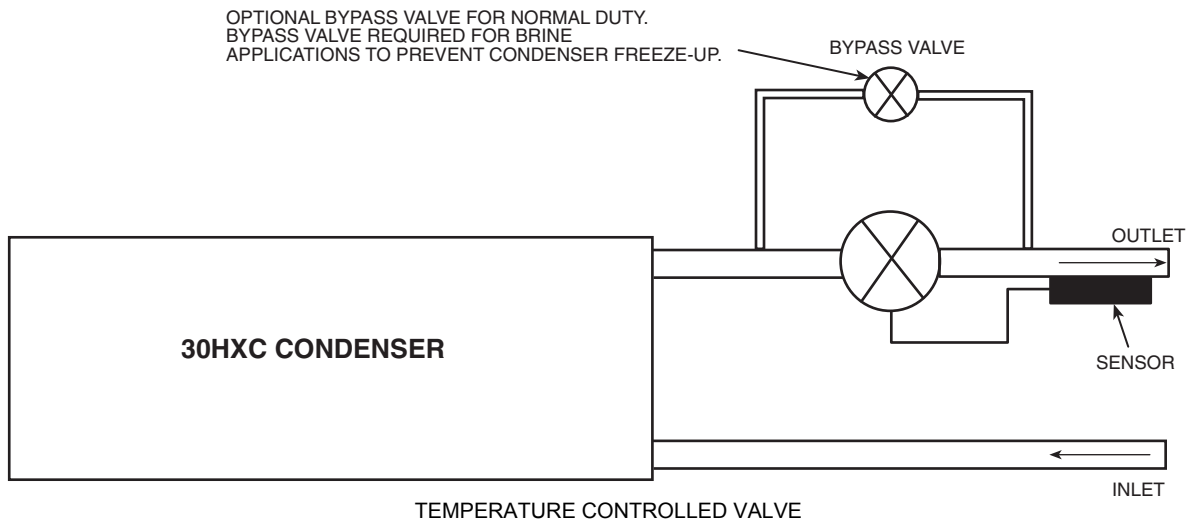


Fig. 20 — Condenser Temperature Regulating Valve Installation

Step 4 — Install Accessories

Several optional control accessories are available to provide the following features:

- Control transformer.
- Cooler pump interlock.
- Cooler pump control.
- Remote alarm.
- Remote on-off.
- Pulldown control.
- Occupancy scheduling.
- Demand limit control (requires EMM [energy management module]).
- Temperature reset (4 to 20 mA, requires EMM module).
- Dual set point control.
- Condenser water sensors.
- Carrier Comfort Network® (CCN) system.
- Energy management module (EMM).
- Refer to Controls, Start-up, Operation, Service, and Troubleshooting literature and separate accessory installation instructions for additional information.

30HXA LOW-AMBIENT OPERATION

If outdoor ambient operating temperatures below 60°F (15°C) are expected, refer to separate 09DP condenser unit installation instructions for low-ambient operation using accessory Motormaster® V control minimum load accessories also required.

MINIMUM LOAD ACCESSORY

If minimum load accessory is required, use the appropriate package. Refer to unit Price Pages or contact your local Carrier representative for more details. For installation details, refer to

separate installation instructions supplied with the accessory package.

MISCELLANEOUS ACCESSORIES

For applications requiring special accessories, the following packages are available: control power transformer, sound reduction enclosure, sound blanket, external vibration isolation, expanded display, and temperature reset sensor. Refer to individual accessory installation instructions for installation details.

Step 5 — Leak Test Unit

There are several O-ring face seal fittings used in the refrigerant and lubrication piping. If a leak is detected at any of these fittings, tighten the O-ring face seal nut to 85 to 118 in.-lb (9.5 to 12.4 Nm). Always use a back up wrench when tightening the O-ring face seal nut.

30HXC UNITS

These units are shipped from the factory with a full charge of R-513A or a nitrogen holding charge (see Tables 1 and 2). Perform a leak test to ensure that leaks have not developed during unit shipment. Dehydration of the system is not required unless the entire refrigerant charge has been lost.

30HXA UNITS

These units are shipped with a nitrogen holding charge. Leak test and dehydrate the complete system (including both field and factory-installed piping).

NOTE: Proper dehydration of 30HXA units is important to ensure that no moisture is left in the system. Refer to the separate section on Evacuation and Dehydration on page 25.

Electrical Data

See Tables 8 and 9 for 30HXC and 30HXA electrical data. See Tables 10-11 for compressor electrical data.

Table 8 — Electrical Data — 30HXC Units a, b, c, d, e, f

| UNIT 30HXC | UNIT VOLTAGE | | | | | | | | | CONTROL CIRCUIT | | | |
|---------------|--------------|----------|-----|-------|------|-------|-------|---------------|-----|---------------------|----------|-----|-----------------|
| | V-Hz (3 Ph) | Supplied | | MCA | MOCP | ICF | | Rec Fuse Size | | V-Hz (Single Ph) | Supplied | | MCA and MOCP |
| | | Min | Max | | | XL | WD | XL | WD | | Min | Max | |
| 076 | 208/230-60 | 187 | 253 | 220.7 | 300 | — | 307.1 | — | 250 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 99.7 | 125 | 374.3 | 148.3 | 125 | 125 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 79.7 | 110 | 299.4 | 118.4 | 90 | 90 | 115-60 | 104 | 127 | 15 |
| 086 | 208/230-60 | 187 | 253 | 246.4 | 350 | — | 307.1 | — | 300 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 111.3 | 150 | 374.3 | 148.3 | 125 | 125 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 88.9 | 125 | 299.4 | 118.4 | 100 | 100 | 115-60 | 104 | 127 | 15 |
| 096 | 208/230-60 | 187 | 253 | 273.6 | 400 | — | 476.1 | — | 350 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 122.4 | 175 | 643.0 | 243.0 | 150 | 150 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 97.8 | 125 | 519.3 | 196.3 | 125 | 125 | 115-60 | 104 | 127 | 15 |
| 106 | 208/230-60 | 187 | 253 | 311.0 | 450 | — | 524.1 | — | 400 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 139.0 | 200 | 783.0 | 290.0 | 175 | 175 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 111.1 | 150 | 599.3 | 222.3 | 150 | 150 | 115-60 | 104 | 127 | 15 |
| 116 | 208/230-60 | 187 | 253 | 331.1 | 500 | — | 544.2 | — | 400 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 148.0 | 200 | 792.0 | 299.0 | 175 | 175 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 118.3 | 175 | 606.5 | 229.5 | 150 | 150 | 115-60 | 104 | 127 | 15 |
| 126 | 208/230-60 | 187 | 253 | 356.9 | 500 | — | 570.0 | — | 400 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 159.6 | 225 | 803.5 | 310.5 | 200 | 200 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 127.5 | 175 | 615.7 | 238.7 | 150 | 150 | 115-60 | 104 | 127 | 15 |
| 136 | 208/230-60 | 187 | 253 | 399.3 | 600 | — | 674.0 | — | 500 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 178.2 | 250 | 843.5 | 323.5 | 225 | 225 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 142.6 | 200 | 670.7 | 257.7 | 175 | 175 | 115-60 | 104 | 127 | 15 |
| 161 | 208/230-60 | 187 | 253 | 434.1 | 600 | — | 686.4 | — | 500 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 194.1 | 250 | 849.1 | 329.1 | 225 | 225 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 155.1 | 225 | 675.2 | 262.2 | 200 | 200 | 115-60 | 104 | 127 | 15 |
| 206 | 208/230-60 | 187 | 253 | 601.7 | 800 | — | 854.0 | — | 700 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 268.8 | 350 | 923.8 | 403.8 | 300 | 300 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 215.0 | 250 | 735.0 | 322.0 | 250 | 250 | 115-60 | 104 | 127 | 15 |
| 246 | 208/230-60 | 187 | 253 | 690.2 | 800 | — | 942.5 | — | 800 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 308.5 | 400 | 963.5 | 443.5 | 350 | 350 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 246.6 | 300 | 766.7 | 353.7 | 300 | 300 | 115-60 | 104 | 127 | 15 |
| 261 | 208/230-60 | 187 | 253 | 709.2 | 800 | — | 961.5 | — | 800 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 316.8 | 400 | 971.8 | 451.8 | 350 | 350 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 253.4 | 300 | 773.5 | 360.5 | 300 | 300 | 115-60 | 104 | 127 | 15 |
| 271 | 208/230-60 | 187 | 253 | 727.1 | 800 | — | 979.5 | — | 800 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 325.0 | 400 | 980.0 | 460.0 | 400 | 400 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 259.8 | 300 | 779.9 | 366.9 | 300 | 300 | 115-60 | 104 | 127 | 15 |

Table 9 — Electrical Data — 30HXA Units a, b, c, d, e, f

| UNIT 30HXA | UNIT VOLTAGE | | | POWER SUPPLY QTY. REQD. | NO. POWER SUPPLY CONDUCTORS | UNIT VOLTAGE | | | | | | CONTROL CIRCUIT | | | |
|---------------|----------------|----------|-----|-------------------------------|-----------------------------------|--------------|------|--------|--------|---------------|------|------------------------|----------|-----|-----------------|
| | V-Hz (3 Ph) | Supplied | | | | MCA | MOCP | ICF | | Rec Fuse Size | | V-Hz (Single Ph) | Supplied | | MCA and MOCP |
| | | Min | Max | | | | | XL | WD | XL | WD | | Min | Max | |
| 076 | 208/230-60 | 187 | 253 | 1 | 3 | 323.6 | 450 | — | 450.8 | — | 400 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 1 | 3 | 146.0 | 200 | 549.9 | 217.9 | 175 | 175 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 116.8 | 150 | 439.9 | 174.9 | 150 | 150 | 115-60 | 104 | 127 | 15 |
| 086 | 208/230-60 | 187 | 253 | 1 | 3 | 358.7 | 500 | — | 510.8 | — | 450 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 1 | 3 | 161.9 | 225 | 644.9 | 247.9 | 200 | 200 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 129.5 | 175 | 535.9 | 198.9 | 150 | 150 | 115-60 | 104 | 127 | 15 |
| 096 | 208/230-60 | 187 | 253 | 1 | 6 | 406.1 | 600 | — | 576.8 | — | 500 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 1 | 3 | 183.4 | 250 | 749.9 | 280.9 | 225 | 225 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 146.5 | 200 | 599.9 | 224.9 | 175 | 175 | 115-60 | 104 | 127 | 15 |
| 106 | 208/230-60 | 187 | 253 | 1 | 6 | 463.2 | 700 | — | 661.8 | — | 600 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 1 | 3 | 209.2 | 300 | 884.9 | 323.9 | 250 | 250 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 167.2 | 250 | 707.9 | 258.9 | 200 | 200 | 115-60 | 104 | 127 | 15 |
| 116 | 208/230-60 | 187 | 253 | 1 | 6 | 491.3 | 700 | — | 689.9 | — | 600 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 1 | 3 | 221.9 | 300 | 897.6 | 336.6 | 300 | 300 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 177.4 | 250 | 718.1 | 269.1 | 225 | 225 | 115-60 | 104 | 127 | 15 |
| 126 | 208/230-60 | 187 | 253 | 1 | 6 | 529.2 | 700 | — | 727.8 | — | 600 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 1 | 3 | 239.1 | 350 | 914.8 | 353.8 | 300 | 300 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 191.0 | 250 | 731.7 | 282.7 | 225 | 225 | 115-60 | 104 | 127 | 15 |
| 136 | 208/230-60 | 187 | 253 | 1 | 6 | 599.1 | 800 | — | 790.8 | — | 700 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 1 | 3 | 270.7 | 400 | 1014.8 | 385.8 | 350 | 350 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 216.2 | 300 | 811.7 | 308.7 | 250 | 250 | 115-60 | 104 | 127 | 15 |
| 146 | 208/230-60 | 187 | 253 | 1 | 6 | 644.8 | 800 | — | 836.5 | — | 800 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 1 | 3 | 291.3 | 400 | 1035.4 | 406.4 | 350 | 350 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 232.7 | 300 | 828.2 | 325.2 | 300 | 300 | 115-60 | 104 | 127 | 15 |
| 161 | 208/230-60 | 187 | 253 | 1 | 6 | 672.9 | 1000 | — | 978.9 | — | 800 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 1 | 3 | 304.0 | 450 | 1281.6 | 477.6 | 350 | 350 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 242.9 | 350 | 1025.1 | 382.1 | 300 | 300 | 115-60 | 104 | 127 | 15 |
| 171 | 208/230-60 | 187 | 253 | 1 | 6 | 723.9 | 1000 | — | 1029.9 | — | 1000 | 115-60 | 104 | 127 | 15 |
| | 460-60 | 414 | 506 | 1 | 3 | 327.0 | 450 | 1304.6 | 500.6 | 400 | 400 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 261.4 | 350 | 1043.6 | 400.6 | 300 | 300 | 115-60 | 104 | 127 | 15 |
| 186 | 208/230-60 | — | — | — | — | — | — | — | — | — | — | 115-60 | 104 | 127 | 15 |
| | Ckt A | 187 | 253 | 1 | 6 | 437.0 | 700 | — | 743.0 | — | 600 | — | — | — | — |
| | Ckt B | 187 | 253 | 1 | 6 | 437.0 | 700 | — | 743.0 | — | 600 | — | — | — | — |
| | 460-60 | 414 | 506 | 1 | 3 | 355.3 | 500 | 1332.9 | 528.9 | 400 | 400 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 284.0 | 400 | 1066.2 | 423.2 | 350 | 350 | 115-60 | 104 | 127 | 15 |
| 206 | 208/230-60 | — | — | — | — | — | — | — | — | — | — | 115-60 | 104 | 127 | 15 |
| | Ckt A | 187 | 253 | 1 | 6 | 520.6 | 800 | — | 743.0 | — | 600 | — | — | — | — |
| | Ckt B | 187 | 253 | 1 | 6 | 422.0 | 700 | — | 743.0 | — | 600 | — | — | — | — |
| | 460-60 | 414 | 506 | 1 | 6 | 400.1 | 500 | 1377.7 | 573.7 | 450 | 450 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 319.9 | 400 | 1102.1 | 459.1 | 400 | 400 | 115-60 | 104 | 127 | 15 |
| 246 | 208/230-60 | — | — | — | — | — | — | — | — | — | — | 115-60 | 104 | 127 | 15 |
| | Ckt A | 187 | 253 | 1 | 6 | 657.9 | 800 | — | 978.9 | — | 800 | — | — | — | — |
| | Ckt B | 187 | 253 | 1 | 6 | 422.0 | 700 | — | 743.0 | — | 600 | — | — | — | — |
| | 460-60 | 414 | 506 | 1 | 6 | 461.9 | 600 | 1439.5 | 635.5 | 600 | 600 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 3 | 369.1 | 450 | 1151.3 | 508.3 | 450 | 450 | 115-60 | 104 | 127 | 15 |
| 261 | 208/230-60 | — | — | — | — | — | — | — | — | — | — | 115-60 | 104 | 127 | 15 |
| | Ckt A | 187 | 253 | 1 | 6 | 708.9 | 1000 | — | 1029.9 | — | 800 | — | — | — | — |
| | Ckt B | 187 | 253 | 1 | 6 | 422.0 | 700 | — | 743.0 | — | 600 | — | — | — | — |
| | 460-60 | 414 | 506 | 1 | 6 | 484.9 | 600 | 1462.5 | 658.5 | 600 | 600 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 6 | 387.6 | 500 | 1169.8 | 526.8 | 450 | 450 | 115-60 | 104 | 127 | 15 |
| 271 | 208/230-60 | — | — | — | — | — | — | — | — | — | — | 115-60 | 104 | 127 | 15 |
| | Ckt A | 187 | 253 | 1 | 6 | 759.6 | 1000 | — | 1080.6 | — | 1000 | — | — | — | — |
| | Ckt B | 187 | 253 | 1 | 6 | 422.0 | 700 | — | 743.0 | — | 600 | — | — | — | — |
| | 460-60 | 414 | 506 | 1 | 6 | 513.2 | 600 | 1490.8 | 686.8 | 600 | 600 | 115-60 | 104 | 127 | 15 |
| | 575-60 | 518 | 633 | 1 | 6 | 410.2 | 500 | 1192.4 | 549.4 | 450 | 450 | 115-60 | 104 | 127 | 15 |

Legend for Tables 8 and 9

NOTE(S):

- a. Each main power source must be supplied from a field-supplied fused electrical service with a (factory-installed or field-installed) disconnect located in sight from the unit.
- b. Control circuit power must be supplied from a separate source through a field-supplied disconnect. An accessory control transformer may be used to provide control circuit power from the main unit power supply.
- c. Maximum incoming wire size for each terminal block is 500 kcmil.
- d. Maximum allowable phase imbalance is: 2%; amps, 5%.
- e. Use copper conductors only.
- f. The MOCP is calculated as follows:
 $MOCP = (2.25) (\text{largest RLA}) + \text{the sum of the other RLAs}$. Size the fuse one size down from the result. The RLAs are listed on the nameplate.
 The recommended fuse size in amps (RFA) is calculated as follows:
 $RFA = (1.50) (\text{largest RLA}) + \text{the sum of the other RLAs}$. Size the fuse one size up from the result. The RLAs are listed on the nameplate.
 $MCA = (1.25) (\text{largest RLA}) + \text{the sum of the other RLAs}$. Size the wires one size up from the result.

LEGEND

| | | |
|-------------|---|--|
| ICF | — | Maximum Instantaneous Current Flow during start-up (the point in the starting sequence where the sum of the LRA for the start-up compressor, plus the total RLA for all running compressors is at a maximum) |
| LRA | — | Locked Rotor Amps |
| MCA | — | Minimum Circuit Ampacity (for wire sizing) |
| MOCP | — | Maximum Overcurrent Protection |
| RLA | — | Rated Load Amps |
| WD | — | Wye-Delta Start |
| XL | — | Across-the-Line Start |

Table 10 — Compressor Electrical Data - 30HXC Units

| UNIT SIZE 30HXC | NAMEPLATE V-Hz (3 Phase) | COMPRESSOR NUMBERS | | | |
|-----------------|--------------------------------|--------------------|-----|-------|-----|
| | | A1 | | B1 | |
| | | RLA | LRA | RLA | LRA |
| 076-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 44.3 | 330 | 44.3 | 330 |
| | 575-60 | 35.4 | 264 | 35.4 | 264 |
| 076-WD | 208/230-60 | 98.1 | 209 | 98.1 | 209 |
| | 460-60 | 44.3 | 104 | 44.3 | 104 |
| | 575-60 | 35.4 | 83 | 35.4 | 83 |
| 086-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 53.6 | 330 | 44.3 | 330 |
| | 575-60 | 42.8 | 264 | 35.4 | 264 |
| 086-WD | 208/230-60 | 118.6 | 209 | 98.1 | 209 |
| | 460-60 | 53.6 | 104 | 44.3 | 104 |
| | 575-60 | 42.8 | 83 | 35.4 | 83 |
| 096-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 63.5 | 600 | 43.0 | 330 |
| | 575-60 | 50.7 | 485 | 34.3 | 264 |
| 096-WD | 208/230-60 | 142.0 | 380 | 96.1 | 209 |
| | 460-60 | 63.5 | 200 | 43.0 | 104 |
| | 575-60 | 50.7 | 162 | 34.3 | 83 |
| 106-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 76.8 | 740 | 43.0 | 330 |
| | 575-60 | 61.4 | 565 | 34.3 | 264 |
| 106-WD | 208/230-60 | 171.9 | 428 | 96.1 | 209 |
| | 460-60 | 76.8 | 247 | 43.0 | 104 |
| | 575-60 | 61.4 | 188 | 34.3 | 83 |
| 116-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 76.8 | 740 | 52.0 | 330 |
| | 575-60 | 61.4 | 565 | 41.5 | 264 |
| 116-WD | 208/230-60 | 171.9 | 428 | 116.2 | 209 |
| | 460-60 | 76.8 | 247 | 52.0 | 104 |
| | 575-60 | 61.4 | 188 | 41.5 | 83 |
| 126-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 76.8 | 740 | 63.5 | 600 |
| | 575-60 | 61.4 | 565 | 50.7 | 485 |
| 126-WD | 208/230-60 | 171.9 | 428 | 142.0 | 380 |
| | 460-60 | 76.8 | 247 | 63.5 | 200 |
| | 575-60 | 61.4 | 188 | 50.7 | 162 |
| 136-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 91.8 | 780 | 63.5 | 600 |
| | 575-60 | 73.5 | 620 | 50.7 | 485 |
| 136-WD | 208/230-60 | 205.8 | 532 | 142.0 | 380 |
| | 460-60 | 91.8 | 260 | 63.5 | 200 |
| | 575-60 | 73.5 | 207 | 50.7 | 162 |
| 161-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 100.0 | 780 | 69.1 | 600 |
| | 575-60 | 79.9 | 620 | 55.2 | 485 |
| 161-WD | 208/230-60 | 223.7 | 532 | 154.4 | 380 |
| | 460-60 | 100.0 | 260 | 69.1 | 200 |
| | 575-60 | 79.9 | 207 | 55.2 | 162 |

NOTE(S):

a. Units are shipped with wye-delta start as standard. Across-the-line start is not available.

Table 10 — Compressor Electrical Data - 30HXC Units (cont)

| UNIT SIZE 30HXC | NAMEPLATE V-Hz (3 Phase) | COMPRESSOR NUMBERS | | | | | |
|--------------------|--------------------------------|--------------------|-----|-------|-----|-------|-----|
| | | A1 | | A2 | | B1 | |
| | | RLA | LRA | RLA | LRA | RLA | LRA |
| 206-XL | 208/230-60 | a | a | a | a | a | a |
| | 460-60 | 83.5 | 740 | 48.2 | 350 | 100.0 | 780 |
| | 575-60 | 66.7 | 565 | 38.6 | 280 | 79.9 | 620 |
| 206-WD | 208/230-60 | 186.8 | 428 | 106.8 | 233 | 223.7 | 532 |
| | 460-60 | 83.5 | 247 | 48.2 | 227 | 100.0 | 260 |
| | 575-60 | 66.7 | 188 | 38.6 | 93 | 79.9 | 207 |
| 246-XL | 208/230-60 | a | a | a | a | a | a |
| | 460-60 | 100.0 | 780 | 69.1 | 600 | 100.0 | 780 |
| | 575-60 | 79.9 | 620 | 55.2 | 485 | 79.9 | 620 |
| 246-WD | 208/230-60 | 223.7 | 532 | 154.4 | 380 | 223.7 | 532 |
| | 460-60 | 100.0 | 260 | 69.1 | 200 | 100.0 | 260 |
| | 575-60 | 79.9 | 207 | 55.2 | 162 | 79.9 | 207 |
| 261-XL | 208/230-60 | a | a | a | a | a | a |
| | 460-60 | 100.0 | 780 | 83.5 | 740 | 100.0 | 780 |
| | 575-60 | 79.9 | 620 | 66.7 | 565 | 79.9 | 620 |
| 261-WD | 208/230-60 | 223.7 | 532 | 186.8 | 428 | 223.7 | 532 |
| | 460-60 | 100.0 | 260 | 83.5 | 247 | 100.0 | 260 |
| | 575-60 | 79.9 | 207 | 66.7 | 188 | 79.9 | 207 |
| 271-XL | 208/230-60 | a | a | a | a | a | a |
| | 460-60 | 100.0 | 780 | 100.0 | 780 | 100.0 | 780 |
| | 575-60 | 79.9 | 620 | 79.9 | 620 | 79.9 | 620 |
| 271-WD | 208/230-60 | 223.7 | 532 | 223.7 | 532 | 223.7 | 532 |
| | 460-60 | 100.0 | 260 | 100.0 | 260 | 100.0 | 260 |
| | 575-60 | 79.9 | 207 | 79.9 | 207 | 79.9 | 207 |

NOTE(S):

a. Units are shipped with Wye-Delta starts standard. Across-the-line start is not available.

LEGEND

LRA — Locked Rotor Amps
RLA — Rated Load Amps
WD — Wye-Delta Start
XL — Across-the-Line Start

Table 11 — Compressor Electrical Data - 30HXA Units

| UNIT SIZE 30HXA | NAMEPLATE V-Hz (3 Phase) | COMPRESSOR NUMBERS | | | |
|-----------------|--------------------------------|--------------------|------|-------|------|
| | | A1 | | B1 | |
| | | RLA | LRA | RLA | LRA |
| 076-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 64.9 | 485 | 64.9 | 485 |
| | 575-60 | 51.9 | 388 | 51.9 | 388 |
| 076-WD | 208/230-60 | 98.1 | 209 | 98.1 | 209 |
| | 460-60 | 64.9 | 153 | 64.9 | 153 |
| | 575-60 | 51.9 | 123 | 51.9 | 123 |
| 086-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 77.6 | 580 | 64.9 | 485 |
| | 575-60 | 62.1 | 484 | 51.9 | 388 |
| 086-WD | 208/230-60 | 118.6 | 209 | 98.1 | 209 |
| | 460-60 | 77.6 | 183 | 64.9 | 153 |
| | 575-60 | 62.1 | 147 | 51.9 | 123 |
| 096-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 94.8 | 685 | 64.9 | 485 |
| | 575-60 | 75.7 | 548 | 51.9 | 388 |
| 096-WD | 208/230-60 | 144.9 | 256 | 98.1 | 209 |
| | 460-60 | 94.8 | 216 | 64.9 | 153 |
| | 575-60 | 75.7 | 173 | 51.9 | 123 |
| 106-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 115.4 | 820 | 64.9 | 485 |
| | 575-60 | 92.2 | 656 | 51.9 | 388 |
| 106-WD | 208/230-60 | 175.4 | 307 | 98.1 | 209 |
| | 460-60 | 115.4 | 259 | 64.9 | 153 |
| | 575-60 | 92.2 | 207 | 51.9 | 123 |
| 116-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 115.4 | 820 | 77.6 | 580 |
| | 575-60 | 92.2 | 656 | 62.1 | 484 |
| 116-WD | 208/230-60 | 175.4 | 307 | 118.6 | 209 |
| | 460-60 | 115.4 | 259 | 77.6 | 183 |
| | 575-60 | 92.2 | 207 | 62.1 | 147 |
| 126-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 115.4 | 820 | 94.8 | 685 |
| | 575-60 | 92.2 | 656 | 75.7 | 548 |
| 136-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 140.7 | 920 | 94.8 | 685 |
| | 575-60 | 112.4 | 736 | 75.7 | 548 |
| 136-WD | 208/230-60 | 210.0 | 367 | 144.9 | 256 |
| | 460-60 | 140.7 | 291 | 94.8 | 216 |
| | 575-60 | 112.4 | 233 | 75.7 | 173 |
| 146-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 140.7 | 920 | 115.4 | 820 |
| | 575-60 | 112.4 | 736 | 92.2 | 656 |
| 146-WD | 208/230-60 | 210.0 | 367 | 175.4 | 307 |
| | 460-60 | 140.7 | 291 | 115.4 | 259 |
| | 575-60 | 112.4 | 233 | 92.2 | 207 |
| 161-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 157.9 | 1175 | 106.6 | 790 |
| | 575-60 | 126.2 | 940 | 85.1 | 630 |
| 161-WD | 208/230-60 | 228.8 | 433 | 157.6 | 350 |
| | 460-60 | 157.9 | 371 | 106.6 | 263 |
| | 575-60 | 126.2 | 297 | 85.1 | 211 |
| 171-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 129.6 | 920 | 157.9 | 1175 |
| | 575-60 | 103.6 | 736 | 126.2 | 940 |
| 171-WD | 208/230-60 | 190.6 | 367 | 228.8 | 433 |
| | 460-60 | 129.6 | 291 | 157.9 | 371 |
| | 575-60 | 103.6 | 233 | 126.2 | 297 |
| 186-XL | 208/230-60 | a | a | a | a |
| | 460-60 | 157.9 | 1175 | 157.9 | 1175 |
| | 575-60 | 126.2 | 940 | 126.2 | 940 |

Table 11 — Compressor Electrical Data - 30HXA Units (cont)

| UNIT SIZE 30HXC | NAMEPLATE V-Hz (3 Phase) | COMPRESSOR NUMBERS | | | | | |
|--------------------|--------------------------------|--------------------|-----|-------|-----|-------|-----|
| | | A1 | | A2 | | B1 | |
| | | RLA | LRA | RLA | LRA | RLA | LRA |
| 206-XL | 208/230-60 | a | a | a | a | a | a |
| | 460-60 | 83.5 | 740 | 48.2 | 350 | 100.0 | 780 |
| | 575-60 | 66.7 | 565 | 38.6 | 280 | 79.9 | 620 |
| 206-WD | 208/230-60 | 186.8 | 428 | 106.8 | 233 | 223.7 | 532 |
| | 460-60 | 83.5 | 247 | 48.2 | 227 | 100.0 | 260 |
| | 575-60 | 66.7 | 188 | 38.6 | 93 | 79.9 | 207 |
| 246-XL | 208/230-60 | a | a | a | a | a | a |
| | 460-60 | 100.0 | 780 | 69.1 | 600 | 100.0 | 780 |
| | 575-60 | 79.9 | 620 | 55.2 | 485 | 79.9 | 620 |
| 246-WD | 208/230-60 | 223.7 | 532 | 154.4 | 380 | 223.7 | 532 |
| | 460-60 | 100.0 | 260 | 69.1 | 200 | 100.0 | 260 |
| | 575-60 | 79.9 | 207 | 55.2 | 162 | 79.9 | 207 |
| 261-XL | 208/230-60 | a | a | a | a | a | a |
| | 460-60 | 100.0 | 780 | 83.5 | 740 | 100.0 | 780 |
| | 575-60 | 79.9 | 620 | 66.7 | 565 | 79.9 | 620 |
| 261-WD | 208/230-60 | 223.7 | 532 | 186.8 | 428 | 223.7 | 532 |
| | 460-60 | 100.0 | 260 | 83.5 | 247 | 100.0 | 260 |
| | 575-60 | 79.9 | 207 | 66.7 | 188 | 79.9 | 207 |
| 271-XL | 208/230-60 | a | a | a | a | a | a |
| | 460-60 | 100.0 | 780 | 100.0 | 780 | 100.0 | 780 |
| | 575-60 | 79.9 | 620 | 79.9 | 620 | 79.9 | 620 |
| 271-WD | 208/230-60 | 223.7 | 532 | 223.7 | 532 | 223.7 | 532 |
| | 460-60 | 100.0 | 260 | 100.0 | 260 | 100.0 | 260 |
| | 575-60 | 79.9 | 207 | 79.9 | 207 | 79.9 | 207 |

NOTE(S):

a. Units are shipped with Wye-Delta starts standard. Across-the-line start is not available.

LEGEND

LRA — Locked Rotor Amps
RLA — Rated Load Amps
WD — Wye-Delta Start
XL — Across-the-Line Start

Step 6 — Refrigerant Charge

IMPORTANT: For 30HXC, HXA units utilizing brine, the unit may require more refrigerant than what was supplied.

IMPORTANT: These units are designed for use only with R-513A. DO NOT USE ANY OTHER REFRIGERANT in these units without first consulting your Carrier representative.

NOTE: The liquid charging method is recommended for complete charging or when additional charge is required

⚠ CAUTION

When charging, circulate water through the condenser and cooler at all times to prevent freezing. Freezing damage is considered abuse and may void the warranty.

⚠ CAUTION

DO NOT OVERCHARGE system. Overcharging results in higher discharge pressure with higher cooling fluid consumption, possible compressor damage, and higher power consumption.

30HXC UNITS

The 30HXC units are shipped from the factory with a full charge of R-513A. Unit should not need to be charged at installation unless a leak was detected in Step 5 — Leak Test Unit section on page 30. If dehydration and recharging is necessary, use industry standard practices or refer to Standard Services Techniques Manual or the Controls, Start-Up, Operation, Service, and Troubleshooting Guide as required.

30HXA UNITS

The 30HXA units are shipped with a nitrogen holding charge. The complete charge for the 30HXA, the remote condenser(s), and interconnecting piping must be field supplied.

To charge the 30HXA systems:

1. An initial refrigerant charge must be added after evacuation to allow the unit to start. Add approximately 2 lb per nominal ton (0.26 kg per nominal kW) liquid refrigerant charge to the condenser. This amount of charge should be sufficient to allow the unit to start. The cooler refrigerant capacity is shown in Tables 12 and 13, approximate system charge is shown in Table 14.
2. Raise the compressor discharge pressure to approximately 185 psig (1276 kPa) (125°F [51.7°C] saturated condensing temperature) by throttling the condenser air (or water) intake.
3. Add liquid charge into the cooler until there is approximately 18 to 20°F (10.0 to 11.1°C) of system subcooling (saturated condensing temperature minus actual liquid line temperature entering the electronic expansion valve [EXV]). When adding charge, use the 1/4-in. Schrader-type fitting located on the tube going into the bottom of the cooler. This fitting is located between the EXV and the cooler.
4. Check for a clear sight glass. If the unit is not fully loaded, the sight glass may be flashing. This condition is normal for a partially loaded unit. If the unit is fully loaded and the sight glass is flashing, check EXV position. If it is greater than 60% add additional charge.

Table 12 — Cooler Refrigerant Storage Capacity

| UNIT SIZE 30HXA | CKT | TOTAL VOLUME | | REFRIGERANT STORAGE CAPACITY (R-134a) | | REFRIGERANT STORAGE CAPACITY (R-513A) | |
|--------------------|-----|-----------------|----------------|--|-------|--|-------|
| | | Ft ³ | m ³ | lb | kg | lb | kg |
| 076,086 | A | 2.538 | 0.072 | 161 | 73.0 | 165.5 | 75.1 |
| | B | 2.538 | 0.072 | 161 | 73.0 | 165.5 | 75.1 |
| 096 | A | 2.813 | 0.080 | 178 | 80.7 | 183.0 | 83.0 |
| | B | 1.929 | 0.055 | 122 | 55.3 | 125.4 | 56.9 |
| 106 | A | 3.945 | 0.112 | 250 | 113.4 | 257.0 | 116.6 |
| | B | 2.705 | 0.077 | 172 | 78.0 | 176.8 | 80.2 |
| 116,126 | A | 4.044 | 0.115 | 256 | 116.1 | 263.2 | 119.4 |
| | B | 2.810 | 0.080 | 178 | 80.7 | 183.0 | 83.0 |
| 136,146 | A | 3.777 | 0.107 | 240 | 108.9 | 246.7 | 112.0 |
| | B | 2.625 | 0.074 | 167 | 75.8 | 171.7 | 77.9 |
| 161 | A | 5.297 | 0.150 | 336 | 152.4 | 345.4 | 156.7 |
| | B | 3.682 | 0.104 | 234 | 106.1 | 240.6 | 109.1 |
| 171 | A | 4.490 | 0.127 | 285 | 129.3 | 293.0 | 132.9 |
| | B | 4.490 | 0.127 | 285 | 129.3 | 293.0 | 132.9 |
| 186 | A | 4.068 | 0.115 | 258 | 117.0 | 265.2 | 120.3 |
| | B | 4.068 | 0.115 | 258 | 117.3 | 265.2 | 120.6 |
| 206 | A | 7.523 | 0.213 | 477 | 216.4 | 490.4 | 222.5 |
| | B | 4.946 | 0.140 | 314 | 142.4 | 322.8 | 146.4 |
| 246-271 | A | 7.090 | 0.201 | 450 | 204.1 | 462.6 | 209.8 |
| | B | 4.661 | 0.132 | 296 | 134.3 | 304.3 | 138.1 |

Table 13 — Fluid Weight of Refrigerant in Liquid Line^a

| PIPING SIZE (in.) | REFRIGERANT (lb) PER FT OF TUBING LENGTH | REFRIGERANT (kg) PER M OF TUBING LENGTH |
|----------------------|--|---|
| 1-1/8 | 0.41 | 0.61 |
| 1-3/8 | 0.63 | 0.94 |
| 1-5/8 | 0.89 | 1.33 |
| 2-1/8 | 1.52 | 2.26 |
| 2-5/8 | 2.32 | 3.45 |

NOTE(S):

- a. Refer to Table 3 for liquid line pipe size. To calculate the total refrigerant charge, multiply the liquid line length (in feet) by the factor shown in this table and add it to the cooler and condenser charge listed in Table 14. Additional charge may be required for the liquid line filter drier. Consult the manufacturer for refrigerant charge information.

Table 14 — 30HXA Estimated System Refrigerant Charge^a

| 30HXA | AIR-COOLED CONDENSER TYPE, SIZE (Qty) | REFRIGERANT CIRCUIT | EVAPORATOR CHARGE | | CONDENSER CHARGE | |
|-------|--|---------------------|----------------------|----|---------------------|-----|
| | | | lb | kg | lb | kg |
| 076 | 09DP 095 (1) | A | 48 | 22 | 62 | 28 |
| | | B | 48 | 22 | 62 | 28 |
| 086 | 09DP 095 (1) | A | 61 | 28 | 62 | 28 |
| | | B | 52 | 24 | 62 | 28 |
| 096 | 09DP 115 (1) | A | 75 | 34 | 68 | 31 |
| | | B | 56 | 25 | 68 | 31 |
| 106 | 09DP 085 (1) and 09DP 060 (1) | A | 88 | 40 | 82 | 37 |
| | | B | 56 | 25 | 62 | 28 |
| 116 | 09DP 085 (1) and 09DP 065 (1) | A | 84 | 38 | 82 | 37 |
| | | B | 61 | 28 | 56 | 25 |
| 126 | 09DP 085 (2) | A | 90 | 41 | 82 | 37 |
| | | B | 71 | 32 | 82 | 37 |
| 136 | 09DP 085 (2) | A | 99 | 45 | 82 | 37 |
| | | B | 71 | 32 | 82 | 37 |
| 146 | 09DP 095 (2) | A | 95 | 43 | 124 | 56 |
| | | B | 80 | 36 | 124 | 56 |
| 161 | 09DP 095 (2) | A | 120 | 54 | 124 | 56 |
| | | B | 88 | 40 | 124 | 56 |
| 171 | 09DP 095 (2) | A | 95 | 43 | 124 | 56 |
| | | B | 112 | 51 | 124 | 56 |
| 186 | 09DP 095 (2) | A | 108 | 49 | 124 | 56 |
| | | B | 108 | 49 | 124 | 56 |
| 206 | 09DP 095 (2) and 09DP 115 (1) | A | 160 | 73 | 272 | 123 |
| | | B | 108 | 49 | 124 | 56 |
| 246 | 09DP 115 (3) | A | 176 | 80 | 272 | 123 |
| | | B | 108 | 49 | 136 | 62 |
| 261 | 09DP 115 (3) | A | 176 | 80 | 272 | 123 |
| | | B | 108 | 49 | 136 | 62 |
| 271 | 09DP 115 (3) | A | 176 | 80 | 272 | 123 |
| | | B | 108 | 49 | 136 | 62 |

NOTE(S):

- a. To calculate total system refrigerant charge, multiply the liquid line length (in feet) by the factor shown in Table 13 and add it to the cooler and condenser charge listed in this table. Additional charge may be required for the liquid line filter drier. Consult the manufacturer for refrigerant charge information.

Step 7 — BACnet®¹ Communication Option Wiring

The BACnet communication option uses the UPC Open controller. The controller communicates using BACnet on an MS/TP network segment communications at 9600 bps, 19.2 kbps, 38.4 kbps, or 76.8 kbps.

Wire the controllers on an MS/TP network segment in a daisy-chain configuration. Wire specifications for the cable are 22 AWG (American Wire Gauge) or 24 AWG, low-capacitance, twisted, stranded, shielded copper wire. The maximum length is 2000 ft.

Install a BT485 terminator on the first and last controller on a network segment to add bias and prevent signal distortions due to echoing. See Fig. 21-23.

To wire the UPC Open controller to the BAS network:

1. Pull the screw terminal connector from the controller's BAS Port.
2. Check the communications wiring for shorts and grounds.
3. Connect the communications wiring to the BAS port's screw terminals labeled Net +, Net -, and Shield.

NOTE: Use the same polarity throughout the network segment.

1. Third-party trademarks and logos are the property of their respective owners.

4. Insert the power screw terminal connector into the UPC Open controller's power terminals if they are not currently connected.
5. Verify communication with the network by viewing a module status report. To perform a module status report using the BACview keypad/display unit, press and hold the "FN" key then press the "." Key.

To install a BT485 terminator, push the BT485, on to the BT485 connector located near the BACnet connector.

NOTE: The BT485 terminator has no polarity associated with it. To order a BT485 terminator, consult Commercial Products i-Vu® Open Control System Master Prices.

MS/TP WIRING RECOMMENDATIONS

Recommendations are shown in Tables 15 and 16. The wire jacket and UL temperature rating specifications list two acceptable alternatives. The Halar®¹ specification has a higher temperature rating and a tougher outer jacket than the SmokeGard™¹ specification, and it is appropriate for use in applications where the user is concerned about abrasion. The Halar jacket is also less likely to crack in extremely low temperatures.

NOTE: Use the specified type of wire and cable for maximum signal integrity.

Table 15 — MS/TP Wiring Recommendations

| SPECIFICATION | RECOMMENDATION |
|---------------------------------|---|
| Cable | Single twisted pair, low capacitance, CL2P, 22 AWG (7x30), TC foam FEP, plenum rated cable |
| Conductor | 22 or 24 AWG stranded copper (tin plated) |
| Insulation | Foamed FEP 0.015 in. (0.381 mm) wall 0.060 in. (1.524 mm) O.D. |
| Color Code | Black/White |
| Twist Lay | 2 in. (50.8 mm) lay on pair 6 twists/foot (20 twists/meter) nominal |
| Shielding | Aluminum/Mylar shield with 24 AWG TC drain wire |
| Jacket | SmokeGard Jacket (SmokeGard PVC) 0.021 in. (0.5334 mm) wall 0.175 in. (4.445 mm) O.D. Halar Jacket (E-CTFE) 0.010 in. (0.254 mm) wall 0.144 in. (3.6576 mm) O.D. |
| DC Resistance | 15.2 Ohms/1000 feet (50 Ohms/km) nominal |
| Capacitance | 12.5 pF/ft (41 pF/meter) nominal conductor to conductor |
| Characteristic Impedance | 100 Ohms nominal |
| Weight | 12 lb/1000 feet (17.9 kg/km) |
| UL Temperature Rating | SmokeGard 167°F (75°C), Halar -40 to 302°F (-40 to 150°C) |
| Voltage | 300 Vac, power limited |
| Listing | UL: NEC CL2P, or better |

LEGEND

| | |
|-------------|--------------------------------|
| AWG | — American Wire Gauge |
| CL2P | — Class 2 Plenum Cable |
| DC | — Direct Current |
| FEP | — Fluorinated Ethylene Polymer |
| NEC | — National Electrical Code |
| O.D. | — Outside Diameter |
| TC | — Tinned Copper |
| UL | — Underwriters Laboratories |

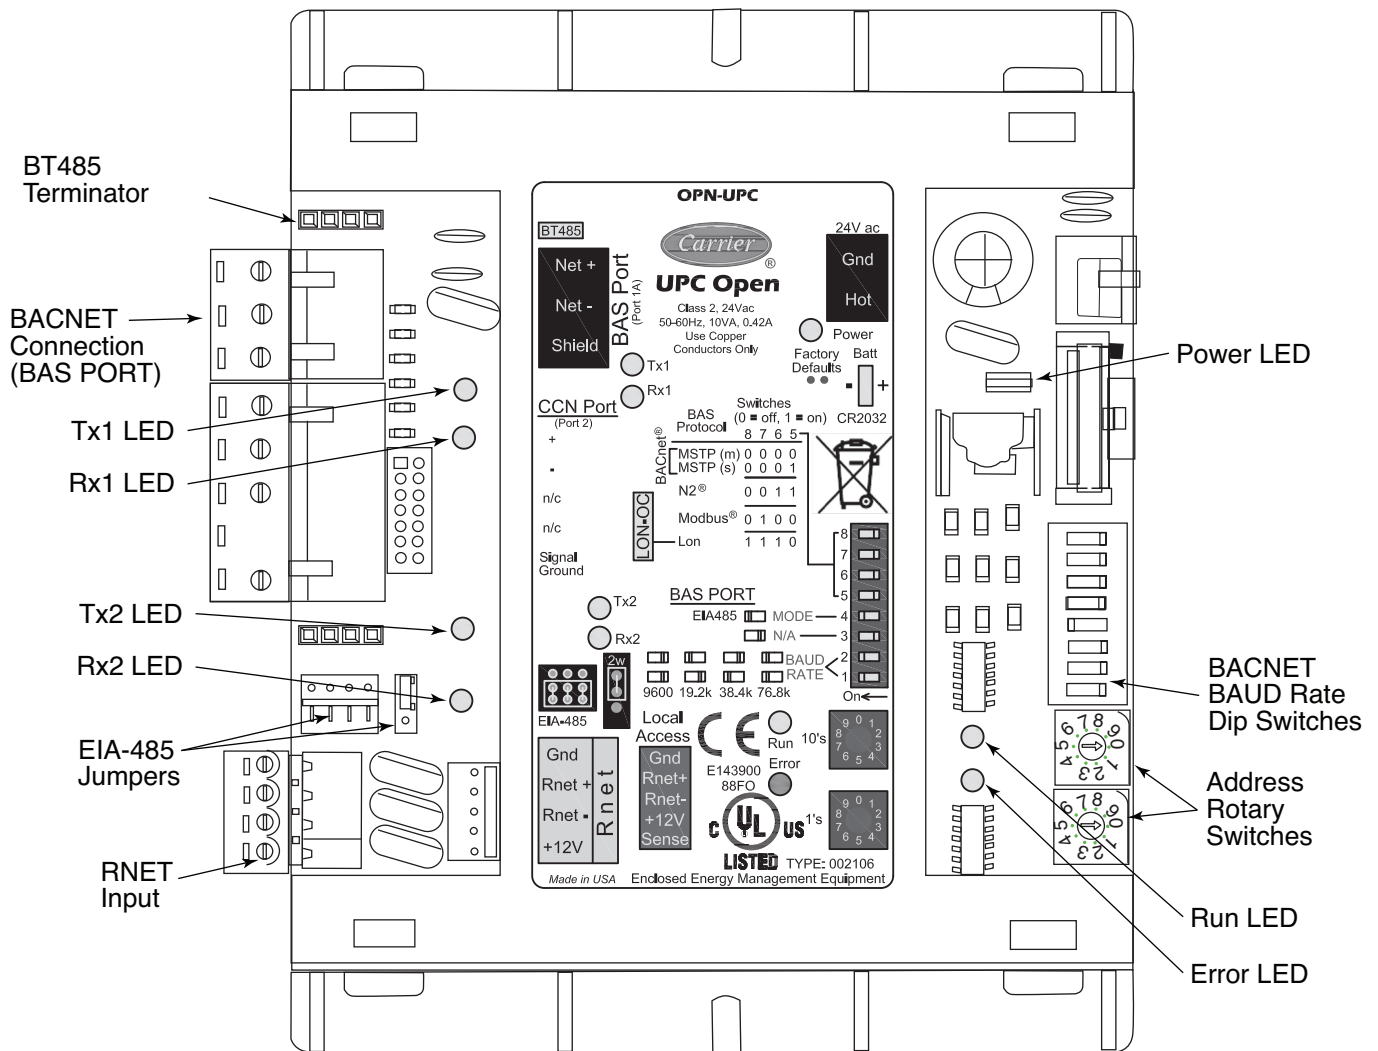
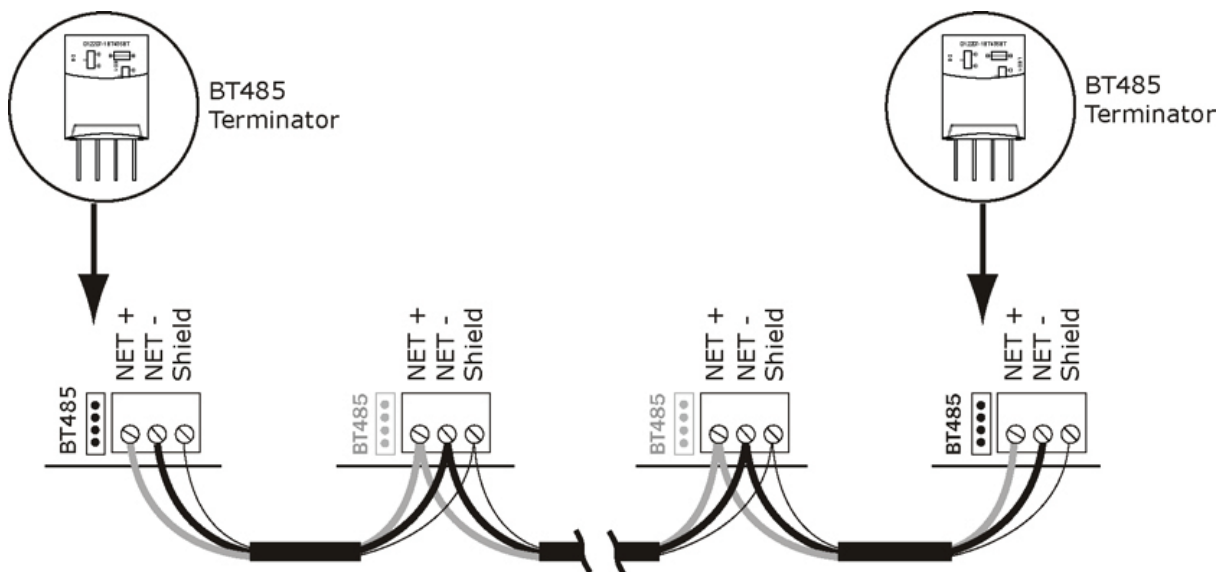


Fig. 21 — UPC Open Controller



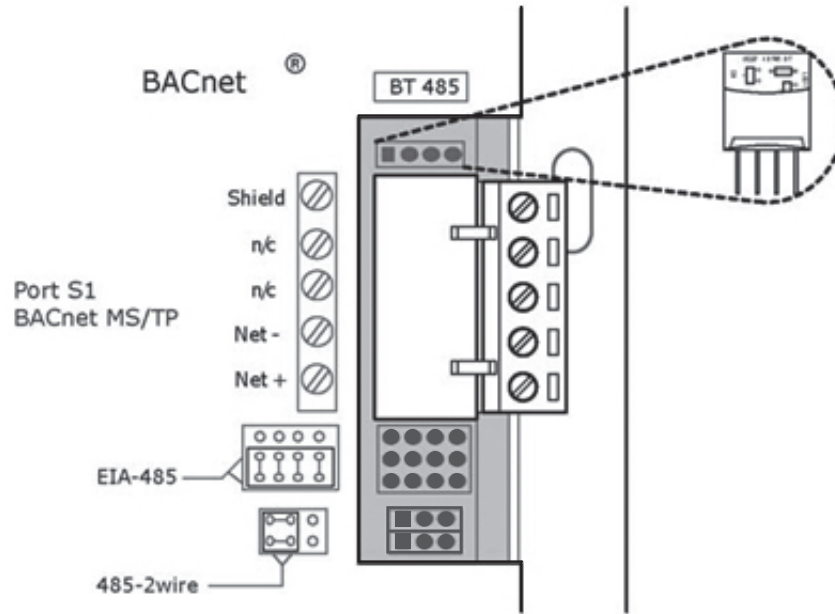


Fig. 23 — BT485 Terminator Installation

Table 16 — Open System Wiring Specifications and Recommended Vendors

| WIRING SPECIFICATIONS | | RECOMMENDED VENDORS AND PART NUMBERS | | | |
|-------------------------------|--|--------------------------------------|--------|----------|----------------------------|
| Wire Type | Description | Connect Air International | Belden | RMCORP | Contractors Wire and Cable |
| MS/TP Network (RS-485) | 22 AWG, single twisted shielded pair, low capacitance, CL2P, TC foam FEP, plenum rated. See MS/TP Installation Guide for specifications. | W221P-22227 | — | 25160PV | CLP0520LC |
| | 24 AWG, single twisted shielded pair, low capacitance, CL2P, TC foam FEP, plenum rated. See MS/TP Installation Guide for specifications. | W241P-2000F | 82841 | 25120-OR | — |
| Rnet | 4 conductor, unshielded, CMP, 18 AWG, plenum rated. | W184C-2099BLB | 6302UE | 21450 | CLP0442 |

LEGEND

| | |
|-------------|--------------------------------|
| AWG | — American Wire Gauge |
| CL2P | — Class 2 Plenum Cable |
| CMP | — Communications Plenum Rated |
| FEP | — Fluorinated Ethylene Polymer |
| TC | — Tinned Copper |

