



# Installation, Start-up and Service Instructions

## CONTENTS

|                                                                 | Page |
|-----------------------------------------------------------------|------|
| <b>SAFETY CONSIDERATIONS</b> .....                              | 2    |
| <b>PRE-INSTALLATION</b> .....                                   | 3    |
| Moving and Storage .....                                        | 3    |
| Rigging .....                                                   | 3    |
| <b>INSTALLATION</b> .....                                       | 3    |
| General .....                                                   | 3    |
| Uncrating .....                                                 | 3    |
| Accessories .....                                               | 3    |
| Unit Positioning .....                                          | 14   |
| Unit Isolation .....                                            | 16   |
| Refrigerant and Chilled Water Piping Access .....               | 16   |
| Refrigerant Piping .....                                        | 16   |
| Chilled Water Piping .....                                      | 20   |
| Condensate Drain .....                                          | 21   |
| Fan Motors and Drives .....                                     | 21   |
| Power Supply and Wiring .....                                   | 21   |
| • THREE STAGE OPERATION                                         |      |
| • FREEZE PROTECTION                                             |      |
| Variable Frequency Drive .....                                  | 26   |
| Connecting Ductwork .....                                       | 29   |
| • DISCHARGE CONNECTIONS                                         |      |
| • RETURN CONNECTIONS                                            |      |
| • OUTDOOR-AIR INLET CONNECTIONS                                 |      |
| Return-Air Filters .....                                        | 29   |
| <b>START-UP</b> .....                                           | 31   |
| 40RUA and 40RUQ ONLY .....                                      | 31   |
| Adjusting TXV for Superheat<br>(40RUA and 40RUQ only) .....     | 31   |
| Compressor Rotation .....                                       | 31   |
| Indoor Fan Motor .....                                          | 31   |
| Cooling with Staged Air Volume™ (SAV) .....                     | 31   |
| • FIRST STAGE (Y1)                                              |      |
| • SECOND STAGE (Y2)                                             |      |
| • THIRD STAGE (Y3) — 3-STAGE SYSTEMS ONLY                       |      |
| Operating Fan for Test and Balance .....                        | 32   |
| Fan Speed Set-Up .....                                          | 32   |
| • UNITS WITH ELECTRO-MECHANICAL CONTROLS                        |      |
| <b>MAINTENANCE</b> .....                                        | 33   |
| Quarterly Inspection<br>(and 30 days after initial start) ..... | 33   |
| • INDOOR SECTION                                                |      |
| Seasonal Maintenance .....                                      | 33   |
| • AIR-CONDITIONING                                              |      |
| <b>SERVICE</b> .....                                            | 34   |
| Panels .....                                                    | 34   |
| Fan Motor Lubrication .....                                     | 34   |
| Fan Shaft Bearings .....                                        | 34   |
| Centering Fan Wheel .....                                       | 34   |
| Fan Shaft Position Adjustment .....                             | 34   |
| Individual Fan Wheel Adjustment .....                           | 34   |
| Fan Belts .....                                                 | 34   |
| Fan Rotation .....                                              | 35   |
| Fan Pulley Alignment .....                                      | 35   |
| Pulley and Drive Adjustment .....                               | 36   |
| Variable Frequency Drive .....                                  | 44   |
| • INDOOR FAN MOTOR                                              |      |
| • VFD FUSES                                                     |      |
| • FAN FAULT DETECTION:                                          |      |
| • VFD ALARMS AND FAULTS TROUBLESHOOTING                         |      |
| • ALARMS                                                        |      |
| • CLEAR THE ALARM LED                                           |      |
| • FAULTS                                                        |      |
| VFD REMOTE KEYPAD .....                                         | 49   |
| ACS320 Operation with Remote Keypad .....                       | 49   |
| ACS320 VFD Modes .....                                          | 50   |
| • STANDARD DISPLAY MODE                                         |      |
| • PARAMETERS MODE                                               |      |
| • CHANGED PARAMETERS MODE                                       |      |
| • DRIVE PARAMETER BACKUP MODE                                   |      |
| • CLOCK SET MODE                                                |      |
| • I/O SETTINGS MODE                                             |      |
| ACS320 VFD Diagnostics .....                                    | 51   |
| • FAULTS (RED LED LIT)                                          |      |
| • ALARMS (GREEN LED FLASHING)                                   |      |
| Correcting Faults .....                                         | 52   |
| • HISTORY                                                       |      |
| Correcting Alarms .....                                         | 52   |
| Reset After Using Start-Up Assistant .....                      | 55   |
| ACH580 Operation with Remote Keypad .....                       | 55   |
| • FIRST START ASSISTANT                                         |      |
| ACH580 VFD Modes .....                                          | 56   |
| • ACH580 STANDARD DISPLAY MODE                                  |      |
| • PARAMETERS MODE                                               |      |
| • CHANGED PARAMETERS MODE                                       |      |
| • DRIVE PARAMETER BACKUP MODE                                   |      |
| • CLOCK SET MODE                                                |      |
| • I/O SETTINGS MODE                                             |      |
| ACH580 VFD Diagnostics .....                                    | 58   |
| • FAULTS (RED LED LIT)                                          |      |
| • ALARMS (GREEN LED FLASHING)                                   |      |
| • CORRECTING FAULTS                                             |      |
| • CORRECTING ALARMS                                             |      |
| • ACH180 VFD STANDARD KEYPAD DETAIL                             |      |
| Faults .....                                                    | 62   |
| ACH180 VFD Diagnostics .....                                    | 62   |

- FAULTS (RED LED LIT)
- ALARMS (GREEN LED FLASHING)

|                                             |             |
|---------------------------------------------|-------------|
| <b>RECOMMENDED MAINTENANCE (ACH180)</b>     | <b>64</b>   |
| <b>Control Panel Cleaning</b>               | <b>64</b>   |
| <b>VFD MAINTENANCE</b>                      | <b>66</b>   |
| <b>Heat Sink Cleaning</b>                   | <b>66</b>   |
| <b>Fan Replacement</b>                      | <b>66</b>   |
| • ACH580 MAIN FAN REPLACEMENT               |             |
| • ACH580 AUXILIARY COOLING FAN REPLACEMENT  |             |
| • ACS320 FAN REPLACEMENT                    |             |
| <b>Bypass the VFD</b>                       | <b>69</b>   |
| <b>Condensate Drains</b>                    | <b>69</b>   |
| <b>Return-Air Filters</b>                   | <b>69</b>   |
| <b>Chilled Water Coil Freeze Protection</b> | <b>69</b>   |
| <b>Coil Removal</b>                         | <b>69</b>   |
| <b>Cleaning Cooling Coil</b>                | <b>69</b>   |
| <b>Cleaning Insulation</b>                  | <b>69</b>   |
| <b>Replacing Filters</b>                    | <b>70</b>   |
| <b>APPENDIX A — VFD PARAMETERS</b>          | <b>71</b>   |
| <b>START-UP CHECKLIST</b>                   | <b>CL-1</b> |

### SAFETY CONSIDERATIONS

#### WARNING

##### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could cause in personal injury or death.

Before performing service or maintenance operations on unit, always turn off main power switch to unit and install lockout tag. Unit may have more than one power switch.

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.

Untrained personnel can perform basic maintenance functions of cleaning coils and filters and replacing filters. All other operations should be performed by trained service personnel. When working on air-conditioning equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that may apply.

Follow all local building codes and appropriate national electrical codes (in USA, ANSI/NFPA 70, National Electrical Code (NEC); in Canada, CSA C22.1) for special requirements. Wear safety glasses and work gloves. Use quenching cloth for unbrazing operations. Have fire extinguisher available for all brazing operations.

It is important to recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and

in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, CAUTION, and NOTE. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies hazards which **could** result in personal injury or death. CAUTION is used to identify unsafe practices, which **may** result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

#### WARNING

##### UNIT OPERATION AND SAFETY HAZARD

Failure to follow this warning could cause personal injury, death and/or equipment damage.

R-410A refrigerant systems operate at higher pressures than standard R-22 systems. Do not use R-22 service equipment or components on R-410A refrigerant equipment.

#### WARNING

##### PERSONAL INJURY AND ENVIRONMENTAL HAZARD

Failure to follow this warning could cause personal injury or death.

Relieve pressure and recover all refrigerant before system repair or final unit disposal.

Wear safety glasses and gloves when handling refrigerants. Keep torches and other ignition sources away from refrigerants and oils.

#### CAUTION

##### CUT HAZARD

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing 40RU units.

#### CAUTION

##### UNIT OPERATION HAZARD

Failure to follow this caution could cause equipment damage.

Ensure voltage listed on unit data plate agrees with electrical supply provided for the unit.

## PRE-INSTALLATION

1. The power supply (v, ph, and Hz) must correspond to that specified on unit rating plate.
2. The electrical supply provided by the utility must be sufficient to handle load imposed by this unit.
3. Refer to Installation, General section and Fig. 1 and 2 for locations of electrical inlets, condensate drain, duct connections, and required clearances before setting unit in place.
4. This installation must conform with local building codes and with the NEC (National Electrical Code) or ANSI (American National Standards Institute)/NFPA (National Fire Protection Association) latest revision. Refer to provincial and local plumbing or wastewater codes and other applicable local codes.

### Moving and Storage

To transfer unit from truck to storage site, use a fork truck. Do not stack units more than 2 high during storage. If unit is to be stored for more than 2 weeks before installation, choose a level, dry storage site free from vibration. Do not remove plastic wrap or skid from unit until final installation.

### Rigging

All 40RU Series units can be rigged by using the shipping skid. Units are shipped fully assembled. Do not remove shipping skids or protective covering until unit is ready for final placement; damage to bottom panels can result. Use slings and spreader bars as applicable to lift unit.

## INSTALLATION

### General

Allow the following clearances for service access and airflow:

- Rear: 2-1/2 ft (762 mm) [2-1/2 ft (762 mm) with electric heat accessory]
- Front: 2-1/2 ft (762 mm)
- Right Side: 3-1/2 ft (1067 mm)
- Left Side: 2-1/2 ft (762 mm)

For units equipped with an economizer, refer to the accessory installation instructions for additional clearance requirements. Be sure floor, wall, or ceiling can support unit weight (Tables 1-6). See Fig. 1 and 2 for dimensions.

### Uncrating

Move unit as near as possible to final location before removing shipping skid.

Remove metal banding, top skid, and plastic wrap. Examine unit for shipping damage. If shipping damage is evident, file claim with transportation agency. Remove base skid just prior to actual installation.

Check nameplate information against available power supply and model number description in Fig. 3 and 4.

NOTE: Be sure to remove the foam shipping pad from the thermostatic expansion valve (TXV). Verify that it has been removed. See Fig. 5.

### Accessories

Refer to instructions shipped with each accessory for specific information.

| UNIT     | UNIT WEIGHT (W/TXV) |
|----------|---------------------|
| 40RUA-14 | 695 lbs [315 kg]    |
| 40RUA-16 | 713 lbs [323 kg]    |
| 40RUA-25 | 730 lbs [331 kg]    |
| 40RUO-16 | 713 lbs [323 kg]    |
| 40RUO-25 | 720 lbs [327 kg]    |
| 40RUS-14 | 661 lbs [300 kg]    |
| 40RUS-16 | 677 lbs [307 kg]    |
| 40RUS-25 | 683 lbs [310 kg]    |




THIS DOCUMENT IS THE PROPERTY OF CARRIER CORPORATION AND IS DELIVERED UPON THE EXPRESS CONDITION THAT THE CONTENTS WILL NOT BE DISCLOSED OR USED WITHOUT CARRIER CORPORATION'S WRITTEN CONSENT.

SUBMISSION OF THESE DRAWINGS OR DOCUMENTS DOES NOT CONSTITUTE PART PERFORMANCE OR ACCEPTANCE OF CONTRACT.

- NOTES:
1. DIMENSIONS IN ( ) ARE IN MILLIMETERS.
  2. DIRECTIONS OF AIRFLOW.
  3. RECOMMENDED CLEARANCE:  
 REAR: 2 ft 6 in. [762 mm]  
 FRONT: 2 ft 6 in. [762 mm]  
 RIGHT SIDE: 2 ft 6 in. [762 mm]  
 LEFT SIDE: 2 ft 6 in. [762 mm]  
 LOCAL CODES OR JURISDICTION MAY PREVAIL.
  4. LIQUID PIPING NOT SUPPLIED BY CARRIER.
  5. DUCT FLANGE IS FACTORY SUPPLIED AND FIELD INSTALLED.


| ACCESSORY           | SEE DRAWING |
|---------------------|-------------|
| DISCHARGE PLENUM    | 40RMS00997  |
| ECONOMIZER          | 40RMS01000  |
| STEAM COIL          | 40RMS01000  |
| HOT WATER COIL      | 40RMS01000  |
| RETURN AIR GRILLE   | 40RMS00997  |
| OVERHEAD SUSPENSION | 40RMS00997  |
| SUBBASE             | 40RMS00997  |
| ELECTRIC HEAT       | 40RMS01002  |

UNRELEASED DATA

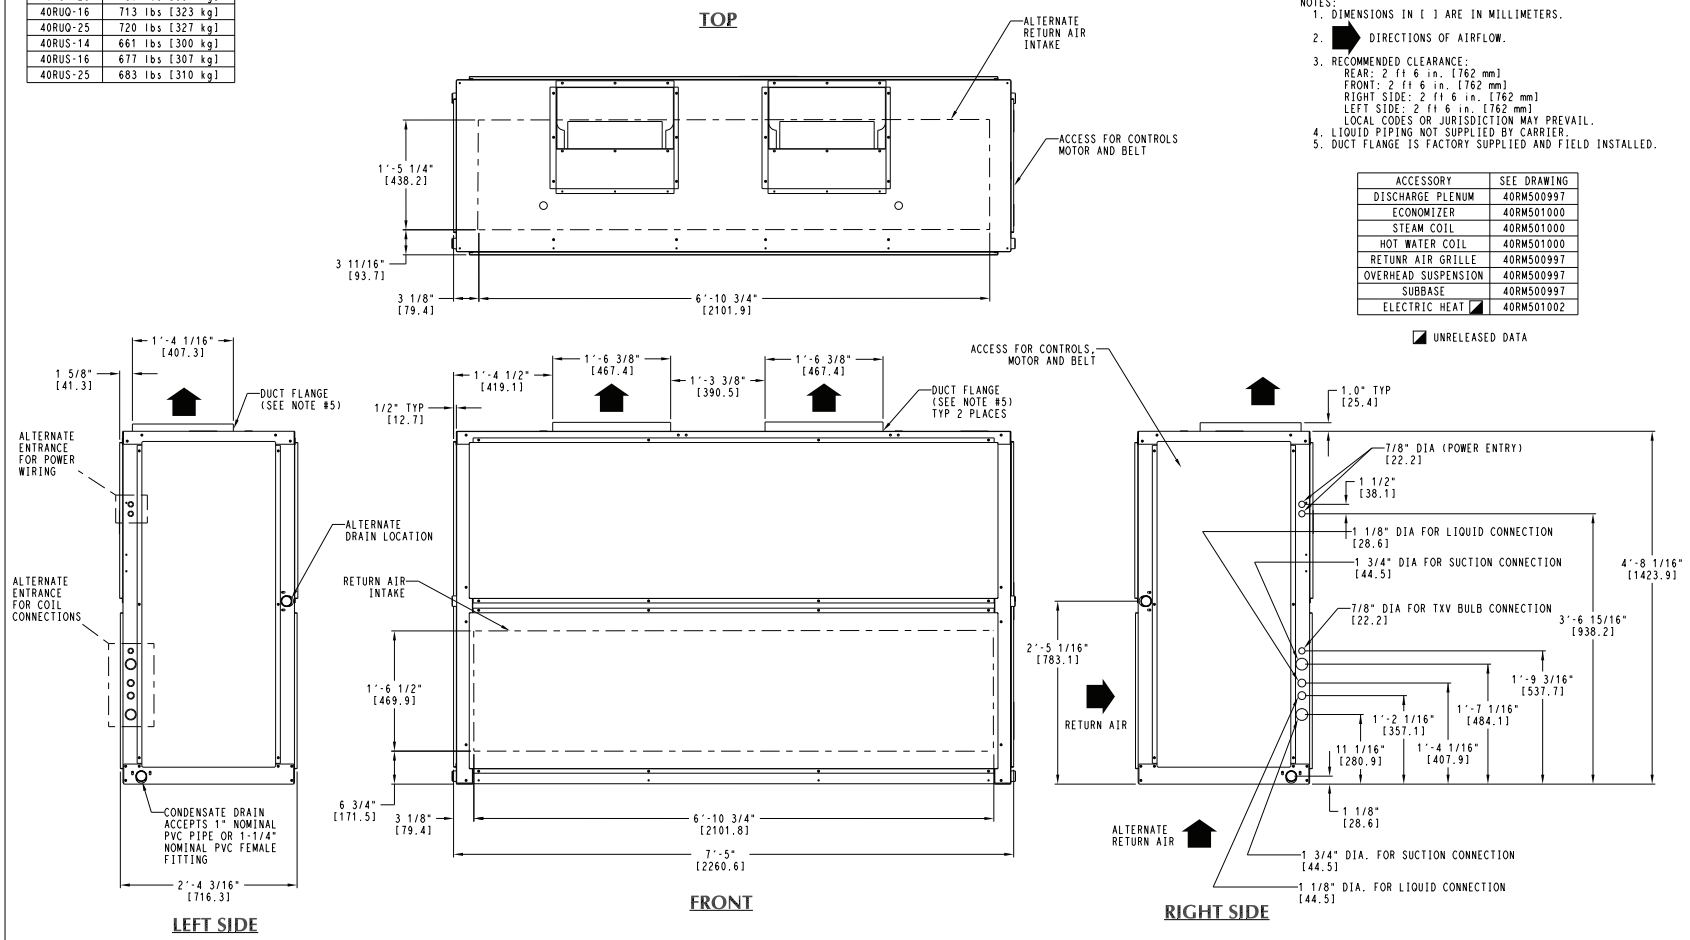

|                                      |                 |                  |                        |                                                 |            |          |
|--------------------------------------|-----------------|------------------|------------------------|-------------------------------------------------|------------|----------|
| ITC CLASSIFICATION<br>U.S. ECCN: NSR | SHEET<br>1 OF 2 | DATE<br>05/27/21 | SUPERCEDES<br>01/23/12 | FAN COIL UNITS<br>40RU A / Q / S - 14 / 16 / 25 | 40RU500028 | REV<br>G |
|--------------------------------------|-----------------|------------------|------------------------|-------------------------------------------------|------------|----------|

Fig. 1 — Dimensions — Size 25

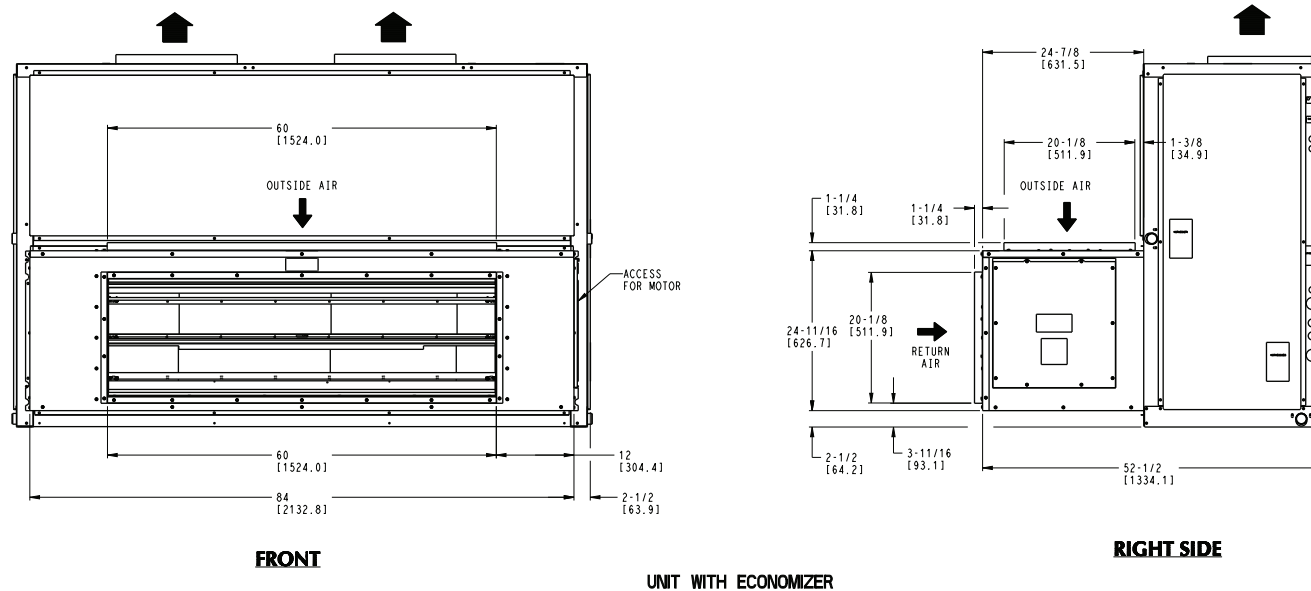

|                    |        |          |            |                               |            |     |
|--------------------|--------|----------|------------|-------------------------------|------------|-----|
| ITC CLASSIFICATION | SHEET  | DATE     | SUPERCEDES | FAN COIL UNITS                | 40RU500028 | REV |
| U.S. ECCN: NSR     | 2 OF 2 | 05/27/21 | 01/23/12   | 40RU A / Q / S - 14 / 16 / 25 |            | G   |


Fig. 1 — Dimensions — Size 25 (cont)

| UNIT     | UNIT WEIGHT (W/TXV) |
|----------|---------------------|
| 40RUA-28 | 1050 lbs [477 kg]   |
| 40RUA-30 | 1062 lbs [482 kg]   |
| 40RUS-28 | 1035 lbs [469 kg]   |
| 40RUS-30 | 1042 lbs [473 kg]   |




THIS DOCUMENT IS THE PROPERTY OF CARRIER CORPORATION AND IS DELIVERED UPON THE EXPRESS CONDITION THAT THE CONTENTS WILL NOT BE DISCLOSED OR USED WITHOUT CARRIER CORPORATION'S WRITTEN CONSENT.

SUBMISSION OF THESE DRAWINGS OR DOCUMENTS DOES NOT CONSTITUTE PART PERFORMANCE OR ACCEPTANCE OF CONTRACT.

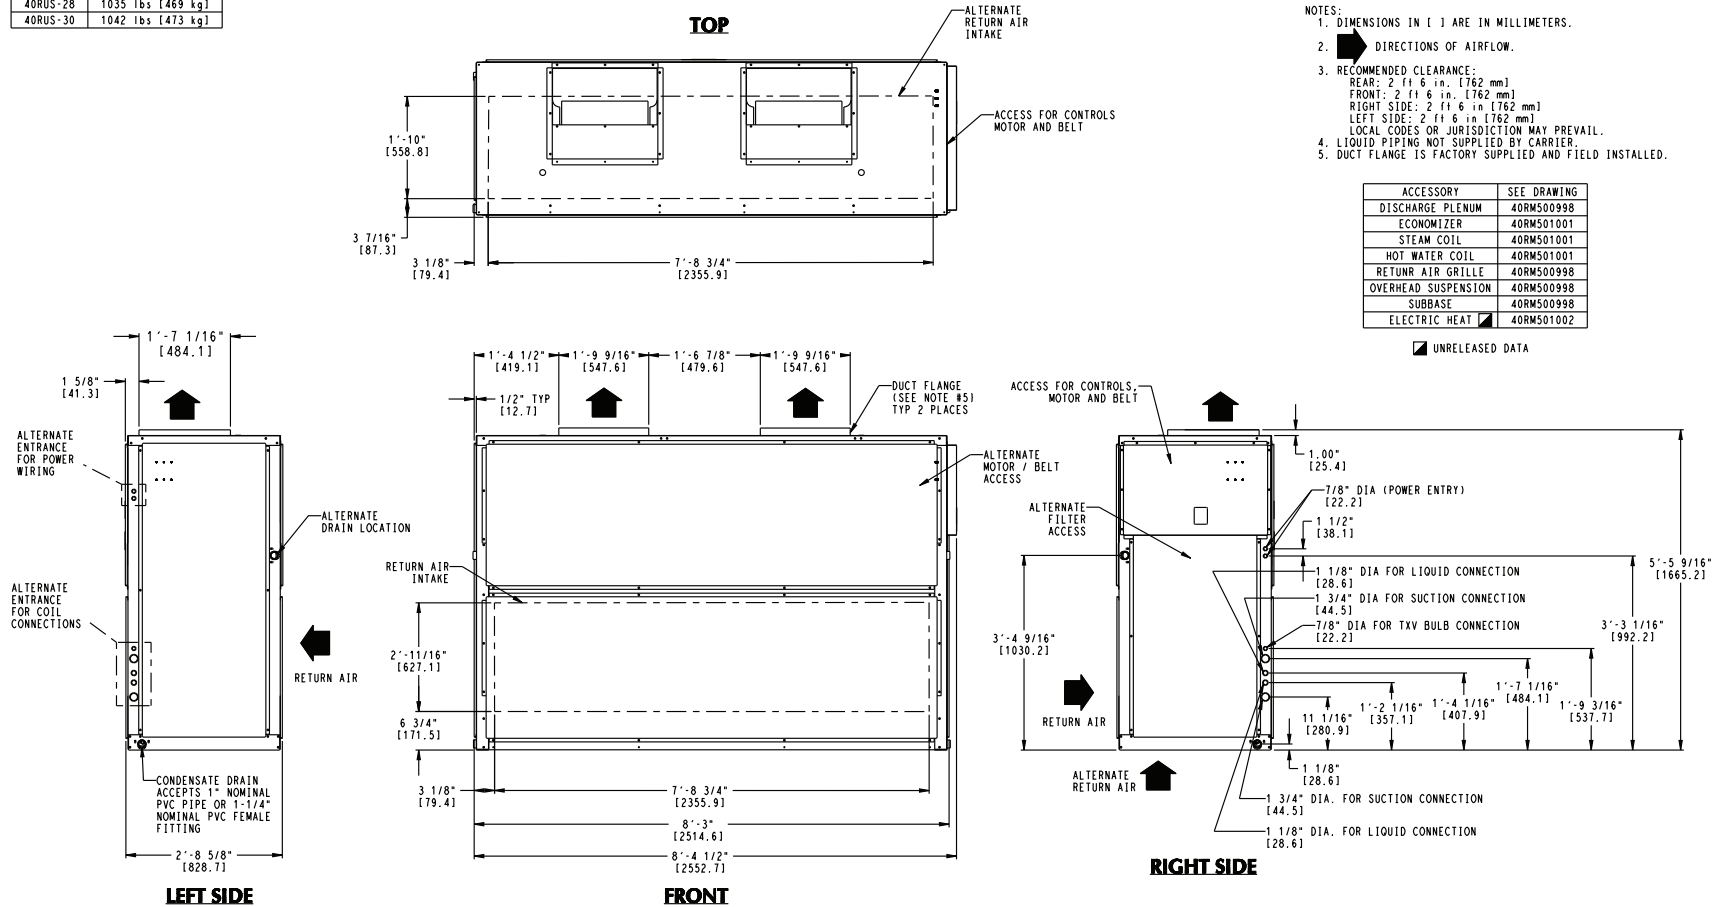

|                                      |                 |                  |                        |                                        |            |          |
|--------------------------------------|-----------------|------------------|------------------------|----------------------------------------|------------|----------|
| ITC CLASSIFICATION<br>U.S. ECCN: NSR | SHEET<br>1 OF 2 | DATE<br>05/27/21 | SUPERCEDES<br>01/23/12 | FAN COIL UNITS<br>40RU A / S - 28 / 30 | 40RU500068 | REV<br>F |
|--------------------------------------|-----------------|------------------|------------------------|----------------------------------------|------------|----------|

**Fig. 2 — Dimensions — Sizes 28 and 30**

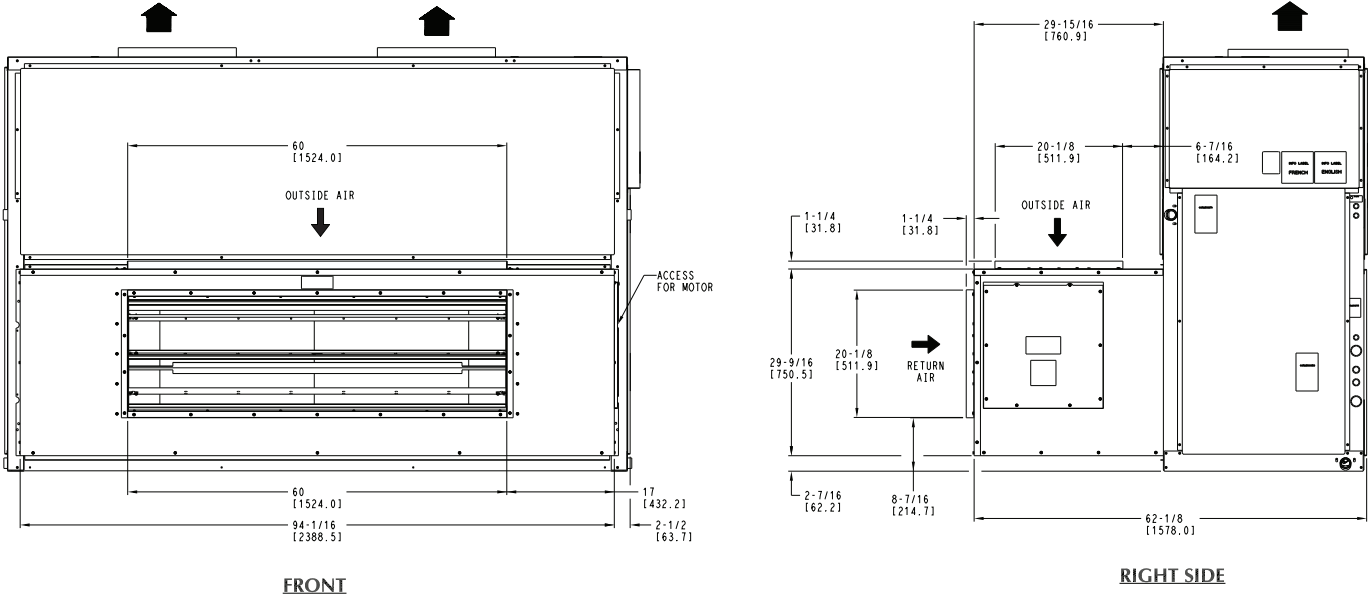

UNIT WITH ECONOMIZER

|                    |        |          |            |                      |            |     |
|--------------------|--------|----------|------------|----------------------|------------|-----|
| I/C CLASSIFICATION | SHEET  | DATE     | SUPERCEDES | FAN COIL UNITS       | 40RU500068 | REV |
| U.S. ECCN:NSR      | 2 OF 2 | 05/27/21 | 01/23/12   | 40RU A / S - 28 / 30 |            | F   |

Fig. 2 — Dimensions — Sizes 28 and 30 (cont)

**Table 1 — 40 RUA Physical Data, English — Cooling Units**

| <b>UNIT 40RUA*</b>                                      | <b>25</b>                                        | <b>28</b>                          | <b>30</b>                          |
|---------------------------------------------------------|--------------------------------------------------|------------------------------------|------------------------------------|
| <b>NOMINAL CAPACITY (tons)</b>                          | 20                                               | 25                                 | 30                                 |
| <b>OPERATING WEIGHT (lb)</b>                            |                                                  |                                    |                                    |
| Base Unit with TXV                                      | 730                                              | 1050                               | 1062                               |
| Plenum                                                  | 225                                              | 325                                | 325                                |
| <b>FANS</b>                                             |                                                  |                                    |                                    |
| Qty...Diam. (in.)                                       | 2...15                                           | 2...18                             | 2...18                             |
| Nominal Airflow (cfm)                                   | 8,000                                            | 10,000                             | 12,000                             |
| Airflow Range (cfm)                                     | 6,000-10,000                                     | 7,500-12,500                       | 9,000-15,000                       |
| Nominal Motor Hp (Standard Motor)                       |                                                  |                                    |                                    |
| 208/230-60 and 460-3-60                                 | 5.0                                              | 7.5                                | 10.0                               |
| 575-3-60                                                | 5.0                                              | 7.5                                | 10.0                               |
| Motor Speed (rpm)                                       |                                                  |                                    |                                    |
| 208/230-3-60 and 460-3-60                               | 1760                                             | 1760                               | 1755                               |
| 575-3-60                                                | 1745                                             | 1755                               | 1755                               |
| <b>REFRIGERANT</b>                                      | R-410A                                           | R-410A                             | R-410A                             |
| Operating Charge (lb) (approx per circuit) <sup>a</sup> | 3.5                                              | 4.5                                | 5.0                                |
| <b>DIRECT — EXPANSION COIL</b>                          | Enhanced Copper Tubes, Aluminum Sine — Wave Fins |                                    |                                    |
| Maximum Working Pressure (psig)                         | 650                                              | 650                                | 650                                |
| Face Area (sq ft)                                       | 19.88                                            | 24.86                              | 29.83                              |
| No. of Splits                                           | 2                                                | 2                                  | 2                                  |
| No. of Circuits per Split                               | 18                                               | 20                                 | 24                                 |
| Split Type...Percentage                                 | Face...50/50                                     | Face...50/50                       | Face...50/50                       |
| Rows...Fins/in.                                         | 4...15                                           | 4...15                             | 4...15                             |
| <b>PIPING CONNECTIONS</b>                               |                                                  |                                    |                                    |
| Quantity...Size (in.)                                   |                                                  |                                    |                                    |
| DX Coil — Suction (ODF)                                 | 2...1-1/8                                        | 2...1-3/8                          | 2...1-3/8                          |
| DX Coil — Liquid Refrigerant (ODF)                      | 2...5/8                                          | 2...5/8                            | 2...5/8                            |
| Steam Coil, In (MPT)                                    | 1...2-1/2                                        | 1...2-1/2                          | 1...2-1/2                          |
| Steam Coil, Out (MPT)                                   | 1...1-1/2                                        | 1...1-1/2                          | 1...1-1/2                          |
| Hot Water Coil, In (MPT)                                | 1...2                                            | 1...2                              | 1...2                              |
| Hot Water Coil, Out (MPT)                               | 1...2                                            | 1...2                              | 1...2                              |
| Condensate (PVC)                                        | 1...5/8 ODM/1-1/4 IDF                            | 1...5/8 ODM/1-1/4 IDF              | 1...5/8 ODM/1-1/4 IDF              |
| <b>FILTERS</b>                                          | Throwaway —<br>Factory Supplied                  | Throwaway —<br>Factory Supplied    | Throwaway —<br>Factory Supplied    |
| Quantity...Size (in.)                                   | 4...16 x 20 x 2<br>4...16 x 24 x 2               | 4...20 x 24 x 2<br>4...20 x 25 x 2 | 4...20 x 24 x 2<br>4...20 x 25 x 2 |
| Access Location                                         | Either Side                                      | Either Side                        | Either Side                        |
| <b>STEAM COIL<sup>b</sup></b>                           |                                                  |                                    |                                    |
| Maximum Working Pressure (psig at 260°F)                | 20                                               | 20                                 | 20                                 |
| Total Face Area (sq ft)                                 | 13.33                                            | 15.0                               | 15.0                               |
| Rows...Fins/in.                                         | 1...10                                           | 1...10                             | 1...10                             |
| <b>HOT WATER COIL<sup>b</sup></b>                       |                                                  |                                    |                                    |
| Maximum Working Pressure (psig)                         | 150                                              | 150                                | 150                                |
| Total Face Area (sq ft)                                 | 13.33                                            | 15.0                               | 15.0                               |
| Rows...Fins/in.                                         | 2...8.5                                          | 2...12.5                           | 2...12.5                           |
| Water Volume                                            |                                                  |                                    |                                    |
| (gal)                                                   | 13.90                                            | 14.30                              | 14.30                              |
| (ft³)                                                   | 1.85                                             | 1.90                               | 1.90                               |

NOTE(S):

- a. Units are shipped without refrigerant charge.  
b. Field-installed accessory only.

**LEGEND**

- DX** — Direct Expansion  
**IDF** — Inside Diameter, Female  
**ODF** — Outside Diameter, Female  
**ODM** — Outside Diameter, Male  
**TXV** — Thermostatic Expansion Valve

**Table 2 — 40 RUA Physical Data, SI — Cooling Units**

| <b>UNIT 40RUA*</b>                                      | <b>25</b>                                        | <b>28</b>                                | <b>30</b>                                |
|---------------------------------------------------------|--------------------------------------------------|------------------------------------------|------------------------------------------|
| <b>NOMINAL CAPACITY (kW)</b>                            | 70                                               | 87                                       | 105                                      |
| <b>OPERATING WEIGHT (kg)</b>                            |                                                  |                                          |                                          |
| Base Unit with TXV                                      | 331                                              | 477                                      | 482                                      |
| Plenum                                                  | 102                                              | 148                                      | 148                                      |
| <b>FANS</b>                                             |                                                  |                                          |                                          |
| Qty...Diam. (mm)                                        | 2...381                                          | 2...457                                  | 2...457                                  |
| Nominal Airflow (L/s)                                   | 3775                                             | 4119                                     | 5663                                     |
| Airflow Range (L/s)                                     | 2831-4719                                        | 3539-5899                                | 4247-7079                                |
| Nominal Motor kW (standard motor)                       |                                                  |                                          |                                          |
| 208/230-3-60 and 460-3-60                               | 3.73                                             | 5.60                                     | 7.46                                     |
| 575-3-60                                                | 3.73                                             | 5.60                                     | 7.46                                     |
| Motor Speed (r/s)                                       |                                                  |                                          |                                          |
| 208/230-3-60 and 460-3-60                               | 29.3                                             | 29.3                                     | 29.3                                     |
| 575-3-60                                                | 29.1                                             | 29.3                                     | 29.3                                     |
| <b>REFRIGERANT</b>                                      | R-410A                                           | R-410A                                   | R-410A                                   |
| Operating Charge (kg) (approx per circuit) <sup>a</sup> | 1.59                                             | 2.04                                     | 2.27                                     |
| <b>DIRECT — EXPANSION COIL</b>                          | Enhanced Copper Tubes, Aluminum Sine — Wave Fins |                                          |                                          |
| Maximum Working Pressure (kPag)                         | 4481                                             | 4481                                     | 4481                                     |
| Face Area (sq m)                                        | 1.85                                             | 2.30                                     | 2.77                                     |
| No. of Splits                                           | 2                                                | 2                                        | 2                                        |
| No. of Circuits per Split                               | 18                                               | 20                                       | 24                                       |
| Split Type...Percentage                                 | Face...50/50                                     | Face...50/50                             | Face...50/50                             |
| Rows...Fins/m                                           | 4...591                                          | 4...591                                  | 4...591                                  |
| <b>PIPING CONNECTIONS</b>                               |                                                  |                                          |                                          |
| Quantity...Size (in.)                                   |                                                  |                                          |                                          |
| DX Coil — Suction (ODF)                                 | 2...1-1/8                                        | 2...1-3/8                                | 2...1-3/8                                |
| DX Coil — Liquid Refrigerant (ODF)                      | 2...5/8                                          | 2...5/8                                  | 2...5/8                                  |
| Steam Coil, In (MPT)                                    | 1...2-1/2                                        | 1...2-1/2                                | 1...2-1/2                                |
| Steam Coil, Out (MPT)                                   | 1...1-1/2                                        | 1...1-1/2                                | 1...1-1/2                                |
| Hot Water Coil, In (MPT)                                | 1...2                                            | 1...2                                    | 1...2                                    |
| Hot Water Coil, Out (MPT)                               | 1...2                                            | 1...2                                    | 1...2                                    |
| Condensate (PVC)                                        | 1...5/8 ODM/1-1/4 IDF                            | 1...5/8 ODM/1-1/4 IDF                    | 1...5/8 ODM/1-1/4 IDF                    |
| <b>FILTERS</b>                                          | Throwaway —<br>Factory Supplied                  | Throwaway —<br>Factory Supplied          | Throwaway —<br>Factory Supplied          |
| Quantity...Size (mm)                                    | 4... 406 x 508 x 51<br>4...406 x 610 x 51        | 4...508 x 610 x 51<br>4...508 x 635 x 51 | 4...508 x 610 x 51<br>4...508 x 635 x 51 |
| Access Location                                         | Either Side                                      | Either Side                              | Either Side                              |
| <b>STEAM COIL<sup>b</sup></b>                           |                                                  |                                          |                                          |
| Maximum Working Pressure (kPag at 126°C)                | 138                                              | 138                                      | 138                                      |
| Total Face Area (sq m)                                  | 1.24                                             | 1.39                                     | 1.39                                     |
| Rows...Fins/m                                           | 1...394                                          | 1...394                                  | 1...394                                  |
| <b>HOT WATER COIL<sup>b</sup></b>                       |                                                  |                                          |                                          |
| Maximum Working Pressure (kPag)                         | 1034                                             | 1034                                     | 1034                                     |
| Total Face Area (sq ft)                                 | 1.24                                             | 1.39                                     | 1.39                                     |
| Rows...Fins/in.                                         | 2...335                                          | 2...335                                  | 2...335                                  |
| Water Volume                                            |                                                  |                                          |                                          |
| (L)                                                     | 52.6                                             | 54.1                                     | 54.1                                     |
| (m³)                                                    | 0.052                                            | 0.054                                    | 0.054                                    |

NOTE(S):

- a. Units are shipped without refrigerant charge.  
b. Field-installed accessory only.

**LEGEND**

- DX** — Direct Expansion  
**IDF** — Inside Diameter, Female  
**ODF** — Outside Diameter, Female  
**ODM** — Outside Diameter, Male  
**TXV** — Thermostatic Expansion Valve

**Table 3 — 40RUQ Physical Data, English — Heat Pump Units**

|                                                         |                                                  |
|---------------------------------------------------------|--------------------------------------------------|
| <b>UNIT 40RUQ*</b>                                      | <b>25</b>                                        |
| <b>NOMINAL CAPACITY (Tons)</b>                          | <b>20</b>                                        |
| <b>OPERATING WEIGHT (lb)</b>                            |                                                  |
| Base Unit with TXV                                      | 720                                              |
| Plenum                                                  | 225                                              |
| <b>FANS</b>                                             |                                                  |
| Qty...Diam. (in.)                                       | 2...15                                           |
| Nominal Airflow (cfm)                                   | 8,000                                            |
| Airflow Range (cfm)                                     | 6,000-10,000                                     |
| Nominal Motor kW (standard motor)                       |                                                  |
| 208/230-3-60 and 460-3-60                               | 5.0                                              |
| 575-3-60                                                | 5.0                                              |
| Motor Speed (rpm)                                       |                                                  |
| 208/230-3-60 and 460-3-60                               | 1760                                             |
| 575-3-60                                                | 1745                                             |
| <b>REFRIGERANT</b>                                      | <b>R-410A</b>                                    |
| Operating Charge (lb) (approx per circuit) <sup>a</sup> | 3.5/3.5                                          |
| <b>DIRECT — EXPANSION COIL</b>                          | Enhanced Copper Tubes, Aluminum Sine — Wave Fins |
| Maximum Working Pressure (psig)                         | 650                                              |
| Face Area (sq ft)                                       | 19.9                                             |
| No. of Splits                                           | 2                                                |
| No. of Circuits per Split                               | 10                                               |
| Split Type...Percentage                                 | Face...50/50                                     |
| Rows...Fins/in.                                         | 4...15                                           |
| <b>PIPING CONNECTIONS</b>                               |                                                  |
| Quantity...Size (in.)                                   |                                                  |
| DX Coil — Suction (ODF)                                 | 2...1-1/8                                        |
| DX Coil — Liquid Refrigerant (ODF)                      | 2...5/8                                          |
| Steam Coil, In (MPT)                                    | 1...2-1/2                                        |
| Steam Coil, Out (MPT)                                   | 1...1-1/2                                        |
| Hot Water Coil, In (MPT)                                | 1...2                                            |
| Hot Water Coil, Out (MPT)                               | 1...2                                            |
| Condensate (PVC)                                        | 1...1-1/4 ODM/1 IDF                              |
| <b>FILTERS</b>                                          | Throwaway — Factory-Supplied                     |
| Quantity...Size (in.)                                   | 4...16 x 20 x 2                                  |
| Access Location                                         | 4...16 x 24 x 2                                  |
|                                                         | Right or Left Side                               |
| <b>STEAM COIL<sup>b</sup></b>                           |                                                  |
| Maximum Working Pressure (psig at 260°F)                | 20                                               |
| Total Face Area (sq ft)                                 | 13.33                                            |
| Rows...Fins/in.                                         | 1...10                                           |
| <b>HOT WATER COIL<sup>b</sup></b>                       |                                                  |
| Maximum Working Pressure (psig)                         | 150                                              |
| Total Face Area (sq ft)                                 | 13.33                                            |
| Rows...Fins/in.                                         | 2...8.5                                          |
| Water Volume                                            |                                                  |
| (gal)                                                   | 13.9                                             |
| (ft <sup>3</sup> )                                      | 1.85                                             |

NOTE(S):

- a. Units are shipped without refrigerant charge.  
b. Field-installed accessory only.

**LEGEND**

- DX** — Direct Expansion  
**IDF** — Inside Diameter, Female  
**ODF** — Outside Diameter, Female  
**ODM** — Outside Diameter, Male  
**TXV** — Thermostatic Expansion Valve

**Table 4 — 40RUQ Physical Data, SI — Heat Pump Units**

|                                                         |                                                  |
|---------------------------------------------------------|--------------------------------------------------|
| <b>UNIT 40RUQ*</b>                                      | <b>25</b>                                        |
| <b>NOMINAL CAPACITY (kW)</b>                            | <b>70</b>                                        |
| <b>OPERATING WEIGHT (kg)</b>                            |                                                  |
| Base Unit with TXV                                      | 327                                              |
| Plenum                                                  | 44                                               |
| <b>FANS</b>                                             |                                                  |
| Qty...Diam. (mm)                                        | 2...381                                          |
| Nominal Airflow (L/s)                                   | 3775                                             |
| Airflow Range (L/s)                                     | 2831-4719                                        |
| Nominal Motor kW (Standard Motor)                       |                                                  |
| 208/230-3-60 and 460-3-60                               | 3.73                                             |
| 575-3-60                                                | 3.73                                             |
| Motor Speed (r/s)                                       |                                                  |
| 208/230-3-60 and 460-3-60                               | 29.3                                             |
| 575-3-60                                                | 29.1                                             |
| <b>REFRIGERANT</b>                                      | R-410A                                           |
| Operating Charge (kg) (approx per circuit) <sup>a</sup> | 1.59 / 1.59                                      |
| <b>DIRECT — EXPANSION COIL</b>                          | Enhanced Copper Tubes, Aluminum Sine — Wave Fins |
| Maximum Working Pressure (kPag)                         | 4482                                             |
| Face Area (sq m)                                        | 1.85                                             |
| No. of Splits                                           | 2                                                |
| No. of Circuits per Split                               | 2                                                |
| Split Type...Percentage                                 | Face...50/50                                     |
| Rows...Fins/m                                           | 591                                              |
| <b>PIPING CONNECTIONS</b>                               |                                                  |
| Quantity...Size (in.)                                   |                                                  |
| DX Coil — Suction (ODF)                                 | 2...1-1/8                                        |
| DX Coil — Liquid Refrigerant (ODF)                      | 2...5/8                                          |
| Steam Coil, In (MPT)                                    | 1...2-1/2                                        |
| Steam Coil, Out (MPT)                                   | 1...1-1/2                                        |
| Hot Water Coil, In (MPT)                                | 1...2                                            |
| Hot Water Coil, Out (MPT)                               | 1...2                                            |
| Condensate (PVC)                                        | 1...1-1/4 ODM/1 IDF                              |
| <b>FILTERS</b>                                          | Throwaway — Factory Supplied                     |
| Quantity...Size (mm)                                    | 4... 406 x 508 x 51<br>4...406 x 610 x 51        |
| Access Location                                         | Right or Left Side                               |
| <b>STEAM COIL<sup>b</sup></b>                           |                                                  |
| Maximum Working Pressure (kPag at 126°C)                | 138                                              |
| Total Face Area (sq m)                                  | 1.24                                             |
| Rows...Fins/m                                           | 1...394                                          |
| <b>HOT WATER COIL<sup>b</sup></b>                       |                                                  |
| Maximum Working Pressure (kPag)                         | 1034                                             |
| Total Face Area (sq ft)                                 | 1.24                                             |
| Rows...Fins/in.                                         | 2...335                                          |
| Water Volume                                            |                                                  |
| (L)                                                     | 52.6                                             |
| (m <sup>3</sup> )                                       | 0.052                                            |

NOTE(S):

- a. Units are shipped without refrigerant charge.
- b. Field-installed accessory only.

**LEGEND**

- DX** — Direct Expansion
- IDF** — Inside Diameter, Female
- ODF** — Outside Diameter, Female
- ODM** — Outside Diameter, Male
- TXV** — Thermostatic Expansion Valve

**Table 5 — 40RUS Physical Data, English — Chilled Water Unit**

| <b>UNIT 40RUS*</b>                       | <b>25</b>                                        | <b>28</b>                          | <b>30</b>                          |
|------------------------------------------|--------------------------------------------------|------------------------------------|------------------------------------|
| <b>NOMINAL CAPACITY (tons)</b>           | 20                                               | 25                                 | 30                                 |
| <b>OPERATING WEIGHT (lb)</b>             |                                                  |                                    |                                    |
| Base Unit                                | 683                                              | 1035                               | 1042                               |
| Plenum                                   | 225                                              | 325                                | 325                                |
| <b>FANS</b>                              |                                                  |                                    |                                    |
| Qty...Diam. (in.)                        | 2...15                                           | 2...18                             | 2...18                             |
| Nominal Airflow (cfm)                    | 8,000                                            | 10,000                             | 12,000                             |
| Airflow Range (cfm)                      | 6,000-10,000                                     | 7,500-12,500                       | 9,000-15,000                       |
| Nominal Motor Hp (standard motor)        |                                                  |                                    |                                    |
| 208/230-3-60 and 460-3-60                | 5.0                                              | 7.5                                | 10.0                               |
| 575-3-60                                 | 5.0                                              | 7.5                                | 10.0                               |
| Motor Speed (rpm)                        |                                                  |                                    |                                    |
| 208/230-3-60 and 460-3-60                | 1745                                             | 1745                               | 1745                               |
| 575-3-60                                 | 1745                                             | 1755                               | 1755                               |
| <b>CHILLED WATER COIL</b>                | Enhanced Copper Tubes, Aluminum Sine — Wave Fins |                                    |                                    |
| Maximum Working Pressure (psig)          | 435                                              | 435                                | 435                                |
| Face Area (sq ft) — Upper                | 11.0                                             | 12.4                               | 15.5                               |
| Face Area (sq ft) — Lower                | 8.3                                              | 12.4                               | 12.4                               |
| Rows...Fins/in.                          | 3...15                                           | 3...15                             | 3...15                             |
| <b>PIPING CONNECTIONS</b>                |                                                  |                                    |                                    |
| Quantity...Size (in.)                    |                                                  |                                    |                                    |
| Chilled Water — In                       | 2...1-3/8 ODM                                    | 2...2-1/8 ODM                      | 2...2-1/8 ODM                      |
| Chilled Water — Out                      | 2...1-3/8 ODM                                    | 2...2-1/8 ODM                      | 2...2-1/8 ODM                      |
| Steam Coil, In (MPT)                     | 1...2-1/2                                        | 1...2-1/2                          | 1...2-1/2                          |
| Steam Coil, Out (MPT)                    | 1...1-1/2                                        | 1...1-1/2                          | 1...1-1/2                          |
| Hot Water Coil, In (MPT)                 | 1...2                                            | 1...2                              | 1...2                              |
| Hot Water Coil, Out (MPT)                | 1...2                                            | 1...2                              | 1...2                              |
| Condensate (PVC)                         | 1...5/8 ODM/1-1/4 IDF                            | 1...5/8 ODM/1-1/4 IDF              | 1...5/8 ODM/1-1/4 IDF              |
| <b>FILTERS</b>                           | Throwaway —<br>Factory-Supplied                  | Throwaway —<br>Factory-Supplied    | Throwaway —<br>Factory-Supplied    |
| Quantity...Size (in.)                    | 4...16 x 20 x 2<br>4...16 x 24 x 2               | 4...20 x 24 x 2<br>4...20 x 25 x 2 | 4...20 x 24 x 2<br>4...20 x 25 x 2 |
| Access Location                          | Either Side                                      | Either Side                        | Either Side                        |
| <b>STEAM COIL<sup>a</sup></b>            |                                                  |                                    |                                    |
| Maximum Working Pressure (psig at 260°F) | 20                                               | 20                                 | 20                                 |
| Total Face Area (sq ft)                  | 13.33                                            | 15.0                               | 15.0                               |
| Rows...Fins/in.                          | 1...10                                           | 1...10                             | 1...10                             |
| <b>HOT WATER COIL<sup>a</sup></b>        |                                                  |                                    |                                    |
| Maximum Working Pressure (psig)          | 150                                              | 150                                | 150                                |
| Total Face Area (sq ft)                  | 13.33                                            | 15.00                              | 15.00                              |
| Rows...Fins/in.                          | 2...8.5                                          | 2...12.5                           | 2...12.5                           |
| Water Volume                             |                                                  |                                    |                                    |
| (gal)                                    | 13.90                                            | 14.30                              | 14.30                              |
| (ft <sup>3</sup> )                       | 1.85                                             | 1.90                               | 1.90                               |

NOTE(S):

a. Field-installed accessory only.

**Table 6 — 40RUS Physical Data, SI — Chilled Water Units**

| <b>UNIT 40RUS*</b>                          | <b>25</b>                                        | <b>28</b>                                | <b>30</b>                                |
|---------------------------------------------|--------------------------------------------------|------------------------------------------|------------------------------------------|
| <b>NOMINAL CAPACITY (kW)</b>                | 70                                               | 87                                       | 105                                      |
| <b>OPERATING WEIGHT (kg)</b>                |                                                  |                                          |                                          |
| Base Unit with TXV                          | 310                                              | 469                                      | 473                                      |
| Plenum                                      | 102                                              | 148                                      | 148                                      |
| <b>FANS</b>                                 |                                                  |                                          |                                          |
| Qty...Diam. (mm)                            | 2...381                                          | 2...457                                  | 2...457                                  |
| Nominal Airflow (L/s)                       | 3775                                             | 4719                                     | 5663                                     |
| Airflow Range (L/s)                         | 2831-4719                                        | 3539-5899                                | 4247-7079                                |
| Nominal Motor kW (standard motor)           |                                                  |                                          |                                          |
| 208/230-3-60 and 460-3-60                   | 3.73                                             | 5.60                                     | 7.46                                     |
| 575-3-60                                    | 3.73                                             | 5.60                                     | 7.46                                     |
| Motor Speed (r/s)                           |                                                  |                                          |                                          |
| 208/230-3-60 and 460-3-60                   | 29.1                                             | 29.1                                     | 29.1                                     |
| 575-3-60                                    | 29.1                                             | 29.3                                     | 29.3                                     |
| <b>CHILLED WATER COIL</b>                   | Enhanced Copper Tubes, Aluminum Sine — Wave Fins |                                          |                                          |
| Maximum Working Pressure (kPag)             | 2999                                             | 2999                                     | 2999                                     |
| Face Area (sq m) — Upper                    | 1.02                                             | 1.15                                     | 1.44                                     |
| Face Area (sq m) — Lower                    | 0.77                                             | 1.15                                     | 1.15                                     |
| Rows...Fins/m                               | 3...591                                          | 3...591                                  | 3...591                                  |
| <b>PIPING CONNECTIONS</b>                   |                                                  |                                          |                                          |
| Quantity...Size (in.)                       |                                                  |                                          |                                          |
| Chilled Water — In                          | 2...1-3/8 ODM                                    | 2...2-1/8 ODM                            | 2...2-1/8 ODM                            |
| Chilled Water — Out                         | 2...1-3/8 ODM                                    | 2...2-1/8 ODM                            | 2...2-1/8 ODM                            |
| Steam Coil, In (MPT)                        | 1...2-1/2                                        | 1...2-1/2                                | 1...2-1/2                                |
| Steam Coil, Out (MPT)                       | 1...1-1/2                                        | 1...1-1/2                                | 1...1-1/2                                |
| Hot Water Coil, In (MPT)                    | 1...2                                            | 1...2                                    | 1...2                                    |
| Hot Water Coil, Out (MPT)                   | 1...2                                            | 1...2                                    | 1...2                                    |
| Condensate (PVC)                            | 1...5/8 ODM/1-1/4 IDF                            | 1...5/8 ODM/1-1/4 IDF                    | 1...5/8 ODM/1-1/4 IDF                    |
| <b>FILTERS</b>                              | Throwaway —<br>Factory Supplied                  | Throwaway —<br>Factory Supplied          | Throwaway —<br>Factory Supplied          |
| Quantity...Size (mm)                        | 4... 406 x 508 x 51<br>4...406 x 610 x 51        | 4...508 x 610 x 51<br>4...508 x 635 x 51 | 4...508 x 610 x 51<br>4...508 x 635 x 51 |
| Access Location                             | Either Side                                      | Either Side                              | Either Side                              |
| <b>STEAM COIL<sup>a</sup></b>               |                                                  |                                          |                                          |
| Maximum Working Pressure<br>(kPag at 125°C) | 138                                              | 138                                      | 138                                      |
| Total Face Area (sq m)                      | 1.24                                             | 1.39                                     | 1.39                                     |
| Rows...Fins/m                               | 1...394                                          | 1...394                                  | 1...394                                  |
| <b>HOT WATER COIL<sup>a</sup></b>           |                                                  |                                          |                                          |
| Maximum Working Pressure (kPag)             | 1034                                             | 1034                                     | 1034                                     |
| Total Face Area (sq m)                      | 1.24                                             | 1.39                                     | 1.39                                     |
| Rows...Fins/m                               | 2...335                                          | 2...493                                  | 2...493                                  |
| Water Volume                                |                                                  |                                          |                                          |
| (L)                                         | 52.6                                             | 54.1                                     | 54.1                                     |
| (m <sup>3</sup> )                           | 0.052                                            | 0.054                                    | 0.054                                    |

NOTE(S):

a. Field-installed accessory only.

|  | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 |
|--|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|
|  | 4 | 0 | R | U | A | A | 2 | 5 | T | 1  | A  | 6  | -  | U  | A  | 0  | A  | 0  |

**Model Type**  
40RU = Carrier Fan Coil  
Puron® R-410A Refrigerant

**Type of Coil**  
A = Standard DX Coil  
Q = Heat Pump (size 25 only)  
S = Chilled Water Coil

**Refrigerant Options**  
A = None

**Nominal Tonnage**  
25 = 20 Tons  
28 = 25 Tons  
30 = 30 Tons

**Fan Motor Speed Controller**  
T = 2-Speed Fan Controller (VFD)

**Indoor Fan Options**  
1 = Standard Motor, Standard Drive  
2 = Standard / Alternate Motor, Medium Drive  
3 = High Motor, High Drive

**Packaging**  
0 = Standard

**Future Use**  
A = Standard

**Cabinet Paint**  
0 = Non-Painted Cabinet  
1 = Painted Cabinet

**Future Use**  
A = Standard

**Controls**  
U = Electromechanical Unit Control Board

**Revision Number**  
- = Standard

**Voltage<sup>a</sup>**  
1 = 575/3/60  
5 = 208/230/3/60  
6 = 460/3/60

**Coil Options**  
A = Al/Cu


a. 2-speed indoor fan motor must use dedicated voltage models listed. The VFD used is not multi-voltage.

**Fig. 3 — Model Number Nomenclature**

| POSITION NUMBER | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|-----------------|---|---|---|---|---|---|---|---|---|----|
| TYPICAL         | 2 | 6 | 2 | 3 | G | 1 | 2 | 3 | 4 | 5  |

| POSITION | DESIGNATES                            |
|----------|---------------------------------------|
| 1-2      | Week of Manufacture (fiscal calendar) |
| 3-4      | Year of Manufacture ("23" = 2023)     |
| 5        | Manufacturing Location                |
| 6-10     | Sequential Number                     |

**Fig. 4 — Serial Number Nomenclature**

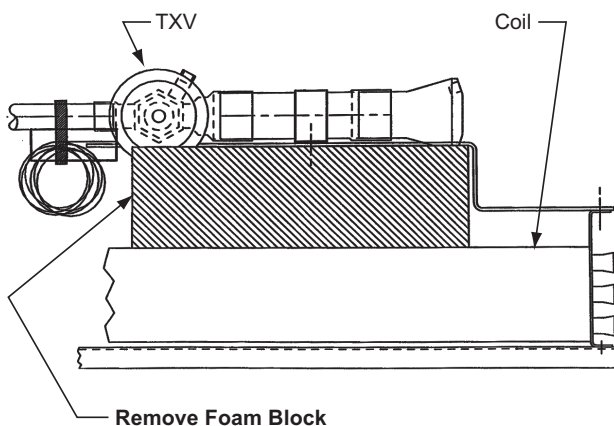


LEGEND  
TXV — Thermostatic Expansion Valve

**Fig. 5 — Foam Block Location**

## Unit Positioning


The unit can be mounted on the floor for vertical application with return air entering the face of the unit and supply air discharging vertically through the top of the unit. The unit can also be applied in a horizontal arrangement with return air entering horizontally and the supply air discharging horizontally. When applying the unit in a horizontal arrangement, ensure the condensate drain pan is located at the bottom center of the unit for adequate condensate disposal. See Fig. 6 for condensate connections for each unit position.

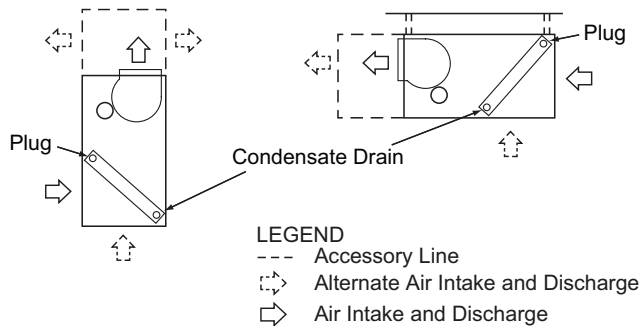

**Fig. 6 — Typical Unit Positioning**

Typical positioning and alternate return air locations are shown in Fig. 6. Alternate return air locations can be used by moving the unit panel from the alternate return air location to the standard return air location. Refer to overhead suspension accessory drawing (see Fig. 7) for preferred suspension technique. The unit needs support underneath to prevent sagging.

**IMPORTANT:** Do NOT attempt to install unit with return air entering top panel of unit. Condensate will not drain from unit.

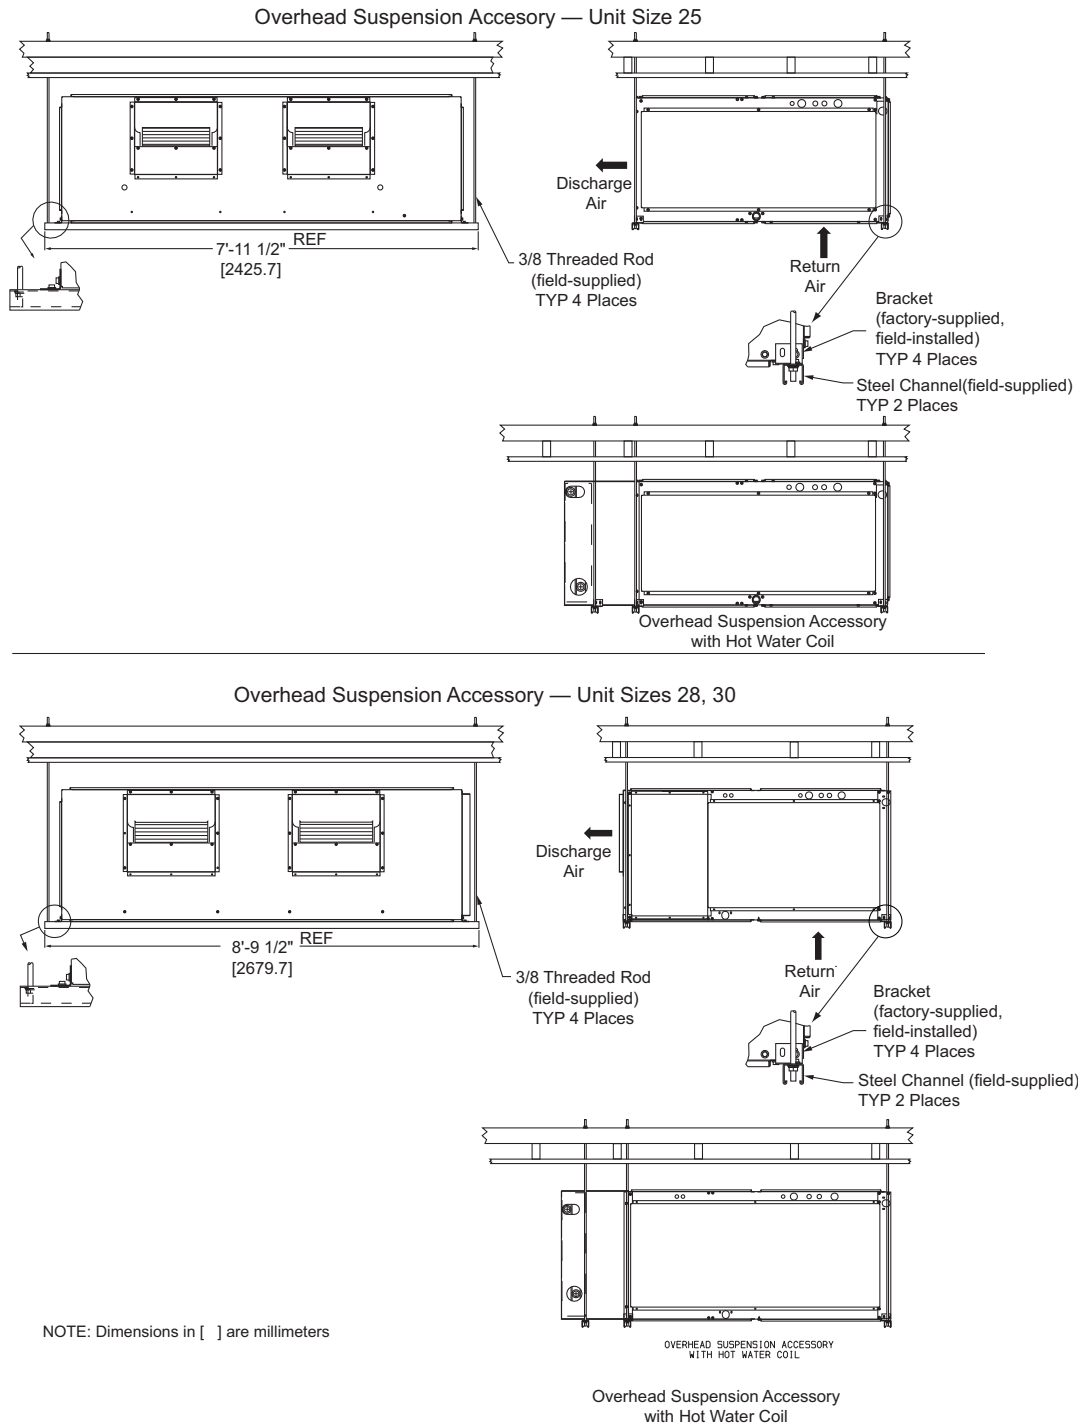

**Fig. 7 — Preferred Suspension Technique**

## Unit Isolation

Where extremely quiet operation is essential, install isolators between floor and base of unit, or between ceiling and top section of unit.

Be sure that unit is level and adequately supported. Use channels at front and sides of unit for reference points when leveling.

## Refrigerant and Chilled Water Piping Access

The 40RU Series units come with standard knockouts for refrigerant and chilled water piping. These knockouts are located on both sides of the unit for installation flexibility. The standard knockouts provide sufficient access to the unit's coils for all 40RUA\*25, 28, and 30 units. 40RUQ\*25 units, as well as 40RUS\*25, 28, and 30 units require additional holes which must be field-fabricated to accommodate the piping. See Fig. 8 for the positions and dimensions of the additional access holes required for 40RUQ and 40RUS units. Recommended access hole use is also listed for all units. Note that Fig. 8 shows the access holes on the control-box side of the unit; this is the side of the unit with the coil headers, which is used most often for piping access.

**IMPORTANT:** Do not bury refrigerant piping underground.

## Refrigerant Piping

See Tables 1-6 for refrigerant pipe connection sizes. For ease in brazing, it is recommended that all internal solder joints be made before unit is placed in final position.

The 40RU direct-expansion units have internal factory-installed thermostatic expansion valves (TXVs), distributors, and nozzles for use with R-410A. See Table 7 for part numbers. Knockouts are provided in the unit corner posts for 40RU refrigerant piping. See Fig. 8, which also lists recommended knockouts and access holes to use for each 40RU unit size. Recommended fittings are listed in Table 8.

The sensor bulb capillary tubes must be routed from the TXVs inside the unit through one of the piping access holes. Clamp the TXV sensor bulb on a vertical portion of the suction line, outside the unit. See Fig. 9.


**NOTE:** Be sure to remove the foam shipping pad from the TXV. Verify that it has been removed. See Fig. 5.

**IMPORTANT:** Never attach the sensor to the suction manifold. Do NOT mount the sensor on a trapped portion of the suction line.

The 40RU Series evaporator coils have a face-split design. Ensure that lower circuit of coil is first on/last off when connected to the condensing unit and/or system controls. See Fig. 10.

External TXV equalizer connections are provided and factory-brazed into the coil suction manifolds.

If suction line must be horizontal, clamp bulb to suction line at least 45 degrees above bottom, at approximately the 4 o'clock or 8 o'clock position. See Fig. 11.

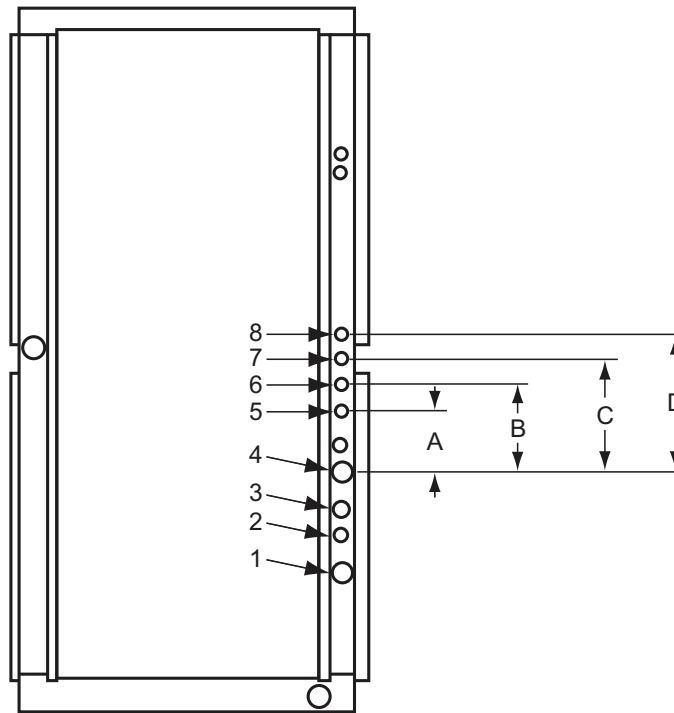


| UNIT           | USE HOLE NO. <sup>a</sup> | FIELD-FABRICATED HOLE DIAMETERS<br>in. (mm) |              |              |              | FIELD-FABRICATED HOLE POSITION<br>DIMENSIONS in. (mm) |               |               |              |
|----------------|---------------------------|---------------------------------------------|--------------|--------------|--------------|-------------------------------------------------------|---------------|---------------|--------------|
|                |                           | No. 5                                       | No. 6        | No. 7        | No. 8        | A                                                     | B             | C             | D            |
| 40RUA*25,28,30 | 1,2,3,4                   | —                                           | —            | —            | —            | —                                                     | —             | —             | —            |
| 40RUS*25       | 4,5,6,7                   | 1-3/4 (44.5)                                | 1-3/4 (44.5) | 1-3/4 (44.5) | —            | 3.0 (76.2)                                            | 6.0 (152.5)   | 10.5 (266.7)  | —            |
| 40RUQ*25       | 3 <sup>b</sup> ,5,6,7     | 1-1/8 (28.6)                                | 1-1/8 (28.6) | 1-3/4 (44.5) | —            | 3.25 (82.6)                                           | 6.125 (155.6) | 10.38 (263.7) | —            |
| 40RUS*28,30    | 5,6,7,8                   | 2-1/2 (63.5)                                | 2-1/2 (63.5) | 2-1/2 (63.5) | 2-1/2 (63.5) | 6.0 (152.5)                                           | 9.625 (244.5) | 13.38 (339.9) | 17.0 (431.8) |

NOTE(S):

a. Access hole knockouts 1-4 are factory-supplied.

b. Must be enlarged from 1-1/8 in. (28.6mm) to 1-3/4 in. (44.5mm).

**Fig. 8 — Refrigerant and Chilled Water Piping Access Holes**

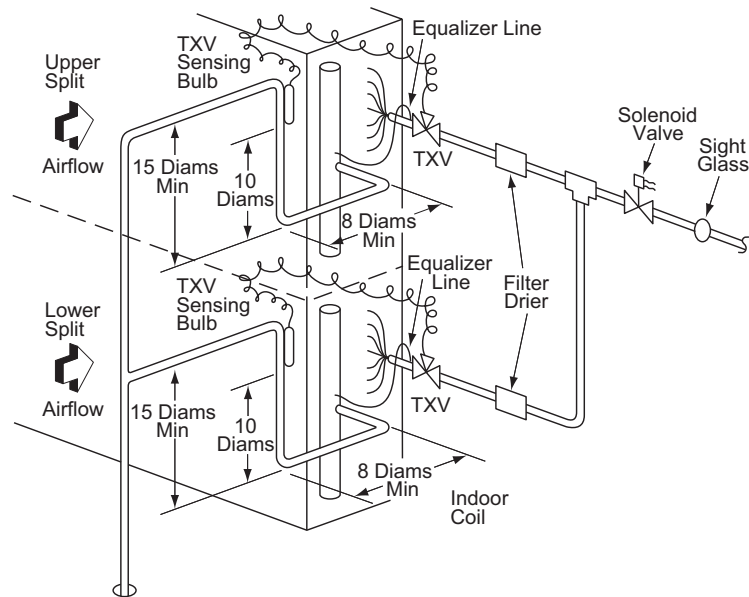


#### LEGEND


**TXV** — Thermostatic Expansion Valve

NOTE: Component location arrangement shown for field installation of sight glasses, solenoid valves, filter driers, and TXV sensing bulbs. The TXVs and equalizer lines are factory installed.

**Fig. 9 — Face-Split Coil and Liquid Line Piping (Typical)**

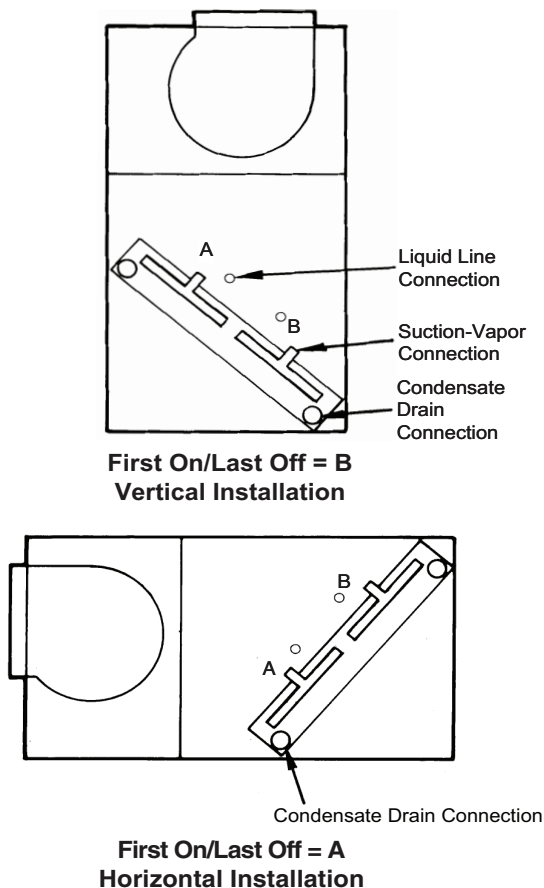

**Fig. 10 — Typical Evaporator Coil Connections (40RU)**

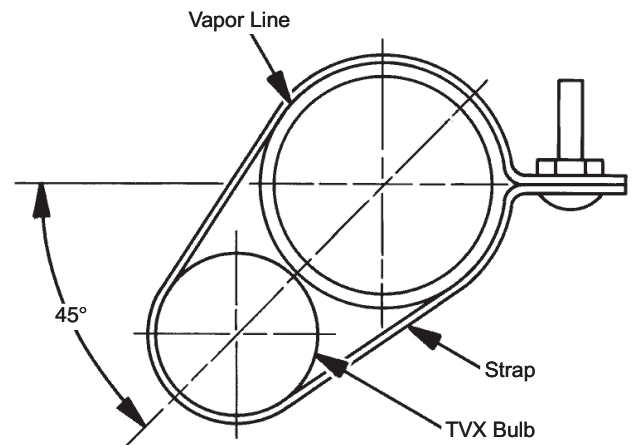

#### LEGEND

**TXV** — Thermostatic Expansion Valve

NOTE: The 8 o'clock position is shown above.

**Fig. 11 — TXV Sensing Bulb Location**

**Table 7 — Factory-Installed Nozzle and Distributor Data<sup>a</sup>**

| UNIT            | COIL TYPE STD | TXV QTY...PART NO. | DISTRIBUTOR QTY...<br>PART NO. | FEEDER TUBES PER<br>DISTRIBUTOR <sup>b</sup><br>QTY...SIZE (in.) | NOZZLE QTY...PART NO. |
|-----------------|---------------|--------------------|--------------------------------|------------------------------------------------------------------|-----------------------|
| <b>40RUA*25</b> | 4 Row         | 2...BBIZE-8-GA     | 2...D196-18-3/16               | 18...3/16                                                        | 2...G6                |
| <b>40RUA*28</b> | 4 Row         | 2...BBIZE-15-GA    | 2...1126                       | 20...3/16                                                        | 2...C15               |
| <b>40RUA*30</b> | 4 Row         | 2...BBIZE-15-GA    | 2...1126                       | 24...3/16                                                        | 2...C17               |
| <b>40RUQ*25</b> | 4 Row         | 2...BBIZE-12.5-GA  | 2...113-12-3/16                | 2-12...3/16                                                      | 2...G8                |

NOTE(S):

a. Hot gas bypass applications require field-supplied auxiliary side connector.

b. Feeder tube size is 1/4 in. (6.35 mm).

**Table 8 — Fitting Requirements**

| UNIT            | ACCESS HOLD NO. <sup>a</sup> | CONNECTION TYPE | CIRCUIT | FITTING REQUIRED <sup>b</sup> (in.)                                                               |
|-----------------|------------------------------|-----------------|---------|---------------------------------------------------------------------------------------------------|
| <b>40RUA*25</b> | 1                            | Suction         | Lower   | 1-1/8 Street Elbow<br>1-1/8 Nipple, 7-5/8 L<br>1-1/8 Long Radius Elbow                            |
|                 | 2                            | Liquid          | Lower   | 5/8 Street Elbow<br>5/8 Nipple, 6-1/2 L<br>5/8 Long Radius Elbow                                  |
|                 | 3                            | Liquid          | Upper   | 5/8 Street Elbow<br>5/8 Nipple, 9-1/2 L<br>5/8 Long Radius Elbow                                  |
|                 | 4                            | Suction         | Upper   | 1-1/8 Nipple, 5-5/8 L<br>1-1/8 Long Radius Elbow<br>1-1/8 Nipple, 11 L<br>1-1/8 Long Radius Elbow |
| <b>40RUQ*25</b> | 3                            | Suction         | Lower   | 1-1/8 Nipple, 3 L<br>1-1/8 Long Radius Elbow                                                      |
|                 | 5                            | Suction         | Lower   | 5/8 Nipple, 2-7/8 L<br>5/8 45° Elbow<br>5/8 Nipple, 1-5/8 L<br>5/8 Long Radius Elbow              |
|                 | 6                            | Liquid          | Upper   | 5/8 Nipple, 2-7/8 L<br>5/8 45° Elbow<br>5/8 Nipple, 4-1/4 L<br>5/8 Long Radius Elbow              |
|                 | 7                            | Suction         | Upper   | 1-1/8 Nipple, 5 L<br>1-1/8 45° Elbow<br>1-1/8 Nipple, 8-3/4 L<br>1-1/8 Long Radius Elbow          |
| <b>40RUS*25</b> | 4                            | Supply          | Lower   | 1-3/8 Long Radius Elbow<br>1-3/8 Nipple, 3-3/4 L<br>1-3/8 Long Radius Elbow                       |
|                 | 5                            | Return          | Lower   | 1-3/8 Long Radius Elbow<br>1-3/8 Nipple, 3-3/8 L<br>1-3/8 Long Radius Elbow                       |
|                 | 6                            | Return          | Upper   | 1-3/8 Long Radius Elbow<br>1-3/8 Nipple, 7 L<br>1-3/8 Long Radius Elbow                           |
|                 | 7                            | Supply          | Upper   | 1-3/8 Long Radius Elbow<br>1-3/8 Nipple, 11-3/4 L<br>1-1/8 Long Radius Elbow                      |

NOTE(S):

a. Fittings are listed on order from header or tee stub connection out to access hole in corner support post.

b. See Fig. 8 for access hole location by number.

**Table 8 — Fitting Requirements (cont)**

| UNIT               | ACCESS HOLD NO. <sup>a</sup> | CONNECTION TYPE | CIRCUIT | FITTING REQUIRED <sup>b</sup> (in.)                                                                    |
|--------------------|------------------------------|-----------------|---------|--------------------------------------------------------------------------------------------------------|
| <b>40RUA*28</b>    | 1                            | Suction         | Lower   | 1-3/8 Street Elbow<br>1-3/8 Nipple, 11 L<br>1-3/8 Long Radius Elbow                                    |
|                    | 2                            | Liquid          | Lower   | 5/8 Street Elbow<br>5/8 Nipple, 1-1/2 L<br>5/8 Long Radius Elbow                                       |
|                    | 3                            | Liquid          | Upper   | 5/8 Street Elbow<br>5/8 Nipple, 19-1/2 L<br>5/8 Long Radius Elbow                                      |
|                    | 4                            | Suction         | Upper   | 1-3/8 Nipple, 4-3/16 L<br>1-3/8 Long Radius Elbow<br>1-3/8 Nipple, 23-1/4 L<br>1-3/8 Long Radius Elbow |
| <b>40RUS*28,30</b> | 5                            | Supply          | Lower   | 2-1/8 Long Radius Elbow<br>2-1/8 Nipple, 3-1/2 L<br>2-1/8 Long Radius Elbow                            |
|                    | 6                            | Return          | Lower   | 2-1/8 Long Radius Elbow<br>2-1/8 Nipple, 3 L<br>2-1/8 Long Radius Elbow                                |
|                    | 7                            | Return          | Upper   | 2-1/8 Long Radius Elbow<br>2-1/8 Nipple, 6-7/8 L<br>2-1/8 Long Radius Elbow                            |
|                    | 8                            | Supply          | Upper   | 2-1/8 Long Radius Elbow<br>2-1/8 Nipple, 11-7/8 L<br>2-1/8 Long Radius Elbow                           |
| <b>40RUA*30</b>    | 1                            | Suction         | Lower   | 1-3/8 Street Elbow<br>1-3/8 Nipple, 3 L<br>1-3/8 Long Radius Elbow                                     |
|                    | 2                            | Liquid          | Lower   | 5/8 Street Elbow<br>5/8 Nipple, 7-3/4 L<br>5/8 Long Radius Elbow                                       |
|                    | 3                            | Liquid          | Upper   | 5/8 Street Elbow<br>5/8 Nipple, 18-1/2 L<br>5/8 Long Radius Elbow                                      |
|                    | 4                            | Suction         | Upper   | 1-3/8 Nipple, 4-3/16 L<br>1-3/8 Long Radius Elbow<br>1-3/8 Nipple, 19-1/4 L<br>1-3/8 Long Radius Elbow |

NOTE(S):

- a. Fittings are listed on order from header or tee stub connection out to access hole in corner support post.  
b. See Fig. 8 for access hole location by number.


## Chilled Water Piping

See Tables 5 and 6 for chilled water connection sizes. For ease in brazing, it is recommended that all internal solder joints be made before unit is placed in final position.

Knockouts are provided in the unit corner posts for 40RUS refrigerant piping. Additional field-fabricated access holes are required for 40RUS chilled water piping. See Fig. 8, which lists recommended knockouts and access holes to use for each 40RUS unit size.

To size, design, and install chilled water piping, consult the Carrier System Design manual. See Fig. 12 for an example of a typical installation. Recommended fittings are listed in Table 8.


To access 40RUS coil vents and drains, remove the unit side panel over the coil header. Vent and drain plugs are on the top and bottom of header, respectively. See the Service section for information on preventing coil freeze-up during winter.

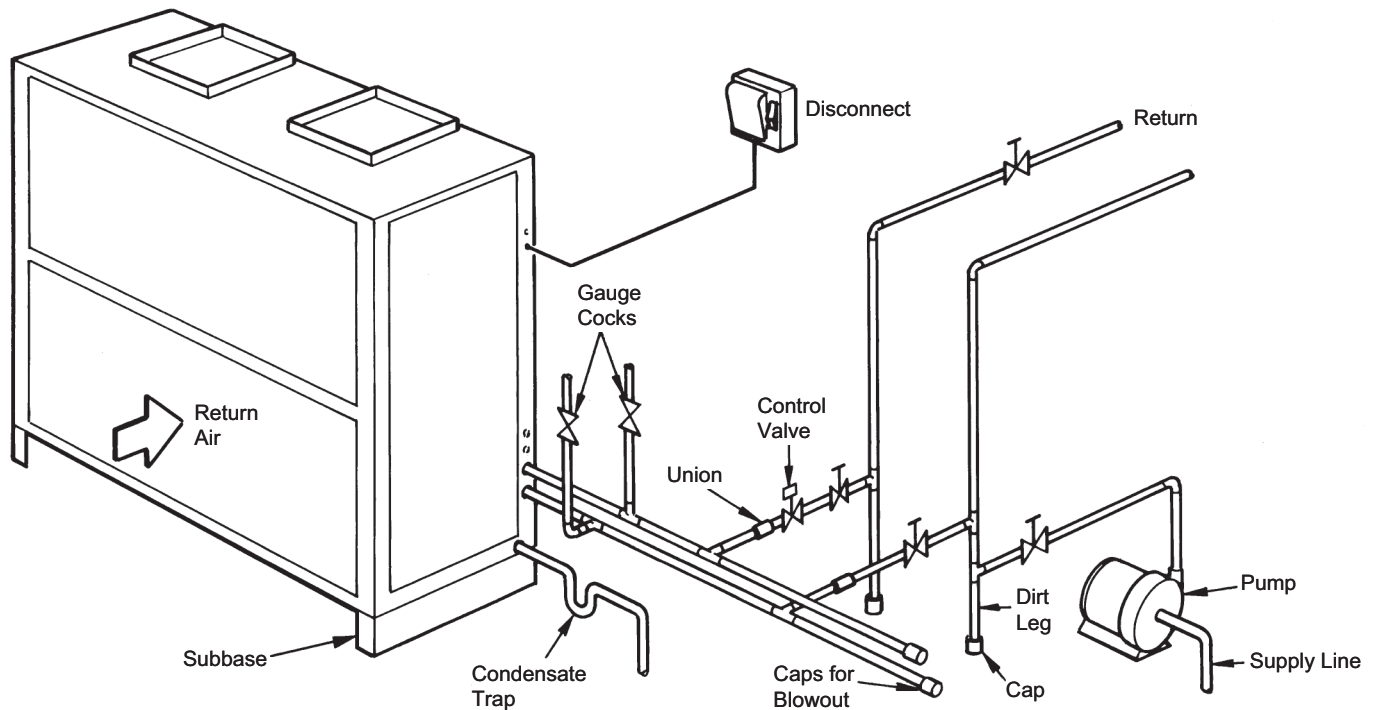

**Fig. 12 — Typical 40RUS Chilled Water Piping**

## Condensate Drain


Install a trapped condensate drain line to unit connection as shown in Fig. 13. The unit drain connection is a PVC stub. See Fig. 14. Some areas may require an adapter to connect to either galvanized steel or copper pipe. For these applications, install a field-supplied threaded PVC adapter.

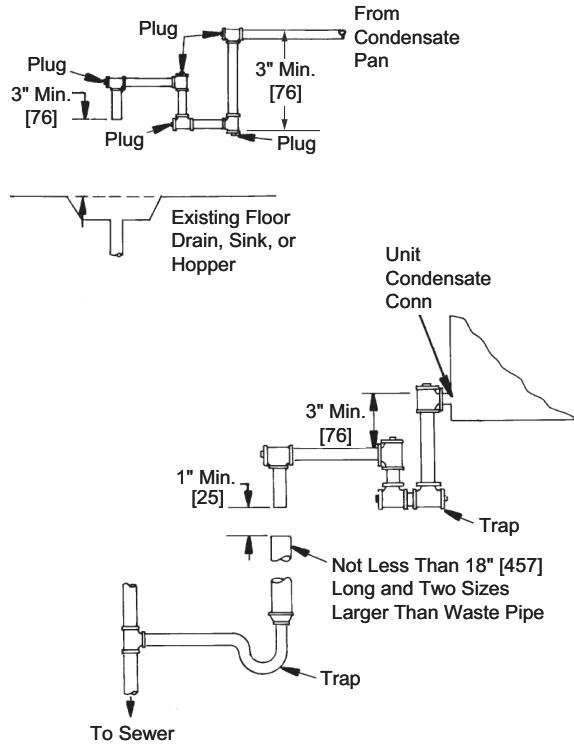

**Fig. 13 — Condensate Drain**

NOTE: A trap must be installed in the condensate drain line to ensure that the static pressure of fans is balanced with the water column in the drain line and that condensate can drain completely from pan. Without a trap, air can be drawn up drain line until water level in condensate pan becomes equal to static pressure created by fans, preventing complete drainage. Conditions will worsen as filters become dirty.

Install clean-out plugs in trap. Pitch drain line downward to an open floor drain or sump. Provide service clearance around drain line to permit removal of unit panels. Observe all local sanitary codes.

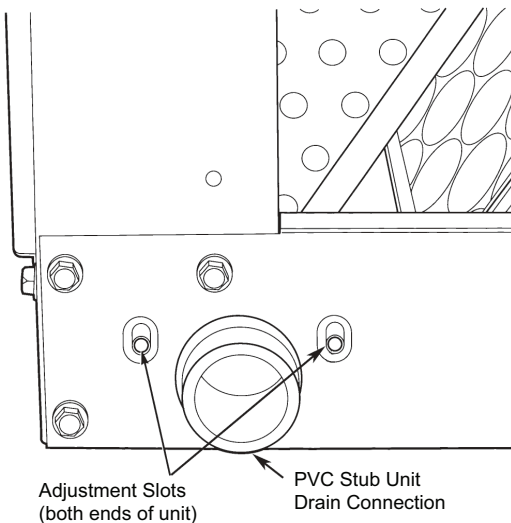

**Fig. 14 — Drain Pan Slope Adjustment**

As shipped, the unit's condensate drain pan is NOT sloped towards the drain connection. The pan slope must be changed to pitch towards the side of the unit with the drain connection. (See Fig. 14.) Loosen the 2 screws next to the drain outlet at both ends of the unit, push drain pan down in the slots near the drain connection, and up in the slots on the opposite end. Re-tighten screws. The pan should have a pitch of at least 1/4 in. over its length toward the drain connection.

## Fan Motors and Drives

Motor and drive packages are factory installed in all units. The motor and drive packages consist of the following items:

- 1 — Fan motor
- 1 — Adjustable motor pulley
- 1 — Fan pulley
- 2 — Matched fan belts

(40RUA\*25-30, 40RUQ\*25, 40RUS\*25-30 units)

For instructions on changing fan rotation, changing drive speeds and adjusting drives, see Pulley and Drive Adjustment in the Service section.

## Power Supply and Wiring

Check the unit data plate to ensure that available power supply matches electrical characteristics of the unit. Provide a disconnect switch with an integrated lock-out feature of size required to provide adequate fan motor starting current. See Table 9 for unit electrical data.

### ⚠ WARNING

Failure to follow this warning could result in personal injury or death.

Do not use gas piping as an electrical ground.

Unit cabinet must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur. This ground may consist of electrical wire connected to unit ground lug in control compartment, or conduit approved for electrical ground when installed in accordance with NEC (National Electrical Code); ANSI/NFPA 70, latest edition (in Canada, Canadian Electrical Code CSA [Canadian Standards Association] C22.1), and local electrical codes.

### ⚠ WARNING

#### FIRE HAZARD

Failure to follow this warning could result in intermittent operation or performance satisfaction.

Do not connect aluminum wire between disconnect switch and fan coil unit. Use only copper wire. See Fig. 15.

**Table 9 — Electrical Data, Alternate Motors**

| UNIT <sup>a, b</sup> | V-PH-Hz | IFM TYPE          | VOLTAGE LIMITS <sup>c</sup> |     | FAN MOTOR |      |                  | POWER SUPPLY <sup>d</sup> |      |
|----------------------|---------|-------------------|-----------------------------|-----|-----------|------|------------------|---------------------------|------|
|                      |         |                   | Min                         | Max | Hp        | (kW) | FLA <sup>e</sup> | MCA                       | MOCP |
| 40RUA/S/Q*25         | 208/230 | STD               | 187                         | 253 | 5.0       | 3.73 | 18.0             | 23                        | 40   |
|                      |         | MED               | 187                         | 253 | 5.0       | 3.73 | 18.0             | 23                        | 40   |
|                      |         | HIGH              | 187                         | 253 | 7.5       | 5.60 | 23.5             | 30                        | 50   |
|                      | 460     | STD               | 414                         | 506 | 5.0       | 3.73 | 9.1              | 12                        | 20   |
|                      |         | MED               | 414                         | 506 | 5.0       | 3.73 | 9.1              | 12                        | 20   |
|                      |         | HIGH              | 414                         | 506 | 7.5       | 5.60 | 15.0             | 19                        | 30   |
|                      | 575     | STD               | 518                         | 632 | 5.0       | 3.73 | 8.0              | 10                        | 15   |
|                      |         | MED               | 518                         | 632 | 5.0       | 3.73 | 8.0              | 10                        | 15   |
|                      |         | HIGH              | 518                         | 632 | 7.5       | 5.60 | 10.0             | 13                        | 20   |
| 40RUA/S*28           | 208/230 | STD               | 187                         | 253 | 7.5       | 5.60 | 23.5             | 30                        | 50   |
|                      |         | MED               | 187                         | 253 | 10.0      | 7.46 | 32.0             | 40                        | 70   |
|                      |         | HIGH              | 187                         | 253 | 10.0      | 7.46 | 32.0             | 40                        | 70   |
|                      | 460     | STD               | 414                         | 506 | 7.5       | 5.60 | 15.0             | 19                        | 30   |
|                      |         | MED               | 414                         | 506 | 10.0      | 7.46 | 16.0             | 20                        | 35   |
|                      |         | HIGH              | 414                         | 506 | 10.0      | 7.46 | 16.0             | 20                        | 35   |
|                      | 575     | STD               | 518                         | 632 | 7.5       | 5.60 | 10.0             | 13                        | 20   |
|                      |         | MED               | 518                         | 632 | 10.0      | 7.46 | 13.0             | 17                        | 25   |
|                      |         | HIGH <sup>f</sup> | 518                         | 632 | 10.0      | 7.46 | 13.0             | 17                        | 25   |
| 40RUA/S*30           | 208/230 | STD               | 187                         | 253 | 10.0      | 7.46 | 32.0             | 40                        | 70   |
|                      |         | MED               | 187                         | 253 | 10.0      | 7.46 | 32.0             | 40                        | 70   |
|                      |         | HIGH              | 187                         | 253 | 10.0      | 7.46 | 32.0             | 40                        | 70   |
|                      | 460     | STD               | 414                         | 506 | 10.0      | 7.46 | 16.0             | 20                        | 35   |
|                      |         | MED               | 414                         | 506 | 10.0      | 7.46 | 16.0             | 20                        | 35   |
|                      |         | HIGH              | 414                         | 506 | 10.0      | 7.46 | 16.0             | 20                        | 35   |
|                      | 575     | STD               | 518                         | 632 | 10.0      | 7.46 | 13.0             | 17                        | 25   |
|                      |         | MED               | 518                         | 632 | 10.0      | 7.46 | 13.0             | 17                        | 25   |
|                      |         | HIGH              | 518                         | 632 | 10.0      | 7.46 | 13.0             | 17                        | 25   |

**NOTE(S):**


- Unbalanced 3-Phase Supply Voltage: Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the formula in the example below to determine the percentage of voltage imbalance.
- Installation with Accessory Electric Heaters: Size the Field Power Wiring between the heater TB1 and the 40RU indoor fan motor per NEC Article 430-28 (1) or (2) (depends on length of conduit between heater enclosure and 40RU power entry location). Install wires in field-installed conduit.
- Motors are designed for satisfactory operation within 10% of normal voltage shown. Voltages should not exceed the limits shown in the Voltage Limits column.
- Minimum circuit amps (MCA) and MOCP values are calculated in accordance with The NEC, Article 440.
- Motor FLA values are established in accordance with Underwriters' Laboratories (UL), Standard 1995.
- Data for 575v high static applies to 40RUA\*28 only, not 40RUS\*28.

**LEGEND**

- FLA** — Full Load Amps  
**MCA** — Minimum Circuit Amps  
**MOCP** — Maximum Overcurrent Protection

$$\% \text{ Voltage Imbalance} = 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 230-3-60



AB = 224-v  
BC = 231-v  
AC = 226-v

$$\text{Average Voltage} = \frac{(224 + 231 + 226)}{3} = \frac{681}{3} = 227$$

Determine maximum deviation from average voltage.

(AB) 227-224 = 3-v

(BC) 231-227 = 4-v

(AC) 227-226 = 1-v

Maximum deviation is 4-v.


Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{4}{227} = 1.76\%$$


This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

**IMPORTANT:** If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.

Install disconnect switch and power wiring in accordance with all applicable local codes. See Fig. 15-17 and the unit label diagram. Connect power wiring with 1/4 in. ring terminal.

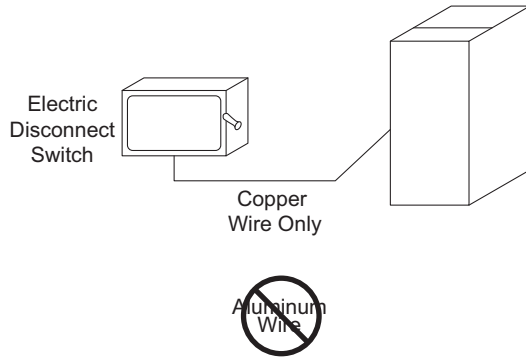

**Fig. 15 — Disconnect Switch and Unit**

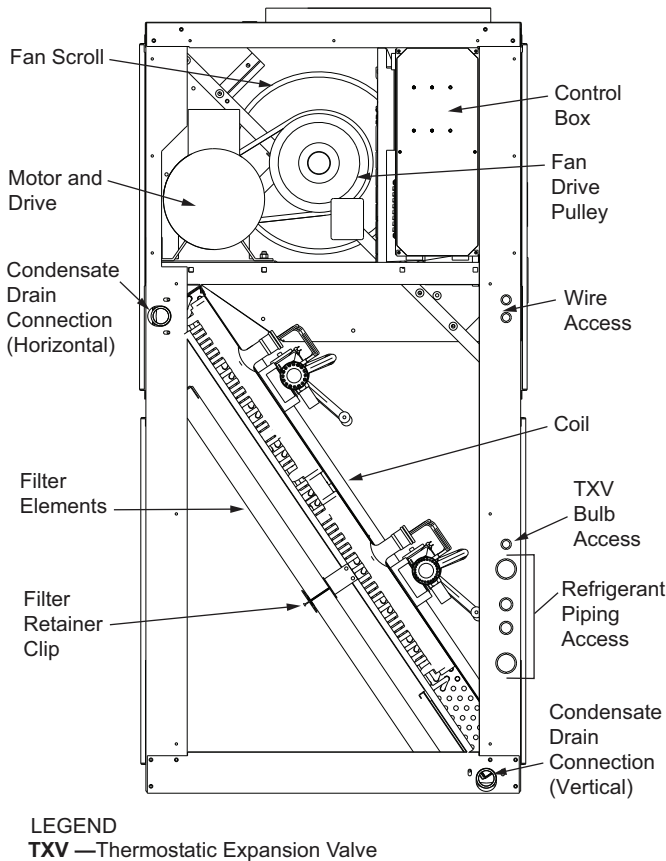


**Fig. 16 — Wiring and Service Access  
(Side Panel Removed)**

Fan motors are factory-installed on all units. The control box (see Fig. 17) contains a Unit Control Board (UCB) that receives

thermostat commands from the thermostat (through the Thermostat Connection Board [TSTAT CB]) and outputs these commands to the condensing unit (through the Indoor Connection Board [IDCB]). The control box also contains a high voltage terminal block and fuses that provide overcurrent protection to the Variable Frequency Drive.

Complete 24-v control circuit wiring. Wire the thermostat to TSTAT CB terminal block (see Fig. 17), according to Fig. 19 and the unit label diagram. If the air handler is part of a split system, complete the wiring from the condensing unit to the IDCB terminal block (see Fig. 15). Refer to Fig. 19 and the unit label diagram.

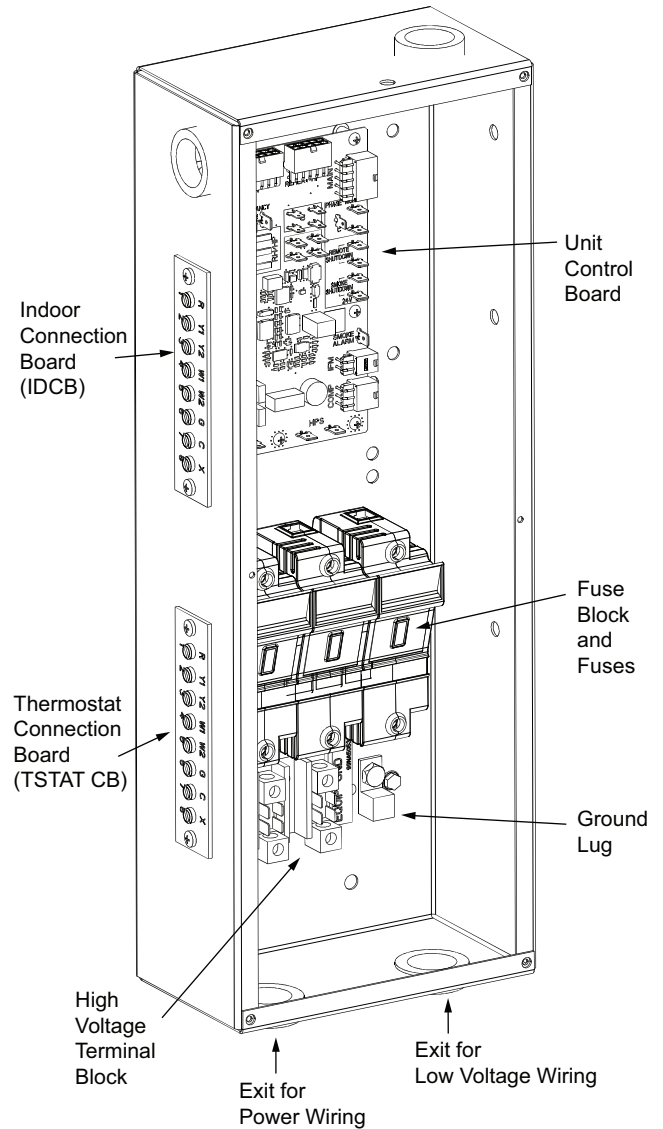

**Fig. 17 — Control Box (Cover Removed) (Typical)**

### THREE STAGE OPERATION

All units are factory shipped for 2-stage cooling operation. To convert a unit to 3-stage operation, see Fig. 18 adjust the following wires between the control board and two terminal strips on the side of the control box:


1. Remove gray wire from Thermostat CB terminal X.
2. Move orange wire from Thermostat CB terminal Y2 to terminal X.
3. Make connections of blue wire included in factory harness. Connect one end to Thermostat CB terminal Y2 and the other to Indoor Connection Board terminal Y2.

4. Move orange wire from Indoor Connection Board terminal Y2 to terminal X.

The 3-stage system will run the fan at low speed with a G, Y1, and Y1+Y2 call, and at high speed with a call for Y1, Y2, and Y3. A thermostat with 3 cooling stage capability is required for this system configuration.

### FREEZE PROTECTION

On select models, there is a factory-installed and wired temperature switch (HH18HB016) to protect the compressor(s) in the condensing unit when frost buildup is present on the indoor coil. The temperature switch is used to prevent the compressor(s) from turning on while the indoor coil is frosted. Refer to the unit wiring label diagram for wiring of this switch.

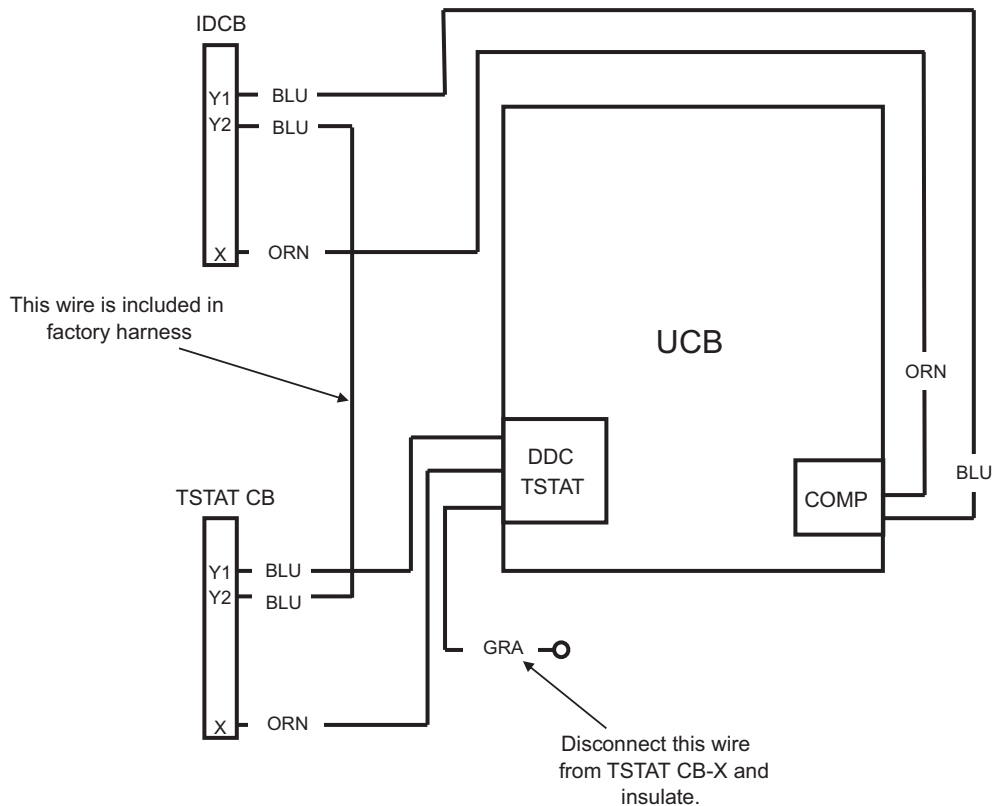

**Fig. 18 — 3-Stage Cooling Diagram**

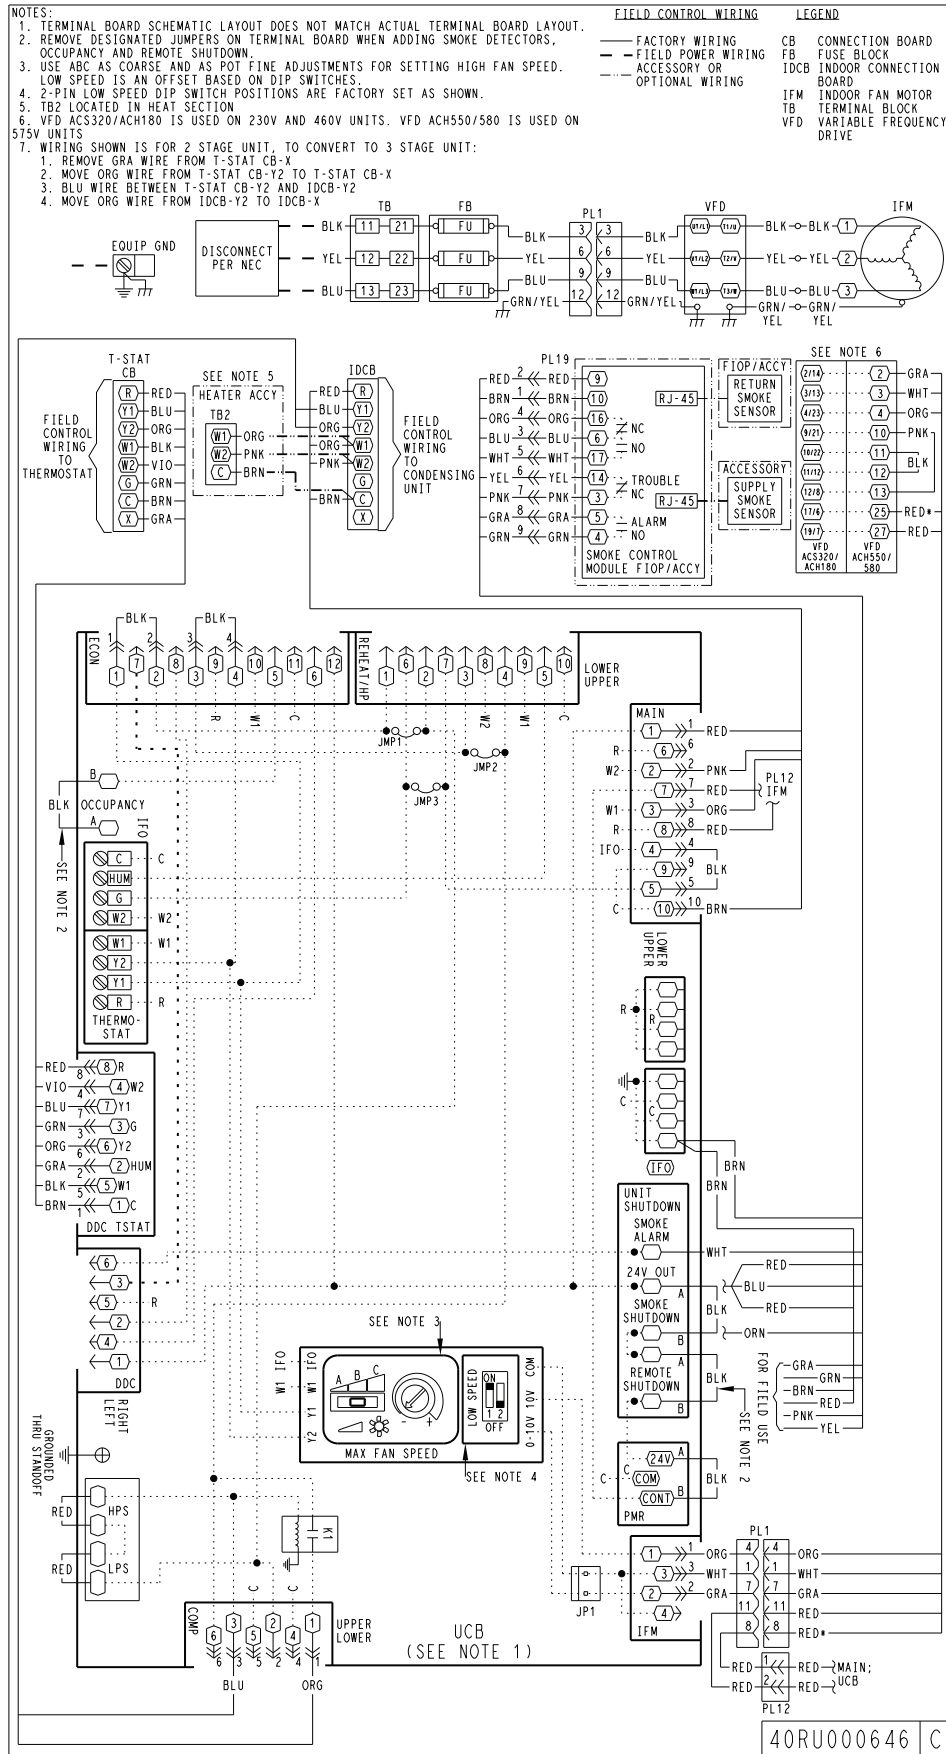


Fig. 19 — Unit Wiring

## Variable Frequency Drive

The unit is equipped with a Variable Frequency Drive (VFD) to control the indoor fan in sequence with the unit's ventilation, cooling, and heating operation. The VFD is controlled through a 0-10vdc signal that is provided by the Unit Control Board (UCB) in the control box. Per ASHRAE 90.1-2016 and IECC-2015 standards, during the first stage of cooling operation, the VFD will adjust the fan motor to provide 66% of the design airflow rate for the unit. When the call for the second stage of cooling is required, the VFD will allow the design airflow rate for the unit established (100%). During heating mode, the VFD will allow total design airflow rate (100%) operation. During ventilation mode, the VFD will operate the fan motor at 66% of full speed.

The ABB ACS320 model (see Fig. 20) and ACH180 (see Fig. 21) is used on 208/230-v and 460-v units, while the ABB ACH580 (see Fig. 22) model is used on 575-v units.

See Fig. 23-26 for location of the VFD.




Fig. 20 — ACS320 Variable Frequency Drive (VFD)




Fig. 21 — ACH180 Variable Frequency Drive (VFD)




Fig. 22 — ACH580 Variable Frequency Drive (VFD)

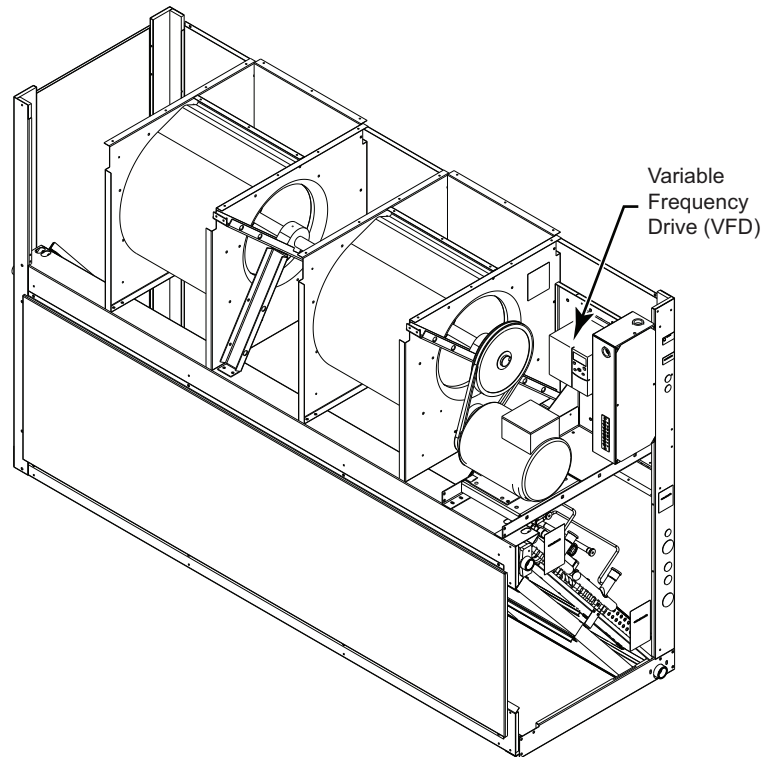


**Fig. 23 — ACS320/ACH180 VFD Location for the following units: 40RUA/RUS 25, 40RUQ 25 (208/230-v and 460-v only)**

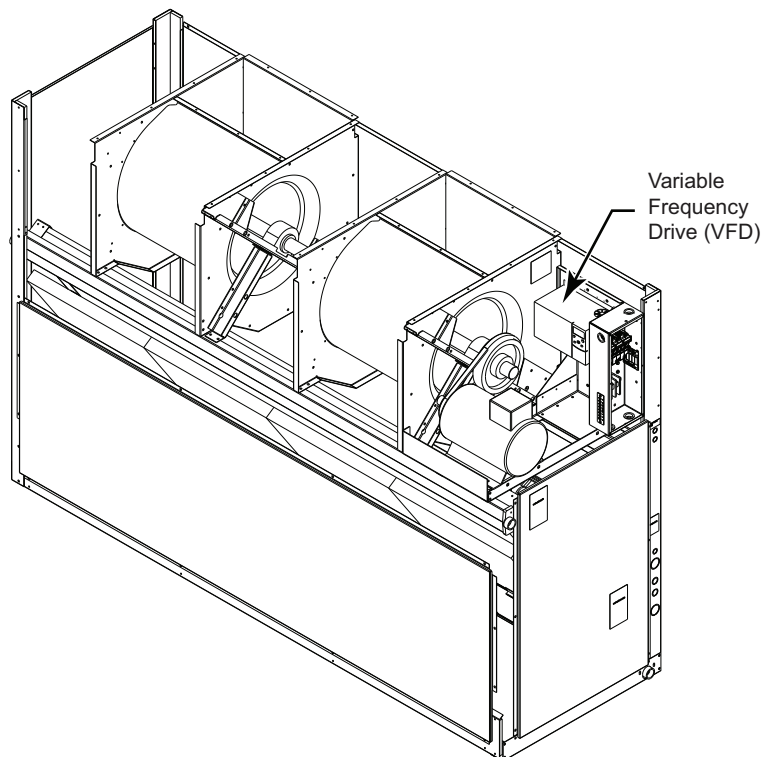

**Fig. 24 — ACS320/ACH180 VFD Location for the following units: 40RUA/RUS 28-30 (208/230-v and 460-v only)**

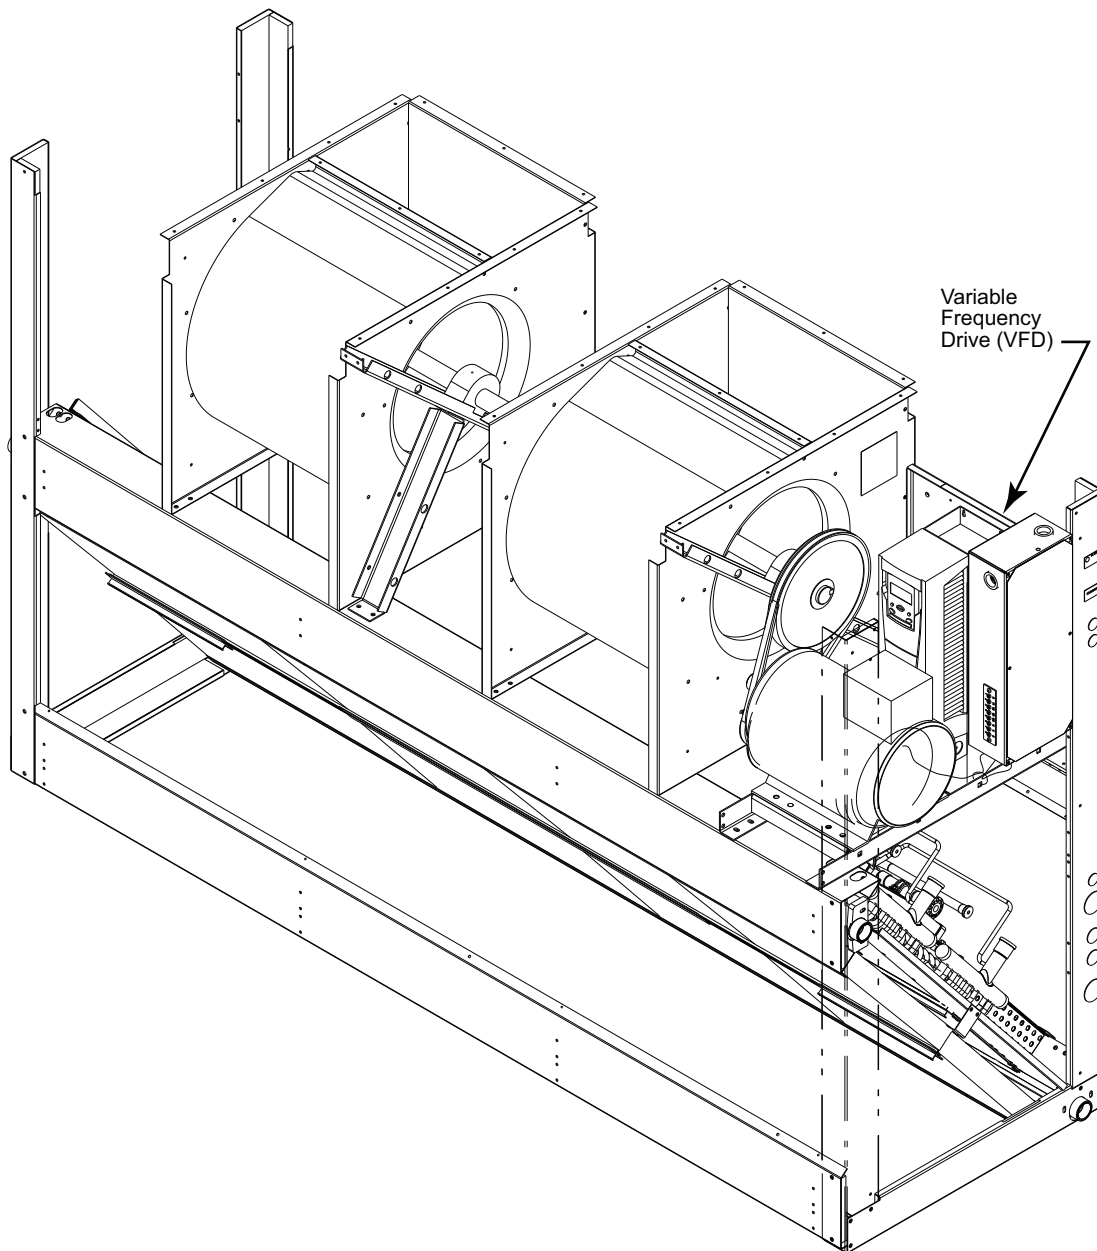

**Fig. 25 — ACH580 VFD Location for the following units: 40RUA/RUS 25, 40RUQ 25 (575-v only)**

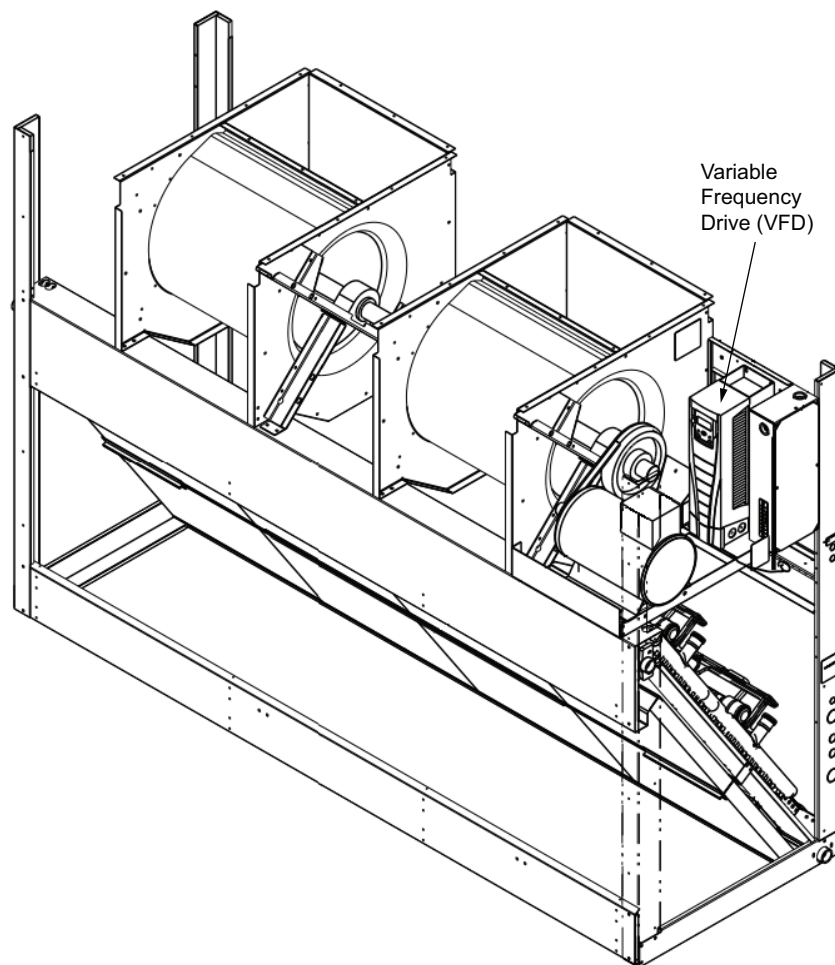

**Fig. 26 — ACH580 VFD Location for the following units: 40RUA/RUS 28-30 (575-v only)**

## Connecting Ductwork

Refer to the Carrier System Design Manual for the recommended design and layout of ductwork. Figure 27 shows recommended duct connection to units with 2 fans.

### ⚠ CAUTION

#### UNIT OPERATION HAZARD

Failure to follow this caution could cause equipment damage.

Do not operate unit without ductwork or discharge plenum unless fan speed has been adjusted for external static pressure of 0 in. wg. Failure to do so may result in motor overload.

## DISCHARGE CONNECTIONS

Duct flanges are factory-supplied; they are shipped inside the unit attached to the hairpin end of the coil tube sheet for field installation. Using the existing screws, install the duct flanges on the unit's fan deck. Each fan discharge requires 2 flanges; each flange must be bent in the middle to conform to the discharge opening. See Fig. 28. After flanges are installed, connect them to the supply duct using a canvas connection to prevent vibration. It is important that this connection be properly fabricated to prevent high air friction losses and air noise.

## RETURN CONNECTIONS


When using return-air ductwork, route return-air duct to the unit's return air inlet near the filter rack, using a canvas connection to prevent transmission of unit vibration. If the duct blocks off the unit's access panel, provide a slip joint in the ductwork to permit removal for servicing.

## OUTDOOR-AIR INLET CONNECTIONS


Connect outdoor-air inlet to field-installed accessory economizer. Refer to Economizer Installation Instructions.

## Return-Air Filters

Type and size of filters are shown in Tables 1-6 and are factory-supplied and factory-installed. In all units with 2 fans, a filter replacement tool (hook) is shipped inside the unit for field use when replacing filters. See the Service section for instructions on filter element replacement.

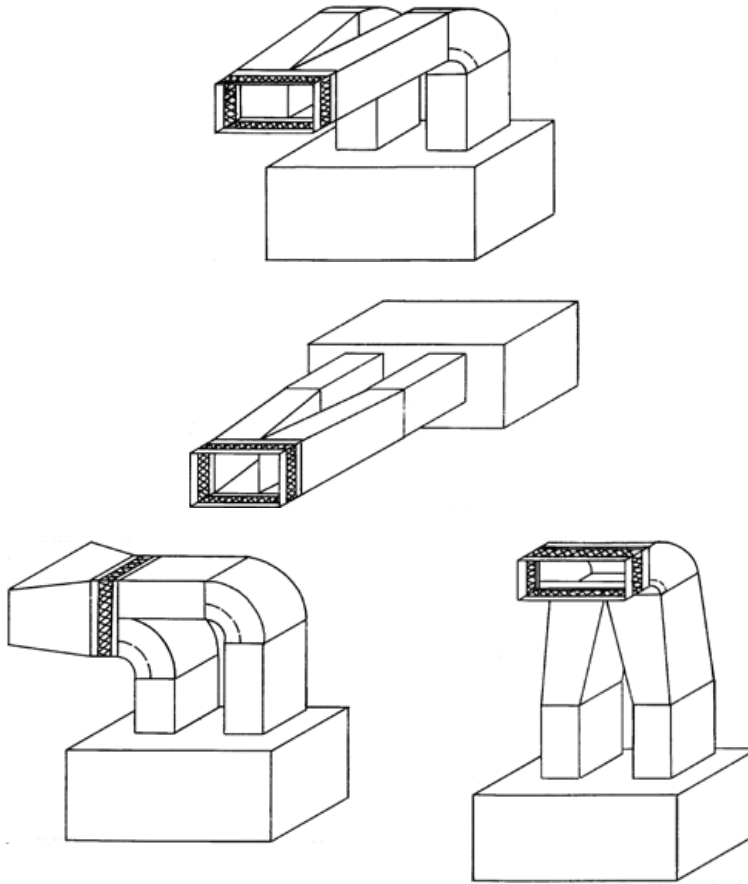

**Fig. 27 — Typical Fan Discharge Connections for Multiple Fan Units**

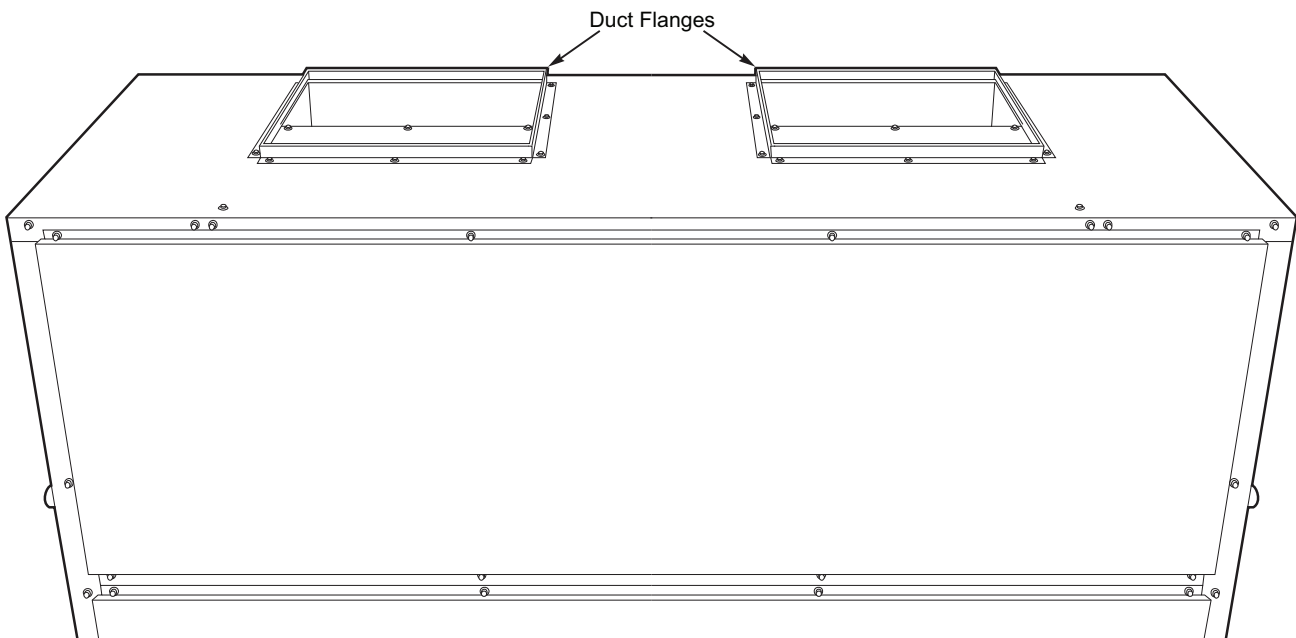

**Fig. 28 — Duct Flange Installation**

## START-UP

Before starting unit, check the following and correct as necessary:

- Is unit solidly supported?
- Is fan adjusted for speed and pulley alignment?
- Are pulleys, motor, and bearings securely mounted?
- Are there any loose parts that will rattle or vibrate?
- Is condensate drain pan pitched for correct drainage?
- Are coil baffle plates tight against coil to prevent air bypass?
- Are all panels securely fastened?
- Are all electrical connections correct and tight?
- Are there any loose or disconnected wires at the VFD or in the control box? Are any wires in contact with sharp edges or moving parts (e.g., pulley, belt, etc.)?
- Have all safety, caution, and warning labels been read?

### 40RUA and 40RUQ ONLY

- Is TXV bulb located on suction tube per Fig. 29?
- Is the capillary tube to the bulb free of kinks and not subject to pinching?
- Is the bulb well secured to the suction tube with strap?

Also refer to condensing unit or outdoor heat pump section instructions before starting a split system. A split system start-up checklist is provided at the end of these instructions.

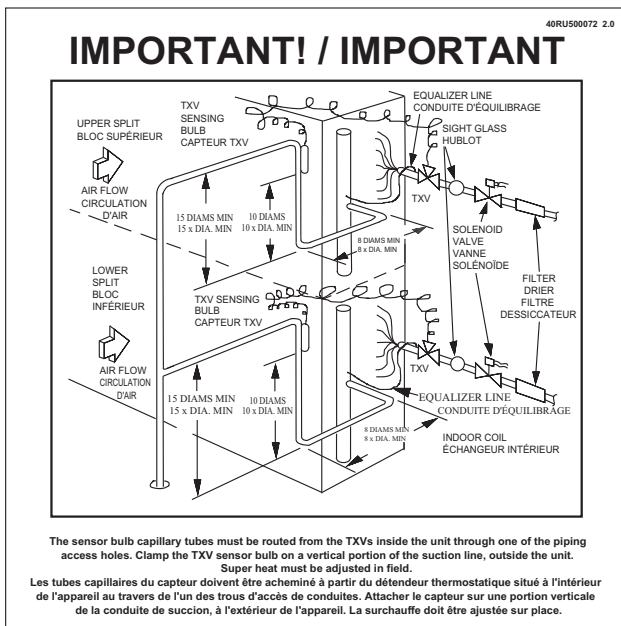


Fig. 29 — TXV Bulb Location Label

### Adjusting TXV for Superheat (40RUA and 40RUQ only)

The unit-mounted thermostatic expansion valve(s) is/are factory set to provided superheat at the bulb location in 10°F to 15°F (5.5°C to 8.3°C) range. Actual system load conditions may require adjustment of the factory setting. See Fig. 30.

To adjust the TXV superheat setting:

1. Remove the seal cap from the bottom of the TXV body.
2. To increase superheat, turn the stem clockwise. To decrease the superheat, turn the stem counterclockwise. Do not turn the stem more than one full turn.
3. Wait until suction pressure and superheat stabilize. This may take more than 30 minutes.

4. Continue adjustment until superheat reaches 10°F to 15°F (5.5°C to 8.3°C).
5. Replace the seal cap; tighten.



Fig. 30 — TXV Adjustment Label

### Compressor Rotation

Follow instructions in Condensing Unit installation instructions. For units equipped with a VFD on the indoor fan motor, the rotation direction of the indoor fan motor and fan cannot be used to visually confirm a correct phase connection to the unit and compressors. Correct phases to equipment for proper compressor rotation. The VFD will maintain the same rotation as input phases are changed. Pressure gauges **MUST BE USED** during cooling system start-up to confirm correct compressor rotation and operation.

### Indoor Fan Motor

Raise the cooling set point at the space thermostat to higher than the space temperature. Switch the thermostat's FAN switch to the CONT (Continuous) position. The fan motor will start and run at reduced speed. Check for fan rotation direction. To reverse the fan rotation, disconnect all power to the unit and then switch two motor power leads between the VFD and the motor. Restore unit power and recheck the fan rotation direction.

Check fan motor speed. Motor shaft should be rotating at 1150 to 1180 rpm (19.2 to 19.7 r/s).

Switch the thermostat's FAN switch to AUTO position. Fan motor will stop.

### Cooling with Staged Air Volume™ (SAV)

#### FIRST STAGE (Y1)

Set the thermostat FAN switch to AUTO and the SYSTEM switch to COOL. Slowly lower the cooling set point until first stage compressor starts. Indoor fan motor also starts and runs at reduced speed.

#### SECOND STAGE (Y2)

Lower the cooling set point until the second stage compressor starts. The indoor fan speed is dependent on the number of cooling stages:

- 2-Stage Systems: The indoor fan motor will switch to high speed.
- 3-Stage Systems: The indoor fan motor will remain at low speed.

#### THIRD STAGE (Y3) — 3-STAGE SYSTEMS ONLY

Lower the cooling set point until the third stage compressor starts. The indoor fan motor will switch to high speed.

Check the fan motor speed. Motor shaft should be rotating at 1725 to 1760 rpm (28.8 to 29.3 r/s).

Confirm compressors are running at correct rotation by checking suction and discharge pressures. To reverse the compressor rotation, disconnect unit power and switch two of the unit's main power leads. Restore unit power and recheck compressor operation.

Reset thermostat cooling set point to a position above the space temperature.

Both compressors will shut off. Indoor fan motor will stop immediately.

## Operating Fan for Test and Balance

During the Test and Balance procedure, it is necessary to operate the supply fan in High Speed without concurrent operation of the Cooling or Heating systems. Use the following procedure to force the fan speed to High.

1. Set the space thermostat to SYSTEM OFF and FAN in AUTO.
2. Disconnect unit power. Lock-out/tag out.
3. Open the fan access panel and remove the cover of control box.
4. Adjust the Low Speed 2-Pin DIP switches on the Unit Control Board. Set both switches to "OFF." This will allow the motor to run at full speed in ventilation only.
5. Locate pressure ports or pitot tubes in the return duct and supply duct to measure external static pressure.
6. Replace control box cover.
7. Restore unit power.
8. Set the space thermostat to FAN CONT.
9. Check the motor speed with stroboscope or similar tool. Motor shaft speed must be in 1725 to 1760 rpm (28.8 to 29.3 r/s) range for High Speed.
10. Replace the fan access panel.
11. Perform test and balance procedure.
12. Adjust the supply fan speed according to the Pulley and Drive Adjustment section to deliver the project selection cfm value. Ensure the selection cfm value is not lower than the "Min cfm Per Fan Motor Type" for this unit-size as found in Table 10. See Fan Speed Set-Up section for alternate method of adjusting supply fan speed through the Unit Control Board.

To restore the unit to ready-to-start condition, disconnect the unit power and lock-out/tag-out, set the space thermostat to FAN AUTO, remove the test pressure ports from the external duct locations, and re-set Low Speed 2-Pin DIP switches to factory setting (refer to wiring diagram on control box cover). Replace the supply fan access panel. Restore unit power.

**Table 10 — 40RU Min cfm Per Fan Motor Type**

| UNIT         | 2-SPEED FAN MOTOR (AT HIGH SPEED) | 2-SPEED FAN MOTOR (AT LOW SPEED) |
|--------------|-----------------------------------|----------------------------------|
| 40RUA/S/Q*25 | 7,500                             | 5,000                            |
| 40RUA/S*28   | 8,450                             | 5,633                            |
| 40RUA/S*30   | 10,140                            | 6,760                            |

## Fan Speed Set-Up

These units contain a variable frequency drive (VFD) fan assembly. The fan operates from a 0-10 vdc signal.

NOTE: The indoor fan motors are equipped with protection relays designed to disable unit operation when a problem is detected. See Typical Wiring Diagram (see Fig. 19 on page 25) for the red wires in the Indoor fan control.

Fan motor is wired to connect the motor protection relays in series.

## UNITS WITH ELECTRO-MECHANICAL CONTROLS


The fan speed set up controls are located on the lower section of the Unit Control Board (UCB). See Fig. 31.

The Unit Control Board (UCB) voltage is set for 10 vdc from the factory to allow for full speed with belt/pulley adjustments.

The following procedure will allow for fan speed reduction if desired.

1. Check the job specifications for the cfm (cubic feet per minute) and ESP (external static pressure) required.
2. Connect a multimeter to the vdc terminals on the UCB.
3. Set the Range Switch to either A, B, or C per the Switch Range table. A is the lowest speed range, B is the middle speed range and C is the highest speed range.
4. Using a straight blade screwdriver, turn the vdc control dial to fine tune the vdc reading until the unit matches the required airflow setting.
5. Record the reading in the Field Setting field.

NOTE: Fan set-up vdc is not affected by the operating stage of the unit.

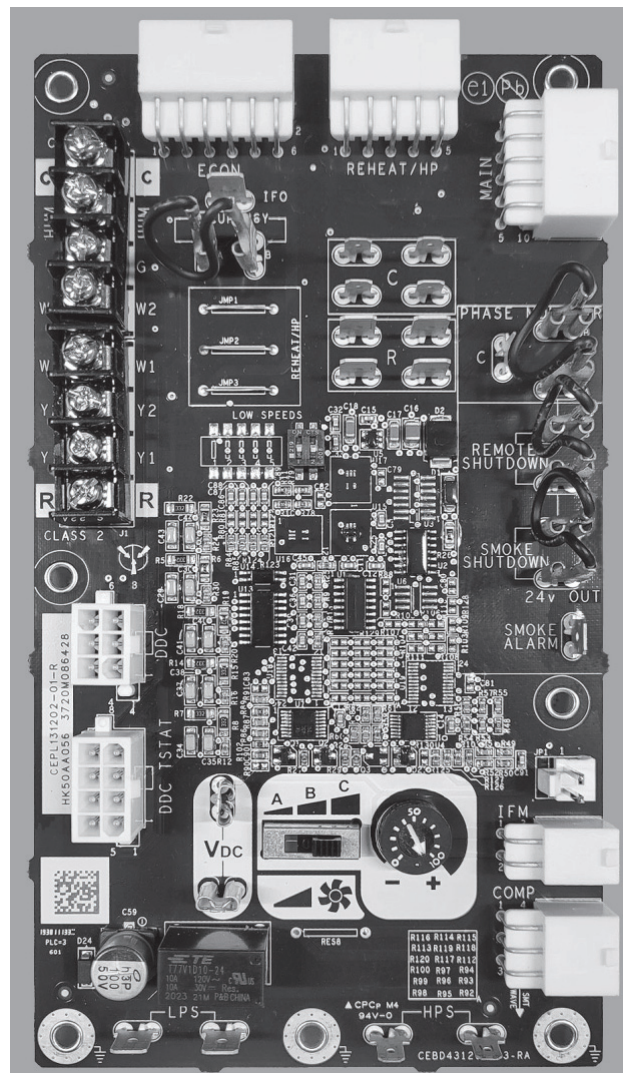

**Fig. 31 — Unit Control Board**

## MAINTENANCE

These items should be part of a routine maintenance program, to be checked every month or two, until a specific schedule for each can be identified for this installation:

### Quarterly Inspection (and 30 days after initial start)

#### INDOOR SECTION

- Condenser coil cleanliness checked.
- Return air filter replacement.
- Outdoor hood inlet filters cleaned.
- Fan shaft bearing locking collar tightness checked.
- Condensate drain checked.

#### Heating

- Power wire connections.
- Fuses ready.
- Manual-reset limit switch is closed.

See Tables 11 and 12 for unit specific maintenance checklists.

### Seasonal Maintenance

These items should be checked at the beginning of each season (or more often if local conditions and usage patterns dictate):

#### AIR-CONDITIONING

- condenser fan motor mounting bolts tightness
- compressor mounting bolts
- condenser fan blade positioning
- control box cleanliness and wiring condition
- wire terminal tightness
- refrigerant charge level
- evaporator coil cleaning
- evaporator blower motor amperage

**Table 11 — Outdoor Unit Maintenance Checklist**

| MAINTENANCE CHECKLIST <sup>a</sup>                                                                                                                                                                                         | RECOMMENDED INTERVAL <sup>b</sup> |                |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|----------------|
|                                                                                                                                                                                                                            | Monthly                           | Annual         |
| Outdoor unit specific:                                                                                                                                                                                                     |                                   |                |
| Clear away debris and vegetation near unit.                                                                                                                                                                                | X                                 |                |
| Inspect cabinet for damage. Replace components that are damaged or severely rusted.                                                                                                                                        |                                   | X              |
| Inspect electrical disconnect for proper function. Repair or replace as necessary.                                                                                                                                         |                                   | X              |
| Inspect electrical wiring and connections. Tighten loose connections. Inspect and perform functional test of equipment as needed to ensure proper function. Repair or replace damaged or overheated components and wiring. |                                   | X              |
| Check refrigerant system subcooling and superheat.                                                                                                                                                                         |                                   | X              |
| Inspect inside of unit. Clean if debris is present.                                                                                                                                                                        |                                   | X              |
| Inspect condenser coil. Clean if dust, dirt, or debris is present. Rinse unit with fresh water. <sup>c</sup>                                                                                                               |                                   | X <sup>d</sup> |
| Inspect motor and fan for damage. Make sure fans spin freely.                                                                                                                                                              |                                   | X              |

NOTE(S):

- The above list may not include all maintenance items. Inspection intervals may vary depending on climate and opening hours. Consult your Carrier dealer about a service contact for seasonal inspections.
- Monthly maintenance items and outdoor unit rinsing may be performed by the customer. All other maintenance items and all service work must be performed by a qualified service technician. Read all warning labels.
- Do not use harsh chemicals or high pressure water on coils. More frequent rinsing is required near a sea coast.
- Monthly rinsing of the condenser coil is recommended if the unit is located in a corrosive climate.

**Table 12 — Indoor Unit Maintenance Checklist**

| MAINTENANCE CHECKLIST <sup>a</sup>                                                                                                          | RECOMMENDED INTERVAL <sup>b</sup> |        |
|---------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|--------|
|                                                                                                                                             | Monthly                           | Annual |
| Indoor unit specific: (for accessories refer to unit specific literature)                                                                   |                                   |        |
| Inspect, clean, or replace air filter if dirty.                                                                                             | X                                 |        |
| Inspect and clean blower assembly (includes blower housing, wheel, and motor). Lubricate shaft bearings.                                    |                                   | X      |
| Inspect internal and external cabinet. Clean as needed.                                                                                     |                                   | X      |
| Inspect electrical disconnect for proper function. Repair or replace as necessary.                                                          |                                   | X      |
| Inspect electrical components, wiring, and connections. Tighten loose connections. Repair or replace damaged components and wiring.         |                                   | X      |
| Inspect evaporator coil. Clean if dust, dirt, or debris is present. <sup>c</sup>                                                            |                                   | X      |
| Clean condensate pan, trap, and drain lines (more frequent maintenance may be required in humid climates - consult your local HVAC dealer). |                                   | X      |
| Inspect motor and fan for damage. Make inspect airflow system (ductwork). Check for leaks and repair as needed.                             |                                   | X      |

NOTE(S):

- The above list may not include all maintenance items. Inspection intervals may vary depending on climate and opening hours. Consult your Carrier dealer about a service contact for seasonal inspections.
- Monthly maintenance items and outdoor unit rinsing may be performed by the customer. All other maintenance items and all service work must be performed by a qualified service technician. Read all warning labels.
- Do not use harsh chemicals or high pressure water on coils. More frequent rinsing is required near a sea coast.

## SERVICE

Inspection and maintenance should be performed at regular intervals and should include the following:

- Complete cleaning of cabinet, fan wheel, cooling coil, condensate pan and drain, heating coils, and return-air grille (if present).
- Inspection of panels and sealing of unit against air leakage.
- Adjustment of fan motor, belt, bearings, and wheels.
- Cleaning or replacement of filters.
- Testing for cooling/heating system leaks.
- Checking of all electrical connections.

### ⚠ WARNING

#### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Before performing service or maintenance operations on unit, always turn off main power switch to unit and install lockout tag. Unit may have more than one power switch.

Most unit service can be performed by removing one or both of the unit's side panels. Coil cleaning, removal or insulation cleaning may require removal of rear, top, or bottom panel, depending on the unit's orientation. When service is completed, replace unit panels.

### Panels

Panels are fastened to unit frame with sheet metal screws. Fan and coil compartment must be sealed tightly after service to prevent air from bypassing the cooling coil.

### Fan Motor Lubrication

Fan motor supplied with unit is permanently lubricated and requires no further lubrication.

### Fan Shaft Bearings

Size 25-30 units have pillow-block bearings (see Fig. 32) that must be lubricated with suitable bearing grease approximately every 3 months. See Table 13 for suitable lubricants.

**Table 13 — Lubricant Data**


| MANUFACTURER  | LUBRICANT                |
|---------------|--------------------------|
| <b>Mobil</b>  | Mobilplex EP No. 2       |
| <b>Sunoco</b> | Prestige 42              |
| <b>Texaco</b> | Multifak 2               |
| <b>Texaco</b> | Regal AFB-2 <sup>a</sup> |

NOTE(S):

a. Preferred lubricant, contains rust and oxidation inhibitors.

### Centering Fan Wheel


If fan and fan shaft assembly are not properly centered, blades may scrape against the blower side scroll plate or may create an objectionable whistling noise. It may be necessary to adjust individual fan wheels or move entire fan shaft. See the Fan Shaft Position Adjustment and Individual Fan Wheel Adjustment sections that follow.

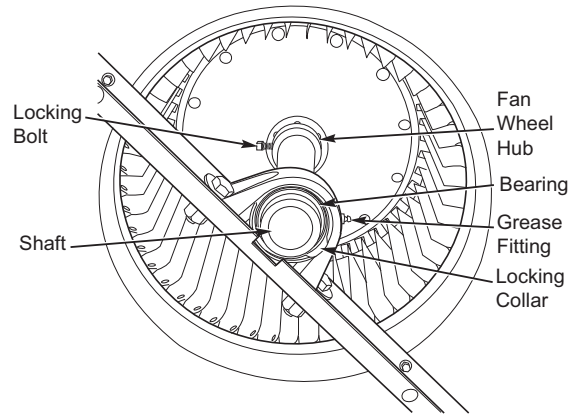

**Fig. 32 — Fan Shaft, Bearings, and Fan Wheel (Typical)**

### Fan Shaft Position Adjustment

Loosen setscrew or locking collar of each fan shaft bearing. Slide shaft into correct position and replace locking collar. See Fig. 33. To replace locking collar, push collar up against inner face of bearing. Turn collar in direction of fan rotation until tight, and tighten setscrew. Tightening locking collar in direction of fan rotation results in further tightening of collar should setscrew work itself loose.

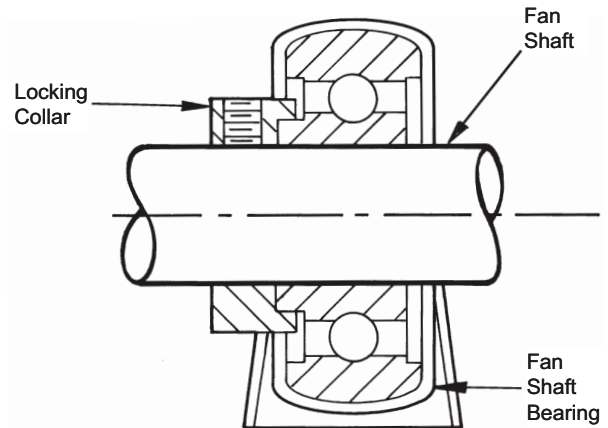

**Fig. 33 — Fan Shaft Bearing**


### Individual Fan Wheel Adjustment

Loosen the 2 locking bolts holding the fan wheel hub to shaft. See Fig. 32. Position fan wheel in center of the fan housing and tighten locking bolts. Clearance between wheel and housing should be the same on both sides.

### Fan Belts

Motor mounting plate and motor support angles are slotted to permit both vertical and horizontal adjustment. Adjust belt(s) for correct deflection by loosening motor plate mounting bolts, moving motor/plate assembly forward or back, and re-tightening bolts. Press down on belt with one finger midway between fan and motor pulleys to check deflection. The correct deflection is 1/8 in. (3.2 mm). See Fig. 34.


If complete belt replacement is required during servicing, loosen the motor plate mounting bolts (see Fig. 34), move motor/plate assembly towards fan pulley, and pull belt(s) off pulleys. Reverse the procedure with new bolts and readjust deflection.

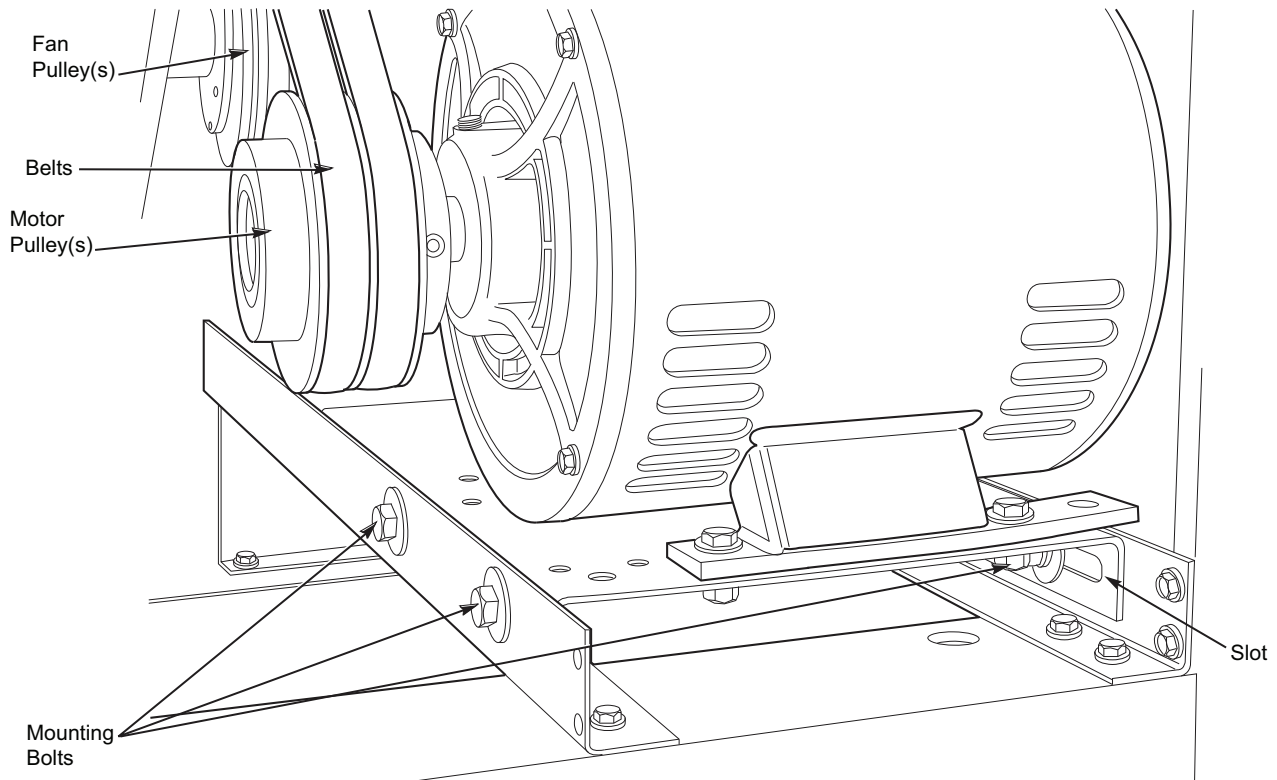

**Fig. 34 — Fan Motor Mounting**

## Fan Rotation

Correct fan rotation with respect to fan outlet is shown in Fig. 35.

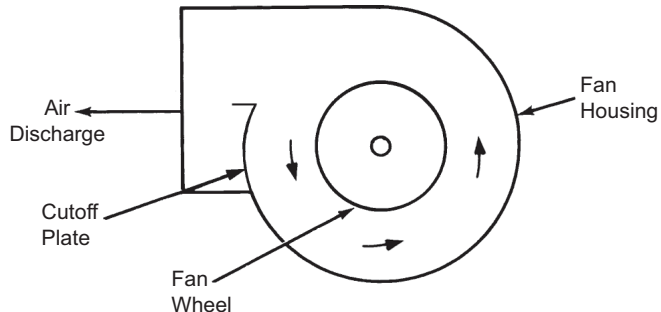


**Fig. 35 — Fan Rotation**

To reverse the direction of rotation of a 3-phase fan motor, reverse any 2 of the power leads. Refer to the connection diagram on the inside of motor terminal box cover for proper reversing procedure of a single-phase motor.

## Fan Pulley Alignment

Align as follows:

1. Loosen setscrews on pulleys.
2. Align pulleys visually and tighten setscrews on fan pulley to lock it in place.
3. Use the methods shown in Fig. 36 to check proper pulley alignment.
4. If pulleys are not in correct alignment, loosen the motor hold-down bolts and slide the motor axially until the pulleys are aligned.
5. Tighten motor hold-down bolts.

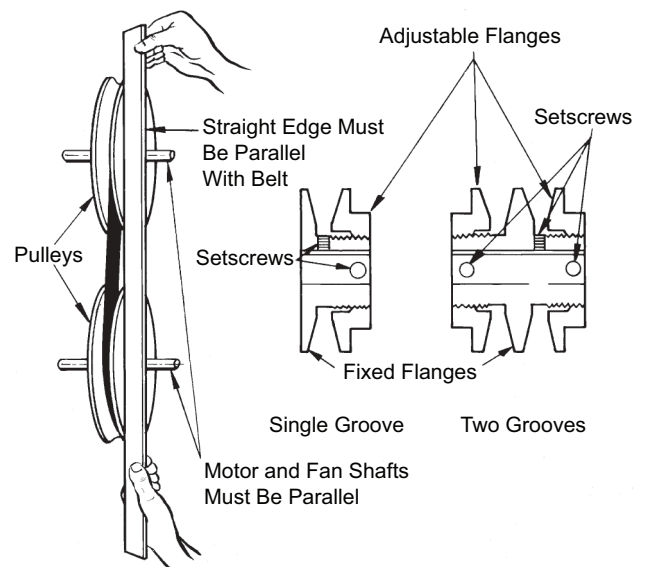

**Fig. 36 — Fan Pulley Adjustments**

## Pulley and Drive Adjustment

To obtain desired fan speed, refer to the fan motor tables (see Tables 14-17), drive data tables (see Tables 18-23 on pages 37 to 39), and performance data tables (see Tables 24-31 on pages 40 to 43). Adjust fan motor pulley as follows:

1. Remove belt from fan motor pulley after loosening motor from motor base.
2. Loosen setscrew in moveable flange of pulley. Screw moveable flange toward fixed flange to increase the fan speed and away from fixed flange to reduce speed. Before tightening setscrew, make certain that setscrew is over nearest flat surface of pulley hub. See Fig. 36.

### CAUTION

#### UNIT OPERATION HAZARD

Failure to follow this caution could cause equipment damage. Increasing fan speed produces a greater load on motor. Do not exceed rated capacity of motor.

**Table 14 — Fan Motor Data, Standard Motor — English**

| UNIT                             | 40RUA*25<br>40RUQ*25<br>40RUS*25 | 40RUA*28<br>40RUS*28 | 40RUA*30<br>40RUS*30 |
|----------------------------------|----------------------------------|----------------------|----------------------|
| <b>208/230-3-60 and 460-3-60</b> |                                  |                      |                      |
| Speed (rpm)                      | 1755                             | 1760                 | 1755                 |
| Hp                               | 5.0                              | 7.5                  | 10.0                 |
| Frame (NEMA)                     | 184T                             | S213T                | S215T                |
| Shaft Dia (in.)                  | 1-1/8                            | 1-3/8                | 1-3/8                |
| <b>575-3-60</b>                  |                                  |                      |                      |
| Speed (rpm)                      | 1755                             | 1750                 | 1755                 |
| Hp                               | 5.0                              | 7.5                  | 10.0                 |
| Frame (NEMA)                     | 184T                             | S213T                | S215T                |
| Shaft Dia (in.)                  | 1-1/8                            | 1-3/8                | 1-3/8                |

**Table 15 — Fan Motor Data, Alternate Motor — English**

| UNIT                             | 40RUA*25<br>40RUQ*25<br>40RUS*25 | 40RUA*28<br>40RUS*28 | 40RUA*30<br>40RUS*30 |
|----------------------------------|----------------------------------|----------------------|----------------------|
| <b>208/230-3-60 and 460-3-60</b> |                                  |                      |                      |
| Speed (rpm)                      | 1760                             | 1755                 | 1755                 |
| Hp                               | 7.5                              | 10.0                 | 10.0                 |
| Frame (NEMA)                     | S213T                            | S215T                | S215T                |
| Shaft Dia (in.)                  | 1-3/8                            | 1-3/8                | 1-3/8                |
| <b>575-3-60</b>                  |                                  |                      |                      |
| Speed (rpm)                      | 1750                             | 1755                 | 1755                 |
| Hp                               | 7.5                              | 10.0                 | 10.0                 |
| Frame (NEMA)                     | S213T                            | S215T                | S215T                |
| Shaft Dia (in.)                  | 1-3/8                            | 1-3/8                | 1-3/8                |

**Table 16 — Fan Motor Data, Standard Motor — SI**

| UNIT                             | 40RUA*25<br>40RUQ*25<br>40RUS*25 | 40RUA*28<br>40RUS*28 | 40RUA*30<br>40RUS*30 |
|----------------------------------|----------------------------------|----------------------|----------------------|
| <b>208/230-3-60 and 460-3-60</b> |                                  |                      |                      |
| Speed (r/s)                      | 29.25                            | 29.33                | 29.25                |
| Shaft kW                         | 3.73                             | 5.59                 | 7.46                 |
| Frame (NEMA)                     | 184T                             | S213T                | S215T                |
| Shaft Dia (mm)                   | 28.6                             | 34.9                 | 34.9                 |
| <b>575-3-60</b>                  |                                  |                      |                      |
| Speed (r/s)                      | 29.25                            | 29.17                | 29.25                |
| Shaft kW                         | 3.73                             | 5.69                 | 7.46                 |
| Frame (NEMA)                     | 184T                             | S213T                | S215T                |
| Shaft Dia (mm)                   | 28.6                             | 34.9                 | 34.9                 |

**Table 17 — Fan Motor Data, Alternate Motor — SI**

| UNIT                             | 40RUA*25<br>40RUQ*25<br>40RUS*25 | 40RUA*28<br>40RUS*28 | 40RUA*30<br>40RUS*30 |
|----------------------------------|----------------------------------|----------------------|----------------------|
| <b>208/230-3-60 and 460-3-60</b> |                                  |                      |                      |
| Speed (r/s)                      | 29.33                            | 29.25                | 29.25                |
| Shaft kW                         | 5.59                             | 7.46                 | 7.46                 |
| Frame (NEMA)                     | S213T                            | S215T                | S215T                |
| Shaft Dia (mm)                   | 34.9                             | 34.9                 | 34.9                 |
| <b>575-3-60</b>                  |                                  |                      |                      |
| Speed (r/s)                      | 29.17                            | 29.25                | 29.25                |
| Shaft kW                         | 5.59                             | 7.46                 | 7.46                 |
| Frame (NEMA)                     | S213T                            | S215T                | S215T                |
| Shaft Dia (mm)                   | 34.9                             | 34.9                 | 34.9                 |

#### LEGEND

**NEMA** — National Electrical Manufacturers Association

**Table 18 — Standard Drive Data, 60 Hz — English**

| UNIT                                                | 40RUA*25<br>40RUQ*25<br>40RUS*25 | 40RUA*28<br>40RUS*28 | 40RUA*30<br>40RUS*30 |
|-----------------------------------------------------|----------------------------------|----------------------|----------------------|
| <b>MOTOR DRIVE</b>                                  |                                  |                      |                      |
| Motor Pulley Pitch Diameter (in.)                   | 3.7-4.7                          | 4.3-5.3              | 4.3-5.3              |
| Pulley Factory Setting Full Turns Open              | 3.0                              | 3.0                  | 3.0                  |
| <b>FAN DRIVE</b>                                    |                                  |                      |                      |
| Pulley Pitch Dia (in.)                              | 9.4                              | 11.0                 | 11.0                 |
| Pulley Bore (in.)                                   | 1-1/16                           | 1-15/16              | 1-15/16              |
| Belt No. — Section                                  | 1 — B                            | 2 — B <sup>a</sup>   | 2 — B <sup>a</sup>   |
| Belt Pitch (in.)                                    | 41.8                             | (2) 42.8<br>(2) 43.8 | (2) 42.8<br>(2) 43.8 |
| <b>FAN SPEEDS (rpm)</b>                             |                                  |                      |                      |
| Factory Setting                                     | 771                              | 752                  | 752                  |
| Range                                               | 679-863                          | 682-841              | 674-831              |
| Maximum Allowable Speed (rpm)                       | 1200                             | 1100                 | 1100                 |
| Change per 1/2 Turn of Moveable Motor Pulley Flange | 15.3                             | 13.1                 | 13.1                 |
| Maximum Full Turn From Closed Position              | 6                                | 6                    | 6                    |
| Shafts Center Distance (in.)                        | 9.12-10.99                       | 6.67-9.43            | 6.67-9.43            |

NOTE(S):

- a. Four belts shipped with unit. Use correct set of 2 belts sized according to the pulley setting.

**Table 19 — Medium-Static Drive Data, 60 Hz — English**

| UNIT                                                | 40RUA*25<br>40RUQ*25<br>40RUS*25 | 40RUA*28<br>40RUS*28 | 40RUA*30<br>40RUS*30 |
|-----------------------------------------------------|----------------------------------|----------------------|----------------------|
| <b>MOTOR DRIVE</b>                                  |                                  |                      |                      |
| Motor Pulley Pitch Diameter (in.)                   | 4.3-5.3                          | 4.3-5.3              | 4.3-5.3              |
| Pulley Factory Setting Full Turns Open              | 3.0                              | 3.0                  | 3.0                  |
| <b>FAN DRIVE</b>                                    |                                  |                      |                      |
| Pulley Pitch Dia (in.)                              | 9.4                              | 9.4                  | 9.4                  |
| Pulley Bore (in.)                                   | 1-1/16                           | 1-15/16              | 1-15/16              |
| Belt No. — Section                                  | 1 — B                            | 2 — B <sup>a</sup>   | 2 — B <sup>a</sup>   |
| Belt Pitch (in.)                                    | 41.8                             | (2) 38.8<br>(2) 39.8 | (2) 38.8<br>(2) 39.8 |
| <b>FAN SPEEDS (rpm)</b>                             |                                  |                      |                      |
| Factory Setting                                     | 881                              | 881                  | 881                  |
| Range                                               | 798-984                          | 798-984              | 798-984              |
| Maximum Allowable Speed (rpm)                       | 1200                             | 1100                 | 1100                 |
| Change per 1/2 Turn of Moveable Motor Pulley Flange | 15.3                             | 15.3                 | 15.3                 |
| Maximum Full Turn From Closed Position              | 6                                | 6                    | 6                    |
| Shafts Center Distance (in.)                        | 9.16-10.99                       | 6.67-9.43            | 6.67-9.43            |

NOTE(S):

- a. Four belts shipped with unit. Use correct set of 2 belts sized according to the pulley setting.

**Table 20 — High-Static Drive Data, 60 Hz — English**

| UNIT                                                | 40RUA*25<br>40RUQ*25<br>40RUS*25 | 40RUA*28<br>40RUS*28 | 40RUA*30<br>40RUS*30 |
|-----------------------------------------------------|----------------------------------|----------------------|----------------------|
| <b>MOTOR DRIVE</b>                                  |                                  |                      |                      |
| Motor Pulley Pitch Diameter (in.)                   | 4.3-5.3                          | 4.3-5.3              | 4.3-5.3              |
| Pulley Factory Setting<br>Full Turns Open           | 3.0                              | 3.0                  | 3.0                  |
| <b>FAN DRIVE</b>                                    |                                  |                      |                      |
| Pulley Pitch Dia (in.)                              | 7.4                              | 8.6                  | 8.6                  |
| Pulley Bore (in.)                                   | 1-1/16                           | 1-15/16              | 1-15/16              |
| Belt No. — Section                                  | 2 — B                            | 2 — B                | 2 — B                |
| Belt Pitch (in.)                                    | 36.8                             | 37.8                 | 37.8                 |
| <b>FAN SPEEDS (rpm)</b>                             |                                  |                      |                      |
| Factory Setting                                     | 1118                             | 1024                 | 1024                 |
| Range                                               | 1014-1200 <sup>a</sup>           | 873-1075             | 873-1075             |
| Maximum Allowable Speed (rpm)                       | 1200                             | 1100                 | 1100                 |
| Change Per 1/2 Turn of Moveable Motor Pulley Flange | 19.4                             | 16.7                 | 16.7                 |
| Maximum Full Turn From Closed Position              | 6                                | 6                    | 6                    |
| Shafts Center Distance (in.)                        | 8.16-10.02                       | 6.67-9.43            | 6.67- 9.43           |

NOTE(S):

a. It is possible to adjust drive so that fan speed exceeds maximum allowable. DO NOT exceed 1200 rpm.

**Table 21 — Standard Drive Data, 60 Hz — SI**

| UNIT                                                | 40RUA*25<br>40RUQ*25<br>40RUS*25 | 40RUA*28<br>40RUS*28 | 40RUA*30<br>40RUS*30 |
|-----------------------------------------------------|----------------------------------|----------------------|----------------------|
| <b>MOTOR DRIVE</b>                                  |                                  |                      |                      |
| Motor Pulley Pitch Diameter (mm)                    | 94.0-119.4                       | 109.2-134.6          | 109.2-134.6          |
| Pulley Factory Setting Full Turns Open              | 3.0                              | 3.0                  | 3.0                  |
| <b>FAN DRIVE</b>                                    |                                  |                      |                      |
| Pulley Pitch Dia (mm)                               | 239                              | 279                  | 279                  |
| Pulley Bore (mm)                                    | 36.5                             | 49.2                 | 49.2                 |
| Belt No. — Section                                  | 2 — B                            | 2 — B <sup>a</sup>   | 2 — B <sup>a</sup>   |
| Belt Pitch (mm)                                     | 1062                             | (2) 1987<br>(2) 1113 | (2) 1987<br>(2) 1113 |
| <b>FAN SPEEDS (r/s)</b>                             |                                  |                      |                      |
| Factory Setting                                     | 12.9                             | 12.5                 | 12.5                 |
| Range                                               | 11.3-14.4                        | 11.4-14.0            | 11.2-13.9            |
| Maximum Allowable Speed (r/s)                       | 20.0                             | 18.3                 | 18.3                 |
| Change Per 1/2 Turn of Moveable Motor Pulley Flange | 0.255                            | 0.218                | 0.218                |
| Maximum Full Turn From Closed Position              | 6                                | 6                    | 6                    |
| Shafts Center Distance (mm)                         | 232-279                          | 169-240              | 169-240              |

NOTE(S):

a. Four belts shipped with unit. Use correct set of 2 belts sized according to the pulley setting.

**Table 22 — Medium-Static Drive Data, 60 Hz — SI**

| UNIT                                                | 40RUA*25<br>40RUQ*25<br>40RUS*25 | 40RUA*28<br>40RUS*28 | 40RUA*30<br>40RUS*30 |
|-----------------------------------------------------|----------------------------------|----------------------|----------------------|
| <b>MOTOR DRIVE</b>                                  |                                  |                      |                      |
| Motor Pulley Pitch Diameter (mm)                    | 109.2-134.6                      | 109.2-134.6          | 109.2-134.6          |
| Pulley Factory Setting Full Turns Open              | 3.0                              | 3.0                  | 3.0                  |
| <b>FAN DRIVE</b>                                    |                                  |                      |                      |
| Pulley Pitch Dia (mm)                               | 239                              | 239                  | 239                  |
| Pulley Bore (mm)                                    | 36.5                             | 49.2                 | 49.2                 |
| Belt No. — Section                                  | 1 — B                            | 2 — B <sup>a</sup>   | 2 — B <sup>a</sup>   |
| Belt Pitch (mm)                                     | 1062                             | (2) 986<br>(2) 1011  | (2) 986<br>(2) 1011  |
| <b>FAN SPEEDS (r/s)</b>                             |                                  |                      |                      |
| Factory Setting                                     | 14.7                             | 14.7                 | 14.7                 |
| Range                                               | 13.3-16.4                        | 13.3-16.4            | 11.2-13.9            |
| Maximum Allowable Speed (r/s)                       | 20.0                             | 18.3                 | 18.3                 |
| Change Per 1/2 Turn of Moveable Motor Pulley Flange | 0.255                            | 0.255                | 0.255                |
| Maximum Full Turn From Closed Position              | 6                                | 6                    | 6                    |
| Shafts Center Distance (mm)                         | 232-279                          | 169-240              | 169-240              |

NOTE(S):

- a. Four belts shipped with unit. Use correct set of 2 belts sized according to the pulley setting.

**Table 23 — High-Static Drive Data, 60 Hz — SI**

| UNIT                                                | 40RUA*25<br>40RUQ*25<br>40RUS*25 | 40RUA*28<br>40RUS*28 | 40RUA*30<br>40RUS*30 |
|-----------------------------------------------------|----------------------------------|----------------------|----------------------|
| <b>MOTOR DRIVE</b>                                  |                                  |                      |                      |
| Motor Pulley Pitch Diameter (mm)                    | 109.2-134.6                      | 109.2-134.6          | 109.2-134.6          |
| Pulley Factory Setting Full Turns Open              | 3.0                              | 3.0                  | 3.0                  |
| <b>FAN DRIVE</b>                                    |                                  |                      |                      |
| Pulley Pitch Dia (mm)                               | 188                              | 203                  | 203                  |
| Pulley Bore (mm)                                    | 36.5                             | 49.2                 | 49.2                 |
| Belt No. — Section                                  | 2 — B                            | 2 — B                | 2 — B                |
| Belt Pitch (mm)                                     | 935                              | 935                  | 960                  |
| <b>FAN SPEEDS (r/s)</b>                             |                                  |                      |                      |
| Factory Setting                                     | 18.6                             | 17.1                 | 17.1                 |
| Range                                               | 16.9-20.0 <sup>a</sup>           | 14.6-17.9            | 14.6-17.9            |
| Maximum Allowable Speed (r/s)                       | 20.0                             | 18.3                 | 18.3                 |
| Change Per 1/2 Turn of Moveable Motor Pulley Flange | 0.323                            | 0.278                | 0.278                |
| Maximum Full Turn From Closed Position              | 6                                | 6                    | 6                    |
| Shafts Center Distance (mm)                         | 207-255                          | 169-240              | 169-240              |

NOTE(S):

- a. It is possible to adjust drive so that fan speed exceeds maximum allowable. DO NOT exceed 20 r/s.

**Table 24 — 40RU Standard Fan Performance Data — 0.0-2.4 in. wg External Static Pressure — English**

| UNIT <sup>a</sup>                             | AIRFLOW<br>(cfm) <sup>b</sup> | EXTERNAL STATIC PRESSURE (in. wg) |      |     |      |     |      |     |       |      |       |      |       |      |       |
|-----------------------------------------------|-------------------------------|-----------------------------------|------|-----|------|-----|------|-----|-------|------|-------|------|-------|------|-------|
|                                               |                               | 0.0                               |      | 0.2 |      | 0.4 |      | 0.6 |       | 0.8  |       | 1.0  |       | 1.2  |       |
|                                               |                               | rpm                               | bhp  | rpm | bhp  | rpm | bhp  | rpm | bhp   | rpm  | bhp   | rpm  | bhp   | rpm  | bhp   |
| 40RUA*25<br>40RUQ*25 <sup>c</sup><br>40RUS*25 | 6,000                         | 532                               | 1.25 | 569 | 1.39 | 639 | 1.69 | 711 | 2.06  | 781  | 2.48  | 846  | 2.93  | 905  | 3.60  |
|                                               | 7,000                         | 608                               | 1.93 | 641 | 2.09 | 702 | 2.42 | 763 | 2.08  | 824  | 3.23  | 885  | 3.71  | 943  | 4.23  |
|                                               | 8,000                         | 686                               | 2.83 | 716 | 3.01 | 770 | 3.38 | 823 | 3.77  | 876  | 4.21  | 930  | 4.70  | 983  | 5.24  |
|                                               | 9,000                         | 764                               | 3.97 | 791 | 4.18 | 841 | 4.59 | 888 | 5.02  | 935  | 5.47  | 982  | 5.96  | 1030 | 6.51  |
|                                               | 10,000                        | 843                               | 5.38 | 868 | 5.62 | 914 | 6.09 | 957 | 6.55  | 1000 | 7.02  | 1042 | 7.53  | 1084 | 8.08  |
| 40RUA*28<br>40RUS*28                          | 7,500                         | 456                               | 1.29 | 490 | 1.47 | 556 | 1.85 | 621 | 2.25  | 678  | 2.64  | 729  | 3.06  | 778  | 3.60  |
|                                               | 8,750                         | 521                               | 1.98 | 551 | 2.18 | 608 | 2.61 | 664 | 3.07  | 720  | 3.53  | 770  | 3.99  | 816  | 4.45  |
|                                               | 10,000                        | 587                               | 2.88 | 614 | 3.11 | 664 | 3.59 | 714 | 4.09  | 763  | 4.62  | 812  | 5.15  | 857  | 5.68  |
|                                               | 11,250                        | 653                               | 4.03 | 678 | 4.29 | 724 | 4.82 | 768 | 5.37  | 812  | 5.95  | 856  | 6.54  | 899  | 7.14  |
|                                               | 12,500                        | 720                               | 5.46 | 743 | 5.75 | 785 | 6.33 | 825 | 6.93  | 865  | 7.55  | 904  | 8.20  | 944  | 8.86  |
|                                               | 15,000                        | 829                               | 8.84 | 850 | 9.19 | 888 | 9.88 | 924 | 10.57 | 958  | 11.27 | 991  | 11.99 | 1024 | 12.73 |
| 40RUA*30<br>40RUS*30                          | 9,000                         | 521                               | 1.99 | 550 | 2.25 | 616 | 2.77 | 676 | 3.23  | 731  | 3.72  | 782  | 4.20  | 829  | 4.70  |
|                                               | 10,500                        | 596                               | 3.16 | 623 | 3.40 | 672 | 3.89 | 720 | 4.40  | 767  | 4.94  | 814  | 5.50  | 859  | 6.05  |
|                                               | 12,000                        | 673                               | 4.63 | 698 | 4.90 | 743 | 5.45 | 785 | 6.02  | 826  | 6.62  | 867  | 7.23  | 908  | 7.87  |
|                                               | 13,500                        | 751                               | 6.51 | 773 | 6.82 | 815 | 7.44 | 853 | 8.06  | 890  | 8.71  | 927  | 9.38  | 963  | 10.07 |
|                                               | 15,000                        | 829                               | 8.84 | 850 | 9.19 | 888 | 9.88 | 924 | 10.57 | 958  | 11.27 | 991  | 11.99 | 1024 | 12.73 |

| UNIT <sup>a</sup>                             | AIRFLOW<br>(cfm) <sup>b</sup> | EXTERNAL STATIC PRESSURE (in. wg) |       |      |       |      |       |      |       |      |       |      |      |
|-----------------------------------------------|-------------------------------|-----------------------------------|-------|------|-------|------|-------|------|-------|------|-------|------|------|
|                                               |                               | 1.4                               |       | 1.6  |       | 1.8  |       | 2.0  |       | 2.2  |       | 2.4  |      |
|                                               |                               | rpm                               | bhp   | rpm  | bhp   | rpm  | bhp   | rpm  | bhp   | rpm  | bhp   | rpm  | bhp  |
| 40RUA*25<br>40RUQ*25 <sup>c</sup><br>40RUS*25 | 6,000                         | 954                               | 3.83  | 1005 | 4.27  | 1052 | 4.72  | 1098 | 5.22  | 1142 | 5.67  | —    | —    |
|                                               | 7,000                         | 990                               | 4.74  | 1040 | 5.24  | 1090 | 5.80  | 1135 | 6.30  | 1176 | 6.84  | —    | —    |
|                                               | 8,000                         | 1028                              | 5.79  | 1078 | 6.38  | 1130 | 7.00  | 1173 | 7.60  | —    | —     | —    | —    |
|                                               | 9,000                         | 1073                              | 7.11  | 1120 | 7.72  | 1169 | 8.37  | —    | —     | —    | —     | —    | —    |
|                                               | 10,000                        | 1126                              | 8.75  | 1166 | 9.37  | —    | —     | —    | —     | —    | —     | —    | —    |
| 40RUA*28<br>40RUS*28                          | 7,500                         | 831                               | 4.41  | 870  | 5.10  | 913  | 5.90  | 950  | 6.88  | 985  | 7.70  | —    | —    |
|                                               | 8,750                         | 859                               | 4.97  | 901  | 5.59  | 944  | 6.42  | 980  | 7.20  | 1020 | 8.10  | —    | —    |
|                                               | 10,000                        | 900                               | 6.20  | 939  | 6.74  | 976  | 7.33  | 1013 | 8.00  | 1050 | 8.82  | —    | —    |
|                                               | 11,250                        | 941                               | 7.73  | 980  | 8.32  | 1017 | 8.90  | 1052 | 9.51  | 1088 | 10.16 | —    | —    |
|                                               | 12,500                        | 984                               | 9.53  | 1022 | 10.19 | 1058 | 10.84 | 1093 | 11.49 | —    | —     | —    | —    |
|                                               | 15,000                        | 1057                              | 13.49 | 1090 | 14.28 | —    | —     | —    | —     | —    | —     | —    | —    |
| 40RUA*30<br>40RUS*30                          | 9,000                         | 866                               | 5.20  | 899  | 5.85  | 950  | 6.65  | 989  | 7.38  | 1029 | 8.32  | 1077 | 9.74 |
|                                               | 10,500                        | 902                               | 6.60  | 942  | 7.14  | 980  | 7.70  | 1016 | 8.31  | 1051 | 8.99  | 1085 | 9.77 |
|                                               | 12,000                        | 949                               | 8.50  | 988  | 9.14  | 1026 | 9.76  | 1062 | 10.38 | 1095 | 11.01 | —    | —    |
|                                               | 13,500                        | 1000                              | 10.78 | 1036 | 11.49 | 1073 | 12.21 | —    | —     | —    | —     | —    | —    |
|                                               | 15,000                        | 1057                              | 13.49 | 1090 | 14.28 | —    | —     | —    | —     | —    | —     | —    | —    |

NOTE(S):

a. Refer to fan motor and drive tables for additional data.

b. Fan performance is based on deductions for wet coil, clean 2-in. filters, and unit casing. See table below for factory-supplied filter pressure drop.

c. Maximum allowable fan speed for size 25 units is 1200 rpm. Maximum allowable fan speed for size 28 and 30 units is 1100 rpm.

**LEGEND**

**bhp** — Brake Horsepower Input to Fan

**Table 25 — Factory-Supplied Pressure Drop — English**

| UNIT                             | AIRFLOW (cfm) | PRESSURE DROP<br>(in. wg) |
|----------------------------------|---------------|---------------------------|
| 40RUA*25<br>40RUQ*25<br>40RUS*25 | 6,000         | 0.12                      |
|                                  | 8,000         | 0.19                      |
|                                  | 10,000        | 0.26                      |
| 40RUA*28<br>40RUS*28             | 7,500         | 0.15                      |
|                                  | 10,000        | 0.22                      |
|                                  | 12,500        | 0.30                      |
| 40RUA*30<br>40RUS*30             | 9,000         | 0.19                      |
|                                  | 12,000        | 0.29                      |
|                                  | 15,000        | 0.40                      |

**Table 26 — 40RU Standard Fan Performance Data — 0-600 kPa External Static Pressure — SI**

| UNIT <sup>a</sup>                             | AIRFLOW<br>(L/s) <sup>b</sup> | EXTERNAL STATIC PRESSURE (kPa) |      |       |      |       |      |       |      |       |      |       |      |       |      |
|-----------------------------------------------|-------------------------------|--------------------------------|------|-------|------|-------|------|-------|------|-------|------|-------|------|-------|------|
|                                               |                               | 0                              |      | 50    |      | 100   |      | 150   |      | 200   |      | 250   |      | 300   |      |
|                                               |                               | r/s                            | kW   | r/s   | kW   | r/s   | kW   | r/s   | kW   | r/s   | kW   | r/s   | kW   | r/s   | kW   |
| 40RUA*25<br>40RUQ*25 <sup>c</sup><br>40RUS*25 | 2830                          | 8.86                           | 0.94 | 9.48  | 1.04 | 10.65 | 1.26 | 11.84 | 1.53 | 13.01 | 1.85 | 14.10 | 2.19 | 15.08 | 2.53 |
|                                               | 3300                          | 10.14                          | 1.44 | 10.69 | 1.56 | 11.70 | 1.81 | 12.71 | 2.08 | 13.73 | 2.41 | 14.74 | 2.77 | 15.71 | 3.15 |
|                                               | 3780                          | 11.43                          | 2.11 | 11.93 | 2.25 | 12.84 | 2.52 | 13.71 | 2.81 | 14.60 | 3.14 | 15.49 | 3.51 | 16.39 | 3.91 |
|                                               | 4250                          | 12.74                          | 2.96 | 13.19 | 3.12 | 14.02 | 3.43 | 14.81 | 3.74 | 15.59 | 4.08 | 16.37 | 4.45 | 17.17 | 4.85 |
|                                               | 4720                          | 14.05                          | 4.01 | 14.47 | 4.19 | 15.23 | 4.54 | 15.96 | 4.88 | 16.66 | 5.24 | 17.36 | 5.62 | 18.07 | 6.03 |
| 40RUA*28<br>40RUS*28                          | 3540                          | 7.60                           | 0.96 | 8.16  | 1.09 | 9.27  | 1.38 | 10.34 | 1.68 | 11.30 | 1.97 | 12.15 | 2.28 | 12.97 | 2.68 |
|                                               | 4130                          | 8.68                           | 1.47 | 9.18  | 1.62 | 10.13 | 1.94 | 11.07 | 2.29 | 11.99 | 2.63 | 12.84 | 2.97 | 13.60 | 3.32 |
|                                               | 4720                          | 9.78                           | 2.15 | 10.23 | 2.32 | 11.07 | 2.67 | 11.89 | 3.05 | 12.72 | 3.45 | 13.53 | 3.84 | 14.29 | 4.23 |
|                                               | 5310                          | 10.89                          | 3.01 | 11.30 | 3.20 | 12.06 | 3.59 | 12.80 | 4.00 | 13.53 | 4.43 | 14.27 | 4.88 | 14.99 | 5.33 |
|                                               | 5900                          | 12.00                          | 4.07 | 12.38 | 4.29 | 13.09 | 4.72 | 13.75 | 5.17 | 14.41 | 5.63 | 15.07 | 6.11 | 15.74 | 6.61 |
| 40RUA*30<br>40RUS*30                          | 4250                          | 8.68                           | 1.48 | 9.17  | 1.68 | 10.27 | 2.07 | 11.27 | 2.41 | 12.19 | 2.77 | 13.03 | 3.13 | 13.81 | 3.50 |
|                                               | 4960                          | 9.93                           | 2.35 | 10.38 | 2.53 | 11.21 | 2.90 | 11.99 | 3.28 | 12.78 | 3.68 | 13.56 | 4.10 | 14.32 | 4.51 |
|                                               | 5660                          | 11.21                          | 3.45 | 11.63 | 3.66 | 12.38 | 4.07 | 13.08 | 4.49 | 13.76 | 4.93 | 14.45 | 5.39 | 15.14 | 5.87 |
|                                               | 6370                          | 12.51                          | 4.85 | 12.89 | 5.08 | 13.58 | 5.54 | 14.22 | 6.01 | 14.83 | 6.49 | 15.44 | 6.99 | 16.05 | 7.51 |
|                                               | 7080                          | 13.82                          | 6.59 | 14.17 | 6.85 | 14.81 | 7.36 | 15.40 | 7.88 | 15.97 | 8.40 | 16.52 | 8.94 | 17.06 | 9.49 |

| UNIT <sup>a</sup>                             | AIRFLOW<br>(L/s) <sup>b</sup> | EXTERNAL STATIC PRESSURE (kPa) |       |       |       |       |      |       |      |       |      |       |      |
|-----------------------------------------------|-------------------------------|--------------------------------|-------|-------|-------|-------|------|-------|------|-------|------|-------|------|
|                                               |                               | 350                            |       | 400   |       | 450   |      | 500   |      | 550   |      | 600   |      |
|                                               |                               | r/s                            | kW    | r/s   | kW    | r/s   | kW   | r/s   | kW   | r/s   | kW   | r/s   | kW   |
| 40RUA*25<br>40RUQ*25 <sup>c</sup><br>40RUS*25 | 2830                          | 15.90                          | 2.86  | 16.75 | 3.18  | 17.53 | 3.52 | 18.30 | 3.89 | 19.03 | 4.23 | —     | —    |
|                                               | 3300                          | 16.50                          | 3.53  | 17.33 | 3.91  | 18.17 | 4.32 | 18.92 | 4.70 | 19.60 | 5.10 | —     | —    |
|                                               | 3780                          | 17.13                          | 4.32  | 17.97 | 4.76  | 18.83 | 5.22 | 19.55 | 5.67 | —     | —    | —     | —    |
|                                               | 4250                          | 17.88                          | 5.30  | 18.67 | 5.76  | 19.48 | 6.24 | —     | —    | —     | —    | —     | —    |
|                                               | 4720                          | 18.77                          | 6.52  | 19.43 | 6.99  | —     | —    | —     | —    | —     | —    | —     | —    |
| 40RUA*28<br>40RUS*28                          | 3540                          | 13.85                          | 3.29  | 14.50 | 3.80  | 15.22 | 4.40 | 15.83 | 5.13 | 16.42 | 5.74 | —     | —    |
|                                               | 4130                          | 14.31                          | 3.71  | 15.01 | 4.17  | 15.74 | 4.79 | 16.33 | 5.37 | 17.00 | 6.04 | —     | —    |
|                                               | 4720                          | 14.99                          | 4.62  | 15.65 | 5.02  | 16.27 | 5.46 | 16.88 | 5.97 | 17.50 | 6.57 | —     | —    |
|                                               | 5310                          | 15.68                          | 5.77  | 16.34 | 6.20  | 16.95 | 6.64 | 17.53 | 7.09 | 18.09 | 7.58 | —     | —    |
|                                               | 5900                          | 16.39                          | 7.10  | 17.03 | 7.60  | 17.64 | 8.08 | 18.22 | 8.57 | —     | —    | —     | —    |
| 40RUA*30<br>40RUS*30                          | 4250                          | 14.43                          | 3.88  | 14.98 | 4.36  | 15.84 | 4.96 | 16.48 | 5.50 | 17.16 | 6.21 | 17.96 | 7.26 |
|                                               | 4960                          | 15.04                          | 4.92  | 15.71 | 5.32  | 16.33 | 5.74 | 16.93 | 6.20 | 17.51 | 6.70 | 18.09 | 7.29 |
|                                               | 5660                          | 15.81                          | 6.34  | 16.47 | 6.81  | 17.10 | 7.28 | 17.69 | 7.74 | 18.26 | 8.21 | —     | —    |
|                                               | 6370                          | 16.66                          | 8.04  | 17.27 | 8.57  | 17.88 | 9.10 | —     | —    | —     | —    | —     | —    |
|                                               | 7080                          | 17.61                          | 10.06 | 18.16 | 10.64 | —     | —    | —     | —    | —     | —    | —     | —    |

NOTE(S):

- Refer to fan motor and drive tables for additional data.
- Fan performance is based on deductions for wet coil, clean 51mm filters, and unit casing. See table below for factory-supplied filter pressure drop.
- Maximum allowable fan speed for size 25 units is 20 r/s. Maximum allowable fan speed for size 28 and 30 units is 18.3 r/s.

**Table 27 — Factory-Supplied Pressure Drop — SI**

| UNIT                             | AIRFLOW (L/s) | PRESSURE<br>DROP (Pa) |
|----------------------------------|---------------|-----------------------|
| 40RUA*25<br>40RUQ*25<br>40RUS*25 | 2900          | 32                    |
|                                  | 3800          | 47                    |
|                                  | 4700          | 64                    |
| 40RUA*28<br>40RUS*28             | 3500          | 36                    |
|                                  | 4700          | 55                    |
|                                  | 5900          | 76                    |
| 40RUA*30<br>40RUS*30             | 4250          | 47                    |
|                                  | 5650          | 71                    |
|                                  | 7050          | 98                    |

**Table 28 — 40RU High-Capacity Fan Performance Data — 0.0-2.4 in. wg External Static Pressure — English**

| UNIT <sup>a</sup>                             | AIRFLOW<br>(cfm) <sup>b</sup> | EXTERNAL STATIC PRESSURE (in. wg) |      |     |       |     |       |     |       |      |       |      |       |      |       |
|-----------------------------------------------|-------------------------------|-----------------------------------|------|-----|-------|-----|-------|-----|-------|------|-------|------|-------|------|-------|
|                                               |                               | 0.0                               |      | 0.2 |       | 0.4 |       | 0.6 |       | 0.8  |       | 1.0  |       | 1.2  |       |
|                                               |                               | rpm                               | bhp  | rpm | bhp   | rpm | bhp   | rpm | bhp   | rpm  | bhp   | rpm  | bhp   | rpm  | bhp   |
| 40RUA*25<br>40RUQ*25 <sup>c</sup><br>40RUS*25 | 6,000                         | 542                               | 1.29 | 577 | 1.042 | 646 | 1.72  | 716 | 2.09  | 785  | 2.51  | 849  | 2.95  | 907  | 3.40  |
|                                               | 7,000                         | 620                               | 1.99 | 652 | 2.15  | 711 | 2.48  | 771 | 2.85  | 831  | 3.28  | 890  | 3.76  | 947  | 4.27  |
|                                               | 8,000                         | 700                               | 2.92 | 728 | 3.10  | 781 | 3.46  | 833 | 3.85  | 885  | 4.29  | 938  | 4.78  | 990  | 5.32  |
|                                               | 9,000                         | 781                               | 4.10 | 806 | 4.30  | 854 | 4.71  | 900 | 5.13  | 946  | 5.58  | 993  | 6.08  | 1039 | 6.62  |
| 40RUA*28<br>40RUS*28                          | 10,000                        | 862                               | 5.56 | 885 | 5.79  | 929 | 6.24  | 971 | 6.70  | 1012 | 7.18  | 1054 | 7.69  | 1096 | 8.24  |
|                                               | 7,500                         | 476                               | 1.39 | 510 | 1.58  | 579 | 1.99  | 644 | 2.40  | 701  | 2.81  | 752  | 3.29  | 804  | 3.96  |
|                                               | 8,750                         | 545                               | 2.14 | 574 | 2.35  | 633 | 2.81  | 691 | 3.29  | 747  | 3.77  | 797  | 4.25  | 842  | 4.76  |
|                                               | 10,000                        | 615                               | 3.12 | 641 | 3.36  | 692 | 3.87  | 743 | 4.41  | 794  | 4.96  | 843  | 5.51  | 888  | 6.05  |
|                                               | 11,250                        | 685                               | 4.37 | 709 | 4.64  | 754 | 5.20  | 800 | 5.79  | 845  | 6.40  | 891  | 7.02  | 935  | 7.64  |
|                                               | 12,500                        | 756                               | 5.92 | 778 | 6.22  | 819 | 6.83  | 860 | 7.47  | 901  | 8.14  | 942  | 8.83  | 983  | 9.52  |
| 40RUA*30<br>40RUS*30                          | 9,000                         | 539                               | 2.18 | 569 | 2.39  | 626 | 2.85  | 683 | 3.34  | 739  | 3.83  | 791  | 4.32  | 837  | 4.82  |
|                                               | 10,500                        | 620                               | 3.37 | 646 | 3.62  | 695 | 4.13  | 744 | 4.68  | 793  | 5.25  | 842  | 5.83  | 888  | 6.41  |
|                                               | 12,000                        | 701                               | 4.94 | 724 | 5.22  | 769 | 5.80  | 811 | 6.40  | 854  | 7.04  | 897  | 7.69  | 940  | 8.36  |
|                                               | 13,500                        | 783                               | 6.95 | 804 | 7.27  | 844 | 7.91  | 883 | 8.57  | 920  | 9.26  | 958  | 9.97  | 996  | 10.71 |
|                                               | 15,000                        | 865                               | 9.45 | 884 | 9.81  | 921 | 10.52 | 956 | 11.24 | 991  | 11.98 | 1025 | 12.75 | 1059 | 13.54 |

| UNIT <sup>a</sup>                             | AIRFLOW<br>(cfm) <sup>b</sup> | EXTERNAL STATIC PRESSURE (in. wg) |       |      |       |      |       |      |       |      |      |     |     |
|-----------------------------------------------|-------------------------------|-----------------------------------|-------|------|-------|------|-------|------|-------|------|------|-----|-----|
|                                               |                               | 1.4                               |       | 1.6  |       | 1.8  |       | 2.0  |       | 2.2  |      | 2.4 |     |
|                                               |                               | rpm                               | bhp   | rpm  | bhp   | rpm  | bhp   | rpm  | bhp   | rpm  | bhp  | rpm | bhp |
| 40RUA*25<br>40RUQ*25 <sup>c</sup><br>40RUS*25 | 6,000                         | 961                               | 3.86  | 1011 | 4.31  | 1058 | 4.77  | 1104 | 5.24  | 1147 | 5.71 | —   | —   |
|                                               | 7,000                         | 1000                              | 4.79  | 1050 | 5.32  | 1097 | 5.85  | 1142 | 6.38  | 1184 | 6.91 | —   | —   |
|                                               | 8,000                         | 1041                              | 5.88  | 1090 | 6.47  | 1137 | 7.07  | 1181 | 7.67  | —    | —    | —   | —   |
|                                               | 9,000                         | 1086                              | 7.21  | 1133 | 7.82  | 1178 | 8.47  | —    | —     | —    | —    | —   | —   |
| 40RUA*28<br>40RUS*28                          | 10,000                        | 1138                              | 8.83  | 1180 | 9.46  | —    | —     | —    | —     | —    | —    | —   | —   |
|                                               | 7,500                         | 874                               | 5.33  | 897  | 5.91  | 940  | 6.80  | 990  | 7.50  | —    | —    | —   | —   |
|                                               | 8,750                         | 886                               | 5.36  | 930  | 6.13  | 982  | 7.32  | 1020 | 8.10  | —    | —    | —   | —   |
|                                               | 10,000                        | 930                               | 6.60  | 969  | 7.20  | 1007 | 7.89  | 1045 | 8.71  | —    | —    | —   | —   |
|                                               | 11,250                        | 976                               | 8.25  | 1014 | 8.86  | 1051 | 9.49  | 1086 | 10.17 | —    | —    | —   | —   |
|                                               | 12,500                        | 1023                              | 10.20 | 1061 | 10.88 | 1097 | 11.56 | —    | —     | —    | —    | —   | —   |
| 40RUA*30<br>40RUS*30                          | 9,000                         | 881                               | 5.37  | 923  | 6.03  | 967  | 6.89  | 1020 | 8.25  | —    | —    | —   | —   |
|                                               | 10,500                        | 930                               | 6.97  | 970  | 7.55  | 1008 | 8.17  | 1045 | 8.86  | —    | —    | —   | —   |
|                                               | 12,000                        | 981                               | 9.02  | 1021 | 9.67  | 1058 | 10.32 | 1094 | 10.97 | —    | —    | —   | —   |
|                                               | 13,500                        | 1035                              | 11.45 | 1072 | 12.20 | —    | —     | —    | —     | —    | —    | —   | —   |
|                                               | 15,000                        | 1093                              | 14.35 | —    | —     | —    | —     | —    | —     | —    | —    | —   | —   |

NOTE(S):

a. Refer to fan motor and drive tables for additional data.

b. Fan performance is based on deductions for wet coil, clean 2-in. filters, and unit casing. See table below for factory-supplied filter pressure drop.

c. Maximum allowable fan speed for size 25 units is 1200 rpm. Maximum allowable fan speed for size 28 and 30 units is 1100 rpm.

**LEGEND**

**bhp** — Brake Horsepower Input to Fan

**Table 29 — Factory-Supplied Pressure Drop — English**

| UNIT                             | AIRFLOW (cfm) | PRESSURE DROP<br>(in. wg) |
|----------------------------------|---------------|---------------------------|
| 40RUA*25<br>40RUQ*25<br>40RUS*25 | 6,000         | 0.12                      |
|                                  | 8,000         | 0.19                      |
|                                  | 10,000        | 0.26                      |
| 40RUA*28<br>40RUS*28             | 7,500         | 0.15                      |
|                                  | 10,000        | 0.22                      |
|                                  | 12,500        | 0.30                      |
| 40RUA*30<br>40RUS*30             | 9,000         | 0.19                      |
|                                  | 12,000        | 0.29                      |
|                                  | 15,000        | 0.40                      |

**Table 30 — 40RU High-Capacity Fan Performance Data —  
0-600 kPa External Static Pressure — SI**

| UNIT <sup>a</sup>                             | AIRFLOW<br>(L/s) <sup>b</sup> | EXTERNAL STATIC PRESSURE (kPa) |      |       |      |       |      |       |      |       |       |       |      |       |       |
|-----------------------------------------------|-------------------------------|--------------------------------|------|-------|------|-------|------|-------|------|-------|-------|-------|------|-------|-------|
|                                               |                               | 0                              |      | 50    |      | 100   |      | 150   |      | 200   |       | 250   |      | 300   |       |
|                                               |                               | r/s                            | kW   | r/s   | kW   | r/s   | kW   | r/s   | kW   | r/s   | kW    | r/s   | kW   | r/s   | kW    |
| 40RUA*25<br>40RUQ*25 <sup>c</sup><br>40RUS*25 | 2830                          | 9.03                           | 0.96 | 9.62  | 1.06 | 10.77 | 1.29 | 11.94 | 1.56 | 13.08 | 1.087 | 14.15 | 2.20 | 15.12 | 2.54  |
|                                               | 3330                          | 10.34                          | 1.48 | 10.86 | 1.60 | 11.85 | 1.85 | 12.84 | 2.12 | 13.85 | 2.45  | 14.84 | 2.80 | 15.78 | 3.18  |
|                                               | 3780                          | 11.67                          | 2.17 | 12.14 | 2.31 | 13.02 | 2.58 | 13.88 | 2.87 | 14.75 | 3.20  | 15.63 | 3.56 | 16.50 | 3.96  |
|                                               | 4250                          | 13.01                          | 3.05 | 13.44 | 3.21 | 14.23 | 3.51 | 15.00 | 3.82 | 15.77 | 4.16  | 16.54 | 4.53 | 17.32 | 4.94  |
|                                               | 4720                          | 14.36                          | 4.15 | 14.75 | 4.32 | 15.48 | 4.66 | 16.18 | 4.99 | 16.87 | 5.35  | 17.56 | 5.73 | 18.26 | 6.14  |
| 40RUA*28<br>40RUS*28                          | 3540                          | 7.94                           | 1.04 | 8.51  | 1.18 | 9.65  | 1.48 | 10.73 | 1.79 | 11.68 | 2.10  | 12.53 | 2.46 | 13.40 | 2.95  |
|                                               | 4130                          | 9.08                           | 1.59 | 9.57  | 1.75 | 10.55 | 2.10 | 11.52 | 2.46 | 12.45 | 2.81  | 13.28 | 3.17 | 14.04 | 3.55  |
|                                               | 4720                          | 10.24                          | 2.33 | 10.68 | 2.51 | 11.53 | 2.88 | 12.39 | 3.29 | 13.24 | 3.70  | 14.05 | 4.11 | 14.80 | 4.51  |
|                                               | 5310                          | 11.42                          | 3.26 | 11.81 | 3.46 | 12.57 | 3.88 | 13.33 | 4.32 | 14.09 | 4.77  | 14.85 | 5.24 | 15.58 | 5.70  |
|                                               | 5900                          | 12.60                          | 4.42 | 12.96 | 4.64 | 13.65 | 5.09 | 14.33 | 5.57 | 15.01 | 6.07  | 15.40 | 6.58 | 16.38 | 7.10  |
| 40RUA*30<br>40RUS*30                          | 4250                          | 8.99                           | 1.62 | 9.49  | 1.78 | 10.44 | 2.12 | 11.39 | 2.49 | 12.32 | 2.86  | 13.18 | 3.22 | 13.95 | 3.59  |
|                                               | 4960                          | 10.33                          | 2.51 | 10.77 | 2.70 | 11.59 | 3.08 | 12.40 | 3.49 | 13.22 | 3.92  | 14.03 | 4.35 | 14.79 | 4.78  |
|                                               | 5660                          | 11.68                          | 3.68 | 12.07 | 3.90 | 12.81 | 4.33 | 13.52 | 4.77 | 14.23 | 5.25  | 14.95 | 5.74 | 15.66 | 6.23  |
|                                               | 6370                          | 13.04                          | 5.18 | 13.40 | 5.42 | 14.07 | 5.90 | 14.71 | 6.39 | 15.34 | 6.90  | 15.97 | 7.44 | 16.61 | 7.98  |
|                                               | 7080                          | 14.42                          | 7.05 | 14.74 | 7.31 | 15.36 | 7.84 | 15.94 | 8.38 | 16.51 | 8.93  | 17.08 | 9.51 | 17.65 | 10.10 |

| UNIT <sup>a</sup>                             | AIRFLOW<br>(L/s) <sup>b</sup> | EXTERNAL STATIC PRESSURE (kPa) |       |       |      |       |      |       |      |       |      |     |    |
|-----------------------------------------------|-------------------------------|--------------------------------|-------|-------|------|-------|------|-------|------|-------|------|-----|----|
|                                               |                               | 350                            |       | 400   |      | 450   |      | 500   |      | 550   |      | 600 |    |
|                                               |                               | r/s                            | kW    | r/s   | kW   | r/s   | kW   | r/s   | kW   | r/s   | kW   | r/s | kW |
| 40RUA*25<br>40RUQ*25 <sup>c</sup><br>40RUS*25 | 2830                          | 16.01                          | 2.88  | 16.85 | 3.22 | 17.64 | 3.56 | 18.39 | 3.91 | 19.12 | 4.26 | —   | —  |
|                                               | 3300                          | 16.67                          | 3.57  | 17.50 | 3.96 | 18.28 | 4.36 | 19.03 | 4.75 | 19.73 | 5.15 | —   | —  |
|                                               | 3780                          | 17.35                          | 4.39  | 18.17 | 4.82 | 18.95 | 5.27 | 19.68 | 5.72 | —     | —    | —   | —  |
|                                               | 4250                          | 18.11                          | 5.37  | 18.88 | 5.83 | 19.63 | 6.31 | —     | —    | —     | —    | —   | —  |
|                                               | 4720                          | 18.96                          | 6.58  | 19.67 | 7.05 | —     | —    | —     | —    | —     | —    | —   | —  |
| 40RUA*28<br>40RUS*28                          | 3540                          | 14.57                          | 3.97  | 14.95 | 4.41 | 15.67 | 5.07 | 16.50 | 5.59 | —     | —    | —   | —  |
|                                               | 4130                          | 14.76                          | 3.99  | 15.51 | 4.57 | 16.36 | 5.46 | 17.00 | 6.04 | —     | —    | —   | —  |
|                                               | 4720                          | 15.49                          | 4.92  | 16.15 | 5.37 | 16.78 | 5.88 | 17.42 | 6.50 | —     | —    | —   | —  |
|                                               | 5310                          | 16.26                          | 6.15  | 16.91 | 6.61 | 17.51 | 7.08 | 18.10 | 7.58 | —     | —    | —   | —  |
|                                               | 5900                          | 17.04                          | 7.61  | 17.68 | 8.11 | 18.28 | 8.62 | —     | —    | —     | —    | —   | —  |
| 40RUA*30<br>40RUS*30                          | 4250                          | 14.68                          | 4.00  | 15.38 | 4.49 | 16.12 | 5.14 | 17.00 | 6.15 | —     | —    | —   | —  |
|                                               | 4960                          | 15.51                          | 5.20  | 16.17 | 5.63 | 16.80 | 6.09 | 17.41 | 6.61 | —     | —    | —   | —  |
|                                               | 5660                          | 16.35                          | 6.72  | 17.01 | 7.21 | 17.64 | 7.69 | 18.23 | 8.18 | —     | —    | —   | —  |
|                                               | 6370                          | 17.24                          | 8.54  | 17.87 | 9.10 | —     | —    | —     | —    | —     | —    | —   | —  |
|                                               | 7080                          | 18.22                          | 10.70 | —     | —    | —     | —    | —     | —    | —     | —    | —   | —  |

NOTE(S):

- Refer to fan motor and drive tables for additional data.
- Fan performance is based on deductions for wet coil, clean 51 mm filters, and unit casing. See table below for factory-supplied filter pressure drop.
- Maximum allowable fan speed for size 25 units is 20 r/s. Maximum allowable fan speed for size 28 and 30 units is 18.3 r/s.

**Table 31 — Factory-Supplied Pressure Drop — SI**

| UNIT                             | AIRFLOW (L/s) | PRESSURE<br>DROP (Pa) |
|----------------------------------|---------------|-----------------------|
| 40RUA*25<br>40RUQ*25<br>40RUS*25 | 2900          | 32                    |
|                                  | 3800          | 47                    |
|                                  | 4700          | 64                    |
| 40RUA*28<br>40RUS*28             | 3500          | 36                    |
|                                  | 4700          | 55                    |
|                                  | 5900          | 76                    |
| 40RUA*30<br>40RUS*30             | 4250          | 47                    |
|                                  | 5650          | 71                    |
|                                  | 7050          | 98                    |

## Variable Frequency Drive

The VFD switches the indoor fan motor speed between full/high speed (60 Hz motor operation) and reduced/low speed (40 Hz motor operation), as required by ASHRAE 90.1-2016 and IECC-2015 requirements for two-stage HVAC units. The VFD is factory-configured to match the current and power requirements for each motor selection and all wiring connections are completed by the factory; no field adjustments or connections are necessary.

While the basic VFD retains all of its standard capabilities, the SAV 2-speed application uses only a limited portion of these features to provide a 0-10 VDC input based on thermostat demand to the VFD to control the motor speed. With a ventilation or low cooling demand, the Unit Control Board will provide a VDC input corresponding to 66% of design airflow. With a high cooling or heating demand, the Unit Control Board will provide a VDC input corresponding to 100% of design airflow. The fan control signal is based on control board settings (potentiometer and DIP switches) that are factory-set and thermostat demand to the UCB. While the pulley and drive should be adjusted to obtain desired airflow, the potentiometer on the UCB can be used to fine-tune the airflow setting when the fan is running in high speed (see Operating Fan for Test and Balance and Fan Speed Set-Up sections).


The VFD is not equipped with a keypad. A keypad is available as an accessory (Part Number: CRDISKIT001A00) ACS320 or (Part Number: CRDISKIT003A00) ACH580 for field-installation or expanded service access to VFD parameter and troubleshooting tables. See Tables 32-33 for terminal designations and Fig. 37-39 for wiring. VFD ACH180 comes with an integrated/non-removable keypad.

See Appendix A for VFD parameters.


The VFD used in the SAV™ system has soft start capabilities to slowly ramp up speeds, eliminating any high in-rush of air volume during speed changes. It also has internal overcurrent protection for the fan motor.

**Table 32 — ACS320/ACH180 VFD Terminal Designations**

| TERMINAL                            | FUNCTION                                                          |
|-------------------------------------|-------------------------------------------------------------------|
| U1/L1<br>V1/L2<br>W1/L3             | Three-Phase Main Circuit Input Power Supply                       |
| U2/T1<br>V2/T2<br>W2/T3             | Three-Phase AC Output to Motor, 0V to Maximum Input Voltage Level |
| 2/14 (AI1)<br>3/13 (GND)            | Analog input (0-10 v)                                             |
| 4                                   | 10 Vdc Reference Voltage                                          |
| 10/22 (GND)<br>11/12 (COMMON)       | Factory-Supplied Jumper                                           |
| 9/21 (24 vdc)<br>12/8 (DI-1)        | Activate to Start Drive (start/stop)                              |
| 17/6 (Relay COM)<br>19/7 (Relay NO) | Relay Output for Unit Control Board Safety Chain                  |

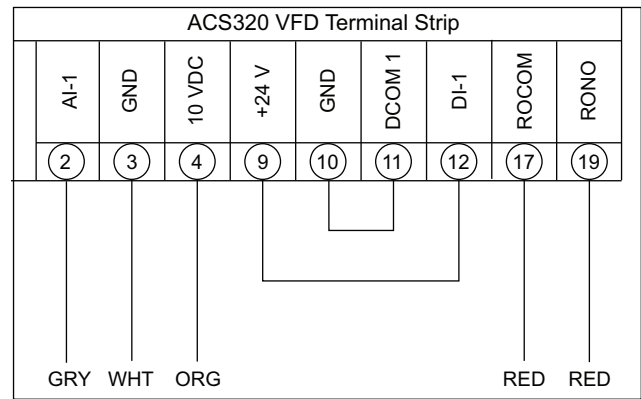


**Fig. 37 — ACH320 VFD Wiring**

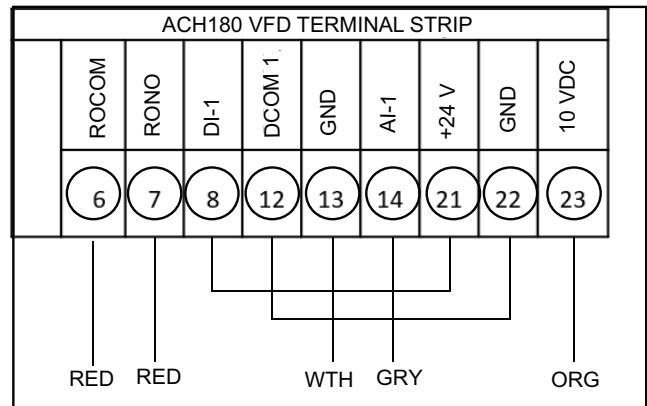

**Fig. 38 — ACH180 VFD Wiring**

**Table 33 — ACH580 VFD Terminal Designations**

| TERMINAL                            | FUNCTION                                                           |
|-------------------------------------|--------------------------------------------------------------------|
| U1<br>V1<br>W1                      | Three-Phase Main Circuit Input Power Supply                        |
| U2<br>V2<br>W2                      | Three-phase Ac Output to Motor, 0-v to Maximum Input Voltage Level |
| 2 (AI2)<br>3 (GND)                  | Analog Input (0-10v)                                               |
| 4                                   | 10 Vdc Reference Voltage                                           |
| 11 (GND)<br>12 (COMMON)             | Factory-Supplied Jumper                                            |
| 10 (24 vdc)<br>13 (DI-1)            | Activate to Start Drive (Start/Stop)                               |
| 25 (Relay 3 COM)<br>27 (Relay 3 NO) | Relay Output for Unit Control Board Safety Chain                   |

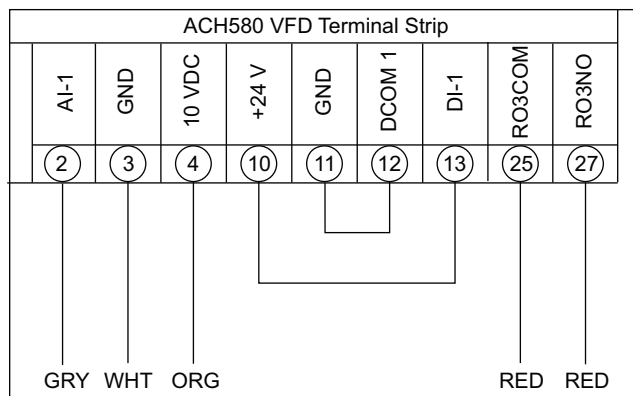

**Fig. 39 — ACH580 VFD Wiring**

## INDOOR FAN MOTOR

The indoor fan motors used with the VFD are specially manufactured for use with VFD power circuits. The motor winding insulation is specially formulated to resist breakdown due to voltage stress issues. The motor shaft includes grounding rings to prevent damage to bearings caused by grounding currents. Replace these motors with Factory Authorized Parts available from Replacement Components Division (RCD).

## VFD FUSES

Table 34 details the fuse requirement for the VFD installed in 40RU units. Check the control wiring diagram label on the specific unit in use for the fuse location.

## FAN FAULT DETECTION:

The Variable Frequency Drive is equipped with a relay internal to the drive that is used to prevent the motor from running if there are faults detected by the VFD. If the 40RU is connected to the condensing unit correctly (refer to Power Supply and Wiring section), then the Unit Control Board will also prevent the thermostat signals from being sent to the condensing unit, preventing compressor(s) from energizing if there is a VFD fault or if the VFD is de-energized. See Table 35 for fault and alarm codes.

## VFD ALARMS AND FAULTS TROUBLESHOOTING

The VFD has two LEDs (light-emitting diodes) on its front panel that indicate VFD operating status. These LEDs are GREEN and RED.

- GREEN LED ON STEADY: Power ON to VFD
- GREEN LED FLASHING: Alarm condition detected
- RED LED ON (Steady or Flashing): Fault condition detected

## ALARMS

Alarms are advisory in nature. These indicate a problem has been detected by the VFD's diagnostics but this problem will not require that the VFD and its motor be shut down. Typical fault condition on the SAV™ application might be loose connections at the VFD terminal board or damaged conductors between the Fan Speed Board connector J2 and the VFD terminal strip. See Table 36 for a full list.

## CLEAR THE ALARM LED

Shut off power to the VFD for five minutes. Restore power and recheck the GREEN LED. If this LED is still flashing, then connect the accessory remote display keypad kit. Use Table 37 to determine if the alarm requires any corrective action (action is not always required) and address the root cause of the problem.

If diagnostics troubleshooting has determined that the drive is defective during the warranty period, contact Carrier.

## FAULTS

A fault is a significant internal situation for the VFD or its motor. If the motor was running when the fault was detected, it was shut-down. See Table 37 for a full list of faults, display codes, and recommended actions.

## Clear the Fault LED

The recommended corrective action for faults is shown in Table 37. The VFD can also be reset to remove the fault. If an external source for a start command is selected and is active, the VFD may start immediately after fault reset.

Connect the accessory remote display keypad kit. To reset a fault indicated by a flashing red LED, turn off the power for 5 minutes. To reset a fault indicated by a red LED (not flashing), press RESET from the control panel or turn off the power for 5 minutes. Depending on the value of parameter 1604 (FAULT RESET SELECT), digital input or serial communication could also be used to reset the drive. When the fault has been corrected, the motor can be started.

**Table 34 — VFD Fuse Requirements, 40RU Units**

| UNIT | HP   | VOLTAGE | VFD ACS320 | VFD ACH180 | VFD ACH580 | MOTOR     | STANDARDIZED FUSE  | FUSE P/N  | HARNESS <sup>a</sup> |
|------|------|---------|------------|------------|------------|-----------|--------------------|-----------|----------------------|
| 40RU | 1.7  | 208/230 | HK30WA523  | HK30WB505  | N/A        | HD56FR233 | 30A - CLASS CC KTK | HY10KB300 | 10                   |
|      |      | 460     | HK30WA530  | HK30WB510  | N/A        | HD56FR463 | 15A - CLASS CC KTK | HY10KB151 | 12                   |
|      |      | 575     | HK30WA360  | N/A        | HK30WB369  | HD56FR579 | 10A - CLASS CC KTK | HY10KB101 | 14                   |
|      | 2.4  | 208/230 | HK30WA523  | HK30WB505  | N/A        | HD56FE653 | 30A - CLASS CC KTK | HY10KB300 | 10                   |
|      |      | 460     | HK30WA530  | HK30WB510  | N/A        | HD56FE653 | 15A - CLASS CC KTK | HY10KB151 | 12                   |
|      |      | 575     | HK30WA360  | N/A        | HK30WB369  | HD56FE577 | 10A - CLASS CC KTK | HY10KB101 | 14                   |
|      | 2.9  | 208/230 | HK30WA523  | HK30WB505  | N/A        | HD58FE654 | 30A - CLASS CC KTK | HY10KB300 | 10                   |
|      |      | 460     | HK30WA530  | HK30WB510  | N/A        | HD58FE654 | 30A - CLASS CC KTK | HY10KB300 | 10                   |
|      | 3.7  | 208/230 | HK30WA523  | HK30WB505  | N/A        | HD58FR236 | 30A - CLASS CC KTK | HY10KB300 | 10                   |
|      |      | 208/230 | HK30WA523  | HK30WB505  | N/A        | HD60FE656 | 30A - CLASS CC KTK | HY10KB300 | 10                   |
|      |      | 460     | HK30WA534  | HK30WB511  | N/A        | HD58FR236 | 20A - CLASS CC KTK | HY10KB200 | 12                   |
|      |      | 460     | HK30WA534  | HK30WB511  | N/A        | HD60FE656 | 20A - CLASS CC KTK | HY10KB200 | 12                   |
|      |      | 575     | HK30WA361  | N/A        | HK30WB370  | HD58FE577 | 10A - CLASS CC KTK | HY10KB101 | 14                   |
|      | 5.0  | 208/230 | HK30WA524  | HK30WB507  | N/A        | HD60FK659 | 30A - CLASS CC KTK | HY10KB300 | 10                   |
|      |      | 460     | HK30WA532  | HK30WB512  | N/A        | HD60FK659 | 30A - CLASS CC KTK | HY10KB300 | 10                   |
|      |      | 575     | HK30WA362  | N/A        | HK30WB371  | HD60FK577 | 15A - CLASS CC KTK | HY10KB151 | 12                   |
|      | 7.5  | 208/230 | HK30WA524  | HK30WB507  | N/A        | HD62FK654 | 60A - CLASS J      | HY10JK060 | 8                    |
|      |      | 460     | HK30WA532  | HK30WB512  | N/A        | HD62FK654 | 30A - CLASS CC KTK | HY10KB300 | 10                   |
|      |      | 575     | HK30WA362  | N/A        | HK30WB371  | HD62FL576 | 15A - CLASS CC KTK | HY10KB151 | 12                   |
|      | 10.0 | 208/230 | HK30WA525  | HK30WB507  | N/A        | HD64FK654 | 60A - CLASS J      | HY10JK060 | 8                    |
|      |      | 460     | HK30WA533  | HK30WB513  | N/A        | HD64FK654 | 30A - CLASS CC KTK | HY10KB300 | 10                   |
|      |      | 575     | HK30WA363  | N/A        | HK30WB372  | HD64FL576 | 15A - CLASS CC KTK | HY10KB151 | 12                   |

NOTE(S):

a. Harness wire gauge between control box and VFD.

**LEGEND**

**Hp** — Horsepower  
**N/A** — Not Applicable  
**P/N** — Part Number  
**VFD** — Variable Frequency Drive

**Table 35 — Fault and Alarm Codes for ACH180 VFD**

| CODE (HEX)  | WARNING / AUX. CODE | CAUSE                                                                                                                                                                        | WHAT TO DO                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A2B1</b> | Overcurrent         | Output current has exceeded internal fault limit.<br>In addition to an actual overcurrent situation, this warning may also be caused by an earth fault or supply phase loss. | Check motor load.<br>Check acceleration times in parameter group 23 Speed reference ramp (speed control) or 28 Frequency reference chain (frequency control). Also check parameters 46.01 Speed scaling, 46.02 Frequency scaling and 46.03 Torque scaling. Check motor and motor cable (including phasing and delta/star connection). Check for an earth fault in motor or motor cables by measuring the insulation resistances of motor and motor cable. See chapter Electrical installation, section Checking the insulation of the assembly in the Hardware manual of the drive. Check there are no contactors opening and closing in motor cable. Check that the start-up data in parameter group 99 Motor data corresponds to the motor rating plate. |
| <b>A2B3</b> | Earth Leakage       | Drive has detected load unbalance typically due to earth fault in motor or motor cable.                                                                                      | Check there are no power factor correction capacitors or surge absorbers in motor cable.<br>Check for an earth fault in motor or motor cables by measuring the insulation resistances of motor and motor cable. See chapter Electrical installation, section Checking the insulation of the assembly in the Hardware manual of the drive. If an earth fault is found, fix or change the motor cable and/or motor. If no earth fault can be detected, contact your local representative.                                                                                                                                                                                                                                                                    |
| <b>A2B4</b> | Short Circuit       | Short-circuit in motor cable(s) or motor.                                                                                                                                    | Check motor and motor cable for cabling errors.<br>Check motor and motor cable (including phasing and delta/star connection). Check for an earth fault in motor or motor cables by measuring the insulation resistances of motor and motor cable. See chapter Electrical installation, section Checking the insulation of the assembly in the Hardware manual of the drive. Check there are no power factor correction capacitors or surge absorbers in motor cable.                                                                                                                                                                                                                                                                                       |

**Table 35 — Fault and Alarm Codes for ACH180 VFD**


| CODE (HEX)   | WARNING / AUX. CODE                                                             | CAUSE                                                                                                                      | WHAT TO DO                                                                                                                                                                                                                                                                                                                                                              |
|--------------|---------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A6A4</b>  | Motor Nominal Value                                                             | The motor parameters are set incorrectly.                                                                                  | Check the auxiliary code. See actions for each code below.                                                                                                                                                                                                                                                                                                              |
|              | Motor Nominal Value 0001                                                        | The drive is not dimensioned correctly.                                                                                    | Check the auxiliary code. See actions for each code below. Check the settings of the motor configuration parameters in groups 98 and 99.                                                                                                                                                                                                                                |
| <b>A6A4</b>  | Motor Nominal Value / 0002                                                      | Synchronous and nominal speeds differ too much.                                                                            | Check the settings of the motor configuration parameters in groups 98 and 99.                                                                                                                                                                                                                                                                                           |
|              | Motor Nominal Value / 0003                                                      | Nominal speed is higher than synchronous speed with 1 pole pair.                                                           |                                                                                                                                                                                                                                                                                                                                                                         |
|              | Motor Nominal Value / 0004                                                      | Nominal current is outside limits.                                                                                         |                                                                                                                                                                                                                                                                                                                                                                         |
|              | Motor Nominal Value / 0005                                                      | Nominal voltage is outside limits.                                                                                         |                                                                                                                                                                                                                                                                                                                                                                         |
|              | Motor Nominal Value / 0006                                                      | Mechanical nominal power is higher than electrical active power                                                            |                                                                                                                                                                                                                                                                                                                                                                         |
|              | Motor Nominal Value / 0007                                                      | Nominal power not consistent with nominal speed and torque                                                                 |                                                                                                                                                                                                                                                                                                                                                                         |
| <b>A780</b>  | Motor Stall Programmable Warning: 31.24 Stall Function                          | Motor is operating in stall region because of, for example, excessive load or insufficient motor power.                    | Check for overloaded motor. Adjust the parameters used for the motor overload function (35.51...35.53) and 35.55...35.56.                                                                                                                                                                                                                                               |
| <b>A783</b>  | Motor Overload                                                                  | All three output phases are disconnected from motor.                                                                       | Check that switches between drive and motor are closed. Check that all cables between drive and motor are connected and secured. If no issue was detected and drive output was actually connected to motor, contact your local representative.                                                                                                                          |
| <b>A784</b>  | Motor Disconnect                                                                | Installed extension module is not the same as configured.                                                                  | Check that the installed extension module (shown by parameter 15.02 Detected extension module) is the same as selected by parameter 15.01 Extension module type.                                                                                                                                                                                                        |
| <b>A7AB</b>  | Extension I/O Configuration Failure                                             | Installed extension module is not the same as configured.                                                                  | Check that the installed extension module (shown by parameter 15.02 Detected extension module) is the same as selected by parameter 15.01 Extension module type.                                                                                                                                                                                                        |
| <b>A7C1</b>  | FBAA Communication Programmable Warning: 50.02 FBAA Communication Loss Function | Cyclical communication between drive and field bus adapter module A or between PLC and field bus adapter module A is lost. | Check status of field bus communication. See user documentation of field bus interface. Check settings of parameter groups 50 Field bus adapter (FBA), 51 FBA A settings, 52 FBA A data in and 53 FBA A data out. Check cable connections.                                                                                                                              |
| <b>A7CE</b>  | EFB comm loss Programmable Warning: 58.14 Communication Loss Action             | Communication break in embedded field bus (EFB) communication.                                                             | Check the status of the fieldbus master (online/offline/error, etc.). Check cable connections to the EIA-485/X5 terminals 29, 30 and 31 on the control unit.                                                                                                                                                                                                            |
| <b>A7EE</b>  | Panel Loss Programmable Warning: 49.05 Communication Loss Action                | Control panel or PC tool selected as active control location for drive has ceased communicating.                           | Check PC tool or control panel connection. Check control panel connector. Check mounting platform if being used. Disconnect and reconnect the control panel.                                                                                                                                                                                                            |
| <b>A88F</b>  | Cooling Fan                                                                     | Maintenance timer limit exceeded.                                                                                          | Consider changing the cooling fan. Parameter 05.04 Fan on-time counter shows the running time of the cooling fan.                                                                                                                                                                                                                                                       |
| <b>AFAR</b>  | Auto Reset                                                                      | A fault is about to be auto reset.                                                                                         | Informative warning. See the settings in parameter group 31 Fault functions.                                                                                                                                                                                                                                                                                            |
| <b>AFE1</b>  | Emergency Stop (off 2)                                                          | Drive has received an emergency stop (mode selection off 2) command.                                                       | Check that it is safe to continue operation. Then return emergency stop push button to normal position. Restart drive. If the emergency stop was unintentional, check the source selected by parameter 21.05 Emergency stop source.                                                                                                                                     |
| <b>AFE2</b>  | Emergency Stop (off 1 or off 3)                                                 | Drive has received an emergency stop (mode selection off 1 or off3) command.                                               | Check that it is safe to continue operation. Then return emergency stop push button to normal position. Restart drive. If the emergency stop was unintentional, check the source selected by parameter 21.05 Emergency stop source. Informative warning. See parameter 21.22 Start delay.                                                                               |
| <b>AFE9</b>  | Start Delay                                                                     | The start delay is active and the drive will start the motor after a predefined delay.                                     | Check that it is safe to continue operation. Then return emergency stop push button to normal position. Restart drive. If the emergency stop was unintentional, check the source selected by parameter 21.05 Emergency stop source. Informative warning. See parameter 21.22 Start delay. Check the setting of (and source selected by) parameter 20.40 Run permissive. |
| <b>AF ED</b> | Run Permissive                                                                  | Run permissive is keeping the drive from running the motor.                                                                |                                                                                                                                                                                                                                                                                                                                                                         |
| <b>AFEE</b>  | Start Interlock 1                                                               | Start interlock 1 is keeping the drive from starting.                                                                      | Check the signal source selected for parameter 20.41 Start interlock 1.                                                                                                                                                                                                                                                                                                 |
| <b>AFEF</b>  | Start Interlock 2                                                               | Start interlock 2 is keeping the drive from starting.                                                                      | Check the signal source selected for parameter 20.42 Start interlock 2.                                                                                                                                                                                                                                                                                                 |
| <b>AF FO</b> | Start Interlock 3                                                               | Start interlock 3 is keeping the drive from starting.                                                                      | Check the signal source selected for parameter 20.43 Start interlock 3.                                                                                                                                                                                                                                                                                                 |
| <b>AF F1</b> | Start Interlock 4                                                               | Start interlock 4 is keeping the drive from starting.                                                                      | Check the signal source selected for parameter 20.44 Start interlock 4.                                                                                                                                                                                                                                                                                                 |

**Table 35 — Fault and Alarm Codes for ACH180 VFD**

| CODE (HEX)   | WARNING / AUX. CODE            | CAUSE                                                                                                                                                                      | WHAT TO DO                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>AF F2</b> | Run Permissive Forced Warning  | A forced DI is used as a source for parameter 20.40 Run permissive.                                                                                                        | If 20.40 Run permissive uses DLX as the source, check if the bit corresponding to DLX in parameter 10.03 DI force selection is 1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>AF F3</b> | Start Interlock Forced Warning | One or more forced DIs is used as a source for one or more of parameters 20.41 Start interlock 1... 20.44 Start interlock 4.                                               | Check all parameters 20.41 Start interlock 1...20.44 Start interlock 4. If any of these parameters uses DIx as the source, check if the bit corresponding to DIx in parameter 10.03 DI force selection is 1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>AF F5</b> | Override New Start Required    | The Safe torque off function was active and has been reset while in Override.                                                                                              | A new start signal is required to start the drive again.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>AF F6</b> | Identification Run             | Motor ID run will occur at next start.                                                                                                                                     | Informative warning.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>AF F8</b> | Motor Heating Active           | Pre-heating is being performed.                                                                                                                                            | Informative warning.<br>Motor pre-heating is active. Current specified by parameter 21.16 Preheating current is being passed through the motor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>AF FE</b> | Override Active                | Drive is in Override mode.                                                                                                                                                 | Informative warning.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>B5A2</b>  | Power applied                  | The drive was powered up or the control board was rebooted successfully.                                                                                                   | informative event.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>B681</b>  | Hand Mode Selected             | The drive was placed in Hand mode.                                                                                                                                         | Informative event. Check the control panel to ensure that the current control location is correct.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>B682</b>  | Off Mode Selected              | The drive was placed in Off mode.                                                                                                                                          | Informative event. Check the control panel to ensure that the current control location is correct.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>B683</b>  | Auto Mode Selected             | The drive was placed in Auto mode                                                                                                                                          | Informative event. Check the control panel to ensure that the current control location is correct.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>2310</b>  | Overcurrent                    | Output current has exceeded internal fault limit.<br>in addition to an actual overcurrent situation, this fault may also be caused by an earth fault or supply phase loss. | Check motor load.<br>Check acceleration times in parameter group 23 Speed reference ramp (speed control) or 28 Frequency reference chain (frequency control). Also check parameters 46.01 Speed scaling, 46.02 Frequency scaling and 46.03 Torque scaling. Check motor and motor cable (including phasing and delta/star connection). Check there are no contactors opening and closing in motor cable.<br>Check that the start-up data in parameter group 99 corresponds to the motor rating plate.<br>Check that there are no power factor correction capacitors or surge absorbers in motor cable.<br>Check for an earth fault in motor or motor cables by measuring the insulation resistances of motor and motor cable. See chapter Electrical installation, section Checking the insulation of the assembly in the Hardware manual of the drive. |
| <b>FF61</b>  | ID Run                         | Motor ID run was not completed successfully.                                                                                                                               | Check safety circuit connections. For more information, see chapter The Safe torque off function in the Hardware manual of the drive and description of parameter 31.22 STO indication run/stop<br>Check the value of parameter 95.04 Control board supply.<br>Check the nominal motor values in parameter group 99 Motor data. Check that no external control system is connected to the drive.<br>Cycle the power to the drive (and its control unit, if powered separately). Check that no operation limits prevent the completion of the ID run. Restore parameters to default settings and try again.<br>Check that the motor shaft is not locked. Check the auxiliary code.                                                                                                                                                                      |


Use the following procedure to clean the heat sink on ACH180 VFDs:

1. Turn off and lock out unit power.
2. Remove the module cooling fan(s). See Fig. 40.

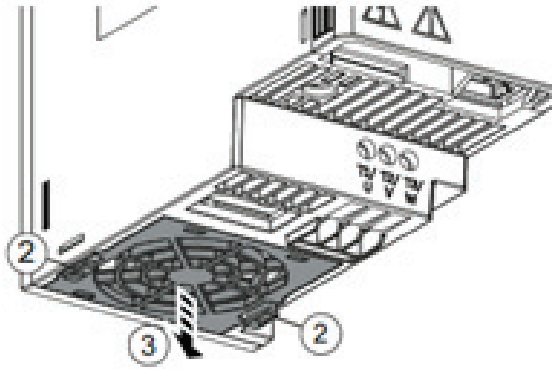

**Fig. 40 — Remove ACH180 Cooling Fan**

3. Blow dry, clean and oil-free compressed air from bottom to top and simultaneously use a vacuum cleaner at the air outlet to trap the dust. If there is a risk of dust entering adjoining equipment, do the cleaning in another room.
4. Reinstall the cooling fan. See Fig. 41.

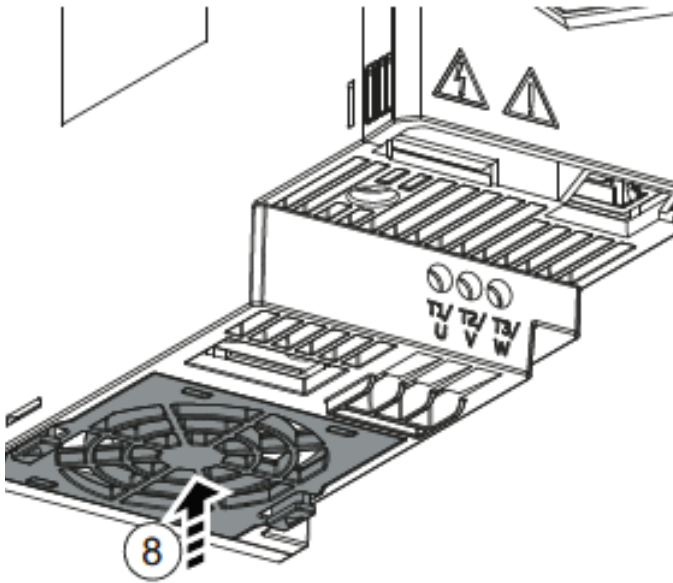

**Fig. 41 — Reinstall ACH180 Cooling Fan**

### VFD REMOTE KEYPAD

**NOTE:** The following only applies when a unit with the factory-installed SAV™ option is equipped with the field-installed Remote VFD Keypad (Part Number: CRDISKKIT001A00) ACS320 or (Part Number: CRDISKKIT003A00) ACH580.

On 40RU fan coils equipped with the SAV option, the supply fan speed is controlled by a 3-phase VFD. See Fig. 23-26 for the location of the VFD.


The VFD is powered during normal operation to prevent condensation from forming on the boards during the off mode and is stopped by driving the speed to 0. The units use ABB VFDs. The interface wiring for the VFDs is shown in Fig. 37-39 (on pages 44-45). Terminal designations are shown in the Terminal Designation table (see Tables 32 and 33 on page 44). Configurations are shown in the VFD Keypad Parameters tables (see Appendix A, Tables A-F on pages 71-73).

Details on ACS320 operation with remote keypad start below. For details on remote keypad for ACH580 VFDs, see “ACH580 Operation with Remote Keypad” on page 55.

### ACS320 Operation with Remote Keypad

The remote keypad used with ACS320 VFDs is shown in Fig. 42. The functions of SOFT KEYS (1 and 2) change depending on what is displayed on the screen. The function of SOFT KEY 1 matches the word in the lower left-hand box on the display screen. The function of SOFT KEY 2 matches the word in the lower right-hand box on the display screen. If the box is empty, then the SOFT KEY does not have a function on that specific screen. The UP and DOWN keys are used to navigate through the menus. The OFF key is used to turn off the VFD. The AUTO key is used to change control of the drive to automatic control. The HAND key is used to change control of the drive to local (handheld) control. The HELP button is used to access the help screens.

For the VFD to operate on the units covered by this document, the drive must be set in AUTO mode. The word “AUTO” will appear in the upper left hand corner of the VFD display. Press the AUTO button to set the drive in AUTO mode.

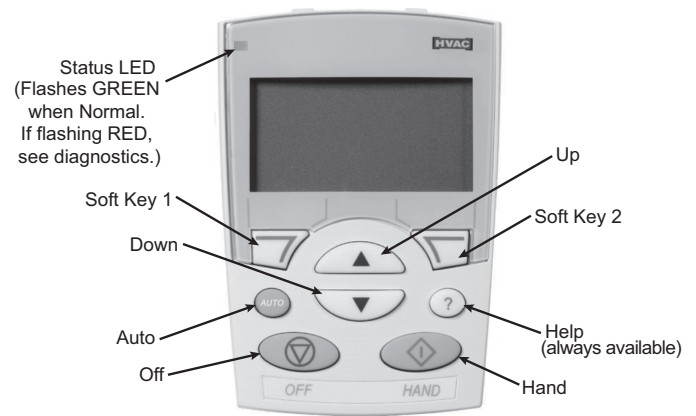

**Fig. 42 — ACS320 VFD Keypad**

#### START UP WITH ASSISTANT

Initial start-up has been performed at the factory. Use of the start up assistant will override factory VFD configurations.

#### **⚠ CAUTION**

##### CONFIGURATION OVERRIDE HAZARD

Do not use ABB or Carrier start-up assistant on this VFD application. Use of start-up assistant will override the factory VFD configurations.

#### START UP BY CHANGING PARAMETERS INDIVIDUALLY

Initial start-up is performed at the factory. To start up the VFD by changing individual parameters, perform the following procedure:

1. Select MENU (SOFT KEY 2). The Main menu will be displayed.
2. Use the UP or DOWN keys to highlight PARAMETERS on the display screen and press ENTER (SOFT KEY 2).
3. Use the UP or DOWN keys to highlight the desired parameter group and press SEL (SOFT KEY 2).
4. Use the UP or DOWN keys to highlight the desired parameter and press EDIT 320 (SOFT KEY 2).
5. Use the UP or DOWN keys to change the value of the parameter.
6. Press SAVE (SOFT KEY 2) to store the modified value. Press CANCEL (SOFT KEY 1) to keep the previous value. Any modifications that are not saved will not be changed.

- Choose another parameter or press EXIT/BACK (SOFT KEY 1) to return to the listing of parameter groups. Continue until all the parameters have been configured and then press EXIT/BACK (SOFT KEY 1) to return to the main menu.

NOTE: ACS320 only. The current parameter value appears above the highlight parameter. To view the default parameter value, press the UP and DOWN keys simultaneously. To restore the default factory settings, select the application macro “HVAC Default.”


## ACS320 VFD Modes

The VFD has several different modes for configuring, operating, and diagnosing the VFD. The modes are:

- Standard Display mode — shows drive status information and operates the drive
- Parameters mode — edits parameter values individually
- Start-up Assistant mode — guides the start up and configuration
- Changed Parameters mode — shows all changed parameters
- Drive Parameter Backup mode — stores or uploads the parameters
- Clock Set mode — sets the time and date for the drive
- I/O Settings mode — checks and edits the I/O settings

### STANDARD DISPLAY MODE

Use the standard display mode to read information on the drive status and operate the drive. To reach the standard display mode, press EXIT until the LCD display shows status information as described below (see Fig. 43).

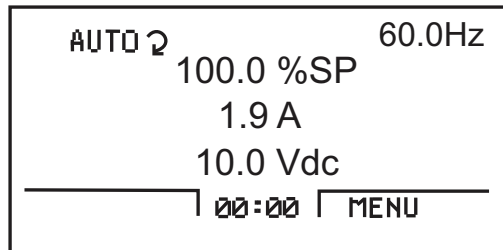

**Fig. 43 — Standard Display Example**

The top line of the LCD display shows the basic status information of the drive. The HAND icon indicates that the drive control is local from the control panel. The AUTO icon indicates that the drive is in remote control mode, such as the basic I/O or field bus.

The arrow icon indicates the drive and motor rotation status. A rotating arrow (clockwise or counterclockwise) indicates that the drive is running and at set point and the shaft direction is forward or reverse. A rotating blinking arrow indicates that the drive is running but not at set point. A stationary arrow indicates that the drive is stopped. For the units covered in this manual, the correct display rotation is clockwise.

The upper right corner shows the frequency set point that the drive will maintain.

Using parameter group 34, the middle of the LCD display can be configured to display 3 parameter values. The default display shows parameters 0103 (OUTPUT FREQ) in percent speed, 0104 (CURRENT) in amperes, and 0120 (A11) in voltage DC.

The bottom corners of the LCD display show the functions currently assigned to the two soft keys. The lower middle displays the current time (if configured to show the time).

The first time the drive is powered up, it is in the OFF mode. To switch to local hand-held control and control the drive using the control panel, press and hold the HAND button. Pressing the HAND button switches the drive to hand control while keeping the drive running. Press the AUTO button to switch to remote

input control. To start the drive press the HAND or AUTO buttons, to stop the drive press the OFF button.

To adjust the speed in HAND mode, press the UP or DOWN buttons (the reference changes immediately). The reference can be modified in the local control (HAND) mode, and can be parameterized (using Group 11 reference select) to also allow modification in the remote control mode.

### PARAMETERS MODE

The Parameters mode is used to change the parameters on the drive. To change parameters, perform the following procedure:

- Select MENU (SOFT KEY 2). The Main menu will be displayed.
- Use the UP or DOWN keys to highlight PARAMETERS on the display screen and press ENTER (SOFT KEY 2).
- Use the UP or DOWN keys to highlight the desired parameter group and press SEL (SOFT KEY 2).
- Use the UP or DOWN keys to highlight the desired parameter and press EDIT (SOFT KEY 2).
- Use the UP or DOWN keys to change the value of the parameter.
- Press SAVE (SOFT KEY 2) to store the modified value. Press CANCEL (SOFT KEY 1) to keep the previous value. Any modifications that are not saved will not be changed.
- Choose another parameter or press EXIT (SOFT KEY 1) to return to the listing of parameter groups. Continue until all the parameters have been configured and then press EXIT (SOFT KEY 1) to return to the main menu.

NOTE: The current parameter value appears above the highlight parameter. To view the default parameter value, press the UP and DOWN keys simultaneously. To restore the default factory settings, select the Carrier application macro.

### CHANGED PARAMETERS MODE

The Changed Parameters mode is used to view and edit recently changed parameters on the drive. To view the changed parameters, perform the following procedure:

- Select MENU (SOFT KEY 2). The Main menu will be displayed.
- Use the UP or DOWN keys to highlight CHANGED PAR on the display screen and press ENTER (SOFT KEY 2). A list of the recently changed parameters will be displayed.
- Use the UP or DOWN keys to highlight the desired parameter group and press EDIT (SOFT KEY 2) to change the parameter if desired.
- Press EXIT (SOFT KEY 1) to exit the Changed Parameters mode.

### DRIVE PARAMETER BACKUP MODE

The drive parameter back up mode is used to export the parameters from one drive to another. The parameters can be uploaded from a VFD to the removable control panel. The control panel can then be transferred to another drive and the parameters downloaded into memory.

Depending on the motor and application, there are two options available. The first option is to download all parameters. This copies both application and motor parameters to the drive from the control panel. This is recommended when using the same application for drives of the same size. This can also be used to create a backup of the parameters group for the drive.

The second option downloads only the application parameters to the drive. This is recommended when using the same application for drives of different sizes. Parameters 9905, 9906, 9907, 9908, 9909, 1605, 1607, 5201, and group 51 parameters and internal motor parameters are not copied.

### **Upload All Parameters**

To upload and store parameters in the control panel from the VFD, perform the following procedure:

1. Select MENU (SOFT KEY 2). The Main menu will be displayed.
2. Use the UP or DOWN keys to highlight PAR BACKUP on the display screen and press ENTER (SOFT KEY 2).
3. Use the UP or DOWN keys to highlight UPLOAD TO PANEL and press SEL (SOFT KEY 2).
4. The text “Copying Parameters” will be displayed with a progress indicator. To stop the process, select ABORT (SOFT KEY 1).
5. When the upload is complete, the text “Parameter upload successful” will be displayed.
6. The display will then return to the PAR BACKUP menu. Select EXIT (SOFT KEY 1) to return to the main menu.
7. The control panel can now be disconnected from the drive.

### **Download All Parameters**

To download all parameters from the control panel to the VFD, perform the following procedure:

1. Install the control panel with the correct parameters onto the VFD.
2. Select MENU (SOFT KEY 2). The Main menu will be displayed.
3. Use the UP or DOWN keys to highlight PAR BACKUP on the display screen and press ENTER (SOFT KEY 2).
4. Use the UP or DOWN keys to highlight DOWNLOAD TO DRIVE ALL and press SEL (SOFT KEY 2).
5. The text “Restoring Parameters” will be displayed with a progress indicator. To stop the process, select ABORT (SOFT KEY 1).
6. When the download is complete, the text “Parameter download successful” will be displayed.
7. The display will then return to the PAR BACKUP menu. Select EXIT (SOFT KEY 1) to return to the main menu.
8. The control panel can now be disconnected from the drive.

### **Download Application Parameters**

To download application parameters only to the control panel from the VFD, perform the following procedure:

1. Install the control panel with the correct parameters onto the VFD.
2. Select MENU (SOFT KEY 2). The Main menu will be displayed.
3. Use the UP or DOWN keys to highlight PAR BACKUP on the display screen and press ENTER (SOFT KEY 2).
4. Use the UP or DOWN keys to highlight DOWNLOAD APPLICATION and press SEL (SOFT KEY 2).
5. The text “Downloading Parameters (partial)” will be displayed with a progress indicator. To stop the process, select ABORT (SOFT KEY 1).
6. When the download is complete, the text “Parameter download successful” will be displayed.
7. The display will then return to the PAR BACKUP menu. Select EXIT (SOFT KEY 1) to return to the main menu.
8. The control panel can now be disconnected from the drive.

### **CLOCK SET MODE**

Use the clock set mode to set the date and time for the internal clock of the VFD. In order to use the timer functions of the VFD control, the internal clock must be set. The date is used to determine weekdays and is visible in the fault logs.

To set the clock, perform the following procedure:

1. Select MENU (SOFT KEY 2). The Main menu will be displayed.
2. Use the UP or DOWN keys to highlight CLOCK SET on the display screen and press ENTER (SOFT KEY 2). The clock set parameter list will be displayed.
3. Use the UP or DOWN keys to highlight CLOCK VISIBILITY and press SEL (SOFT KEY 2). This parameter is used to display or hide the clock on the screen. Use the UP or DOWN keys to change the parameter setting. Press OK (SOFT KEY 2) to save the configuration and return to the Clock Set menu.
4. Use the UP or DOWN keys to highlight SET TIME and press SEL (SOFT KEY 2). Use the UP or DOWN keys to change the hours and minutes. Press OK (SOFT KEY 2) to save the configuration and return to the Clock Set menu.
5. Use the UP or DOWN keys to highlight TIME FORMAT and press SEL (SOFT KEY 2). Use the UP or DOWN keys to change the parameter setting. Press OK (SOFT KEY 2) to save the configuration and return to the Clock Set menu.
6. Use the UP or DOWN keys to highlight SET DATE and press SEL (SOFT KEY 2). Use the UP or DOWN keys to change the day, month, and year. Press OK (SOFT KEY 2) to save the configuration and return to the Clock Set menu.
7. Use the UP or DOWN keys to highlight DATE FORMAT and press SEL (SOFT KEY 2). Use the UP or DOWN keys to change the parameter setting. Press OK (SOFT KEY 2) to save the configuration and return to the Clock Set menu.
8. Press EXIT (SOFT KEY 1) twice to return to the main menu.

### **I/O SETTINGS MODE**

Use the I/O Settings mode to view and edit the I/O settings.

To configure the I/O settings, perform the following procedure:

1. Select MENU (SOFT KEY 2). The Main menu will be displayed.
2. Use the UP or DOWN keys to highlight I/O SETTINGS on the display screen and press ENTER (SOFT KEY 2). The I/O Settings parameter list will be displayed.
3. Use the UP or DOWN keys to highlight the desired I/O setting and press SEL (SOFT KEY 2).
4. Use the UP or DOWN keys to select the parameter to view. Press OK (SOFT KEY 2).
5. Use the UP or DOWN keys to change the parameter setting. Press SAVE (SOFT KEY 2) to save the configuration. Press CANCEL (SOFT KEY 1) to keep the previous value. Any modifications that are not saved will not be changed.
6. Press EXIT (SOFT KEY 1) twice to return to the main menu.

## **ACS320 VFD Diagnostics**

The drive detects error situations and reports them using:

- Green and red LEDs on the body of the drive (located under the keypad)
- Status LED on the control panel
- Control panel display
- The Fault Word and Alarm Word parameter bits (parameters 0305 to 0309)

The form of the display depends on the severity of the error. The user can specify the severity for many errors by directing the drive to ignore the error situation, report the situation as an alarm, or report the situation as a fault.

## FAULTS (RED LED LIT)

The VFD signals that it has detected a severe error, or fault, by:

- Enabling the red LED on the drive (LED is either steady or flashing)
- Setting an appropriate bit in a Fault Word parameter (0305 to 0307)
- Overriding the control panel display with the display of a fault code
- Stopping the motor (if it was on)

## ALARMS (GREEN LED FLASHING)

For less severe errors, called alarms, the diagnostic display is advisory. For these situations, the drive is simply reporting that it had detected something unusual. In these situations, the drive:

- Flashes the green LED on the drive (does not apply to alarms that arise from control panel operation errors)
- Sets an appropriate bit in an Alarm Word parameter (0308 or 0309)
- Overrides the control panel display with the display of an alarm code and/or name

Alarm messages disappear from the control panel display after a few seconds. The message returns periodically as long as the alarm condition exists. See Table 36 for a list of alarm codes.

## Correcting Faults

The recommended corrective action for faults is shown in the Fault Codes Table 37. The VFD can also be reset to remove the fault. If an external source for a start command is selected and is active, the VFD may start immediately after fault reset.

To reset a fault indicated by a flashing red LED, turn off the power for 5 minutes. To reset a fault indicated by a red LED (not flashing), press RESET from the control panel or turn off the power for 5 minutes. Depending on the value of parameter 1604 (FAULT RESET SELECT), digital input or serial communication could also be used to reset the drive. When the fault has been corrected, the motor can be started.

## HISTORY

For reference, the last three fault codes are stored into parameters 0401, 0412, 0413. For the most recent fault (identified by parameter 0401), the drive stores additional data (in parameters 0402-0411) to aid in troubleshooting a problem. For example, a parameter 0404 stores the motor speed at the time of the fault. To clear the fault history (all of Group 04, Fault History parameters), follow these steps:

1. In the control panel, Parameters mode, select parameter 0401.
2. Press EDIT.
3. Press the UP and DOWN buttons simultaneously.
4. Press SAVE.

## Correcting Alarms

To correct alarms, first determine if the alarm requires any corrective action (action is not always required). Use Table 36 to find and address the root cause of the problem.

If diagnostics troubleshooting has determined that the drive is defective during the warranty period, contact Carrier.

**Table 36 — ACS320 Alarm Codes**

| ALARM CODE        | ALARM NAME IN PANEL    | DESCRIPTION AND RECOMMENDED CORRECTIVE ACTION                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2001              | —                      | Not used.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 2002              | —                      | Not used.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 2003              | —                      | Not used.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 2004              | DIR LOCK               | The change in direction being attempted is not allowed. Do not attempt to change the direction of motor rotation, or Change parameter 1003 DIRECTION to allow direction change (if reverse operation is safe).                                                                                                                                                                                                                         |
| 2005              | I/O COMM               | Field bus communication has timed out. Check fault setup (3018 COMM FAULT FUNC and 3019 COMM FAULT TIME). Check communication settings (Group 51 or 53 as appropriate). Check for poor connections and/or noise on line.                                                                                                                                                                                                               |
| 2006              | AI1 LOSS               | Analog input 1 is lost, or value is less than the minimum setting. Check input source and connections. Check the parameter that sets the minimum (3021) and the parameter that sets the Alarm/Fault operation (3001).                                                                                                                                                                                                                  |
| 2007              | AI2 LOSS               | Analog input 2 is lost, or value is less than the minimum setting. Check input source and connections. Check parameter that sets the minimum (3022) and the parameter that sets the Alarm/Fault operation (3001).                                                                                                                                                                                                                      |
| 2008              | PANEL LOSS             | Panel communication is lost and either the VFD is in local control mode (the control panel displays HAND), or the VFD is in remote control mode (AUTO) and is parameterized to accept start/stop, direction or reference from the control panel. To correct, check the communication lines and connections, Parameter 3002 PANEL LOSS, and parameters in groups 10 COMMAND INPUTS and 11 REFERENCE SELECT (if drive operation is REM). |
| 2009              | —                      | Reserved                                                                                                                                                                                                                                                                                                                                                                                                                               |
| 2010              | MOT OVERTEMP           | Motor is hot, based on either the VFD estimate or on temperature feedback. This alarm warns that a Motor Overload fault trip may be near. Check for overloaded motor. Adjust the parameters used for the estimate (3005 - 3009). Check the temperature sensors and Group 35 parameters.                                                                                                                                                |
| 2011              | UNDERLOAD              | Motor load is lower than expected. This alarm warns that a Motor Underload fault trip may be near. Check that the motor and drive ratings match (motor is NOT undersized for the drive). Check the settings on parameters 3013 to 3015.                                                                                                                                                                                                |
| 2012              | MOTOR STALL            | Motor is operating in the stall region. This alarm warns that a Motor Stall fault trip may be near.                                                                                                                                                                                                                                                                                                                                    |
| 2013 <sup>a</sup> | AUTORESET              | This alarm warns that the drive is about to perform an automatic fault reset, which may start the motor. To control automatic reset, use parameter group 31 (AUTOMATIC RESET).                                                                                                                                                                                                                                                         |
| 2014              | AUTOCHANGE             | This alarm warns that the PFA autochange function is active. To control PFA, use parameter group 81 (PFA) and the Pump Alternation macro.                                                                                                                                                                                                                                                                                              |
| 2015              | PFA INTERLOCK          | This alarm warns that the PFA interlocks are active, which means that the drive cannot start any motor (when Autochange is used), or a speed regulated motor (when Autochange is not used).                                                                                                                                                                                                                                            |
| 2016              | —                      | Reserved                                                                                                                                                                                                                                                                                                                                                                                                                               |
| 2017 <sup>a</sup> | OFF BUTTON             | This alarm indicates that the OFF button has been pressed.                                                                                                                                                                                                                                                                                                                                                                             |
| 2018              | PID SLEEP              | This alarm warns that the PID sleep function is active, which means that the motor could accelerate when the PID sleep function ends. To control PID sleep, use parameters 4022 - 4026 or 4122 - 4126.                                                                                                                                                                                                                                 |
| 2019              | ID RUN                 | The VFD is performing an ID run.                                                                                                                                                                                                                                                                                                                                                                                                       |
| 2020              | OVERRIDE               | Override mode is activated.                                                                                                                                                                                                                                                                                                                                                                                                            |
| 2021              | START ENABLE 1 MISSING | This alarm warns that the Start Enable 1 signal is missing. To control Start Enable 1 function, use parameter 1608. To correct, check the digital input configuration and the communication settings.                                                                                                                                                                                                                                  |
| 2022              | START ENABLE 2 MISSING | This alarm warns that the Start Enable 2 signal is missing. To control Start Enable 2 function, use parameter 1609. To correct, check the digital input configuration and the communication settings.                                                                                                                                                                                                                                  |
| 2023              | EMERGENCY STOP         | Emergency stop is activated.                                                                                                                                                                                                                                                                                                                                                                                                           |

NOTE(S):

- a. This alarm is not indicated by a relay output, even when the relay output is configured to indicate alarm conditions, parameter 1401 RELAY OUTPUT = 5 (ALARM) or 16 (FLT/ALARM).

**Table 37 — ACS320 Fault Codes**

| FAULT CODE | FAULT NAME IN PANEL | DESCRIPTION AND RECOMMENDED CORRECTIVE ACTION                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1          | OVERCURRENT         | Output current is excessive. Check for excessive motor load, insufficient acceleration time (parameters 2202 ACCELER TIME 1, default 30 seconds), or faulty motor, motor cables or connections.                                                                                                                                                                                                                                               |
| 2          | DC OVERVOLT         | Intermediate circuit DC voltage is excessive. Check for static or transient over voltages in the input power supply, insufficient deceleration time (parameters 2203 DECELER TIME 1, default 30 seconds), or undersized brake chopper (if present).                                                                                                                                                                                           |
| 3          | DEV OVERTEMP        | Drive heat sink is overheated. Temperature is at or above 115°C (239°F). Check for fan failure, obstructions in the air flow, dirt or dust coating on the heat sink, excessive ambient temperature, or excessive motor load.                                                                                                                                                                                                                  |
| 4          | SHORT CIRC          | Fault current. Check for short-circuit in the motor cable(s) or motor or supply disturbances.                                                                                                                                                                                                                                                                                                                                                 |
| 5          | OVERLOAD            | Inverter overload condition. The drive output current exceeds the ratings.                                                                                                                                                                                                                                                                                                                                                                    |
| 6          | DC UNDERVOLT        | Intermediate circuit DC voltage is not sufficient. Check for missing phase in the input power supply, blown fuse, or under voltage on main circuit.                                                                                                                                                                                                                                                                                           |
| 7          | AI1 LOSS            | Analog input 1 loss. Analog input value is less than AI1 FLT LIMIT (3021). Check source and connection for analog input and parameter settings for AI1 FLT LIMIT (3021) and 3001 AI<MIN FUNCTION.                                                                                                                                                                                                                                             |
| 8          | AI2 LOSS            | Analog input 2 loss. Analog input value is less than AI2 FLT LIMIT (3022). Check source and connection for analog input and parameter settings for AI2 FLT LIMIT (3022) and 3001 AI<MIN FUNCTION.                                                                                                                                                                                                                                             |
| 9          | MOT OVERTEMP        | Motor is too hot, as estimated by the drive. Check for overloaded motor. Adjust the parameters used for the estimate (3005 - 3009). Check the temperature sensors and Group 35 parameters.                                                                                                                                                                                                                                                    |
| 10         | PANEL LOSS          | Panel communication is lost and either drive is in local control mode (the control panel displays LOC), or drive is in remote control mode (REM) and is parameterized to accept start/stop, direction or reference from the control panel. To correct check the communication lines and connections. Check parameter 3002 PANEL COMM ERROR, parameters in Group 10: Command Inputs and Group 11:Reference Select (if drive operation is REM). |
| 11         | ID RUN FAIL         | The motor ID run was not completed successfully. Check motor connections.                                                                                                                                                                                                                                                                                                                                                                     |
| 12         | MOTOR STALL         | Motor or process stall. Motor is operating in the stall region. Check for excessive load or insufficient motor power. Check parameters 3010 - 3012.                                                                                                                                                                                                                                                                                           |
| 13         | RESERVED            | Not used.                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| 14         | EXT FAULT 1         | Digital input defined to report first external fault is active. See parameter 3003 EXTERNAL FAULT 1.                                                                                                                                                                                                                                                                                                                                          |

**Table 37 — ACS320 Fault Codes (cont)**

| FAULT CODE | FAULT NAME IN PANEL   | DESCRIPTION AND RECOMMENDED CORRECTIVE ACTION                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15         | EXT FAULT 2           | Digital input defined to report second external fault is active. See parameter 3004 EXTERNAL FAULT 2.                                                                                                                                                                                                                                                                                                                                                                               |
| 16         | EARTH FAULT           | The load on the input power system is out of balance. Check for faults in the motor or motor cable. Verify that motor cable does not exceed maximum specified length.                                                                                                                                                                                                                                                                                                               |
| 17         | UNDERLOAD             | Motor load is lower than expected. Check for disconnected load. Check parameters 3013 UNDERLOAD FUNCTION through 3015 UNDERLOAD CURVE.                                                                                                                                                                                                                                                                                                                                              |
| 18         | THERM FAIL            | Internal fault. The thermistor measuring the internal temperature of the drive is open or shorted. Contact Carrier.                                                                                                                                                                                                                                                                                                                                                                 |
| 19         | OPEX LINK             | Internal fault. A communication-related problem has been detected between the OMIO and OINT boards. Contact Carrier.                                                                                                                                                                                                                                                                                                                                                                |
| 20         | OPEX PWR              | Internal fault. Low voltage condition detected on the OINT board. Contact Carrier.                                                                                                                                                                                                                                                                                                                                                                                                  |
| 21         | CURR MEAS             | Internal fault. Current measurement is out of range. Contact Carrier.                                                                                                                                                                                                                                                                                                                                                                                                               |
| 22         | SUPPLY PHASE          | Ripple voltage in the DC link is too high. Check for missing main phase or blown fuse.                                                                                                                                                                                                                                                                                                                                                                                              |
| 23         | RESERVED              | Not used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 24         | OVERSPEED             | Motor speed is greater than 120% of the larger (in magnitude) of 2001 MINIMUM SPEED or 2002 MAXIMUM SPEED parameters. Check parameter settings for 2001 and 2002. Check adequacy of motor braking torque. Check applicability of torque control. Check brake chopper and resistor.                                                                                                                                                                                                  |
| 25         | RESERVED              | Not used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 26         | DRIVE ID              | Internal fault. Configuration block drive ID is not valid.                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 27         | CONFIG FILE           | Internal configuration file has an error. Contact Carrier.                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 28         | SERIAL 1 ERR          | Field bus communication has timed out. Check fault setup (3018 COMM FAULT FUNC and 3019 COMM FAULT TIME). Check communication settings (Group 51 or 53 as appropriate). Check for poor connections and/or noise on line.                                                                                                                                                                                                                                                            |
| 29         | EFB CON FILE          | Error in reading the configuration file for the field bus adapter.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| 30         | FORCE TRIP            | Fault trip forced by the field bus. See the field bus reference literature.                                                                                                                                                                                                                                                                                                                                                                                                         |
| 31         | EFB 1                 | Fault code reserved for the EFB protocol application. The meaning is protocol dependent.                                                                                                                                                                                                                                                                                                                                                                                            |
| 32         | EFB 2                 | Fault code reserved for the EFB protocol application. The meaning is protocol dependent.                                                                                                                                                                                                                                                                                                                                                                                            |
| 33         | EFB 3                 | Fault code reserved for the EFB protocol application. The meaning is protocol dependent.                                                                                                                                                                                                                                                                                                                                                                                            |
| 34         | MOTOR PHASE           | Fault in the motor circuit. One of the motor phases is lost. Check for motor fault, motor cable fault, thermal relay fault, or internal fault.                                                                                                                                                                                                                                                                                                                                      |
| 35         | OUTP WIRING           | Error in power wiring suspected. Check that input power wired to drive output. Check for ground faults.                                                                                                                                                                                                                                                                                                                                                                             |
| 101 - 105  | SYSTEM ERROR          | Error internal to the drive. Contact Carrier and report the error number.                                                                                                                                                                                                                                                                                                                                                                                                           |
| 1000       | PAR HZRPM             | Parameter values are inconsistent. Check for any of the following:<br>2001 MINIMUM SPEED > 2002 MAXIMUM SPEED<br>2007 MINIMUM FREQ > 2008 MAXIMUM FREQ<br>2001 MINIMUM SPEED / 9908 MOTOR NOM SPEED is outside of the range: -128/+128<br>2002 MAXIMUM SPEED / 9908 MOTOR NOM SPEED is outside of the range: -128/+128<br>2007 MINIMUM FREQ / 9907 MOTOR NOM FREQ is outside of the range: - 128/+128<br>2008 MAXIMUM FREQ / 9907 MOTOR NOM FREQ is outside of the range: -128/+128 |
| 1001       | PAR PFA REFNG         | Parameter values are inconsistent. Check that 2007 MINIMUM FREQ is negative, when 8123 PFA ENABLE is active.                                                                                                                                                                                                                                                                                                                                                                        |
| 1002       | PAR PFA IOCNF         | Parameter values are inconsistent. The number of programmed PFA relays does not match with Interlock configuration, when 8123 PFA ENABLE is active. Check consistency of RELAY OUTPUT parameters 1401 - 1403, and 1410 - 1412. Check 8117 NR OF AUX MOTORS, 8118 AUTOCHANGE INTERV, and 8120 INTERLOCKS.                                                                                                                                                                            |
| 1003       | PAR AI SCALE          | Parameter values are inconsistent. Check that parameter 1301 AI 1 MIN > 1302 AI 1 MAX and that parameter 1304 AI 2 MIN > 1305 AI 2 MAX.                                                                                                                                                                                                                                                                                                                                             |
| 1004       | PAR AO SCALE          | Parameter values are inconsistent. Check that parameter 1504 AO 1 MIN > 1505 AO 1 MAX and that parameter 1510 AO 2 MIN > 1511 AO 2 MAX.                                                                                                                                                                                                                                                                                                                                             |
| 1005       | PAR PCU 2             | Parameter values for power control are inconsistent: Improper motor nominal kVA or motor nominal power. Check the following parameters:<br>$1.1 < (9906 \text{ MOTOR NOM CURR} * 9905 \text{ MOTOR NOM VOLT} * 1.73 / \text{PN}) < 2.6$<br>Where: PN = $1000 * 9909 \text{ MOTOR NOM POWER}$ (if units are kW) or PN = 746<br>* 9909 MOTOR NOM POWER (if units are HP, e.g., in US)                                                                                                 |
| 1006       | PAR EXT RO            | Parameter values are inconsistent. Check the extension relay module for connection and 1410 - 1412 RELAY OUTPUTS 4 - 6 have non-zero values.                                                                                                                                                                                                                                                                                                                                        |
| 1007       | PAR FBUS              | Parameter values are inconsistent. Check that a parameter is set for field bus control (e.g., 1001 EXT1 COMMANDS = 10 (COMM)), but 9802 COMM PROT SEL = 0.                                                                                                                                                                                                                                                                                                                          |
| 1008       | PAR PFA MODE          | Parameter values are inconsistent. The 9904 MOTOR CTRL MODE must = 3 (SCALAR SPEED) when 8123 PFA ENABLE activated.                                                                                                                                                                                                                                                                                                                                                                 |
| 1009       | PAR PCU 1             | Parameter values for power control are inconsistent or improper motor nominal frequency or speed. Check for both of the following:<br>$1 < (60 * 9907 \text{ MOTOR NOM FREQ} / 9908 \text{ MOTOR NOM SPEED}) < 16$<br>$0.8 < 9908 \text{ MOTOR NOM SPEED} / (120 * 9907 \text{ MOTOR NOM FREQ} / \text{Motor poles}) < 0.992$                                                                                                                                                       |
| 1010       | OVERRIDE/PFA CONFLICT | Override mode is enabled and PFA is activated at the same time. This cannot be done because PFA interlocks cannot be observed in the override mode.                                                                                                                                                                                                                                                                                                                                 |

## Reset After Using Start-Up Assistant

### ⚠ CAUTION

#### CONFIGURATION OVERRIDE HAZARD

Do not use ABB or Carrier start-up assistant on this VFD application. Use of start-up assistant will override the factory VFD configurations.

The following section details how to reset the VFD after accidentally using Start-Up Assistant.


When the VFD has been incorrectly programmed by using Start-Up Assistant, the drive may be locked in an override loop because of motor ID Run Fail (error code 11) and First Start (error code 2025).

Use the following procedure to reset the factory configurations for ACS320 VFDs:

1. Disconnect unit power. Lock-out/tag out.
2. Remove the VFD's terminal cover.
3. Disconnect the D11 input at terminal 12. The terminals are numbered on the bottom of the block (see Fig. 44 for the location of terminal block that contains terminal 12).
4. Connect the VFD Keypad accessory to the VFD (if not already connected).

NOTE: The VFD Keypad is a field-installed accessory; it is not included with the factory-installed VFD option.

5. Go immediately to parameter 1705 OVERRIDE ENABLE and select "Off".

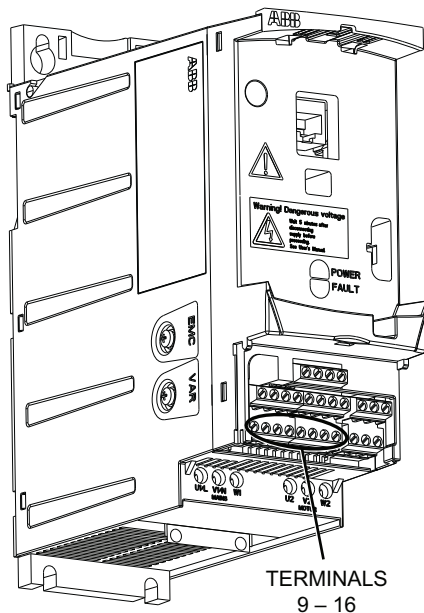


**Fig. 44 — ACS320 Terminal Blocks**

6. At this point, providing you have a clean backup of the drive, you can select "DOWNLOAD FULL SET" from "PAR BACKUP" from the Main Menu. If you do not have a clean backup the drive will have to be manually programmed following the instructions in this document.
7. When the correct parameters have been uploaded, disconnect power to the unit, reconnect D11 to Terminal 12, and replace the terminal cover.
8. Reconnect power to the unit. The VFD is now commissioned from the backup file.


## ACH580 Operation with Remote Keypad

The VFD keypad is shown in Fig. 45 and Fig 46. The functions of the Left and Right Softkeys (⏪ and ⏩) change depending on what is displayed on the screen. The function of Left Softkey matches the word in the lower left-hand box on the display screen. The function of Right Softkey matches the word in the lower right-hand box on the display screen. If the box is empty, then the Softkey does not have a function on that specific screen. The Arrow Keys are used to navigate through the menus. The Off key is used to turn off the VFD. The AUTO key is used to change control of the drive to automatic control. The Hand key is used to change control of the drive to local (handheld) control. The Help key is used to access the help screens.

For the VFD to operate on the units covered by this document, the drive must be set in AUTO mode. The word "AUTO" will appear in the upper left hand corner of the VFD display. Press the AUTO button to set the drive in AUTO mode.

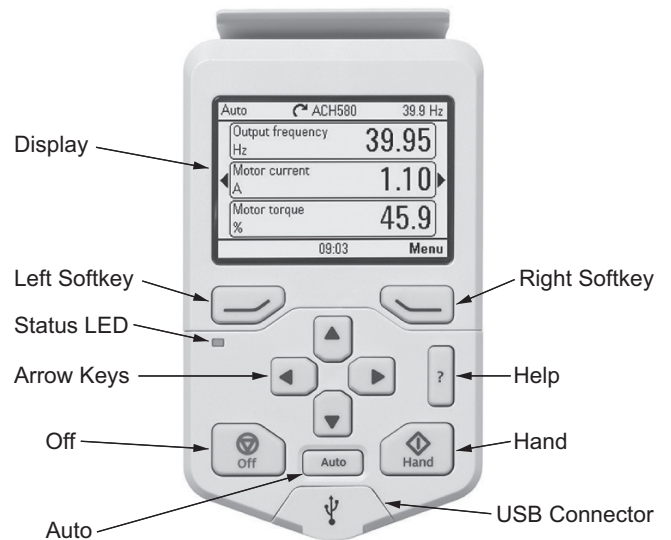

**Fig. 45 — ACH580 VFD Keypad — Front**

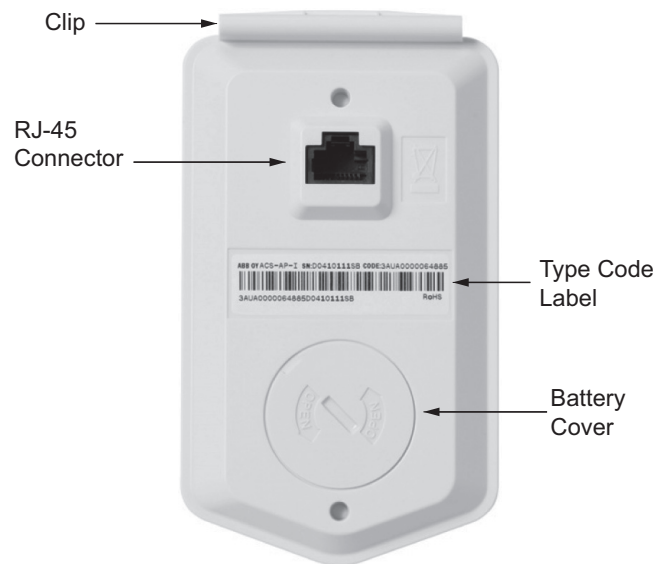

**Fig. 46 — ACH580 VFD Keypad — Back**

## FIRST START ASSISTANT

Initial start-up has been performed at the factory. Use of the start up assistant will override factory VFD configurations.


### ⚠ CAUTION

#### CONFIGURATION OVERRIDE HAZARD

Do not use ABB or Carrier start-up assistant on this VFD application. Use of start-up assistant will override the factory VFD configurations.

Use the following procedure to reset the factory configurations for ACH580 VFDs:

1. Disconnect unit power. Lock-out/tag-out.
2. Remove the VFD's front cover.
3. Disconnect the DI1 input at Terminal 13 (see Fig. 47 for location of DI1).

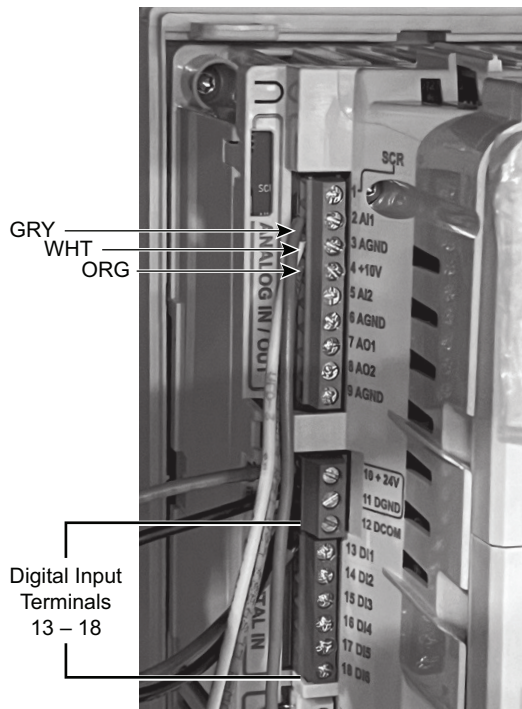

**Fig. 47 — Digital Input Terminal Block Location on ACH580 VFD**

4. Connect the VFD Keypad accessory to the VFD (if not already connected).

NOTE: The VFD Keypad is a field-installed accessory; it is not included with the factory-installed VFD option.

5. At this point, providing you have a clean backup of the drive, you can select “RESTORE” from “BACKUP” Menu from the Main Menu.

Please Note: To restore a backup, the drive has to be in Local control.

6. If you do not have a clean backup the drive will have to be manually programmed following the instructions in this document.
7. When the correct parameters have been uploaded, disconnect power to the unit, reconnect DI1 to Terminal 13, and replace the VFD cover.
8. Reconnect power to the unit. The VFD is now commissioned from the backup file.

## START UP BY CHANGING PARAMETERS INDIVIDUALLY

Initial start-up is performed at the factory. To start up the VFD by changing individual parameters, perform the following procedure:

1. Select MENU (Press ). The Main menu is displayed.
2. Use the UP or DOWN keys to highlight PARAMETERS on the display screen and press ENTER (Press ).
3. Use the UP or DOWN keys to highlight the desired parameter group and press SEL (Press ).
4. Use the UP or DOWN keys to highlight the desired parameter and press EDIT (Press ).
5. Use the UP or DOWN keys to change the value of the parameter.
6. Press SAVE (Press ) to store the modified value. Press CANCEL (Press ) to keep the previous value. Any modifications that are not saved will not be changed.
7. Choose another parameter or press EXIT/BACK (Press ) to return to the listing of parameter groups. Continue until all the parameters have been configured and then press EXIT/BACK (Press ) to return to the main menu.

NOTE: The current parameter value appears above the highlight parameter. To view the default parameter value, press the UP and DOWN keys simultaneously.

### ACH580 VFD Modes

The VFD has several different modes for configuring, operating, and diagnosing the VFD. The modes are:

1. Standard Display mode — shows drive status information and operates the drive
2. Parameters mode — edits parameter values individually
3. Start-up Assistant mode — guides the start up and configuration
4. Changed Parameters mode — shows all changed parameters
5. Drive Parameter Backup mode — stores or uploads the parameters
6. Clock Set mode — sets the time and date for the drive
7. I/O Settings mode — checks and edits the I/O settings

### ACH580 STANDARD DISPLAY MODE

Use the standard display mode to read information on the drive status and operate the drive. To reach the standard display mode, press BACK until the LCD display shows status information as described below. See Fig. 48.


The top line of the LCD display shows the basic status information of the drive. The HAND icon indicates that the drive control is local from the control panel. The AUTO icon indicates that the drive is in remote control mode, such as the basic I/O or field bus.

The arrow icon indicates the drive and motor rotation status. A rotating arrow (clockwise or counterclockwise) indicates that the drive is running and at set point and the shaft direction is forward or reverse. A rotating blinking arrow indicates that the drive is running but not at set point. A stationary arrow indicates that the drive is stopped. For the units covered in this manual, the correct display rotation is clockwise.

The upper right corner shows the frequency set point that the drive will maintain. From Home view press “Options” then “Edit Home View” to change the Home layout, the middle of the LCD display can be configured to display 3 parameter values, Graphs or digital indicators. The default display shows (OUTPUT FREQ) in percent speed, (CURRENT) in amperes, and (A11) in voltage DC.

The bottom corners of the LCD display show the functions currently assigned to the two soft keys. The lower middle displays the current time (if configured to show the time).

The first time the drive is powered up, it is in the OFF mode. To switch to local hand-held control and control the drive using the control panel, press and hold the HAND button. Pressing the HAND button switches the drive to hand control while keeping the drive running. Press the AUTO button to switch to remote input control. To start the drive press the HAND or AUTO buttons, to stop the drive press the OFF button.

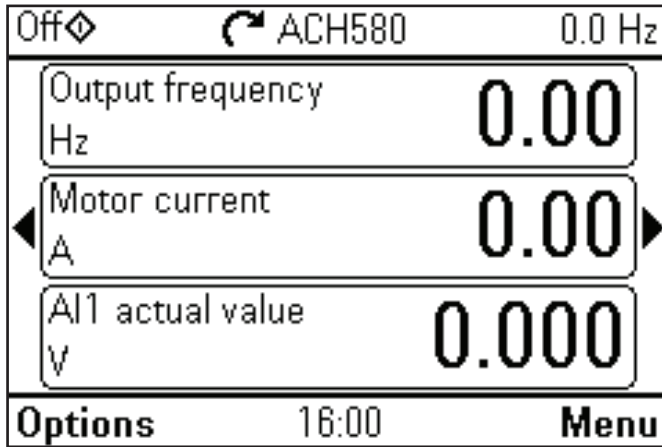

**Fig. 48 — ACH580 Standard Display Example**

The top line of the LCD display shows the basic status information of the drive. The HAND icon indicates that the drive control is local from the control panel. The AUTO icon indicates that the drive is in remote control mode, such as the basic I/O or field bus.

The arrow icon indicates the drive and motor rotation status. A rotating arrow (clockwise or counterclockwise) indicates that the drive is running and at set point and the shaft direction is forward or reverse. A rotating blinking arrow indicates that the drive is running but not at set point. A stationary arrow indicates that the drive is stopped. For the units covered in this manual, the correct display rotation is clockwise.

The upper right corner shows the frequency set point that the drive will maintain.

From Home view press “Options” then “Edit Home View” to change the Home layout, the middle of the LCD display can be configured to display 3 parameter values, Graphs or digital indicators. The default display shows (OUTPUT FREQ) in percent speed, (CURRENT) in amperes, and (All) in voltage DC.

The bottom corners of the LCD display show the functions currently assigned to the two soft keys. The lower middle displays the current time (if configured to show the time).

The first time the drive is powered up, it is in the OFF mode. To switch to local hand-held control and control the drive using the control panel, press and hold the HAND button. Pressing the HAND button switches the drive to hand control while keeping the drive running. Press the AUTO button to switch to remote input control. To start the drive press the HAND or AUTO buttons, to stop the drive press the OFF button.

To adjust the speed in HAND mode, press the UP or DOWN buttons (the reference changes immediately). The reference can be modified in the local control (HAND) mode, and can be parameterized (using Group 11 reference select) to also allow modification in the remote control mode.

## PARAMETERS MODE

The Parameters mode is used to change the parameters on the drive. To change parameters, perform the following procedure:

1. Select MENU (Press ). The Main menu will be displayed.
2. Use the UP or DOWN keys to highlight PARAMETERS on the display screen and press Select (Press ).

3. Use the UP or DOWN keys to highlight the desired parameter group and press Select (Press ).
4. Use the UP or DOWN keys to highlight the desired parameter and press EDIT (Press ).
5. Use the UP or DOWN keys to change the value of the parameter.
6. Press SAVE (Press ) to store the modified value. Press CANCEL (Press ) to keep the previous value. Any modifications that are not saved will not be changed.
7. Choose another parameter or press BACK (Press ) to return to the listing of parameter groups. Continue until all the parameters have been configured and then press EXIT (Press ) to return to the main menu.

## CHANGED PARAMETERS MODE

The Changed Parameters mode is used to view and edit recently changed parameters on the drive. To view the changed parameters, perform the following procedure:

1. Select MENU (Press ). The Main menu will be displayed.
2. Use the UP or DOWN keys to highlight PARAMETERS on the display screen and press Select (Press ).
3. Use the UP or DOWN keys to highlight MODIFIED on the display screen and press Select (Press ). A list of the recently changed parameters will be displayed.
4. Use the UP or DOWN keys to highlight the desired parameter group and press EDIT (Press ) to change the parameter if desired.
5. Press BACK (Press ) to exit the Changed Parameters mode.

## DRIVE PARAMETER BACKUP MODE


The drive parameter back up mode is used to export the parameters from one drive to another. The parameters can be uploaded from a VFD to the removable control panel. The control panel can then be transferred to another drive and the parameters downloaded into memory.

Depending on the motor and application, there are two options available. The first option is to download all parameters. This copies both application and motor parameters to the drive from the control panel. This is recommended when using the same application for drives of the same size. This can also be used to create a backup of the parameters group for the drive.

The second option downloads only the application parameters to the drive. This is recommended when using the same application for drives of different sizes. Parameters 99.07, 99.06, 99.08, 99.09, 99.10, and group 51 parameters and internal motor parameters are not copied.

### Upload All Parameters

To upload and store parameters in the control panel from the VFD insert the Keypad into the VFD slot (Fig. 49) and animation will appear loading the VFD configuration.

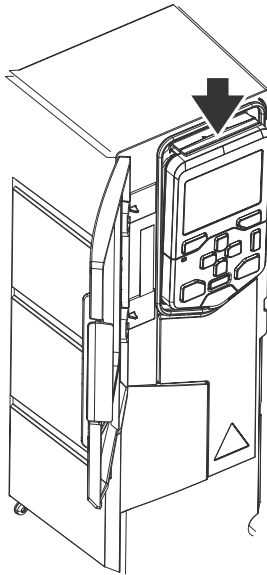

**Fig. 49 — Insert Keypad in Slot**

#### **Download All Parameters From Backup**

To download all parameters from the control panel to the VFD, perform the following procedure:

1. Install the control panel with the correct parameters onto the VFD.
2. Select MENU (Press ) . The Main menu will be displayed.
3. Use the UP or DOWN keys to highlight BACKUPS on the display screen and press SEL (Press ) .
4. Use the UP or DOWN keys to highlight the backup file and press SEL (Press ) .
5. The text “Restoring Parameters” will be displayed with a progress indicator. To stop the process, select CANCEL (Press ) .
6. When the download is complete, the text “Parameter download successful” will be displayed.
7. The display will then return to the PAR BACKUP menu. Select BACK (Press ) to return to the main menu.
8. The control panel can now be disconnected from the drive.

#### **CLOCK SET MODE**

Use the clock set mode to set the date and time for the internal clock of the VFD. In order to use the timer functions of the VFD control, the internal clock must be set. The date is used to determine weekdays and is visible in the fault logs.

To set the clock, perform the following procedure:

1. Select MENU (Press ) . The Main menu will be displayed.
2. Use the UP or DOWN keys to highlight PRIMARY SETT. on the display screen and press ENTER (Press ) . The Sub list will be displayed.
3. Use the UP or DOWN keys to highlight Clock, region, display and press SEL (Press ) . This parameter is used to display or hide the clock on the screen. Use the UP or DOWN keys to change the parameter setting. Press OK (Press ) to save the configuration and return to the Sub list menu.
4. Use the UP or DOWN keys to highlight SET TIME and press SEL (Press ) . Use the UP or DOWN keys to change the hours and minutes. Press OK (Press ) to save the configuration and return to the Clock Set menu.

5. Use the UP or DOWN keys to highlight TIME FORMAT and press SEL (Press ) . Use the UP or DOWN keys to change the parameter setting. Press OK (Press ) to save the configuration and return to the Clock Set menu.
6. Use the UP or DOWN keys to highlight SET DATE and press SEL (Press ) . Use the UP or DOWN keys to change the day, month, and year. Press OK (Press ) to save the configuration and return to the Clock Set menu.
7. Use the UP or DOWN keys to highlight DATE FORMAT and press SEL (Press ) . Use the UP or DOWN keys to change the parameter setting. Press OK (Press ) to save the configuration and return to the Clock Set menu.
8. Press BACK (Press ) . twice to return to the main menu.

#### **I/O SETTINGS MODE**

Use the I/O Settings mode to view and edit the I/O settings.

To configure the I/O settings, perform the following procedure:

1. Select MENU (Press ) . The Main menu will be displayed.
2. Use the UP or DOWN keys to highlight PRIMARY SETT. on the display screen and press SEL (Press ) . The Sub list will be displayed.
3. Use the UP or DOWN keys to highlight ADVANCED OPTIONS/FUNCTIONS. on the display screen and press SEL (Press ) . The Sub list will be displayed.
4. Use the UP or DOWN keys to highlight I/O SETTINGS on the display screen and press SEL (Press ) . The I/O Settings parameter list will be displayed.
5. Use the UP or DOWN keys to highlight the desired I/O setting and press SEL (Press ) .
6. Use the UP or DOWN keys to select the parameter to view. Press OK (Press ) .
7. Use the UP or DOWN keys to change the parameter setting. Press SAVE (Press ) . to save the configuration. Press CANCEL (SOFT KEY 1) to keep the previous value. Any modifications that are not saved will not be changed.
8. Press BACK (Press ) twice to return to the main menu.

#### **ACH580 VFD Diagnostics**

The drive detects error situations and reports them using:

- Status LED on the control panel
- Control panel display
- The Fault Word and Alarm Word parameter bits

The form of the display depends on the severity of the error. The user can specify the severity for many errors by directing the drive to ignore the error situation, report the situation as an alarm, or report the situation as a fault.

#### **FAULTS (RED LED LIT)**

The VFD signals that it has detected a severe error, or fault, by:

- Enabling the red LED on the drive (LED is either steady or flashing)
- Setting an appropriate bit in a Fault Word parameter
- Overriding the control panel display with the display of a fault code
- Stopping the motor (if it was on)

The fault code on the control panel display is temporary. Pressing the MENU, (Press ) . buttons removes the fault message. The message reappears after a few seconds if the control panel is not touched, and the fault is still active. See Table 38 for a list of fault codes.

ALARMS (GREEN LED FLASHING)

For less severe errors, called alarms, the diagnostic display is advisory. For these situations, the drive is simply reporting that it had detected something unusual. In these situations, the drive:

- Flashes the green LED on the drive (does not apply to alarms that arise from control panel operation errors)
- Sets an appropriate bit in an Alarm Word parameter
- Overrides the control panel display with the display of an alarm code and/or name

Alarm messages disappear from the control panel display after a few seconds. The message returns periodically as long as the alarm condition exists. See Table 38 for a list of alarm codes.

CORRECTING FAULTS

The recommended corrective action for faults is shown in Table 38. The VFD can also be reset to remove the fault. If an external source for a start command is selected and is active, the VFD may start immediately after fault reset.

To reset a fault indicated by a flashing red LED, turn off the power for 5 minutes. To reset a fault indicated by a red LED (not flashing), press RESET from the control panel or turn off the power for 5 minutes. Depending on the value of parameter, digital input or serial communication could also be used to reset the drive. When the fault has been corrected, the motor can be started.

CORRECTING ALARMS

To correct alarms, first determine if the alarm requires any corrective action (action is not always required). Use Table 38 to find and address the root cause of the problem.

If diagnostics troubleshooting has determined that the drive is defective during the warranty period, contact Carrier.

ACH180 VFD STANDARD KEYPAD DETAIL

By default, the ACH180 has an integrated control panel. See Fig. 50.

1. Display — Shows the Home view as default.
2. Status LED — Green and red colors indicate the state and potential problems.
3. Back key — Opens the Options view.
4. Arrow keys — For menu navigation and setting values.
5. OK key — Opens the Menu in the Home view.
6. Off key— Stops the drive and switches to the Off mode.
7. Auto/Hand key — Opens a selection screen view that allows the user to select between Auto and Hand modes.


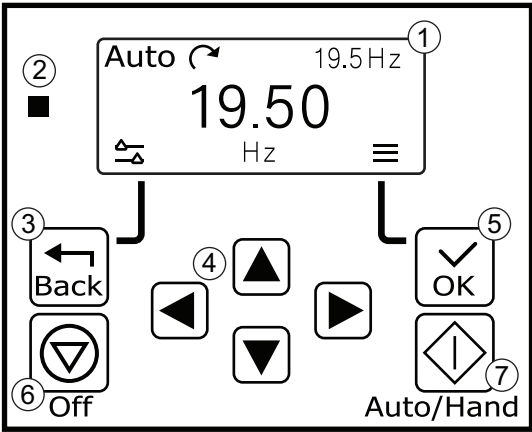


Fig. 50 — ACH180 Intergrated Keypad

Submenus

The Main menu items have submenus. Some submenus also have menus and/or option lists. The content of the submenus depends on the drive type.

The Home view is the main view. You can open the main Menu and Options menu from the Home view. See Fig. 51.

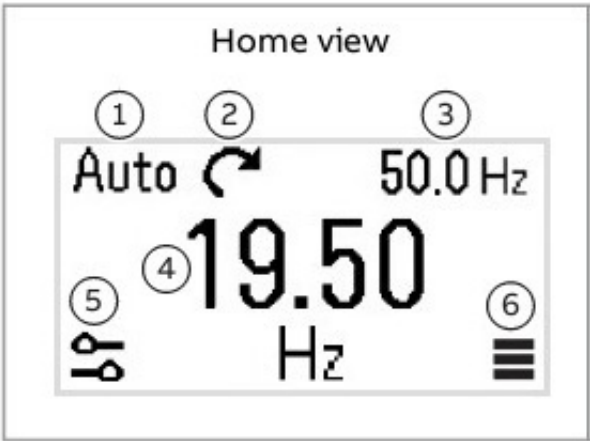

|   |                                         |
|---|-----------------------------------------|
| 1 | Control Location - Hand, Off or Auto    |
| 2 | Rotation Direction - Forward Or Reverse |
| 3 | Location Reference Setting - Enabled    |
| 4 | Frequency - Target                      |
| 5 | Options Menu - Quick Access Menu        |
| 6 | Main Menu - Menu List                   |

Fig. 51 — ACH180 Home View

Options Menu and Main Menu

The ACH180 drives have 5 menu options available (see Fig. 5):

- motor data/motor parameters
- motor Control
- diagnostics
- energy efficiency
- parameters

Figures 52-57 show the available options and information within each of the submenus.


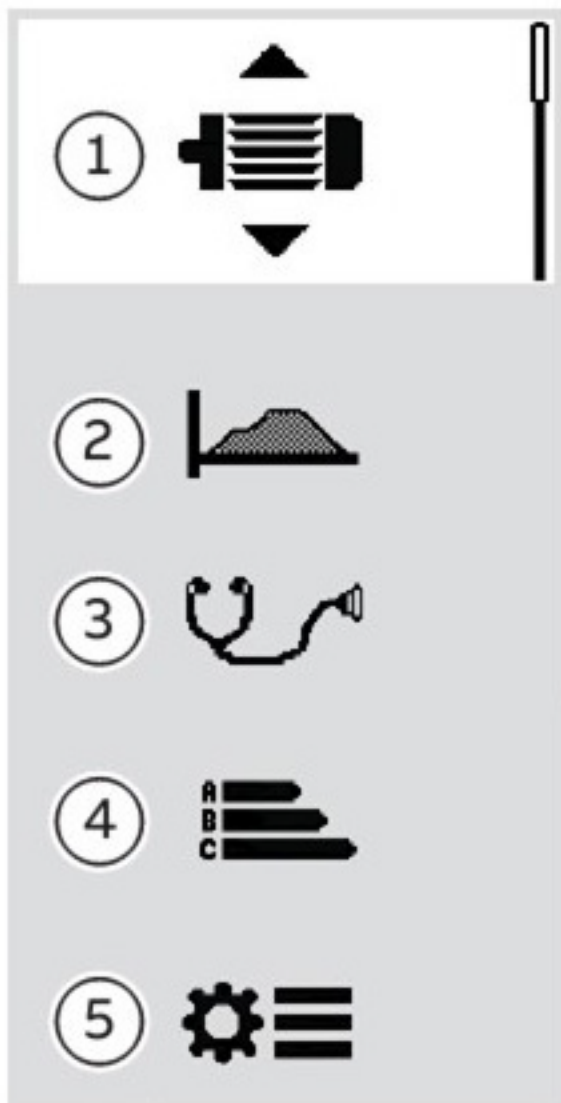



Fig. 52 — ACH180 Options Menu Items

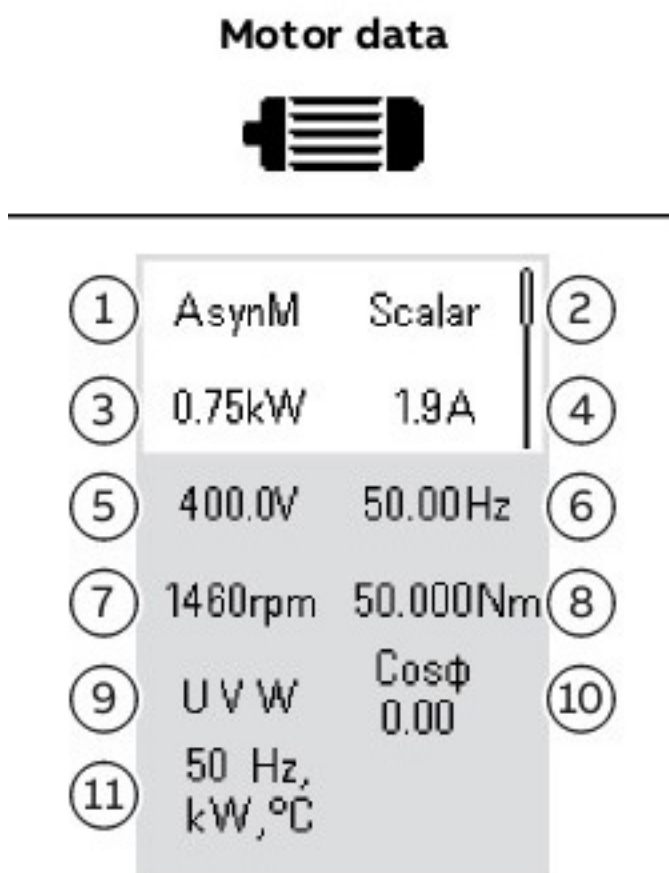

|    |                                  |
|----|----------------------------------|
| 1  | Motor Type - AsynM, PMSM, EC, Ti |
| 2  | Control Mode - Scalar, Vector    |
| 3  | Nominal Power                    |
| 4  | Nominal Current                  |
| 5  | Nominal Voltage                  |
| 6  | Nominal Frequency                |
| 7  | Nominal Speed                    |
| 8  | Nominal Torque                   |
| 9  | Phase Order, U V W, U W V        |
| 10 | Nominal Cosphi                   |
| 11 | Unit Selection, SI or US Units   |

Fig. 53 — Motor Data Submenu

## Motor control

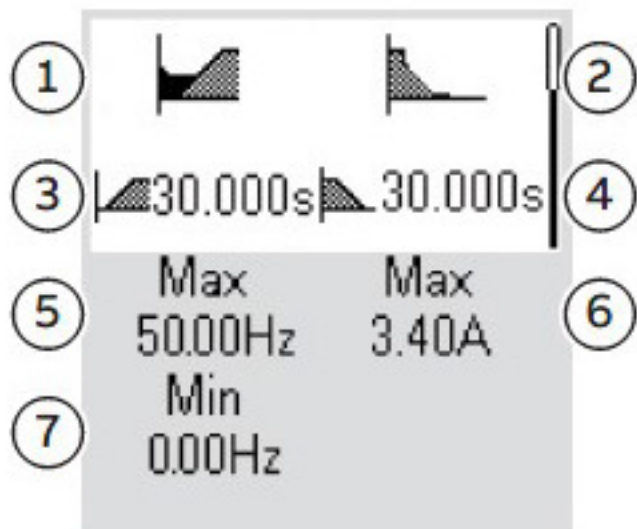

|   |                                    |
|---|------------------------------------|
| 1 | Start Mode - Const Time, Automatic |
| 2 | Stop Mode - Coast, Ramp, DC hold   |
| 3 | Acceleration Time                  |
| 4 | Deceleration Time                  |
| 5 | Maximum Allowed Speed              |
| 6 | Maximum Allowed curRent            |
| 7 | Minimum Allowed Speed              |

Fig. 54 — Motor Control Submenu


## Diagnostics



|   |                                                           |
|---|-----------------------------------------------------------|
| 1 | Active Fault - Shows the Fault Code                       |
| 2 | Fault History - List of Latest Fault Codes (newest first) |
| 3 | Active Warnings - Shows the Warning Code                  |
| 4 | Connection Status - Fieldbus and I/O Signals              |

Fig. 55 — Diagnostics Submenu

## Energy efficiency

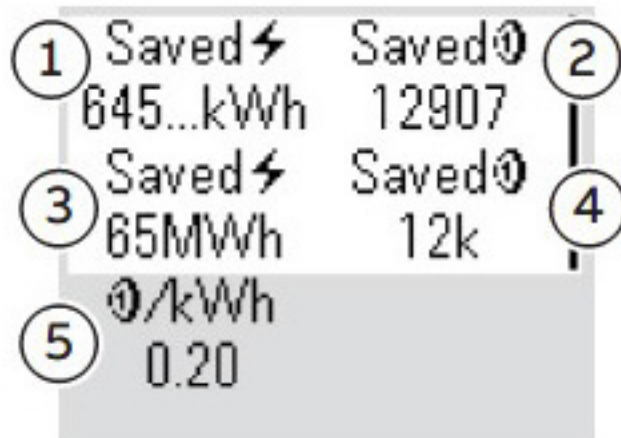

|   |                     |
|---|---------------------|
| 1 | Saved Energy in kWh |
| 2 | Saved Money         |
| 3 | Saved Energy in MW  |
| 4 | Saved Money x 1000  |
| 5 | Cost per kWh h      |

Fig. 56 — Energy Efficiency Submenu

## Parameters



|   |                                                                                     |
|---|-------------------------------------------------------------------------------------|
| 1 | Complete Parameter List - Groups Menu with Complete Parameters and Parameter Levels |
| 2 | Modified parameter list                                                             |
| 3 | Parameter Restore - Resets the Drive to the Factory Default Parameters              |

**Fig. 57 — Parameters Submenu**

### Faults

The VFD signals that it has detected a severe error, or fault, by:

- enabling the red LED on the drive (LED is either steady or flashing)
- setting an appropriate bit in a Fault Word parameter.
- overriding the control panel display with the display of a fault code

- stopping the motor (if it was on). Alarms (green LED flashing)

For less severe errors, called alarms, the diagnostic display is advisory. For these situations, the drive is simply reporting that it had detected something unusual. In these situations, the drive:

- flashes the green LED on the drive (does not apply to alarms that arise from control panel operation errors)
- sets an appropriate bit in an Alarm Word parameter
- overrides the control panel display with the display of an alarm code and/or name

### ACH180 VFD Diagnostics

The drive detects error situations and reports them using the Status LED on the control panel (see Fig. 50). See Table 38 for more information about the Fault and Alarm Codes.

#### FAULTS (RED LED LIT)

The VFD signals that it has detected a severe error, or fault, by:

1. enabling the red LED on the drive (LED is either steady or flashing)
2. setting an appropriate bit in a Fault Word parameter
3. overriding the control panel display with the display of a fault code
4. stopping the motor (if it was on)

#### ALARMS (GREEN LED FLASHING)

For less severe errors, called alarms, the diagnostic display is advisory. For these situations, the drive is simply reporting that it had detected something unusual. In these situations, the drive:

1. flashes the green LED on the drive (does not apply to alarms that arise from control panel operation errors)
2. sets an appropriate bit in an Alarm Word parameter
3. overrides the control panel display with the display of an alarm code and/or name

**Table 38 — Fault and Alarm Codes for ACH580/ACH180 VFD**

| CODE (HEX) | WARNING / AUX. CODE | CAUSE                                                                                                                                                                     | WHAT TO DO                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A2B1       | Overcurrent         | Output current has exceeded internal fault limit. In addition to an actual overcurrent situation, this warning may also be caused by an earth fault or supply phase loss. | Check motor load.<br>Check acceleration times in parameter group 23 Speed reference ramp (speed control) or 28 Frequency reference chain (frequency control). Also check parameters 46.01 Speed scaling, 46.02 Frequency scaling and 46.03 Torque scaling.<br>Check motor and motor cable (including phasing and delta/star connection). Check for an earth fault in motor or motor cables by measuring the insulation resistances of motor and motor cable. See chapter Electrical installation, section Checking the insulation of the assembly in the Hardware manual of the drive.<br>Check there are no contactors opening and closing in motor cable.<br>Check that the start-up data in parameter group 99 Motor data corresponds to the motor rating plate.<br>Check that there are no power factor correction capacitors or surge absorbers in motor cable. |
| A2B3       | Earth Leakage       | Drive has detected load unbalance typically due to earth fault in motor or motor cable.                                                                                   | Check there are no power factor correction capacitors or surge absorbers in motor cable.<br>Check for an earth fault in motor or motor cables by measuring the insulation resistances of motor and motor cable. See chapter Electrical installation, section Checking the insulation of the assembly in the Hardware manual of the drive. If an earth fault is found, fix or change the motor cable and/or motor. If no earth fault can be detected, contact your local Carrier representative.                                                                                                                                                                                                                                                                                                                                                                      |
| A2B4       | Short Circuit       | Short-circuit in motor cable(s) or motor.                                                                                                                                 | Check motor and motor cable for cabling errors.<br>Check motor and motor cable (including phasing and delta/star connection). Check for an earth fault in motor or motor cables by measuring the insulation resistances of motor and motor cable. See chapter Electrical installation, section Checking the insulation of the assembly in the Hardware manual of the drive.<br>Check there are no power factor correction capacitors or surge absorbers in motor cable.                                                                                                                                                                                                                                                                                                                                                                                              |

**Table 38 — Fault and Alarm Codes for ACH580/ACH180 VFD (cont)**

| CODE (HEX)  | WARNING / AUX. CODE                                                  | CAUSE                                                                                                                    | WHAT TO DO                                                                                                                                                                                                                                                                                                                                                              |
|-------------|----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A6A4</b> | Motor Nominal Value                                                  | The motor parameters are set incorrectly.                                                                                | Check the auxiliary code. See actions for each code below.                                                                                                                                                                                                                                                                                                              |
|             | Motor Nominal Value 0001                                             | The drive is not dimensioned correctly.                                                                                  | Check the auxiliary code. See actions for each code below. Check the settings of the motor configuration parameters in groups 98 and 99. Check that the drive is sized correctly for the motor.                                                                                                                                                                         |
|             | Motor Nominal Value / 0002                                           | Synchronous and nominal speeds differ too much.                                                                          | Check the settings of the motor configuration parameters in groups 98 and 99.                                                                                                                                                                                                                                                                                           |
|             | Motor Nominal Value / 0003                                           | Nominal speed is higher than synchronous speed with 1 pole pair.                                                         |                                                                                                                                                                                                                                                                                                                                                                         |
|             | Motor Nominal Value / 0004                                           | Nominal current is outside limits.                                                                                       |                                                                                                                                                                                                                                                                                                                                                                         |
|             | Motor Nominal Value / 0005                                           | Nominal voltage is outside limits.                                                                                       |                                                                                                                                                                                                                                                                                                                                                                         |
|             | Motor Nominal Value / 0006                                           | Mechanical nominal power is higher than electrical active power                                                          |                                                                                                                                                                                                                                                                                                                                                                         |
|             | Motor Nominal Value / 0007                                           | Nominal power not consistent with nominal speed and torque                                                               |                                                                                                                                                                                                                                                                                                                                                                         |
| <b>A780</b> | Motor Stall Programmable Warning: 31.24 Stall Function               | Motor is operating in stall region because of, for example, excessive load or insufficient motor power.                  | Check motor load and drive ratings. Check fault function parameters.                                                                                                                                                                                                                                                                                                    |
| <b>A783</b> | Motor Overload                                                       | Motor current is too high.                                                                                               | Check for overloaded motor. Adjust the parameters used for the motor overload function (35.51...35.53) and 35.55...35.56.                                                                                                                                                                                                                                               |
| <b>A784</b> | Motor Disconnect                                                     | All three output phases are disconnected from motor.                                                                     | Check that switches between drive and motor are closed. Check that all cables between drive and motor are connected and secured. If no issue was detected and drive output was actually connected to motor, contact Carrier.                                                                                                                                            |
| <b>A7AB</b> | Extension I/o Configuration Failure                                  | Installed extension module is not the same as configured.                                                                | Check that the installed extension module (shown by parameter 15.02 Detected extension module) is the same as selected by parameter 15.01 Extension module type.                                                                                                                                                                                                        |
| <b>A7C1</b> | FBA Communication Programmable Warning: 50.02 FBA Comm Loss Function | Cyclical communication between drive and fieldbus adapter module A or between PLC and fieldbus adapter module A is lost. | Check status of fieldbus communication. See user documentation of fieldbus interface. Check settings of parameter groups 50 Fieldbus adapter (FBA), 51 FBA A settings, 52 FBA A data in and 53 FBA A data out. Check cable connections. Check if communication master is able to communicate.                                                                           |
| <b>A7CE</b> | EFB Comm Loss Programmable Warning: 58.14 Communication Loss Action  | Communication break in embedded fieldbus (EFB) communication.                                                            | Check the status of the fieldbus master (online/offline/error etc.). Check cable connections to the EIA-485/X5 terminals 29, 30 and 31 on the control unit.                                                                                                                                                                                                             |
| <b>A7EE</b> | Panel Loss Programmable Warning: 49.05 Communication Loss Action     | Control panel or PC tool selected as active control location for drive has ceased communicating.                         | Check PC tool or control panel connection. Check control panel connector. Check mounting platform if being used. Disconnect and reconnect the control panel.                                                                                                                                                                                                            |
| <b>A88F</b> | Cooling Fan                                                          | Maintenance timer limit exceeded.                                                                                        | Consider changing the cooling fan. Parameter 05.04 Fan on-time counter shows the running time of the cooling fan.                                                                                                                                                                                                                                                       |
| <b>AFAA</b> | Auto Reset                                                           | A fault is about to be auto reset.                                                                                       | Informative warning. See the settings in parameter group 31 Fault functions.                                                                                                                                                                                                                                                                                            |
| <b>AFE1</b> | Emergency Stop (Off2)                                                | Drive has received an emergency stop (mode selection off2) command.                                                      | Check that it is safe to continue operation. Then return emergency stop push button to normal position. Restart drive. If the emergency stop was unintentional, check the source selected by parameter 21.05 Emergency stop source.                                                                                                                                     |
| <b>AFE2</b> | Emergency Stop (Off 1 Or Off3)                                       | Drive has received an emergency stop (mode selection off1 or off3) command.                                              | Check that it is safe to continue operation. Then return emergency stop push button to normal position. Restart drive. If the emergency stop was unintentional, check the source selected by parameter 21.05 Emergency stop source. Informative warning. See parameter 21.22 Start delay.                                                                               |
| <b>AFE9</b> | Start Delay                                                          | The start delay is active and the drive will start the motor after a predefined delay.                                   | Check that it is safe to continue operation. Then return emergency stop push button to normal position. Restart drive. If the emergency stop was unintentional, check the source selected by parameter 21.05 Emergency stop source. Informative warning. See parameter 21.22 Start delay. Check the setting of (and source selected by) parameter 20.40 Run permissive. |
| <b>AFED</b> | Run Permissive                                                       | Run permissive is keeping the drive from running the motor.                                                              |                                                                                                                                                                                                                                                                                                                                                                         |
| <b>AFEE</b> | Start Interlock 1                                                    | Start interlock 1 is keeping the drive from starting.                                                                    | Check the signal source selected for parameter 20.41 Start interlock 1.                                                                                                                                                                                                                                                                                                 |
| <b>AFEF</b> | Start Interlock 2                                                    | Start interlock 2 is keeping the drive from starting.                                                                    | Check the signal source selected for parameter 20.42 Start interlock 2.                                                                                                                                                                                                                                                                                                 |
| <b>AFF0</b> | Start Interlock 3                                                    | Start interlock 3 is keeping the drive from starting.                                                                    | Check the signal source selected for parameter 20.43 Start interlock 3.                                                                                                                                                                                                                                                                                                 |
| <b>AFF1</b> | Start Interlock 4                                                    | Start interlock 4 is keeping the drive from starting.                                                                    | Check the signal source selected for parameter 20.44 Start interlock 4.                                                                                                                                                                                                                                                                                                 |
| <b>AFF2</b> | Run Permissive Forced Warning                                        | A forced DI is used as a source for parameter 20.40 Run permissive.                                                      | If 20.40 Run permissive uses DIx as the source, check if the bit corresponding to DIx in parameter 10.03 DI force selection is 1.                                                                                                                                                                                                                                       |

**Table 38 — Fault and Alarm Codes for ACH580/ACH180 VFD (cont)**

| CODE (HEX)  | WARNING / AUX. CODE            | CAUSE                                                                                                                                                                      | WHAT TO DO                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>AFF3</b> | Start Interlock Forced Warning | One or more forced DIs is used as a source for one or more of parameters 20.41 Start interlock 1 ... 20.44 Start interlock 4.                                              | Check all parameters 20.41 Start interlock 1 ... 20.44 Start interlock 4. If any of these parameters uses DIx as the source, check if the bit corresponding to DIx in parameter 10.03 DI force selection is 1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>AFF5</b> | Override New Start Required    | The Safe torque off function was active and has been reset while in Override.                                                                                              | A new start signal is required to start the drive again.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>AFF6</b> | Identification Run             | Motor ID run will occur at next start.                                                                                                                                     | Informative warning.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>AFF8</b> | Motor Heating Active           | Pre-heating is being performed                                                                                                                                             | Informative warning.<br>Motor pre-heating is active. Current specified by parameter 21.16 Preheating current is being passed through the motor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>AFFE</b> | Override Active                | Drive is in Override mode.                                                                                                                                                 | Informative warning.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>B5A2</b> | Power Applied                  | The drive was powered up or the control board was rebooted successfully.                                                                                                   | Informative event.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>B681</b> | Hand Mode Selected             | The drive was placed in Hand mode.                                                                                                                                         | Informative event. Check the control panel to ensure that the current control location is correct.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>B682</b> | Off Mode Selected              | The drive was placed in Off mode.                                                                                                                                          | Informative event. Check the control panel to ensure that the current control location is correct.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>B683</b> | Auto Mode Selected             | The drive was placed in Auto mode.                                                                                                                                         | Informative event. Check the control panel to ensure that the current control location is correct.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>2310</b> | Overcurrent                    | Output current has exceeded internal fault limit.<br>In addition to an actual overcurrent situation, this fault may also be caused by an earth fault or supply phase loss. | Check motor load.<br>Check acceleration times in parameter group 23 Speed reference ramp (speed control) or 28 Frequency reference chain (frequency control). Also check parameters 46.01 Speed scaling, 46.02 Frequency scaling and 46.03 Torque scaling.<br>Check motor and motor cable (including phasing and delta/star connection). Check there are no contactors opening and closing in motor cable.<br>Check that the start-up data in parameter group 99 corresponds to the motor rating plate.<br>Check that there are no power factor correction capacitors or surge absorbers in motor cable.<br>Check for an earth fault in motor or motor cables by measuring the insulation resistances of motor and motor cable. See chapter Electrical installation, section Checking the insulation of the assembly in the Hardware manual of the drive. |
| <b>FF61</b> | ID Run                         | Motor ID run was not completed successfully.                                                                                                                               | Check safety circuit connections. For more information, see chapter The Safe torque off function in the Hardware manual of the drive and description of parameter 31.22 STO indication run/ stop.<br>Check the value of parameter 95.04 Control board supply.<br>Check the nominal motor values in parameter group 99 Motor data. Check that no external control system is connected to the drive.<br>Cycle the power to the drive (and its control unit, if powered separately). Check that no operation limits prevent the completion of the ID run. Restore parameters to default settings and try again.<br>Check that the motor shaft is not locked. Check the auxiliary code. See actions for each code below.                                                                                                                                      |

## RECOMMENDED MAINTENANCE (ACH180)

It is recommended that the ACH180 receive regular maintenance by the user. These maintenance items include:

- control panel cleaning
- Annual actions (see Table 39)
- cleaning the Heatsink

## Control Panel Cleaning

Use a soft damp cloth to clean the control panel. Avoid harsh cleaners which could scratch the display window.

**Table 39 — Recommended Annual Actions by the User**

|                                                 |                                                                |   |   |    |    |    |    |
|-------------------------------------------------|----------------------------------------------------------------|---|---|----|----|----|----|
| CONNECTIONS AND ENVIRONMENT                     |                                                                |   |   |    |    |    |    |
| Quality of the Supply Voltage                   | P                                                              |   |   |    |    |    |    |
| SPARE PARTS                                     |                                                                |   |   |    |    |    |    |
| Spare Parts                                     | I                                                              |   |   |    |    |    |    |
| Reforming DC Circuit Capacitors of Spare Drives | P                                                              |   |   |    |    |    |    |
| INSPECTIONS                                     |                                                                |   |   |    |    |    |    |
| Tightness of Terminals                          | I                                                              |   |   |    |    |    |    |
| Dustiness, Corrosion and Temperature            | I                                                              |   |   |    |    |    |    |
| Cleaning the Heatsink                           | P                                                              |   |   |    |    |    |    |
|                                                 |                                                                |   |   |    |    |    |    |
| MAINTENANCE TASK/OBJECT <sup>a,b</sup>          | YEARS FROM START-UP                                            |   |   |    |    |    |    |
|                                                 | 3                                                              | 6 | 9 | 12 | 15 | 18 | 21 |
| COOLING FANS                                    |                                                                |   |   |    |    |    |    |
| Main Cooling Fan (Frames R1-R4)                 |                                                                | R |   | R  |    | R  |    |
| FUNCTIONAL SAFETY                               |                                                                |   |   |    |    |    |    |
| Safety Function Test                            | I<br>(See the maintenance information of the safety function.) |   |   |    |    |    |    |
| Safety Component Expiry (mission time $T_M$ )   | 20 years                                                       |   |   |    |    |    |    |

NOTE(S):

- Maintenance and component replacement intervals are based on the assumption that the equipment is operated within the specified ratings and ambient conditions. Carrier recommends annual drive inspections to ensure the highest reliability and optimum performance.
- Long term operation near the specified maximum ratings or ambient conditions may require shorter maintenance intervals for certain components.

LEGEND

| <b>ACTION</b> | <b>DESCRIPTION</b>                                                                 |
|---------------|------------------------------------------------------------------------------------|
| <b>I</b> —    | Inspection (visual inspection and maintenance action if needed)                    |
| <b>P</b> —    | Performance of on/off-site work (commissioning, tests, measurements or other work) |
| <b>R</b> —    | Replacement                                                                        |

## VFD MAINTENANCE

If installed in an appropriate environment, the VFD requires very little maintenance.

Table 40 lists the routine maintenance intervals recommended by Carrier.

**Table 40 — Maintenance Intervals**


| MAINTENANCE                              | INTERVAL                                                             |
|------------------------------------------|----------------------------------------------------------------------|
| Heat Sink Temperature Check and Cleaning | Every 6 to 12 Months (depending on the dustiness of the environment) |
| Remote Keypad Battery Change             | Every Ten Years                                                      |

### Heat Sink Cleaning

The heat sink fins accumulate dust from the cooling air. In a normal environment check the heat sink annually, in a dusty environment check more often.

Use the following procedure to clean the heat sink on ACH580 VFDs:


1. Turn off and lock out unit power.
2. Remove the drive cover (see Fig. 63 on page 67).
3. Remove the top fan cover (see Fig. 58).
4. Blow clean compressed air (not humid) from bottom to top while simultaneously using a vacuum cleaner at the air outlet to trap the dust.
5. Replace the top fan cover.
6. Replace the drive cover.
7. Restore power.

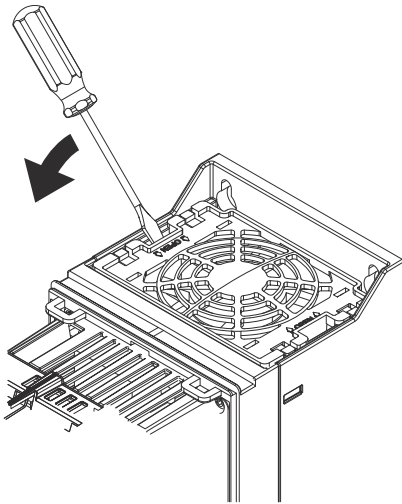

**Fig. 58 — Remove Top Cover/Fan Assembly on ACH580 VFD**

Use the following procedure to clean the heat sink on ACS320 VFDs:

1. Turn off and lock out unit power.
2. Insert a small straight blade screwdriver into the slot and press in to release the top cover as shown in Fig. 59.

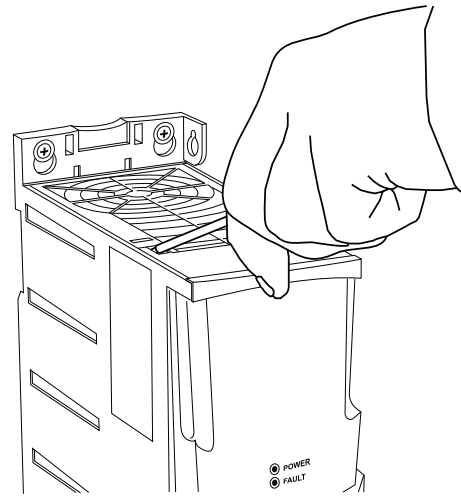

**Fig. 59 — Remove Top Cover on ACS320 VFD**

3. Blow clean compressed air (not humid) from top of ACS320 while simultaneously using a vacuum cleaner at the base to trap the dust.
4. Replace the top cover.
5. Restore power.

### Fan Replacement


The life span of the drive's cooling fan(s) depends on the drive usage and ambient temperature.

Fan failure can be predicted by the increasing noise from fan bearings and the gradual rise in the heat sink temperature in spite of heat sink cleaning. If the drive is operated in a critical part of a process, fan replacement is recommended once these symptoms start appearing. Replacement fans are available from Carrier.


#### ACH580 MAIN FAN REPLACEMENT

To replace the main fan for frame sizes R1 and R2, perform the following (see Fig. 60 and Fig. 61):

1. Remove power from drive. Wait for 5 minutes and then make sure by measuring that there is no voltage
2. Remove drive cover.
3. Press together the retaining clips on the fan cover and lift. Disconnect the fan cable.
4. Install the new fan by reversing Steps 2 to 4.
5. Restore power.

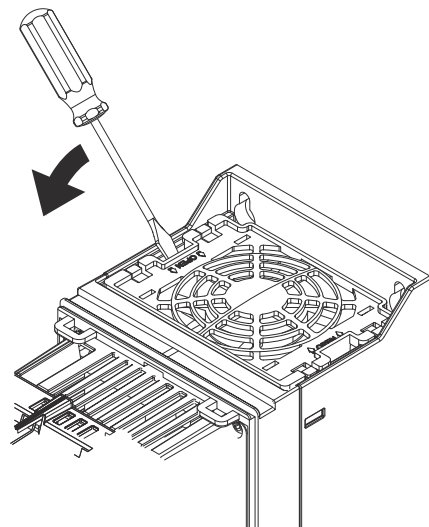

**Fig. 60 — Remove Main Fan Fingerguard**

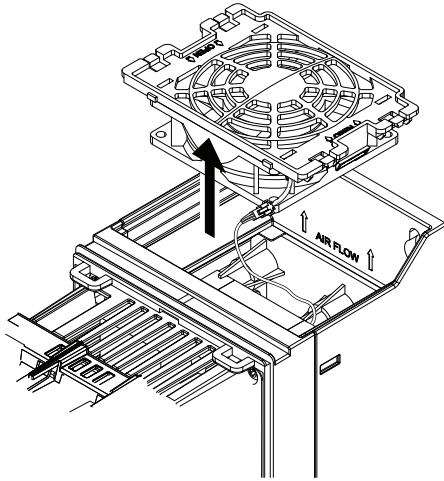


**Fig. 61 — Remove Main Fan**

#### ACH580 AUXILIARY COOLING FAN REPLACEMENT


To replace the internal enclosure fan for frame sizes R1 and R2 perform the following (see Fig. 62, 63, and 64):

1. Remove power from drive. Wait for 5 minutes and then make sure by measuring that there is no voltage.
2. Remove the remote keypad, if installed. See Fig. 62.
3. Remove the front cover by loosening the retaining screw. See Fig. 63.
4. Unplug fan power supply wires from the drive (see Fig. 64).
5. Remove the fingerguard: Insert a screwdriver into the hole of the fingerguard (see Fig. 64).
6. Unplug the fan power supply wires from the drive (see Fig. 64).
7. Pull off the fan.
8. Install the new fan in reverse order.


NOTE: Make sure that the arrow on the fan points to the same direction as the arrow on the drive frame.

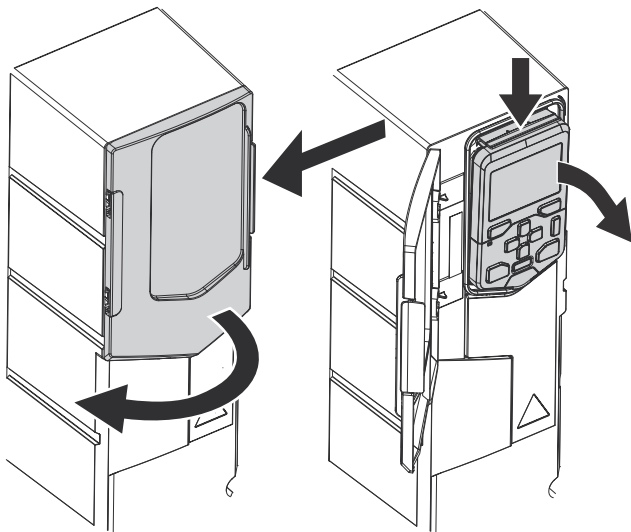

**Fig. 62 — Open Keypad Cover and Remove Keypad**

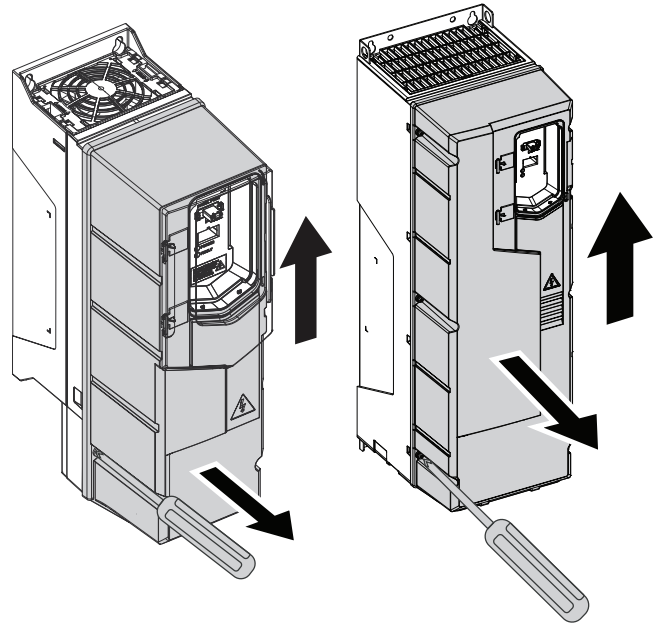

**Fig. 63 — Remove Drive Cover (R1 and R2 Frame Sizes)**

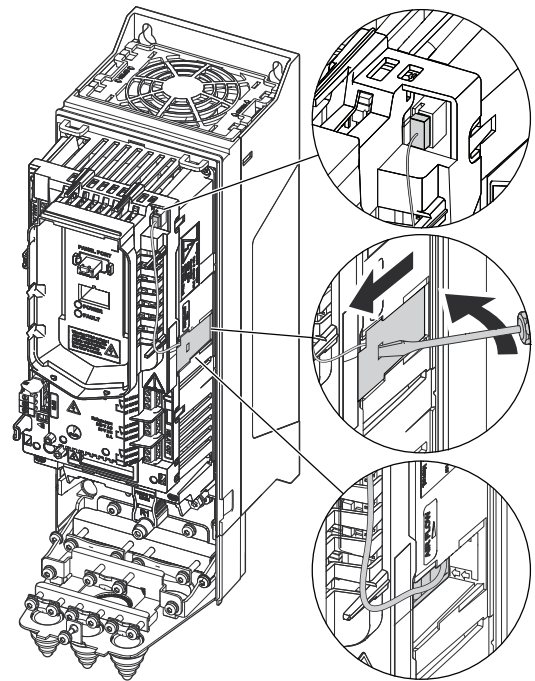


**Fig. 64 — Remove Auxiliary Fan**

## ACS320 FAN REPLACEMENT


To replace the fan perform the following:

1. Remove power from drive. Wait for 5 minutes and then make sure by measuring that there is no voltage
2. Insert a small straight blade screwdriver into the slot and press in to release the top cover as shown in Fig. 59 on page 66.
3. Free the fan cable from the clip in the drive frame (see Fig. 65).
4. Lift the holder from the hinges (see Fig. 65).

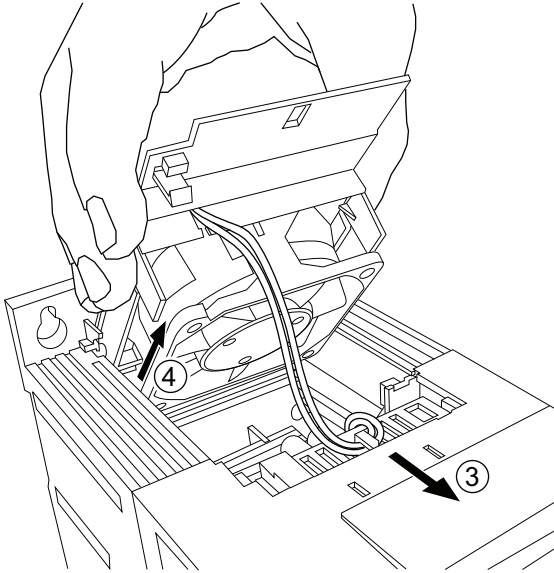

**Fig. 65 — Remove Fan Holder and Free Fan Cable**

5. Disconnect the fan cable. The fan cable connector is located on the control board that is against the front of the drive.
6. Free the fan cable from the clip in the fan holder (see Fig. 66).
7. Remove the fan from the holder (see Fig. 66).
8. Install the new fan in reverse order.
9. Restore power.

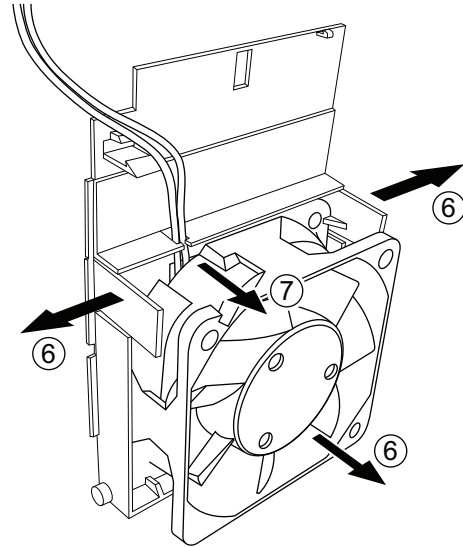

**Fig. 66 — Remove Fan from Holder**

## Bypass the VFD

### ⚠ WARNING

Bypassing the VFD is not recommended. This is a temporary procedure to provide cooling or heating operation when a new VFD is required. When in this bypass mode the fire shut down will not turn off the blower and it will continue to run. The bypass should only be used for a short duration until a new VFD has been received.

The factory-installed VFD is wired and agency approved as outlined in this manual. This VFD is utilized to help provide added efficiencies and comfort during the cooling operation.

If there is an occasion where the VFD has mis-functioned and temporary cooling/operation is required, bypass the VFD as shown in Fig. 67.

To bypass ACS320 VFD on fused units (208/230-v, 460-v):

1. Turn off and lock out unit power.
2. Disconnect the connector linking the fuse to the VFD.
3. Disconnect the connector between the VFD and the indoor fan motor.
4. Disconnect the ground wires at the base of the VFD.
5. Remove the VFD, if required.
6. Replace standard fuses with Slow Blow fuses.
7. Connect the lead from the fuse to the lead from the indoor fan motor.
8. Connect the ground wire from the indoor fan motor to the fan deck.
9. Restore power.

**IMPORTANT:** It is recommended NOT to bypass the ACH580 VFD on 40RU 575-3-60 units.

## Condensate Drains

Keep condensate drains free of dirt and foreign matter.

## Return-Air Filters

Refer to Replacing Filters section on page 70 for filter accessibility and removal. Replace with clean filters of the sizes listed in Tables 2-6.

## Chilled Water Coil Freeze Protection

Shut off water supply to unit. Remove side panel of unit and remove vent and drain plugs in top and bottom of coil header. Drain coil and blow out remaining water. Reinstall plugs and side panel. Alternative freeze protection methods follow:

- Circulate hot water within the water coil's supply main or supplementary space heating.
- Close off supply lines to unit and open a union or field-supplied drain valve in the return line.

**IMPORTANT:** Draining from return line will not completely drain water from coils.

- After draining as much water as possible from coils, add sufficient antifreeze to prevent residual water in the coil from freezing.
- Add a sufficient quantity of non-corrosive antifreeze to the entire system to prevent all water within the system from freezing.

## Coil Removal

Remove unit panels and corner posts as required. Disconnect coil connections and remove fastening screws. Remove coil through end or side sections of unit.


## Cleaning Cooling Coil

Remove return-air filters. Remove any heavy dirt that may have accumulated on underside of coil. Coil can be cleaned more easily with a stiff brush, vacuum cleaner, or compressed air when coil is dry. If coil is wet or if water is to be used for cleaning, guard against splashing water on electrical components or damaging surrounding area. Clean coil baffles as applicable and check for tight fit to be sure air does not bypass coil.

## Cleaning Insulation

The insulation contains an immobilized antimicrobial agent that helps inhibit the growth of bacteria and fungi. Clean the inner surface of the insulation according to the separate maintenance instructions shipped with the unit.

Unit with Fuse and VFD

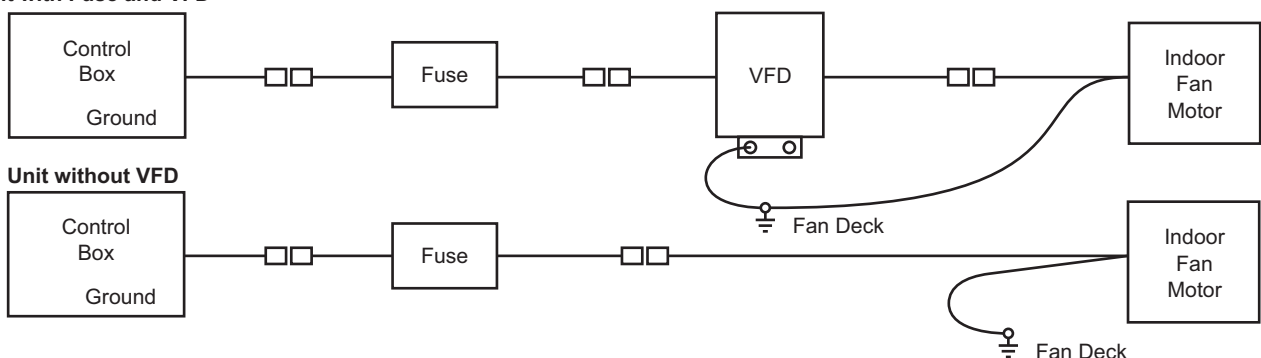

NOTE: Standard fuses need to be replaced with Slow Blow Fuses for bypass.

**Fig. 67 — To Bypass ACS320 VFD on Fused Units — 40RU 208/230-3-60, 460-3-60 Units**

## Replacing Filters


Filters can be removed and installed from either side of the unit. Install new filters in units that have one fan as follows:

1. Remove the side access panel (retain screws).
2. Remove the filter retainer clip (see Fig. 68).
3. Remove old filters by lifting and tilting them out of the filter track. See Fig. 16 and 69. Use the factory-supplied filter hook to slide filters within reach for removal. The filter hook is shipped inside the unit in the filter track.
4. Reverse the procedure to install new filters.


### ⚠ CAUTION

#### UNIT OPERATION HAZARD

Failure to follow this caution could cause equipment damage.  
Do not operate unit without air filters.

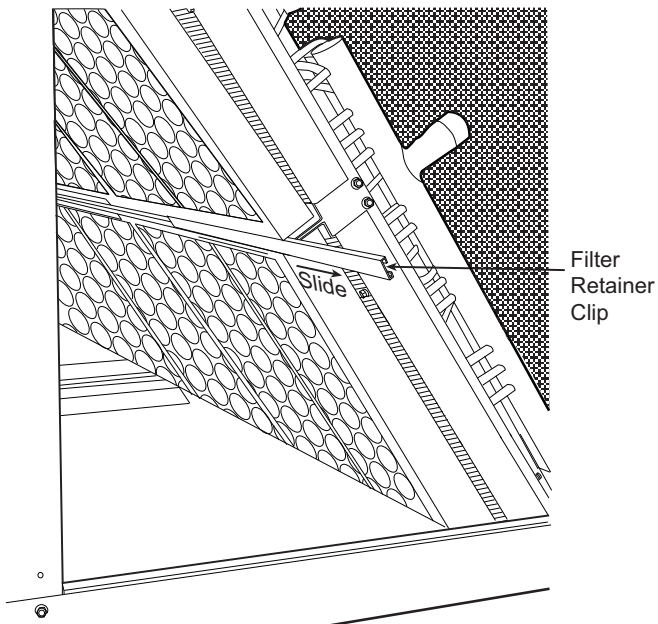

**Fig. 68 — Remove Filter Retainer Clip**

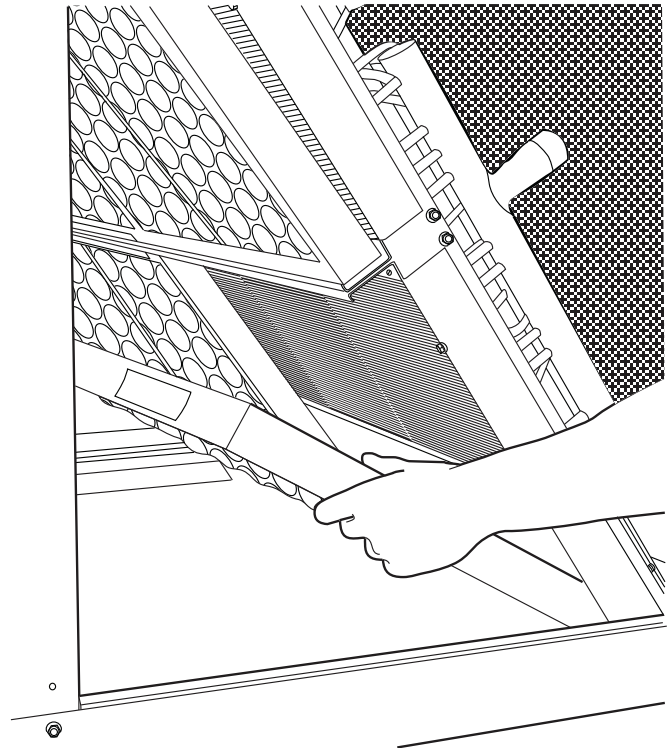

**Fig. 69 — Filter Removal/Replacement**

## APPENDIX A — VFD PARAMETERS

**Table A — ACS320 Common Parameters**

| PARAMETERS | DESCRIPTION             | SETTING ACS320 |
|------------|-------------------------|----------------|
| 1001       | EXT1 Commands           | DI1            |
| 1102       | EXT1/EXT2 Sel           | EXT1           |
| 1103       | REF1 Select             | AI-1           |
| 1201       | Const Speed Sel         | DI 2, 3        |
| 1202       | Const Speed 1           | 40Hz           |
| 1203       | Const Speed 2           | 60Hz           |
| 1204       | Const Speed 3           | 60Hz           |
| 1205       | Const Speed 4           | —              |
| 1301       | Minimum AI1             | 2%             |
| 1401       | Relay Output 1          | FAULT (–1)     |
| 1403       | Relay Output 3          | —              |
| 1501       | AO1 Content Sel         | —              |
| 1601       | Run Enable              | —              |
| 1608       | Start Enable 1          | Not Sel        |
| 1611       | Parameter View          | 3              |
| 2007       | Minimum Frequency       | 0.0 Hz         |
| 2008       | Maximum Frequency       | 60 Hz          |
| 2101       | Start FCN               | Auto           |
| 2102       | Stop FCN                | Coast          |
| 2201       | Accel/Decel             | Not Sel        |
| 2202       | Accel                   | 30s            |
| 2203       | DECEL                   | 30s            |
| 2603       | IR COMP Volt            | 0              |
| 2606       | Switching Frequency     | 4 kHz          |
| 3102       | Trial Time              | 300.0s         |
| 3103       | Delay Time              | 6.0s           |
| 3104       | AR Overcurrent          | Enable         |
| 5101       | FBA Type                | —              |
| 5201       | Station ID              | —              |
| 5202       | Baud Rate               | —              |
| 5203       | Parity                  | —              |
| 5301       | EFB Protocol ID         | —              |
| 5302       | EFB Station ID          | —              |
| 5303       | EFB Baud Rate           | —              |
| 5304       | EFB Parity              | —              |
| 5305       | EFB CTRL Profile        | —              |
| 9802       | COMM Prot Sel           | —              |
| 9907       | Motor Nominal Frequency | 60Hz           |

**Table B — ACH580 VFD Common Parameters**

| PARAMETERS | DESCRIPTION       | SETTING ACH580  |
|------------|-------------------|-----------------|
| 10.30      | Relay out 3       | (15) FAULT (–1) |
| 12.17      | Minimum AI1       | 0.2V            |
| 19.11      | EXT1/EXT2 SEL     | (0) EXT1        |
| 20.01      | EXT1 COMMANDS     | (1) IN1 Start   |
| 20.41      | Start Enable 1    | (0) Not Used    |
| 21.03      | STOP FCN          | (1) Ramp        |
| 21.19      | START FCN         | (2) Automatic   |
| 28.11      | REF1 SELECT       | (1) AI1 Scaled  |
| 28.22      | CONST SPEED SEL   | DI2             |
| 28.23      | CONST SPEED SEL   | DI3             |
| 28.26      | Const Speed 1     | 40 Hz           |
| 28.27      | Const Speed 2     | 60 Hz           |
| 28.28      | Const Speed 3     | 60 Hz           |
| 28.72      | ACCEL             | 30 Sec          |
| 28.73      | DECEL             | 30 Sec          |
| 30.13      | Minimum Frequency | 0.0 Hz          |

**Table B — ACH580 VFD Common Parameters (cont)**

| PARAMETERS | DESCRIPTION         | SETTING ACH580 |
|------------|---------------------|----------------|
| 30.14      | Maximum Frequency   | 60 Hz          |
| 97.01      | Switching Frequency | 4k Hz          |
| 99.07      | Voltage             | 575-v          |
| 99.08      | Motor Nom Frequency | 60 Hz          |

**Table C — ACH180 VFD Common Parameters**

| ACH180 | DESCRIPTION             | SETTING ACS320 |
|--------|-------------------------|----------------|
| 20.01  | EXT1 Commands           | DI1            |
| 19.11  | EXT1/EXT2 Sel           | EXT            |
| 28.11  | REF1 Select             | AI-1           |
| 28.22  | Const Speed Sel         | D13            |
| 28.26  | Const Speed 1           | 40 Hz          |
| 28.27  | Const Speed 2           | 60 Hz          |
| 28.28  | Const Speed 3           | 60 Hz          |
| 28.29  | Const Speed 4           | —              |
| 12.17  | Minimum AI1             | 2%             |
| 10.24  | Relay Output 1          | FAULT (-1)     |
| N/A    | Relay Output 3          | —              |
| 13.12  | AO1 Content Sel         | —              |
| 20.40  | Run Enable              | —              |
| 20.41  | Start Enable 1          | Not Sel        |
| N/A    | Parameter View          | 3              |
| 30.13  | Minimum Frequency       | 0.0 Hz         |
| 30.14  | Maximum Frequency       | 60 Hz          |
| 21.19  | Start FCN               | Auto           |
| 21.03  | Stop FCN                | Coast          |
| 28.75  | Accel/Decel             | Not Sel        |
| 28.72  | Accel                   | 30s            |
| 28.73  | DECEL                   | 30s            |
| 97.13  | IR COMP Volt            | 0              |
| 97.01  | Switching Frequency     | 4 kHz          |
| 31.15  | Trial Time              | 300.0s         |
| 31.16  | Delay Time              | 6.0s           |
| 31.12  | AR Overcurrent          | Enable         |
| 58.02  | EFB Protocol ID         | —              |
| 58.03  | EFB Station ID          | —              |
| 58.04  | EFB Baud Rate           | —              |
| 58.05  | EFB Parity              | —              |
| 58.25  | EFB CTRL Profile        | —              |
| 58.01  | COMM Prot Sel           | —              |
| 99.08  | Motor Nominal Frequency | 60 Hz          |

**Table D — ACS320/ACH180 VFD Parameters, for 40RU Units with Electromechanical Controls**

| VFD PARAMETERS<br>ACS320 | VFD PARAMETERS<br>ACH180 | PKG ABB<br>ACS320 | MOTOR PART<br>NUMBER | VFD PART NO.<br>ACS320 | VFD PART<br>NO. ACH180 | DRIVE<br>HP | DESC                |
|--------------------------|--------------------------|-------------------|----------------------|------------------------|------------------------|-------------|---------------------|
| 40RU000130-DATA          | 40RU001050-DATA          | 40RU000130        | HD56FR233            | HK30WA523              | HK30WB505              | 5.00        | 40RU 1.7 HP 230-v   |
| 40RU000131-DATA          | 40RU001051-DATA          | 40RU000131        | HD56FR463            | HK30WA530              | HK30WB510              | 3.0         | 40RU 1.7 HP 460-v   |
| 40RU000514-DATA          | 40RU001062-DATA          | 40RU000514        | HD60FE656            | HK30WA534              | HK30WB511              | 5.0         | 40RU 3.7 HP 460-v   |
| 40RU000516-DATA          | 40RU001063-DATA          | 40RU000516        | HD60FK657            | HK30WA532              | HK30WB512              | 7.5         | 5 40RU 5.0 HP 460-v |
| 40RU000517-DATA          | 40RU001064-DATA          | 40RU000517        | HD60FK657            | HK30WA524              | HK30WB507              | 10.0        | 5 40RU 5.0 HP 230-v |
| 40RU000587-DATA          | 40RU001065-DATA          | 40RU000587        | HD58FE654            | HK30WA523              | HK30WB505              | 5.0         | 40RU 2.9 HP 230-v   |
| 40RU000588-DATA          | 40RU001066-DATA          | 40RU000588        | HD58FE654            | HK30WA530              | HK30WB510              | 3.0         | 40RU 2.9 HP 460-v   |
| 40RU000589-DATA          | 40RU001067-DATA          | 40RU000589        | HD60FE656            | HK30WA523              | HK30WB505              | 5.0         | 40RU 3.7 HP 230-v   |
| 40RU480011-DATA          | 40RU001078-DATA          | 40RU480011        | HD56FE653            | HK30WA523              | HK30WB505              | 5.0         | 40RU 2.4 HP 230-v   |
| 40RU480012-DATA          | 40RU001079-DATA          | 40RU480012        | HD56FE653            | HK30WA530              | HK30WB510              | 3.0         | 40RU 2.4 HP 460-v   |
| 40RU480014-DATA          | 40RU001080-DATA          | 40RU480014        | HD58FE654            | HK30WA523              | HK30WB505              | 5.0         | 40RU 2.9 HP 230-v   |
| 40RU480015-DATA          | 40RU001081-DATA          | 40RU480015        | HD58FE654            | HK30WA530              | HK30WB510              | 3.0         | 40RU 2.9 HP 460-v   |
| 40RU480016-DATA          | 40RU001082-DATA          | 40RU480016        | HD60FE656            | HK30WA523              | HK30WB505              | 5.0         | 40RU 3.7 HP 230-v   |
| 40RU480017-DATA          | 40RU001083-DATA          | 40RU480017        | HD60FE656            | HK30WA534              | HK30WB511              | 5.0         | 40RU 3.7 HP 460-v   |
| 40RU000133-DATA          | 40RU001052-DATA          | 40RU000133        | HD58FR236            | HK30WA523              | HK30WB505              | 5.0         | 40RU 3.7 HP 230-v   |
| 40RU000134-DATA          | 40RU001053-DATA          | 40RU000134        | HD58FR236            | HK30WA534              | HK30WB511              | 5.0         | 40RU 3.7 HP 460-v   |
| 40RU480002-DATA          | 40RU001072-DATA          | 40RU480002        | HD60FK657            | HK30WA524              | HK30WB507              | 10.0        | 5 40RU 5.0 HP 230-v |
| 40RU480003-DATA          | 40RU001073-DATA          | 40RU480003        | HD60FK657            | HK30WA532              | HK30WB512              | 7.5         | 5 40RU 5.0 HP 460-v |
| 40RU480005-DATA          | 40RU001074-DATA          | 40RU480005        | HD62FK654            | HK30WA524              | HK30WB507              | 10.0        | 5 40RU 7.5 HP 230-v |
| 40RU480006-DATA          | 40RU001075-DATA          | 40RU480006        | HD62FK654            | HK30WA532              | HK30WB512              | 7.5         | 5 40RU 7.5 HP 460-v |
| 40RU480008-DATA          | 40RU001076-DATA          | 40RU480008        | HD64FK654            | HK30WA525              | HK30WB507              | 10.0        | 40RU 10 HP 230-v    |

**Table D — ACS320/ACH180 VFD Parameters, for 40RU Units with Electromechanical Controls (cont)**

| LOOKUP VARIABLE | VOLTAGE    | N. AMPS    | MOTOR NOM FREQ | N. RPM     | N. HP      | MAX AMPS   | CROSS REFERENCE |        |
|-----------------|------------|------------|----------------|------------|------------|------------|-----------------|--------|
| VFD PARAMETERS  | 9905/99.07 | 9906/99.06 | 9907/99.08     | 9908/99.09 | 9909/99.10 | 2003/30.17 | EM_PKG          | CL_PKG |
| 40RU000130-DATA | 230        | 5.8        | 60 Hz          | 1725       | 1.7        | 6.7        | 40RU480130      | —      |
| 40RU000131-DATA | 460        | 2.9        | 60 Hz          | 1725       | 1.7        | 3.3        | 40RU480131      | —      |
| 40RU480011-DATA | 230        | 7.1        | 60 Hz          | 1725       | 2.4        | 8.2        | 40RU480011      | —      |
| 40RU480012-DATA | 460        | 3.4        | 60 Hz          | 1725       | 2.4        | 3.9        | 40RU480012      | —      |
| 40RU480014-DATA | 230        | 8.6        | 60 Hz          | 1725       | 2.9        | 9.9        | 40RU480014      | —      |
| 40RU480015-DATA | 460        | 3.8        | 60 Hz          | 1725       | 2.9        | 4.4        | 40RU480015      | —      |
| 40RU480016-DATA | 230        | 10.8       | 60 Hz          | 1725       | 3.7        | 12.4       | 40RU480016      | —      |
| 40RU480017-DATA | 460        | 4.9        | 60 Hz          | 1725       | 3.7        | 5.6        | 40RU480017      | —      |
| 40RU000133-DATA | 230        | 10.2       | 60 Hz          | 1725       | 3.7        | 11.7       | 40RU480133      | —      |
| 40RU000134-DATA | 460        | 4.8        | 60 Hz          | 1725       | 3.7        | 5.5        | 40RU480134      | —      |
| 40RU480002-DATA | 230        | 17.0       | 60 Hz          | 1760       | 5.0        | 19.6       | 40RU480002      | —      |
| 40RU480003-DATA | 460        | 7.6        | 60 Hz          | 1760       | 5.0        | 8.7        | 40RU480003      | —      |
| 40RU480005-DATA | 230        | 21.5       | 60 Hz          | 1760       | 7.5        | 24.7       | 40RU480005      | —      |
| 40RU480006-DATA | 460        | 14.3       | 60 Hz          | 1760       | 7.5        | 16.4       | 40RU480006      | —      |
| 40RU480008-DATA | 230        | 28.6       | 60 Hz          | 1755       | 10.0       | 32.2       | 40RU480008      | —      |
| 40RU480009-DATA | 460        | 15.2       | 60 Hz          | 1755       | 10.0       | 17.5       | 40RU480009      | —      |

LEGEND

— = HVAC Default, field does not require change.

**Table E — ACH580 Parameters —  
40RUA 25-30, 40RUS 25-30 and 40RUQ 25**

| VFD PART<br>NUMBER | ACH580<br>REPLACEMENT<br>COMPONENT<br>PART NUMBER | DESCRIPTION | MOTOR<br>PART<br>NUMBER | VOLTS<br>(99.07) | NOM<br>AMPS<br>(99.06) | MOTOR<br>NOM<br>FREQ<br>(99.08) | NOM<br>RPM<br>(99.09) | NOM<br>HP<br>(99.10) | MAX<br>AMPS<br>(30.17) |
|--------------------|---------------------------------------------------|-------------|-------------------------|------------------|------------------------|---------------------------------|-----------------------|----------------------|------------------------|
| HK30WB370          | HK30WB341                                         | 40RU 3.7 Hp | HD58FE577               | 575              | 4.9                    | 60 Hz                           | 1725                  | 3.7                  | 5.6                    |
| HK30WB371          | HK30WB342                                         | 40RU 5.0 Hp | HD60FK577               | 575              | 8.0                    | 60 Hz                           | 1745                  | 5.0                  | 9.2                    |
| HK30WB371          | HK30WB342                                         | 40RU 7.5 Hp | HD62FL576               | 575              | 9.0                    | 60 Hz                           | 1750                  | 7.5                  | 10.4                   |
| HK30WB372          | HK30WB343                                         | 40RU 10 Hp  | HD64FL576               | 575              | 11.0                   | 60 Hz                           | 1755                  | 10.0                 | 12.7                   |

**Table F — ACS320/ACH180 VFD Parameters —  
40RU (208/230-v and 460-v units only)**

| VFD PART<br>NUMBER | REPLACEMENT<br>COMPONENT<br>PART NUMBER | REPLACEMENT<br>ACH180 | DESC          | MOTOR<br>PART<br>NUMBER | VOLTS<br>(9905/<br>99.07) | NOM<br>AMPS<br>(9906/<br>99.06) | MOTOR<br>NOM<br>FREQ<br>(9907/<br>99.08) | NOM<br>RPM<br>(9908/<br>99.09) | NOM<br>HP<br>(9909/<br>99.10) | CONST<br>SPEED<br>SEL<br>(1201/<br>28.22) | CONST<br>SPEED<br>1<br>(1202/<br>28.26) | CONST<br>SPEED<br>2<br>(1203/<br>28.27) | CONST<br>SPEED<br>3<br>(1204/<br>28.28) |
|--------------------|-----------------------------------------|-----------------------|---------------|-------------------------|---------------------------|---------------------------------|------------------------------------------|--------------------------------|-------------------------------|-------------------------------------------|-----------------------------------------|-----------------------------------------|-----------------------------------------|
| HK30WA523          | HK30WA506                               | HK30WB505             | 1.7 Hp 230-v  | HD56FR233               | 230                       | 5.8                             | 60 Hz                                    | 1725                           | 1.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA530          | HK30WA512                               | HK30WB510             | 1.7 Hp 460-v  | HD56FR463               | 460                       | 2.9                             | 60 Hz                                    | 1725                           | 1.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA523          | HK30WA506                               | HK30WB505             | 2.4 Hp 230-v  | HD56FE653               | 230                       | 7.1                             | 60 Hz                                    | 1725                           | 2.4                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA530          | HK30WA512                               | HK30WB510             | 2.4 Hp 460-v  | HD56FE653               | 460                       | 3.4                             | 60 Hz                                    | 1725                           | 2.4                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA523          | HK30WA506                               | HK30WB505             | 2.9 Hp 230-v  | HD58FE654               | 230                       | 8.6                             | 60 Hz                                    | 1725                           | 2.9                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA530          | HK30WA512                               | HK30WB510             | 2.9 Hp 460-v  | HD58FE654               | 460                       | 3.8                             | 60 Hz                                    | 1725                           | 2.9                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA523          | HK30WA506                               | HK30WB505             | 3.7 Hp 230-v  | HD60FE656               | 230                       | 10.8                            | 60 Hz                                    | 1725                           | 3.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA534          | HK30WA517                               | HK30WB511             | 3.7 Hp 460-v  | HD60FE656               | 460                       | 4.9                             | 60 Hz                                    | 1725                           | 3.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA523          | HK30WA506                               | HK30WB505             | 3.7 Hp 230-v  | HD58FR236               | 230                       | 10.2                            | 60 Hz                                    | 1725                           | 3.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA534          | HK30WA517                               | HK30WB511             | 3.7 Hp 460-v  | HD58FR236               | 460                       | 4.8                             | 60 Hz                                    | 1725                           | 3.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA524          | HK30WA507                               | HK30WB507             | 5.0 Hp 230-v  | HD60FK657               | 230                       | 17.0                            | 60 Hz                                    | 1760                           | 5.0                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA532          | HK30WA514                               | HK30WB512             | 5.0 Hp 460-v  | HD60FK657               | 460                       | 7.6                             | 60 Hz                                    | 1760                           | 5.0                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA524          | HK30WA507                               | HK30WB507             | 7.5 Hp 230-v  | HD62FK654               | 230                       | 21.5                            | 60 Hz                                    | 1760                           | 7.5                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA532          | HK30WA514                               | HK30WB512             | 7.5 Hp 460-v  | HD62FK654               | 460                       | 14.3                            | 60 Hz                                    | 1760                           | 7.5                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA525          | HK30WA508                               | HK30WB507             | 10.0 Hp 230-v | HD64FK654               | 230                       | 28.0                            | 60 Hz                                    | 1755                           | 10.0                          | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA533          | HK30WA515                               | HK30WB513             | 10.0 Hp 460-v | HD64FK654               | 460                       | 15.2                            | 60 Hz                                    | 1755                           | 10.0                          | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA523          | HK30WA506                               | HK30WB505             | 1.7 Hp 230-v  | HD56FR233               | 230                       | 5.8                             | 60 Hz                                    | 1725                           | 1.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA530          | HK30WA512                               | HK30WB510             | 1.7 Hp 460-v  | HD56FR463               | 460                       | 2.9                             | 60 Hz                                    | 1725                           | 1.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA523          | HK30WA506                               | HK30WB505             | 2.4 Hp 230-v  | HD56FE653               | 230                       | 7.1                             | 60 Hz                                    | 1725                           | 2.4                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA530          | HK30WA512                               | HK30WB510             | 2.4 Hp 460-v  | HD56FE653               | 460                       | 3.4                             | 60 Hz                                    | 1725                           | 2.4                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA523          | HK30WA506                               | HK30WB505             | 3.7 Hp 230-v  | HD60FE656               | 230                       | 10.8                            | 60 Hz                                    | 1725                           | 3.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA534          | HK30WA517                               | HK30WB511             | 3.7 Hp 460-v  | HD60FE656               | 460                       | 4.9                             | 60 Hz                                    | 1725                           | 3.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA523          | HK30WA506                               | HK30WB505             | 3.7 Hp 230-v  | HD58FR236               | 230                       | 10.2                            | 60 Hz                                    | 1725                           | 3.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |
| HK30WA534          | HK30WA517                               | HK30WB511             | 3.7 Hp 460-v  | HD58FR236               | 460                       | 4.8                             | 60 Hz                                    | 1725                           | 3.7                           | DI2,3/ DI3                                | 40 Hz                                   | 60 Hz                                   | 60 Hz                                   |

**Table F — ACS320/ACH180 VFD Parameters —  
40RU (208/230-v and 460-v units only) (cont)**

| VFD PART NO. | REPLACEMENT COMPONENT PART NO. | REPLACEMENT ACH180 | DESC          | MOTOR PART NO. | RELAY OUT 1 (1401/10.24) | MAX AMPS (2003/30.17) | MIN FREQ (2007/30.13) | MAX FREQ (2008/30.14) | SWITCH FREQ (2606/97.1) | START FCN (2101/21.19) | STOP FCN (2102/21.03) | ACCE/ DECEL (2201/28.71) | ACCEL (2202/28.72) |
|--------------|--------------------------------|--------------------|---------------|----------------|--------------------------|-----------------------|-----------------------|-----------------------|-------------------------|------------------------|-----------------------|--------------------------|--------------------|
| HK30WA523    | HK30WA506                      | HK30WB505          | 1.7 Hp 230-v  | HD56FR233      | 16 FLT/Alarm             | 6.7                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA530    | HK30WA512                      | HK30WB510          | 1.7 Hp 460-v  | HD56FR463      | 16 FLT/Alarm             | 3.3                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA523    | HK30WA506                      | HK30WB505          | 2.4 Hp 230-v  | HD56FE653      | 16 FLT/Alarm             | 8.2                   | 0 Hz                  | 60 Hz                 | 4kHz                    | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA530    | HK30WA512                      | HK30WB510          | 2.4 Hp 460-v  | HD56FE653      | 16 FLT/Alarm             | 3.9                   | 0 Hz                  | 60 Hz                 | 4kHz                    | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA523    | HK30WA506                      | HK30WB505          | 2.9 Hp 230-v  | HD58FE654      | 16 FLT/Alarm             | 9.9                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA530    | HK30WA512                      | HK30WB510          | 2.9 Hp 460-v  | HD58FE654      | 16 FLT/Alarm             | 4.4                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA523    | HK30WA506                      | HK30WB505          | 3.7 Hp 230-v  | HD60FE656      | 16 FLT/Alarm             | 12.4                  | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA534    | HK30WA517                      | HK30WB511          | 3.7 Hp 460-v  | HD60FE656      | 16 FLT/Alarm             | 5.6                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA523    | HK30WA506                      | HK30WB505          | 3.7 Hp 230-v  | HD58FR236      | 16 FLT/Alarm             | 11.7                  | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA534    | HK30WA517                      | HK30WB511          | 3.7 Hp 460-v  | HD58FR236      | 16 FLT/Alarm             | 5.5                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA524    | HK30WA507                      | HK30WB507          | 5.0 Hp 230-v  | HD60FK657      | 16 FLT/Alarm             | 19.6                  | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA532    | HK30WA514                      | HK30WB512          | 5.0 Hp 460-v  | HD60FK657      | 16 FLT/Alarm             | 8.7                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA524    | HK30WA507                      | HK30WB507          | 7.5 Hp 230-v  | HD62FK654      | 16 FLT/Alarm             | 24.7                  | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA532    | HK30WA514                      | HK30WB512          | 7.5 Hp 460-v  | HD62FK654      | 16 FLT/Alarm             | 16.4                  | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA525    | HK30WA508                      | HK30WB507          | 10.0 Hp 230-v | HD64FK654      | 16 FLT/Alarm             | 32.2                  | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA533    | HK30WA515                      | HK30WB513          | 10.0 Hp 460-v | HD64FK654      | 16 FLT/Alarm             | 17.5                  | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA523    | HK30WA506                      | HK30WB505          | 1.7 Hp 230-v  | HD56FR233      | 16 FLT/Alarm             | 6.7                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA530    | HK30WA512                      | HK30WB510          | 1.7 Hp 460-v  | HD56FR463      | 16 FLT/Alarm             | 3.3                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA523    | HK30WA506                      | HK30WB505          | 2.4 Hp 230-v  | HD56FE653      | 16 FLT/Alarm             | 8.2                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA530    | HK30WA512                      | HK30WB510          | 2.4 Hp 460-v  | HD56FE653      | 16 FLT/Alarm             | 3.9                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA523    | HK30WA506                      | HK30WB505          | 3.7 Hp 230-v  | HD60FE656      | 16 FLT/Alarm             | 12.4                  | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA534    | HK30WA517                      | HK30WB511          | 3.7 Hp 460-v  | HD60FE656      | 16 FLT/Alarm             | 5.6                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA523    | HK30WA506                      | HK30WB505          | 3.7 Hp 230-v  | HD58FR236      | 16 FLT/Alarm             | 11.7                  | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |
| HK30WA534    | HK30WA517                      | HK30WB511          | 3.7 Hp 460-v  | HD58FR236      | 16 FLT/Alarm             | 5.5                   | 0 Hz                  | 60 Hz                 | 4 kHz                   | Automatic              | 1/0 Coast             | Not Sel                  | 30 sec             |

**START-UP CHECKLIST**  
**Split Systems with 40RU Units**

(Remove and use for job file)

**NOTE: To avoid injury to personnel and damage to equipment or property when completing the procedures listed in this start-up checklist, use good judgment, follow safe practices, and adhere to the safety considerations/information as outlined in preceding sections of this Installation, Start-Up, and Service document.**

**I. PRELIMINARY INFORMATION**

OUTDOOR: MODEL NO. \_\_\_\_\_

SERIAL NO. \_\_\_\_\_

INDOOR: MODEL NO. \_\_\_\_\_

SERIAL NO. \_\_\_\_\_

ADDITIONAL ACCESSORIES \_\_\_\_\_

**II. PRE-START-UP**

**OUTDOOR UNIT**

Is there any shipping damage? (Y/N) \_\_\_\_\_

If so, where: \_\_\_\_\_

Will this damage prevent unit start-up? (Y/N) \_\_\_\_\_

Check power supply. Does it agree with unit? (Y/N) \_\_\_\_\_

Has the ground wire been connected? (Y/N) \_\_\_\_\_

Verify ground integrity with continuity test. (Y/N) \_\_\_\_\_

Has the circuit protection been sized and installed properly? (Y/N) \_\_\_\_\_

Are the power wires to the unit sized and installed properly? (Y/N) \_\_\_\_\_

Have compressor holddown bolts been loosened? (Y/N) \_\_\_\_\_

**CONTROLS**

Are thermostat(s) and indoor fan control wiring connections made and checked? (Y/N) \_\_\_\_\_

Are all wiring terminals (including main power supply) tight? (Y/N) \_\_\_\_\_

Have outdoor unit crankcase heaters been energized for 24 hours? (Y/N) \_\_\_\_\_

**INDOOR UNIT**

Has water been placed in drain pan to confirm proper drainage? (Y/N) \_\_\_\_\_

Are proper air filters in place? (Y/N) \_\_\_\_\_

Have fan and motor pulleys been checked for proper alignment? (Y/N) \_\_\_\_\_

Do the fan belts have proper tension? (Y/N) \_\_\_\_\_

**PIPING**

**40RUA, 40RUQ**

Has foam shipping block been removed from the TXV (thermostatic expansion valve)? (Y/N) \_\_\_\_\_

Are liquid line solenoid valves located at the indoor unit or outdoor unit coils as required? (Y/N) \_\_\_\_\_

Have leak checks been made at compressors, condensers, indoor coils, TXVs (thermostatic expansion valves) solenoid valves, filter driers, and fusible plugs with a leak detector? (Y/N) \_\_\_\_\_

Locate, repair, and report any leaks. \_\_\_\_\_

Have all compressor service valves been fully opened (backseated)? (Y/N) \_\_\_\_\_

Are the compressor oil sight glasses showing correct levels? (Y/N) \_\_\_\_\_

40RUS

Has air been bled from system?

(Y/N)

Have leak checks been made at compressors, chillers, valves, and indoor coils?

(Y/N)

Locate, repair, and report any leaks.

CHECK VOLTAGE IMBALANCE

Line-to-line volts:

AB

VAC

VBC

V

$(AB + AC + BC)/3 = \text{average voltage} = \text{V}$

Maximum deviation from average voltage = 

V

Voltage imbalance =  $100 \times (\text{max deviation})/(\text{average voltage}) = \text{}$

If over 2% voltage imbalance, **DO NOT ATTEMPT TO START SYSTEM!**  
Call local power company for assistance.

III. START-UP

Check indoor fan motor speed and record.   
After at least 10 minutes running time, record the following measurements:

|                                         | COMP A1 | COMP B1 |
|-----------------------------------------|---------|---------|
| Oil pressure                            |         |         |
| Suction pressure                        |         |         |
| Suction line temperature                |         |         |
| Discharge pressure                      |         |         |
| Discharge line temperature              |         |         |
| Entering outdoor unit air temperature   |         |         |
| Leaving outdoor unit air temperature    |         |         |
| Indoor unit entering air DB temperature |         |         |
| Indoor unit entering air WB temperature |         |         |
| Indoor unit leaving air DB temperature  |         |         |
| Indoor unit leaving air WB temperature  |         |         |

Outdoor unit entering water temperature (40RUS only)

Outdoor unit leaving water temperature (40RUS only)

Indoor unit entering water temperature (40RUS only)

Indoor unit leaving water temperature (40RUS only)

Compressor amps (L1/L2/L3) 

/

/

/

/

Check the compressor oil level sight glasses: are the sight glasses showing oil level at 1/8 to 1/3 full?

(Y/N)

NOTES:

CUT ALONG DOTTED LINE

CUT ALONG DOTTED LINE