

WIRELESS




Hardwire Photoelectric Smoke & Carbon Monoxide Alarm
with Voice and Wireless Interconnect

User Guide

Model P4010ACSCO-WCA

WIRELESS INTERCONNECT:

You do NOT need a home wi-fi system to use these units. Multiple wireless units create their own independent wireless alarm network.

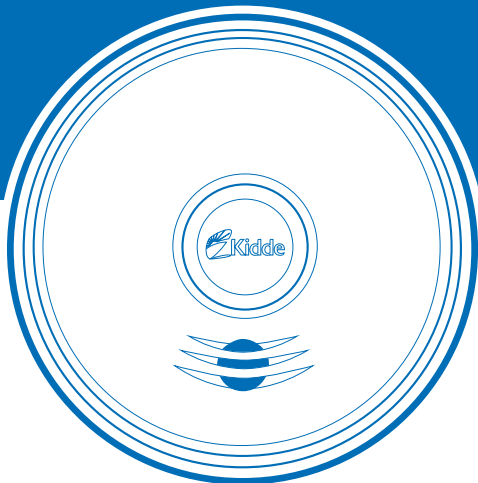

COMBINATION ALARM

- 120 V HARDWIRE
- 10-YEAR BATTERY BACKUP
- HARDWIRE & WIRELESS INTERCONNECT
- VOICE ALARM



SIGNALISATION
SIGNALLING
C 
LISTED
HOMOLOGUÉ

Thank You for Purchasing this Kidde Alarm

Hardwired for 120V AC, this model features a non-replaceable, sealed-in battery backup. It also contains a voice message system and Hush[®] Control to temporarily silence nuisance alarms. It is capable of both Hardwire and Wireless Interconnect.



READ SECTION 9: Activation and Wireless Alarm Network, before powering the units. You do NOT need a home wi-fi system to use these units. Multiple wireless units create their own independent wireless alarm network.

Teach children how to respond to the alarm and that they should never play with the unit. This alarm is a multi-criteria device designed to detect both smoke and carbon monoxide from any source of combustion in a residential environment. It is not designed for use in a recreational vehicle (RV) or boat.

NOTE: Please take a few minutes to thoroughly read this user guide which should be saved for future reference and passed on to any subsequent owner.

The National Fire Protection Association (NFPA) and the manufacturer recommend replacing this alarm ten years from the date code on back of alarm.

Product Support: 1-800-880-6788

Please write down the below information and have this at hand when you call.

Date Code (on back): _____

Date of Purchase: _____

Where Purchased: _____

Date to Replace: _____

Contents

1. Smoke Alarm: What To Do When The Alarm Sounds	4
2. Carbon Monoxide Alarm: What To Do When The Alarm Sounds	5
3. Other Alarm Visual And Audible Indicators	6
4. Troubleshooting Guide	7
5. Introduction, Product Features & Specifications	8
6. Limitations Of Smoke And Carbon Monoxide Alarms	9
7. Recommended Locations For Smoke Alarms	11
8. Locations To Avoid	13
9. Activation And Wireless Alarm Network	13
9.1 Setting Up A Wireless Alarm Network.	14
9.2 Adding Another Device to an Existing Wireless Alarm Network	15
9.3 Resetting a Device's Wireless Settings	17
10. Wiring Instructions	18
11. Operation And Testing	22
12. Recognizing Nuisance Alarms	23
13. Battery Back Up.	25
14. Permanently Disable Alarm / Discharge Battery	26
15. General Carbon Monoxide (CO) Information	27
16. Cleaning Your Alarm	30
17. Good Safety Habits	31
18. Service And Warranty	34

1. Smoke Alarm: What To Do When the Alarm Sounds

Smoke alarm pattern is three long beeps with voice “Fire!,” a 1.5 second pause, and three long beeps repeating. The red LED blinks in time with alarm pattern.

The smoke alarm takes precedence when both smoke and carbon monoxide are present.

- Alert small children in the home as well as anyone else that might have difficulty recognizing the importance of the alarm sounding or that might have difficulty leaving the area without help.
- Leave immediately by your escape plan. Every second counts, so don't waste time getting dressed or picking up valuables.
- In leaving, don't open any inside door without first feeling its surface. If hot, or if you see smoke seeping through cracks, don't open that door! Instead, use your alternate exit. If the inside of the door is cool, place your shoulder against it, open it slightly and be ready to slam it shut if heat and smoke rush in.
- If the escape route requires you to go through smoke, stay close to the floor where the air is cleaner. Crawl if necessary, and breathe shallowly through a cloth, wet if possible.
- Once outside, go to your selected meeting place and make sure everyone is there.
- Call the fire department from your cell phone outside, or from your neighbour's home—not from yours!
- Don't return to your home until the fire officials say that it is all right to do so.
- There are situations where a smoke alarm may not be effective to protect against fire as stated in the NFPA Standard 72. For instance:
 - a) smoking in bed
 - b) leaving children home alone
 - c) cleaning with flammable liquids, such as gasoline

NOTE: See Section 12. RECOGNIZING NUISANCE ALARMS, for nuisance alarm situations.

2. Carbon Monoxide Alarm: What To Do When the Alarm Sounds

Carbon monoxide (CO) alarm pattern is four quick beeps with voice “Warning! Carbon Monoxide” repeating every 5 seconds. The red LED blinks in time with alarm pattern.

WARNING: CARBON MONOXIDE ALARM ACTIVATION INDICATES THE PRESENCE OF CARBON MONOXIDE (CO) AT HIGH CONCENTRATIONS WHICH CAN KILL YOU.

1. Immediately move to fresh air – outdoors or by an open door/window. Do a head count to check that all persons are accounted for. Do not re-enter the premises nor move away from the open door/window until the emergency services responders have arrived, the premises have been aired out, and your alarm remains in its normal condition.
2. Call your local emergency service.
(fire department or 911)

PHONE NUMBER

Never restart the source of a CO problem until it has been corrected. Never ignore the sound of the alarm!

NOTE: See Section 12. RECOGNIZING NUISANCE ALARMS, for nuisance alarm situations.

3. Other Alarm Visual and Audible Indicators

Operational Mode	Visual Indications	Audible Indications	Action/Note:
Normal (standby)	AC power: Green LED on continuously during light conditions, or blink every 60 sec during dark conditions. DC power: Green LED blink approx every 60 sec.		
Test (button press when no alarm condition is present)	<ul style="list-style-type: none"> 4 patterns of Red/Amber/Green. Test: Red LED blinks in time with alarm pattern. Green LED fade on/off at test complete 	<ul style="list-style-type: none"> Button press sound Voice: "Testing, this is very loud. Press now to cancel test. 5, 4, 3, 2, 1." 3 long beeps, Voice "Fire!", 3 long beeps, 4 quick beeps, Voice "Warning, Carbon Monoxide," 4 quick beeps, Voice "Test Complete," Power on/reset sound. Voice "Test Canceled" if button pushed before test sequence begins. 	<p>Perform Test/Hush button press once a week to verify proper alarm operation</p> <p>* Push/release button before the countdown ends to cancel test.</p>
Smoke or CO Alarm Memory (unit has experienced a smoke or CO alarm event within the last hour)	Red and Amber LED alternate on 1 sec, every 10 sec.	After button push: "Smoke previously detected" or "Carbon Monoxide previously detected" only on the initiating alarm unit.	Push test button to clear Alarm Memory. NOTE: standard test sequence will follow. (Push/release button again to cancel test).
Smoke Alarm Hush Mode, (Hush Control)	Red LED blinks every 2 sec.	After button push: "Hush Mode Activated." Smoke alarm pattern stops. (If there is too much smoke to allow Hush: Voice "Too Much Smoke, Alarm cannot be Hushed" Smoke alarm pattern continues.)	This feature is to be used only when a known alarm condition, such as smoke from cooking, activates the alarm.
CO alarm reset	None	After button push: CO alarm pattern stops.	Unit is confirming if CO is present or if it experienced a nuisance situation. Re-alarm means danger. Move to fresh air and call 911.
Locate	None	After button push on non-initiating unit, only initiating unit continues alarm pattern.	Use this to quickly locate the alarm source and determine if alarm is nuisance or real.
Smoke Alarm Hush Mode Canceled	None	Voice message "Hush Mode Canceled."	When smoke levels drop below the alarm threshold, the voice message "Hush Mode Canceled" will occur.
Initiating Alarm, (Multiple alarms in an interconnected system)	Green LED blinks once per sec indicating that this is the unit initiating the alarm in an interconnected, multiple alarm, system.	Unit in either Smoke or CO alarm mode.	During alarm, the initiating alarm red blink will be interrupted by a green blink.

4. Troubleshooting Guide

Trouble Condition	Visual Indications	Audible Indications	Action:
Low Battery	Amber LED blinks every 5 seconds	Chirp every 60 sec, voice every 30 sec: "Replace alarm." Voice stops after 5 mins.	* Remove, discharge, dispose unit, and replace as soon as possible.
Fault Mode		Chirp every 30 sec. Voice every 30 sec: "Error, see trouble shooting guide" After 5 mins: no voice message	* See Cleaning Your Alarm section. * Push Test/Hush button once to attempt to reset the unit. * Red LED will blink out an error code (number of blinks) when Test/Hush button is push/released once. Report the number of blinks to customer service if needed.
End of Unit Life		Double chirp every 30 sec. First 5 mins: Voice every 30 sec: "Replace alarm, press button to temporarily silence." Voice stops after 5 mins. After 7 days: Chirps continue. Voice every 30 sec for 5 mins: "Replace alarm."	* Push/release Test/Hush button to temporarily silence (see End of Unit Life Hush Mode section below) * Remove, discharge, dispose unit, and replace as soon as possible.
End of Unit Life Hush Mode (after push/release Test/Hush button during End of Life)		Voice "Temporarily Silenced." End of Unit Life chirps silenced for 24 hrs. (7 days after End of Unit Life chirps begin, the chirps cannot be silenced.)	* Remove, discharge, dispose unit, and replace as soon as possible.
Network Error		Chime every 30 secs. Voice every 30 sec: "Connection lost. Press button to temporarily silence." After 5 min: no voice messages (Note: network must have 3 or more alarms for voice messages.)	* Push/release the Test/Hush button once to silence for 24 hrs at a time. * Red LED will blink out an error code (number of blinks) when Test/Hush button is push/released once. Report the number of blinks to customer service if needed. * Push and hold Test/Hush button until two beeps are heard (approx 4 sec) and then release the button to try to rejoin. Or reset (section 9.3) and then rejoin (section 9.2). * If error persists, remove, discharge, and replace alarm as soon as possible.
Network Error Hush (after button push during Network Error)		Voice "Temporarily Silenced."	

If you require further information please contact Product Support at 1-800-880-6788 or write us at: Kidde Canada Inc., P.O. Box 40, Apsley, ON K0L 1A0. Our internet address is www.kiddecanada.com.

5. Introduction, Product Features and Specifications

INTRODUCTION

This alarm detects products of combustion using photoelectric technology and carbon monoxide using an electrochemical cell. Many times throughout this User Guide, we will refer to Carbon Monoxide as “CO.” Ten (10) years after the unit is installed, this unit will automatically alert you that it is time to replace the unit. This is called “End of Unit Life” mode. See Troubleshooting Guide. To help identify the date to replace the unit, a label has been affixed to the side of the alarm. Write in the “Replace by” date (10 years from initial power up) in permanent marker on the label prior to installing the unit.

NOTE: AC power must be connected to obtain the full 10 year battery and unit life.

PRODUCT FEATURES AND SPECIFICATIONS:

- Temperature: Operating Range: 4.4°C (40°F) to 37.8°C (100°F)
- Humidity: Operating range: 10-95% RH non-condensing
- Audible Alarm: 85+ dB at 10' 3.0 to 3.5 KHz pulsing alarm, with voice messages “Fire!” and/or “Warning! Carbon Monoxide.”
- Smoke Sensor: Photoelectric
- CO Sensor: Electrochemical
- Voice message system
- Smoke Alarm Hush[®] Control
- Ambient Light Sensing
- Powered by 120V AC (60 Hz, 53 mA max) wire-in connector with sealed lithium battery backup.
- Hardwire and wireless interconnectable to other compatible alarms.
- One large, user- friendly button.

6. Limitations of Smoke and Carbon Monoxide Alarms

WARNING: PLEASE READ CAREFULLY AND THOROUGHLY

- Life safety from fire in residential occupancies is based primarily on early notification to occupants of the need to escape, followed by the appropriate egress actions by those occupants.
- Fire warning systems for dwelling units are capable of protecting about half of the occupants in potentially fatal fires. Victims are often intimate with the fire, too old or young, or physically or mentally impaired such that they cannot escape even when warned early enough that escape should be possible. For these people, other strategies such as protection-in-place or assisted escape or rescue are necessary.
- Leading authorities recommend that both ionization and photoelectric smoke alarms be installed to help insure maximum detection of the various types of fires that can occur within the home. Ionization sensing alarms may detect invisible fire particles (associated with fast flaming fires) sooner than photoelectric alarms. Photoelectric sensing alarms may detect visible fire particles (associated with slow smoldering fires) sooner than ionization alarms.
- A battery powered alarm must have a battery of the specified type, in good condition and installed properly (This model has a sealed backup battery).
- Smoke alarms must be tested regularly to make sure the battery and the alarm circuits are in good operating condition.
- Smoke alarms cannot provide an alarm if smoke does not reach the alarm. Therefore, smoke alarms may not sense fires starting in chimneys, walls, on roofs, on the other side of a closed door or on a different floor.
- If the alarm is located outside the bedroom or on a different floor, it may not wake up a sound sleeper.
- The use of alcohol or drugs may also impair one's ability to hear the smoke alarm. For maximum protection, a smoke alarm should be installed in each sleeping area on every level of a home.

This alarm is not intended to alert hearing impaired individuals.

⚠ WARNING: PLEASE READ CAREFULLY AND THOROUGHLY

- **IMPORTANT:** This alarm is designed to detect carbon monoxide gas from ANY source of combustion. It is NOT designed to detect any other gas.

⚠ CAUTION: This alarm will only indicate the presence of carbon monoxide gas at the sensor. Carbon monoxide gas may be present in other areas. Never restart the source of a CO problem until it has been fixed. **NEVER IGNORE THE ALARM!**

- Industry experts recommend a CO alarm be installed on each level of the home—ideally on any level with fuel burning appliances and outside of sleeping areas.

⚠ WARNING: THIS PRODUCT IS INTENDED FOR USE IN ORDINARY INDOOR LOCATIONS OF FAMILY LIVING UNITS. IT IS NOT DESIGNED TO MEASURE COMPLIANCE WITH COMMERCIAL OR INDUSTRIAL STANDARDS. IT IS NOT SUITABLE FOR INSTALLATION IN HAZARDOUS LOCATIONS AS DEFINED IN THE LOCAL BUILDING CODE. IT IS NOT DESIGNED FOR USE IN A RECREATIONAL VEHICLE (RV) OR BOAT.

- The installation of this device should not be used as a substitute for proper installation, use, and maintenance of fuel burning appliances, including appropriate ventilation and exhaust systems.
- This alarm does not prevent CO from occurring, nor can it solve any existing CO problem.

⚠ WARNING: THIS DEVICE IS DESIGNED TO PROTECT INDIVIDUALS FROM ACUTE EFFECTS OF CARBON MONOXIDE EXPOSURE. IT MAY NOT FULLY SAFEGUARD INDIVIDUALS WITH SPECIFIC MEDICAL CONDITIONS. IF IN DOUBT, CONSULT A MEDICAL PRACTITIONER. INDIVIDUALS WITH MEDICAL PROBLEMS MAY CONSIDER USING WARNING DEVICES WHICH PROVIDE AUDIBLE AND VISUAL SIGNALS FOR CARBON MONOXIDE CONCENTRATIONS UNDER 30 PPM.

- This alarm has not been investigated for carbon monoxide detection below 70 PPM.
- This combination smoke and carbon monoxide alarm requires a continuous supply of electrical power – it will not work without power.

7. Recommended Locations for Smoke Alarms

- Locate smoke alarms in all sleeping areas. Try to monitor the exit path as the bedrooms are usually farthest from the exit. If more than one sleeping area exists, locate additional alarms in each sleeping area.
- Locate additional alarms to monitor any stairway as stairways act like chimneys for smoke and heat.
- Locate at least one alarm on every floor level.
- Locate an alarm in every bedroom.
- Locate an alarm in every room where electrical appliances are operated (i.e. portable heaters or humidifiers).
- Locate an alarm in every room where someone sleeps with the door closed. The closed door may prevent an alarm not located in that room from waking the sleeper.
- Smoke, heat, and combustion products rise to the ceiling and spread horizontally. Mounting the smoke alarm on the ceiling in the center of the room places it closest to all points in the room. Ceiling mounting is preferred in ordinary residential construction.

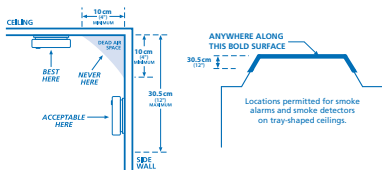


Figure 7-A

NFPA 72 states: “Smoke alarms in rooms with ceiling slopes greater than 0.3 m in 2.4 m (1 ft in 8 ft) horizontally shall be located on the high side of the room.” NFPA 72 states: “A row of detectors shall be spaced and located within 0.9 m (3 ft) of the peak of the ceiling measured horizontally.”



MULTIPLE FLOOR PLAN

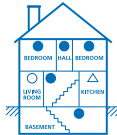


Figure 7-B

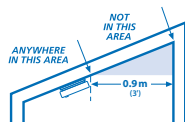
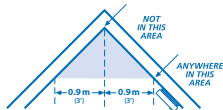


Figure 7-C

- For mobile home installation, select locations carefully to avoid thermal barriers that may form at the ceiling. For more details, see MOBILE HOME INSTALLATION section.
- When mounting an alarm on the ceiling, locate it at a minimum of 10 cm (4") from the side wall.
- When mounting the alarm on the wall, use an inside wall with the top edge of the alarm at a minimum of 10 cm (4") and a maximum of 30.5 cm (12") below the ceiling.
- Put smoke alarms at both ends of a bedroom hallway or large room if the hallway or room is more than 9.1 m (30 ft) long.
- Install Smoke Alarms on sloped, peaked or cathedral ceilings at or within 0.9m (3ft) of the highest point (measured horizontally).

This equipment should be installed in accordance with the National Fire Protection Association's 72 (National Fire Protection Association, Batterymarch Park, Quincy, MA 02269).

MOBILE HOME INSTALLATION

Modern mobile homes have been designed and built to be energy efficient. Install smoke alarms as recommended on the previous page. In older mobile homes that are not well insulated compared to present standards, extreme heat or cold can be transferred from the outside to the inside through poorly insulated walls and roof. This may create a thermal barrier which can prevent the smoke from reaching an alarm mounted on the ceiling. In such units, install the smoke alarm on an inside wall with the top edge of the alarm a minimum of 10 cm (4") and a maximum of 30.5 cm (12") below the ceiling.

If you are not sure about the insulation in your mobile home, or if you notice that the outer walls and ceiling are either hot or cold compared to the room air temperature, install the alarm on an inside wall. For minimum protection install at least one alarm close to the bedrooms.

 WARNING: TEST YOUR ALARM OPERATION AFTER MOBILE HOME HAS BEEN IN STORAGE OR UNOCCUPIED, AND AT LEAST ONCE A WEEK DURING USE.

8. Locations to Avoid

- In the garage. Products of combustion are present when you start your automobile.
- Normal cooking may cause nuisance alarms. If a kitchen alarm is desired, it should have an alarm silence feature or be a photoelectric type.
- Do not install within 1.8 m (6ft) of heating or cooking appliances.
- Less than 10 cm (4") from the peak of an "A" frame type ceiling.
- In an area where the temperature may fall below 4.4°C (40°F) or rise above 37.8°C (100°F), such as garages and unfinished attics.
- In dusty areas. Dust particles may cause nuisance alarm or failure to alarm.
- In very humid areas (above 95% RH, non-condensing). Moisture or steam can cause nuisance alarms.
- In insect-infested areas.
- Smoke alarms should not be installed within 0.9m (3ft) of the door to a bathroom containing a tub or shower, forced air supply ducts used for heating or cooling, ceiling or whole house ventilating fans, or other high air flow areas.
- Near lights. Electronic "noise" generated by the electronics may cause nuisance alarms.
- Do not install near vents, flues, chimneys or any forced/unforced air ventilation openings.
- Do not install near fans, doors, windows or areas directly exposed to the weather.

9. Activation and Wireless Alarm Network

Upon initial power being applied (from rotating onto mounting plate or moving the red activation wheel to the "ON" position - see Figure 9.1-B) these units are ready to connect to a network.

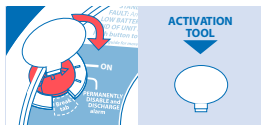


Figure 9.1-B

NOTE: At any time during wireless alarm network setup, if you have a problem, you can push and hold the Test/Hush button on any problem unit until you hear three (3) beeps (approx 8 sec), and then release the button. The unit will reset the unit's wireless settings (described in Section 9.3). Once wireless network settings are reset, the unit will prompt the user to follow Quickstart instructions.

9.1 Setting Up a Wireless Alarm Network

Creating an interconnected wireless alarm network is a simple process, with intelligent "self-enrollment" features, and user-friendly voice prompts.

A. REMOVE ALL DEVICES FROM THEIR PACKAGING

B. POWER UP ALL DEVICES

- Locate the red wheel on the back of the device. Turn the red wheel to the "ON" position on ALL devices using the white tool included with the Quick Start Guide.
- Once powered, the light rings will glow red and voice message will announce, "Ready to connect. Follow Quick Start instructions."

C. LANGUAGE SELECTION

- This unit operates in either English or French. To switch your language preference at any time, press the Test button twice on ALL devices you wish to connect. You should hear one beep for each button press, followed by a voice message confirming your language selection ("English language selected" or "Langue française sélectionnée"). If no language is selected, the voice prompts will continue in the default/set language.

NOTE: *If no further steps are taken within 15 minutes of initial power up, a voice prompt, "No devices found, not connected" will be heard once, and the wireless function will turn off. The unit will then perform as a standard hardwired alarm. See Section 9.3 for re-activating wireless.*

D. PICK ONE DEVICE

Press and hold the button on only ONE device until you hear two beeps. Release button. You will hear “Searching for other devices”.

- The light will pulse and device will sound a continuous “Sonar” ping until step E is complete.

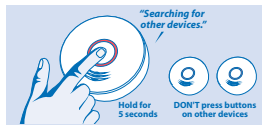


Figure 9.1-C

E. RELAX AND WAIT

Wait until all devices have connected to network. Once connected, each device will speak, “Success now connected!”

- Once connected, the lights will glow green.



Figure 9.1-D

F. PICK ONE DEVICE

Press and hold the button on only ONE device until you hear 2 beeps. Release button. “Sonar” ping will stop.

- Device will announce that setup is complete and the number of connected devices.



Figure 9.1-E

G. SETUP COMPLETE!

If all devices flash green and “Sonar” ping has stopped, the devices are now connected. Congratulations!

H. PROCEED TO WIRING INSTRUCTIONS IN SECTION 10.

9.2 Adding Another Device to an Existing Wireless Alarm Network

For various reasons, you might want to add additional units to your existing wireless alarm network. Modifying your existing wireless alarm network is easy and user-friendly.

A. REMOVE THE NEW DEVICE FROM ITS PACKAGING.

B. POWER UP NEW DEVICE

Locate the red wheel on the back of the device being added. Turn the red wheel to the “ON” position using the white activation tool included in the Quick Start Guide or a standard screwdriver.

- Once powered, the light ring will glow red.

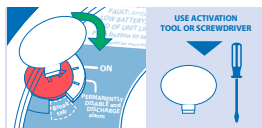


Figure 9.2-B

C. LANGUAGE SELECTION

This unit operates in either English or French. To switch your language preference at any time, press the Test button twice on ALL devices you wish to connect. You should hear one beep for each button press, followed by a voice message confirming your language selection (“English language selected” or “Langue française sélectionné”). If no language is selected, the voice prompts will continue in the default/set language.

D. PICK ONE INSTALLED DEVICE

Press and hold the button on ONE INSTALLED device on your network until you hear two beeps. Release button. You will hear “Searching for other devices.”

- Light will pulse green and device will sound a continuous “Sonar” ping until step E is completed.



Figure 9.2-C

E. RELAX AND WAIT

Wait until the new device has connected to the network. Once connected, the new device will speak, “Success now connected!”

- Once connected, the light ring will glow green.



Figure 9.2-D

F. PICK THE INSTALLED DEVICE

Press and hold the button on the INSTALLED device for 5 SECONDS until you hear two beeps. Release button. "Sonar" ping will stop.

- Device will announce that setup is complete and the number of connected devices.



Figure 9.2-E

G. PROCEED TO WIRING INSTRUCTIONS IN SECTION 10.

9.3 Resetting a Device's Wireless Settings

If you encounter an issue at any point during the wireless network setup process, you may reset the device by following the directions below.

A. BEGIN RESET

Press and hold the button on the device for 8-9 seconds until you hear 3 beeps. Release button. You will hear the words "Resetting wireless settings."



Figure 9.3-A

B. CONCLUDE RESET

Light ring will flash green once and then it will pulse red. You will hear the words, "Ready to connect, follow quick start instructions."

- Device has been reset.
- See Section 9.1 to begin set-up of a new wireless alarm network, or Section 9.2 for adding this device to an existing alarm network.



Figure 9.3-B

NOTE: *If no further steps are taken within 15 minutes of resetting the unit's wireless settings, a voice prompt "No devices found, not connected" will be heard once, and the wireless function will turn off. The unit will then perform as a standard hardwired alarm. See Section 9.2 for adding this device to an existing alarm network.*

10. Wiring Instructions

WIRING REQUIREMENTS

- This alarm should be installed on a CSA-Listed or recognized junction box. All connections should be made by a qualified electrician and all wiring used shall be in accordance with codes having jurisdiction in your area. The multiple station interconnect wiring to the alarms must be run in the same raceway or cable as the AC power wiring. In addition, the resistance of the interconnect wiring shall be a maximum of 10 ohms.
- The appropriate power source is 120V AC Single Phase, supplied from a non-switchable circuit, which is not protected by a ground fault interrupter.
- Smoke alarms are not to be used with detector guards unless the combination (alarm and detector guard) have been evaluated and found suitable for that purpose.

⚠ WARNING: THE ALARM CANNOT BE OPERATED FROM POWER DERIVED FROM A SQUARE WAVE, MODIFIED SQUARE WAVE OR MODIFIED SINE WAVE, INVERTER. THESE TYPES OF INVERTERS ARE SOMETIMES USED TO SUPPLY POWER TO THE STRUCTURE IN OFF GRID INSTALLATIONS, SUCH AS SOLAR OR WIND DERIVED POWER SOURCES. THESE POWER SOURCES PRODUCE HIGH PEAK VOLTAGES THAT WILL DAMAGE THE ALARM.

WIRING INSTRUCTIONS FOR AC QUICK CONNECT HARNESS

⚠ CAUTION: Turn off the main power to the circuit before wiring the alarm.

- For alarms that are used as single station, DO NOT CONNECT THE RED WIRE TO ANYTHING. Leave the red wire insulating cap in place to make certain that the red wire cannot contact any metal parts or the electrical box.
- When alarms are hardwire interconnected, all interconnected units must be powered from a single circuit.

- A maximum of 24 Kidde Safety devices may be interconnected in a multiple station arrangement. The interconnect system should not exceed the NFPA interconnect limit of 12 smoke alarms and/or 18 alarms total (smoke, CO, Smoke/ CO Combination, heat, etc.). With 18 alarms interconnected, it is still possible to interconnect up to a total of 6 remote signaling devices and /or relay modules.

FUSE OR CIRCUIT BREAKER

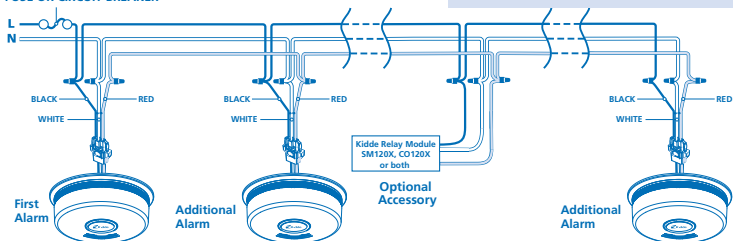


Figure 10-A, Interconnect Wiring Diagram

Wires on alarm harness: Connected to:
 Black: Hot side of AC line
 White: Neutral side of AC line
 Red: Interconnect lines (red wires) of other units in the multiple station set-up

- The maximum wire run distance between the first and last unit in an interconnected system is 305 m (1000 ft).
- Figure 10-A illustrates interconnection wiring. Improper connection will result in damage to the alarm, failure to operate, or a shock hazard.
- Make certain alarms are wired to a continuous (non-switched) power line.

NOTE: Use standard CSA-Listed household wire (as required by local codes) available at all electrical supply stores and most hardware stores.

NOTE: AC power should be turned off at this stage.

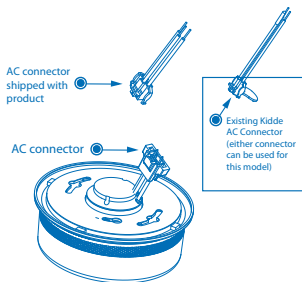


Figure 10-B

- After selecting the proper location for your Alarm, and wiring the AC QUICK CONNECT harness as described in the WIRING INSTRUCTIONS, attach the mounting bracket to the electrical box. To ensure aesthetic alignment of the alarm with the hallway, or wall, the "A" line on the mounting bracket must be parallel with the hallway when ceiling mounted, or horizontal when wall mounted.
- Pull the AC QUICK CONNECTOR through the center hole in the mounting bracket and secure the bracket, making sure that the mounting screws are positioned in the small ends of the keyholes before tightening the screws.



If you are installing for wireless interconnect function, and have not yet setup your wireless alarm network, do not connect your wireless unit to the AC quick connect harness or mounting bracket yet. Go back to Section 9: ACTIVATION AND WIRELESS ALARM NETWORK. If you are not using the wireless interconnect function, or if you have finished wireless alarm setup, then proceed with the following three steps.

- Plug the AC QUICK CONNECTOR into the wiring harness attached to the unit, making sure that the locks on the connector snap into place. Then push the excess wire back into the electrical box through the hole in the center of the mounting bracket.
- Install the alarm fully on the mounting bracket by rotating the alarm in a clockwise direction.
NOTE: The alarm will mount to the bracket in 4 positions (every 90 degrees).
NOTE: Installing the alarm on the mounting bracket will automatically activate the battery backup.
- Turn on the AC power. The green AC Power On Indicator should be lit when the alarm is operating from AC power.

NOTE: Wireless units will emit a series of LED blinks, tones, and voices as the unit(s) search for a wireless alarm network. If you are intending to use wireless units without the wireless function, ignore these notifications, and the wireless function will turn off in about 15 minutes. You can turn the wireless function on again at a later date if desired. See Section 9.2.

NOTE: Attaching AC power first, without rotating the alarm onto the mounting bracket, will result in a low battery trouble condition chirp and voice message saying, "Replace Alarm" (see Troubleshooting Guide). You need to activate the battery to eliminate the low battery trouble condition chirps and voice message. Attach unit to mounting bracket very soon after applying AC power to avoid false low battery notification.

NOTE: The battery activation is a one-time feature. After activation, the battery cannot be turned off, and can only be discharged at the end of unit life. If the alarm is removed from the mounting plate, the backup battery will remain active. See Permanently Disable Alarm / Discharge Battery section.

The alarm is now activated! After installation/activation, test your alarm as described in Operation and Testing section.

⚠ WARNING: FAILURE TO PROPERLY INSTALL AND ACTIVATE THIS ALARM WILL PREVENT PROPER OPERATION OF THIS ALARM AND WILL PREVENT ITS RESPONSE TO FIRE HAZARDS.

INTERCONNECT CAPABILITY

This model has AC hardwire AND wireless alarm interconnect capability. When one hardwire or wireless interconnect unit sounds an alarm, all other compatible hardwire or wireless interconnected units will also alarm. This model is not designed to be interconnected with other manufacturer's products, unless otherwise specified.

AC HARDWIRE INTERCONNECT MODEL COMPATIBILITY

- The following models can be interconnected using the standard AC wiring interconnect: i12020CA, i12020ACA, i12040CA, i12040ACA, i12060CA, i12060ACA, i12010SCA, i12010SCOCA, KN-SMFM-I-CA, KN-COB-ICB-CA, KN-COSM-IBC-CA, KN-COB-IC-CA, KN-COSM-ICA, KN-COP-IC-CA, KN-COPE-ICA, P12040CA, Pi2000CA, Pi2010CA, SM120X, CO120X, SLED177ICA, P4010ACLEDSCA, P4010ACLEDSCOCA, P4010ACSCCO-WCA, P4010ACSCOCA, P4010LACS-WCA, P4010ACS, P4010ACS-WCA.

WIRELESS ALARM INTERCONNECT MODEL COMPATIBILITY

- The following models can be interconnected using wireless interconnect.
AC Models: P4010ACSCCO-WCA, P4010LACS-WCA, P4010ACS-WCA.
DC Models: P4010LDCS-WCA, P4010DCS-WCA, P4010DCSCCO-WCA.
- Maximum distance between wireless interconnect models is greater than 300 feet in open air.

11. Operation and Testing

OPERATION

The alarm is operating once it is activated and testing is complete. When products of combustion (smoke or CO) are sensed, the unit sounds a loud alarm with voice messages. See Sections 1 and 2 for alarm signal descriptions. In high levels of CO, the unit will go into alarm in a shorter period of time than at low levels of CO.

TESTING

Test your alarm weekly by pressing and releasing the test button quickly. A quick beep will confirm the button has been pushed followed by voice prompts that will inform you of the upcoming test sequence. See Other Alarm Visual and Audible Indicators table.

CO ALARM SENSOR RESPONSE TIMES

At 70 PPM, the unit must alarm within 60-240 minutes.

At 150 PPM, the unit must alarm within 10-50 minutes.

At 400 PPM, the unit must alarm within 4-15 minutes.

The alarm and voice (and any interconnected units) will sound if the electronic circuitry, horn, speaker, and battery are working. If the alarm or voice does not sound, or gives erratic or low volume sound, the unit must be replaced. See Permanently Disable Alarm / Discharge Battery section to determine how to prepare the unit for shipment or disposal.

⚠ WARNING: DUE TO THE LOUDNESS OF THE ALARM, ALWAYS STAND ABOUT 0.7 M (2.5 FT) AWAY FROM THE UNIT OR USE EAR PROTECTION WHEN TESTING.

⚠ WARNING: DO NOT USE AN OPEN FLAME TO TEST YOUR ALARM, YOU COULD DAMAGE THE ALARM OR IGNITE COMBUSTIBLE MATERIALS AND START A STRUCTURE FIRE.

SMOKE/CO ALARM MEMORY

If a unit experiences a smoke or CO alarm event, then the condition clears and the unit stops alarming, the unit will give a visual (LED) indicator that a previous alarm has occurred within the last hour. See the Other Alarm Visual and Audible Indicators table.

AMBIENT LIGHT SENSING

In low light ambient conditions, the green LED ring fades to off, and then blinks approx every 60 seconds. This unit samples the ambient light conditions of the alarm's location and, if possible, determines a Night / Day cycle. A valid Night / Day cycle will delay unit chirps during the night until the next Day cycle begins.

CHIRPING

When chirping begins during the next Day cycle, you can temporarily silence End of Unit Life or Network Error chirps by pressing the Test/Hush button. Low Battery chirps cannot be silenced.

If a valid Night / Day cycle has not been established because the unit is located in either a constantly dark or lighted location, the chirps mentioned above will not be delayed at night. Moving the unit to a different location might allow the unit to determine a valid Night / Day cycle.

POSSIBLE CHIRPING REASONS

End of Unit Life: will be delayed at night

Network Error: will be delayed at night

Low battery: will be delayed at night

 **WARNING: REPLACE UNIT AS SOON AS POSSIBLE WHEN IN END OF UNIT LIFE OR LOW BATTERY MODE.**

12. Recognizing Nuisance Alarms

SMOKE NUISANCE

HUSH[®]: If you know why the alarm is sounding, and you can verify that it is not a life threatening situation, you can push the button on the initiating unit (green LED flashing every second) to silence the alarm for 8-10 minutes. If the smoke is not too dense, that unit, and all interconnected units will silence. After the Hush[®] period, the smoke alarm will automatically reset and sound the alarm if particles of combustion are still present. You can use Hush[®] repeatedly until the air has been cleared of the condition causing the alarm.

NOTE: Dense smoke will override Hush[®] and sound a continuous alarm. If no fire is present, check to see if one of the reasons listed in Section 8. LOCATIONS TO AVOID may have caused the alarm. If a fire is discovered, get out and call the fire department.

This alarm is designed to minimize nuisance alarms. Cigarette smoke will not normally cause the unit to alarm, unless the smoke is blown directly into the alarm. Combustion particles from cooking may set off the alarm if it is located too close to a cooking appliance. Large quantities of combustible particles are generated from spills or when broiling. Using the fan on a range hood which vents to the outside (non-recirculating type) will also help prevent nuisance alarms from occurring by removing these combustible products from the kitchen.

CO NUISANCE

RESET: Pushing the button during CO alarm allows the unit to reset calculations and double check for the presence of CO. If the unit re-alarms within 6 minutes, it is sensing high levels of CO which can quickly become a dangerous situation. Move to fresh air and call 911.

LOCATE

In an interconnected system (all units will be alarming together), a unit that detects smoke or CO and initiates an alarm is called the “initiating alarm unit.” Initiating alarm units will be flashing the Green LED every second during alarm. Depending on unit locations, and the location of the source of smoke or CO, it is possible to have more than one initiating unit.

If you suspect a nuisance alarm situation, you can use this feature to help you locate the initiating alarm unit(s) in a wireless alarm interconnect system. Push the button on any non-initiating wireless unit, and ALL wireless units EXCEPT the initiating alarm unit(s) will silence for two minutes. You can use the LOCATE feature repeatedly until you find the initiating alarm unit(s), or the air has been cleared of the condition causing the alarm.

NOTE: Hush[®] and Locate features are dependent on the type of models in your interconnect system. Non-wireless models cannot receive the wireless Locate feature and will continue to alarm until the initiating unit is Hushed or the Smoke/ CO condition clears.

 WARNING: ALTHOUGH RESET AND LOCATE FEATURE CAN BE USED FOR CO ALARM EVENTS, IT IS IMPOSSIBLE TO DETERMINE THE SOURCE OF A CO ALARM USING SIGHT OR SMELL. ALWAYS CONSIDER A CO ALARM EVENT AS DANGEROUS.

13. Battery Backup

NOTE: This alarm is powered with AC power, but also contains a sealed lithium battery backup system. No battery installation or replacement is necessary for the life of the alarm.

IMPORTANT: AC power must be connected to obtain the full 10 year battery and unit life. Constant exposure to high or low humidity or temperatures may reduce battery life.

⚠ WARNING: NO SERVICEABLE PARTS INCLUDED. DO NOT ATTEMPT TO OPEN THE ALARM FOR ANY REASON! DO NOT TRY TO REPAIR THE ALARM YOURSELF.

LOW BATTERY


This alarm is equipped with a low battery monitor circuit. If the battery capacity can no longer provide adequate power for all alarm functions, the low battery condition will occur. See Troubleshooting Guide. The unit must be replaced within 7 days of the first occurrence of the “Low Battery Warning” to provide continuous alarm protection.

14. Permanently Disable Alarm / Discharge Battery

⚠ WARNING: FAILURE TO DISCHARGE ALARM BATTERY AS INSTRUCTED PRIOR TO DISPOSAL MAY CREATE POTENTIAL FOR LITHIUM BATTERY RELATED FIRE OR HAZARD.

⚠ WARNING: DISCHARGING THE ALARM BATTERY IS PERMANENT

- Once the alarm battery has been discharged, it cannot be reactivated!
- Once discharged, the alarm will NO LONGER DETECT SMOKE OR CO.
- Once the alarm battery is discharged, the battery is depleted and the alarm will no longer function.
- Once the alarm battery has been discharged, the alarm cannot be mounted onto the mounting plate or reactivated.

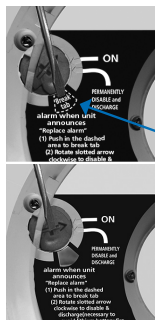

TO PERMANENTLY DISABLE ALARM / DISCHARGE BATTERY:

- Rotate the alarm counterclockwise to remove it from the mounting plate.
- Disconnect AC wiring harness.
- Push in the dashed area with a screwdriver to break tab (Figure 14-A).
- After the tab is broken, use the screwdriver to turn the red slotted arrow to the "PERMANENTLY DISABLE ALARM and DISCHARGE BATTERY" location. This will disable the alarm, stop the low battery or end of unit life "chirps" and render the alarm safe for disposal by draining the battery (Figure 14-B).

Figures 14-A (top) and 14-B (bottom)

15. General Carbon Monoxide (CO) Information

Carbon monoxide (CO) is a colorless, odorless, and tasteless poison gas that can be fatal when inhaled. CO inhibits the blood's capacity to carry oxygen.

POSSIBLE SOURCES OF CO

Inside your home, appliances used for heating and cooking are the most likely sources of CO. Vehicles running in attached garages can also produce dangerous levels of CO. CO can be produced when burning any fossil fuel: gasoline, diesel, propane, natural gas, oil and wood. It can be produced by any fuel-burning appliance that is malfunctioning, improperly installed, or not ventilated correctly, such as: Furnaces/boilers, gas ranges/stoves, gas clothes dryers, water heaters, portable fuel burning space heaters, fireplaces, wood-burning stoves and certain swimming pool heaters.

Blocked chimneys or flues, back drafting and changes in air pressure, corroded or disconnected vent pipes, or a loose or cracked furnace heat exchanger can also release CO into your building. Vehicles and other combustion engines running in an attached garage and using a charcoal/gas grill or hibachi in an enclosed area are all possible sources of CO.

THE FOLLOWING CONDITIONS CAN RESULT IN TRANSIENT CO SITUATIONS:

Excessive spillage or reverse venting of fuel-burning appliances caused by:

- (1) outdoor ambient conditions, such as wind direction and/or velocity, including high gusts of wind, and insufficient draft in the vent pipes;
- (2) negative pressure differential resulting from the use of exhaust fans;
- (3) simultaneous operation of several fuel-burning appliances competing for limited internal air;
- (4) loose vent pipe connections from fuel-fired appliances;
- (5) obstructions, or unconventional vent pipe designs that can amplify the above situations;
- (6) poorly designed or maintained chimneys and/or vents;
- (7) extended operation of unvented fuel-burning devices (range, oven, fireplace, etc);
- (8) temperature inversions that can trap exhaust gases near the ground;
- (9) car idling in an open or closed attached garage, or near a home.

CO SAFETY TIPS

Every year, have the heating system, vents, chimney and flue inspected and cleaned by a qualified technician. Always install appliances according to manufacturer's instructions and adhere to local building codes. Most appliances should be installed by professionals and inspected after installation. Regularly examine vents and chimneys for improper connections, visible rust, or stains, and check for cracks in furnace heat exchangers. Verify that the color of flame is blue on pilot lights and burners. An amber or orange flame is a sign that the fuel is not burning completely and may be releasing CO.

Teach all household members what the alarm sounds like and how to respond. Fire Departments, most utility companies and HVAC contractors will perform CO inspections. Some contractors may charge for this service. It's advisable to inquire about any applicable fees prior to having the service performed. Kidde will not pay for, or reimburse the owner or user of this product, for any repair or dispatch calls related to the alarm sounding.

SYMPTOMS OF CO POISONING

Initial carbon monoxide poisoning symptoms are similar to the flu with no fever and can include dizziness, severe headaches, nausea, vomiting and disorientation. Everyone is susceptible but experts agree that unborn babies, pregnant women, senior citizens and people with heart or respiratory problems are especially vulnerable. If symptoms of carbon monoxide poisoning are experienced seek medical attention immediately. CO poisoning can be determined by a carboxyhemoglobin test.

THE FOLLOWING SYMPTOMS ARE RELATED TO CARBON MONOXIDE POISONING AND SHOULD BE DISCUSSED WITH ALL MEMBERS OF THE HOUSEHOLD:

- 1. MILD EXPOSURE:** Slight headache, nausea, vomiting, fatigue (often described as “Flu-like” symptoms).
- 2. MEDIUM EXPOSURE:** Severe throbbing headache, drowsiness, confusion, fast heart rate.
- 3. EXTREME EXPOSURE:** Unconsciousness, convulsions, cardio respiratory failure and death.

The above levels of exposure relate to healthy adults. Levels differ for those at high risk. Exposure to high levels of carbon monoxide can be fatal or cause permanent damage and disabilities. Many cases of reported carbon monoxide poisoning indicate that while victims are aware they are not feeling well, they become so disoriented they are unable to save themselves by either exiting the building, or calling for assistance. Also, young children and household pets may be the first affected. Familiarization with the effects of each level is important.

16. Cleaning Your Alarm

YOUR ALARM SHOULD BE CLEANED AT LEAST ONCE A YEAR

You can clean the interior of your alarm (sensing chamber) by using compressed air or a vacuum cleaner hose and blowing or vacuuming through the openings around the perimeter of the alarm. The outside of the alarm can be wiped with a damp cloth. Use only water to dampen the cloth, use of detergents or cleaners could damage the alarm.

If the alarm is in Fault mode and the Red LED is blinking a fault code of 10 or 14 flashes (after a Test/Hush button push), the alarm may be in need of cleaning. After cleaning, press the Test/Hush button. If the fault does not clear, the alarm needs to be replaced.

- Never use detergent or other solvents to clean the unit.
- Avoid spraying air freshener, hair spray, or other aerosols near the alarm.
- Do not paint the unit. Paint will seal the vents and interfere with the sensor's ability to detect smoke and CO.
- Never attempt to disassemble the unit or clean inside. This action will void your warranty.
- The following substances can affect the CO sensor and may cause false readings and damage to the sensor: Methane, propane, isobutane, iso-propanol, ethyl acetate, hydrogen sulfide, sulfide dioxides, alcohol based products, paints, thinner, solvents, adhesives, hair spray, after shave, perfume, and some cleaning agents.
- Move the Alarm and place in another location prior to performing any of the following:
 - Staining or stripping wood floors or furniture
 - Painting
 - Wall papering
 - Using adhesives

Storing the unit in a plastic bag during any of the above projects will protect the sensors from damage. When household cleaning supplies or similar contaminants are used, the area must be well ventilated.

 **WARNING: REINSTALL THE ALARM AS SOON AS POSSIBLE TO ENSURE CONTINUOUS PROTECTION.**

17. Good Safety Habits

DEVELOP AND PRACTICE A PLAN OF ESCAPE

Prepare and practice a home escape plan twice a year, including drills at night. Know two ways out of every room (door & window) and identify a meeting place outside the home where everyone will gather once they have exited the residence. When two people have reached the meeting place, one should leave to call 911 while the second person stays to account for additional family members. **Establish a rule that once you're out, you never re-enter under any circumstance!**

- Make a floor plan indicating all doors and windows and at least two (2) escape routes from each room. Second story windows may need a rope or chain ladder.
- Have a family meeting and discuss your escape plan, showing everyone what to do in case of fire and where to meet after they leave the house.
- Ensure that small children hear the alarm and wake when it sounds. They must wake up in order to execute the escape plan. Practice allows all occupants to test your plan before an emergency. You may not be able to reach your children. It is important they know what to do.
- Familiarize everyone with the sounds of the smoke/CO alarm and train them to leave your home when they hear it.

- Current studies have shown smoke/CO alarms may not awaken all sleeping individuals, and that it is the responsibility of individuals in the household that are capable of assisting others to provide assistance to those who may not be awakened by the alarm sound, or to those who may be incapable of safely evacuating the area unassisted.
- Install and maintain fire extinguishers on every level of the home and in the kitchen, basement and garage. Know how to use a fire extinguisher prior to an emergency.

FIRE PREVENTION

Never smoke in bed, or leave cooking food unattended. Teach children never to play with matches or lighters! Train everyone in the home to recognize the smoke alarm pattern and to leave the home using their escape plan when it's heard. Know how to do "Stop, Drop and Roll" if clothes catch on fire, and how to crawl low under smoke. Install and maintain fire extinguishers on every level of the home and in the kitchen, basement and garage.

SMOKE DETECTION – ARE MORE ALARMS DESIRABLE?

The required number of smoke alarms might not provide reliable early warning protection for those areas separated by a door from the areas protected by the required smoke alarms. For this reason, it is recommended that the householder consider the use of additional smoke alarms for those areas for increased protection. The additional areas include the basement, bedrooms, dining room, furnace room, utility room, and hallways not protected by the required smoke alarms. The installation of smoke alarms in attics (finished or unfinished), garages, or within 1.8m (6ft) of a heating or cooking appliance is not normally recommended, as these locations occasionally experience conditions that can result in improper operation.

Alarms should be installed in accordance with the National Fire Protection Association's Standard 72 (NFPA, Batterymarch Park, Quincy, MA 02269).

NFPA (NATIONAL FIRE PROTECTION ASSOCIATION)

FIRE SAFETY IN THE HOME: NFPA 72 IS INTENDED TO PROVIDE REASONABLE SAFETY FOR PERSONS IN FAMILY LIVING UNITS. REASONABLE FIRE SAFETY CAN BE PRODUCED THROUGH THE FOLLOWING THREE-POINT PROGRAM:

- (1) Minimizing fire hazards
- (2) Providing fire-warning equipment
- (3) Having and practicing an escape plan.

Where required by other governing laws, codes, or standards for a specific type of occupancy, approved single and multiple-station smoke alarms shall be installed as follows:

- (1) In all sleeping rooms and guest rooms
- (2) Outside of each separate dwelling unit sleeping area, within 6.4 m (21') of any door to a sleeping room, with the distance measured along a path of travel
- (3) On every level of a dwelling unit, including basements
- (4) On every level of a residential board and care occupancy (small facility), including basements and excluding crawl spaces and unfinished attics
- (5) In the living area(s) of a guest suite
- (6) In the living area(s) of a residential board and care occupancy (small facility)

ISED COMPLIANCE NOTICE

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

18. Service and Warranty

TEN-YEAR LIMITED WARRANTY

Kidde warrants that the enclosed alarm will be free from defects in material and workmanship or design under normal use and service for a period of ten years from the date of purchase. The obligation of Kidde under this warranty is limited to repairing or replacing the alarm or any part which we find to be defective in material, workmanship or design, free of charge, upon receiving the alarm with proof of date of purchase, postage and return postage prepaid, to: Kidde Canada Inc., P.O. Box 40, Apsley, ON K0L 1A0. Before shipping the product, follow the steps in the Permanently Disable Alarm / Discharge Battery section.

This warranty shall not apply to the alarm if it has been damaged, modified, abused or altered after the date of purchase or if it fails to operate due to improper maintenance or inadequate power. Any implied warranties arising out of this sale, including but not limited to the implied warranties of description, merchantability and fitness for a particular purpose, are limited in duration to the above warranty period. In no event shall the Manufacturer be liable for loss of use of this product or for any indirect, special, incidental or consequential damages, or costs, or expenses incurred by the consumer or any other user of this product, whether due to a breach of contract, negligence, strict liability in tort or otherwise. The Manufacturer shall have no liability for any personal injury, property damage or any special, incidental, contingent or consequential damage of any kind resulting from gas leakage, smoke, fire or explosion.

Since some provinces do not allow limitations of the duration of an implied warranty or do not allow the exclusion or limitation of incidental or consequential damages, the above limitations or exclusions may not apply to you. While this warranty gives you specific legal rights, you may also have other rights which vary from province to province. The above warranty may not be altered except in writing signed by both parties hereto. Your Kidde Alarm is not a substitute for property, fire, disability, life or other insurance of any kind. Appropriate insurance coverage is your responsibility. Notify your local fire department and insurance company of your smoke alarm installation.

Opening the unit will void the warranty.

QUESTIONS OR FOR MORE INFORMATION

Call Kidde Product Support line at 1-800-880-6788 or contact us at www.kiddecanada.com

Kidde Canada Inc.
P.O. Box 40, Apsley, ON K0L 1A0

Made in China

P/N: 2556-7202-00

